

RISC Router 2800i Installation Guide

Compatible Systems Corporation
4730 Walnut Street
Suite 102
Boulder, Colorado 80301

303-444-9532
800-356-0283

RISC Router 2800i Installation Guide, Version 1.0
Copyright(c) 1995, Compatible Systems Corporation

All rights reserved. RISC Router and RouterView are trademarks of Compatible Systems Corporation. Other trademarks are the property of their respective holders.

Part number: A00-1114

FCC Notice: This product has been certified to comply with the limits for a Class A computing device, pursuant to Subpart J of Part 15 of FCC Rules. It is designed to provide reasonable protection against radio or television communication interference in a commercial environment. Operation of this equipment in a residential area could cause interference with radio or television communication.

CHAPTER 1 - INTRODUCTION **7**

ABOUT THE RISC ROUTER 2800i	7
Getting Started	8
Hardware Installation	8
RouterView Software Installation	8
Command Line Preparation	8
Quickstart Configuration	8
Appendices and Index	8

CHAPTER 2 - GETTING STARTED **9**

A FEW NOTES	9
Please Read The Manuals	9
Warranty and Service	9
Getting Help With the RISC Router 2800i	9
WHAT YOU WILL NEED TO GET STARTED	10
Supplied with the RISC Router 2800i	10
Needed For Installation	10
Ethernet Connection Requirements	11
Thick Ethernet	11
Thin Ethernet	11
10Base-T Twisted-Pair Ethernet	11
Telco Line Connection Requirements	11
V.35 Port	12
RS-232 Port	12

CHAPTER 3 - HARDWARE INSTALLATION **13**

Mounting the Router	13
19" Rack Front Mount	14
19" Rack Center Mount	14
Wall Mount	14
Connecting the Router to the Ethernet	14
Connecting to Thick Ethernet	15
Connecting to Thin Ethernet	15
Connecting to Twisted-Pair Ethernet	15
Connecting a Line Device to the RISC Router 2800i	15
Connecting Devices to the V.35 Ports	15
Connecting Devices to the RS-232C Ports	16
Connecting an Out-of-Band Management Console	16

Powering Up the Router	17
------------------------	----

CHAPTER 4 - ROUTERVIEW SOFTWARE INSTALLATION	19
---------------------------------------------------------	-----------

RouterView for Windows	19
System Requirements	19
Installation and Operation	20
RouterView for Macintosh	20
System Requirements	21
Installation and Operation	21

CHAPTER 5 - SETTING UP COMMAND LINE MANAGEMENT	23
-----------------------------------------------------------	-----------

Out-of-Band Command-Line Management	23
Setting Up Telnet Operation	23

CHAPTER 6 - QUICKSTART INSTRUCTIONS	25
--------------------------------------------	-----------

ETHERNET PORT CONFIGURATION	25
IP Protocol	26
Required for IP	26
Suggested for IP	26
WAN PORT PPP CONFIGURATION	26
IP Protocol	27
Required for IP	27
Suggested for IP	27
Link Configuration	27
Required for Dedicated/Leased Line Operation	27
Suggested for Dedicated/Leased Line Operation	28
Required for Dial-On-Demand Operation	28
Suggested for Dial-On-Demand Operation	28
Physical Comm Settings	28
WAN PORT FRAME RELAY CONFIGURATION	29
IP Protocol	29
Required for IP	29
Suggested for IP	29
Link Configuration	30
Suggested for Dedicated/Leased Line Operation	30
Frame Relay DLCI Mappings	30
Physical Comm Settings	31

APPENDIX A - SHIPPING DEFAULTS **33**

Ethernet Port	33
IP Defaults	33
WAN Port	33
IP Defaults	33
V.35 (WAN A & WAN B) Link & Physical Defaults	33
RS-232 (WAN C & WAN D) Link & Physical Defaults	33

APPENDIX B - CONNECTOR AND CABLE PIN OUTS **33**

Pin Outs for V.35 Female Connector (DTE)	34
Pin Outs for DIN-8 to RS-232 Data Cable (DCE/Male)	35
Pin Outs for DIN-8 to RS-232 Console Cable (DTE/Female)	36

APPENDIX C - LED PATTERNS AND TEST SWITCH SETTINGS **36**

RISC Router 2800i LED Patterns	37
Power On, No Traffic	37
Ethernet Traffic Indicators (Ethernet LED Bar)	37
Other Indicators (on Both LED Bars)	37
Panic Indicators	37
RISC Router 2800i Switch Settings	38

APPENDIX D - DOWNLOADING SOFTWARE FROM COMPATIBLE SYSTEMS **39**

The Compatible Systems FTP Server	39
CompuServe	39
Bulletin Board	40
AppleTalk Remote Access Server	40

APPENDIX E - TERMS AND CONDITIONS **41**

Chapter 1 - Introduction

About the RISC Router 2800i

Congratulations on your purchase of the RISC Router 2800i multiport wide area router. The RISC Router 2800i supports the IP network protocol, with dial-on-demand and leased-line operation using the PPP and/or the Frame Relay wide area protocols.

This manual will help you install the RISC Router 2800i to connect your local Ethernet to an Internet service provider. This connection can be to a Compatible Systems router at your provider, or to a router from another vendor. The additional ports on the RISC Router 2800i may be used to share your Internet connection with other corporate sites, to provide a backup dial-on-demand link to your provider, and/or to allow remote client dial-in using the PPP protocol.

In short, the installation steps are:

1. **Install** the RISC Router hardware and connect it to one or more line communication devices (including modems, 56K CSU/DSU's, ISDN Terminal Adapters, or T1/E1 CSU/DSU's).
2. **Select** the management method you wish to use with the router. If you want to use the RouterView management software, you must install the software on a Windows PC or Macintosh computer which is connected to your network.
3. **Configure** the RISC Router LAN and WAN parameters using the management method you have chosen.

If you have any difficulties during the installation or use of the RISC Router that are not answered by this guide, please call Compatible Systems Corporation or your RISC Router 2800i reseller. Compatible Systems' phone number is listed on the front of this guide. We will be happy to help you.

The manual is divided into several sections that should provide you with all the information you will need to use the RISC Router 2800i on your network.

Getting Started

This part of the manual describes the contents of the RISC Router 2800i package and emphasizes the preparation and equipment you will need to install the router.

Hardware Installation

Here you will find step-by-step instructions on how to physically install the RISC Router 2800i and connect it to your local Ethernet and your wide area network(s). Instructions are included for thick, thin, and twisted-pair Ethernet environments as well as modems, 56K & T1/E1 CSU/DSUs, and ISDN terminal adapters.

RouterView Software Installation

If you plan to use RouterView, Compatible Systems' GUI (Graphical User Interface) management software which is included with your router, then read this section. Instructions are provided on how to install RouterView for Windows or Macintosh environments.

Command Line Preparation

If you have decided to use command line management, either out-of-band (through the AUX port), or in-band through Telnet, read this section.

Quickstart Configuration

The Quickstart section provides a list of parameters that must be entered into a router for proper operation.

Appendices and Index

Additional information that might be of interest to you such as technical specifications and a quick reference to specific information can be found at the end of this guide.

Chapter 2 - Getting Started

A Few Notes

Please Read The Manuals

The manuals included with your RISC Router 2800i contain some very important information about the RISC Router 2800i and local and wide area networking in general. Please read this manual thoroughly, and refer to the management reference guides as required. It's worth the few minutes it will take.

Also, please fill out the warranty registration card and return it to us today. This will help us keep you informed of updates to the RISC Router 2800i and future products available from Compatible Systems.

Warranty and Service

The RISC Router 2800i is covered by the Compatible Systems Integrated Support Package, which includes a three-year comprehensive warranty, a twenty-four hour advanced replacement program, unlimited phone support, and software upgrades for the life of the product.

Compatible Systems maintains copies of current software updates on the Internet, CompuServe, AppleLink, an ARA server, and a bulletin board. You may download product software from any of these sources at any time. For more information on downloading current product software, see the appendices for this manual.

Getting Help With the RISC Router 2800i

If you have a question about the RISC Router 2800i and can't find the answer in this manual, feel free to call our technical support department at (800) 356-0283. You may also send support questions via e-mail to *support@Compatible.COM*.

What You Will Need To Get Started

Before connecting the RISC Router 2800i, please check the list below to make sure that you have received all of the items that are supplied with the RISC Router 2800i package.

You should also make sure you have any additional items that are necessary to connect the router to your network.

Supplied with the RISC Router 2800i

Please check your shipping package for the following items:

- RISC Router 2800i unit
- Rack-mount kit
- Power cord
- Two DIN-8 to DB-25 data cables
- One DIN-8 to DB-25 auxiliary port cable
- Windows RouterView diskette
- Macintosh RouterView diskette
- Windows download software diskette
- Macintosh download software diskette
- RouterView reference guide
- Command line reference guide
- Warranty registration card

❖ **Note:** *Some routers may be shipped with three RS-232 “Y” cables. These cables can be used for both data and auxiliary port operation.*

Needed For Installation

Before connecting the RISC Router 2800i to your network, you need to make sure that you have the necessary equipment for connecting to the local Ethernet and the wide area transmission device(s) (modem, 56K CSU/DSU, ISDN terminal adapter, T1 CSU/DSU).

Ethernet Connection Requirements

The RISC Router 2800i's Ethernet port directly supports thick, thin and 10BaseT twisted-pair Ethernet. Switching among the three ports is automatic – simply plug the proper Ethernet connector into its port. Other Ethernet cabling types (such as fiber optic cabling or pre-10BaseT twisted-pair) can be supported using adapters which connect to a thick Ethernet port.

Thick Ethernet

To connect the router's Ethernet port to a standard (thick) Ethernet cable you will need a transceiver cable connection at the correct location on your Ethernet cable. The transceiver cable will attach directly to the DB-15 connector on the router.

Thin Ethernet

To connect the router's Ethernet port to a thin Ethernet cable you will need a T-connector installed at the correct location on your Ethernet cable. A T-connector is required for proper termination of the cable.

10Base-T Twisted-Pair Ethernet

To connect the router's Ethernet port to twisted-pair Ethernet cabling you will need an unshielded twisted-pair wire that is connected to a 10BaseT-compatible twisted-pair hub.

❖ **Note:** *Ethernet cables and cable connectors are not supplied with the RISC Router product. Please contact your reseller or your Compatible Systems representative for information on obtaining the correct Ethernet cabling supplies.*

❖ **Note:** *These hardware installation instructions assume that your Ethernet cabling is already in place. Thin coaxial Ethernet network cabling should be terminated at each end with 50 Ohm terminator plugs. A T-connector or transceiver must be available in the location where you will be installing the router.*

Telco Line Connection Requirements

The RISC Router 2800i is not a line communications device. In order to connect to a wide area transmission line, you must use a modem,

56K CSU/DSU, ISDN Terminal Adapter, or T1/E1 CSU/DSU. Which of these devices you use depends on the type of line you are connecting to, along with which port on the RISC Router you plan to use for the specific connection.

❖ **Note:** *Before attempting to connect the RISC Router 2800i to a leased telco line, use the loopback features of your CSU/DSU's to check the line. This can save you a considerable amount of time, since the more equipment you have on the line, the more difficult it becomes to determine where a problem is occurring.*

The RISC Router 2800i provides two high-speed synchronous V.35 ports, which are capable of running at rates up to T1/E1 (2 megabits per second). One of these ports may be used as your primary connection to an Internet Service Provider, while the other can be used as a backup link or to share your Internet connection with a remote office. Two RS-232 sync/async ports are also provided for backup or PPP dial-in links.

V.35 Port

The RISC Router 2800i does not include V.35 cables. These cables are available from your reseller, or a number of other suppliers. The RISC Router 2800i has female V.35 connectors, as do virtually all line communications devices. Thus, the V.35 cable required to connect to a line communications device will usually have male connectors at both ends.


RS-232 Port

The RISC Router 2800i includes two DIN-8 to DB-25 RS-232 sync/async data cables. These cables support RS-232 asynchronous modems, synchronous leased and switched-56K CSU/DSU's, and North American ISDN Terminal Adapters.

Some Japanese and European RS-232 capable terminal adapters may require an adapter plug. For more information, contact Compatible Systems.

❖ **Note:** *Please use **only** these cables when connecting your line communication device to the RISC Router 2800i. The cables provided with other equipment do not provide all of the connections required between connector pins for correct hardware handshaking and synchronous clocking.*

Chapter 3 - Hardware Installation

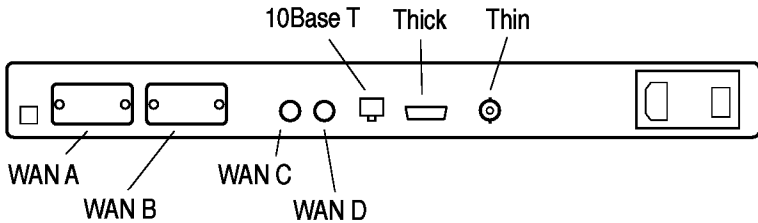

2800i Back Panel

This section of the manual describes how to connect the RISC Router 2800i to your Ethernet network and your wide area communications device(s). In summary, the steps for installation are:

1. **Make sure the router is powered down and not plugged in to the wall.**
2. **Wall or rack-mount the router, if required.**
3. **Connect the router to the Ethernet network(s).**
4. **Connect the router to the wide area line communications device(s).**
5. **Power up the line communications devices.**
6. **Plug in the power cable and power up the router.**

Mounting the Router

The RISC Router 2800i can be mounted in a variety of different ways, or can be left standalone on a desktop or equipment table.

❖ **Note:** *When stacking other equipment on the RISC Router 2800i, do not exceed 25 pounds of evenly distributed weight on top of the router. Additional weight may bend the case.*

A rack/wall mounting kit is included with the router.

19" Rack Front Mount

Install the rack-mount ears on the sides of the case towards the front, using the screws provided. Position the ears so that they are flush with the front of the case. The slotted holes in the ears will mate with the mounting holes in a standard 19" rack.

❖ **Note:** *The RISC Router 2800i is 1U high when its bottom-mounted rubber feet are removed. If you intend to mount the unit in a 1U space, make sure your equipment rack is well ventilated. Otherwise, thermal problems may occur.*

19" Rack Center Mount

Install the rack-mount ears using the mounting holes midway along the sides of the case, using the screws provided. The slotted holes in the ears will mate with the mounting holes in a standard 19" rack.

Wall Mount

Install the rack-mount ears on the middle of the case, using the screws provided. Position the ears so that they are flush with the bottom of the case. The slotted holes in the ears will mate with wood screws or other attachment methods.

❖ **Note:** *Wood screws are not provided with the rack-mount kit.*

Connecting the Router to the Ethernet

For thick and thin Ethernet networks you should have installed your Ethernet cabling before you install the RISC Router 2800i.

If you have a coax installation, the Ethernet network cable should be terminated at both ends with 50 Ohm network terminating resistors, and a T-connector or transceiver should be available at the location where you will connect the router.

If you are installing a twisted-pair connection, and the twisted-pair hub is already in place, or a T-connector or thicknet transceiver is already installed on your Ethernet cable, you can connect the router to an active network without interrupting network activity.

The RISC Router 2800i's Ethernet interface features all three media connector types. The active media connection will automatically be selected when you attach a cable.

Do not terminate inactive connectors on the router, as this may cause an incorrect media type to be selected.

Connecting to Thick Ethernet

To connect the router to a thick Ethernet network, simply plug one end of a transceiver cable into the DB-15 transceiver connector located on the back panel of the unit. Then, plug the other end of the transceiver cable into the transceiver which should already be attached to the thick Ethernet cable.

Connecting to Thin Ethernet

In order to connect the router to a thin Ethernet cable, connect a T-connector to the BNC connector located on the rear panel of the unit.

Connecting to Twisted-Pair Ethernet

Before connecting the router to twisted-pair cabling you need an unshielded twisted-pair cable that is already connected to your 10BaseT-compatible twisted-pair hub.

To connect the router to the twisted-pair network, simply plug the twisted-pair cable into the RJ-45 connector on the back of the unit.

Connecting a Line Device to the RISC Router 2800i

The RISC Router 2800i supports high-speed synchronous operation over two V.35 connectors. It also supports lower speed synchronous/asynchronous operation over two RS-232 connectors.

The RISC Router 2800i supports both PPP and Frame Relay link protocols on all WAN ports.

Connecting Devices to the V.35 Ports

These ports -- WAN A(0) and WAN B(1) -- can be used to connect to a wide variety of line communications devices, including those which support either leased or dialed operation.

Examples include leased 56K CSU/DSU's, switched 56K CSU/DSU's, fractional T1 CSU/DSU's, ISDN terminal adapters, and full T1/E1 rate CSU/DSU's.

You may select either dial-on-demand, redial if down (“always up” mode), or leased line operation. These ports may also be set to receive ISDN or switched-56 incoming calls.

To connect a device, first make sure that both units are powered off. Then, simply connect a V.35 cable (not supplied) between the router and the device.

Connecting Devices to the RS-232C Ports

These ports -- WAN C(2) and WAN D(3) -- can be used to connect to synchronous or asynchronous line communications devices at rates up to 128Kbps (115.2 Kbps async).

Examples include modems, leased or switched 56K CSU/DSU’s, and ISDN terminal adapters.

You may select either dial-on-demand, redial if down (“always up” mode), or leased line operation. These ports may also be set to receive ISDN or switched-56 incoming calls.

To connect a device, first make sure that both units are powered off. Then, simply connect one of the supplied RS-232 data cables (not an auxiliary port cable) between the router and the device.

❖ **Note:** *The RISC Router 2800i RS-232 ports require that your line communications device be set to supply the RS-232 DCD signal when a connection has been made..*

❖ **Note:** *The RISC Router 2800i includes two special data cables to facilitate connections to RS-232 line communications devices. These cables include support for several asynchronous and synchronous control signals. Off-the-shelf Sun or Macintosh-type cables **do not** support these signals.*

Connecting an Out-of-Band Management Console

If you wish to connect an out-of-band management console, use the supplied auxiliary cable and connect to the AUX port on the front of the RISC Router 2800i. You can use a dumb terminal or a computer equipped with VT100 terminal emulation.

The default baud rate for the AUX port is 9600.

Powering Up the Router

Power up all modems, CSU/DSU's, and TA's before powering up the router. This allows the router to immediately sense which of its ports are connected. At power-up, the router will take approximately one minute to become visible to RouterView.

❖ **Note:** *If you want to use Telnet as a management method, you must configure an IP address into the router using an out-of-band console or RouterView before you will be able to contact the router.*

Chapter 4 - RouterView Software Installation

All of the routers in Compatible Systems' multiprotocol family, including all MicroRouter and RISC Router models, can be managed from a single management platform called RouterView. Both a Windows and a Macintosh version of RouterView were included with your RISC Router 2800i.

❖ **Note:** *Although the installation procedures for the Windows and Macintosh versions of RouterView are slightly different, the programs themselves are virtually identical. Once you have installed RouterView on the platform of your choice, you can find more information on how to use it in the RouterView Reference Guide which was included with your router.*

RouterView for Windows

RouterView for Windows allows you to manage the RISC Router 2800i from an IBM-compatible PC running Windows. The PC can either be configured as an IPX ODI client on a Novell NetWare internet, or as an IP WinSock client on an IP internet.

System Requirements

In order to successfully run RouterView for Windows, you need:

- IBM PC or compatible w/ 386 or later processor
- Windows 3.1 or Windows for Workgroups installed
- VGA or better monitor

And either (or both) of:

- Novell IPX client configuration on a NetWare network, using IPXODI.COM
- WinSock client configuration on an IP network

❖ **Note:** *The "IPX 101" appendix to the RouterView Reference Guide contains some tips on getting Novell's IPX ODI running on your client machine.*

❖ **Note:** *To choose the active transport protocol on a Windows machine which has both IPX and IP installed, select "Options" from the Administration menu and click the appropriate checkbox.*

Installation and Operation

This version of the RouterView program can be found on a 3.5-inch diskette labeled "RouterView - Windows Disk" that was included with your RISC Router 2800i.

Start Windows. Insert the diskette into your computer's disk drive. At the Windows Program Manager, select "Run" from the File menu and type A:SETUP (where A: is the drive containing the RouterView diskette). This will invoke an auto-installation program supplied with RouterView.

The installation program will ask you to select (or create) a directory in which it should locate RouterView and its associated files and database subdirectory.

Once the installation is complete, double click on the RouterView icon to open the program. For further information on using RouterView, see the RouterView Reference Guide included with your router.

❖ **Note:** *RouterView will be able to use the transport protocol (IP or IPX) you have selected to access Compatible Systems routers anywhere on your internetwork. This means you can use the IP transport option to manage routers across the Internet.*

❖ **Note:** *For an up-to-date description of the changes (if any) made to Windows system files by the installation program, see the README.TXT file located in the RouterView installation directory.*

RouterView for Macintosh

RouterView for Macintosh allows you to manage the RISC Router 2800i from an Apple Macintosh or compatible computer. RouterView for Macintosh uses the AppleTalk protocol to communicate with the router.

System Requirements

A Macintosh version of RouterView was included with your router. You can run RouterView from any Macintosh on your network that meets the following technical specifications:

- Macintosh with 68030 or later processor (including PowerPC)
- System 7.0 or later.

❖ **Note:** *Although older Macintoshes such as SE/30's and IIsi's will run RouterView adequately for infrequent use, a newer/faster machine is preferable for larger networks where RouterView will be used more often.*

Installation and Operation

To install RouterView for Macintosh, simply insert the RouterView diskette into the floppy drive of your Macintosh. Then double click on the self extracting archive (.sea) icon. You will be asked where you would like to locate your copy of the RouterView program and data files.

Double-click on the RouterView icon and the program will start up and ask you to select/create a location for its database. Once the database has been created, this message will not reappear when you run RouterView.

For further information on using RouterView, see the RouterView Reference Guide included with your router.

Chapter 5 - Setting Up Command Line Management

The command-line interface allows you to configure and monitor the router in-band via Telnet or out-of-band with a terminal connected to the RISC Router 2800i's AUX port.

Telnet is a remote terminal communications protocol based on TCP/IP. With Telnet you can log into and manage the router from anywhere on your IP internetwork, including across the Internet if you choose. To do this, you must run Telnet client software on your local computer, which will communicate with the Telnet server built into the router.

In order to be able to access the command-line interface via Telnet, you must first set some IP parameters in the router. You can do this through the AUX port using a terminal or a PC with terminal emulation software, or with RouterView if you prefer.

After the IP parameters are set, you can complete the configuration in-band with Telnet.

Out-of-Band Command-Line Management

Set a terminal or a PC to a baud rate of 9600, and connect it to the router's AUX port using the auxiliary cable which was supplied with the router. Press the <Return> key three or four times.

Enter the default password *letmein* at the password prompt. The command line interface prompt will appear on the screen.

For further information on using the command line interface, see the Command Line Reference Guide that was supplied with your router.

Setting Up Telnet Operation

Before being able to access the command line interface via Telnet, you will need to complete basic IP configuration for the port which you will connect through.

This can be done using the **set ip** commands from a console. For more information on these commands, see the Command Line Reference Guide which was supplied with your router.

The required parameters for Telnet operation are the IP address, IP subnet mask, and IP broadcast address. To change the configuration parameters in the RISC Router 2800i, you will have to enter a requested password. The default password is *letmein*.

After you have set these basic IP parameters, you can use Telnet to access the router from any node on your IP internetwork. Invoke the Telnet client on your local computer with the IP address of the router you wish to manage.

❖ **Note:** *Proper syntax is vital to effective operation of the command line. Case is not significant – you may enter commands in upper case, lower case, or a combination of the two.*

Chapter 6 - Quickstart Instructions

This Quickstart section briefly discusses the major parameters that must be set in order to use the router.

There are a number of parameter settings which are optional, in the sense that they are not required for all installations. These settings are not covered in this section.

In this section:

RV = RouterView

CL = Command Line

❖ **Note:** *In order to successfully connect to an Internet Service Provider (ISP), you must use router configuration parameters which will be provided by the technical staff of the ISP. These parameters must include all IP addresses, WAN settings, and any applicable authorization routines. If you obtained your RISC Router 2800i directly from an ISP, it may be pre-configured for your site.*

*Please check with your ISP **before** configuring or changing the configuration of your RISC Router 2800i.*

❖ **Note:** *Considerably more information on the meaning of the router's parameters is provided in the RouterView Reference Guide and the Command Line Reference Guide. You should use this list as a starting point to look up more specific information in the other documents. If you need more general information on the IP or wide-area protocols, see the Appendices in the RouterView Reference Guide.*

Ethernet Port Configuration

Ethernet ports are considerably easier to set up than wide area ports since there are no choices that need to be made regarding line communications devices and their parameters. We recommend that you begin by configuring any Ethernet port parameters before proceeding to configure WAN port parameters.

IP Protocol

Required for IP

These parameters set the basic address characteristics of the port. They provide enough information for another IP node to find the port (such as a Telnet client), but not enough information for routing to take place.

- IP Address
- IP Subnet Mask
- IP Broadcast Address

RV: Use the Ethernet/IP screen to set these parameters.

CL: Use the **interface(misc)** and **ip(set)** commands.

Suggested for IP

These parameters help supply information about the segment that the port is connected to. With this information, routing can take place.

- IP RIP (Routing Information Protocol)

and/or

- IP Static Routes

RV: Use the Ethernet/IP screen to set RIP, and the IP Static Routing Window (All/IP) to set static routes.

CL: Use **interface(misc)** and **ip flags(set)** to set RIP, and **ip route(add)** to add static routes.

WAN Port PPP Configuration

This section covers the settings required for PPP (point-to-point) protocol operation of the RISC Router 2800i WAN ports. In general, the parameters listed here should be set for each WAN port on which you plan to use PPP. Note that some WAN ports can be running PPP while others are running Frame Relay.

There are a few differences between the capabilities of the V.35 WAN ports and the RS-232 WAN ports. The V.35 ports can only be run synchronously, at rates up to 2 Mbps per second. The RS-232 ports

can be run synchronously or asynchronously, at rates up to 128Kbps (sync), or 115.2Kbps (async).

IP Protocol

Required for IP

WAN ports which are set for PPP operation do not generally use an IP address. They are set to act as an “unnumbered interface.” In this mode of operation, there are no required settings.

Suggested for IP

These parameters help supply information about the segment that the port is connected to. With this information, routing can take place.

- IP RIP (Routing Information Protocol)

and/or

- IP Static Routes
- IP Default Router

❖ **Note:** *If you set RIP to on for a dial-on-demand link, you must also set the update method to **triggered** to avoid the link being brought up by transmission of RIP information.*

RV: Use the WAN/IP screen to set RIP and the update method, and the IP Static Routing Window (All/IP) to set static routes and a default router.

CL: Use **interface(misc)** and then **ip flags(set)** to set RIP, and **ip wan(set)** to set the updated method, and **ip route(add)** to add static routes. User **interface(misc)** and **ip(set)** to set the default router.

Link Configuration

Required for Dedicated/Leased Line Operation

Dedicated line operation is the simplest to set up.

- Set Dedicated connection
- Set PPP connection

RV: Use the WAN/Link screen.

CL: Use **interface(misc)** and then **wan connect(set)**.

Suggested for Dedicated/Leased Line Operation

Dedicated line operation generally does not require additional parameters for operation.

Required for Dial-On-Demand Operation

Incoming dial-on-demand operation requires only slightly more information than dedicated line setup. Outgoing dial-on-demand requires additional information (see the suggested settings below).

- Set dial-up connection
- Set PPP connection
- Set to allow dial-in and/or dial-out

RV: Use the WAN/Link screen.

CL: Use **interface(misc)** and then **wan connect(set)**.

Suggested for Dial-On-Demand Operation

Outgoing dial-on--demand requires some additional information.

- Set dialing method
- Create dial-out script
- Set dial-out script to be used

RV: Use the WAN/Link window to set the dialing method and to select a chat script (once you have created one). Use the Chat Script Editor window (All/Link) to create your chat script.

CL: Use **interface(misc)** and then **wan connect(set)** to set the dialing method and to select a chat script (once you have created one). Use the **chat(edit)** command to create a chat script.

Physical Comm Settings

You may need to set the baud rate, sync/async operation, and other physical communications parameters for the WAN port. These parameters will depend on the line communications device you are using.

RV: Use the WAN/General window.

CL: Use **interface**(misc) and then **wan serial**(set).

WAN Port Frame Relay Configuration

This section covers the settings required for Frame Relay operation of the RISC Router 2800i WAN ports. In general, the parameters listed here should be set for each WAN port on which you plan to use Frame Relay. Note that some WAN ports can be running Frame Relay while others are running PPP.

There are a few differences between the capabilities of the V.35 WAN ports and the RS-232 WAN ports. The V.35 ports can only be run synchronously, at rates up to 2 Mbps per second. The RS-232 ports can be run synchronously or asynchronously, at rates up to 128Kbps (sync), or 115.2Kbps (async).

IP Protocol

Required for IP

Frame Relay operation requires that the WAN port is set to be a “numbered interface.” This means that the port (and thus the Frame Relay network) must have an IP address, etc.

- IP numbered interface
- IP Address
- IP Subnet mask
- IP Broadcast Address

RV: Use the WAN/IP screen to set these parameters.

CL: Use the **interface**(misc) and **ip wan**(set) commands.

Suggested for IP

These parameters help supply information about the segment that the port is connected to. With this information, routing can take place.

- IP RIP (Routing Information Protocol)

and/or

- IP Static Routes
- IP Default Router

RV: Use the WAN/IP screen to set RIP, and the IP Static Routing Window (All/IP) to set static routes and a default router.

CL: Use **interface**(misc) and then **ip flags**(set) to set RIP, and **ip route**(add) to add static routes. Use **interface**(misc) and **ip**(set) to set the default router.

Link Configuration

Frame Relay is presently supported in the RISC Router 2800i only via dedicated line operation.

- Set Dedicated connection
- Set Frame Relay connection

RV: Use the WAN/Link screen.

CL: Use **interface**(misc) and then **wan connect**(set).

Suggested for Dedicated/Leased Line Operation

Dedicated line operation generally does not require additional parameters for operation.

Frame Relay DLCI Mappings

If you are connecting to another Compatible Systems router, this information is not required. Compatible Systems uses IARP (Inverse Address Resolution Protocol) to dynamically generate this information. To connect to other vendors' routers which do not support IARP, or do not have it turned on, you must provide DLCI to protocol mapping information.

❖ **Note:** *Many ISP's do not support IARP as a default. Check with your ISP technical staff on whether you must manually enter DLCI information or not.*

RV: Use the DLCI Mapping Database window.

CL: Use **interface**(misc) and then **freelay**(set).

Physical Comm Settings

You may need to set the baud rate, sync/async operation, and other physical communications parameters for the WAN port. These parameters will depend on the line communications device you are using.

RV: Use the WAN/General window.

CL: Use **interface**(misc) and then **wan serial**(set).

Appendix A - Shipping Defaults

Ethernet Port

IP Defaults

- On
- Address: 198.41.12.1
- Subnet Mask: 255.255.255.0
- Broadcast Address: 198.41.12.255
- IP RIP off

WAN Port

IP Defaults

- On
- Unnumbered interface
- RIP off
- Van Jacobson compression off

V.35 (WAN A & WAN B) Link & Physical Defaults

- PPP
- Dedicated
- Sync, external clock

RS-232 (WAN C & WAN D) Link & Physical Defaults

- PPP
- Dial-in
- Async @ 115.2Kbps
- Hardware flow control

Appendix B - Connector and Cable Pin Outs

Pin Outs for V.35 Female Connector (DTE)

V.35 (DTE)	Signal	
A	Chassis Ground	<->
B	Signal Ground	<->
C	Request to Send	->
D	Clear to Send	<-
E	Data Set Ready	<-
F	Receive Line Signal Detect	<-
H	Data Terminal Ready	->
J	Local Loopback	->
P	Tx Data	->
R	Rx Data	<-
S	Tx Data	->
T	Rx Data	<-
U	Tx Clock Out	->
V	Rx Clock In	<-
W	Tx Clock Out	->
X	Rx Clock In	<-
Y	Tx Clock In	<-
AA	Tx Clock In	<-

Pin Outs for DIN-8 to RS-232 Data Cable (DCE/Male)

DIN-8 (DTE)	RS-232		DB-25 Data (DCE/Male)	RS-232
1	RTS	->	4 & 20	RTS & DTR
2	CTS	<-	5	CTS
3	Tx Data	->	2	Tx Data
4	Ground	<->	7	Ground
5	Rx Data	<-	3	Rx Data
6	Tx Clock	<->	15	Tx Clock
7	DCD	<-	8	DCD
8	Rx Clock	<-	17	Rx Clock
Shield		<->	Shield	

Notes:

1. DCD must be supported in order for the router to sense a completed connection.
2. Tx Clock direction is determined by an internal jumper. The line device sourcing clock (i.e. <-) is the default.

Pin Outs for DIN-8 to RS-232 Console Cable (DTE/Female)

DIN-8 (DTE)	RS-232		DB-25 Data (DTE/Female)	RS-232
1	RTS	->	5	CTS
2	CTS	<-	4	RTS
3	Tx Data	->	3	Rx Data
4	Ground	<->	7	Ground
5	Rx Data	<-	2	Tx Data
6	Tx Clock	<->	17	Tx Clock
7	DCD	<-	8	DCD
8	Rx Clock	<-	15	Rx Clock
Shield		<->	Shield	

Notes:

1. This cable is a null-modem DTE-to-DTE cable.
2. Because it is a null-modem cable, it can be connected “back-to-back” with a DCE/Male data cable in order to create a router-to-router test connection cable.

Appendix C - LED Patterns and Test Switch Settings

RISC Router 2800i LED Patterns

The RISC Router 2800i uses a number of light patterns on its front LED bars to indicate operating conditions.

Power On, No Traffic

The router will scan through the left (Ethernet) LED bar, from left to right, illuminating one element at a time.

❖ **Note:** *Lights 1 and 10 are directly connected to the router's 10BaseT interface and indicate 10BaseT link (1) and 10BaseT polarity (10).*

Ethernet Traffic Indicators (Ethernet LED Bar)

Scan from 2 to 5: Ethernet receive packet

Scan from 9 to 6: Ethernet transmit packet

Other Indicators (on Both LED Bars)

5 & 6 flashing: Router stacks starting up

3,4 & 7,8 flashing: Running from ROM

3,5 & 7,9 on solid: Erasing Flash ROM

2 to 4 & 9 to 6 rotating: Flash ROM erase due to switch setting five is complete. Set switch to zero and cycle power.

Panic Indicators

Any continuous flashing pattern not noted above may be caused by a software "panic." This is a sign that a condition has been detected that the software does not know how to deal with: either an unusual network condition, or a hardware failure.

RISC Router 2800i Switch Settings

- 0 **Normal Operation**
- 1 Unused*
- 2 Unused*
- 3 **Run Boot ROM Downloader**
- 4 Unused*
- 5 **Erase Flash ROM (OS and Configuration)**
- 6 **Erase Flash ROM (Configuration Only)**
- 7 Unused*
- 8 Unused*
- 9 **Allow *letmein* password for 5 minutes after powerup**

Notes:

1. Settings marked with an asterisk may erase your Flash ROM. Please don't use these settings without first contacting Compatible Systems Tech Support.

Appendix D - Downloading Software From Compatible Systems

We make the latest versions of operating software for all Compatible Systems products available from a number of on-line sources. The latest versions of RouterView management software is also available at these locations.

To download software, select the proper source and follow the instructions below.

The Compatible Systems FTP Server

The FTP Server is accessible via the Internet. If your company does not have an Internet account, check the other sources.

1. FTP to ftp.Compatible.COM and login as “anonymous.” Change the working directory to Compatible (cd Compatible). List the available directories (ls). Change the working directory to the appropriate directory (e.g.RISCRouter).
2. To transfer the files from the FTP, type “get” followed by the filename.
3. Disconnect from the FTP server.

❖ **Note:** *Uncompressed downloads (suitable for TFTP and RouterView Windows downloading) are stored as .dld files. Self-extracting Windows compatible style files (and RouterView for Windows itself) are stored as .exe files. Self extracting Macintosh style files are stored as .sea.bin and/or .sea.hqx files.*

❖ **Note:** *These files are also accessible via the World Wide Web at <http://www.compatible.com/>*

CompuServe

Compatible Systems maintains a software library in the LAN Vendors Forum of the CompuServe on-line service. To access the software library, follow these steps:

1. Type the **GO COMPATIBLE** command. This will place you in the LAN Vendors Forum.
2. Compatible Systems may be found in section 12 of this forum. Follow the instructions provided by CompuServe regarding downloading files.

Bulletin Board

Compatible Systems administers a bulletin board that you can access using standard telecommunications software. The bulletin board supports modem settings of 8-N-1 and speeds up to 9600 KBps. The BBS phone number is (303) 443-0845.

1. Type 'bbs' at the first login prompt.
2. Type "guest" at both the user and password query of the BBS login prompt. At any time after you login, you may type 'h' and receive a list of valid commands.
3. Once logged in, change to the files section of the BBS by using the 'F' command. Set the transfer protocol you wish to use (Zmodem is default) using the 'P' command.
4. Select the appropriate sub-board according to product and download the file(s) that you need via the 'd' command.

AppleTalk Remote Access Server

You can reach our AppleTalk Remote Access (ARA) server at (303) 444-8769. You must have Apple's ARA software to access this server.

1. Log in to the server as a guest.
2. Choose the server named 'Compatible ARA Server' which is located in the "DemoNet Zone" zone.
3. Open the appropriate folder and simply drag the file onto your hard disk.

Appendix E - Terms and Conditions

Compatible Systems Corporation (Compatible Systems) offers to sell only on the condition that Customer's acceptance is expressly limited to Compatible Systems' terms and conditions of sale. Compatible Systems' acceptance of any order from Customer is expressly made conditional on assent to these terms and conditions of sale unless otherwise specifically agreed to in writing by Compatible Systems. In the absence of such agreement, commencement of performance or delivery shall be for Customer's convenience only and shall not be construed as an acceptance of Compatible Systems' terms and conditions. If a contract is not earlier formed by mutual agreement in writing, Customer's acceptance of any goods or services shall be deemed acceptance of the terms and conditions stated herein.

1. Warranty. Compatible Systems warrants to the Customer and to all persons who purchase Products from the Customer during the Warranty terms ("subsequent purchasers"), that, for a period of three (3) years from the date (the "shipping date") on which Compatible Systems ships the Products to the Customer: (a) the Product meets, in all material respects, all specifications published by Compatible Systems for such Products as of the shipping date; (b) the Products are free from all material defects in materials and workmanship under normal use and service; and (c) that as a result of the purchase of the Products from Compatible Systems, the Customer will have good title to the Products, free and clear of all liens and encumbrances.

Compatible Systems' obligations pursuant to this Warranty, and the sole remedies of the Customer and of any subsequent purchaser, shall be limited to the repair or replacement, in Compatible Systems' sole discretion, of any of the Products that do not conform to this Warranty.

This Warranty shall be invalidated if the Products (a) have not been installed, handled, or used in accordance with Compatible Systems recommended procedures; (b) have been damaged through the negligence or abuse of the Customer or of any subsequent purchasers; (c) are damaged by causes external to the Products, including (without limitation) shipping damage, power or air conditioning failure, or accident or catastrophe of any

nature; and (d) have been subjected to repairs or attempted repairs by any person other than Compatible Systems (or an authorized Compatible Systems service technician).

To obtain service under this Warranty, the Customer (or subsequent purchaser, if applicable) must follow the procedures outlined below, under "Product Return Policy."

THE WARRANTIES SET FORTH IN THESE TERMS AND CONDITIONS ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED. WITHOUT LIMITATION ON THE GENERALITY OF THE FOREGOING SENTENCE, COMPATIBLE SYSTEMS EXPRESSLY DISCLAIMS AND EXCLUDES ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS (GENERALLY OR FOR A PARTICULAR PURPOSE).

2. Shipments. All delivery indications are estimated and are dependent in part upon prompt receipt of all necessary information to service an order. Compatible Systems shall not be liable for any premium transportation or other costs or losses incurred by Customer as a result of Compatible Systems inability to deliver Product in accordance with Customer's requested delivery dates. All shipments by Compatible Systems are made F.O.B. factory (Boulder, Colorado); risk of loss shall pass to Customer at point of shipment. Unless specified by the Customer, Compatible Systems will select the mode of transportation for each order. Compatible Systems reserves the right to make deliveries in installments. Partial shipments are subject to the terms of payment noted below. Compatible Systems reserves the right to allocate inventory and production if such allocation becomes necessary.

3. Payment Terms. Payment shall be made prior to shipment or upon delivery, unless otherwise agreed to in writing. Payment shall not constitute acceptance of the goods.

4. Force Majeure. All orders accepted by Compatible Systems are subject to postponement or cancellation for any cause beyond the reasonable control of Compatible Systems, including without limitation: inability to obtain necessary materials and components; strikes, labor disturbances, and other unavailability of workers; fire, flood, and other acts of God; war, riot, civil insurrection, and other disturbances; production or engineering difficulties; and governmental regulations, orders, directives, and restrictions.

5. Product Return Policy. Prior to shipping any Product to Compatible Systems, the Customer must contact Compatible Systems Technical Support (by letter or telephone) with the following information: (a) reason for return; (b) quantity, description, and model number, and (if applicable) serial number of each item being returned; (c) original Compatible Systems Sales Agreement number; and (d) any special instructions. Upon receipt of this information, Compatible Systems will issue an RMA (“Return Material Authorization”) number and any required U.S. Customs identification to assure correct identification of the Customer and to insure prompt and accurate processing.

6. Limitation of Remedies. Compatible Systems’ liability for all claims brought pursuant to or in connection with this agreement, including the purported breach hereof, shall be limited: (a) in the case of claims for breach of warranty, to compliance with the repair or replacement provisions of the warranty, and (b) in all other cases (including any claim that the warranty failed of its essential purpose), to actual damages of the Customer (or, if appropriate, of the subsequent purchaser). **IN NO EVENT SHALL COMPATIBLE SYSTEMS BE LIABLE FOR ANY SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES ARISING OUT OF THE SALE, USE, INSTALLATION OR OPERATION OF THE PRODUCTS, WHETHER A CLAIM IS BASED ON STRICT LIABILITY, BREACH OF WARRANTY, NEGLIGENCE, OR ANY OTHER CAUSE WHATSOEVER, WHETHER OR NOT SIMILAR.** This limitation on remedies shall apply even if Compatible Systems is advised of the possibility and nature of any special, consequential, or incidental damages.

7. Governing Law; Merger. This agreement and all Terms and Conditions hereof shall be governed by, and construed in accordance with the internal laws of the State of Colorado. Except as superseded by a separate written contract signed by both Compatible Systems and the Customer, superseding all prior negotiations or offers, written or oral, this agreement may be amended only in writing, signed by an authorized officer of Compatible Systems.