



WESTELL

ULTRALINE HOME DSL ROUTER (MODEL 7401)

ULTRALINE HOME DSL ROUTER WITH USB (MODEL 7400)

USER GUIDE



This User Guide provides information about Westell's UltraLine Home DSL Router with USB (Model 7400) and UltraLine Home DSL Router (Model 7401) products. The following table outlines the sections of this document that apply to each Westell product. To determine which product you have, view the label that is affixed to the bottom of the Router. The label contains a model number that identifies your product.

Section		Model 7400	Model 7401
1	Product Description	X	X
2	Safety Instructions	X	X
3	Regulatory Information	X	X
4	Networking Requirements	X	X
5	Hardware Features	X	X
6	Installing the Hardware	X	X
7	Installing the USB Drivers	X	
8	Configuring the Router for Internet Connection	X	X
9	Setting Up Advanced Configuration	X	X
10	Home Menu	X	X
11	Status Menu	X	X
12	Configuration Menu	X	X
13	Setting Up Advanced Service Configuration	X	X
14	Maintenance Menu	X	X
15	Troubleshooting Menu	X	X
16	NAT Services Menu	X	X
17	Product Specifications	X	X
18	Help	X	X
19	Technical Support Information	X	X
20	Warranty Information	X	X
21	Software License Agreement	X	X
22	Publication Information	X	X

TABLE OF CONTENTS

1. PRODUCT DESCRIPTION	5
2. SAFETY INSTRUCTIONS	5
3. REGULATORY INFORMATION	6
3.1 FCC Compliance Note.....	6
3.2 Canada Certification Notice.....	7
4. NETWORKING REQUIREMENTS	8
5. HARDWARE FEATURES.....	9
5.1 LED Indicators.....	9
5.2 Cable Connectors and Switch Locations	10
5.3 Connector Descriptions.....	11
5.4 Pinout Descriptions.....	11
6. INSTALLING THE HARDWARE.....	12
6.1 Installation Requirements	12
6.2 Before you begin.....	12
6.3 Microfilters	12
6.4 Hardware Installations	13
7. INSTALLING THE USB DRIVERS (MODEL 7400)	17
7.1 CD-ROM Installation:	17
7.2 Installing the USB Drivers for Windows 98.....	17
7.3 Installing the USB Drivers for Windows ME.....	23
7.4 Installing the USB Driver for Windows 2000	25
7.5 Installing the USB Driver for Windows XP	28
8. CONFIGURING THE ROUTER FOR INTERNET CONNECTION	30
8.1 Setting Up an Account Profile	30
8.2 Confirm a DSL Sync	35
8.3 Establishing a PPP Session.....	36
8.4 Disconnecting a PPP Session.....	38
9. SETTING UP ADVANCED CONFIGURATION	41
10. HOME.....	42
10.1 Adding Account Profiles	43
10.2 Editing Account Profiles.....	44
11. STATUS.....	46
11.1 Connection Summary	46
11.2 About	47



12. CONFIGURATION	48
12.1 Single Static IP – Single IP Address PassThrough	48
12.2 Service Configuration	56
12.3 Firewall Configuration.....	63
12.4 Advanced LAN	66
12.5 Advanced WAN.....	82
13. ADVANCED SERVICE CONFIGURATION	100
13.1 Port Forwarding Ranges of Ports	101
13.2 Adding Port Forwarding Ports	101
13.3 Port Forwarding Trigger Ports	102
13.4 Adding Local Trigger Ports	103
13.5 Static NAT	103
13.6 Enabling Static NAT.....	104
13.7 Disabling Static NAT.....	105
14. MAINTENANCE.....	107
14.1 Backup/Restore	107
14.2 Firewall Log	108
14.3 Administrative Password	110
14.4 Remote Access.....	111
14.5 Update Device	112
15. TROUBLESHOOTING	117
15.1 System Self Tests.....	117
15.2 Diagnostic Logs	119
15.3 Statistics	122
15.4 USB Port Statistics	125
15.5 Status	126
16. NAT SERVICES	131
17. PRODUCT SPECIFICATIONS.....	135
18. HELP	136
19. TECHNICAL SUPPORT INFORMATION	150
20. WARRANTY INFORMATION	150
21. SOFTWARE LICENSE AGREEMENT.....	151
22. PUBLICATION INFORMATION.....	153

1. PRODUCT DESCRIPTION

The Westell® UltraLine Home DSL Router provides reliable, high-speed, Internet access to your existing home or office phone line. Your ADSL connection is “always-on” ending the hassles of dial-up modems and busy signals. Installation is easy ... no tools ... no headaches. Simply connect the hardware, apply power, and perform the simple software configuration for your Router and you are on the Internet.

This Router is capable of data rates hundreds of times faster than a traditional analog modem. But unlike analog modems, Westell's Router allows you to use the same phone line for simultaneous voice/fax communications and high-speed Internet access, eliminating the need for dedicated phone lines for voice and data needs.

NOTE: Hereafter, the Westell UltraLine Home DSL Router will be referred to as the “Modem” or “Router.”

2. SAFETY INSTRUCTIONS

Never install any telephone wiring during a lightning storm.

Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.

Never touch non-insulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.

Use caution when installing or modifying telephone lines.



WARNING



Risk of electric shock. Voltages up to 140 Vdc (with reference to ground) may be present on telecommunications circuits.

3. REGULATORY INFORMATION

3.1 FCC Compliance Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communication Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to a different circuit from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

PART 68 - COMPLIANCE REGISTRATION

This equipment (Models 7400, 7401) complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. A label on the bottom of this equipment contains, among other information, the Ringer Equivalence Number (REN) and the product identifier. For products approved after July 23, 2001 the product identifier is in the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g. 03 is a REN of 0.3). The REN is used to determine the number of devices that may be connected to a telephone line. For earlier products, the REN is separately shown on the label. If requested, this number must be provided to the telephone company.

Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

This equipment is designated to connect to the telephone network or premises wiring using a compatible modular jack that is Part 68 compliant. An FCC compliant telephone cord and modular plug is provided with the equipment. See the Installation Information section of this User Guide for details.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instruction for details.

If this terminal equipment (Models 7400, 7401) causes harm to the telephone network, the telephone company may request you to disconnect the equipment until the problem is resolved. The telephone company will notify you in advance if temporary discontinuance of service is required. If advance notification is not practical, the telephone company will notify you as soon as possible. You will be advised of your right to file a complaint with the FCC if you believe such action is necessary.

If you experience trouble with this equipment (Models 7400, 7401), do not try to repair the equipment yourself. The equipment cannot be repaired in the field. Contact your ISP for further instructions.

The telephone company may make changes to their facilities, equipment, operations, or procedures that could affect the operation of this equipment. If this happens, the telephone company will provide advance notice in order for you to make the modifications necessary to maintain uninterrupted service.

If your home has specially wired alarm equipment connected to the telephone line, ensure that the installation of this equipment (Models 7400, 7401) does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This equipment cannot be used on public coin phone service provided by the telephone company. Connection of this equipment to party line service is subject to state tariffs.

3.2 Canada Certification Notice

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operations and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The department does not guarantee the equipment will operate to the user's satisfaction.

This equipment meets the applicable Industry Canada Terminal Equipment Technical Specification. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specification were met. It does not imply that Industry Canada approved the equipment. The Ringer Equivalence Number (REN) is 0.0. The Ringer Equivalence Number that is assigned to each piece of terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local Telecommunication Company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations. Connection to a party line service is subject to state tariffs. Contact the state public utility commission, public service commission, or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure that the installation of this equipment (Models 7400, 7401) does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

If you experience trouble with this equipment (Models 7400, 7401), do not try to repair the equipment yourself. The equipment cannot be repaired in the field and must be returned to the manufacturer. Repairs to certified equipment should be coordinated by a representative, and designated by the supplier. Refer to section 20 in this User Guide for further details.

The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

Users should ensure, for their own protection, that the electrical ground connections of the power utility, telephone lines, and internal, metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.



Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority, or electrician, as appropriate.

4. NETWORKING REQUIREMENTS

The following system specifications are required for optimum performance of the Router via 10/100 Base-T or USB installation.

MODEL	CONNECTION TYPE	MINIMUM SYSTEM REQUIREMENTS
7400 7401	ETHERNET	<ul style="list-style-type: none">• Pentium® or equivalent and above class machines, Macintosh• Microsoft® Windows® (95, 98, 2000, ME, NT 4.0, or XP), Macintosh® OS X, or Linux installed• Computer Operating System CD-ROM on hand• Internet Explorer 4.x or Netscape Navigator 4.x or higher• 64 MB RAM (128 MB recommended)• 10 MB of free hard drive space• TCP/IP Protocol stack installed• 10/100 Base-T Network Interface Card (NIC)
7400	USB	<ul style="list-style-type: none">• Pentium® or equivalent and above class machines• Microsoft® Windows® 98, 2000, ME, or XP installed• Computer operating system CD-ROM on hand• Internet Explorer 4.x or Netscape Navigator 4.x or higher• 64 MB RAM (128 MB recommended)• 10 MB of free hard drive space• USB Version 1.0 or higher compliant bus

5. HARDWARE FEATURES

5.1 LED Indicators

This section explains the LED States and Descriptions. LED indicators are used to verify the unit's operation and status.

LED States and Descriptions (Models 7400, 7401)


LED	State	Description
POWER	Solid Green	Power ON
	No Light	No Power
	Solid Red	POST (Power On Self Test), Failure (not bootable) or Device Malfunction. Note: The Power LED should be red no longer than two seconds after the power on self test passes.
LAN	Flashing Green	LAN activity present (traffic to or from any LAN interface)
	OFF	No LAN activity
DSL	Solid Green	Power ON and synchronized with ADSL line card.
	OFF	Router power Off.
	Flashing Green	DSL attempting to sync with carrier detect signal.
	Solid Amber	Router is in safe boot mode.
INTERNET	Solid Green	Internet link established
	OFF	Router Power is Off, Router is in Bridge Mode, or the ADSL connection is not present.
	Flashing Green	IP connection established and IP Traffic is passing through device (in either direction).
	Solid Red	Router failed IP connection.
ETHERNET* (on back of unit)	Solid Green	100 Base-T link.
	Flashing Green	100 Base-T activity and/or traffic.
	Solid Yellow	10 Base-T link.
	Flashing Yellow	10 Base-T activity and/or traffic.
	OFF	No Ethernet link or traffic for specific 10/100 Base-T connection.

**Note: Each Ethernet port has two LEDs (one green and one yellow) that are built into the connector housing.*

5.2 Cable Connectors and Switch Locations


Model 7400

- DSL Connector (RJ-11)
- USB Connector (blue)
- Reset Button
- Ethernet Connector (RJ-45)
- Power Connector
- ON/OFF Switch

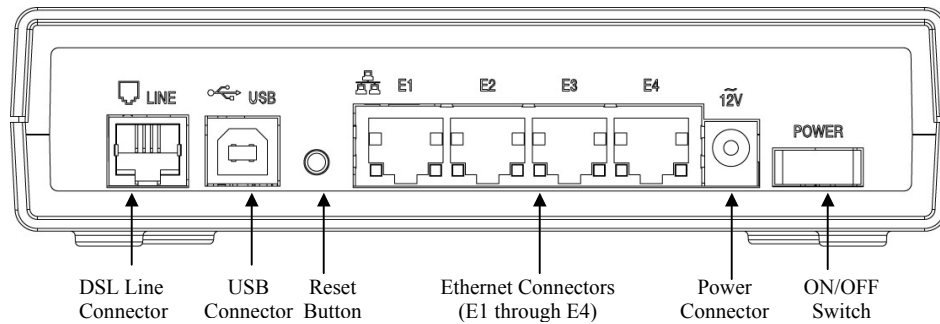



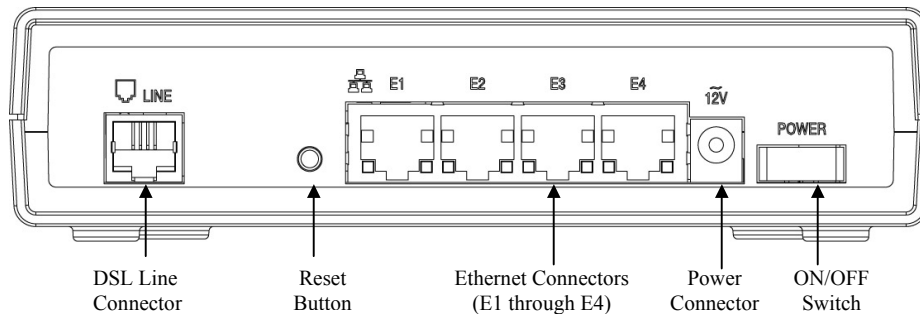

Model 7401

- DSL Connector (RJ-11)
- Reset Button
- Ethernet Connector (RJ-45)
- Power Connector
- ON/OFF Switch



5.3 Connector Descriptions

The following chart displays the connector types.

SYMBOL	NAME	TYPE	FUNCTION
	DSL LINE	6-pin RJ-11 modular jack	Connects to an ADSL-equipped telephone jack or DSL connection of a POTS splitter.
	USB	4-pin USB Series B connector	Connects the USB device to the PC.
	POWER	Barrel connector	Power source.
	ETHERNET	8-pin (RJ-45) modular jack	Connects the Ethernet device to the PC.

5.4 Pinout Descriptions

The following tables list the pinout descriptions.

DSL Pinouts

Pinout	Description
1, 2, 5, 6	Not Used
3	DSL Tip
4	DSL Ring

USB Series B Connector Pinouts

Pin	Name	Description	Cable Color
1	VBUS/Vcc	5 Vdc	Red
2	D –	Data –	White
3	D +	Data +	Green
4	GND	Ground	Black

Ethernet Pinouts

Pinout	Description
1	Rx+
2	Rx-
3	Tx+
4,5,7,8	Not Used
6	Tx-

6. INSTALLING THE HARDWARE

6.1 Installation Requirements

To install the Westell Router, you will need the following:

- A Network Interface Card (NIC) installed in your PC or
- An available USB port installed on your PC (if using Model 7400)
- A DSL line (provided by your Internet service provider)

NOTE: Internet service provider (ISP) subscriber software and connection requirements may vary. Consult your ISP for installation instructions. Please wait until you have received notification from your ISP that your DSL line has been activated before installing the Westell UltraLine Router and software.

6.2 Before you begin

Make sure that your kit contains the following items:

Model 7400	Model 7401
<ul style="list-style-type: none">• Westell UltraLine Home DSL Router• Power Supply• RJ-45 Ethernet cable (straight-through) (yellow)• USB cable (blue)• RJ-11 Phone cable• Westell CD-ROM containing User Guide in PDF format• Quick Start Guide	<ul style="list-style-type: none">• Westell UltraLine Home DSL Router• Power Supply• RJ-45 Ethernet cable (straight-through) (yellow)• RJ-11 Phone cable• Westell CD-ROM containing USB software drivers and User Guide in PDF format• Quick Start Guide

6.3 Microfilters

ADSL signals must be blocked from reaching each telephone, answering machine, fax machine, computer modem or any similar conventional device. Failure to do so may degrade telephone voice quality and ADSL performance. Install a microfilter if you desire to use the DSL-equipped line jack for telephone, answering machine, fax machine or other telephone device connections. Microfilter installation requires no tools or telephone rewiring. Just unplug the telephone device from the baseboard or wall mount and snap in a microfilter, next snap in the telephone device. You can purchase microfilters from your local electronics retailer, or contact the original provider of your DSL equipment.

6.4 Hardware Installations





NOTE: Please wait until you have received notification from your Internet service provider (ISP) that your DSL line has been activated before installing your Router.

NOTE: If you are using a Westell Router in conjunction with an Ethernet Hub or Switch, refer to the manufacturer's instructions for proper installation and configuration. **Westell recommends the use of a surge suppressor to protect equipment attached to the AC power supply.**

6.4.1 Installation via 10/100 Base-T Ethernet (Models 7400, 7401)



NOTE: Before you connect via 10/100 Base-T, you must have an available Ethernet card installed in your computer. If your Ethernet card does not auto-negotiate, you must set it to half duplex. Refer to the Ethernet card manufacturer's instructions for installing and configuring your Ethernet card.

1. Connect the power supply cord to the power connector marked **12V** on the rear panel of the Router. Plug the other end of the power supply into a wall socket.
2. Connect the DSL phone cable from the jack marked  on the rear panel of the Router to the DSL-equipped telephone line jack on the wall. You must use the phone cord that was provided with the kit.
3. Connect the yellow Ethernet cable from any one of the Ethernet jacks marked  on the rear panel of the Router to the Ethernet port on your computer. **Repeat this step to connect up to three additional PCs to the Router.**

NOTE: You may connect to any of the four Ethernet jacks on the rear panel of the Router as they serve as an Ethernet switch.

4. Check to see if the DSL/RDY LED is solid green. If this LED is solid green, the Router is functioning properly.
5. Check to see if the Ethernet LED (on the back of the unit) lights solid yellow or solid green. Solid green indicates that the Ethernet connection is functioning properly in 100 Base-T mode. Solid yellow indicates that the Ethernet connection is functioning properly in 10 Base-T mode.

Congratulations! You have completed the Ethernet hardware installation. No software installation is required when using only an Ethernet connection. Proceed to section 8 to configure your Router for Internet connection.

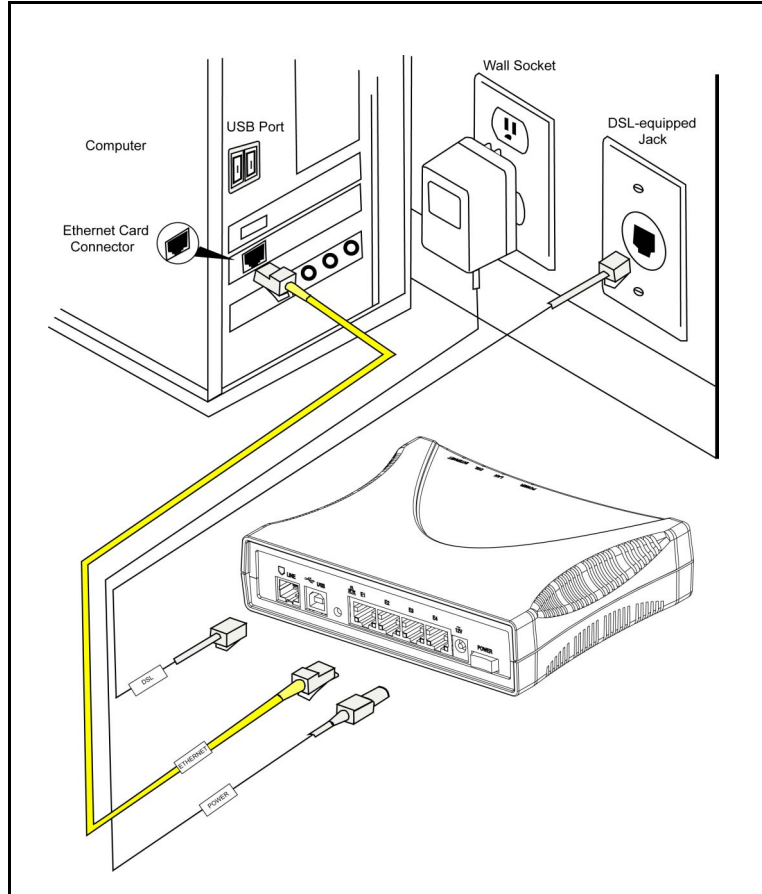




Figure 1. Connection via 10/100 Base-T Ethernet

NOTE: The Router features shown in Figure 1 apply to the Model 7400 product. The Model 7401 product has only an Ethernet interface.

6.4.2 Installation via USB (Model 7400)



NOTE: The USB installation will not function for Macintosh computers. Macintosh computers must install via Ethernet connection. See section 6.4.1.

1. Connect the power supply cord to the power connector marked **12V** on the rear panel of the Router. Plug the other end of the power supply into a wall socket.
2. Connect the DSL phone cable from the connector marked  on the rear panel of the Router to the DSL-equipped telephone line jack on the wall. You must use the phone cord that was provided with the kit.
3. Connect the blue USB cable from the blue USB connector marked  on the rear panel of the Router to the USB port on the PC.
4. Check to see if the DSL/RDY LED is solid green. If this LED is solid green, the Router is functioning properly.

Congratulations! You have completed the USB hardware installation for Model 7400. You must now go to section 7 to begin the USB driver software installation.

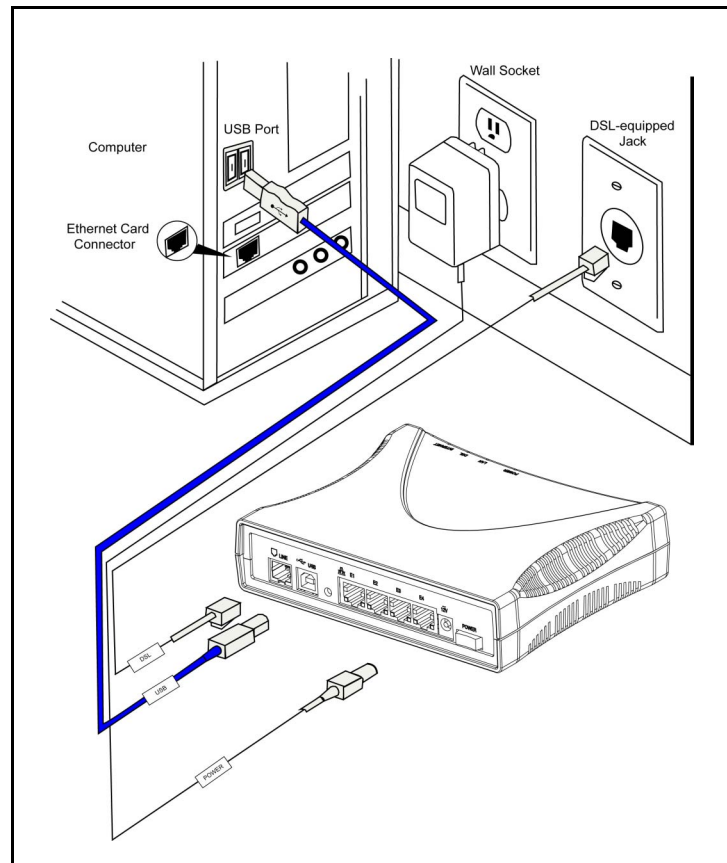



Figure 2. Connection via USB


NOTE: The Router features shown in Figure 2 apply to the Model 7400 product. The Model 7401 product has only an Ethernet interface.

6.4.3 Installation via 10/100 Base-T Ethernet and USB Simultaneous Installation (Model 7400)


Model 7400 supports simultaneous use of 10/100 Base-T Ethernet and USB ports. The following instructions explain how to install your Router for simultaneous use of Ethernet and USB ports.

NOTE: Refer to Figure 1 and Figure 2 for instructions on hardware installation via Ethernet and USB connections.

1. Connect the power supply cord to the power connector marked **12V** on the rear panel of the Router. Plug the other end of the power supply into a wall socket.
2. Connect the DSL phone cable from connector marked  on the rear panel of the Router to the DSL-equipped telephone line jack on the wall. You must use the phone cord that was provided with the kit.

3. Connect the yellow Ethernet cable from any one of the Ethernet jacks marked  on the rear panel of the Router to the Ethernet port on your computer. **Repeat this step to connect up to three additional PCs to the Router.**

NOTE: You may connect to any of the four Ethernet jacks on the rear panel of the Router as they serve as an Ethernet switch.
--

4. Connect the blue USB cable from the blue USB connector marked  on the rear panel of the Router to the USB port on the PC.
5. Check to see if the DSL/RDY LED is solid green. If the DSL/RDY LED is solid green, the Router is functioning properly.
6. Check to see if the Ethernet LED (on the back of the unit) lights solid yellow or solid green. Solid green indicates the Ethernet connection is functioning properly in 100 Base-T mode. Solid yellow indicates the Ethernet connection is functioning properly in 10 Base-T mode.

Congratulations! You have completed the simultaneous hardware (Ethernet and USB) installation for Model 7400. You must now go to section 7 to begin the USB driver software installation. (No software installation is required when using only an Ethernet connection.)

7. INSTALLING THE USB DRIVERS (MODEL 7400)

If you are using only Ethernet ports, USB driver installation is not necessary. The Microsoft® Plug and Play auto-detect feature recognizes when new hardware has been installed. After you connect the Router to the PC, the Router will be detected automatically.

Before you begin the USB driver software installation, determine which operating system is installed on your PC. Then, follow the instructions that match your operating system (e.g., for Microsoft Windows 98, refer to the instructions in section 7.2). Next, begin the USB driver software installation. When the installation has completed, proceed to section 8. The following table provides a quick reference to the USB software driver instructions.

Your Operating System	Refer to this section for USB driver instructions
Windows 98	7.2
Windows ME	7.3
Windows 2000	7.4
Windows XP	7.5

7.1 CD-ROM Installation:

1. Place the CD-ROM that you received in the Router kit into the CD-ROM drive of the PC that is connected to the USB port.
2. Go to the USB driver installation section that matches your operating system and follow the procedures outlined in that section.

7.2 Installing the USB Drivers for Windows 98



IMPORTANT: Confirm that the CD-ROM provided with the Router kit is inserted in the appropriate drive before continuing this installation.

NOTE: The actual information may differ from the information displayed in the screens.

1. After you have connected the Router to your PC, the **Found New Hardware** window appears (Figure 3). In a few moments, the **Add New Hardware Wizard** window will open (Figure 4). Click **Next**.

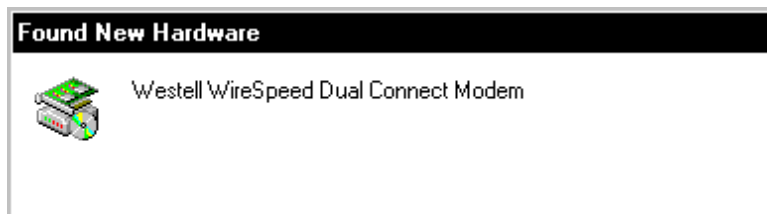


Figure 3. Windows 98



Figure 4. Windows 98

2. **Windows 98:** Click the option button for **Search for the best driver for your device. (Recommended)**. See Figure 5. Click **Next**.



Figure 5. Windows 98

3. **Windows 98:** Select **CD-ROM drive** option. See Figure 6. Click **Next**. Windows will search for the driver.

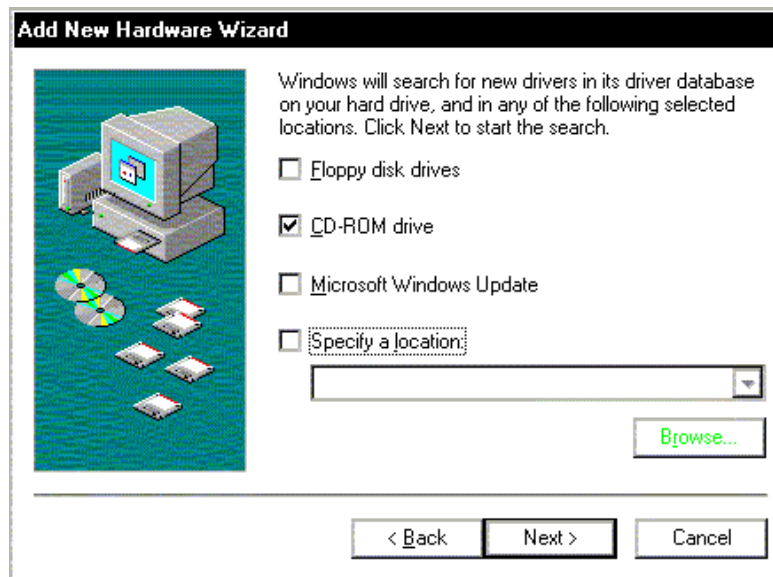


Figure 6. Windows 98

4. **Windows 98:** Select the option button **The updated driver (Recommended) Westell Dual Connect Modem**. See Figure 7. Click **Next**.



Note: If Figure 8 does not appear at this step, and Figure 9 appears with the text 'USB Composite device', 'C:\Windows\Inf\USB.Inf', do not continue. Click **Back** to Step 3 and specify the location of the Westell CD-ROM.

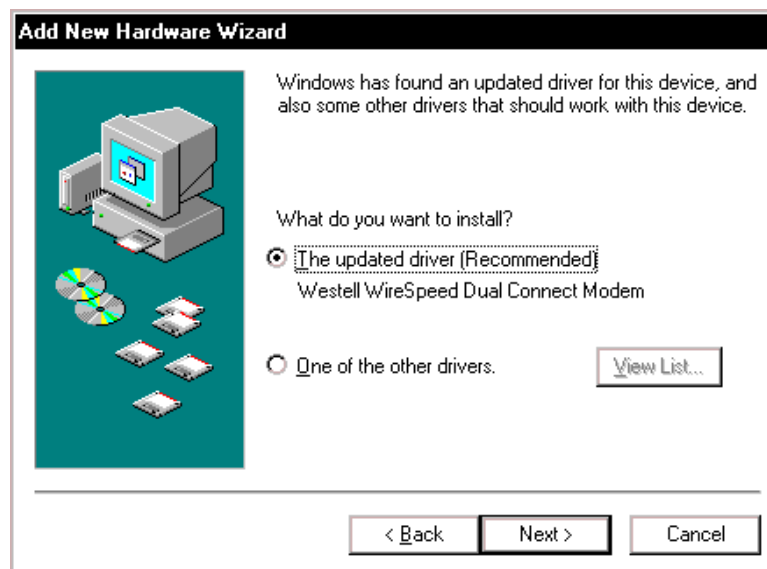


Figure 7. Windows 98

5. **Windows 98:** Windows will display the location of the driver. See Figure 8. Click **Next**.
Note: The drive “letter” may vary.

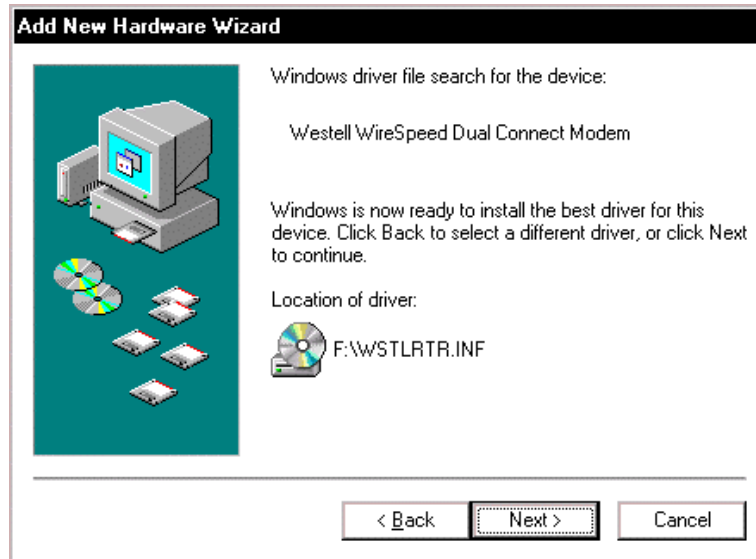


Figure 8. Windows 98

6. **Windows 98:** Remove the Westell CD from the CD-ROM Drive. Next, insert the Windows operating system CD into the CD-ROM Drive. See Figure 9. Click **OK**.

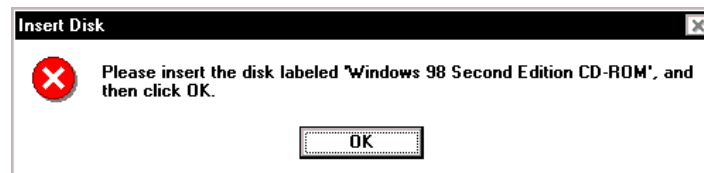


Figure 9. Windows 98

7. **Windows 98:** The system will begin copying files (Figure 10).

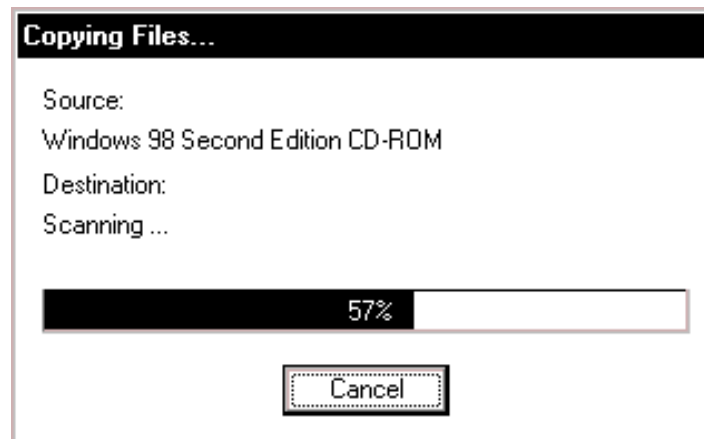


Figure 10. Windows 98

8. **Windows 98:** Figure 11 may pop up, depending on how Windows 98 was installed on the computer. The installation of the Westell Router requires files that are supplied by Microsoft for Windows 98. If Figure 13 pops up, insert the Windows 98 Operating System CD into the computers CD-ROM drive, wait a moment for the CD to be recognized by the system, and then click on **OK**. The system should find the required files on the Windows 98 CD and automatically complete the installation.

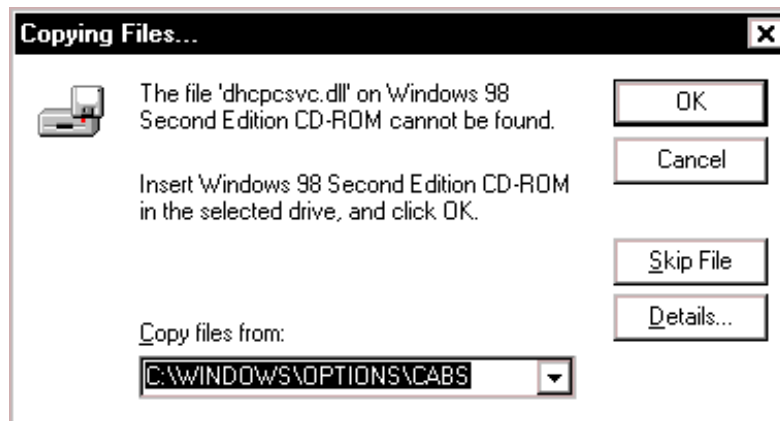


Figure 11. Windows 98

If the Operating System CD is not available, or if Figure 11 pops up again, you will have to manually specify the location of the files. The required files may be stored on your hard drive. A common location for these files is "C:\Windows\Options\Cabs." Try specifying this path or the path to your CD-ROM drive (usually "D:\") by clicking the **Browse...** button in the **Insert Disk** screen. When you have specified the correct path, click on **OK**. The system will begin copying the files. See Figure 14.

NOTE: It is very important that the Windows 98 files be installed. Do not click on **Cancel** or **Skip File** in the dialogs, doing so will result in an improper installation and the Router will not function correctly.

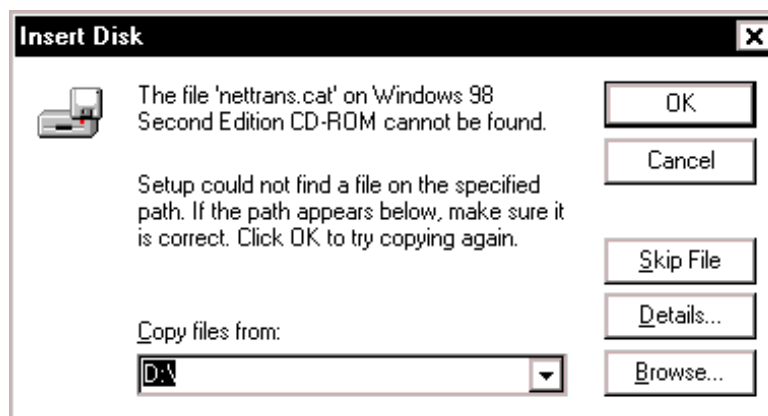


Figure 12. Windows 98

9. **Windows 98:** The window below confirms that the PC has finished loading the drivers (Figure 13). Click **Finish**.

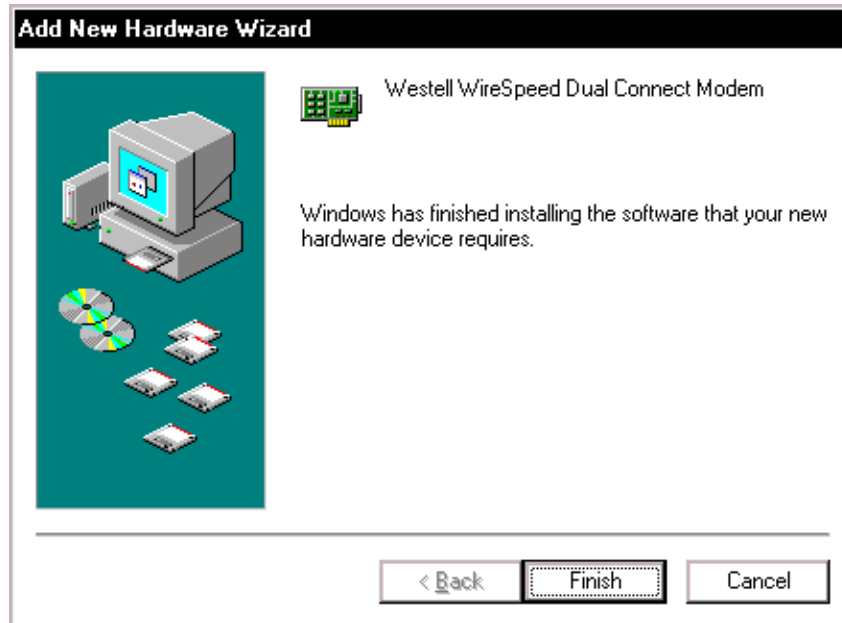


Figure 13. Windows 98

10. **Windows 98:** Click **Yes** to restart your computer. See Figure 14.

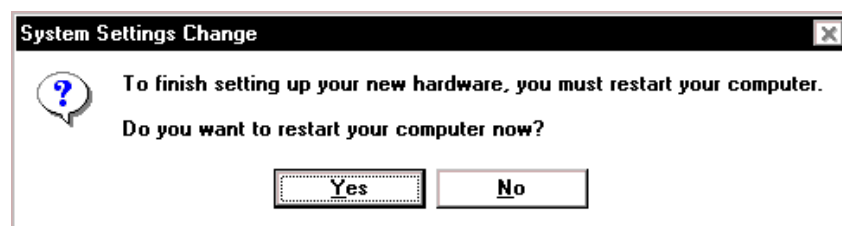


Figure 14. Windows 98

Congratulations! You have completed the software installation for the USB drivers. After the computer has restarted, the Router is ready for use. You must now go to section 8 to configure your Router for Internet connection.

7.3 Installing the USB Drivers for Windows ME

NOTE: The actual information displayed in the USB screens may vary according to product.

1. **Windows ME:** After you have connected the Router to your PC, the Found New Hardware window appears (Figure 15). In a few moments, the Add New Hardware Wizard window appears (Figure 16). Click the option button for Automatic search for a better driver (Recommended). Click **Next**.

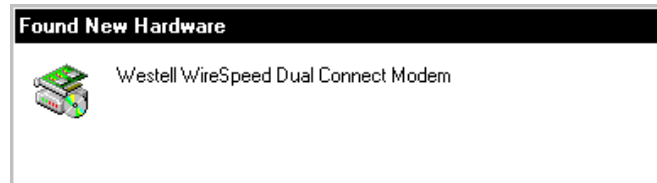


Figure 15. Windows ME

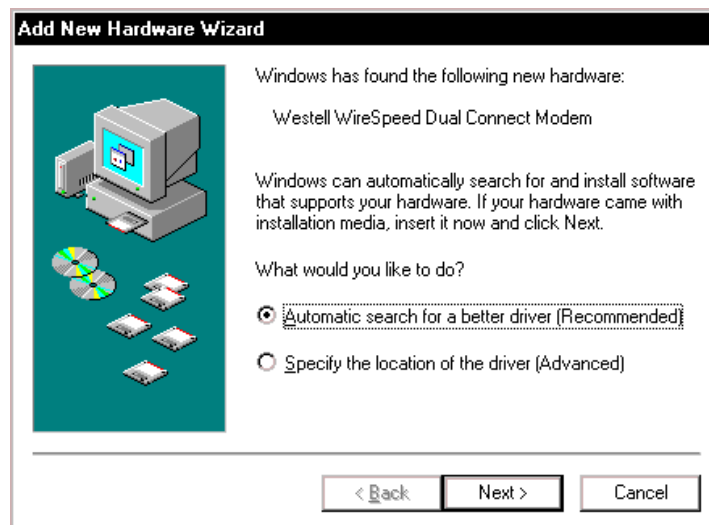


Figure 16. Windows ME

2. **Windows ME:** Windows will display the location of the driver. See Figure 17.

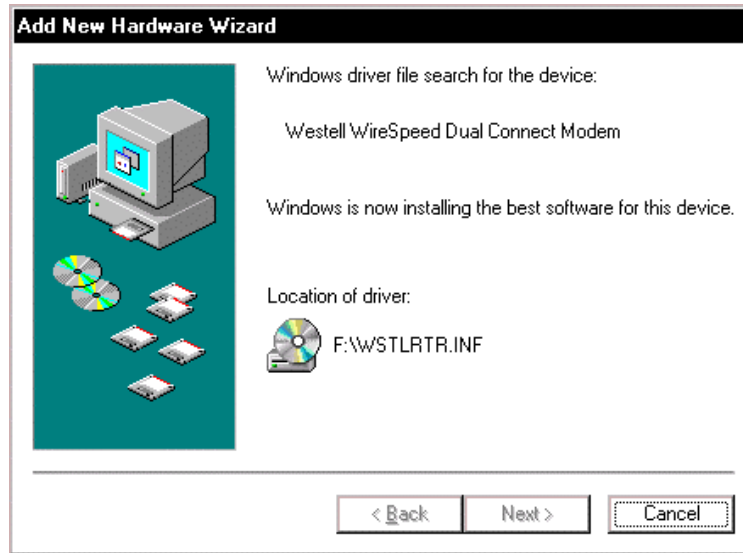


Figure 17. Windows ME

3. **Windows ME:** The window below confirms that the PC has finished loading the drivers. See Figure 19. Click **Finish**.

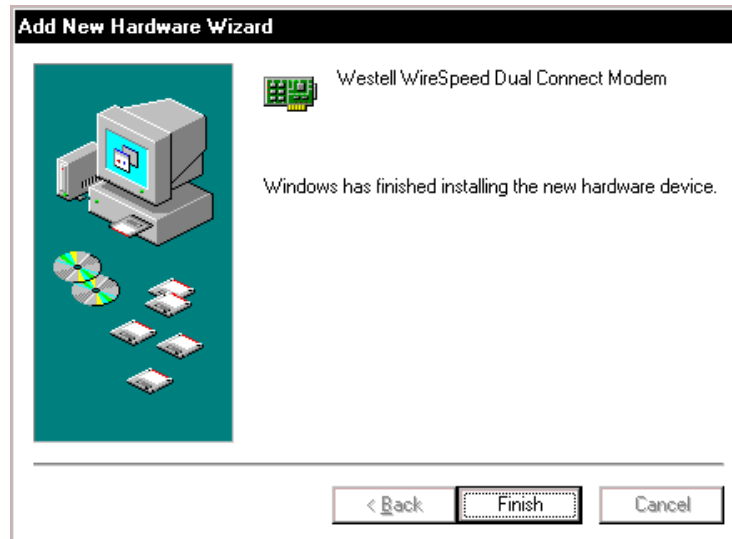


Figure 18. Windows ME

4. **Windows ME:** When the **System Settings Change** screen appears, the USB drivers are installed properly. See Figure 19. Click **Yes**.

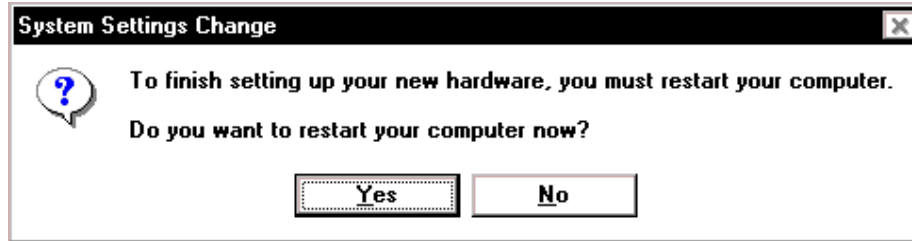


Figure 19. Windows ME

Congratulations! You have completed the software installation for the USB drivers. After the computer has restarted, the Router is ready for use. You must now go to section 8 to configure your Router for Internet connection.

7.4 Installing the USB Driver for Windows 2000

NOTE: The actual information displayed in the USB screens may vary according to product.

1. **Windows 2000:** After you have connected the Router to your PC, the **Found New Hardware** window appears (Figure 20). In a few moments, the **Found New Hardware Wizard** window appears (Figure 21). Click **Next**.

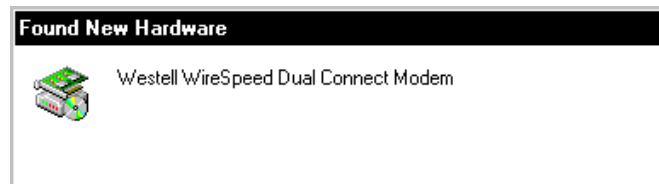


Figure 20. Found New Hardware



Figure 21. Welcome to Install Device Driver

2. **Windows 2000:** The **Install Hardware Device Drivers** window appears. Select **Search for a suitable driver for my device (recommended)** See Figure 22. Click **Next**.



Figure 22. Search for Device Driver

3. **Windows 2000:** The **Driver Files Search Results** window appears. Select the **CD-ROM drives** option See Figure 23). Click **Next**.

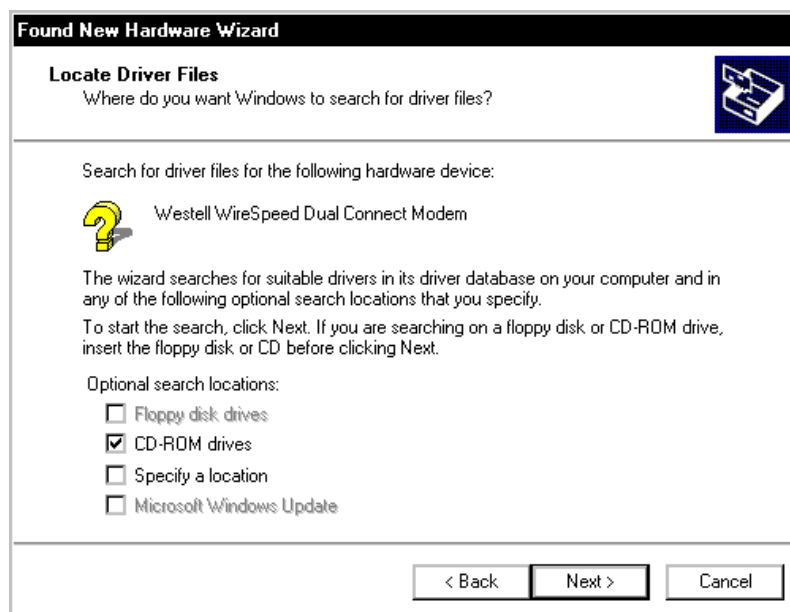


Figure 23. Locate Driver Files

4. **Windows 2000:** The **Driver Files Search Results** window appears (Figure 24). Click **Next**.
Note: The drive “letter” may vary.

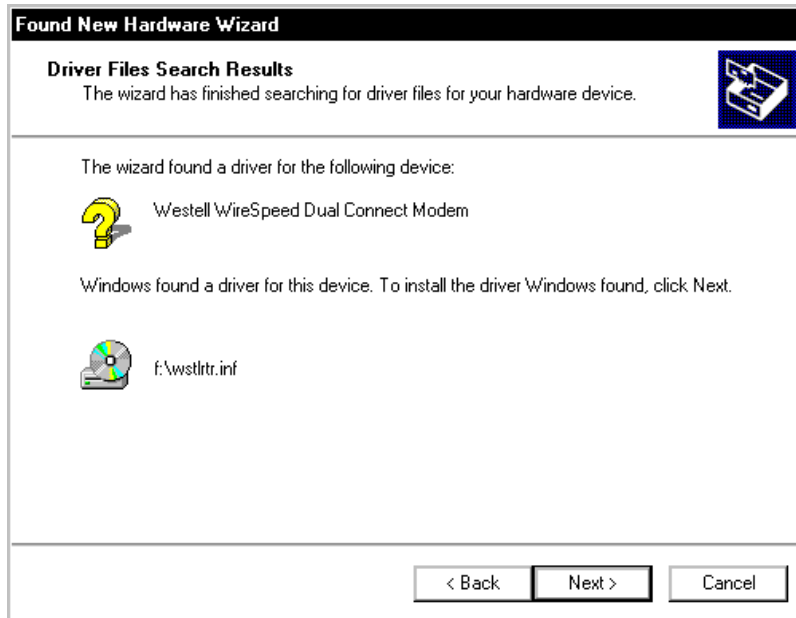


Figure 24. Driver Files Search Results

5. **Windows 2000:** The window below confirms that the PC has finished loading the drivers (Figure 25). Click **Finish**.



Figure 25. Drivers Loaded

6. **Windows 2000:** When the **System Settings Change** screen appears, the USB drivers are installed properly. See Figure 26. Click **Yes**.

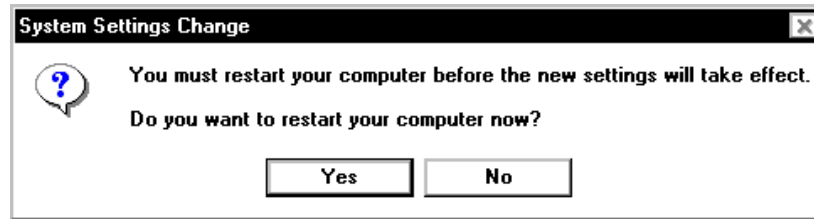


Figure 26. Restart Your Computer

Congratulations! You have completed the software installation for the USB drivers. After the computer has restarted, the Router is ready for use. You must now go to section 8 to configure your Router for Internet connection.

7.5 Installing the USB Driver for Windows XP

NOTE: The actual information displayed in the USB screens may vary according to product.

1. **Windows XP:** After you have connected the Router to your PC, the **Found New Hardware Wizard** window will open. See Figure 27. Select option button **Install the software automatically (Recommended)**. Click **Next**.

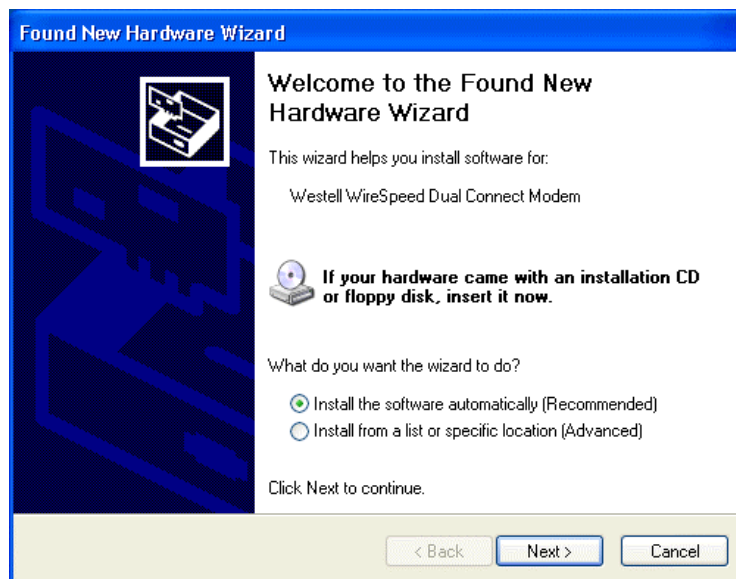


Figure 27. Windows XP

2. **Windows XP:** The window below confirms that the PC has finished loading the drivers (Figure 28). Click **Finish**.

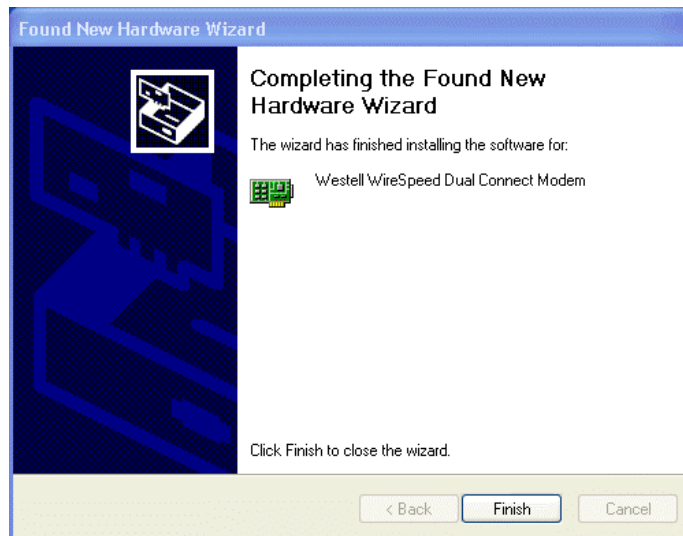


Figure 28. Windows XP

Congratulations! You have completed the software installation for the USB drivers. After the computer has restarted, the Router is ready for use. You must now go to section 8 to configure your Router for Internet connection.


8. CONFIGURING THE ROUTER FOR INTERNET CONNECTION

To surf the Internet using your Westell Router, you must set up your account profile, confirm your DSL sync, and establish a PPP session with your Internet Service Provider (ISP). Refer to the Internet service provider's installation manual to install the software required for your Internet connection.

NOTE: Internet service provider subscriber software and connection requirements may vary. Consult your Internet service provider for installation instructions.


8.1 Setting Up an Account Profile

After connecting the Westell Router, bring up your Web browser and type **http://dslrouter** or **http://192.168.1.1** in the browser's address window. Press **Enter** on your keyboard. The **Getting Started** screen will appear. Click on **next**.

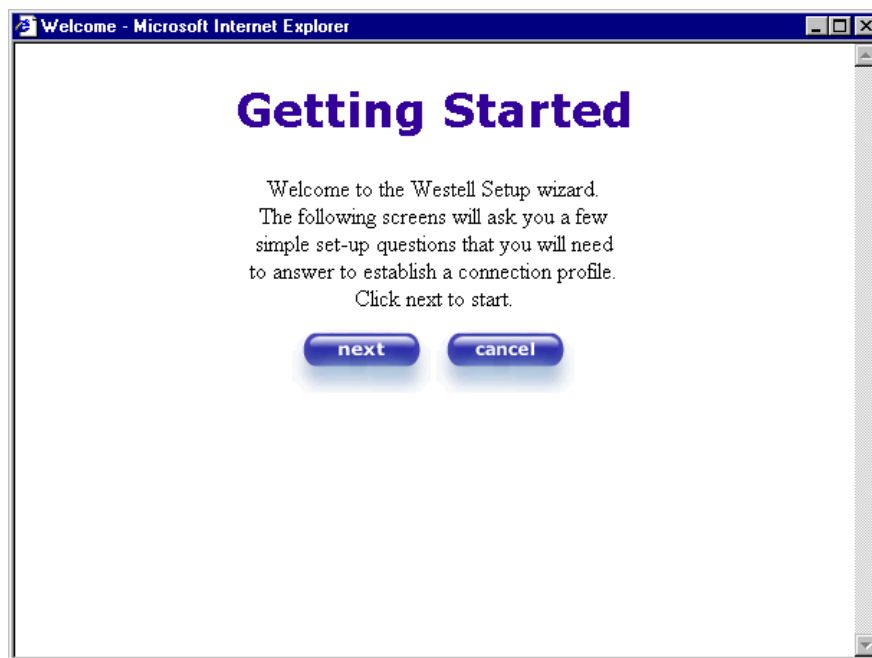

If you clicked on **Next**, the following screen will be displayed. This screen will allow you to set up your account profile.

NOTE: Before you set up your account profile, you must obtain your **Account ID**, **Account Password**, and **VPI/VCI** values from your Internet service provider. You will use this information when you set up your account parameters. If you are at a screen and need help, click on the **Help** button to learn more about the screen, or see section 18 (Help) for additional information on the help messages.

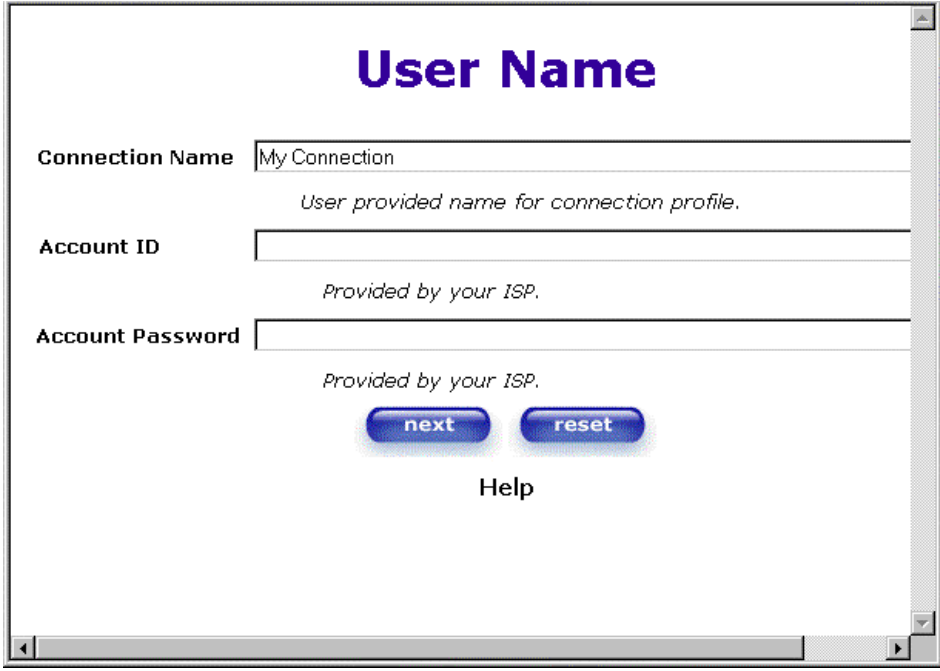


The image shows a web browser window titled "User Name". Inside the window, there are three input fields. The first field is labeled "Connection Name" and contains the text "My Connection". Below this field is a hint: "User provided name for connection profile." The second field is labeled "Account ID" and is empty. Below it is a hint: "Provided by your ISP." The third field is labeled "Account Password" and is empty. Below it is a hint: "Provided by your ISP." At the bottom of the form are two buttons: "next" and "reset". Below the buttons is a link labeled "Help". The browser window has a scrollbar on the right and a status bar at the bottom.

Type in your account parameters. (Account parameters are required before connecting to the Internet.)
Account Parameters include:

- **Connection Name**-the Connection Name is a word or phrase that you use to identify your account. (You may enter up 64 characters in this field.)
- **Account ID**-the Account ID is provided by your Internet Service Provider. (You may enter up 255 characters in this field.)
- **Account Password**-the Account Password is provided by your Internet Service Provider. (You may enter up 255 characters in this field.)


When you enter your account parameters at the **User Name** screen, they will be displayed as shown in the screen below. Click **next** if you want your account parameters to take effect. Click on **reset** if you do not want the account parameters that you entered to take effect or if you want to re-enter the parameters.

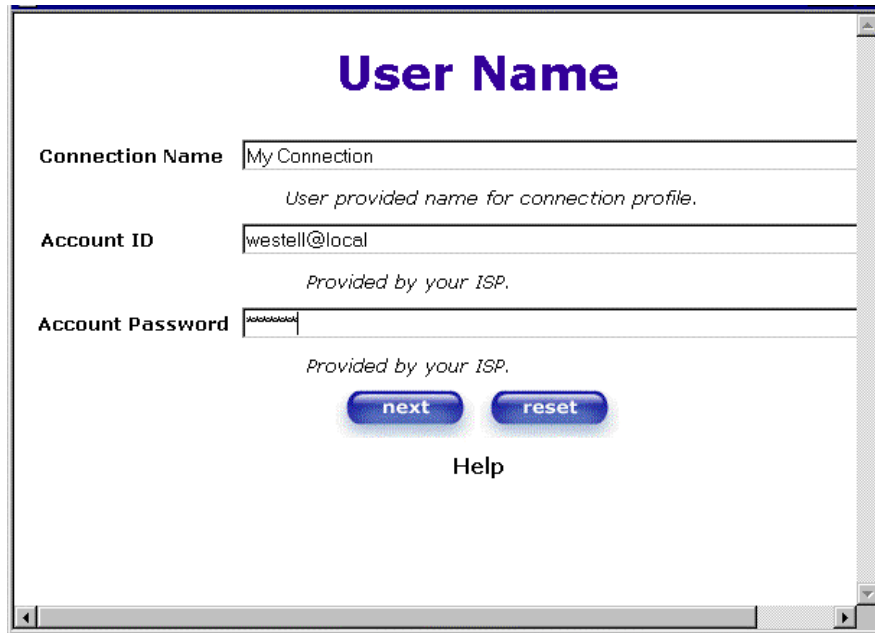

The 'User Name' configuration screen displays three input fields: 'Connection Name' with the value 'My Connection', 'Account ID' with the value 'westell@local', and 'Account Password' with masked characters. Each field has a descriptive note below it: 'User provided name for connection profile.', 'Provided by your ISP.', and 'Provided by your ISP.' respectively. At the bottom, there are 'next' and 'reset' buttons, and a 'Help' link.

Enter the VPI and VCI values you obtained from your Internet service provider (for example, **0** for VPI and **35** for VCI). The actual VPI/VCI values may vary according to your ISP. Click on **next**.

NOTE: Depending on your Internet Service Provider, the **VPI/VCI** screen may come pre-configured and it will be displayed here. In this case, you should not change any values in this screen. Click on **next** to go to the **PROTOCOL** screen.

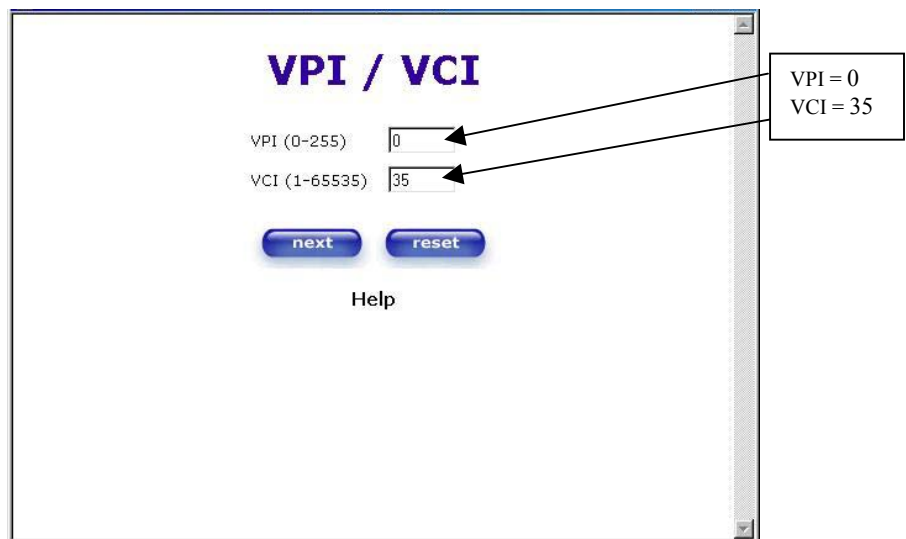

The 'VPI / VCI' configuration screen shows two input fields: 'VPI (0-255)' with the value '0' and 'VCI (1-65535)' with the value '35'. Arrows from a callout box on the right point to these values. The callout box contains the text 'VPI = 0' and 'VCI = 35'. At the bottom, there are 'next' and 'reset' buttons, and a 'Help' link.

Select the Protocol type that you obtained from your Internet Service Provider. Click on **next**.

NOTE: Depending on your Internet Service Provider, the **PROTOCOL** screen may come pre-configured and it will be displayed here. In this case, you will need to click on **next** to go to the **SET-UP COMPLETE** screen.




When the **SET-UP COMPLETE** screen appears, you have successfully completed your Account Profile setup. Click on **done**.




If you changed the **VPI/VCI** settings and clicked on **done** in the **SET-UP COMPLETE** screen, the following screen will appear. Click on **OK**.

NOTE: The following pop-up will appear only if you have changed the **VPI**, **VCI**, or **Protocol** values in the preceding screens. If you did not change any of these values, this pop-up screen will not appear and the Router will not be reset. If your Router's connection setting is set to "Always On" and you have changes any of these values, the Router will reset automatically. For instructions on editing your connection settings, see section 10.2.

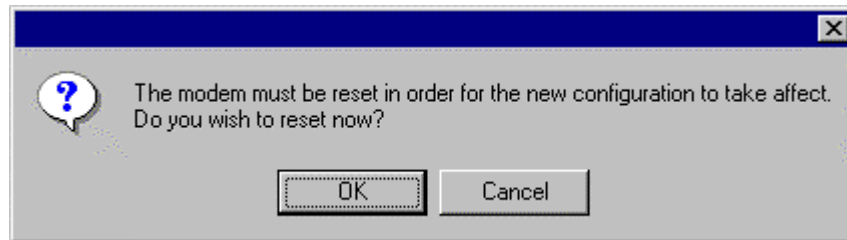


If you clicked on **OK**, the following screen will be displayed. The Router will be reset and the new configuration will take effect. Next, proceed to section 8.2 to confirm your DSL sync.

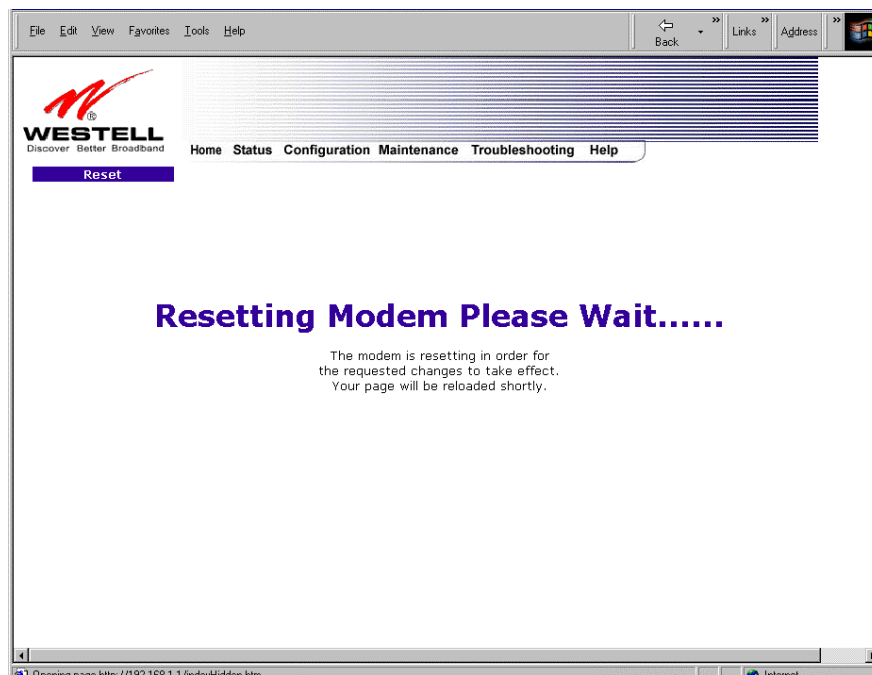


8.2 Confirm a DSL Sync

Remember, you must have active DSL service before the Router can synchronize with your ISP's equipment. To determine if your Router has a DSL sync, view the DSL Connection Rate in the **Connection Overview** section (see the following homepage screen). If the status reads **No DSL Connection**, check the DSL physical connection, explained in section 6 (INSTALLING THE HARDWARE) of this User Guide.

NOTE: If no DSL sync is established, the **connection** button will not be displayed in the following screen. To determine if the DSL sync is established, check the Router's DSL/RDY LED. If the DSL/RDY LED is not solid green, you do not have a DSL sync established. Contact your ISP for further instructions.

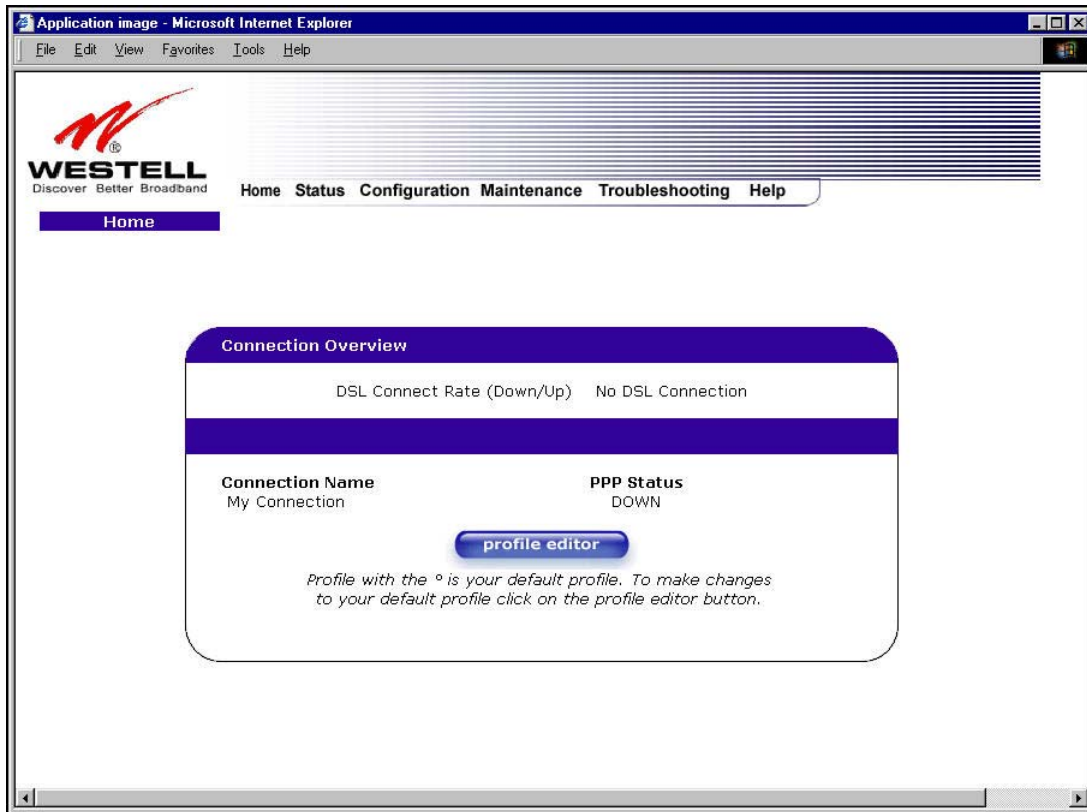


The screen below shows the connection rate, indicating that a successful SYNC has been established. The connection rate values represent the transmission speed of your DSL line. (The Router might take time to report the values.) Click on the **Connect** button to establish a PPP session.

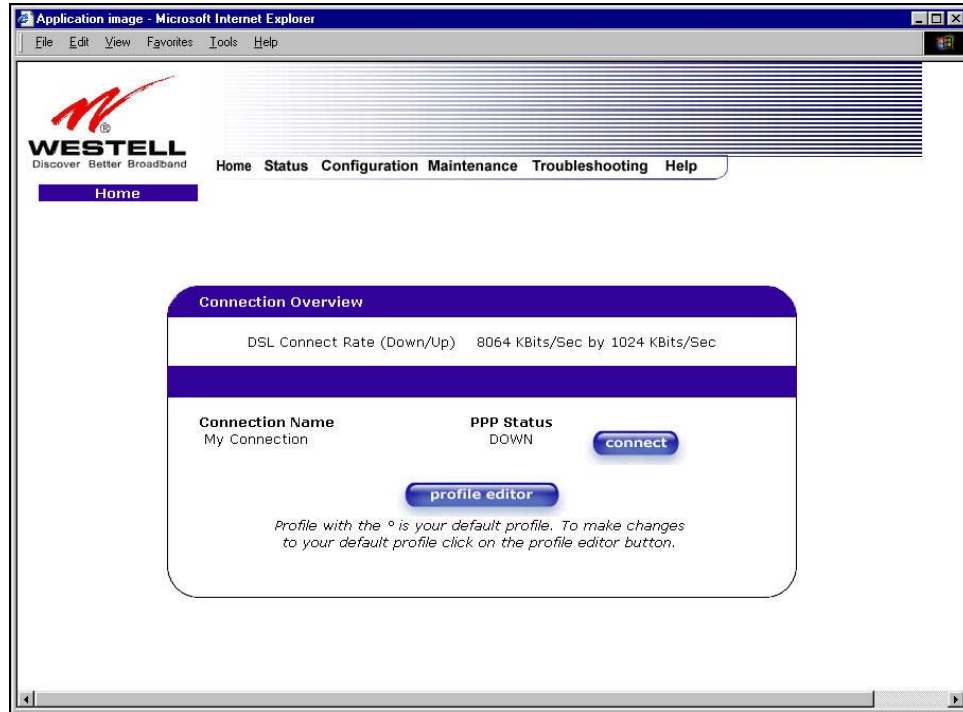


8.3 Establishing a PPP Session

If you clicked on **connect** button in the **Connection Overview** window, the following screen will appear briefly. The **PPP Status** in the **Connection Overview** window allows you to view the state of your ISP connection. When the **PPP Status** displays **Connecting...**, this means that you are establishing a PPP session.


NOTE: The Router will handle transmission rates up to 8 Mbps. Your actual DSL rates may vary depending on your Internet service provider.

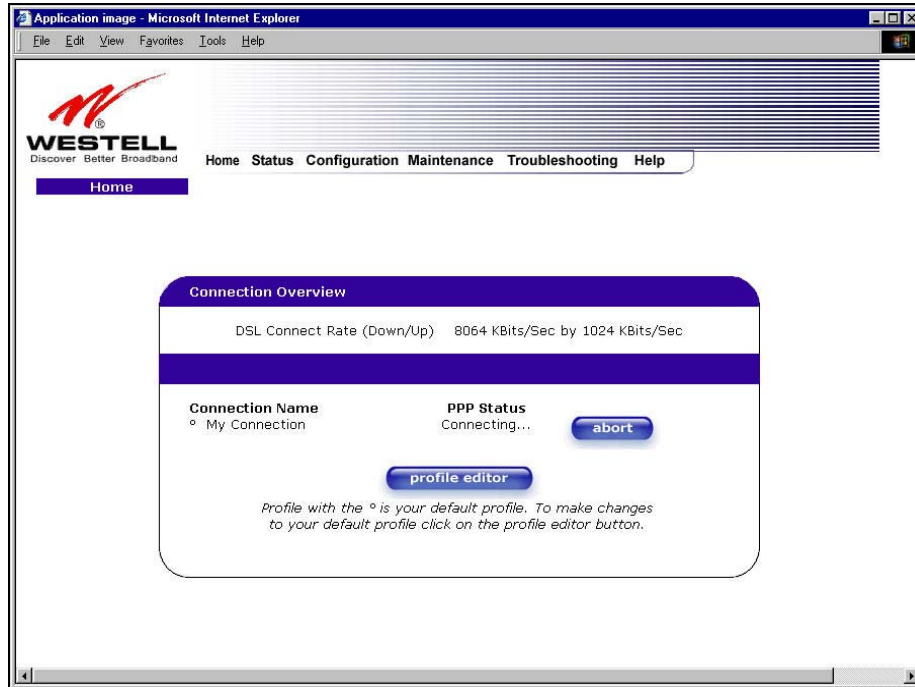

Once a PPP session has been established, the **PPP Status** will display **UP**. Congratulations! You may now surf the Internet.

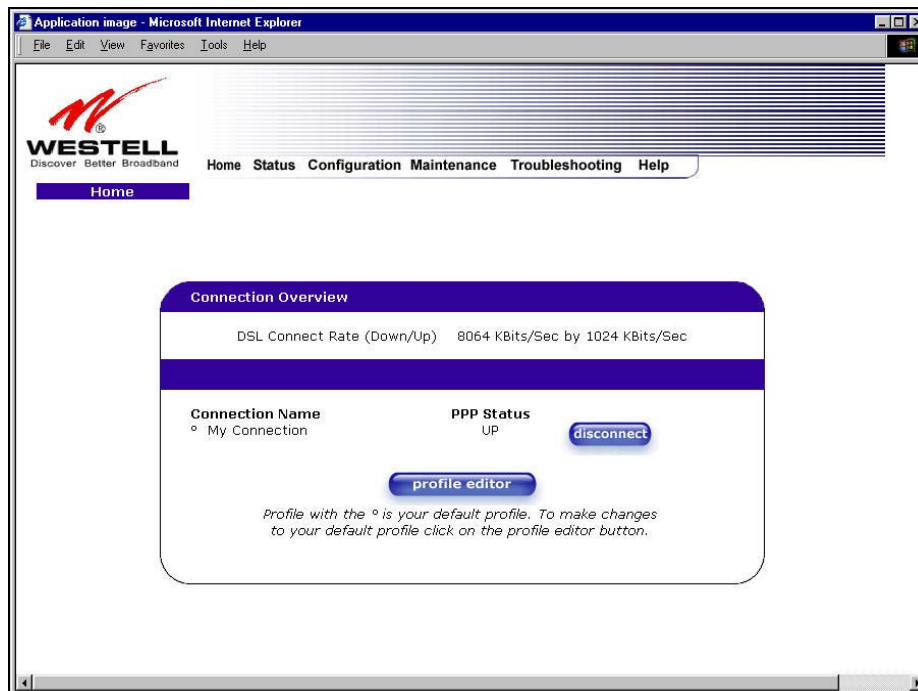

For example, if you want to visit Westell's home page, type **Http://www.westell.com** in your browser's address window.

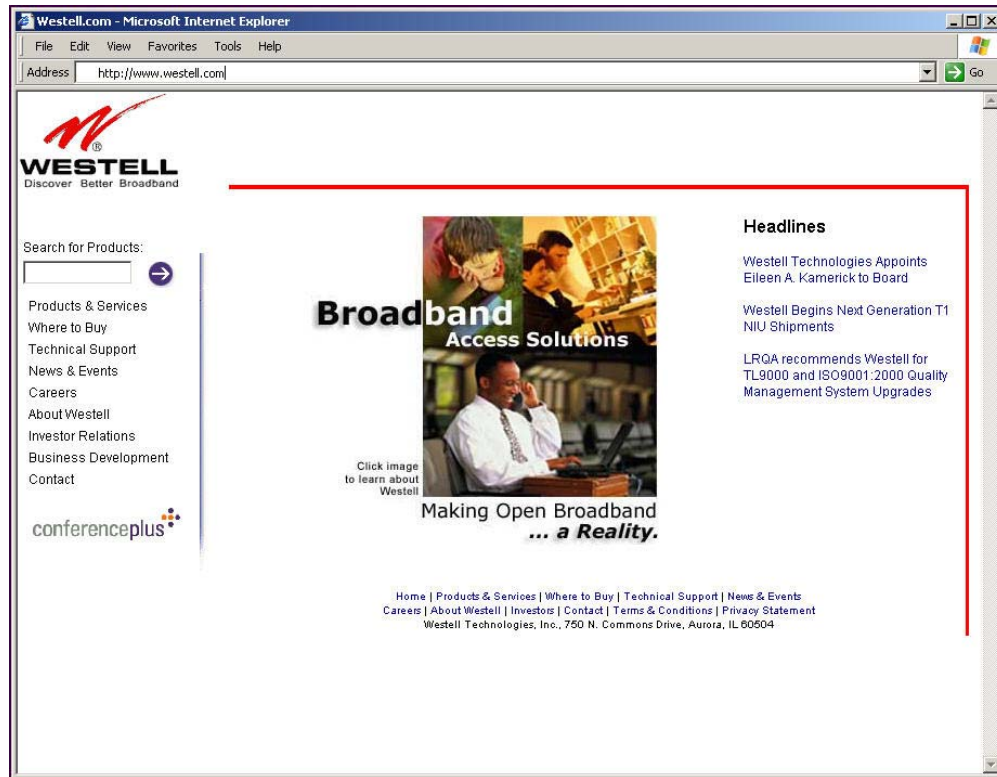


8.4 Disconnecting a PPP Session

If you have finished surfing the Internet and want to disconnect from your Internet service provider, click on the **Disconnect** button in the **Connection Overview** screen (the preceding screen). The following pop-up screen will appear. Click on **OK** to disconnect the PPP session.



If you clicked the **Disconnect** button in the preceding **Connection Overview** screen, the **PPP Status** should display **DOWN**. This means that you no longer have a PPP session. In this event, your Router will maintain its DSL connection. If you want to remove the DSL connection, power down the Router via the power switch on the rear of the Router.

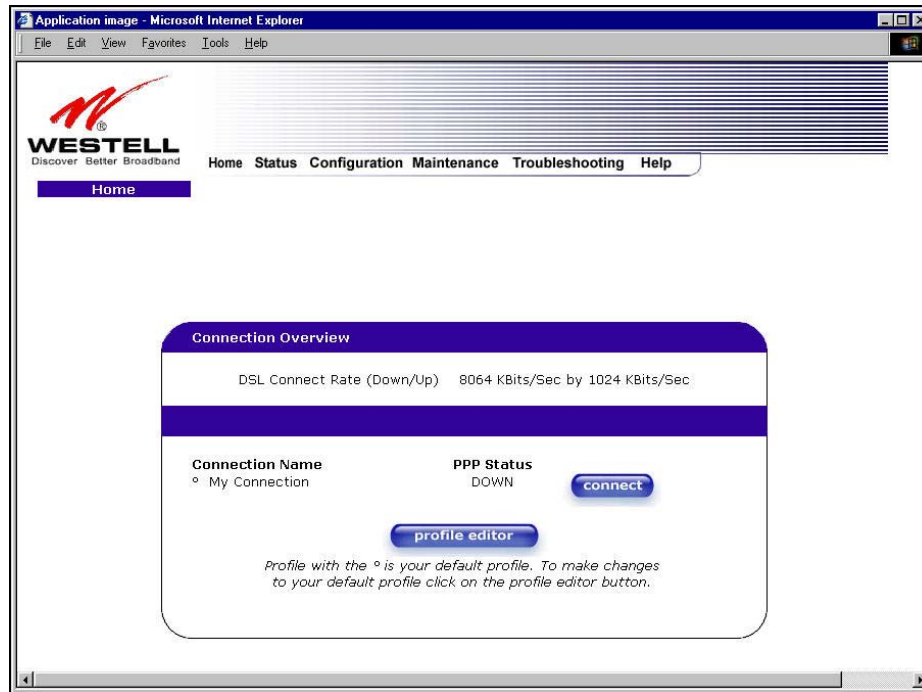

When you are ready to establish a PPP session, click on the **connect** button. (If you powered down the Router, you must power up the Router and log into your account profile before you establish a PPP session.)

NOTE: When you are ready to exit your Router's interface, click on the **X** (close) in the upper right-hand corner of the window. Closing the window will not affect your PPP Status (your PPP session will not be disconnected). You must click on the disconnect button to disconnect your PPP session.



The following sections explain the advanced features of your UltraLine Router.

[This Page Left Blank Intentionally]

9. SETTING UP ADVANCED CONFIGURATION


Advanced Configuration instructions are explained in Section 10 through Section 16. The instructions apply to Models 7400 and 7401. If you want to set up advanced features for your Router, follow the instructions provided in sections 10 through 16.

STOP! The following sections assume that you have active DSL and Internet service.

The Westell UltraLine Router allows you to make changes to advanced features such as account profiles, routing configurations, and firewall settings. The following sections will explain each feature and show you how to make changes to your Router's settings. If you are at a screen and need help, click on the **Help** button to learn more about that screen.


NOTE: As you navigate through the various screens of your Westell Router, the name of the active page that you have selected will appear in the left-hand side of the homepage screen, as shown below. Please note that the actual values might differ from the values displayed in the screens.

10. HOME

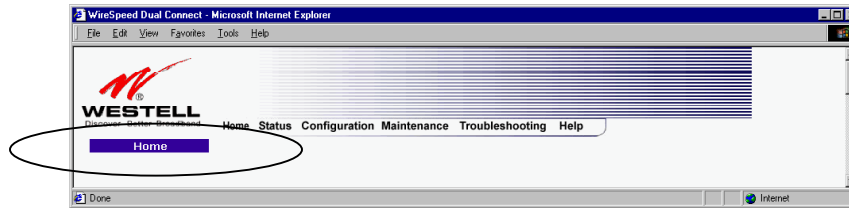

If you have set up your account profile and established your PPP session as discussed in section 8, the following settings will be displayed when you click on your **Home** page. Click on **profile editor** to edit your connection profile.

NOTE: If you have created multiple account profiles, select the radio button for the active account profile.

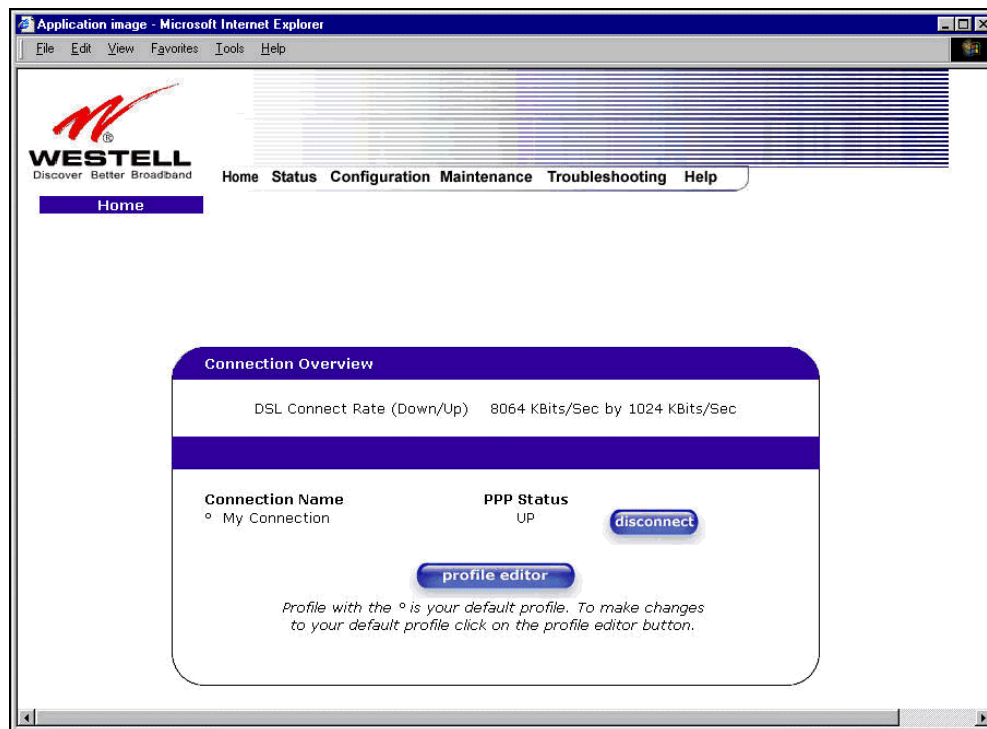


Connection Overview	Displays your DSL connection rate.
Connection Name	This Connection Name is from the connection profile that you established in section 8.
PPP Status	UP = PPP session established DOWN = No PPP session established.
Connect/Disconnect	CONNECT = Establish a PPP session DISCONNECT = Disconnect a PPP session
Profile Editor	This allows you to make changes to the profile that you created in section 8.


10.1 Adding Account Profiles

If you select the **Profile Editor** button from your **Home** page, the **Advanced Home** screen will appear, as shown below. Click on the **new connection** button in the **Advanced Home** screen. The **New Connection** screen will appear. Enter your account profile information and click on **New**. Next, click on **OK** in the pop-up screen to save your new connection. If you do not want to add a connection profile, click on **Close** in the **New Connection** screen.

NOTE: You may store up to eight unique user profiles in your Router. Details on the **New Connection** screen are located at the end of this section.


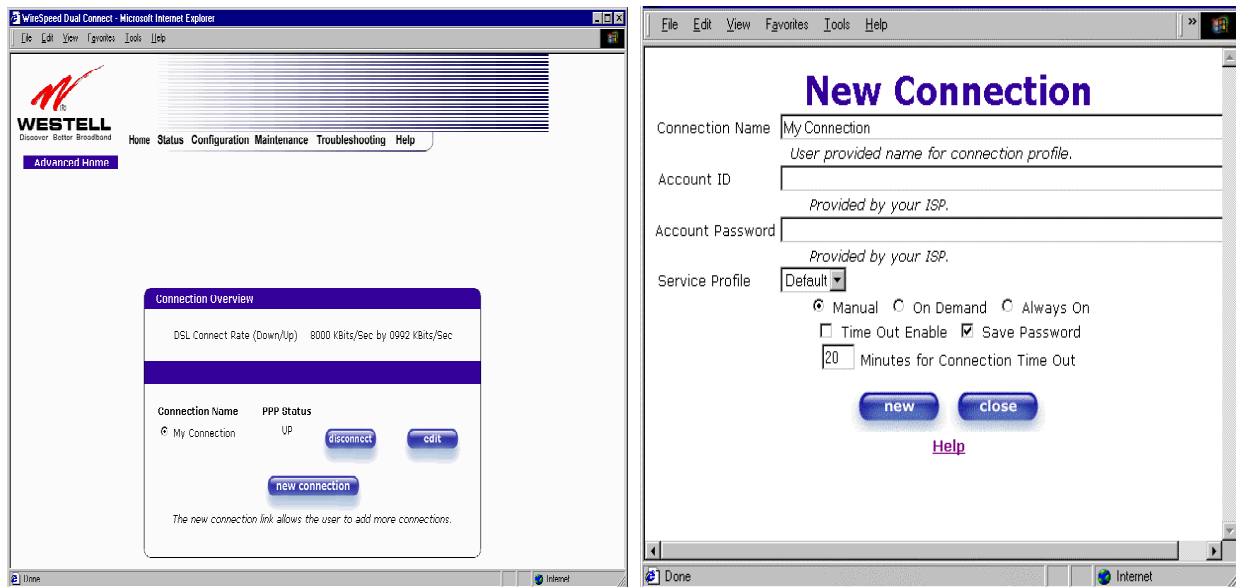


If you clicked **OK** in the “**Save new connection?**” pop-up screen, the following screen will be displayed. This screen will allow you to edit a connection profile. Select a profile name from the **Connection Name** field and click on the **edit** button adjacent to the name.

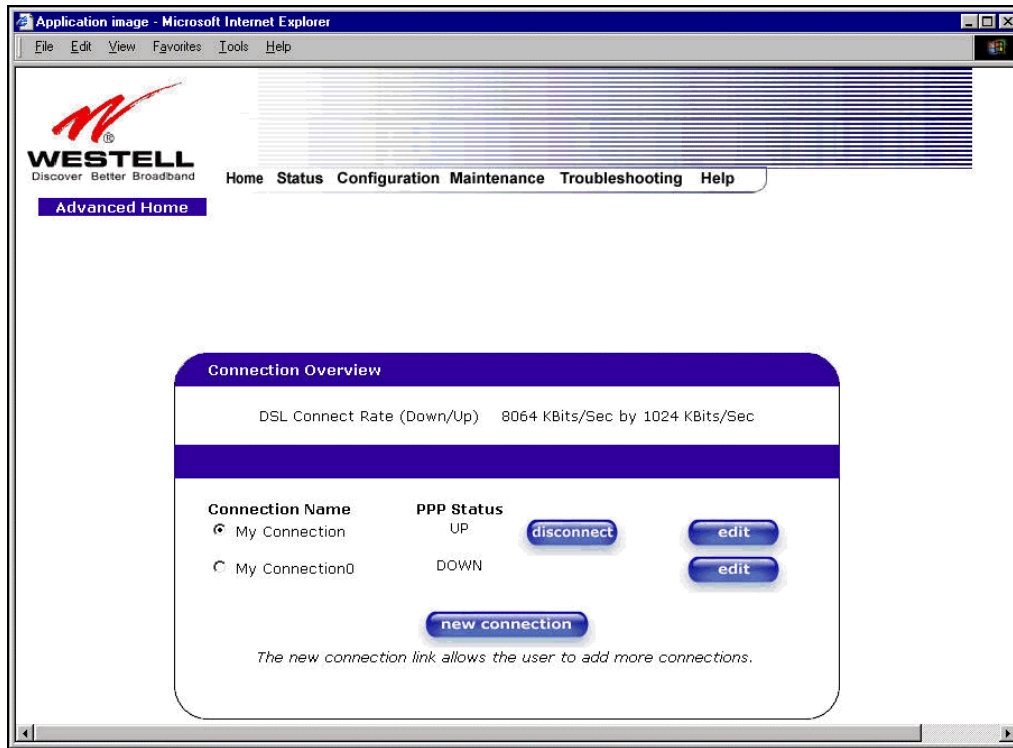

10.2 Editing Account Profiles


If you clicked on **Edit** in the preceding screen, the **Edit "My Connection"** screen will appear. Follow the steps in the **Edit "My Connection"** screen to change your existing connection profile, which you set up in section 8. If you do not want to change your connection profile, click on **close** in the screen. Click on **delete** if you want to delete your connection profile.

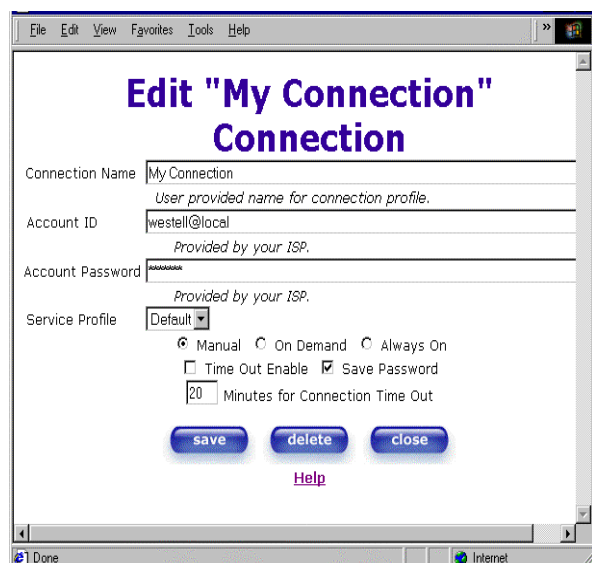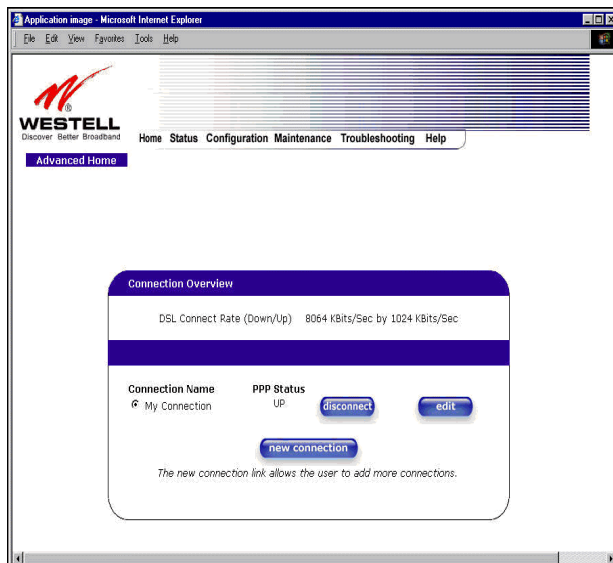




Connection Name	This field allows you to enter a new connection name of your choice (up to 64 characters).
Account ID	Use the same account ID that you used in section 8 if you are connecting to the same Service Provider. If you have multiple Service Providers, you can enter this information at this time.
Account Password	Use the same account password that you used in section 8 if you are connecting to the same Service Provider. If you have multiple Service Providers, you can enter this information at this time.
Service Profile	Westell recommends that you use the Default parameter.
Manual	Factory default = MANUAL Selecting this feature allows you to manually establish your PPP session.
On Demand	Selecting this feature allows the Router to automatically re-establish your PPP session upon demand.
Always On	Selecting this feature allows the Router to establish an “always-on” PPP session if it goes down.
Save Password	Selecting this feature allows you to save the password for your new connection profile in your Router so that you will not have to re-enter it in case of a re-boot.
Minutes for Connection Time Out	This option allows you to specify the number of minutes that you want a PPP session to stay active before it is disconnected due to inactivity. (This feature works if you have selected the Time Out Enable feature explained above.)

11. STATUS

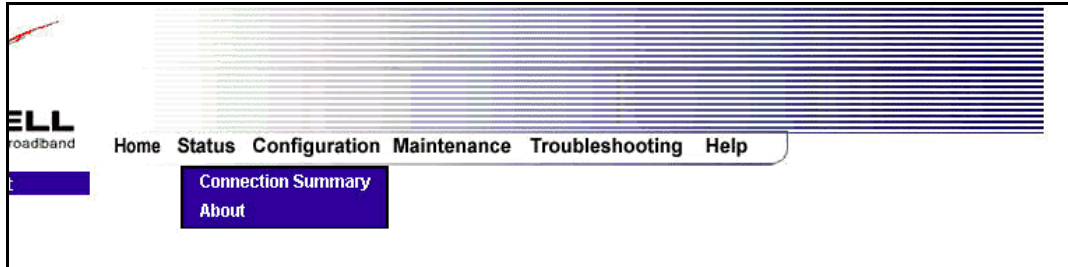

11.1 Connection Summary

The following settings will be displayed if you select **Connection Summary** from the **Status** menu.

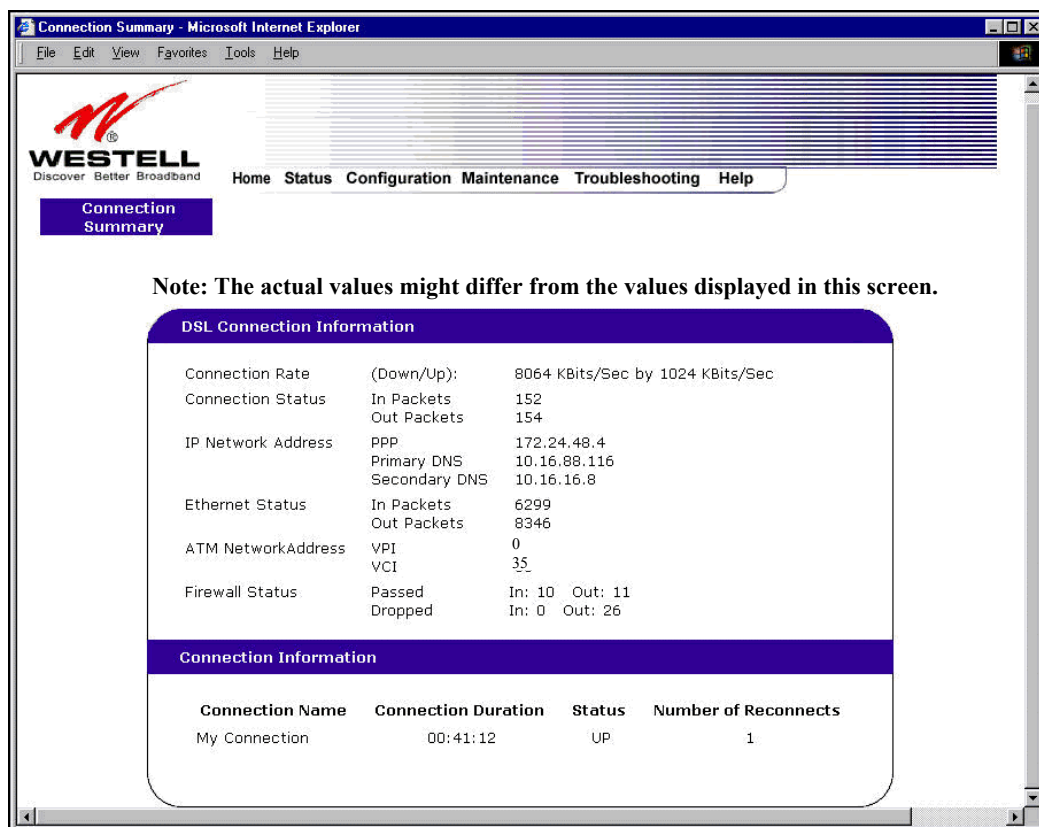

Note: The actual values might differ from the values displayed in this screen.


DSL Connection Information			
Connection Rate	(Down/Up):	8064 KBits/Sec by 1024 KBits/Sec	
Connection Status	In Packets	152	
	Out Packets	154	
IP Network Address	PPP	172.24.48.4	
	Primary DNS	10.16.88.116	
	Secondary DNS	10.16.16.8	
Ethernet Status	In Packets	6299	
	Out Packets	8346	
ATM NetworkAddress	VPI	0	
	VCI	35	
Firewall Status	Passed	In: 10	Out: 11
	Dropped	In: 0	Out: 26

Connection Information			
Connection Name	Connection Duration	Status	Number of Reconnects
My Connection	00:41:12	UP	1

DSL Connection Information	
Connection Rate	This field will let you know if you have a DSL Sync (UP/DOWN) and the DSL rate at which you are connected.
Connection Status	This field will show how much information was received (IN) or sent (OUT) in packets.
IP Network Address	PPP = An IP address identifies your device on the Internet Primary DNS = Provided by your Service Provider Secondary DNS = Provided by your Service Provider
Ethernet Status	This field will display your Ethernet information that was received (IN) or sent (OUT) in packets on your Ethernet port.
ATM Network Address	This field will display your VPI and VCI values, which are provided by your ISP.
Firewall Status	This field will display your firewall traffic in packets. Passed: Monitors information traffic that was successfully received (IN) or transmitted (OUT) in packets. Dropped: Monitors information traffic that was not successfully received (IN) or transmitted (OUT) due to your firewall settings.
PPP Connection Information	
Connection Name	This is from the connection profile that you established in section 8.
Connection Duration	This field will display how long your PPP session has been connected.
Status	This field will display the status of your PPP session. UP=Connected DOWN=Disconnected
Number of Reconnects	This field will display the number of attempts that were made to establish a PPP session.


11.2 About

The following settings will be displayed if you select **About** from the **Status** menu.

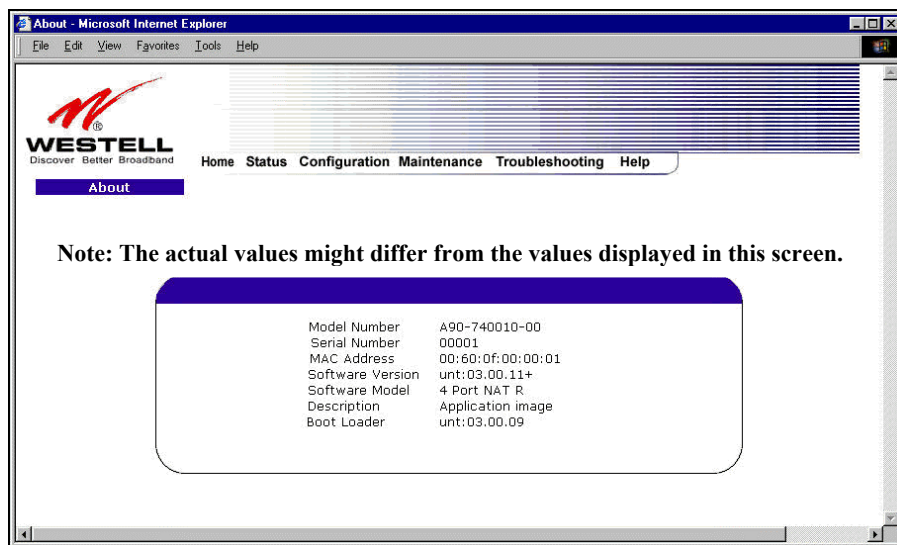

Model Number	Router manufacturer's model number.
Serial Number	Router manufacturer's serial number.
MAC Address	Media Access Controller (MAC) i.e., hardware address of this device.
Software Version	Version of Application Software.
Software Model	Router application type.
Description	Product description.
Boot Loader	Version of boot loader software

12. CONFIGURATION

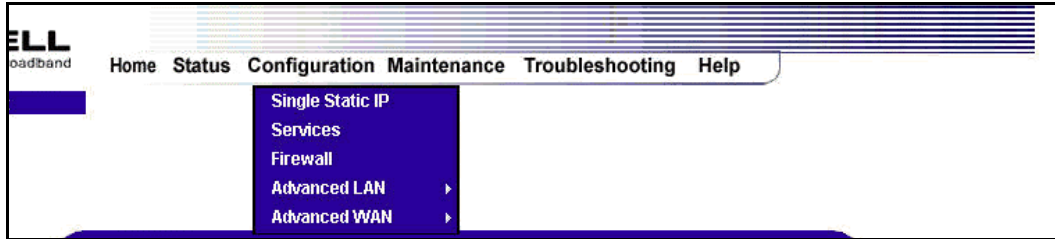


12.1 Single Static IP – Single IP Address PassThrough

The following settings will be displayed if you select **Single Static IP** from the **Configuration** menu.


NOTE: The Single Static IP Configuration screen allows you to select the device on your LAN that will share your Single Static IP.

STOP: Static NAT must be disabled before you can enable **Single Static IP**. To disable Static NAT, select **Service Configuration** from the **Configuration** menu. Next, click on the **static NAT** button. Select the device from the **Static NAT Device** drop-down menu and click on **disable**. Return to Single Static IP Configuration by selecting **Single Static IP Configuration** from the **Configuration** menu.

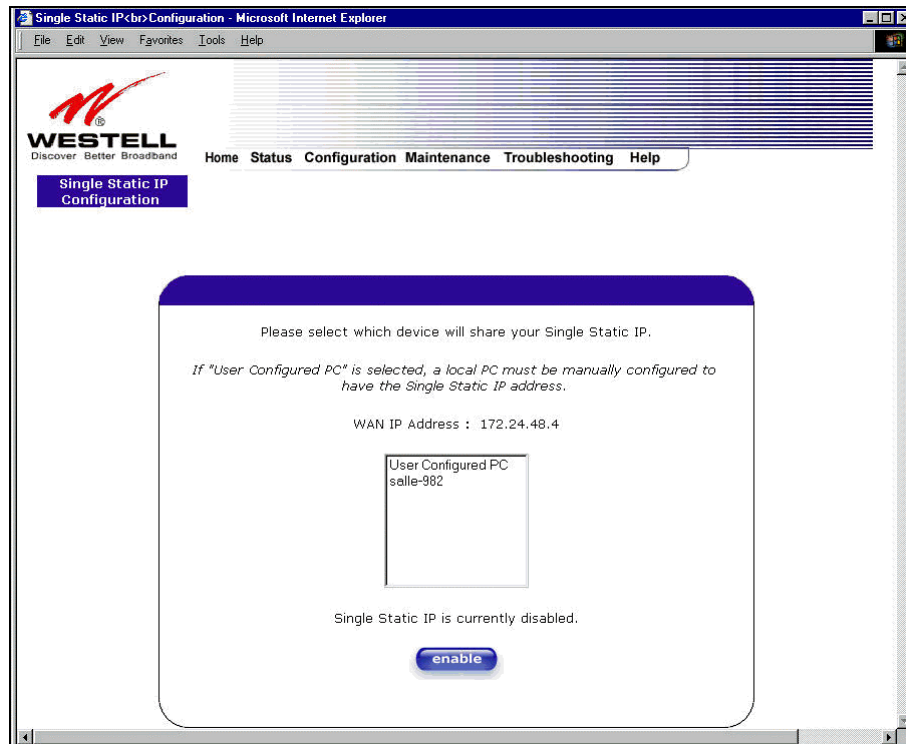


12.1.1 Enabling Your PC for Single Static IP

To enable your PC for Single Static IP, click on the device name of your PC (from the options listed in the window) that will share your Single Static IP. Click on **enable**.

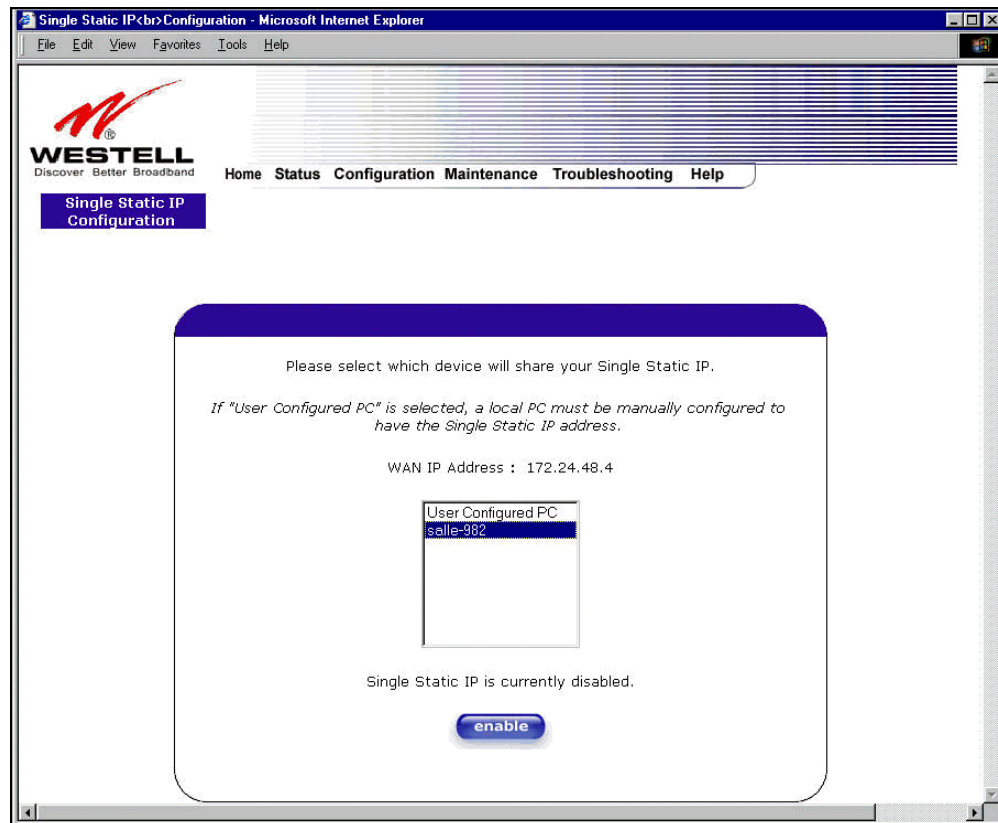


If you clicked on **enable**, the following pop-up screen will appear. Click on **OK** to enable this device for Single Static IP. Click on **Cancel** if you do not want to enable Single Static IP.


NOTE: The actual device name may differ from the name displayed in this screen.

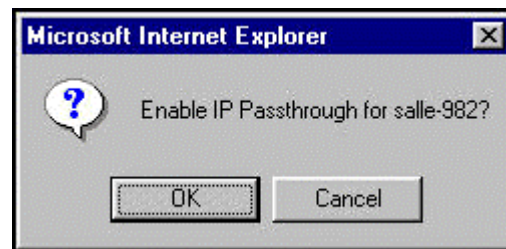

If you clicked on **OK** in the preceding pop-up screen, the following pop-up screen will appear. The Router must be reset in order for the new configuration to take effect. Click on **OK**.

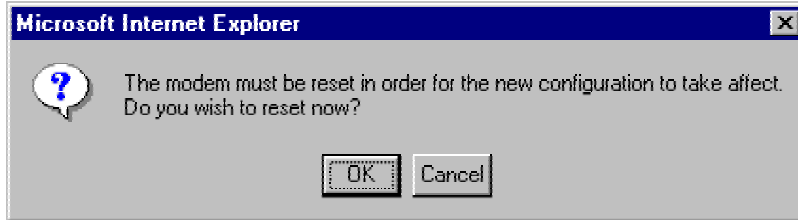

If you clicked on **OK** in the preceding screen, the following screen will be displayed. The Router will be reset and the new configuration will take effect.

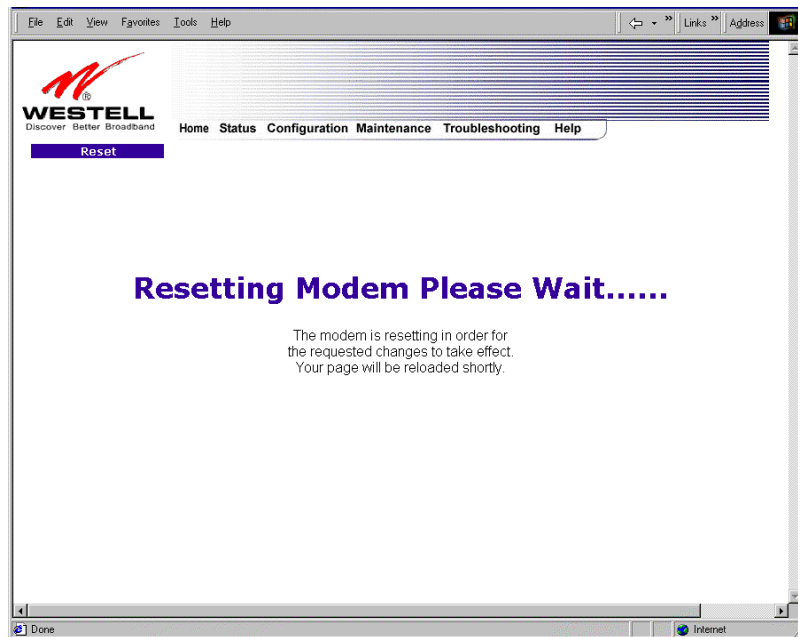

After a brief delay, the home page will be displayed. Confirm that you have a DSL sync and that your PPP session displays **UP**. (Click on the **connect** button to establish a PPP session). Next, select **Single Static IP** from the **Configuration** menu to confirm that Single Static IP is **enabled**, as shown in the following screen.




STOP! After you enable Single Static IP, you must reboot your computer.


12.1.2 Enabling a Local PC for Single Static IP

To enable Single Static IP for a local PC, click on **User Configured PC** (from the options listed in the window). You have chosen a local device to share your Single Static IP address. Click on **enable**.


NOTE: If you select **User Configured PC**, a local PC must be manually configured to have the Single Static IP address.

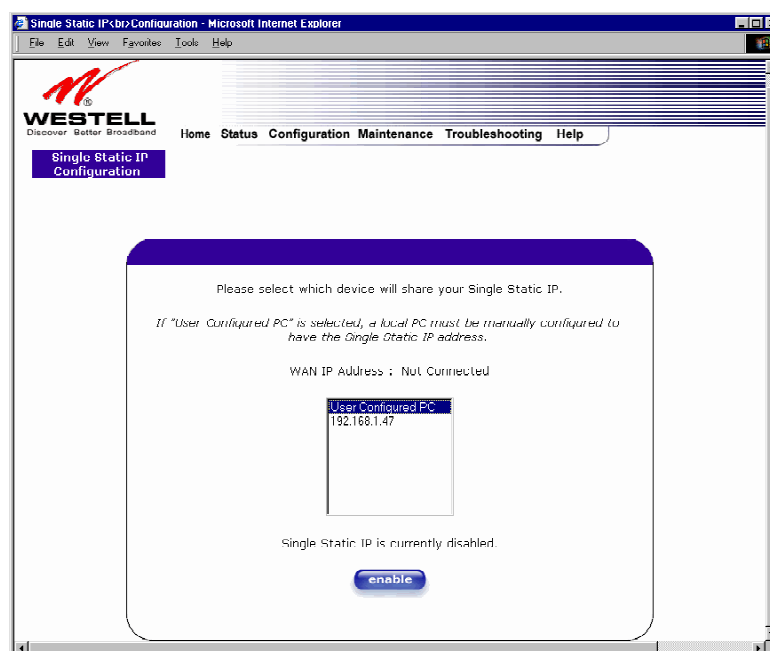


If you clicked on **User Configured PC** and then clicked **enable**, the following pop-up screen will appear. Click on **OK** to enable this device for Single Static IP. Click on **Cancel** if you do not want to enable this device for Single Static IP.

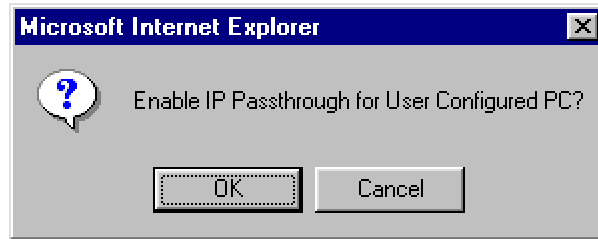


If you clicked on **OK** in the preceding pop-up screen, the following pop-up screen will appear. The Router must be reset in order for the new configuration to take effect. Click on **OK**.

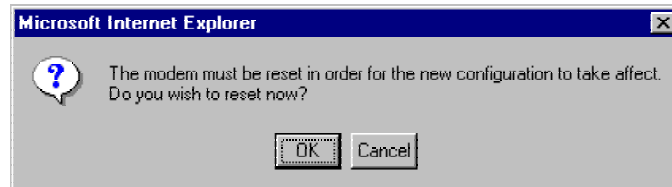

If you clicked on **OK** in the preceding screen, the following screen will be displayed. The Router will be reset and the new configuration will take effect. After the Router has been reset, confirm that you have a DSL sync and that your PPP session displays **UP**.

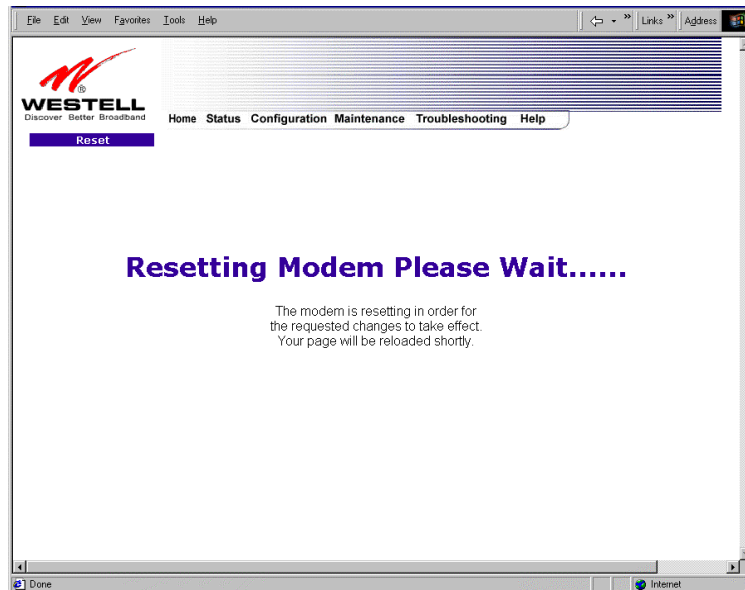

After a brief delay, the home page will be displayed. Confirm that you have a DSL sync and that your PPP session displays **UP**. (Click on the **connect** button to establish a PPP session). Next, Select **Single Static IP** from the **Configuration** menu to confirm that Single Static IP is **enabled**, as shown in the following screen.

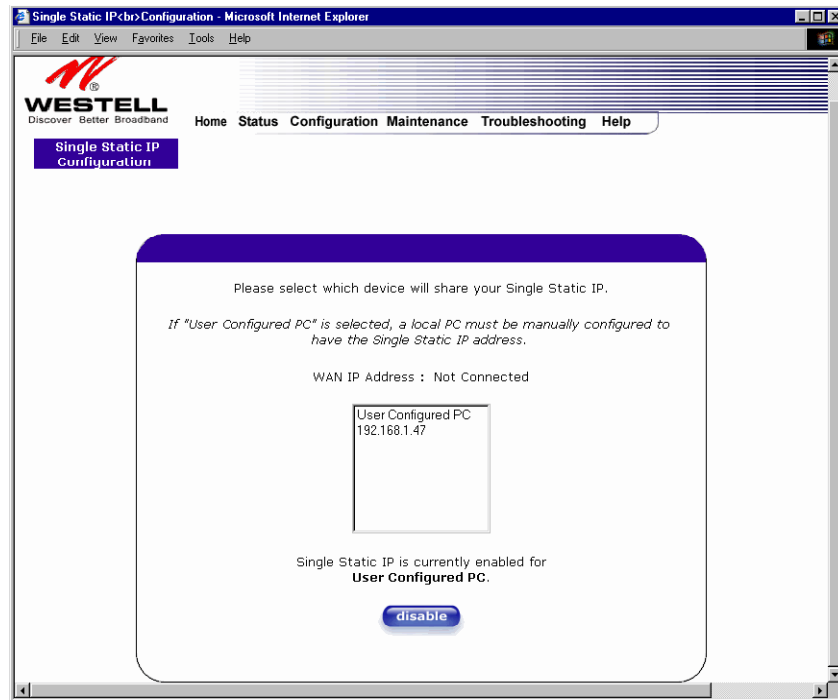

STOP! After you enable Single Static IP, you must reboot your computer.

12.1.3 Disabling Single Static IP


To disable Single Static IP, select **Single Static IP** from the **Configuration** menu. Click on **disable**.




If you clicked on **disable** in the preceding screen, the following pop-up screen will be displayed. Click on **OK**.




If you clicked on **OK** in the **Disable IP Passthrough?** screen, the following pop-up screen will be displayed. This screen will allow the Router to be reset and the new configuration will take effect. Click on **OK**.

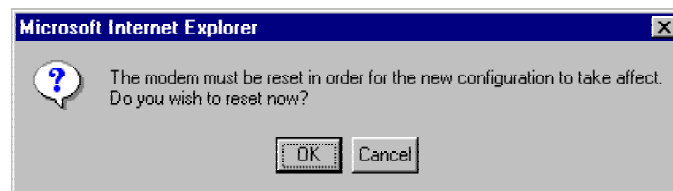

If you clicked on **OK** in the preceding screen, the following screen will be displayed. The Router will be reset and the new configuration will take effect.

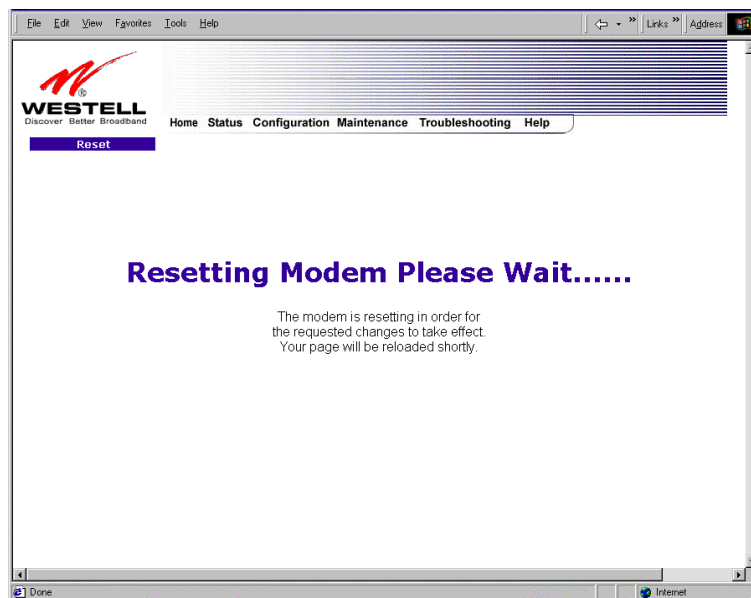

After a brief delay, the home page will be displayed. Confirm that you have a DSL sync and that your PPP session displays **UP**. (Click on the **connect** button to establish a PPP session). Next, Select **Single Static IP** from the **Configuration** menu to confirm that Single Static IP is **disabled**, as shown in the following screen.

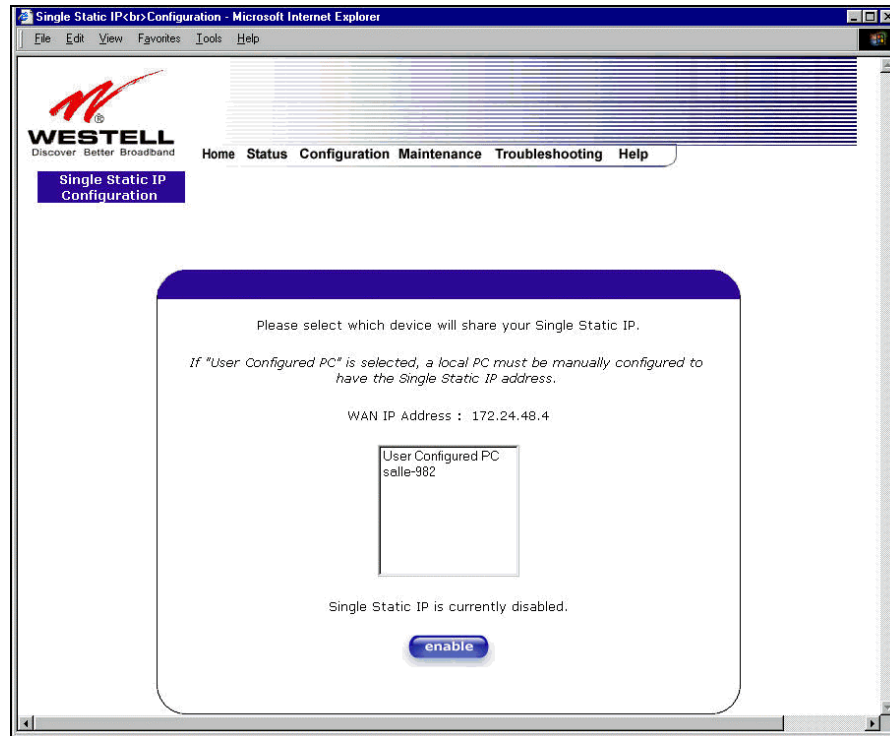

STOP! After you disable Single Static IP, you must reboot your computer.

12.1.4 Configuring Static IP on Your PC

If you have static IP service (your Internet Service Provider [ISP] supplies static IP addresses), you will need to perform the following steps to obtain Internet access:

1. Configure your PC settings to obtain an IP address automatically. (Refer to your Windows Help screen for instructions.)
2. Follow the instructions in section 8 (Configuring the Router for Internet Connection).
3. View the settings at the VPI/VCI screen (section 8). You must use the VPI/VCI values that you obtained from your Internet service provider. If you type any other values in the fields and click on **next**, you will lose your DSL connection. The connection cannot be restored until you enter the proper VPI/VCI values that you obtained for your ISP.
4. Select the **Configuration** menu, and then select **Advanced WAN > VC**.
5. Click on the **edit** button in the row that displays the VPI/VCI that you obtained from your ISP (section 8). The **VC 1 Configuration** screen will be displayed.
6. Select **Bridge** from the list of Protocol options. Next, under the **VC 1 Bridge Settings**, select **Routed Bridge** as the Mode.
7. Disable DHCP Client (if enabled) by clicking on the **Disable** radio button adjacent to DHCP Client.


8. Replace the addresses in the fields labeled **IP address, Subnet Mask, Gateway, DNS Primary, and DNS Secondary** with the addresses you obtained from your Internet service provider.
9. Click on the **set VC** button.
10. Click on **OK** in the VC Configuration pop-up screen.
11. Click on **OK** in the reset Router pop-up screen.

After you complete the preceding steps, the Router will be reconfigured and your new settings will take effect. After the Router has been reset, confirm that you have a DSL sync and that your PPP session displays **UP** before continuing your Router's configuration.

12.2 Service Configuration

The following settings will be displayed if you select **Services** from the **Configuration** menu.

Westell has developed an extensive list of NAT services and you may select any service from this list. By selecting your specific NAT service and setting up a NAT profile, you will ensure that the appropriate ports on your Router are open and that the required application traffic can pass through your LAN. For a list of supported services, go to section 16 (NAT Services).

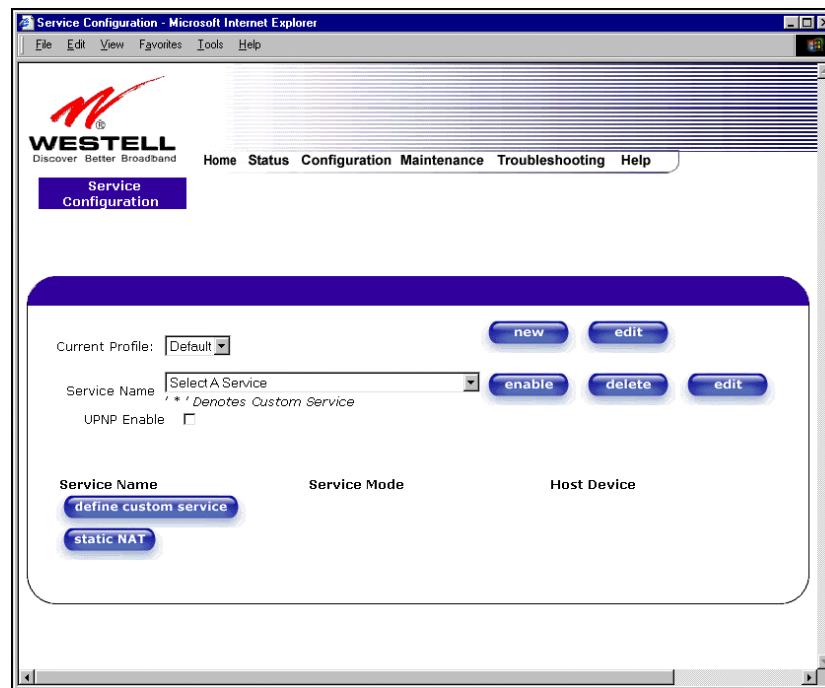


Current Profile	Displays the NAT (Network Address Translation) services that you have selected.
Service Name	Drop down selection menu of NAT (Network Address Translation) service you can select to configure you Router.
UPNP Enable	Factory Default = Disabled Enabling UPNP (Universal Plug and Play) allows automatic device discovery by your operating system.

12.2.1 Adding NAT Services to a Profile

This section explains how to add NAT services to your NAT service profile. Remember, you may attach an unlimited number of NAT services to your profile.

NOTE: Westell has developed an extensive list of NAT services and you may select any service from this list. By selecting your specific NAT service and setting up a NAT profile, you will ensure that the appropriate ports on your Router are open and that the required application traffic can pass through your LAN. For a list of supported NAT services, go to section 16 (NAT Services).

To add a NAT service, select **Services** from the **Configuration** menu. Next, Select a NAT service from the options provided at the **Service Name** drop-down arrow and click on **enable**.

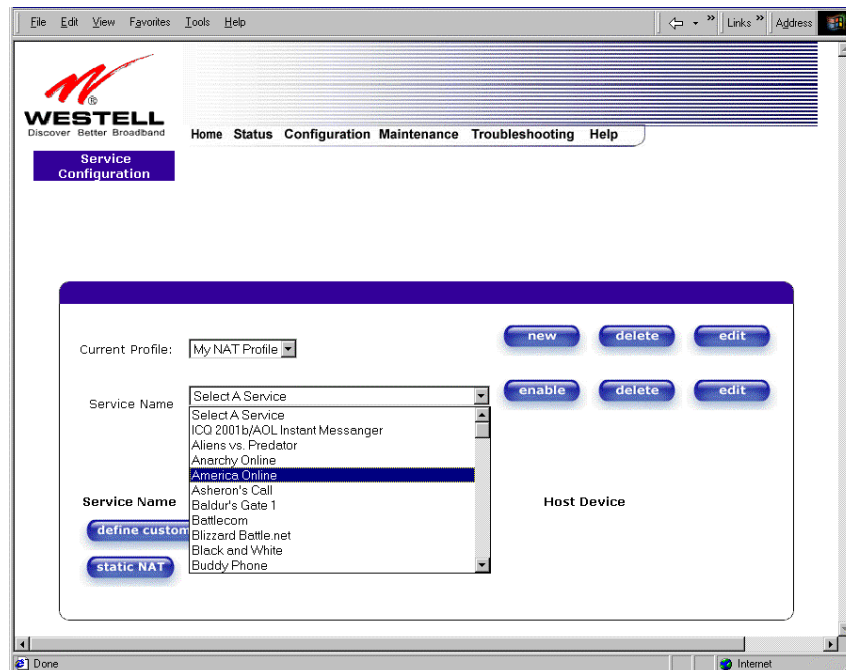

If you clicked on **enable**, the following **Host Service** screen will be displayed. Click on **OK**. This will load the new NAT Configuration and the settings will be saved automatically.




If you clicked on **OK** in the preceding pop-up screen, the **Host Device** screen will be displayed. The **Host Device** screen will allow you to select which device will host the NAT service you selected on your local area network. You must either select the device from the **Host Device** drop-down arrow or type an IP address in the field labeled **IP Address**. Click on **done**.



A screenshot of a web browser window titled "Host Device - Microsoft Internet Explorer". The page has a purple header bar. Below it, there is a form with a "Host Device" dropdown menu showing "salle-982". Below this is the text "or specify" and an "IP Address" text input field. At the bottom of the form is a blue "done" button.

NOTE: You can attach multiple NAT services to your profile. However, for each NAT service that you attach to your profile, you must first select the new NAT service. Then, you must load the new NAT Configuration, as explained earlier in this section.


Once you have selected a NAT service and you have saved it to your NAT service profile, the following screen will be displayed. It shows which NAT service is active for the selected profile.

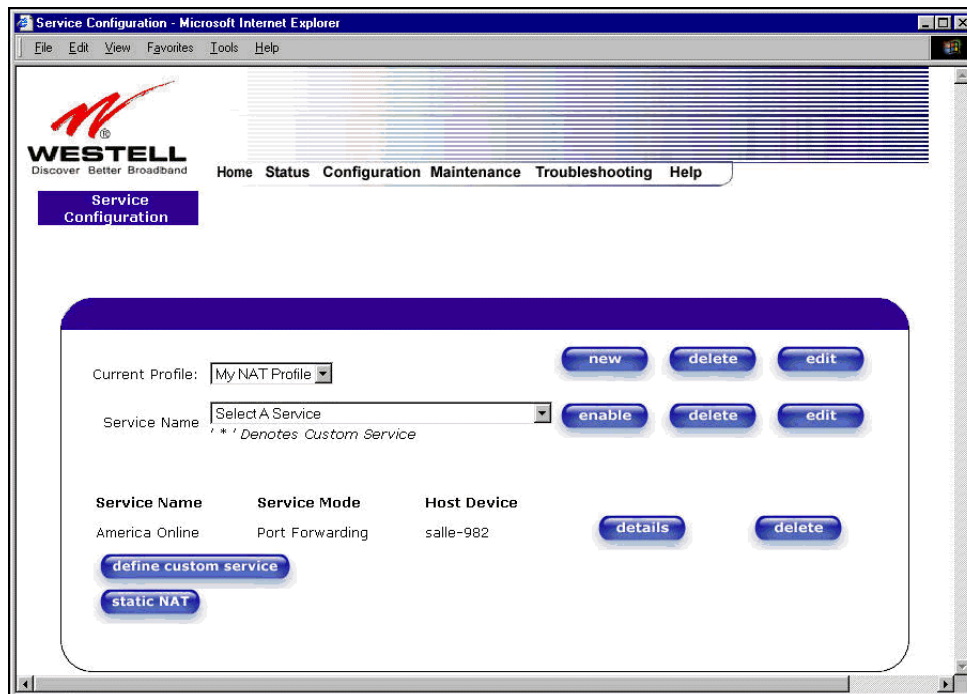

A screenshot of a web browser window titled "Service Configuration - Microsoft Internet Explorer". The page has a purple header bar with the Westell logo and navigation tabs: Home, Status, Configuration, Maintenance, Troubleshooting, and Help. The "Configuration" tab is selected. Below the tabs is a "Service Configuration" section. It includes a "Current Profile:" dropdown menu showing "My NAT Profile" and buttons for "new", "delete", and "edit". Below this is a "Service Name" dropdown menu showing "Select A Service" and buttons for "enable", "delete", and "edit". A note below the dropdown says " * * ' Denotes Custom Service ". Below this is a table with three columns: "Service Name", "Service Mode", and "Host Device". The table has one row with "America Online", "Port Forwarding", and "salle-982". To the right of the table are "details" and "delete" buttons. Below the table are buttons for "define custom service" and "static NAT".

Service Name	Service Mode	Host Device
America Online	Port Forwarding	salle-982

If you select the **details** button in the **Service Configuration** screen, the following screen will display the details of the selected NAT service. If you click on the **delete** button in the **Service Configuration** screen, you will remove that NAT service from your NAT service profile. Click on **close** to continue.

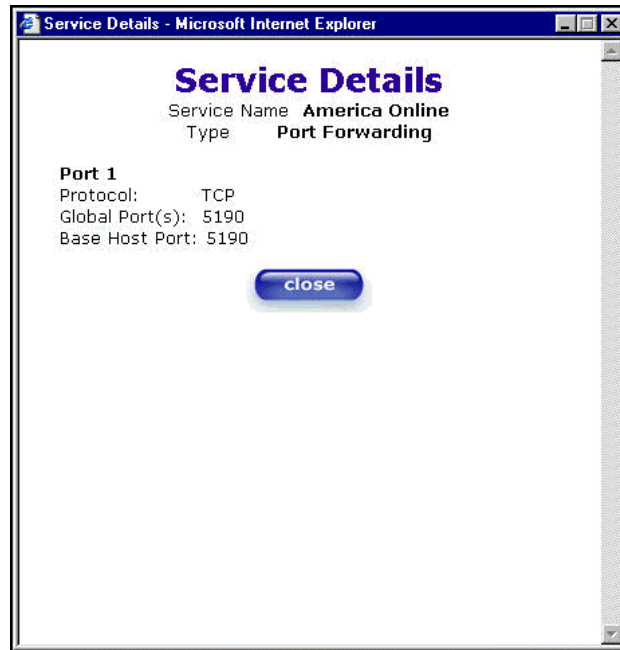

NOTE: If you would like to set up additional Advanced Service Configuration options, refer to section 13 (Setting Up Advanced Service Configuration).


12.2.2 Creating a New NAT Service Profile

If you select **new** from the preceding **Service Configuration** screen, the **Create new Service Profile?** pop-up screen will be displayed. Click on **OK** to begin creating your new NAT service profile. Click **Cancel** if you do not want to create a new NAT service profile.




If you clicked on **OK**, the following screen will be displayed. Select “**A New Service Profile #1**” from the **Current Profile** drop-down arrow.

NOTE: You may create up to four NAT profiles and attach an unlimited number of services to each profile.

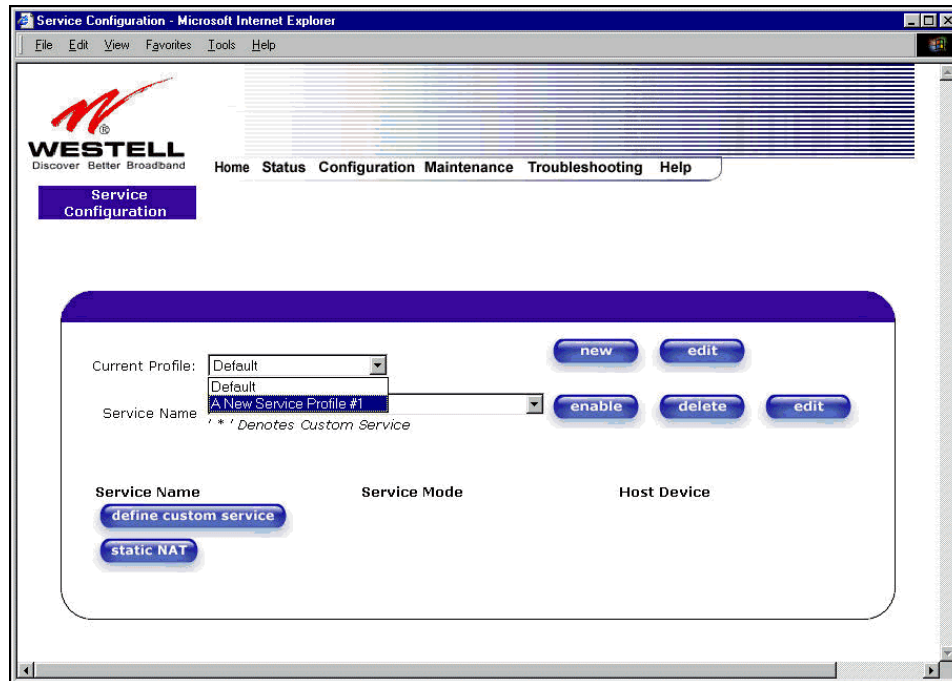

If you selected “A New Service Profile #1” from the **Current Profile** drop-down arrow, the following screen will be displayed. This screen shows that you have chosen to create a new NAT service profile. You may create up to four NAT service profiles and attach an unlimited number of services to each profile.

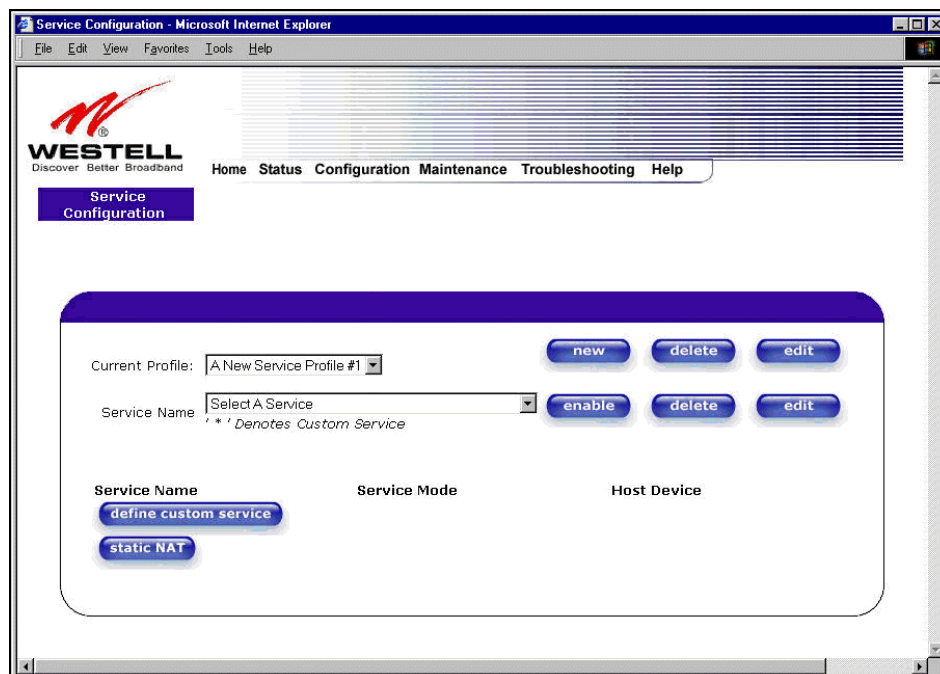


12.2.3 Editing a NAT Service Profile

Once you have created a NAT service profile, you may edit the profile. If you select **edit** from the **Service Configuration** screen, the following screen will be displayed. By selecting the **edit** button, you can make changes to your NAT profile by adding or deleting NAT applications that will work with your Router. Type your new NAT service profile name into the field labeled **Profile Name**.



The following screen shows that a new profile name called '**My NAT Profile**' was entered into the **Profile Name** field. If you want save the new NAT profile, click on **save**. If you do not want to save the new NAT profile, click on **close**.

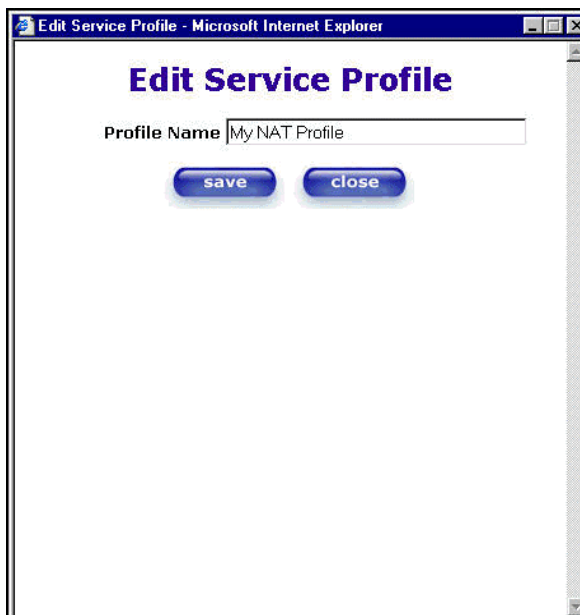


If you clicked on **save** in the **Edit NAT Profile** screen, the following pop-up screen will be displayed. Click **OK** to save your new profile settings. If you click on **Cancel**, your new profile settings will not be saved.




The following screen displays the current profile. If desired, you may create a new profile and delete or edit an existing profile.

NOTE: You may create up to four NAT profiles and attach an unlimited number of services to each profile.

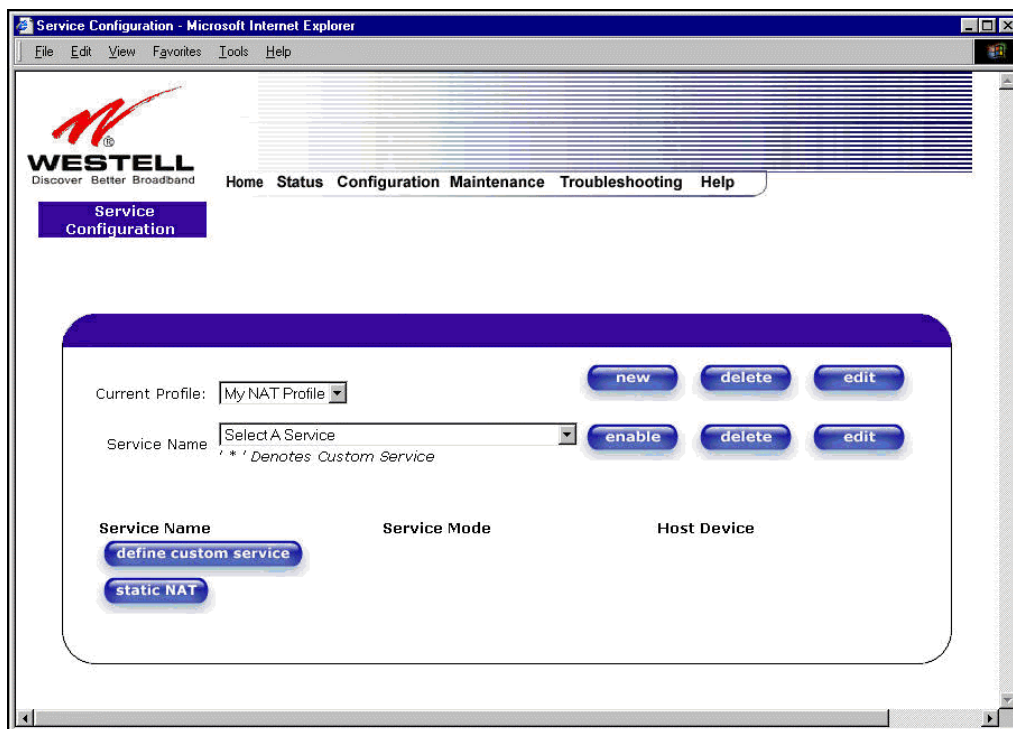

12.3 Firewall Configuration

The following settings will be displayed if you select **Firewall** from the **Configuration** menu.

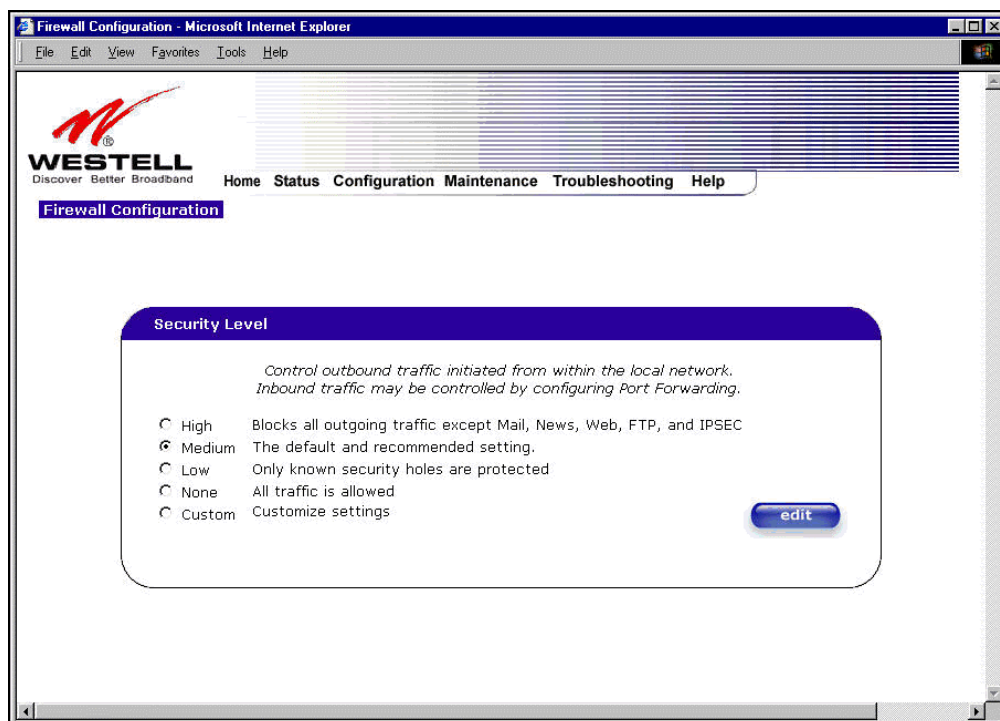


High	High security level only allows basic Internet functionality. Only Mail, News, Web, FTP, and IPSEC are allowed. All other traffic is prohibited.
Medium	Factory Default = MEDIUM Like High security, Medium security only allows basic Internet functionality by default. However, Medium security allows customization through NAT configuration so that you can enable the traffic that you want to pass.
Low	The Low security setting will allow all traffic except for known attacks. With Low security, your Router is visible to other computers on the Internet.
None	Firewall is disabled. (All traffic is passed)
Custom	Custom is an advanced configuration option that allows you to edit the firewall configuration directly. NOTE: only the most advanced users should try this.

If you select **Edit** from the **Security Level** screen, the **User Defined Firewall Rules** screen will be displayed. This screen allows you to change the security parameters on your Inbound and Outbound Firewall rules via the **User Defined Firewall Rules** drop-down arrow. If you select **Inbound**, this will restrict inbound traffic from the WAN to the LAN. **Outbound** restricts outbound traffic to the WAN from the LAN. To apply the new settings, click **Apply** in the screen labeled **User Defined Firewall Rules**.

NOTE: Westell recommends that you do not change the settings in the **User Defined Firewall Rules** screen. If you need to reset the Router to factory default settings, push the reset button on the rear of the Router.

The information displayed in the following screen depends upon the Firewall security setting you have selected. If you selected "None" in the preceding Firewall **Security Level** screen, no values will be displayed in the following **User Defined Firewall Rules** screen.

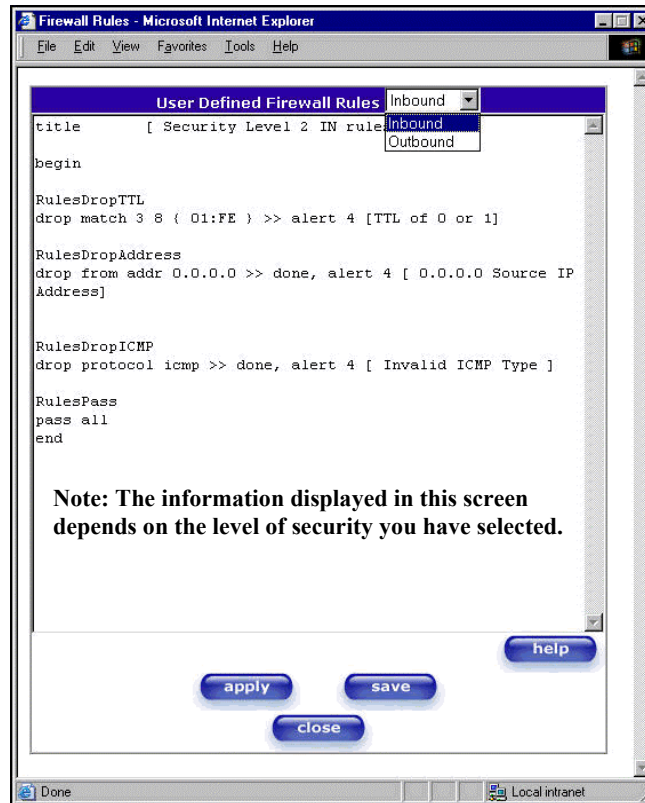


If you clicked **Apply** in the **User Define Firewall Rules** screen, the following pop-up screen will be displayed. Click on **OK** if you want your new firewall setting to take effect. If you click on **Cancel**, your new firewall settings will not take effect.




If you want to save your new firewall settings, click on **save** in the screen labeled **User Define Firewall Rules**.


NOTE: Westell recommends that you do not change the settings in the **User Defined Firewall Rules** screen. If you need to reset the Router to factory default settings, push the reset button on the rear of the Router.

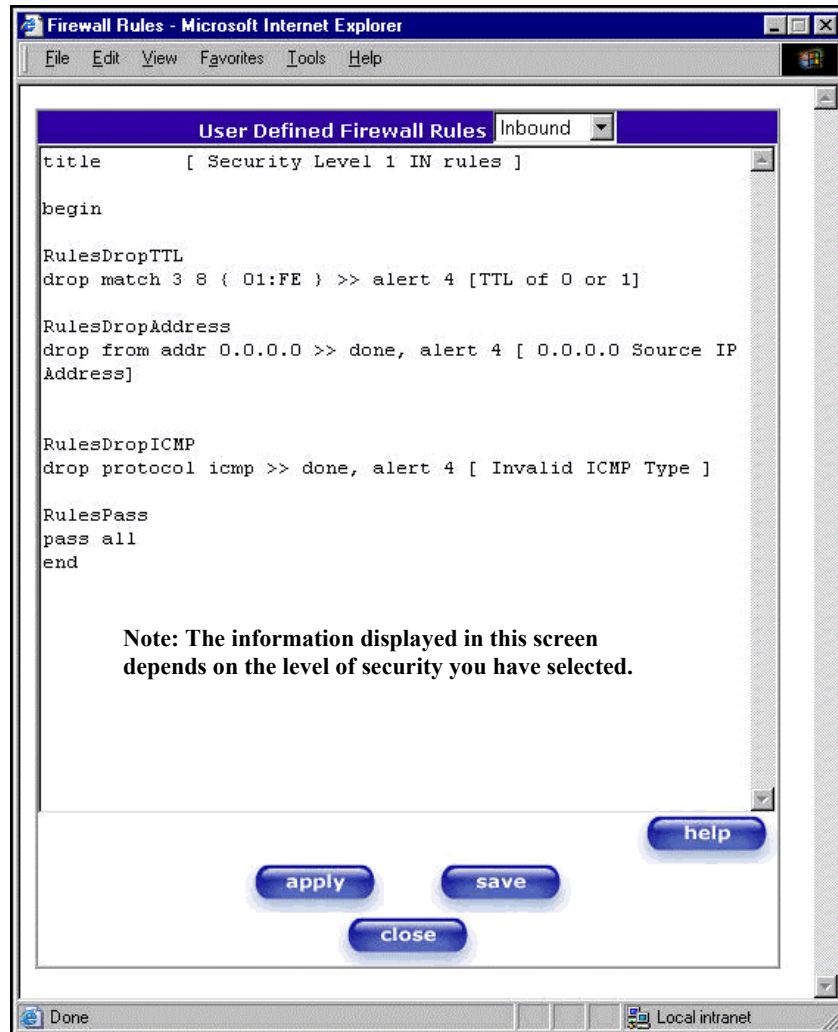

If you clicked **save** in the **User Define Firewall Rules** screen, the following pop-up screen will be displayed. Click **OK** when asked **Do you wish to save these Rules to Flash and switch you Security Level to "User"?** This will save your new firewall settings. If you click **Cancel**, your new firewall settings will not be saved.

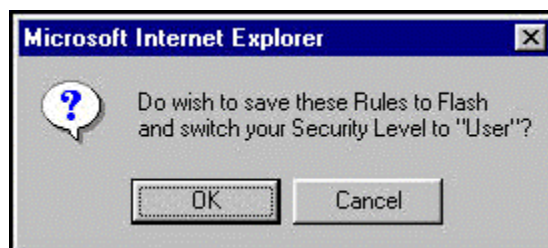


If you select **Help** in the screen labeled **User Defined Firewall Rules**, the following screen will be displayed. This screen gives a detailed explanation of the Firewall Rules.

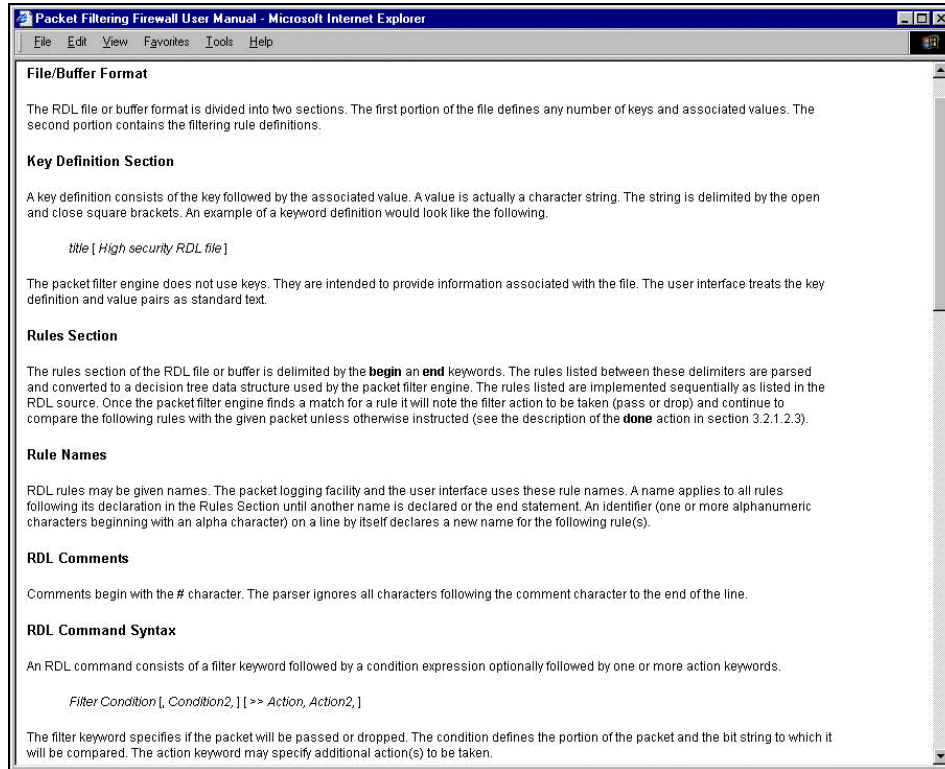


12.4 Advanced LAN

This section explains the configurable features of your Router that are available if you select **Advanced LAN** from the **Configuration** menu.

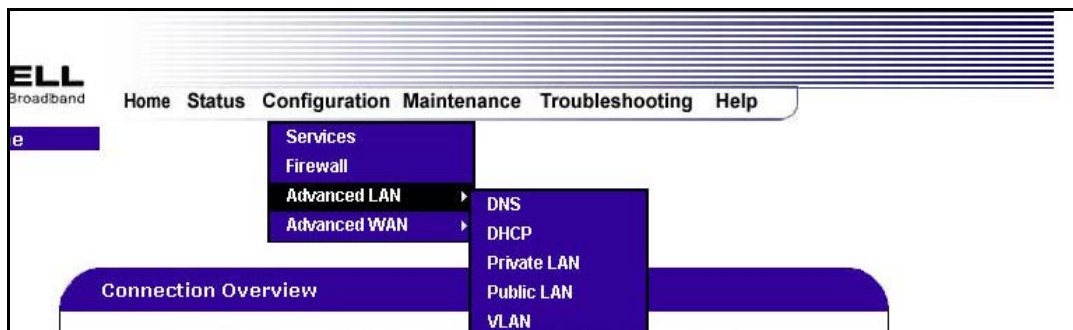

12.4.1 DNS Configuration

The following settings will be displayed if you select **DNS** from the **Advanced LAN** menu.

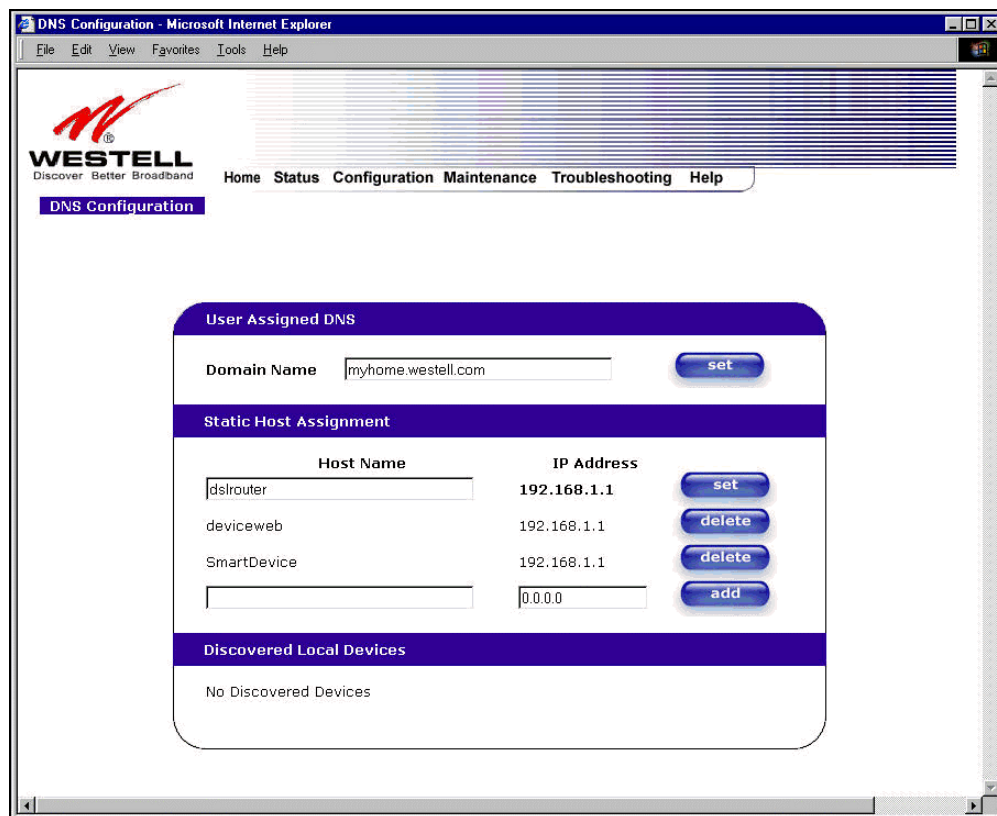

DNS Configuration - Microsoft Internet Explorer

File Edit View Favorites Tools Help

WESTELL
Discover Better Broadband

Home Status Configuration Maintenance Troubleshooting Help

DNS Configuration

User Assigned DNS

Domain Name

Static Host Assignment


Host Name	IP Address	
<input type="text" value="dslrouter"/>	<input type="text" value="192.168.1.1"/>	<input type="button" value="set"/>
deviceweb	192.168.1.1	<input type="button" value="delete"/>
SmartDevice	192.168.1.1	<input type="button" value="delete"/>
<input type="text"/>	<input type="text" value="0.0.0.0"/>	<input type="button" value="add"/>

Discovered Local Devices

No Discovered Devices

User Assigned DNS	
Domain Name	This field allows you to enter a Domain Name for your Router.
NOTE: Some ISP's may require the name for identification purposes.	To add a Domain Name, in the field under User Assigned DNS, type in your new domain name and click Set .
Static Host Assignment	
Host Name	This field allows you to enter a HOST name for your Router.
	To add a new Host name, in the field under Static Host Assignment, type in the Host Name and the IP address and click Set .
IP Address	Displays the IP address that is assigned to the Host Name.
Discover Local Devices	
This field displays a list of the computers on the LAN that were assigned a DHCP Address. The computer name, MAC address, and IP address of each discovered device is displayed.	

If you want to add a new Host Name and IP address to your DNS server, enter your Router's **Host Name** and **IP Address** in the fields provided in the **Static Host Assignment** section.

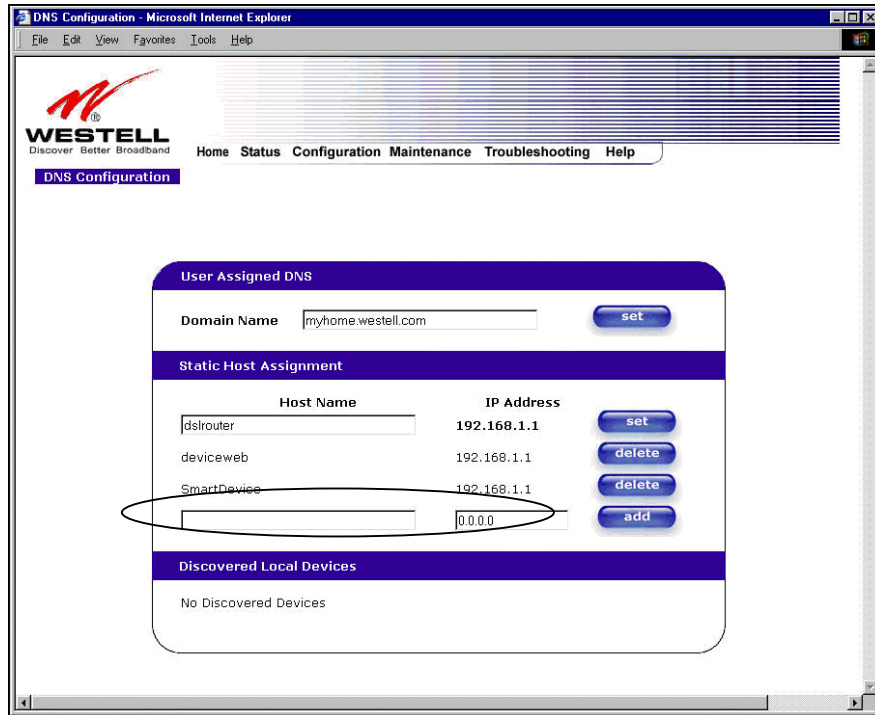

DNS Configuration - Microsoft Internet Explorer

File Edit View Favorites Tools Help

WESTELL
Discover Better Broadband

Home Status Configuration Maintenance Troubleshooting Help

DNS Configuration

User Assigned DNS

Domain Name


Static Host Assignment

Host Name	IP Address	
dslrouter	192.168.1.1	<input type="button" value="set"/>
deviceweb	192.168.1.1	<input type="button" value="delete"/>
SmartDevice	192.168.1.1	<input type="button" value="delete"/>
<input type="text"/>	<input type="text" value="0.0.0.0"/>	<input type="button" value="add"/>

Discovered Local Devices

No Discovered Devices

The following screen displays a **Host Name** and an **IP Address** in the fields. Now click on **add**.

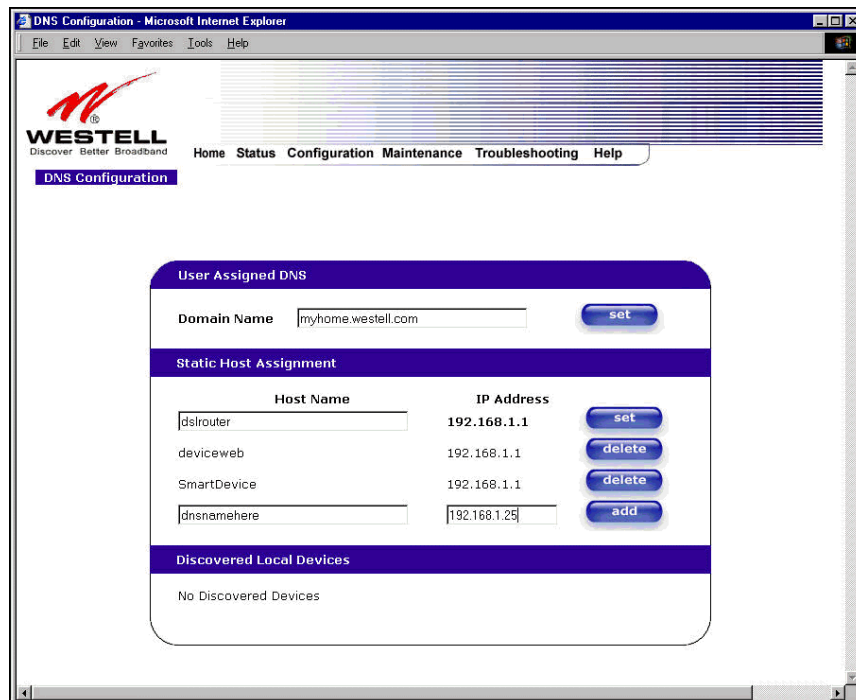

DNS Configuration - Microsoft Internet Explorer

File Edit View Favorites Tools Help

WESTELL
Discover Better Broadband

Home Status Configuration Maintenance Troubleshooting Help

DNS Configuration

User Assigned DNS

Domain Name


Static Host Assignment

Host Name	IP Address	
dslrouter	192.168.1.1	<input type="button" value="set"/>
deviceweb	192.168.1.1	<input type="button" value="delete"/>
SmartDevice	192.168.1.1	<input type="button" value="delete"/>
dnsnamehere	192.168.1.25	<input type="button" value="add"/>

Discovered Local Devices

No Discovered Devices

If you clicked on **add**, the following screen will be displayed. The **Host Name** and **IP Address** have been added to the Static Host Assignment.

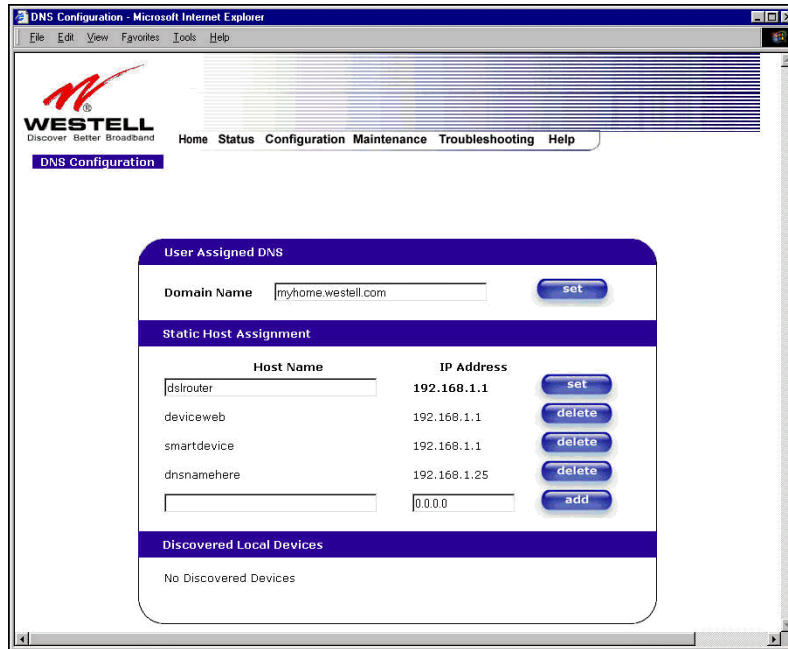

DNS Configuration - Microsoft Internet Explorer

File Edit View Favorites Tools Help

WESTELL
Discover Better Broadband

Home Status Configuration Maintenance Troubleshooting Help

DNS Configuration

User Assigned DNS

Domain Name

Static Host Assignment

Host Name	IP Address	
dslrouter	192.168.1.1	<input type="button" value="set"/>
deviceweb	192.168.1.1	<input type="button" value="delete"/>
smartdevice	192.168.1.1	<input type="button" value="delete"/>
dnsnamehere	192.168.1.25	<input type="button" value="delete"/>
<input type="text"/>	<input type="text" value="0.0.0.0"/>	<input type="button" value="add"/>

Discovered Local Devices

No Discovered Devices

12.4.2 DHCP Configuration (Private LAN)

The following settings will be displayed if you select **DHCP** from the **Advanced LAN** menu.



DHCP Configuration - Microsoft Internet Explorer

File Edit View Favorites Tools Help

WESTELL
Discover Better Broadband

Home Status Configuration Maintenance Troubleshooting Help

DHCP Configuration

DHCP Server

Private LAN DHCP Settings

DHCP Start Address

DHCP End Address


DHCP Lease Time : : :
Days Hours Minutes Seconds

DHCP Server	<p>This setting allows the ADSL router to automatically assign IP addresses to local devices connected on the LAN. Westell advises setting this to enabled for the private LAN.</p> <p>Off = DHCP Server is disabled</p> <p>Private LAN = DHCP addresses will be saved into the Private LAN configuration.</p> <p>Public LAN = DHCP addresses will be saved into the Public LAN configuration. This option is only available if the Public LAN DHCP server is enabled.</p> <p>NOTE: These addresses will be overwritten if the Internet Service Provider supports dynamic setting of these values.</p>
DHCP Start Address	<p>Factory Default = 192.168.1.15</p> <p>This field displays the first IP address that the DHCP server will provide. The DHCP Start Address must be within the IP address and lower than the DHCP End Address. You may use any number from 0 to 254 in this address.</p>
DHCP End Address	<p>Factory Default = 192.168.1.47</p> <p>This field displays the last IP address that the DHCP server will provide. The DHCP End Address must be within the IP address and higher than the DHCP Start Address. You may use any number from 0 to 254 in this address.</p>
DHCP Lease Time	<p>Factory Default = 01:00:00:00</p> <p>Displays the amount of time the provided addresses will be valid, after which the DHCP client will usually re-submit a request.</p> <p>NOTE: DHCP Lease Time is displayed in the format (dd:hh:mm:ss)*. This value must be greater than 10 seconds. Seconds must be between 0 and 59, minutes must be between 0 and 59, and hours must be between 0 and 23.</p> <p>*(dd = days, hh = hours, mm = minutes, ss = seconds)</p>

12.4.3 Disabling the DHCP Server

If you click on the drop-down arrow at **DHCP Server:**, a list of options will be displayed.

If you want to disable your DHCP server, select **Off** from the **DHCP Server** drop-down arrow. Click on **save**.

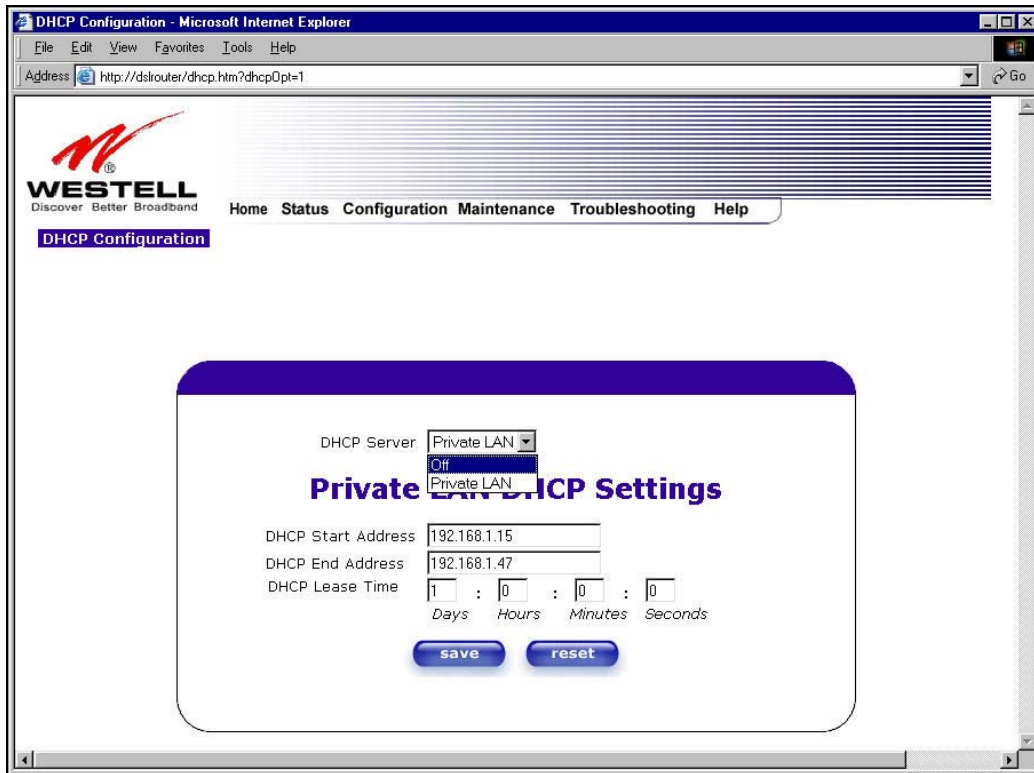

DHCP Configuration - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Address <http://dslrouter/dhcp.htm?dhcpOpt=1> Go

WESTELL
Discover Better Broadband

Home Status Configuration Maintenance Troubleshooting Help

DHCP Configuration

Private LAN DHCP Settings

DHCP Server: Private LAN (selected), Off, Private LAN


DHCP Start Address: 192.168.1.15

DHCP End Address: 192.168.1.47

DHCP Lease Time: 1 Days, 0 Hours, 0 Minutes, 0 Seconds

save reset

If you selected **Off** at **DHCP Server**:, the following screen will be displayed. Click on **save** to save the **DHCP Server** setting.

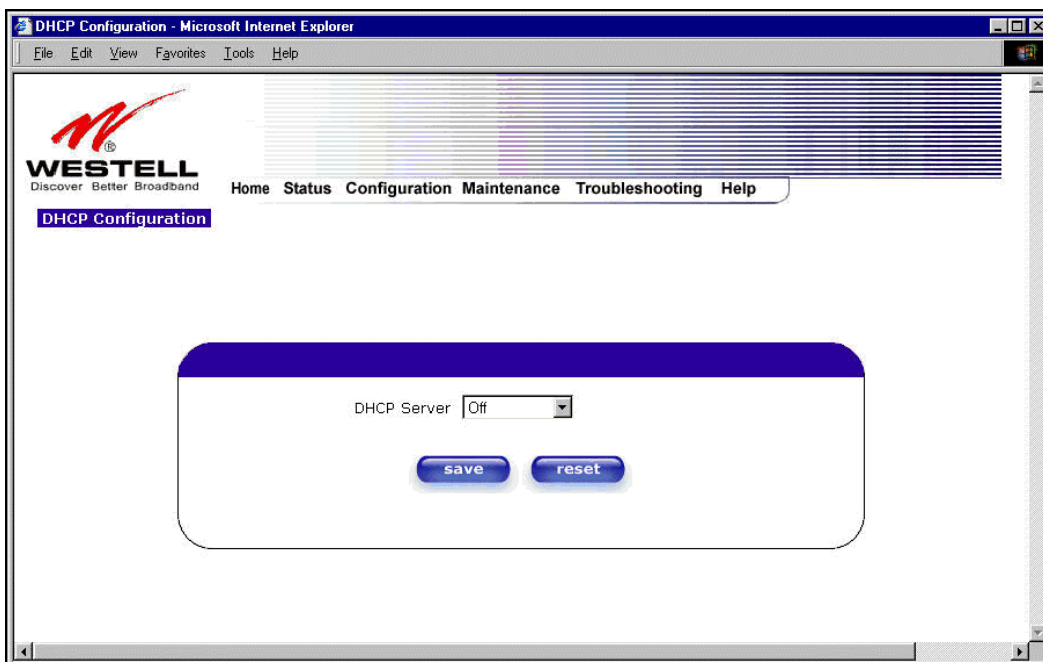

DHCP Configuration - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Address <http://dslrouter/dhcp.htm?dhcpOpt=1> Go

WESTELL
Discover Better Broadband

Home Status Configuration Maintenance Troubleshooting Help


DHCP Configuration

Private LAN DHCP Settings

DHCP Server: Off (selected)

save reset

If you clicked on **save**, in the preceding **DHCP Configuration** screen, the following pop-up screen will appear. Click on **OK**.

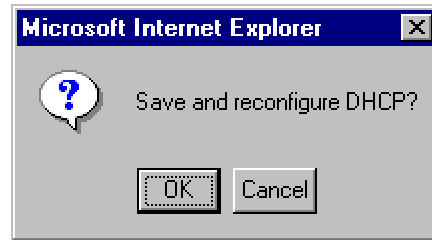


12.4.4 Enabling the DHCP Server


If you want to enable your DHCP Server settings, select **Private LAN** at the **DHCP Server** drop-down arrow.



If you have recently disabled the DHCP Server for Private LAN, select **Private LAN** while in the following screen.

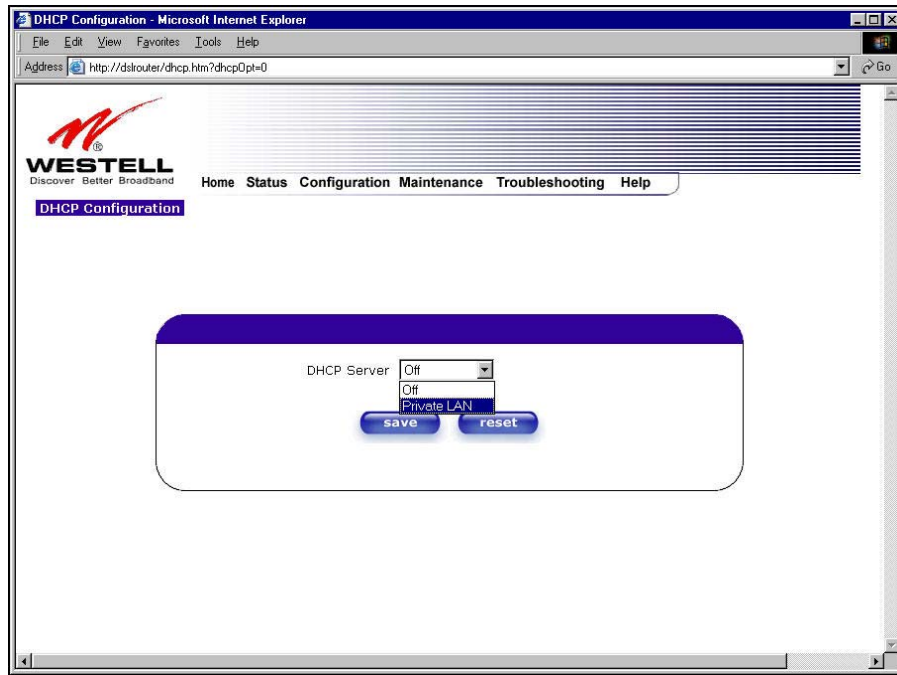

If you selected **Private LAN**, the following screen will be displayed automatically. Click on **save** to save your DHCP Server setting. If you click on **reset**, your DHCP Server will be reset to factory default. (Private LAN is the factory default for the DHCP Server.)

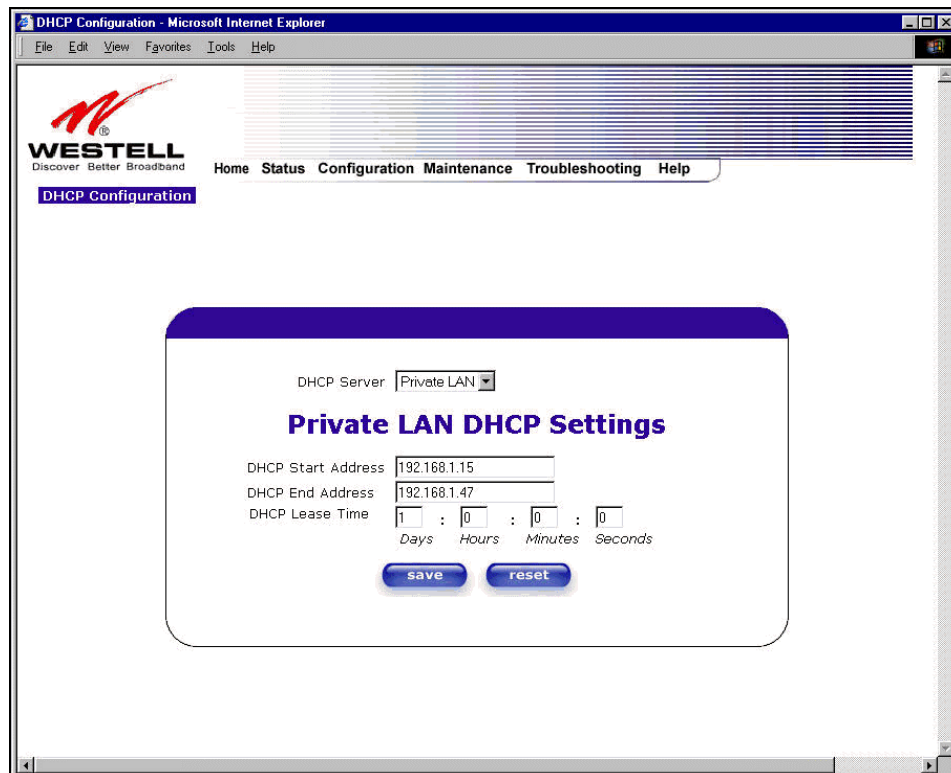

If you clicked on **save**, the following pop-up screen will appear. Click on **OK**.



12.4.5 Private LAN Configuration – Configuring NAT

The following settings will be displayed if you select **Private LAN** from the **Advanced LAN** menu. (Private LAN is the default configuration for this Router.)

NOTE: Private LAN allows you to set up a network behind your Router.

If you change the settings in this screen, click on **save**. If you click on **reset**, the changes will not take effect.

A screenshot of a web browser window titled "Private LAN Configuration - Microsoft Internet Explorer". The browser's address bar shows a URL. The page features the Westell logo and a navigation menu with links: Home, Status, Configuration, Maintenance, Troubleshooting, and Help. A "Private LAN Configuration" button is visible. The main content area is titled "Private LAN DHCP Settings" and contains several configuration options: "Private LAN DHCP Server Enable" (checked), "Private LAN Enable" (checked), "Modem IP Address" (192.168.1.1), "Subnet Mask" (255.255.255.0), "DHCP Start Address" (192.168.1.15), "DHCP End Address" (192.168.1.47), and "DHCP Lease Time" (1 Days, 0 Hours, 0 Minutes, 0 Seconds). At the bottom of the form are "save" and "reset" buttons.

If you made changes and clicked on **save**, the following pop-up screen will be displayed. Click on **OK**. This will save your **Private LAN Configuration** settings. If you click **Cancel**, your new settings will not take effect.



Private LAN DHCP Server Enable	Default = CHECKED If this box is CHECKED, it enables DHCP addresses to be served from the Private LAN pool.
Private LAN Enable	Default = CHECKED If this box is CHECKED, it enables the addresses from the Private LAN to use the NAT interface.
Modem IP Address	Displays the Router's IP address
Subnet Mask	Displays the Subnet Mask, which determines what portion of an IP address is controlled by the network and which portion is controlled by the host.
DHCP Start Address	Displays the first IP address that the DHCP server will provide.
DHCP End Address	Displays the last IP address that the DHCP server will provide.
DHCP Lease Time	Displays the amount of time the provided addresses will be valid, after which the DHCP client will usually re-submit a request.

NOTE: DHCP Lease Time is displayed in the following format: (dd:hh:mm:ss)* This value must be greater than 10 seconds. The default = 01:00:00:00. Seconds must be between 0 and 59, minutes must be between 0 and 59, and hours must be between 0 and 23.
*(dd = days, hh = hours, mm = minutes, ss = seconds).


If the settings you have entered in the **Private LAN Configuration** screen are incorrect, the following warnings messages may be displayed via pop-up screens. If this occurs, check the settings in the **Private LAN Configuration** screen.

Warning Message	Check Private LAN DHCP Settings
Start Address is not part of the Subnet	Check the value in the DHCP Start Address field
End Address is not part of the Subnet	Check the value in the DHCP End Address field
End Address is below the Start Address	Check the value in the DHCP End Address field
Lease time must be greater than 10 seconds	Check the values in the DHCP Lease Time fields
Seconds must be between 0 and 53	Check the Seconds value in the DHCP Lease Time field
Minutes must be between 0 and 59	Check the Minutes value in the DHCP Lease Time field
Hours must be between 0 and 23	Check the Hours value in the DHCP Lease Time field


12.4.6 Public LAN Configuration – Multiple IP Address PassThrough

The following screen will be displayed if you select **Public LAN** from the **Advanced LAN** menu. Click in the **Public LAN DHCP Server Enable** box. A check mark will appear in the box.

NOTE: The Public LAN feature, if available from your service provider, allows the Router to use LAN IP addresses that are accessible from the WAN. Public LAN allows your computer to have global address ability. To utilize the Public LAN feature on your Router, your ISP must support Public LAN and Static IP. Contact your ISP for details.

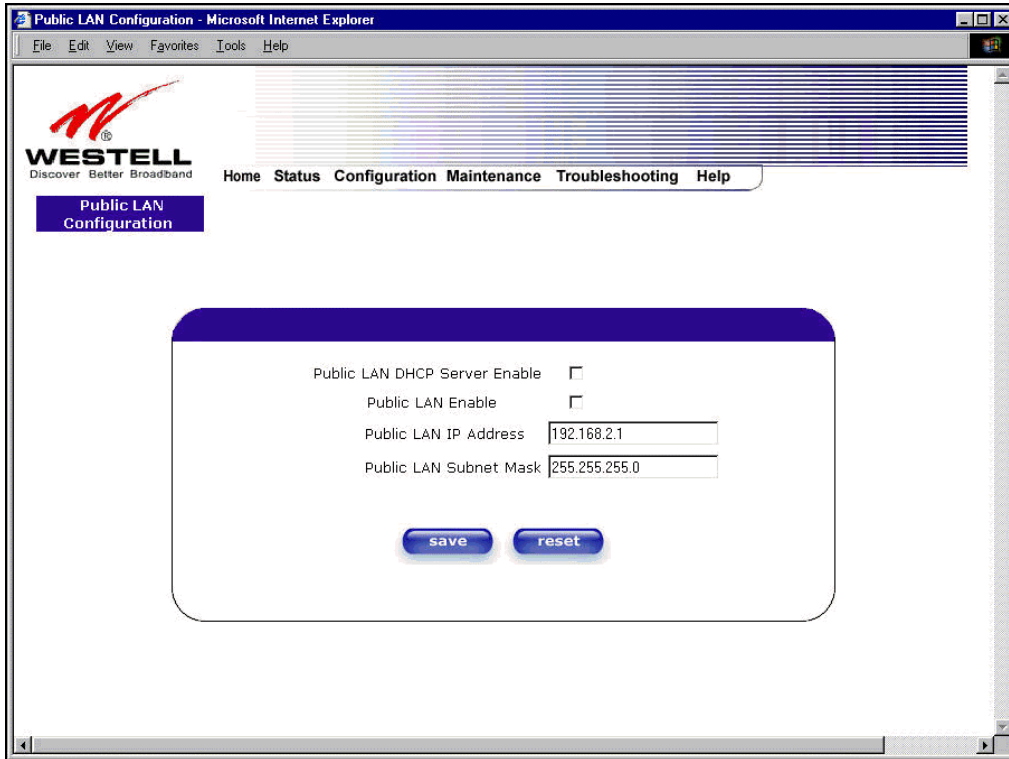


The public devices are visible on the Internet unlike a local NAT'ed PC. The example below shows four NAT'ed PCs and one global PC. The arrows show the data path for each flow.

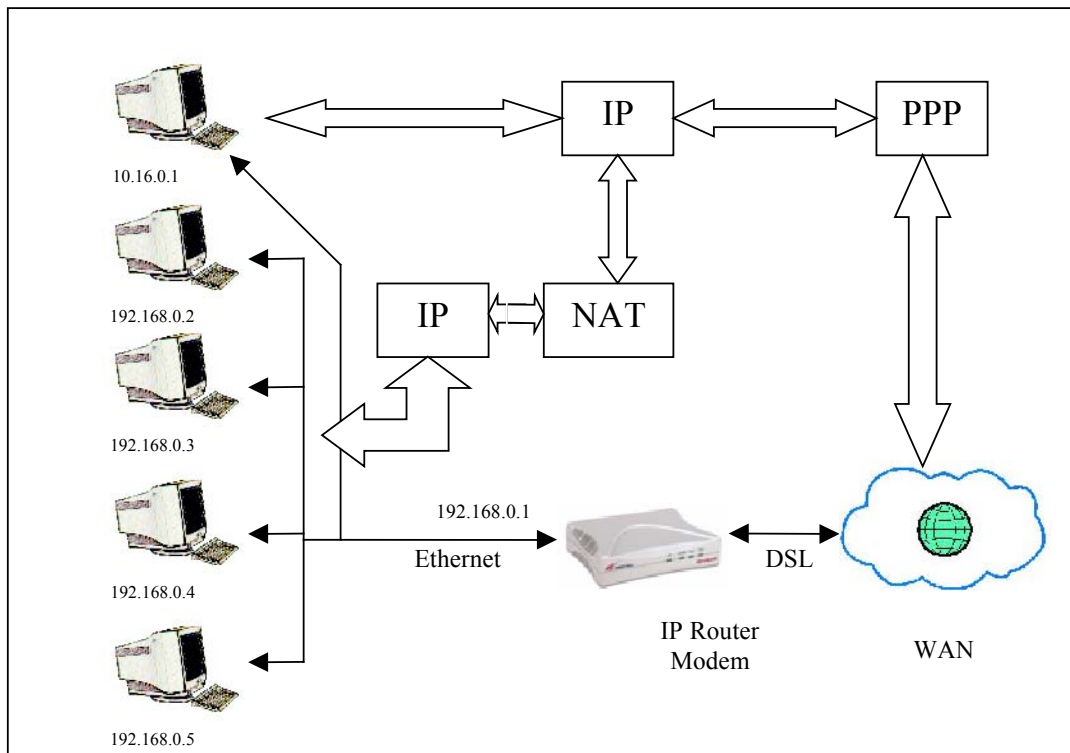

Public LAN DHCP Server Enable	Default = NOT CHECKED If this box is CHECKED, it enables DHCP addresses to be served from the Public LAN pool.
Public LAN Enable	Default = NOT CHECKED If this box is CHECKED, it enables the addresses from the Public LAN to bypass the NAT interface.
Public LAN IP Address	Provides a Public IP Address if the service provider does not automatically provide one.
Public LAN Subnet Mask	Provides a Public Subnet Mask if the service provider does not automatically provide one.

If you clicked on the **Public LAN DHCP Server Enable** box, the following screen will be displayed. Click on the **Public LAN Enable** box to enable Public LAN.

NOTE: By enabling the Public DHCP Server, you automatically disable the Private LAN DHCP Server on your Router.

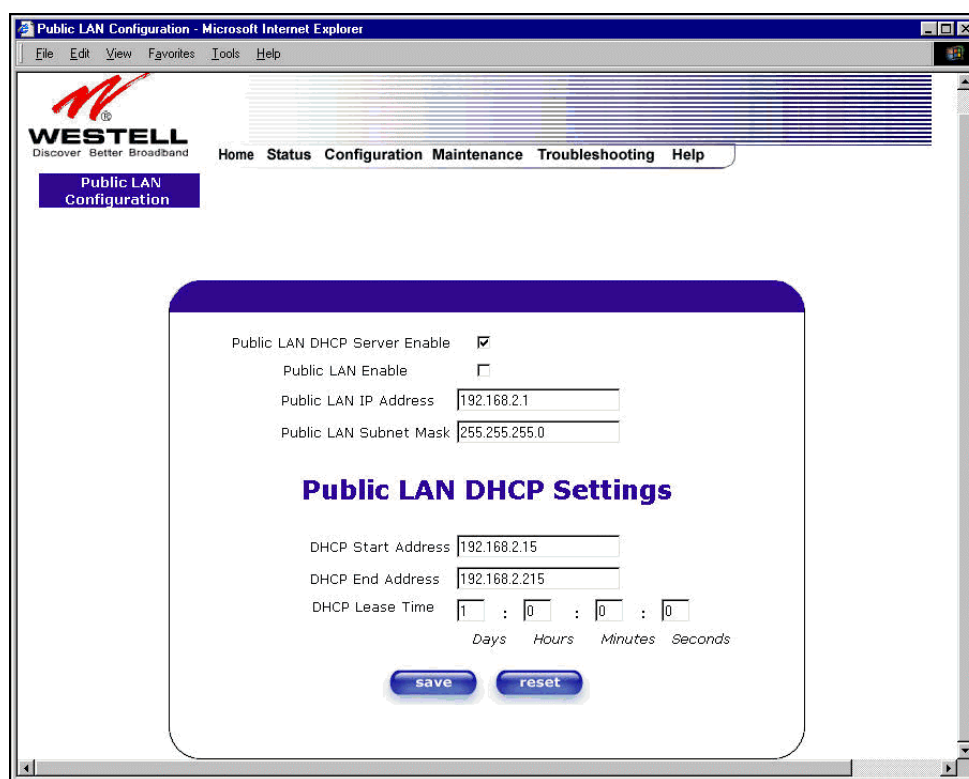

Public LAN Configuration - Microsoft Internet Explorer

WESTELL
Discover Better Broadband

Home Status Configuration Maintenance Troubleshooting Help

Public LAN Configuration

Public LAN DHCP Server Enable ☒

Public LAN Enable ☐

Public LAN IP Address

Public LAN Subnet Mask


Public LAN DHCP Settings

DHCP Start Address

DHCP End Address

DHCP Lease Time : : :
Days Hours Minutes Seconds

If you clicked on the **Public LAN Enable** box, the following screen will be displayed, showing the Public LAN Enable box selected. Click on **save**.

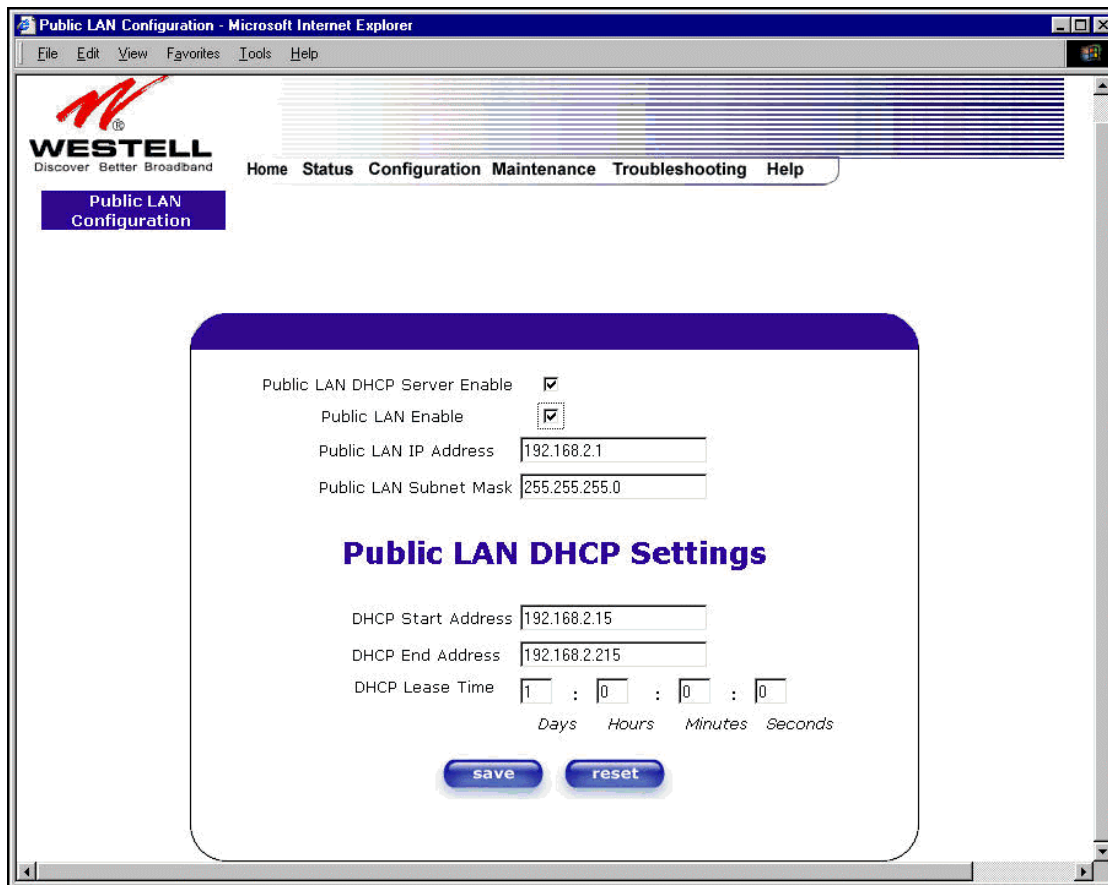

If you selected **Public LAN Enable**, or if you made other changes in the **Public LAN Configuration** screen and clicked on **save**, the following pop-up screen will be displayed. Click on **OK** to save the new settings. If you click on **Cancel**, your new settings will not take effect.




NOTE: DHCP Lease Time is displayed in the following format: (dd:hh:mm:ss)*. This value must be greater than 10 seconds. The default = 01:00:00:00. Seconds must be between 0 and 59, minutes must be between 0 and 59, and hours must be between 0 and 23.

*(dd = days, hh = hours, mm = minutes, ss = seconds).


If the settings you have entered in the **Public LAN Configuration** screen are incorrect, the following warnings messages may be displayed via pop-up screens. If this occurs, check settings in the **Public LAN Configuration** screen.

Warning Message	Check Public LAN DHCP Settings
Start Address is not part of the Subnet	Check the value in the DHCP Start Address field
End Address is not part of the Subnet	Check the value in the DHCP End Address field
End Address is below the Start Address	Check the value in the DHCP End Address field
Lease time must be greater than 10 seconds	Check the values in the DHCP Lease Time fields
Seconds must be between 0 and 53	Check the Seconds field at DHCP Lease Time
Minutes must be between 0 and 59	Check the Minutes field at DHCP Lease Time
Hours must be between 0 and 23	Check the Hours field at DHCP Lease Time

If you clicked on **OK** in the **Load new Public LAN configuration?** screen, the following pop-up screen will be displayed. This will allow the Router to be reset and the new configuration will take effect. Click on **OK**.

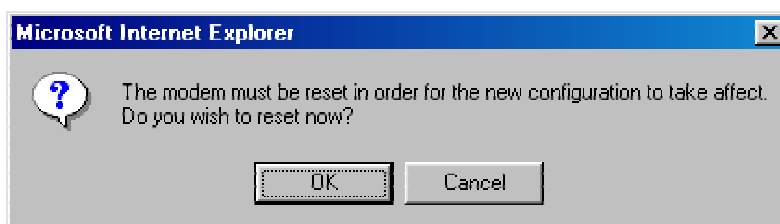


If you clicked on **OK** in the preceding screen, the following screen will be displayed. The Router will be reset and the new configuration will take effect.

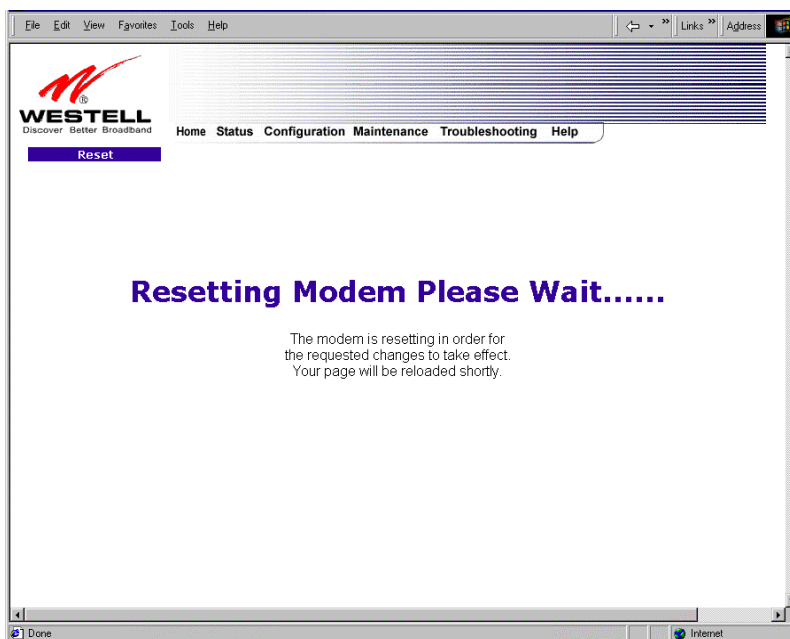

After a brief delay, the home page will be displayed. Confirm that you have a DSL sync and that your PPP session displays **UP**. (Click on the **connect** button to establish a PPP session).

12.4.7 VLAN

The following settings will be displayed if you select **VLAN** from the **Advanced LAN** menu.

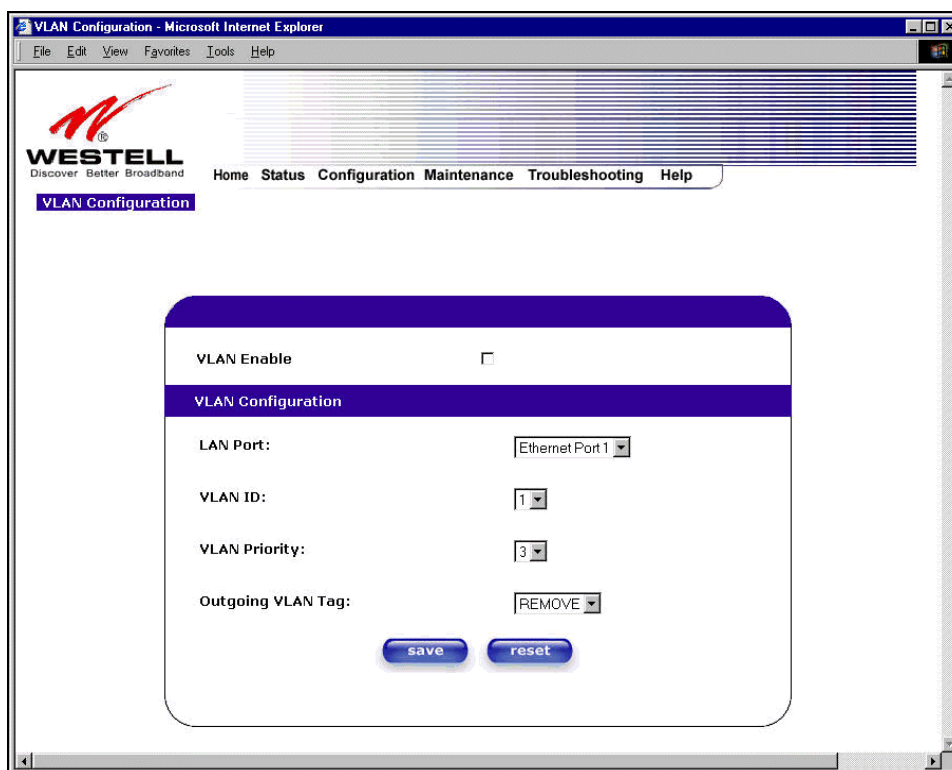

VLAN Configuration - Microsoft Internet Explorer

File Edit View Favorites Tools Help

WESTELL
Discover Better Broadband

Home Status Configuration Maintenance Troubleshooting Help

VLAN Configuration

VLAN Enable ☐

VLAN Configuration

LAN Port: Ethernet Port 1

VLAN ID: 1


VLAN Priority: 3

Outgoing VLAN Tag: REMOVE


save reset

VLAN Enable	Factory Default = DISABLED If this box is checked, VLAN will be Enabled. This will allow VLAN tagging to occur according to the data port's configuration.
LAN Port	This allows you to select the LAN port that you wish to configure. Possible responses are: Ethernet Port 1 Ethernet Port 2 Ethernet Port 3 Ethernet Port 4 USB Port
VLAN ID	This allows you to assign a VLAN ID to the port. Possible responses are: 1 through 8
VLAN Priority	This allows you to set the VLAN priority for the port. Possible responses are: 0 through 7
Outgoing VLAN Tag	This allows you to keep or remove the VLAN tag on the port when data is outgoing.

To enable VLAN click on the box adjacent to the **VLAN Enable** field. A check mark will appear in the box. Click on **save**.

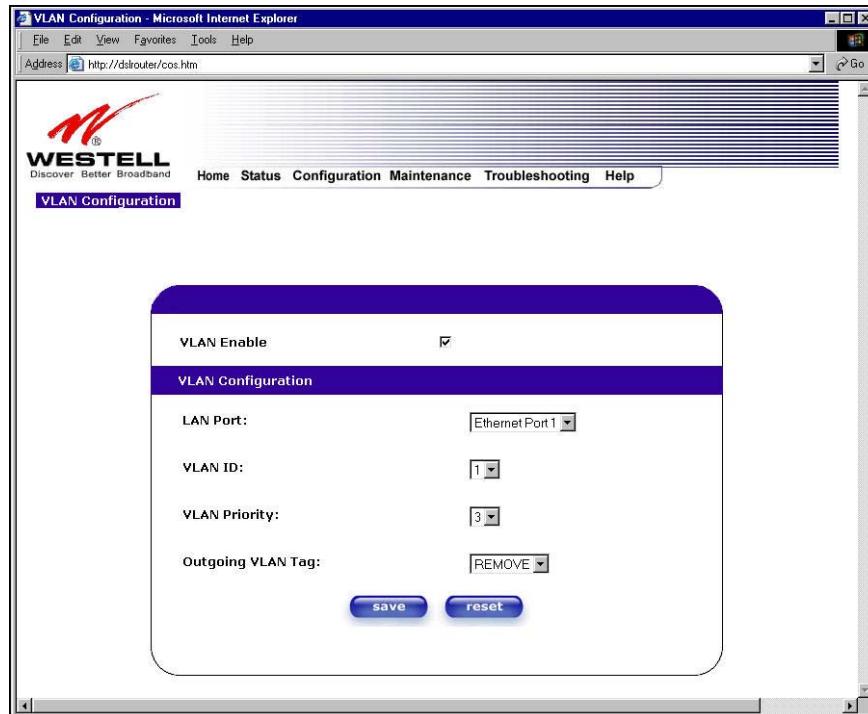


If you clicked on **save**, the following pop-up screen will appear. Click **OK**.

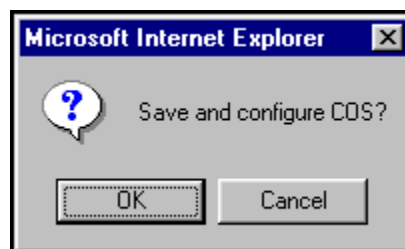

12.5 Advanced WAN


This section explains the configurable features of your Router that are available if you select **Advanced WAN** from the **Configuration** menu.

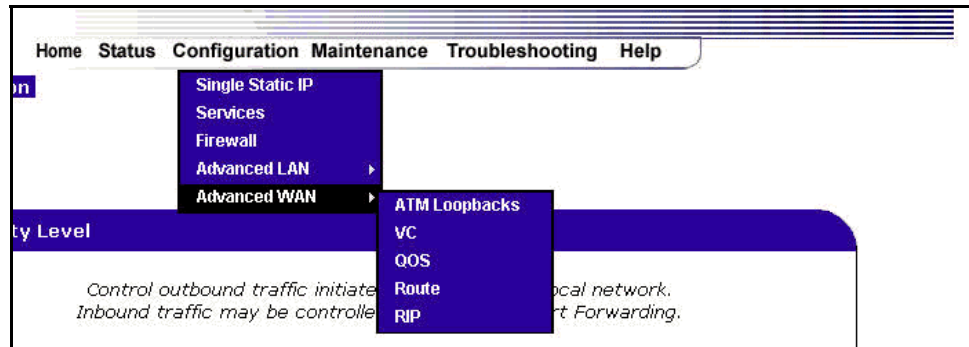

12.5.1 ATM Loopbacks


If you select **ATM Loopbacks** from the **Configuration** menu, the following settings will be displayed.

NOTE: When the **Enable ATM 0/21** box is checked, this feature is enabled. If the box does not display a check mark, this feature is disabled. If you change the setting in this screen, you must click on **save**. **Westell does not recommend that you change this setting.**

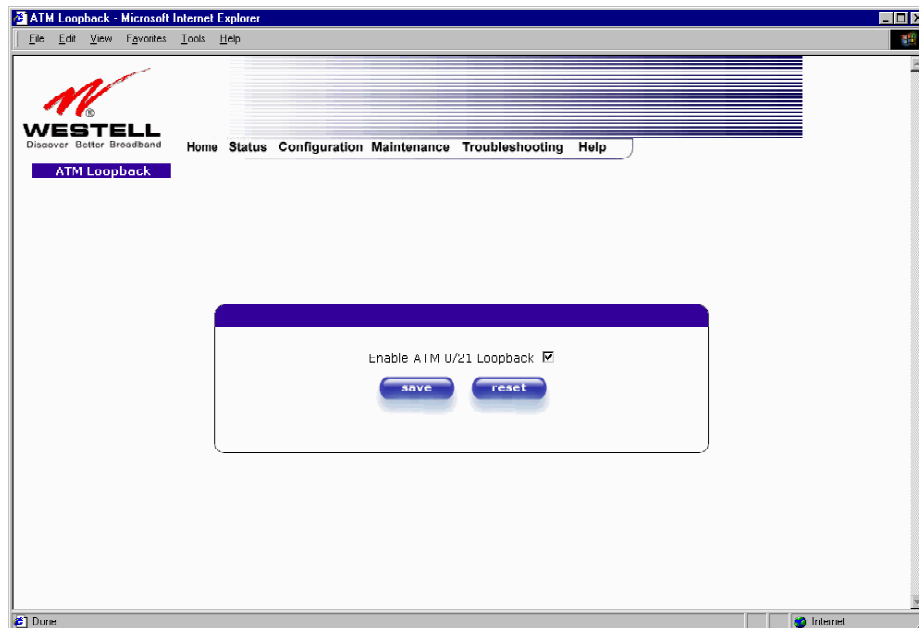

Enable ATM 0/21 Loopback:	Factory Default = ENABLED
	This option enables the 0/21 loopback , which is used by your ISP.


If you changed this setting and clicked on **save**, the following pop-up screen will be displayed. Click on **OK**.

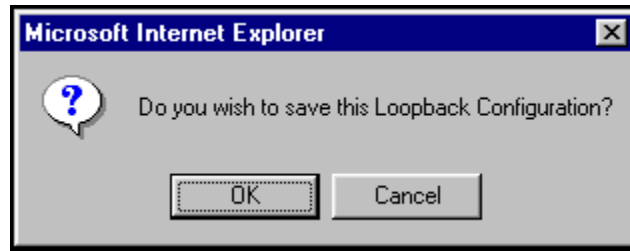

12.5.2 VC Configuration

The following settings will be displayed if you select **VC** from the **Advanced WAN** menu. A Virtual Connection (VC) identifies a connection through the service provider's ATM network to your ISP.

NOTE: The actual information displayed in this screen may vary, depending on the network connection established.

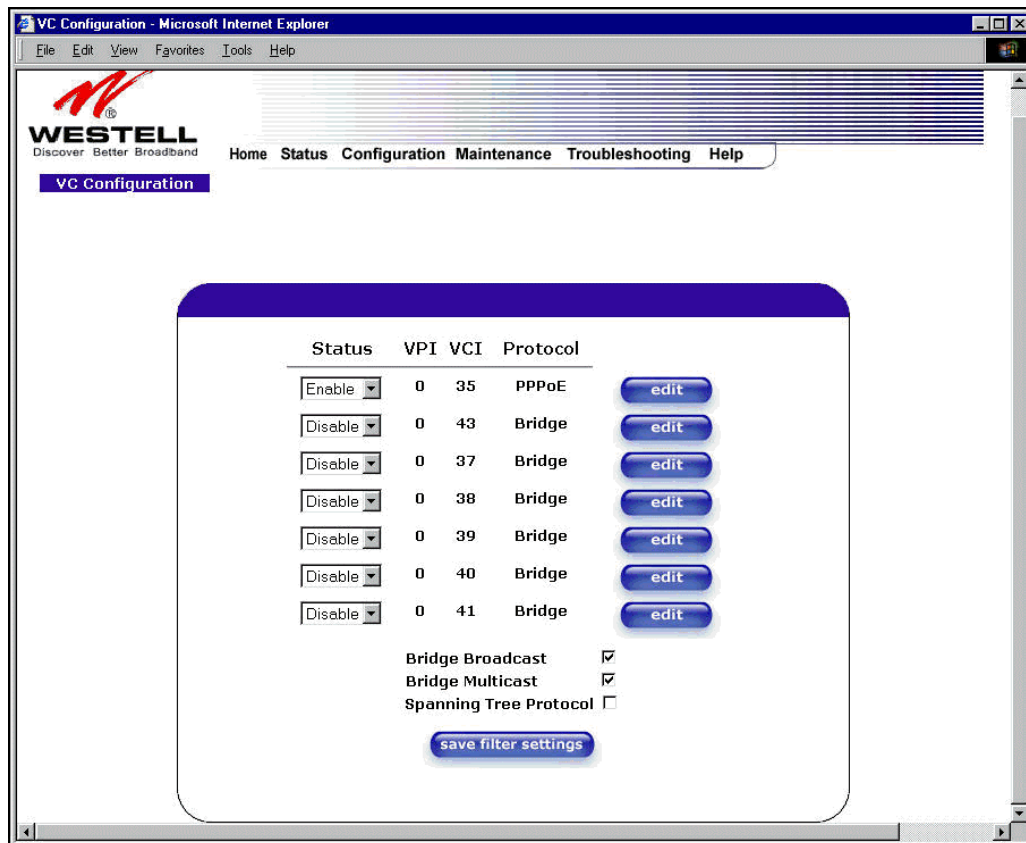

NOTE: If you experience any problems, please reset your Router via the external hardware re-set button or via the procedure defined in section 14.1 (Backup/Restore) under the **Maintenance** menu.

Status	Allows you to enable or disable your VC (Virtual Connection)
VPI	Displays the VPI (Virtual Path Indicator) value for a particular VC, which is defined by your Service Provider.
VCI	Displays the VCI (Virtual Channel Indicator) value for a particular VC, which is defined by your Service Provider.
Protocol	Displays the Protocol for each VC, which is specified by your Service Provider. NOTE: The configuration specified by your Service Provider will determine which Protocols are available to you. PPPoA = Point to Point Protocol over ATM (Asynchronous Transfer Mode) PPPoE = Point to Point Protocol over Ethernet Bridge = Bridge Protocol Classical IPoA = Internet Protocol over ATM (Asynchronous Transfer Mode). This is an ATM encapsulation of the IP protocol.
Bridge Broadcast	Factory Default = CHECKED When this setting is CHECKED, the Router will allow Broadcast IP packets to/from the WAN. When this setting is NOT CHECKED, the router will block Broadcast IP packets to/from the WAN. This setting is only valid if one of the Virtual Channels is configured for Bridge mode.
Bridge Multicast	Factory Default = CHECKED When this setting is CHECKED, the Router will allow Multicast IP packets to/from the WAN. When this setting is NOT CHECKED, the Router will block Multicast IP packets to/from the WAN. This setting is only valid if one of the Virtual Channels is configured for Bridge mode.
Spanning Tree Protocol	Factory Default = DISABLED Spanning Tree Protocol is a link management protocol that provides path redundancy while preventing undesirable loops in the network. For Ethernet network to function properly, only one active path can exist between two stations. When ENABLED, two bridges are used to interconnect the same two computer network segments. Spanning Tree Protocol will allow the bridges to exchange information so that only one of them will handle a given message that is being sent between two computers within the network.

The following settings will be displayed if you select **edit** from your **VC Configuration** menu on any of your existing VC (Virtual Connections) settings. If you change any of your existing VC settings, click on **Set VC**.

NOTE: If you experience any problems, please reset your Router via the external hardware re-set button or via the procedure defined under the **Maintenance** menu.

NOTE: The actual information displayed in this screen may vary, depending on network connection established.

VC 1 Configuration

VPI

VCI

PCR

QoS

Protocol

Status Enabled

VC 1 - PPPoE Settings

IP Address

Gateway

DNS Primary

DNS Secondary

Subnet Mask

MRU Negotiation ☐

LCP Echo Disable ☐

LCP Echo Failures
"Must be between 1 and 30 inclusive."

LCP Echo Duration
"Must be between 5 and 300 seconds inclusive and greater or equal to Retry Duration."

LCP Echo Retry Duration
"Must be between 5 and 300 seconds inclusive."

Tunneling ☒ Enable ☐ Disable

[Help](#)

VC 1 Configuration	
VPI	This setting allows you to change your VPI (Virtual Path Indicator) value for a particular VC, which is defined by your Service Provider.
VCI	This setting allows you to change your VCI (Virtual Channel Indicator) value for a particular VC, which is defined by your Service Provider.
PCR	Factory Default = 100% Peak Cell Rate (PCR)-The maximum rate at which cells can be transmitted across a virtual circuit, specified in cells per second and defined by the interval between the transmission of the last bit of one cell and the first bit of the next.


	<p>This value is a percentage of the current data rate. 100 allows this VC to use 100% of the available bandwidth. 80 allows this VC to use 80% of the available bandwidth.</p>
QoS	<p>Quality of Service, which is determined by your Service Provider.</p> <p>CBR = Constant Bit Rate UBR = Unspecified Bit Rate VBR = Variable Bit Rate</p>
Protocol	<p>The Protocol for each VC, which is specified by your Service Provider.</p> <p>PPPoA = Point to Point Protocol over ATM (Asynchronous Transfer Mode) PPPoE = Point to Point Protocol over Ethernet Bridge = Bridge Protocol Classical IPoA = Internet Protocol over ATM (Asynchronous Transfer Mode). This is an ATM encapsulation of the IP protocol.</p>
Status	The protocol status.
VC x PPPoE Settings	
IP Address	Displays the IP network address that your Router is on.
Gateway	Displays the router IP Gateway address
DNS Primary	Provided by your Service Provider
DNS Secondary	Provided by your Service Provider
MRU Negotiation	<p>Factory Default = DISABLED If ENABLED, the Maximum Received Unit (MRU) would enforce MRU negotiations. (NOTE: enable this option only at your Internet Service Provider's request.)</p>
LCP Echo Disable	<p>Factory Default = Enable If checked, this option will disable the Router LCP Echo transmissions.</p>
LCP Echo Failures	Indicates number of continuous LCP echo non-responses received before the PPP session is terminated.
LCP Echo Retry Duration	The interval between LCP Echo transmissions with responses.
LCP Echo Retry Duration	The interval between LCP Echo after no response.
Tunneling	<p>Factory Default = ENABLE If ENABLED, this option allows PPP traffic to be bridged to the WAN. This feature allows you to use a PPPoE shim on the host computer to connect to the Internet Service Provider, by bypassing the Router's capability to do this. NOTE: Tunneling is available in PPPoE mode only.</p>

NOTE: The values for IP Address, Router, DNS Primary, and DNS Secondary are all "Override of the value obtained from the PPP connection," They default to "0.0.0.0," in which case the override is ignored. Westell recommends that you do not change the values unless your Internet Service Provider instructs you to change them.


If you have made any changes to your VC settings, you need to save them. To save the new VC settings, click on **OK** when asked **Set this PPPoE VC configuration?** If you click on **cancel**, the new VC settings will not be saved.



If you clicked on **OK** in the preceding pop-up screen, the following pop-up screen will appear. The Router must be reset in order for the new configuration to take effect. Click on **OK**.

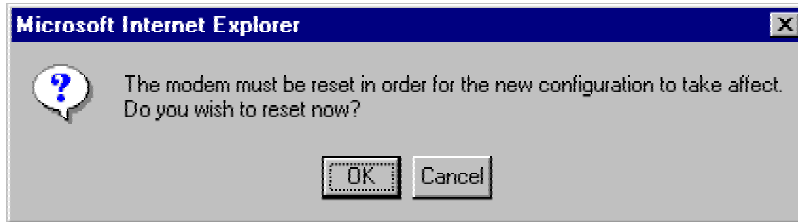


If you clicked on **OK** in the preceding screen, the following screen will be displayed. The Router will be reset and the new configuration will take effect.

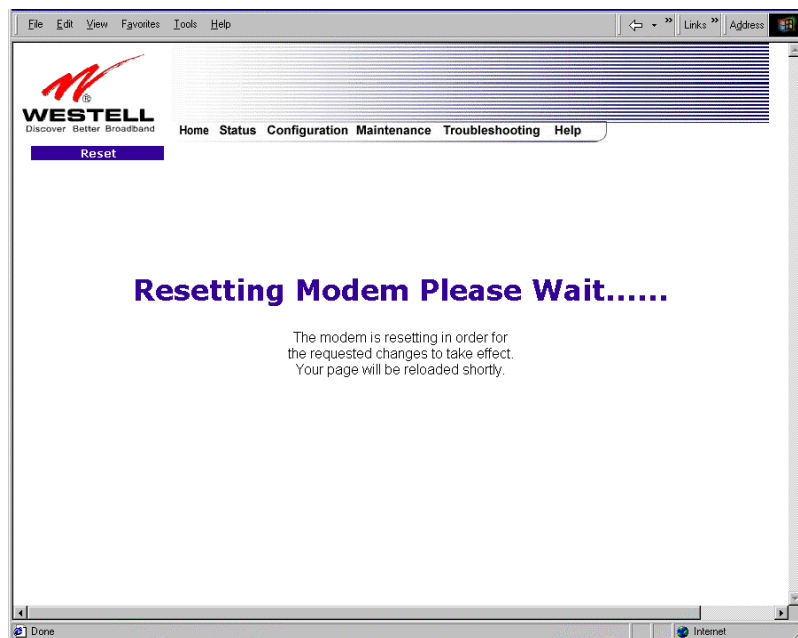


After a brief delay, the home page will be displayed. Confirm that you have a DSL sync and that your PPP session displays **UP**. (Click on the **connect** button to establish a PPP session).

12.5.2.1 Configuring the Router's Protocol Settings


If you want to change your Router's protocol settings, select **VC** from the **Advanced WAN** menu. The **VC Configuration** screen will be displayed. Next, click on the **edit** button adjacent to any of the existing VC (Virtual Connection) settings.

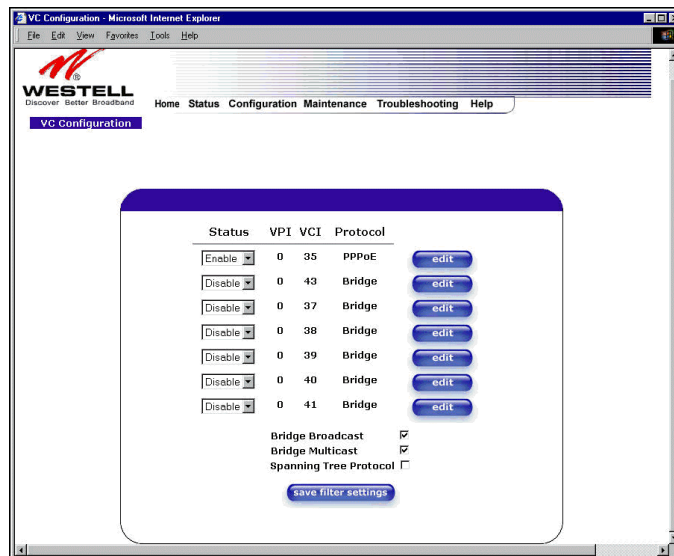

If you clicked on **edit** in the **VC Configuration** screen, the following screen will be displayed. Select a Protocol from the options listed in **Protocol** drop-down arrow.

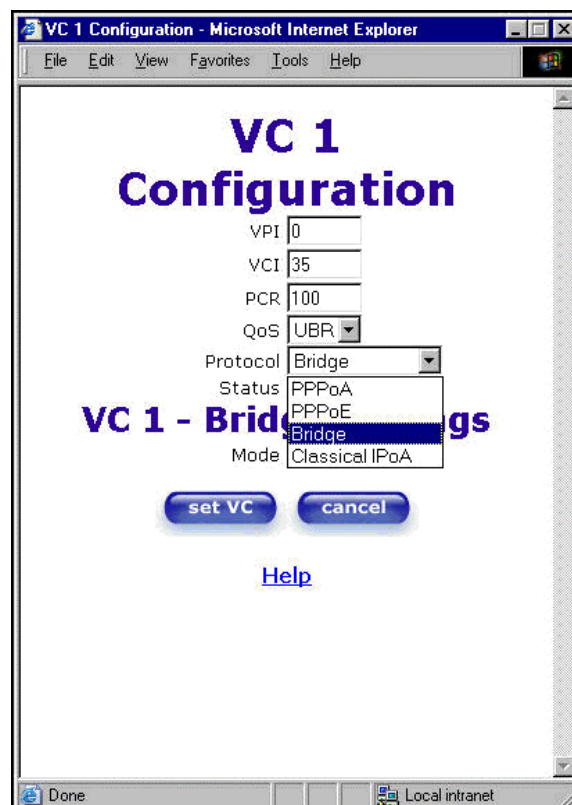


For example, if you selected the **Bridge** protocol, the following screen will be displayed. Select a mode from the options listed in the **Mode** drop-down arrow under **VC 1 – Bridge Settings**.

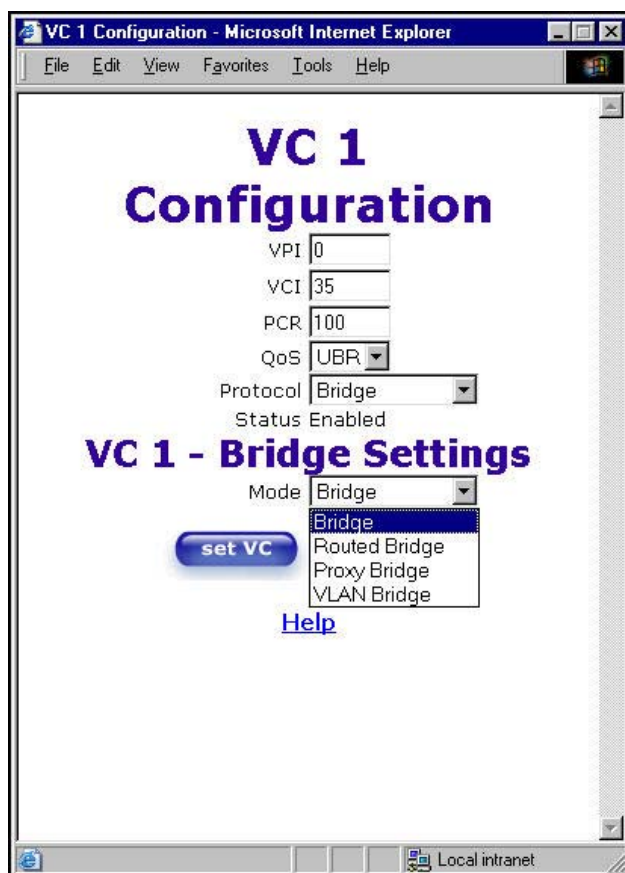

VC 1 Configuration	
VPI	This setting allows you to change your VPI (Virtual Path Indicator) value for a particular VC, which is defined by your Service Provider.
VCI	This setting allows you to change your VCI (Virtual Channel Indicator) value for a particular VC, which is defined by your Service Provider.
PCR	<p>Factory Default = 100%</p> <p>Peak Cell Rate (PCR)-The maximum rate at which cells can be transmitted across a virtual circuit, specified in cells per second and defined by the interval between the transmission of the last bit of one cell and the first bit of the next.</p> <p>This value is a percentage of the current data rate. 100 allows this VC to use 100% of the available bandwidth. 80 allows this VC to use 80% of the available bandwidth.</p>
QoS	<p>Quality of Service, which is determined by your Service Provider.</p> <p>CBR = Constant Bit Rate UBR = Unspecified Bit Rate VBR = Variable Bit Rate</p>
Protocol	<p>The Protocol for each VC, which is specified by your Service Provider.</p> <p>PPPoA = Point to Point Protocol over ATM (Asynchronous Transfer Mode)</p>


	PPPoE = Point to Point Protocol over Ethernet Bridge = Bridge Protocol Classical IPoA = Internet Protocol over ATM (Asynchronous Transfer Mode). This is an ATM encapsulation of the IP protocol.
Status	The protocol status.
VC 1 Bridge Settings	
Mode	Bridge = A bridge is a layer 2 device that connects two segments of the same LAN that use the same protocol such as Ethernet. The Router does not have a WAN IP address in this mode. The client PC will typically get an IP address from a DHCP server in the network or it can be assigned statically.
	Routed Bridge = Routed Bridged Encapsulation (RBE) is the process by which a bridged segment is terminated on a routed interface. Specifically, the router is routing on an IEEE 802.3 or Ethernet header carried over RFC 1483 bridged ATM. RBE was developed to address the known RFC1483 bridging issues, including broadcast storms and security. The Router will get a WAN IP address through DHCP or can be assigned statically. NAT will use the global address assigned to the Router.
	Proxy Bridge = Proxy Bridge is the process in which the Router acts as a proxy ARP agent for a local public subnet. The Router will be assigned an IP address from within that public subnet. The Router will direct all traffic to a router, which is configured statically. The router address must not reside within the Router's assigned public subnet. All traffic will be sent via the router MAC address. The LAN may also have a private NAT'ed network. NAT will use the global address assigned to the Router.
	VLAN = Assigns VLAN tags to individual data ports on the Router.

If you selected the **Routed Bridge** mode under **VC 1- Bridge Settings**, the following screen will be displayed.

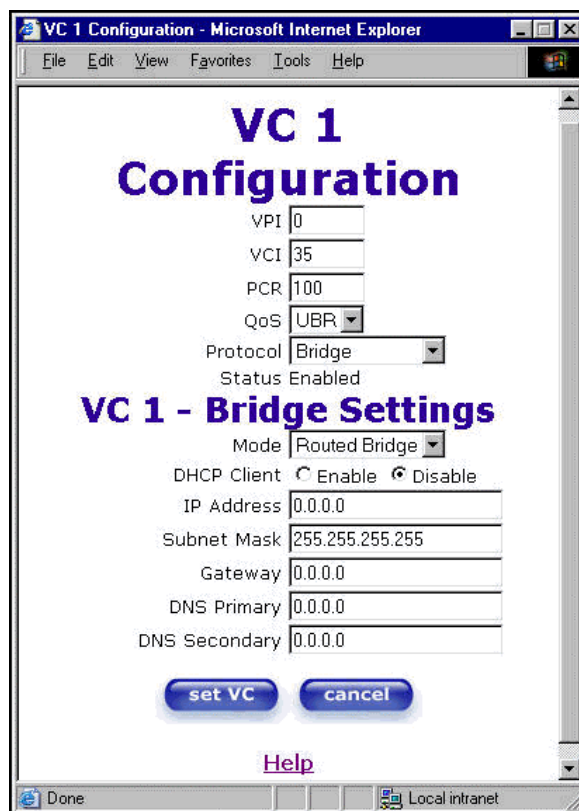


VC 1 - Bridge Settings (Routed Bridge)	
Mode	The Mode you have selected to use with Bridge protocol.
DHCP Client	Selecting a radio button allows you to either Enable or Disable the DHCP Client.
IP Address	Displays the IP network address that your Router is on.
Subnet Mask	This setting specifies the subnet mask to use to determine if an IP address belongs to your local network.
Gateway	Displays the router IP Gateway address.
DNS Primary	Provided by your Service Provider.
DNS Secondary	Provided by your Service Provider.

If you selected **Proxy Bridge** mode under **VC 1 - Bridge Settings**, the following screen will be displayed.

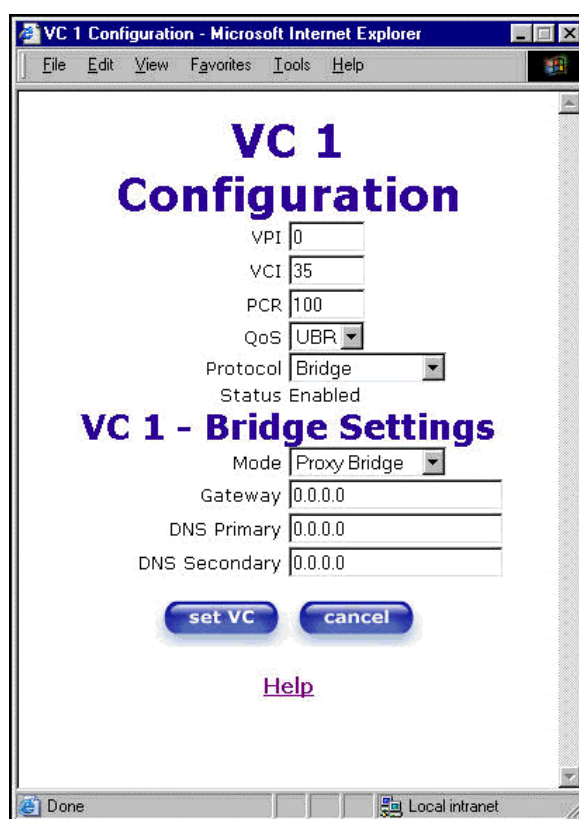

VC 1 - Bridge Settings (Proxy Bridge)	
Mode	The Mode you have selected to use with Bridge protocol.
Gateway	Displays the Gateway IP address.
DNS Primary	Provided by your Service Provider.
DNS Secondary	Provided by your Service Provider.

If you selected **VLAN** mode under **VC 1- Bridge Settings**, the following screen will be displayed.

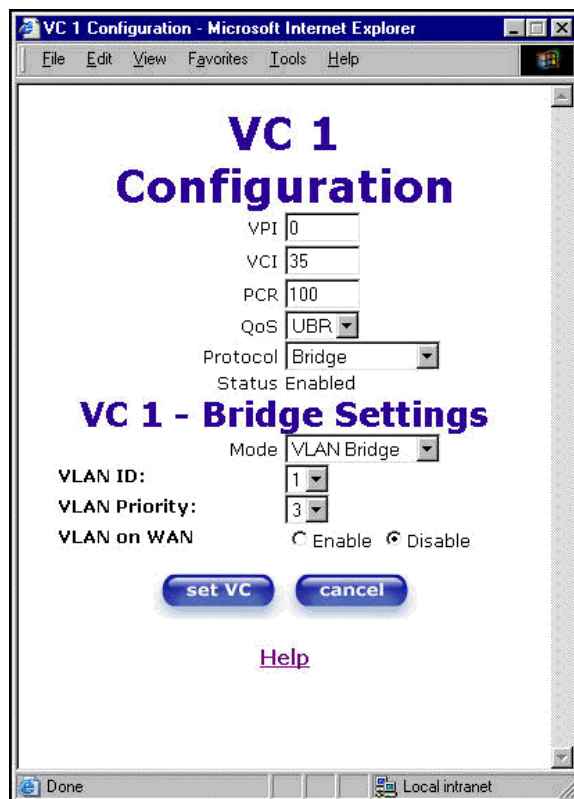

VC 1 Configuration

VPI: 0
VCI: 35
PCR: 100
QoS: UBR
Protocol: Bridge
Status: Enabled

VC 1 - Bridge Settings


Mode: VLAN Bridge
VLAN ID: 1
VLAN Priority: 3
VLAN on WAN: ☐ Enable ☒ Disable

[set VC](#) [cancel](#)

[Help](#)

VC 1 - Bridge Settings (VLAN Bridge)	
Mode	The Mode you have selected to use with Bridge protocol. VLAN is used to assign VLAN tags to individual data ports on the Router.
VLAN ID	Assigns a VLAN ID to the port.
VLAN Priority	This will set the VLAN priority for the port.
VLAN on WAN	Factory Default = DISABLE Selecting Enable allows VLAN tagging to occur according to the data port's configuration.

Once you have selected a **Mode**, click on the **set VC** button to save your VC settings.

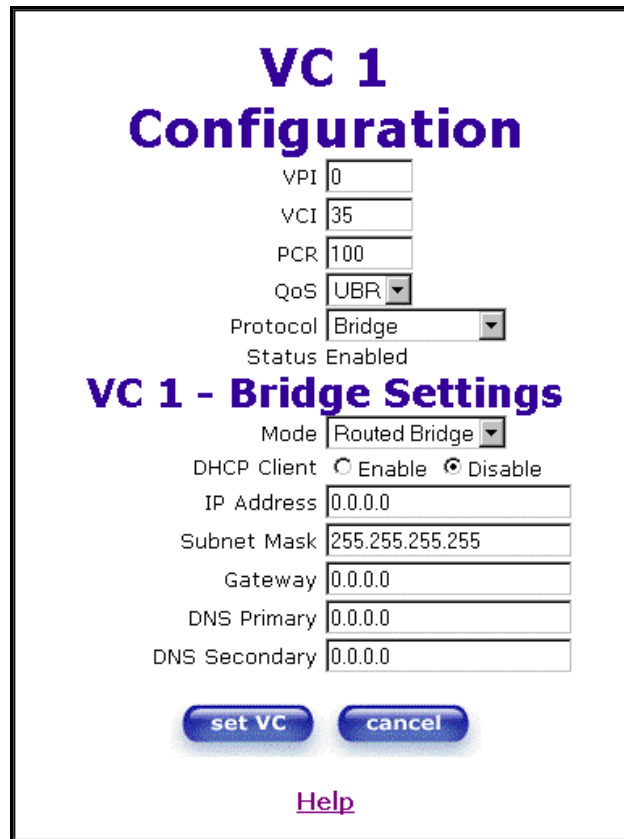

VC 1 Configuration

VPI

VCI

PCR

QoS

Protocol

Status Enabled

VC 1 - Bridge Settings

Mode

DHCP Client ☐ Enable ☒ Disable

IP Address

Subnet Mask


Gateway

DNS Primary

DNS Secondary

[Help](#)


If you clicked on **set VC**, the following pop-up screen will be displayed. Click on **OK**. If you click on **cancel**, the new VC settings will not be saved.

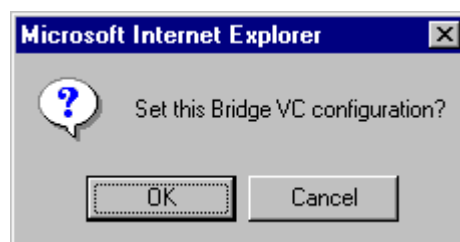

12.5.3 QOS

The following settings will be displayed if you select **QOS** from the **Advanced WAN** menu. Click on **save**.


NOTE: This feature helps ensure data integrity in high-speed transmissions. This feature provides the capability to partition network traffic into multiple priority levels or classes of service. After packet classification, other QoS features can be utilized to assign the appropriate traffic handling policies including congestion management, bandwidth allocation, and delay bounds for each traffic class.

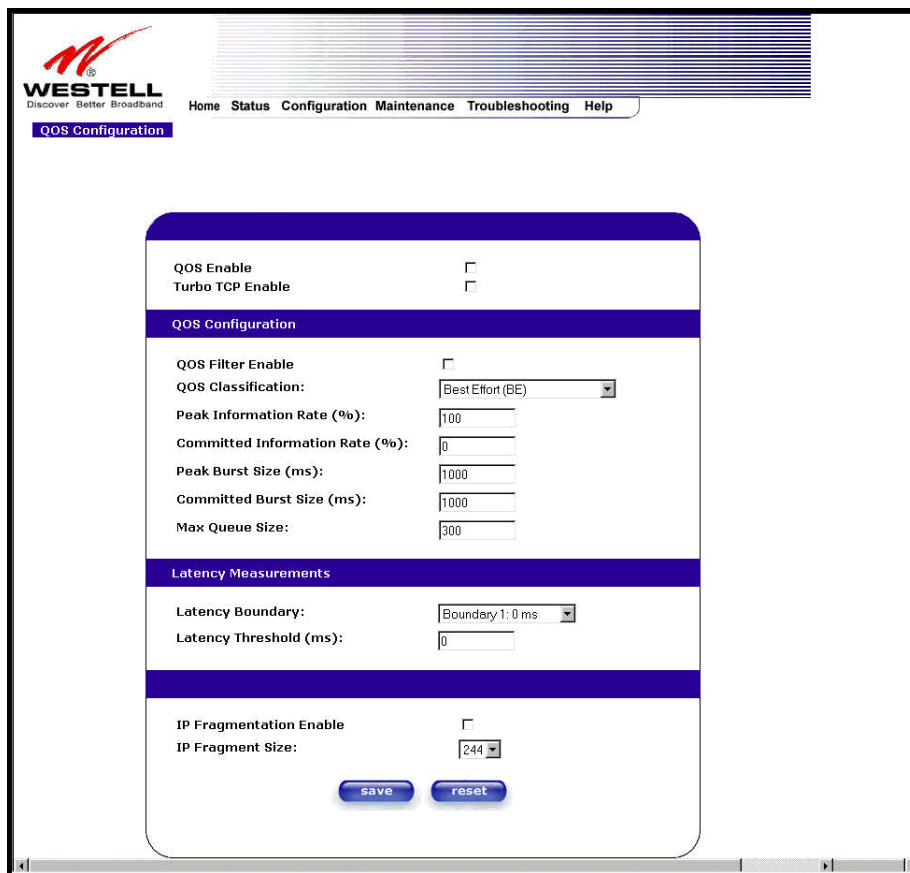

QOS Enable	Factory Default = DISABLED If this box is checked, Quality of Service (QOS) will be Enabled.
Turbo TCP Enable	Factory Default = DISABLED If this box is checked, Turbo TCP will be Enabled.
QOS Configuration	
QOS Filter Enable	Factory Default = DISABLED If this box is checked, this will Enable the QOS filter.
QOS Classification	This feature provides the capability to partition network traffic into multiple priority levels or classes of service. After packet classification, other QoS features can be utilized to assign the appropriate traffic handling policies including congestion management, bandwidth allocation, and delay bounds for each traffic class. Possible responses are: Best Effort (BE) Assured Forwarding (AF1)


	Assured Forwarding (AF2) Assured Forwarding (AF3) Assured Forwarding (AF4) Expedited Forwarding (EF) Network Control (NC)
Peak Information Rte (%)	The maximum allowed rate for this priority, expressed as a percentage of the DSL rate.
Committed Information Rate (%)	The committed rate for this priority, expressed as a percentage of the DSL rate.
Peak Burst Size	The interval in milliseconds for averaging the peak offered rate.
Committed Burst Size	The interval in milliseconds for averaging the committed offered rate.
Max Queue Size	The number of packets that can be queued for this priority.
Latency Measurements	
Latency Boundary	This configures the maximum latency boundary in milliseconds that a specific packet may be delayed by.
Latency Threshold (ms)	This setting configures the maximum latency boundary in milliseconds that a specific packet may be delayed by. Possible responses are: Boundary 1:0 ms Boundary 2:10 ms Boundary 3:30 ms Boundary 4:40 ms Boundary 5:100 ms Boundary 6:1000 ms Boundary 7:3000 ms
IP Fragmentation Enable	Factory Default = DISABLED If this box is checked, IP Fragmentation will be Enabled. If Enabled and packets larger than 1500 bytes total are received, they will be fragmented.
IP Fragment Size	This is the IP Packet Size. Possible responses are: 100, 148, 244, 292, 340, 388, or 436

If you made changes to the **QOS Configuration** and clicked on **save**, the following screen will be displayed. Click on **OK**. This will save your new QOS settings.

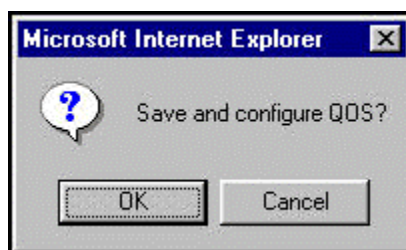

12.5.4 Route

The following settings will be displayed if you select **Route** from the **Advanced WAN** menu.

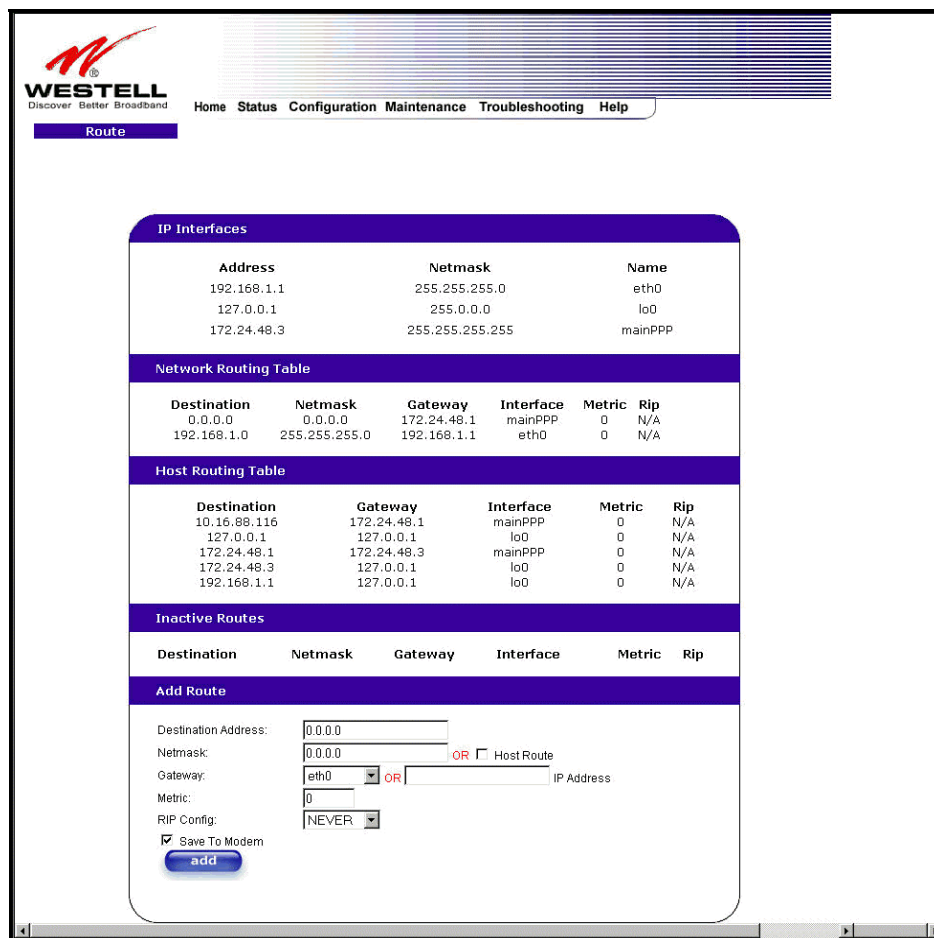

WESTELL
Discover Better Broadband

Home Status Configuration Maintenance Troubleshooting Help

Route

IP Interfaces		
Address	Netmask	Name
192.168.1.1	255.255.255.0	eth0
127.0.0.1	255.0.0.0	lo0
172.24.48.3	255.255.255.255	mainPPP

Network Routing Table					
Destination	Netmask	Gateway	Interface	Metric	Rip
0.0.0.0	0.0.0.0	172.24.48.1	mainPPP	0	N/A
192.168.1.0	255.255.255.0	192.168.1.1	eth0	0	N/A

Host Routing Table					
Destination	Gateway	Interface	Metric	Rip	
10.16.88.116	172.24.48.1	mainPPP	0	N/A	
127.0.0.1	127.0.0.1	lo0	0	N/A	
172.24.48.1	172.24.48.3	mainPPP	0	N/A	
172.24.48.3	127.0.0.1	lo0	0	N/A	
192.168.1.1	127.0.0.1	lo0	0	N/A	

Inactive Routes					
Destination	Netmask	Gateway	Interface	Metric	Rip

Add Route

Destination Address:

Netmask: OR ☐ Host Route

Gateway: OR IP Address

Metric:

RIP Config:

☒ Save To Modem

To add a Route, enter a **Netmask** address, or check the **Host Route** box. Click on the **add** button to establish a static route.

IP Interfaces	
IP Interfaces	The list of active interfaces on the Router and their IP address and mask. Eth0 is the local LAN interface. Lo0 is the loopback interface. MainPPP is the main protocol interface.
Address	The IP interface address.
Netmask	The IP interface netmask address.
Name	The IP interface device name.
Network Routing Table	
Network Routing Table	The list of network routes. These can be either routes for directly connected interfaces or static routes.
Destination Address	The IP address or subnet of the Route.
Netmask	If the Route is a network route, netmask is used to specify the subnet mask. If the Route is a Host route, then the Host Route check box is used.
Gateway	Indicates where to send the packet if it matches this route.

Interface	Indicates where to send the packet if it matches this route.
Metric	The RIP metric to be assigned to this route if and when it is advertised using RIP.
RIP	Indicates whether a static route should be advertised via RIP.
Host Routing Table	
Host Routing Table	The list of host routes. A host route is an IP route with a 32-bit mask, indicating a single destination (as opposed to a subnet, which could match several destinations.)
Destination Address	The IP address or subnet of the Route.
Netmask	If the Route is a network route, netmask is used to specify the subnet mask. If the Route is a Host route, then the Host Route check box is used.
Gateway	Indicates where to send the packet if it matches this route.
Interface	Indicates where to send the packet if it matches this route.
Metric	The RIP metric to be assigned to this route if and when it is advertised using RIP.
RIP	Indicates whether a static route should be advertised via RIP.
Inactive Routes	
Inactive Routes	Static routes whose interface is currently not in service.
Destination Address	The IP address or subnet of the Route.
Netmask	If the Route is a network route, netmask is used to specify the subnet mask. If the Route is a Host route, then the Host Route check box is used.
Gateway	Indicates where to send the packet if it matches this route.
Interface	Indicates where to send the packet if it matches this route.
Metric	The RIP metric to be assigned to this route if and when it is advertised using RIP.
RIP	Indicates whether a static route should be advertised via RIP.
Add Route	
Add Route	This is used to add a new static route in the Router.
Destination Address	The IP address or subnet of the Route.
Netmask/ Host Route	If the Route is a network route, netmask is used to specify the subnet mask. If the Route is a Host route, then the Host Route check box is used.
Gateway/IP Address	The interface to use for sending the packet, if it matches this route. (Only active gateways can be used to create a static route.)
Metric	The RIP metric to be assigned to this route if and when it is advertised using RIP.
RIP Conf	Determines whether or not to advertise the static route, using RIP. (RIP must also be enabled before the route will be advertised.)
Save to Modem	If checked, then the route will be made permanent by saving it to flash memory. If not checked, the route will disappear the next time the Router restarts.


12.5.5 RIP

The following details will be displayed if you select **RIP** from the **Advanced WAN** menu. If you change any settings in this screen, click on **save**.

RIP Enable	Factory Default = DISABLED If this box is checked, RIP will be Enabled (turned ON).
RIP Configuration	
Interface Type	LAN: Select this if you are configuring RIP for the LAN side. WAN: Select this if you are configuring RIP for the WAN side. (WAN side is receive only.)
Receive	The version of RIP to be accepted. Possible responses are: None RIPv1 RIPv2 RIPv1 or RIPv2
Transmit	The version of RIP to be transmitted. (WAN side RIP never transmits) Possible responses are: None RIPv1 RIPv1 Compatible RIPv2
RIPv2 Authentication Mode	If using RIP V2, you must select the type of authentication to use. Possible responses are: None

	Clear Text MD5 (If MD5 authentication, the password)
Advanced	
Default Gateway	Factory Default = DISABLED If this box is check (Enabled), this feature will determine whether the Router advertises itself as a gateway (i.e., the default route)
Border Gateway Filtering	Factory Default = ENABLED If this box is unchecked (Disabled), the Router will not summarize subnets into a single route before advertising.
RIP Timer Rate	Indicates how often to update the local routing table.
RIP Supply Interval	Indicates how often to advertise routes to neighbors.
RIP Expire Time	Indicates how long routes received from neighbors become invalid, if no refresh of the route is received.
RIP Garbage Collection Time	Indicates how long to advertise invalid routes after they have expired.

If you changed any settings in the **RIP Configuration** screen and clicked on **save**, the following screen will be displayed. Click on **OK** to save your new RIP settings.

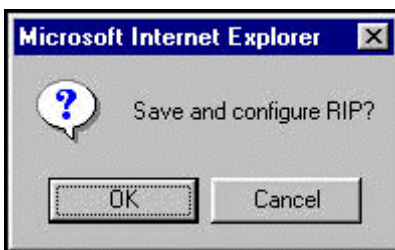


13. ADVANCED SERVICE CONFIGURATION

You can set up additional Service Configuration options for your Router that allow you to enter the port forwarding and trigger ports ranges of your choice. Go to **Configuration** at the homepage menu and select **Services**.

When you click on **define custom service** in the **Service Configuration** screen, the **Custom Service** screen will guide you through the steps of creating an advanced NAT service entry via the **define custom service** button.


NOTE: Westell strongly recommends that you do not change any values in this section. If you experience any problems, please reset your Router via the external hardware re-set button or the procedure defined under the **Maintenance** menu.

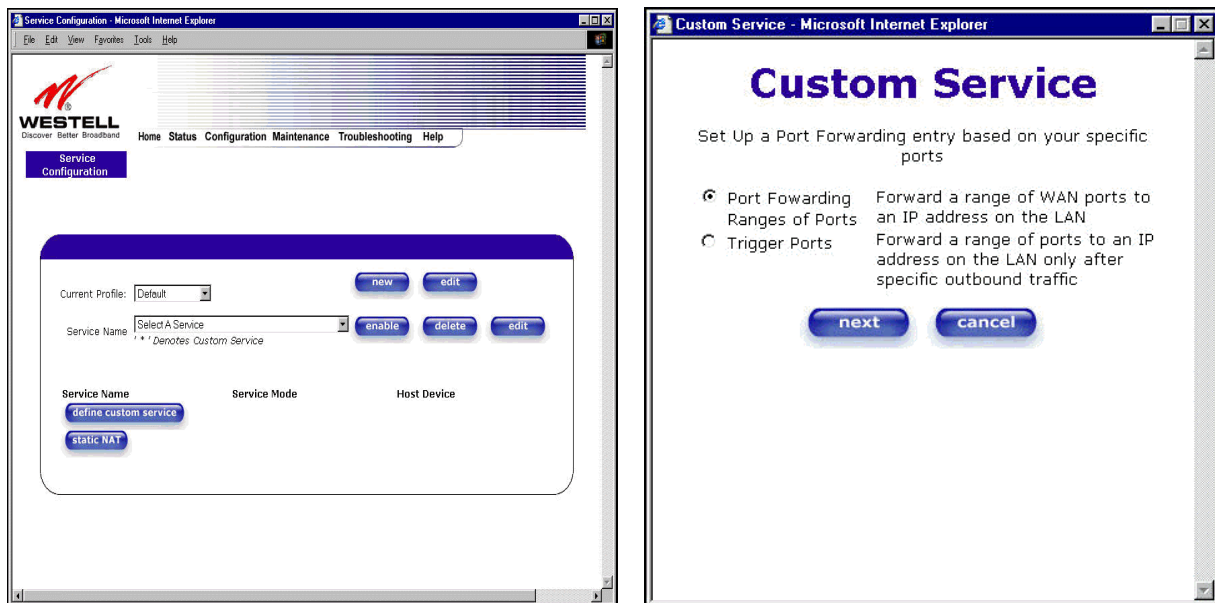

Port Forwarding Ranges of Ports	This option allows you to forward a range of WAN ports to an IP address on the LAN.
Trigger Ports	This option allows you to forward a range of ports to an IP address on the LAN only after specific outbound traffic.

13.1 Port Forwarding Ranges of Ports

To select **Port Forwarding Ranges of Ports**, click on **define custom service** from the **Service Configuration** screen, and then select **Port Forwarding Ranges of Ports** from the **Custom Service** screen. Click on **Next**. The **Port Range** screen will be displayed. Enter your values in the **Global Port Range** fields and click **next** to continue.

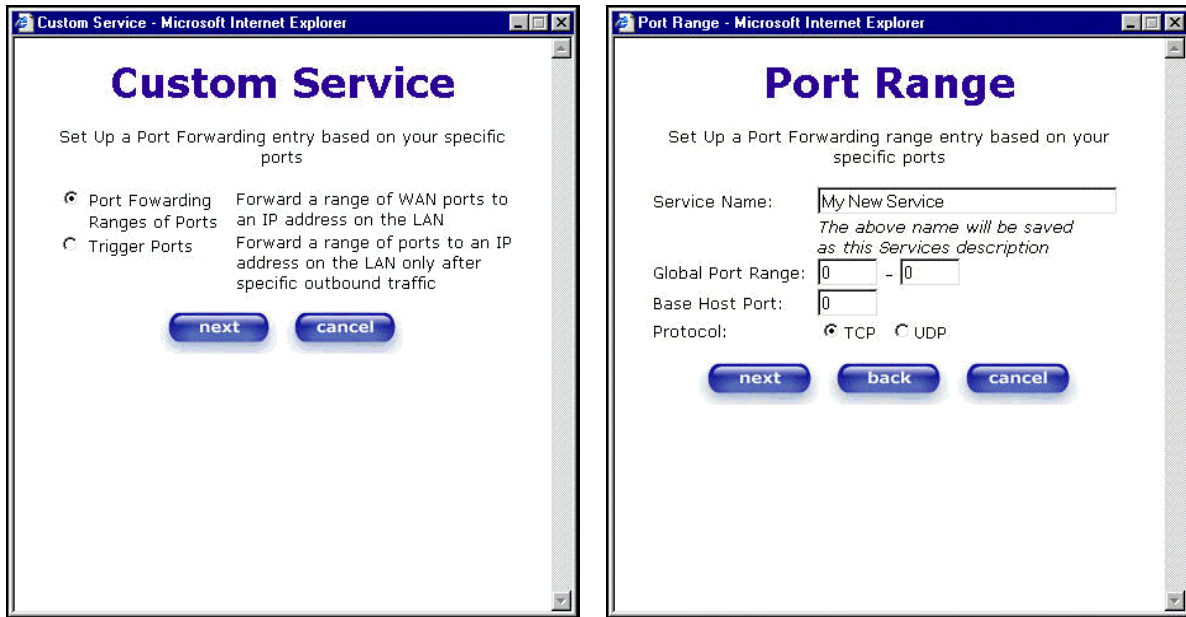

Custom Service

Set Up a Port Forwarding entry based on your specific ports

☒ Port Forwarding Ranges of Ports Forward a range of WAN ports to an IP address on the LAN
☐ Trigger Ports Forward a range of ports to an IP address on the LAN only after specific outbound traffic

Port Range

Set Up a Port Forwarding range entry based on your specific ports

Service Name:
The above name will be saved as this Services description


Global Port Range: -

Base Host Port:

Protocol: ☒ TCP ☐ UDP

13.2 Adding Port Forwarding Ports

If you made changes in the **Port Range** screen and clicked on **next**, the following screen will be displayed. Click on **close** to accept the changes, or click on **add** to go back to **Port Range** screen and enter additional port range values. You can repeat this step for each range of ports that you want to add (up to 62 port forwarding ranges). When you are finished adding ports to the Global Port Range, you must click on **close** to accept the information you have entered and return to the **Service Configuration** screen.

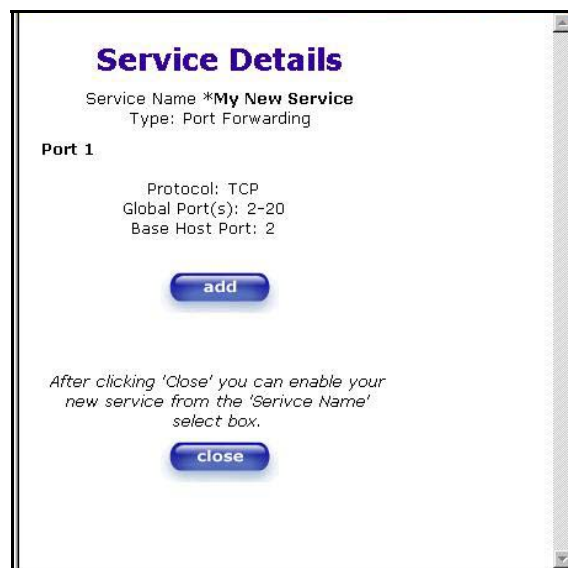

Service Details

Service Name *My New Service
Type: Port Forwarding

Port 1


Protocol: TCP
Global Port(s): 2-20
Base Host Port: 2

After clicking 'Close' you can enable your new service from the 'Service Name' select box.

Service Name	The NAT service for which you are configuring Port Forwarding.
Type	The type of NAT service configuration you selected.
Protocol	The type of Protocol that is used to run this NAT service. TCP- Transmission Control Protocol. UDP-User Datagram Protocol (UDP).
Local IP Address	If a static IP address has been assigned, it will be displayed here.
Base Host Port	The port on the WAN that will host the NAT service selected.

13.3 Port Forwarding Trigger Ports

To select **Port Forwarding Trigger Ports**, click on **define custom service** from the **Service Configuration** screen, and then select **Trigger Ports** from the **Custom Service** screen. Click on **next**. The follow settings will be displayed in the **Trigger Ports** screen. Enter your values in the **Local 'Trigger' Port Range** fields and click on **next** to continue.

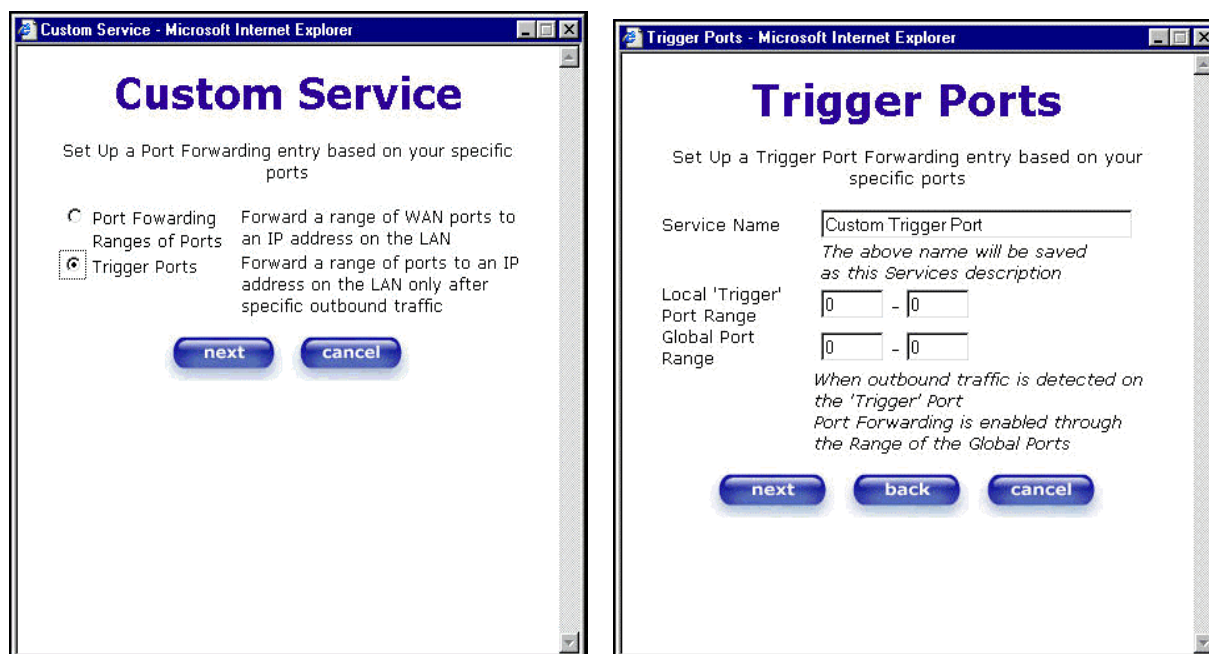

Custom Service

Set Up a Port Forwarding entry based on your specific ports

☐ Port Forwarding Ranges of Ports Forward a range of WAN ports to an IP address on the LAN
☒ **Trigger Ports** Forward a range of ports to an IP address on the LAN only after specific outbound traffic

next **cancel**

Trigger Ports

Set Up a Trigger Port Forwarding entry based on your specific ports

Service Name
The above name will be saved as this Services description

Local 'Trigger' Port Range -
 Global Port Range -


When outbound traffic is detected on the 'Trigger' Port Port Forwarding is enabled through the Range of the Global Ports

next **back** **cancel**

Service Name	The NAT service you selected.
Local Trigger Port Range	The local LAN side TCP/UDP port.
Global Port Range	The WAN side TCP/UDP port range.


13.4 Adding Local Trigger Ports

If you made changes in the **Local ‘Trigger’ Port Range** screen and clicked **next**, the following screen will be displayed. Click on **close** to accept the changes, or click on **add** to go back to the **Trigger Ports** screen and enter additional port range values. You can repeat this step for each port range that you want to add (up to 10 trigger ports). When you are finished adding ports to the Local ‘Trigger’ Port Range, you must click on **close** to accept the information you have entered and to return to the **Service Configuration** screen.

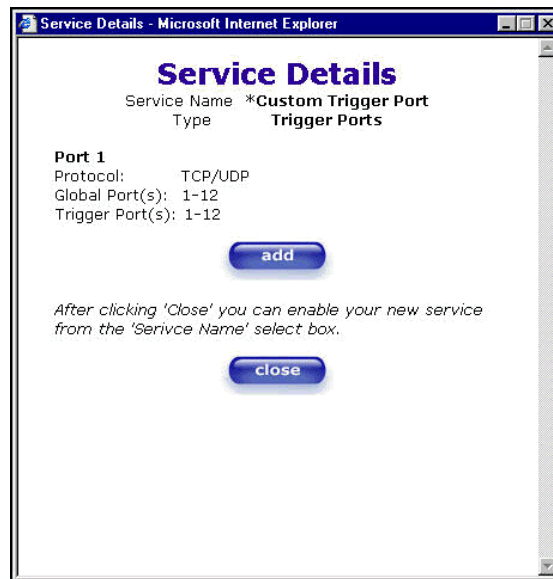

13.5 Static NAT


Static NAT will allow you to configure your Router to work with the special NAT services.

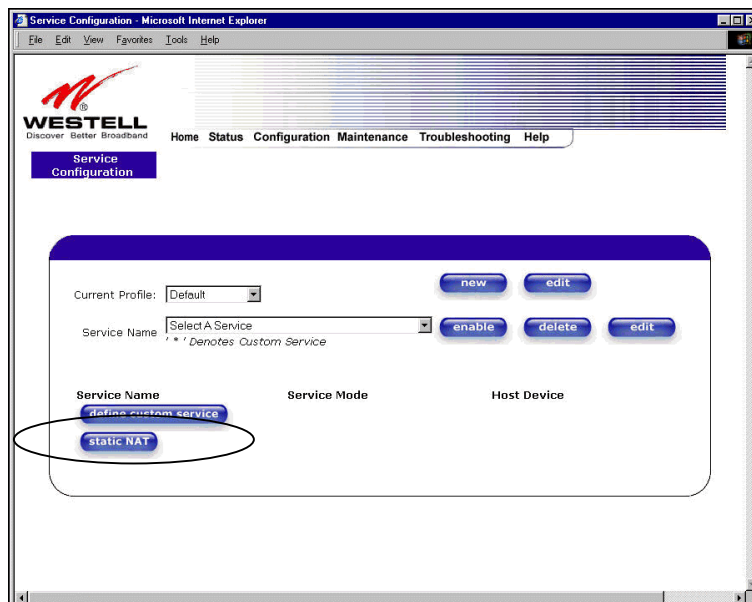


13.6 Enabling Static NAT

At the **Service Configuration** screen, select the Router's default account profile from the **Current Profile** drop-down box. Click on the **static NAT** button.


NOTE: In the following screen, the default account profile is labeled **Default**. However, if you have renamed the default account profile, you must select the name you created as the default.

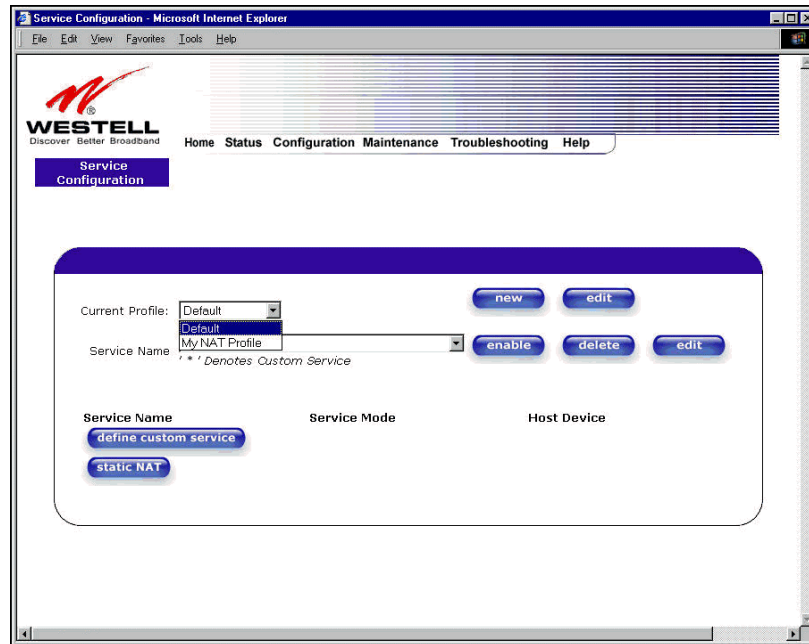

If you clicked on the **static NAT** button in the **Service Configuration** screen, the following screen will be displayed. Select your device from the **Static NAT Device** drop-down arrow, or type the IP address of the device in the field labeled **IP Address**. Click on **enable**. This will automatically enable the Static NAT feature for that device.

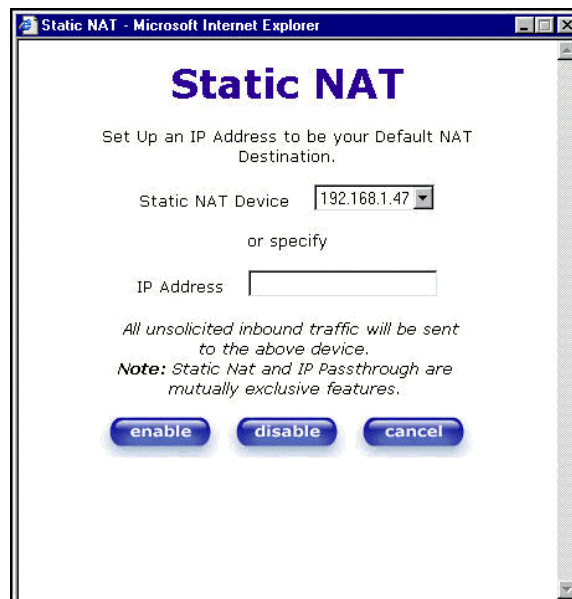


This following screen shows Static NAT enabled.

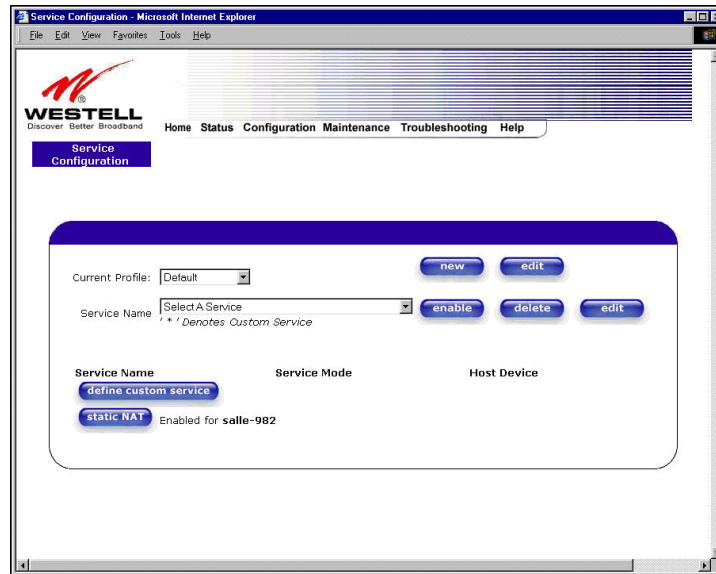


13.7 Disabling Static NAT


If you clicked on **static NAT** in the **Service Configuration** screen, the following screen will be displayed, select a device name from the **Static NAT Device** drop-down arrow, or type the IP address of the device in the field labeled **IP Address**. Click on **disable**. This will automatically disable the Static NAT feature for that device.

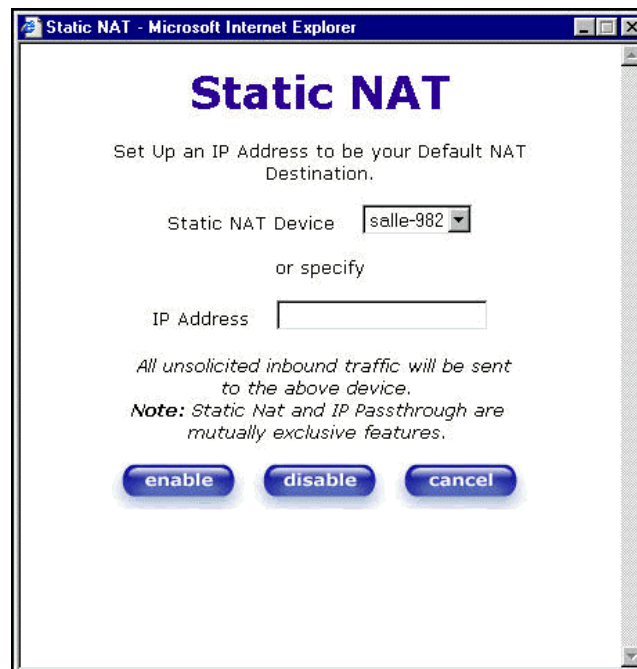

The following screen shows Static NAT disabled (No device is displayed in the field adjacent to the **static Nat** button.)

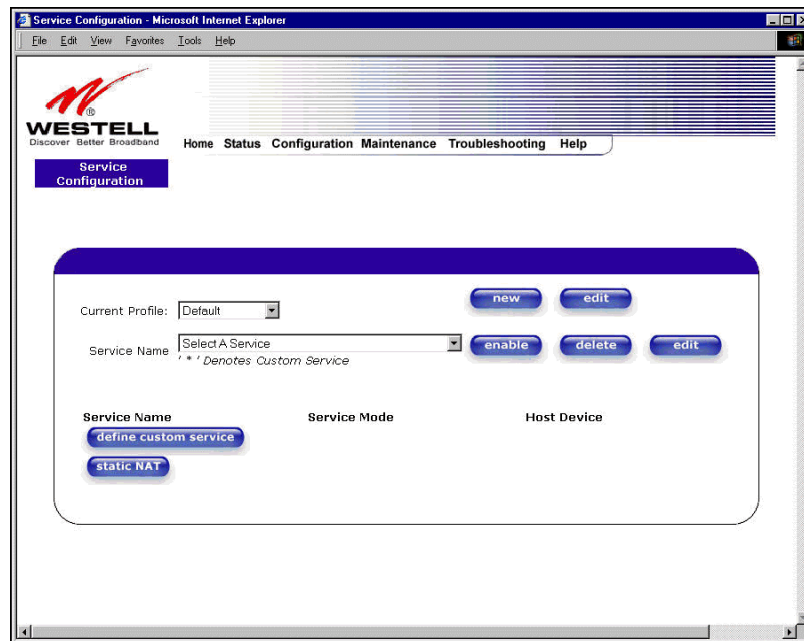


14. MAINTENANCE

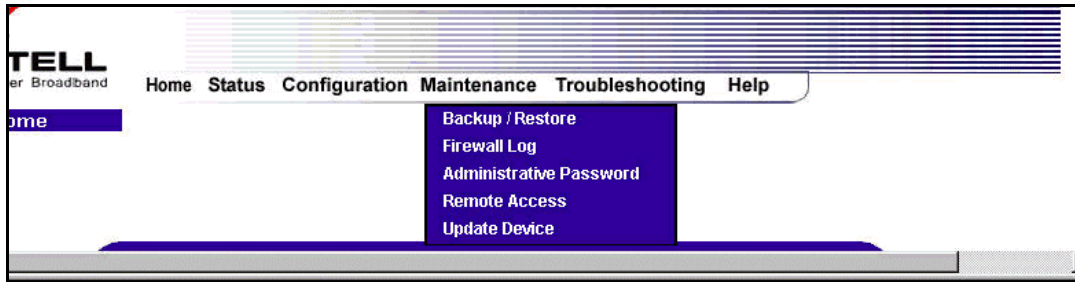

14.1 Backup/Restore

The following settings will be displayed if you select **Backup/Restore** from the **Maintenance** menu.

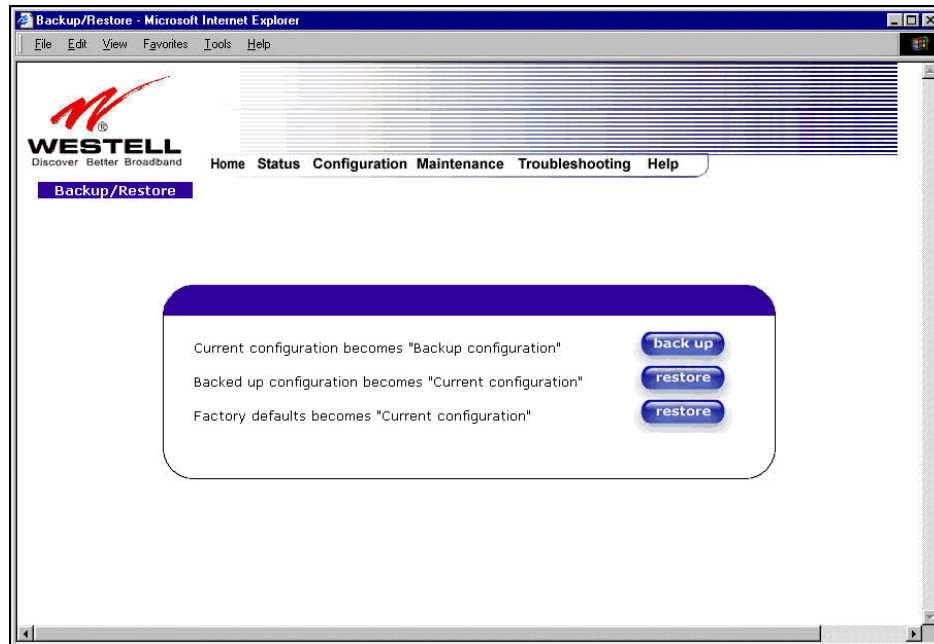


NOTE: Settings are stored in a separate area of flash, not to an external source.

Current configuration becomes Backup Configuration	Select this button if you want to store all of the current configuration data such that it can be recalled later.
Backed up configuration becomes Current configuration	Select this button if you want to retrieve the last back up copy of all configuration parameters and make these values current.
Factory default becomes Current configuration	Select this button if you want set all user configurable parameters back to the factory default.

14.2 Firewall Log


The following settings will be displayed if you select **Firewall Log** from the **Maintenance** menu.

This screen is an advanced diagnostics screen. It alerts you of noteworthy information sent to your Router from the Internet. The screen can contain 1000 entries, but a maximum of 50 entries are displayed at a time. Once 1000 entries have been logged, the oldest entry is removed to make space for the new entries as they occur. The following settings are displayed.

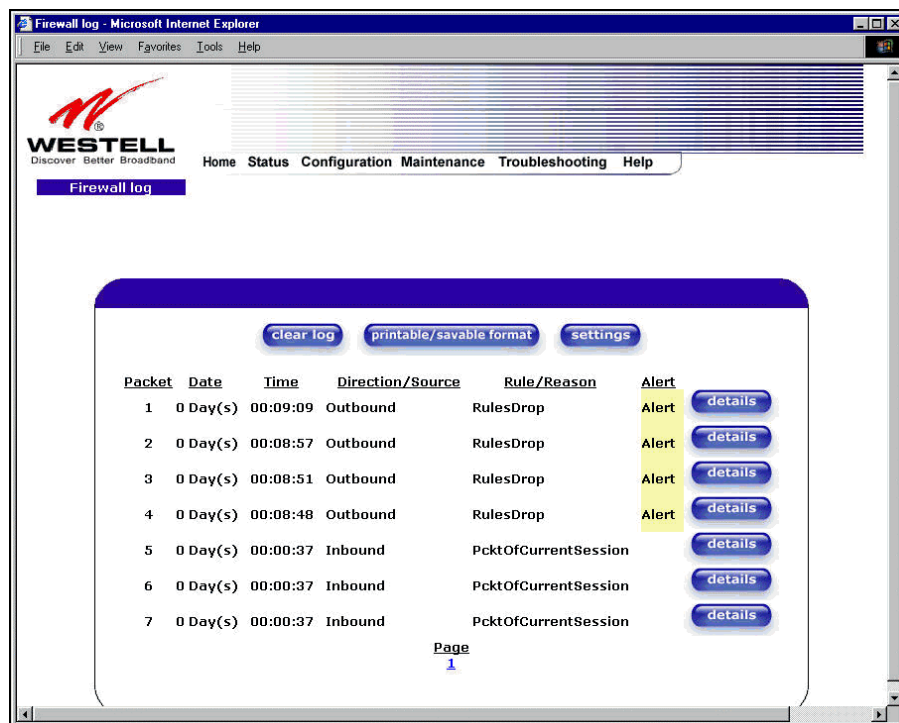

Packet	The packet number.
Date	The number of days passed since that the packet was sent.
Time	The time that the packet was sent.
Direction/Source	The direction of transmission.
Rule/Reason	The internal rule that caused the logged event. The internal rule is set up under Firewall rules.
Alert	Displays a description of the logged event.

If you clicked on **details** in the **Firewall Log** screen, the **Packet Details** screen will be displayed. Click on **close**.

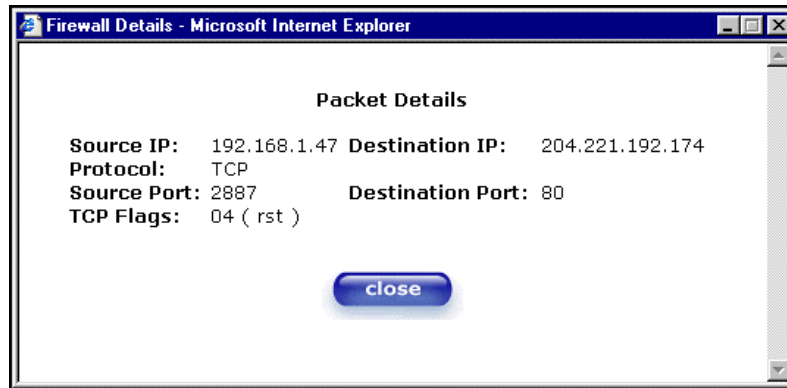


To clear the Firewall log, click **clear log** in the **Firewall Log** screen. The following pop-up screen will be displayed. Click **OK** when asked "Do you wish to clear the Firewall log file?" If you click **Cancel**, the firewall log will not be cleared.



To obtain a printable format of the Firewall Log, at the **Firewall Log** screen, click **Printable/Savable Format**. This will allow you to send a copy of the Firewall log to your designated printer.

14.3 Administrative Password

The following settings will be displayed if you select **Administrative Password** from the **Maintenance** menu. After you enter your data into the appropriate settings, click on **change**.

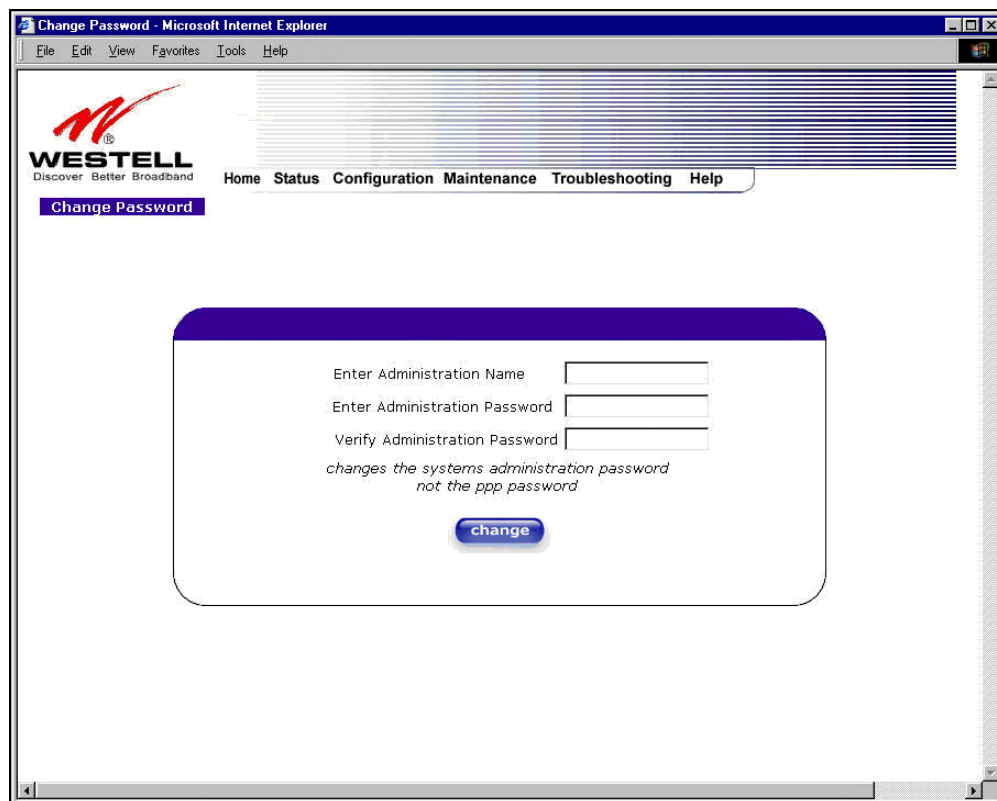


Enter Administrative Name NOTE: This changes the Systems Administrator password not the PPP password.	Type the name of your network administrative.
Enter Administrative Password	Type your network administrator's password.
Verify Administrative Password	Re-type your network administrator's password.

14.4 Remote Access


The following screen will appear if you select **Remote Access** from the **Maintenance** menu. To enable Remote Access, type in a password and click the **enable remote access** button.

NOTE: The password should be at least 4 characters long and should not exceed 32 characters. Do not type a blank space or asterisks in the Password field. The password is also case sensitive.

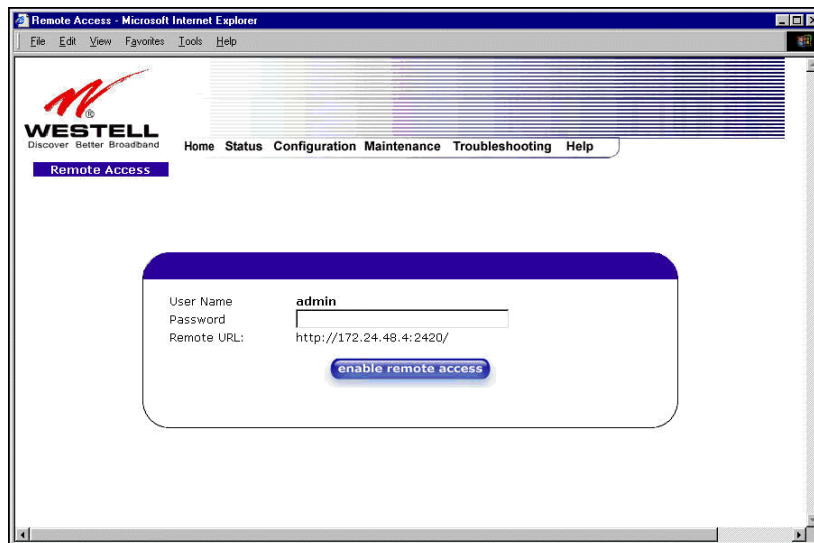

User Name	Displays your current User Name (Static field)
Password	Field for entering your password
URL	Displays the IP address of the remote management router


The following screen displays a message that the remote access is currently enabled. After 20 minutes of inactivity, or on reboot, remote access will be automatically disabled. To disable remote access, click on the **disable remote access** button.

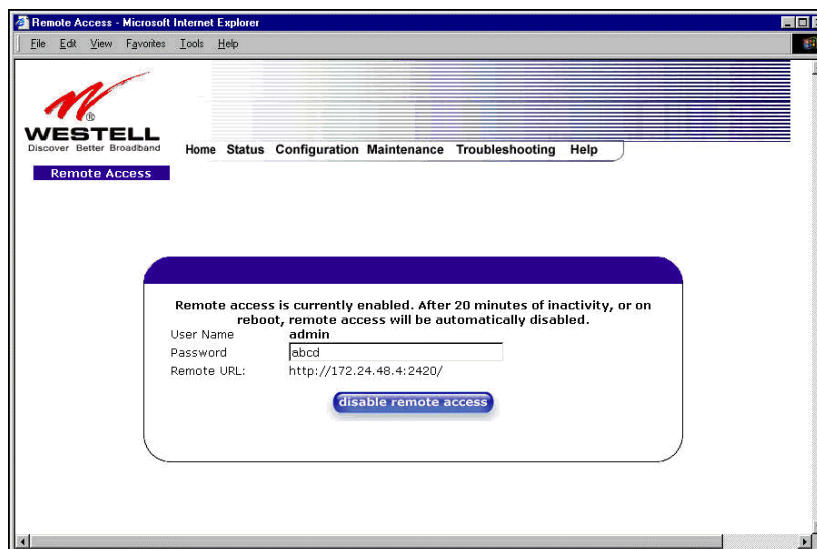

14.5 Update Device

The following screen will be displayed if you click on **Update Device** from the **Maintenance** menu. This screen is used to update the firmware that controls the operation of the DSL Router. The updated firmware may be loaded from either a file that is located on your PC's hard drive or from update files stored on an Internet server.

NOTE: The configurable settings of your Router may be erased during the update process.

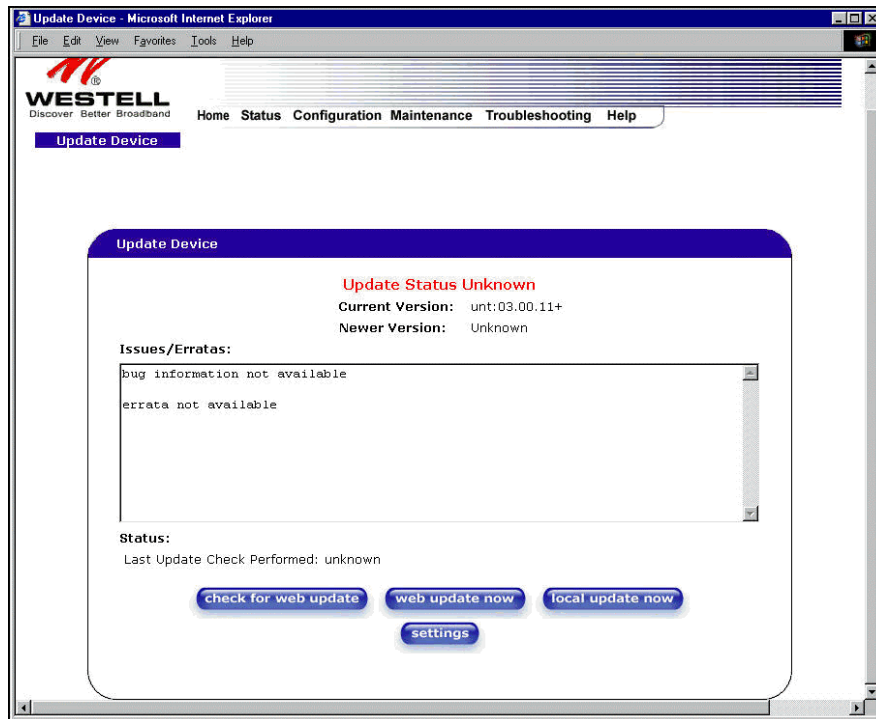


Click on the **check for web update** button in the **Update Device** screen to check the web for possible software updates. This screen will retrieve the software update file and display any available update information. You must be connected to the Internet to use this option.



NOTE: If you click on check for web update and the page returns a “page not found” message, this indicates that the software update file is not available. Go back to the previous screen to continue.

Click on the **web update now** button in the **Update Device** screen to download the software update file and automatically update the Router firmware if an update is available and applicable. You must be connected to the Internet to use this option.


If you click on the **settings** button in the **Update Device** screen, the following screen will appear. This screen displays the location of the software update file.

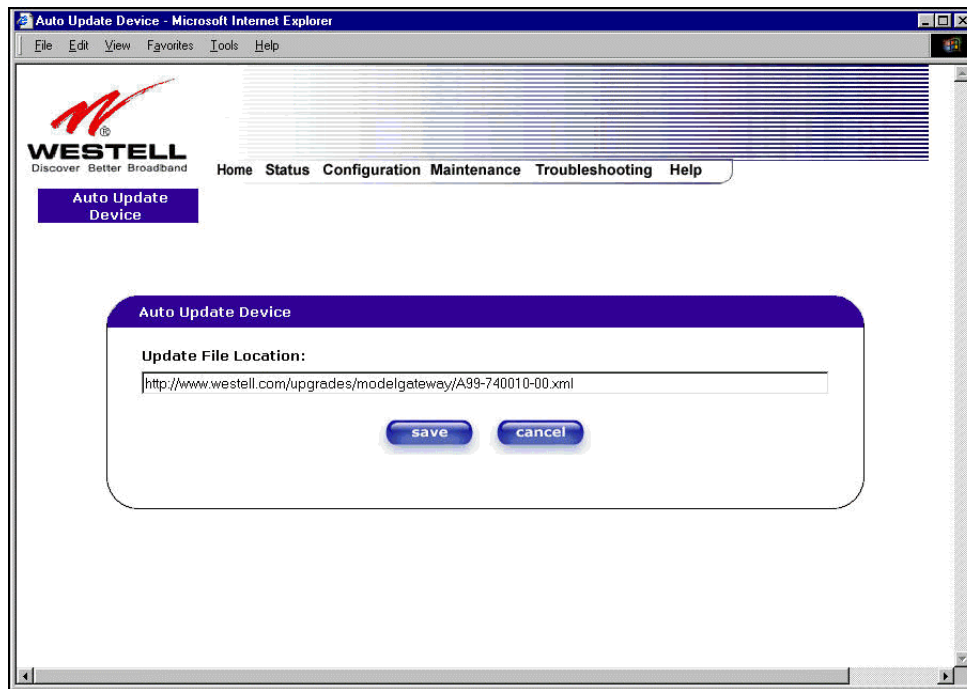


Click on the **local update now** button in the **Update Device** screen to select the upgrade file from your PC's hard drive. This screen allows you to upgrade the software on your Router. Click **Browse...** and go to the location where the upgrade file is stored.

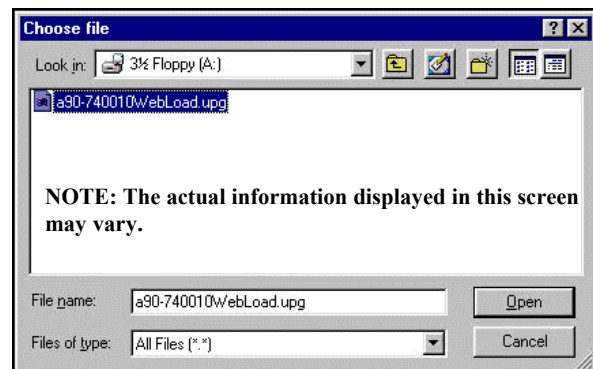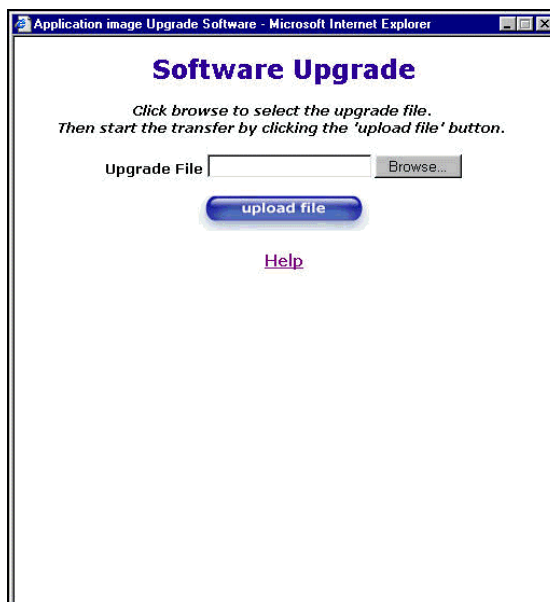


Select the appropriate upgrade file from your browser. The file name will appear in the field labeled **Upgrade File**. Click on **upload file**.

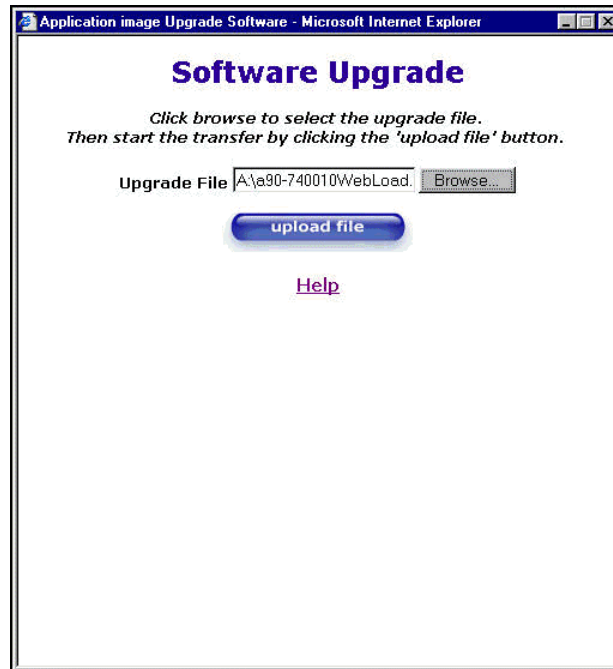


This screen shows that the file is being uploaded to your Router.

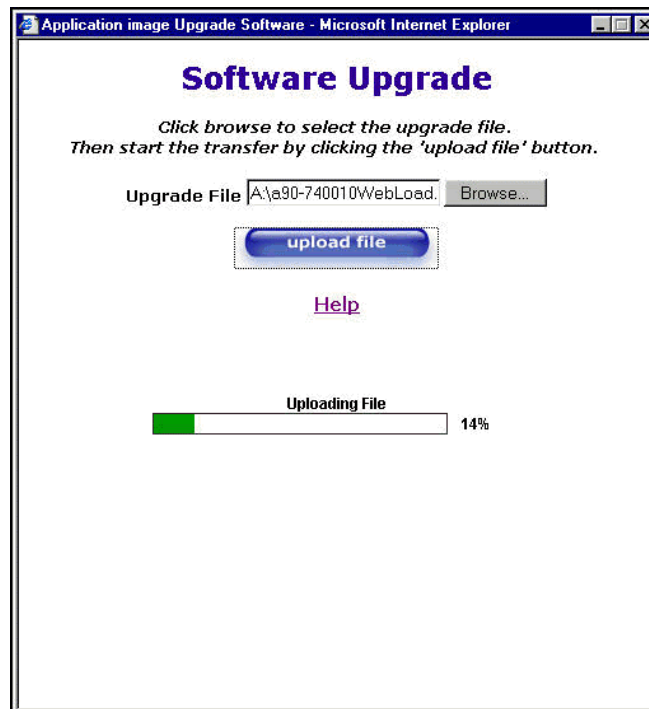


The screens below show that the file upload has completed and that the Programming Flash is being erased to prepare the Flash storage area for upload of the new file. (Programming Flash is a temporary storage area for uploaded files.)

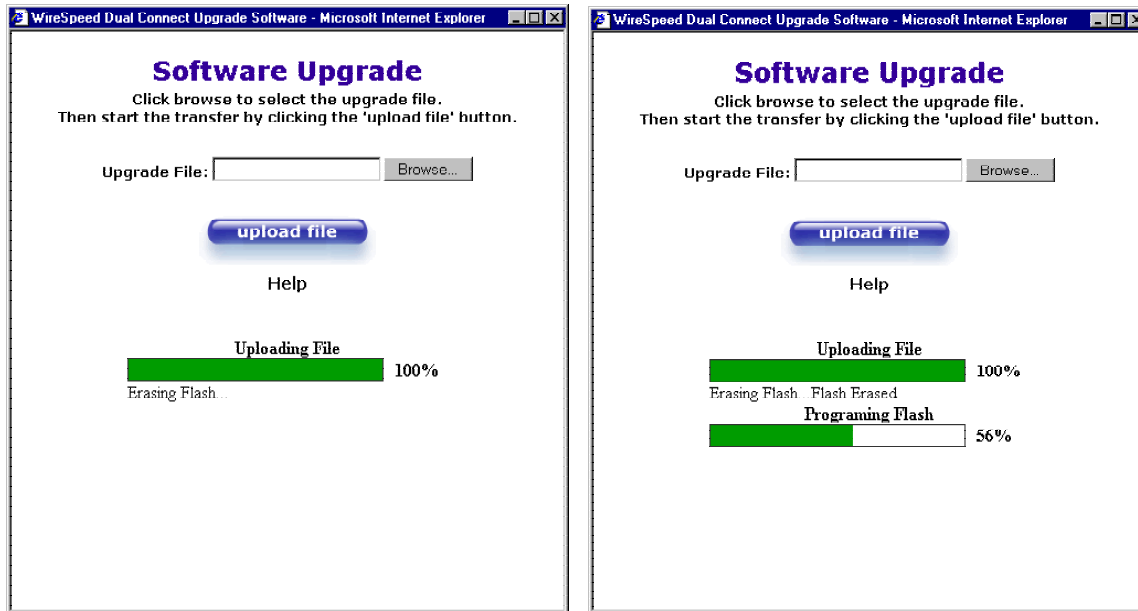

The screen below shows that the upload was successful. The Router will now reboot.

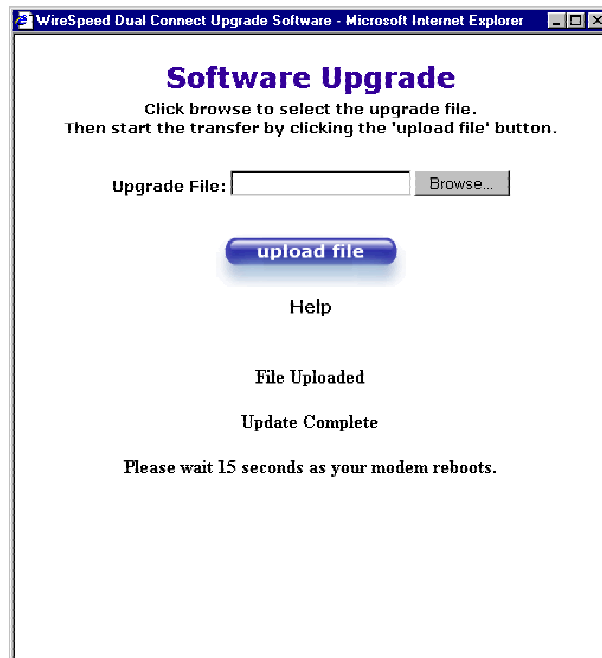


The following screen will be displayed as the Router is being reset.

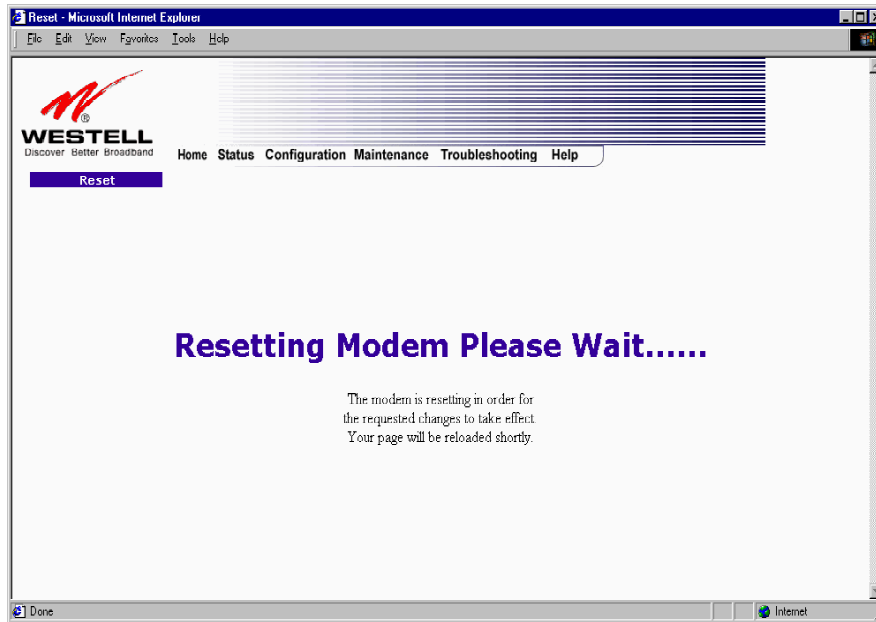

After a brief delay, the home page will be displayed. Confirm that you have a DSL sync and that the PPP Status displays **UP**. (Click on the **reset** button to re-establish your PPP session.)


15. TROUBLESHOOTING

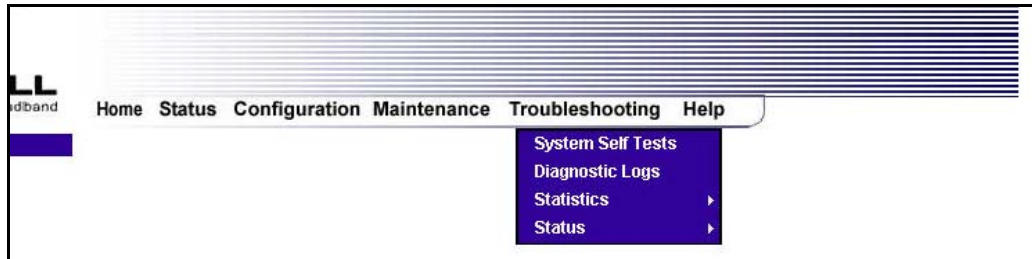

15.1 System Self Tests

The following settings will be displayed if you select **System Self Tests** from the **Troubleshooting** menu. Click on **test all** to run a diagnostic test on your Router's connection.

NOTE: The actual values may differ from the values displayed in this screen, depending on the Connection Protocol used: PPPoE, PPPoA, Bridge, Classical IPoA

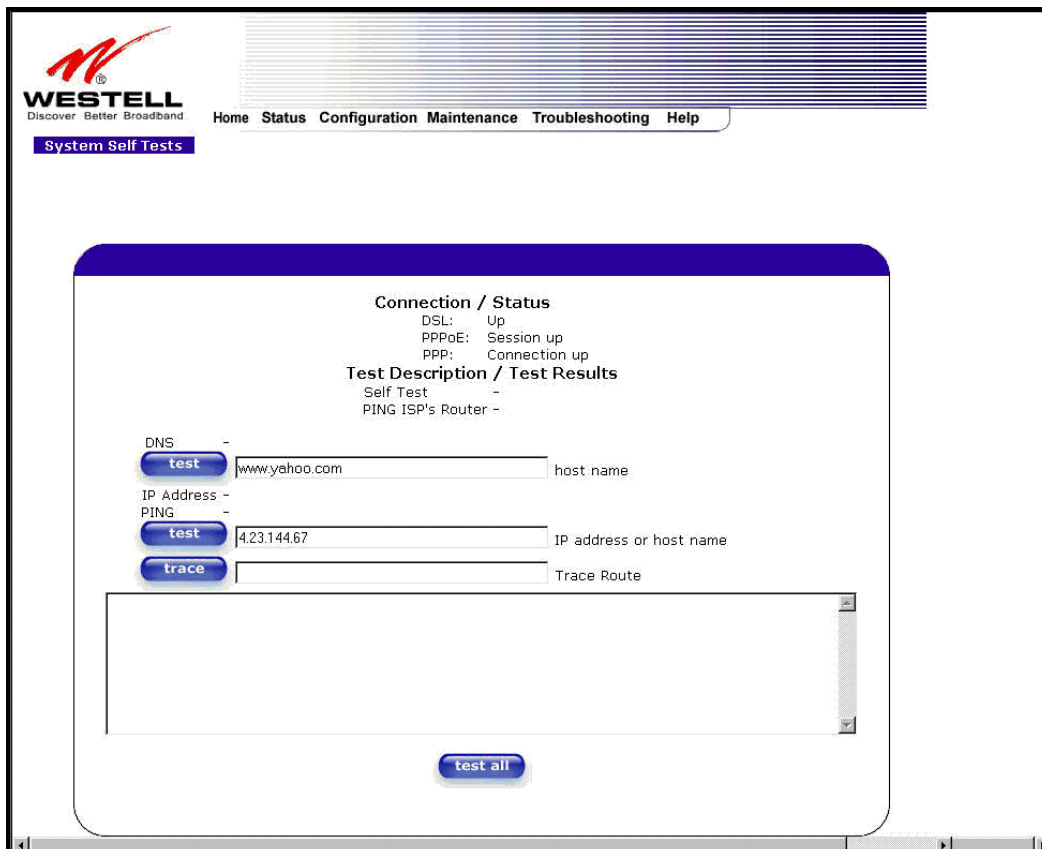

If you want to PING using the System Self Test screen (diagnostics page) shown above, enter your **DNS** or **IP** address in the fields provided and click on the **test** button. The System Self Test will run a diagnostic test that executes independent of firewall security settings. See the following table for test descriptions and possible responses.


If you want to PING using the MS-DOS (shell) window, first you will need to check your firewall security setting. (If you PING via DOS shell you are susceptible to firewall rules, as this PING is dependent on your Router's firewall settings.) If your firewall is set to **Medium** or **High**, you will not be able to PING. You must set your firewall security setting to **Low** or **None**.

Connection/Status	
DSL	<p>The Router checks the status of the Router connection.</p> <p>Possible responses are: UP: The Router is operating correctly and has obtained synchronization with the opposing network device. DOWN: The Router is operating correctly, but has not synchronized with the opposing device.</p>
PPPoE (Depending on the connection protocol used: PPPoE, PPPoA, Bridge, Classic IPoA)	<p>Indicates that a PPPoE session is or is not established.</p> <p>Possible responses are: Session UP: A valid PPPoE session has been detected. No Session: Currently there is no active PPPoE session established. Initiating Session: A PPP session must be connected from the homepage screen.</p>
PPP (Depending on the connection protocol used: PPPoE, PPPoA, Bridge, Classic IPoA)	<p>Indicates that a PPP session must already be established.</p> <p>Possible responses are: Connection UP: The Router has established a connection No Connection: There is no PPP connection Initiating Connection: The PPP connection process has been initiated Connection Halted: A successful PPP connection was halted Cannot Connect: A PPP connection could not be made because of a PPP session failure. Authorization Failure: The user name or password is incorrect. Link Control Protocol Failed: Re-establish the session (from the home page).</p>
Test Description / Test Results	
Self Test	<p>Performs an integrity check of certain internal components of the Router.</p>
PING ISP's Router	<p>Performs an IP network check (i.e., an IP Ping) of the Service Provider's Router. This test verifies that the Router can exchange IP traffic with an entity on the other side of the DSL line.</p> <p>Possible responses are: Success: The Router has detected an IP Remote Router connection. No Response: The IP Remote Router does not answer the IP Ping. Could not test: The test could not be executed due to Router settings. Check your DSL sync or your PPP session. You must have both a DSL sync and a PPP connection established to execute a PING.</p>
DNS	<p>Performs a test to try to resolve the name of a particular host. The host name is entered in the input box.</p> <p>Possible responses are:</p>


	<p>Success: The Router has successfully obtained the resolved address. The IP address is shown below the host name input box.</p> <p>No Response: The Router has failed to obtain the resolved address.</p> <p>Host not found: The DNS Server was unable to find an address for the given host name.</p> <p>No data, enter host name: No host name is specified.</p> <p>Could not test: The test could not be executed due to Router settings. Check your DSL sync or your PPP session. You must have both a DSL sync and a PPP connection established to execute a PING.</p>
IP Address	IP Address of the Host Name.
PING	<p>Performs an IP connectivity check to a remote computer either within or beyond the Service Provider's network. You can PING a remote computer via the IP address or the DNS address. If your PING fails, try a different IP or DNS address.</p> <p>Possible responses are:</p> <p>Success: The Remote Host computer was detected.</p> <p>No Response: There was no response to the Ping from the remote computer.</p> <p>No name or address to PING: No host name or IP address was specified.</p> <p>Could not test: The test could not be executed due to Router settings. Check your DSL sync or your PPP session. You must have both a DSL sync and a PPP connection established to execute a PING.</p>
Trace Route	Determines the route taken to destination by sending Internet Control Message Protocol (ICMP) echo packets with varying IP Time-To-Live (TTL) values to the destination. Trace Route is used to determine where the packet is stopped on the network.

15.2 Diagnostic Logs


If you select **Diagnostic Log**, from the **System Self Test** menu, the following screen will be displayed.

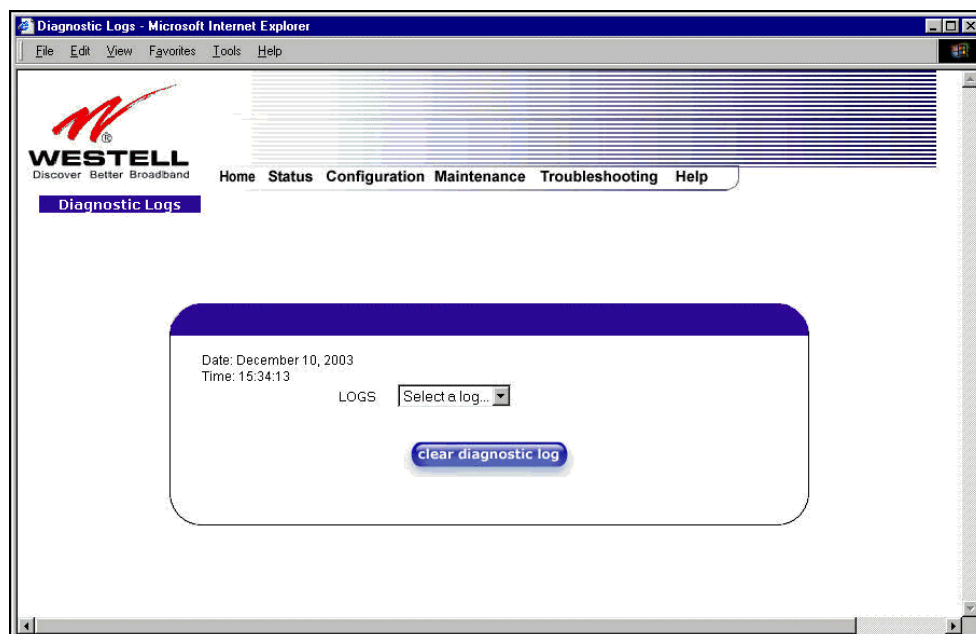

To see a list of the log options, click on the arrow at the **LOGS** drop-down menu. Select an option from the list provided at the **Diagnostics Logs** screen.

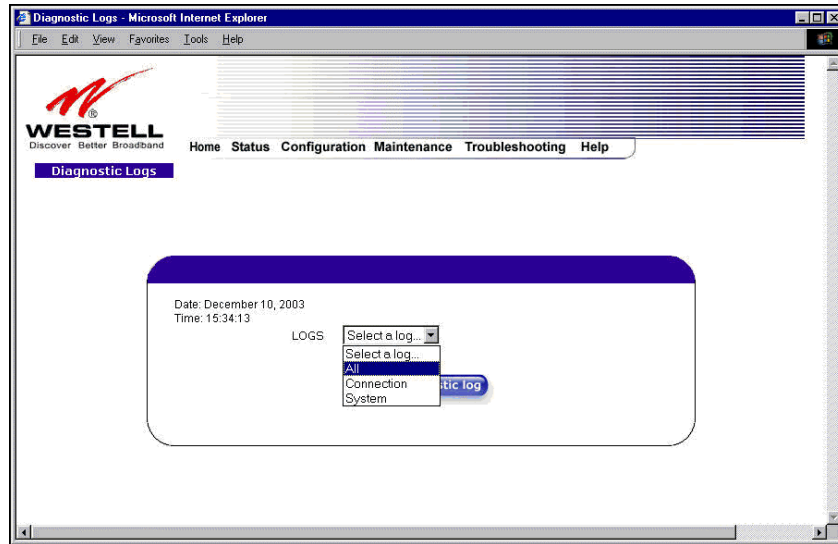


If you clicked on **All**, the following screen will be displayed. This screen provides a detailed list of the Router's connection status and system information. Click on **clear diagnostic log** to clear the diagnostic log information.

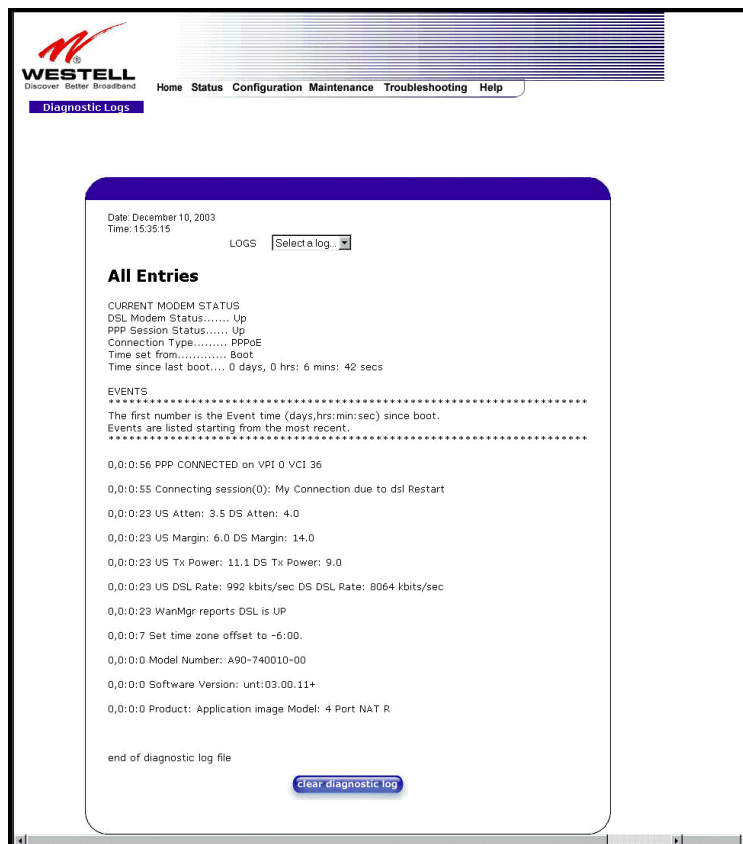


15.2.1 Saving the Diagnostic Log File


If you want to save the diagnostic log file, go to your Browser's menu and select **File**, then select **Save As** from the drop-down menu.

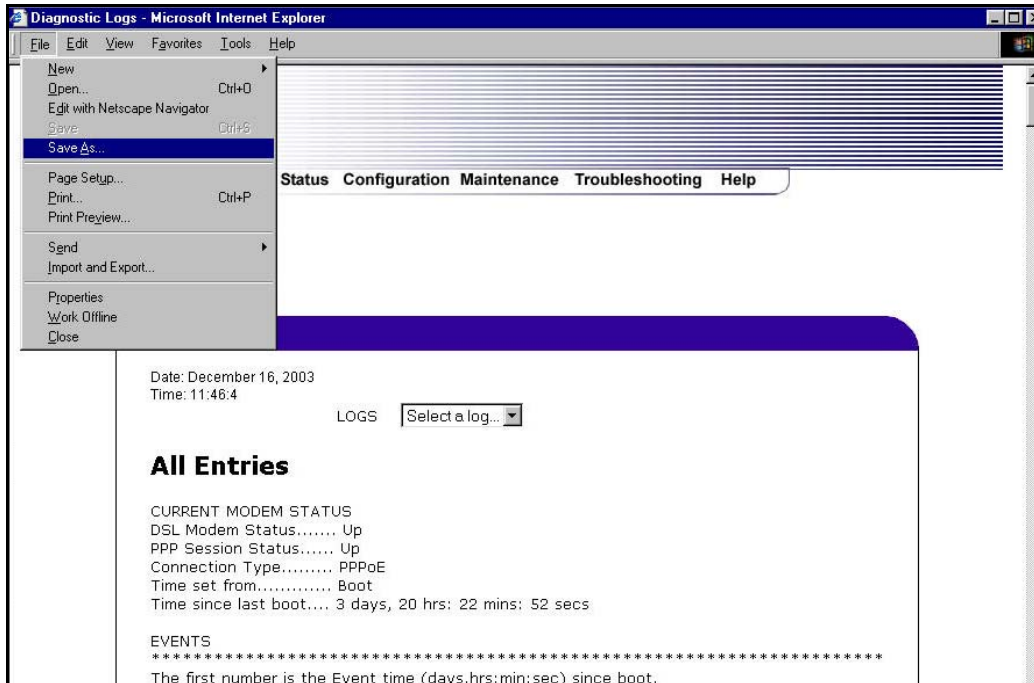

At the **Save Web Page** dialog box, select a destination for your log file from the **Save in** drop-down arrow. Next, enter a name for your log file in the field labeled **File name** and click on **Save**.

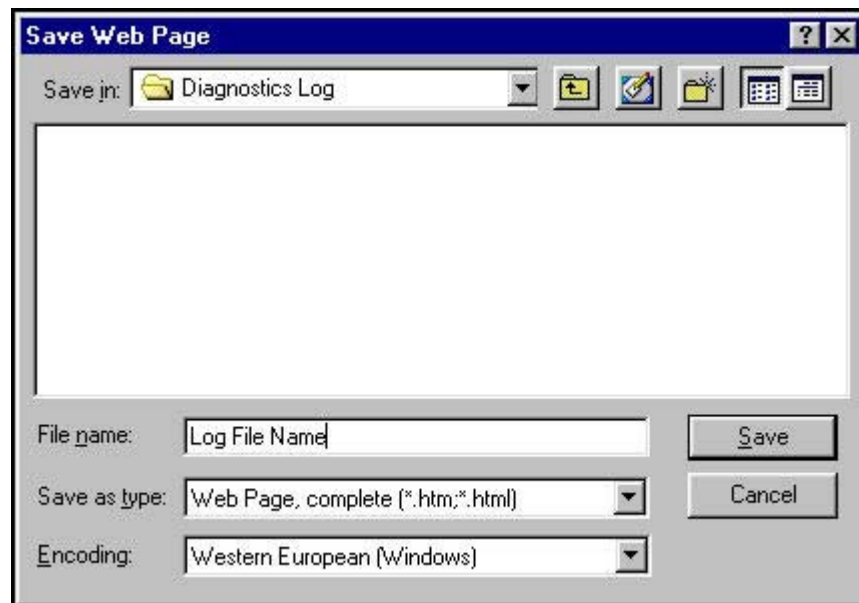


15.3 Statistics

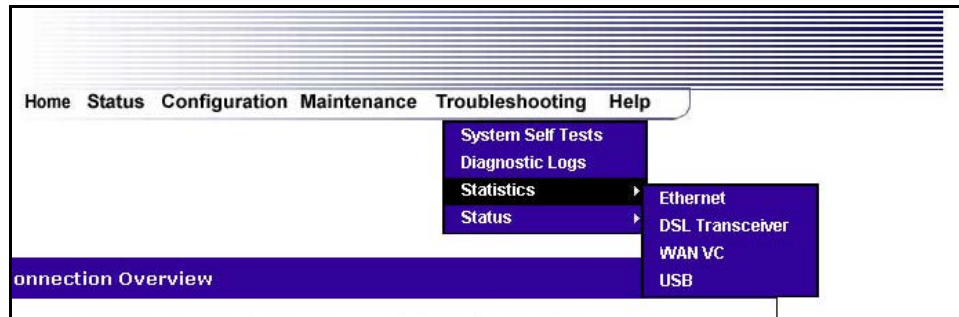

15.3.1 Ethernet Port Statistics

The following settings will be displayed if you select **Ethernet** from the **Statistics** menu.

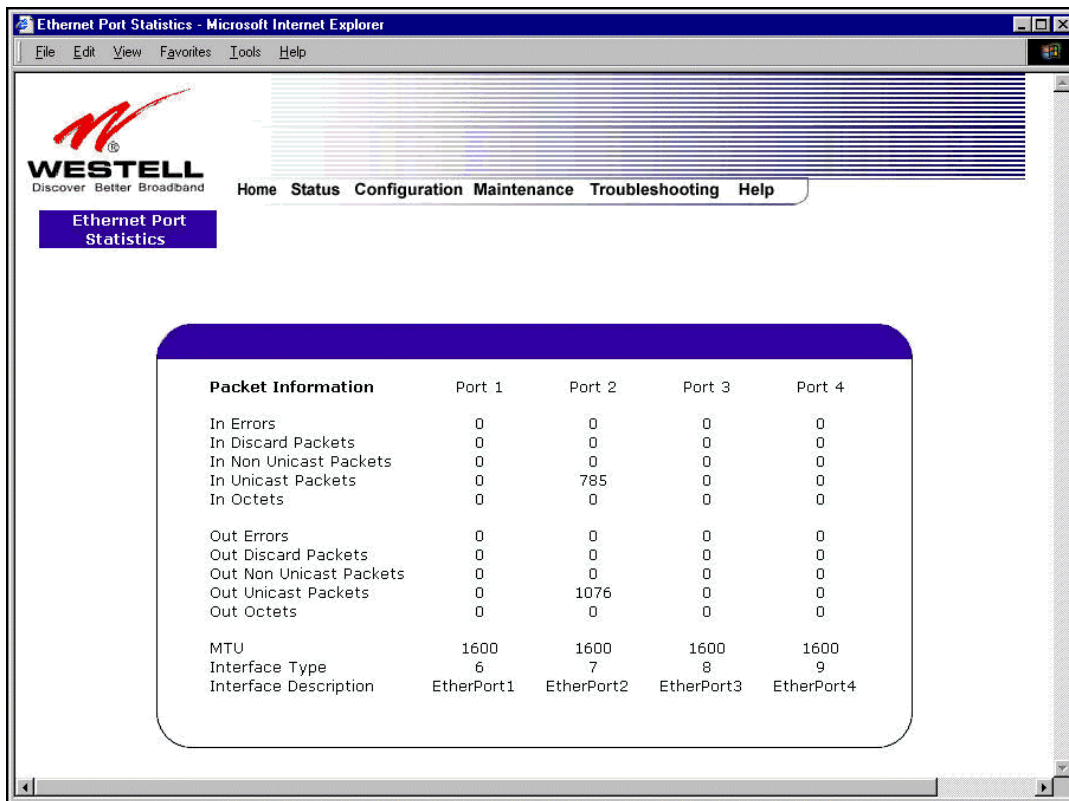

The screenshot shows the 'Ethernet Port Statistics' page in a Microsoft Internet Explorer browser window. The page features the Westell logo and a navigation bar with links: Home, Status, Configuration, Maintenance, Troubleshooting, and Help. A button labeled 'Ethernet Port Statistics' is visible. The main content area displays a table with packet information for four ports.


Packet Information	Port 1	Port 2	Port 3	Port 4
In Errors	0	0	0	0
In Discard Packets	0	0	0	0
In Non Unicast Packets	0	0	0	0
In Unicast Packets	0	785	0	0
In Octets	0	0	0	0
Out Errors	0	0	0	0
Out Discard Packets	0	0	0	0
Out Non Unicast Packets	0	0	0	0
Out Unicast Packets	0	1076	0	0
Out Octets	0	0	0	0
MTU	1600	1600	1600	1600
Interface Type	6	7	8	9
Interface Description	EtherPort1	EtherPort2	EtherPort3	EtherPort4

In Errors	The number of error packets received on the Ethernet interface.
In Discard Packets	The number of discarded packets received.
In Non Unicast Packets	The number of non-Unicast packets received on the Ethernet interface.
In Unicast Packets	The number of Unicast packets received on the Ethernet interface.
In Octets	The number of bytes received on the Ethernet interface.

Out Errors	The number of outbound packets that could not be transmitted due to errors.
Out Discard Packets	The number of outbound packets discarded.
Out Non Unicast Packets	The number of non-Unicast packets transmitted on the Ethernet interface.
Out Unicast Packets	The number of Unicast packets transmitted on the Ethernet interface.
Out Octets	The number of bytes transmitted on the Ethernet interface.
MTU	Maximum Transmission Unit- The number of data bytes contained in the Ethernet frame.
Interface Type	A unique identifier that represents the interface type.
Interface Description	A description field that refers to the interface type.

15.3.2 DSL Transceiver Statistics


The following settings will be displayed if you select **DSL Transceiver** from the **Statistics** menu.

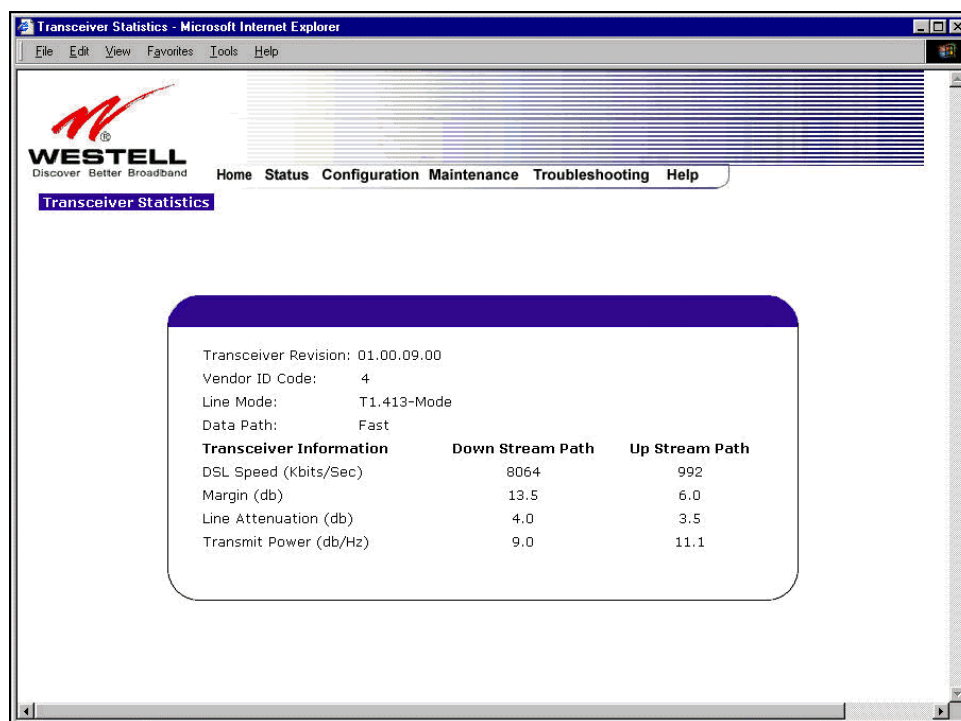

Transceiver Revision	The transceiver software version number.
Vendor ID Code	The CPE Vendor's ID code for their chipset.
Line Mode	The operational mode. Modes supported are No Mode, Multi Mode, T.1413 Mode, G.DMT Mode, and G.LITE Mode.
Data Path	The data path used (either Fast or Interleaved).
Transceiver Information-Down Stream/Up Stream Path	
DSL Speed (Kbits/Sec)	The transmission rate that is provided by your Internet Service Provider (ISP).
SNR Margin (db)	The Signal-to-Noise Ratio (S/N) where 0 db = 1×10^{-7} , which inhibits your DSL speed.
Line Attenuation (dB)	The DSL line loss.
Transmit Power (db/Hz)	The transmitted signal strength.

15.3.3 WAN VC Statistics


The following settings will be displayed if you select **WAN VC** from the **Statistics** menu.

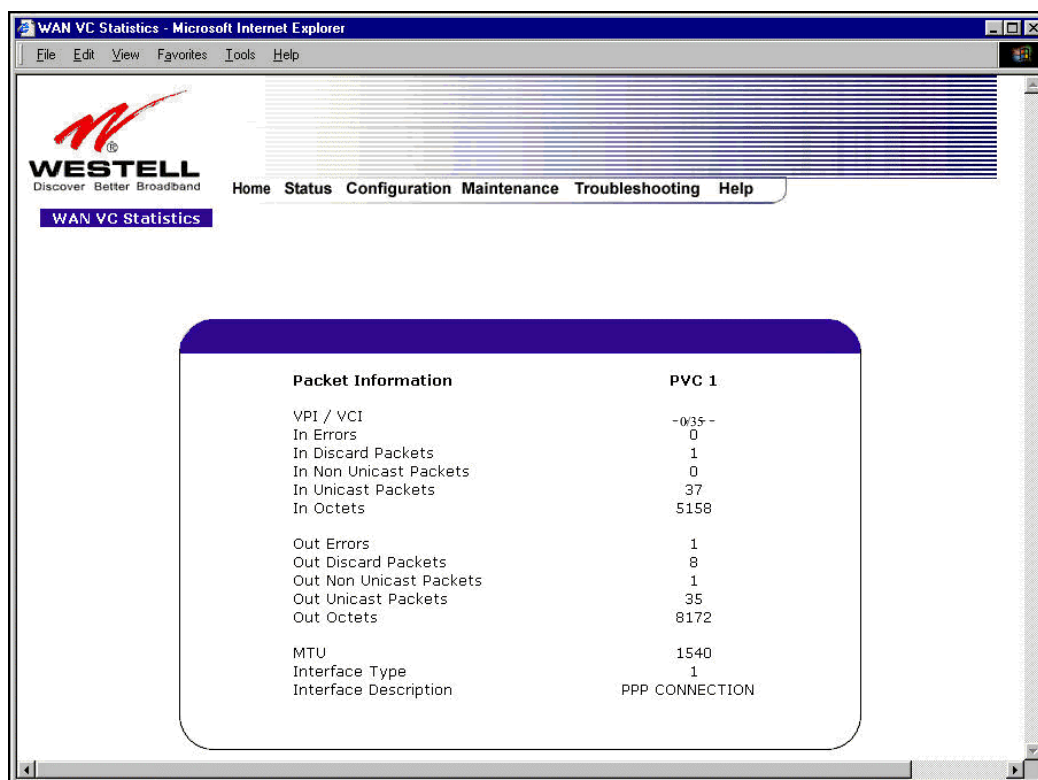

VPI/VCI	Displays the VPI/VCI values obtained from your Internet Service Provider.
In Errors	The number of error packets received on the ATM port.
In Discard Packets	The number of discarded packets received.
In Non Unicast Packets	The number of non-Unicast packets received on the ATM port.
In Unicast Packets	The number of Unicast packets received on the ATM port.
In Octets	The number of bytes received on the ATM port.
Out Errors	The number of outbound packets that could not be transmitted due to errors.
Out Discard Packets	The number of outbound packets discarded.
Out Non Unicast Packets	The number of non-Unicast packets transmitted on the ATM port.
Out Unicast Packets	The number of Unicast packets transmitted on the ATM port.
Out Octets	The number of bytes transmitted on the ATM port.
MTU	Maximum Transmission Unit -The number of data bytes contained in the ATM frame.
Interface Type	A unique identifier that represents the interface type.
Interface Description	A description field that refers to the interface type.


15.4 USB Port Statistics

The following settings will be displayed if you select **USB** from the **Statistics** menu.

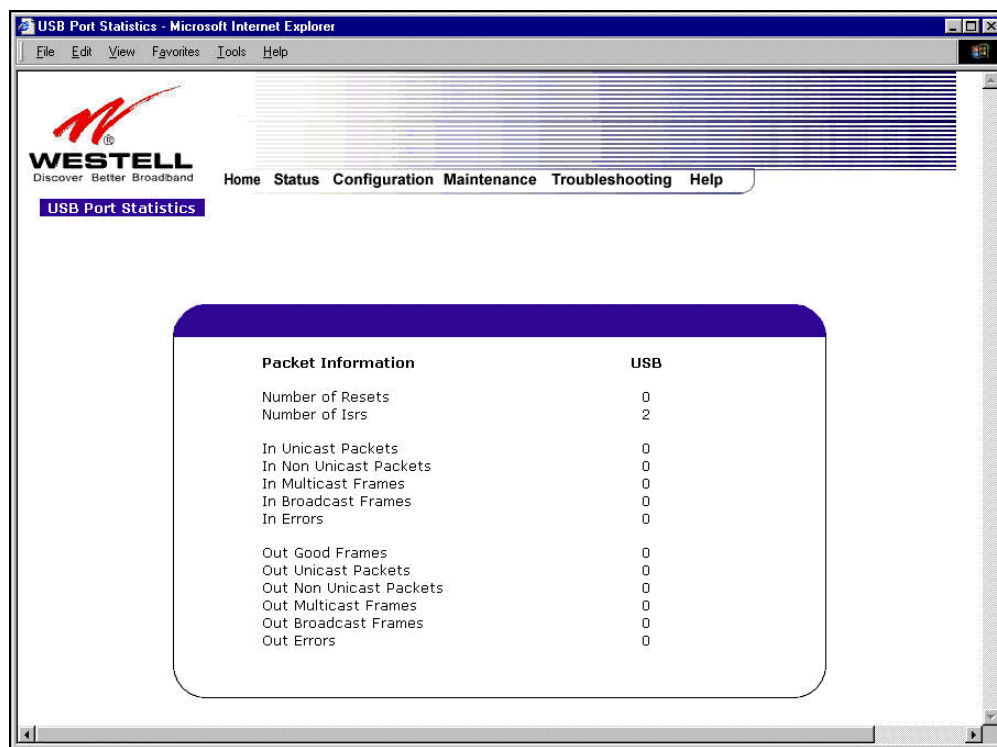


Number of Resets	The number of times the Host PC reset the USB interface.
Number of Isrs	The number of times the Host PC requested communication with the Router.
In Unicast Packets	The number of packets received that did not have a Multicast or Broadcast class destination IP address.
In Non Unicast Packets	The number of packets received that had a Multicast or Broadcast class destination IP address.
In Multicast Frames	The number of frames received that had a Multicast class destination IP address.
In Broadcast Frames	The number of frames received that had a Broadcast class destination IP address.
In Errors	The number of packets received with an invalid format
Out Good Frames	The number of frames sent to the Host PC.
Out Unicast Packets	The number of packets sent that did not have a Multicast or Broadcast class destination IP address
Out Non Unicast Packets	The number of packets sent that had a Multicast or Broadcast class destination IP address.
Out Multicast Frames	The number of frames sent that had a Multicast class destination IP address.
Out Broadcast Frames	The number of frames sent that had a Broadcast class destination IP address.
Out Errors	The number of packets received by the Router but not sent to PC due to an error condition.

15.5 Status

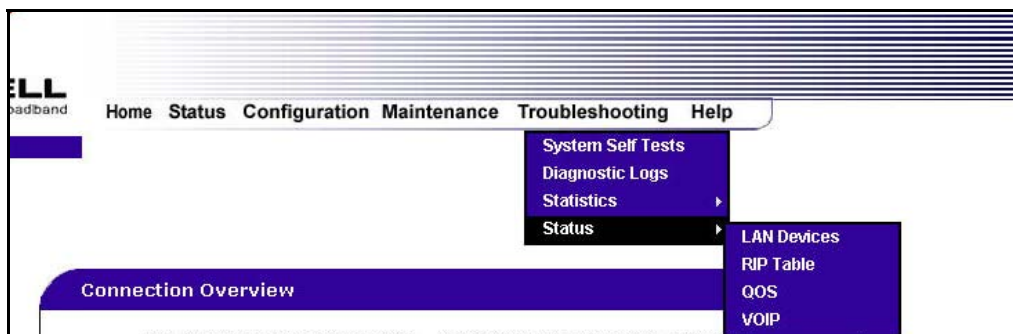

15.5.1 LAN Devices


The following settings will be displayed if you select **LAN Devices** from the **Status** menu.

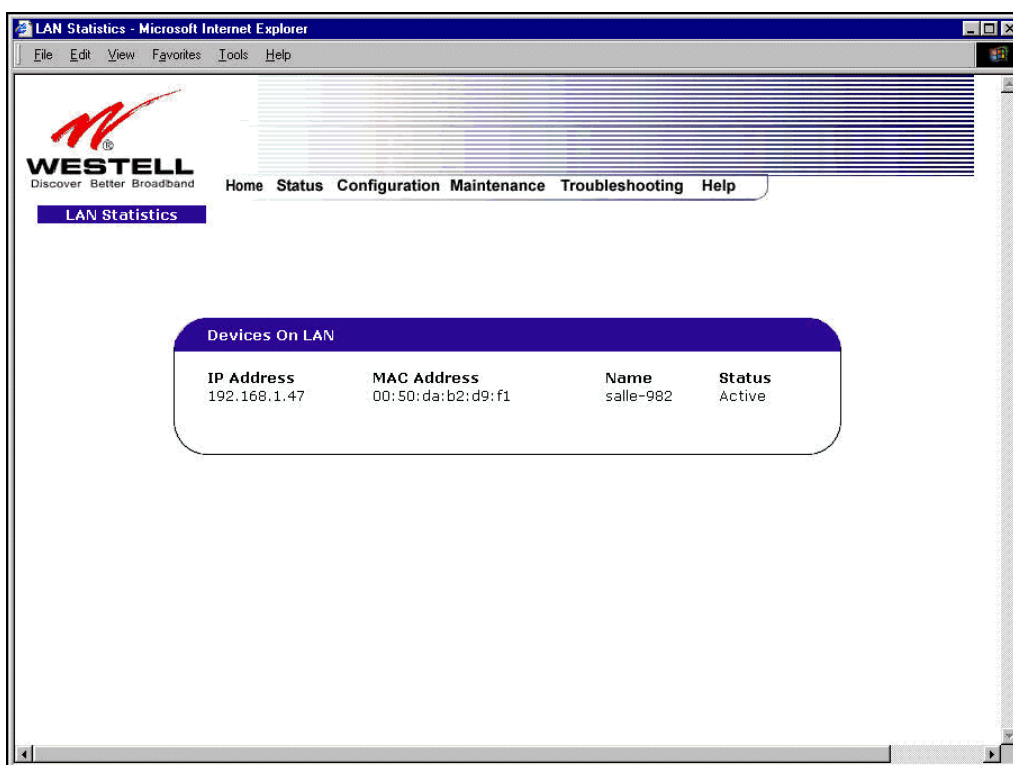

Devices on LAN	
IP Address	Displays the IP network address that your Router is on.
MAC Address	Media Access Controller (MAC) address of this device.
Name	Displays the ASCII (text) name of the devices connected to the LAN.
Status	Displays the status of the devices connected to the LAN.

15.5.2 RIP Table


The following settings will be displayed if you select **RIP Table** from the **Status** menu.

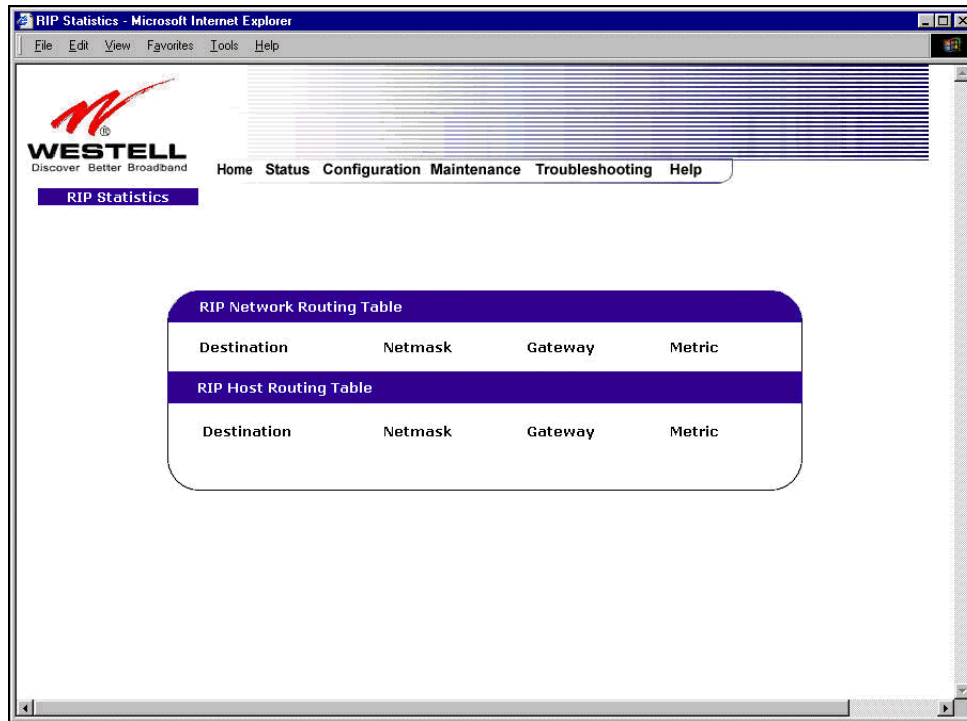

RIP Network Routing Table	Indicates Network routes received via RIP.
RIP Host Routing Table	The Host routes received via RIP.
Destination	The destination IP address of the route
Netmask	The IP mask of the route
Gateway	The Gateway to route
Metric	The RIP metric (0-15). A lower value is better.

15.5.3 QOS Status

The following settings will be displayed if you select **QOS** from the **Status** menu. Click on the **clear** button to clear all counts and statistics (not just latency counts). This does not affect the configuration values.

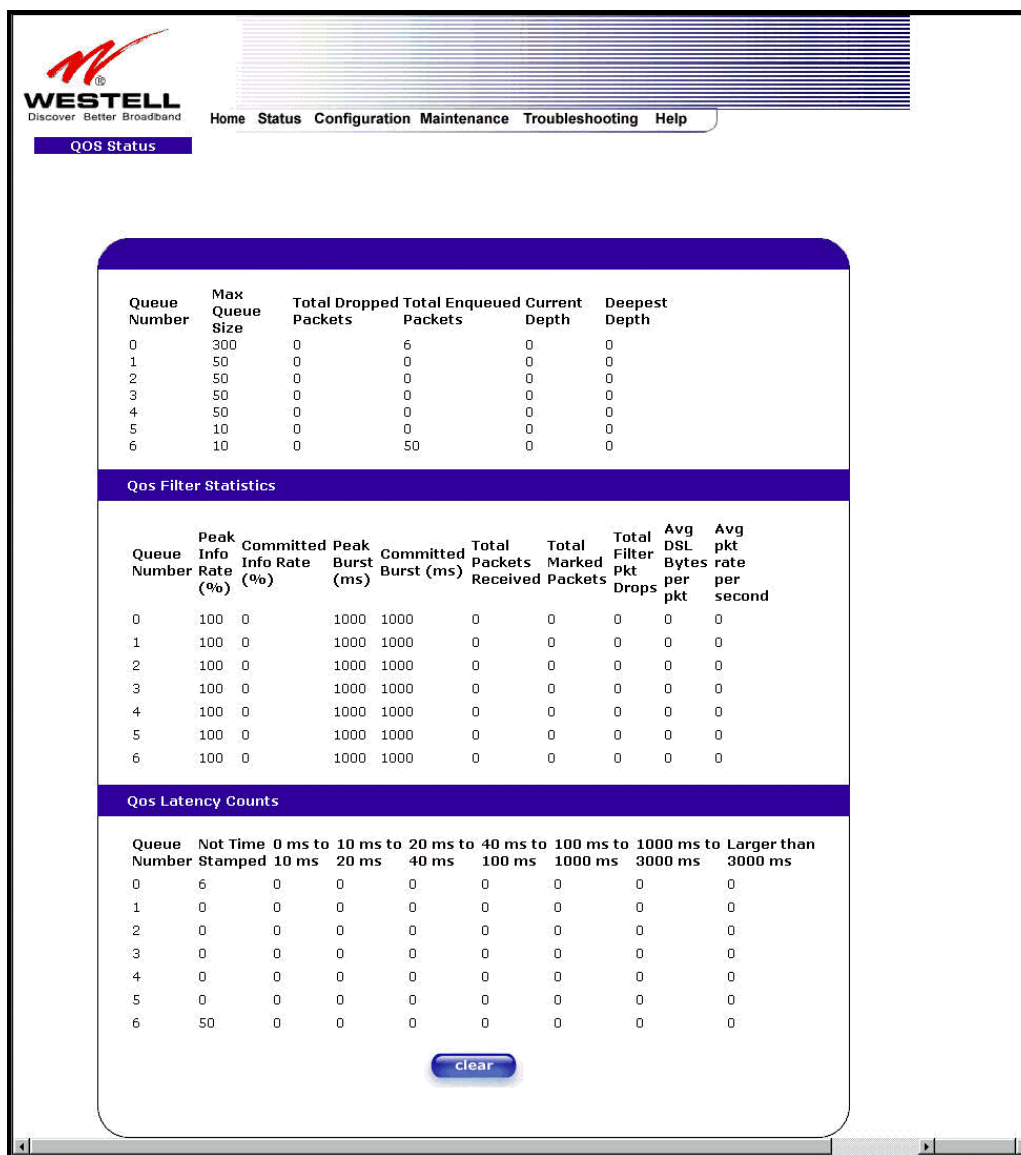

Queue Statistics

Queue Number	Max Queue Size	Total Dropped Packets	Total Enqueued Packets	Current Depth	Deepest Depth
0	300	0	6	0	0
1	50	0	0	0	0
2	50	0	0	0	0
3	50	0	0	0	0
4	50	0	0	0	0
5	10	0	0	0	0
6	10	0	50	0	0

Qos Filter Statistics

Queue Number	Peak Info Rate (%)	Committed Info Rate (%)	Peak Burst (ms)	Committed Burst (ms)	Total Packets Received	Total Marked Packets	Total Filter Pkt Drops	Avg DSL Bytes per pkt	Avg pkt rate per second
0	100	0	1000	1000	0	0	0	0	0
1	100	0	1000	1000	0	0	0	0	0
2	100	0	1000	1000	0	0	0	0	0
3	100	0	1000	1000	0	0	0	0	0
4	100	0	1000	1000	0	0	0	0	0
5	100	0	1000	1000	0	0	0	0	0
6	100	0	1000	1000	0	0	0	0	0

Qos Latency Counts

Queue Number	Not Stamped	Time 0 ms to 10 ms	10 ms to 20 ms	20 ms to 40 ms	40 ms to 100 ms	100 ms to 1000 ms	1000 ms to 3000 ms	Larger than 3000 ms
0	6	0	0	0	0	0	0	0
1	0	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0	0
4	0	0	0	0	0	0	0	0
5	0	0	0	0	0	0	0	0
6	50	0	0	0	0	0	0	0


[clear](#)

Queue Number	Indicates the DiffServ Queue. Possible responses are: 0 = Best Effort (BE) 1 = Assured Forwarding 1 (AF1) 2 = Assured Forwarding 2 (AF2) 3 = Assured Forwarding 2 (AF3) 4 = Assured Forwarding 2 (AF4) 5 = Expedited Forwarding (EF) 6 = Routing Protocols (DiffServ priorities 6 and 7)
--------------	--

Max Queue Size	The maximum number of packets that can be queued for this priority.
Total Dropped Packets	Indicates how many packets of this priority have been dropped by QOS due to lack of buffer space or filtering rules.
Total Enqueued Packets	Displays the number of packets, destined for the WAN, that have been received.
Current Depth	Displays the current number of packets of this priority that are queued.
Deepest Depth	Displays the most number of packets that have been queued at once for this priority.
QOS Filter Statistics	
Queue Number	The DiffServ Queue. (See Queue Number description above.)
Peak Info. Rate (%)	The maximum allowed rate for this priority, expressed as a percentage of the DSL rate.
Committed Info Rate (%)	The committed rate for this priority, expressed as a percentage of the DSL rate
Peak Burst (ms)	Displays the interval in milliseconds for averaging the peak offered rate.
Committed Burst (ms)	Displays the interval in milliseconds for averaging the committed offered rate.
Total Packets Received	Displays the total number of packets of this priority that are destined for the LAN.
Total Marked Packets	Displays the number of packets of this priority that exceeded the committed rate, but not the peak rate, and were marked with a higher drop priority
Total Filter Packet Drops	Displays the number of packets of this priority that exceeded the peak rate and that were, therefore, dropped.
Avg. DSL Bytes Per Packet	Displays the average size of packets for this priority, including all overhead.
Avg. Packet Rate Per second	Displays the average rate (in packets per seconds) for this priority.
QOS Latency Counts	
Queue Number	The DiffServ Queue. (See Queue Number description above.)
Not Time Stamped	The packets with no incoming time stamp. (Often these are generated internal to the Router.)
A ms to B ms	<p>The number of packets of this priority whose time in the Router fell between A and B milliseconds. (Time is measured from the point the packet arrives at the Router's processor until is passed to the ATM hardware for transmission.)</p> <p>Possible ranges are (A ms to B ms):</p> <ul style="list-style-type: none"> 0 ms to 10 ms 10 ms to 20 ms 20 ms to 40 ms 40 ms to 100 ms 100 ms to 1000 ms 1000 ms to 3000 ms Larger than 3000 ms

15.5.4 VOIP Status

The following settings will be displayed if you select **VOIP** from the **Status** menu.

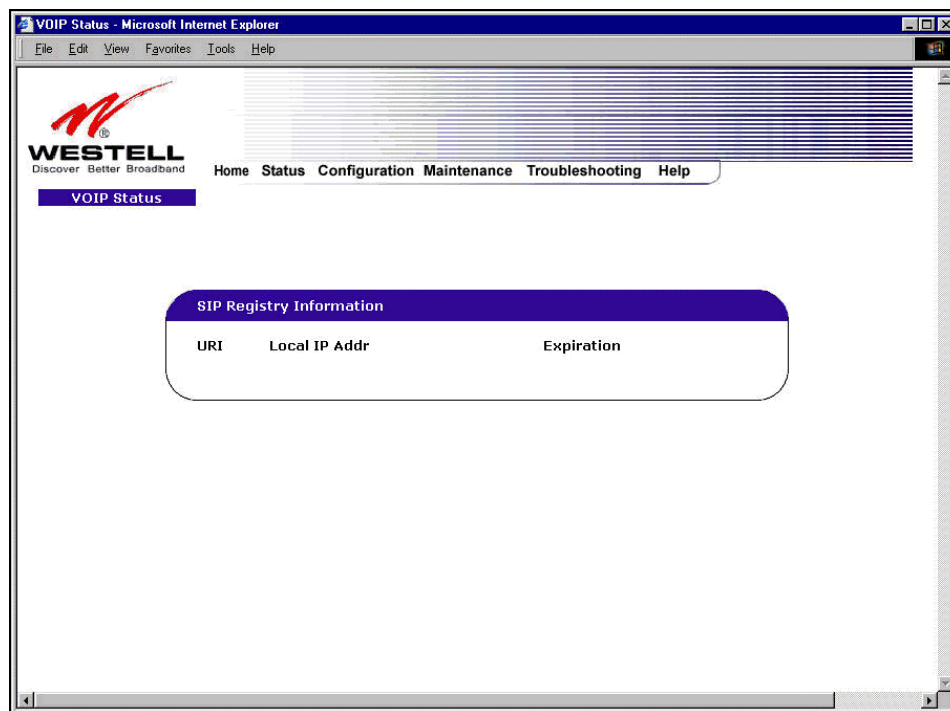

SIP Registry Information	
URI	The SIP URI that is trying to register. (This field only indicates that a SIP device tried to register, not that it succeeded.)
Local IP Address	The local, LAN IP address of the SIP device.
Expiration	Indicates how long (in seconds) until the registration expires.

16. NAT SERVICES

For your convenience, the Westell Router supports protocols for Applications, Games, and VPN-specific programs. The following chart provides protocol information for the services supported by your Router.

NOTE: To configure your Router for a service or application, follow the steps in section 13 (Setting Up Advanced Service Configuration) of this User Guide.

Applications/Games/VPN Support

Application/Game	Port/Protocol
Aliens vs. Predator	80 UDP, 2300 UDP, 8000-8999 UDP
America Online	5190 TCP/UDP
AoE II: Conquors	47624 TCP/UDP, 6073 TCP/UDP, 2300-2400 TCP/UDP
AOL Instant Messenger	4099 TCP, 5190 TCP
Asheron's Call	9000-9013 UDP, 28800-29000 TCP
Battlecom	2300-2400 TCP/UDP, 47624 TCP/UDP
Black and White	2611-2612 TCP, 6667 TCP, 6500 UDP, 27900 UDP
Blizzard Battle.net (Diablo II)	4000 TCP, 6112 TCP/UDP
Buddy Phone	700, 701 UDP
Bungie.net, Myth, Myth II Server	3453 TCP
Calista IP Phone	3000 UDP, 5190 TCP
Citrix Metaframe	1494 TCP
Client POP/IMAP	110 TCP
Client SMTP	25 TCP
Counter Strike	27015 TCP/UDP, 27016 TCP/UDP
Dark Reign 2	26214 TCP/UDP
Delta Force (Client and Server)	3568 UDP, 3100-3999 TCP/UDP
Delta Force 2	3568-3569 UDP
DeltaForce: Land Warrior	UDP 53 TCP 21 TCP 7430 TCP 80 UDP 1029 UDP 1144 UDP 65436 UDP 17478
DNS	53 UDP
Elite Force	2600 UDP, 27500 UDP, 27910 UDP, 27960 UDP
Everquest	1024-7000 TCP/UDP
F-16, Mig 29	3863 UDP
F-22 Lightning 3	4660-4670 TCP/UDP, 3875 UDP, 4533-4534 UDP, 4660-4670 UDP
F-22 Raptor	3874-3875 UDP
Fighter Ace II	50000-50100 TCP/UDP
Fighter Ace II for DX play	50000-50100 TCP/UDP, 47624 TCP, 2300-2400 TCP/UDP
FTP	20 TCP, 21 TCP
GameSpy Online	UDP 3783

Application/Game	Port/Protocol
	UDP 6515 TCP 6667 UDP 12203 TCP/UDP 13139 UDP 27900 UDP 28900 UDP 29900 UDP 29901
Ghost Recon	TCP 80 UDP 1038 UDP 1032 UDP 53 UDP 2347 UDP 2346
GNUTella	6346 TCP/UDP, 1214 TCP
Half Life Server	27005 UDP(client only) 27015 UDP
Heretic II Server	28910 TCP
Hexen II	26900 (+1) each player needs their own port. Increment by one for each person
Hotline Server	5500, 5503 TCP 5499 UDP
HTTPS	443 TCP/UDP
ICMP Echo	4 ICMP
ICQ OLD	4000 UDP, 20000-20019 TCP
ICQ 2001b	4099 TCP, 5190 TCP
ICUII Client	2000-2038 TCP, 2050-2051 TCP, 2069 TCP, 2085 TCP, 3010-3030 TCP
ICUII Client Version 4.xx	1024-5000 TCP, 2050-2051 TCP, 2069 TCP, 2085 TCP, 3010-3030 TCP, 2000-2038 TCP 6700-6702 TCP, 6880 TCP, 1200-16090 TCP
IMAP	119 TCP/UDP
IMAP v.3	220 TCP/UDP
Internet Phone	22555 UDP
IPSEC ESP	PROTOCOL 50
IPSEC IKE	500 UDP
Ivisit	9943 UDP, 56768 UDP
KALI, Doom & Doom II	2213 UDP, 6666 UDP (EACH PC USING KALI MUST USE A DIFFERENT PORT NUMBER STARTING WITH 2213 + 1)
KaZaA	1214 TCP/UDP
Limewire	6346 TCP/UDP, 1214 TCP
Medal Of Honor: Allied Assault	TCP 80 UDP 53 UDP 2093 UDP 12201 TCP 12300 UDP 2135 UDP 2139 TCP/UDP 28900

Application/Game	Port/Protocol
mIRC Chat	6660-6669 TCP
Motorhead Server	16000 TCP/UDP, 16010-16030 TCP/UDP
MSN Game Zone	6667 TCP, 28800-29000 TCP
MSN Game Zone (DX 7 & 8 play)	6667 TCP, 6073 TCP, 28800-29000 TCP, 47624 TCP, 2300-2400 TCP/UDP
MSN Messenger	6891-6900 TCP, 1863 TCP/UDP, 5190 UDP, 6901 TCP/UDP
Napster	6699 TCP
Need for Speed 3, Hot Pursuit	1030 TCP
Need for Speed, Porsche	9442 UDP
Net2Phone	6801 UDP
NNTP	119 TCP/UDP
Operation FlashPoint	47624 UDP, 6073 UDP, 2300-2400 TCP/UDP, 2234 TCP
Outlaws	5310 TCP/UDP
Pal Talk	2090-2091 TCP/UDP, 2095 TCP, 5001 TCP, 8200-8700 TCP/UDP, 1025-2500 UDP
pcAnywhere host	5631 TCP, 5632 UDP, 22 UDP
Phone Free	1034-1035 TCP/UDP, 9900-9901 UDP, 2644 TCP, 8000 TCP
Quake 2	27910 UDP
Quake 3	27660 UDP Each computer playing QuakeIII must use a different port number, starting at 27660 and incrementing by 1. You'll also need to do the following: 1. Right click on the QIII icon 2. Choose "Properties" 3. In the Target field you'll see a line like "C:\Program Files\Quake III Arena\quake3.exe" 4. Add the Quake III net_port command to specify a unique communication port for each system. The complete field should look like this: "C:\Program Files\Quake III Arena\quake3.exe" +set net_port 27660 5. Click OK. 6. Repeat for each system behind the NAT, adding one to the net_port selected (27660,27661,27662)
Quicktime 4/Real Audio	6970-32000 UDP, 554 TCP/UDP
Rainbow Six & Rogue Spear	2346 TCP
RealOne Player	TCP - 554, 7070 to 7071 UDP - 6970 to 7170
Real Audio	6970-7170 UDP
Roger Wilco	TCP/UDP 3782 UDP 3783 (BaseStation)
ShoutCast Server	8000-8005 TCP
SSH Secure Shell	22 TCP/UDP
Starcraft	2346 TCP
Starfleet Command	2300-2400 TCP/UDP, 47624 TCP/UDP
Telnet	23 TCP
Tiberian Sun & Dune 2000	1140-1234, 4000 TCP/UDP
Ultima Online	5001-5010 TCP, 7775-7777 TCP, 8800-8900 TCP, 9999 UDP, 7875 UDP

Application/Game	Port/Protocol
Unreal Tournament server	7777 (default gameplay port) 7778 (server query port) 7779,7779+ are allocated dynamically for each helper UdpLink objects, including UdpServerUplink objects. Try starting with 7779-7781 and add ports if needed 27900 server query, if master server uplink is enabled. Home master servers use other ports like 27500 Port 8080 is for UT Server Admin. In the [UWeb.WebServer] section of the server.ini file, set the ListenPort to 8080 and ServerName to the IP assigned to the router from your ISP.
USENET News Service	143 TCP
VNC, Virtual Network Computing	5500 TCP, 5800 TCP, 5900 TCP
Westwood Online, C&C	4000 TCP/UDP, 1140-1234 TCP/UDP
World Wide Web (HTTP)	80 TCP 443 TCP (SSL) 8008 OR 8080 TCP (PROXY)
XBOX Live	TCP/UDP 88 and 3074
Yahoo Messenger Chat	5000-5001 TCP
Yahoo Messenger Phone	5055 UDP
VPN Protocol	Comments
IPSec Encryption	IPSec using AH can not be supported through NAT. IPSec using ESP and L2TP can be supported via an ALG
L2TP	IPSec using ESP and L2TP can be supported via an ALG.
PPTP	Works through NAT.

17. PRODUCT SPECIFICATIONS

ADSL

- DSL Line Code: Discrete Multi-Tone (DMT)
- DSL Rates: 32 kbps to 8 Mbps downstream and 32 kbps to 800 kbps upstream
- Power spectral density: less than -34 dBm/Hz
- DSL Impedance: 100 Ohms
- DSL Performance: per ITU Recommendation G.991.2, ANSI T1.413

Protocol Features

- Bridge Encapsulation per RFC2684 (Formerly RFC1483)
- Logical Link Control/Subnetwork Access Protocol (LLC/SNAP)
- Software Upgradeable
- PPPoE Support
- ATM SAR: Internal to Modem

System Requirements for 10/100 Base-T/Ethernet (Models 7400, 7401)

- Pentium® or equivalent and above machines
- Microsoft Windows (95, 98, 2000, ME, NT 4.0, or XP), Macintosh OS X, or Linux installed
- Operating system CD
- Internet Explorer 4.x or Netscape Navigator 4.x or higher
- 64 MB RAM (128 MB recommended)
- Ethernet 10/100 Base-T interface
- 10 MB of free hard drive space
- TCP/IP Protocol stack installed

System Requirements for USB (Model 7400)

- Pentium or equivalent and above machines
- Microsoft Windows (98, 2000, ME, or XP)
- Operating system CD-ROM on hand
- Internet Explorer 4.x or Netscape Navigator 4.x or higher
- 64 MB RAM (128 MB recommended)
- 10 MB of free hard drive space
- USB Version 1.0 or higher compliant bus

Dimensions/Weight

- Height: 1.6 in. (4.0 cm)
- Width: 6.4 in. (16.2 cm)
- Depth: 5.1 in. (12.9 cm)
- Weight: Approx. 2.0 lbs. (.90 kg)

LEDs

- Power
- LAN
- DSL
- Internet
- Ethernet (on back of unit)

Connectors

- DSL: RJ-11, 6-pin modular jack-DSL
- USB: Series B Connector (Model 7400 only)
- Ethernet: RJ-45: 8-pin modular jack
- Power: Connector

Power

- Power Supply: External 120 VAC to 12 VAC wall-mount power supply
- Power Consumption: Less than 6 watts typical, from 120 VAC

Environmental

- Ambient Operating Temperature: +32 to +104°F (0 to +40°C)
- Relative Humidity: 5 to 95%, non-condensing

EMC/Safety/Regulatory Certifications

- EMC: FCC Part 15, Class B
- UL Standard 60950, 3rd Edition
- CAN/CSA Standard C22.2 No. 60950
- UL
- CSA
- ACTA 968-A
- Industry Canada CS03

18. HELP

If you select **Help** from the menu bar, a message from the help screens will be displayed. The type of message displayed depends on the menu that you are viewing. If you are viewing a pop-up screen, click the **help** link in the pop-up screen to obtain help messages.

A

About

This screen provides information about the Router. The following settings are displayed.

About	
Model Number	Router manufacturer's model number.
Serial Number	Router manufacturer's serial number.
MAC Address	Ethernet MAC (i.e., hardware) Address of the Router.
Software Version	Routers application software version number.
Software Model	Router application type.
Description	Description of the Router protocol processing application software.
Boot Loader	Routers boot loader version number.

Advanced Home Page

The advanced home page offers the same functionality as the home page but adds the ability to change the connection profile settings defined in the Router.

About	
Edit	An “Edit” link is added for each connection profile. Selecting this link will pop up a window that allows the connection profile settings to be changed.
New Connection	The “New Connection” link will pop up a window to allow the creation of a new connection profile.

ATM Loopback

ATM Loopback	
ATM Loopback	This setting enables 0/21 loopback. Westell recommends that you <u>do not</u> change this setting.

B

Backup/Restore

This option allows the Router configuration to be backed up to or restored from a secure location in flash. The following options are displayed.

Backup/Restore	
Current becomes Back-up	Selecting this command button will backup the current active configuration to the secure flash location.
Back-up becomes Current	This command button will restore the previously stored configuration from the flash location.
Factory becomes Current	This option will restore the Router to the state that it arrived in from the factory.

C

Change Administration Password

The Router has an administrator password. This password protects the Router from any unauthorized modifications to the configuration setting in the Router. The following settings are displayed.

Change Administration Password	
Enter Administration Name	This field specifies the Administrator's name. Only one administrator can be defined.
Enter/Verify Administration Password	This field specifies the password required to enable administrator access. The password must be entered twice to ensure that the password has been entered correctly.

Connection Summary

Connection Summary	
Connection Summary	The connection profile screen displays summary information about the Router. The connection state is shown along with the amount of traffic has passed through the Router. Each connection profile is listed with its associated usage information.

D

Diagnostics Help

This screen provides tools for diagnosing PPP connection problems. Some tests depend on the Router status and the capabilities exercised by previous tests, which may prevent other types of testing.

Beginning of Diagnostics Help screens

DSL

The Router status checks the Router connection. The following is a list of the possible responses:

DSL	
Up	The Router is operating correctly and has obtained synchronization with the opposing Router.
Down	Explanation: The Router is operating correctly, but has not synchronized with the opposing DSLAM. Solution: First, check to be sure that the cable connecting your Router to the ADSL wall jack is properly connected at both ends. If the cable is properly connected and the Router does not synchronize, try another phone cable. Next, wait for the Router to train. It can sometimes take as long as two minutes for the Router to train. If it still has not come into synchronization, power cycle the Router. If you have tried the approach above and the Router still does not synchronize, contact your service provider.

PPPoE

The PPPoE status indicates if a PPPoE session is established (i.e., if the PPPoE Discovery procedure has completed). The following is a list of the possible responses:

PPPoE	
Session up	A valid PPPoE session has been detected.
no session	Currently there is no active PPPoE session. A PPP session must be connected from the homepage screen.
initiating session	The connection process for a PPPoE session has been initialized. It can sometimes take a few seconds for the PPPoE Discovery procedure to complete. Wait 10-15 seconds and try again. If the PPPoE Discovery still cannot complete, there may be a configuration issue with your service provider's equipment. Verify your VPI/VCI settings (on the LAN Advanced page) and contact your ISP provider.
Session halted	A successful PPPoE session was halted. A PPP session must be connected from the homepage screen.
passed	A valid PPPoE session was established.
Session failure	A PPPoE session could not be made. There may be a configuration issue with your service provider's equipment. Verify your VPI/VCI settings (on the LAN Advanced page) and contact your provider.

PPP

This field displays the PPP Connection status. A PPPoE or PPPoA session must already be established. The following is a list of the possible responses:

PPP	
Connection up	The Router has established a PPP connection.
no connection	There is no PPP connection. A PPP session must be connected from the homepage screen.
initiating connection	The PPP connection process has been initialized.
Connection halted	A successful PPP connection was halted. Solution: A PPP session must be connected from the homepage screen.
Cannot connect	Explanation: A PPP connection could not be made because of a PPPoE session failure.
Authorization failure	The username or password is incorrect. Verify that the username and password your Service Provider issued are entered correctly.
Link control protocol failed	Try re-establishing the session (from the home page). If this doesn't help, there may be a configuration issue or other failure with your provider's equipment. Contact your service provider.

Self Test

The Self Test performs an integrity check of certain internal components of the Router. The following is a list of the possible responses:

Self Test	
Success	The Router is operating correctly.
Flash Corrupt	Explanation: The self-test process has detected a problem with internal flash memory. Solution: Restart the Router. If the error persists, contact your service provider.

PING ISPs' Router

The IP remote router test performs an IP network check (i.e., an IP Ping) of the Service Provider's Router. This test verifies that the Router can exchange IP traffic with an entity on the other side of the DSL line. The following is a list of the possible responses:

PING ISP's Router	
Success	The Router has detected an IP remote router connection.
No Response	Explanation: This message will occur when an IP remote Router does not answer the IP Ping. Solution: This test fails when the provider's Router does not give its IP address to the Router during session establishment. Try Pinging another host, using the Ping test near the bottom of the Diagnostic screen. If you are able to Ping any host, or even if you are able to find an IP address for a given host name (try "www.yahoo.com"), then the failure of the "IP Remote Router" test is moot, because the success of the Ping demonstrates that you are getting IP traffic across the DSL line. If the separate Ping fails as well, contact your service provider.
could not test	Explanation: Test could not be executed because of Router status.

DNS

The DNS test issues a request to try to resolve the name of a particular host. The host name is entered in the input box. The following is a list of the possible responses:

DNS	
Success	The Router has successfully obtained the resolved address. The IP address is shown below the host name input box
No Response	Explanation: The Router has failed to successfully obtain the resolved address. Solution: Determine the IP addresses of your DNS servers (from the home page, click "Edit" and then "Advanced"), and then use the Ping test near the bottom of the Diagnostic screen to try to Ping those addresses. This may provide useful information when you contact your service provider and speak with Technical Support.
Host not found	Explanation: The DNS Server was unable to find an address for the given host name. Solution: That host may no longer be available on the Internet. Try entering a different host name.
No data, enter host name	Explanation: There must be a host name entered in the input box.
could not test	Explanation: Test could not be executed because of Router status.

PING

Select **PING** to check IP continuity to a remote computer either within or beyond the Service Providers network.

Enter either the IP address or the hostname of the remote host computer into the input box to the right of the Test button. If you Ping by name, DNS will be used to look up the appropriate IP address for that name.

The following is a list of the possible responses:

PING	
Success	The Remote Host Computer was detected.
No Response	Explanation: This message will occur when there was no response to the Ping from the remote computer. Solution: Bear in mind that many hosts on the Internet are configured for security reasons to not respond to IP Ping messages. If you get a success from the DNS test using the same host name, chances are good that your connection is fine, whether you can Ping the named host or not.
No name or address to PING	Explanation: There must be a host name or IP address entered in the input box in order for the Router to Ping.
could not test	Explanation: Test could not be executed because of Router status.

End of Diagnostic Help Screens

DHCP Configuration

This screen contains the settings which control how the ADSL router interacts with the local devices connected to the router. Westell does not recommend that you change these settings. The following settings are displayed.

DHCP	
DHCP Server	Dynamic Host Configuration Protocol (DHCP) is an Internet standard that allows the ADSL router to automatically assign IP addresses to devices connected on the LAN network. It is advised that this is enabled for Private LAN.
DHCP Start Address (If DHCP is enabled)	This setting specifies the start of the IP address pool that the Router uses to assign IP addresses to local devices.
DHCP End Address (If DHCP is enabled)	This setting specifies the end address of the IP address pool used for automatic configuration of local devices.
DHCP Lease (If DHCP is enabled)	This setting specifies the DHCP lease time.

Diagnostic Log

Diagnostic Log	
All	This option lists both the Connection and the System logs.
Connection	This option lists all events related to connection activity (any traffic on the USB, Ethernet, or DSL ports).
System	This option lists all events related to system activity (time, errors, boot information, etc.)

DNS Configuration

The Router has a built-in DNS server. The Router has a feature called "Dynamic DNS." When an IP address is assigned, the Router will interrogate the new device for a machine name using several well-known networking protocols. Any names learned will dynamically be added to the DNS server's table of local hosts. A static host assignment is needed only if the new device does not support any of the well-known protocols. The following settings are displayed.

DNS Configuration Screen	
Domain Name	The name of your network. This uses the internet standard for delineating domain names.
Static Host Assignment	This table allows the creation and maintenance of manually configured DNS entries.
Dynamic Host Assignment	This table shows the current list of devices that have automatically provided information.

E

Edit Connection Profiles

This screen facilitates the changing of connection profile parameters. The following settings are displayed.

Edit Connection Profiles	
Connection Name	This field is a description of the default connection profile that the Router will use. Feel free to use whatever description you desire.
Account ID	Your account ID is supplied by your ISP. This text string uniquely identifies you with your ISP.
Account Password	The Account Password is a key phrase or text string that verifies your identity to the ISP.
Service Profile	The Router stores several service profiles. A service profile is a collection of settings for the built-in firewall and NAT. These settings control which applications are enabled to talk through the Router. This selection specifies which service profile is used when the Router is using this connection.
Manual/On Demand/Always ON	These radio buttons specify how this connection profile is used. A manual setting requires that this connection must be manually established through the "homepage" connection button. When this is set to auto, the Router will monitor the network traffic and determine when a connection needs to be made. The connection process will happen automatically the "Always ON" selection causes the Router to aggressively establish a connection with your ISP. Whenever the Router detects that the connection to your ISP is down, it will try to re-establish that connection.
Time Out Enable/Connection Time Out	Selecting this option will enable the disconnect timeout. If this option is enabled the Router will monitor the ISP connection for activity. If there is no activity for the timeout period, the Router will disconnect from the ISP.
Edit VC Connection	This screen is an advanced screen. Modifying parameters identified on this screen can cause severe disruption of your service. VC stands for "Virtual Connection." A VC identifies a connection through the service provider's ATM network to your ISP. It is not recommended that you change anything on these pages unless explicitly instructed by your service provider.

F

Firewall Log

This screen is an advanced diagnostics screen. It alerts you of noteworthy information sent to your Router from the Internet. One thousand entries can be made, but a maximum of 50 entries are displayed at a time. Once 1000 entries have been logged, the oldest entry is removed to make space for new entries as they occur.

Firewall Log	
Details	This option gives more information about the specific log entry
Page Numbers	This option navigates you to the corresponding range of entries. The most recent entries are always on the highest numbered page.
Clear Log	This option removes all entries from the log.
Print/Savable Format	This option opens a new window that contains a list of all logged packets that can be saved or printed.

Firewall Settings

This screen is an advanced configuration screen. It allows you to set the level of security you wish to have on your local network. All security levels except “None” protect against known Internet attacks and devices that attempt to gain remote access to your Router. The following settings are displayed.

Firewall Settings	
High	This security level only allows basic Internet functionality. Only Mail, News, Web, FTP, and IPSEC are allowed. No other traffic is allowed. Another restriction of high security is that it can’t be modified by NAT configuration options. With High security, you are guaranteed to only pass the previously mentioned traffic.
Medium	This security level only allows basic Internet functionality by default. Like High security, Medium security, allows customization through NAT configuration, so you can enable the traffic that you want to pass.
Low	The low security setting will allow all traffic except for known attacks. With low security, your Router is visible by other computers on the Internet.
Custom	Custom is a very advanced configuration option that allows you to edit the firewall configuration directly. Only the most expert users should try this.

H

Home Page

The home page gives you a quick summary of the Router’s state. The following settings are displayed.

Home Page	
Connection Overview	The Connection Overview section displays the status of the DSL connection. The DSL must show a state of “UP” in order for the Router to communicate with your service provider’s network.
Connection Name	The Connection Name section displays all of the connection profiles that are defined by the Router. A connection profile is information that the Router needs to establish a connection to your ISP. The “PPP Status” columns will show a status of “UP” if the Router is currently using that profile to communicate. The command button allows you to control the connection state.
Profile Editor	Selecting the “Profile Editor” link will allow you to define or change any of the connection profile settings.

L

LAN Configuration

This screen contains the setting that controls how the Router interacts with the local devices connected to the Router. Westell does not recommend that you change these settings. The following settings are displayed.

LAN Configuration	
Router IP Address	This controls the IP address that the Router uses for local communication.

Subnet Mask	This setting specifies the subnet mask to use to determine if an IP address belongs to your local network.
DHCP Start Address	This setting specifies the start of the IP address pool that the Router uses to assign IP addresses to local devices.
DHCP End Address	This setting specifies the end address of the IP address pool used for automatic configuration of local devices.
DNS Server Enable	DNS stands for Domain Name System. This is an Internet standard that facilitates communication among devices. This allows a name to be used when specifying a device instead of an IP address. Normally you want this enabled.
DHCP Server Enable	DHCP stands for Dynamic Host Configuration Protocol. This is an Internet standard that allows the Router to automatically assign IP addresses to devices connected on the LAN network. It is advised that this option is set to Enabled.

LAN Statistics

This page contains information regarding the configuration and status of your Local LAN. The following settings are displayed.

LAN Configuration	
Device IP Address	This displays the IP address that the ADSL router uses for local communication.
DHCP NetMask	This displays the subnet address that the ADSL router's DHCP server issues in DHCP responses.
DHCP Start Address	This setting specifies the start of the IP address pool that the Router uses to assign IP addresses to local devices.
DHCP End Address	This setting specifies the end address of the IP address pool used for automatic configuration of local devices.
DHCP Server Status	Displays the status, "ON" or "OFF" of the DHCP Server
DHCP Server	Displays which network "Public" or "Private" the DHCP server is serving IP addresses for.
Devices on LAN	This page displays the current devices the Router has found on your LAN. The name of the device, the Ethernet MAC address, and the status, "Active" or "Inactive" is displayed in the table.

P

Private LAN

This page contains the settings that control how the ADSL router interacts with the local devices connected to the router. It is not recommended that these settings be changed. The following settings are displayed.

Private LAN	
Private LAN DHCP Server Enable	Dynamic Host Configuration Protocol (DHCP) is an Internet standard that allows the ADSL router to automatically assign IP addresses to devices connected on the LAN network. It is advised that this is enabled for Private LAN.
Private LAN Enable	This setting enables the Private NAT'ed interface. It is advised to leave this enabled.
Modem IP Address	This controls the IP address that the ADSL router uses for local communication.
Subnet Mask	This setting specifies the subnet mask to use to determine if an IP address

	belongs to your local network.
DHCP Start Address (If DHCP is enabled for Private LAN)	This setting specifies the start of the IP address pool that the Router uses to assign IP addresses to local devices.
DHCP End Address (If DHCP is enabled for Private LAN)	This setting specifies the end address of the IP address pool used for automatic configuration of local devices.
DHCP Lease (If DHCP is enabled for Private LAN)	This setting specifies the DHCP lease time.

Protocol

Protocol	
Protocol	This screen informs the Router which networking protocol to use when communicating with your ISP. This information is provided by your ISP.

Public LAN

This screen contains the settings that control how the ADSL router interacts with the local devices connected to the router. It is not recommended that these settings be changed. The following settings are displayed.

Public LAN	
Public LAN DHCP Server Enable	Dynamic Host Configuration Protocol (DHCP) is an Internet standard that allows the ADSL router to automatically assign IP addresses to devices connected on the LAN network. It is advised that this is enabled for Private LAN.
Public LAN Enable	This setting enables the Public interface. This feature allows a global subnet to exist behind your Router.
Modem IP Address	This controls the IP address that the ADSL router uses for local communication.
Subnet Mask	This setting specifies the subnet mask to use to determine if an IP address belongs to your local network.
DHCP Start Address (If DHCP is enabled for Public LAN)	This setting specifies the start of the IP address pool that the Router uses to assign IP addresses to local devices.
DHCP End Address (If DHCP is enabled for Public LAN)	This setting specifies the end address of the IP address pool used for automatic configuration of local devices.
DHCP Lease (If DHCP is enabled for Public LAN)	This setting specifies the DHCP lease time.

Q

Quality of Service

Quality of Service	
Quality of Service	This feature helps ensure data integrity in high-speed transmissions. This feature provides the capability to partition network traffic into multiple priority levels or classes of service. After packet classification, other QoS features can be utilized to assign the appropriate traffic handling policies including congestion management, bandwidth allocation, and delay bounds for each traffic class.

R

Remote Access

This page allows you to configure your Router so that it can be configured remotely. Once enabled, this feature can be manually disabled, or it will automatically disable after 20 minutes of configuration inactivity.

Remote Access	
Password	This is the password a remote user must enter to access your Router's interface. It must be at least 4 characters long and contain no spaces.
URL	This field contains the URL that must be placed in a remote PC's web browser in order to communicate with your Router. If this field says "Not Connected," you are not currently connected to the Internet.
Enable Remote Access	When you have clicked on this button, entered a valid password, and connected to the Internet, Remote Access will be enabled.
Disable Remote Access	When you have clicked on this button, Remote Access will be disabled.

Routing Information Protocol

Remote Access	
RIP	RIP (Routing Information Protocol) is a widely used protocol for managing router information within a self-contained network such as a corporate local area network or an interconnected group of such LANs.

S

Single Static IP

This page contains the settings that would allow the PPP address received from the network to be propagated to a single LAN device behind the Router.

Single Static IP	
WAN IP Address	This is the PPP IP address the ISP has assigned the Router.
Selection box	<p>This box contains the devices available to share the Single Static IP address the ISP has assigned the Router. The names listed in the select box will be populated by the Router's DHCP server based on DHCP requests. If a device's name cannot be determined, the current IP address of the device will be placed in the list.</p> <p>When the feature is enabled, the active machine will be highlighted in the select box and be displayed at the bottom of the page with the "disable" button.</p> <p>When the feature is disabled, no device in the select box will be highlighted and the "enable" button will be available.</p> <p>When the "User Configured PC" is selected, a local PC must be configured manually with the WAN IP address as its Ethernet adapter's address.</p>

T

Trace Route

The Trace feature allows you to perform an IP trace route to a remote computer either within or beyond the Internet service provider's network. Enter either the IP address or the hostname of the remote host computer into the input box to the right of the Trace button. If you trace by name, DNS will be used to look up the appropriate IP address for that name.

Trace	
Success	Trace will display its progress in the text box. Trace will show three round trip times and the DNS name (if available) of each intermediate router.
Failure	Trace will display "*" when it does not receive a response or cannot determine the DNS name of an intermediate router. This is not necessarily an error, as some routers are configured to ignore trace route packets or do not have DNS name.

Turbo TCP

Turbo	
<p>Turbo TCP is a sophisticated network traffic prioritization and queuing method that dramatically improves the performance of downstream TCP/FTP/HTTP transfers under heavy upstream bandwidth utilization conditions.</p> <p>This feature first assigns a high priority to TCP signaling packets in the upstream direction, then places the packet in one of several transmit queues based on this priority.</p> <p>Packets of unspecified priority, like TCP or UDP data, are assigned a low priority and placed in a low priority queue.</p> <p>The packets in the high priority queues are then transmitted before packets in the lower priority queues minimizing any transmit delays.</p> <p>Minimizing the transmit delay of the TCP messages upstream enables the server to send the TCP data downstream faster, resulting in a substantial throughput gain.</p>	

U

Update Device

Update Device (Software Upgrade)	
Update Device (Software Upgrade)	This screen is used to upgrade the Router's application image. The application image is specified by entering in the filename or by using the browse button.

User Name

This screen is asks for information that will allow the Router to make a connection to the ISP on your behalf. The Router will need to know your Account ID and Account Password. This information is stored in the Router.

User Name	
Connection Name	This is a description of the default connection profile, which the Router will use. Feel free to use whatever description you desire.
Account ID	Your Account Id is supplied by your ISP and is a text string that uniquely identifies you with your ISP.
Account Password	The Account Password is a key phrase or text string that verifies your identify to the ISP.

V

VC Configuration

VC Configuration Screen	
VC Configuration	This screen is an advanced screen. Modifying parameters on this screen can cause severe disruption of your service. VC stands for “Virtual Connection.” A VC identifies a connection through the service provider’s ATM network to your ISP. It is not recommended that anything be changed on these pages unless explicitly instructed by your service provider.

VLAN

VC Configuration Screen	
VLAN	A virtual (or logical) LAN is a local area network with a definition that maps workstations on some other basis than geographic location.

VPI/VCI

VPI/VCI	
VPI/VCI	This screen asks for information that the Router needs to establish a communication channel to your ISP. The VPI and VCI values are supplied by your ISP.



19. TECHNICAL SUPPORT INFORMATION

Westell Technical Support

If technical assistance is required, contact Westell by using one of the following options:

North America

Phone: 1-630-375-4500

U.K./Europe

Phone: (44) 01256 843311

Visit Westell at www.Westell.com to view frequently asked questions and enter on-line service requests, or send email to global_support@westell.com to obtain additional information.

20. WARRANTY INFORMATION

Warranty

Westell warrants this product free from defects at the time of shipment. Westell also warrants this product fully functional for the period specified by the terms of the warranty. Any attempt to repair or modify the equipment by anyone other than an authorized Westell representative will void the warranty.

Repairs

Westell will repair any defective Westell equipment without cost during the warranty period if the unit is defective for any reason other than abuse, improper use, or improper installation, or acts of nature. Before returning the defective equipment, request a **Return Material Authorization (RMA)** number from Westell. Once an RMA number is obtained, return the defective unit, freight prepaid, along with a brief description of the problem to:

North America

Westell, Inc.

ATTN: R.G.M Department

750 N. Commons Drive

Aurora, IL 60504-7940 USA

U.K./Europe

Westell, Ltd.

Ringway House

Bell Road

Daneshill

Basingstoke

RG24 8FB

United Kingdom

Westell will continue to repair faulty equipment beyond the warranty period for a nominal charge. Contact a Westell Technical Support Representative for details.

21. SOFTWARE LICENSE AGREEMENT

READ THE TERMS AND CONDITIONS OF THIS LICENSE AGREEMENT CAREFULLY. THIS SOFTWARE IS COPYRIGHTED AND LICENSED (NOT SOLD). BY INSTALLING AND OPERATING THIS PRODUCT, YOU ARE ACCEPTING AND AGREEING TO THE TERMS OF THIS LICENSE AGREEMENT. IF YOU ARE NOT WILLING TO BE BOUND BY THE TERMS OF THIS LICENSE AGREEMENT, YOU SHOULD PROMPTLY RETURN THE SOFTWARE AND HARDWARE TO WESTELL TECHNOLOGIES, INC. THIS LICENSE AGREEMENT REPRESENTS THE ENTIRE AGREEMENT CONCERNING THE SOFTWARE BETWEEN YOU AND WESTELL TECHNOLOGIES, INC. (REFERRED TO AS "LICENSOR"), AND IT SUPERSEDES ANY PRIOR PROPOSAL, REPRESENTATION, OR UNDERSTANDING BETWEEN THE PARTIES.

1. License Grant. Licensor hereby grants to you, and you accept, a nonexclusive license to use the Compact Disk (CD) and the computer programs contained therein in machine-readable, object code form only (collectively referred to as the "SOFTWARE"), and the accompanying User Documentation, only as authorized in this License Agreement. The SOFTWARE may be used only in connection with the number of systems for which you have paid license fees as dictated in your support agreement. You agree that you will not assign, sublicense, transfer, pledge, lease, rent, or share your rights under this License Agreement. You agree that you may not nor allow others to reverse assemble, reverse compile, or otherwise translate the SOFTWARE.

You may retain the SOFTWARE CD for backup purposes only. In addition, you may make one copy of the SOFTWARE in any storage medium for backup purposes only. You may make one copy of the User's Manual for backup purposes only. Any such copies of the SOFTWARE or the User's Manual shall include Licensor's copyright and other proprietary notices. Except as authorized under this paragraph, no copies of the SOFTWARE or any portions thereof may be made by you or any person under your authority or control.

2. Licensor's Rights. You acknowledge and agree that the SOFTWARE and the User's Manual are proprietary products of Licensor protected under U.S. copyright law. You further acknowledge and agree that all right, title, and interest in and to the SOFTWARE, including associated intellectual property rights, are and shall remain with Licensor. This License Agreement does not convey to you an interest in or to the SOFTWARE, but only a limited right of use revocable in accordance with the terms of this License Agreement.

3. License Fees. The fees paid by you under the support agreement are paid in consideration of the licenses granted under this License Agreement.

4. Term. This License Agreement is effective upon your opening of this package and shall continue until terminated. You may terminate this License Agreement at any time by returning the SOFTWARE and all copies thereof and extracts there from to Licensor. Licensor may terminate this License Agreement upon the breach by you of any term hereof. Upon such termination by Licensor, you agree to return to Licensor the SOFTWARE and all copies and portions thereof.

5. Limited Warranty. Licensor warrants, for your benefit alone, for a period of 90 days from the date of commencement of this License Agreement (referred to as the "Warranty Period") that the SOFTWARE CD in which the SOFTWARE is contained are free from defects in material and workmanship. Licensor further warrants, for your benefit alone, that during the Warranty Period the SOFTWARE shall operate substantially in accordance with the functional specifications in the User's Manual. If during the Warranty Period, a defect in the SOFTWARE appears, you may return the SOFTWARE to Licensor for replacement. You agree that the foregoing constitutes your sole and exclusive remedy for breach by Licensor of any warranties made under this Agreement.



EXCEPT FOR THE WARRANTIES SET FORTH ABOVE, THE SOFTWARE CD, AND THE SOFTWARE CONTAINED THEREIN, ARE LICENSED "AS IS," AND LICENSOR DISCLAIMS ANY AND ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

6. Limitation of Liability. Licensor's cumulative liability to you or any other party for any loss or damages resulting from any claims, demands, or actions arising out of or relating to this Agreement shall not exceed the license fee paid to Licensor for the use of the SOFTWARE. In no event shall Licensor be liable for any indirect, incidental, consequential, special, or exemplary damages or lost profits, even if Licensor has been advised of the possibility of such damages. **SOME STATES DO NOT ALLOW THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.**

7. Governing Law. This License Agreement shall be construed and governed in accordance with the laws of the State of Illinois. You submit to the jurisdiction of the state and federal courts of the state of Illinois and agree that venue is proper in those courts with regard to any litigation arising under this Agreement.

8. Costs of Litigation. If any action is brought by either party to this License Agreement against the other party regarding the subject matter hereof, the prevailing party shall be entitled to recover, in addition to any other relief granted, reasonable attorney fees and expenses of litigation.

9. Severability. Should any term of this License Agreement be declared void or unenforceable by any court of competent jurisdiction, such declaration shall have no effect on the remaining terms hereof.

10. No Waiver. The failure of either party to enforce any rights granted hereunder or to take action against the other party in the event of any breach hereunder shall not be deemed a waiver by that party as to subsequent enforcement of rights or subsequent actions in the event of future breaches.



22. PUBLICATION INFORMATION

Westell® UltraLine Home DSL Router (Models 7400, 7401)
User Guide Part Number 030-300381 Rev. A
January 2004

© 2004 Westell, Inc.
All rights reserved.

Westell, Inc.
750 North Commons Drive
Aurora, Illinois 60504 USA
www.westell.com

All trademarks and registered trademarks are the property of their respective owners.

