

# KENWOOD

**KDC-MP6090R**

CD-RECEIVER

## **INSTRUCTION MANUAL**

KENWOOD CORPORATION

B64-1870-00 (EN)



## Contents

### Safety precautions

Safety precautions .....	3
Handling Compact discs .....	5
Notes on playing MP3 files .....	7

### General features

Power .....	9
Volume .....	9
Attenuator .....	9
Switching Modes .....	10
Loudness .....	10
System Q .....	10
Audio Control Setting .....	11
Speaker Setting .....	12
Clock display .....	12
TEL Mute .....	12
Theft Deterrent Faceplate .....	12

### Tuner features

Tuning .....	14
Station Preset Memory .....	14
Switching Display for Tuner .....	15

### RDS features

RDS (Radio Data System) .....	16
Enhanced Other Network .....	16
Alarm .....	16
Traffic Information Function .....	17
Presetting Volume for Traffic Information/News .....	17
Radio Text Scroll .....	18
Programme Type (PTY) Function .....	18
Changing Language for Programme Type(PTY) Function .....	19

### CD/External disc control features

Playing CDs .....	20
Playing Other Disc mode .....	21
Switching Display for Discs .....	21
Fast Forwarding and Reversing Disc Play .....	22
Track Search .....	22
Disc Search .....	22
Track / Disc Repeat .....	22
Track Scan .....	23
Random Play .....	23
Magazine Random Play .....	24
Presetting Disc Names (DNPS) .....	24
Text / Title Scroll .....	25

### MP3 player features

Playing MP3 Files .....	26
File Search .....	27
Folder Search .....	27
Fast Forwarding and Reversing MP3 Play .....	28
File / Folder Repeat .....	28
Folder Select .....	28
Random Play .....	29
Switching Display for MP3 .....	29
Name Scroll for MP3 .....	30

### Menu settings

Menu System .....	31
Code Security Function .....	32
Touch Sensor Tone .....	33
Manual Time Adjustment .....	33
Automatic Time Adjustment .....	33
Selectable Illumination .....	34
Switching Graphic Display .....	34
Contrast Adjustment .....	34
Dimmer .....	34
External Amp Control .....	34
News Bulletin Function with PTY News Timeout Setting .....	34
Local Seek Function .....	35
Selecting Tuning Mode .....	35
Auto Memory Entry .....	36
AF (Alternative Frequency) Function .....	36
Restricting RDS Region (Region Restrict Function) .....	36
Auto TP Seek Function .....	36
Monaural Reception .....	37
Reading the MP3 ID3 tag .....	37
Switching the MP3 title information display .....	37
Text Scroll .....	37
Power OFF Timer .....	38

### Installation

Accessories .....	39
Installation Procedure .....	39
Connecting Cables to Terminals .....	40
Installation .....	41

### Troubleshooting Guide.....44

### Specifications .....48

## Safety precautions

### **▲WARNING**

**To prevent injury and/or fire, take the following precautions:**

- Insert the unit all the way until it is fully locked in place. Otherwise it may fly out of place during collisions and other jolts.
- When extending the ignition, battery or ground cables, make sure to use automotive-grade cables or other cables with an area of 0.75mm<sup>2</sup> (AWG18) or more to prevent cable deterioration and damage to the cable coating.
- To prevent short circuits, never put or leave any metallic objects (e.g., coins or metal tools) inside the unit.
- If the unit starts to emit smoke or strange smells, turn off the power immediately and consult your Kenwood dealer.
- Make sure not to get your fingers caught between the faceplate and the unit.
- Be careful not to drop the unit or subject it to strong shock.  
The unit may break or crack because it contains glass parts.
- Do not touch the liquid crystal fluid if the LCD is damaged or broken due to shock.  
The liquid crystal fluid may be dangerous to your health or even fatal.  
If the liquid crystal fluid from the LCD contacts your body or clothing, wash it off with soap immediately.

### **▲CAUTION**

**To prevent damage to the machine, take the following precautions:**

- Make sure to ground the unit to a negative 12V DC power supply.
- Do not open the top or bottom covers of the unit.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- Do not subject the faceplate to excessive shock, as it is a piece of precision equipment.
- When replacing a fuse, only use a new one with the prescribed rating. Using a fuse with the wrong rating may cause your unit to malfunction.
- To prevent short circuits when replacing a fuse, first disconnect the wiring harness.
- Do not place any object between the faceplate and the unit.
- During installation, do not use any screws except for the ones provided. The use of improper screws might result in damage to the main unit.
- Do not apply excessive force to the moving faceplate. Doing so will cause damage or malfunction.
- Do not apply excessive force to the open faceplate or place objects on it. Doing so will cause damage or breakdown.

### **IMPORTANT INFORMATION**

**About the disc changer to be connected:**

To connect a disc changer having the "O-N" switch to this unit, set the "O-N" switch to "N".

When you connect a model with no "O-N" switch, the converter cord CA-DS100 available as an option may be required. For details, consult your Kenwood dealer. If a model with no "O-N" switch is connected, some unavailable functions and information that cannot be displayed are generated, such as the DNPS, DNPP, Magazine random play, and CD Text display. Note that none of the KDC-C100, KDC-C302, C205, C705, and non-Kenwood CD changers can be connected.

### **▲CAUTION**

**You can damage both your unit and the CD changer if you connect them incorrectly.**


**Do Not Load 8-cm (3-in.) CDs in the CD slot**

If you try to load an 8-cm CD with its adapter into the unit, the adapter might separate from the CD and damage the unit.

## Safety precautions

### NOTE

- If you experience problems during installation, consult your Kenwood dealer.
- Press the reset button if the CD auto changer is first controlled and operates incorrectly. The original operating condition will return.



Reset button

- Characters in the LCD may become difficult to read in temperatures below 41 °F (5 °C).
- We strongly recommend the use of the Code Security function (see p.32) to prevent theft.
- The illustrations of the display and the panel appearing in this manual are examples used to explain more clearly how the controls are used. Therefore, what appears on the display in the illustrations may differ from what appears on the display on the actual equipment, and some of the illustrations on the display may represent something impossible in actual operation.
- The functions that can be used and the information that can be displayed will differ depending on the external disc players being connected.

### Cleaning the Faceplate Terminals

If the terminals on the unit or faceplate get dirty, wipe them with a dry, soft cloth.

### Cleaning the Unit


If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the faceplate is stained badly, wipe the stain off with a cloth moistened with neutral cleaner, then wipe neutral detergent off.

### CAUTION

Applying spray cleaner directly to the unit may affect its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erases characters.

### Cleaning the CD Slot

As dust can accumulate in the CD slot, clean it occasionally. Your CDs can get scratched if you put them in a dusty CD slot.

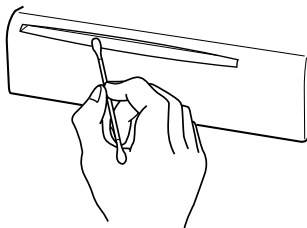

### The marking of products using lasers (Except for some areas)

## CLASS 1 LASER PRODUCT

The label is attached to the chassis/case and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.

### Lens Fogging


Right after you turn on the car heater in cold weather, dew or condensation may form on the lens in the CD player of the unit. Called lens fogging, CDs may be impossible to play. In such a situation, remove the disc and wait for the condensation to evaporate. If the unit still does not operate normally after a whilst, consult your Kenwood dealer.

## Handling Compact discs


**Playing a CD that is dirty, scratched or warped can cause the sound to skip and the unit to operate incorrectly, resulting in worsened sound quality. Take the following precautions to prevent your CDs from getting scratched or damaged.**

### Handling CDs

- Do not touch the recorded side of the CD (i.e., the side opposite the label) when holding it.

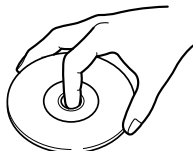

- The reflective film on a CD-R or a CD-RW is more fragile than that on an ordinary music CD, and may peel off if scratched. Fingerprints on a CD-R or CD-RW are also more likely to cause skipping when the disc is played. For these reasons, handle the disc very carefully. Detailed handling instructions will appear on the CD-R or CD-RW package: read this information carefully before using the disc.
- Do not stick tape on either side of the CD.




### Storing CDs

- Do not store CDs in areas exposed to direct sunlight – such as a car seat or above the fascia panel (dashboard) – or other hot places. A CD-R or CD-RW is more susceptible than a music CD to damage from high temperatures and humidity, and in some cases, may become unusable if left in the car for long periods of time.
- Remove CDs from the unit when not listening to them for a whilst, and put them back in their cases. Do not stack CDs that have been removed from their cases or prop them against something.


### Cleaning CDs

If a CD has become dirty, wipe it off gently using a commercially available cleaning cloth or a soft cotton cloth, starting from the centre of the disc and moving outward. Do not clean CDs with conventional record cleaners, anti-static formulas, or chemicals such as paint thinner or benzene.



### Checking New CDs for Burrs

When playing a new CD for the first time, check that there are not any burrs stuck to the perimeter of the disc or in the central hole. CDs with burrs stuck on them may not load properly or may skip whilst playing. Remove burrs using a ballpoint pen or a similar utensil.

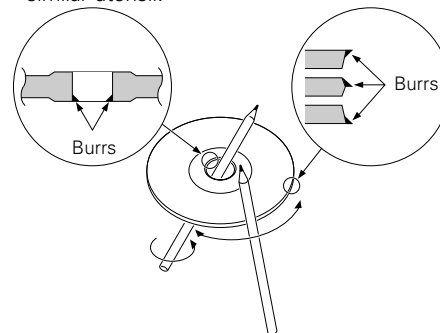


## Handling Compact discs

### Do Not Load CD Accessories in Slot

Do not use commercially available CD accessories that can be loaded into the CD slot, such as stabilisers, protective sheets, or CD cleaning discs, since they can cause the unit to malfunction.

### Removing the CD


Only remove the CD from the machine in a horizontal direction. You may damage the surface of the CD if you try pulling it down as it ejects.

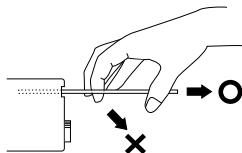

### Do Not Use Special Shape CDs

- Be sure to use round shape CDs only for this unit and do not use any special shape CDs. Use of special shape CDs may cause the unit to malfunction.



- Be sure to use CDs with disc mark  only for this unit.
- CD-Rs and CD-RWs which have not undergone finalization processing cannot be played. (For more information on finalization processing, refer to the manual for your CD-R/CD-RW writing software or CD-R/CD-RW recorder.) Additionally, depending on the recording status, it may prove impossible to play certain CDs recorded on CD-R or CD-RW.

### Do Not Use CDs with Sticker on the Labelled Side

Do not use the CD with the label sticker stuck on it.

Using such a CD may cause the CD to be deformed and the sticker to peel off, resulting in malfunction of the unit.

## Notes on playing MP3 files

This unit can play MP3 files.

Note, however, that the MP3 file recording media and formats acceptable are limited.

When writing MP3 files, pay attention to the following restrictions.

### Acceptable media

The MP3 file recording media acceptable to this unit are CD-ROM, CD-R, and CD-RW.

### Acceptable medium formats

The medium formats acceptable to this unit are ISO 9660 Level 1 and Level 2 excluding the extended formats. When reading an MP3 file written in a format other than ISO 9660 Level 1 or Level 2, the unit may fail to play the file normally or display the file or folder name correctly.

The major specifications of ISO 9660 Level 1 and Level 2 are as follows:

- Maximum number of directory levels: 8
- Maximum number of files and folders per directory level: 253 (files and folders in total)
- Characters available to file and folder names: A - Z, 0 - 9, \_(underscore)
- Maximum number of characters in file names :  
 Level 1: 12 (including a separator "." and a 3-character extension)  
 Level 2: 31 (including a separator "." and a 3-character extension)

### Settings for your MP3 encoder and CD writer

When you use your MP3 encoder to compress audio data to an MP3 file, set the transfer bit rate of the encoder to fixed 128 kbps.

When you use your CD writer to record MP3 files up to the maximum disc capacity, disable additional writing. For recording on an empty disk up to the maximum capacity at once, check Disc at Once.

### Entering ID3 tag

Displayable ID3 tag is ID3 version 1 and 1.1; the character code is ASCII (see A List of Codes).

0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
				0	@	P	`	^	~	*	A	D	à	ò	
1		!	1	A	Q	a	q	i	±	À	N	á	ñ		
2		"	2	B	R	b	r	é	²	Â	O	â	ò		
3		#	3	C	S	c	s	ë	³	Ã	Ó	ã	ó		
4		\$	4	D	T	d	t	ü	´	Ä	Ö	ä	ö		
5		%	5	E	U	e	u	ÿ	µ	Å	Õ	å	õ		
6		&	6	F	V	f	v	ı	¶	Æ	Ö	æ	ö		
7		'	7	G	W	g	w	§	·	Ç	×	ç	+		
8		(	8	H	X	h	x	~	ˆ	È	Ø	è	ø		
9		)	9	I	Y	i	y	©	ı	É	Ù	é	ù		
A	*	:	J	Z	j	z	*	®	ˆ	Ê	Û	ê	û		
B	+	;	K	[	k	[	«	»	ˆ	Ë	Ü	ë	ü		
C	,	<	L	\	l		ı	¼	ı	Ï	Ü	ï	ü		
D	-	=	M	]	m	]	ı	½	ı	ÿ	ı	ı	ı		
E	.	>	N	^	n	~	~	¾	ı	ı	ı	ı	ı		
F	/	?	O	_	o	_	ı	ı	ı	ı	ı	ı	ı		

### Entering file and folder names

When entering file and folder names, use the alphanumeric characters described above only. If you use any other character for entry, the file and folder names are not displayed correctly. They may neither be displayed correctly depending on the CD writer used.

The unit recognizes and plays only those MP3 files which have the MP3 filename extension (.MP3). MP3 files should therefore be saved with the MP3 extension.

### Writing files into a medium

When a medium containing MP3 data is loaded, the unit checks all the files on the medium. If the medium contains a lot of folders or non-MP3 files, therefore, it takes a long time until the unit starts playing MP3 files.

In addition, it may take time for the unit to move to the next MP3 file or a file search or folder search may not be performed smoothly. You should not write non-MP3 files or unneeded folders along with MP3 files on the medium.

#### CAUTION

When playing MP3 files on a medium which also contains non-MP3 files or folders, observe the following precautions. Loading such a medium may produce loud noise to break the speakers.

- Do not attempt to play a medium containing a non-MP3 file with the MP3 extension.  
 The unit mistakes non-MP3 files for MP3 files as long as they have the MP3 extension.
- Do not attempt to play a medium containing non MP3 file.

### MP3 file playing order

When selected for play, folder search, file search, or for folder select, files and folders are accessed in the order in which they were written by the CD writer.


Because of this, the order in which they are to be recorded does not match the order in which they are played. You may be able to set the order in which MP3 files are to be played by writing them onto a medium such as a CD-R with their file names beginning with play sequence numbers such as "01" to "99", depending on your CD writer.

## Notes on playing MP3 files

For example, a medium with the following folder/file hierarchy is subject to folder search, file search, or folder select as shown below.


 Folder
  File
  Virtual folder
  Root

Example of a medium's folder/file hierarchy  
(For a file search or folder search)

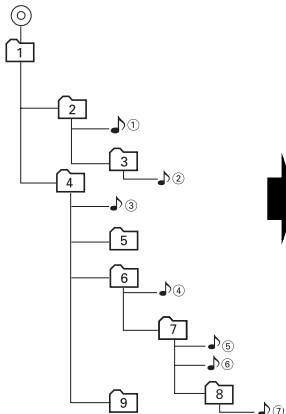










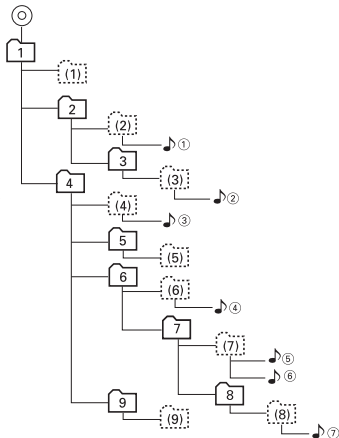
Level 1      Level 3      Level 5  
Level 2      Level 4

Medium's virtual folder/file hierarchy  
for a folder select
















Level 1      Level 3      Level 5  
Level 2      Level 4


**When a file search is executed with file  ④ being played ...**

Current file number	Operation of the button	
	◀◀ Button	▶▶ Button
 ④	Beginning of file  ④ →  ③ →  ② →  ① →  ⑦ ...	 ⑤ →  ⑥ →  ⑦ →  ① ...




**When a folder search is executed with file  ④ being played ...**











When a folder search is executed with file  ④ currently being played, the unit selects folders as shown below, starting with folder  ⑥ .

Current folder number	Operation of the button	
	FM Button	AM Button
 ⑥	 ⑦ →  ⑧ →  ⑨ →  ① ...	 ⑤ →  ④ →  ③ →  ② →  ① →  ⑨ ...





**When folder select is selected with file  ③ being played to move from folder to folder ...**

During folder select, a virtual folder is created one hierarchical level below each folder. The hierarchy is displayed as if the MP3 file recorded in each folder were placed in that virtual folder.

When the unit enters the folder select mode with file  ③ being played, it selects folders as shown below, starting with folder  ④ (virtual folder  ④ ).



Current folder number	Operation of the button			
	◀◀ Button	▶▶ Button	AM Button	FM Button
 ④	 ⑤ →  ⑥ →  ⑦ →  ④ ...	 ⑤ →  ⑥ →  ⑨ ...	 ④ →  ①	—

### NOTE

- Each virtual folder is displayed with the original folder name bounded by parentheses " ( ) ". For example, the virtual folder below the folder named " 4 " is displayed with a name of " (4) ". The file name of each virtual folder is displayed with up to 29 characters (in the ISO 9660 Level 2 format) or 10 characters (in the ISO 9660 Level 1 format), excluding the binding parentheses.
- The FM button is disabled in a folder because it has no subordinate hierarchical level below. Immediately after entering the folder select mode as in the above example, therefore, the FM button cannot be used as there is no hierarchical level below folder  ④ . Once you have moved to folder  ① using the folder select function, for example, you can use the FM button to select folder  ① →  ① one level below.



## General features

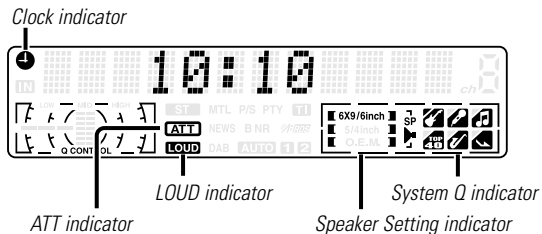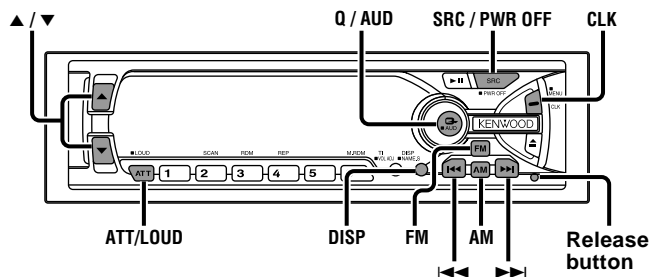

### Power

#### Turning on the power:

Press the SRC button.

#### NOTE

Turn the power on before carrying out the following procedures.

#### Turning off the power:

Hold down the PWR OFF button for one second or more.

#### NOTE

The status of the Code Security Function (page 32) is displayed whenever the power is switched on.

"CODE ON" : Security Code has been registered

"CODE OFF" : Security Code has not been registered

### Volume

#### Increasing Volume:

Press the ▲ button to turn up the volume.

#### Decreasing Volume:

Press the ▼ button to turn down the volume.

### Attenuator

This function allows you to turn down the volume quickly.

#### Turning Attenuator On/Off:

Press the ATT button to switch the attenuator on and off.

When the attenuator is on, the ATT indicator blinks.

When the attenuator is off, the volume returns to the original level.

#### NOTE


Turning the volume up, or turning it all the way down deactivates the attenuator function.

## General features

### Switching Modes

#### Switching Modes:

Each time you press the SRC button, the mode switches as follows:

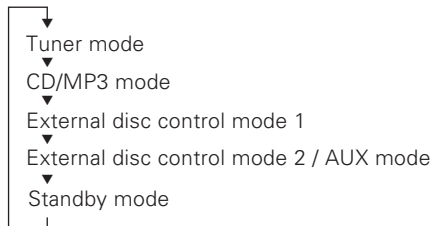

#### Selecting the standby mode:

Press the SRC button repeatedly to select to "ALL OFF". When "ALL OFF" is displayed, the standby mode is turned on. The standby mode turns all functions off although leaving the unit's power on. Use this mode when you want to have the display illuminated but do not want to listen to anything.

#### NOTE

- The mode switches to the next mode from any mode which cannot be used.
- The external disc control mode will differ depending on the unit that is connected.
- To enable the selection of External disc control mode 2/AUX mode, you should connect optional switching adapter KCA-S210A (which allows you to select both External disc control mode 2 and AUX mode) or CD changer (KDC-CPS87, KDC-CX87, KDC-CPS85, KDC-CX85, KDC-CPS82 or KDC-CX82) or switching adapter CA-C1AX (which allows you to select AUX mode only).  
During the AUX mode, "AUX" (or AUX-name display) will show in the display. When the CA-C1AX is being used, the AUX Mode will replace the External Disc Control Mode.
- If you have selected Standby mode, the timer function that turns the power off automatically will be activated.  
To find out how to set the time on the timer, and how to cancel the timer function, refer to the section on the Power OFF Timer

function under Menu settings (page 38).

The Power OFF Timer function is enabled only after the security code (page 32) is set up.

#### NOTE

#### Selecting AUX-name display

Holding down the DISP button for two seconds or more during the AUX mode, AUX-name display is blinked for AUX-name selection mode.

Pressing ◀◀ or ▶▶ button during this mode allows you to select "AUX", "TV", "VCP", "GAME" or "PORTABLE" in the AUX mode.

The AUX-name selection mode can be exited by pressing the DISP button or doing nothing for 10 seconds.

### Loudness

This function amplifies low and high tones when the volume is turned down.

The LOUD indicator lights up, when the loudness function is on.

#### Turning Loudness On/Off:


Hold down the LOUD button for one second or more to switch the loudness on and off.

### System Q

You can recall the best audio setting preset for different types of the music.

#### Switching the Preset Sound Setting:

Each time you press the Q button, the preset sound setting switches as follows:

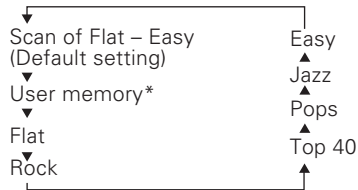

\*User memory:  
The unit returns to the state  
adjusted the last time with  
the audio control setting feature.

As you proceed, each indicator would go on.


#### NOTE

The System Q function changes the values of the following sound quality parameters: Bass centre frequency, bass level, bass quality factor, bass extend, middle centre frequency, middle level, middle quality factor, treble centre frequency, and treble level. Their setting values are different depending on the setting of the speaker setting mode.

## Audio Control Setting

Adjust various parameters of sound quality.

- Hold down the AUD button for one second or more to enter the control mode.
- Selecting mode**  
Press either the FM or AM button.  
Each time the button is pressed, the adjustment mode will change as follows:  
Pressing the FM button advances the display, and pressing the AM button reverses it.

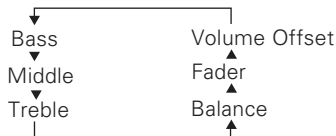

#### NOTE

Source tone memory  
Each source (CD, FM, AM and disc changer) has its own memory in which to store the bass, middle and treble tone settings. The settings made for a particular source are then recalled automatically whenever you use that source (e.g., FM mode uses the tone settings made for FM, AM for AM, etc.).

### 3 Adjust each mode

Press the ◀◀/▶▶ button.

Look at the table to adjust the mode being displayed.

Adjustment mode (Display)	Operation of Audio control button	
	◀◀ button	▶▶ button
Bass ("Bass")	Bass decreased.	Bass increased.
Middle("Middle")	Middle decreased.	Middle increased.
Treble("Treble")	Treble decreased.	Treble increased.
Balance("Balance")	Left channel emphasized.	Right channel emphasized.
Fader ("Fader")	Rear channel increased.	Front channel increased.
Volume Offset ("V Offset")	The sound level of each source decreased.	The sound level of each source increased.

- Press the AUD button to end the control mode.

#### NOTE

Determining the parameters in the audio control setting will clear all the adjustments made in the System Q and they are replaced with the values made in the audio control setting.

## General features

### Speaker Setting

This function allows you to adjust the setting that is recalled with the System Q, according to types of speakers.

- 1 Press the SRC button repeatedly to select the standby mode. "ALL OFF" is displayed when the standby mode is selected.
- 2 Press the Q button to enter the speaker setting mode.
- 3 Press either the ◀◀ or ▶▶ button to select the type of speaker. The setting switches as follows.  
Off ("SP OFF") / For 6/6x9 in. speaker ("SP 6\*9/6inch") / For 5/4 in. speaker ("SP 5/4inch") / For the OEM speaker ("SP O.E.M.")
- 4 Press the Q button to end the speaker setting mode.

#### NOTE

Speaker setting function allows for tuning of bass, middle and treble

### Clock display

#### Changing the Clock Display:

Each time you press the CLK button, the display switches between the clock and each mode display.

#### NOTE

The clock indicator lights whilst the clock is displayed.

### TEL Mute

Shut down the audio system temporarily whenever an incoming call is received.

#### NOTE

The function will not work if a cable is not connected to the car

phone.

#### When the telephone rings:

When a call is received, "CALL" is displayed and all the unit functions are temporarily interrupted.

#### Restoring Original Unit Source During Phone Call:

Press the SRC button. "CALL" disappears from the display, and the volume of the original source is restored gradually.

#### Turning TEL Mute Function Off After Phone Call:


Hang the phone up. "CALL" disappears from the display. The original source (i.e., the one used before the phone call) is returned to automatically, and the volume restored gradually.

### Theft Deterrent Faceplate

The faceplate can be reversed to hide the control panel or detached from the unit, helping to deter theft.

#### Removing the Faceplate:

- 1 • When the control panel is visible:  
Press the release button.  
• When the control panel has been hidden:  
Press the upper side of the faceplate.
- 2 Holding the centre part of the faceplate, pull it out.

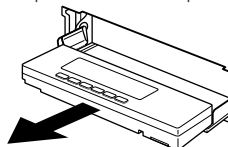

- 3 Push back the bottom of the faceplate bracket until it locks.

#### CAUTION

- Do not apply excessive force to the faceplate bracket without attaching the faceplate. Doing so will cause the faceplate

bracket to be deformed.


- Do not touch the connector on the faceplate bracket after removing the faceplate. Touching the connector may cause damage to the unit.

**NOTE**

- The faceplate is a precision piece of equipment and can be damaged by shocks or jolts. For that reason, keep the faceplate in its special storage case whilst detached.
- Do not expose the faceplate or its storage case to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.

**Reattaching the Faceplate:**

- 1 Hold the faceplate so that the control panel faces the front toward you and set the left side of the faceplate in the faceplate bracket.

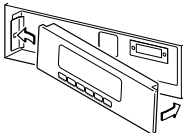


**▲CAUTION**

Do not set the right side of the faceplate in the faceplate bracket first, when reattaching the faceplate. Doing so may cause the connector on the faceplate bracket to malfunction.

- 2 Press the right side of the faceplate until it locks.

**Hiding the control panel:**

- 1 Press the release button and slide open the faceplate.
- 2 Push upward the back of the control panel and reverse the panel.

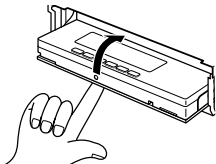


**NOTE**

The panel cannot be reversed when the faceplate is not attached.

**Opening the control panel:**



- 1 Press the upper side of the faceplate. The faceplate will open.
- 2 Push the bottom of the control panel and close the faceplate.

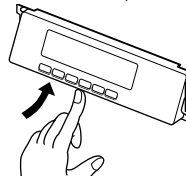

**NOTE**

Whilst the control panel is sliding, only available buttons are ▲, ATT, ▲, ▼ and SRC.

## Tuner features

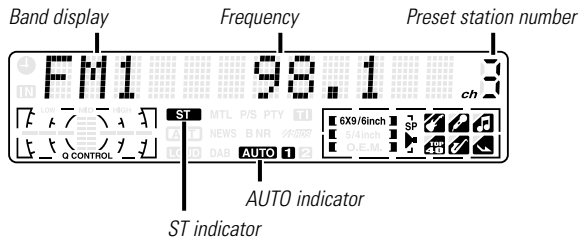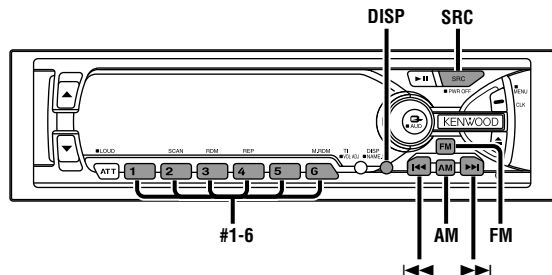

## Tuning

- 1 Press the SRC button repeatedly until the tuner mode is obtained. "TUNER" is displayed only when the tuner mode is selected.
- 2 Press either the FM or AM button to select the band. Each time you press the FM button, the band switches between the FM1, FM2 and FM3. Press the AM button to select the MW and LW bands.
- 3
  - Auto Seek Tuning
    - Press the ►► button to seek increasing frequencies.
    - Press the ◀◀ button to seek decreasing frequencies.
  - Preset station seek tuning
    - Press the ►► button to move to the next preset station (i.e., the one with the next highest number), and the ◀◀ button to move to the last preset station (i.e., the one with the next lowest number).

### NOTE

If the frequencies stored at the preset numbers receive stations which were not originally memorized when travelling long distances, the preset number is not displayed. In such cases, pressing the ◀◀/►► button to use preset station seek will receive channel 1.

- Manual Tuning
  - Press the ►► button to increase the frequency by one step.
  - Press the ◀◀ button to decrease the frequency by one step.

### NOTE

- The ST indicator lights up when stereo broadcasts are being received.
- Please see the menu settings about selecting tuning mode. (page 35)

## Station Preset Memory

Store the frequency of the station currently being listened to. You can then recall that station with a single touch of a button.

- 1 Select the band/station that you want to have stored.
- 2 Hold down the button (#1-6) that you want to use for the station, for two seconds or more.  
The button number blinks once in the display to indicate that the data has been stored.

**Recalling a Preset Station:**

Press the preset station button (#1-6) for the desired station. The number of the recalled station is displayed.

**NOTE**

You can store 6 stations in each of the FM1, FM2, FM3, and AM (MW and LW) bands.

**▲WARNING**


To prevent accidents, drivers should not look at the display whilst driving.

## Switching Display for Tuner

You can change the display used when listening to the radio.

**Switching the Display:**

Each time you press the DISP button, the display changes as follows:

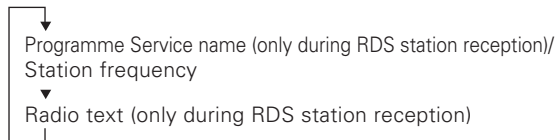



**Displaying Frequencies during programme service name display:**

Hold down the DISP button for one second or more. The frequency for the RDS station will be displayed for five seconds instead of the station name.

**NOTE**

If the RDS station currently tuned to is transmitting no text whilst the Radio Text Display mode is turned on, "NO TEXT" will appear in the display. Whilst awaiting reception, "Waiting" will be displayed.

## RDS features

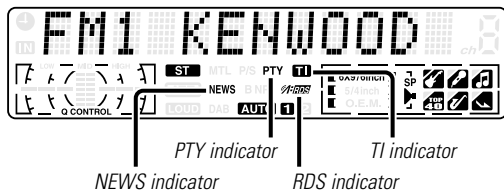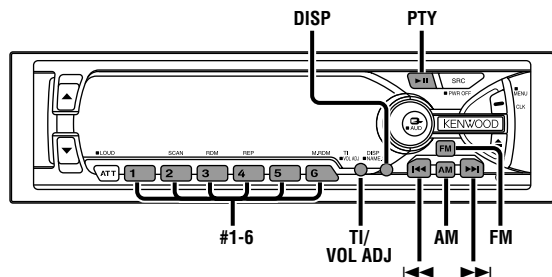

### RDS (Radio Data System)

RDS is a digital information system that lets you receive signals besides those of regular radio programmes, such as network information being transmitted from radio stations. When listening to an RDS station (ie, a station with RDS capability), the programme service name of the station is displayed along with the frequency, advising you quickly which station is being received.

RDS (Radio Data System) stations also transmit frequency data for the same station. When you are making long trips, this function automatically switches to the particular frequency with the best reception for the particular network of stations that you want to listen to. The data is automatically stored, allowing you to switch quickly to another RDS stations, broadcasting the same programme, that has better reception. These include stations stored in the station preset memory that you often listen to.

### Enhanced Other Network

Stations that offer <Enhanced Other Network> also transmit information about other RDS stations that have traffic information. When you are tuned to a station that is not transmitting traffic information, but another RDS station starts transmitting a traffic bulletin, the tuner automatically switches to the other station for the duration of the bulletin.

### Alarm

When an emergency transmission (announcing disasters, etc.) is sent, all current functions are interrupted to allow the warning to be received.



## Traffic Information Function

You can listen to traffic information. If you are listening to tapes or discs, they will continue playing until a traffic bulletin is broadcast.

### Turning TI function On/Off:

Press the TI button to turn the function on and off.

When the function is on, the TI indicator is turned on.

When none is being received, the TI indicator will blink on and off. When a traffic information station is being received, the TI indicator will turn on.

When a traffic bulletin begins to be broadcast, "Traffic Info" will be displayed, and reception will begin at the preset volume.

If you are listening to a tape or disc when a traffic bulletin begins, they will automatically be turned off. When the bulletin ends or poor reception is experienced, the tape or disc will begin playing again.

#### NOTE

Pressing the TI button whilst in the MW/LW band automatically switches reception to the FM band. However, the MW/LW band is not returned to when the TI button is pressed again.

### Switching to a Different Traffic Information Station:

Use the **I◀◀ / ▶▶I** buttons to make an auto seek of the TI stations in a certain band.

#### NOTE

- When you are listening to a tape or disc, you cannot change to another TI station.
- When the auto TP seek function is turned on and reception starts to weaken, the tuner automatically seeks traffic information stations with better reception.
- If you are tuned to a station that is not a traffic information station itself but which provides <Enhanced Other Network> services, you can still have traffic information received.
- Holding down the TI button for one second or more when the TI function is on in the tape or disc mode results in a change to the frequency display of the traffic information station for five seconds.

## Presetting Volume for Traffic Information/News

Preset the volume level to be used for traffic information and news broadcasts.

- 1 Tune into the station for which you want to set the volume.
- 2 Adjust the volume to the desired level.
- 3 Hold down the VOL ADJ button for two seconds or more. The volume level blinks once in the display to indicate that the data has been stored. Future traffic information/news broadcasts are heard at the preset level.

#### NOTE

- The volume cannot be lowered by this function during tuner reception. The volume is only set when it is louder than the listening volume of the tuner.
- You can arrange only to listen to traffic information or news bulletins with at preset volume with the volume set at minimum.

## RDS features

### Radio Text Scroll

This function permits the text to be scrolled and the entire text to be displayed. The scrolling method differs depending on the setting of scrolling in the menu.

#### To scroll manually:

- 1 Press the DISP button to display the Radio Text.
- 2 Holding down the DISP button for one second or more results in one scrolling display of the text.

#### To scroll automatically:

- 1 Press the DISP button to display the Radio Text. The text will be displayed in one scrolling display.
- 2 Holding down the DISP button for one second or more results in one scrolling display of the text.

#### NOTE

Please see the menu settings (page 37) about switching between manual scrolling and automatic scrolling.

### Programme Type (PTY) Function

Conduct auto seek tuning only on those stations with selected kinds of programmes.

- 1 Press the PTY button.  
"PTY" is displayed, and the Programme Type Selection (PTY) Mode entered.  
If you make no key input in 30 seconds, the mode will automatically turn off.

#### NOTE

You cannot use this function whilst the traffic bulletin is received.

#### 2 Select the type of programme to be received

- Press either the FM or AM button repeatedly until the type of programme you want to listen to.  
The selection includes:  
*Speech* (Speech)

	<i>Music</i>	(Music)
1.	News	(News)
2.	Current Affairs	(Affairs)
3.	Information	(Info)
4.	Sports	(Sport)
5.	Education	(Educate)
6.	Drama	(Drama)
7.	Culture	(Culture)
8.	Science	(Science)
9.	Varied	(Varied)
10.	Pop Music	(Pop M)
11.	Rock Music	(Rock M)
12.	Easy Listening Music	(Easy M)
13.	Light Classical	(Light M)
14.	Serious Classical	(Classics)
15.	Other Music	(Other M)
16.	Weather	(Weather)
17.	Finance	(Finance)
18.	Children's programmes	(Children)
19.	Social Affairs	(Social)
20.	Religion	(Religion)
21.	Phone In	(Phone In)
22.	Travel	(Travel)
23.	Leisure	(Leisure)
24.	Jazz Music	(Jazz)
25.	Country Music	(Country)
26.	National Music	(Nation M)
27.	Oldies Music	(Oldies)
28.	Folk Music	(Folk M)
29.	Documentary	(Document)

(Speech.....1~9,16~23, 29, Music.....10~15, 24~28)

- You can select the type of programme directly by pressing a preset button. The buttons are factory-set to the following type of programmes:

1. <i>Music</i>	2. <i>Speech</i>	3. News
4. Other Music	5. Serious Classical	6. Varied

#### NOTE

Changing the Preset Button Settings for Programme Type  
After selecting the type of programme to be stored in a certain preset button, hold down that button for two seconds or more. The previously stored data for that button are erased and the new programme type is stored.

### 3 **Seeking the selected programme type**

Press the ◀◀ or ▶▶ button to make a seek of frequencies with your selected type of programme.

The display blinks and the seek starts.

If your selected type of programme is found, the name of the station is displayed and the station is tuned into.

"PTY Found" is displayed for about 30 seconds.

If you make no key input in 30 seconds, the PTY selection mode will turn off automatically.

#### **NOTE**

If no programme can be found, "NO PTY" is displayed.

If you want to select another type of programme, repeat steps 2 and 3 above.


### **Switching to Other Stations with the Same Type of Programme:**

When "PTY Found" is displayed, perform auto seek tuning.

The tuner scans for another station with the same type of programme.

### **Cancelling Programme Type Function During Its Operation:**

Press the PTY button.

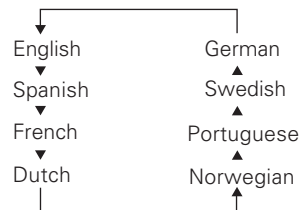

- 4 Press the DISP button to end the changing language mode.

## **Changing Language for Programme Type(PTY) Function**

Changing the display language to another language.

- 1 Press the PTY button.

"PTY" is displayed, and the Programme Type Selection (PTY) Mode entered.

- 2 **Enter the Changing Language Mode**



Press the DISP button to enter the changing language mode.

- 3 **Changing the Display Language**

Press the FM or AM button.

Each time the button is pressed, the display language will change as follows:

## CD/External disc control features

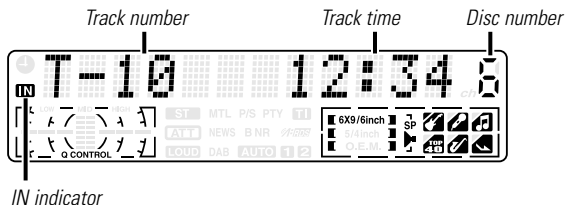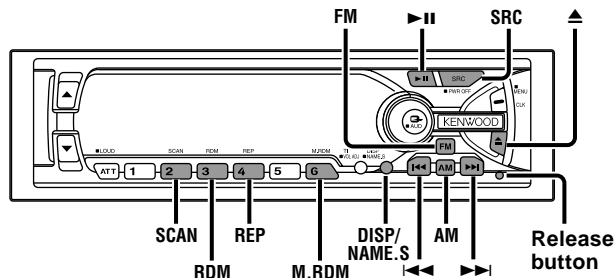

IN indicator

### Playing CDs

#### Playing CDs:

Press the release button to slide open the faceplate, showing the CD insertion slot.

Holding the CD with the labeled side facing up, insert it in the slot. The CD will start playing. Push back the bottom of the faceplate with your hand until it locks.

The IN indicator will light when a CD has been inserted.

#### ⚠CAUTION

When inserting a CD, make sure the CD has been completely drawn in before pushing back the faceplate. Failing to do so might scratch the CD.

#### Playing CDs Already Inserted:

Press the SRC button repeatedly until the CD mode is obtained.

"CD" is displayed when the CD mode has been selected.

The CD will start playing.

#### Pausing and Restarting CD Play:

Press the ►|| button to make the disc pause.

Press the same button again to start play again.

#### Eject:

Press the release button and slide open the faceplate.

Press the ▲ button.

The CD stops playing and ejects from the slot.

Push back the bottom of the faceplate with your hand until it locks.

#### ⚠CAUTION

- Do not attempt to insert a CD into the slot if another one is already there.
- The unit can only play 12-cm (5-inch) CDs. If you insert an 8-cm (3-inch) CD, it will get stuck inside and can cause the unit to malfunction.
- When the faceplate has been slid open, it might interfere with the gear lever or something else. If this happens, pay attention to safety and move the gear lever or take an appropriate action, then operate the unit.
- Do not use the unit with the faceplate in the open condition. Doing so will cause breakdown.

**NOTE**

- When you load a CD and eject it right away, the next time you try to insert the CD may not load. In such a situation, take the CD out for a moment and then reinsert it.
- Whilst the control panel is sliding, only available buttons are ▲, ATT, ▲, ▼ and SRC.

**Playing Other Disc mode**

This function permits the connection of optional players and the playing of discs other than the loaded CD (in the current unit).

**Playing Discs:**

Press the SRC button repeatedly to select the external disc control mode.

The disc will start playing.

**NOTE**

The external disc control mode will differ, depending on the unit that is connected.

Mode Display Examples

- "CD2" ...when a CD player is connected
- "DISC" ...when a disc changer is connected
- "DISC-1" , "DISC-2" ...when two disc changers are connected

**Pausing and Restarting Disc Play:**

Press the ►|| button to make the disc pause.

Press the same button again to start play again.

**NOTE**


- When one disc has finished playing its last track, the next disc in the changer starts playing. When the last disc in the changer has finished, the player returns to the first disc and starts playing it.
- Disc #10 is displayed as "0".

**Switching Display for Discs**

Switch the display that appears whilst discs are playing.

**Switching Display for Discs:**

Each time you press the DISP button, the display during disc play switches as follows:

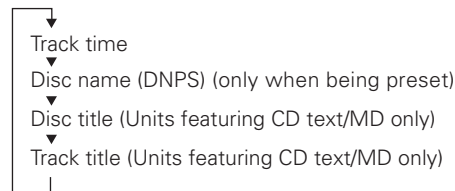**NOTE**

- You can give names to discs through the presetting disc name function (page 24).  
Note that depending on the unit, display may not be possible.
- If you try to display the name of a disc that does not have one, "NO NAME" is displayed instead.
- When there is an attempt to display the title of a disc for which the disc title/track title has not been recorded, "NO TEXT" is displayed for CD and "NO TITLE/NO NAME" is displayed for MD.
- If you attempt to display disc title/track title when connecting the CD changer not supported for CD text feature, caution messages such as "NO TEXT" or "Reading" may be displayed.
- Depending on the type of characters of the CD Text, some characters may not be displayable.

## CD/External disc control features

### Fast Forwarding and Reversing Disc Play

#### Fast Forwarding Disc Play:

Hold down on the ►► button.

Release your finger to play the disc at that point.

#### Reversing Disc Play:

Hold down on the ◀◀ button.

Release your finger to play the disc at the point.

#### NOTE

You cannot use reverse play between tracks depending on the model being connected. Instead, the reverse play function is cancelled when it reaches the beginning of a track, at which point normal play automatically resumes.

### Track Search

Search forwards or backwards through the tracks on the disc until you reach the one that you want to listen to.

#### Making a Reverse Track Search:

Press the ◀◀ button to display the desired track number.

Press once to search back to the beginning of the current track, twice to search back to the beginning of the previous track, and so forth.

Play starts at the beginning of the displayed track number.

#### NOTE (For disc changers)

Pressing the ◀◀ button whilst listening to track 1 only searches back to the beginning of that track. The reverse search is not "recycled" to the last track on the disc.

#### Making a Forward Track Search:

Press the ►► button to display the desired track number.

Press once to fast forward to the next track, twice to fast forward to the track after that, and so forth.

Play starts at the beginning of the displayed track number.

#### NOTE (For disc changers)

You cannot make a forward track search when listening to the last track on a disc.

### Disc Search

(Function of disc changers)

Search forwards or backwards through the discs in a disc changer until you reach the one that you want to listen to.

#### Making a Reverse Disc Search:

Press the AM button to display the desired disc number.

Each time the button is pressed, the displayed disc number decreases by one.

Play starts at the beginning of the displayed disc.

#### Making a Forward Disc Search:

Press the FM button to display the desired disc number.

Each time the button is pressed, the displayed disc number increases by one.

Play starts at the beginning of the displayed disc.

#### NOTE


"Load" is displayed when discs are being exchanged on the disc changer.

### Track / Disc Repeat

Repeat playing the current track or disc.

#### Turning Repeat Play Function On/Off:

Press the REP button to switch the repeat play function on and off as follows :

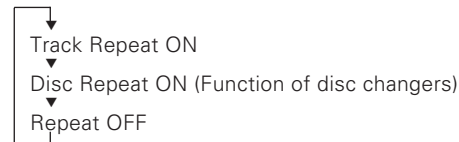

"Repeat ON"/"T-Repeat ON" is displayed and the track number blinks in the display when track repeat is on.

"D-Repeat ON" is displayed and the disc number blinks in the display when disc repeat is on.

#### NOTE

Repeat play is cancelled when you eject the disc.

## Track Scan

Successively play the beginning of each track on a disc until you find the track that you want to listen to.

### **Starting the Track Scan:**

Press the SCAN button. "Scan ON" is displayed and the first 10 seconds of each track are played, and the tracks are played in order.

The track number currently being heard blinks in the display.

### **Stopping to Listen to the Track Being Scanned:**

Press the ►|| or SCAN button again to stop the scan and keep on listening to a track normally.

#### **NOTE**

- The track scan function is cancelled when you eject the disc.
- The track scan function only scans each track on a disc once.

#### **NOTE** (For disc changers)

When all the tracks on a certain disc have been played using the random play function, the next disc on the changer starts playing (with the random play function still turned on).

- 2 To change the track being heard, press the ►►| button. Another track is selected and played.

#### **NOTE**

Random play is cancelled when you eject the disc.

## Random Play

Play all the tracks on the current disc in random order.

- 1 Press the RDM button to switch the random play function on and off.

"Random ON" is displayed when random play is turned on.

The display of the track number changes continuously as the next track is being selected.

When the track has been selected, play starts.

The selected track number blinks in the display as it is being played.

## CD/External disc control features

### Magazine Random Play (Function of disc changers)

Play the tracks on all the discs in the disc changer in random order.

- 1 Press the M.RDM button to switch the magazine random play function on and off.  
"M.Random ON" is displayed when magazine random play is turned on.  
The display of the disc and track numbers change continuously as the next track is being selected.  
When the disc/track has been selected, play starts.  
The selected disc/track number blinks in the display as it is being played.
- 2 To change the track being heard, press the ►► button.  
Another disc/track is selected and played.

#### NOTE

- Magazine random play is cancelled when you eject the disc.
- The time needed for random selection depends on the number of discs loaded in the disc magazine.

### Presetting Disc Names (DNPS)


Store the names of discs to be displayed when played.

- 1 Play the disc whose name you want to preset.

#### NOTE

- This function is not available for disc changers that do not feature the Disc Name Preset function.
  - The Disc Name Preset function cannot be used during the Magazine random play as well as whilst a disc title or track title is displayed.
- 2 Hold down the NAME.S button for two seconds or more.  
"NAME SET" is displayed and the disc name preset mode is entered.  
The cursor blinks in the position where character input can be made.

- 3 Press either the ◀◀ or ▶▶ button to move the cursor to the desired position.  
The ◀◀ button moves the cursor to the left, and the ▶▶ button to the right.
- 4 Each time the ▶|| button is pressed, the characters to be entered change as listed below.  
Press the FM or AM button to display the desired character.  
Characters that can be displayed are as follows.

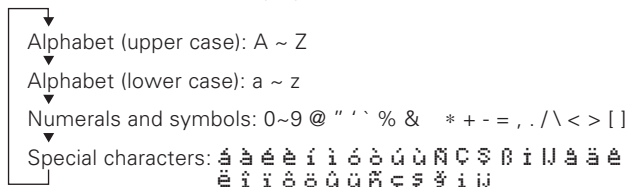

- 5 Continue steps 3 and 4 until all the characters are chosen for the name.

#### NOTE

You can enter up to 12 characters for each name.

- 6 Press the NAME.S button.

The disc name is stored and the disc name preset mode is cancelled.

If you make no entry in a 10-second period, the name will be stored with the characters input so far.

#### NOTE

- The number of discs whose names can be stored will differ depending on the disc changer that is connected. Please see your disc changer manual for details.  
Up to 30 CDs can be registered with this unit.
- Discs are identified by their total length and number of tracks. If another disc happens to have the same specifications as one that you have already stored a name for, the name will be displayed for it, too.
- If you want to change the name of a disc, repeat steps 1 and 2 to display the name, and then repeat steps 3 and 4 to input the changes.



- Pressing the reset button erases the disc names stored in this unit, but does not erase the names stored in a disc changer.
- MP3 recorded media allows you to register a single media name only. Registration for each CD as it is available with the CD cannot be achieved.

### **Text / Title Scroll**

This function permits the text to be scrolled and the entire text to be displayed. The scrolling method differs depending on the setting of scrolling in the menu.

#### **To scroll manually:**

- 1** Press the DISP button to display the disc title or the track title.
- 2** Holding down the DISP button for one second or more results in one scrolling display of the titles.

#### **To scroll automatically:**

- 1** Press the DISP button to display the disc title or the track title. The titles will be displayed in one scrolling display.

#### **NOTE**



When the disc or track to be played changes, the title is displayed in one scrolling display.

- 2** Holding down the DISP button for one second or more results in one scrolling display of the titles.

#### **NOTE**

- Please see the menu settings (page 37) about switching between manual scrolling and automatic scrolling.
- Only units with a CD text feature permit title display.
- You cannot use the text scroll function during magazine random play.

## MP3 player features

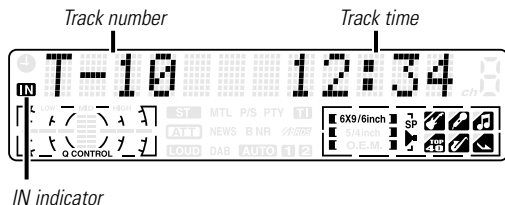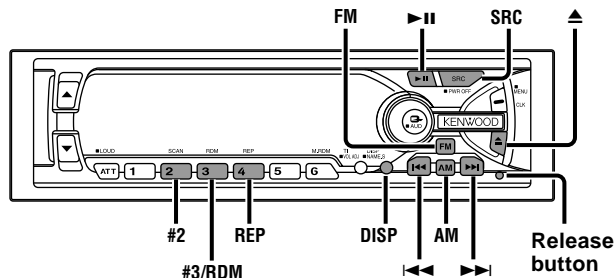

### Playing MP3 Files

#### Play:

Press the Release button to slide open the faceplate, showing the CD (insertion) slot.

Holding the media with the labeled side facing up, insert it in the slot. The media will start playing. Push back the bottom of the faceplate with your hand until it locks.

The IN indicator will light when a media has been inserted.

#### ⚠CAUTION

When inserting a media, make sure the media has been completely drawn in before pushing back the faceplate. Failing to do so might scratch the media.

#### Playing Media Already Inserted:

Press the SRC button repeatedly to select the CD mode.

"CD" is displayed when the CD mode has been selected.

The media will start playing.

#### Pausing and Restarting Media Play:

Press the ►|| button to make the media pause.

Press the same button again to start play again.

#### NOTE

MP3-related operations (such as a file search and folder search) cannot be performed during a pause. Cancel the pause before you can perform such operations.

#### Eject:

Press the release button and slide open the faceplate.

Press the ▲ button.

The media stops playing and ejects from the slot.

Push back the bottom of the faceplate with your hand until it locks.

#### ⚠CAUTION

- Do not attempt to insert a media into the slot if another one is already there.
- When the faceplate has been slid open, it might interfere with the gear lever or something else. If this happens, pay attention to safety and move the gear lever or take an appropriate action, then operate the unit.
- Do not use the unit with the faceplate in the slid condition.

Doing so will cause breakdown.

**NOTE**

- When you load a media and eject it right away, the next time you try to insert the media may not load. In such a situation, take the media out for a moment and then reinsert it.
- The MP3 media that this unit can play are CD-ROM, CD-R, and CD-RW.  
The medium formats must be ISO 9660 Level 1 or Level 2. The methods and precautions to be followed for writing MP3 files are covered in "Notes on playing MP3 files" (page 7). Check that section before creating your MP3 media.
- It takes time for the unit to check each medium to see if it contains any MP3 file before it starts playing the medium.
- Whilst the control panel is sliding, only available buttons are ▲, ATT, ▲, ▼ and SRC.

## File Search

Search forward or backward through the files on the media until you reach the one that you want to listen to.

### ***Making a Backward File Search:***

Press the ◀◀ button to display the desired file number.  
Press once to search back to the beginning of the current file, twice to search back to the beginning of the previous file, and so forth.  
Play starts at the beginning of the displayed file number.

### ***Making a Forward File Search:***

Press the ▶▶ button to display the desired file number.  
Press once to fast forward to the next file, twice to fast forward to the file after that, and so forth.  
Play starts at the beginning of the displayed file number.

**NOTE**

It may take time for the file search depending on the number of files and the state of the folder hierarchy.

## Folder Search

Search forward or backward through the folders on the media.

### ***Making a Backward Folder Search:***

Press the AM button.  
Pressing the button moves back to the previous folder. The unit plays the medium starts at the beginning of the selected folder.  
If the selected folder contains no MP3 file, the unit automatically plays the file nearest to that folder in the MP3 file playing order.

### ***Making a Forward Folder Search:***

Press the FM button.  
Pressing the button moves to the next folder. The unit plays the medium starts at the beginning of the selected folder.  
If the selected folder contains no MP3 file, the unit automatically plays the file nearest to that folder in the MP3 file playing order.

**NOTE**

It may take time for the folder search depending on the number of files and the state of the folder hierarchy.

## MP3 player features

### Fast Forwarding and Reversing MP3 Play

#### Fast Forwarding MP3 Play:

Hold down on the ►► button.  
Release your finger to play the MP3 at that point.

#### Reversing MP3 Play:

Hold down on the ◀◀ button.  
Release your finger to play the MP3 at the point.

#### NOTE


- If you reach the beginning of the file with the fast reverse, the player enters the pause state. If you release the button, the music begins to play.
- During the fast forwarding and reversing process, audible tone and time code display are disabled.
- Time code may be different between the states before and after the fast forwarding and reversing operations.
- The time code for the first few seconds on pressing the button may be unchanged.
- The time code variation may be large if a file is encoded in variable bit rate (VBR).

### File / Folder Repeat

Repeat playing the file or the folder currently being listened to.

#### Turning Repeat Play On/Off:

Press the REP button to switch repeat file/folder play on and off as follows:

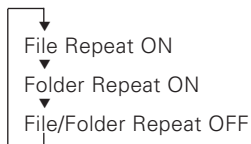

"F REP ON" is displayed when file repeat is on.  
"FOL REP ON" is displayed when folder repeat is on.

#### NOTE

Repeat play is cancelled when you eject the media.

### Folder Select

You can use this function to select the folder containing the sound file you want be played.

#### 1 Enter the Folder Select Mode

Pressing the #2 button enters the folder select mode.  
The display reads as shown below.

<Folder name display>

Displays the current folder name.



<Hierarchical level display>

Displays the hierarchical level of the current folder.

#### NOTE

The unit cannot enter the folder select mode if the loaded medium contains no folder recorded.

#### 2 Selecting the desired folder

- You can move from folder to folder at the same hierarchical level:  
Press the ►► button to move to the next folder at the same hierarchical level.  
Press the ◀◀ button to move to the previous folder at the same hierarchical level.
- You can select the hierarchical level of the folder:  
Press the FM button to move down one level in the folder hierarchy.  
Press the AM button to move up one level in the folder hierarchy.
- You can return to the first hierarchical level (Root Jump):

Press the #3 button to return to the folder at the top hierarchical level on the medium currently being played.

**NOTE**

The methods for moving to other folders in the folder select mode are different from those in the folder search mode. See "Notes on playing MP3 files" (page 7) for details.

**3 When you have found a desired folder**

Press either the #2 or ►|| button.

This ends the folder select mode and starts playing the first MP3 file in the selected folder.

**NOTE**

- If the folder selected after leaving the folder select mode contains no MP3 file, the unit plays the MP3 file nearest to that folder in the MP3 file playing order.
- If the folder select mode is interrupted by another session such as traffic information, you will be brought back to the first folder in the media.
- During the folder select mode, no audible sound is produced.

## Random Play

Play all the files on the current folder in random order.

- 1 Press the RDM button to switch random play on and off. "Random ON" is displayed when random play is turned on. When the file has been selected, play will begin.
- 2 To change the file being heard, press the ►► button. Another file will be selected and played.

**NOTE**


Random play is cancelled when you eject the media.

## Switching Display for MP3

Switch the display that appears whilst MP3 files are playing.

### Switching Display for MP3:

Each time you press the DISP button, the display during files play switches as follows.

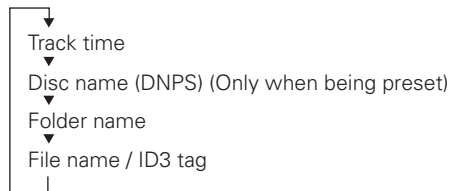

**NOTE**

- You can give names to media through the presetting disc name function (page 24).
- If you try to display the name of a media that does not have one, "NO NAME" is displayed instead.
- Folder names and file names are not displayed correctly if the loaded medium does not conform to ISO 9660 Level 1/2 or if they contain any character unacceptable to your CD writer.
- The track time display may not match the actual track time depending on the MP3 file recording states.
- For display items for File name/ID3 tag, see "Switching the MP3 title information display" for menu settings (page 37).

## MP3 player features

### Name Scroll for MP3

This function permits the folder/file name and ID3 tag (Song title, Artist, Album) to be scrolled and the entire name to be displayed. The scrolling method differs depending on the setting of scrolling in the menu.

#### To scroll manually:

- 1 Press the DISP button to display the folder name or the file name.
- 2 Pressing the DISP button for at least one second results in one scrolling display of the names.

#### To scroll automatically:

- 1 Press the DISP button to display the folder name or the file name. The titles will be displayed in one scrolling display.

#### NOTE



When the folder or file to be played changes, the name is displayed in one scrolling display.

- 2 Pressing the DISP button for at least one second results in one scrolling display of the names.

#### NOTE

Please see the menu settings (page 37) about switching between manual scrolling and automatic scrolling.

## Menu settings

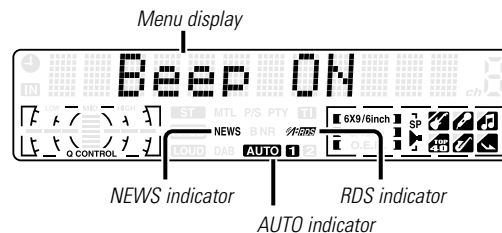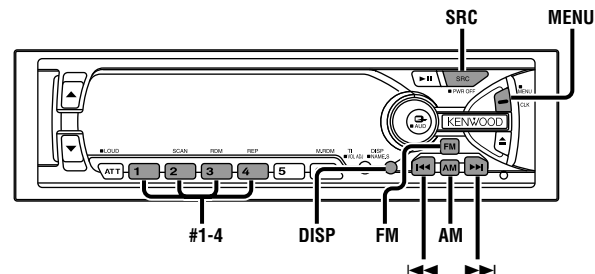

## Menu System

You can set the defaults for additional functions in the menu mode. Make a setting for each function, referring to the following operations.

### 1 **Enter the menu mode**

Hold down the MENU button for one second or more.  
"MENU" is displayed when the menu mode is entered.

The function that you can adjust is indicated with the current settings displayed.

### 2 **Selecting function to set**

Press the FM button to search through the functions until you see the one you want to adjust in the display.

Press the AM button to search through the functions backward.

Function items change in the order of features that follow in the menu system.

Example: If you want to switch the setting of the touch sensor tone function from on to off, first search through the functions until you see "Beep ON" in the display.

### 3 **Changing setting for currently displayed function**

Press either the ◀◀ or ▶▶ button.

The setting will change for each function.

Example: The setting of the touch sensor tone will switch from on to off, and "Beep OFF" is displayed.

### 4 **Ending the menu mode**

Press the MENU button.

#### **NOTE**

Make sure to end the menu mode when finished.

If you fail to end the menu mode, several functions may not operate properly, including the Traffic Information function, the News Bulletin function with PTY news timeout setting, and the Alarm function.

## Menu settings

### Code Security Function

After a security code has been registered, power cannot be restored if the battery is disconnected from the unit unless the code is first input.

#### NOTE

All the steps in this procedure (1 through 7) must be completed before the code security function can be turned on. However, once the procedure is finished, it need not be repeated. Once the code security function has been activated, "Security" disappears from the MENU system. Note that it will no longer be possible to cancel this function afterwards.

- 1 Press the SRC button repeatedly to select the standby mode. "ALL OFF" is displayed when the standby mode is selected.
- 2 Hold down the MENU button for one second or more. "MENU" is displayed first and then "Security" is displayed.
- 3 Hold down either the ◀◀ or ▶▶ button for one second or more. "ENTER" will appear in the display for one second, indicating the code setting mode has been entered. When "CODE" appears in the display, you can start inputting the code.
- 4 Press the preset button and enter your security code. Use the security code shown on your Car Audio Passport. Example: Enter "3510" as your code, pressing the buttons as follows:

Step	Button to press	# Times pressed	Display
1	#1	4	"3"
2	#2	6	"5"
3	#3	2	"1"
4	#4	1	"0"

- 5 Hold down the DISP button for three seconds or more. The security code will be set. "RE-ENTER" will appear in the display for one second, asking you to enter the code once again for confirmation. When

"CODE" appears in the display, you can start inputting the code.

- 6 Press the Preset button and input the security code again.
- 7 Hold down the DISP button again for three seconds or more. "APPROVED" will appear in the display, with the code security function turning on. From this point on, if the unit is disconnected from the battery, the security code must be entered the first time that the unit's power is turned on. "ENTER" and "CODE" will appear in the display, asking you to input the code.

#### NOTE

If you input an incorrect security code, the code setting mode will be cancelled automatically. Follow the steps from 3 to 7 above again.

#### ***If you press the RESET button or remove the battery:***

The first time you turn the unit on again, "CODE" will appear in the display, asking you to input the security code. Repeat steps 6 and 7 above, and input the security code. You can start operating the unit again when "APPROVED" appears in the display.

#### NOTE

If you enter the wrong code, "Waiting" is displayed and you cannot make further input of the code for a fixed interval (see table below), which grows longer each time you enter the wrong code.

When "CODE" is displayed, you can make input again.

Number of wrong inputs	Interval until next input is allowed
1	-
2	5 minutes
3	1 hour
4	24 hours

The number of wrong inputs is displayed.



## Touch Sensor Tone

This function produces a beep sound that accompanies button operation. It can be switched on or off.

### **Display and setting:**

"Beep ON" : Beep setting is on. (Default setting)

"Beep OFF" : Beep setting is off.

#### **NOTE**

The beep sound is not output from the preout jacks.

## Manual Time Adjustment

Adjust the time manually.

#### **NOTE**

This adjustment is available only when the automatic time adjustment is set to off. (page 33)

### **Display and setting:**

- 1 Select the display "Clock Adjust" during the selecting function in the menu system.
- 2 Hold down either the ◀◀ or ▶▶ button for one second or more to enter the Manual time adjustment mode. The time display will blink.
- 3
  - Adjusting the hours  
Press the FM button to advance the hours, or press the AM button to make the hours go back.
  - Adjusting the minutes  
Press the ▶▶ button to advance the minutes, or press the ◀◀ button to make the minutes go back.
- 4 Press the MENU button to end the Manual Time Adjustment mode. Exiting the Manual Time Adjustment mode would start the clock counting.

## Automatic Time Adjustment

With automatic time adjustment, you can set the clock time automatically according to time data sent from RDS stations (after receiving RDS signals for several minutes). You can also set the time manually if the automatic time adjustment function is turned off.

### **Display and setting:**

"SYNC ON" : Automatic time adjustment (Default setting)

"SYNC OFF" : Manual time adjustment

### **Adjusting Time Automatically:**

Tune into an RDS station for 3 or 4 minutes.

The time adjusts automatically to the correct local time.

#### **NOTE**

The time is not adjusted when the RDS station you are tuned to is not transmitting a time signal. Choose another RDS station in such a case.

## Menu settings

### Selectable Illumination

You can switch the colour of the button illumination between green and red.

**Display and setting:**

"Button Green" : The colour of the illumination is green.

"Button Red" : The colour of the illumination is red.

### Switching Graphic Display

This function allows you to turn off the lower part of the display if there is too much information in the display.

**Display and setting:**

"Graphic ON" : The display will turn on by using the whole part of the display. (Default setting)

"Graphic OFF" : The display will turn on by using only the upper part of the display and the IN indicator.

### Contrast Adjustment

This adjustment permits easy viewing of the display.

**Display and setting:**

"Contrast 0" – "Contrast 10"

**NOTE**

The initial setting value is "5".

### Dimmer

You can dim the display.

**NOTE**

The dimmer function is not available for units if the dimmer cable is not connected.

**Display and setting:**

"Dimmer ON" : The dimmer setting is on. (Default setting)

"Dimmer OFF" : The dimmer setting is off.

### External Amp Control

Adjust the bass boost level of the external amplifier using the main unit.

**Display and setting:**

"AMP Bass FLT" : Bass boost level is flat. (Default setting)

"AMP Bass +6" : Bass boost level is low (+6dB).

"AMP Bass +12" : Bass boost level is high (+12dB).

**NOTE**

As of December 2000, the power amplifiers controllable by the main unit are as follows:

KAC-X501F/PS501F/X401M/PS401M/X301T/PS301T/X201T/PS201T

### News Bulletin Function with PTY News Timeout Setting

You can arrange to have news bulletins interrupt your current listening source, including other radio stations. When the News Bulletin function is on, the PTY News Timeout setting allows you to set the interval during which further news interruption cannot take place. You can adjust the PTY news interruption period from 10 to 90 minutes for each journey.

**Display and setting:**

"News OFF" (Default setting) , "News 00min" - "News 90min"  
(min= minutes)

: When you select the news interruption timeout interval, the News function turns on and the NEWS indicator lights up. When a news bulletin is received, "News" will be displayed and reception will begin at the preset volume.

**NOTE**

- If you choose the "20min" setting, further news bulletins will not be received for 20 minutes once the first news bulletin is received.
- This function is only available if the desired station sends PTY-code for news bulletin or belongs to <Enhanced Other Network>-Network sending PTY-code for news bulletin.
- If you turn on the news bulletin function in the MW/LW band, the band is switched automatically to the FM band. However, the MW/LW band is not returned to when you turn off the function.

**Selecting Tuning Mode <In Tuner mode>**

You can choose from three tuning modes: auto seek, preset station seek, and manual. The "AUTO 1" indicator lights up when auto seek tuning is selected, and the "AUTO 2" indicator lights when preset station seek tuning is selected.

**Display and setting:**

"Auto 1" : Auto seek tuning mode (Default setting)

"Auto 2" : Preset station seek tuning mode

"Manual" : Manual tuning mode

**Local Seek Function <In Tuner mode>**

With the local seek function turned on, auto seek tuning skips stations with relatively poor reception.

**Display and setting:**

"Local.S ON" : The local seek function is on.

"Local.S OFF" : The local seek function is off. (Default setting)

## Menu settings

### Auto Memory Entry <In Tuner mode>

You can automatically store all the receivable frequencies in the band currently being listened to, and then recall them with the touch of a button later. This function is especially useful when you are travelling and do not know what stations are available. Up to 6 frequencies can be stored this way.

#### Display and setting:

- 1 Select the display "Auto-Memory" during the selecting function in the menu system.
- 2 Hold down either the ◀◀ or ▶▶ button for two seconds or more to start auto memory function.  
The numbers of the preset station buttons showed in order. When all the stations in a certain band are stored in the preset memory, the auto memory entry stops. The tuner then plays the last station received.

#### NOTE

- When the AF function is turned on whilst auto memory entry takes place, only RDS stations (i.e., stations with RDS capability) are stored. RDS stations that have been preset for FM1 cannot also be preset in FM2 or FM3.
- When the local seek function is turned whilst auto memory entry takes place, stations with poor reception are not stored.
- When the Traffic Information function is on, only the local traffic information station frequency will be stored.

#### Canceling Auto Memory Entry During Its Operation:

Press the ◀◀ / ▶▶ button whilst auto memory entry is taking place to stop the process.

#### Recalling a Preset Station:

Press the preset station button (#1-6) for the desired station. The number of the recalled station is displayed.

### AF (Alternative Frequency) Function

When poor reception is experienced, automatically switch to another frequency broadcasting the same programme in the same RDS network with better reception. The RDS indicator lights up when the AF function is turned on.

#### Display and setting:

"AF ON" : The AF function is on. (Default setting)  
"AF OFF" : The AF function is off.

#### NOTE

When no other stations with stronger reception are available for the same programme in the RDS network, you may hear the incoming broadcast in bits and snatches. Turn off the AF function in such a case.

### Restricting RDS Region (Region Restrict Function)

You can choose whether or not to restrict the RDS channels, received with the AF function for a particular network, to a specific region. When the Region Restrict Function is on, the region is restricted.

#### Display and setting:

"Regional ON" : The Region Restrict Function is on. (Default setting)  
"Regional OFF" : The Region Restrict Function is off.

#### NOTE

Sometimes stations in the same network broadcast different programmes or use different programme service names.

### Auto TP Seek Function

When the TI function is on and poor reception conditions are experienced when listening to a traffic information station,

another traffic information station with better reception will be searched for automatically. This function is on, when unit is first powered on.

**Display and setting:**

"ATPS ON" : The Auto TP Seek Function is on.

If the traffic information station you are tuned to experiences poor reception, this function automatically seeks another TP station. (Default setting)

"ATPS OFF" : The Auto TP Seek Function is off.

### Monaural Reception

#### <In FM reception of Tuner mode>

When poor stereo reception is experienced, this function will reduce noise and improve listening conditions.

**Display and setting:**

"MONO ON" : The monaural reception is on.

"MONO OFF" : The monaural reception is off. (Default setting)

### Reading the MP3 ID3 tag <in MP3 mode>

ID3 tag information in the MP3 file is configured for use.

**Display and setting:**

"ID3 Read ON" : ID3 tag is read.

"ID3 Read OFF" : ID3 tag is not read. (Default setting)

**NOTE**

- If you switch this setting during the play of MP3, the track is replayed from the beginning.
- If you turn the ID3 tag read ON, beginning of the play is delayed for reading process of each tag for the tune.

### Switching the MP3 title information display <in MP3 mode>

You can switch what you want to display for an ongoing tune.

**Display and setting:**

"ID3 DISP A" : Filename

"ID3 DISP B" : ID3 tag song title and its artist name (Default setting)

"ID3 DISP C" : ID3 tag album name and its artist name

**NOTE**

If you don't turn the MP3 ID Read ON, the setup items will not be displayed.

### Text Scroll

This function permits the CD text, MD title, Radio text and ID3 tag (Song title, Artist, Album) to be scrolled and the entire text to be displayed. Switching between manual scrolling and automatic scrolling is permitted.

**Display and setting:**

"Scroll Auto" : Automatic scrolling

"Scroll MANU" : Manual scrolling (Default setting)

## Menu settings

### Power OFF Timer

Set the time for the OFF Timer function activated when you selected Standby mode.

If the predefined time elapses, this unit's power is automatically turned off.

#### **Display and setting:**

"OFF ----" : Power OFF Timer function is cancelled.

"OFF 20min" : Unit's power goes OFF after 20 minutes.  
(Default setting)





"OFF 40min" : Unit's power goes OFF after 40 minutes.

"OFF 60min" : Unit's power goes OFF after 60 minutes.

#### **NOTE**

The Power OFF Timer function is enabled only after the security code (page 32) is set up.

## Accessories

	External view	Number of items
①		.....1
②		.....2
③		.....1
④		.....1

### ▲CAUTION

The use of any accessories except for those provided might result in damage to the unit. Make sure only to use the accessories shipped with the unit, as shown above.

## Installation Procedure

1. To prevent short circuits, remove the key from the ignition and disconnect the ⊖ terminal of the battery.
2. Make the proper input and output cable connections for each unit.
3. Connect the cable on the wiring harness.
4. Take Connector B on the wiring harness and connect it to the speaker connector in your vehicle.
5. Take Connector A on the wiring harness and connect it to the external power connector on your vehicle.
6. Connect the wiring harness connector to the unit.
7. Install the unit in your car.
8. Reconnect the ⊖ terminal of the battery.
9. Press the reset button.


### ▲CAUTION

- If your car is not prepared for this special connection-system, consult your Kenwood dealer.
- Only use antenna conversion adapters (ISO-JASO) when the antenna cord has an ISO plug.
- Make sure that all cable connections are securely made by inserting jacks until they lock completely.
- If your vehicle's ignition does not have an ACC position, or if the ignition cable is connected to a power source with constant voltage such as a battery cable, the power will not be linked with the ignition (i.e., it will not turn on and off along with the ignition). If you want to link the unit's power with the ignition, connect the ignition cable to a power source that can be turned on and off with the ignition key.
- If the fuse blows, first make sure that the cables have not caused a short circuit, then replace the old fuse with one with the same rating.
- Do not let unconnected cables or terminals touch metal on the car or anything else conducting electricity. To prevent short circuits, also do not remove the caps on the ends of the unconnected cables or the terminals.
- Connect the speaker cables correctly to the terminals to which they correspond. The unit may receive damage or fail to work if you share the ⊖ cables and/or ground them to any metal part in the car.
- After the unit is installed, check whether the brake lamps, indicators, wipers, etc. on the car are working properly.
- Insulate unconnected cables with vinyl tape or other similar material.
- Some disc changers need conversion cables for connection. See the section on "Safety Precautions" for details.
- If the console has a lid, make sure to install the unit so that the faceplate does not hit the lid when closing and opening.
- Mount the unit so that the mounting angle is 30° or less.

# Connecting Cables to Terminals

English

Connector Function Guide		
Pin Numbers for ISO Connectors	Cable Colour	Functions
<b>External Power Connector</b>		
A-4	Yellow	Battery
A-5	Blue/White	Power Control
A-6	Orange/White	Dimmer
A-7	Red	Ignition (ACC)
A-8	Black	Earth (Ground) Connection
<b>Speaker Connector</b>		
B-1	Purple	Rear Right (+)
B-2	Purple/Black	Rear Right (-)
B-3	Gray	Front Right (+)
B-4	Gray/Black	Front Right (-)
B-5	White	Front Left (+)
B-6	White/Black	Front Left (-)
B-7	Green	Rear Left (+)
B-8	Green/Black	Rear Left (-)

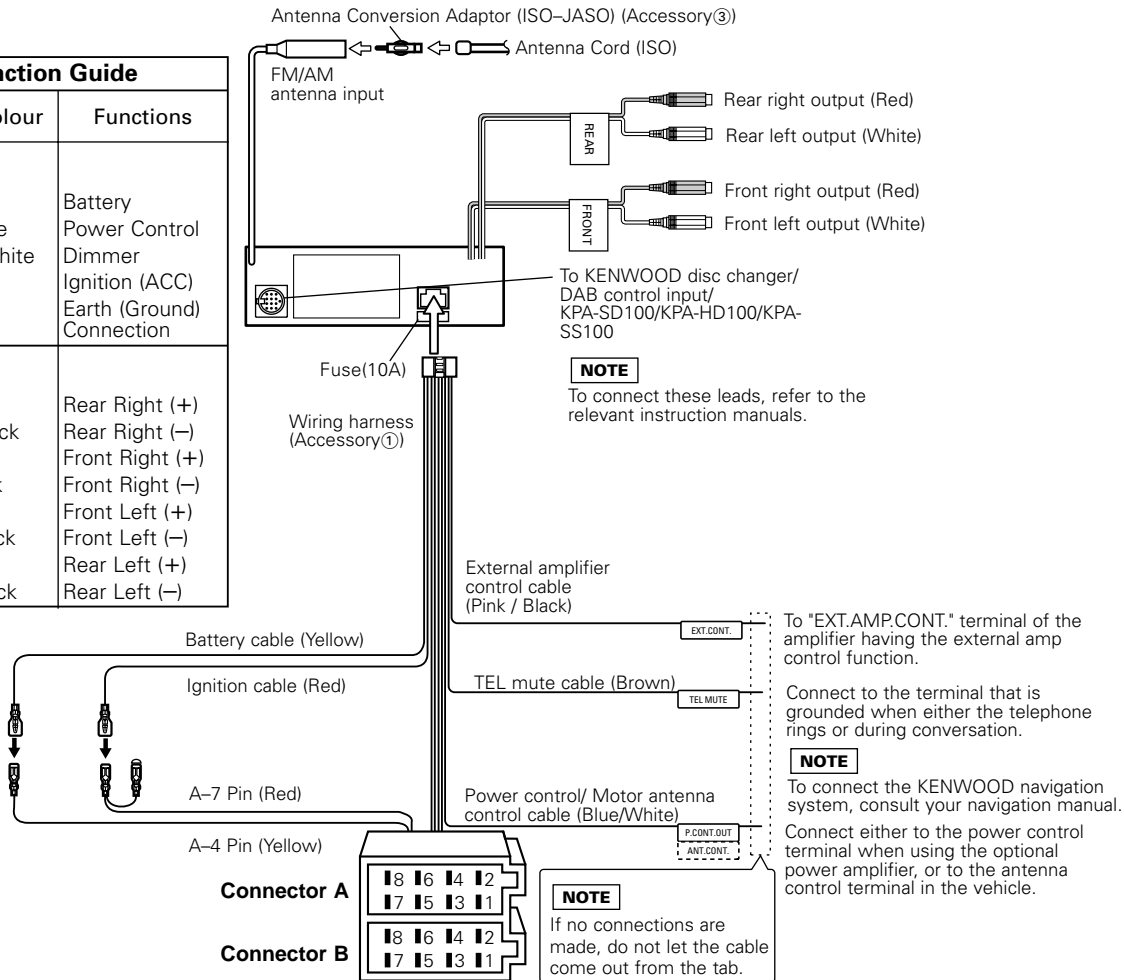







## Installation

### ■ Removing the hard rubber frame

- 1 Refer to the section "Theft deterrent faceplate (P. 12)" and then remove the faceplate.
- 2 Engage the catch pins on the removal tool and remove the two locks on the upper level. Push upward the frame and pull it forward as shown in the figure.

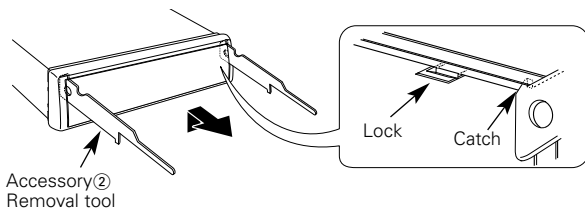

- 3 When the upper level is removed, remove the lower two locations.

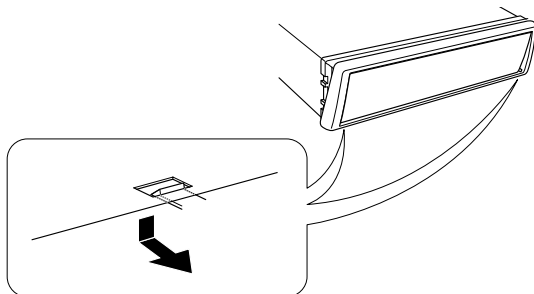


#### NOTE


The frame can be removed from the bottom side in the same manner.

### ■ Removing the Unit

- 1 Refer to the section "Removing the hard rubber frame (P. 42)" and then remove the hard rubber frame.
- 2 Remove the Hex-head screw with integral washer (M4x8) on the back panel.
- 3 Insert the two removal tools deeply into the slots on each side, as shown.

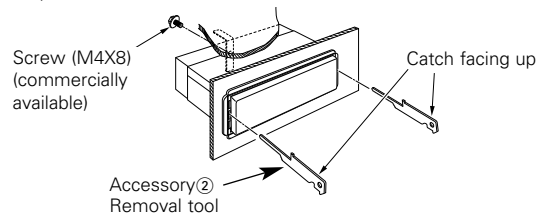


- 4 Push upward the removal tool toward the top, and pull out the unit halfway whilst pressing towards the inside.

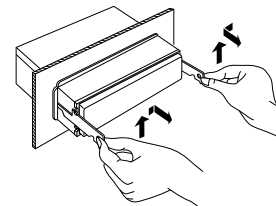

#### CAUTION

Be careful to avoid injury from the catch pins on the removal tool.


- 5 Pull the unit all the way out with your hands, being careful not to drop it.

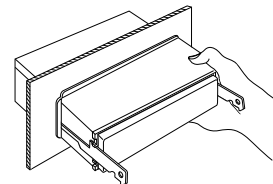

### ■ Locking the faceplate to the unit

If you want to lock the faceplate to the unit so that it does not fall off, follow the directions below.

- 1 Refer to the function "Theft deterrent faceplate" (page 12) and remove the faceplate.
- 2 Insert the provided screw into the hole at the centre of the bottom side of the faceplate which you have removed from the unit.



- 3 Push back the bottom of the faceplate bracket unit it locks.
- 4 Refer to the section "Theft deterrent faceplate (page 12)" and then reattaching the faceplate.

#### **▲CAUTION**

Never insert the taptime screws ( $\varnothing 2 \times 4$  mm) in any other screw holes than the one specified. If you insert it in another hole, it will contract and may cause damage to the mechanical parts inside the unit.

## Troubleshooting Guide

What might appear to be a malfunction in your unit may just be the result of slight misoperation or miswiring. Before calling service, first check the following table for possible problems.

PROBLEM	POSSIBLE CAUSE	SOLUTION
The power does not turn on.	The fuse has blown.	After checking for short circuits in the cables, replace the fuse with one having the same rating.
	No ACC position on vehicle ignition.	Connect the same cable to the ignition as the battery cable.
If you have selected Standby mode, the power will go OFF automatically.	The Power Off Timer function has been activated.	If you do not want the power to go OFF automatically, cancel the Power Off Timer function.
No sound can be heard, or the volume is low.	The Attenuator function is turned on.	Turn off the Attenuator function.
	The fader and/or balance settings are set all the way to one side.	Reset the fader and/or balance settings.
	The input/output cables or wiring harness are connected incorrectly.	Reconnect the input/output cables and/or the wiring harness correctly. See the section on "Connecting Cables to Terminals".
	The values of Volume offset are low.	Increase the values of Volume offset. (see p. 11)
Nothing happens when the buttons are pressed.	The computer chip in the unit is not functioning normally.	Press the reset button on the unit (see page 4).
The sound quality is poor or distorted.	A speaker cable may be pinched by a screw in the car.	Check the speaker wiring.
	The speakers are not wired correctly.	Reconnect the speaker cables so that each output terminal is connected to a different speaker.
Radio reception is poor.	The car antenna is not extended.	Pull out the antenna all the way.
	The antenna control cable is not connected.	Connect the cable correctly, referring to the section on "Connecting Cables to Terminals".
The memory is erased when the ignition is turned off.	The battery cable has not been connected to the proper terminal.	Connect the cable correctly, referring to the section on "Connecting Cables to Terminals".
	The ignition and battery cable are incorrectly connected.	Connect the cable correctly, referring to the section on "Connecting Cables to Terminals".
The TEL mute function does not work.	The TEL mute cable is not connected properly.	Connect the cable correctly, referring to the section on "Connecting Cables to Terminals".
The TEL mute function turns on even though the TEL mute cable is not connected.	The TEL mute cable is touching a metal part of the car.	Pull the TEL mute cable away from the metal part of the car.

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>	<b>SOLUTION</b>
A CD ejects as soon as it is loaded.	The CD is upside-down.	Load the CD with the labelled side up.
	The CD is quite dirty.	Clean the CD, referring to the section on "Cleaning CDs" (see page 5).
The sound skips on a CD.	The CD is scratched or dirty.	Clean the CD, referring to the section on "Cleaning CDs" (see page 5).
The specified track does not play.	Random play has been selected.	Turn off the random play function.
Can't remove disc.	The cause is that more than 10 minutes has elapsed since the vehicle ACC switch was turned OFF.	The disc can only be removed within 10 minutes of the ACC switch being turned OFF. If more than 10 minutes has elapsed, turn the ACC switch ON again and press the Eject button.
Free switching of the sound quality.	The system Q function is set on Scan mode.	Refer to the "System Q" page and switch it to a function other than Scan mode. (see p. 10).
Audio control setting cannot be achieved.	The system Q function is set on Scan mode.	Refer to the "System Q" page and switch it to a function other than Scan mode.(see p. 10).
Cannot play an MP3 file.	Not conforming to ISO 9660 Level 1/2.	Use a medium conforming to ISO 9660 Level 1/2.
	The MP3 file has no or invalid filename extension.	Add the ".MP3" extension to the MP3 file name.
	The media is scratched or dirty.	Clean the media, referring to the section on "Cleaning CDs" (see p.5).
Noise or no sound generated when an MP3 file is played.	The file has the MP3 filename extension while it is not an MP3 file.	Do not use the ".MP3" extension in non-MP3 files.
Takes time before the unit starts playing MP3 files.	The medium contains many folders, files, and hierarchical levels.	The unit checks all files on the loaded medium first. If the medium has many files recorded, it may take a long time for the unit before it starts playing MP3 files.
Fails to play MP3 files in the intended order.	The MP3 files were not written by the CD writer in the order in which you wanted them to be played.	Depending on the CD writer, you may be able to set the order in which MP3 files are to be played by writing them onto a medium with their file names beginning with play sequence numbers such as "01" to "99".
The sound skips when an MP3 file is being played.	The media is scratched or dirty.	Clean the media, referring to the section on "Cleaning CDs" (see p.5).

## CD/MP3/External disc control mode

PROBLEM	POSSIBLE CAUSE	SOLUTION
The disc control mode cannot be selected.	No cable has been connected to the disc changer input terminal on the unit.	Connect the cable to the disc changer input terminal on the unit.
The specified disc does not play, but another one plays instead.	The specified CD is very dirty.	Clean the CD.
	The CD is upside-down.	Load the CD with the labelled side up.
	The disc is loaded in a different slot from that specified.	Eject the disc magazine and check the number for the specified disc.
	The disc is severely scratched.	Try another disc instead.
The sound skips.	Something is touching the disc changer.	Remove whatever is touching it.
	The CD is scratched or dirty.	If skipping happens at the same place when the car is stopped, something is wrong with the CD. Clean the CD.
The display shows that the changer is being played, but no sound can be heard.	The computer chip in the unit is not functioning normally.	Press the reset button on the unit (see page 4).
The specified track does not play.	Random play or magazine random play has been selected.	Turn off the random play or magazine random play function.
Track repeat, disc repeat, track scan, random play, and magazine random play start by themselves.	The setting is not cancelled.	The settings for these functions remain on until the setting to off or the disc ejected, even if the power is turned off or the source changed.
Cannot play CD-R or CD-RW	Finalization processing is not being conducted for CD-R/CD-RW.	Conduct finalization processing with CD recorder.
	A non-compatible CD changer is being used to play the CD-R/CD-RW.	Use a CD changer compatible with CD-R/CD-RW to play.

### If the following situations, consult your nearest service centre:

- Even though the disc changer is connected, the Disc Changer Mode is not on, with "AUX" showing in the display during the Changer Mode.
- Even though no device (KCA-S210A, CA-C1AX, KDC-CPS87, KDC-CX87, KDC-CPS85, KDC-CX85, KDC-CPS82 or KDC-CX82) is connected, the AUX Mode is entered when switching modes.

**The following messages are displayed when certain problems are occurring in your system. Take the recommended actions.**

Eject	No disc magazine has been loaded in the changer. The disc magazine is not completely loaded. ⇒ Load the disc magazine properly. No CD in the unit. ⇒ Insert the CD.
No Disc	No disc has been loaded in the disc magazine. ⇒ Load a disc into the disc magazine.
TOC Error	No disc has been loaded in the disc magazine. ⇒ Load a disc into the disc magazine. The CD is very dirty. The CD is upside-down. The CD is scratched a lot. ⇒ Clean the CD and load it correctly.
Blank Disc	Nothing has been recorded on the MD.
No Tr Disc	No tracks are recorded on the MD, although it has a title.
NO PANEL	The faceplate of the slave unit being connected to this unit has been removed. ⇒ Replace it.
E-77	The unit is malfunctioning for some reason. ⇒ Press the reset button on the unit. If the "E- 77", code does not disappear, consult your nearest service centre.
Mecha Error	Something is wrong with the disc magazine. Or the unit is malfunctioning for some reason. ⇒ Check the disc magazine. And then, press the reset button on the unit. If the "Mecha Error" code does not disappear, consult your nearest service center.
Hold Error	The protective circuit in the unit activates when the temperature inside the automatic disc changer exceeds 60°C (140°F), stopping all operation. ⇒ Cool down the unit by opening the windows or turning on the air conditioner. As the temperature falls below 60°C (140°F), the disc starts playing again.
IN	If this indicator blinks, the CD player is malfunctioning. ⇒ Eject the CD and try inserting it again. If the CD cannot be ejected, press the eject button and hold it in until the CD is ejected.

## Specifications

### Specifications subject to change without notice.

#### FM tuner section

Frequency range (50 kHz space) .....	87.5 MHz – 108.0 MHz
Usable sensitivity (S/N = 26dB) .....	0.7 $\mu$ V/75 $\Omega$
Quieting Sensitivity (S/N = 46dB) .....	1.6 $\mu$ V/75 $\Omega$
Frequency response ( $\pm$ 3 dB) .....	30 Hz – 15 kHz
Signal to Noise ratio (MONO) .....	65 dB
Selectivity (DIN) ( $\pm$ 400 kHz) .....	$\geq$ 80 dB
Stereo separation (1 kHz) .....	35 dB

#### MW tuner section

Frequency range (9 kHz space) .....	531 kHz – 1611 kHz
Usable sensitivity (S/N = 20dB) .....	25 $\mu$ V

#### LW tuner section

Frequency range .....	153 kHz – 281 kHz
Usable sensitivity (S/N = 20dB) .....	45 $\mu$ V

#### CD player section

Laser diode .....	GaAlAs ( $\lambda$ =780 nm)
Digital filter (D/A) .....	8 Times Over Sampling
D/A Converter .....	1 Bit
Spindle speed .....	500 – 200 rpm (CLV)
Wow & Flutter .....	Below Measurable Limit
Frequency response ( $\pm$ 1 dB) .....	10 Hz – 20 kHz
Total harmonic distortion (1 kHz) .....	0.01 %
Signal to Noise ratio (1 kHz) .....	93 dB
Dynamic range .....	93 dB
Channel separation .....	85 dB

#### Audio section

Maximum output power .....	47 W $\times$ 4
Output power (DIN 45324, +B=14.4V) .....	29 W $\times$ 4
Tone action	
Bass : .....	100 Hz $\pm$ 10 dB
Middle : .....	1 kHz $\pm$ 10 dB
Treble : .....	10 kHz $\pm$ 10 dB
Preout level / Load (during disc play) .....	1800 mV/10 k $\Omega$
Preout impedance (during disc play) .....	$\leq$ 600 $\Omega$

#### General

Operating voltage (11 – 16V allowable) .....	14.4 V
Current consumption .....	10 A
Installation Size (W x H x D) .....	182 x 53 x 162 mm
Weight .....	1.7 kg