


# Use & Care Manual

## Single-Door Refrigerator



**Welcome & Congratulations** 2

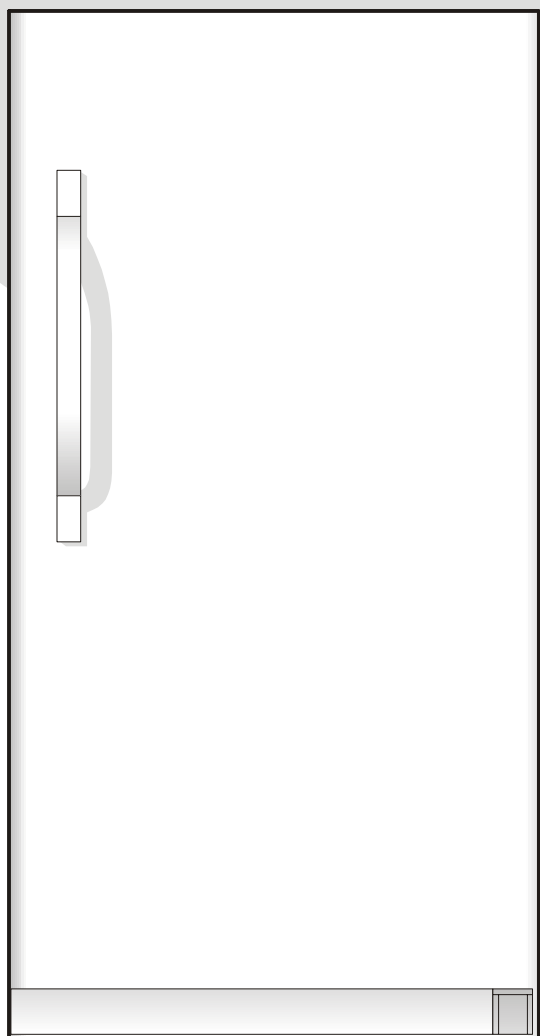

**Safety Instructions**..... 2-3



**Installation** ..... 3-4



**Features at a Glance** ..... 4



**Temperature Controls**..... 4



**Looking Inside** ..... 5-6



**Food Storage  
& Energy Saving Tips**..... 6



**Care & Cleaning**..... 7



**Warranty**..... 8



**Before You Call** ..... 9-10







## SAFETY INSTRUCTIONS



### WARNING

#### ELECTRICAL INFORMATION

These guidelines must be followed to ensure that safety mechanisms in the design of this refrigerator will operate properly.

- **Refer to the serial plate for correct electrical rating.**  
The power cord of the appliance is equipped with a three-prong grounding plug for your protection against shock hazards. It must be plugged directly into a properly grounded three-prong receptacle. The power supply circuit must be installed in accordance with current edition of the National Electrical Code (NFPA 70) and local codes and ordinances. Consult a qualified electrician. Receptacles protected by Ground Fault Circuit Interrupters (GFCI) are NOT RECOMMENDED. **Do not use an extension cord or adapter plug.**
- If voltage varies by 10% or more, refrigerator performance may be affected. Operating refrigerator with insufficient power can damage the motor. Such damage is not covered under the warranty. If you suspect your house voltage is high or low, consult your power company for testing.
- To prevent the refrigerator from being turned off accidentally, do not plug unit into an outlet controlled by a wall switch or pull cord.
- Do not pinch, knot, or bend the cord in any manner.

#### OTHER PRECAUTIONS

- To defrost refrigerator, always unplug unit first.
- Never unplug the refrigerator by pulling on the cord. Always grip the plug firmly, and pull straight out from the receptacle.

### NOTE

Turning the temperature control to OFF turns off the compressor, but does not disconnect the power to the light bulb or other electrical components.




### WARNING

**Avoid fire hazard or electric shock. Do not use an extension cord or an adapter plug. Do not remove any prong from the power cord.**

Grounding type wall receptacle

Do not, under any circumstances, cut, remove, or bypass the grounding prong.

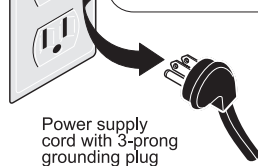

Power supply cord with 3-prong grounding plug




## INSTALLATION

This Owner's Guide provides specific operating instructions for your model. Use the refrigerator only as instructed in this Owner's Guide. **Before starting the refrigerator, follow these important first steps.**

### INSTALLATION

- Choose a place that is near a grounded electrical outlet. **Do Not** use an extension cord or an adapter plug.
- For the most efficient operation, the refrigerator should be located where surrounding temperatures will not drop below 40° F (5° C) or exceed 110° F (43° C).
- Allow the following clearances for ease of installation, proper air circulation, and electrical connections:
 

Sides	3/8" minimum
Back & Top	1" minimum
- Do Not block the toe grille on the lower front of your refrigerator. Sufficient air circulation is essential for the proper operation of your refrigerator.

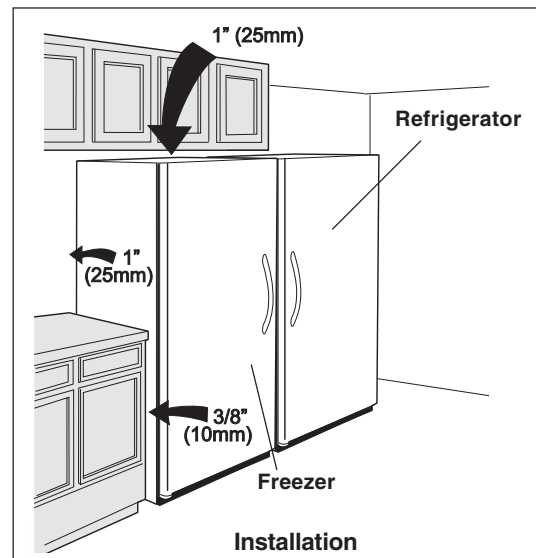

### NOTE

The exterior walls of the refrigerator may become quite warm as the compressor works to transfer heat from the inside. Temperatures as much as 30° F warmer than room temperature can be expected.

### DOOR OPENING

### NOTE

If your refrigerator is placed with the door hinge side against a wall, you may have to allow additional space so the door can be opened wider.






## LOOKING INSIDE

### INTERIOR LIGHTING

The lights come on automatically when the door is opened. To replace the light bulb, turn the temperature control to OFF and **unplug the electrical cord**. Replace the old bulb with a bulb of the same wattage.

### MID LEVEL LIGHTING

The light comes on automatically when the door is opened. To replace the light bulb, turn the temperature control to OFF and **unplug the electrical cord**. Remove the lens from the lamp housing by unsnapping it from the lamp housing using your fingers or a screwdriver. Be careful not to break the locking tabs on the lamp housing. Replace the old bulb with a bulb of the same type and wattage. To replace the lens, snap one side of the lens opening to the tab on the lamp housing. Then carefully attach the other side.

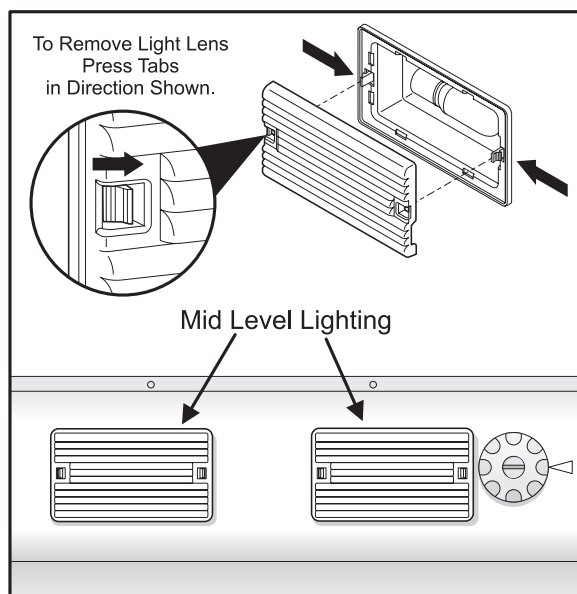


### CAUTION

To avoid personal injury or property damage, handle tempered glass shelves carefully. Shelves may break suddenly if nicked, scratched, or exposed to sudden temperature change.

### ADJUSTABLE INTERIOR SHELVES

Multi-position adjustable interior shelves can be moved to any position for larger or smaller packages. The shipping spacers that stabilize the shelves for shipping may be removed and discarded.

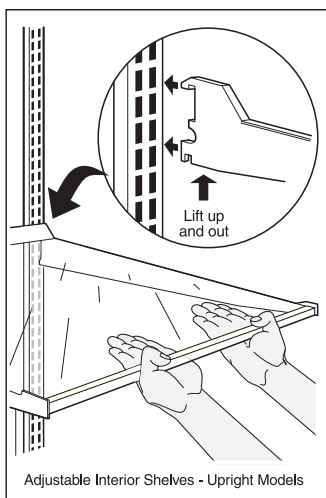


## TO ADJUST CANTILEVER SHELVES

### NOTE

Cantilever shelves are supported at the back of the refrigerator.

- 1 Lift front edge up.
- 2 Pull shelf out.

Replace the shelf by inserting the hooks at rear of the shelf into the wall bracket. Lower the shelf into the desired slots and lock into position.

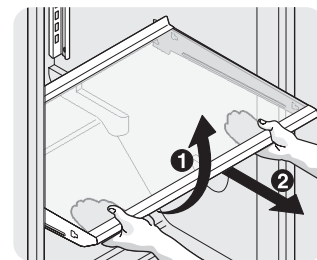

### DOOR STORAGE

Door bins, shelves, and racks are provided for convenient storage of jars, bottles, and cans. Frequently used items can be quickly selected.

Some models have door racks or bins that can accommodate gallon-sized plastic drink containers and economy-sized jars and containers.


The dairy compartment, which is warmer than the general food storage section, is intended for short term storage of cheese, spreads, or butter.

### ADJUSTABLE DOOR BINS

Some models have adjustable door bins that can be moved to suit individual needs.


To move door bins

1. Lift bin straight up.
2. Remove bin.
3. Place bin in desired position.
4. Lower bin onto supports until locked in place.

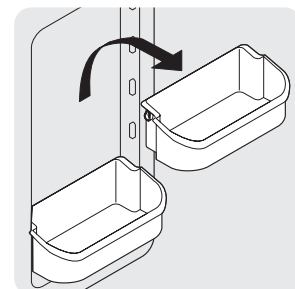

Adjustable Door Bin

### DELI DRAWER

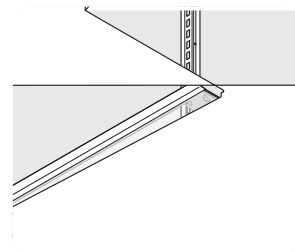

**HUMIDITY CONTR**

The Humidity Control drawers, allows you to control humidity, which can extend the life of your food in humidity.



**FOOD STORAGE I**

**Fresh Food Storage**

- The fresh food drawer maintains a temperature of 35° and 40° F with a humidity control.
- Avoid overcrowding the drawer to ensure the circulation of cold air for optimal cooling.

**Fruit**

drawers traps moisture to help

**Meat**

- Raw meat and poultry should be stored in the meat drawer to prevent leakage and cross contamination from occurring.



## CARE AND CLEANING

Keep your refrigerator clean to prevent odor build-up. Wipe up any spills immediately and clean at least twice a year. **Never** use metallic scouring pads, brushes, abrasive cleaners or strong alkaline solutions on any surface. **Do not** wash any removable parts in a dishwasher. **Always unplug the electrical power cord from the wall outlet before cleaning.**



### CAUTION

- When moving the refrigerator, pull straight out. Do not shift the refrigerator from side to side as this may tear or gouge the floor covering.
- Damp objects stick to cold metal surfaces. Do not touch interior metal surfaces with wet or damp hands.

### NOTE

- Turning the refrigerator temperature control to “OFF” turns off the compressor, but does not disconnect electrical power to the light bulb or other electrical components. **To turn off power to your refrigerator, you must unplug the power cord from the wall outlet.**
- Do not use razor blades or other sharp instruments which can scratch the appliance surface when removing adhesive labels. Any glue left from tape or labels can be removed with a mixture of warm water and mild detergent, or, touch the glue residue with the sticky side of tape you have already removed. **Do not remove the serial plate.**

## Care & Cleaning Chart

Part	What To Use	Tips and Precautions
Interior/Door Liner	<ul style="list-style-type: none"> <li>• Soap and water</li> <li>• Baking soda and water</li> </ul>	Use 2 tablespoons of baking soda in 1 quart of warm water. <b>Be sure to wring excess water out of sponge or cloth before cleaning around controls, light bulb or any electrical part.</b>
Door Gaskets	<ul style="list-style-type: none"> <li>• Soap and water</li> </ul>	Wipe gaskets with a clean soft cloth.
Drawers/Bins	<ul style="list-style-type: none"> <li>• Soap and water</li> </ul>	Do not wash any removable items (bins, drawers, etc.) in dishwasher.
Glass Shelves	<ul style="list-style-type: none"> <li>• Soap and water</li> <li>• Glass cleaner</li> <li>• Mild liquid sprays</li> </ul>	Allow glass to warm to room temperature before immersing in warm water.
Exterior and Handles	<ul style="list-style-type: none"> <li>• Soap and water</li> <li>• Non Abrasive Glass Cleaner</li> </ul>	Do not use commercial household cleaners, ammonia, or alcohol to clean handles. Use a soft cloth to clean smooth handles. <b>Do Not use a dry cloth to clean smooth doors.</b>
Exterior and Handles (Stainless Steel Models Only)	<ul style="list-style-type: none"> <li>• Soap and water</li> <li>• Ammonia</li> <li>• Stainless Steel Cleaners</li> </ul>	Clean stainless steel front and handles with non-abrasive soapy water and a dishcloth. Rinse with clean water and a soft cloth. Wipe stubborn spots with an ammonia-soaked paper towel, and rinse. Use a non-abrasive stainless steel cleaner. These cleaners can be purchased at most home improvement or major department stores. Always follow manufacturer's instructions. <b>NOTE: Always clean, wipe and dry with the grain to prevent cross-grain scratching.</b> Wash the rest of the cabinet with warm water and mild liquid detergent. Rinse well, and wipe dry with a clean soft cloth.



## WARRANTY

### REFRIGERATOR WARRANTY *Your refrigerator is protected by this warranty*

	WARRANTY PERIOD	THROUGH OUR AUTHORIZED SERVICERS, WE WILL:	THE CONSUMER WILL BE RESPONSIBLE FOR:
<b>FULL ONE-YEAR WARRANTY</b>	One year from original purchase date.	Pay all costs for repairing or replacing any parts of this appliance which prove to be defective in materials or workmanship. Excludes original and replacement Ice & Water filter cartridges (if equipped). Original and replacement cartridges are warranted for 30 days (parts only).	Costs of service calls that are listed under <b>NORMAL RESPONSIBILITIES OF THE CONSUMER.*</b>
<b>LIMITED 2<sup>ND</sup>- 5<sup>TH</sup> YEAR WARRANTY (Cabinet Liner and Sealed System)</b>	Second through fifth years from original purchase date.	Repair or replace any parts in the cabinet liner or sealed refrigeration system (compressor, condenser, evaporator, dryer or tubing) which prove to be defective in materials or workmanship.	Costs for pickup and delivery of the appliance required because of service. Costs for labor, parts and transportation other than with respect to the cabinet liner or Sealed Refrigeration System.
<b>LIMITED WARRANTY (Applicable to the State of Alaska)</b>	Time periods listed above.	All of the provisions of the full warranties above and the exclusions listed below apply.	Costs of the technician's travel to the home and any costs for pick up and delivery of the appliance required because of service.

In the U.S.A.. and Puerto Rico, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. In Canada, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Canada Corp. Electrolux Home Products, Inc. and Electrolux Canada Corp. are referred to in this warranty as "Electrolux". We authorize no person to change or add to any of our obligations under this warranty. Our obligations for service and parts under this warranty must be performed by us or an authorized Electrolux servicer.

#### \*NORMAL RESPONSIBILITIES OF THE CUSTOMER

**This warranty applies only to products in ordinary household use, and the consumer is responsible for the items listed below:**

1. Proper use of the appliance in accordance with instructions provided with the product.
2. Proper installation by an authorized servicer in accordance with instructions provided with the appliance and in accordance with all local plumbing, electrical and/or gas codes.
3. Proper connection to a grounded power supply of sufficient voltage, replacement of blown fuses, repair of loose connections or defects in house wiring.
4. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it was shipped from the factory.
5. Damages to finish after installation.
6. Replacement of light bulbs and/or fluorescent tubes (on models with these features).

#### EXCLUSIONS

**This warranty does not cover the following:**

1. CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN OR ANY IMPLIED WARRANTY.  
**Note:** Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.
2. Service calls which do not involve malfunction or defects in workmanship or material, or for appliances not in ordinary household use. The consumer shall pay for such service calls.
3. Damages caused by services performed by servicers other than Electrolux, or its authorized servicers; use of parts other than genuine Electrolux parts; obtained from persons other than such servicers; or external causes such as abuse, misuse, inadequate power supply or acts of God.
4. Products with original serial numbers that have been removed or altered and cannot be readily determined.

#### IF YOU NEED SERVICE

Keep your bill of sale, delivery slip, or some other appropriate payment record. The date on the bill establishes the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. This written warranty gives you specific legal rights. You may also have other rights that vary from state to state. Service under this warranty must be obtained by contacting Electrolux.

This warranty only applies in the 50 States of the U.S.A. and Puerto Rico, and Canada. Product features or specifications as described or illustrated are subject to change without notice.

#### USA

**800-944-9044**

Electrolux Major Appliances North America,  
a division of Electrolux Home Products, Inc.  
P.O. Box 212378  
Augusta, GA 30917

#### Canada

**800-265-8352**

Electrolux Major Appliances North America,  
a division of Electrolux Home Products, Inc.  
5855 Terry Fox Way  
Mississauga, Ontario  
L5V 3E4





## BEFORE YOU CALL

TROUBLESHOOTING GUIDE		Before calling for service, review this list. It may save you time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.	
PROBLEM	CAUSE	CORRECTION	
REFRIGERATOR OPERATION			
Refrigerator does not run.	<ul style="list-style-type: none"><li>• Refrigerator is plugged into a circuit that has a ground fault interrupt.</li><li>• Temperature control is in the OFF position.</li><li>• Refrigerator may not be plugged in, or plug may be loose.</li><li>• House fuse blown or tripped circuit breaker.</li><li>• Power outage.</li></ul>	<ul style="list-style-type: none"><li>• Use another circuit. If you are unsure about the outlet,have it checked by a certified technician.</li><li>• See <b>Setting the Temperature Control</b> Section.</li><li>• Ensure plug is tightly pushed into outlet.</li><li>• Check/replace fuse with a 15 amp time-delay fuse. Reset circuit breaker.</li><li>• Check house lights. Call local Electric Company.</li></ul>	
Refrigerator runs too much or too long.	<ul style="list-style-type: none"><li>• Room or outside weather is hot.</li><li>• Refrigerator has recently been disconnected for a period of time.</li><li>• Large amounts of warm or hot food have been stored recently.</li><li>• Doors are opened too frequently or too long.</li><li>• Refrigerator door may be slightly open.</li><li>• Temperature Control is set too low.</li><li>• Refrigerator gasket is dirty, worn, cracked, or poorly fitted.</li></ul>	<ul style="list-style-type: none"><li>• It's normal for the refrigerator to work harder under these conditions.</li><li>• It takes 4 hours for the refrigerator to cool down completely.</li><li>• Warm food will cause refrigerator to run more until the desired temperature is reached.</li><li>• Warm air entering the refrigerator causes it to run more. Open doors less often.</li><li>• See "<b>DOOR PROBLEMS</b>" Section.</li><li>• Turn control knob to a warmer setting. Allow several hours for the temperature to stabilize.</li><li>• Clean or change gasket. Leaks in the door seal will cause refrigerator to run longer in order to maintain desired temperature.</li></ul>	
Interior refrigerator temperature is too cold.	<ul style="list-style-type: none"><li>• Temperature Control is set too low.</li></ul>	<ul style="list-style-type: none"><li>• Turn the control to a warmer setting. Allow several hours for the temperature to stabilize.</li></ul>	
Interior refrigerator temperature is too warm.	<ul style="list-style-type: none"><li>• Temperature Control is set too warm.</li><li>• Door is kept open too long or is opened too frequently.</li><li>• Door may not be sealing properly.</li><li>• Large amounts of warm or hot food may have been stored recently.</li><li>• Refrigerator has recently been disconnected for a period of time.</li></ul>	<ul style="list-style-type: none"><li>• Turn control to a colder setting. Allow several hours for the temperature to stabilize.</li><li>• Warm air enters the refrigerator every time the door is opened. Open the door less often.</li><li>• See "<b>DOOR PROBLEMS</b>" Section.</li><li>• Wait until the refrigerator has had a chance to reach its selected temperature.</li><li>• Refrigerator requires 4 hours to cool down completely.</li></ul>	
Refrigerator external surface temperature is warm.	<ul style="list-style-type: none"><li>• The external refrigerator walls can be as much as 30°F warmer than room temperature.</li></ul>	<ul style="list-style-type: none"><li>• This is normal while the compressor works to transfer heat from inside the refrigerator cabinet.</li></ul>	
SOUND AND NOISE			
Louder sound levels whenever refrigerator is on.	<ul style="list-style-type: none"><li>• Modern refrigerators have increased storage capacity and more stable temperatures. They require a high efficiency compressor.</li></ul>	<ul style="list-style-type: none"><li>• This is normal. When the surrounding noise level is low, you might hear the compressor running while it cools the interior.</li></ul>	
Longer sound levels when compressor comes on.	<ul style="list-style-type: none"><li>• Refrigerator operates at higher pressures during the start of the ON cycle.</li></ul>	<ul style="list-style-type: none"><li>• This is normal. Sound will level off or disappear as refrigerator continues to run.</li></ul>	



## BEFORE YOU CALL

PROBLEM	CAUSE	CORRECTION
<b>SOUND AND NOISE (Cont.)</b>		
<b>Popping or cracking sound when compressor comes on.</b>	<ul style="list-style-type: none"><li>• Metal parts undergo expansion and contraction, as in hot water pipes.</li></ul>	<ul style="list-style-type: none"><li>• This is normal. Sound will level off or disappear as refrigerator continues to run.</li></ul>
<b>Bubbling or gurgling sound, like water boiling.</b>	<ul style="list-style-type: none"><li>• Refrigerant (used to cool refrigerator) is circulating throughout the system.</li></ul>	<ul style="list-style-type: none"><li>• This is normal.</li></ul>
<b>Vibrating or rattling noise.</b>	<ul style="list-style-type: none"><li>• Refrigerator is not level. It rocks on the floor when it is moved slightly.</li><li>• Refrigerator is touching the wall.</li></ul>	<ul style="list-style-type: none"><li>• Level the unit. Refer to "Leveling" in the <b>First Steps</b> Section.</li><li>• Relevel the refrigerator or move refrigerator slightly. Refer to "Leveling" in the <b>First Steps</b> Section.</li></ul>
<b>Snapping Sound.</b>	<ul style="list-style-type: none"><li>• Cold Control turning the refrigerator on and off.</li></ul>	<ul style="list-style-type: none"><li>• This is normal.</li></ul>
<b>WATER/MOISTURE/FROST INSIDE REFRIGERATOR</b>		
<b>Moisture forms on inside of refrigerator walls.</b>	<ul style="list-style-type: none"><li>• Weather is hot and humid.</li><li>• Door may not be sealing properly.</li><li>• Door is kept open too long, or is opened too frequently.</li></ul>	<ul style="list-style-type: none"><li>• This is normal.</li><li>• See "<b>DOOR PROBLEMS</b>" Section.</li><li>• Open the door less often.</li></ul>
<b>WATER/MOISTURE/FROST OUTSIDE REFRIGERATOR</b>		
<b>Moisture forms on outside of refrigerator.</b>	<ul style="list-style-type: none"><li>• Door may not be sealing properly, causing the cold air from inside the refrigerator to meet warm moist air from outside.</li></ul>	<ul style="list-style-type: none"><li>• See "<b>DOOR PROBLEMS</b>" Section.</li></ul>
<b>ODOR IN REFRIGERATOR</b>		
<b>Odors in refrigerator.</b>	<ul style="list-style-type: none"><li>• Interior needs to be cleaned.</li><li>• Foods with strong odors are in the refrigerator.</li></ul>	<ul style="list-style-type: none"><li>• Clean interior with sponge, warm water, and baking soda.</li><li>• Cover the food tightly.</li></ul>
<b>DOOR PROBLEMS</b>		
<b>Door will not close.</b>	<ul style="list-style-type: none"><li>• Refrigerator is not level. It rocks on the floor when it is moved slightly.</li></ul>	<ul style="list-style-type: none"><li>• This condition can force the cabinet out of square and misalign the door. Refer to "Leveling" in the <b>First Steps</b> Section.</li></ul>
<b>LIGHT BULB IS NOT ON</b>		
<b>Light bulb is not on.</b>	<ul style="list-style-type: none"><li>• Light bulb is burned out.</li><li>• No electric current is reaching the refrigerator.</li></ul>	<ul style="list-style-type: none"><li>• Follow directions under "Interior Light" or "Mid Level Light" in the <b>Refrigerator Features</b> Section.</li><li>• See "<b>REFRIGERATOR OPERATION</b>" Section.</li></ul>