

IDD-213T User Manual

(Rev. 1.5)



Sinocastel Co., Ltd.

September, 2014



Contents

1. Introduction.....	2
2. Specifications.....	3
2.1 External Interface.....	3
2.2 Status Indicator.....	4
2.3 Technical Parameters.....	5
3. Device Configuration.....	7
3.1 PC Tool.....	7
3.2 SMS Instructions.....	7
4. Installation Instruction.....	9
4.1 SIM Card Installation.....	9
4.2 OBD Port.....	10
4.3 Device Installation.....	11
5. Functions.....	14
5.1 Location Inquiry.....	14
5.2 Regular GPS data reporting.....	14
5.3 Regular G-Sensor Data Reporting.....	14
5.4 Cell ID Reporting.....	15
5.5 GPS Data Reporting in Sleep Mode.....	15
5.6 Data storage/Supplementary Report in Dead zones.....	15
5.7 Trip Mileage.....	15
5.8 Alarms and Events Reporting.....	15
5.9 Intelligent Power Saving.....	16
5.10 GPS/Cellular Timer.....	16
5.11 SMS Alert.....	16
5.12 Google Map Link.....	16
5.13 Remote Configuration.....	16
5.14 SMS Configuration.....	16
5.15 PC Tool Configuration.....	16
6. Disclaimer.....	17
7. Warranty.....	18
8. Statement.....	19

1. Introduction

IDD-213T is a plug-and-play GPS tracker with standard OBD II interface, it monitors and records trip info including engine start/off time, real-time location, vehicle speed, various alarms and events, it supports GPRS and SMS channel.

Packing List

Parts name		Quantity	Note
IDD-213T OBD Dongle		1	●
USB Configuration Cable		1	○
OBD II extension cable		1	○
9-Pin deutsch wiring harness		1	○
6-Pin deutsch Wiring harness		1	○
Power cable (including 3A Fuse)		1	○
SOS button		1	○

Note: ● Standard configuration ○ Optional configuration

(Optional accessories will not be included if there is no indication in the order)

2. Specifications

2.1 External Interface

Product appearance as follows:



1. Standard OBD Connector
Connect to the 16 pin on-board Diagnostic Link Connector (DLC).
2. Mini USB interface
Connect to PC through USB configuration cable.
3. SOS button Interface
This is a SOS button interface, to connect the SOS button for emergency, interface type is MMCX.
4. SIM Card slot

2.2 Status Indicator

Indicator	Color	Status
OBD LED	Red	Solid off
Cellular LED	Orange-red	Fast blinking (on 0.5s, off 0.5s) - No SIM card or network searching Slow blinking (on 0.5s, off 2.5s) - Registered network Solid on - Logged into the server Solid off - Cellular off
GPS LED	Green	Blinking (on 1s, off 1s) - GPS signal is good Solid on - Searching for GPS signal Solid off - GPS off
Buzzer	Beep	One beep - Power on Three beeps - Successful log in Four beeps - Trip end Five beeps - Power off Six beeps - Trip Start Five beeps (short beep) - Alarm indication

2.3 Technical Parameters

Mechanical	Dimension	63mm (L) x 48mm (W) x 28mm (H)
	Weight	50g
Interface		<p>OBD interface: 16 pin standard OBD II</p> <p>Configuration interface: Mini USB</p> <p>SOS button interface: MMCX</p> <p>SIM card interface: Push-Push Type</p>
Storage		2MB FLASH, can store up to 24000 GPS data
Data Transmission		GPRS/SMS
Positioning Mode		GPS/A-GPS
Power	Working Voltage	9-36VDC
	Working Current	<p>Average Current: <150mA@13.8/27.6VDC</p> <p>Max. Current: <200mA@13.8/27.6VDC</p> <p>Sleep Current: <10mA@12/24VDC</p>
	Internal Battery	3.7V/160mA Lithium battery
3-axis Accelerometer		+/-2g, +/-4g, +/-8g, +/-16g
GPS		<p>Channels: 50</p> <p>Sensitivity: -160dBm</p> <p>Accuracy: 5m CEP</p> <p>Cold start: <32s</p> <p>Warm start: <32s</p> <p>Hot start: <1s</p>
Cellular		<p>Frequency: Quad-band 850/900/1800/1900MHz</p> <p>Protocol: TCP/IP</p> <p>Sensitivity: -107dBm@850/900MHz -106dBm@1800/1900MHz</p> <p>Output Power: Class 4 (2W)@850/900MHz Class 1 (1W)@1800/1900MHz</p>
LED Indicator		Power/Cellular/GPS
Buzzer		System status/Alarm indication
Antenna	Cellular Antenna	Built-in
	GPS Antenna	Built-in
Certification		CE
		E-Mark (Pending)

Environment	Working Temperature	-30°C ~ +70°C
	Storage Temperature	-40°C ~ +85°C
	Humidity	5%~95% (no frog)

3. Device Configuration

3.1 PC Tool

Download USB driver and PC Tool at <http://www.sinocastel.com/en/Downloads/>.

Install the USB driver and PC Tool on your PC.

Connect device to PC through USB configuration cable, open the OBD PC Tool, click on "Help->User manual" for configuration reference.

3.2 SMS Instructions

SMS command is mainly for remote maintenance. The message content is text format. Default secret key is the last 6 digits of the device ID. The key can only be changed through PC Tool. SMS format is defined as follows:

3.2.1 Set IP parameters

Send SMS `*SecretKey#set gprs#APN,User>Password,IP,Port*`, device will reply `*set gprs#ok*` or `*set gprs#fail*`.

e.g.: `*123456#set gprs#cmnet,,113.98.241.66,11088*`

3.2.2 Read IP parameters

Send SMS `*SecretKey#get gprs#*`, device will reply `*get gprs#APN,User>Password,IP,Port*`.

e.g.: `*123456#get gprs#*`

3.2.3 Set domain parameters

Send SMS `*SecretKey#set domain #APN,User>Password,IP,Port*`, device will reply `*set domain#ok*` or `*set domain#fail*`.

e.g.: `*123456#set domain# cmnet,,obd.livetelematics.com,11088*`

3.2.4 Read domain parameters

Send SMS `*SecretKey#get domain#*`, device will reply `*get domain#APN,User>Password,domain,Port*`.

e.g.: `*123456#get domain#*`

3.2.5 Get current location

Send SMS *SecretKey#position#, device will reply

position#[http://maps.google.com /?q=latitude,longitude](http://maps.google.com/?q=latitude,longitude)

e.g.: *123456#position#*<http://maps.google.com/?q=22.536934,114.021425>*

4. Installation Instruction

4.1 SIM Card Installation

1. Remove the SIM card cover.



2. Insert the SIM card and press gently, a click will be heard upon successfully placing the SIM card in its place, please follow the insertion direction marked on the SIM card cover.



3. Put the SIM card cover back.





Note:

There is a backup battery in the device, please make sure all lights are off before inserting or removing SIM card.

4.2 OBD Port

In general, the OBD port is located in the driver or passenger cabin, from the edge of dashboard on driver side to the border of 300mm. It is easy to touch by sitting in the driver's seat; the preferred location is within the area from steering post to the vehicle centerline.

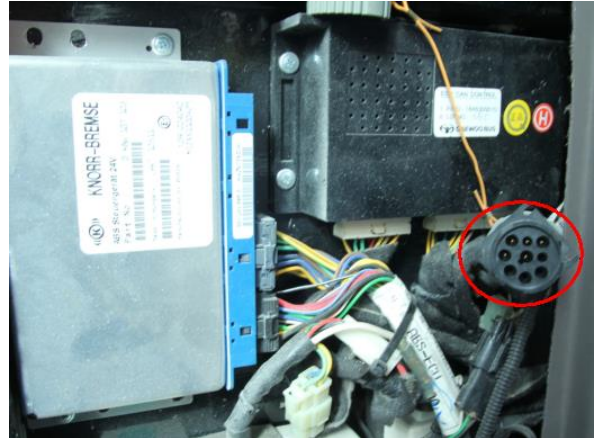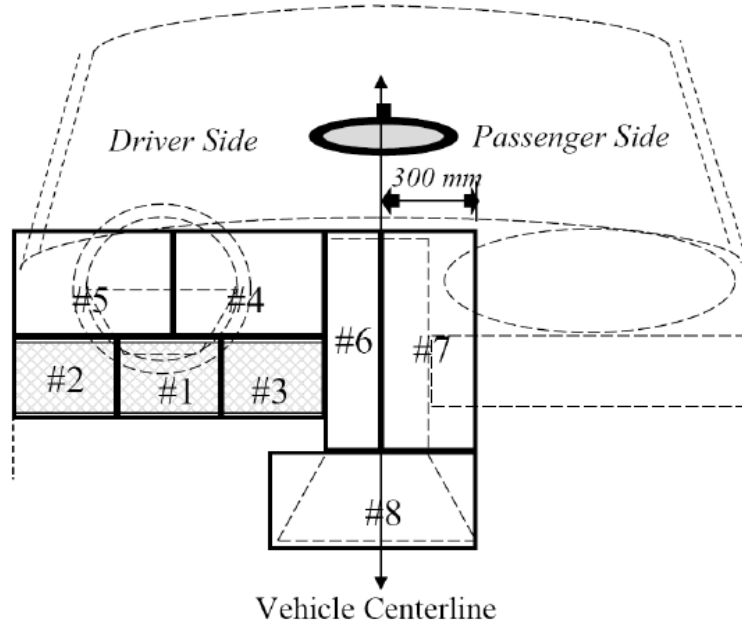

4.3 Device Installation

Before installing the device, please make sure device has been configured with necessary parameters including network and other parameters.

Park the car and make sure engine is off, align the OBD connector of the device with the engine diagnostic port and simply push in place, ensuring the device is secure. There comes one beep indicating device is power on.



If the OBD port cover can not be closed back after device plugged in, please use OBD extension cable and mount the device in proper place.




Some heavy duties may need 9-Pin or 6-Pin deutsch wiring harness.



For vehicles do not have an OBD port, please use power cable to connect vehicle battery.

Start engine, then device starts acquiring GPS info and GPRS connection. Various status can be indicated by lights and beeps. If engine keeps off or idle state it will go into sleep after 3 minutes.

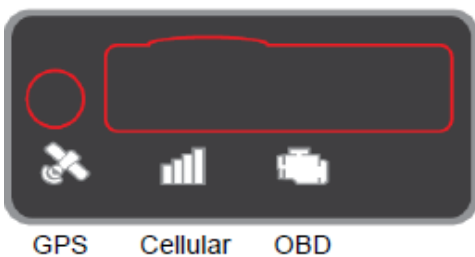

GPS function: The GPS light becomes blinking indicates that device has got its location.

GPRS connection: The Cellular light change its status to slow blinking indicates registered network, becomes solid on and comes 3 beeps indicate logged into the server.

We advise you to drive the car for at least 10 minutes with the first installation.

Note:

***If GPS does not work**, please use OBD extension cable and mount the device in a proper place to make sure GPS signal can be well received.

Log into www.livetelematics.com to check real-time monitor and trip reports.

welcome, please login here

Username:

Password:


[Forgot password?](#)

Login

Login

-
- 216G test(实车)(7)
 - 216G001
 - 216G002
 - 216G004
 - 216G005
 - 216G007
 - 216G010
 - 216G011

Vehicle monitoring list

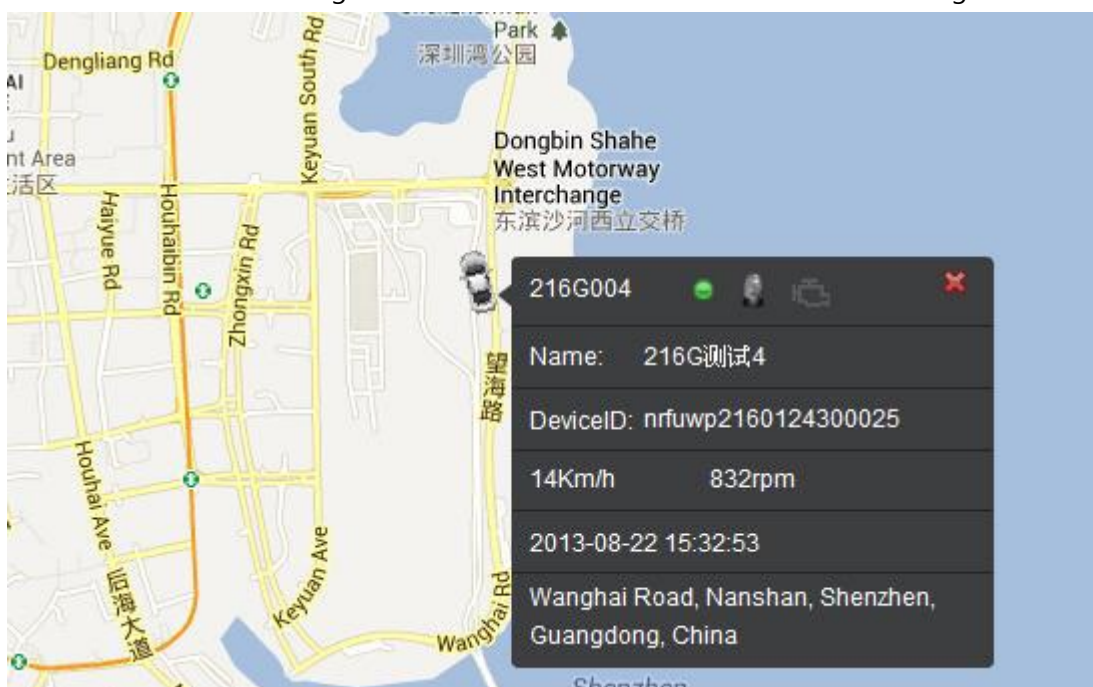

Vehicle real time location

Status	Lic.#	Name	Received time	ACC
Online Positioned	216G004	216G测试4	2013-08-22 15:33:53	ON

Vehicle real time status

5. Functions

5.1 Location Inquiry

Upon receiving location inquiry message from server or via SMS, device reports GPS data immediately.

5.2 Regular GPS data reporting

GPS data can be sampled by 3 means: by time interval, by distance or by heading change. They can be enabled or disabled separately, only sampled by time interval is enabled by default. (Sampled by distance and heading change are only supported from firmware V2.0.0).

The sample rate for time interval can be 2-600s and default setting is 30s, for distance interval can be 50-5000m and default setting is 500m, for heading change can be 5-90° and default setting is 15°.

There can be single or several groups of GPS data in one GPS message, determined by groups of GPS data per message, device will not report GPS message until it has collected specified groups of GPS data. Groups of GPS data per message can be 1-30 and default setting is 1.

For example, sampled by time interval and sampled by distance are enabled, and the respective settings are 10s and 500m, groups of GPS data per message is 5. Assume that vehicle is running at speed of 72km/h (20m/s), then it takes 25s to run out of 500m, so GPS data are sampled at 10th, 20th, 25th, 30th, 40th second and reported at 40th second as 5 groups of GPS data have been collected at that time.

The suggested minimal interval for GPS report is 10s. For example, if only sampled by time interval is enabled, then the settings might be 10s of sample rate and 1 group of GPS data per message, or 5s of sample rate and 2 groups of GPS data per message.

5.3 Regular G-Sensor Data Reporting

Device reports G-Sensor data (g-value of X/Y/Z axis) according to configured time interval, this function is disabled by default.

The sample rate can be 200-6000ms and default setting is 1000ms.

There can be single or several groups of G-Sensor data in one G-Sensor message, determined by groups of G-Sensor data per message, device will not report G-Sensor message until it has collected specified groups of G-Sensor data. Groups of G-Sensor data per message can be 50-100 and default setting is 100.

5.4 Cell ID Reporting

Device reports Cell ID every 30 seconds when it loses GPS signal, this function is disabled by default.

5.5 GPS Data Reporting in Sleep Mode

Device reports GPS data according to configured time interval during sleep. The time interval can be 10-1440min and default setting is 60min. ([Supported from firmware V1.0.9](#))

5.6 Data storage/Supplementary Report in Dead zones

When there is no cellular signal or cellular signal is poor, GPS and alarm information are stored, and reported after signal recovery. Supplementary report can be last for 15 minutes at most after ignition is off.

5.7 Trip Mileage

Device reports driving mileage in each reported message.

5.8 Alarms and Events Reporting

Alarms and Events are reported when they are triggered or eliminated and there comes short beeps, beeps are disabled by default.

- Engine on/off ([Supported from firmware V2.1.2](#))
- Speeding (triggered and eliminated)
- Low battery voltage (triggered and eliminated)
- Fatigue driving (triggered and eliminated)
- Towed
- Plug indication
- Unplug notification
- Emergency

Default thresholds for alarms:

- Speeding: 120km/h
- Low battery voltage: 10.5V
- Fatigue driving: 240min

5.9 Intelligent Power Saving

Device wakes up from sleep on detecting motion state last for 20 seconds, and goes into sleep on detecting static state last for 3 minutes.

5.10 GPS/Cellular Timer

GPS and cellular can keep working after ignition off according to configured timer, but no regular reports during this period. This function is disabled by default. (Supported from firmware V2.1.2)

The timer for GPS/GSM can be 5-7200min and default setting is 720min, for data connection can be 5-120min and default setting is 60min.

5.11 SMS Alert

If user mobile phone numbers are configured, device sends SMS to each user number when alarms are triggered or eliminated, it is disabled by default.

5.12 Google Map Link

Latitude and longitude in location SMS can be directly linked to Google map.

5.13 Remote Configuration

Users can configure device or update firmware through website:
<http://www.livetelematics.com>.

5.14 SMS Configuration

Users can configure device via SMS commands.

5.15 PC Tool Configuration

Users can configure device or update firmware through PC Tool.

6. Disclaimer

This user manual only applies to IDD-213T device.

The GPS function may be affected in electromagnetic shielding area or bunker place.

The device has a built-in cellular module. It should be used as far as possible away from fuel depots, chemical plants and other areas could cause an explosion. Most sensitive to external RF sites (such as gas stations, hospitals and school, etc.) may be equipped with radio frequency jamming equipment; some functions may be affected in the interference area.

As the device transmits data via cellular, please use the SIM card which supports data service and make sure that the account balances is sufficient. Do not use any SIM card which is restricted by region.

To make sure the products works well, please use the original accessories.

This manual is based on the "as-is" situation. Sinocastel will not guarantee the accuracy, reliability and content of the handbook. Also Sinocastel reserves the right to amend or withdrawn this manual without any prior notification.

7. Warranty

If product got quality problem within the warranty period, please bring the product together with a valid warranty card and purchase invoice to the dealer for checking. Please do not disassemble this product, this may result in damage, Sinocastel will not be responsible for those problem.

1 year of warranty since purchase time and life-long maintenance. For Failure or damage due to incorrect operation or not following the instruction, Sinocastel will provide paid maintenance within warranty period.

User name: _____

Contact number: _____

Address: _____

Post code: _____

Purchasing date: _____

Serial number: _____

Remark: _____

Please keep this card carefully in order to better serve you.

Distributor (Company Chop):

Maintenance Records

Product Model:

Date	Faults and maintenance of records		Maintenance (Signature)	User (Signature)
	Fault Description	Maintenance		

Note: This form must be carefully completed.

8. Statement

Without written permission from Sinocastel, it is prohibited reproduce, transmit, distribute or save part or all of the contents of this document in any form.

Sinocastel reserves the rights to modify or improve these products without any prior notification.

Sinocastel reserves the rights to change or cancel the content of this document without any prior notification.

All rights reserved by Sinocastel Co., Ltd.

Address: 5/F, 5th Building, Software Park, No. 2 Gaoxin C. 3rd Road, Nanshan,
Shenzhen, China

Postcode: 518057

Tel: (86)755-86156349

Fax: (86)755-86169366

<http://www.sinocastel.com>