

Haier


HRZ-113

REFRIGERATOR



USER INSTRUCTIONS

PARTS AND FEATURES

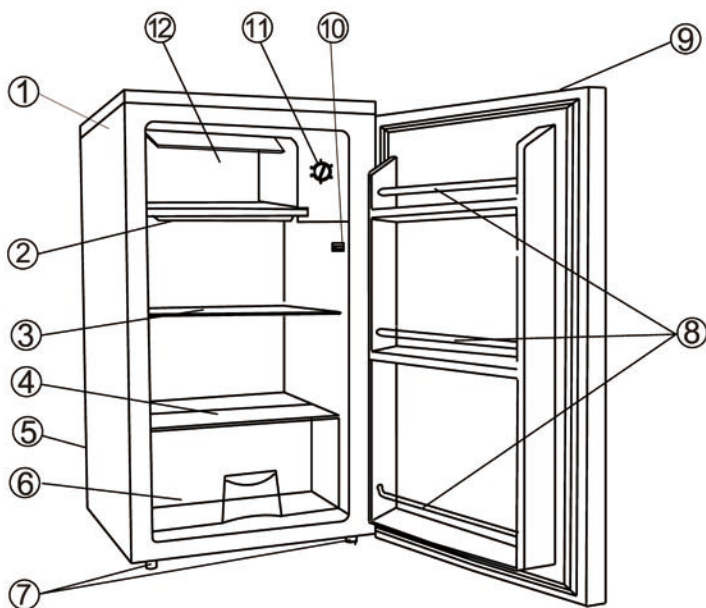


- ① Cabinet
- ② Drip Tray
- ③ Shelf
- ④ Glass Cover
- ⑤ Compressor(back)
- ⑥ Crisper Bin
- ⑦ Leveling Feet
- ⑧ Bottle Racks
- ⑨ Recessed Handle
- ⑩ Door Switch
- ⑪ Temperature Control Knob
- ⑫ Small Refrigerator Compartment

2. Positioning


Clearance space required for ventilation

Ventilation is required around the refrigerator to help with the dissipation of heat, operation at maximum efficiency and at lower power consumption. The recommended clearance space should be at least 100mm for all sides and 200mm from the top.

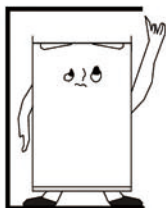


Power Supply

The refrigerator is designed to only operate on a power supply of 220/240 volts 50 hertz. Please make sure it is connected to a power point with the correct earthed three-point socket.

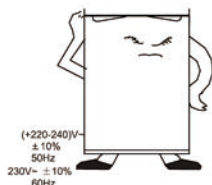

Power Cord

The power cord should not be lengthened or folded while in operation. Please make sure that the cord is accessible and any excess cord is kept close to the compressor at the back of the refrigerator. Make sure that the power cord isn't damaged before plugging into power socket.

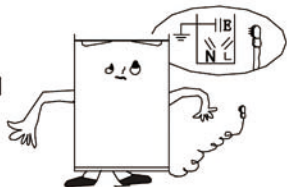

Protection from Moisture

Avoid placing the refrigerator in places where heavy moisture is present. This is to minimise the possibility of rust to any metal parts.



2. Positioning


Protection from Heat

The refrigerator should not be placed near any kind of heat source or in direct sunlight.



Stable positioning

Please ensure that the refrigerator is placed on a flat, solid floor. It should not be placed on any soft surface. If the refrigerator is not on a stable surface adjust the feet.

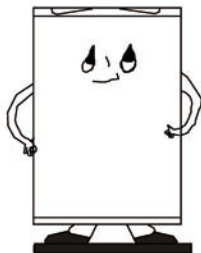


Keep Away from Danger

Do not place the refrigerator near combustible or flammable substances such as, gas, petrol, alcohol, lacquer or oils.



Moving

When moving or relocating the refrigerator, avoid having the refrigerator tilt more than 45 degrees. At no point should the refrigerator be turned upside down.

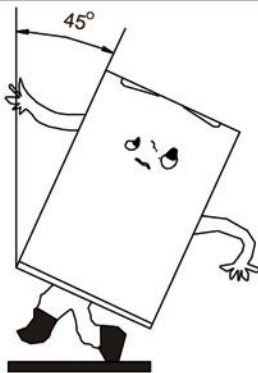

3. Temperature adjustment

The thermostat automatically adjusts the temperature inside the refrigerator.

The thermostat knob can be turned from position 1 to 5 (5 being the coldest setting).

When set to 0 the appliance is switched off.

To store food for a short period of time, set the thermostat between 1 (Min) and 3 (Med).

- To store food for long periods of time, set the thermostat to 3 or 4.

Note:

The ambient air temperature, frequency of door opening and the position of the appliance can affect internal temperatures. These factors must be taken into account when setting the thermostat.

4.Changing the reversible door

This refrigerator has been built with the door hinges on the right. If you wish to change the opening direction, follow the instructions below:

1. Remove the upper hinge cover(6) first.
2. Remove the two screws (1) that hold the upper hinge (5) (right side) to the frame. Take away the upper hinge (5).
3. Lift the door and place it on a padded surface to prevent scratching it.
4. Remove the two screws (8) that hold the lower hinge (2) and then remove the hinges (2).
5. Remove the left front leg (4) and transfer it to the right side.
6. Remove the hole cover plate(7) to the right side.
7. Before placing this lower hinge(2), remove the bolt-pin (9) and reverse the direction of the lower hinge(2). Then install the lower hinge (2) onto the left side of the lower frame with two screws (8).
8. Insert the bolt-pin(9) to the lower hinge (2).
9. Lift the door into place. Ensure the door is level with the bottom foot.
10. Hold the door in the closed position and secure the top hinges (5) to the top frame of the left side with the two screws (1).
Do not over tighten the two screws. Only tighten until the top of the door is level with the counter top.
11. Install the upper hinge cover(6) on the upper hinge.

4. Changing the reversible door

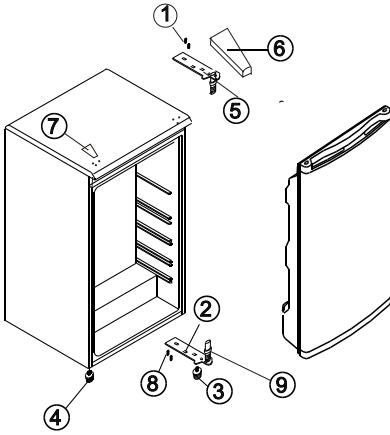


FIGURE 1

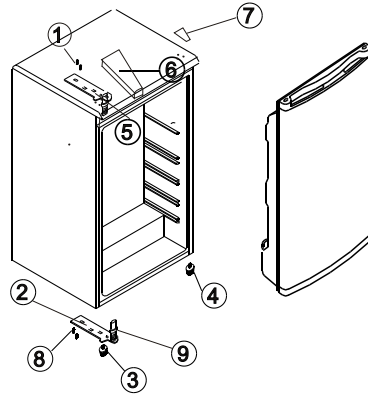


FIGURE 2

FIGURE 1 - REPRESENTS POSITION OF COMPONENTS PRIOR TO DOOR REVERSAL.

FIGURE 2 - REPRESENTS POSITION OF COMPONENTS AFTER DOOR REVERSAL.

5. Changing the light bulb

Replacing bulbs:





When replacing the bulb, unplug the appliance from the mains, proceed as follows:

1. Remove the water drip tray.
2. Hold the lamp cover and push toward inside of the cabinet.
3. Remove the lamp cover.
4. Unscrew the bulb and screw in a new 10W bulb.
5. Hold the lamp cover and put the hook of the lamp cover to click into the thermostat box.
6. Pull the lamp cover forward to click into the thermostat box.
7. Replace the drip tray.

Thermostat



Lamp cover

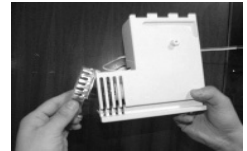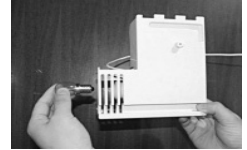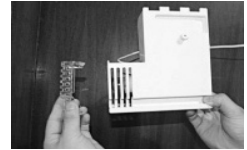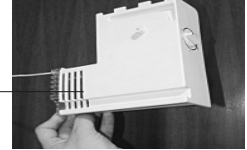

6.Maintenance

- ★ The refrigerator should be cleaned and maintained once a month.
- ★ The power plug should always be disconnected from the power outlet before any cleaning or maintenance is carried out.
- ★ For cleaning, do not use hot water, petrol, alcohol, kerosene, washing powder, cleanser, alkaline detergent, acid or chemical cloths. Never directly spray the refrigerator with water. This could cause rust or weaken the insulation.
- ★ Wipe the inner, outer and accessories of the refrigerator only with luke warm water. For heavier cleaning, use a small amount of washing detergent in luke warm water, then wipe down with water and dry with a clean cloth.
- ★ Make sure that the rubber seals on the door are clean and not damaged.
- ★ Avoid leaving oils and solubles on the plastic parts of the refrigerator. Try to wipe up as it could cause a stain. Not doing so could easily age the plastic.Bad odours can also occur if not cleaned regularly.

7. Troubleshooting

1. When the refrigerator does not work.
Check if there is a power failure.
Check if the power plug is plugged into the power outlet.
Check if the fuse has blown.
2. When the refrigerator is cooling excessively.
The temperature control dial may be set too high.
3. When the refrigerator is not cooling sufficiently.
Hot food may have just been placed inside, allow it to cool down.
There is too much food in the refrigerator.
The door may not have been closed properly.
The door gasket/seals may be damaged.
The refrigerator may not be well ventilated.
There maybe Insufficient clearance between the refrigerator and surrounding walls.
The temperature control dial may not be set properly.
4. While defrosting, water overflows the refrigerator and onto the floor.
Check that the drain pipe and the drain hose are not clogged.
Check that the drain pan is housed properly.
5. When condensation forms on the outside of the refrigerator.
Condensation may form on the outside when the humidity is high such as during a wet season. This is the same effect as condensation forming when chilled water is poured into a glass.
It does not indicate a failure, wipe with a dry cloth.
6. When you hear a sound like water flowing.
A sound like water flowing is the refrigerant flowing.
It does not indicate a failure.
7. When the cabinet's side panel heats up.
The side panel of the cabinet will heat up when the door is opened or closed frequently, when starting the unit and when the unit operates in summer with high ambient outside temperature,
Do not touch the panel, it results from the dissipation of the heat from inside the cabinet and does not indicate a failure.

8. Technical specifications and arning

- * For detailed technical specification, please refer to the nameplate at the back of the refrigerator.
- * Specifications are subject to change without prior notice.

R600a Refrigerant

This appliance may contain a small quantity of environmentally friendly, but flammable, non-synthetic R600a refrigerant:

- * Upon opening and installing your product, check that the tubing of the refrigerant circuit has not been damaged during transportation.
- * Leaking refrigerant may cause eye injuries or may ignite.
- * Install the appliance in a room that is at least 1m for every 8g of refrigerant.

The amount of refrigerant in the appliance can be found on the rating plate the back of the unit.

- * Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
- * Do not damage the refrigeration circuit.

If you are unsure of the refrigerant type check the rating plate on the back of the unit.

Warnings

- * This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - * Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- * Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
 - * Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
 - * Do not damage the refrigerant circuit
 - * Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

8. Technical specifications and warnings

- * Water contained in food or air inside the refrigerator may form a layer of frost. This frost will damage the refrigerator. Defrost the refrigerator if the frost is more than 2mm thick.
- * Do not use a sharp tool to scrape off ice and frost or to separate food which has become stuck so as not to damage the evaporator.
- * If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid hazard.

IMPORTANT DISPOSAL INSTRUCTIONS



As a responsible retailer we care about the environment.

As such we urge you to follow the correct disposal procedure for your product and packaging materials, This will help conserve natural resources and ensure that it is recycled in a manner that protects health and the environment.

You must dispose of this product and its packaging according to local laws and regulations. Because this product contains electronic components and sometimes batteries, the product and its accessories must be disposed of separately from household waste when the product reaches its end of life. Contact your local authority to learn about disposal and recycling.

The product should be taken to your local collection point for recycling. Some collection points accept free of charge.

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.

