




# BJ194Z-9S4 Network Multi-meter

## User Manual

Version: 1.2

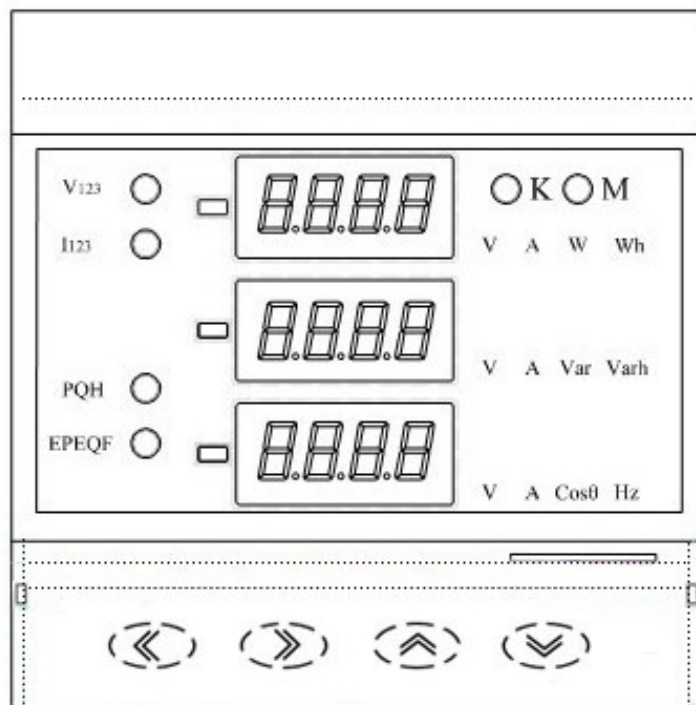



## Read me

**When you use BJ194Z-9S4 series Network Multi-meter, be sure to read this user manual carefully, and be able to fully understand the implications, the correct guidance of operations in accordance with user manual, which will help you make better use of BJ194Z-9S4 series Network Multi-meter, and help to solve the various problems at the scene.**

1. Before the meter turning on the power supply, be sure that the power supply within the provisions of the instrument;
2. When installation, the current input terminal must non-open, voltage input terminals must Non-short circuit;
3. Communication terminal (RS232/RS485 or Ethernet) is strictly prohibited to impose on high pressure;
4. Be sure the instrument wiring consistent with the internal system settings;
5. When communicating with the PC, instrument communication parameters must be consistent with the PC.



- **Please read this user manual carefully**
- **Please save this document**



# Directory

<b>CONTENTS</b>	<b>Page</b>
1. SUMMARIZE-----	3
2. APPLICATIONS -----	3
3. FEATURES -----	4
3.1. - Electricity metering -----	4
3.2. - Specifications -----	5
4. INSTALLATION AND START-UP -----	7
4.1. - Installation -----	7
4.2. - Connection Terminal -----	9
4.3. - Connection Drawing-----	10
5. SCREEN DISPLAY-----	11
5.1. - Panel Diagram -----	11
5.2. - Display Summary -----	11
6. OPERATION MODE -----	12
7. SETUP PROCEDURE -----	15
7.1.- Input Password-----	15
7.2. - Input Signal Selection -----	15
7.3. - Communication Preferences-----	19
7.4. - Digital Output Setting-----	21
7.5. - Analog Output Setting-----	25
7.6. - System Setting-----	28
7.7. - Menu Structure-----	30
7.8. - Display Character instructions-----	31
8. PULSE OUTPUT -----	32
9. SAFETY CONSIDERATIONS-----	33
10. MAINTENANCE-----	33
11. TECHNICAL SERVICE-----	34



## 1. - SUMMARIZE

BJ194Z-9S4 series Network Multi-meter is a high-end multifunction power meter. It is the ideal choice for monitoring and measuring of power systems.

It can measure all of the power parameters in power grid:

Current,	Reactive power,
Voltage,	Apparent power,
Frequency,	Energy,
Active power,	Power factor.

Have variety of input and output port for option, through the analog port, digital I/O port, and pulse output port to transmit the electric parameter. For transformers, generators, capacitor banks and motors of the distributed detection, automatic control system, on-line monitoring display.

It can replace the traditional analog or many digital measurement instruments (such as ammeter, voltmeter, power meter, power factor meter, frequency meter, etc.) with the advantages of improving system reliability, making the on-site wiring convenient and reduce system cost.

With serial port, BJ194Z-9S4 Network multi-meter can connect with PC; and use Modbus to set programming and read the data.

Based on this power meters, you can simply set up a monitoring system with the IPC and central software.

## 2. - APPLICATIONS

- ◆ All power parameter measurement;
- ◆ Power factor measurement and control;
- ◆ Energy Measurement;
- ◆ Replacing the three-phase power meter, three phase electricity transmitter;
- ◆ Transformers, generators, capacitors and electric motors distributed detection;
- ◆ Medium and low pressure systems;
- ◆ SCADA, EMS, DCS integrators.



### 3. - FEATURES

#### 3.1. - Electricity Metering

By means of an internal microprocessor it simultaneously measures:

Parameter	Symbol	A-phase	B-phase	C-phase	Total
Single phase voltage	V	x	x	x	
*Phase-phase voltage	V	x	x	x	
Current	A	x	x	x	
Frequency	Hz	x	x	x	x
Power factor	Cos $\Phi$	x x	x x	x x	x
Active power	W	x x	x x	x x	x
Reactive power	Var	x x	x x	x x	x
Active energy	Wh	x x	x x	x x	x
Reactive energy	Varh	x x	x x	x x	x
4-quadrant electric data		x x	x x	x x	x

**Notes:** Phase-phase voltage is Uab, Ubc, Uca, voltage data determined by the different wiring  
Available: x: Display and communications.

The 194Z-9S4 delivers the visualization of above listed parameters by means of three line 4-digit, led type displays. Up to 3 parameters can be simultaneously read in the screen.

“○”Indicator LED on the left shows currently displayed the parameters, “○ K” means in thousands, “○ M” means in million.

#### OTHER FEATURES

- Low-size (96 x 96 mm), panel-mounting meter.
- True R.M.S. measuring system.
- Instantaneous, maximum and minimum values of each measured parameter.
- Energy measurement (indication through a lighting led)
- RS-485 or Ethernet (optional) type communication to a PC.

### 3.2. - Specifications

#### 1. - Reference standard:

Basic electricity: GB/T13850-1998 (IEC688-1992)

Active power: GB/T17215-2002 (IEC61036:2000)

Reactive power: GB/T17882-1999 (IEC61268:1995)

#### 2- Accuracy standards

Parameter	Accuracy	A phase	B phase	C phase	All	Average
Voltage	0.5%fs	V1	V2	V3		VE
Current	0.5%fs	A1	A2	A3		AE
Active Power	0.5%fs	W1	W2	W3	W	
Reactive Power	0.5%fs	var1	var2	var3	var	
Apparent power	0.5%fs	VA1	VA2	VA3	VA	
Power Factor	0.5%fs	PF1	PF2	PF3	PF	
Active Energy	1%rd				Wh	
Reactive Energy	2%rd				varh	
Frequency	0.05%rd				Hz	

#### 3. - Input

Voltage: Rated 400V (optional 100V)

Current: Rated 5A (optional 1A)

Frequency: 45-65Hz

#### 4. - Load

Voltage: <0.5VA / phase (rated 220V)

Current: <0.5VA / phase (rated 5A)

#### 5. - Overload

Current: 1.2 times rated continuous; 10 seconds for 10 times the rated

Voltage: 1.2 times the rated continuous; 10 seconds for 800V

#### 6. - Dielectric strength

IEC 688 / IEC 255-3 (1989)

2kV AC RMS 1 minute, between input / output / case / power supply

**7. - EMC Test**

	standard	Test voltage
Electrostatic discharge immunity test:	IEC-61000-4-2 level 4	8Kv
Electrical fast transient burst immunity test	IEC61000-4-4 level 3	Input 1kV; Power supply 2kV
Surge (Shock) immunity test	IEC61000-4-5 level 4	common mode test voltage 4kV

**8. - Work environment**

Temperature: -20°C~ +60°C

Humidity: RH 20%~95% (No condensation)

**9. - Protection**

Panel: IP54

Case: IP20

**10. - Storage Conditions**

Temperature: -25°C~+70°C

Humidity: RH 20%~95%

**11. - Working Power**

AC 80-265V, 45-65Hz, DC 80-380V

DC 20-60V (Optional)

Maximum power consumption 6W

**12. - Dimensions**

L × W × H =96mm×96mm×71mm

**13. - Installation hole size**

L × W = (91+0.8mm) × (91+0.8mm)

## 4.- INSTALLATION AND START-UP



The manual you hold in your hand contains information and warnings that the user should respect in order to guarantee a proper operation of all the instrument functions and keep it in safety conditions. The instrument must not be powered on and used until its definitive assembly is on the cabinet's door.

**If the instrument is not used as manufacturer's specifications, the protection of the instrument will be damaged.**


When any protection failure is suspected to exist (for example, it presents external visible damages), the instrument must be immediately powered off. In this case contact a qualified service representative.

### 4.1.- Installation


#### Mounting

Instrument is to be mounted on panel (cut-out  $91+0.8 \times 91+0.8 \text{ mm}$ ). Keep all connections into the cabinet.

Note that with the instrument powered on, the terminals could be dangerous to touch and cover opening actions or elements removal may allow accessing dangerous parts. Therefore, the instrument must not be used until this is completely installed.

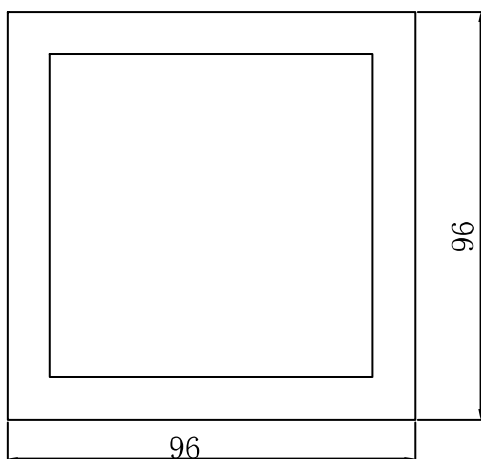

Front view

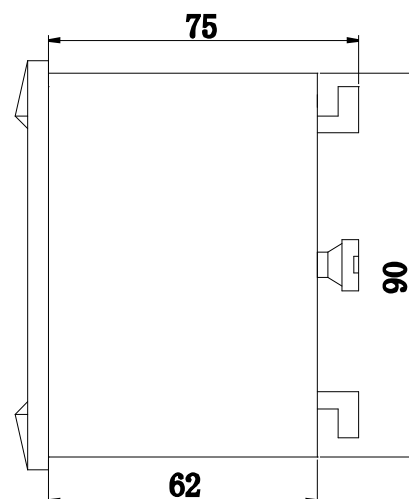

Side view



**Notes:**

Input signal: BJ194Z using a separate acquisition calculate for each measurement channel, to ensure consistent in use, for different load forms, its a variety of connection mode. Access wire shall be met: the current 2.5 square mm, voltage of 1.5 square millimeters.

**A. Voltage input:**

Input voltage should not exceed the rated input voltage products (100V or 400V),  
Otherwise, you should use external CT. Suggest 1A fuse be installed in the voltage input side.

**B. Current Input:**

Standard input current is 5A, if greater than 5A should use external CT.

When the CT is connected with other instruments, make sure wiring methods be used in series.

Before remove the current input connection, must be sure to disconnect the primary circuit or shorted secondary circuit of CT. In order to facilitate disassembly, please do not connect to CT directly, and the terminal block is suggested.

**C. Please make sure that the input voltage and current corresponding to the same phase sequence, and the same direction; Otherwise, the Values and symbols will be wrong!! (Power and Energy)**

The input network configuration of instrument depends on the CT number of the system:  
in the condition of 2 CT, select the three-phase, three-lines two components;  
in the condition of 3 CT, select the three-phase, four-lines three component mode.

Instrument connection mode, set of the instrument (programming input network NET) should be the same load wiring as measured wiring. Otherwise, the measurement instrument will lead to incorrect voltage or power.

In three-phase three-wire mode, the measurement and shows the line voltage;

In three-phase four-wire mode, the measurement and shows the phase voltage.

**Auxiliary power:**

BJ194Z series network multi-meter with universal (AC / DC) power input, if not for a special statement, we provide the 220VAC/DC or 110VAC/DC power interface for standard products. Instruments limit work power supply: AC / DC: 80-270V, please ensure that the auxiliary power can match with BJ194Z series meter to prevent damage to the product.

A. Suggest install 1A fuse in the fire line side.

B. For the areas with poor power quality, suggest install lightning surge suppressor and rapid burst suppressor to prevent lightning strikes.

## 4.2. - Connection Terminal

### Upper connection terminal

<b>1</b>	<b>2</b>	<b>58</b>	<b>59</b>	<b>60</b>	<b>47</b>	<b>48</b>	<b>49</b>	<b>50</b>	<b>16</b>	<b>15</b>
Power supply		RS485A	RS485B	GUD	AP+	AP-	RP+	RP-	AO+	AO-

1. \*Supply voltage input: 0 V

2. \*Supply voltage input: 220 Va.c.

58. RS-485 ( + )

59. RS-485 ( - )

60. RS-485 ( GND )

47. Active energy pulse output ( + )

48. Active energy pulse output ( - )

49. Reactive energy pulse output ( + )

50. Reactive energy pulse output ( - )

16. Analog output ( + )

15. Analog output ( - )

### Middle connection terminal

<b>20</b>	<b>19</b>	<b>22</b>	<b>21</b>	<b>70</b>	<b>71</b>	<b>72</b>	<b>73</b>	<b>74</b>
DO1		DO2		COM	DI1+	DI2+	DI3+	DI4+

20. Route 1 digital output ( + )

19. Route 1 digital output ( - )

22. Route 2 digital output ( + )

21. Route 2 digital output ( - )

70. Digital input **COM** pin

71. Route 1 digital input ( + )

72. Route 2 digital input ( + )

73. Route 3 digital input ( + )

74. Route 4 digital input ( + )

### Lower connection terminal

<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>11</b>	<b>12</b>	<b>13</b>	<b>14</b>
A-phase Current		B-phase Current		C-phase Current		Ua	Ub	Uc	Un

4. Current A-phase - S1 input

5. Current A-phase - S2 input

6. Current B-phase - S1 input

7. Current B-phase - S2 input

8. Current C-phase - S1 input

9. Current C-phase - S2 input


11. Voltage A-phase input

12. Voltage B-phase input

13. Voltage C-phase input

14. Neutral Voltage input

### 4.3. - Connection Drawing

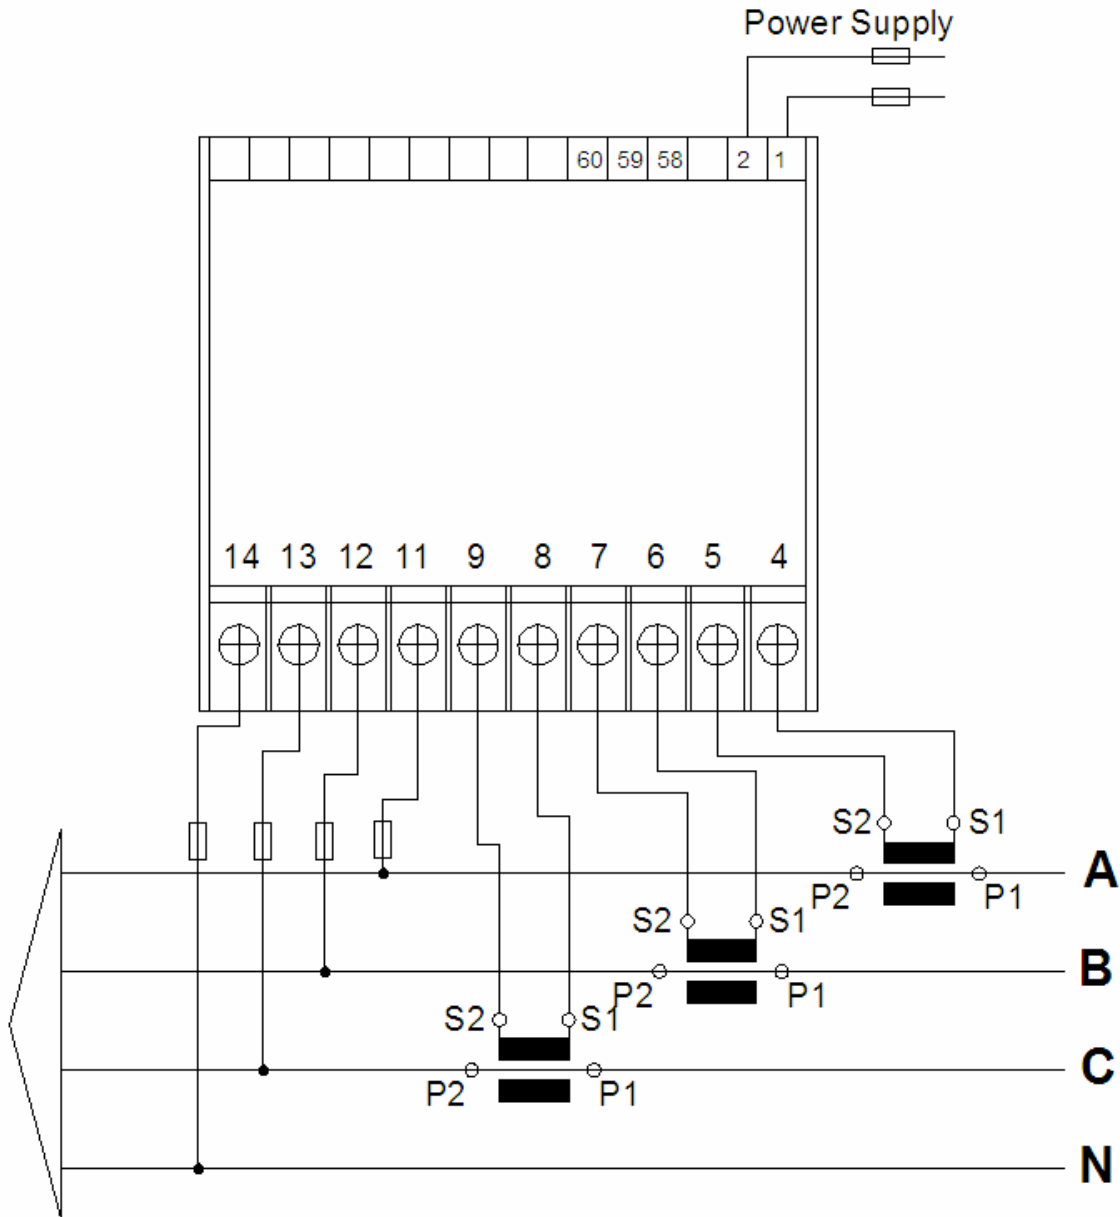

#### IMPORTANT REMARK!


If power = -0.01 is shown for any of the phases and voltage and current are not zero for this phase, check out following points:

- Assure that A, B and C phases coincide in voltage and current.
- Correct polarity? Reverse the current transformer placed at this phase.

**Note:** This connection drawing is for reference only, the actual connecting terminal please refer to the label on the rear part.

## 5. SCREEN DISPLAY

### 5.1. - Panel Diagram

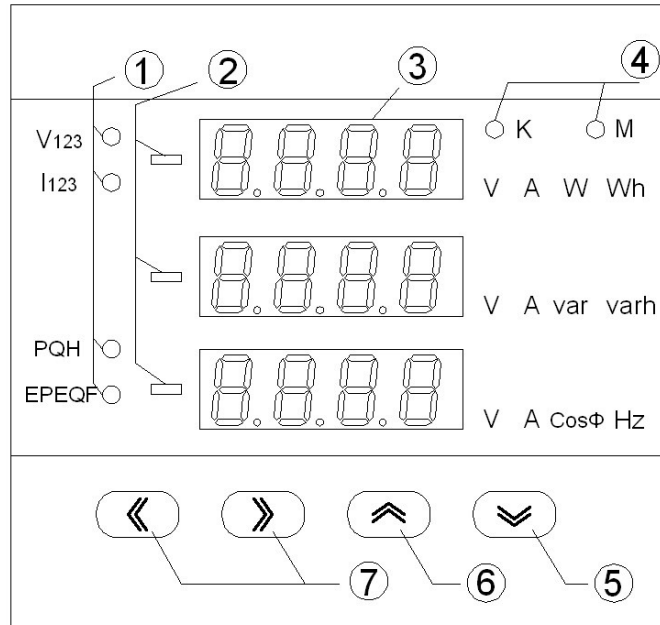

### 5.2. - Display Summary



No.	Display	Explanation
1	Indicator of the current display data	4 LED show the display module reading data
2	Negative symbol	Show the direction of the current measure data, red LED on mean "-", otherwise means"+"
3	Digital display module	Three lines 4 digital LED show power data, include voltage, current, power, power factor, frequency, etc.; And the contents of the programming menu
4	Indicator of the data Unit	"K" means thousand; "M" means million
5*	Enter key	For menu selection and confirmation
6*	Menu key	Used to open the menu and return to previous menu
7*	Left and Right key	Set the programming value


**Note:** Please see detail instructions of "\*" items at "OPERATION MODE".


## 6. - OPERATION MODE


When the 194Z-9S4 is powered up, the entire symbol will be on, and the meter starts to self-test. After some seconds, the meter is ready for operation and shows one of the available screens.




Parameters on display can be switched by pressing key  or  LCD shown on screen at any moment

When the key  is pressed, the screen CURRENT values of each phase are now showing.

Pressing again the key , the screen will show the following parameters successively.

In setting menu, pressing  can move the setting cursor to left;

Pressing  can enter the number 0 ~ 9.





This key named "SET" key, pressing it can open the programming menu and return to previous menu.



This key named "Enter" key, pressing this key you can exit it with saving any modification that you might have done, in menu operation press "Enter" key, and user can go to the next menu.

### Note:



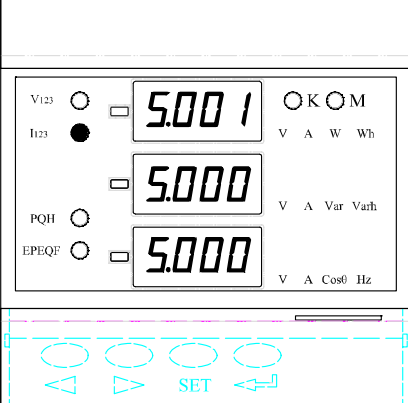
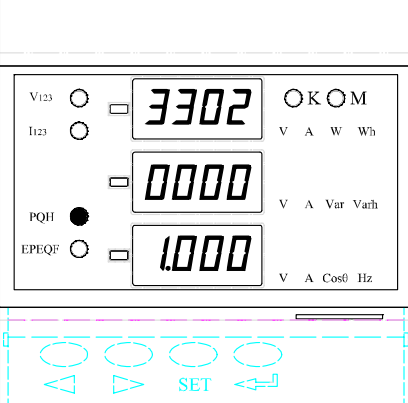
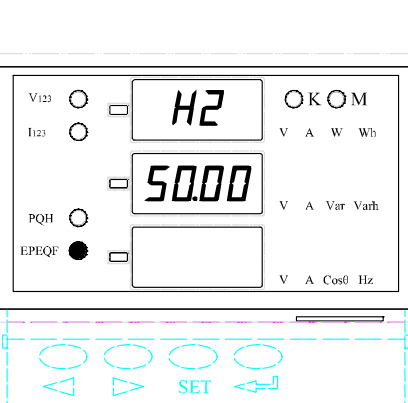
Press key  or  in normal standby status, and the meter will show different data in main screen:

In the menu set mode, when changes the parameter and exit setting, the meter will ask to

"SAVE", press  *exit without saving*

press  *save and exit.*

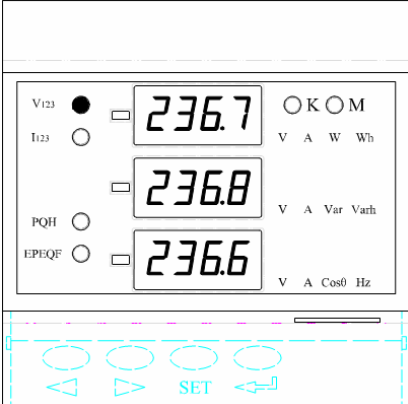

Screen	Shown	Explain
1		<p>Show the phase voltage Ua, Ub, Uc (three-phase four-wire) or line voltage Uab, Ubc, Uca (three-phase three-wire)</p> <p>In the three phase4-wire connection, press  can switch show the phase voltage and line voltage.</p> <p>Screenshots show: Ua = 236.7V, Ub = 236.8V, Uc = 236.6V</p>
2		<p>Shows three-phase current Ia, Ib, Ic units amp,</p> <p>Screenshots show: Ia = 5.001A, Ib = 5.000A, Ic = 5.000A</p> <p>In High Voltage Measurement</p> <p>“○ K” means in thousands, “○ M” means in million.</p> <p>When the indicator on please do the above treatment.</p>
3		<p>Shows the total active power P, total reactive power Q, total power factor PF.</p> <p>Screenshots show: P = 3302kW, Q = 0kvar, PF = 1.000</p>
4		<p>Show grid frequency,</p> <p>Screenshots show: F = 50.00Hz,</p>




<p><b>5.1</b></p>		<p>Show the active energy value, The second line LED display for the high 4-bit digital, The third line LED display for the lower 4- bits; Combined to 8-digit for energy value. Screenshots show: EP = 73.8Wh, Press  can switch show the negative active energy data.</p>
<p><b>5.2</b></p>		<p>Show the negative active energy value, Screenshots show: -EP = 867.6Wh, Press  can switch show the positive active energy data.</p>
<p><b>6.1</b></p>		<p>Show the positive reactive energy value, The second line LED display for the high 4-bit digital, The third line LED display for the lower 4- bits; Combined to 8-digit for energy value. Screenshots show: Eq = 647.0varh, Press  can switch show the negative reactive energy data.</p>
<p><b>6.2</b></p>		<p>Show the negative reactive energy value, Screenshots show: -Eq = 828.0Wh, Press  can switch show the positive reactive energy data.</p>




## 7. - SETUP PROCEDURE



The SETUP procedure of the BJ194Z-9S4 is performed by means of several SETUP options. Once into the SETUP, use the keyboard to select different options and enter required variables:

### 7.1.- Input Password

A 4-figure password is required to be entered (in case that in case that the meter will work without permission.)

At normal display mode, press  to enter the programming mode, meter display

Meter display “  ”,  
  


Ask for the password. Press  to input the password number, from “0~9”. Press  to move the cursor . After password switch press  to confirm the input.

If password is correct, meter can enter next setting.

**Notes:** the default password is 0001.

### 7.2. - Input Signal Selection

Press , return to level 1 menu.



In this section, user will set:.

1. Input net mode;
2. Voltage measure range;
3. Current measure range;
4. Voltage transformation ratio;
5. Current transformation ratio.







### 7.2.1.- Choice the input net mode

In level 1 menu, use  and  to choose item “-IN-”, and the meter shows like this:

-1 n.-

then press , enter the level 2 menu, choose “LINE”, meter shows:

-1 n.-
LI nE

Then press , again, enter the level 3 menu.

Use  and  to select the right wiring mode, meter shows like this:

-1 n.-	Or	-1 n.-
LI nE		LI nE
n.34		n.33


**Note:** Selecting the wiring mode must match with actual wiring, or the reading data will go wrong.


### 7.2.2.- Voltage measure range

In level 1 menu of “-IN-”

Choose item “U.SCL”, and the meter shows like this:

-1 n.-
U.SCL

then press , enter the level 3 menu, user can see the voltage range:

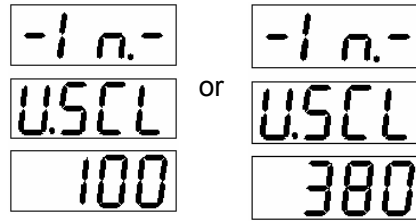

**100V:** Maximum measured value is 100V

**380V:** Maximum measured value is 380V

**Note:** A different range will affect the accuracy of measurements. If the accuracy is 0.5.


Select 100V range, means the minimum scale value is 0.5V (100 x 0.5%);


Select 380V range, means the minimum scale value is 1.9V (380 x 0.5%).


### 7.2.3.- Current measure range

In level 1 menu of “-IN-”.

Choose “I.SCL”, meter shows like this:

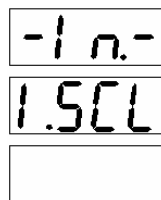

then press  , enter the level 3 menu, user can see the current range:

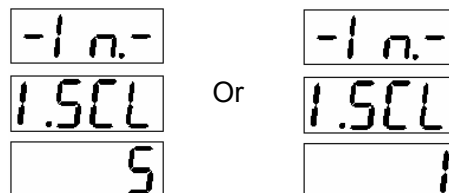

**5A:** Maximum measured value is 5A.

**1A:** Maximum measured value is 1A.

**Note:** Select a different range will affect the accuracy of measurements, if the accuracy is 0.5.

Select 1A range, means the minimum scale value is 0.005A (1 x 0.5%);

Select 5A range, means the minimum scale value is 0.025A (5 x 0.5%).


### 7.2.4- Voltage transformation ratio

In level 1 menu of “-IN-”.




Choose item “r.PT” , meter shows like this:



-1 n.-
r. Pt

then press  , enter the level 3 menu, allowing us to set the current transformer.

-1 n.-
r. Pt
0001

Press  to input the number, from “0~9”. Press  to move the cursor. After password switch press  to confirm the input, value is 1~9999.

**Note:** The input values represent the voltage transformer (primary side voltage) / (secondary side voltage).


Secondary side voltage is 100V or 380V; user set it at section **7.2.2**

### 7.2.5. - Current transformation ratio




In level 1 menu of “-IN-”.

Choose the item “r.CT”, meter shows like this:

-1 n.-
r. Ct

then press  , enter the level 3 menu, allowing us to set the current transformer.

-1 n.-
r. Ct
0001


Press  to input the number, from “0~9”. Press  to move the cursor. After password switch press  to confirm the input, value is 1~9999.

**Note:** The input values represent the current transformer (primary side voltage) / (secondary side current) .

Secondary side current is 1A or 5A, user set it at section **7.2.3**



### 7.3. - Communication Preferences

Press , return to level 1 menu.

In this section, user will set:


1. Meter communication address;
2. Baud rate;
3. Communication format.


**Note:** Not all the meter have communication function, please make sure your purchase meter first, if no communication mode, you can skip this section.


#### 7.3.1. - Meter communication address setting



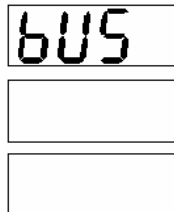

One or some BJ194...meter can be connected to a P.C. With this system we can get all the parameters in one central point of reading. The BJ194..., has a serial RS-485 or RS-232 type output (according to the model). If we connect more than one device to the same communication line (RS-485), we have to assign to each of them a different code or direction (from 1 to 247), since the P.C. needs the identification of every measuring point.

In level 1 menu, choose the item "bus", the meter shows like this:

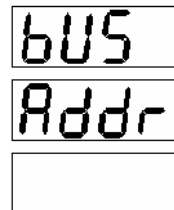

Then press , enter the level 2 menu, choose the item "Addr", the meter shows like this:





Press  to input  the number, from "0~9". Press  to move the cursor. After password, press  to confirm the input, value is 1~9999.


### 7.3.2.- Communication Baud rate setting

In level 1 menu of “bus”.

Choose item “BAUD”, and the meter shows like this:

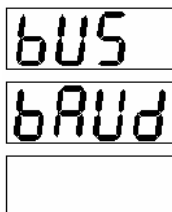


Then press  , enter the level 3 menu, allowing us to set the Baud rate 2400, 4800 or 9600.

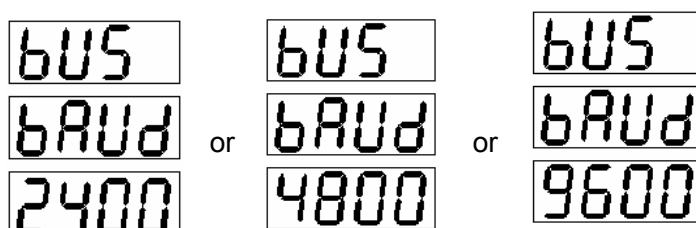

### 7.3.3.- Choose communication format


In level 1 menu of “bus”.

Choose item “data”, and the meter shows like this:

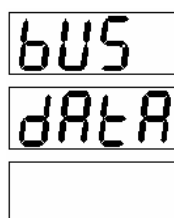


Then press  , enter the level 3 menu, allowing us to set the communication data format.

**(Factory setting n.8.1)**

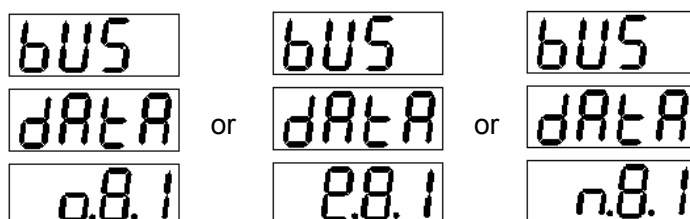



### 7.4. - Digital Output Setting



Press  , return to level 1 menu.

In this section, user will set:

1. Digital output type;
2. Output delay;
3. Choose the electrical parameter;
4. Set the alarm value
5. Set the hysteresis value

**Note:** If the meter have more than one channel digital output, you can set the DO-2,DO-3...as the following step, please select the appropriate output settings in the level 1 menu,.


#### 7.4.1. - Output type



In level 1 menu, use  and  to choose item "DO-1", and the meter shows like this:

do-1

then press  , enter the level 2 menu, choose "TYPE". The meter shows:

do-1
TYPE

then press  again, enter the level 3 menu.

Use  and  to select the output type, meter shows like this:

do-1	Or	do-1	Or	do-1
TYPE		TYPE		TYPE
r.n		ALr		OFF



**r.n:** Mean remote control mode, there have pulse and level output mode, more detail refer chapter 7.4.2.

Host inquiry:

01	05	00 01	FF 00	DD FA
Address	Code	Relay address	Relay value (FF00:close; 0000: open)	CRC

Slave answer

01	05	00 01	FF 00	DD FA
Address	Code	Relay address	Relay value (FF00:close; 0000: open)	CRC

RS485 communication please refer to chapter 8.1

**ALr:** Mean directly alarm mode

**OFF:** Mean the relay will not work


#### 7.4.2. - Set output delay

In level 1 menu of “DO-1”.

Choose item “DELY”, and the meter shows like this:




```
do-1
dELY

```

Then press  , enter the level 3 menu, user can set the delay value:

```
do-1
dELY
0001

```

Press  to input the number, from “0~9”. Press  to move the cursor. After password switch press  to confirm the input, value is 1~9999. **(Default 0010)**


**Note:** The setting of relay value is indicating the width pulse output; value “0000” is for level output. The setting value resolution is 10ms, which means “0001” is 10ms, “9999” means 99.99s.




### 7.4.3. - Choose the electrical parameter

In level 1 menu of “DO-1”.

Choose item “PARA”, meter shows like this:

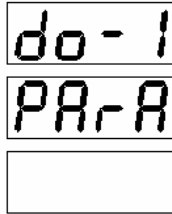

then press  , enter the level 3 menu, user can choose the output parameter:

**Note:** There are two alarm mode, indicate with “XX-H” and “XX-L”,

“XX-H” mean the rising edge alarm;


“XX-L” mean the falling edge alarm;


**Example:** “IA-H” mean when the A-phase current is rising to a certain value then output alarm.  
“I3-H” mean when one phase of A, B, C phase current is rising to a certain value then output alarm.  
“PS-L” mean when Three-phase total power is falling to a certain value then output alarm.


### 7.4.4. - Set the alarm value

In level 1 menu of “DO-1”.

Choose item “VALU”; meter shows like this:

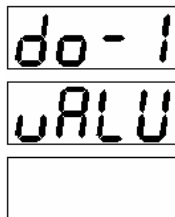

then press  , enter the level 3 menu, user can set the alarm value:

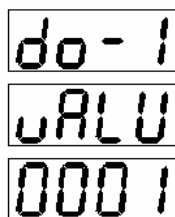





Press to input the number, from “0~9”. Press to move the cursor. After password switch press to confirm the input, value is 1~9999. **(Default 5500)**

**Note:** Alarm value is about the secondary side value (such as AC100V, AC5A).

Voltage unit is 0.1V;

Reactive power unit is 0.1VAR;

Current unit is 0.001A;

Power factor Is 0.001;


Active power unit is 0.1W;

Frequency 0.01HZ;


### 7.4.5. - Set the hysteresis value

In level 1 menu of “DO-1”.

Choose item “HYS”, meter shows like this:

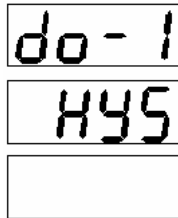

then press , enter the level 3 menu, and user can set the alarm value:

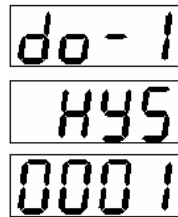

Press to input the number, from “0~9”. Press to move the cursor. After password switch press to confirm the input, value is 1~9999. **(Default 5500)**

**Note:** hysteresis value is for preventing the relay repeated action.

**Example:** Alarm value 3.700A; hysteresis value 0.030A; Rising edge alarm

Measured value is 3.700A then relay action, output alarm;

When measured value is bellow 3.670A, the relay will be closed.

## 7.5. - Analog Output Setting



Press  , return to level 1 menu.




In this section, user will set:


1. Analog output type;
2. Choose the electrical parameter;
3. Set the zero value for transmission output;
4. Set the full scale value for transmission output.




**Note:** If the meter have more than one channel analog output, you can set the AO-2,AO-3...as the following steps, please select the appropriate output settings in the level 1 menu,.


### 7.5.1. - Output type



In level 1 menu, use  and  to choose item “DO-1”, meter shows like this:




  
  


then press  , enter the level 2 menu, choose “LINE”, meter shows:

then press  again, enter the level 3 menu.

Use  and  to select the output type, meter shows like this:



 or
 
 or
 

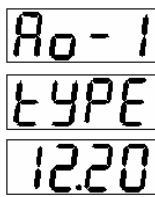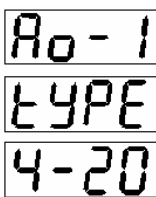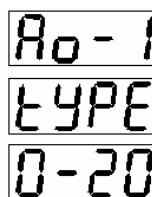
**Note:** output type can choose 12~20mA,4~20mA,0~20mA (default is 12~20mA)


### 7.5.2. - Choose the electrical parameter

In level 1 menu of “AO-1”.

Choose item “PARA”, meter shows like this:

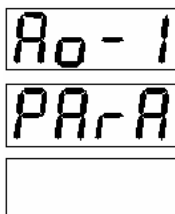

then press  , enter the level 3 menu, user can choose the output parameter:

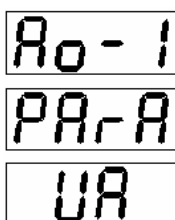



**Note:** The analog parameter can set Ia, Ib, Ic, Ua, Ub, Uc, P, Q, H, F; default is UA.


### 7.5.3. - Set the low value for transmission output




In level 1 menu of “AO-1”.

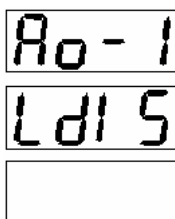Choose item “LDIS”, meter shows like this:

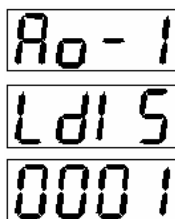

then press  , enter the level 3 menu, user can set the low value:



Press  to input the number, from “0~9”. Press  to move the cursor. After password switch press  to confirm the input, value is 1~9999. **(Default 0000)**



**Note:** Alarm value is about the secondary side value (such as AC100V, AC5A).


Voltage unit is 0.1V;  
Current unit is 0.001A;  
Active power unit is 0.1W;


Reactive power unit is 0.1VAR;  
Power factor Is 0.001;  
Frequency 0.01HZ;


**7.5.4.** - Set the full scale value for transmission output.




In level 1 menu of “AO-1”.

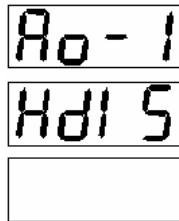Choose item “HDI5”, meter shows like this:

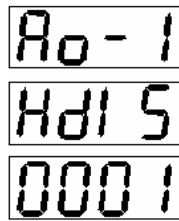

then press  , enter the level 3 menu, user can set the full scale value:



Press  to input the number, from “0~9”. Press  to move the cursor. After password switch press  to confirm the input, value is 1~9999. **(Default 5000)**

**Note:** Alarm value is about the secondary side value (such as AC100V, AC5A).

Voltage unit is 0.1V;  
Current unit is 0.001A;  
Active power unit is 0.1W;

Reactive power unit is 0.1VAR;  
Power factor Is 0.001;  
Frequency 0.01HZ;

**7.5.5.** - Example of analog output.

Set analog output:

**TYPE** 4-20mA;                      **LdlS** 0000;  
**PARA** select Ia;                      **HdlS** 5000

This mean when A-phase current is 0.000A output 4mA, current is 5.000A output 20mA;



## 7.6. - System Setting


Press  , return to level 1 menu.


In this section, user will set:


1. Backlight time of the LCD;
2. Clear energy counters;
3. Set display mode;
4. Change the password

### 7.6.1. - Set the LCD backlight time

In level 1 menu, use  and  to choose item “SYS”, meter shows like this:

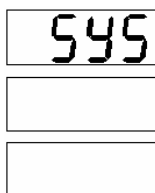

then press  , enter the level 2 menu, choose “LCd.t”, meter show:

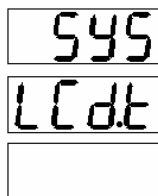

then press  again, enter the level 3 menu, Use  and  to select the value

**Note:** Minimum step is 1 minute, 0005 for 5 minutes, which means if not any operation in 5 minutes, the backlight will turn off


Set value > 1000, the backlight always on;

Set value = 0000, the backlight always off.


### 7.6.2. - Clear energy counters

In level 1 menu of “SYS”.

Choose item “CLr.E”, meter shows like this:

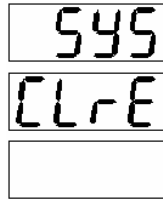

then press again to confirm clear all the energy data, meter display:

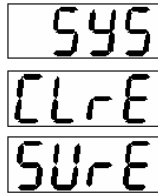


And then press again, to save the operation and exit.

Press without save and exit.


### 7.6.3. - Set display mode

In level 1 menu of "SYS".

Choose item "dISP", meter shows like this:

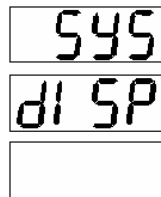

then press , enter the level 3 menu, user can choose the display mode:

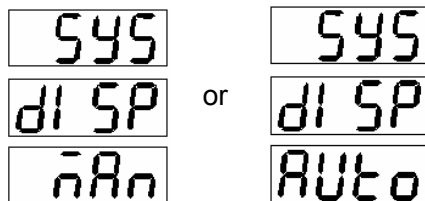


**Note:** Man means the screen display will change by press and

Auto means the screen display will change in every 10 sec.


### 7.6.4. - Change the password



In level 1 menu of "SYS".

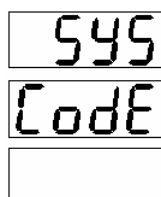Choose item "CodE", meter shows like this:





then press  again, enter the level 3 menu.

Use  and  to input the new password:

**Note:** Please do not change the password, If necessary, please contact Blue Jay technical !!

## 7.7. – Menu Structure

level 1	Level 2	Level 3	Description
(System setting) <b>SYS</b>	(LCD backlight time) <b>LCd.t</b>	0000~1000	Factory default is 0005
	(Clear energy counters) <b>CLr.E</b>		Unrecoverable for Clear data
	(Display mode) <b>dISP</b>	Manual or Automatic	Factory default is manual
	(Change the password) <b>CodE</b>	0000~9999	Default is 0001
(Signal input) <b>-IN-</b>	(Net) <b>Lin.e</b>	N.3.4, N.3.3, N.1	Select the input signal network measurement
	(Voltage Range) <b>U.SCL</b>	100V, 220V, 380V	Select the range of measured voltage signal
	(Current Range) <b>I.SCL</b>	5A and 1A	Select the range of measured current signal
	(Voltage transformation ratio) <b>R.PT</b>	1-9999	Setting voltage signal transformation ratio = 1 / 2 scale
	(Current transformation ratio) <b>R.CT</b>	1-9999	Setting current signal transformation ratio = 1 / 2 scale
(Communication Parameters) <b>bUS</b>	(Address) <b>ADDR</b>	1-247	Instrument address range 1-247
	(Communication speed) <b>BAUD</b>	4800~9600	Default is 4800
	Protocol <b>DATA</b>	o.8.1; e.8.1; n.8.1	Factory default communication mode for the word ( <b>n.8.1</b> )
(Digital output setting) <b>DO-1</b>	(Output type) <b>TYPE</b>	<b>r.n, Alr, OFF</b>	Default is <b>Alr</b>
	(Set output delay) <b>DELY</b>	0000~9999	Default is 0010
	Choose the electrical parameter <b>PARA</b>	<b>I3-H, PS-H...U3-H</b>	Default is I3-H
	(Set the alarm value) <b>VALU</b>	0000~9999	Default is 0050
	hysteresis value <b>HYS</b>	4800~9600	Default is 4800



(Analog Output Setting) AO-1	(Output type) <b>TYPE</b>	12.20, 4-20, 0-20	Default is 12.20
	Choose the electrical parameter <b>PARA</b>	UA,UB,UC...FR	Default is UA
	(low value for transmission output) <b>LdIS</b>	0000~9999	Default is 0000
	full scale value for transmission output <b>HdIS</b>	0000~9999	Default is 5000

**Note:** Not all 194Z series network multi-meter have the complete menu settings, Please confirm your purchased network multi-meter has the corresponding extension module. Without the module, the corresponding part of the menu is not valid.

### 7.9.- Display Character instructions

PRSS	User passwords	USCL	Input voltage range selection
Erro	Input error	ISCL	Input current range selection
-1 n.-	User settings menu	r. Ct	Set CT ratio
bUS	Communication settings menu	r. Pt	Set PT ratio
SCAL	Shows scal input value	LI nE	Select phase
Pol t	Set the decimal point	do-1	Route 1 switch output settings
dAtA	Communication parameter setting	do-2	Route 2 switch output settings
Addr	Metter address setting	SYS	System parameter settings
bAUD	Baud rate	TYPE	Choose Setted parameter
o.8.1	8 data bits, 1 stop bit, even parity	PARA	The corresponding parameters
e.8.1	8 data bits, 1 stop bit, odd parity	uALU	Set the alarm value
n.8.1	8 data bits, 1 stop bit, no parity	LdIS	Show Low alarm setting
SUR-E	Confirm the change	HdIS	Show High alarm setting
		Code	System password



## 8.- PULSE OUTPUT

BJ-194Z network multi-meter provides 2 routes pulse output for the total active energy and total reactive energy.

The host/PLC/DI module can cumulative the data of both the active and reactive power energy sent by the pulse from optocoupler relay.

1). Electrical specification: voltage  $VCC \leq 48V$ ,  $I_z \leq 50mA$ .

2). Pulse: 5000 imp / kWh, pulse upto 80ms.

This means: When the meter detect 1 kWh, the meter output 5000 pulse

**Note:** 1 kWh energy is for secondary side energy data, if there have PT and CT accessed; primary side energy data is “1 kWh  $\times$ PT ratio $\times$  CT ratio”.


**For example:** In measure time “T”, the received total pulse is “N”,

Primary side input of voltage is 10Kv

Primary side input of current is 400A.

Secondary side measurement range is 100V and 5A.

In the time “T”, energy accumulated is :  $N/5000 \times 100 \times 80$

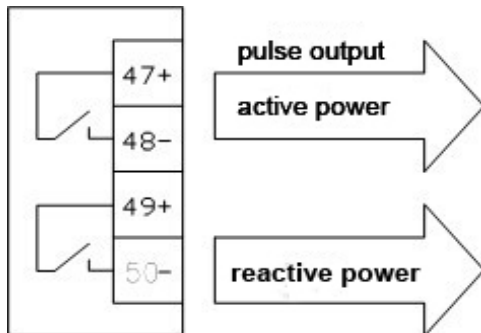

## 9. - SAFETY CONSIDERATIONS



All installation specification described at the previous chapters named:  
**INSTALLATION AND STARTUP, INSTALLATION MODES and SPECIFICATIONS.**

Note that with the instrument powered on, the terminals could be dangerous to touching and cover opening actions or elements removal may allow accessing dangerous parts. This instrument is factory-shipped at proper operation condition.

## 10. - MAINTENANCE

The 194Z does not require any special maintenance. No adjustment, maintenance or repairing action should be done when the instrument is open and powered on, should those actions are essential, high-qualified operators must perform them.

Before any adjustment, replacement, maintenance or repairing operation is carried out, the instrument must be disconnected from any power supply source.

When any protection failure is suspected to exist, the instrument must be immediately put out of service. The instrument's design allows a quick replacement in case of any failure.



## 11. - TECHNICAL SERVICE

### FAQ's

1. The BJ-194Z Network multi-meter, once cabled and connected is seen to give a correct voltage and current reading, but shows negative values for active power (generation).

This is an error with the cabling for the current transformer secondary; the direction of the transformer current has to be respected as shown in the connection diagram. The current transformers have a two face primary; the current must pass from P1 to P2 giving the result in secondary (S1 and S2) of 5 amps.

The error stems from:

**a).** The current transformers have been incorrectly installed. As a result it gives the direction of the current as passing from P2 to P1; to resolve this problem, the current transformer does not have to be dismantled and installed again, but the transformer secondary (S1 and S2) just has to be inverted.

**b).** The connection of the current secondary in the current transformers have been incorrectly connected; to resolve this problem just connect the S1 transformer secondary to the S1 on the meter and the S2 on the current transformer to the S2 on the meter

2. The BJ-194Z, once cabled and connected, is seen to give an incoherent Power factor and  $\text{Cos}\Phi$  reading (-0.01 or similar).

This is again a current transformer and voltage phase connection error phase A, must correspond to the current transformer installed in phase A; phase B, must correspond to the current transformer installed in phase B; and phase C, must correspond to the current transformer installed in phase C.

This connection is clearly shown on the back of the analyzer.

3. The BJ-194Z is measuring in average voltage and is displaying the secondary voltage (for example 110 volts).

Ensure that the voltage Transformer ratio has been correctly set (see section on **chapter7**).



4. The BJ-194Z does not correctly display the current reading. It shows values varying between 0 to 5 amps of current.  
Ensure that the Transformer ratio has been correctly set; once correctly set the current measurement shall be shown correctly (see section on **chapter7**).

For any inquiry about the instrument performance or any failure,  
contact to Blue Jay's technical service.

*Blue Jay - After-sales service*

*Redstone Road 2# 17-3  
Jiangbei District, 400020 Chongqing*

*Tel - + 0086 023 67636974  
Fax - + 0086 023 67636974  
E-mail: tech@cqbluejay.com*