


---

---

# TEX500-LCD & TEX1000LIGHT

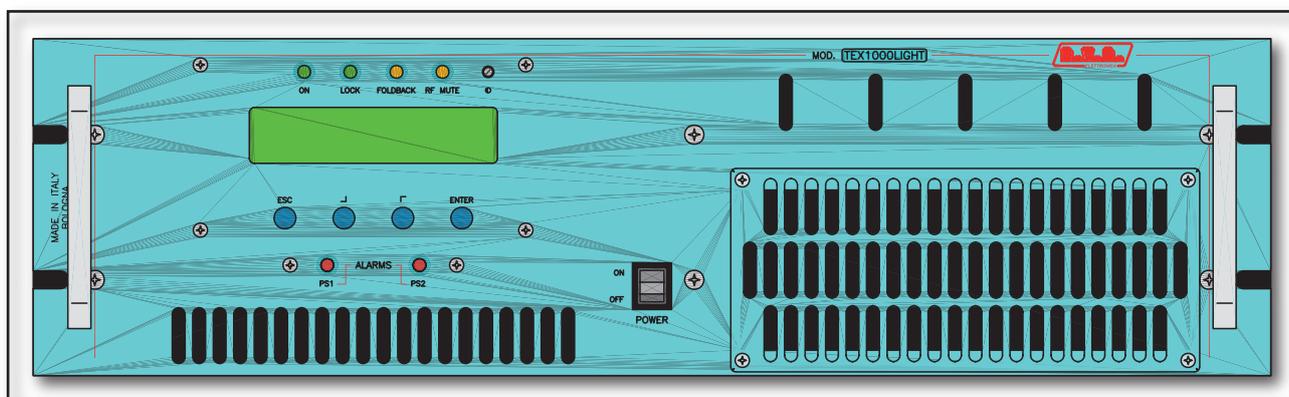

## User Manual Volume 1

---

---

Manufactured by



Italy



**File Name:** 03\_TEX500-LCD&TEX1000light\_ING\_1.0.indd

**Version:** 1.0

**Date:** 27/10/2006

## Revision History

## Document History

Date	Version	Reason	Editor
27/10/2006	1.0	First Edition	J. H. Berti

TEX500-LCD&TEX1000light - User Manual  
Version 1.0

© Copyright 2006

R.V.R. Elettronica SpA

Via del Fonditore 2/2c - 40138 - Bologna (Italia)

Telephone: +39 051 6010506

Fax: +39 051 6011104

Email: info@rvr.it

Web: www.rvr.it

All rights reserved

Printed and bound in Italy. No part of this manual may be reproduced, memorized or transmitted in any form or by any means, electronic or mechanic, including photocopying, recording or by any information storage and retrieval system, without written permission of the copyright owner.

### **Notification of intended purpose and limitations of product use**

This product is a FM transmitter intended for FM audio broadcasting. It utilises operating frequencies not harmonised in the intended countries of use.

The user must obtain a license before using the product in intended country of use. Ensure respective country licensing requirements are complied with.

Limitations of use can apply in respect of operating frequency, transmitter power and/or channel spacing.

### **Declaration of Conformity**

Hereby, R.V.R. Elettronica SpA, declares that this FM transmitter is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.



# Table of Contents

<b>1.</b>	<b>Preliminary Instructions</b>	<b>1</b>
<b>2.</b>	<b>Warranty</b>	<b>1</b>
<b>3.</b>	<b>First Aid</b>	<b>2</b>
3.1	Treatment of electrical shocks	2
3.2	Treatment of electrical Burns	2
<b>4.</b>	<b>Unpacking</b>	<b>3</b>
4.1	General Description	3
<b>5.</b>	<b>Installation and configuration procedure</b>	<b>5</b>
5.1	Preparation	5
5.2	First power-on and setup	8
5.3	Operation	11
5.4	Management Firmware	12
5.5	Optional Functions	18
<b>6.</b>	<b>Front and Rear Panel Description</b>	<b>20</b>
6.1	Front Panel	20
6.2	Rear Panel	21
6.3	Connector Pinouts	22
<b>7.</b>	<b>Technical Specifications</b>	<b>24</b>
<b>8.</b>	<b>Operating principles</b>	<b>25</b>
8.1	Power supply	25
8.2	Interface board (SL010IN3001)	27
8.3	Panel board - CPU (SL007PC2001A)	28
8.4	Main Board (SLMBDTEXLC06)	28
8.5	Driver Board (SLDRVTEX1KL)	28
8.6	Power amplifier	29
8.7	LPF Board (SLLPFTEX1KL)	29
8.8	BIAS board (SLBIAS1K3U-2)	29
8.9	External Telemetry Interface Board (SLTLMTXLCD03)	30
<b>9.</b>	<b>Identification and Access to the Modules</b>	<b>31</b>
9.1	Top View (TEX500-LCD)	31
9.2	Bottom View (TEX500-LCD)	32
9.3	Top View (TEX1000LIGHT)	33
9.4	Bottom View (TEX1000LIGHT)	34

*This page was intentionally left blank*

## IMPORTANT



The lightning flash with arrowhead, within a triangle, is intended to alert the user of the presence of dangerous voltage that may constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the equipment.

## 1. Preliminary Instructions

### • General Warnings

This equipment should only be operated, installed and maintained by "trained" or "qualified" personnel who are familiar with risks involved in working on electric and electronic circuits. "Trained" means personnel who have technical knowledge of equipment operation and who are responsible for their own safety and that of other unqualified personnel placed under their supervision when working on the equipment. "Qualified" means personnel who are trained in and experienced with equipment operation and who are responsible for their own safety and that of other unqualified personnel placed under their supervision when working on the equipment.

 **WARNING: Residual voltage may be present inside the equipment even when the ON/OFF switch is set to Off. Before servicing the equipment, disconnect the power cord or switch off the main power panel and make sure the safety earth connection is connected. Some service situations may require inspecting the equipment with live circuits. Only trained and qualified personnel may work on the equipment live and shall be assisted by a trained person who shall keep ready to disconnect power supply at need.**

R.V.R. Elettronica SpA shall not be liable for injury to persons or damage to property resulting from improper use or operation by trained/untrained and qualified/unqualified persons.

 **WARNING: The equipment is not water resistant. Any water entering the enclosure might impair proper operation. To prevent the risk of electrical shock or fire, do not expose this equipment to rain, dripping or moisture.**

Please observe local codes and fire prevention rules when installing and operating this equipment.

 **WARNING: This equipment contains exposed live parts involving an electrical shock hazard. Always disconnect power supply before removing any covers or other parts of the equipment.**

Ventilation slits and holes are provided to ensure reliable operation and prevent overheating; do not obstruct or cover these slits. Do not obstruct the ventilation slits under any circumstances. The product must not be incorporated in a rack unless adequate ventilation is provided or the manufacturer's instructions are followed closely.

 **WARNING: This equipment can radiate radiofrequency energy and, if not installed in compliance with manual instructions and applicable regulations, may cause interference with radio communications.**



**WARNING: This equipment is fitted with earth connections both in the power cord and for the chassis. Make sure both are properly connected.**

Operation of this equipment in a residential area may cause radio interference, in which case the user may be required to take adequate measures.

The specifications and data contained herein are provided for information only and are subject to changes without prior notice. R.V.R. Elettronica SpA disclaims all warranties, express or implied. While R.V.R. Elettronica SpA attempts to provide accurate information, it cannot accept responsibility or liability for any errors or inaccuracies in this manual, including the products and the software described herein. R.V.R. Elettronica SpA reserves the right to make changes to equipment design and/or specifications and to this manual at any time without prior notice.

### • Notice concerning product intended purpose and use limitations.

This product is a radio transmitter suitable for frequency-modulation audio radio broadcasting. Its operating frequencies are not harmonised in designated user countries. Before operating this equipment, user must obtain a licence to use radio spectrum from the competent authority in the designated user country. Operating frequency, transmitter power and other characteristics of the transmission system are subject to restrictions as specified in the licence.

## 2. Warranty

La R.V.R. Elettronica S.P.A. warrants this product to be free from defects in workmanship and its proper operation subject to the limitations set forth in the supplied Terms and Conditions. Please read the Terms and Conditions carefully, as purchase of the product or acceptance of the order acknowledgement imply acceptance of the Terms and Conditions. For the latest updated terms and conditions, please visit our web site at WWW.RVR.IT. The web site may be modified, removed or updated for any reason whatsoever without prior notice. The warranty will become null and void in the event the product enclosure is opened, the product is physically damaged, is repaired by unauthorised persons or is used for purposes other than its intended use, as well as in the event of improper use, unauthorised changes or neglect. In the event a defect is found, follow this procedure:

- 1 Contact the seller or distributor who sold the equipment; provide a description of the problem or malfunction for the event a quick fix is available.

Sellers and Distributors can provide the necessary information to troubleshoot the most frequently encountered problems. Normally, Sellers and Distributors can offer a faster repair service than the Manufacturer would. Please note that Sellers can pinpoint problems due to wrong installation.

- 2 If your Seller cannot help you, contact R.V.R. Elettronica and describe the problem; if our staff deems it appropriate, you will receive an authorisation to return the equipment along with suitable instructions;

- 3 When you have received the authorisation, you may return the unit. Pack the unit carefully before shipment; use the original packaging whenever possible and seal the package perfectly. The customer bears all risks of loss (i.e., R.V.R. shall not be liable for loss or damage) until the package reaches the R.V.R. factory. For this

reason, we recommend insuring the goods for their full value. Returns must be sent on a C.I.F. basis (PREPAID) to the address stated on the authorisation as specified by the R.V.R. Service Manager.



Units returned without a return authorisation may be rejected and sent back to the sender.

- 4 Be sure to include a detailed report mentioning all problems you have found and copy of your original invoice (to show when the warranty period began) with the shipment.

Please send spare and warranty replacement parts orders to the address provided below. Make sure to specify equipment model and serial number, as well as part description and quantity.

R.V.R. Elettronica SpA  
Via del Fonditore, 2/2c  
40138 BOLOGNA ITALY  
Tel. +39 051 6010506

## 3. First Aid

All personnel engaged in equipment installation, operation and maintenance must be familiar with first aid procedures and routines.

### 3.1 Electric shock treatment

#### 3.1.1 If the victim is unconscious

Follow the first aid procedures outlined below.



- Lay the victim down on his/her back on a firm surface.
- the neck and tilt the head backwards to free the airway system (**Figure 1**).

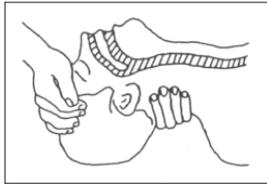


Figure 1

- If needed, open the victim's mouth and check for breathing.
- If there is no breathing, start artificial respiration without delay (**Figure 2**) as follows: tilt the head backwards, pinch the nostrils, seal your mouth around the victim's mouth and give four fast rescue breaths.



Figure 2

- Check for heartbeat (**Figure 3**); if there is no heartbeat, begin chest compressions immediately (**Figure 4**) placing your hands in the centre of the victim's chest (**Figure 5**).

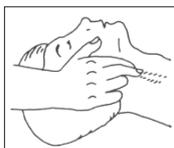


Figure 3



Figure 4

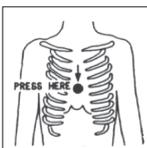


Figure 5

- One rescuer: give 2 quick rescue breaths after each 15 compressions.
- Two rescuers: one rescue breath after each 5 compressions.
- Do not stop chest compressions while giving artificial breathing.
- Call for medical help as soon as possible.

#### 3.1.2 If the victim is conscious

- Cover victim with a blanket.
- Try to reassure the victim.
- Loosen the victim's clothing and have him/her lie down.
- Call for medical help as soon as possible.

### 3.2 Treatment of electric burns

#### 3.2.1 Large burns and broken skin

- Cover affected area with a clean cloth or linen.
- Do not break any blisters that have formed; remove any clothing or fabric that is stuck to the skin; apply adequate ointment.
- Administer adequate treatment for the type of accident.
- Get the victim to a hospital as quickly as possible.
- Elevate arms and legs if injured.

If medical help is not available within an hour, the victim is conscious and is not retching, administer a solution of table salt and baking soda (one teaspoon of table salt to half teaspoon of baking soda every 250 ml of water).

Have the victim slowly drink half a glass of solution for four times during a period of 15 minutes.

Stop at the first sign of retching.

Do not administer alcoholic beverages.

#### 3.2.2 Minor burns

- Apply cold (not ice cold) strips of gauze or dress wound with clean cloth.
- Do not break any blisters that have formed; remove any clothing or fabric that is stuck to the skin; apply adequate ointment.
- If needed, have the victim change into clean, dry clothing.
- Administer adequate treatment for the type of accident.
- Get the victim to a hospital as quickly as possible.
- Elevate arms and legs if injured.

## 4. Unpacking

The package contains:

- 1 **TEX500-LCD** or **TEX1000LIGHT**
- 1 User Manual
- 1 Mains power cable

The following accessories are also available from Your R.V.R. Dealer:

- **Accessories, spare parts and cables**

### 4.1 General Description

**TEX500-LCD** and **TEX1000LIGHT** are compact **FM transmitters** manufactured by **R.V.R. Elettronica SpA** for audio radio broadcasting in the 87.5 to 108 MHz band in 10kHz steps, featuring adjustable RF output up to 500 and 1000 W, respectively, under 50 Ohm standard load.

**TEX500-LCD** and **TEX1000LIGHT** have been designed for installation in a 3HE box for 19" rack.

These transmitters incorporate a low-pass filter to keep harmonics below the limits provided for by international standards (CCIR, FCC or ETSI) and can be connected directly to the antenna.

Two major features of **TEX500-LCD** and **TEX1000LIGHT** are compact design and user-friendliness. Design is based on a modular concept: the different functions are performed by modules that, for the most part, are connected through male and female connectors or through flat cables terminated by connectors. This design facilitates maintenance and module replacement.

The RF power section of **TEX500-LCD** uses two MOSFET modules delivering up to 300W output power each, whereas **TEX1000LIGHT** features three MOSFET modules with up to 350 W output power each.

Operating frequency stability is ensured by a temperature-compensated reference oscillator and is maintained by a PLL (Phase Locked Loop) system. The transmitters will go into frequency lock within 30 seconds after power-on.

**TEX500-LCD** and **TEX1000LIGHT** can operate throughout the frequency bank with no need for calibration or set-up.

An LCD on the front panel and a push-button board provide for user interfacing with the microprocessor control system, which offers the following features:

- Output power setup.
- Operating frequency setup.
- Power output enable/disable.
- Power Good feature (User-selectable output power alarm threshold).

- Measurement and display of transmitter operating parameters.
- Communication with external devices such as programming or telemetry systems via RS232 serial interface or I2C.

Four LEDs on the front panel provide the following status indications: **ON**, **LOCK**, **FOLDBACK** and **RF MUTE**; two yellow LEDs indicate power supply unit malfunction.

The exciter management firmware is based on a menu system. User has four navigation buttons available to browse submenus: ESC (Sect.6.1 - [6]), , , , and **ENTER** (sect. 6.1 - [9]).

The rear panel features the mains input connectors with a mains voltage switch (see Sect. 6.2 - [30]) to select the appropriate mains input voltage, as well as audio input connectors and RF output connector, telemetry connector, protection fuses and two inputs for signals modulated onto subcarriers by suitable external coders, such as RDS (Radio Data System) signals commonly used in Europe.

## 5. Installation and configuration procedure

This section provides a step-by-step description of equipment installation and configuration procedure. Follow these procedures closely upon first power-on and each time any change is made to general configuration, such as when a new transmission station is added or the equipment is replaced.

Once the desired configuration has been set up, no more settings are required for normal operation; at each power-up (even after an accidental shutdown), the equipment defaults to the parameters set during the initial configuration procedure.

The topics covered in this section are discussed at greater length in the next sections, with detailed descriptions of all hardware and firmware features and capabilities. Please see the relevant sections for additional details.



**IMPORTANT:** When configuring and testing the transmitter in which the equipment is integrated, be sure to have the Final Test Table supplied with the equipment ready at hand throughout the whole procedure; the Final Test Table lists all operating parameters as set and tested at the factory.

### 5.1 Preparation

#### 5.1.1 Preliminary checks

Unpack the exciter and immediately inspect it for transport damage. Ensure that all connectors are in perfect condition.

Provide for the following (applicable to operating tests and putting into service)

- √ Single-phase 230 VAC or 115 VAC (-15% / +10%) mains power supply with adequate earth connection
- √ For operating tests only: dummy load with 50 Ohm impedance and adequate capacity (500W for **TEX500-LCD** or 1000W for **TEX1000LIGHT** as a minimum)
- √ Connection cable kit including:
  - Mains power cable
  - Coaxial cable with BNC connectors for interlock signal connection
  - RF cable for output to load / antenna (50 Ohm coaxial cable with N-type connector for **TEX500-LCD** or standard 7/8" connector for **TEX1000LIGHT**)
  - Audio cables between transmitter and audio sources.

## 5.1.2 Mains power supply



**WARNING: Disconnect mains power supply before beginning these procedures.**

Both power supply units (please see section 8.1 for a detailed description) are equipped with fuses and voltage selection blocks; **check all fuses and voltage selection blocks to ensure they are properly rated for the power mains and change them as required to match mains voltage.**

All mains power supply protection fuses are conveniently located on the rear panel and are easily accessed (see figure 6.2): to check or replace a fuse, disconnect **equipment from power mains**, unscrew fuse cover and pull fuse out of socket.

The following fuses are used:

	<i>TEX500-LCD</i> @ 230 Vac/115 Vac	<i>TEX1000LIGHT</i> @ 230 Vac/115 Vac
Main power supply (fig. 6.2 - items [20] and [35])	(2x) 16A type 10x38	(2x) 25A type 10x38
Service power supply (fig. 6.2 - item [32])	(1x) 1A type 5x20	(1x) 2A type 5x20

Table 5.1: Fuses

Ensure that the equipment is appropriately set for available mains voltage (supply voltage rating is reported in the Final Test Table) as follows: **disconnect equipment from mains** and ensure that the voltage selection block of the power supply located on the rear panel (see fig. 6.2 - item [30]) is set to the appropriate voltage; change setting as required.

The main power supply unit is the full-range type and requires no voltage setup.

When supply voltage is other than 230 Vac and might cause erratic operation (say, less than 200 Vac), it may help to move jumper JP3 on the PFC controller board from position 2-3 to 1-2 (see PFCPSL1000 diagram, item [6] in figures 9.1 and 9.3 and detail in figure 5.1 below).

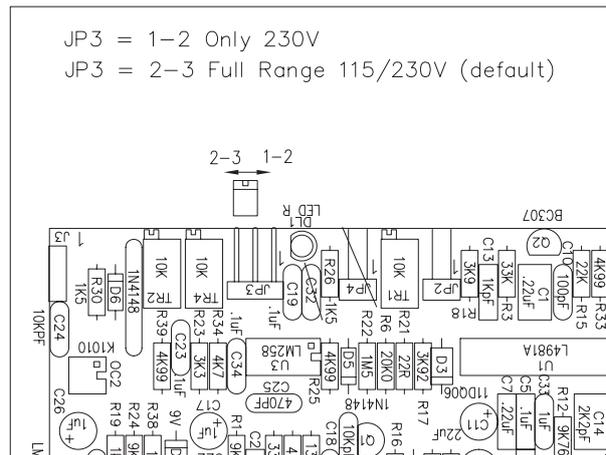


Figure 5.1: Voltage selection jumper on PFC

## 5.1.3 Connections

Connect the RF output of the transmitter (see figure 6.2 - note [21]) to the antenna cable or a dummy load capable of dissipating amplifier output power. To begin with, set exciter to minimum output power and switch it off.

Connect the transmitter INTERLOCK IN input (figure 6.2 - note [24]) to the matching INTERLOCK OUT output fitted on R.V.R. Elettronica equipment to act as hybrid couplers. If your equipment is a different brand, identify an equivalent output.



**WARNING: Electric shock hazard! Never handle the RF output connector when the equipment is powered on and no load is connected. Injury or death may result.**

Ensure that the **POWER** switch on the front panel (see figure 6.1 - note [11]) is set to “**OFF**”.

Connect the mains power cable to the MAINS connector on the rear panel (see figure 6.2 - note [19]).



**Note :** *The mains must be equipped with adequate earth connection properly connected to the equipment. This is a pre-requisite for ensuring operator safety and correct operation.*



**WARNING:** The power supply connector is a terminal box. Ensure that the wire is not live before performing the connection.

Connect the audio and RDS/SCA signals from user's sources to the transmitter input connectors.

## 5.2 First power-on and setup

Perform this procedure upon first power-up and each time you make changes to the configuration of the transmitter this component is integrated into.



**Note :** Standard factory settings are RF output power off (**Pwr OFF**) and regulated output power set to upper limit (unless otherwise specified by customer).

### 5.2.1 Power-on

When you have performed all of the connections described in the previous paragraph, power on the exciter using the suitable power switch on the front panel (figure 6.1 - item [11]).

### 5.2.2 Power check

Ensure that the **ON** LED turns on (see figure 6.1 - note [1]). Equipment name should appear briefly on the display, followed by forward power and modulation readings (figure 5.2 - menu 1). If the RF output is disabled, those readings will be zero.

When the PLL locks to operating frequency, the **LOCK** LED will turn on (see figure 6.1 - note [2]).

### 5.2.3 How to enable the RF output

Check output power level and set it to maximum level (unless it has already been set) from the Power Setup menu that you will have accessed by pressing the following sequence of key: **ESC** (opens **Default Menu**) ⇒ **ENTER** (hold down for 2 seconds) ⇒ **SET** ⇒ use keys to set bar to upper limit (figure 5.2 - menu 2).

### 5.2.4 Output power level control



**IMPORTANT:** The exciter incorporates Automatic Gain Control (AGC) and output power is modulated based on the power level set by the user and actual operating conditions, such as temperature, reflected power and other parameters. Please read section 5.3 for more details of RF power modulation.

Access the **Power Setup Menu** (figure 5.2 - menu 2) pressing the following keys in the order:

**ESC** (opens **Default Menu**) ⇒ **ENTER** (hold down for 2 seconds)

Use the keys  and  in the **SET** menu to set exciter output power; the setting bar at the side of **SET** provides a graphic indication of power setting; please consider that the forward power readout provided on the display (**FWD: xxxx W**) reflects actual output power reading, **which may be lower than regulated power supply when Automatic Gain Control is running in power supply limitation mode** (please read section 5.3 about RF power supply modulation for more details).



**Note :** *Output power may be set using the **Pwr OFF** control. In this condition, the output power readout (**Fwd**) on the display will read 0 (zero); the **SET** bar will reflect any adjustments you make using the keys and provides a graphic indication of how much power supply will be delivered the moment you return to **Pwr On** state.*

## 5.2.5 Changing the *Power Good* alarm threshold

Change Forward Power Good alarm setting **PgD** from the **Fnc** menu as desired (factory setting is 50%).

Please read section 5.4.1 for more details.

## 5.2.6 Setting equipment I<sup>2</sup>C address

Change the **IIC** address in the **MIX** (Miscellaneous) menu as desired (factory setting is 01).

Please read section 5.4.1 for more details.

## 5.2.7 Adjustments and calibration

The only manual adjustments are the level adjustments and the audio mode adjustment.

The rear panel holds the trimmers for all exciter inputs. Trimmer identification is printed on the rear panel. Input sensitivity can be set within the limits set out in the tables below through the trimmers:

Input sensitivity in Mono mode:

Input	Figure 6.2	Trimmer	Sensitivity	Note
SCA1	[11]	[15]	- 8 ÷ +13 dBm	Input level for 7,5 kHz deviation (-20 dB)
SCA2	[10]	[13]	- 8 ÷ +13 dBm	
MPX	[12]	[14]	-13 ÷ +13 dBm	Input level for 75 kHz deviation (0 dB)
Mono	[34]	[33]	-13 ÷ +13 dBm	

Input sensitivity in Stereo mode:

Input	Figure 6.2	Trimmer	Sensitivity	Note
MPX	[12]	[14]	-20 ÷ +13 dBm	Input level for 75 kHz deviation (0 dB)
SCA1	[11]	[15]	- 8 ÷ +13 dBm	Input level for 7,5 kHz deviation (-20 dB)
SCA2	[10]	[13]	- 8 ÷ +13 dBm	
Left	[34]	[33]	-13 ÷ +13 dBm	Input level for 75 kHz deviation (0 dB)
Right	[17]	[16]	-13 ÷ +13 dBm	

When setting input sensitivity, please consider that the default menu reports instantaneous modulation level and an indicator provides a 75 kHz reading. To ensure correct adjustment, apply a signal with the same level as user's audio broadcast maximum level and then adjust using the trimmer until instantaneous deviation matches the 75 kHz reading.


To set subcarrier input levels, you may use the same procedure and option "x10" available in the Fnc menu. With this option, modulation level is multiplied by a factor of 10, which means that default menu bar meter reflects a 7.5 kHz deviation.

A special menu with separate indications of Left and Right channel levels and relating indicators of nominal levels for maximum deviation (75 kHz) is provided.

- Preemphasis (switch [8] Figure 6.2):



- L and R (XLR type) input impedance (switch [9] Figure 6.2):



Switch 1: R XLR input impedance, ON = 600 Ω, OFF = 10 kΩ

Switch 2: L XLR input impedance, ON = 600 Ω, OFF = 10 kΩ

- MPX input operation mode/impedance (switch [18] Figure 6.2):



Switch 1: Mode of operation ON = Mono, OFF = Stereo

Switch 2: MPX input impedance, ON = 50 Ω, OFF = 10 kΩ

## 5.3 Operation



NOTE: For better clarity, only the typical screens of **TEX1000LIGHT** are reported below. **TEX500-LCD** screens look the same except that full scale values are different.

- 1) Power on the exciter (sect. 6.1 - [11]) and ensure that the ON light turns on (section 6.1 - note [1]). Equipment name should appear briefly on the display, quickly followed by modulation and forward power readings (Menu 1), provided that the exciter is delivering output power.

```

Mod : ████████████████████ :
Fwd :      997      W
    
```

Menu 1

- 1b) To **modify power level setting**, hold down the **ENTER** button until opening the **power setup menu**.

The edit screen will look like this:

```

SET : ████████████████████
Fwd :      997      W
    
```

Menu 2

Next to **SET** indication, a bar provides a graphic display of preset output power. The filled portion of the bar is proportional to set power level.

<i>Example</i>		
100% output power	Full bar	≅ 1000W output (mod. TEX1000LIGHT) ≅ 500W output (mod. TEX500-LCD)
50% output power	Half-full bar	≅ 500W output (mod. TEX1000LIGHT) ≅ 250W output (mod. TEX500-LCD)
25% output power	Quarter-full bar	≅ 250W output (mod. TEX1000LIGHT) ≅ 125W output (mod. TEX500-LCD)

The bottom line provides instantaneous power reading (997W for **TEX1000LIGHT** shown here); press button to increase level, press to decrease it. When you have achieved the desired level, press **ENTER** to confirm and exit the **default menu**. Please note that the setting is stored automatically; in other words, if you press **ESC** or do not press any keys before the preset time times out, the latest power level set will be retained.



NOTE: This feature prevents the equipment from delivering maximum power as soon as output is enabled from menu 4, or in the event the equipment is already set to **ON** when you energise it.

- 2) Ensure that the equipment is not in a locked-out state. Press **ESC** (sect. 6.1 - [6]) to call up the **selection screen** (menu 3). Highlight **Fnc** and press **ENTER** to confirm (sect. 6.1 - [9]) and access the selected menu (menu 4).

If **PWR** is set to **OFF**, i.e. power output is disabled, move cursor to **PWR**. Press **ENTER** (sect. 6.1 - [9]) and label will switch to **ON**, i.e. power output is enabled.

Press **ESC** (sect. 6.1 - [6]) twice to go back to the **default menu** (menu 1).

- 3) Fine tune power setting from menu 2 (see description of item 1b) until achieving the desired value.



WARNING: Equipment is capable of delivering more than rated output power (500W for **TEX500-LCD** or 1000 W for **TEX1000LIGHT**); however, never exceed the specified power rating.



NOTE: If power is set to 0 W in the **Power Setup Menu**, the INTERLOCK OUT contact (sect. 6.2 - [22]) is activated and any external appliances connected to it are immediately inhibited.

Next, you can review all operating parameters of the equipment through the management firmware.

Normally, the equipment can run unattended. Any alarm condition is handled automatically by the safety system or is signalled by the LED indicators on the panel or by display messages.



NOTE: Standard factory settings are output power set to upper limit (unless otherwise specified by customer) and **OFF**.

## 5.4 Management Firmware

The equipment features an LCD with two lines by 16 characters that displays a set of menus. Figure 5.2 below provides an overview of equipment menus.

The symbols listed below appear in the left portion of the display as appropriate:

- (Cursor) - Highlights selected (i.e. accessible) menu.
- ▶ (Filled arrow) - Editable parameter marker. This symbol appears in menus that take up more than two lines to aid browsing.
- ▶▶▶ (Three empty arrows) - Parameter is being edited.
- ▶ (Empty arrow) - Current line marker; the parameter in this line cannot be edited. This symbol appears in menus that take up more than two lines to aid browsing.

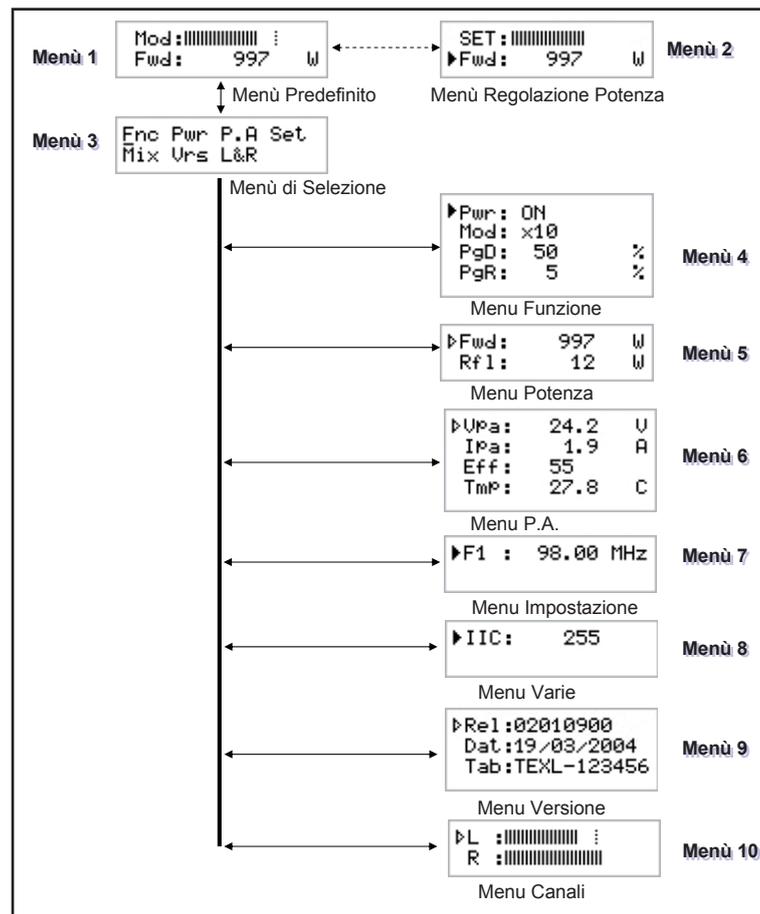


Figure 5.2

When the display is off, touching any key will turn on backlighting.

When the display is on, pressing the **ESC** button (sect. 6.1 - [6]) from the **default menu** (menu 1) calls up the **selection screen** (menu 3), which gives access to all other menus:

```

Enc Pwr P.A Set
Mix Urs L&R
  
```

Menu 3

If the temperature alarm is enabled and the alarm threshold is exceeded, the following screen will be displayed (only if you are in the default screen):

```

!! ATTENTION !!
OVER TEMPERATURE
  
```

State 1

As soon as operating conditions are restored, power output is re-enabled with the same settings in use prior to the alarm condition.

Under 20kHz, no modulation occurs. After a preset time of about 5 minutes (not editable), a NO AUDIO condition is indicated in the main screen, but power is not inhibited.

```

Mod: NO AUDIO
Fwd: 0 W
    
```

State 2

To gain access to a submenu, select menu name (name is highlighted by cursor) using button  $\downarrow \rightarrow$  or  $\leftarrow \uparrow$  and press the ENTER button (sect. 6.1 - [9]).

To return to the **default menu** (menu 1), simply press **ESC** again (sect. 6.1 - [6]).

## 5.4.1 Operation Menu (Fnc)

In this menu, you can toggle exciter **power output** On/Off, set **deviation display mode** and the threshold rate for **Forward (PgD)** or **Reflected (PgR)** Power Good.

To edit an item, highlight the appropriate line using the  $\leftarrow \uparrow$  and  $\downarrow \rightarrow$  buttons and then press and hold the **ENTER** button (sect. 6.1 - [9]) until the command is accepted. This way, Pwr setting is toggled between On and Off and Mod setting is toggled between “x1” and “x10”. To edit the Power Good rate, simply select item “PgD” or “PgR” and edit its value using the UP and DOWN buttons; finally, press **ENTER** to confirm (sect. 6.1 - [9]).

```

Pwr: ON
Mod: x10
PgD: 50 %
PgR: 5 %
    
```

Menu 4

Pwr Enables (ON) or disables (OFF) exciter power output.

Mod Modifies modulation display (toggles between “x1” and “x10”). In “x10” mode, instantaneous deviation indication is multiplied by a factor of 10, and the bar meter on the default menu will reflect 7.5 kHz instead of 75 kHz. This display mode is convenient when you wish to display low deviation levels, such as those caused by pilot tone or subcarriers.

PgD

Modifies Power Good threshold for forward power. The Power Good rate is a percent of equipment rated power (500W for **TEX500-LCD** and 1000 W for **TEX1000LIGHT**), not of forward output power. This means that this threshold set at 50% will give 250 W and 500 W, respectively, regardless of set power level. The Power Good feature enables output power control and reporting. When output power drops below set Power Good threshold, the equipment changes the state of pin [7] of the DB15 “Remote” connector located on the rear panel (figure 6.2 - [28]).

PgR

Modifies Power Good threshold for reflected power. The Power Good rate is a percent of equipment rated power (50W for **TEX500-LCD** and 100 W for **TEX1000LIGHT**), not of reflected output power. This means that this threshold set at 2.5% and 5%, respectively, will give 5W regardless of set power level. The Power Good feature enables output power control and alarm management.



**NOTE:** This alarm does not trip any contacts in the DB15 “Remote” connector and is only available in systems equipped with telemetry.

## 5.4.2 Power Menu (Pwr)

This screen holds all readings related to equipment output power:

▷Fwd:	30	W
Rfl:	12	W

*Menù 5*

Fwd      Forward power reading.

Rfl      Reflected power reading.

Note that these are readings, rather than settings, and cannot be edited (note the empty triangle). To change power setting, go to the **default menu** as outlined earlier.

## 5.4.3 Power Amplifier (P.A) Menu

This screen is made up of four lines that can be scrolled using the  and  buttons and shows the readings relating to final power stage:

```
▶Vpa:  50.2  V
Ipa:   32.9  A
Eff:    57   %
TmP:   27.8  °C
```

Menu 6

Note that these are readings, rather than settings, and cannot be edited (note the empty arrow).

VPA	Voltage supplied by amplifier module.
IPA	Current draw of amplifier module.
Eff	Efficiency based on ratio of forward power to amplifier module power, in percent ( FWD PWR/(Vpa x Ipa) % ).
Tmp	Equipment internal temperature reading.

## 5.4.4 Setup Menu (Set)

This menu lets you view and set operating frequency.

```
▶F1 :  98.00 MHz
```

Menu 7

F1	Operating frequency setup. Set a new frequency value and then press the <b>ENTER</b> button to confirm your selection; the exciter unlocks from current frequency (the <b>LOCK</b> LED turns off) and will lock to the new operating frequency ( <b>LOCK</b> turns back on again). If you press ESC or let the preset time time out, the previous frequency setting is retained.
----	--

## 5.4.5 Miscellaneous Menu (Mix)

This menu lets you set equipment address in an I<sup>2</sup>C bus serial connection:

```
▶IIC:  255
```

Menu 8



## 5.5 Optional functions

A range of options is available for the product to add certain functions and/or modify existing functions. Outlined below are the functions available at the moment, which must be specified on order.

### 5.5.1 FSK option

The FSK function generates periodic carrier frequency shifts to generate a Morse-coded station ID code.



**NOTE: This function is typically used in the USA.**

The factory setting for frequency shift amplitude is +10KHz and code repetition period is 60 minutes (please contact R.V.R. Elettronica if you need different settings), whereas station identified may be programmed by the user following the indications provided in section 5.5.1.1.

When the FSK option is fitted, an FSK submenu is added to the **selection menu**.

```

Enc Pwr P.A Set
Mix Urs L&R FSK
    
```

Menu 11

Press the **ENTER** key when FSK is highlighted in the **selection menu** to access the FSK submenu:

```

▶ FSK:      ON
Cod: 012345
    
```

Menu 12

FSK                      Enables / disables FSK code transmission.

Cod                      Shows the Morse code sent normally.

#### 5.5.1.1 Changing the ID code

User may change the FSK code used as a station identifier at any time.

This procedure requires:

- 1 RS232 male-female cable;
- Hyper Terminal interface (make sure it has been installed together with Windows®) or equivalent serial communication software

A brief description of the procedure is provided below:

- Connect the PC serial port COM to the SERVICE connector on the rear panel of **TEX500-LCD** and **TEX1000LIGHT** using a standard Male DB9 - Female DB9 serial cable.
- Power on the exciter;
- Launch the serial communication software;
- Set communication parameters as follows:

**Baud Rate:** 19200

**Data Bit:** 8

**Parity:** None

**Stop Bit:** 1

**Flow control:** None;

- Activate Caps-Lock through the communication software and send string CODE followed by the 6-character station ID code followed by Enter.



**NOTE:** To be treated as valid, the code must be made up of 6 alphanumeric characters and must contain no blank spaces; if acknowledged as valid, code is echoed back to the terminal, illegal codes are not echoed.

## 5.5.2 Power UP/DOWN Option

The Power UP/DOWN option modifies the signal receive function for the signals present at the telemetry connector (see sect. 6.3.5).

RF section on / off control signals are treated as control signals for RF output power level to allow for UP/DOWN setting.

The UP or DOWN command is provided by switching the corresponding signal at the connector to ground for at least 500mS (pin features internal pull-up to power supply).

Configuration of DB15F telemetry connector (Remote):




Pin	Standard function	Power UP/DOWN function
14	On cmd Enables RF output power	Up cmd Increases RF output power
15	Off cmd Disables RF output power	Down cmd Decreases RF output power

## 6. Front and Rear Panel Description

This section describes the components found on the front and rear panel of **TEX500-LCD** and **TEX1000LIGHT**.

### 6.1 Front Panel

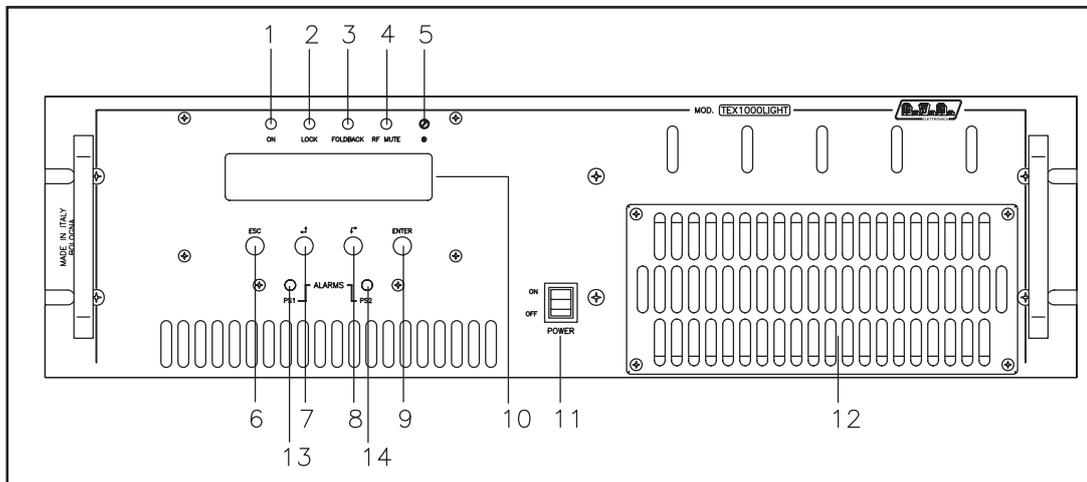

*Figure 6.1*

- |   |   |
|---|---|
| [1] ON  | Green LED - Turns on when amplifier is powered on.  |
| [2] LOCK  | Green LED verde - Turns on when PLL is locked to operating frequency.   |
| [3] FOLDBACK  | Yellow LED - Turns on when foldback current limiting (Automatic Gain Control) kicks in.   |
| [4] R.F. MUTE   | Yellow LED - Turns on when exciter power output is inhibited by an external interlock signal.   |
| [5] CONTRAST  | Display contrast trimmer.   |
| [6] ESC   | Press this button to exit a menu.   |
| [7]  | Navigation button used to browse menu system and edit parameters.   |
| [8]  | Navigation button used to browse menu system and edit parameters.   |
| [9] ENTER   | Press this button to confirm a modified parameter and open a menu.  |
| [10] DISPLAY  | Liquid Crystal Display.   |
| [11] POWER  | ON/OFF key.   |
| [12] AIR FLOW   | Air grille.   |
| [13] ALARMS PS1   | Yellow LED - Turns on when Power Supply unit is not fed either because "PWR OFF" was selected via software, or power is set to 0 W, or due to Power Supply malfunction (when this LED turns on, it causes the ALARM PS2 LED to come on as well, because the two LEDs are connected internally). |
| [14] ALARMS PS2   | Yellow LED, see item [13]   |

## 6.2 Rear Panel

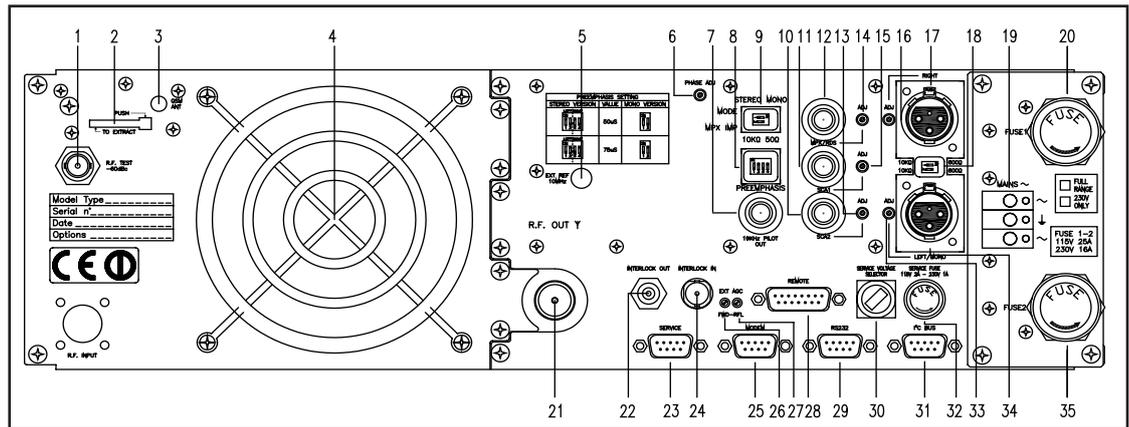


Figure 6.2


- |  |  |
|--|--|
| <p>[1] R.F. TEST</p> <p>[2] GSM SLOT-IN</p> <p>[3] GSM ANT</p> <p>[4] AIR FLOW</p> <p>[5] 10MHz</p> <p>[6] PHASE ADJ</p> <p>[7] 19 kHz PILOT OUT</p> <p>[8] PREEMPHASIS</p> <p>[9] MODE/MPX IMP</p> <p>[10] SCA2</p> <p>[11] SCA1</p> <p>[12] MPX</p> <p>[13] SCA2 ADJ</p> <p>[14] MPX ADJ</p> <p>[15] SCA1 ADJ</p> <p>[16] RIGHT ADJ</p> <p>[17] RIGHT</p> <p>[18] IMPEDANCE</p> <p>[19] MAINS</p> <p>[20] FUSE 1</p> <p>[21] R.F. OUTPUT</p> <p>[22] INTERLOCK OUT</p> <p>[23] SERVICE</p> <p>[24] INTERLOCK IN</p> <p>[25] MODEM</p> <p>[26] FWD EXT. AGC</p> <p>[27] RFL EXT. AGC</p> <p>[28] REMOTE</p> <p>[29] RS232</p> | <p>Output with level -60 dB lower than output power level, suitable for modulation monitoring. Not suitable for spectrum analysis.</p> <p>Reserved for future implementations.</p> <p>Reserved for future implementations.</p> <p>Air grille.</p> <p>Reserved for future implementations.</p> <p>Pilot tone phase trimmer.</p> <p>Tone output BNC connector, may be used to synchronise external devices such as RDS coders.</p> <p>Preemphasis dip-switch, provides two settings: 50 or 75 <math>\mu</math>s. Preemphasis affects the right and left inputs in stereo mode and the mono input. MPX inputs are not affected by preemphasis setting.</p> <p>Dip-switch used to select transmission mode (STEREO or MONO) and MPX input impedance (50 <math>\Omega</math> or 10 k<math>\Omega</math>).</p> <p>BNC connector for SCA2 input.</p> <p>BNC connector for SCA1 input.</p> <p>Unbalanced MPX input BNC connector.</p> <p>Trimmer for SCA2 input level adjustment.</p> <p>Trimmer for MPX input level adjustment.</p> <p>Trimmer for SCA1 input level adjustment.</p> <p>Trimmer for right input level adjustment.</p> <p>Right audio channel input XLR connector.</p> <p>Dip-switch used to select balanced audio input impedance (600 <math>\Omega</math> or 10 k<math>\Omega</math>).</p> <p>Connectors for 115-230 V 50-60 Hz mains power supply.</p> <p>Mains power supply fuse [sect. 5.1 - Table 1.]</p> <p>RF output connector, N-type for <b>TEX500-LCD</b> and 7/8" for <b>TEX1000LIGHT</b>.</p> <p>Interlock output BNC connector: when the transmitter goes into stand-by mode, the (normally floating) central conductor is switched to ground.</p> <p>DB9 connector for factory setting.</p> <p>Interlock input BNC connector: the exciter is forced in stand-by mode when the inner conductor is grounded.</p> <p>Reserved for future implementations.</p> <p>Trimmer to set output power limitation according to FWD fold input (sect. 6.3.5 - [2]).</p> <p>Trimmer to set output power limitation according to RFL fold input (sect. 6.3.5 - [10]).</p> <p>DB15 telemetry connector.</p> <p>Reserved for future implementations.</p> |
|--|--|

[30] SERVICE VOLTAGE SEL.	115-230V mains voltage selector.
[31] I2C BUS	DB9 connector for I2C bus network.
[32] SERVICE FUSE	Service fuse (sect. 5.1 - Table [1]).
[33] LEFT ADJ	Trimmer for left input level adjustment.
[34] LEFT	Left audio channel input XLR connector.
[35] FUSE 2	Mains power supply fuse (sect. 5.1 - Table 1]).

## 6.3 Connector Pinouts

### 6.3.1 RS232


Type: Female DB9



1	NC
2	SDA
3	SCL
4	NC
5	GND
6	NC
7	NC
8	NC
9	NC

### 6.3.2 Service (for factory setting)


Type: Female DB9



1	NC
2	TX_D
3	RX_D
4	Internally connected to 6
5	GND
6	Internally connected to 4
7	Internally connected to 8
8	Internally connected to 7
9	NC

### 6.3.3 I<sup>2</sup>C Bus

Type: Male DB9



1	NC
2	TX_D
3	RX_D
4	Internally connected to 6
5	GND
6	Internally connected to 4
7	Internally connected to 8
8	Internally connected to 7
9	NC

## 6.3.4 Left (MONO) / Right

Type: Female XLR



- 1 GND
- 2 Positive
- 3 Negative

## 6.3.5 Remote

Type: Female DB15



Pin	Name	Type	Purpose
1	Interlock	IN	Inhibits power if closed to GND
2	Ext AGC FWD	IN	Ext. signal, 1-12V, for limitation (AGC)
3	GND		Ground
4	SDA IIC	I/O	Serial data for IIC communication
5	VPA TIm	ANL OUT	PA supply voltage: 3.9V F.S.
6	FWD TIm	ANL OUT	Forward power: 3.9V F.S.
7	Power Good	DIG OUT	Indicates activation by switching the normally-open contact to ground (sect. 5.4.1).
8	GND		Ground
9	GND		Ground
10	Ext AGC RFL	IN	Ext. signal, 1-12V, for limitation (AGC)
11	SCL IIC	I/O	Clock for IIC communication
12	IPA TIm	ANL OUT	PA supply current: 3.9V F.S.
13	RFL TIm	ANL OUT	Reflected power: 3.9V F.S.
14	On cmd	DIG IN	A pulse towards ground (500 ms) triggers power output
15	OFF cmd	DIG IN	A pulse towards ground (500 ms) inhibits power output

## 7. Technical Specifications

			TEX 500PFC	TEX 500REC	TEX 1000 LIGHT	
Parameters	Conditions	U.M.	Value	Value	Value	Notes
<b>GENERAL</b>						
Frequency range		MHz	87.5 - 108	87.5 - 108	87.5 - 108	
Rated output power		W	500	500	1000	Continuously variable by software from 0 to maximum
Modulation type			Direct carrier frequency modulation	Direct carrier frequency modulation	Direct carrier frequency modulation	
Operational Mode			Mono, Stereo, Multiplex	Mono, Stereo, Multiplex	Mono, Stereo, Multiplex	
AC Supply Voltage	Mains input voltage range	VAC	115 / 230 ±15%	115 / 230 ±15%	115 / 230 ±15%	(*) Full range (**) Internal switch
DC Supply Voltage	Backup Input Voltage	VDC				
AC Apparent Power Consumption		VA	940	1400	1650	
Active Power Consumption		W	920	860	1630	
Input device			4 pushbutton	4 pushbutton	4 pushbutton	
Display			Alphanumerical LCD - 2 x 16	Alphanumerical LCD - 2 x 16	Alphanumerical LCD - 2 x 16	
Physical Dimensions	Front panel width	mm	483	483	483	19" EIA rack
	Front panel height	mm	3	3	3	
	Overall depth	mm	520	520	520	
Ambient working temperature		°C	-10 to +50	-10 to +50	-10 to +50	Whitout condensing
Frequency programmability			From software, with 10 kHz steps	From software, with 10 kHz steps	From software, with 10 kHz steps	
Frequency stability	WT from -10°C to 50°C	ppm	±1	±1	±1	
Modulation capability		kHz	150 Stereo, 180 Mono/MPX	150 Stereo, 180 Mono/MPX	150 Stereo, 180 Mono/MPX	Meets or exceeds all FCC and CCR rules
Pre-emphasis mode		µS	0, 50 (CCIR), 75 (FCC)	0, 50 (CCIR), 75 (FCC)	0, 50 (CCIR), 75 (FCC)	selectable by rear panel dip switches
Spurious & harmonic suppression		dB	< -75 (80 typical)	< -75 (80 typical)	< -75 (80 typical)	Meets or exceeds all FCC and CCR rules
Asynchronous AM S/N ratio	Referred to 100% AM, with no de-emphasis	dB	≥ 65 (typical 70)	≥ 65 (typical 70)	≥ 65 (typical 70)	
Synchronous AM S/N ratio	Referred to 100% AM, FM deviation 75 kHz by 400Hz sine, without de-emphasis	dB	≥ 50 (typical 60)	≥ 50 (typical 60)	≥ 50 (typical 60)	
<b>MONO OPERATION</b>						
S/N FM Ratio	RMS @ ± 75 kHz peak, HPF 20Hz - LPF 23 kHz, 50 µs de-emphasis	dB	> 80 (typical 85)	> 80 (typical 85)	> 80 (typical 83)	
	Opk @ ± 75 kHz peak, CCR weighted, 50 µs de-emphasis	dB	> 73	> 73	> 72	
	Opk @ ± 40 kHz peak, CCR weighted, 50 µs de-emphasis	dB	> 68	> 68	> 68	
Frequency Response	30Hz ± 15kHz	dB	better than ± 0.5 dB (typical ± 0.2)	better than ± 0.5 dB (typical ± 0.2)	better than ± 0.5 dB (typical ± 0.2)	
Total Harmonic Distortion	THD+N 30Hz ± 15kHz	%	< 0.1 (Typical 0.07%)	< 0.1 (Typical 0.07%)	< 0.1 (Typical 0.07%)	
Intermodulation distortion	Measured with a 1 kHz and 1.3 kHz tones, 1:1 ratio, at FM 75 kHz	%	< 0.02	< 0.02	< 0.02	
Transient intermodulation distortion	Measured with a 3.18 kHz square wave and a 15 kHz sine wave at 75 kHz FM	%	< 0.1 (typical 0.05)	< 0.1 (typical 0.05)	< 0.1 (typical 0.05)	
<b>MPX OPERATION</b>						
Composite S/N FM Ratio	RMS @ ± 75 kHz peak, HPF 20Hz - no LPF, 50 µs de-emphasis	dB	> 80 (typical 85)	> 80 (typical 85)	> 80 (typical 83)	
Frequency Response	30Hz ± 53kHz	dB	± 0.2	± 0.2	± 0.2	
	53kHz ± 100kHz	dB	± 0.5	± 0.5	± 0.5	
Total Harmonic Distortion	THD+N 30Hz ± 53kHz	%	< 0.1	< 0.1	< 0.1	
	THD+N 53kHz ± 100kHz	%	< 0.15	< 0.15	< 0.15	
Intermodulation distortion	Measured with a 1 kHz and 1.3 kHz tones, 1:1, modulation at FM 75 kHz	%	< 0.05	< 0.05	< 0.05	
Transient intermodulation distortion	Measured with a 3.18 kHz square wave and a 15 kHz sine wave at 75 kHz FM	%	< 0.1 (typical 0.05)	< 0.1 (typical 0.05)	< 0.1 (typical 0.05)	
Stereo separation	30Hz ± 53kHz	dB	> 50 dB (typical 60)	> 50 dB (typical 60)	> 50 dB (typical 60)	
<b>STEREO OPERATION</b>						
Stereo S/N FM Ratio	RMS @ ± 75 kHz peak, HPF 20Hz - LPF 23 kHz, 50 µs de-emphasis, L & R demodulated	dB	> 75 (78 typical)	> 75 (78 typical)	> 75 (76 typical)	
	Opk @ ± 75 kHz peak, CCR weighted, 50 µs de-emphasis, L & R demodulated	dB	> 65 dB	> 65 dB	> 65 dB	
	Opk @ ± 40 kHz peak, CCR weighted, 50 µs de-emphasis, L & R demodulated	dB	> 58 dB	> 58 dB	> 58 dB	
Frequency Response	30Hz ± 15kHz	dB	± 0.5	± 0.5	± 0.5	
Total Harmonic Distortion	THD+N 30Hz ± 15kHz	%	< 0.05	< 0.05	< 0.05	
Intermodulation distortion	Measured with 1 kHz and 1.3 kHz tones, 1:1 ratio, modulation at FM 75 kHz	%	≤ 0.03	≤ 0.03	≤ 0.03	
Transient intermodulation distortion	Measured with a 3.18 kHz square wave and a 15 kHz sine wave at 75 kHz FM	%	< 0.1 (typical 0.05)	< 0.1 (typical 0.05)	< 0.1 (typical 0.05)	
Stereo separation	Main / Sub Ratio	dB	> 50 (typical 55)	> 50 (typical 55)	> 50 (typical 55)	
	30Hz ± 15kHz	dB	> 40 (typical 45)	> 40 (typical 45)	> 40 (typical 45)	
<b>SCA OPERATION</b>						
Frequency response	40kHz ± 100kHz	dB	± 0.5	± 0.5	± 0.5	
Crosstalk to main or to stereo channel	RMS, ref @ ± 75 kHz peak, no HPF/LPF, 0µs de-emphasis, with 67 kHz tone on SCA input @ 7.5kHz FM deviation	dB	> 75 (typical 78 )	> 75 (typical 78 )	> 75 (typical 78 )	
	RMS, ref @ ± 75 kHz peak, no HPF/LPF, 0µs de-emphasis, with 92 kHz tone on SCA input @ 7.5kHz FM deviation	dB	> 78 (typical 80 )	> 78 (typical 80 )	> 78 (typical 80 )	
<b>AUDIO INPUTS</b>						
Left	Connector		XLR F	XLR F	XLR F	
	Type		balanced or externally unbalanced	balanced or externally unbalanced	balanced or externally unbalanced	
	Impedance	Ohm	10 k or 600	10 k or 600	10 k or 600	Selectable by rear panel dip switches
Right	Connector		XLR F	XLR F	XLR F	
	Type		balanced or externally unbalanced	balanced or externally unbalanced	balanced or externally unbalanced	
	Impedance	Ohm	10 k or 600	10 k or 600	10 k or 600	Selectable by rear panel dip switches
MPX	Connector		BNC	BNC	BNC	
	Type		unbalanced	unbalanced	unbalanced	
	Impedance	Ohm	10 k or 50	10 k or 50	10 k or 50	Selectable by rear panel dip switches
SCA/RDS	Connector		2 x BNC	2 x BNC	2 x BNC	
	Type		unbalanced	unbalanced	unbalanced	
	Impedance	Ohm	10 k	10 k	10 k	Selectable by rear panel dip switches
<b>OUTPUTS</b>						
RF Output	Connector		N type	N type	7/8" flange type	
RF Monitor	Connector		BNC	BNC	BNC	
Pilot output	Connector		BNC	BNC	BNC	
MPX Monitor	Connector		BNC	BNC	BNC	
<b>AUXILIARY CONNECTIONS</b>						
Interface	Connector		2 x BNC	2 x BNC	2 x BNC	Input and output for remote power inhibition (short is RF off)
Ext ref. 10 MHz	Connector		SMA	SMA	SMA	
RS232 Serial Interface	Connector		DB9 F (**)	DB9 F (**)	DB9 F (**)	(*) Only for firmware program (**) DCE for optional PC
Service	Connector		DB9 F	DB9 F	DB9 F	Factory reserved for firmware program
i2Cbus	Connector		DB9 F	DB9 F	DB9 F	i2Cbus communication for optional telemetry
Modem	Connector		DB9 F	DB9 F	DB9 F	Optional telemetry modem RS232
RS485 Serial Interface	Connector		DB9 F	DB9 F	DB9 F	
Remote Interface	Connector		DB15F	DB15F	DB15F	IIC + 5 analog / digital inputs, 5 analog / digital outputs
Telemetry Interface	Connector					
<b>POWER REQUIREMENTS</b>						
AC Power Input	AC Supply Voltage	VAC	115 / 230 ±15%	115 / 230 ±15%	115 / 230 ±15%	(*) Full range (**) Internal switch
	AC Apparent Power Consumption	VA	940	1400	1650	
	Active Power Consumption	W	920	860	1630	
	Power Factor		0.97	0.61	0.97	
DC Power Input	DC Supply Voltage	VDC	morsettiera	morsettiera	morsettiera	
	DC Current	ADC				(*)max 25W (**) max 140W
<b>FUSES</b>						
On Mains			2 External fuse F 16 T - 10 x 38 mm	2 External fuse F 16 T - 10 x 38 mm	2 External fuse F 25 T - 10 x 38 mm	
On services			1 External fuse F 1 T - 5x20 mm	1 External fuse F 1 T - 5x20 mm	1 External fuse F 2 T - 5x20 mm	
On PA Supply			2 Internal fuse F 10 A 10 x 38 mm	2 Internal fuse F 10 A 10 x 38 mm	4 Internal fuse F 10 A 10 x 38 mm	
On Driver Supply			1 Internal fuse F 1 A 2 x 20 mm	1 Internal fuse F 1 A 2 x 20 mm	1 Internal fuse F 1 A 2 x 20 mm	* / - 3 dBm Referred to the RF output For RDS and isofrequency synchronizing purpose
<b>MECHANICAL DIMENSIONS</b>						
Physical Dimensions	Front panel width	mm	483 (19")	483 (19")	483 (19")	19" EIA rack
	Front panel height	mm	132 (xxx) 3HE	132 (xxx)	132 (xxx)	
	Overall depth	mm	520	520	520	
Weight	Chassis depth	mm	501 (xxx)	501 (xxx)	501 (xxx)	
		kg	about 24	about 24	about 32	
<b>OPTIONS</b>						
Input 10 MHz		code	/10MHz	/10MHz	/10MHz	
Telemetry		code	/TLM	/TLM	/TLM	
115 Vac		code			/115 PFC	
<b>TELEMETRY / TELECONTROL</b>						
Remote connector inputs	Analogical level		FWD fold	FWD fold	FWD fold	For P.A. A.G.C. purpose, min 0.5 Vcc
	Analogical level pulse		REF fold	REF fold	REF fold	For P.A. A.G.C. purpose, min 0.5 Vcc
	RF ON		RF ON	RF ON	RF ON	
	RF OFF		RF OFF	RF OFF	RF OFF	
	ON/OFF level		Interlock	Interlock	Interlock	for remote power inhibition (short is RF off)
Remote connector outputs	Analogical level		FWD	FWD	FWD	max 5 Vcc
	Analogical level		REF	REF	REF	max 5 Vcc
	Analogical level		VPA	VPA	VPA	max 5 Vcc
	Analogical level		IPA	IPA	IPA	max 5 Vcc
	ON / OFF level		Power Good	Power Good	Power Good	open collector
Remote connector others			i2Cbus	i2Cbus	i2Cbus	
<b>TELEMETRY/TELECONTROL SW</b>						
Telemetry			Yes, if /TLM option is present	Yes, if /TLM option is present	Yes, if /TLM option is present	
<b>VARIOUS</b>						
Cooling			Forced, with internal fan	Forced, with internal fan	Forced, with internal fan	
Acoustic Noise		dBa	< 75	< 75	< 75	
<b>STANDARD COMPLIANCE</b>						
Safety			EN60215:1989	EN60215:1989	EN60215:1989	
EMC			EN 301 489-11 V1, 2, 1	EN 301 489-11 V1, 2, 1	EN 301 489-11 V1, 2, 1	
Spectrum Optimization			ETS 300 447	ETS 300 447	ETS 300 447	

## 8. Operating principles

The figures below provide an overview of **TEX500-LCD** (fig. 8.1) and **TEX1000LIGHT** (fig. 8.2) modules and connections.

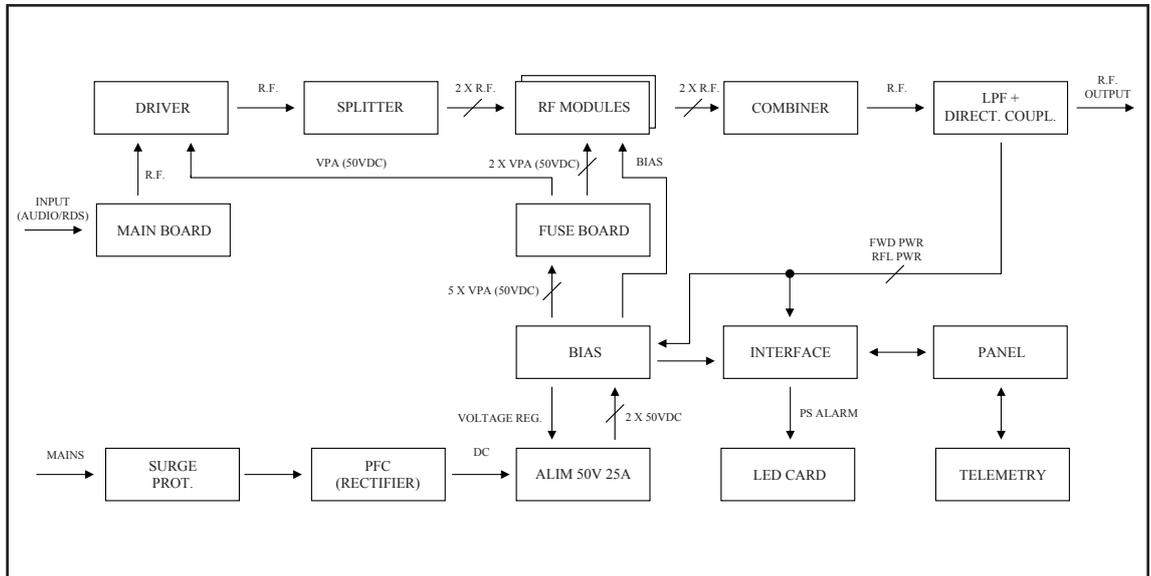


Figure 8.1

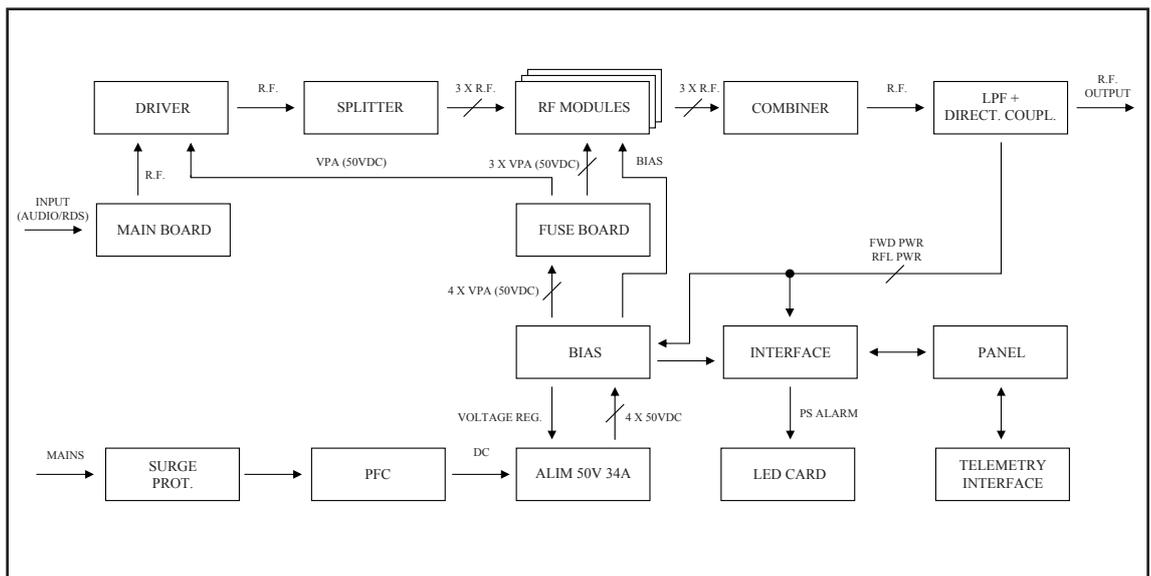


Figure 8.2

Following is a brief description of the different module functions; all diagrams and board layout diagrams are included in the “Technical Schedule” Vol.2.

### 8.1 Power supply

**TEX500-LCD** and **TEX1000LIGHT** power supply sections are made up of a surge protection module and two power supply units:

1. **Surge Protection module** (see description in sect. 8.1.1): protects the equipment from possible voltage surge events and electric discharges in the power mains.
2. **Power amplifier supply unit:** provides adequate power supply for RF power amplifier modules. It is a switching power supply unit with PFC full range; for details of the PFC and converter modules, please see sections 8.1.2 and 8.1.3, respectively.
3. **Service power supply unit:** provides adequate power supply for all modules except RF power modules. Major components of this 50-Hz transformer-based power supply unit are:
  - Power switch
  - Service fuse
  - Mains voltage selector
  - Service transformer



NOTE: Please see section 5.1 for power supply unit settings.

## 8.1.1 Mains power supply pulse protection (SLSRGPRPJ1KM)

This module is enclosed in a sealed metal case (see figures 9.1 and 9.3 - item [8]); it features two externally mounted mains fuses (figure 6.2 - [20] and [35]) and accommodates a bank of surge arresters that protect the equipment from any surge events in the power mains.

Mains voltage is brought from this module to the main Power switch on the front panel (figure 6.1 - [11]), which relays it to the service transformer TR1 (figures 9.2 and 9.4 - [4]).

Inside the surge protection module, a suitable 24VDC relay controlled via the interface board isolates (single line) mains voltage to be fed to the power amplifier power supply unit (PFC module). As a result, the interface board enables mains power supply to PFC when these requirements are met:

- POWER switch on front panel (figure 6.1 - [11]) set to ON;
- No alarm or fault events present (see section 5.4);
- Power output enabled (set to ON) in FNC operation menu (menu 4, see section 5.4.1);
- RF output power set to over 0W using the edit mode (menu 2, see section 5.3).

## 8.1.2 PFC unit (PFCPSL1000)

The PFC unit is a rectifier that modulates drawn current to ensure it is drawn sinusoidally (as far as possible) and achieve a 99% power factor.

The PFC unit can operate on 115 VAC or 230 VAC input voltage. It features a voltage selection block that normally does not require setting: see section 5.1.2 for a detailed description.

On **TEX500-LCD**, a conventional rectifier unit (without power factor correction) may also be installed in place of the PFC unit.

### 8.1.3 Switching power supply (PSL1000/PJ1K and PSL5034)

The switching power supply incorporated in this amplifier feeds 50 VDC to the RF power modules with 25 A maximum current for **TEX500-LCD** and 34 A maximum for **TEX1000LIGHT**.

This module has a control input that enables output voltage reduction when needed (for instance, in the event of RF output power reduction). Another input signal is used to shut down the power supply (0V output voltage) when one of the following conditions is verified:

- Power output disabled (set to OFF) by user in FNC operation menu (menu 4, see section 5.3.1);
- Regulated power set to 0 Watt using the edit mode (menu 2, see section 5.3);
- An alarm or fault condition has occurred (see section 5.4).

## 8.2 Interface board (SL010IN3001)

This board performs the following tasks:

- It uses AC voltage from transformer TR1 to generate and distribute service power supply over the panel board;
- It controls and provides interfacing of the mains surge protection module (SLSRGPRPJ1KM);
- It controls and provides interfacing of the power amplifier supply module (PSL1000/PJ1K or PSL5034);
- It processes and provides interfacing of the control signals to/from the Bias Board (SLBIAS1K3U-2);
- It processes and provides interfacing of the control signals to/from the Panel Board (SL007PC2001A or SL007PC2001B).
- It acquires and processes the input signals from the Main board (SLMBDTEXLC05);
- It feeds and operates the cooling fans;
- It feeds and controls the LED indicator board.

## 8.3 Panel board - CPU (SL007PC2001A)

The panel board accommodates the microcontroller that runs equipment firmware and all user interface elements (display, LEDs, keys, ...).

This board is interfaced with other equipment modules via flat cables and provides for power supply, control signals and measurement distribution.

## 8.4 Main Board (SLMBDTEXLC06)

The main board performs the following tasks:

- Audio and SCA input processing;
- Carrier generation;
- Modulation.

Both measurements are adequately processed and sent to the interface board that controls the protection modules and relays the signals to the CPU board to enable readings to be displayed.

### 8.4.1 Audio input section

The audio input section accommodates the circuitry that performs the following tasks:

- Input impedance selection
- 15 kHz filtering for R and L channels
- Stereophonic coding
- Preemphasis
- Mono, MPX and SCA channel mixing
- Clipper (limits modulating signal level so that frequency deviation never exceeds 75kHz)
- Modulating signal measurement.

### 8.4.2 PLL/VCO section

This section of the board generates the modulated radiofrequency signal. It is based on a PLL architecture that includes an MB15E06 integrated circuit.

## 8.5 Driver Board (SLDRVTEX1KL)

This section accommodates a BFG35 transistor that preamplifies the RF signal before it is relayed to the final power amplifier. When the exciter is placed into stand-by mode, the driver is inhibited, too.

## 8.6 Power amplifier

The RF power amplification section consists in several power modules (two on the **TEX500-LCD**, three on the **TEX1000LIGHT**) coupled through a Wilkinson splitter and combiner using strip-line technology.

Each RF module of the **TEX500-LCD** (code SL010RF1001) provides 300 W rated power - which rise up to 350 W each for the **TEX1000LIGHT** RF modules (code SL010RF2001) - using a single active element built using MOS technology. RF modules are fed by the switching power supply via the Bias board.

The splitter (Splitter Board code SLSITEX500L1 for **TEX500-LCD**, or SLSPLTEX1KL1 for **TEX1000LIGHT**) splits the incoming power input signal equally to all RF modules. The combiner (Combiner Board code SLCOTEX500L1 for **TEX500-LCD**, or code SLCMBTEX1KL1 for **TEX1000LIGHT**) combines the power output signals available at module outputs to obtain total amplifier power.

Splitter, amplifiers and combiner have been designed to sum amplifier output power signals in phase, so as to keep unbalance and power dissipation to a minimum.

The whole RF section is mounted on a finned heat sink with fan cooling.

## 8.7 LPF Board (SLLPFTEX1KL)

This board incorporates a low-pass filter to keep amplifier harmonics within permissible limits as specified by international standards.

A directional coupler is provided at filter output to measure forward and reflected RF output power; power readings are relayed to the Interface and Bias boards to enable processing and display.

The LPF board incorporates an RF output (having a level about -60 dB lower than output level) which is brought to a BNC connector (figure 6.2 - [1]). This provides a convenient test point to check carrier characteristics, but **does not ensure accurate assessment of higher harmonics**.

## 8.8 BIAS board (SLBIAS1K3U-2)

The main purpose of this board is to control and correct the bias voltage of the RF amplification section MOSFETs. It also provides a measure of the total current drawn by the RF modules and incorporates a dedicated circuit for power supply fault reporting. Under normal conditions, bias voltage is adjusted according to set output power using feedback based on actual output power reading (AGC). Abnormal conditions affecting bias voltage so as to trigger foldback current limiting are:

- Reflected output power too high
- External AGC signals (Ext. AGC FWD, Ext. AGC RFL)

- Temperature too high
- Current draw of one RF module too high

## 8.9 External Telemetry Interface Board (SLTLMTXLCD03)

This board provides an I/O interface for the CPU with the outside environment. All available equipment input and output signals are brought to the REMOTE DB15 connector (sect. 6.3.5).

Also mounted on this board is the INTERLOCK IN BNC connector (figure 6.2 - [24]) which can disable device power output. When the central pin is closed to ground, output power is limited to zero until ground connection is removed.

## 9. Module identification

Both **TEX500-LCD** and **TEX1000LIGHT** are made up of several modules connected through connectors to facilitate maintenance and replacement (if needed).

### 9.1 Top view (TEX500-LCD)

The figure below shows a top view of the equipment and component locations.

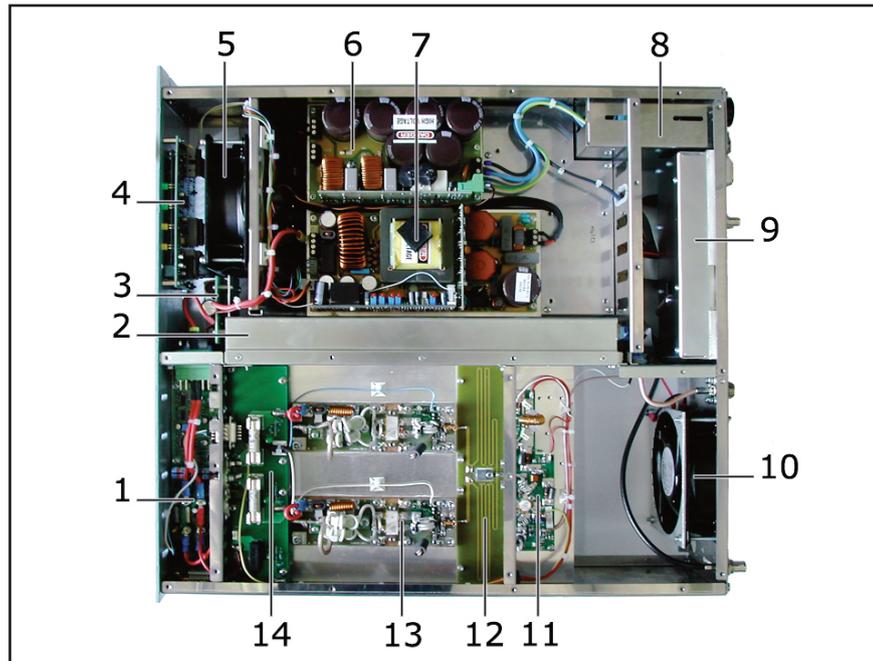


Figure 9.1

- [1] BIAS board (SLBIAS1K3U-2)
- [2] Low-pass filter board (SLLPFTEX1KL)
- [3] PS Filter board (SLFILPSPJ1KC)
- [4] Panel board (SL007PC2001A)
- [5] FAN1 (VTL4184)
- [6] Power Factor (PFCPSL1000)/ Rectifier (RCTPSL1000) - depending on version
- [7] 50V 25A power supply unit (PSL1000/PJ1K)
- [8] Pulse Protection board (SLSRGPRPJ1KM)
- [9] Main Board (SLMBDTEXLC06)
- [10] FAN2 (VTL9GL1224J)
- [11] Driver Board (SLDRVTEX1KL)
- [12] Splitter board (SLSITEX500L1)
- [13] RF module (SL010RF1001)
- [14] Fuse board (SLFUSTX500-1)

## 9.2 Bottom view (TEX500-LCD)

Figure 9.2 below shows a bottom view of the equipment and component locations.

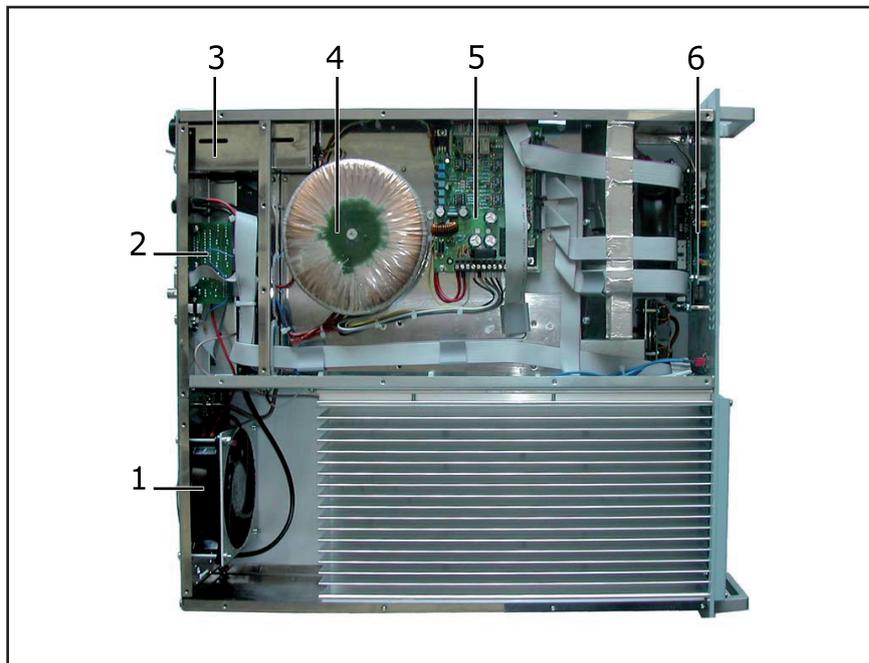


Figure 9.2

- [1] FAN2 (VTL9GL1224J)
- [2] Telemetry board (SLTLMTXLCD03)
- [3] Pulse Protection board (SLSRGPRPJ1KM)
- [4] TR1 transformer (TRFTEX1000T)
- [5] Interface board (SL010IN3001)
- [6] PS LED board (SLEDPSTEX1K)

## 9.3 Top view (TEX1000LIGHT)

The figure below shows a top view of the equipment and component locations.

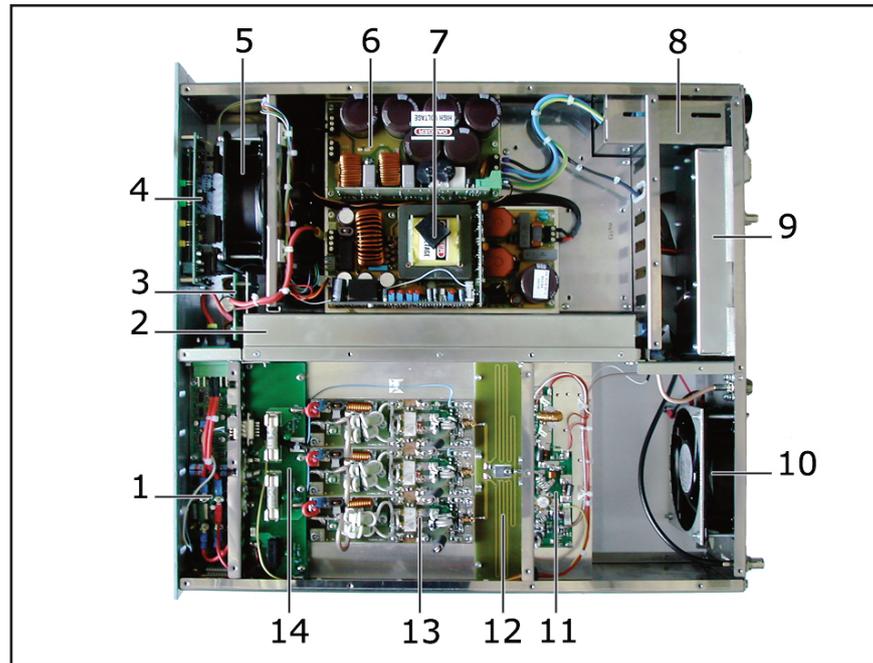


Figure 9.3

- [1] BIAS board (SLBIAS1K3U-2)
- [2] Low-pass filter board (SLLPFTEX1KL)
- [3] PS Filter board (SLFILPSPJ1KC)
- [4] Panel board (SL007PC2001A)
- [5] FAN1 (VTL4184)
- [6] Power Factor Correction board (PFCPSL1000)
- [7] 50V 34A power supply unit (PSL5034)
- [8] Pulse Protection board (SLSRGPRPJ1KM)
- [9] Main Board (SLMBDTEXLC06)
- [10] FAN2 (VTL9GL1224J)
- [11] Driver Board (SLDRVTEX1KL)
- [12] Splitter board (SLSPLTEX1KL1)
- [13] RF module (SL010RF2001)
- [14] Fuse board (SLFURFPJ1KLG)

## 9.4 Bottom view (TEX1000LIGHT)

Figure 9.2 below shows a bottom view of the equipment and component locations.

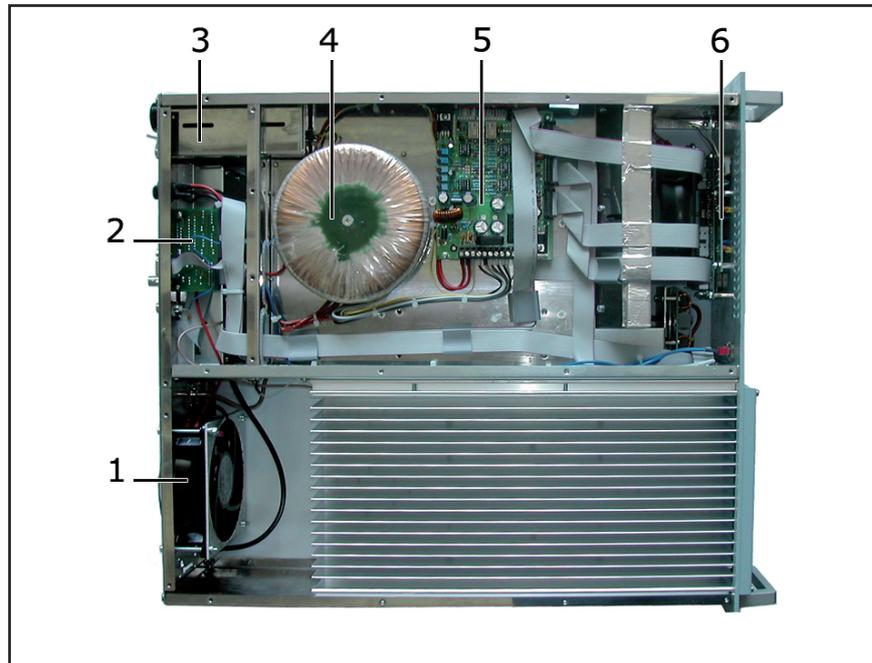


Figure 9.4

- [1] FAN2 (VTL9GL1224J)
- [2] Telemetry board (SLTLMTXLCD03)
- [3] Pulse Protection board (SLSRGPRPJ1KM)
- [4] TR1 transformer (TRFTEX1000T)
- [5] Interface board (SL010IN3001)
- [6] PS LED board (SLLEDPSTEX1K)