



**OPEN** Industry Standard, Flexible Architecture

**GREEN** Less Heat, Less Power Consumption


**STABLE** Robust Design, Quality Parts

Stable and  
Reliable Solution

**Server/Workstation**  
Motherboard

**EP2C612D16C-4L**

**User Manual**



Version 1.0

Published December 2014

Copyright©2014 ASRock Rack Inc. All rights reserved.

## Copyright Notice:

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Rack Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

## Disclaimer:

Specifications and information contained in this documentation are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock Rack. ASRock Rack assumes no responsibility for any errors or omissions that may appear in this documentation.

With respect to the contents of this documentation, ASRock Rack does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock Rack, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock Rack has been advised of the possibility of such damages arising from any defect or error in the documentation or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

“Perchlorate Material-special handling may apply, see [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)”

**ASRock Rack's Website: [www.ASRockRack.com](http://www.ASRockRack.com)**

## Contact Information

If you need to contact ASRock Rack or want to know more about ASRock Rack, you're welcome to visit ASRock Rack's website at [www.ASRockRack.com](http://www.ASRockRack.com); or you may contact your dealer for further information.

### **ASRock Rack Incorporation**

6F., No.37, Sec. 2, Jhongyang S. Rd., Beitou District,

Taipei City 112, Taiwan (R.O.C.)

## Contents

|   |           |
|---|-----------|
| <b>Chapter 1 Introduction</b>                   | <b>1</b>  |
| 1.1 Package Contents                            | 1         |
| 1.2 Specifications                              | 2         |
| 1.3 Unique Features                             | 5         |
| 1.4 Motherboard Layout                          | 6         |
| 1.5 Onboard LED Indicators                      | 9         |
| 1.6 I/O Panel                                   | 11        |
| 1.7 Block Diagram                               | 12        |
| <b>Chapter 2 Installation</b>                   | <b>13</b> |
| 2.1 Screw Holes                                 | 13        |
| 2.2 Pre-installation Precautions                | 13        |
| 2.3 Installing the CPU                          | 14        |
| 2.4 Installing the CPU Fan and Heatsink         | 17        |
| 2.5 Installation of Memory Modules (DIMM)       | 18        |
| 2.6 Expansion Slots (PCI and PCI Express Slots) | 21        |
| 2.7 Jumper Setup                                | 22        |
| 2.8 Onboard Headers and Connectors              | 25        |
| 2.9 Dr. Debug                                   | 32        |
| 2.10 Unit Identification purpose LED/Switch     | 33        |
| 2.11 Driver Installation Guide                  | 33        |
| 2.12 Dual LAN and Teaming Operation Guide       | 34        |
| 2.13 M.2_SSD (NGFF) Module Installation Guide   | 35        |

|  |           |
|--|-----------|
| <b>Chapter 3 UEFI Setup Utility</b>      | <b>38</b> |
| 3.1 Introduction                         | 38        |
| 3.1.1 UEFI Menu Bar                      | 38        |
| 3.1.2 Navigation Keys                    | 39        |
| 3.2 Main Screen                          | 40        |
| 3.3 Advanced Screen                      | 41        |
| 3.3.1 ACPI Configuration                 | 42        |
| 3.3.2 Configure Super IO Settings        | 43        |
| 3.3.3 Serial Port Console Redirection    | 44        |
| 3.3.4 CSM Parameters                     | 47        |
| 3.3.5 USB Configuration                  | 48        |
| 3.3.6 System Configuration               | 49        |
| 3.3.7 Hard Disk S.M.A.R.T Settings       | 51        |
| 3.3.8 3rd Storage Configuration          | 52        |
| 3.3.9 H/W Monitor                        | 53        |
| 3.3.10 WHEA Configuration                | 55        |
| 3.3.11 Easy RAID Installer               | 56        |
| 3.3.12 Instant Flash                     | 57        |
| 3.4 IntelRCSetup                         | 58        |
| 3.4.1 Processor Configuration            | 59        |
| 3.4.2 CPU Power Management Configuration | 61        |
| 3.4.3 Memory Configuration               | 63        |
| 3.4.4 I/O Configuration                  | 65        |
| 3.4.5 PCH Configuration                  | 67        |

|  |  |           |
|--|--|-----------|
| 3.4.6  | Server ME Configuration                              | 69        |
| 3.5  | Server Mgmt  | 70        |
| 3.6  | Security   | 74        |
| 3.7  | Boot Screen  | 75        |
| 3.8  | Event Logs   | 77        |
| 3.9  | Exit Screen  | 79        |
| <b>Chapter 4 Software Support</b>                  |  | <b>80</b> |
| 4.1  | Install Operating System                             | 80        |
| 4.2  | Support CD Information                               | 80        |
| 4.2.1  | Running The Support CD                               | 80        |
| 4.2.2  | Drivers Menu   | 80        |
| 4.2.3  | Utilities Menu                                       | 80        |
| 4.2.4  | Contact Information                                  | 80        |
| <b>Chapter 5 Troubleshooting</b>                   |  | <b>81</b> |
| 5.1  | Troubleshooting Procedures                           | 81        |
| 5.2  | Technical Support Procedures                         | 83        |
| 5.3  | Returning Merchandise for Service                    | 83        |
| <b>Chapter 6: Net Framework Installation Guide</b> |  | <b>84</b> |
| 6.1  | Installing .Net Framework 3.5.1 (For Server 2008 R2) | 84        |

# Chapter 1 Introduction

Thank you for purchasing ASRock Rack **EP2C612D16C-4L** motherboard, a reliable motherboard produced under ASRock Rack's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock Rack's commitment to quality and endurance.

In this manual, chapter 1 and 2 contains introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 and 4 contains the configuration guide to BIOS setup and information of the Support CD.



*Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock Rack website without further notice. You may find the latest memory and CPU support lists on ASRock Rack website as well. ASRock Rack's Website: [www.ASRockRack.com](http://www.ASRockRack.com)*

*If you require technical support related to this motherboard, please visit our website for specific information about the model you are using.  
<http://www.asrockrack.com/support/>*

## 1.1 Package Contents

- ASRock Rack **EP2C612D16C-4L** Motherboard  
(SSI EEB Form Factor: 12.0-in x 13.0-in, 30.5 cm x 33.0 cm)
- Support CD
- User Manual
- 4 x SATA3 Cables (50cm)
- 2 x SATA3 Cables (60cm)
- 1 x I/O Shield
- 1 x Screw for M.2\_SSD (NGFF) Socket 3



*If any items are missing or appear damaged, contact your authorized dealer.*

## 1.2 Specifications

| EP2C612D16C-4L   |   |
|--|---|
| MB Physical Status                                       |   |
| Form Factor  | SSI EEB   |
| Dimension  | 12" x 13" (30.5 cm x 33.0 cm)   |
| Processor System   |   |
| CPU  | Intel® Xeon processor E5-2600/4600 & v3 series  |
| Socket   | Dual Socket LGA 2011 R3   |
| Chipset  | Intel® C612   |
| System Memory  |   |
| Capacity   | 16 DIMM slots   |
| Type   | <ul style="list-style-type: none"> <li>- Quad Channel memory technology</li> <li>- Supports DDR4 2133/1866 UDIMM, ECC DIMM, LRDIMM, RDIMM, NVDIMM</li> </ul>  |
| Voltage  | 1.2V  |
| Expansion Slot <i>(Slot 6 is the closest to the CPU)</i> |   |
| Slot 1   | x8 (x8/x8 with Slot 2, CPU2)  |
| Slot 2   | x16 (CPU2)  |
| Slot 3   | x8 (x8/x8 with Slot 4)  |
| Slot 4   | x16   |
| Slot 6   | x16   |
| Storage  |   |
| SATA Controller  | Intel® C612 : 10 x SATA3 6.0 Gb/s, support RAID 0, 1, 5, 10 (SSATA_3 port is shared with M.2 Socket)  |
| Additional SATA Controller                               | Marvell 9172: 2 x SATA3 6Gb/s, support RAID 0, 1  |
| M.2 Socket   | 1 (supports M.2 SATA3 6.0 Gb/s module and M.2 PCI Express module up to Gen3 x4 (32 Gb/s))   |
| Ethernet   |   |
| Interface  | 1000 /100 /10 Mbps by Intel i210  |
| LAN  | 4 x RJ45 GLAN by Intel® i210<br>1 x RJ45 Dedicated IPMI LAN port<br><ul style="list-style-type: none"> <li>- Supports Wake-On-LAN</li> <li>- Supports Energy Efficient Ethernet 802.3az</li> <li>- Supports Dual LAN with Teaming function</li> <li>- Supports PXE</li> <li>- LAN1 supports NCSI</li> </ul> |



| Management             |  |
|------------------------|--|
| BMC Controller         | ASPEED AST2400   |
| IPMI Dedicated GLAN    | - 1 x Realtek RTL8211E for dedicated management GLAN   |
| Features               | - Watch Dog<br>- NMI   |
| Graphics               |  |
| Controller             | ASPEED AST2400   |
| VRAM                   | DDR3 16MB  |
| Output                 | Supports D-Sub with max. resolution up to 1920x1200 @60Hz  |
| Rear Panel I/O         |  |
| VGA Port               | 1 x D-Sub  |
| USB 3.0 Port           | 2  |
| LAN Port               | - 4 + 1 (IPMI) LAN port (RJ45)<br>- LAN Ports with LED (ACT/LINK LED and SPEED LED)                                    |
| Serial Port            | 1 (COM1)   |
| UID Button/<br>LED     | 1  |
| Internal Connector     |  |
| Auxiliary Panel Header | 1 (includes chassis intrusion, location button & LED, front LAN LED and system event LED)                              |
| COM Header             | 1 (COM2)   |
| TPM Header             | 1  |
| IPMB Header            | 1  |
| Buzzer                 | 1  |
| Fan Header             | 2x CPU Fan, 6x system Fan (4-pin)  |
| ATX Power              | 1 (24-pin) + 2 (8-pin)   |
| USB 3.0 Header         | 1 ( support 2 USB 3.0)   |
| USB 2.0 Header         | 1 ( support 2 USB 2.0)   |
| Type A USB 3.0 Port    | 1  |
| PSU SMBus              | 1  |
| Front Panel            | 1  |
| System BIOS            |  |
| BIOS Type              | 128Mb AMI UEFI Legal BIOS  |
| BIOS Features          | - Plug and Play (PnP)<br>- ACPI 2.0 Compliance Wake Up Events<br>- SMBIOS 2.8.1 Support<br>- ASRock Rack Instant Flash |
| Hardware Monitor       |  |
| Temperature            | - Motherboard Temperature Sensing<br>- CPU1 Temperature Sensing<br>- CPU2 Temperature Sensing                          |

|             |   |
|-------------|---|
| Fan         | <ul style="list-style-type: none"> <li>- CPU/Rear/Front Fan Tachometer</li> <li>- CPU Quiet Fan (Allow CPU Fan Speed Auto-Adjust by CPU Temperature)</li> <li>- CPU/Rear/Front Fan Multi-Speed Control</li> </ul>   |
| Voltage     | Voltage Monitoring: +12V, +5V, +3.3V, CPU Vcore, DRAM, 1.05V_PCH, +BAT, 3VSB, 5VSB  |
| Support OS  |   |
| OS          | <p>Microsoft® Windows®</p> <ul style="list-style-type: none"> <li>- Server 2008 R2 SP1 (64 bit)</li> <li>- Server 2012 (64 bit)</li> <li>- Server 2012 R2 (64 bit)</li> </ul> <p>Linux®</p> <ul style="list-style-type: none"> <li>- RedHat Enterprise Linux Server 5.10/6.5 (32 / 64 bit)</li> <li>- CentOS 5.10 / 6.5 (32 / 64 bit)</li> <li>- SUSE Enterprise Linux Server 11 SP3 (32 / 64 bit)</li> <li>- FreeBSD 9.2 (32 / 64 bit)</li> <li>- Fedora core 19 (64 bit)</li> <li>- Ubuntu 12.04.2 (64 bit) / 12.10 (64 bit)</li> </ul> <p>Virtual</p> <ul style="list-style-type: none"> <li>- VMWare® ESXi 5.5 <i>(not supported for Marvell 9172)</i></li> </ul> |
| Environment |   |
| Temperature | <p>Operation temperature: 10°C ~ 35°C / Non operation temperature: -40°C ~ 70°C</p>   |



*This motherboard supports Wake from on Board LAN. To use this function, please make sure that the "Wake on Magic Packet from power off state" is enabled in Device Manager > Intel® Ethernet Connection > Power Management. And the "PCI Devices Power On" is enabled in UEFI SETUP UTILITY > Advanced > ACPI Configuration. After that, onboard LAN1 ~ LAN4 can wake up S5 under OS.*




*If you install Intel® LAN utility or Marvell SATA utility, this motherboard may fail Windows® Hardware Quality Lab (WHQL) certification tests. If you install the drivers only, it will pass the WHQL tests.*

## 1.3 Unique Features

ASRock Rack Instant Flash is a BIOS flash utility embedded in Flash ROM. This convenient BIOS update tool allows you to update system BIOS without entering operating systems first like MS-DOS or Windows<sup>®</sup>. With this utility, you can press the <F6> key during the POST or the <F2> key to enter into the BIOS setup menu to access ASRock Rack Instant Flash. Just launch this tool and save the new BIOS file to your USB flash drive, floppy disk or hard drive, then you can update your BIOS only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system.

# 1.4 Motherboard Layout

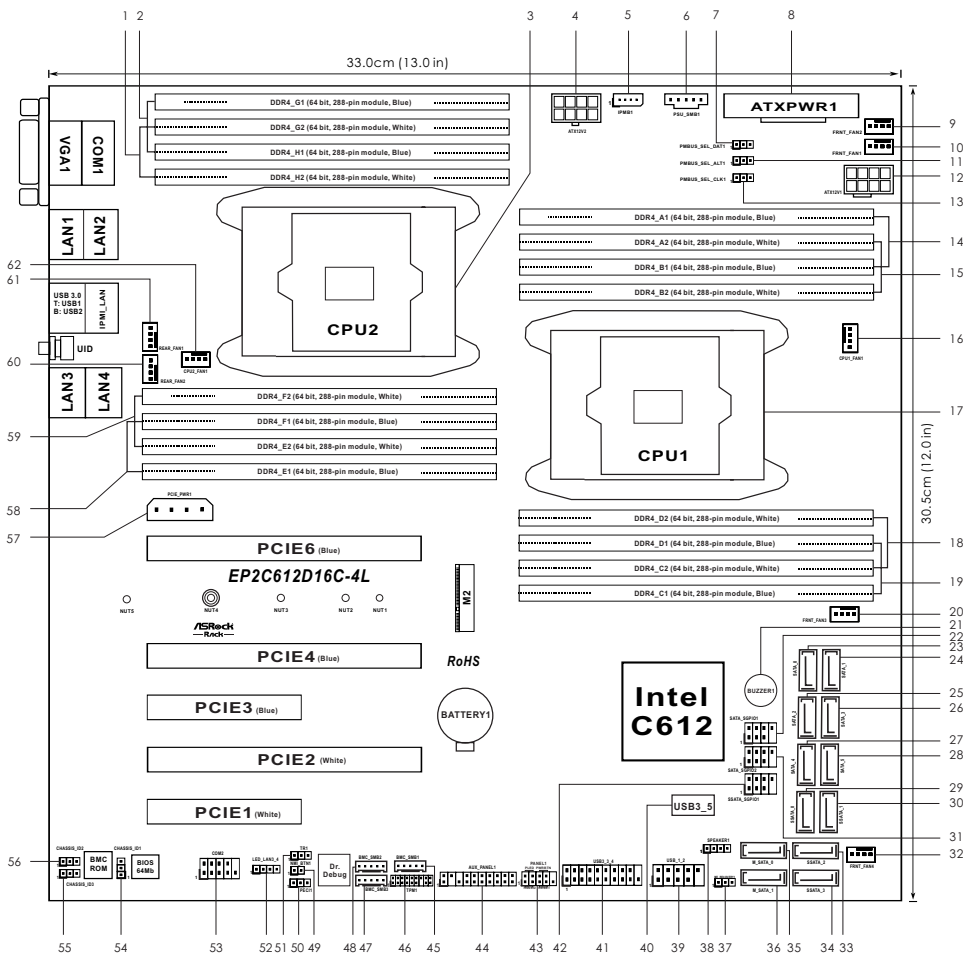


| No. | Description   |
|-----|---|
| 1   | 2 x 288-pin DDR4 DIMM Slots (DDR4_G2, DDR4_H2, White) |
| 2   | 2 x 288-pin DDR4 DIMM Slots (DDR4_G1, DDR4_H1, Blue)  |
| 3   | LGA 2011-3 CPU Socket (CPU2)                          |
| 4   | ATX 12V Power Connector (ATX12V2)                     |
| 5   | Intelligent Platform Management Bus Header (IPMB1)    |
| 6   | PSU SMBus (PSU_SMB1)                                  |
| 7   | PMBUS Mode Jumper (PMBUS_SEL_DAT1)                    |
| 8   | ATX Power Connector (ATXPWR1)                         |
| 9   | Front Fan Connector (FRNT_FAN2)                       |
| 10  | Front Fan Connector (FRNT_FAN1)                       |
| 11  | PMBUS Mode Jumper (PMBUS_SEL_ALT1)                    |
| 12  | ATX 12V Power Connector (ATX12V1)                     |
| 13  | PMBUS Mode Jumper (PMBUS_SEL_CLK1)                    |
| 14  | 2 x 288-pin DDR4 DIMM Slots (DDR4_A1, DDR4_B1, Blue)  |
| 15  | 2 x 288-pin DDR4 DIMM Slots (DDR4_A2, DDR4_B2, White) |
| 16  | CPU1 Fan Connector (CPU1_FAN1)                        |
| 17  | LGA 2011-3 CPU Socket (CPU1)                          |
| 18  | 2 x 288-pin DDR4 DIMM Slots (DDR4_C2, DDR4_D2, White) |
| 19  | 2 x 288-pin DDR4 DIMM Slots (DDR4_C1, DDR4_D1, Blue)  |
| 20  | Front Fan Connector (FRNT_FAN3)                       |
| 21  | Buzzer (BUZZER1)                                      |
| 22  | SATA SGPIO Connector (SATA_SGPIO1)                    |
| 23  | SATA3 Connector (SATA_0), White                       |
| 24  | SATA3 Connector (SATA_1), White                       |
| 25  | SATA3 Connector (SATA_2), White                       |
| 26  | SATA3 Connector (SATA_3), White                       |
| 27  | SATA3 Connector (SATA_4), White                       |
| 28  | SATA3 Connector (SATA_5), White                       |
| 29  | SATA3 Connector (SSATA_0), White                      |
| 30  | SATA3 Connector (SSATA_1), White                      |
| 31  | SATA SGPIO Connector (SATA_SGPIO2)                    |
| 32  | Front Fan Connector (FRNT_FAN4)                       |
| 33  | SATA3 Connector (SSATA_2), White                      |

| No. | Description   |
|-----|---|
| 34  | SATA3 Connector (SSATA_3), White*                     |
| 35  | SATA3 Connector (M_SATA_0), White                     |
| 36  | SATA3 Connector (M_SATA_1), White                     |
| 37  | ME Recovery Jumper (ME_RECOVERY1)                     |
| 38  | Speaker Header (SPEAKER1)                             |
| 39  | USB 2.0 Header (USB_1_2)                              |
| 40  | Vertical Type A USB 3.0 (USB3_5)                      |
| 41  | USB 3.0 Header (USB3_3_4)                             |
| 42  | SSATA SGPIO Connector (SSATA_SGPIO1)                  |
| 43  | System Panel Header (PANEL1)                          |
| 44  | Auxiliary Panel Header (AUX_PANEL1)                   |
| 45  | BMC SMBus Header (BMC_SMB1)                           |
| 46  | TPM Header (TPM1)                                     |
| 47  | BMC SMBus Header (BMC_SMB3)                           |
| 48  | BMC SMBus Header (BMC_SMB2)                           |
| 49  | Non Maskable Interrupt Button (NMI_BTN1)              |
| 50  | CPU PECI Mode Jumper (PECI1)                          |
| 51  | Thermal Sensor Header (TR1)                           |
| 52  | Front LAN LED Connector (LED_LAN3_4)                  |
| 53  | COM Port Header (COM2)                                |
| 54  | Chassis ID1 Jumper (CHASSIS_ID1)                      |
| 55  | Chassis ID3 Jumper (CHASSIS_ID3)                      |
| 56  | Chassis ID2 Jumper (CHASSIS_ID2)                      |
| 57  | PCIE Power Connector (PCIE_PWR1)                      |
| 58  | 2 x 288-pin DDR4 DIMM Slots (DDR4_E1, DDR4_F1, Blue)  |
| 59  | 2 x 288-pin DDR4 DIMM Slots (DDR4_E2, DDR4_F2, White) |
| 60  | Rear Fan Connector (REAR_FAN2)                        |
| 61  | Rear Fan Connector (REAR_FAN1)                        |
| 62  | CPU 2 Fan Connector (CPU2_FAN1)                       |

\*Please be noted that the M.2\_SSD (NGFF) Socket 3 is shared with the SATA connector (SSATA\_3). When the M.2 Socket is occupied by a M.2 SATA module, the SSATA\_3 connector will be disabled.

\*\*For DIMM installation and configuration instructions, please see p.18 (Installation of Memory Modules (DIMM)) for more details.


1.5 Onboard LED Indicators

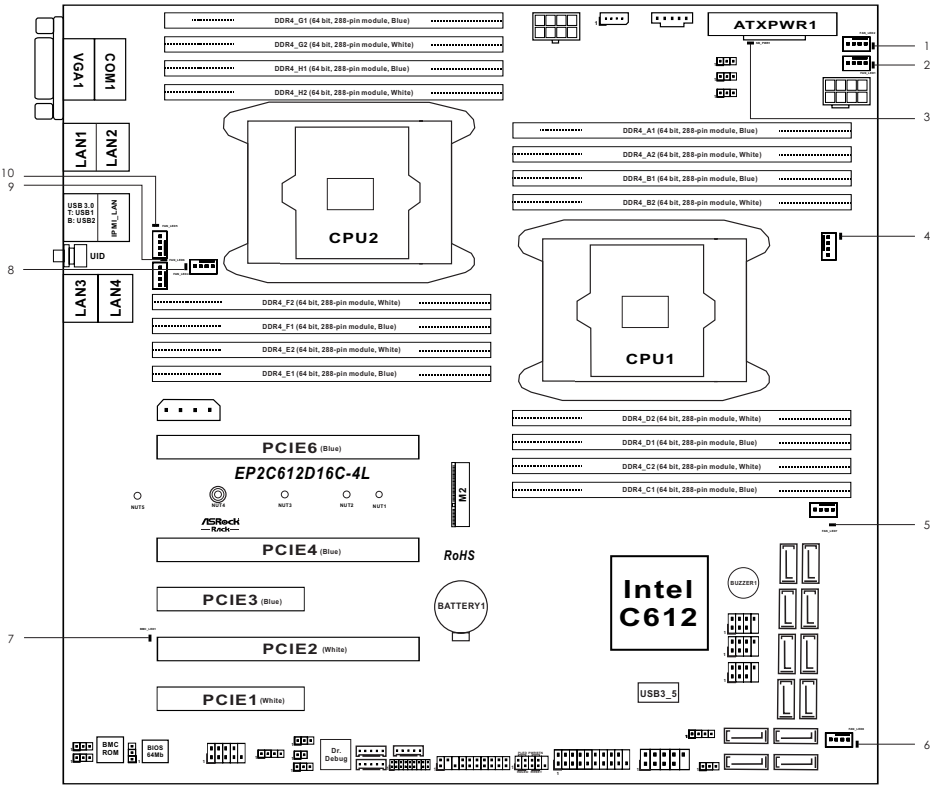

| No. | Status | Description       |
|-----|--------|-------------------|
| 1   | Amber  | FRNT_FAN2 failed  |
| 2   | Amber  | FRNT_FAN1 failed  |
| 3   | Green  | STB PWR ready     |
| 4   | Amber  | CPU1_FAN1 failed  |
| 5   | Amber  | FRNT_FAN3 failed  |
| 6   | Amber  | FRNT_FAN4 failed  |
| 7   | Green  | BMC heartbeat LED |
| 8   | Amber  | CPU2_FAN1 failed  |
| 9   | Amber  | Rear_FAN2 failed  |
| 10  | Amber  | Rear_FAN1 failed  |




1.6 I/O Panel

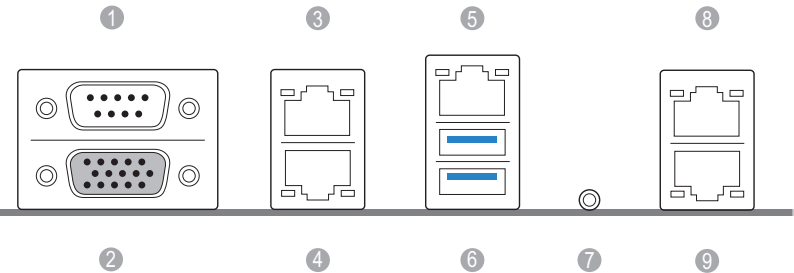

| No. | Description                | No. | Description              |
|-----|----------------------------|-----|--------------------------|
| 1   | Serial Port (COM1)         | 6   | USB 3.0 Ports (USB3_1_2) |
| 2   | VGA Port (VGA1)            | 7   | UID Switch (UID1)        |
| 3   | GLAN RJ-45 Port (LAN2)*    | 8   | GLAN RJ-45 Port (LAN4)*  |
| 4   | GLAN RJ-45 Port (LAN1)*    | 9   | GLAN RJ-45 Port (LAN3)*  |
| 5   | LAN RJ-45 Port (IPMI_LAN)* |     |                          |


LAN Port LED Indications

\*There are two LED next to the LAN port. Please refer to the table below for the LAN port LED indications.

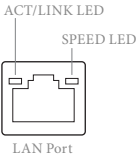

LAN (LAN1, LAN2, LAN3, LAN4) / Dedicated IPMI LAN Port LED Indications

| Activity / Link LED |               | Speed LED |                     |
|---------------------|---------------|-----------|---------------------|
| Status              | Description   | Status    | Description         |
| Off                 | No Link       | Off       | No Link             |
| Blinking Yellow     | Data Activity | Off       | 10M bps connection  |
| On                  | Link          | Yellow    | 100M bps connection |
|                     |               | Green     | 1G bps connection   |

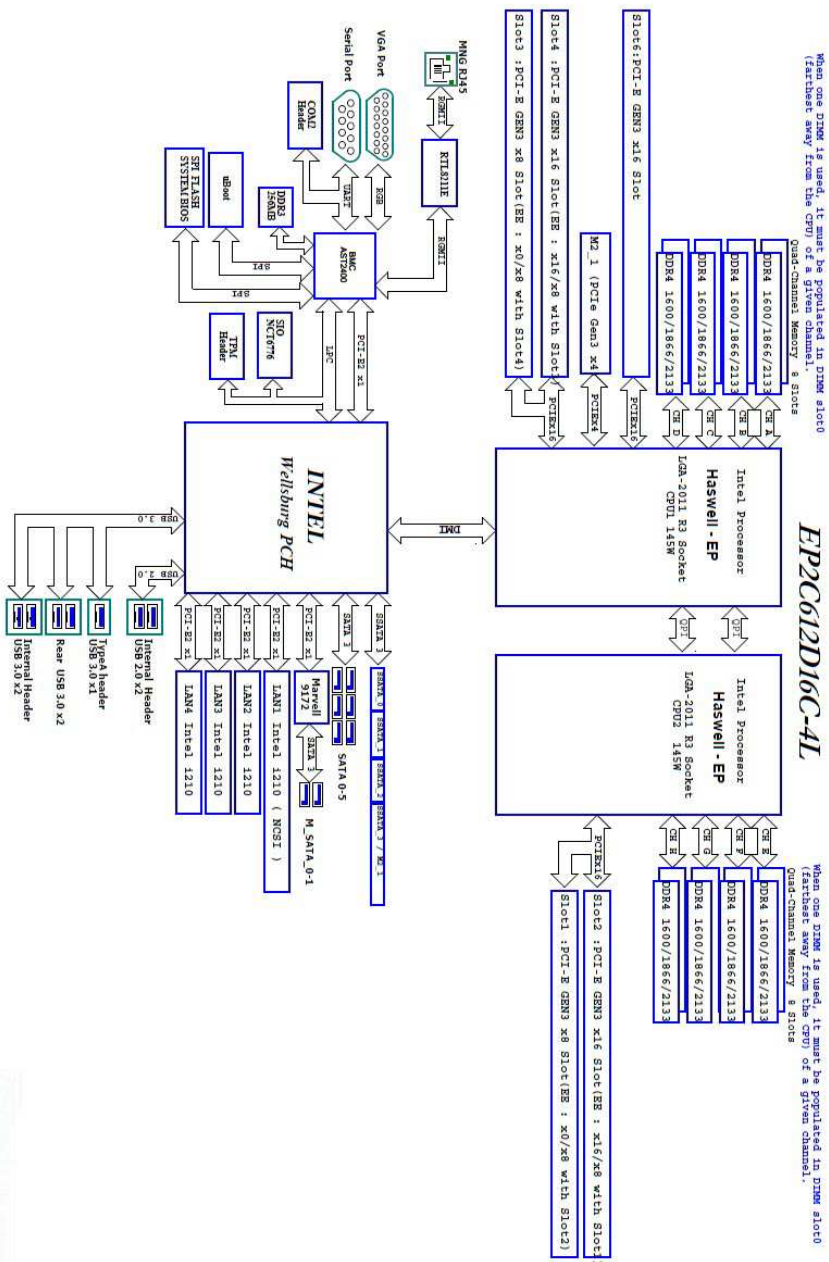

## Chapter 2 Installation

This is a SSI EEB form factor (12" x 13", 30.5 cm x 33.0 cm) motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.

EP2C612 Series are dual socket motherboards that support Intel® Xeon® E5-2600 v3 Series Processors. Please install a primary processor (BootStrap Processor) into “CPU1” socket and then install a non-Primary Processor (Application Processors) into “CPU2” socket. \*For a single CPU, please install it into “CPU1” socket (framed by a square).



*Make sure to unplug the power cord before installing or removing the motherboard. Failure to do so may cause physical injuries to you and damages to motherboard components.*

### 2.1 Screw Holes

Place screws into the holes indicated by circles to secure the motherboard to the chassis.



*Do not over-tighten the screws! Doing so may damage the motherboard.*

### 2.2 Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.

1. Unplug the power cord from the wall socket before touching any components.
2. To avoid damaging the motherboard's components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle the components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded anti-static pad or in the bag that comes with the component.
5. When placing screws into the screw holes to secure the motherboard to the chassis, please do not over-tighten the screws! Doing so may damage the motherboard.



*Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.*

## 2.3 Installing the CPU




1. Before you insert the 2011-3-Pin CPU into the socket, please check if the PnP cap is on the socket, if the CPU surface is unclean, or if there are any bent pins in the socket. Do not force to insert the CPU into the socket if above situation is found. Otherwise, the CPU will be seriously damaged.
2. Unplug all power cables before installing the CPU.

### CAUTION:


Please note that C612 platform is only compatible with the LGA 2011-3 socket, which is incompatible with the LGA 2011 socket

**Socket Type: Narrow ILM Socket**


1

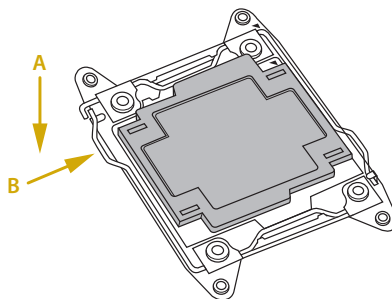


2

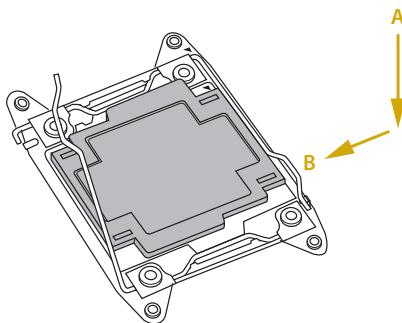


3

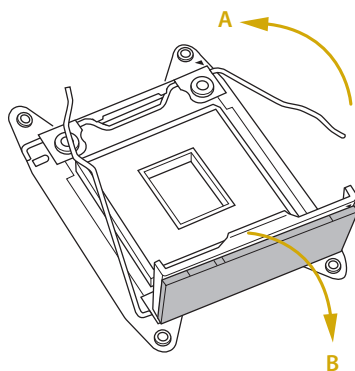


4

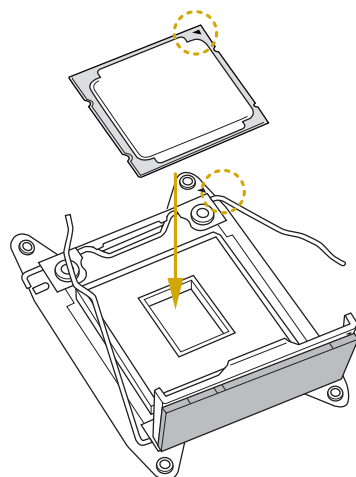


5

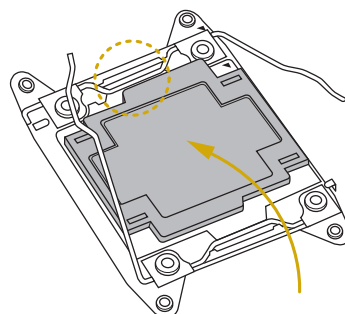


6

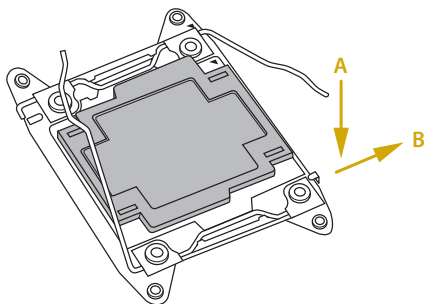

7

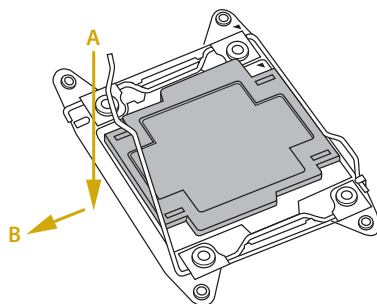

8

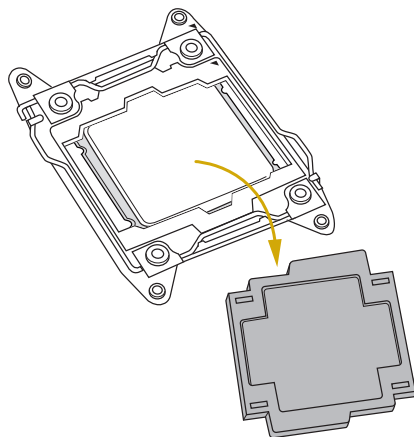


The cover must be placed if returning the motherboard for after service.


## 2.4 Installing the CPU Fan and Heatsink




Before you installed the heatsink, you need to spray thermal interface material between the CPU and the heatsink to improve heat dissipation.

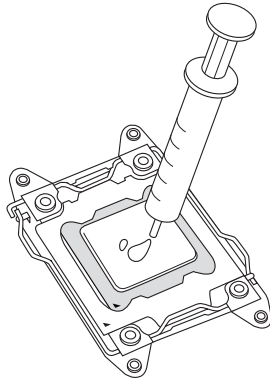

1

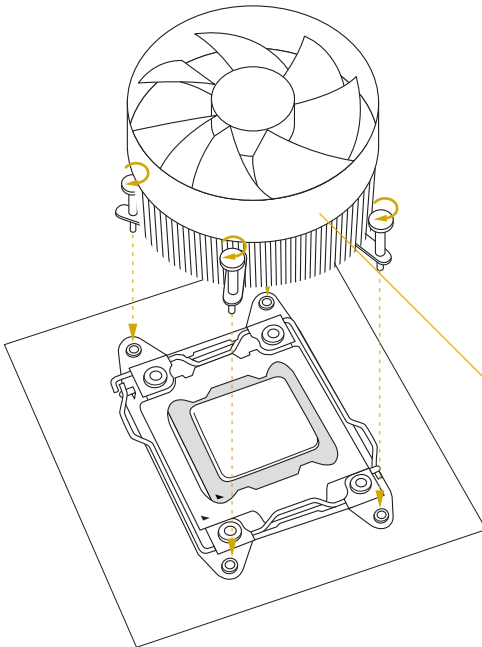

2

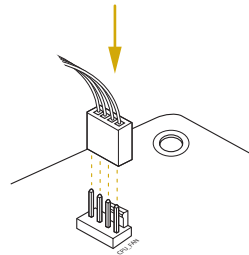

CPU fan for narrow ILM socket  
\*Support an active or passive heatsink

## 2.5 Installation of Memory Modules (DIMM)

This motherboard provides sixteen 288-pin DDR4 (Double Data Rate 4) DIMM slots in two groups, and supports Quad Channel Memory Technology.


| Capacity | CPU1                        | CPU2                        |
|----------|-----------------------------|-----------------------------|
| 256GB /  | DDR4_A1, B1, C1, D1 (Blue)  | DDR4_E1, F1, G1, H1 (Blue)  |
| 512GB    | DDR4_A2, B2, C2, D2 (White) | DDR4_E2, F2, G2, H2 (White) |




1. It is not allowed to install a DDR, DDR2 or DDR3 memory module into a DDR4 slot; otherwise, this motherboard and DIMM may be damaged.
2. For dual channel configuration, you always need to install identical (the same brand, speed, size and chip-type) DDR4 DIMM pairs.
3. It is unable to activate Dual Channel Memory Technology with only one or three memory module installed.
4. Some DDR4 1GB double-sided DIMMs with 16 chips may not work on this motherboard. It is not recommended to install them on this motherboard.




1

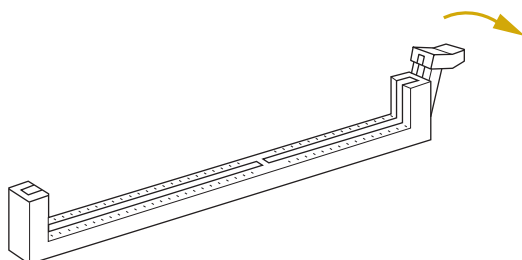

2

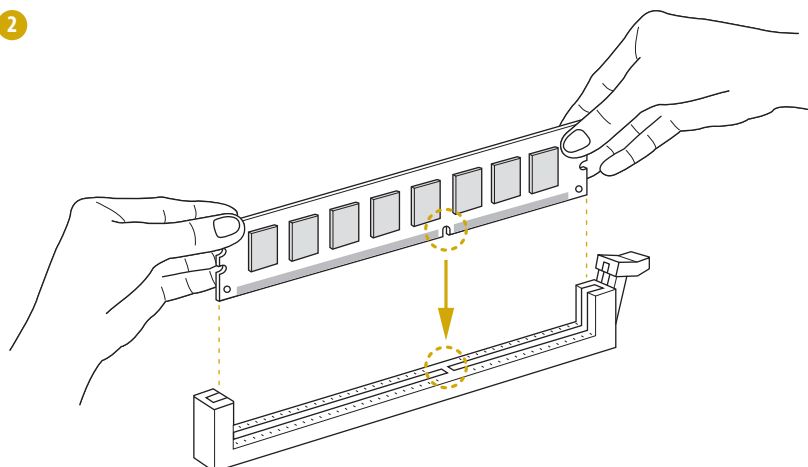

3

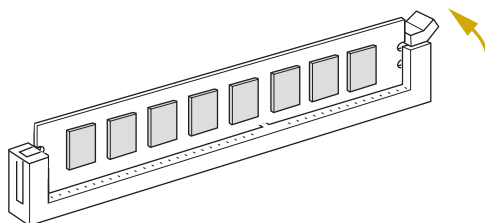

The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if you force the DIMM into the slot at incorrect orientation.

# Recommended Memory Configurations

A single memory module should be installed in the BLUE socket.

If you install only one CPU (CPU1) on the motherboard, make sure to install DIMMs into DDR4\_A, DDR4\_B, DDR4\_C, or DDR4\_D slot(s).

## 1 CPU Configuration

| CPU1    |    |    |    |    |    |    |    |    |
|---------|----|----|----|----|----|----|----|----|
|         | A1 | A2 | B1 | B2 | C1 | C2 | D1 | D2 |
| 1 DIMM  | #  |    |    |    |    |    |    |    |
| 2 DIMMS | #  |    | #  |    |    |    |    |    |
| 4 DIMMS | #  |    | #  |    | #  |    | #  |    |
| 8 DIMMS | #  | #  | #  | #  | #  | #  | #  | #  |

*\*The # mark indicates the slot is populated.*

## 2 CPU Configuration

| CPU1     |    |    |    |    |    |    |    |    |
|----------|----|----|----|----|----|----|----|----|
|          | A1 | A2 | B1 | B2 | C1 | C2 | D1 | D2 |
| 1 DIMM   | #  |    |    |    |    |    |    |    |
| 2 DIMMS  | #  |    | #  |    |    |    |    |    |
| 4 DIMMS  | #  |    | #  |    | #  |    | #  |    |
| 8 DIMMS  | #  |    | #  |    | #  |    | #  |    |
| 12 DIMMS | #  | #  | #  | #  | #  | #  | #  | #  |
| 16 DIMMS | #  | #  | #  | #  | #  | #  | #  | #  |

| CPU2     |    |    |    |    |    |    |    |    |
|----------|----|----|----|----|----|----|----|----|
|          | E1 | E2 | F1 | F2 | G1 | G2 | H1 | H2 |
| 1 DIMM   |    |    |    |    |    |    |    |    |
| 2 DIMMS  |    |    |    |    |    |    |    |    |
| 4 DIMMS  |    |    |    |    |    |    |    |    |
| 8 DIMMS  | #  |    | #  |    | #  |    | #  |    |
| 12 DIMMS | #  |    | #  |    | #  |    | #  |    |
| 16 DIMMS | #  | #  | #  | #  | #  | #  | #  | #  |

## 2.6 Expansion Slots (PCI and PCI Express Slots)

There are 5 PCI Express slots on this motherboard.

**PCIe slot:**

PCIE3 (PCIE 3.0 x8 slot, from CPU 1) is used for PCI Express x8 lane width graphics cards.  
PCIE1 (PCIE 3.0 x8 slot, from CPU 2) is used for PCI Express x8 lane width graphics cards.  
PCIE4 and PCIE6 (PCIE 3.0 x16 slot, from CPU 1) are used for PCI Express x16 lane width graphics cards.  
PCIE2 (PCIE 3.0 x16 slot, from CPU 2) is used for PCI Express x16 lane width graphics cards.

| Slot   | Generation | Mechanical | Eletrical | Source |
|--------|------------|------------|-----------|--------|
| PCIE 6 | 3.0        | x16        | x16       | CPU 1  |
| PCIE 4 | 3.0        | x16        | x16       | CPU 1  |
| PCIE 3 | 3.0        | x8         | x8        | CPU 1  |
| PCIE 2 | 3.0        | x16        | x16       | CPU 2  |
| PCIE 1 | 3.0        | x8         | x8        | CPU 2  |

### PCI Express Slot Configuration


|                      | PCIE 1 | PCIE 2 |
|----------------------|--------|--------|
| Single Graphics Card |        | x16    |
| Two Graphics Cards   | x8     | x8     |



















| No.                  | PCIE 3 | PCIE 4 |
|----------------------|--------|--------|
| Single Graphics Card |        | x16    |
| Two Graphics Cards   | x8     | x8     |





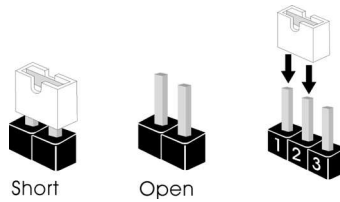

# 2.7 Jumper Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on the pins, the jumper is “Short”. If no jumper cap is placed on the pins, the jumper is “Open”. The illustration shows a 3-pin jumper whose pin1 and pin2 are “Short” when a jumper cap is placed on these 2 pins.



|   |                                  |                                     |
|---|----------------------------------|-------------------------------------|
| ME Recovery Jumper<br>(3-pin ME_RECOVERY1)<br>(see p.6, No. 37)   | <b>1_2</b><br>                   | <b>2_3</b><br>                      |
|   | Normal Mode (Default)            | ME Recovery Mode                    |
| CPU PECI Mode Jumper<br>(3-pin PECI1)<br>(see p.6, No. 50)  | <b>1_2</b><br>                   | <b>2_3</b><br>                      |
|   | CPU PECI connected to PCH        | CPU PECI connected to BMC (Default) |
| PMBUS Mode Jumper<br>(3-pin PMBUS_SEL_DAT1)<br>(see p.6, No. 7)<br>(3-pin PMBUS_SEL_ALT1)<br>(see p.6, No. 11)<br>(3-pin PMBUS_SEL_CLK1)<br>(see p.6, No. 13) | <b>1_2</b><br>                   | <b>2_3</b><br>                      |
|   | PMBus connected to BMC (Default) | PMBus connected to PCH              |

|  |   |   |
|--|---|---|
| Chassis ID Jumpers   |   |   |
| Chassis ID1 Jumper<br>(3-pin CHASSIS_ID1)<br>(see p.6, No. 54) |    |    |
| Chassis ID2 Jumper<br>(3-pin CHASSIS_ID2)<br>(see p.6, No. 56) |    |    |
| Chassis ID3 Jumper<br>(3-pin CHASSIS_ID3)<br>(see p.6, No. 55) |    |    |
|  | Board Level SKU (Default)   | Reserved for system level use   |
|  |   |   |
| Chassis ID1 Jumper<br>(3-pin CHASSIS_ID1)<br>(see p.6, No. 54) |    |    |
| Chassis ID2 Jumper<br>(3-pin CHASSIS_ID2)<br>(see p.6, No. 56) |    |    |
| Chassis ID3 Jumper<br>(3-pin CHASSIS_ID3)<br>(see p.6, No. 55) |    |    |
|  | Reserved for system level use   | Reserved for system level use   |
|  |   |   |
| Chassis ID1 Jumper<br>(3-pin CHASSIS_ID1)<br>(see p.6, No. 54) |   |   |
| Chassis ID2 Jumper<br>(3-pin CHASSIS_ID2)<br>(see p.6, No. 56) |  |  |
| Chassis ID3 Jumper<br>(3-pin CHASSIS_ID3)<br>(see p.6, No. 55) |  |  |
|  | Reserved for system level use   | Reserved for system level use   |


|  |   |   |
|--|---|---|
| Chassis ID1 Jumper<br>(3-pin CHASSIS_ID1)<br>(see p.6, No. 54) |  |  |
| Chassis ID2 Jumper<br>(3-pin CHASSIS_ID2)<br>(see p.6, No. 56) |  |  |
| Chassis ID3 Jumper<br>(3-pin CHASSIS_ID3)<br>(see p.6, No. 55) |  |  |
|  | Reserved for system level<br>use  | Reserved for system level<br>use  |

## 2.8 Onboard Headers and Connectors



Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage to the motherboard.

System Panel Header  
(9-pin PANEL1)  
(see p.6, No. 43)

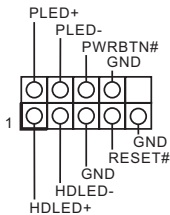

Connect the power switch, reset switch and system status indicator on the chassis to this header according to the pin assignments. Particularly note the positive and negative pins before connecting the cables.



**PWRBTN (Power Switch):**

Connect to the power switch on the chassis front panel. You may configure the way to turn off your system using the power switch.

**RESET (Reset Switch):**

Connect to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart.

**PLED (System Power LED):**


Connect to the power status indicator on the chassis front panel. The LED is on when the system is operating. The LED is off when the system is in S4 sleep state or powered off (S5).

**HDLED (Hard Drive Activity LED):**

Connect to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.

The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting your chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly.

**Auxiliary Panel Header**  
(18-pin AUX PANEL1)  
(see p.6, No. 44)

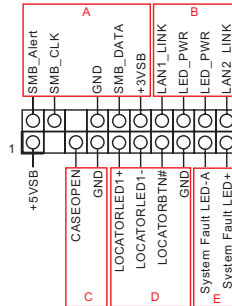

This header supports multiple functions on the front panel, including the front panel SMB, internet status indicator and chassis intrusion pin.



**A. Front panel SMBus connecting pin (6-1 pin FPSMB)**

This header allows you to connect SMBus (System Management Bus) equipment. It can be used for communication between peripheral equipment in the system, which has slower transmission rates, and power management equipment.

**B. Internet status indicator (2-pin LAN1\_LED, LAN2\_LED)**

These two 2-pin headers allow you to use the Gigabit internet indicator cable to connect to the LAN status indicator. When this indicator flickers, it means that the internet is properly connected.

**C. Chassis intrusion pin (2-pin CHASSIS)**

This header is provided for host computer chassis with chassis intrusion detection designs. In addition, it must also work with external detection equipment, such as a chassis intrusion detection sensor or a microswitch. When this function is activated, if any chassis component movement occurs, the sensor will immediately detect it and send a signal to this header, and the system will then record this chassis intrusion event. The default setting is set to the CASEOPEN and GND pin; this function is off.

**D. Locator LED (4-pin LOCATOR)**

This header is for the locator switch and LED on the front panel.


**E. System Fault LED (2-pin LOCATOR)**

This header is for the Fault LED on the system.




Serial ATA3 Connectors

- (SATA\_0)  
(see p.6, No. 23)
- (SATA\_1)  
(see p.6, No. 24)
- (SATA\_2)  
(see p.6, No. 25)
- (SATA\_3)  
(see p.6, No. 26)
- (SATA\_4)  
(see p.6, No. 27)
- (SATA\_5)  
(see p.6, No. 28)
- (SSATA\_0)  
(see p.6, No. 29)
- (SSATA\_1)  
(see p.6, No. 30)

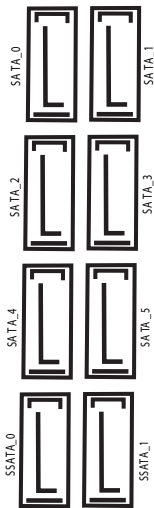


These twelve SATA3 connectors support SATA data cables for internal storage devices with up to 6.0 Gb/s data transfer rate.

- (SSATA\_2)  
(see p.6, No. 33)
- (SSATA\_3)  
(see p.6, No. 34)
- (M\_SATA\_0)  
(see p.6, No. 35)
- (M\_SATA\_1)  
(see p.6, No. 36)



- USB 2.0 Header  
(9-pin USB\_1\_2)  
(see p.6, No. 39)

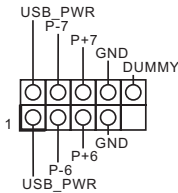


There is one header on this motherboard. Each USB 2.0 header can support two ports.

- USB 3.0 Connector  
(USB3\_5)  
(see p.6, No. 40)




USB 3.0 Header  
(19-pin USB3\_3\_4)  
(see p.6, No. 41)

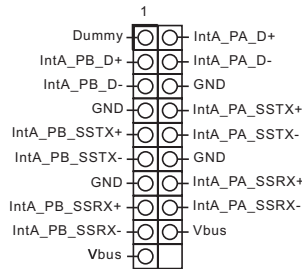


Besides two default USB 3.0 ports on the I/O panel, there is one USB 3.0 header on this motherboard. This USB 3.0 header can support two USB 3.0 ports.

Chassis Speaker Header  
(4-pin SPEAKER1)  
(see p.6, No. 38)




Please connect the chassis speaker to this header.

CPU Fan Connectors  
(4-pin CPU1\_FAN1)  
(see p.6, No. 16)



This motherboard provides two 4-Pin CPU fan (Quiet Fan) connectors. If you plan to connect a 3-Pin CPU fan, please connect it to Pin 1-3.

(4-pin CPU2\_FAN1)  
(see p.6, No. 62)

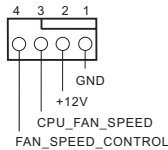

*\*For more details, please refer to the Cooler QVL list on the ASRock Rack website.*

Front and Rear Fan  
Connectors

(4-pin FRNT\_FAN1)

(see p.6, No. 10)

(4-pin FRNT\_FAN2)

(see p.6, No. 9)

(4-pin FRNT\_FAN3)

(see p.6, No. 20)

(4-pin FRNT\_FAN4)


(see p.6, No. 32)

(4-pin REAR\_FAN1)


(see p.6, No. 61)

(4-pin REAR\_FAN2)

(see p.6, No. 60)




Please connect fan cables to the fan connectors and match the black wire to the ground pin. All fans support Fan Control.



ATX Power Connector

(24-pin ATXPWR1)

(see p.6, No. 8)

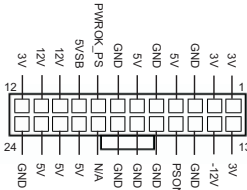

This motherboard provides a 24-pin ATX power connector. To use a 20-pin ATX power supply, please plug it along Pin 1 and Pin 13.


ATX 12V Power  
Connectors

(8-pin ATX12V1)

(see p.6, No. 12)


(8-pin ATX12V2)

(see p.6, No. 4)

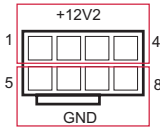


This motherboard provides two 8-pin ATX 12V power connectors.

TPM Header  
(17-pin TPM1)  
(see p.6, No. 46)

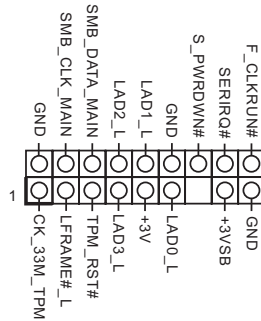


This connector supports Trusted Platform Module (TPM) system, which can securely store keys, digital certificates, passwords, and data. A TPM system also helps enhance network security, protects digital identities, and ensures platform integrity.

Thermal Sensor header  
(3-pin TR1)  
(see p.6, No. 51)




Please connect the thermal sensor cable to either pin 1-2 or pin 2-3 and the other end to the device which you wish to monitor its temperature.

Serial General Purpose  
Input/Output Headers  
(7-pin SATA\_SGPI01)  
(see p.6, No. 22)  
(7-pin SATA\_SGPI02)  
(see p.6, No. 31)  
(7-pin SSATA\_SGPI01)  
(see p.6, No. 42)

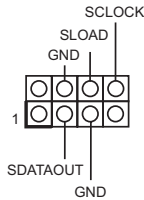

These headers support Serial Link interface for onboard SATA connections.

PSU SMBus  
(PSU\_SMB1)  
(see p.6, No. 6)




PSU SMBus monitors the status of the power supply, fan and system temperature.

Non Maskable Interrupt  
Button Header  
(NMI\_BTN1)  
(see p.6, No. 49)




Please connect a NMI device to this header.

Intelligent Platform  
Management Bus header  
(4-pin IPMB1)  
(see p.6, No. 5)

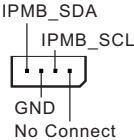


This 4-pin connector is used to provide a cabled base-board or front panel connection for value added features and 3rd-party add-in cards, such as Emergency Management cards, that provide management features using the IPMB.

Baseboard Management  
Controller SMBus Headers  
(5-pin BMC\_SMB1)  
(see p.6, No. 45)  
(5-pin BMC\_SMB3)  
(see p.6, No. 48)  
(5-pin BMC\_SMB2)  
(see p.6, No. 47)

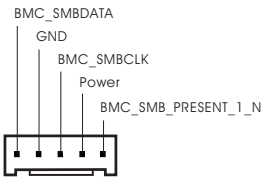

These headers are used for the SM BUS devices..

Front LAN LED  
Connector  
(LED\_LAN3\_4)  
(see p.6, No. 52)




This 4-pin connector is used for the front LAN status indicator.

PCIe Power Connector  
(4-pin PCIE\_PWR1)  
(see p.6, No. 57)



Please connect this connector with a hard disk power connector when two graphics cards / PCI Express cards are installed on this motherboard.

Serial Port Header  
(9-pin COM2)  
(see p.6, No. 53)

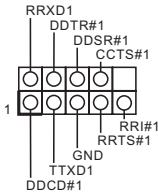

This COM2 header supports a serial port module.

## 2.9 Dr. Debug

Dr. Debug is used to provide code information, which makes troubleshooting even easier. Please see the diagrams below for reading the Dr. Debug codes.

| Code  | Description  |
|---|--|
| <b>00</b>                                       | Please check if the CPU is installed correctly and then clear CMOS.  |
| <b>0d</b>                                       | Problem related to memory, VGA card or other devices. Please clear CMOS, re-install the memory and VGA card, and remove other USB, PCI devices.  |
| <b>01 - 54</b><br>(except 0d),<br><b>5A- 60</b> | Problem related to memory. Please re-install the CPU and memory then clear CMOS. If the problem still exists, please install only one memory module or try using other memory modules.               |
| <b>55</b>                                       | The Memory could not be detected. Please re-install the memory and CPU. If the problem still exists, please install only one memory module or try using other memory modules.                        |
| <b>61 - 91</b>                                  | Chipset initialization error. Please press reset or clear CMOS.  |
| <b>92 - 99</b>                                  | Problem related to PCI-E devices. Please re-install PCI-E devices or try installing them in other slots. If the problem still exists, please remove all PCI-E devices or try using another VGA card. |
| <b>A0 - A7</b>                                  | Problem related to IDE or SATA devices. Please re-install IDE and SATA devices. If the problem still exists, please clear CMOS and try removing all SATA devices.                                    |
| <b>b0</b>                                       | Problem related to memory. Please re-install the CPU and memory. If the problem still exists, please install only one memory module or try using other memory modules.                               |
| <b>b4</b>                                       | Problem related to USB devices. Please try removing all USB devices.   |
| <b>b7</b>                                       | Problem related to memory. Please re-install the CPU and memory then clear CMOS. If the problem still exists, please install only one memory module or try using other memory modules.               |
| <b>d6</b>                                       | The VGA could not be recognized. Please clear CMOS and try re-installing the VGA card. If the problem still exists, please try installing the VGA card in other slots or use other VGA cards.        |
| <b>d7</b>                                       | The Keyboard and mouse could not be recognized. Please try re-installing the keyboard and mouse.   |
| <b>d8</b>                                       | Invalid Password.  |
| <b>FF</b>                                       | Please check if the CPU is installed correctly and then clear CMOS.  |

## 2.10 Unit Identification purpose LED/Switch

With the UID button, You are able to locate the server you're working on from behind a rack of servers.

Unit Identification  
purpose LED/Switch  
(UID1)



When the UID button on the front or rear panel is pressed, the front/rear UID blue LED indicator will be turned on. Press the UID button again to turn off the indicator.

## 2.11 Driver Installation Guide

To install the drivers to your system, please insert the support CD to your optical drive first. Then, the drivers compatible to your system can be auto-detected and listed on the support CD driver page. Please follow the order from top to bottom to install those required drivers. Therefore, the drivers you install can work properly.

## 2.12 Dual LAN and Teaming Operation Guide

Dual LAN with Teaming enabled on this motherboard allows two single connections to act as one single connection for twice the transmission bandwidth, making data transmission more effective and improving the quality of transmission of distant images. Fault tolerance on the dual LAN network prevents network downtime by transferring the workload from a failed port to a working port.



*The speed of transmission is subject to the actual network environment or status even with Teaming enabled.*

Before setting up Teaming, please make sure whether your Switch (or Router) supports Teaming (IEEE 802.3ad Link Aggregation). You can specify a preferred adapter in Intel PROSet. Under normal conditions, the Primary adapter handles all non-TCP/IP traffic. The Secondary adapter will receive fallback traffic if the primary fails. If the Preferred Primary adapter fails, but is later restored to an active status, control is automatically switched back to the Preferred Primary adapter.

### **Step 1**

From **Device Manager**, open the properties of a team.

### **Step 2**

Click the **Settings** tab.

### **Step 3**

Click the **Modify Team** button.

### **Step 4**

Select the adapter you want to be the primary adapter and click the **Set Primary** button.

If you do not specify a preferred primary adapter, the software will choose an adapter of the highest capability (model and speed) to act as the default primary. If a failover occurs, another adapter becomes the primary. The adapter will, however, rejoin the team as a non-primary.



### 2.13 M.2\_SSD (NGFF) Module Installation Guide


The M.2, also known as the Next Generation Form Factor (NGFF), is a small size and versatile card edge connector that aims to replace mPCIe and mSATA. The M.2\_SSD (NGFF) Socket 3 can accommodate either a M.2 SATA3 6.0 Gb/s module or a M.2 PCI Express module up to Gen 2 x2 (10 Gb/s).

Please be noted that the M.2\_SSD (NGFF) Socket 3 is shared with the SATA connector (SSATA\_3). When the M.2 Socket is occupied by a M.2 SATA module, the SSATA\_3 connector will be disabled.

\*The M.2\_SSD (NGFF) Socket 3 supports SSD drives. Please note that the WiFi or other non-SSD M.2 modules are not supported.


#### Installing the M.2\_SSD (NGFF) Module

**Step 1**



Prepare a M.2\_SSD (NGFF) module and the screw.

**Step 2**

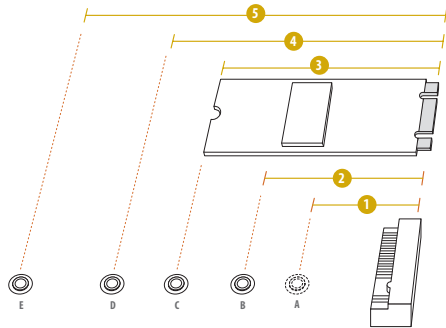

Depending on the PCB type and length of your M.2\_SSD (NGFF) module, find the corresponding nut location to be used.

| No.          | 1        | 2         | 3        | 4         | 5          |
|--------------|----------|-----------|----------|-----------|------------|
| Nut Location | A        | B         | C        | D         | E          |
| PCB Length   | 3cm      | 4.2cm     | 6cm      | 8cm       | 11cm       |
| Module Type  | Type2230 | Type 2242 | Type2260 | Type 2280 | Type 22110 |



### Step 3

Move the standoff based on the module type and length.



The standoff is placed at the nut location D by default. Skip Step 3 and 4 and go straight to Step 5 if you are going to use the default nut.

Otherwise, release the standoff by hand.




### Step 4

Peel off the yellow protective film on the nut to be used. Hand tighten the standoff into the desired nut location on the motherboard.

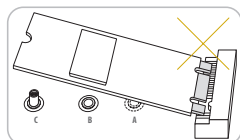

### Step 5

Align and gently insert the M.2 (NGFF) SSD module into the M.2 slot. Please be aware that the M.2 (NGFF) SSD module only fits in one orientation.

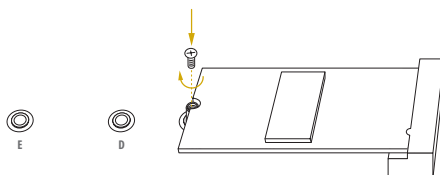

### Step 6

Tighten the screw with a screwdriver to secure the module into place. Please do not overtighten the screw as this might damage the module.

## M.2\_SSD (NGFF) Module Support List

| PCIe Interface                    | SATA Interface             |
|-----------------------------------|----------------------------|
| Plextor PX-G512M6e                | ADATA AXNS381E-128GM-B     |
| Plextor PX-G256M6e                | ADATA AXNS381E-256GM-B     |
| SanDisk SD6PP4M-128G              | Crucial CT120M500SSD4/120G |
| SanDisk SD6PP4M-256G              | Crucial CT240M500SSD4/240G |
| Samsung XP941-512G (MZHPU512HCGL) | Intel SSDSCKGW080A401/80G  |
|                                   | Kingston RBU-SM2280S3/120G |

For the latest updates of M.2\_SSD (NFGG) module support list, please visit our website for details: <http://www.asrockrack.com>

# Chapter 3 UEFI Setup Utility

## 3.1 Introduction

This section explains how to use the UEFI SETUP UTILITY to configure your system. The UEFI chip on the motherboard stores the UEFI SETUP UTILITY. You may run the UEFI SETUP UTILITY when you start up the computer. Please press <F2> or <Del> during the Power-On-Self-Test (POST) to enter the UEFI SETUP UTILITY; otherwise, POST will continue with its test routines.

If you wish to enter the UEFI SETUP UTILITY after POST, restart the system by pressing <Ctrl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis. You may also restart by turning the system off and then back on.



*Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions are for reference purpose only, and they may not exactly match what you see on your screen.*

### 3.1.1 UEFI Menu Bar

The top of the screen has a menu bar with the following selections:

| Item         | Description   |
|--------------|---|
| Main         | To set up the system time/date information                                  |
| Advanced     | To set up the advanced UEFI features  |
| IntelRCSetup | For Intel CPU and chipset settings  |
| Server Mgmt  | To manage the server  |
| Security     | To set up the security features   |
| Boot         | To set up the default system device to locate and load the Operating System |
| Event Logs   | For event log configuration   |
| Exit         | To exit the current screen or the UEFI SETUP UTILITY                        |

Use <←→> key or <→> key to choose among the selections on the menu bar, and then press <Enter> to get into the sub screen.

### 3.1.2 Navigation Keys

Please check the following table for the function description of each navigation key.

| Navigation Key(s) | Function Description                               |
|-------------------|--|
| ← / →             | Moves cursor left or right to select Screens       |
| ↑ / ↓             | Moves cursor up or down to select items            |
| + / -             | To change option for the selected items            |
| <Tab>             | Switch to next function                            |
| <Enter>           | To bring up the selected screen                    |
| <PGUP>            | Go to the previous page                            |
| <PGDN>            | Go to the next page                                |
| <HOME>            | Go to the top of the screen                        |
| <END>             | Go to the bottom of the screen                     |
| <F1>              | To display the General Help Screen                 |
| <F7>              | Discard changes and exit the UEFI SETUP UTILITY    |
| <F9>              | Load optimal default values for all the settings   |
| <F10>             | Save changes and exit the UEFI SETUP UTILITY       |
| <F12>             | Print screen                                       |
| <ESC>             | Jump to the Exit Screen or exit the current screen |


## 3.2 Main Screen

Once you enter the UEFI SETUP UTILITY, the Main screen will appear and display the system overview. The Main screen provides system overview information and allows you to set the system time and date.



### 3.3 Advanced Screen

In this section, you may set the configurations for the following items: ACPI Configuration, Configure Super IO Settings, Serial Port Console Redirection, CSM Parameters, USB Configuration, System Configuration, Hard Disk S.M.A.R.T Settings, 3rd Storage Configuration, H/W Monitor, WHEA Configuration, Easy RAID Installer and Instant Flash.

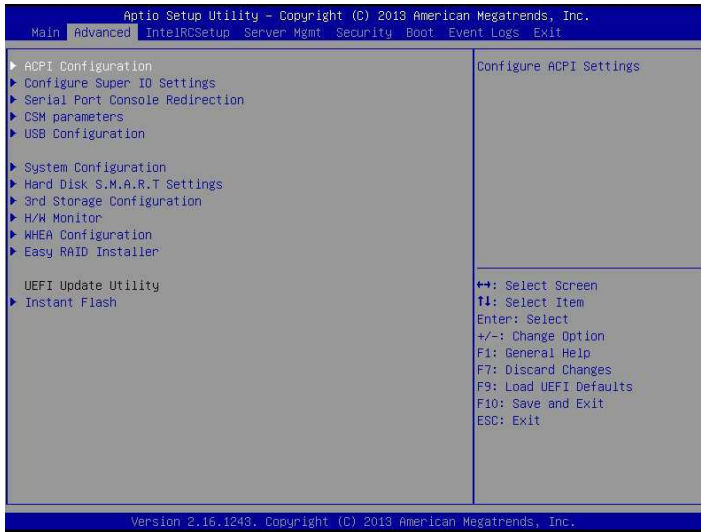

Setting wrong values in this section may cause the system to malfunction.

### 3.3.1 ACPI Configuration



#### PCIE Devices Power On

This allows the system to be waked up by a PCIE device and enables wake on LAN.

#### Ring-In Power On


Use this item to enable or disable Ring-In signals to turn on the system from the power-soft-off mode.

#### RTC Alarm Power On

This allows the system to be waked up by the real time clock alarm. Set it to By OS to let it be handled by your operating system.



### 3.3.2 Configure Super IO Settings

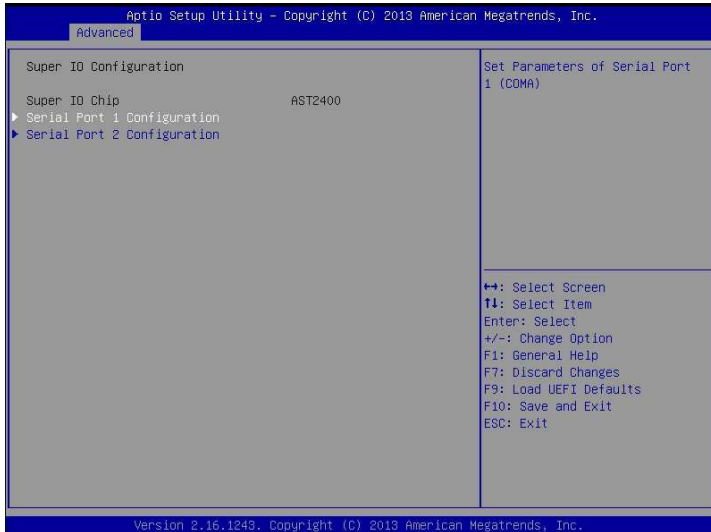

#### Serial Port 1 Configuration

Use this item to configure the onboard serial port 1.

Select and enter the "Serial Port 1 Configuration" and you will see the followings:

##### **Serial Port**

Use this item to enable or disable the serial port.

##### **Change Settings**

Use this item to select an optimal setting for Super IO device.

#### Serial Port 2 Configuration

Use this item to configure the onboard serial port 2.

Select and enter the "Serial Port 2 Configuration" and you will see the followings:

##### **Serial Port**

Use this item to enable or disable the serial port.


##### **Change Settings**

Use this item to select an optimal setting for Super IO device.

##### **Serial Port Mode**

Use this item to select the serial port mode.

### 3.3.3 Serial Port Console Redirection

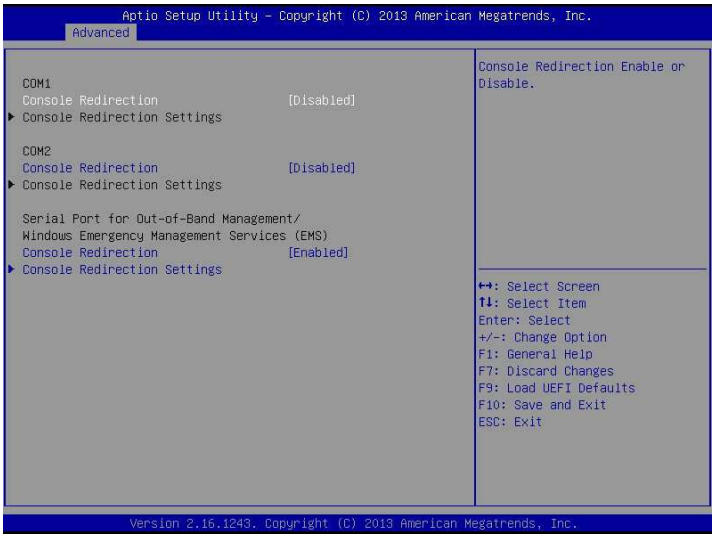

#### COM1 / COM2

#### Console Redirection

Use this option to enable or disable Console Redirection. If this item is set to Enabled, you can select a COM Port to be used for Console Redirection.

#### Console Redirection Settings

Use this option to configure Console Redirection Settings, and specify how your computer and the host computer to which you are connected exchange information.

#### Terminal Type

Use this item to select the preferred terminal emulation type for out-of-band management. It is recommended to select [VT-UTF8].

| Option  | Description   |
|---------|---|
| VT100   | ASCII character set   |
| VT100+  | Extended VT100 that supports color and function keys            |
| VT-UTF8 | UTF8 encoding is used to map Unicode chars onto 1 or more bytes |
| ANSI    | Extended ASCII character set                                    |

**Bits Per Second**

Use this item to select the serial port transmission speed. The speed used in the host computer and the client computer must be the same. Long or noisy lines may require lower transmission speed. The options include [9600], [19200], [57600] and [115200].

**Data Bits**

Use this item to set the data transmission size. The options include [7] and [8] (Bits).

**Parity**

Use this item to select the parity bit. The options include [None], [Even], [Odd], [Mark] and [Space].

**Stop Bits**

The item indicates the end of a serial data packet. The standard setting is [1] Stop Bit. Select [2] Stop Bits for slower devices.

**Flow Control**

Use this item to set the flow control to prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to restart the flow. Hardware flow uses two wires to send start/stop signals. The options include [None] and [Hardware RTS/CTS].

**VT-UTF8 Combo Key Support**

Use this item to enable or disable the VT-UTF8 Combo Key Support for ANSI/VT100 terminals.

**Recorder Mode**

Use this item to enable or disable Recorder Mode to capture terminal data and send it as text messages.

**Resolution 100x31**

Use this item to enable or disable extended terminal resolution support.

**Legacy OS Redirection Resolution**

Use this item to select the number of rows and columns used in legacy OS redirection.

**Putty Keypad**

Use this item to select Function Key and Keypad on Putty.

**Redirection After BIOS POST**

If the [LoadBooster] is selected, legacy console redirection is disabled before booting to legacy OS. If [Always Enabled] is selected, legacy console redirection is enabled for legacy OS. The default value is [Always Enabled].

# Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS)

## Console Redirection

Use this option to enable or disable Console Redirection. If this item is set to Enabled, you can select a COM Port to be used for Console Redirection.

## Console Redirection Settings

Use this option to configure Console Redirection Settings, and specify how your computer and the host computer to which you are connected exchange information.

### Out-of-Band Mgmt Port

Microsoft Windows Emergency Management Services (EMS) allows for remote management of a Windows Server OS through a serial port.

### Terminal Type

Use this item to select the preferred terminal emulation type for out-of-band management. It is recommended to select [VT-UTF8].

| Option  | Description   |
|---------|---|
| VT100   | ASCII character set   |
| VT100+  | Extended VT100 that supports color and function keys            |
| VT-UTF8 | UTF8 encoding is used to map Unicode chars onto 1 or more bytes |
| ANSI    | Extended ASCII character set                                    |

### Bits Per Second

Use this item to select the serial port transmission speed. The speed used in the host computer and the client computer must be the same. Long or noisy lines may require lower transmission speed. The options include [9600], [19200], [57600] and [115200].

### Flow Control


Use this item to set the flow control to prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to restart the flow. Hardware flow uses two wires to send start/stop signals. The options include [None], [Hardware RTS/CTS], and [Software Xon/Xoff].

### Data Bits

### Parity

### Stop Bits

### 3.3.4 CSM Parameters

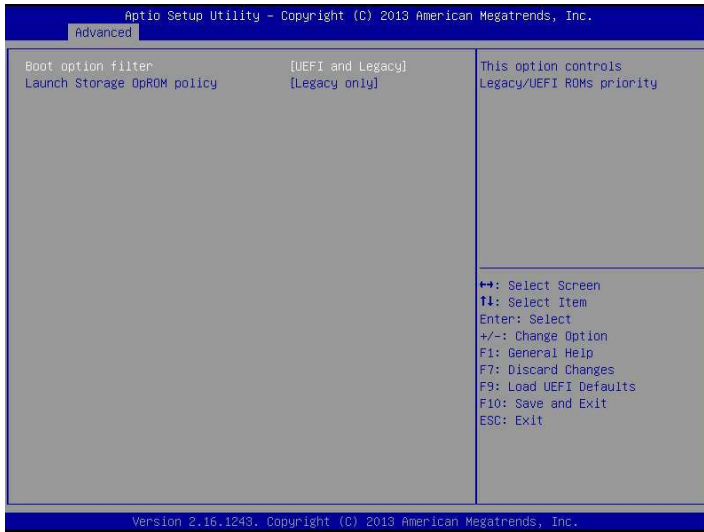


#### Boot Option Filter

Use this option to control what devices system can boot to. Configuration options: [UEFI and Legacy], [Legacy only] and [UEFI only].

#### Launch Storage OpROM Policy

Select UEFI only to run those that support UEFI option ROM only. Select Legacy only to run those that support legacy option ROM only. Select Do not launch to not execute both legacy and UEFI option ROM.

### 3.3.5 USB Configuration

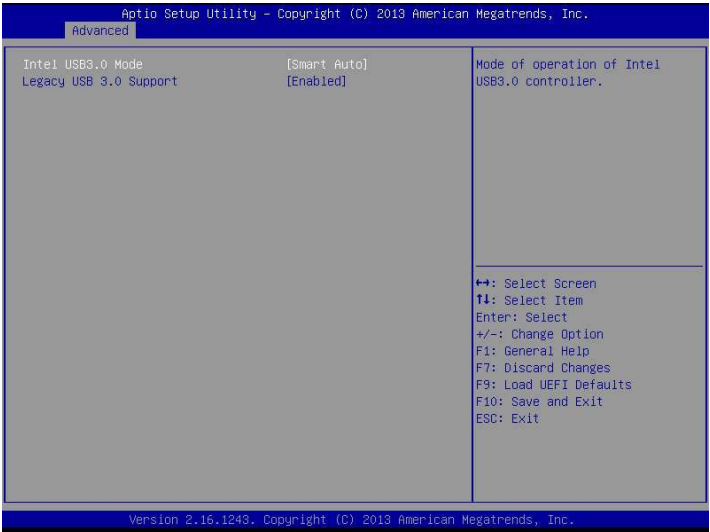

#### Intel USB3.0 Mode


Enable or disable all the USB 3.0 ports.

#### Legacy USB 3.0 Support

Use this option to select legacy support for USB devices. There are four configuration options: [Enabled], [Auto], [Disabled] and [UEFI Setup Only]. The default value is [Enabled]. Please refer to below descriptions for the details of these four options:

| Option          | Description  |
|-----------------|--|
| Enabled         | Enables support for legacy USB.  |
| Disabled        | USB devices are not allowed to use under legacy OS and UEFI setup when [Disabled] is selected. If you have USB compatibility issues, it is recommended to select [Disabled] to enter OS. |
| Auto            | Enables legacy support if USB devices are connected.   |
| UEFI Setup Only | SB devices are allowed to use only under UEFI setup and Windows / Linux OS.  |

### 3.3.6 System Configuration

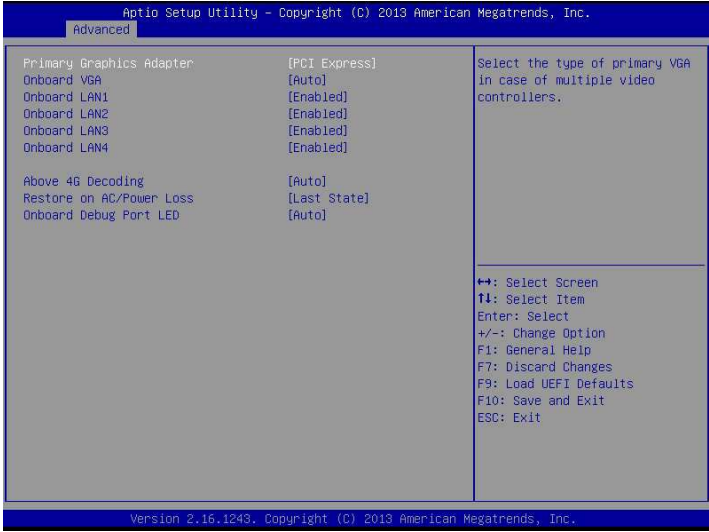

#### Primary Graphics Adapter

If PCI Express graphics card is installed on the motherboard, you may use this option to select PCI Express or Onboard as the primary graphics adapter.

#### Onboard VGA

Use this to enable or disable the Onboard VGA function. The default value is [Auto].

#### Onboard LAN1

This allows you to enable or disable the Onboard LAN 1 feature.

#### Onboard LAN2

This allows you to enable or disable the Onboard LAN 2 feature.

#### Onboard LAN3

This allows you to enable or disable the Onboard LAN 3 feature.

#### Onboard LAN4

This allows you to enable or disable the Onboard LAN 4 feature.

#### Above 4G Decoding

Enable or disable 64bit capable Devices to be decoded in Above 4G Address Space (only if the system supports 64 bit PCI decoding).

## Restore on AC/Power Loss

This allows you to set the power state after an unexpected AC/power loss. If [Power Off] is selected, the AC/power remains off when the power recovers. If [Power On] is selected, the AC/power resumes and the system starts to boot up when the power recovers. If [Last State] is selected, it will recover to the state before AC/power loss.

## Onboard Debug Port LED

Enable or disable the onboard Dr. Debug LED.



### 3.3.7 Hard Disk S.M.A.R.T Settings



#### Hard Disk S.M.A.R.T.

Use this item to enable or disable the S.M.A.R.T. (Self-Monitoring, Analysis, and Reporting Technology) feature. Configuration options: [Disabled] and [Enabled].

### 3.3.8 3rd Storage Configuration



#### Marvell 9172 Controller

Enable or disable Marvell 9172 Controller.

#### Marvell 9172 Operation Mode

This item is for M\_SATA ports. Use this to select Marvell SATA operation mode.


Configuration options: [IDE Mode], [AHCI Mode] and [RAID Mode]. The default value is [AHCI Mode].

#### Bootable Marvell 9172 SATA3

We recommend to use Intel SATA ports (Port 0~5) for your bootable devices. This will minimize your boot time and get the best performance. If you still want to boot from Marvell SATA3 controller, please set this item to Yes.

### 3.3.9 H/W Monitor

In this section, it allows you to monitor the status of the hardware on your system, including the parameters of the CPU temperature, motherboard temperature, CPU fan speed, chassis fan speed, and the critical voltage.

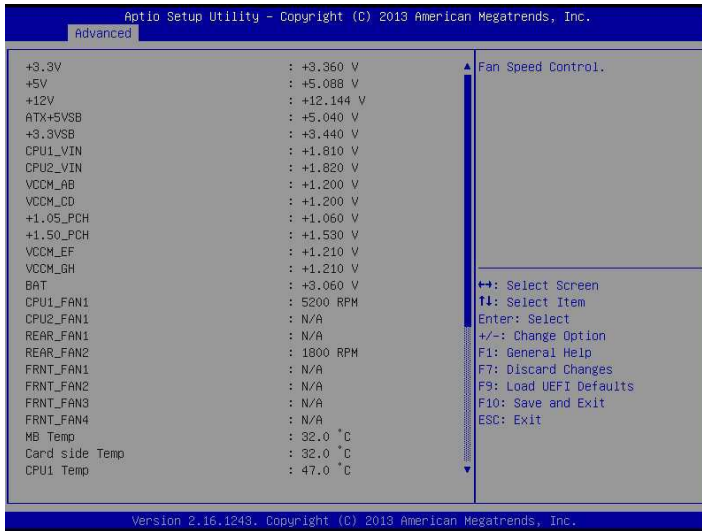

#### CPU1\_FAN1

This allows you to set the CPU1 fan's speed. The default value is [Smart Fan].

#### CPU2\_FAN1

This allows you to set the CPU2 fan's speed. The default value is [Smart Fan].

#### REAR\_FAN1

This allows you to set the rear fan 1's speed. The default value is [Smart Fan].

#### REAR\_FAN2

This allows you to set the rear fan 2's speed. The default value is [Smart Fan].

#### FRNT\_FAN1

This allows you to set the front fan 1's speed. The default value is [Smart Fan].

#### FRNT\_FAN2

This allows you to set the front fan 2's speed. The default value is [Smart Fan].

## FRNT\_FAN3

This allows you to set the front fan 3's speed. The default value is [Smart Fan].

## FRNT\_FAN4

This allows you to set the front fan 4's speed. The default value is [Smart Fan].

## Smart Fan Control

This allows you to set the Smart fan's level speed.

### **Smart Fan Duty Control**

Smart Fan Duty x (x means 1 to 11 stage)

This allows you to set duty cycle for each stage.

### **Smart Fan Temp Control**

Smart Fan Temp x (x means 1 to 11 stage)

This allows you to set temperature for each stage.

### 3.3.10 WHEA Configuration



#### WHEA Support

Use this item to enable or disable Windows Hardware Error Architecture.

#### System Error

Use this item to enable or disable System Error feature. When it is set to [Enabled], you can configure Memory Error and PCIE Error log features.

#### Memory Error

Use this item to enable or disable memory error logging support.

#### PCIE Error

Use this item to enable or disable PCIE error logging support. When it is set to [Enabled], you will see the following items for configurations.

#### Corrected Error Enable

Use this item to enable or disable PCIe correctable errors.


#### Uncorrected Error Enable

Use this item to enable or disable PCIe uncorrectable errors.

#### Fatal Error Enable

Use this item to enable or disable PCIe fatal errors.

### 3.3.11 Easy RAID Installer

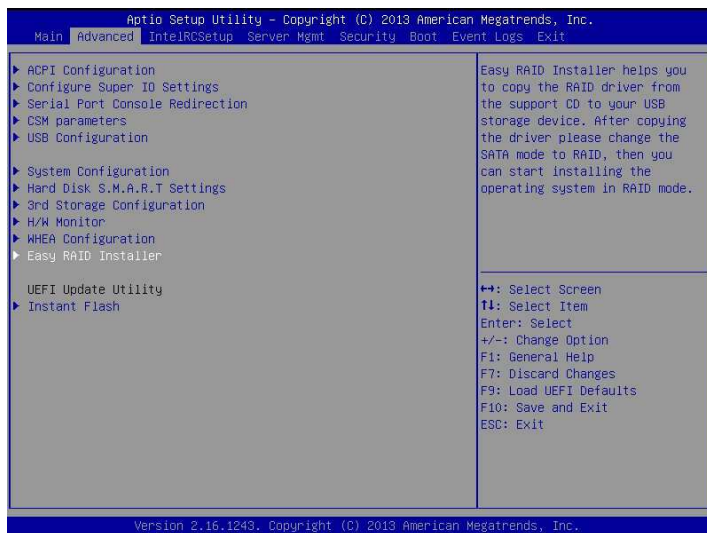


Easy RAID Installer can help you to copy the RAID driver from a support CD to your USB storage device. After copying the RAID driver to your USB storage device, please change “SATA Mode” to “RAID”, then you can start installing the OS in RAID mode.

### 3.3.12 Instant Flash

Instant Flash is a UEFI flash utility embedded in Flash ROM. This convenient UEFI update tool allows you to update system UEFI without entering operating systems first like MS-DOS or Windows<sup>®</sup>. Just save the new UEFI file to your USB flash drive, floppy disk or hard drive and launch this tool, then you can update your UEFI only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system. If you execute Instant Flash utility, the utility will show the UEFI files and their respective information. Select the proper UEFI file to update your UEFI, and reboot your system after the UEFI update process is completed.


## 3.4 IntelRCSetup

In this section, you may set the configurations for the following items: Processor Configuration, CPU Power Management Configuration, Memory Configuration, IIO Configuration, PCH Configuration and Server ME Configuration.

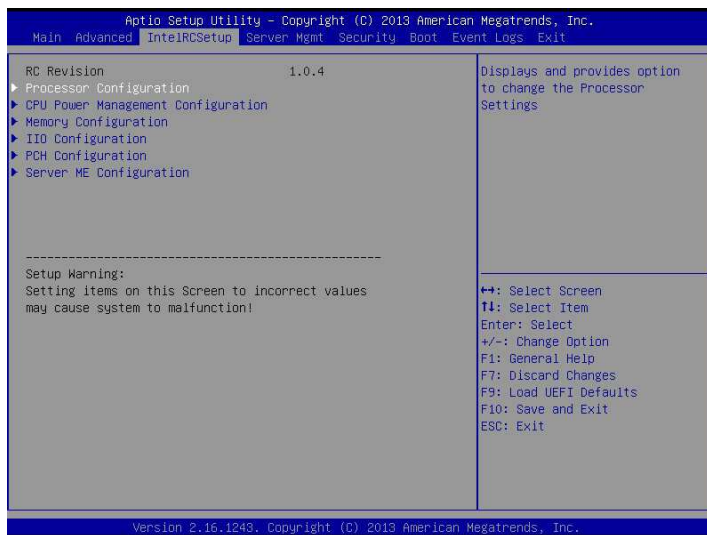



### 3.4.1 Processor Configuration

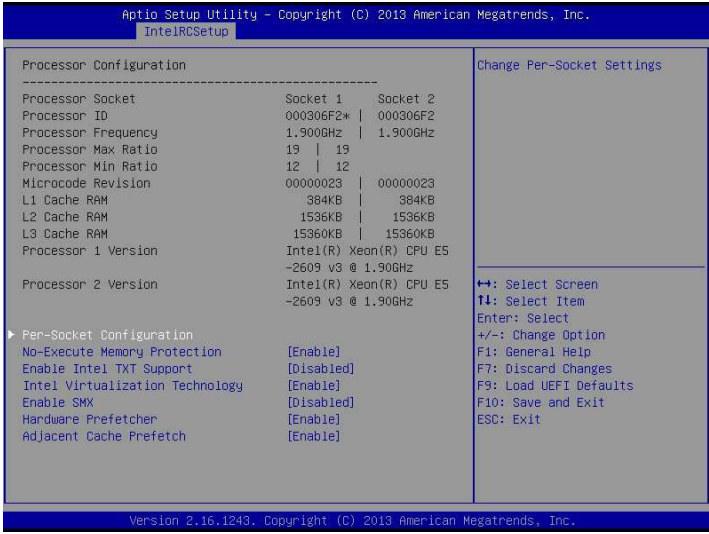

#### Per-Socket Configuration

Change Per-Socket Settings.

#### CPU Socket 0 Configuration

##### Active Processor Cores

Enter the number of cores to be enabled. 0 means all cores. 14 cores are available.

#### CPU Socket 1 Configuration

##### Active Processor Cores

Enter the number of cores to be enabled. 0 means all cores. 14 cores are available.

#### No-Execute Memory Protection

Processors with No-Execution Memory Protection Technology may prevent certain classes of malicious buffer overflow attacks.

#### Enable Intel TXT Support

Enable Intel Trusted Execution Technology configuration. Please disable "EX DFX Features" when TXT is enabled.

#### Intel Virtualization Technology

Intel Virtualization Technology allows a platform to run multiple operating systems

---

and applications in independent partitions, so that one computer system can function as multiple virtual systems.

### **Enable SMX**

Use this item to enable Safer Mode Extensions.


### **Hardware Prefetcher**

Automatically prefetch data and code for the processor. Enable for better performance.

### **Adjacent Cache Prefetch**

Automatically prefetch the subsequent cache line while retrieving the currently requested cache line. Enable for better performance.

### 3.4.2 CPU Power Management Configuration

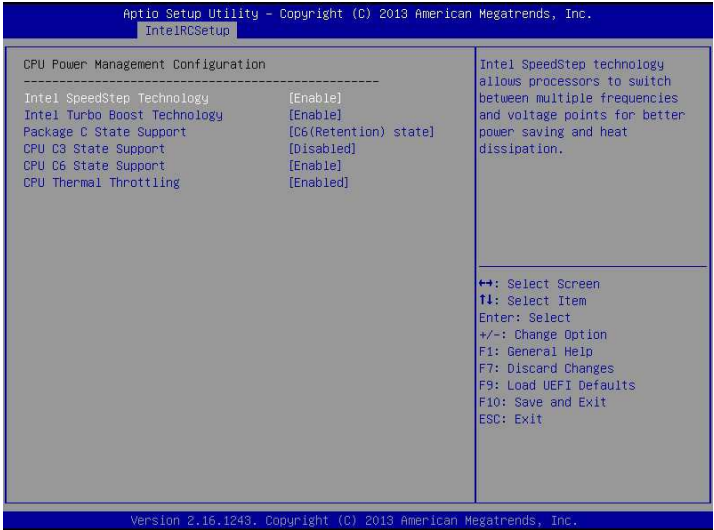

#### Intel SpeedStep Technology

Intel SpeedStep technology is Intel’s new power saving technology. Processors can switch between multiple frequencies and voltage points to enable power saving. The default value is [Enabled]. Configuration options: [Enabled] and [Disabled]. If you install Windows® Vista™ / 7 / 8 and want to enable this function, please set this item to [Enabled]. This item will be hidden if the current CPU does not support Intel(R) SpeedStep technology.



*Please note that enabling this function may reduce CPU voltage and lead to system stability or compatibility issues with some power supplies. Please set this item to [Disabled] if above issues occur.*

#### Intel Turbo Boost Technology

Use this item to enable or disable Intel Turbo Boost Technology. Turbo Boost allows processor cores to run faster than marked frequency in specific conditions. The default value is [Enabled].

#### Package C State Support

Enable CPU, PCIe, Memory, Graphics C State Support for power saving.

#### CPU C3 State Support

Enable C3 sleep state for lower power consumption.

---


## CPU C6 State Support

Enable C6 deep sleep state for lower power consumption.

## CPU Thermal Throttling

Enable CPU internal thermal control mechanisms to keep the CPU from overheating.

### 3.4.3 Memory Configuration

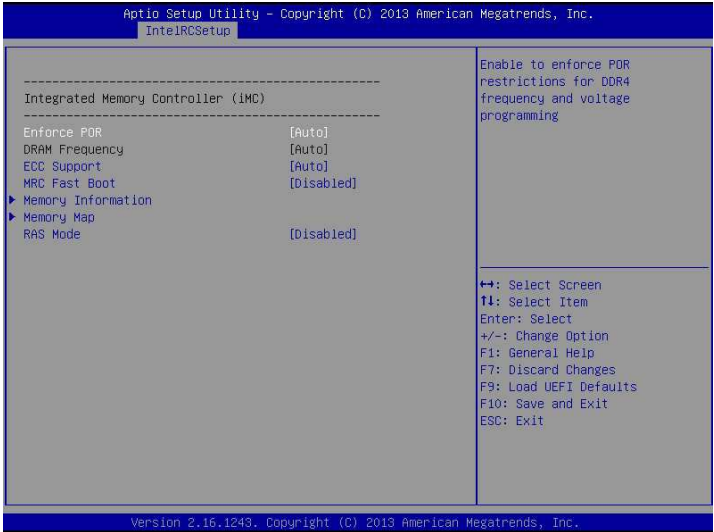

#### Enforce POR

Enable to enforce POR restrictions for DDR4 frequency and voltage programming.

#### DRAM Frequency

#### ECC Support

Use this item to enable or disable DDR ECC Support.

#### MRC Fast Boot

When enabled, portions of memory reference code will be skipped when possible to increase boot speed.

#### Memory Information

Displays memory topology with DIMM population information.

#### Memory Map

Set memory mapping settings.

#### Channel Interleaving

Select to configure Channel Interleaving settings.

#### Rank Interleaving


Select to configure Rank Interleaving settings.

---

## RAS Mode

Enable or disable RAS modes. Enabling Sparing and Mirroring is not supported. If enabled, Sparing will be selected.

### 3.4.4 IIO Configuration

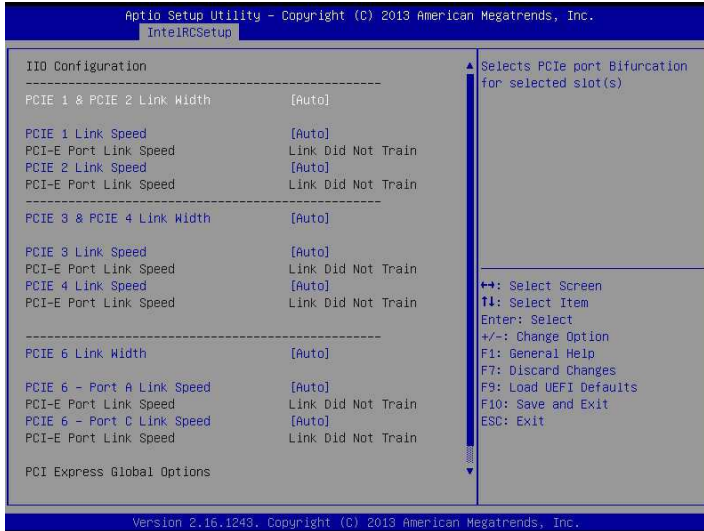

#### PCIe 1 & PCIe 2 Link Width

Use this item to select PCIe port Bifurcation for selected slot(s).

#### PCIe 1 Link Speed

This allows you to select PCIe 1 Link Speed. The default value is [Auto].

#### PCIe 2 Link Speed

This allows you to select PCIe 2 Link Speed. The default value is [Auto].

#### PCIe 3 & PCIe 4 Link Width

Use this item to select PCIe port Bifurcation for selected slot(s).

#### PCIe 3 Link Speed

This allows you to select PCIe 3 Link Speed. The default value is [Auto].

#### PCIe 4 Link Speed

This allows you to select PCIe 4 Link Speed. The default value is [Auto].

#### PCIe 6 Link Width

Use this item to select PCIe port Bifurcation for selected slot(s).

### PCIE 6 - Port A Link Speed

Use this item to configure the link speed between PCIe 6 and IOU, Port A.

### PCIE 6 - Port C Link Speed


Use this item to configure the link speed between PCIe 6 and IOU, Port C.

### PCI-E ASPM Support

This option enables or disables the ASPM support for all downstream device.



### 3.4.5 PCH Configuration

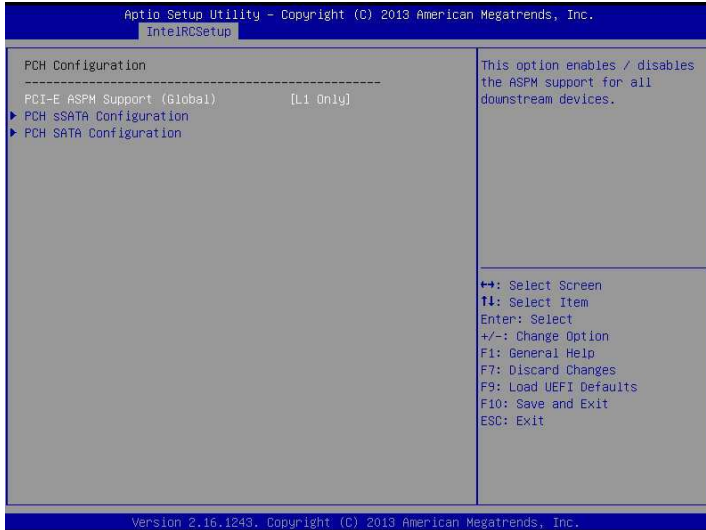

#### PCI-E ASPM Support

Use this option to enable or disable the ASPM support for all downstream devices.

#### PCH sSATA Configuration

sSATA devices and settings

#### sSATA Controller

Use this item to enable or disable SATA Controller.

#### sSATA Mode Selection

Identify the SATA port is connected to Solid State Drive or Hard Disk Drive. Press <Ctrl+I> to enter RAID ROM during UEFI POST process.

#### sSATA Aggressive Link Power Mgmt

Use this item to enable or disable SALP.

#### sSATA Port 0 / 1 / 2 / 3

#### Hot Plug

Designates this port as Hot Pluggable.

## Spin Up Device

If enabled for any of ports, Staggered Spin Up will be performed and only the drives which have this option enabled will spin up at boot. Otherwise all drives spin up at boot.

## sSATA Rx Setting

Adjust sSATA DTLE DATA Values (0-15).

## sSATA Device Type

Identify the SATA port connected to Solid State Drive or Hard Disk Drive.

## PCH SATA Configuration

SATA devices and settings

## SATA Controller

Use this item to enable or disable SATA Controller.

## SATA Mode Selection

Identify the SATA port is connected to Solid State Drive or Hard Disk Drive. Press <Ctrl+I> to enter RAID ROM during UEFI POST process.

## SATA Aggressive Link Power Mgmt

Use this item to enable or disable SALP.

## SATA Port 0 / 1 / 2 / 3

## Hot Plug

Designates this port as Hot Pluggable.

## Spin Up Device

If enabled for any of ports, Staggered Spin Up will be performed and only the drives which have this option enabled will spin up at boot. Otherwise all drives spin up at boot.


## SATA Rx Setting

Adjust SATA DTLE DATA Values (0-15).

## SATA Device Type

Identify the SATA port connected to Solid State Drive or Hard Disk Drive.


### 3.4.6 Server ME Configuration

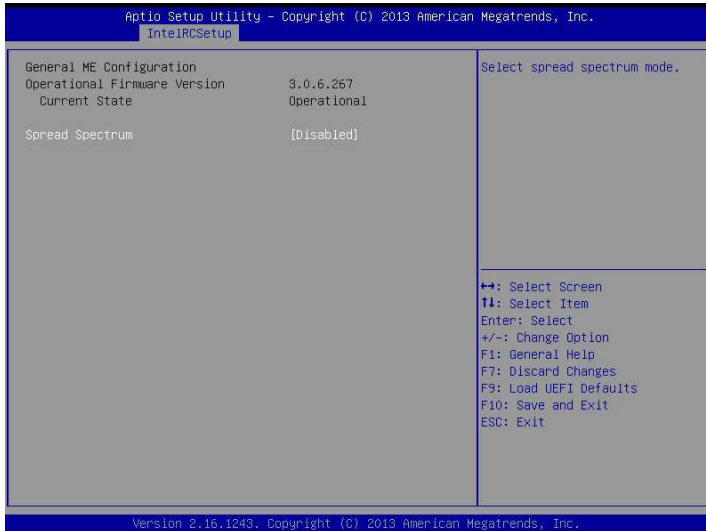

#### Spread Spectrum

Use this item to select spread specturm mode.

## 3.5 Server Mgmt

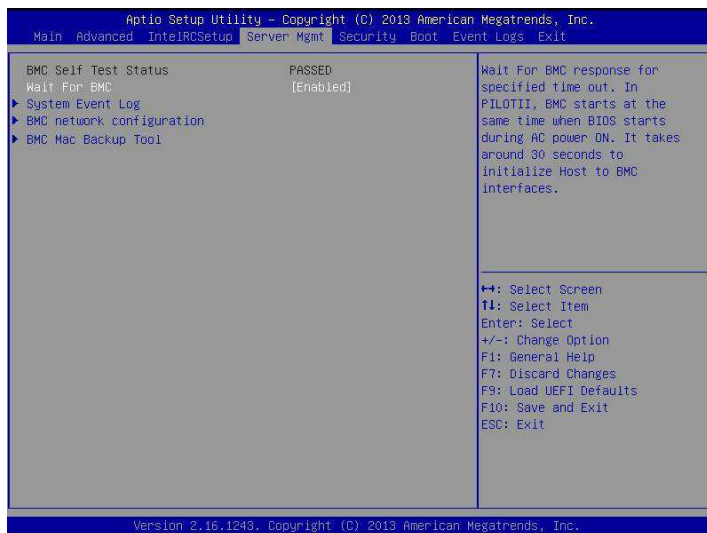

### Wait For BMC

Wait For BMC response for specified time out. In PILOTII, BMC starts at the same time when BIOS starts during AC power ON. It takes around 30 seconds to initialize Host to BMC interfaces.

### System Event Log

Press <Enter> to change the SEL event log configuration.

### SEL Components

Change this to enable or disable all features of System Event Logging during boot.

### Erase SEL

Use this to choose options for erasing SEL.

### When SEL is Full

Use this to choose options for reactions to a full SEL.

### Log EFI Status Codes

Use this item to disable the logging of EFI Status Codes or log only error code or only progress or both.

## BMC Network Configuration

Press <Enter> to configure BMC Network parameters.

### Configuration Address Source

Select to configure BMC network parameters statically or dynamically (by BIOS or BMC).

Configuration options: [Unspecified], [Static], and [Dynamic].

**Unspecified:** BMC network parameters are configured by BMC itself.

**Static:** Manually enter the IP Address, Subnet Mask and Gateway Address in the BIOS for BMC LAN channel configuration.

**Dynamic:** IP address, Subnet Mask and Gateway Address are automatically assigned by the network's DHCP server.

To configure BMC network parameters using the BIOS setup, select either [Static] or [Dynamic] option.

To configure BMC network parameters using the BMC web interface, select [Unspecified] option.



*When [Dynamic] or [Static] is selected, do NOT modify the BMC network settings on the IPMI web page.*



*The default login information for the IPMI web interface is:*

*Username: admin*

*Password: admin*




Please refer to the table below for the LAN interface mapping to check the MAC address through either BIOS or Web interface.

#### BMC LAN Interface Mapping Table

| I/O Panel        | BIOS Menu     | IPMI Web Page |
|------------------|---------------|---------------|
| LAN1 Port (NCSE) | Lan Channel 1 | eth0          |
| IPMI Port        | Lan Channel 2 | eth1          |

#### BIOS Menu


Server Mgmt  
tab

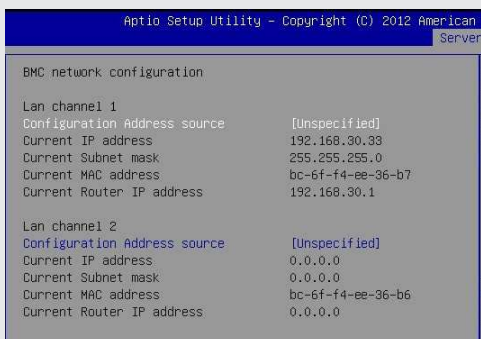

(Example image only)

#### IPMI Web Page

Configuration  
> Network  
Settings

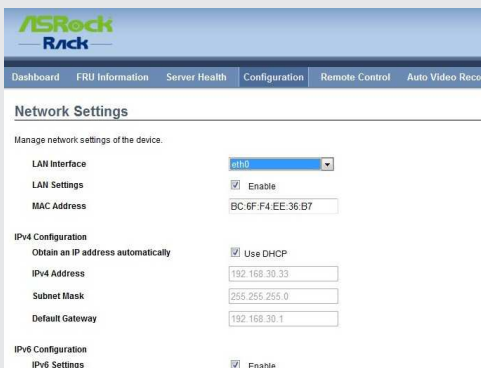

(Example image only)


For more instructions on how to set up remote control environment and use the IPMI management platform, please refer to the IPMI Configuration User Guide or go to the Support website at: <http://www.asrockrack.com/support/ipmi.asp>

## BMC Mac Backup Tool

Use this to restore BMC Mac from the backup.

### 3.6 Security

In this section, you may set or change the supervisor/user password for the system. For the user password, you may also clear it.

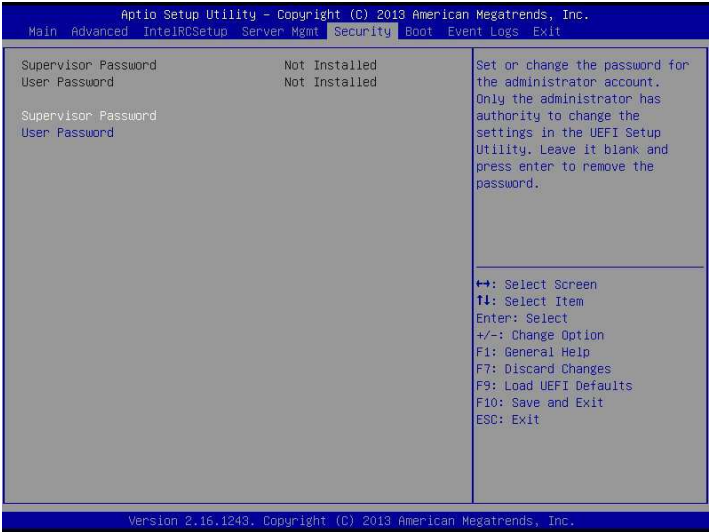

#### Supervisor Password

Set or change the password for the administrator account. Only the administrator has authority to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

#### User Password

Set or change the password for the user account. Users are unable to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.



### 3.7 Boot Screen

In this section, it will display the available devices on your system for you to configure the boot settings and the boot priority.



#### Boot Option #1

Use this item to set the system boot order.

#### Boot From Onboard LAN

Use this item to enable or disable the Boot From Onboard LAN feature.

#### Setup Prompt Timeout

This shows the number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.

#### Bootup Num-Lock

If this item is set to [On], it will automatically activate the Numeric Lock function after boot-up.

#### Boot Beep

Select whether the Boot Beep should be turned on or off when the system boots up. Please note that a buzzer is needed.


## Full Screen Logo

Use this item to enable or disable OEM Logo. The default value is [Enabled].

## AddOn ROM Display

Use this option to adjust AddOn ROM Display. If you enable the option “Full Screen Logo” but you want to see the AddOn ROM information when the system boots, please select [Enabled]. Configuration options: [Enabled] and [Disabled]. The default value is [Enabled].

### 3.8 Event Logs

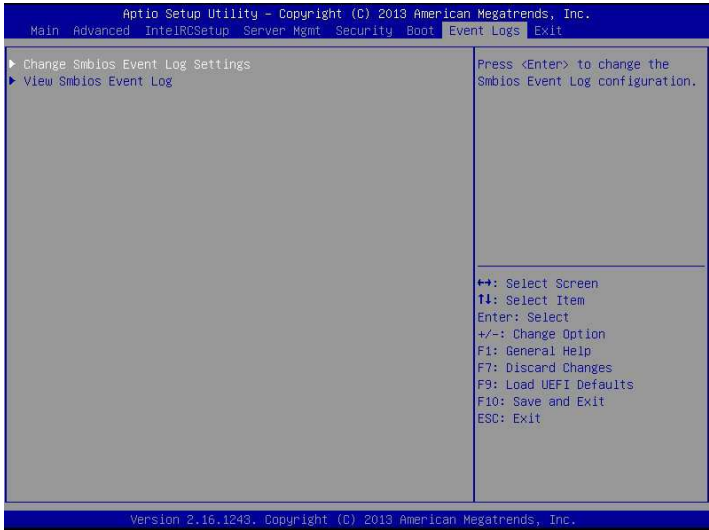

#### Change Smbios Event Log Settings

This allows you to configure the Smbios Event Log Settings.

When entering the item, you will see the followings:

##### **Smbios Event Log**

Use this item to enable or disable all features of the SMBIOS Event Logging during system boot.

##### **Erase Event Log**

The options include [No], [Yes, Next reset] and [Yes, Every reset]. If Yes is selected, all logged events will be erased.

##### **When Log is Full**

Use this item to choose options for reactions to a full Smbios Event Log. The options include [Do Nothing] and [Erase Immediately].

##### **MECI (Multiple Event Count Increment)**

Use this item to enter the increment value for the multiple event counter. The valid range is from 1 to 255.

##### **METW (Multiple Event Time Window)**

Use this item to specify the number of minutes which must pass between duplicate log entries which utilize a multiple-event counter. The value ranges from 0 to 99 minutes.

## View Smbios Event Log

Press <Enter> to view the Smbios Event Log records.



*All values changed here do not take effect until computer is restarted.*

### 3.9 Exit Screen



#### Save Changes and Exit

When you select this option, the following message “Save configuration changes and exit setup?” will pop-out. Press <F10> key or select [Yes] to save the changes and exit the UEFI SETUP UTILITY.

#### Discard Changes and Exit

When you select this option, the following message “Discard changes and exit setup?” will pop-out. Press <ESC> key or select [Yes] to exit the UEFI SETUP UTILITY without saving any changes.

#### Discard Changes

When you select this option, the following message “Discard changes?” will pop-out. Press <F7> key or select [Yes] to discard all changes.

#### Load UEFI Defaults

Load UEFI default values for all the setup questions. F9 key can be used for this operation.

# Chapter 4 Software Support

## 4.1 Install Operating System

This motherboard supports various Microsoft® Windows® Server 2008 R2 SP1 / 2012 / 2012 R2 / Linux compliant. Because motherboard settings and hardware options vary, use the setup procedures in this chapter for general reference only. Refer to your OS documentation for more information.

*\*Please download the Intel® SATA Floppy Image driver from the ASRock Rack's website ([www.asrockrack.com](http://www.asrockrack.com)) to your USB drive or simply install the SATA driver from the Support CD while installing OS in SATA RAID mode.*

## 4.2 Support CD Information

The Support CD that came with the motherboard contains necessary drivers and useful utilities that enhance the motherboard's features.

### 4.2.1 Running The Support CD

To begin using the support CD, insert the CD into your CD-ROM drive. The CD automatically displays the Main Menu if "AUTORUN" is enabled in your computer. If the Main Menu does not appear automatically, locate and double click on the file "ASRSetup.exe" from the root folder in the Support CD to display the menu.

### 4.2.2 Drivers Menu

The Drivers Menu shows the available device's drivers if the system detects installed devices. Please install the necessary drivers to activate the devices.

### 4.2.3 Utilities Menu

The Utilities Menu shows the application softwares that the motherboard supports. Click on a specific item then follow the installation wizard to install it.

### 4.2.4 Contact Information

If you need to contact ASRock Rack or want to know more about ASRock Rack, welcome to visit ASRock Rack's website at <http://www.ASRockRack.com>; or you may contact your dealer for further information.

## Chapter 5 Troubleshooting

### 5.1 Troubleshooting Procedures

Follow the procedures below to troubleshoot your system.



*Always unplug the power cord before adding, removing or changing any hardware components. Failure to do so may cause physical injuries to you and damages to motherboard components.*

1. Disconnect the power cable and check whether the PWR LED is off.
2. Unplug all cables, connectors and remove all add-on cards from the motherboard. Make sure that the jumpers are set to default settings.
3. Confirm that there are no short circuits between the motherboard and the chassis.
4. Install a CPU and fan on the motherboard, then connect the chassis speaker and power LED.

#### **If there is no power...**

1. Confirm that there are no short circuits between the motherboard and the chassis.
2. Make sure that the jumpers are set to default settings.
3. Check the settings of the 115V/230V switch on the power supply.
4. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.

#### **If there is no video...**

1. Try replugging the monitor cables and power cord.
2. Check for memory errors.

#### **If there are memory errors...**

1. Verify that the DIMM modules are properly seated in the slots.
2. Use recommended DDR4 2133 R-DIMMs.
3. If you have installed more than one DIMM modules, they should be identical with the same brand, speed, size and chip-type.
4. Try inserting different DIMM modules into different slots to identify faulty ones.
5. Check the settings of the 115V/230V switch on the power supply.

### **Unable to save system setup configurations...**

1. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.
2. Confirm whether your power supply provides adequate and stable power.

### **Other problems...**

1. Try searching keywords related to your problem on ASRock Rack's FAQ page:  
<http://www.asrockrack.com/support>



## 5.2 Technical Support Procedures

If you have tried the troubleshooting procedures mentioned above and the problems are still unsolved, please contact ASRock Rack's technical support with the following information:

1. Your contact information
2. Model name, BIOS version and problem type.
3. System configuration.
4. Problem description.

You may contact ASRock Rack's technical support at:

<http://www.asrockrack.com/support/tsd.asp>

## 5.3 Returning Merchandise for Service

For warranty service, the receipt or a copy of your invoice marked with the date of purchase is required. By calling your vendor or going to our RMA website (<http://event.asrockrack.com/tsd.asp>) you may obtain a Returned Merchandise Authorization (RMA) number.

The RMA number should be displayed on the outside of the shipping carton which is mailed prepaid or hand-carried when you return the motherboard to the manufacturer. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

This warranty does not cover damages incurred in shipping or from failure due to alteration, misuse, abuse or improper maintenance of products.


Contact your distributor first for any product related problems during the warranty period.

## Chapter 6: Net Framework Installation Guide


To let Intel® RSTe works properly, it is required to install Net Framework. Please follow the steps below to enable “.Net Framework” feature on Microsoft® Windows® Server 2008 R2.

### 6.1 Installing .Net Framework 3.5.1 (For Server 2008 R2)


1. Double-click the Server Manager icon in the Windows system tray.

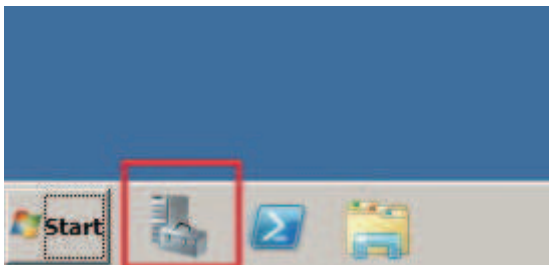


2. Click Add Features in the right hand pane.

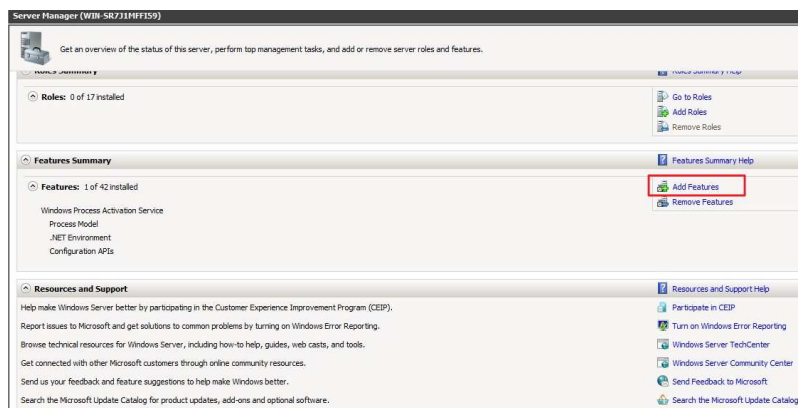


3. Check the box next to .Net Framework 3.5.1 and then click **Next**.

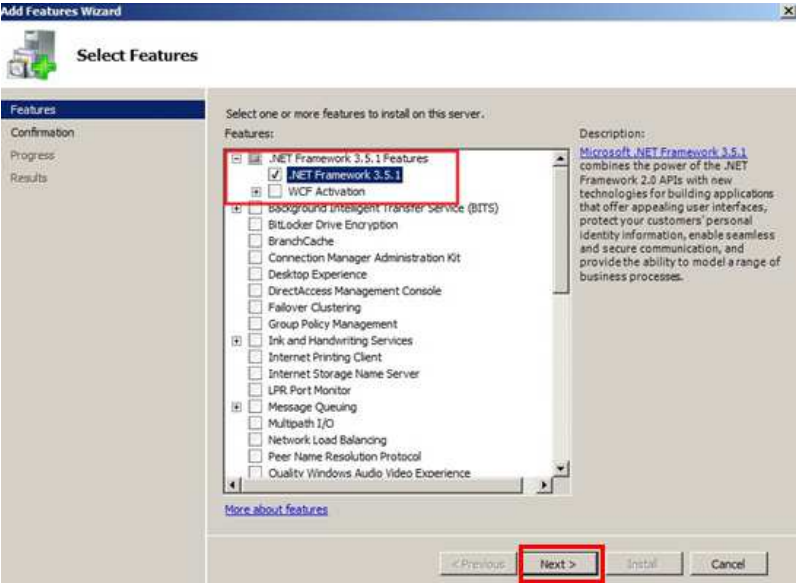

4. Click **Next** to continue.

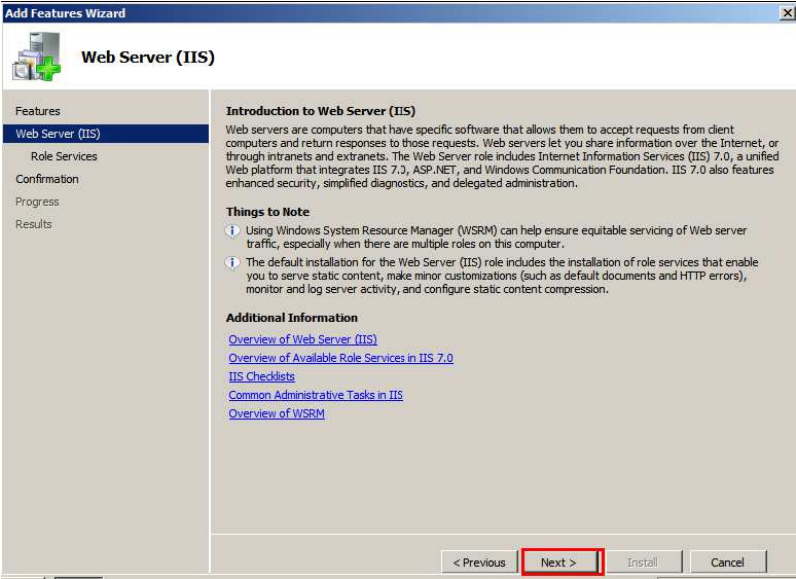

5. Click **Install** to start installing .Net Framework 3.5.1.

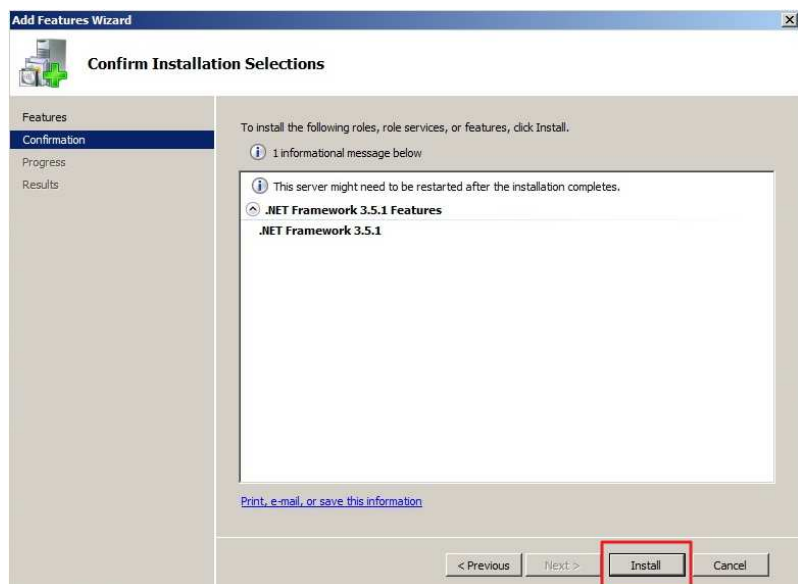

6. After the installation completes, click **Close**.

