

Mx-1000 Series



**Application Guide
for
Mx-1002, Mx-1004, Mx-1008, Mx-1016 & Mx-1032
Conventional Fire Alarm Control Panels
And
Mx-1108, Mx-1116 & Mx-1132 Repeater Panels**

Moorland House : Nelson Park : Cramlington
Northumberland : NE23 1WE
Tel: +44 (0)1670 707 111
Fax: +44 (0)1670 707 222
www.Advel.co.uk Email: Sales@Advel.co.uk



Mx-1000 Series

1 Contents

1	CONTENTS	3
2	INTRODUCTION	6
3	GENERAL DESCRIPTION.....	6
3.1	CABINET SPECIFICATIONS	6
3.1.1	Surface Panel Order Codes & Descriptions.....	7
3.1.2	Semi-flush Panel Order Codes & Descriptions.....	8
3.1.3	Fully Flush Panel Order Codes and Descriptions.....	9
3.2	PANEL DESCRIPTION	10
3.2.1	C1627 16 Zone Motherboard	11
3.2.2	C1632 16 Zone Expansion Board.....	11
3.2.3	C1628 16 Zone Display Board and C1629 32 Zone Display Board.....	11
3.2.4	C1631 Repeater Interface Board.....	11
3.3	PANEL ASSEMBLY.....	12
3.4	PANEL RANGE	13
3.5	REPEATER DESCRIPTION	13
4	FUNCTIONAL SPECIFICATION.....	14
4.1	PANEL INPUT/OUTPUT LIST.....	14
4.2	FEATURES LIST	14
5	C1627 MOTHERBOARD FEATURES.....	16
5.1	C1632 16 ZONE EXPANSION BOARD FEATURES	17
6	POWER SUPPLIES.....	17
6.1	BATTERY CHARGER	17
6.2	VISUAL INDICATIONS	18
6.3	FAULT OUTPUTS.....	18
6.4	BATTERY DISCONNECT	18
6.5	32 ZONE POWER SUPPLY FEATURES AND CONNECTIONS	19
7	COMPATIBLE FIELD DEVICES.....	20
7.1	FIELD DEVICE ORDER CODES & DESCRIPTIONS.....	20
8	OVERVIEW OF USER FUNCTIONS.....	22
8.1	USER INDICATIONS.....	22
8.2	USER CONTROLS	23
8.3	SELECTION OF DETECTION ZONES OR OUTPUTS FOR DISABLEMENT, ENABLEMENT OR TEST	24
8.4	DISABLEMENT/RE-ENABLEMENT OF DETECTION ZONES AND OUTPUTS.....	24
8.5	DETECTOR ZONE ONE MAN TEST	24
8.6	ALARM SOUNDER ONE MAN TEST.....	25
9	OVERVIEW OF ENGINEERS FUNCTIONS.....	25
9.1	ENGINEER'S CONFIGURATION PROCESS	25
9.1.1	Zone/Output Delay Configuration.....	25
9.1.2	Other Configurable Features	25
9.2	CONFIGURABLE DETECTION ZONES	25
9.3	DELAY ZONE CONFIGURATION	26
9.4	STANDARD OR INTRINSICALLY SAFE ZONE.....	26
9.5	SHORT CIRCUIT FIRE CONFIGURATION	26
9.6	THE DELAY MODE FEATURE.....	26
9.7	CONFIGURE DELAY ZONES.....	26
9.8	1 – 2 STAGE DELAY	26
9.9	SELECTION OF OUTPUTS TO BE DELAYED.....	27
9.10	SELECTABLE ZONAL OR GENERAL ALARM SOUNDER OPERATION.....	27
9.11	PULSE NON-ALARM ZONES.....	27

9.12	INHIBIT FIRE PROTECTION ON NON-LATCHED ZONE	27
9.13	DELAY ALARM SILENCE AND RESET	27
9.14	ALARMS ON EVACUATE ONLY	27
9.15	SILENCE BEFORE RESET	27
9.16	SILENT ZONE TEST	28
9.17	BUZZER DISABLE	28
9.18	LATCHED FAULTS.....	28
9.19	REPEATER CONFIGURATION	28
9.20	OUTPUT RELAY CONFIGURATION.....	28
9.21	EARTH FAULT MONITORING.....	28
10	PANEL REPEATERS.....	28
11	CIRCUIT CONNECTION DETAILS.....	29
11.1	2-16 ZONE MOTHERBOARD TERMINATION DETAILS	29
11.2	16 ZONE EXPANSION BOARD TERMINATION DETAILS.....	29
11.3	AUXILIARY SUPPLY.....	29
11.4	FIRE ROUTING, FIRE PROTECTION AND FAULT ROUTING OUTPUTS	30
11.5	USE OF AUXILIARY INPUTS	31
11.6	SOUNDER CIRCUITS.....	32
12	ELECTRICAL DESIGN OF DETECTION ZONES.....	33
12.1	MAXIMUM NUMBER OF DEVICES ON A ZONE	33
13	C1651 TIMER MODULE - GENERAL.....	33
13.1	CLOCK MODULE FUNCTIONALITY	33
13.2	CLOCK MODULE EDIT FACILITY	34
13.2.1	<i>Clock Module – User Control/Editing.....</i>	<i>34</i>
13.2.2	<i>Clock Module Engineer's Editing and Configuration</i>	<i>34</i>
13.3	C1651 CLOCK MODULE PCB FEATURES	35
14	MECHANICAL, ELECTRICAL AND ENVIRONMENTAL SPECIFICATIONS	36
15	INPUT AND OUTPUT SPECIFICATION	39
16	APPENDIX.....	41
16.1	EN54 OPTIONAL FUNCTIONS WITH REQUIREMENTS.....	41
16.2	ADDITIONAL FUNCTIONS RELATING TO EN54.....	41
16.3	ANCILLARY FUNCTIONS NOT REQUIRED BY EN54	41
16.4	POWER SUPPLY LOAD CALCULATION	42
16.5	BATTERY STANDBY CAPACITY CALCULATION.....	42
16.6	PANEL CONFIGURATION DESIGN CHART.....	44
	FIGURE 1 – MX-1000 SERIES EXTERNAL VIEW – SURFACE BOXES	6
	FIGURE 2 – MX-1000 SERIES EXTERNAL VIEW – SEMI FLUSH BOXES.....	8
	FIGURE 3 – MX-1000 SERIES EXTERNAL VIEW – FULLY FLUSH BOXES	9
	FIGURE 4 - 2/4 ZONE PANEL MAIN COMPONENTS.....	10
	FIGURE 5 – 8/16 ZONE PANEL MAIN COMPONENTS	10
	FIGURE 6 - 32 ZONE PANEL MAIN COMPONENTS.....	11
	FIGURE 7 - 2/4 ZONE PANEL – GENERAL ASSEMBLY [WITH OPTIONAL CLOCK/TIME MODULE].....	12
	FIGURE 8 – 8/16 ZONE PANEL – GENERAL ASSEMBLY [WITH OPTIONAL CLOCK/TIME MODULE]	12
	FIGURE 9 - 32 ZONE PANEL – GENERAL ASSEMBLY [WITH OPTIONAL CLOCK/TIME MODULE]	13
	FIGURE 10 – C1627 MOTHERBOARD LAYOUT	16
	FIGURE 11 – 32 ZONE POWER SUPPLY LAYOUT.....	19
	FIGURE 12 - C1627 FIELD TERMINATION.....	29
	FIGURE 13 - C1632 16 ZONE EXPANSION BOARD FIELD TERMINATION.....	29
	FIGURE 14 – FIRE ROUTING, FIRE PROTECTION AND FAULT ROUTING CONNECTIONS.....	30
	FIGURE 15 – RESET RELAY CONTACT CONNECTION DETAILS	31
	FIGURE 16 – AUXILIARY I/P CONNECTION DETAIL	31
	FIGURE 17 – ALARM CIRCUIT CONFIGURATION	32

FIGURE 18 – C1651 CLOCK MODULE PCB.....	35
FIGURE 19 - TYPICAL WIRING DIAGRAM.....	36
TABLE 1 - MOTHERBOARD DIL SWITCH CONFIGURATION DESIGN/RECORD.....	44
TABLE 2 - ZONE CONFIGURATION DESIGN/RECORD.....	45
TABLE 3 - OUTPUT DELAY CONFIGURATION DESIGN/RECORD.....	46

2 Introduction

This document contains Mx-1000 Series control panel data necessary for application design.

The following supporting documentation is also available:

- Mx-1000 Series Sales Literature
- Mx-1000 Series User Manual (Doc. No. 680-072).
- Mx-1000 Series Installation and Commissioning Manual (Doc. No. 680-071).
- Mx-1000 Series Log Book (Doc. No. 680-076).
- Wiring Recommendations

3 General Description

The Mx-1000 Series Panel range is fully compliant with the mandatory requirements and selected optional requirements of EN54-2 and 4 as well as the relevant requirements of BSEN5839-1: 2002.

The Mx-1000 Series equipment range:

- Panels: 2, 4, 8, 16 and 32 zone versions.
- Repeater: 2 to 8, 16 and 32 zone versions.


A system comprises of the following:

- One off Mx-1000 Series 2, 4, 8, 16 or 32 zone fire detection and alarm panel.
- Up to 5 off Repeater Panels [2 to 8, 16 or 32 zone variants].

Each panel in the range is housed in a single metal enclosure incorporating a door-mounted display board fitted with a polyester overlay providing user controls and indications. User controls are locked/unlocked via a key-switch. All indications are implemented using LEDs. The power supply and standby batteries are housed within the panel enclosure.

3.1 Cabinet Specifications

Figure 1 – Mx-1000 Series External View – Surface Boxes

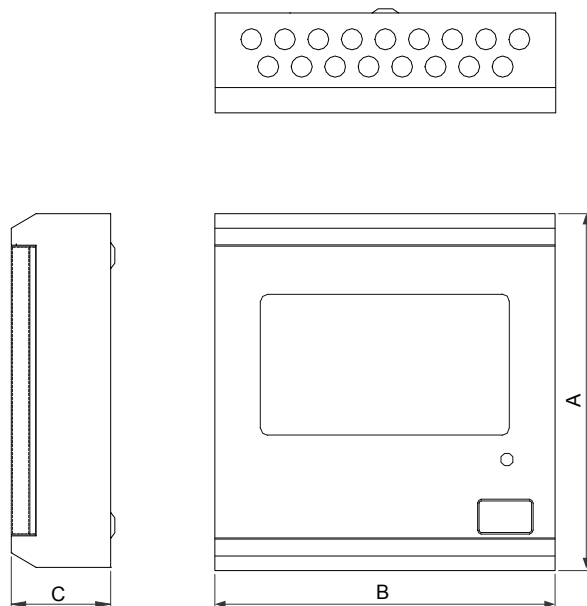


	2/4 Zone Panel	8/16 Zone Panel	32 Zone Panel	8/16 Zone Repeater	32 Zone Repeater
Top entry 20mm knock outs	17	26	32	17	32
Dim A [mm]	340	370	441	340	441
Dim B [mm]	325	325	400	325	400
Dim C [mm]	95	126	131	95	131

3.1.1 Surface Panel Order Codes & Descriptions

Part Number	Description
Mx-1002	2 Zone Panel
Mx-1004	4 Zone Panel
Mx-1008	8 Zone Panel
Mx-1016	16 Zone Panel
Mx-1032	32 Zone Panel
Contact Sales	8 Zone Repeater with Power Supply
Contact Sales	16 Zone Repeater with Power Supply
Contact Sales	32 Zone Repeater with Power Supply
Mx-1108	8 Zone Repeater without Power Supply
Mx-1116	16 Zone Repeater without Power Supply
Mx-1132	32 Zone Repeater without Power Supply

Note: Contact Sales for current list of language options.

Figure 2 – Mx-1000 Series External View – Semi Flush Boxes

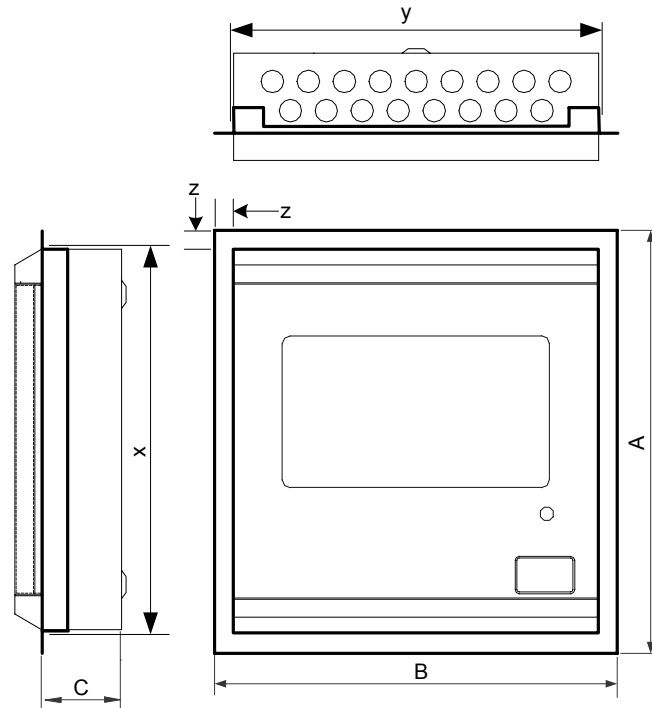


	2/4 zone	8/16 zone	32 zone	8/16 zone repeater	32 zone repeater
Top entry 20mm knock outs	17	26	32	17	32
Dim A [mm]	403	433	504	403	504
Dim B [mm]	388	388	463	388	463
Dim C [mm]	69	100	105	69	105
Dim x [mm] Hole height	350	380	451	350	451
Dim y [mm] Hole width	340	340	415	340	415
Dim z [mm]	30	30	30	30	30

3.1.2 Semi-flush Panel Order Codes & Descriptions

Part Number	Description
Contact Sales	Semi-flush bezel to fit 2/4 zone control panels
Contact Sales	Semi-flush bezel to fit 8 & 16 zone control panels
Contact Sales	Semi-flush bezel to fit 32 zone control panel

Figure 3 – Mx-1000 Series External View – Fully Flush Boxes

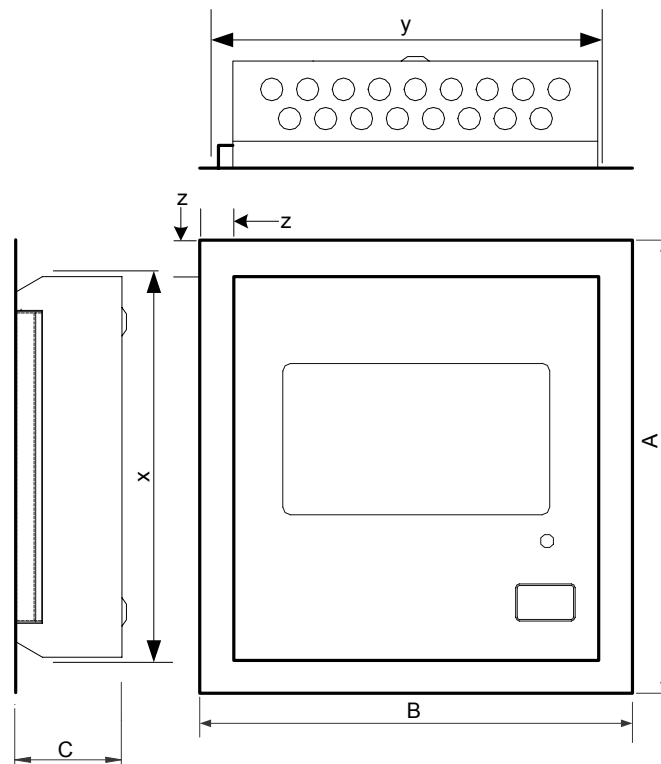

	2/4 zone	8/16 zone	32 zone	8/16 zone repeater	32 zone repeater
Top entry 20mm knock outs	17	26	32	17	32
Dim A [mm]	381	411	482	381	482
Dim B [mm]	428	428	503	428	503
Dim C [mm]	95	126	131	95	131
Dim x [mm] Hole height	350	380	451	350	451
Dim y [mm] Hole width	380	380	455	380	455
Dim z [mm]	50	50	50	50	50

3.1.3 Fully Flush Panel Order Codes and Descriptions

Part No	Description
Contact Sales	Fully-flush painted bezel to fit 2/4 zone panels (painted to customer's specification)
Contact Sales	Fully-flush stainless steel bezel to fit 2/4 zone panels (brushed or polished)
Contact Sales	Fully-flush brass bezel to fit 2/4 zone panels (brushed or polished)
Contact Sales	Fully-flush painted bezel to fit 8/16 zone panels (painted to customer's specification)
Contact Sales	Fully-flush stainless steel bezel to fit 8/16 zone panels (brushed or polished)
Contact Sales	Fully-flush brass bezel to fit 8/16 zone panels (brushed or polished)
Contact Sales	Fully-flush painted bezel to fit 32 zone panel (painted to customer's specification)
Contact Sales	Fully-flush stainless steel bezel to fit 32 zone panel (brushed or polished)
Contact Sales	Fully-flush brass bezel to fit 32 zone panel (brushed or polished)

3.2 Panel Description

The panels consist of the modules shown in the internal views depicted in Figure 4, Figure 5 and Figure 6.

Figure 4 - 2/4 Zone Panel Main Components

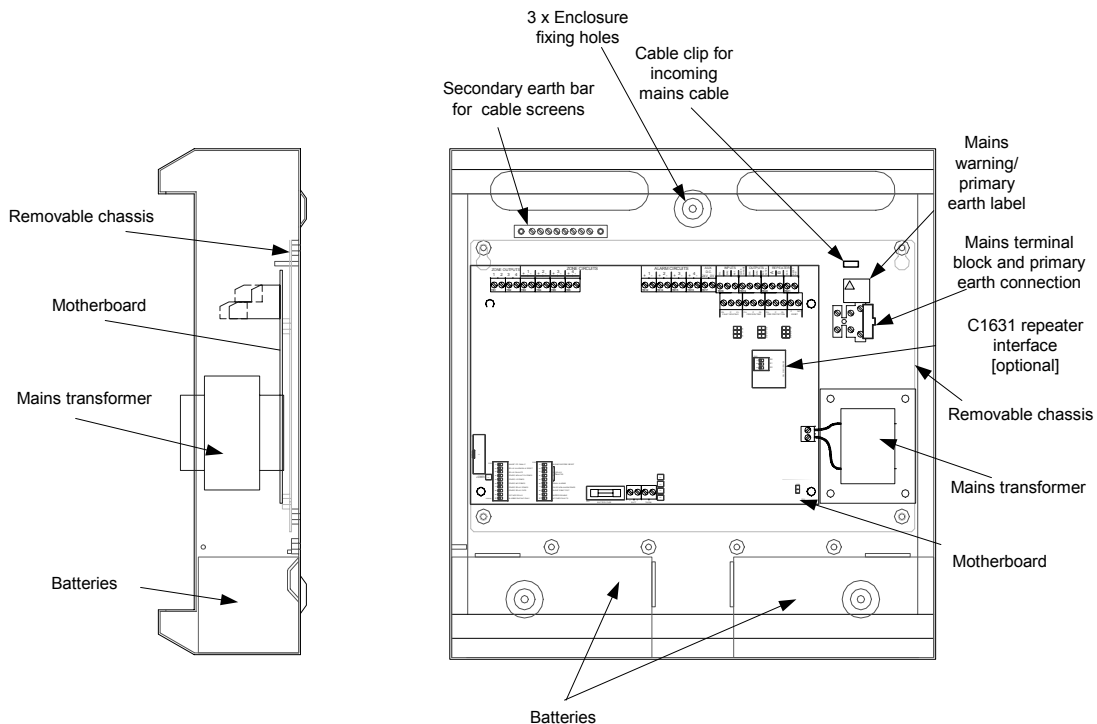


Figure 5 – 8/16 Zone Panel Main Components


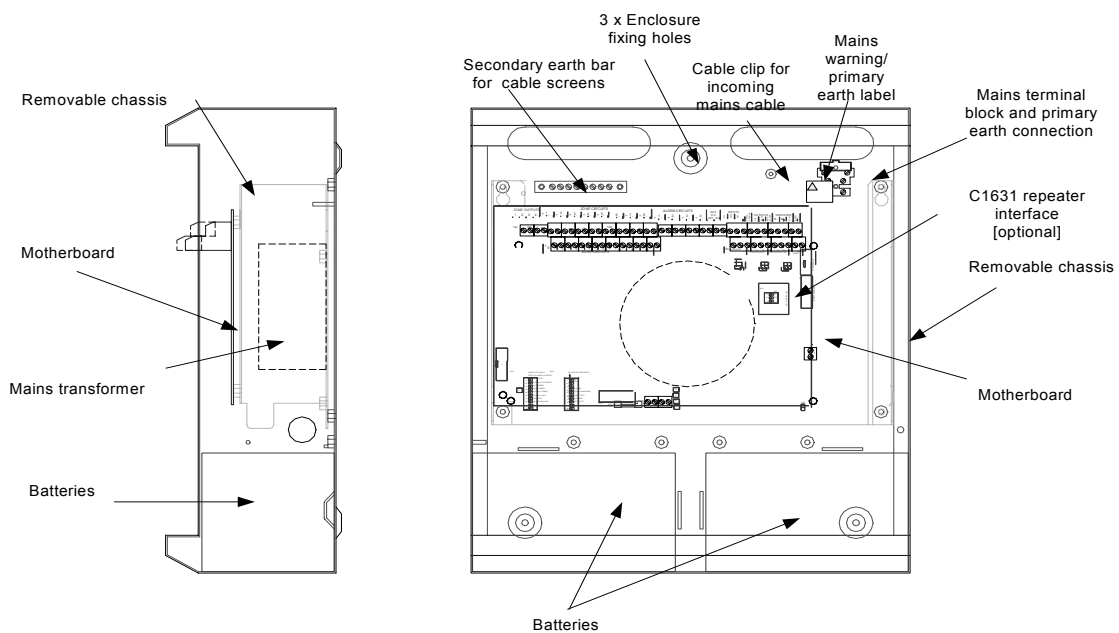


Figure 6 - 32 Zone Panel Main Components

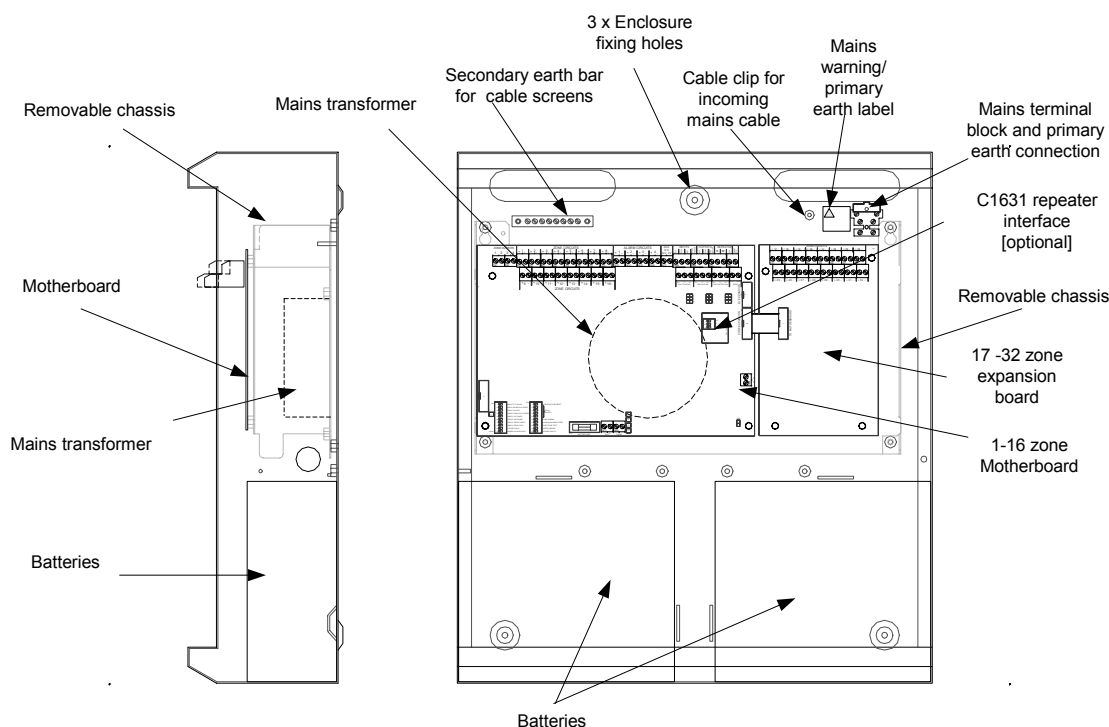

3.2.1 C1627 16 Zone Motherboard

This board is common to the 2, 4, 8, 16 and 32-zone panels. It is also used, in a depopulated form, as the motherboard for the range of repeaters.

It provides terminals for all the field wiring, interface connectors for the repeater, zonal expansion connectors and connections to the display board. The power supply components for all panels (and mains powered repeaters) except the 32-zone panel are located on this PCB. The microcontroller (including Firmware and RAM) and all of the site-specific configuration features (DIL switch & EEPROM) are accommodated on this board.

3.2.2 C1632 16 Zone Expansion Board

This board provides an additional 16 detection zones. It is connected to the C1627 motherboard via a ribbon cable to provide a total of 32 zones for the 32-zone panel.

3.2.3 C1628 16 Zone Display Board and C1629 32 Zone Display Board.

These boards provide visible [LED] user indications and user buttons. The display board connects to the motherboard via a ribbon cable.

3.2.4 C1631 Repeater Interface Board

This optional plug-in board provides an RS485 capability for communication with up to 5 repeaters and is fitted to the C1627 motherboard via two connectors. One C1631 needs to be fitted to the fire alarm panel and one to each repeater.

3.3 Panel assembly

See exploded general assembly drawings Figure 7, Figure 8 and Figure 9.

Figure 7 - 2/4 Zone Panel – General Assembly [with optional clock/time module]

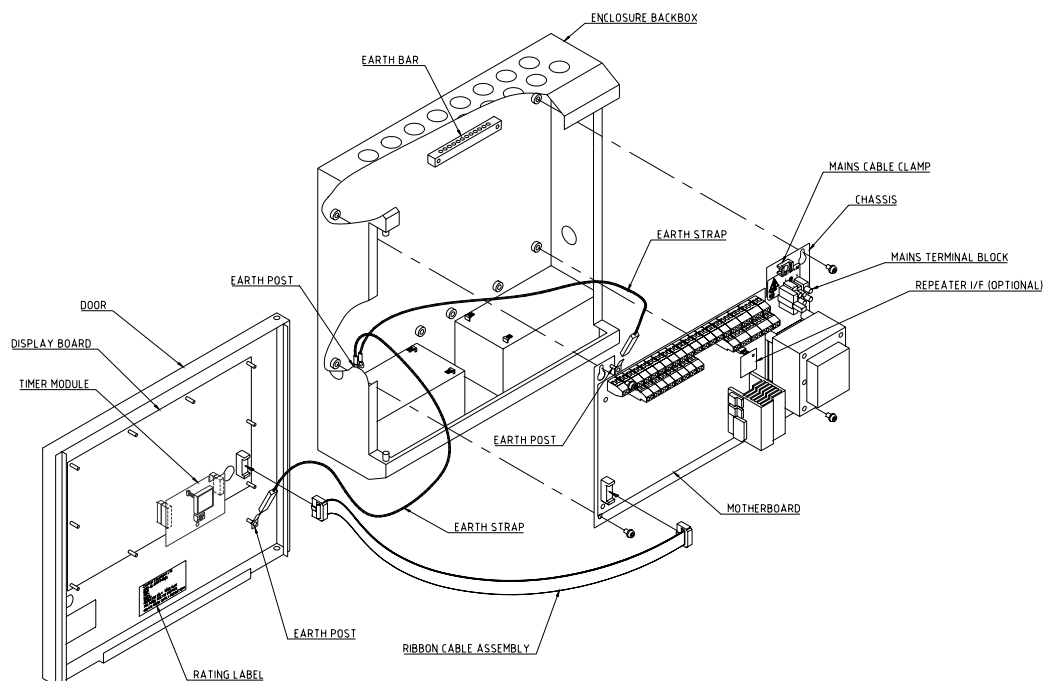


Figure 8 – 8/16 Zone Panel – General Assembly [with optional clock/time module]


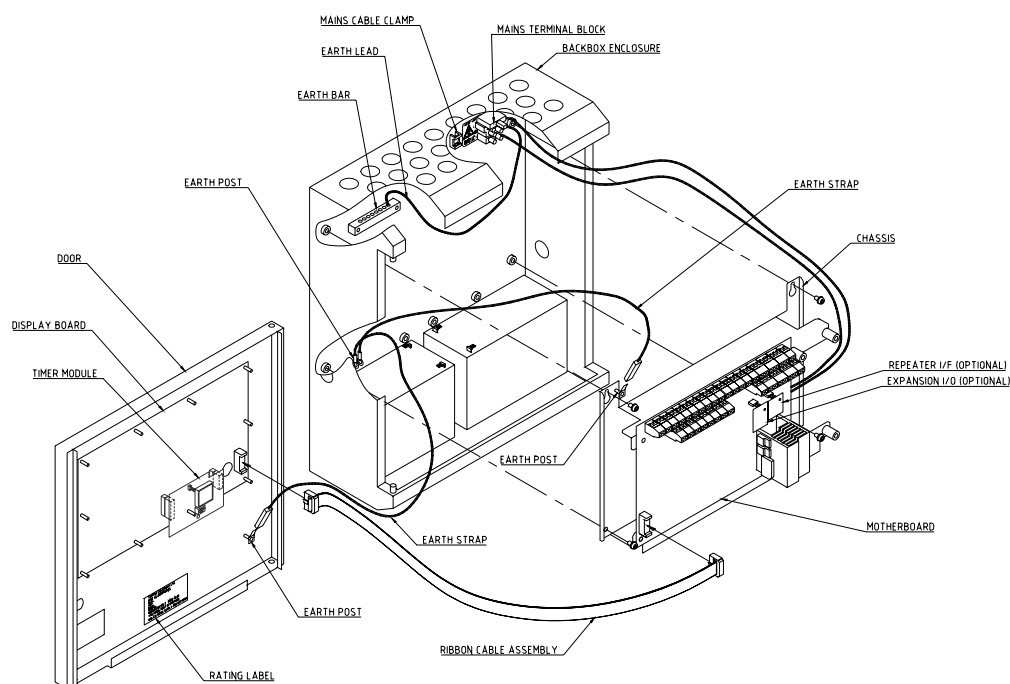


Figure 9 - 32 Zone Panel – General Assembly [with optional clock/time module]

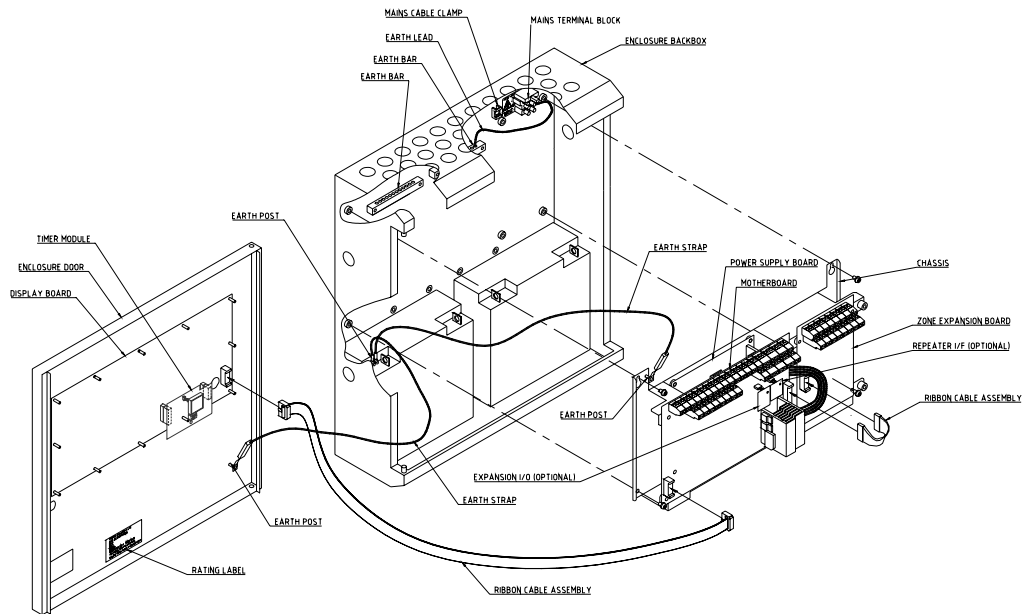

3.4 Panel Range

Panel	Enclosure Type and Dimensions [H x W x D mm]	PSU	Internal SLA Battery
2/4 zone	1 [340 x 325 x 95]	1.5 A, 230V AC	24V 3 Ah
8 zone	2 [370 x 325 x 126]	3 A, 230V AC	24V 12 Ah
16 zone	2 [370 x 325 x 126]	3 A, 230V AC	24V 12 Ah
32 zone	3 [441 x 400 x 131]	5 A, 230V AC	24V 18 Ah

3.5 Repeater Description

The repeater consists of the same PCB modules and enclosures as used in the fire alarm panel. The components for the redundant motherboard I/O [zones, alarm circuits etc] are not fitted to the repeater motherboard. The mechanical arrangement is identical. The C1631 Repeater interface card must be fitted to the repeater motherboard.

Repeater	Enclosure Type and Dimensions [H x W x D mm]	Display	Motherboard [Repeater version]	PSU	Internal SLA Battery
2-8 zone	1 [340 x 325x95]	C1628	C1627	1.5 A, 230V AC	24V 3 Ah
16 zone	1 [340 x 325x95]	C1628	C1627	1.5 A, 230V AC	24V 3 Ah
32 zone	3 [441 x 400x131]	C1629	C1627	1.5 A, 230V AC	24V 3 Ah

4 Functional Specification

4.1 Panel Input/Output List

Input/Output	Mx-1000 Series Panel				
	2 zone	4 zone	8 zone	16 zone	32 zone
Detection zones	2	4	8	16	32
Remote silence alarm I/P [non monitored]	1	1	1	1	1
Remote reset I/P [non –monitored]	1	1	1	1	1
Remote evacuate I/P [non –monitored]	1	1	1	1	1
Class change I/P [non –monitored]	1	1	1	1	1
Sounder circuits	2 @ 0.5A	4 @ 0.5A	4 @ 1A	4 @ 1A	4 @ 1A
Zonal O/Ps [open collector]	2	4	[Later]	[Later]	[Later]
Disablement active [open collector]	1	1	1	1	1
Evacuate active [open collector]	1	1	1	1	1
Buzzer active [open collector]	1	1	1	1	1
Monitored Fire Routing O/P	1	1	1	1	1
Monitored Fire Protection O/P	1	1	1	1	1
Monitored Fault Routing O/P	1	1	1	1	1
Volt free reset relay	1	1	1	1	1
Aux DC Supply [fused]	1 @ 0.5 A	1 @ 0.5 A	1 @ 1 A	1 @ 1 A	1 @ 1 A
Repeater facility	Optional	Optional	Optional	Optional	Optional

4.2 Features List

Switching regulator power supplies with temperature compensated battery charging

High efficiency voltage regulation. Battery charging voltage is automatically adjusted between 28.25 and 26.72 V DC over an ambient temperature range of –10 to +50 deg C.

Battery disconnect

Protects the battery from permanent damage due to over discharge by automatically disconnecting it when the battery voltage falls to 19.5V.

Class change input

Operates all sounders for up to 5 seconds.

Configurable detection zones

Simple and flexible display-based configuration process allowing detection zones to be configured for any of the following:

Latching or non-latching Fire indication.

Delayed or non-delayed Output operation.

Normal or Intrinsically-Safe zone monitoring.

Short Circuit = Fault or Short Circuit = Fire

Factory configuration: Latching, non-delay, standard [non-I.S.], S/C = Fault.

Active fault monitoring on detection zones. [Non – Intrinsically Safe applications only]

Reduces zone monitoring current and therefore reduces the required battery capacity.

Maintains zone wiring continuity following the removal of a detector, while still providing a fault indication on the panel.

Selectable Zonal or General alarm sounder operation with sounders in alert or silent in adjacent zones.

Selectable via DIL switches on the motherboard.

The standard sounders on the 2 and 4 zone panels can be used in General or Zonal modes. [These sounders always operate in General mode on 8, 16 and 32 zone panels regardless of DIL switch setting].


The output expansion system [later] provides additional sounder circuits for General or Zonal use on the 8, 16 and 32 zone panels.

Configurable Fire Routing, Fire Protection and Fault Routing output relays	<p>Configuration Links on the motherboard allow each Output Relay to be individually selected to the EN54 powered/fault-monitored mode or non-EN54-compliant volt-free changeover contacts.</p> <p>Factory configuration:- Fully Monitored (EN54 Mode).</p>
Reset Relay	A volt-free changeover contact operating for 10 seconds on panel fire alarm reset.
Auxiliary 24V DC power supply output	Protected by an electronic fuse. Operation of the fuse is indicated on the display. The fuse is reset by pressing the Reset button on the display.
Open collector outputs	<p>Evacuate active.</p> <p>Buzzer Active.</p> <p>Disablement Active.</p> <p>Zonal fire for each zone up to zone 4 [Zonal output expansion on 8-32 zone versions via output boards later].</p>
Remote inputs	<p>Remote Evacuate.</p> <p>Remote Silence Alarms.</p> <p>Remote Reset.</p>
Earth Fault monitoring	Can be disabled via link on the motherboard.
Zone/Output disablement feature	<p>The following circuits can be independently disabled/enabled:</p> <p>Each Zone</p> <p>Fire Routing</p> <p>Fire Protection</p> <p>Fault Routing</p> <p>All Sounders</p>
One Man Zone Test	Each zone can be independently set to the One Man test condition. Sounders can be configured to either operate briefly to confirm the panel has detected the test fire, or no sounder operation during the test fire.
One Man Sounder Test	Operates the sounders intermittently.
Configurable Delay Mode Facility	<p>Flexible system allows:</p> <p>Any zone to be configured as a delay zone.</p> <p>Single-stage or two-stage delay.</p> <p>Selectable 1 to 10 minute delay period [for single-stage and two-stage delay modes].</p> <p>Selection of the outputs to be delayed [Fire Routing and/or Fire Protection and/or Sounders] – can be any combination.</p>
Clock Module [Optional]	<p>Plug in LCD unit providing:</p> <p>Day/night delay control with or without fire event counter.</p> <p>Time of fire event with or without fire event counter.</p>
Other configuration features	<p>Prevent the Fire Protection output operating from a fire condition on a "Non-Latch" zone.</p> <p>Inhibit the silencing and resetting of the panel for 3 minutes following the occurrence of a fire alarm.</p> <p>Set the sounders to operate only when the panel is in the Evacuate condition.</p> <p>Inhibit the resetting of the fire alarm condition until the alarm sounders have been silenced.</p> <p>Disable the internal panel buzzer.</p> <p>Select latching fault mode where all fault conditions latch until the panel is manually reset.</p> <p>Restore factory default configuration of zones and outputs to be delayed.</p>
Repeater panels	Support for up to 5 repeater panels via two-wire RS485 serial communication.


5 C1627 Motherboard Features

Figure 10 illustrates the motherboard features referred to elsewhere in the documentation.

Figure 10 – C1627 Motherboard Layout

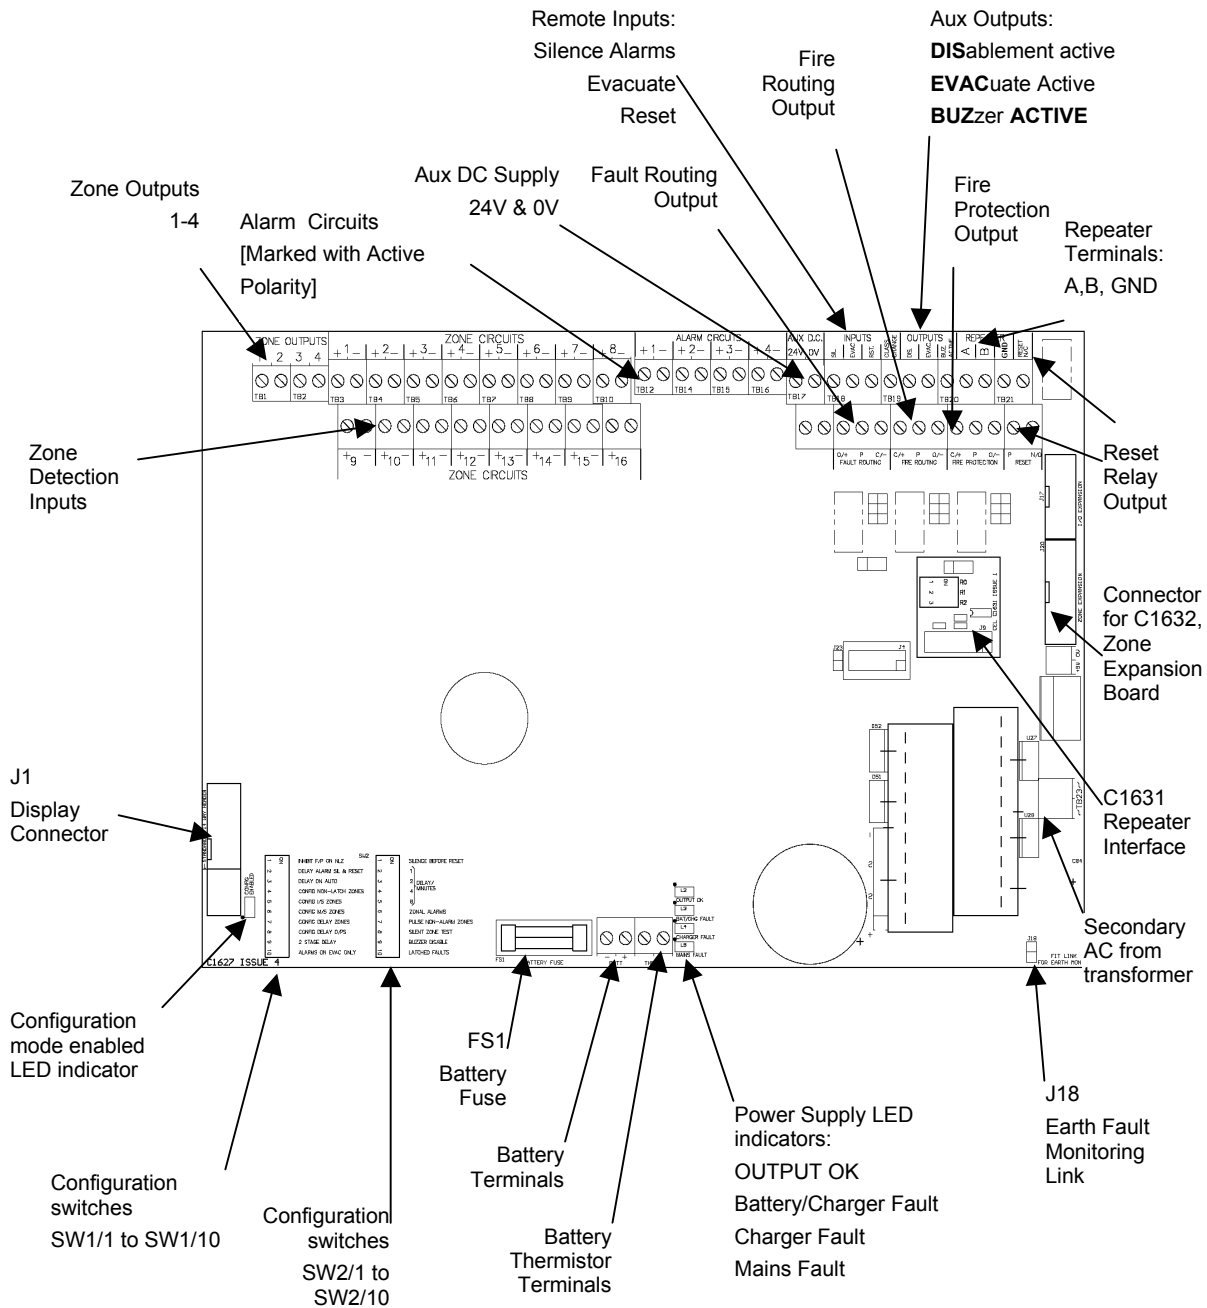

5.1 C1632 16 Zone Expansion Board Features

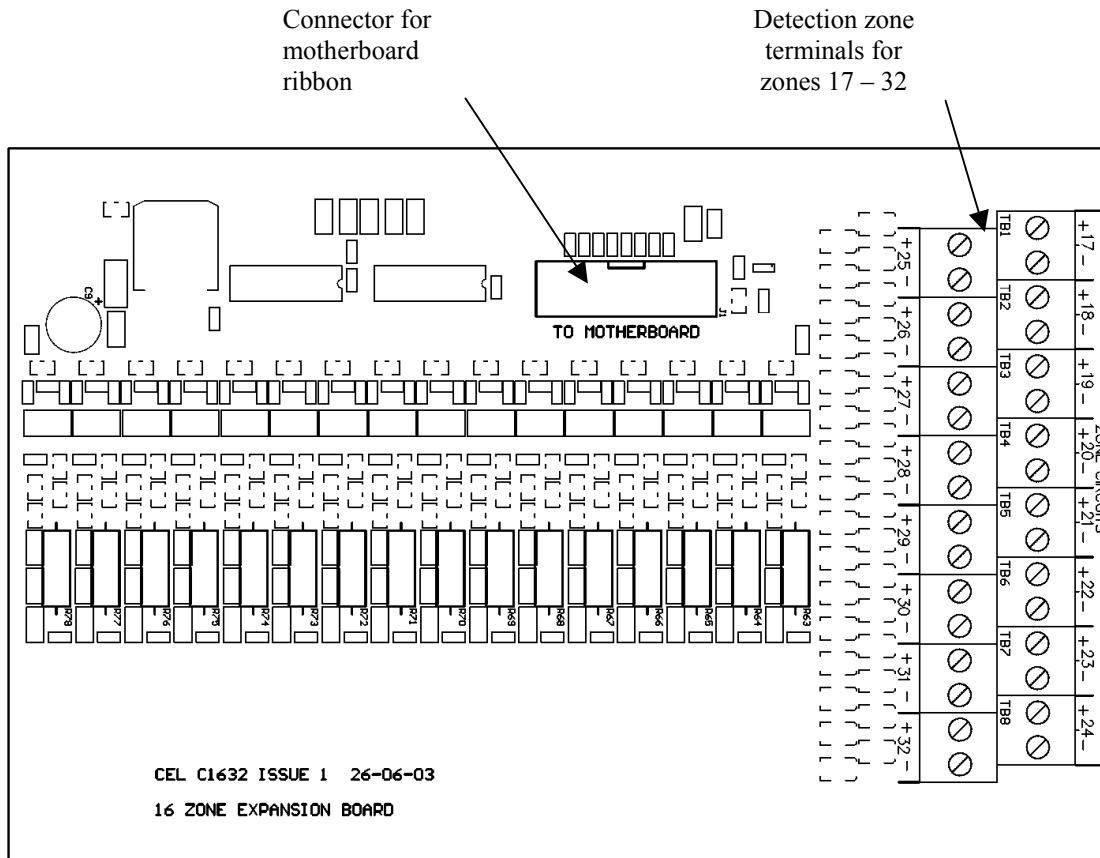

6 Power Supplies

The 1.5 A, 3 A and 5 A power supplies provide 27.1V nominal at load currents of up to 1.5A, 3A and 5A respectively and are designed in accordance with the requirements of EN54-4.

The Mx-1002, Mx-1004, Mx-1008 and Mx-1016 power supplies are contained on the C1631 motherboard. [see Figure 10]. The Mx-1032 panel power supply is on a separate board [C1652] mounted inside the fire alarm panel enclosure. See Figure 11.

6.1 Battery Charger

Each power supply provides a temperature-compensated charging voltage for two series-connected sealed-lead-acid 12V batteries. Charging voltage range is 26.72V @ 50°C to 28.25V @ -10°C.

Battery sizes are:

2 off 12V, 3Ah for the 1.5A supply

2 off 12V, 7Ah or 12 Ah for the 3A supply

2 off 12V, 18Ah for the 5A supply

The charger periodically checks to see if the battery is connected. If not, the Battery/Charge Fault is latched, illuminating the Batt/Charge fault LED and setting the Common Fault output into a high-impedance state.

The charger periodically carries out a battery load test. If the battery voltage is seen to fall the Battery/Charge Fault is latched, illuminating the Batt/Charge fault LED and setting the Common Fault output into a high-impedance state.

6.2 Visual indications

The following visual indications are provided on the power supply:

- 1) A green '**Output – OK**' LED. This simply denotes that power is being supplied to the load
- 2) A yellow '**Batt Charge Fault**' LED denoting any one of the following conditions:
 - a) Battery disconnected
 - b) Battery fuse blown
 - c) Low Battery voltage
- 3) A yellow '**Charger Fault**' LED. This denotes that the switching regulator has stopped working. This could be due to the following reasons:
 - a) Switching regulator is malfunctioning
 - b) The power supply output voltage has been incorrectly set to a value less than the terminal voltage of the batteries
- 4) A yellow '**Mains Fault**' LED. This denotes that the mains voltage has failed or is less than the required minimum for correct operation of the power supply.

6.3 Fault Outputs

The following fault outputs are provided via open-collector logic type outputs capable of sinking a maximum of 40mA @ 28VDC:

- 1) **Common Fault output.** This is normally low (no faults present) and goes high-impedance for any of the conditions listed in points 2, 3 and 4 under 'Visual indications' above.
- 2) **Mains Fault output.** This is normally low and goes high-impedance for any condition listed in point 4 under 'Visual indications' above.

Note: Fault outputs do not become active for a minimum of 10 seconds after the fault has occurred. This eliminates spurious outputs caused by such conditions as momentary brownouts on the mains supply.

6.4 Battery Disconnect


The power supply provides a battery disconnect facility that disconnects the batteries when the battery terminal voltage falls below 19.5V. This will occur under the following conditions:

- 1) A short circuit across the battery terminals
- 2) To prevent deep discharge of the batteries if supplying the panel for an abnormally long period of time.

6.5 32 Zone Power Supply Features And Connections

Figure 11 shows the layout of the panel power supply.

Figure 11 – 32 Zone Power Supply Layout

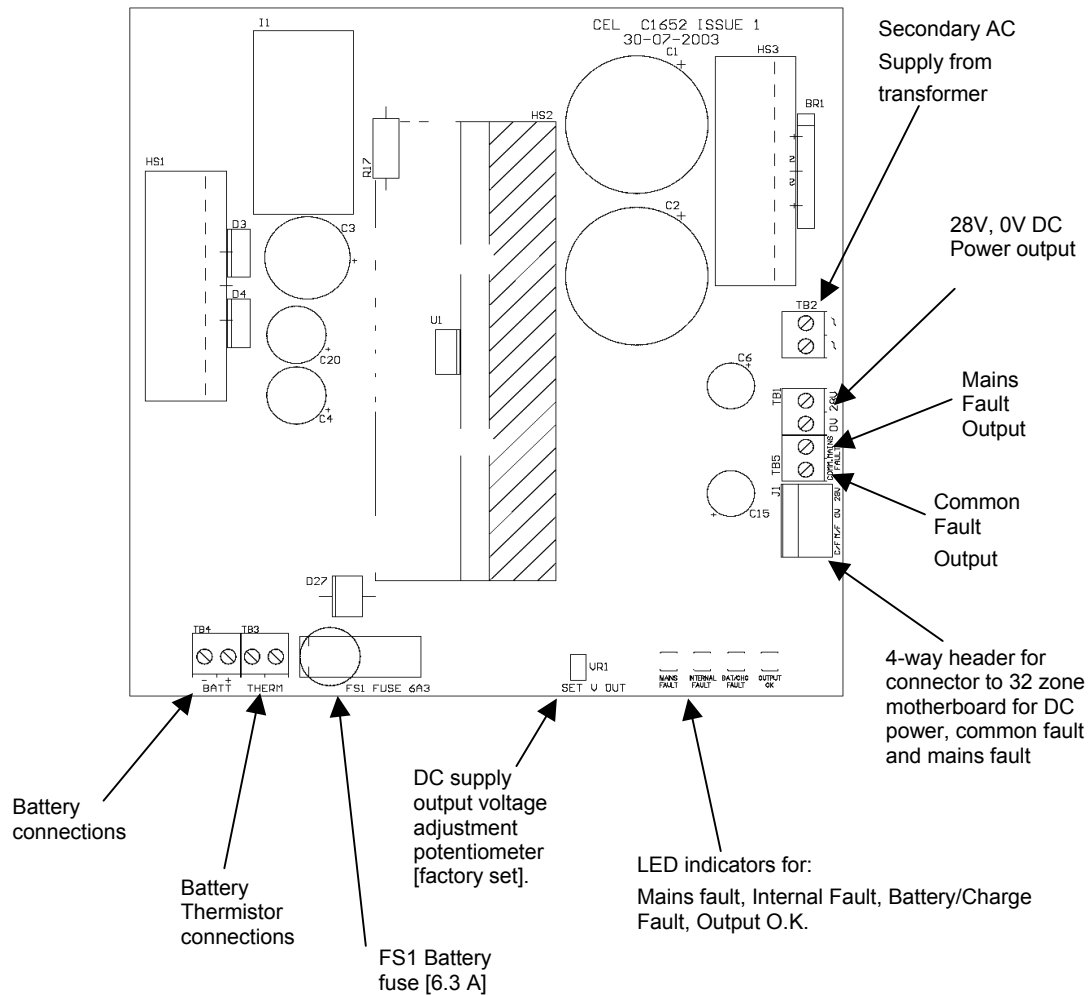

7 Compatible Field Devices

The panels are compatible with the devices listed in the sections below.

7.1 Field Device Order Codes & Descriptions

Manufacturer	Part no.	Description	Max. per zone [** See below]
Apollo	55000-200	Series 60 ionisation detector	32
Apollo	55000-210	Series 60 integrating ion detector	32
Apollo	55000-100	Series 60 Grade 1 heat detector	32
Apollo	55000-101	Series 60 Grade 2 heat detector	32
Apollo	55000-102	Series 60 Grade 3 heat detector	32
Apollo	55000-103	Series 60 Range 1 heat detector	32
Apollo	55000-104	Series 60 Range 2 heat detector	32
Apollo	55000-300	Series 60 optical detector	32
Apollo	55000-380	Series 60 optical/heat detector	32
Apollo	45681-200	Series 60 mounting base	32
Apollo	TBA	Orbis conventional (Replaces S60) Optical	32
Apollo	TBA	Orbis conventional (Replaces S60) Heat	32
Apollo	TBA	Orbis conventional (Replaces S60) Multi-sensor	32
Apollo	TBA	Orbis conventional base	32
Hochiki	SLR-E	CDX Range optical detector	32
Hochiki	SIJ-E	CDX Range ionisation detector	32
Hochiki	DFJ-60E	CDX Range 60 heat detector	32
Hochiki	DFJ-90E	CDX Range 90 heat detector	32
Hochiki	DCD-1E	CDX Range Grade 1 heat detector	32
Hochiki	DCD-2E	CDX Range Grade 2 heat detector	32
Hochiki	DCD-R1E	CDX Range R1 heat detector	32
Hochiki	YBN-R/4SK	CDX Range mounting base	32
Hochiki	YBO-R5	CDX Range mounting base, c/w remote indicator	32
Hochiki	YBO-5SK	CDX range mounting base, c/w remote indicator & diode	32
Hochiki	YBN-R4	CDX range mounting base, no diode	32
Nittan	TBA	New Evolution conventional Ionisation	32
Nittan	TBA	New Evolution conventional optical	32
Nittan	TBA	New Evolution conventional heat	32
Nittan	TBA	New Evolution conventional Optical/heat	32
Nittan	TBA	New Evolution base	32
KAC	WR2072-470	Manual call point	No limit
Apollo	53541-151	Series 30 ionisation detector	32
Apollo	53531-221	Series 30 Grade 1 heat detector	32
Apollo	45681-007	Series 20/30 mounting base	32
Apollo	55000-217	Series 65 ionisation detector	32
Apollo	55000-317	Series 65 Optical detector	32
Apollo	55000-122	Series 65 heat detector A1R	32

Manufacturer	Part no.	Description	Max. per zone [** See below]
Apollo	55000-125	Series 65 heat detector BR	32
Apollo	55000-132	Series 65 heat detector CR	32
Apollo	55000-137	Series 65 heat detector CS	32
Apollo	55000-212	Series 60 IS ionisation detector	20
Apollo	55000-213	Series 60 IS integrating ionisation detector	20
Apollo	55000-110	Series 60 IS grade 1 heat detector	20
Apollo	55000-111	Series 60 IS grade 2 heat detector	20
Apollo	55000-112	Series 60 IS grade 3 heat detector	20
Apollo	55000-113	Series 60 IS range 1 heat detector	20
Apollo	55000-114	Series 60 IS range 2 heat detector	20
Apollo	45681-207	Series 60 IS base	20
Hochiki	SIH-E	CD Range ionisation detector	32
Hochiki	DFE-60E	CD Range 60 heat detector	32
Hochiki	DFE-90E	CD Range 90 heat detector	32
Hochiki	DCC-1EL	CD Range Grade 1 heat detector	32
Hochiki	DCC-2EL	CD Range Grade 2 heat detector	32
Hochiki	DCC-1REL	CD Range R1 heat detector	32
Hochiki	YFB-RL4H5	Mounting base	32
Hochiki	YBK-RL/4H1	CD Range mounting base	32
Hochiki	DFG-E	Waterproof Fixed Temp. (60) Heat Detector – No Base Req.	32


Note ** Maximum number of devices per zone is based on default [active end of line] monitoring configuration. For intrinsically safe devices [zone configured to I.S. mode] the total quiescent current per zone drawn by the detector devices + IS Barrier [not including the end of line resistor] should not exceed 1.3mA.

8 Overview Of User Functions

This section gives an overview of the functions available to the end user.

8.1 User Indications

General Indicator Section		
Indicator Description	Indication Colour	Operating Condition
Power Supply On	Green	Illuminates Steady for Mains or Standby power On.
Fire	Red	Flashes on any new fire alarm condition, changing to a steady indication on operation of Silence Alarms.
Fire Routing Active	Red	Illuminates Steady when the Fire Routing Output is active.
General Fault	Yellow	Flashes for any fault condition.
Power Supply Fault	Yellow	Flashes for mains or standby power supply/charge fault
System Fault	Yellow	Illuminates Steady to indicate Microcontroller or Memory Failure. Flashes to indicate Engineer's Configuration Mode active.
Earth Fault	Yellow	Flashes for any positive or negative power supply earth fault.
Fuse Fault	Yellow	Flashes for any auxiliary supply fuse failure
Repeater Fault	Yellow	Flashes for any Repeater fault or repeater communication fault,
Sounder Fault/Disabled	Yellow	Flashes for any sounder fault. Steady for sounders disabled.
Sounder Test	Yellow	Illuminates Steady while sounder walk test is active.
Fire Protection Fault/Disabled	Yellow	Flashes for a fault on the Fire Protection Output. Steady when Fire Protection Output is disabled.
Fire Routing Fault/Disabled	Yellow	Flashes for a fault on the Fire Routing Output. Steady when Fire Routing Output is disabled.
Fault Routing Fault/Disabled	Yellow	Flashes for a fault on the Fault Routing Output. Steady when Fault Routing Output is disabled.

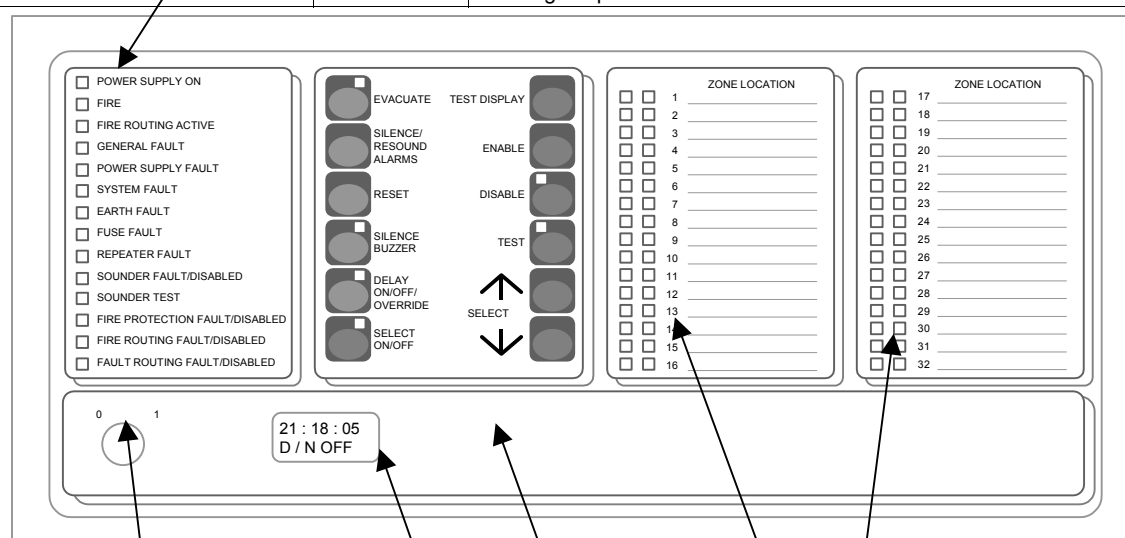


Access Controls Keyswitch:
0 – Controls Locked
1 – Controls Unlocked

User Instructions
Clock Module [Optional]:
Showing time and Day/Night off
Back light flashes for Clock Module fault.

Zone Location Indications		
Indicator Description	Indication Colour	Operating Condition
User Generated Zone Location Text	Red	Flashes when zone is in a fire condition, turning to steady on operation of Silence Alarms.
User Generated Zone Location Text	Yellow	Flashes when zone is in a fault condition. Illuminates steady when zone is disabled or in test.

8.2 User Controls

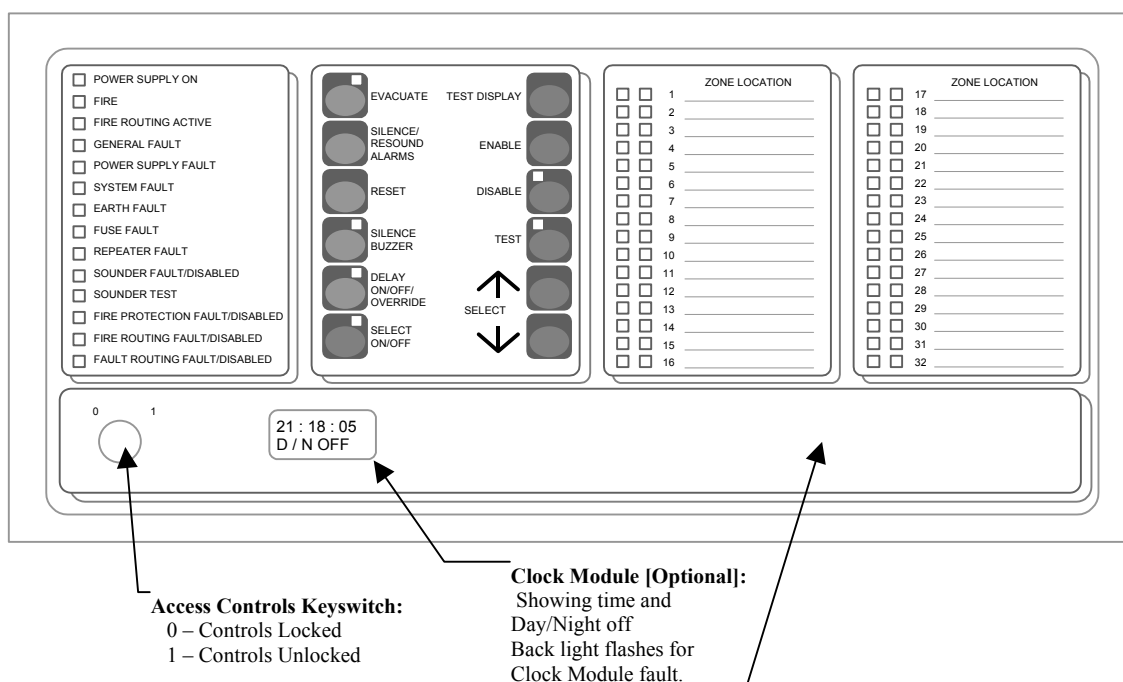

Switch Description	Functionality	Button Availability
Evacuate	Operates all sounders continuously and lights the Evacuated LED adjacent the button until the silence button is operated	When controls are unlocked
Silence/Resound Alarms	Following a fire alarm condition, 1st operation stops sounders. The General Fire LED and the Zonal fire LED will change from flashing to steady. 2nd operation restarts the previously silenced sounders	When controls are unlocked
Reset	Clears the panel display, resets the zones, outputs and operates the reset relay.	When controls are unlocked and [if silence before reset is configured] alarms silence switch has been operated.
Silence Buzzer	1] Press to stop the buzzer sounding in fire or fault conditions. 2] In 2 Stage Delay Mode, with stage 1 delay running, press to start stage 2 delay otherwise all delayed outputs operate when Stage 1 timer times out.	When controls are locked or unlocked When the panel is in the fire condition and the delay is running. Controls are locked or unlocked
Delay On/Off/Override	1] Press once to Enable the delay mode, lighting the adjacent delay on LED. Press again to disable the delay mode and turn off the LED 2] Overrides the delay when delay is running, turning the delay mode and the LED off. All delayed outputs will operate immediately.	1] When controls are unlocked and delay period is set to a value > 0. 2] When the panel is in the fire condition and the delay is running.
Select On/Off	Enables the User select feature for selection of zones or outputs via Select ↑ Select ↓ for disablement/re-enablement.	When controls are unlocked
Test Display	Press to illuminates all LEDs on the display and operate the buzzer. All indications remain active for approx 5 seconds after button release.	When controls are locked or unlocked
Enable	Press to clear the disablement or test condition on a zone or output selected via the User Select feature.	When controls are unlocked, the Select switch has been operated and a zone or output has been selected.
Disable	Press to disable a zone or output selected via the User Select feature.	As above.
Test	Press to initiate the One Man Test on sounders or zones as selected via the User Select feature.	As above.
Select ↑ Select ↓	Used to scroll the cursor indication through the zone and output fault LEDs on the display to select a zone or output for disablement, or test. [LED illuminated when Select Mode is active]. Also scrolls through Clock Module menu [when fitted].	When controls are unlocked and the Select switch has been operated.

8.3 Selection of Detection Zones or Outputs for Disablement, Enablement or Test

The panel provides a simple and straightforward means for selecting the sounder outputs and/or zones which are to be disabled, re-enabled or set to the test mode. The Fire Routing output, Fire Protection output and Fault Routing output can also be individually disabled and enabled.

The zone or output is selected using the Cursor Select feature. This allows the User to move a flashing cursor indication up or down through the yellow fault LEDs associated with the available zones and outputs until the required zone or output is highlighted. The yellow LED for the selected zone/output flashes in "Cursor" mode, which is easily distinguishable from all other indications. With the cursor flashing on the required zone/output, pressing the Disable button disables the zone/output. Pressing the Enable button re-enables the zone/output. Pressing the Test button initiates the test condition. [Note: Fire Routing output, Fire Protection output and Fault Routing outputs cannot be placed in test condition].

8.4 Disablement/Re-enablement of Detection Zones and Outputs

Any or all of the zones can be disabled.

The panel will not enter the fire alarm condition if a fire detection device operates on a disabled zone. Similarly, the panel will not enter the fault condition if a fault occurs on a disabled zone. The fire panel will respond normally to fire device operations and wiring faults on all enabled zones.

The following outputs can also be individually disabled/enabled:

- All Sounder circuits.
- The Fire Routing output.
- The Fire Protection output.
- The Fault Routing output.

A disabled output is prevented from operating under any circumstances.

8.5 Detector Zone One man Test.

When selected to the One Man Test condition, devices connected to the zone can be operated for test purposes without operating the Fire Routing or Fire Protection outputs. The zone[s] to be set to the One Man Test condition are selected using the Cursor Select feature described in 8.3 above. With the cursor flashing on the required zone, pressing the Test button initiates the zone test. Pressing the Enable button or pressing the Test button again clears the test condition and restores normal operation to the zone.

The features of the One Man Zone Test condition are:

- A fire condition on a zone in Test Mode will not operate any of the fire outputs other than any sounders configured to respond to the zone fire.
- The panel will respond normally to a fire condition on any zone not selected to the Test Mode.
- Sounders can be configured not to respond to a detector test or to operate for 5 seconds and then automatically silence.
- A Zone Test Fire condition will operate the sounders in accordance with the panel configuration- i.e. either:
 - Zonally - only the sounder group associated with the actual detection zone being tested
 - or
 - Generally - all sounder groups operate.
- After each test the panel and the device being tested is automatically reset allowing the next device to be tested without needing to return to the panel to silence and reset.
- If a fire condition occurs on any zone other than a zone in test mode, the panel responds fully to the fire condition as per its normal fire response and configuration.

8.6 Alarm Sounder One man Test

The One Man Sounder Test operates all sounders intermittently until the Test mode is manually cleared. This allows the Engineer to walk the installation and confirm the operation of all sounders. The sounder on/off cycle is 2 seconds on and 15 seconds off to allow operation to be confirmed without being too intrusive for other occupants.

A genuine fire alarm condition overrides the test mode and operates the sounders normally.

9 Overview Of Engineers Functions

This section provides an overview of the functions available to the engineer.

9.1 Engineer's configuration process

Most Engineer's configuration facilities are controlled by DIL switches located on the motherboard accessed by opening the panel door, each configuration feature having its own dedicated DIL switch.

9.1.1 Zone/Output Delay Configuration

Having selected the DIL switch for configuring the delay zones or the DIL switch for configuring delayed outputs, the actual selection of the zones/output is carried out on the panel display using the yellow zone [or output] fault/disabled LEDs via the Cursor Select feature. This allows the Engineer to scroll a cursor indication up or down through the yellow LEDs associated with the available zones or outputs until the required zone or output is selected. The yellow LED for the selected zone/output flashes in "Cursor" mode, which is easily distinguishable from all other indications. With the cursor flashing on the required zone/output, pressing the Enable button applies the configuration to the selected zone. Pressing the Disable button clears the configuration, restoring factory setting.

When configuring zones, the cursor can only be scrolled through zone LEDs. When configuring outputs the cursor is restricted to Fire Routing, Fire Protection and Sounder LEDs.

When a zone configuration or the delay outputs configuration feature is initiated, all standing fire alarms are reset, all fault/disablement/test indications are inhibited and the current configuration is indicated on the fault/disabled LEDs on the display for the appropriate zones or outputs. The panel is not able to respond to any fire or fault alarm.

The factory default configuration for the zones and delayed outputs can be restored by selecting the configuration DIL switches for each of the zone and output delay configuration features to ON then pressing the Disable switch on the display and finally setting the configuration switches back to the OFF position.

9.1.2 Other Configurable Features

All other configurable features involve either setting the appropriate DIL switch to ON or OFF or removal/replacement of jumpers on the motherboard.

9.2 Configurable Detection Zones

Display-based Select/Cursor configuration process allowing each detection zone to be individually configured to one of the following types:

- Latching or non-latching fire zone.
- Delay or non-delay zone.
- Standard or Intrinsically Safe zone.
- Short circuit gives fire indication.

Factory default: All zones as latching fire, non-delay, standard [non- intrinsically safe and non short circuit fire mode].

Note: The DIL switch labelled "Configure M.S. Zones" is used on the panel to configure the zones to short circuit fire mode.

Latching fire configuration – This is the normal operating configuration and is used when fire detectors and manual call points are connected to the zone wiring.

Non-latching fire configuration - Provided to allow users to link panels together via the Fire Protection relay and non-latching zone without causing a system latch –up state, where the connected panels cannot be reset from an alarm condition.

A fire detector operation on a zone configured to the non-latch fire mode initiates the fire alarm condition on the panel, operates the fire alarm sounders, the Fire Routing output and zone outputs as normal. The Fire protection output can be configured to operate or not to operate via DIL switch 1/1. On clearing of the fire input signal on a non-latch zone the panel will clear the alarm indication if no other alarms are present.

9.3 Delay zone configuration

This facility is used along with the other delay configuration features listed below [see 9.5 below] to tailor the Panel Delay operation to the needs of the protected premises. Each zone can be independently configured to Delay Mode. Delay zones would normally be used to monitor automatic fire detectors. A fire condition on a delay zone will indicate the fire alarm audibly and visibly on the panel, operate any non-delayed outputs and start the time delay function.

9.4 Standard or Intrinsically Safe zone.

When configured to the **Standard Mode** the fire and fault trip thresholds for the zone being configured are set within the panel software to the normal values and are compatible with a large range of detection devices. This is the factory set condition.

When configured to the **Intrinsically Safe Mode** the fire and fault trip thresholds for the zone being configured are adjusted within the panel software to allow use with I.S barriers. The fault monitoring is configured to the passive mode suitable for use with end of line resistors only.

Note: Removal of a detector will be reported as a fault but will not allow the detection of a fire condition on any device connected between the removed device and the end of line terminator.

Warning: Use of capacitors on Intrinsically Safe circuits is dangerous and is not allowed.

9.5 Short circuit fire configuration

The default configuration:- short circuit on the zone wiring raises a fault warning.

When configured to the short circuit fire mode, a short circuit across the zone wiring initiates the fire alarm condition.

9.6 The Delay mode feature

This comprises three configurable elements to allow the panel to be configured to delay the operation of three types of outputs in response to a fire alarm condition triggered by a zone configured as a delay zone.

9.7 Configure Delay Zones

Zones can be configured as delay or non-delay. Fire detectors would normally be connected to delay zones and manual call points to non-delay zones. [See 9.3 above].

9.8 1 – 2 Stage Delay

- The delay can be set up as either a Single or 2-stage delay.
 - Single stage: 1-10 minutes selectable duration in 1-minute steps.

- ❑ 2-stage: Delay 1:- 1-minute fixed delay. Delay 2:- 0-9 minutes [duration selectable as described above].

Operation of the Buzzer Silence button before delay 1 ends will immediately start delay 2, otherwise all delayed outputs will operate after delay 1 ends.

9.9 Selection of outputs to be delayed

- The Delay Mode can be applied independently to each or all three of the outputs listed below:
 - ❑ Fire Alarm Routing Output.
 - ❑ Fire alarm sounders.
 - ❑ Fire Protection Output[s].

No other outputs can be delayed. The factory default:- No outputs delayed.

- Operation of a fire detector or manual call point on any “non-delay” zone overrides the delay and immediately operates all delayed outputs.
- The panel display includes a Delay On/Off/Override button allowing the User to enable/disable the delay mode or, if the delay is running, to override it, immediately operating the delayed outputs.

9.10 Selectable Zonal or General Alarm sounder operation

Selects the sounders to:

- General Alarm Mode [all sounders operate for any fire condition] or
- Zonal Alarm [in conjunction with the Pulse Non-Alarm Zones switch]

The standard sounder circuits on the 2 and 4 zone panels can be used in General or Zonal modes. On the 8, 16 and 32 zone panels, these sounder outputs always operate in the General mode regardless of the setting on the general/zonal alarms configuration switch.

The output expansion system [due later] provides additional sounders circuits for General or Zonal use on the 8, 16 and 32 zone panels.

9.11 Pulse Non-Alarm Zones

Selects the type of zonal sounder alarm response to a fire when the Zone Alarms feature described above is selected. The two selectable options are:

- Zonal sounders for zone in the fire condition operate continuously until silenced. All others are silent.
- Zonal sounders operate continuously - all other sounders operate in pulsed mode until silenced.

9.12 Inhibit Fire Protection on Non-Latched Zone

Selects Fire Protection relay to operate **or** not to operate for a fire condition on any zone configured to non-latched mode. This feature has been provided to allow two panels to be linked so that a fire condition on one panel triggers a fire on a zone on the other panel and vice versa without latching up. The zones used to monitor the signal from the other panel should be configured to non-latching and the Fire Protection relay should be used to transmit the fire signal.

9.13 Delay Alarm Silence and Reset

Prevents alarms being silenced and panel reset for a period of 3 minutes after a fire alarm condition occurs.

9.14 Alarms on Evacuate Only

Selects sounders to operate only when the panel is in the evacuate condition.

9.15 Silence Before Reset

Selects type of reset mode:

- Reset available when panel is in the [un silenced] fire or fault condition
- or
- Fire Condition Reset is available only when panel is in the Alarm Silenced condition. Fault reset is available when panel is in the fault condition.

9.16 Silent Zone Test

Select sounder response in One Man [Detector] Test Mode:

- Normal sounder response [continuous or pulsed in line with panel configuration]
- or
- Silent [no sounder operation].

9.17 Buzzer Disable

Enable/disable the internal panel fire/fault buzzer.

9.18 Latched Faults

When enabled, all fault conditions latch until the Reset switch is operated.

A latched zone fault will be cleared if a fire condition occurs on the same zone.

9.19 Repeater Configuration

To configure the panel to communicate with 1 to 5 remote indication panels via DIL switch selection on Repeater Interface Board.

9.20 Output Relay Configuration

The Fire Routing, Fire Protection and Fault routing output relays are individually link-configurable on the motherboard providing one of the following options for each output:

- Volt-free change over relay output suitable for switching a maximum of 1 Amp at voltages up to 30VDC.
- Fault-monitored 28VDC powered output suitable for operating remote relays complying with the following requirements:
 - Field relay spec: Coil resistance - 2.6 to 4.5 k Ohms. Operating Voltage 24VDC Nominal [min 18 V, max 30 V]. Fitted with a suppression diode.

9.21 Earth Fault monitoring.

For installations where earth fault monitoring is unsuitable, it can be disabled by removal of link J18 in the bottom right hand corner of the C1627 motherboard.

10 Panel Repeaters


Repeaters duplicate the panel indications and user controls at a location remote from the main panel. The repeater uses the same motherboard as the fire alarm panel although some of the components are depopulated. Up to 5 repeaters can be connected to a single panel using an RS485 serial connection. A C1631 repeater interface module needs to be fitted to connector J13/J9 located centrally towards the right-hand edge of C1627 motherboard on the fire alarm panel and also on the repeater motherboard.

Note: The disable/enable/test facilities and the configuration functions are not available at repeaters.

11 Circuit Connection Details


11.1 2-16 Zone Motherboard Termination Details

Figure 12 - C1627 field termination

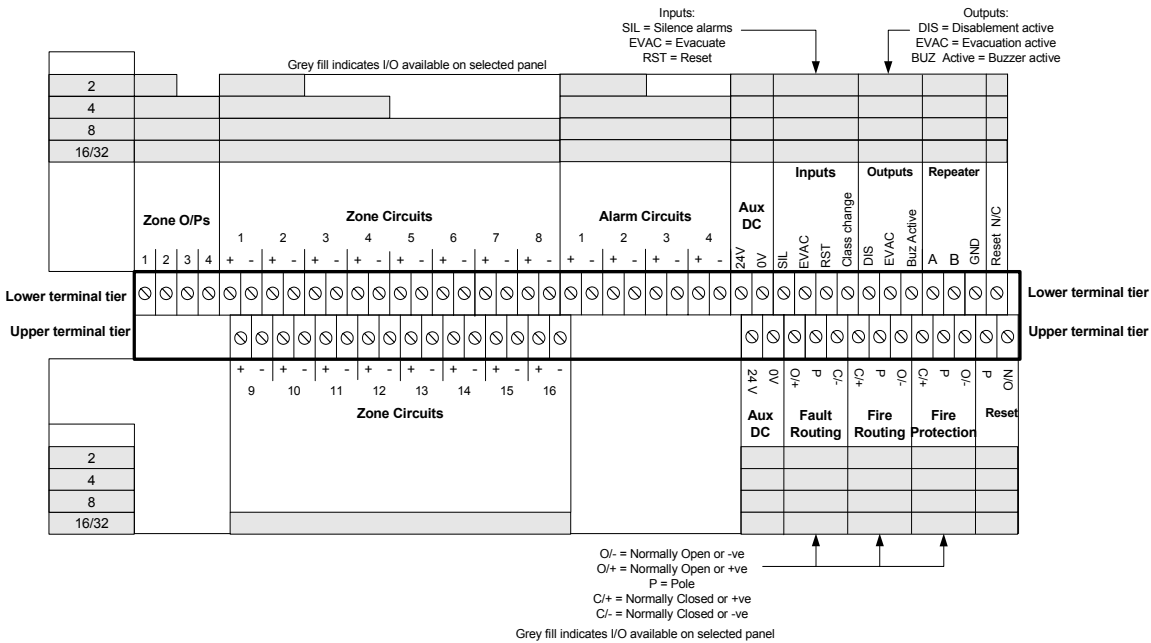

11.2 16 Zone Expansion Board Termination Details

Figure 13 - C1632 16 zone expansion board field termination

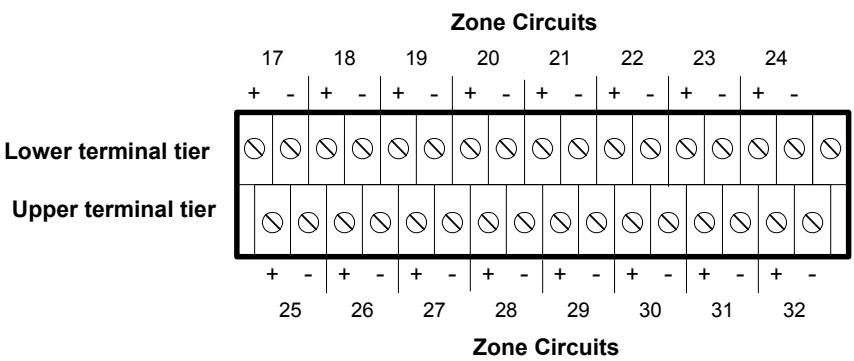

11.3 Auxiliary Supply

An auxiliary DC supply is available to power external field equipment from the panel. This is nominally rated at 28V but varies during mains failed conditions. See **15 below** for details of maximum load.

The output is fused using an electronic device and fuse activation will be indicated as Fuse Failed on the panel display. The fuse can be reset after removal of the fault by operating the Reset button on the display.


The auxiliary supply terminals are labelled Aux DC 0V and 24V. Although two sets of terminals are provided, they are both protected by the same fuse circuit and therefore the total load across both sets of terminals must not exceed the rated value.

Note: If equipment draws current from the auxiliary supply during the mains failed condition, this must be included in the battery capacity calculations.

11.4 Fire Routing, Fire Protection and Fault Routing Outputs

These outputs are factory-set to the fault monitored, powered mode of operation but can be configured at site to volt-free relay outputs [See 9.20 above]. Connection details for both types of configuration are provided in Figure 14.

Figure 14 – Fire Routing, Fire Protection and Fault Routing Connections.

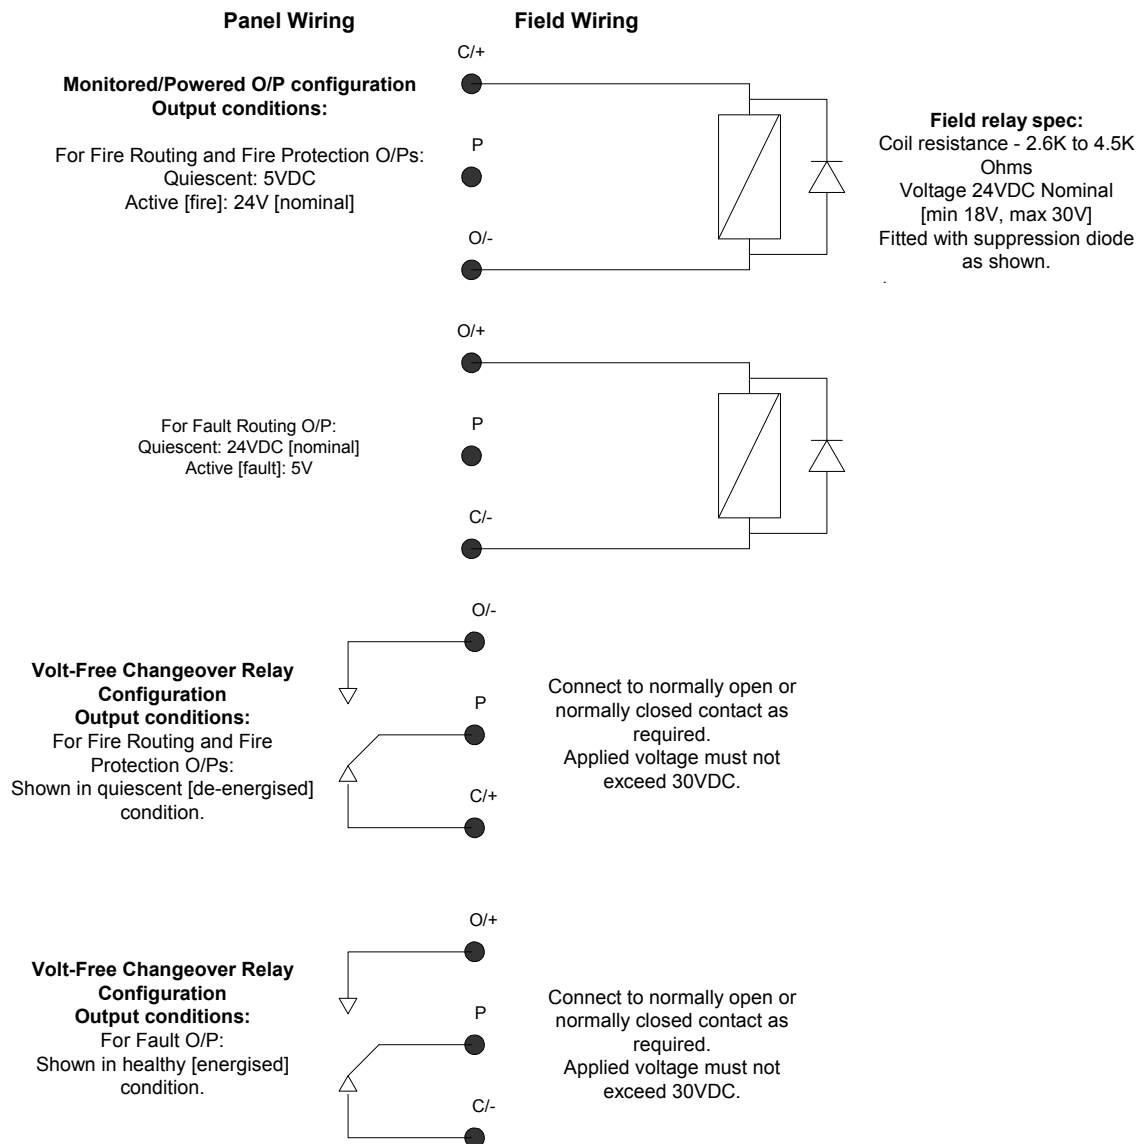


Note: Terminals are dual marked for monitored/powered and volt-free configurations.

For volt-free: O = Open, C = Closed, P = Pole

For monitored/powered: + = Positive, - = Negative

Warning: The volt-free auxiliary relay contacts must not be used to directly switch any voltage that exceeds 30VDC.

Figure 15 – Reset Relay contact connection details

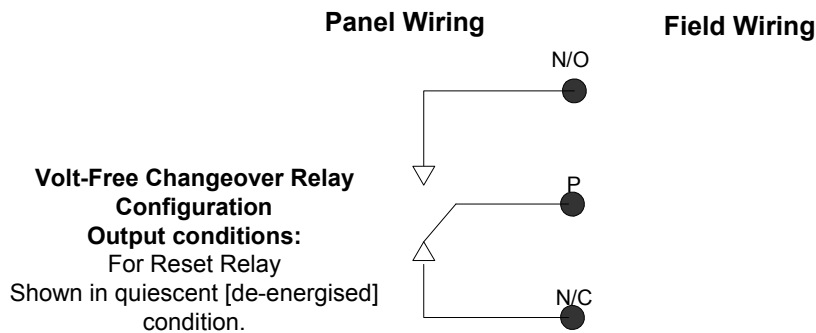

Warning: *The volt-free auxiliary relay contacts must not be used to directly switch any voltage that exceeds 30VDC.*


11.5 Use Of Auxiliary Inputs

Auxiliary inputs are provided to allow remote operation of the following functions:

- Class Change.
- Remote Evacuate.
- Remote Silence.
- Remote Reset.

To activate an input, 0V DC should be connected across the input circuit via a normally open contact arranged to close. [See Figure 16 – Auxiliary I/P connection detail]

Figure 16 – Auxiliary I/P connection detail

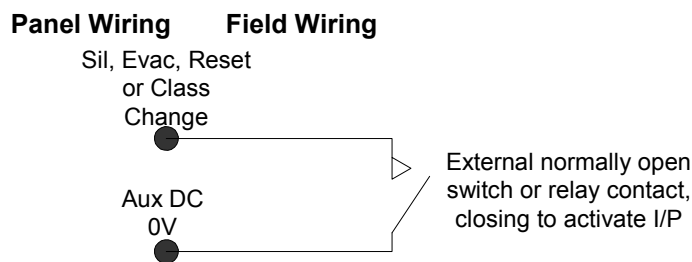


Note: *To prevent unauthorised operation of the system, any manually operated auxiliary input must be operated by a key-switch. The key to the switch should be held with the panel's access control key.*

11.6 Sounder Circuits

2 zone panels have 2 sounder circuits rated at 0.5 Amps. 4 zone panels have 4, each rated at 0.5 Amps. The 8, 16 and 32 zone panels have 4 sounder circuits each rated at 1 Amp. The circuits are reverse-polarity monitored for open and short circuit faults. To allow monitoring, all devices must be polarised. To prevent damage to the control panel, bells must also have a suppression diode fitted as shown in Figure 17 – Alarm circuit configuration. The circuit must be terminated with a 3k9 end of line resistor.

Figure 17 – Alarm circuit configuration

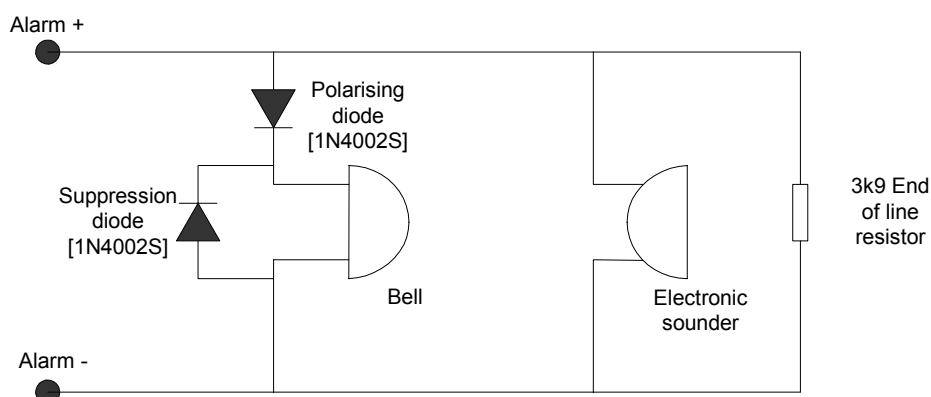

The voltage drop on each alarm circuit should be calculated to ensure that the minimum voltage at the end of each circuit exceeds the minimum required by each sounding device.

The voltage at the end of the circuit is given by:

Minimum alarm voltage = Min O/P voltage ** – (Alarm current in amps x 2 x alarm circuit length in metres x cable resistance in Ohms per core per m)

[** Min O/P voltages – Mx-1032 = 18.4V;

Mx-1008 and Mx-1016 = 19.2V; Mx-1002 and Mx-1004 = 19.2V].

The resistance per metre is as follows:

- 1.5mm² – 0.015Ω per metre per core
- 2.5mm² – 0.009Ω per metre per core

12 Electrical Design of Detection Zones

To allow the panel to correctly monitor for fault conditions, the wiring for each zone must be installed as a continuous pair with no spurs or tees and be terminated with an end of line device; 22 μ F 35V capacitors for standard, non- intrinsically safe zones, 3k9 0.25W for intrinsically safe zones. Correct polarity must be strictly observed throughout.

12.1 Maximum Number of Devices on a Zone

The maximum number of devices supported by a zone depends on the quiescent current drawn by each device and differs for intrinsically safe and non- intrinsically safe zones. The quiescent current will be listed on the device data sheet provided by the Manufacturers.

For **non- intrinsically safe zones**, the maximum current available is 5mA.

For **intrinsically safe zones**, the maximum current available is 3.5mA.

Note: To comply with BSEN 54-2, the maximum number of devices per zone is limited to 32 and the maximum number of devices connected to a panel is limited to 512.

Intrinsically Safe Zones

Warning: I.S zone wiring and equipment installation must comply with the installation guidelines provided with the I.S. fire detection equipment and the I.S. barrier. Any zone on which I.S. equipment is to be connected must be configured as an I.S. zone. [See9.4 above].

13 C1651 Timer Module - General

The LCD clock module is an optional feature for the Mx-1000 range of panels providing the Alarm Counter and Day/Night Delay Time features described elsewhere in this document. A jumper and DIL switch are provided on the clock module PCB to allow the following modes of operation to be set:

- a] Day/Night Delay Time
- b] Day/Night Delay Time and Alarm Counter.
- c] Time of 1st fire alarm.
- d] Time of 1st fire alarm and Alarm Counter.

The module is fitted to the rear of the display PCB, inside a break-out window. Two DIL pin headers fitted to the rear of the display PCB provide all electrical connections. The module has a 2 by 8 character alphanumeric backlit LCD.

The clock module must be used with the “fully insertable” display overlay which has a clear window through which the LCD can be viewed. A tab on the end of the User Instruction insert normally blanks off the window. This tab must be removed before the insert is fitted to expose the window.

13.1 Clock Module Functionality

Alarm Counter -

Complying with the requirements of EN54-2 clause 7.13, recording the number of times the panel enters the fire alarm condition.

The current count can be displayed or reset to zero manually when required.

Day/Night Delay Mode control -

Allows the delay mode to be automatically controlled by the clock module. It can be set up to operate in one of two modes via a DIL switch 1/3 on the control panel motherboard:

Mode 1 - Automatically turns off the delay mode once a day at a set time [the delay mode first being turned on manually].

Mode 2 - Automatically turn the delay mode on once a day and off once a day at set times.

1st Fire Alarm Time –

Displays the time of the first fire alarm. This condition is latched until the panel is reset and is not updated by any subsequent fire alarms [i.e. fire alarms which occur while the first alarm is still displayed].

13.2 Clock Module Edit Facility

The Clock Module has a simple edit feature to allow:

Set time of day [User accessible].

Set daily delay mode on/off times. [User accessible].

Selection of Day/Night delay mode on/off. [Engineer accessible].

13.2.1 Clock Module – User Control/Editing

When the optional Clock Module is fitted, the User has access to select the status of the Day/Night Mode - either On or Off and to set the current time. These edit features are accessed by operating the Access key switch, pressing the Select button and using the Select ↑ Select ↓ buttons to scroll the cursor indicator through the selectable LEDs until the Clock Module is selected [Clock Module back light lit].

13.2.2 Clock Module Engineer's Editing and Configuration

Editing: Manual selection of the Day/Night Mode and setting the current time is described in Precept Installation and Commissioning Manual.

Configuration:

Setting the time of day at which the clock module automatically turns the delay mode on/off is set using the Clock Module menu system as described in Precept Installation and Commissioning Manual. Access to these extra menu pages is protected by a DIL switch on the rear of the Clock Module PCB.

A jumper and DIL switch are provided on the clock module PCB to allow the following modes of operation to be set:

- a) Day/Night Delay Time
- b) Day/Night Delay Time and Alarm Counter.
- c) First Fire Alarm Time.
- d) First Fire Alarm Time and Alarm counter.

13.3 C1651 Clock Module PCB Features

Figure 18 illustrates the PCB features referred to elsewhere in the documentation


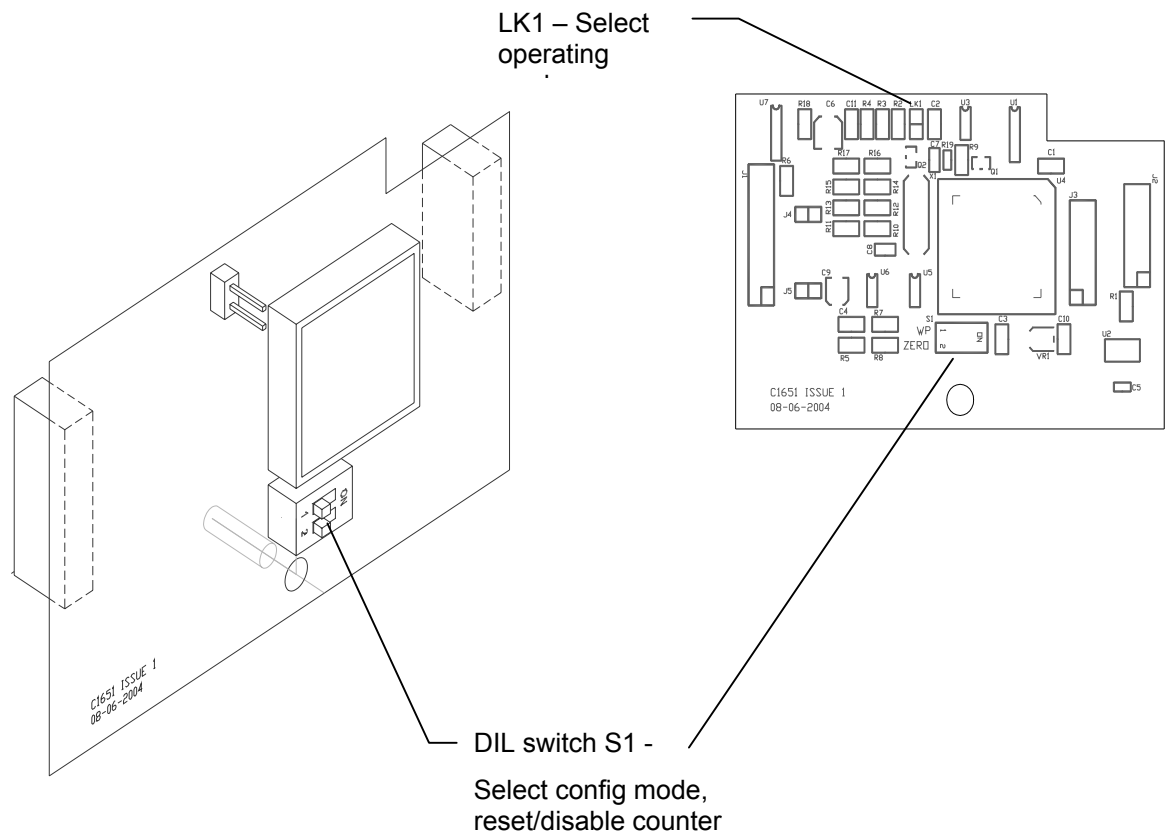


Figure 18 – C1651 Clock Module PCB

Figure 19 - Typical Wiring Diagram

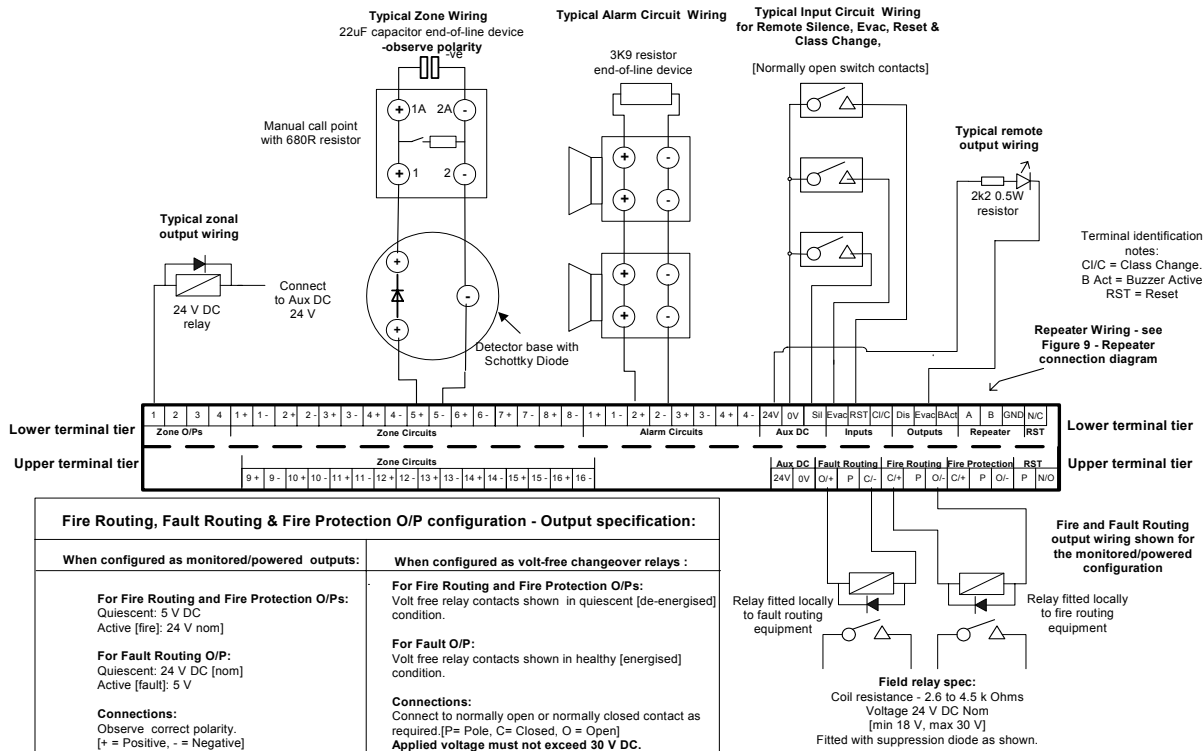

14 Mechanical, Electrical and Environmental Specifications

Mechanical Specification	Panel				Repeater		
	Mx-1002 / Mx-1004	Mx-1008	Mx-1016	Mx-1032	Mx-1108	Mx-1116	Mx-1132
Size [mm]							
Height:	340	370	370	441	340	340	441
Width:	325	325	325	400	325	325	400
Depth:	95	126	126	131	95	95	131
Weight excluding batteries:	5.65Kg	7.05Kg	7.05Kg	9.35Kg	5.65Kg	5.65Kg	7.6Kg

Mains Input Specification	Panel				Repeater		
	Mx-1002 / Mx-1004	Mx-1008	Mx-1016	Mx-1032	Mx-1108	Mx-1116	Mx-1132
Maximum Input Power:	85W	165W	165W	240W	85W	85W	85W
Protection:	T1AH250V	T3.15AH250V	T3.15AH250V	T3.15AH250V	T1AH250V	T1AH250V	T1AH250V
[Warning: Replace only with identical type & rating of BEAB or VDE approved fuse]	[1A anti-surge]	[3.15A anti-surge]	[3.15A anti-surge]	[3.15A anti-surge]	[1A anti-surge]	[1A anti-surge]	[1A anti-surge]
Voltage:	230V AC +10%/-15%						
Cable requirements:	Minimum of 1mm ² copper protected by a 5A fuse.						

Power Supply Output Specification	Panel				Repeater		
	Mx-1002 / Mx-1004	Mx-1008	Mx-1016	Mx-1032	Mx-1108	Mx-1116	Mx-1132
Maximum Current Output, Mains On	1.5A	3A	3A	5A	1A	1A	1A
Voltage Output, Mains On	26.5 - 28.6V						
Maximum Current Output, Mains Failed	1.5A	3A	3A	5A	1A	1A	1A
Voltage Output, Mains Failed [* at full load]	19.9* - 27V	19.2* - 27V	19.2* - 27V	18.4* - 27V	N/A		
Output protection:	Electronic current limiting						
Common fault output:	N/A	N/A	N/A	50mA	N/A	N/A	N/A
Mains failed fault output:	N/A	N/A	N/A	50mA	N/A	N/A	N/A

Battery Specification	Panel				Repeater		
	Mx-1002 / Mx-1004	Mx-1008	Mx-1016	Mx-1032	Mx-1108	Mx-1116	Mx-1132
Battery charger output: [Temperature compensated float charger 28.6V \pm 0.1V@-5°C 26.5 V \pm 0.1V@ +40 °C.	1.5A	3A	3A	5A	1.5 A	1.5 A	1.5 A
Battery type: POWERSONIC [Warning: Replace only with identical battery]	2 off PS1230 [12V 3Ah]	2 off PS1270 [12V 7Ah]	2 off PS12120 [12V 12Ah]	2 off PS12180 [12V 18Ah]	2 off PS1230 [12V 3Ah]	2 off PS1230 [12V 3Ah]	2 off PS1230 [12V 3Ah]
Battery size: [For one 12 V pack]	134mm x 67mm x 60mm	151mm x 65mm x 94mm	151mm x 98mm x 94mm	180mm x 76 mm x 167mm	134mm x 67mm x 60mm	134mm x 67mm x 60mm	134mm x 67mm x 60mm
Battery circuit protection: [Warning: Replace only with identical type & rating of fuse]	F2AL250V 20mm fast blow glass fuse	F5AL250V 20mm fast blow glass fuse	F5AL250V 20mm fast blow glass fuse	F6.15AL250V 20mm fast blow glass fuse	F2AL250V 20mm fast blow glass fuse	F2AL250V 20mm fast blow glass fuse	F2AL250V 20mm fast blow glass fuse
Mains failed fault battery current:	45mA	45mA	45mA	55mA	40mA	40mA	40mA
Mains failed alarm battery current:	80mA	80mA	80mA	90mA	75mA	75mA	75mA

Environmental Specification	All Panels
Operating temperature:	-5°C to 40°C
Operating humidity:	5% to 95%

15 Input and Output Specification

	Panel			
Detection zone Inputs	Mx-1002 / Mx-1004	Mx-1008	Mx-1016	Mx-1032
Qty	2 / 4	8	16	32
Specification	Conventional Open and short circuit fault monitored. Standard operating thresholds: Fire – 1k6 Ohms/14mA; O/C Flt – N/A; S/C Flt - 200 Ohms/52mA; I.S Thresholds: Fire – 2k2 Ohms/10mA; O/C Flt - 6k7 Ohms/3.8mA; S/C Flt - 660 Ohms/27mA			
Cable requirements	Max resistance of circuit loop: 22 Ohms.			

Ancillary Inputs	Panel Mx-1002 / Mx-1004	Panel Mx-1008	Panel Mx-1016	Panel Mx-1032
Zonal Fire Outputs for [Zones 1-4]	Open collector. 50mA	N/A		
Class Change Input	Non- fault monitored. 0 Volt I/P to activate. I/P sensitivity: 0-1k Ohm			
Remote Evacuate Input	Non- fault monitored. 0 Volt I/P to activate. I/P sensitivity: 0-1k Ohm			
Remote Silence Input	Non- fault monitored. 0 Volt I/P to activate. I/P sensitivity: 0-1k Ohm			
Remote Reset Input	Non- fault monitored. 0 Volt I/P to activate. I/P sensitivity: 0-1k Ohm			
Cable requirements	Cable loop resistance <= 1K Ohm			
Earth Fault I/P	Alarm threshold between 10k Ohm to 70 k Ohm [dependant on circuit] between chassis and +ve or -ve line			

Outputs	All Panels
Evacuate [active] Output	Open collector. 50mA 30 V max
Buzzer [active] Output	Open collector. 50mA 30 V max
Disablement [active] Output	Open collector. 50mA 30 V max
Reset Relay	1 x Volt-free change over rated 1 Amp at 30V DC
Fire Routing Output Monitored configuration Volt –free configuration	Quiescent: 2 V DC; Active [fire]: 24 VDC [nom] Field relay spec: Coil resistance - 2.6 to 4.5 k Ohms. Voltage 24 V DC Nom [min 18 V, max 30 V]. Fitted with suppression diode. 1 x Volt-free change over rated 1 Amp at 30V DC
Fire Protection Output Monitored configuration Volt –free configuration	Quiescent: 2 V DC; Active [fire]: 24 VDC [nom]. Field relay spec: Coil resistance - 2.6 to 4.5 k Ohms. Voltage 24 V DC Nom [min 18 V, max 30 V]. Fitted with suppression diode 1 x Volt-free change over rated 1 Amp at 30V DC
Fault Routing Output Monitored configuration Volt –free configuration	Quiescent: 24 V DC [nom]; Active [fault]: 2 V. Field relay spec: Coil resistance - 2.6 to 4.5 k Ohms. Voltage 24 V DC Nom [min 18 V, max 30 V]. Fitted with suppression diode. 1 x Volt-free change over rated 1 Amp at 30V DC
Cable requirements	No special requirements.

Alarm Circuits	Panel				Repeater		
	Mx-1002 / Mx-1004	Mx-1008	Mx-1016	Mx-1032	Mx-1108	Mx-1016	Mx-1032
Quantity:	2/4	4	4	4	N/A	N/A	N/A
Maximum Current: [per circuit]	0.5A	1A	1A	1A	N/A	N/A	N/A
Output Voltage (battery operation):	21 –27 V DC						
Output Voltage (mains operation):	28.6 – 26.5 V DC						
Fault Monitoring:	Reverse polarity for open and short circuit faults						
Protection [Self resetting electronic]	0.93A	0.93A	1.85A	1.85A	N/A		
Cable requirements:	No special requirements. 1A minimum current rating. Minimum voltage at end-of-line must be above sounding device minimum operating voltage.						

Auxiliary Supply	Panel				Repeater		
	Mx-1002 / Mx-1004	Mx-1008	Mx-1016	Mx-1032	Mx-1108	Mx-1016	Mx-1032
Maximum Current:	0.5A	1A	1A	1A	N/A	N/A	N/A
Auxiliary supply (battery operation):	21–27 VDC				N/A	N/A	N/A
Auxiliary supply (mains operation):	28.6 – 26.5 V DC				N/A	N/A	N/A
Protection: [Electronic]	0.5 A	1 A	1 A	1 A	N/A	N/A	N/A
Cable requirements:	No special requirements. 1A minimum current rating. Minimum voltage at end-of-line must be above sounding device minimum operating voltage.						

Repeater Output	Panel			
	Mx-1002 / Mx-1004	Mx-1008	Mx-1016	Mx-1032
Number of repeaters:	1 to 5			
Maximum repeater cable length:	2000m			
Communication protocol:	RS485 serial data 9600baud			
Protection:	Electronic, current limited			
Cable Type:	Two pair RS485 shielded cable (see below)			

RS485 Cable Specification	
Generic Type:	RS422/RS485 data cable.
Conductors:	Two pairs plus screen.
Alpha cable:	3492C, 6222C, 6412 or equivalent
Belden cable:	8102, 3107A, 82842 or equivalent

16 Appendix

16.1 EN54 Optional Functions With Requirements

The Mx-1000 Series Panel has the following EN54 optional functions.

- Clause 7.8 Outputs to fire alarm devices.
- Clause 7.9 Outputs to fire alarm routing equipment.
- Clause 7.10 Outputs to Fire Protection Equipment.
- Clause 7.11 Delays to outputs.
- Clause 8.9 Output to fault warning routing equipment.
- Clause 10 Test condition.

16.2 Additional Functions Relating To EN54

The panels has the following functions relating to EN54.

- Sounder circuits [2 on the 2-zone, 4 on the 4, 8, 16 and 32 zone versions].

16.3 Ancillary Functions Not Required By EN54

The panel offers several auxiliary functions that are not required/allowed by EN54. These are:

- Fire Routing, Fire Protection and Fault Routing outputs can be configured to be volt-free change over contacts.
- Detection zones can be configured as non-latching.
- Detection zones can be configured for Intrinsically Safe applications.
- Detection zones can be configured to initiate the fire alarm condition when a short circuit is connected across zone wiring [used when replacing a panel on an older “non- short circuit” monitored system].
- Class change input for operating sounders briefly to signal class changes in educational institutions.
- Reset relay to interrupt power supplies to external equipment that needs to be reset in tandem with the panel (e.g. IR Beam Detectors).
- Engineer configurable features for:
 - To require the silencing of the fire alarm condition prior to enabling the fire alarm condition reset.
 - To inhibit the operation of the Fire Protection Output for a fire condition on a zone configured as non-latching.
 - To inhibit the silencing of fire alarm devices and resetting of the fire alarm condition for a period of 3 minutes after a fire alarm condition occurs.
 - To prevent fire alarm devices operating for any fire alarm condition other than the Evacuate condition.
 - To disable the panel buzzer.
- Open collector outputs for evacuate active, buzzer active, disablement active, zonal fire O/Ps for each zone up to zone 4.
- Remote inputs for remote evacuation, reset and silence alarms.
- One Man Sounder Test [see 4.2 above].
- Latching fault mode where all fault conditions latch until the panel is manually reset.
- Restore default configuration of zones and outputs.

16.4 Power Supply Load Calculation

The power supply load must not exceed a maximum identified below

Panel	Max Load
Mx-1002/Mx-1004	1.4 Amps
Mx-1008	2.9 Amps
Mx-1016	2.9 Amps
Mx-1032	4.9 Amps

To determine the maximum power supply load perform the following steps:

1. Look-up the mains failed panel load in alarm. Enter this value as I_{panel} .
3. Calculate the maximum load on the alarm circuits in mA in an alarm condition. Enter this value as I_{alarms} .
4. Calculate the load on the auxiliary supply in mA in an alarm condition. Enter this value as I_{aux} .
5. Calculate the maximum power supply load using the formula below:

I_{panel} mA

I_{alarms} mA

I_{aux} mA

$$\begin{aligned}
 I_{\text{pse}} &= (I_{\text{panel}} + I_{\text{aux}} + I_{\text{alarms}}) / 1000 \text{ A} \\
 &= (..... + +) / 1000 \text{ A} \\
 &= (.....) / 1000 \text{ A} \\
 &= \text{ A}
 \end{aligned}$$

Warning:

This current must not exceed the limits in the table above.

Note: A battery and loop calculation spreadsheet is available from your panel supplier to assist in site calculations

16.5 Battery Standby Capacity Calculation

This section describes how to calculate the minimum required standby battery capacity for the control panel. To determine the battery capacity perform the following steps:

1. Look-up the mains failed fault battery current. Enter this value as $I_{\text{panelfault}}$.
2. Look-up the mains failed alarm battery current. Enter this value as $I_{\text{panelalarm}}$.
3. Calculate the maximum load on the alarm circuits in mA in an alarm condition. Enter this value as I_{alarms} and enter this figure in the table.
4. Calculate the load on the auxiliary supply in mA in an alarm condition. Enter this value as I_{auxfault} .
5. Calculate the load on the auxiliary supply in mA in an alarm condition. Enter this value as I_{auxalarm} .
6. Calculate the total battery load in fault, I_{fault} .
7. Calculate the total battery load in alarm, I_{alarm} .

8. Enter the required standby time in hours, T_{fault} .
9. Enter the required time in alarm in hours, T_{alarm} .

$I_{\text{panelfault}} =$ mA

$I_{\text{auxfault}} =$ mA

$I_{\text{fault}} = [I_{\text{panelfault}} + I_{\text{auxfault}}]$ mA

$T_{\text{fault}} =$ hrs

$I_{\text{panelalarm}} =$ mA

$I_{\text{alarms}} =$ mA

$I_{\text{auxalarm}} =$ mA

$I_{\text{alarm}} = [I_{\text{panelalarm}} + I_{\text{alarms}} + I_{\text{auxalarm}}]$ mA

$T_{\text{alarm}} =$ hrs

10. Substitute the values in to the formula below.

$$\begin{aligned}
 C_{\text{min}} &= 1.25 \times ((T_{\text{fault}} \times I_{\text{fault}}) + 2 \times (T_{\text{alarm}} \times I_{\text{alarm}}))/1000 \text{ Ah} \\
 &= 1.25 \times ((\dots \times \dots) + 2 \times (\dots + \dots))/1000 \text{ Ah} \\
 &= 1.25 \times (\dots) + 2 \times (\dots)/1000 \text{ Ah} \\
 &= 1.25 \times (\dots + \dots)/1000 \text{ Ah} \\
 &= 1.25 \times \dots/1000 \text{ Ah} \\
 &= \dots/1000 \text{ Ah} \\
 &= \dots \text{ Ah}
 \end{aligned}$$

11. Select the next highest available battery size.

Notes:

1. ***The maximum battery capacities, which can be charged according to BFPSA recommendations, are:***
































Panel	Max Battery Capacity
Mx-1002 and Mx-1004	12Ah
Mx-1008 and Mx-1016	24 Ah
Mx-1032	40 Ah

2. ***Any battery that cannot be contained in the c.i.e. enclosure must be located in an enclosure adjacent to the c.i.e.***
3. ***The approved panels comprise internally mounted SLA batteries as listed below:***

Panel	Max Battery Capacity
Mx-1002 and Mx-1004	3Ah
Mx-1008	7Ah or 12Ah
Mx-1016	12Ah
Mx-1032	18 Ah

16.6 Panel Configuration Design Chart

Table 1 - Motherboard DIL Switch Configuration Design/Record

Switch No.	Position	Function	Setting
1-1	Off 	Fire Protection relays operate for a fire condition on any zone.	
	On 	Fire Protection relays operate for a fire condition on any latching fire zone.	
1-2	Off 	Silence and reset available as normal.	
	On 	Prevents alarms being silenced or reset for a period of 3 minutes after a fire alarm condition occurs	
1-3	Off 	Clock Module automatically turns off the delay mode once a day at the set time [the delay mode first being turned on manually].	
	On 	Clock Module automatically turns the delay mode on once a day and off once a day at the set times.	
1-4	Off 	Configuration mode disabled.	
	On 	Zones can be configured to non-latch mode via the Engineer's Select feature.	Table 2
1-5	Off 	Configuration mode disabled.	
	On 	Zones can be configured to Intrinsically Safe monitoring mode	Table 2
1-6	Off 	Configuration mode disabled	
	On 	Zones can be configured to "short circuit to fire" mode.	
1-7	Off 	Configuration mode disabled	
	On 	Zones can be configured to Delay Mode via the Engineer's Select feature.	Table 2
1-8	Off 	Configuration mode disabled.	
	On 	Configure delayed outputs via the Engineer's Select feature.	Table 3
1-9	Off 	Single Stage Delay Mode.	
	On 	Two Stage Delay Mode.	
1-10	Off 	Sounders operate on any fire condition including evacuate.	
	On 	Selects sounders to operate only when the panel is in the evacuate condition	
2-1	Off 	Reset available when panel is in the [un silenced] fire or fault condition	
	On 	Fire Condition Reset available only when panel is in Alarm Silenced condition.	
2-2	Off 	Delay Duration	Mark actual settings on table
		Delay disabled	
2-3	On 	1 min	
		2 min	
2-4	Off 	3 min	
		4 min	
2-5	On 	5 min	
		6 min	
2-6	Off 	7 min	
		8 min	
2-7	On 	9 min	
		10 min	
2-6	Off 	General Alarm Sounder Mode	
	On 	Zonal Sounder Mode	
2-7	Off 	Zonal sounders for zones in the fire condition operate continuously until silenced - all other zones are silent.	








Switch No.	Position	Function	Setting
	On 	Zonal sounders operate continuously - all other sounders pulse until silenced.	
2-8	Off 	Sounders operate in response to zone one-man test.	
	On 	Sounders do not respond to a zone one-man test.	
2-9	Off 	Buzzer enabled.	
	On 	Buzzer disabled	
2-10	Off 	Non-latched faults	
	On 	Latched faults.	

Table 2 - Zone Configuration Design/Record

Zone No	Zone Configuration			
	Non-Latch	Intrinsically Safe	Short Circuit = Fire	Delay
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				
26				
27				
28				
29				
30				
31				
32				

Table 3 - Output Delay Configuration Design/Record

Output	Output Configuration	
	Delay	Non-delay
Fire Routing		
Fire protection		
Alarm Devices		