

Universal

Digital 7 Day
Programmable



Comfort-Set®

90 Series™
PREMIUM

Model 975


**Installation and Operating
Instructions**

Retain for Future Use


EMERSON
Climate Technologies

 **WHITE-RODGERS**

Easy, Menu-Driven Set-Up and Programming

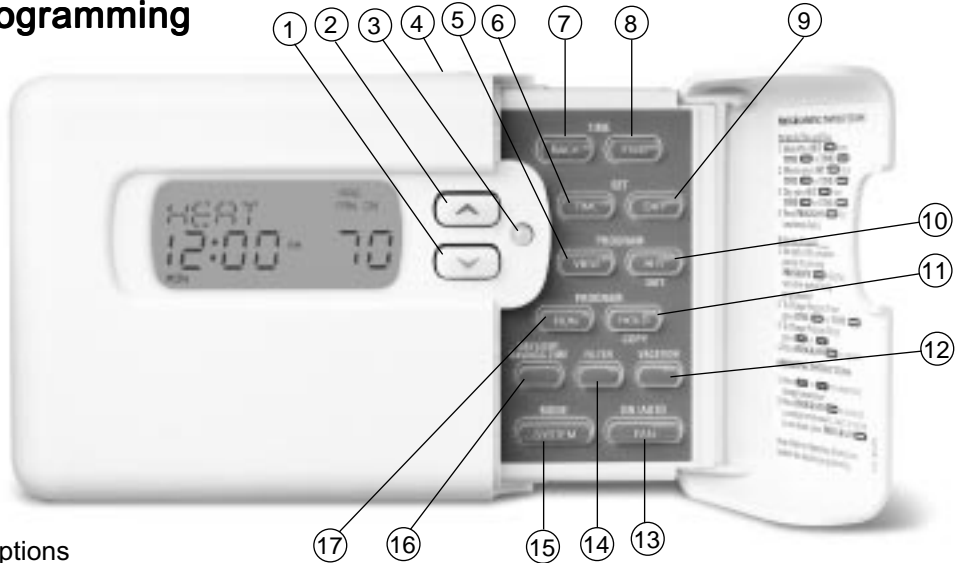

Premium options
to customize the thermostat
to fit your application.

INTRODUCTION

Thank you for purchasing your new Model 975 thermostat. White-Rodgers has been producing energy saving controls for over 60 years. We have been designing and producing the Comfort-Set family of electronic programmable thermostats since 1982. Model 975 is the third generation of the electronic programmable family. We believe you will find that Model 975 is the most user friendly and technologically

advanced thermostat available today.

You will find information about thermostat buttons and display in the component section beginning on page 2.

Installation instructions begin on page 4.

Instructions for optional thermostat configuration begin on page 23. Programming information begins on page 26. Descriptions of the thermostat's features begin on page 32.

We have also added thumb tabs to help you find sections of the manual.

ORIENTATION

THE THERMOSTAT BUTTONS

See inside front cover for illustration showing button locations.

- 1 (Blue arrow) Lowers temperature setting (45°F or 7°C minimum)
- 2 (Red arrow) Raises temperature setting (99°F or 37°C maximum)
- 3 The yellow indicator glows when the system is operating.
- 4 This button (on top of the cover) lights the display.
- 5 Used to initiate or review thermostat programming.
- 6 Used with **TIME** **FWD** / **TIME** **BACK** to set the clock.

- 7 Used to adjust the time backward, or to select the previous menu item.
- 8 Used to adjust the time forward, or to select the next menu item.
- 9 Used with **TIME** **FWD** / **TIME** **BACK** to set the current day.
- 10 Used to advance operation to the next program period.
- 11 Used to manually override programming to hold at a selected temperature.
- 12 Used to enter and configure the VACATION mode.
- 13 Selects fan operation (see The Display **21**). This button is also used to program the fan to run continuously during a program period.

- 14 Used to set the filter change-out time, or to set the filter change timer.
- 15 Sets the system mode (**HEATING**, **OFF**, **COOLING**, or **AUTOMATIC** changeover).
- 16 Used to adjust the clock one hour forward or back.
- 17 Used to start or return to program operation.

THE DISPLAY

18 Displays system mode (**HEAT**, **OFF**, **COOL**, **AUTO**, **HOLD**, or **VACA**).

During programming displays the time period (**MOR**, **DAY**, **EVE**, **NHT**) being programmed.. In the configuration menu, the menu item name is shown, one word at a time (**PRGM MODE**, **EMR**, **COOL FAN DELA OFF**, etc.).

19 **CHECK BATTERY** appears when the “AA” alkaline batteries are weak and should be replaced. **BATTERY** appears when the thermostat is running on battery power only. **CHECK STAT** appears when the thermostat detects certain problems within itself. **CHECK SYSTEM** appears when the thermostat detects certain problems in the heating system.

20 Indicates the length of time remaining in a temporary hold condition. Also indicates the length of time remaining in VACATION mode.

21 Displays **FAN ON** when the fan is operating continuously. Displays **FAN AUTO** when the fan cycles with the heating or cooling system.

22 Displays the setpoint temperature.

23 Alternately displays room temperature and time of day.

24 Shows the current day of the week. When programming, shows the day(s) being programmed.

25 The word **HEAT** or **COOL** will appear above or below the setpoint if area **18** is needed to display other information.

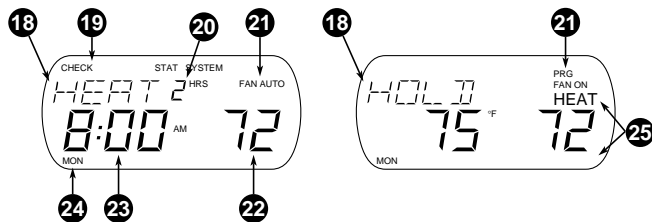


Figure 1. The Display

INSTALLATION

DESCRIPTION

This White-Rodgers Automatic Setback Digital Thermostat uses microcomputer technology to provide precise time and temperature control. This

thermostat offers the flexibility to design heating and cooling programs that fit personal needs. This thermostat is adaptable to most 24 Volt residential forced

air, hydronic (hot water or steam), millivolt, electric heat, zone and single-stage heat pump systems.

SPECIFICATIONS

Model 975:

7 Day programming

ELECTRICAL DATA

Electrical Rating:

17 to 30 VAC, 50/60 Hz

0.05 to 1.5 Amps

1.5 Amps maximum total load (all terminals combined)

Standard Systems:

Fuel: gas, oil, electric.

Type: Heating/Cooling, Heat Only, Hot Water or Steam Systems, Single Stage Compressor Heat Pump

THERMAL DATA

Setpoint Temperature Range:

45° to 99°F (7° to 37°C)

Operating Ambient Temperature:

32° to 110°F (0° to 43°C)

Operating Humidity Range:

90% non-condensing max.

Shipping Temperature Range:

-4° to 131°F (-20° to 55°C)

PRECAUTIONS

WARNING

Do not short out terminals on gas valve or primary control to test. Short or incorrect wiring will damage thermostat and could cause personal injury and/or property damage.

Do not use on circuits exceeding specified voltage. Higher voltage will damage thermostat and could cause shock or fire hazard.

Thermostat installation and all components of the system shall conform to Class II circuits per the NEC code.

CAUTION

To prevent electrical shock and/or equipment damage, disconnect electric power to system at main fuse or circuit breaker box until installation is complete.

NOTE

Read all instructions thoroughly before beginning installation.

This thermostat is intended for use with a low voltage system. Do not use directly on a line voltage system unless an isolation relay/transformer is installed.

Do not exceed ratings shown in the Specifications section, preceding page. If in doubt about the electrical ratings of your heating/cooling system, have it inspected by a qualified heating and air conditioning contractor or licensed electrician.

All wiring must conform to local and national electrical codes and ordinances.

This control is a precision instrument, and should be handled carefully. Rough handling or distorting components could cause the control to malfunction.

INSTALLATION

ATTENTION!

This product does not contain mercury. However, this product may replace a unit which contains mercury.

Do not open mercury cells. If a cell becomes damaged, do not touch any spilled mercury. Wearing non-absorbent gloves, take up the spilled mercury with sand or other absorbent material and place into a container which can be sealed. If a cell becomes damaged, the unit should be discarded.

Mercury must not be discarded in household trash. When the unit this product is replacing is to be discarded, place in a suitable container and return to White-Rodgers at 2895 Harrison Street, Batesville, AR 72501 for proper disposal.

REMOVE OLD THERMOSTAT

Shut off electricity at main fuse or circuit breaker box until installation is complete **AND** the jumper leads on the back of the new thermostat are configured properly.

Remove the front cover of the old thermostat. With wires still attached, remove wall plate from the wall.

Identify each wire attached to the thermostat using one of the labels enclosed with the new thermostat.

Disconnect the wires from the old thermostat one at a time. **DO NOT** let the wires fall back into the wall.

Install the new thermostat using the following procedures.

ATTACH BASE TO WALL

Remove packing material from the thermostat. Place fingers of one hand on the center top and bottom portion of the thermostat. Grasp the base in the other hand on top and bottom center and gently pull straight out. Forcing or prying on the thermostat will cause damage to the unit.

Place the base over the hole in the wall where the wires come out and mark mounting hole locations using the base as a template. Drill $3/16$ " pilot holes, and install screw anchors in the wall.

Run wires through hole in base and attach base to wall (see fig. 1).

Insert the wires into the terminals on the base using the appropriate wiring diagram and tighten the terminal screws.

CONFIGURING AND PROGRAMMING

Before the power is turned on, the thermostat must be configured to operate properly with the system. See the CONFIGURATION section of this manual.

This thermostat can be programmed for automatic temperature control. Refer to Operating Instructions for programming.

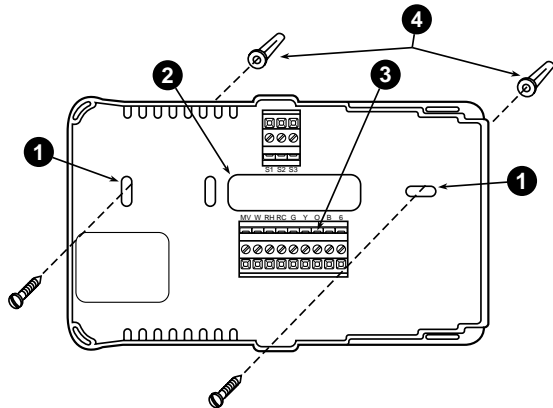


Figure 1. Thermostat base and terminals

- 1 Mounting screws
- 2 Pull wires through this opening
- 3 Insert wires into terminal holes, then tighten screws
- 4 Screw anchors

WIRING DIAGRAMS

All wiring diagrams are for typical systems only. Refer to equipment manufacturers' instructions for specific system wiring information.


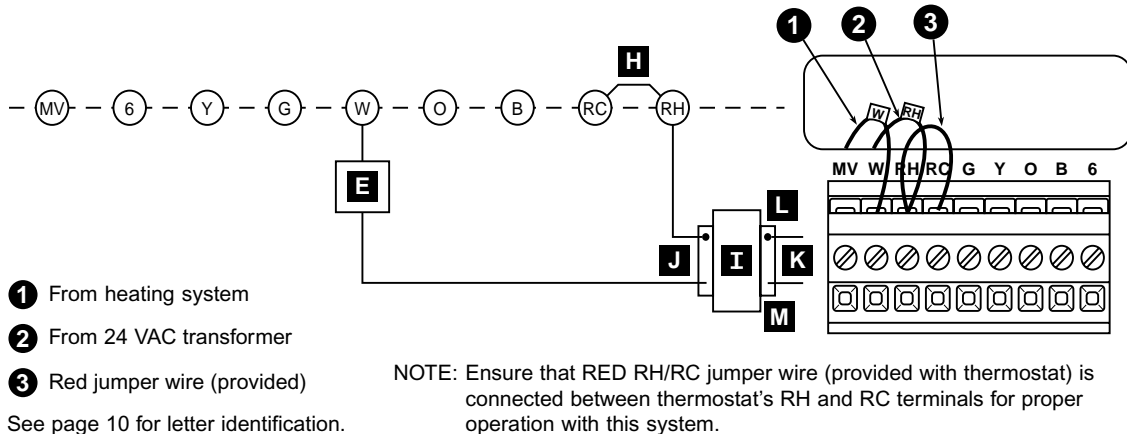


Figure 2. Typical wiring diagram for heating only, two-wire, single transformer system

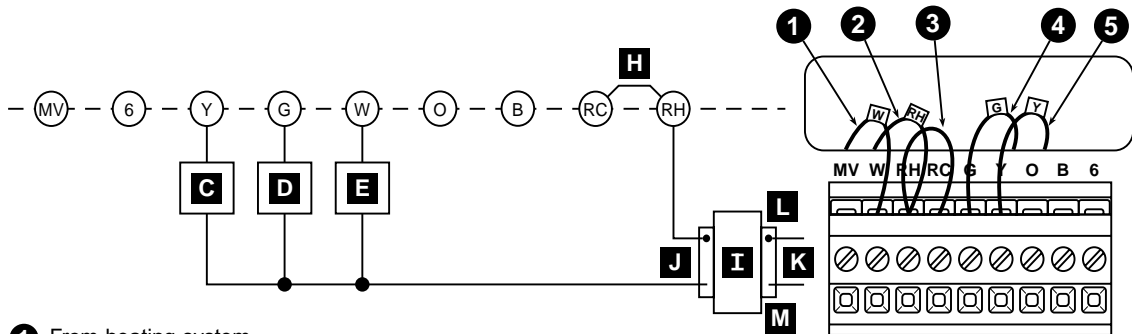

- ❶ From heating system
- ❷ From 24 VAC transformer
- ❸ Red jumper wire (provided)
- ❹ Red jumper wire (provided)
- ❺ Red jumper wire (provided)

NOTE: Ensure that RED RH/RC jumper wire (provided with thermostat) is connected between thermostat's RH and RC terminals for proper operation with this system.

NOTE: For three-wire heat only system, connect terminals **G**, **W**, and **RH**.
For cool only system, connect terminals **Y**, **G**, and **RH**.

See page 10 for letter identification.

Figure 3. Typical wiring diagram for heat only, cool only, & heat/cool single transformer system

WIRING DIAGRAMS



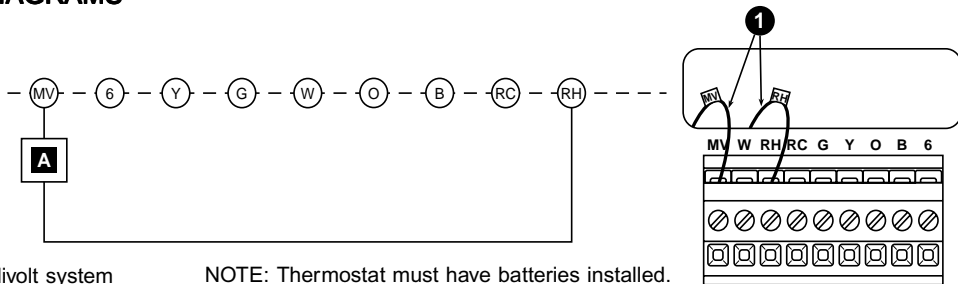


Figure 4. Typical wiring diagram for millivolt system

- | | | |
|--|--|--|
| A Millivolt System | G Changeover Relay Energized in Heating (Single Stage Heat Pump System) | L Hot Side |
| B Zone Valve | H Jumper Wire | M Neutral Side |
| C Cooling System | I TRANSFORMER | N HEATING TRANSFORMER |
| D Fan Relay | J 24 VAC Side | O COOLING TRANSFORMER |
| E Heating System | K 120 VAC Side | P Jumper Wire (field-installed) |
| F Changeover Relay Energized in Cooling (Single Stage Heat Pump System) | | |

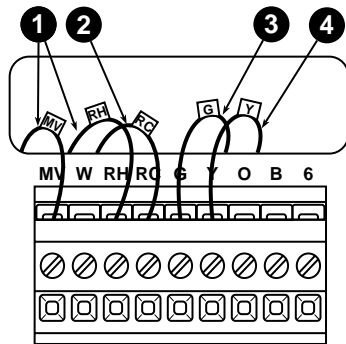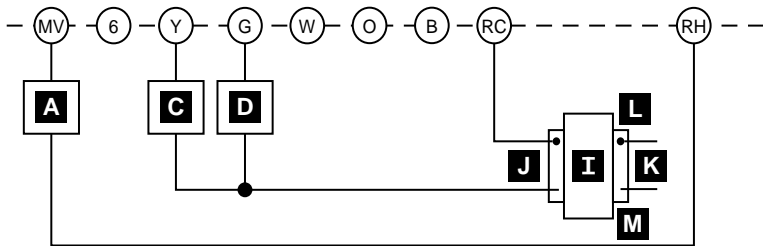


- ❶ From heating system
- ❷ From 24 VAC transformer
- ❸ From fan relay
- ❹ From cooling system

NOTE: Thermostat must have batteries installed.

See page 10 for letter identification.

Figure 5. Typical wiring diagram for two-wire millivolt heating & three-wire cooling system

WIRING DIAGRAMS

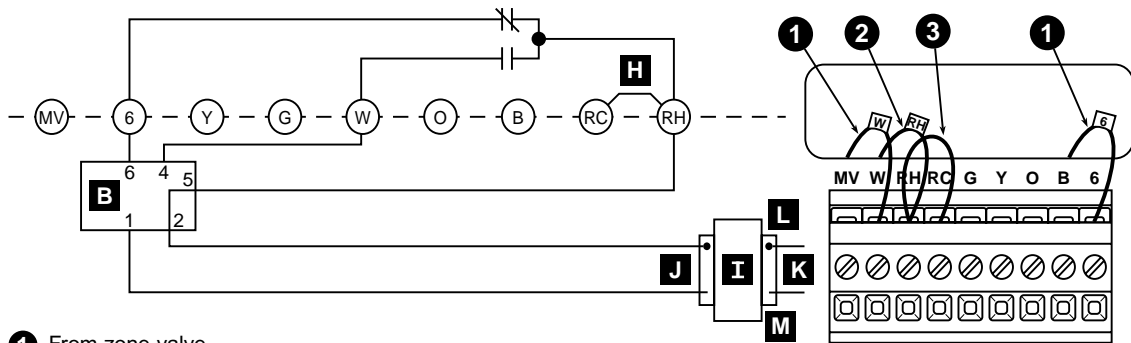


- ❶ From zone valve
- ❷ From 24 VAC transformer (through zone valve)
- ❸ Red jumper wire (provided)

See page 10 for letter identification.

NOTE: Thermostat must have batteries installed.

NOTE: Ensure that RED RH/RC jumper wire (provided with thermostat) is connected between thermostat's RH and RC terminals for proper operation with this system.


Figure 6. Typical wiring diagram for heat only, three-wire, zone valve system

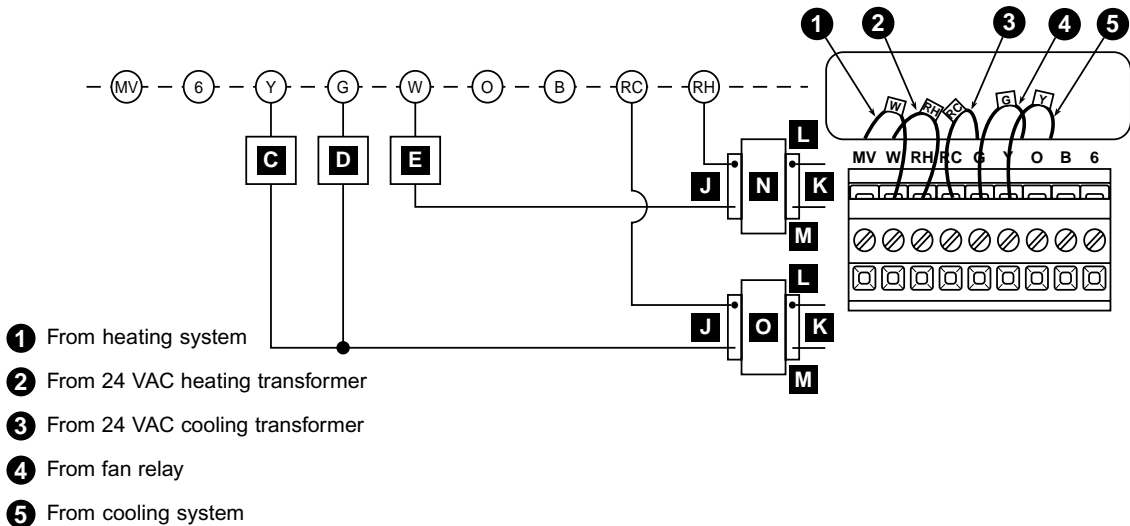

See page 10 for letter identification.

Figure 7. Typical wiring diagram for heat/cool, five-wire, two-transformer system

WIRING DIAGRAMS

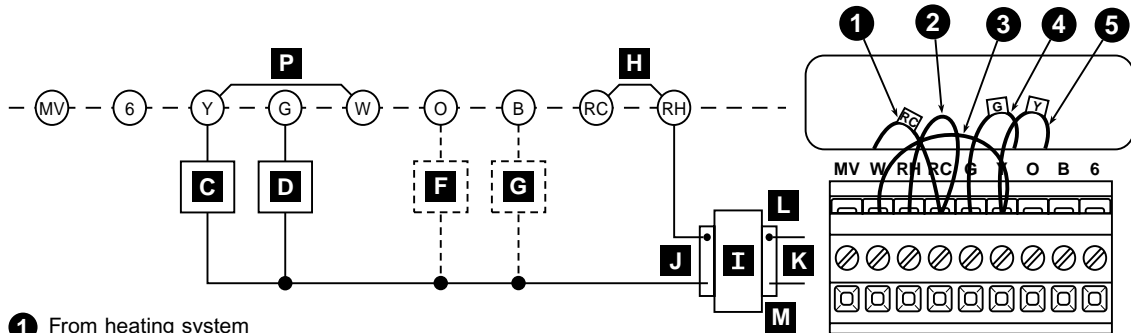

See page 10 for letter identification.

Figure 8. Typical wiring diagram for single stage heat pump, four-wire, single transformer system

CONFIGURATION

JUMPERS

Before turning power on to the system, the jumpers on the back of the thermostat must be configured to operate correctly with the system equipment.

This thermostat is configured from the factory to operate a standard fossil fuel (gas, oil, etc.), forced hot air system with a single stage air conditioning compressor and fan. This is the correct configuration for any system that **DOES NOT** require the thermostat to energize the fan on a call for heat.

If you have an electric heat or other system that **REQUIRES** the thermostat to control the fan, find and cut the jumper lead labelled W914 (see fig. 9). This will allow the thermostat to energize the fan

instantly on a call for heat. If you are unsure if the system requires the thermostat to control the fan, contact a qualified heating and air conditioning service person.

A remote sensor can be used with this thermostat. To use a remote sensor, jumper W922 must be clipped (see fig. 9) and the REMT SEN option in the configuration menu must be set to ON.

- 1 Clip for remote sense
- 2 3-pin connector
- 3 Clip for electric heat

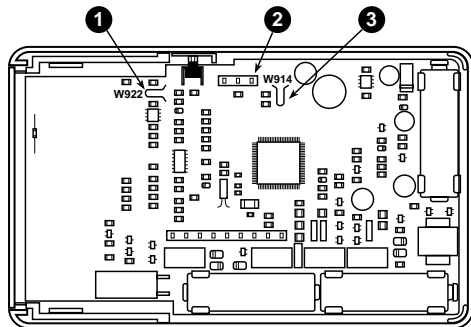


















Figure 9. Jumper locations

CONFIGURATION MENU

Step	Press Button(s)	Displayed (Factory Default)	Press  or  to select:	COMMENTS
1	TIME 	EMR (ON)	OFF	Selects EMR option ON or OFF
2	TIME 	SET CYCL HEAT (05)	02 - 40	Adjusts heat anticipation value (2 through 40)
3	TIME 	SET CYCL COOL (14)	09 - 40	Adjusts cool anticipation value (9 through 40)
4	TIME 	COOL FAN DELA OFF (01)	01 - 127	Adjusts cool fan-off delay (1 through 127 sec.)
5	TIME 	COOL FAN DELA ON (04)	01 - 05	Adjusts cool fan-on delay (1 through 5 sec.)
6	TIME 	COMP LOCK (ON)	OFF	Selects compressor lockout ON or OFF (see NOTE)
7	TIME 	SYSTEM (HEAT-OFF-COOL-AUTO)	HEAT-OFF, COOL-OFF, HEAT-OFF-COOL	Selects system switch choices for heat only, cool only, heat/cool or automatic changeover

8	TIME 	0°F (0)	5 LO to 5 HI	Adjusts temperature display higher or lower
9	TIME 	(°F)	C	Adjusts temperature display to °F or °C
10	TIME 	BEEP (ON)	OFF	Turns beeper ON or OFF
11	TIME 	REMT SEN (OFF)	ON	Selects remote sensor OFF or ON
12	TIME 	PART LOCK (OFF)	ON	Selects partial keypad lockout OFF or ON
13	TIME 	LOCK (OFF)	ON	Selects total keypad lockout OFF or ON
14	PROGRAM 			Returns to normal operation

CONFIGURATION

INSTALLER CONFIGURATION

The configuration settings can be changed at any time to meet system or personal requirements.

Press **PROGRAM** **RUN** to make certain the thermostat is in the run program mode, then press **TIME** **FWD** and **TIME** **BACK** at the same time to enter the configuration menu. The display will change to show the first option on the configuration menu. The chart on page 16 briefly describes each option on the menu. Following are more detailed descriptions of the options recommended for selection by the installer. For more detailed descriptions of other options, refer to the Operating Instructions. Make

selections for each option as required.

When the option is set to your choice, press **TIME** **FWD** to change the display to the next step. To return to a previous option, press **TIME** **BACK**.

To exit the configuration menu at any time, press **PROGRAM**.

SELECTABLE ENERGY MANAGEMENT RECOVERY

Energy Management Recovery (EMR) causes the thermostat to start operating the system early in order to make the building temperature reach the programmed setpoint at the programmed time. In heating, the thermostat will start 5 minutes early for every °F difference between the room temperature and

the *next* programmed temperature. In cooling the thermostat uses 15 minutes per °F.

The maximum time the thermostat can start early in heating is 75 minutes. The maximum time the thermostat can start early in cooling is 3 hours and 45 minutes. Cooling can start earlier because it takes longer to reach temperature.

ADJUSTABLE ANTICIPATION

This option allows the cycle times in heating and cooling to be increased or decreased. The factory set values can be adjusted higher for longer cycles or lower for shorter cycles.

The adjustment range for HEATING is from 2 to 40. The factory preset is 5. The adjustment range for

COOLING is from 9 to 40. The factory preset is 14. The recommended initial setting for hydronic systems is 35.

The cooling will not go below 9 because compressors require a longer cycle.

The chart below shows how this adjustment range affects thermostat performance.

PROGRAMMABLE COOL FAN-ON AND FAN-OFF DELAY

This option allows a selection of a fan-on delay of 1 to 5 seconds on a call for cool and 1 to 127 seconds of fan-off delay after the thermostat has satisfied the call for cool.

A short delay to allow the A-coil to cool off before the fan turns on may

be preferred. This also allows the compressor and the fan to come on at slightly different times, which allows full power to the compressor on start up.

The fan off delay allows the fan to continue running after the compressor has shut off. This distributes the cooling that would otherwise stay trapped in the air conditioning coils through the ducts. Ideally the timing

	HEATING		COOLING	
Anticipation Value	Cycle Length	Differential Temperature	Cycle Length	Differential Temperature
2-8	Shorter	0.4-0.6 F (0.2-0.3 C)	N/A	N/A
9-20	Longer	0.6-1.0 F (0.3-0.6 C)	Shorter	0.6-1.0 F (0.3-0.6 C)
21-40	Hydronic	1.0-1.6 F (0.6-0.9 C)	Longer	1.0-1.6 F (0.6-0.9 C)

These numbers are approximate and represent operation with a typical system. Actual temperature differentials and run times may vary widely based on your building and equipment, as well as outdoor temperature conditions.

CONFIGURATION

would be set so the fan shuts off just as the cool air is exhausted. If this timing is set too long the fan may begin blowing warm air before it shuts off. Shortening the fan-off delay will prevent this.

COMPRESSOR LOCKOUT

This thermostat is designed to protect the system against premature compressor failure by “locking out” the compressor for at least five minutes after each cycle. When the thermostat is in compressor lockout, the word COOL will flash on the display. During this period, the compressor will not be energized.

If the **system** has short-cycle protection, this feature can be disabled.

Lockout Bypass Option

FOR QUALIFIED SERVICE TECHNICIANS' USE ONLY. HOMEOWNERS SHOULD NOT USE THIS FEATURE DUE TO POSSIBILITY OF EQUIPMENT OR PROPERTY DAMAGE, OR PERSONAL INJURY.

DISABLING HEAT, COOL OR AUTO MODES

The automatic changeover feature of this thermostat can be disabled (automatic changeover allows the thermostat to switch between heating and cooling to maintain temperature). If this thermostat is controlling a heating-only or cooling-only system, the heat, cool, or auto modes can be disabled.

COMPRESSOR SHORT TERM CYCLE PROTECTION

This thermostat has a built-in short term (5-minute) time delay. During this 5-minute period, the thermostat will lock out the compressor to allow head pressure to stabilize. To override this feature for one cycle while testing thermostat operation, press **SET** **TIME** and **SET** **DAY** buttons at the same time.

OPTIONAL REMOTE TEMPERATURE SENSE

An optional remote sensor (part # F145-1328) can be attached to this thermostat and may be wired as far away as 200 feet. The thermostat will use the temperature in the remote location as its room

CHECK THERMOSTAT OPERATION

temperature display.

This is an excellent feature if the thermostat is in a poor location for sensing temperature or the thermostat is in a separate room to prevent tampering.

NOTE

The remote sense feature will not work if the system does not provide 24V to the thermostat (example: millivolt heating-only systems or 3-wire zone valves).

To use a remote sensor, jumper W922 must be clipped (see figure 9) **and** the REMT SEN option in the configuration menu must be set to ON.

After the thermostat is installed and configured, do the following to ensure proper operation.

FAN OPERATION

If your system **does not** have a G terminal connection, skip to “Heating System” section.

1. Turn power on to the system.
2. Press **FAN** until **FAN ON** is displayed. The fan should begin to operate.
3. Press **FAN** until **FAN AUTO** is displayed. The fan should stop operating.

HEATING SYSTEM



1. Press **SYSTEM** until **HEAT** is displayed. If the heating system has a standing pilot, ensure that it is lit.
2. Press **▲** to adjust thermostat setting above room temperature. The heating system should begin to operate.
3. Press **▼** to adjust temperature below room temperature. The heating system should stop operating.

CHECK THERMOSTAT OPERATION

COOLING SYSTEM





WARNING

To prevent compressor and/or property damage, if the outdoor temperature is below 50°F (10°C), DO NOT operate the cooling system.

1. Press **SYSTEM** until **COOL** is displayed.
2. Press  to adjust thermostat setting below room temperature. The fan should come on (after the fan-on delay time, if any), followed by cold air circulation.
3. Press  to adjust temperature setting above room temperature. The cooling system should stop operating, and the fan should stop running (after the fan-off delay time, if any).

RESETTING THERMOSTAT

The thermostat can be reset back to factory default programs and configuration options. Removing power from the thermostat **will not** reset it to the default settings. Before resetting the thermostat, you may want to make note of the previously selected configuration options and programming.

To reset the thermostat, press and release **PROGRAM** , then press the , **TIME**  and  buttons at the same time. This will reset the thermostat to factory default programs and configuration. The display will momentarily go blank, then all segments on the display will momentarily be shown. The thermostat will then go into the

HOLD mode and will maintain factory preset temperatures.

CONFIGURATION

The configuration menus allow you to set certain thermostat operating characteristics to your system or personal requirements.










To enter the User Configuration menu, press **PROGRAM** **RUN** to make sure the thermostat is in the run program mode, then press **TIME** **FWD** and **TIME** **BACK** at the same time to enter the configuration menu. The display will show the first item in the configuration menu.








The following chart (pages 24 & 25) describes each item on the menu and the applicable model(s). Set these according to your personal preference. To exit the menu, press **PROGRAM** **RUN**. To return to the menu at any time press **PROGRAM** **RUN**, then press **TIME** **FWD** and **TIME** **BACK** at the same time. While in the configuration menu, if you do not press any buttons for **two** minutes, the thermostat will revert to normal operation.

You should contact a qualified service person to change items that are indicated “**Recommend Installer Setting**”.

Operator may change shaded options if desired. We recommend that other options be set by the installer.

CONFIGURATION MENU

Step	Press Button(s)	Displayed (Factory Default)	Press  or  to select:	COMMENTS
1	TIME 	EMR (ON)	OFF	Selects EMR option ON or OFF
2	TIME 	SET CYCL HEAT	Recommend installer setting	
3	TIME 	SET CYCL COOL	Recommend installer setting	
4	TIME 	COOL FAN DELA OFF	Recommend installer setting	
5	TIME 	COOL FAN DELA ON	Recommend installer setting	
6	TIME 	COMP LOCK	Recommend installer setting	
7	TIME 	SYSTEM	Recommend installer setting	

8	TIME 	0°F (0)	5 LO to 5 HI	Adjusts temperature display higher or lower
9	TIME 	(°F)	°C	Adjusts temperature display to °F or °C
10	TIME 	BEEP (ON)	OFF	Turns beeper ON or OFF
11	TIME 	REMT SEN	Recommend installer setting	
12	TIME 	PART LOCK (OFF)	ON	Selects partial keypad lockout OFF or ON
13	TIME 	LOCK (OFF)	ON	Selects total keypad lockout OFF or ON
14	PROGRAM 			Returns to normal operation

PROGRAMMING

MANUAL OPERATION

Your Comfort-Set 90 thermostat can be used to control temperature manually (without programming).

For manual operation, press **SYSTEM** to select **HEAT** or **COOL**, then press **PROGRAM** **HOLD**. Use **▲** or **▼** to set the temperature as desired.

PROGRAMMED OPERATION

Planning Your Program

The sample schedule (pages 28 & 29) shows the factory installed programs for heating and cooling. The heating and cooling programs are separate, and must be programmed individually. To use the factory program, set the clock and press **PROGRAM** **RUN** with the thermostat **SYSTEM** set to **Heat**,

Cool, or Auto.

Fill out the blank schedules (pages 30 & 31) with the time and temperatures you want in **your** program. Fill in every space for your program.

The same temperature can be repeated more than once if you do not want the temperature to change over several time periods.

Entering Your Program

To Set the Clock:

1. Press **PROGRAM** **RUN**.
2. Press **SET** **TIME**. The display will show the hour. Use **TIME** **FWD** or **TIME** **BACK** to set to the current hour and AM/PM designation.

3. Press **SET** **TIME** again. The display will show minutes. Use **TIME** **FWD** or **TIME** **BACK** to set to the current minutes.

4. Press **PROGRAM** **RUN**.

To Set the Day:

5. Press **SET** **DAY**. The display will indicate a day of the week. Use **TIME** **FWD** or **TIME** **BACK** to set to the current day of the week.

6. Press **PROGRAM** **RUN**.

To Set the Program:

7. Press **SYSTEM** to select **HEAT** (for heating program) or **COOL** (for cooling program).

8. Press **PROGRAM** **VIEW** one time. The display will show **MOR**

and the settings for time and temperature.

9. If you program Monday the first time you press **PROGRAM** **VIEW** it will be copied to the rest of the week. To program the other days of the week press **ADV.**/**DAY** to until you reach the day you wish to change and follow Steps 10, 11 & 12. You can also copy the program from one day to another. To copy, press **HOLD**/**COPY**. The display will show **COPY**, and all the other days of week will be flashing. Press **HOLD**/**COPY** again to copy the day in to the rest of the week or press **TIME** **FWD** or **TIME** **BACK** until you reach the day you want to copy to and press **HOLD**/**COPY**.

10. Press **TIME** **FWD** or **TIME** **BACK** to set the time on the display as selected in your **HEATING** or **COOLING Schedule**. Be sure to check the AM or PM on the display.

11. Press the red **^** or blue **v** button to adjust the temperature to match your schedule. If you want the fan ON continuously during this period, press **FAN**.

12. Press **PROGRAM** **VIEW** one time. **MOR** on the display will change to **DAY**. Repeat steps 10 and 11 to enter time and temperature for this period.

13. Press **PROGRAM** **VIEW** to continue through the entire schedule, entering time and temperature for each period. When

you are satisfied that your program matches your schedule, press **PROGRAM** **RUN**. Programming is now complete for this mode and your program is running.

14. To program the other mode, repeat the procedure from step 6.

7 Day Sample HEAT Program Schedule (Shows factory programming)

	①		②		③		④	
	⑤	⑥	⑤	⑥	⑤	⑥	⑤	⑥
MON	6:00 AM	70°F (21°C)	8:00 AM	62°F (16°C)	5:00 PM	70°F (21°C)	10:00 PM	62°F (16°C)
TUE	6:00 AM	70°F (21°C)	8:00 AM	62°F (16°C)	5:00 PM	70°F (21°C)	10:00 PM	62°F (16°C)
WED	6:00 AM	70°F (21°C)	8:00 AM	62°F (16°C)	5:00 PM	70°F (21°C)	10:00 PM	62°F (16°C)
THU	6:00 AM	70°F (21°C)	8:00 AM	62°F (16°C)	5:00 PM	70°F (21°C)	10:00 PM	62°F (16°C)
FRI	6:00 AM	70°F (21°C)	8:00 AM	62°F (16°C)	5:00 PM	70°F (21°C)	10:00 PM	62°F (16°C)
SAT	6:00 AM	70°F (21°C)	8:00 AM	62°F (16°C)	5:00 PM	70°F (21°C)	10:00 PM	62°F (16°C)
SUN	6:00 AM	70°F (21°C)	8:00 AM	62°F (16°C)	5:00 PM	70°F (21°C)	10:00 PM	62°F (16°C)

① Morning (MOR)

② Day (DAY)

③ Evening (EVE)

④ Night (NHT)

⑤ Start Time

⑥ Temperature

7 Day Sample COOL Program Schedule (Shows factory programming)

	①		②		③		④	
	⑤	⑥	⑤	⑥	⑤	⑥	⑤	⑥
MON	6:00 AM	78°F (25°C)	8:00 AM	85°F (29°C)	5:00 PM	78°F (25°C)	10:00 PM	82°F (27°C)
TUE	6:00 AM	78°F (25°C)	8:00 AM	85°F (29°C)	5:00 PM	78°F (25°C)	10:00 PM	82°F (27°C)
WED	6:00 AM	78°F (25°C)	8:00 AM	85°F (29°C)	5:00 PM	78°F (25°C)	10:00 PM	82°F (27°C)
THU	6:00 AM	78°F (25°C)	8:00 AM	85°F (29°C)	5:00 PM	78°F (25°C)	10:00 PM	82°F (27°C)
FRI	6:00 AM	78°F (25°C)	8:00 AM	85°F (29°C)	5:00 PM	78°F (25°C)	10:00 PM	82°F (27°C)
SAT	6:00 AM	78°F (25°C)	8:00 AM	85°F (29°C)	5:00 PM	78°F (25°C)	10:00 PM	82°F (27°C)
SUN	6:00 AM	78°F (25°C)	8:00 AM	85°F (29°C)	5:00 PM	78°F (25°C)	10:00 PM	82°F (27°C)

① Morning (MOR)

② Day (DAY)

③ Evening (EVE)

④ Night (NHT)

⑤ Start Time

⑥ Temperature

7 Day Personal HEAT Program Schedule

	①		②		③		④	
	⑤	⑥	⑤	⑥	⑤	⑥	⑤	⑥
MON								
TUE								
WED								
THU								
FRI								
SAT								
SUN								

- ① Morning (MOR)
- ② Day (DAY)
- ③ Evening (EVE)
- ④ Night (NHT)
- ⑤ Start Time
- ⑥ Temperature

7 Day Personal COOL Program Schedule

	①		②		③		④	
	⑤	⑥	⑤	⑥	⑤	⑥	⑤	⑥
MON								
TUE								
WED								
THU								
FRI								
SAT								
SUN								

- ① Morning (MOR)
- ② Day (DAY)
- ③ Evening (EVE)
- ④ Night (NHT)
- ⑤ Start Time
- ⑥ Temperature

FEATURES

Large Lighted Liquid Crystal Display (LCD).

The large numbers and letters on your LCD screen make it easy to see. In low light conditions, press the button on top of the thermostat and the display will light up for three seconds. For ten minutes after pressing the light button, pressing any other button will light the display for ten seconds. The display light uses power from the 3 “AA” alkaline batteries installed. Excessive use of the display light will reduce battery life.

The thermostat display alternately shows the current time and the current temperature on the left side. The display also shows the temperature you have programmed

or set on the right side of your screen.

Setpoint Range 45-99°F (7-37°C).

You may set your thermostat to any temperature from 45° to 99°F. If you prefer, you may configure the thermostat to display Celsius. This is covered in the CONFIGURATION section (page 25, step 9).

Selectable Energy Management Recovery (EMR).

EMR causes the thermostat to start operating the system early in order to make the building temperature reach your program setpoint at the time you specify. In heating, the thermostat will start 5 minutes early for every 1°F difference between the

room temperature and the next programmed temperature. In cooling, the thermostat uses 15 minutes per °F.

EXAMPLE: If the temperature in the room is 65°F and the thermostat is programmed for 70°F at 7 AM, the thermostat will start approximately 25 minutes early. The difference between the room temperature (65°F) and the setpoint (70°F) is 5°. 5° X 5 minutes per °F = 25 minutes. The setpoint on the display will actually change to display 70° about 25 minutes early.

The maximum time the thermostat can start early in heating is 75 minutes. The maximum time the thermostat can start early in cooling

is 3 hours and 45 minutes. Cooling can start earlier because it takes longer for cooling systems to reach the desired temperature.


To select or deselect this feature, refer to the CONFIGURATION section (page 24, step 1).

Adjustable Temperature Display.

The room temperature display can be adjusted to read higher or lower by following the configuration menu and adjusting the temperature to a higher or lower value. The thermostat is calibrated at the factory to display a very accurate room temperature, but due to various conditions and/or personal preference, you may wish to adjust the thermostat display higher or lower (up to 5°F). For example, if the

thermostat displays a room temperature of 70° but you want it to display **73°**, you can adjust it. To adjust, refer to the CONFIGURATION section (page 25, step 8).

Factory Preprogrammed Times and Temperatures.

This thermostat has been programmed at the factory. The chart in the programming examples section lists these factory settings. If the times and temperatures are the same as your schedule, you may simply run the factory installed program by pressing **PROGRAM** .

Arm Chair Programming.

The thermostat uses 24 VAC power supplied by the system for normal operation. However, if the installed “AA” batteries are providing

sufficient power, you can program the thermostat away from the wall. If the thermostat indicates low battery power (**CHECK BATTERY**), refer to the Battery Back-up feature (page 37).

Programmable Fan Control.

This feature allows you to have your fan operate continuously through one or more programmed time periods. This is useful if you want to have constant air circulation in your location during a specific time period. If you do not use this feature, the fan will cycle normally with the heating and cooling system.

Automatic Changeover.

If you have a heating/cooling system, the thermostat can be set to automatically switch the system

from heating to cooling as needed. To set your thermostat to this operating mode, press **SYSTEM** button until **AUTO** is displayed on the screen.

Pressing the **▲** and **▼** buttons at the same time will change the setpoint temperature displayed to the setpoint of the other mode. This will allow you to modify both the HEAT and COOL setpoints to accommodate a HOLD condition while in Automatic Changeover mode.

Air Filter Change-Out Indicator.

This feature allows the thermostat to display the words **CHNG FLTR** (change filter) after a set time of fan operation. This is a reminder to

change or clean your air filter. The factory set interval for **CHNG FLTR** to be displayed is 200 hours of fan operation. This can be set anywhere from 0 to 1950 hours in 25 hour increments. **A selection of 00 will cancel this feature.**

When **CHNG FLTR** is displayed, you can clear it by pressing the **FILTER** button. This resets the timer and starts counting the hours until the next filter change.

The following steps will allow you to change the number of hours for filter change-out.

1. If you see **CHNG FLTR** on the display, press the **FILTER** button once to reset the timer. If you do not see **CHNG FLTR** proceed to step 2. When the **FILTER** button is pressed

once, the display will show the number of hours remaining before **CHNG FLTR** indicator will display.

2. Press the **FILTER** button. The display will show **SET FILTER TIME** and will show the number of hours to filter change.
3. Press **TIME** **FWD** or **TIME** **BACK** to change the time to your requirements.
4. Press **PROGRAM** **RUN** to return to the normal operating mode.

NOTE: If unsure what interval to use between filter changes or cleaning, contact the manufacturer of your heating/cooling equipment.

Temporary Program Override.

Any time your program is running and you would like to override it for

a specific amount of time, press **▲** or **▼** until the temperature you want is displayed. The display will indicate **HOLD**, and the number of hours remaining in the hold period will be indicated with the word **HRS**. To adjust the length of time for the override, press **TIME** **FWD** or **TIME** **BACK**. **HOLD TILL** will be displayed as well as the HOLD period expiration time. Press **TIME** **FWD** or **TIME** **BACK** buttons until you reach the time you would like it to resume the program. The **TIME** **FWD** or **TIME** **BACK** buttons adjust the time in 15 minute increments. This programmed hold time has a 19 hour maximum and 15 minute minimum. Beyond 19 hours you may wish to use the vacation hold

feature (page 36). If you need to, you can adjust the temperature up or down.

Indefinite Program Hold.

If you want to operate the thermostat to keep a set temperature without a program running, press **PROGRAM** **HOLD**. The **▲** or **▼** buttons can be used to raise or lower the temperature. The thermostat will hold the set temperature until you return to the program by pressing **PROGRAM** **RUN**.

Thermostat Startup After Total Power Loss.

On installation, or when power is restored after a total power loss to the thermostat, your thermostat will automatically maintain a heating

temperature of 62°F (16°C) and a cooling temperature of 85°F (29°C). A total loss of power will occur when you lose 24 VAC power to the thermostat, and you have no battery backup. If this happens, the thermostat display will go blank in about one minute after power loss.

When power is restored, the thermostat will automatically return to the temperatures listed above. If this happens, set the clock and day of the week (use steps 1 through 6 from “**Entering Your Program**”, page 26), then select **HEAT**, **COOL** or **AUTO** using the **SYSTEM** button, and press **PROGRAM** **RUN** to resume operation with your previously set program.

Daylight Savings Time Button.

One button adjustment allows you to change your thermostat clock between Standard Time and Daylight Savings time. Simply push the **DAYLIGHT SAVINGS TIME** button to advance the time forward one hour in the Spring. In the Fall, press the **DAYLIGHT SAVINGS TIME** button twice to fall back an hour. If you push it three times in a row (in less than 30 seconds) it will return to the original time setting. After clock adjustment, press **PROGRAM** **RUN** to resume your normal program.

Programmable Vacation Time/Temperature Operation.

The **VACATION** button allows you to program the thermostat to hold a constant temperature for 1 to 29

days. At the end of the day and time you select, the thermostat will return to normal program operation.



To program the number of days, press **VACATION**. **VACA HOLD TILL** will be displayed. The display will also show **DAYS** (flashing) and the number **5**. To change the number of vacation days, press **TIME** **FWD** or **TIME** **BACK**. Press **▲** or **▼** to set the temperature you wish to maintain while away. While still in the vacation mode, set the time you want the program to resume by pressing **SET** **TIME** once. The current time will display. Press **TIME** **FWD** to adjust the time in 15 minute increments. You may wish to select a few hours in advance of your expected return to allow time to reach the desired

temperature. Your thermostat is now programmed to hold the temperature you selected through your vacation for **HEAT**, **COOL**, or **AUTO**.

After 20 seconds the display will return to time/temperature alternation, and will display **VACA**. Pressing **VACATION** again will activate the vacation mode settings. Pressing **PROGRAM** **RUN** cancels this feature and begins running your normal program.

Keypad Lockout.

This security feature allows you to lock out the keypad to prevent unauthorized tampering with the program. Two levels of security are available, Total Keypad Lockout or Partial Keypad Lockout. Total Keypad Lockout renders all buttons inoperative. Partial Keypad Lockout

allows only the  or  to operate for temporary temperature overrides. It also limits the temperature to the maximum heating and minimum cooling temperatures used in your program. This is especially useful in buildings where unscheduled events are common. Anyone can change the temperature, but only between the temperatures you set and only for two hours or the number of hours you specify if you set up your Hold Till timing (see Temporary Program Override (page 34). To select or deselect this feature, refer to the CONFIGURATION section (page 25, steps 12 and 13).

Battery Back-Up.

Three “AA” alkaline batteries allow the thermostat to maintain its

program in the event of a power loss. They also operate the back light for viewing the display in low light conditions, and allow for armchair programming.

CHECK BATTERY will be displayed when the batteries are low. To assure optimum performance, change batteries once a year or when **CHECK BATTERY** is displayed. When changing batteries, always replace all three batteries with new “AA” alkaline batteries (for optimum performance, we recommend Energizer® batteries). If the batteries must be changed frequently, it may indicate a problem with the system. Contact the heating/cooling system manufacturer or a service person. Remember that excessive use of the display


light will reduce battery life.

System and Thermostat Diagnostics.

The display will indicate **CHECK SYSTEM** if the room temperature does not rise within two hours of the call for heat. After two hours the thermostat will quit calling for heat for one minute (this allows some furnaces to reset) and call for heat again. It will repeat this sequence three times. If the temperature still does not rise, it will continue to call for heat. This normally indicates the heating system is not working correctly. You may wish to consult your furnace manufacturer or service person.

The display will indicate **CHECK STAT** if one of the following occurs.

- One of the buttons is stuck down or in. Check buttons, make sure nothing is pushing them in.
- The thermostat sensor is not functioning. If using a remote sensor, check connections, wiring and power.

After checking the above, press **PROGRAM**  to reset the display. If this does not clear the display, disconnect power and remove the batteries for five minutes.

If these checks fail to solve the problem, the thermostat should be replaced.

Compressor Short-Cycle Protection.

Your thermostat is designed to protect your system against

premature compressor failure by “locking out” the compressor. This ensures that the compressor will stay off for at least five minutes on each cycle. When the thermostat is in compressor lock-out, the word **COOL** will flash. During this period, the compressor will not be energized.

INDEX

Adjustable Temperature Display	33	Fan Control, Programmable	33	PROGRAMMING	26
Air Filter Change-out Indicator	34	Factory Preprogrammed	33	Schedule	
Arm Chair Programming	33	FEATURES	32	Sample Programs	28
Automatic Changeover	33	INTRODUCTION	1	Personal Programs	30
Battery Back-Up	37	Keypad Lockout	36	Set	
COMPONENTS	2	Liquid Crystal Display	32	Clock	26
Thermostat Buttons	2	Operation		Day	26
Display	3	Manual	26	Program	26
Compressor Short-Cycle		Programmed	26	Setpoint Range	32
Protection	38	Program		System and Thermostat	
CONFIGURATION	23	Entering Your	26	Diagnosis	37
Configuration Menu Chart	24	Indefinite Hold	35	Thermostat Startup After Total	
Copy	27	Planning Your	26	Power Loss	35
Daylight Savings Time Button	36	Temporary Override	34	Vacation	36
Energy Management Recovery	32	INSTALLATION	4		
		ORIENTATION	2		



www.white-rodgers.com

The Emerson logo is a
trademark and service mark
of Emerson Electric Co.

White-Rodgers is a division
of Emerson Electric Co.

Printed in U.S.A.

PART NO. 37-6438A

0223