

# ESX Bus Interface Card for FRENIC-VG

## ***OPC-VG1-ESX***

---

<b>⚠ CAUTION</b>
------------------

Thank you for purchasing our ESX bus interface card designed for the high-performance, vector control FRENIC-VG series of inverters.

- Improper handling might result in incorrect operation, a short life, or even a failure of this product.
- Deliver this manual to the end user of this product. Keep this manual in a safe place until this product is discarded.
- This manual does not contain the description of function codes or troubleshooting information. Read through this manual in conjunction with the FRENIC-VG User's Manual.

## Preface

Thank you for purchasing our ESX bus interface card "OPC-VG1-ESX."

The interface card is used to connect our high-performance, vector control FRENIC-VG series of inverters to a ESX-bus network. Mounting this interface card on your FRENIC-VG allows you to connect the FRENIC-VG to a Fuji MICREX-ESX series of programmable logic controllers and control it as a slave unit using run and speed commands, and accessing function codes.

This interface card can be connected to D-port of option connection ports on the FRENIC-VG.

This instruction manual does not contain the description of function codes, troubleshooting information, or handling instructions of the inverter and the MICREX-ESX series. Read through this manual in conjunction with the FRENIC-VG Instruction Manual and User's Manual to become familiar with proper handling and operation. Improper handling might result in incorrect operation, a short life, or even a failure of the interface card.

Keep this manual in a safe place.

### Related Publications

Listed below are the other materials related to the use of the ESX bus interface card "OPC-VG1-ESX." Read them in conjunction with this manual as necessary.

- FRENIC-VG User's Manual
- FRENIC-VG Instruction Manual

The materials are subject to change without notice. Be sure to obtain the latest editions for use.

## ⚠ CAUTION

- Read through this instruction manual to become familiar with this product before proceeding with installation, connections (wiring), operation, or maintenance and inspection.
- Improper handling might result in incorrect operation, a short life, or even a failure of this product as well as the motor.
- Deliver this manual to the end user of this product. Keep this manual in a safe place until this product is discarded.

### ■ Safety precautions

Read this manual thoroughly before proceeding with installation, connections (wiring), operation, or maintenance and inspection. Ensure you have sound knowledge of the device and familiarize yourself with all safety information and precautions before proceeding to operate the inverter.

Safety precautions are classified into the following two categories in this manual.

<b>⚠ WARNING</b>	Failure to heed the information indicated by this symbol may lead to dangerous conditions, possibly resulting in death or serious bodily injuries.
<b>⚠ CAUTION</b>	Failure to heed the information indicated by this symbol may lead to dangerous conditions, possibly resulting in minor or light bodily injuries and/or substantial property damage.

Failure to heed the information contained under the CAUTION title can also result in serious consequences. These safety precautions are of utmost importance and must be observed at all times.

### Installation and wiring

## ⚠ WARNING ⚠

- Before starting installation and wiring, **turn OFF the power and wait at least five minutes for inverters of 22 kW or below, or at least ten minutes for those of 30 kW or above.** Make sure that the LED monitor and charging lamp are turned OFF. Further, make sure, using a multimeter or a similar instrument, that the DC link bus voltage between the terminals P(+) and N(-) has dropped to the safe level (+25 VDC or below).
- Qualified electricians should carry out wiring.  
**Otherwise, an electric shock could occur.**
- In general, sheaths of the control signal wires are not specifically designed to withstand a high voltage (i.e., reinforced insulation is not applied). Therefore, if a control signal wire comes into direct contact with a live conductor of the main circuit, the insulation of the sheath might break down, which would expose the signal wire to a high voltage of the main circuit. Make sure that the control signal wires will not come into contact with live conductors of the main circuit.  
**Doing so could cause an accident or an electric shock.**
- Do not use the product that is damaged or lacking parts.  
**Doing so could cause a fire, an accident, or injuries.**

## ⚠ CAUTION

- Prevent lint, paper fibers, sawdust, dust, metallic chips, or other foreign materials from getting into the inverter and the interface card.  
**Otherwise, a fire or an accident might result.**
- Incorrect handling in installation/removal jobs could cause a failure.  
**A failure might result.**

### Operation

## ⚠ WARNING

- Be sure to mount the front cover before turning the power ON. Do not remove the cover when the inverter power is ON.  
**Otherwise, an electric shock could occur.**
- Do not operate switches with wet hands.  
**Doing so could cause an electric shock.**
- If you configure the function codes wrongly or without completely understanding the FRENIC-VG Instruction Manual and User's Manual, the motor may rotate with a torque or at a speed not permitted for the machine. Confirm and adjust the setting of the function codes before running the inverter.  
**Otherwise, an accident could occur.**
- When enabling the communications link (H30), be sure to check that a run command entered via the ESX bus or digital input terminals is OFF beforehand. Enabling it with the run command being ON causes a sudden motor start.
- When resetting an alarm, be sure to check that a run command entered via the ESX bus is OFF beforehand. Resetting it with the run command being ON causes a sudden motor start.
- If a communications error occurs when the inverter is controlled via the ESX bus, it may cause the inverter to fail to recognize a stop command via the ESX bus. Make an emergency stop measure using **BX** ("Coast to a top") or **STOP1, STOP2, STOP3** ("Decelerate to stop") assigned to inverter digital input terminals.
- If "Communications error processing" (y02, y12) is set to "Continue to run" or "Retry and continue to run," the inverter may automatically start running after recovery from errors.  
**Otherwise, an accident could occur.**

### Maintenance and inspection, and parts replacement

## ⚠ WARNING ⚠

- Before proceeding to the maintenance/inspection jobs, **turn OFF the power and wait at least five minutes for inverters of 22 kW or below, or at least ten minutes for those of 30 kW or above.** Make sure that the LED monitor and charging lamp are turned OFF. Further, make sure, using a multimeter or a similar instrument, that the DC link bus voltage between the terminals P(+) and N(-) has dropped to the safe level (+25 VDC or below).  
**Otherwise, an electric shock could occur.**
- Maintenance, inspection, and parts replacement should be made only by qualified persons.
- Take off the watch, rings and other metallic objects before starting work.
- Use insulated tools.
- Never modify the interface card.  
**Otherwise, an electric shock or injuries could occur.**

### Disposal

## ⚠ CAUTION

- Treat the interface card as an industrial waste when disposing of it.  
**Otherwise injuries could occur.**

### Others

## ⚠ CAUTION

- Never modify the interface card.  
**Doing so could cause an electric shock or injuries.**

# Chaper 1 BEFORE USE

## 1.1 Acceptance Inspection

### ⚠ CAUTION

- Do not use the product that is damaged or lacking parts.

**Otherwise injuries could occur.**

Unpack the package and check the following.

- (1) The product is the type you ordered. You can check the model printed on the interface card

Model: OPC-VG1-ESX

- (2) The interface card is not damaged during transportation.
- (3) The following accessories are also contained in the package.

- Three screws (M3)
- Three spacers

If you suspect the product is not working properly or if you have any questions about your product, contact the shop where you bought the product or your local Fuji branch office.

## 1.2 External Appearance

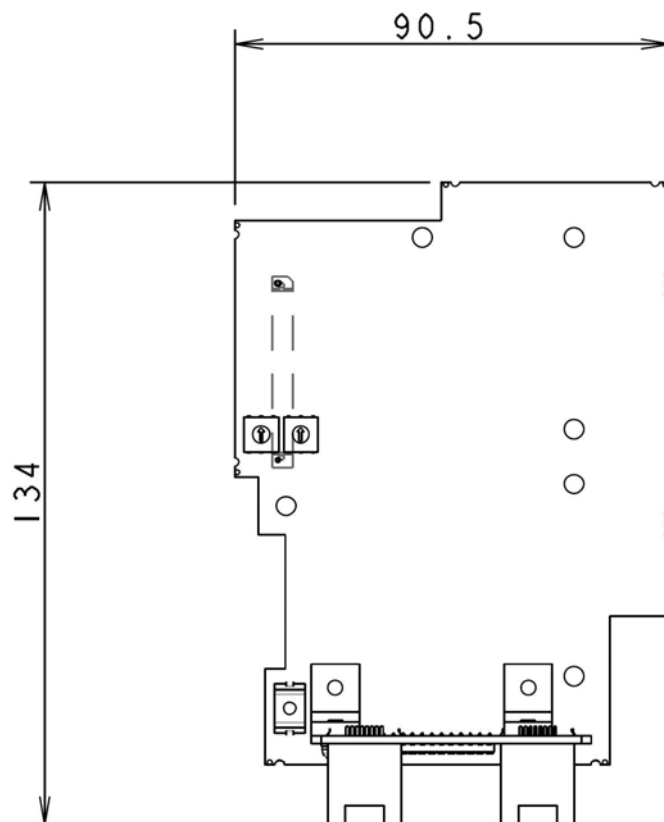


Figure 1.2-1 External Appearance

## 1.3 Precautions for Use

### 1.3.1 Temporary storage

Table 1.3-1 Storage and Transport Environments

Item	Specifications	
Storage temperature (Note 1)	-25 to +70°C	Places not subjected to abrupt temperature changes or condensation or freezing.
Relative humidity	5 to 95% (Note 2)	
Atmosphere	The interface card must not be exposed to dust, direct sunlight, corrosive or flammable gases, oil mist, vapor, water drops or vibration. The atmosphere must contain only a low level of salt. (0.01 mg/cm <sup>2</sup> or less per year)	
Atmospheric pressure	86 to 106 kPa (during storage)	
	70 to 106 kPa (during transportation)	

(Note 1) Assuming comparatively short time storage, e.g., during transportation or the like.

(Note 2) Even if the humidity is within the specified requirements, avoid such places where the interface card will be subjected to sudden changes in temperature that will cause condensation to form.

#### Precautions for temporary storage

- (1) Do not leave the interface card directly on the floor.
- (2) If the environment does not satisfy the specified requirements listed in Table 1.3-1, wrap the interface card in an airtight vinyl sheet or the like for storage.
- (3) If the interface card is to be stored in a high-humidity environment, put a drying agent (such as silica gel) in the airtight package.

### 1.3.2 Long-term storage

The long-term storage method of the interface card varies largely according to the environment of the storage site. General storage methods are described below.

- (1) The storage site must satisfy the requirements specified for temporary storage.
- (2) The package must be airtight to protect the interface card from moisture. Add a drying agent inside the package to maintain the relative humidity inside the package within 70%.
- (3) If the inverter equipped with the interface card has been installed to the equipment or panel at construction sites where it may be subjected to humidity, dust or dirt, then temporarily remove the inverter and store it in the environment specified in Table 1.3-1.

### 1.3.3 Wiring precautions

- (1) Route the wiring of the control circuit terminals as far from the wiring of the main circuit as possible. Otherwise electric noise may cause malfunctions.
- (2) Fix the control circuit wires inside the inverter to keep them away from the live parts of the main circuit (such as the terminal block of the main circuit).

# Chaper 2 INSTALLING THE INTERFACE CARD

## 2.1 Removing the Front Cover

### ⚠ CAUTION

- Incorrect handling in installation/removal jobs could result in a broken produce.
- Before installing or removing the interface card, shut down the input power to the inverter and make sure that the charging lamp is turned OFF. Even if all of the input power to the main circuit and control circuit and the auxiliary power are shut down, however, power is still applied to the inverter control terminals 30A, 30B, 30C, Y5A and Y5B when the external control circuit is supplied with power from a separate power supply. Shut down the power of the external equipment for prevention of electric shock. Shut down the power of the external equipment for prevention of electric shock.

Remove the front cover from the inverter as shown below. The removal procedure differs depending on the inverter type (capacity).

#### FRN22VG1S-2J/4J (22 kW) or lower types

As shown in Figure 2.1-1, loosen the cover mounting screw on section "a" and pull out the upper end of the front cover towards you.

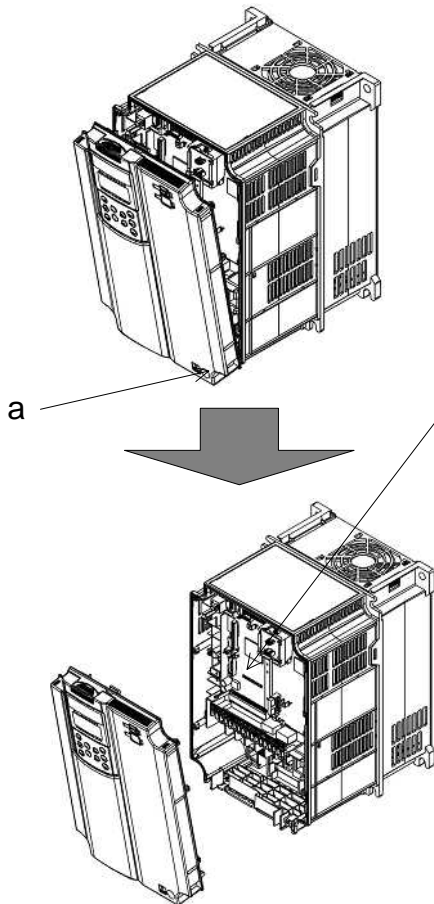


Figure 2.1-1 Removing the Front Cover  
FRN22VG1S-2J/4J (22 kW) or lower types

#### FRN30VG1S-2J/4J (30 kW) or upper types

- (1) As shown in Figure 2.1-2, remove the cover mounting screws (the number of screws differs depending on the inverter capacity) on section "b" and remove the front cover.
- (2) Open the keypad enclosure.

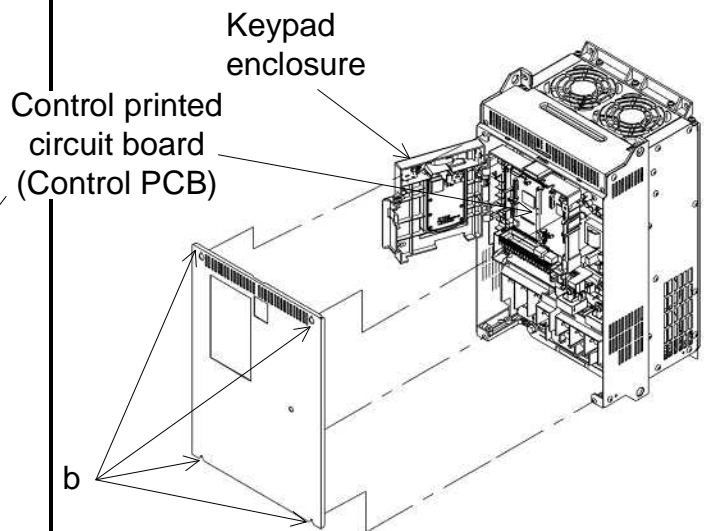


Figure 2.1-2 Removing the Front Cover  
FRN30VG1S-2J/4J (30 kW) or upper types

## 2.2 Installing the Interface Card

The interface card should be connected to D-port on the control printed circuit board (control PCB).

### ■ Mounting procedure

- (1) Mount the interface card so that connector CN1 on the card comes to be connected to connector D-port on the control PCB.
- (2) Secure the interface card with two screws "a" (that come with the option) through holes ① and ②, then set four spacers "b" (that come with the option) into holes ③ to ⑥.
- (3) Mount the front cover in the reverse order of removal, referring to Figure 2.1-1 or 2.1-2.

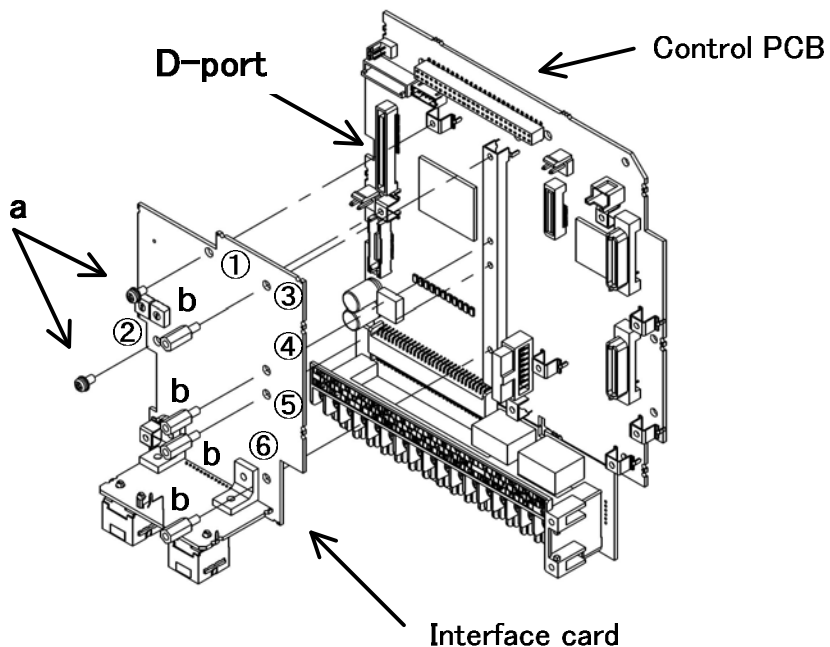


Figure 2.2-1 Mounting the Interface Card

#### History of revision

Number	Date of revision	Remarks
-	November 2011	First edition

Copyright © 2011 Fuji Electric Co., Ltd.

No part of this publication may be reproduced or copied without prior written permission from Fuji Electric Co., Ltd.

All products and company names mentioned in this manual are trademarks or registered trademarks of their respective holders.

The information contained herein is subject to change without prior notice for improvement.

The purpose of this instruction manual is to provide accurate information in handling, setting up and operating of the ESX bus interface card. Please feel free to send your comments regarding any errors or omissions you may have found, or any suggestions you may have for generally improving the manual.

In no event will Fuji Electric Co., Ltd. be liable for any direct or indirect damages resulting from the application of the information in this manual.

---

## **Fuji Electric Co., Ltd.**

Gate City Ohsaki, East Tower, 11-2, Osaki 1-chome, Shinagawa-ku, Tokyo, 141-0032, Japan

Phone: +81 3 5435 7058 Fax: +81 3 5435 7420

URL <http://www.fujielectric.com/>

---