

# User Manual

## Maritime Slim Line Operating Devices with Keyboard

Part Number: 80860.730

Version: 1

Date: 26.07.2007

Valid for:  
BTM03AM  
BTM05AM  
BTM07AM  
BTM21AM  
BTM21AS  
BTM21AT  
BTM70AT

---

Version	Date	Modifications
1	26.07.2007	First Edition

This manual, including all illustrations contained herein, is copyright protected. Use of this manual by any third party in departure from the copyright provision is forbidden. No part of this manual may be reproduced, translated or electronically or photographically archived or altered without the express written consent from Süttron electronic GmbH. Violations shall be cause for damage liability.  
Süttron electronic reserves the right to make any changes that contribute to technical improvement.

# Overall Table of Contents

<b>1</b>	<b>Important Notes .....</b>	<b>1-1</b>
1.1	Symbols .....	1-1
1.1.1	General Symbols .....	1-1
1.1.2	Specific Symbols .....	1-1
1.2	Safety Notes .....	1-2
1.3	Intended Use.....	1-2
1.4	Target Group.....	1-2
<b>2</b>	<b>Installation and Commissioning .....</b>	<b>2-1</b>
2.1	Unpacking the Device .....	2-1
2.2	Mounting the Device .....	2-1
2.2.1	Front Panel Dimensions .....	2-2
2.2.2	Mounting Cutout .....	2-4
2.2.3	Side View, Mounting Depth .....	2-8
2.3	Connecting the Device .....	2-13
2.3.1	Supply Voltage 24 V .....	2-13
2.4	Switching On.....	2-15
2.4.1	Loading Procedure on Windows CE Operating System .....	2-15
2.4.1.1	Normal Operating Mode .....	2-15
2.4.1.2	Setup Main Operating Mode .....	2-15
2.4.1.3	Administration Operating Mode .....	2-22
2.4.2	Function of the AppStarter.exe Program .....	2-22
2.4.3	Function of the TSvisLD.exe Program.....	2-23
2.4.4	Memory Media Used.....	2-23
2.4.5	Important Files and Update .....	2-24
2.5	Identification.....	2-25
2.5.1	Version Key .....	2-25
<b>3</b>	<b>Control and Display Elements .....</b>	<b>3-1</b>
3.1	Keyboard.....	3-1
3.1.1	Editing Keys.....	3-1
3.1.2	Control Keys .....	3-2
3.1.3	Special Keys .....	3-2
3.1.4	Function Keys .....	3-3
3.1.4.1	Slide-in Identification Strips for the Function Keys .....	3-4
3.2	Display .....	3-9
3.2.1	Setting the Brightness.....	3-9
3.2.2	Setting the Contrast .....	3-10
3.2.3	Character Attributes.....	3-10
3.2.4	Fonts.....	3-10

4	Interfaces of the Device .....	4-1
4.1	Ethernet (X5).....	4-2
4.1.1	Pin Assignment .....	4-2
4.1.2	Cable.....	4-2
4.1.3	Diagnostics .....	4-3
4.2	USB (X9, X10).....	4-3
4.2.1	Cable.....	4-3
5	Maintenance and Servicing.....	5-1
5.1	Front Panel.....	5-1
5.2	Fuse .....	5-1
5.3	Battery .....	5-1
5.3.1	Changing the Battery .....	5-2
5.3.2	Battery Disposal .....	5-2
6	Technical Data .....	6-1
7	Ordering Data.....	7-1
A	Index .....	A-1

# 1 Important Notes

## 1.1 Symbols

The symbols in this manual are used to draw your attention on notes and dangers.

### 1.1.1 General Symbols

**Danger**

This symbol is used to refer to instructions which, if ignored or not carefully followed could result in personal injury.

**Note**

This symbol indicates application tips or supplementary notes.

**Reference to source of information**

This symbol refers to detailed sources of information on the current topic.

### 1.1.2 Specific Symbols

The following symbols indicate specific dangers which could result in damage to equipment or personal injury or even up to the death of the operator.

**Danger - Electric Shock****Danger - Corrosive****Danger - Toxic****Danger - Explosive****Danger - Fire****Danger - Infrared Light****Danger - Electrostatic Charge**

## 1.2 Safety Notes

- Read this manual carefully before using the operating device. Keep this manual in a place where it is always accessible to all users.
- Proper transportation, handling and storage, placement and installation of this product are prerequisites for its subsequent flawless and safe operation.
- This user manual contains the most important information for the safe operation of the device.
- The user manual, in particular the safety notes, must be observed by all personnel working with the device.
- Observe the accident prevention rules and regulations that apply to the operating site.
- Installation and operation must only be carried out by qualified and trained personnel.

## 1.3 Intended Use

- The device is designed for use in maritime areas.
- The device is state-of-the art and has been built to the latest standard safety requirements. However, dangerous situations or damage to the machine itself or other property can arise from the use of this device.
- The device fulfills the requirements of the EMC directives and harmonized European standards. Any modifications to the system can influence the EMC behavior.



This is a class A device. This device may cause radio interference in residential areas. In this case, the user may be required to introduce appropriate countermeasures, and to bear the cost of same.

---

## 1.4 Target Group

All configuration, programming, installation, commissioning, operating and maintenance work in connection with the automation system must be performed by trained personnel only (e.g. qualified electricians, electrical engineers, etc.).

The configuration and programming personnel must be familiar with the safety concepts of automation technology.

The operating personnel must have been trained in handling the controller and be familiar with the operating instructions.

The installation, commissioning and maintenance personnel must have an education which entitles them to work on automation systems.

## 2 Installation and Commissioning

### 2.1 Unpacking the Device

Unpack all parts carefully and check the contents for any visible damage in transit. Also check whether the shipment matches the specifications on your delivery note.

If you notice damages in transit or discrepancies, please contact our sales department immediately.

### 2.2 Mounting the Device



When installing the device, leave a gap of at least 30 mm (1.181") around the device to ensure sufficient air circulation.



When the operating device is installed horizontally, please note that additional sources of heat beneath the operating device may result in heat accumulation. Make sure to allow sufficient heat dissipation!

Comply with the allowable temperature range listed in the technical data for the use of the operating device!



To ensure the specified degree of protection, make sure that the seal rests flat on the mounting surface and the threaded pins of the mounting brackets are uniformly tightened.

The device can be easily and quickly mounted from the rear of the device. Ideally, the device should be installed in switch panels with a plate thickness of approx. 1 mm to 6 mm (0.039" to 0.236").

1. Insert the device in the mounting cutout from the front.

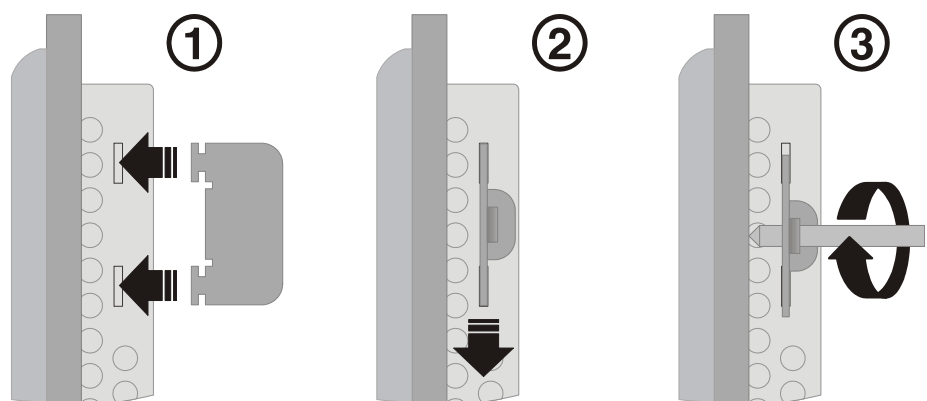


Figure 2-1 Mounting the device using a mounting bracket

2. Insert the mounting brackets into the appropriate openings (figure 1) and pull the brackets downwards until they lock in place (figure 2).
3. Fasten the device into position using the threaded pins (figure 3).

2.2.1 Front Panel Dimensions

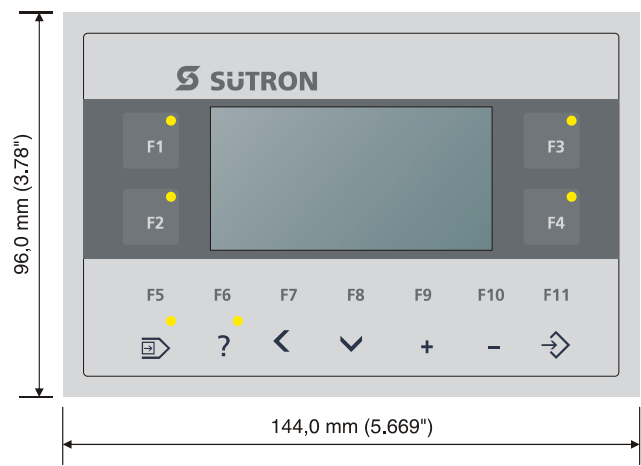


Figure 2-2 BTM03AM

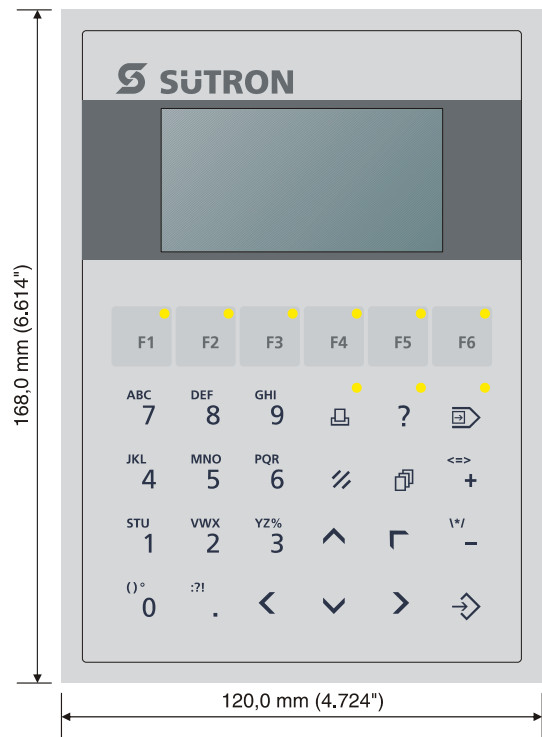


Figure 2-3 BTM05AM





Figure 2-4 BTM07AM

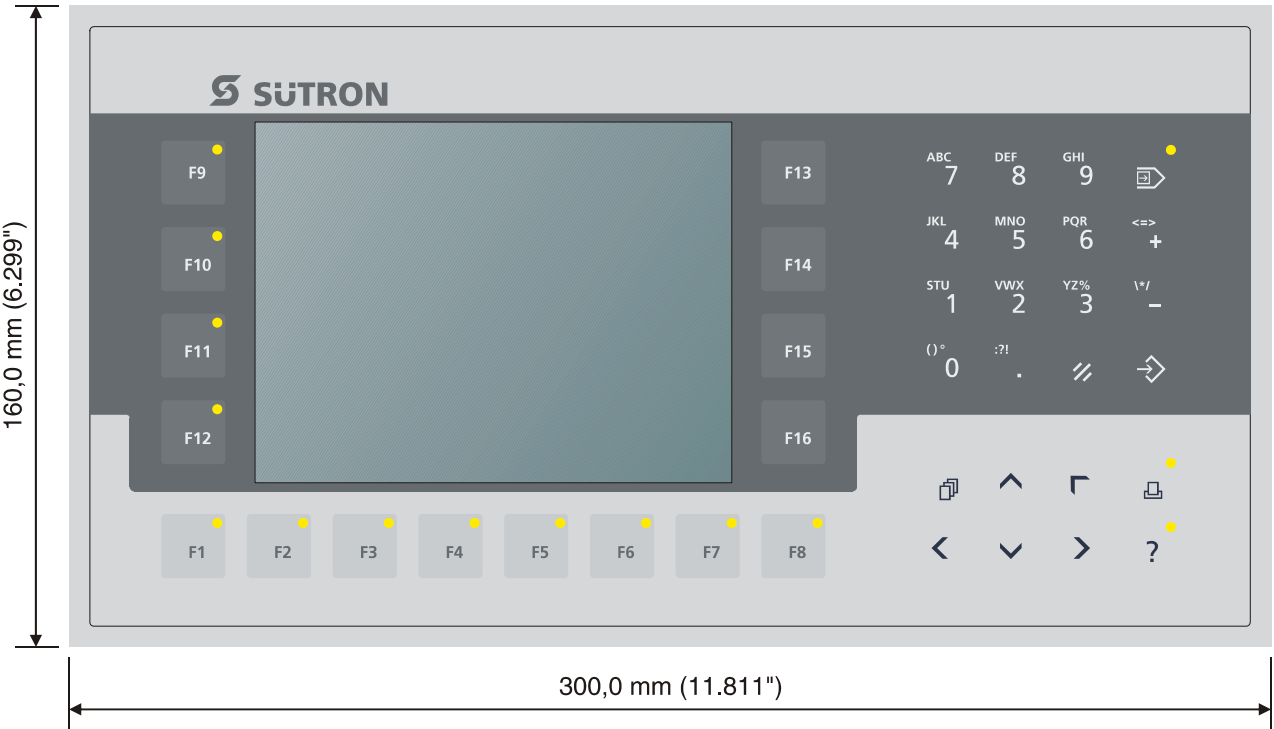


Figure 2-5 BTM21AM, BTM21AS

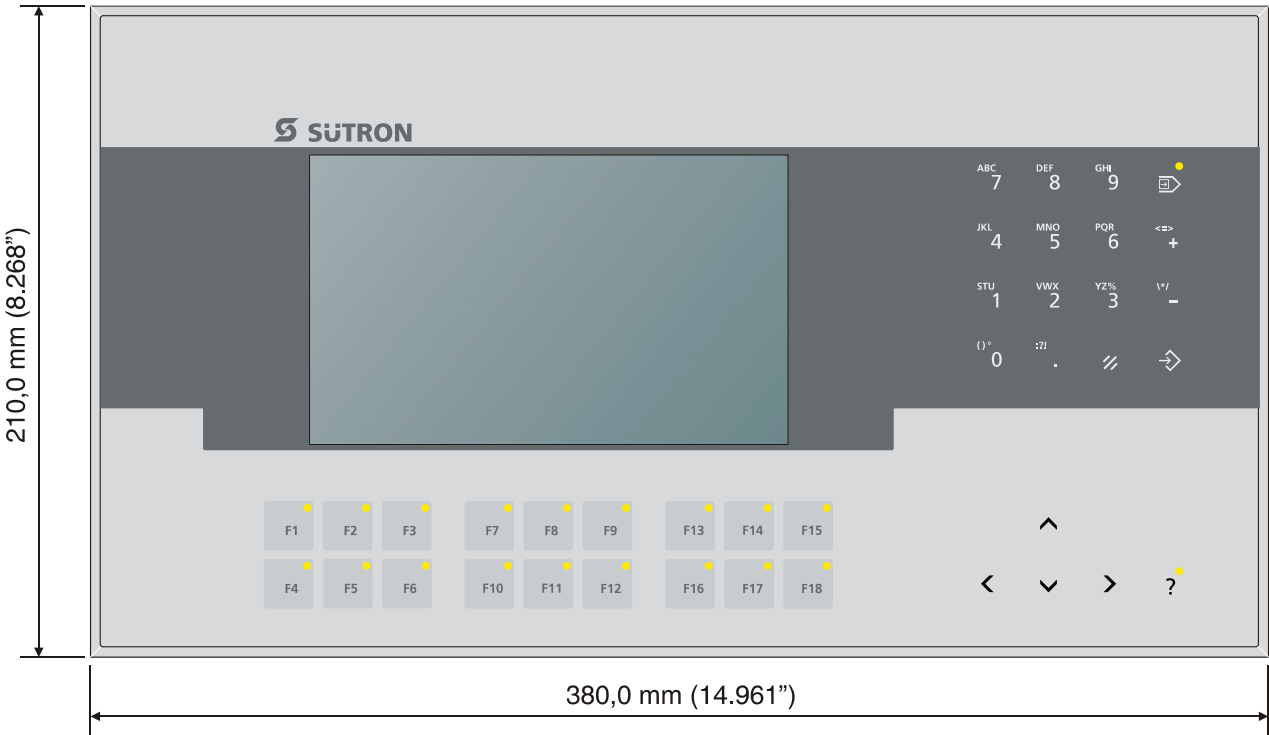


Figure 2-6 BTM70AT

2.2.2 Mounting Cutout

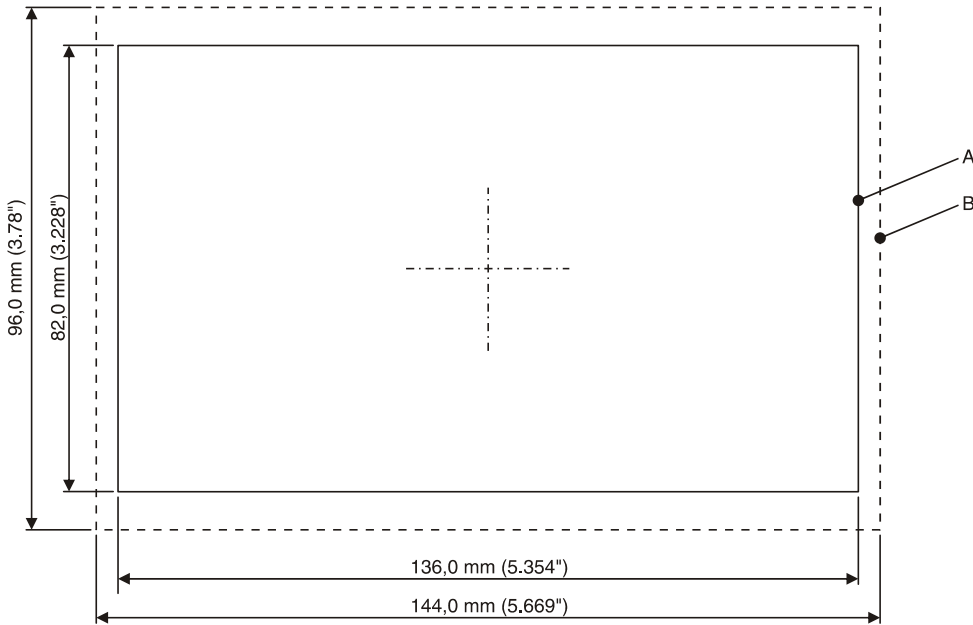


Figure 2-7 BTM03AM

- A Mounting Cutout
- B Front Panel

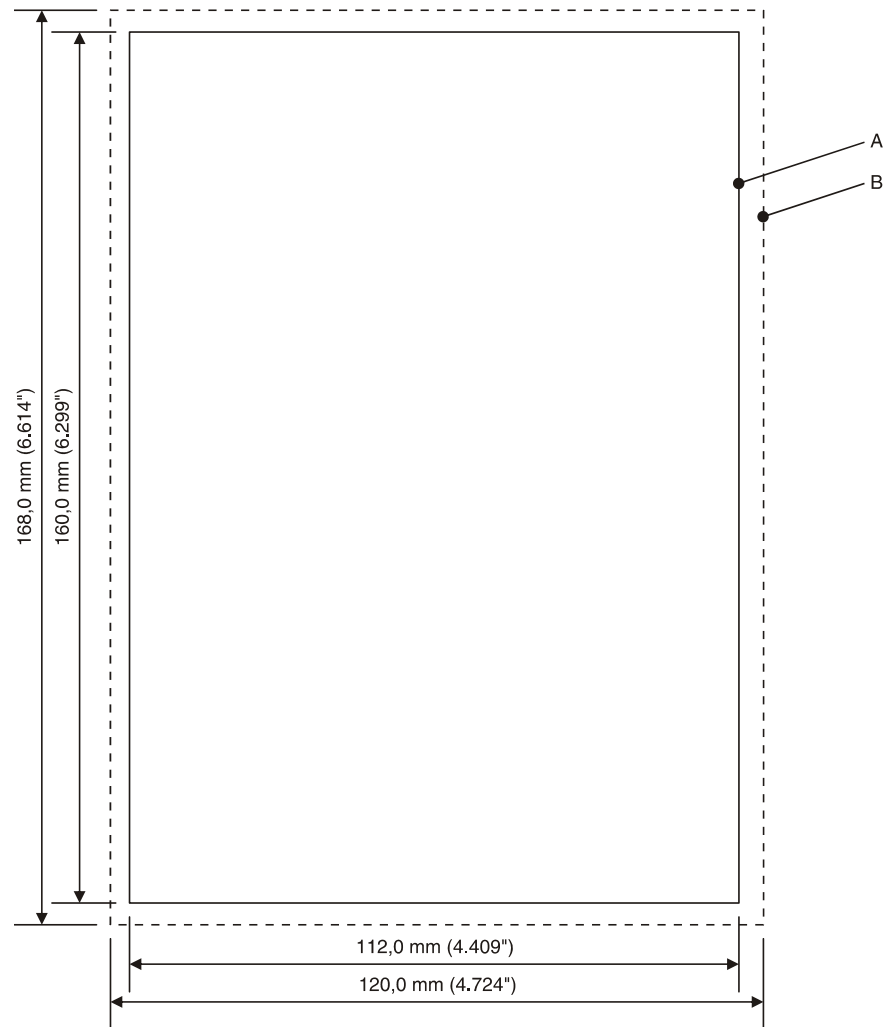


Figure 2-8 BTM05AM

- A** Mounting Cutout
- B** Front Panel

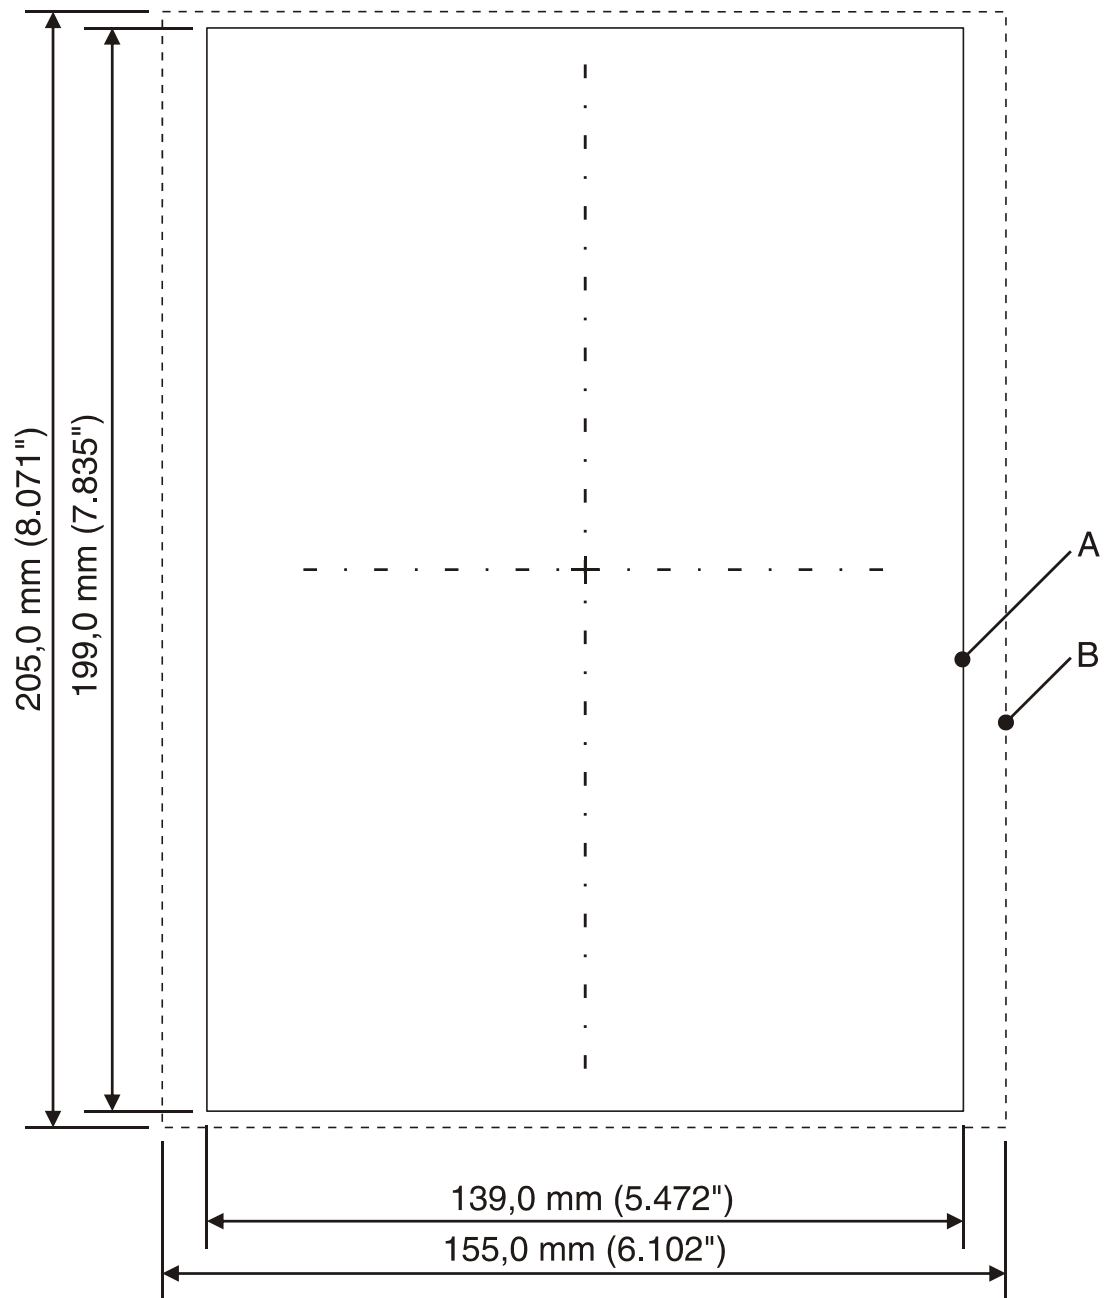


Figure 2-9 BTM07AM

- A** Mounting Cutout
- B** Front Panel

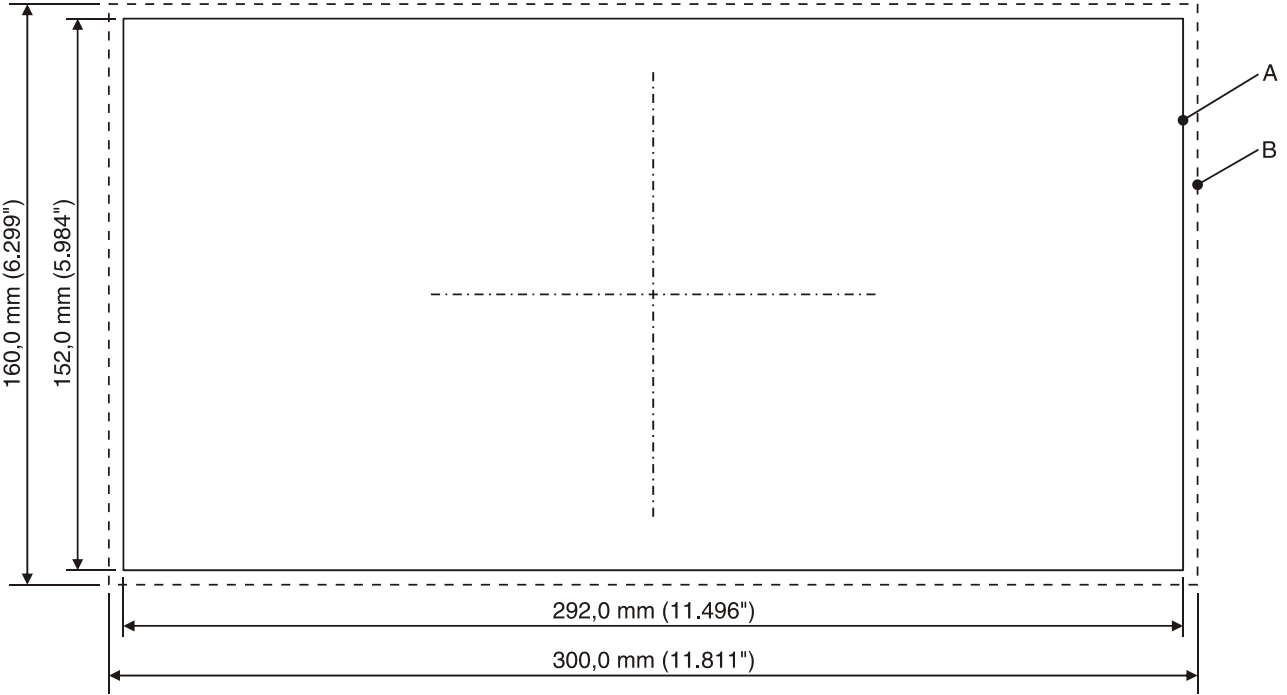


Figure 2-10 BTM21AM, BTM21AS

- A** Mounting Cutout
- B** Front Panel

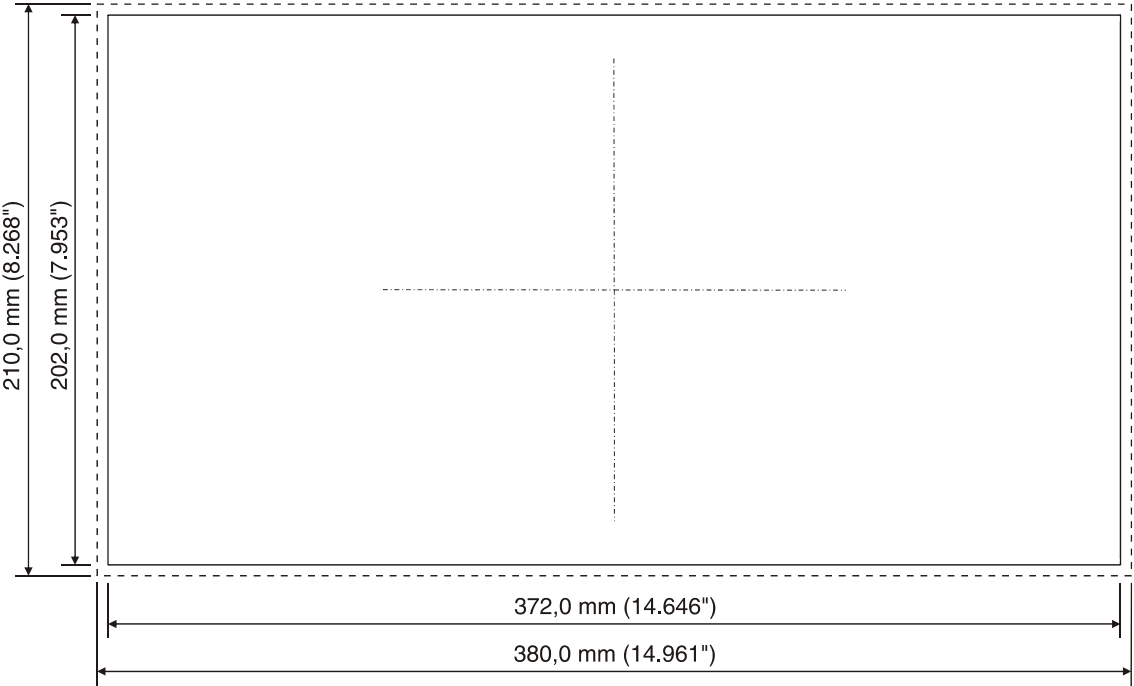


Figure 2-11 BTM70AT

- A** Mounting Cutout
- B** Front Panel

### 2.2.3 Side View, Mounting Depth

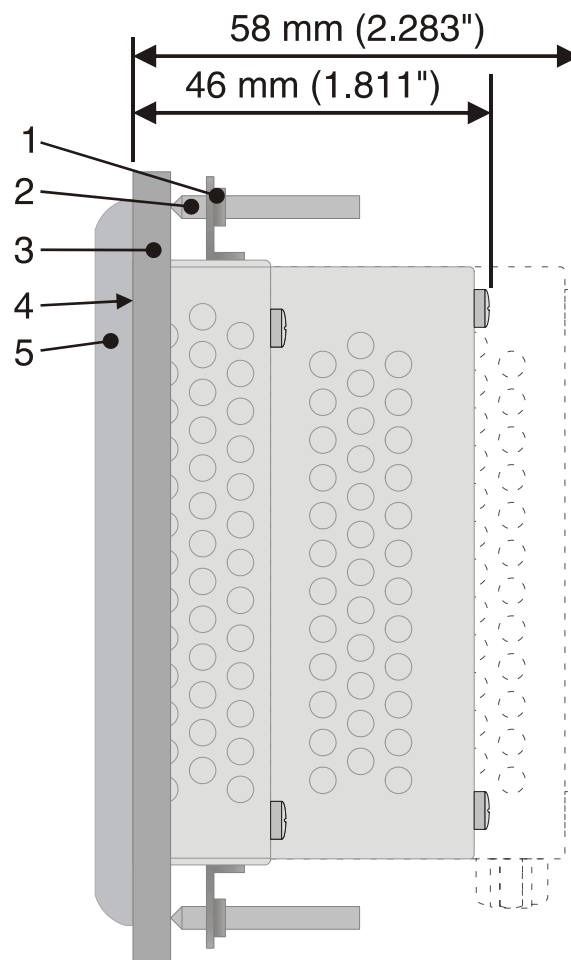


Figure 2-12 BTM03AM

- 1 Mounting Bracket
- 2 Threaded Pin
- 3 Mounting Surface Thickness 1 mm to 6 mm
- 4 Circumferential Seal
- 5 Front Panel

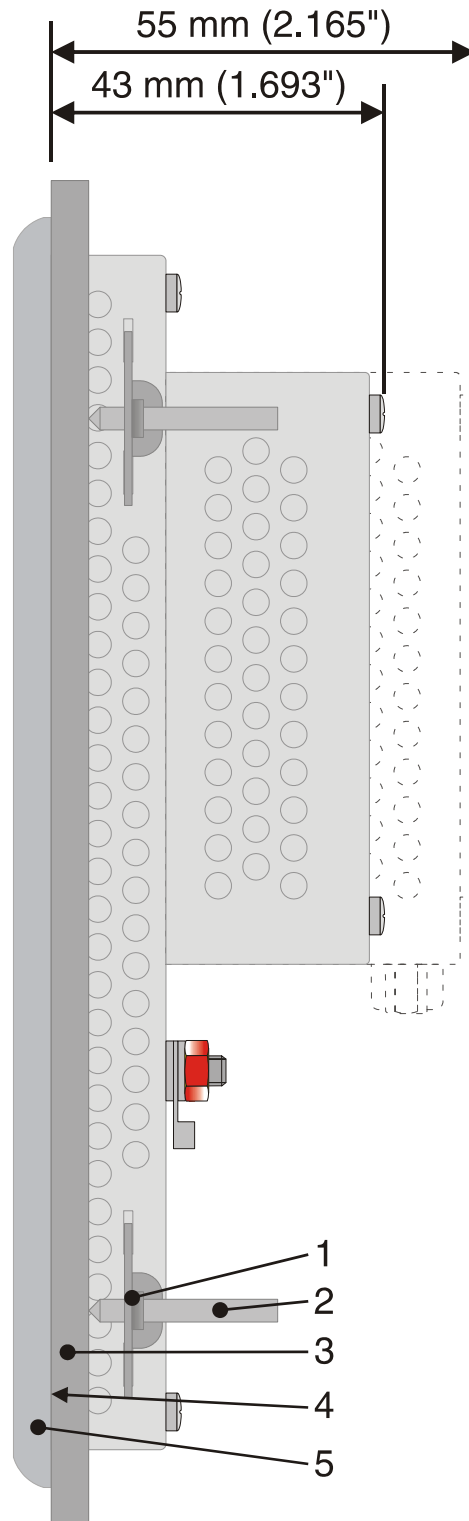


Figure 2-13 BTM05AM

- 1 Mounting Bracket
- 2 Threaded Pin
- 3 Mounting Surface Thickness 1 mm to 6 mm
- 4 Circumferential Seal
- 5 Front Panel

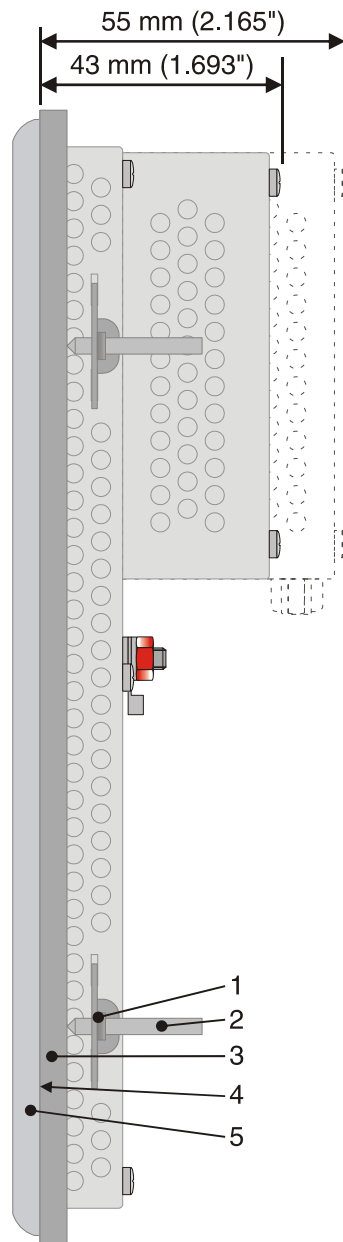


Figure 2-14 BTM07AM

- 1 Mounting Bracket
- 2 Threaded Pin
- 3 Mounting Surface Thickness 1 mm to 6 mm
- 4 Circumferential Seal
- 5 Front Panel



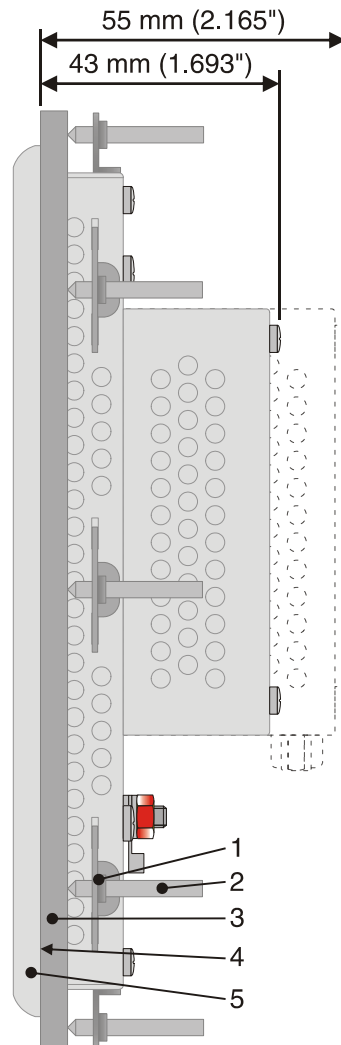


Figure 2-15 BTM21AM, BTM21AS

- 1 Mounting Bracket
- 2 Threaded Pin
- 3 Mounting Surface Thickness 1 mm to 6 mm
- 4 Circumferential Seal
- 5 Front Panel

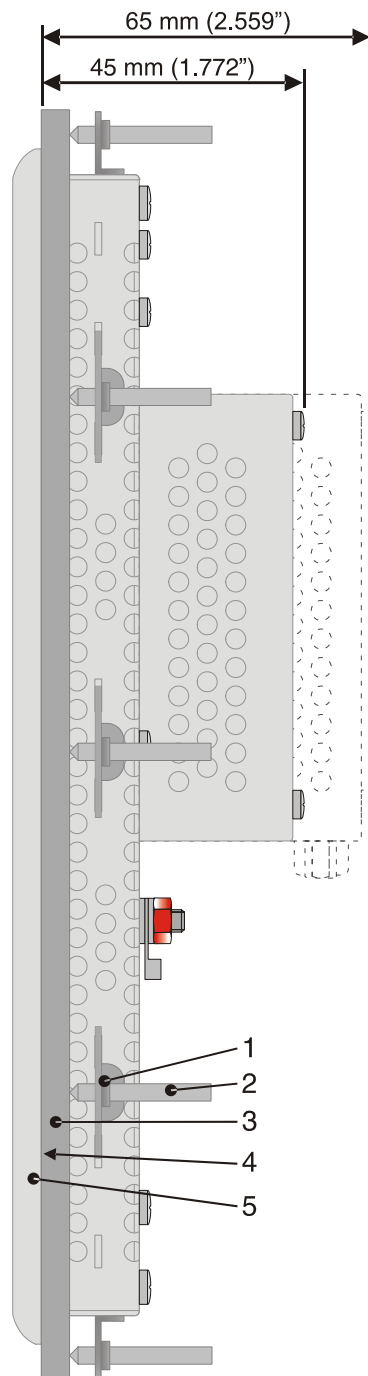


Figure 2-16 BTM70AT

- 1 Mounting Bracket
- 2 Threaded Pin
- 3 Mounting Surface Thickness 1 mm to 6 mm
- 4 Circumferential Seal
- 5 Front Panel

## 2.3 Connecting the Device

### 2.3.1 Supply Voltage 24 V


The supply voltage is supplied via connector X1.

The device has reverse polarity protection. In case of wrong polarity, the device will not operate.

This is a protection class I device. For safe operation, safety extra-low voltage (SELV) in accordance with DIN EN 61131 must be used for the supply voltage.

Connector in the operating device: 3 pin connector Phoenix COMBICON MSTBV 2.5/3-GF

Table 2-1 Pin assignment supply voltage

Pin	Designation	Function
1		Low-Noise Ground
2	0 V	Supply Voltage 0 V
3	24 VDC	Supply Voltage 24 VDC

A suitable female connector strip of the type Phoenix COMBICON MSTB 2.5/3-STF is supplied.



Cables with finely stranded conductors with a minimum cross-section of 0.75 mm<sup>2</sup> (18 AWG) and a maximum cross-section of 2.5 mm<sup>2</sup> (14 AWG) must be used for the supply voltage.



Hazardous voltages can exist inside electrical installations that can pose a danger to humans. Coming in contact with live parts **may result in electric shock!**

Use the following procedure to connect the device to the supply voltage:

1. Strip approx. 30 mm (1.181") off the outer cable sheath and approx. 5 mm (0.197") off the wires.

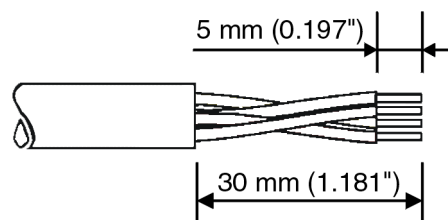


Figure 2-17 Preparing the cable

2. Fit the wires with wire end ferrules and connect the wires to the connector.

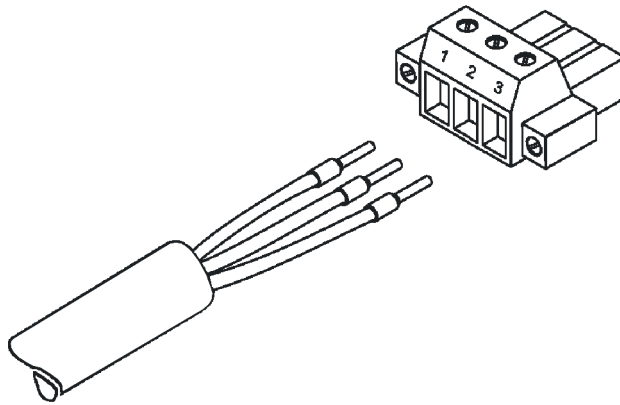


Figure 2-18 Connecting the female connector strip



If shielded connecting cables are used in the supply voltage area, the shield should be connected to pin 1.

3. Plug the female connector strip onto connector X1.

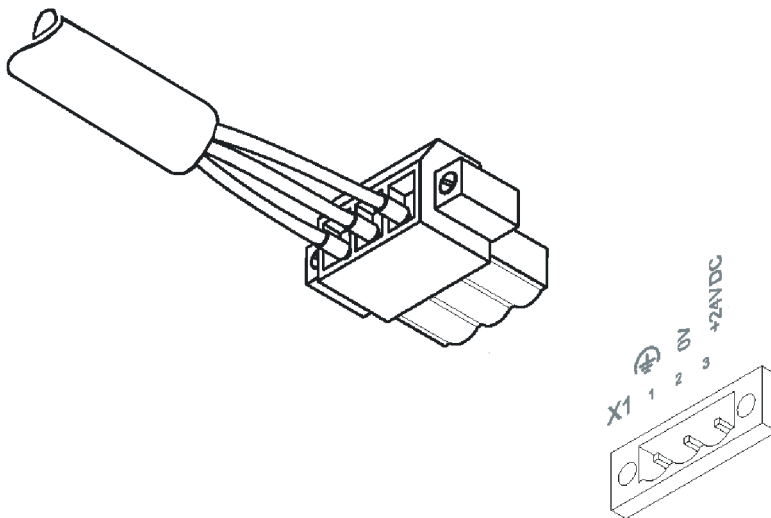


Figure 2-19 Female connector strip is plugged on

4. Secure the female connector strip in place with a screw-type locking to prevent it from slipping out.



A separate conductor must always be provided for the protective grounding at the threaded bolt. The conductor must have a minimum cross-section of 1.5 mm<sup>2</sup> (16 AWG) and must be kept as short as possible.

## 2.4 Switching On

The Windows CE operating system is installed on the operating device. Running on the operating system is the visualization runtime software TSvisRT.

### 2.4.1 Loading Procedure on Windows CE Operating System

The initialization starts the Launch.exe program.

The program allows you to use the keys **Cursor Down** and **Enter** or the buttons to make changes to the configuration.

The Launch.exe program has 3 operating modes:

- Normal (no key / button is pressed)
- Setup Main (Key **Enter** / button **Press For Setup Main Menu** was pressed)
- Administration (**Cursor Down** key followed by **Enter** / **Admin** button was pressed)

#### 2.4.1.1 Normal Operating Mode

The program AppStarter.exe starts from the internal Flash memory.

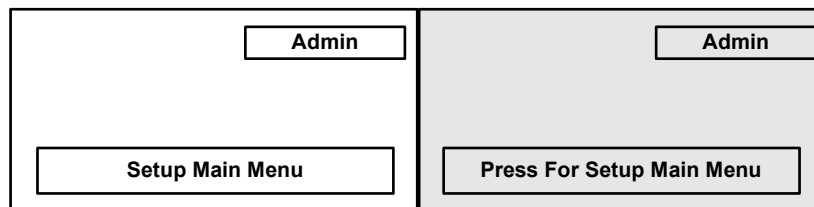


Figure 2-20 Display after startup (operating devices with keys / operating devices with touch screen)

The following message is issued if the AppStarter.exe file does not exist.

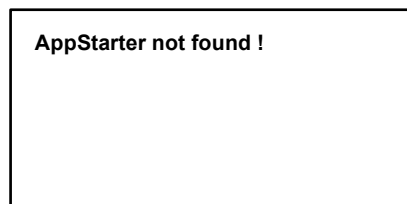


Figure 2-21 Error message after startup

#### 2.4.1.2 Setup Main Operating Mode

If you press the **Enter** key or the **Press For Setup Main Menu** button during the start-up phase, the Setup Main mode starts.

The normal entries apply to operating devices with keys only. The gray entries apply to operating devices equipped with a touch screen.

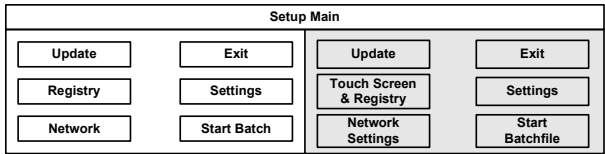


Figure 2-22 Setup Main



Some settings are password-protected. The password is "+-+-.".

**Update:**

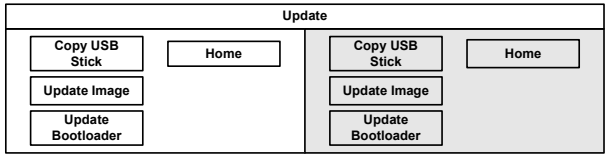


Figure 2-23 Update

**Update, Copy USB Stick:**

This function copies the data from the USB stick to the internal flash file system.

Several projects can be managed in subdirectories below the directory TSvisRT. If more than one project is in different subdirectories, a choice dialog is displayed. Only directories which contain a project file (xxxx.cb) are listed.

The entire TSvisRT directory or the corresponding subdirectory and the AppStarter.exe are copied into the target directory of the flash file system.

**Update, Update Image:**

If the Image subdirectory on the memory stick contains a xxxx.nb0 file, this file is used to perform the image update. There must only be one xxxx.nbo file in this directory.

In this case, the Flash registry is always deactivated so that the image is processed with a new default registry.

**Update, Update Bootloader:**

If the Bootloader subdirectory on the memory stick contains a xxxx.nb0 file, this file is used to perform the bootloader update. There must only be one xxxx.nbo file in this directory.

The user is informed that the update has been successfully completed.

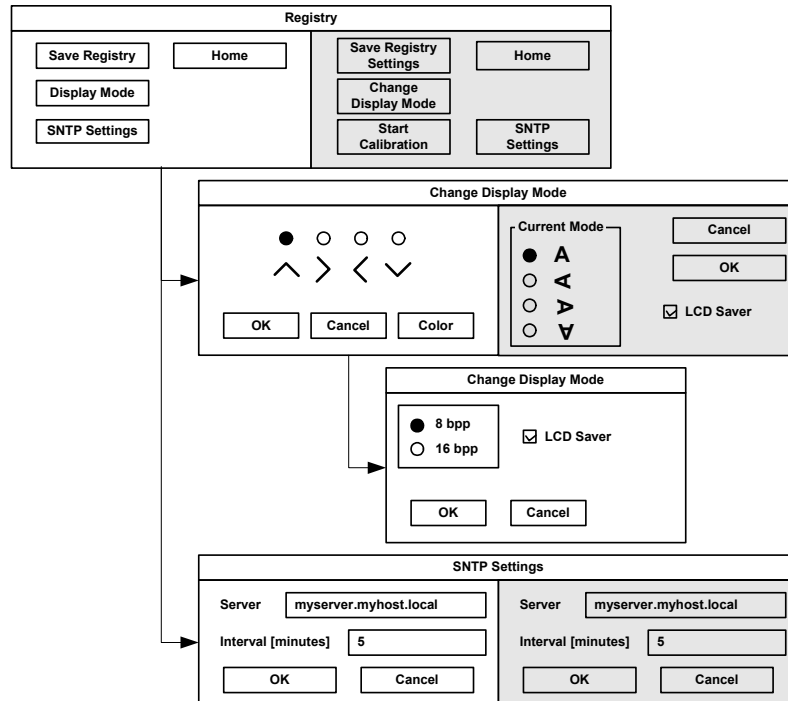
**Registry:**

Figure 2-24 Registry

**Registry, Save Registry Settings:**

The entire registry is saved.

**Registry, Change Display Mode:**

Set-up of display adjustment.

LCD Saver switches the brightness to the lowest value, if no user operation occurs for at least one hour.

This entry is password-protected.

**Change Display Mode, Color:**

Selection of color depth for TFT displays.

LCD Saver switches the brightness to the lowest value, if no user operation occurs for at least one hour.

**Registry, Start Calibration:**

The touch screen calibration process is started. After calibration, the values are automatically saved in the Registry.

**Registry, SNTP Settings:**

The name of a time server can be entered via the Intranet or Internet. The synchronization interval is specified in minutes.

This entry is password-protected.

Network Settings:

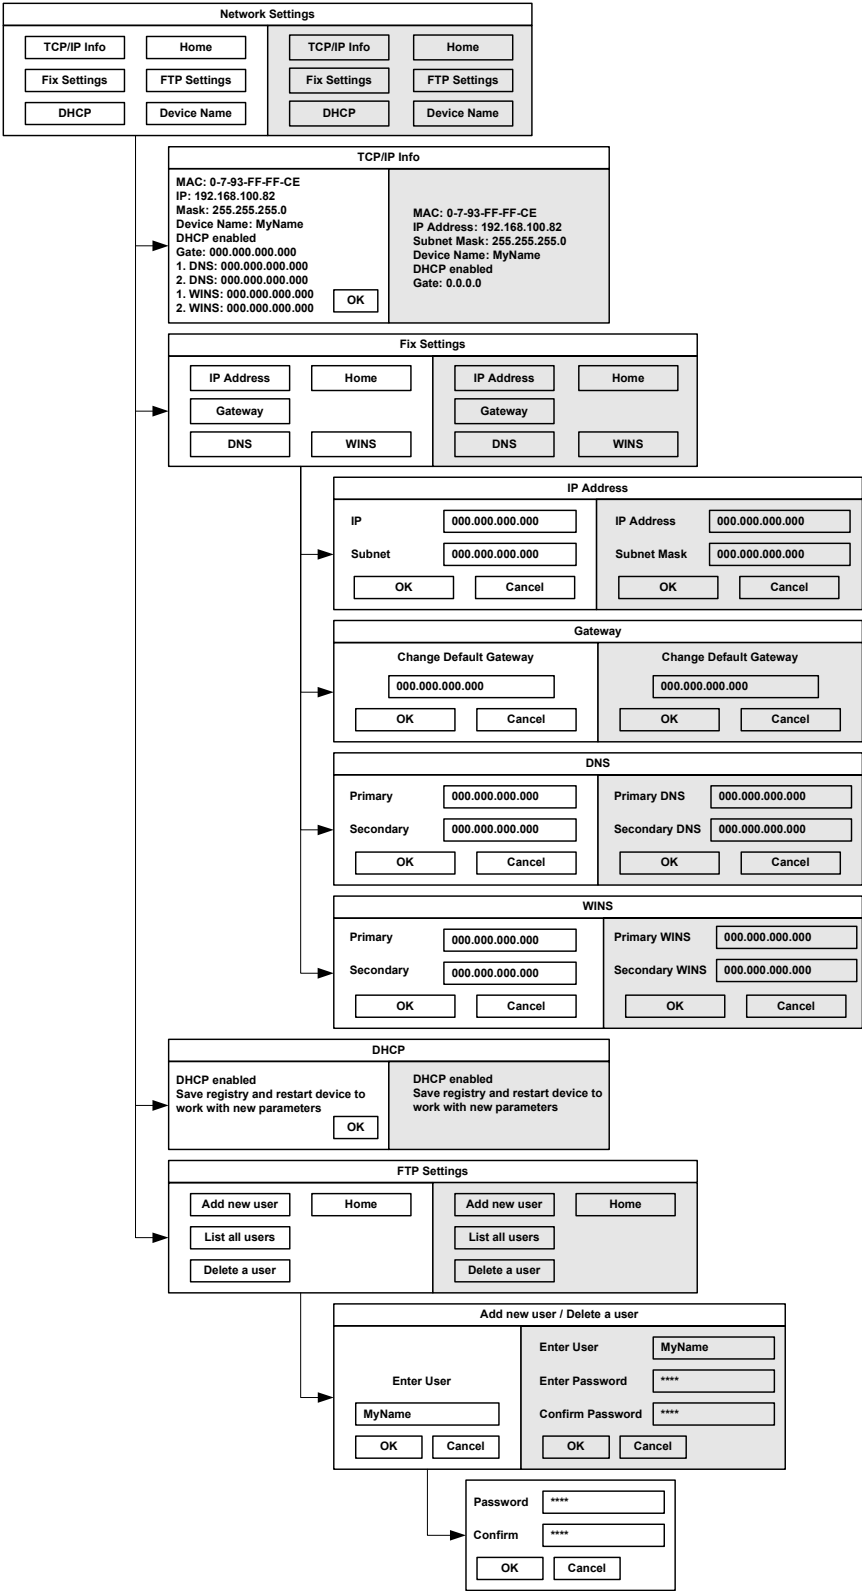


Figure 2-25 Network Settings



**Network Settings, Fix Settings, IP Address:**

The system deselects DHCP and enters the settings from the IPSetting.ini file of the USB stick. This file must exist in the root directory of the USB stick.  
If no USB stick is connected the information is read from the registry.

This entry is password-protected.

Contents of the IPSetting.ini file:

```
[IPCONFIG]
IPAddress=172.016.042.150
SubnetMask=255.255.255.000
```



All addresses must be given in the format "xxx.xxx.xxx.xxx".  
Numbers smaller than 100 you have to fill up with zeros.  
(Example: 192.168.42.1 -> 192.168.042.001)

**Network Settings, Fix Settings, Gateway:**

The system deselects DHCP and enters the settings from the IPSetting.ini file of the USB stick. This file must exist in the root directory of the USB stick.  
If no USB stick is connected the information is read from the registry.

This entry is password-protected.

Contents of the IPSetting.ini file:

```
[IPCONFIG]
Gateway=172.016.042.150
```



All addresses must be given in the format "xxx.xxx.xxx.xxx".  
Numbers smaller than 100 you have to fill up with zeros.  
(Example: 192.168.42.1 -> 192.168.042.001)

**Network Settings, Fix Settings, DNS:**

The system deselects DHCP and enters the settings from the IPSetting.ini file of the USB stick. This file must exist in the root directory of the USB stick.  
If no USB stick is connected the information is read from the registry.

This entry is password-protected.

Contents of the IPSetting.ini file:

```
[IPCONFIG]
PrimaryDNS=172.016.042.150
SecondaryDNS=172.016.042.151
```



All addresses must be given in the format "xxx.xxx.xxx.xxx".  
Numbers smaller than 100 you have to fill up with zeros.  
(Example: 192.168.42.1 -> 192.168.042.001)

**Network Settings, Fix Settings, WINS:**

The system deselects DHCP and enters the settings from the IPSetting.ini file of the USB stick. This file must exist in the root directory of the USB stick.  
If no USB stick is connected the information is read from the registry.

This entry is password-protected.

Contents of the IPSetting.ini file:

```
[IPCONFIG]
PrimaryWINS=172.016.042.150
SecondaryWINS=172.016.042.151
```



All addresses must be given in the format "xxx.xxx.xxx.xxx".  
Numbers smaller than 100 you have to fill up with zeros.  
(Example: 192.168.42.1 -> 192.168.042.001)

### **Network Settings, Current IP:**

Displays the MAC address, current IP address, subnet mask, device name, DHCP status, gateway, DNS and WINS.

### **Network Settings, DHCP:**

The system enables DHCP. After enabling DHCP this setting must be saved using "Save Registry".

This entry is password-protected.

### **Network Settings, FTP Settings, Add new user:**

You may enter a new user name. You have to assign a password to the user name and to confirm it.

If at least one user name is added you cannot login to the FTP server as anonymous anymore.

### **Network Settings, FTP Settings, List all users:**

All users are listed within a DOS box.

### **Network Settings, FTP Settings, Delete a user:**

You may enter the user name you like to delete.

This entry is password-protected.

### **Network Settings, Device Name:**

You can define a device name with up to 14 characters. Via a FTP connection you can access the device with the device name instead of the IP address.

This entry is password-protected.

**Settings:**

The figure shows a sequence of five settings dialog boxes, connected by arrows indicating the flow of the user interface:

- Settings:** A main menu with buttons for Contrast, Home, Date / Time, Password, and Information.
- Contrast:** A dialog for adjusting Contrast and Brightness (both set to 15). It includes a Color Depth section with radio buttons for 8 bpp (selected) and 16 bpp. Buttons for OK, Apply, and Cancel are present.
- Date / Time:** A dialog for setting the time and date. It includes fields for Time and Date, a calendar icon, and a Time Zone dropdown menu (set to GMT +01:00). There is a checkbox for "Automatically adjust clock for daylight saving" and an Apply button.
- Password:** A dialog for password management. It includes fields for Current and New Password, and checkboxes for "Enable PW" and "Enable Password". Buttons for Change, OK, and Cancel are present.
- Information:** A dialog displaying system information, including SNR, Image version, Built date, Flash Size, SRAM Size, and PLC / VISU RAM size. It also includes a note to "Click OK to go back to main".

Figure 2-26 Settings

**Settings, Contrast:**

The operating mode setup main is displayed with default values for contrast and brightness to ensure reading also at faulty values. If you change a value, you have to confirm this in a dialog.

Selection of color depth for TFT displays.

**Settings, Date / Time:**

Set the date, time and time zone.

**Settings, Password:**

The password can be activated, deactivated or redefined. When the password is activated, all password-protected dialog boxes can only be accessed if the password has been entered successfully.

This entry is password-protected.

**Settings, Information:**

The following information is output: serial number, image version, image date, built version, flash size, SRAM size and PLC / Visu RAM size.

**Start Batch:**

The **project.bat** file in the **FlashDrv** directory starts, if available.

### 2.4.1.3 Administration Operating Mode

If you press the **Cursor Down** key followed by the **Enter** key / **Admin** button during the startup phase, the Administration mode of operation starts.

You can use the Admin.ini file to manage the device. This file must exist in the root directory of the USB stick.

This file is used as a dongle to prevent users from changing the device during normal operation.

Possible contents for the Admin.ini file:



Observe upper and lower case for all entries!

Explorer=Off	Deactivates the Explorer in the registry. The change becomes effective on the next device reboot.
Explorer=On	Activates the Explorer in the registry. The change becomes effective on the next device reboot.
Registry=Default	Destroys the current registry and activates the default registry of the image. The change becomes effective on the next device reboot.
Start=MyProgramm.exe	Starts the application MyProgramm.exe
StartRepllog=On	Enables automatic startup of the Repllog.exe program in the registry. The change becomes effective on the next device reboot.
StartRepllog=Off	Disables automatic startup of the Repllog.exe program in the registry. The change becomes effective on the next device reboot.
DeviceName=MyName	Defines the device name of the operating device
Demomode=On	Enables demo mode for TSvisRT. The change becomes effective on the next device reboot.
Demomode=Off	Disables demo mode for TSvisRT. The change becomes effective on the next device reboot.
;Demomode=Off	Comment, no impact

### 2.4.2 Function of the AppStarter.exe Program

The AppStarter.exe program creates all the necessary registry settings and can also store the registry, if desired.

If the Explorer is activated, the system shuts it down. Automatic startup of ActiveSync is also deactivated.

The AppStarter.exe file then starts the TSvisLD\_CE.exe file from the Flash File System (FFS).

### 2.4.3 Function of the TSvisLD.exe Program

The TSvisLD.exe loads the following components into the memory of the operating system in accordance with the instructions in the TSvisRT\_CE.ini file:








- User application
- Protocol driver
- TSvisRT firmware

The program then unpacks the compressed application file (\*.CB) and starts the TSvisRT Runtime component.




### 2.4.4 Memory Media Used

The following memory media are used:

Table 2-2 Memory media used

<b>Operating system memory</b> TSvisRT Runtime Protocol driver Application		<b>Flash file system (FlashDrv)</b> AppStarter.exe Subdirectory TSvisRT\Project name (with TSvisRT Runtime, protocol driver and application)		USB stick (Hard disk)
		Registry settings		Admin.ini IPSetting.ini
		Image storage in Flash		Subdirectory Image
		Bootloader storage in Flash		Subdirectory Bootloader

Legend:

-  Copying carried out by operating system
-  Copying carried out by the bootloader
-  Copying carried out by the Launch.exe

## 2.4.5 Important Files and Update

Table 2-3 Important files and update

File	Storage location	Update	Function
TSvisRT_CE.INI	Subdirectory <b>TSvisRT</b> or <b>TSvisRT\Projekt</b> on USB stick	Transfer via programming software on USB stick or FTP server	Initialization file for TSvisLD_CE.exe
SPSTxxxxxxx.yyy.DLL	Subdirectory <b>TSvisRT</b> or <b>TSvisRT\Projekt</b> on USB stick	Transfer via programming software on USB stick or FTP server	Protocol driver
*.CB	Subdirectory <b>TSvisRT</b> or <b>TSvisRT\Projekt</b> on USB stick	Transfer via programming software on USB stick or FTP server	Compressed application file
TSvisRT_CE.EXE	Subdirectory <b>TSvisRT</b> or <b>TSvisRT\Projekt</b> on USB stick	Transfer via programming software on USB stick or FTP server	TSvisRT Runtime
EBOOT.nb0	Subdirectory <b>Bootloader</b>	Menu item "Update Bootloader" in operating mode setup main via USB stick	Windows CE Bootloader
NK.nb0	Subdirectory <b>Image</b>	Menu item "Update Image" in operating mode setup main via USB stick	Operating system Windows CE
AppStarter.EXE	<b>Root directory</b> on USB stick	Menu item "Copy USB Stick" in operating mode setup main via USB stick	Starts TSvisLD_CE.exe
TSvisLD_CE.EXE	Subdirectory <b>TSvisRT</b> or <b>TSvisRT\Projekt</b> on USB stick	Menu item "Copy USB Stick" in operating mode setup main via USB stick	TSvisRT loader
Admin.INI	<b>Root directory</b> on USB stick	-	File with administration settings
IPSetting.INI	<b>Root directory</b> on USB stick	-	File with settings for IP assignment
project.bat	<b>Root directory</b> on FlashDrv		Starts a user-defined application from within the launcher

## 2.5 Identification

The operating device can be identified using the nameplate on the rear of the device.

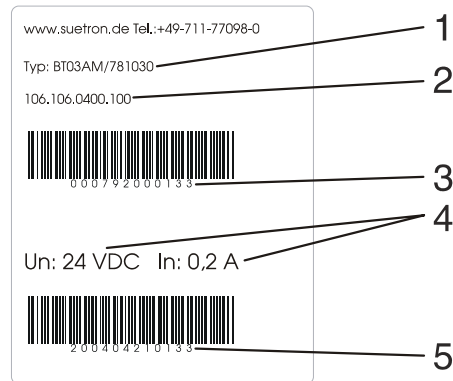


Figure 2-27 Nameplate (example)

- 1 Order number
- 2 Version key (at time of delivery)
- 3 MAC address
- 4 Voltage and power specification
- 5 Serial number

### 2.5.1 Version Key

The version key provides information on the version level of various components at time of delivery.

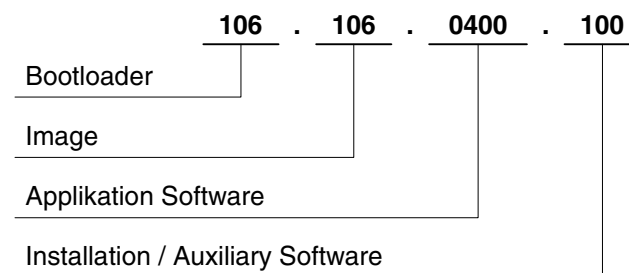


Figure 2-28 Version key (example)






## 3 Control and Display Elements

### 3.1 Keyboard


The keys are positioned under an environmental-proof polyester foil. You project the operating principle of the keys in the programming software.

#### 3.1.1 Editing Keys

- ( ) °  
**0** The key **0 and ( ) °** is used for changing data in the editor. The ( , ) and ° characters can be entered when configuring the **Shift** or **ShiftCase** system variables.
- STU  
**1** The key **1 and STU** is used for changing data in the editor. The S, T and U characters can be entered when configuring the **Shift** or **ShiftCase** system variables.
- VWX  
**2** The key **2 and VWX** is used for changing data in the editor. The V, W and Y characters can be entered when configuring the **Shift** or **ShiftCase** system variables.
- YZ%  
**3** The key **3 and YZ%** is used for changing data in the editor. The Y, Z and % characters can be entered when configuring the **Shift** or **ShiftCase** system variables.
- JKL  
**4** The key **4 and JKL** is used for changing data in the editor. The J, K and L characters can be entered when configuring the **Shift** or **ShiftCase** system variables.
- MNO  
**5** The key **5 and MNO** is used for changing data in the editor. The M, N and O characters can be entered when configuring the **Shift** or **ShiftCase** system variables.
- PQR  
**6** The key **6 and PQR** is used for changing data in the editor. The P, Q and R characters can be entered when configuring the **Shift** or **ShiftCase** system variables.
- ABC  
**7** The key **7 and ABC** is used for changing data in the editor. The A, B and C characters can be entered when configuring the **Shift** or **ShiftCase** system variables.
- DEF  
**8** The key **8 and DEF** is used for changing data in the editor. The D, E and F characters can be entered when configuring the **Shift** or **ShiftCase** system variables.
- GHI  
**9** The key **9 and GHI** is used for changing data in the editor. The G, H and I characters can be entered when configuring the **Shift** or **ShiftCase** system variables.
- :?!  
**▪** The key **Decimal point and :?!** is used for changing data in the editor. The characters ; , ? and ! can be entered when configuring the **Shift** or **ShiftCase** system variables.


 The key **Plus and <=** is used for changing data in the editor. The characters <, = and > can be entered when configuring the **Shift** or **ShiftCase** system variables.




 The key **Minus and \\*** is used for changing data in the editor. The characters \, \* and / can be entered when configuring the **Shift** or **ShiftCase** system variables.




### Nur gültig für BTM03AM:


 The key **Minus** is used to enter negative values within the editor. In the increment editor, the variable value is decreased by 1. When the key is held down, the function is repeated at an automatically increasing rate of repetition.


 The key **Plus** is used to enter positive values within the editor. In the increment editor, the variable value is increased by 1. When the key is held down, the function is repeated at an automatically increasing rate of repetition.





## 3.1.2 Control Keys


 The key **Cursor left** can be configured to directly call up any screen. In the editor, it moves the cursor one character to the left (character selection). This function corresponds to the system variable **KeyCursLeft**.

 The key **Cursor right** can be configured to directly call up any screen. In the editor, it moves the cursor one character to the right (character selection). This function corresponds to the system variable **KeyCursRight**.


 The key **Cursor down** can be configured to directly call up any screen. In the editor, it moves the cursor down one variable (variable selection). This function corresponds to the system variable **KeyCursDown**.


 The key **Cursor up** can be configured to directly call up any screen. In the editor, it moves the cursor up one variable (variable selection). This function corresponds to the system variable **KeyCursUp**.

 The key **Cursor home** can be configured to directly call up any screen. In the editor it returns the cursor to the first input variable position. This function corresponds to the system variable **KeyHome**.

 The key **Page down** can be configured to page through tables, recipes and messages. This function corresponds to the system variable **TabPgDn**.

## 3.1.3 Special Keys

 The key **Help** always shows the current help text (online help). A flashing LED indicates that there are system messages. The system message is output in plain text.

 The key **Data Release** changes from the menu into the editor. The integrated LED is lit during edit mode. Pressing this key in edit mode exits the editor.



The key **Enter** is used to complete data entry. Pressing this key while the startup screen is displayed opens the setup screen.



The key **Delete** deletes the character beneath the cursor in the editor and removes the selected messages from the data memory.



The key **Print** can be configured as a soft key to activate various print jobs. The LED flashes when a print process is active.

### 3.1.4 Function Keys



The function of function keys can be assigned as required (soft key functionality). The function keys can optionally be used as direct selection keys for menu control or to trigger a function in the controller.

### 3.1.4.1 Slide-in Identification Strips for the Function Keys

The identification strips can be replaced when the operating device is built-in or removed. Inserting the strip from the rear side of the front plate does not influence the specified seal of the operator terminal. A set of identification strips is supplied with the operator terminal.

For the labeling use:

Single pieces, prototypes	Label with a water-resistant pen
Small series	Copying foil (thickness $\leq 70 \mu\text{m}$ ) with laser print
Large series	Customer-specific labeled identification strips

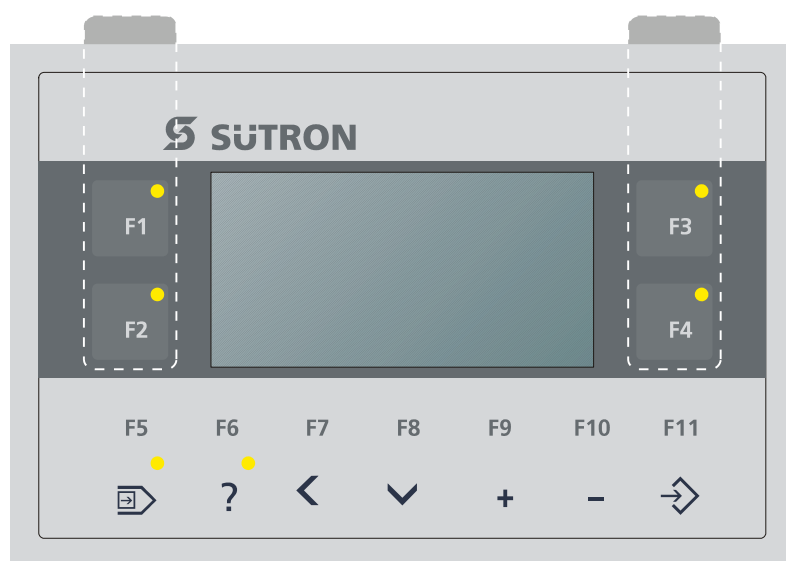


Figure 3-1 Position of the slide-in identification strips at BTM03AM

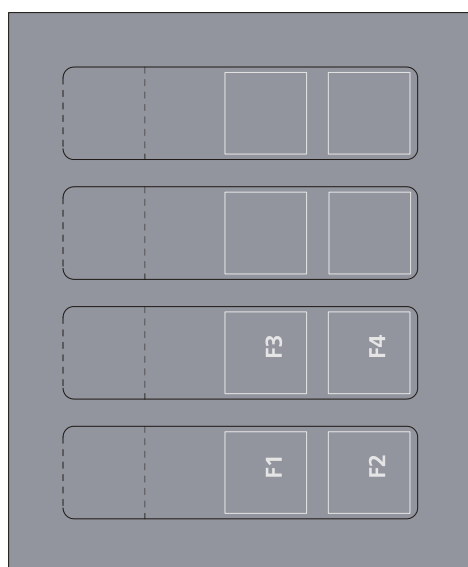


Figure 3-2 Set of slide-in identification strips for BTM03AM

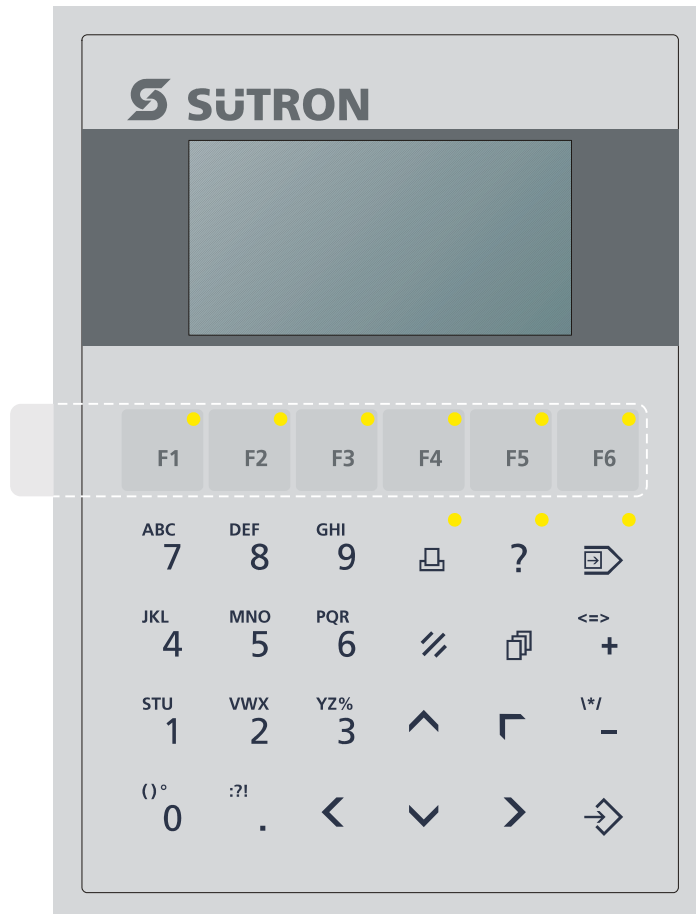


Figure 3-3 Position of the slide-in identification strips at BTM05AM

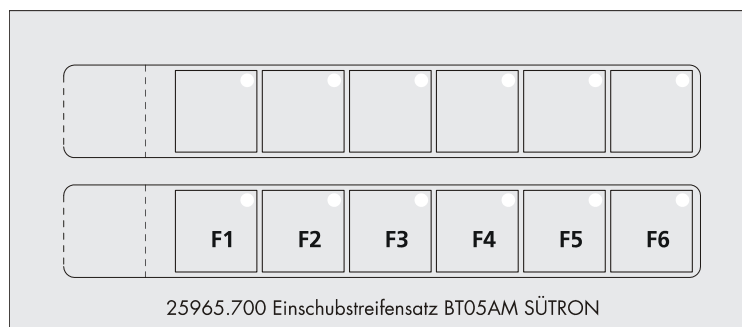


Figure 3-4 Set of slide-in identification strips for BTM05AM



Figure 3-5 Position of the slide-in identification strips at BTM07AM

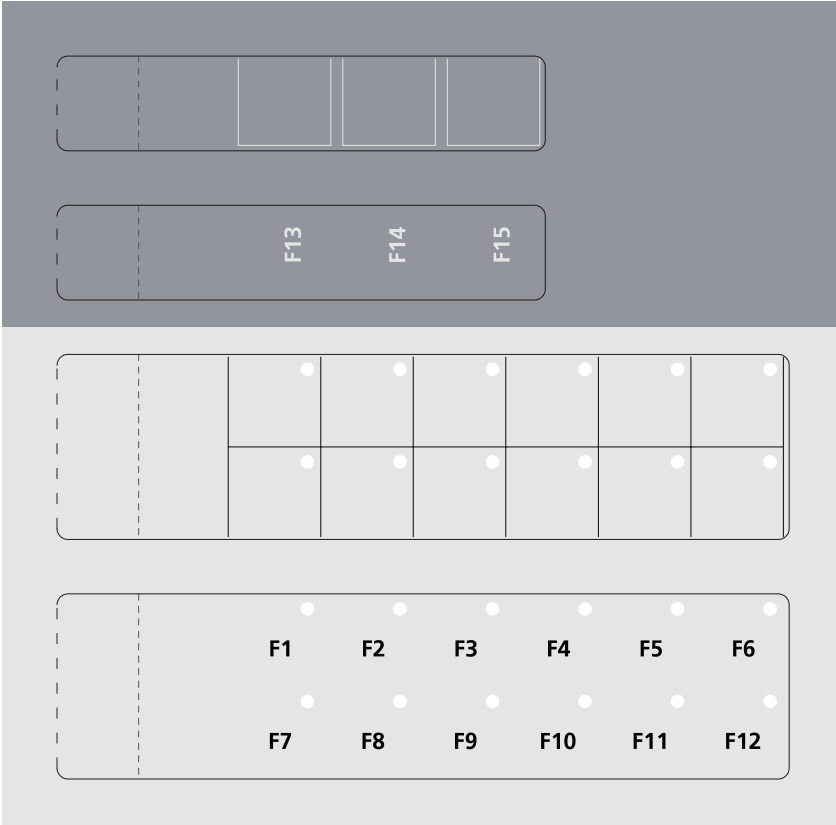


Figure 3-6 Set of slide-in identification strips for BTM07AM

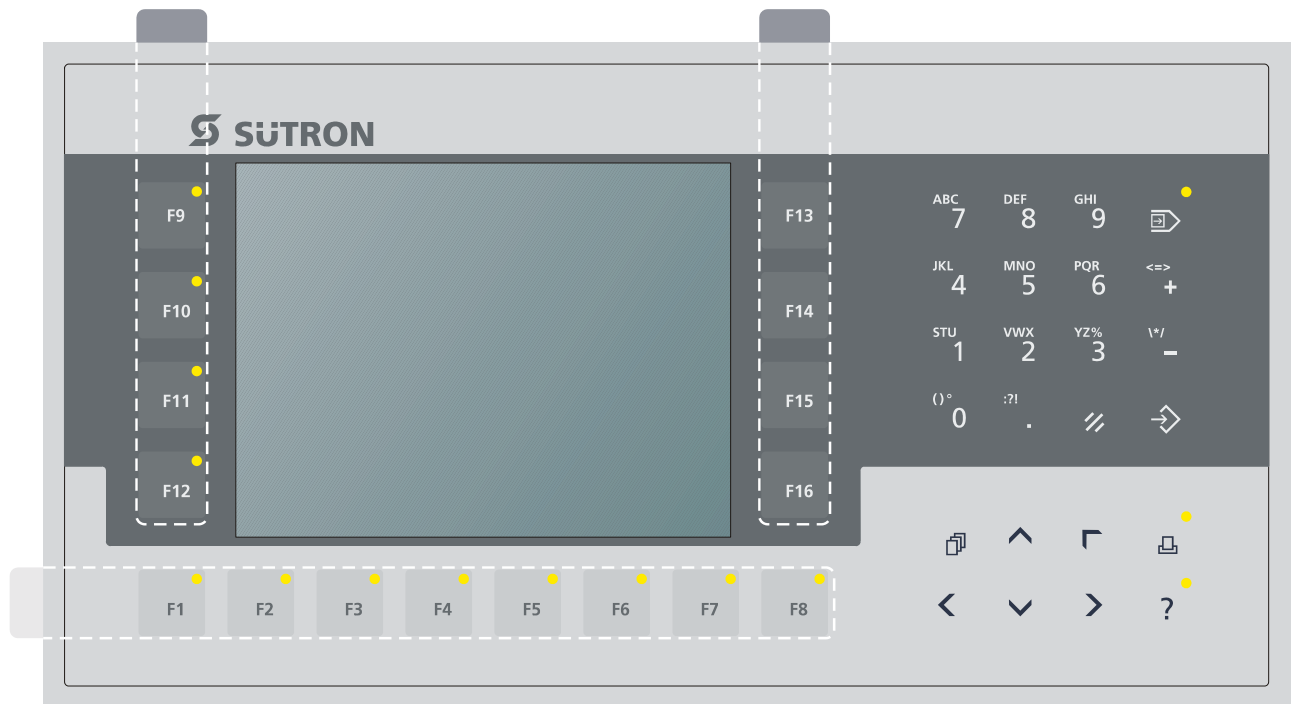


Figure 3-7 Position of the slide-in identification strips at BTM21Am, BT21AS

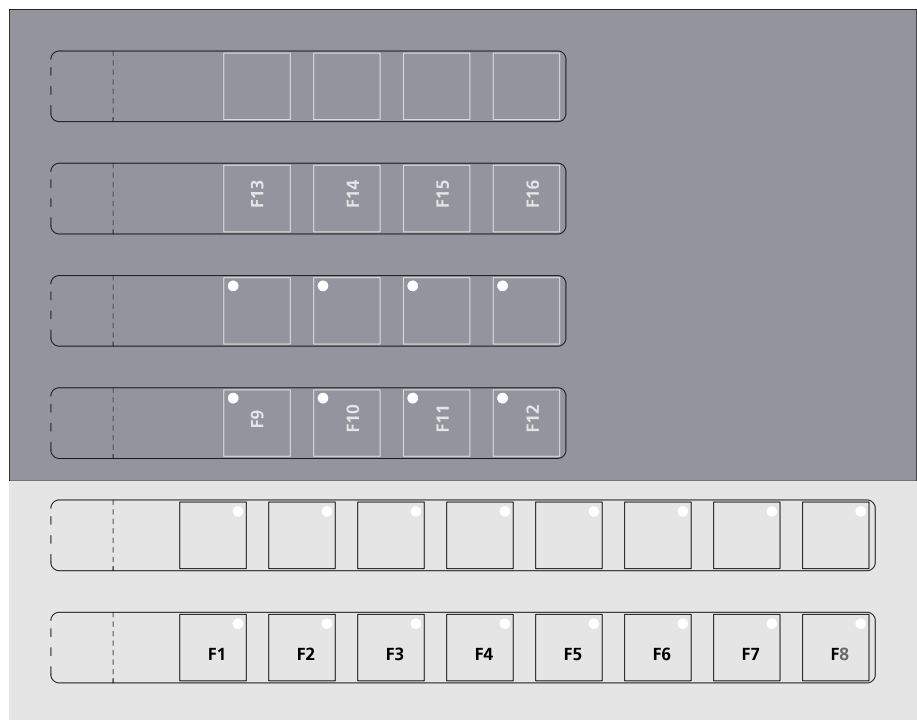


Figure 3-8 Set of slide-in identification strips for BTM21AM, BTM21AS

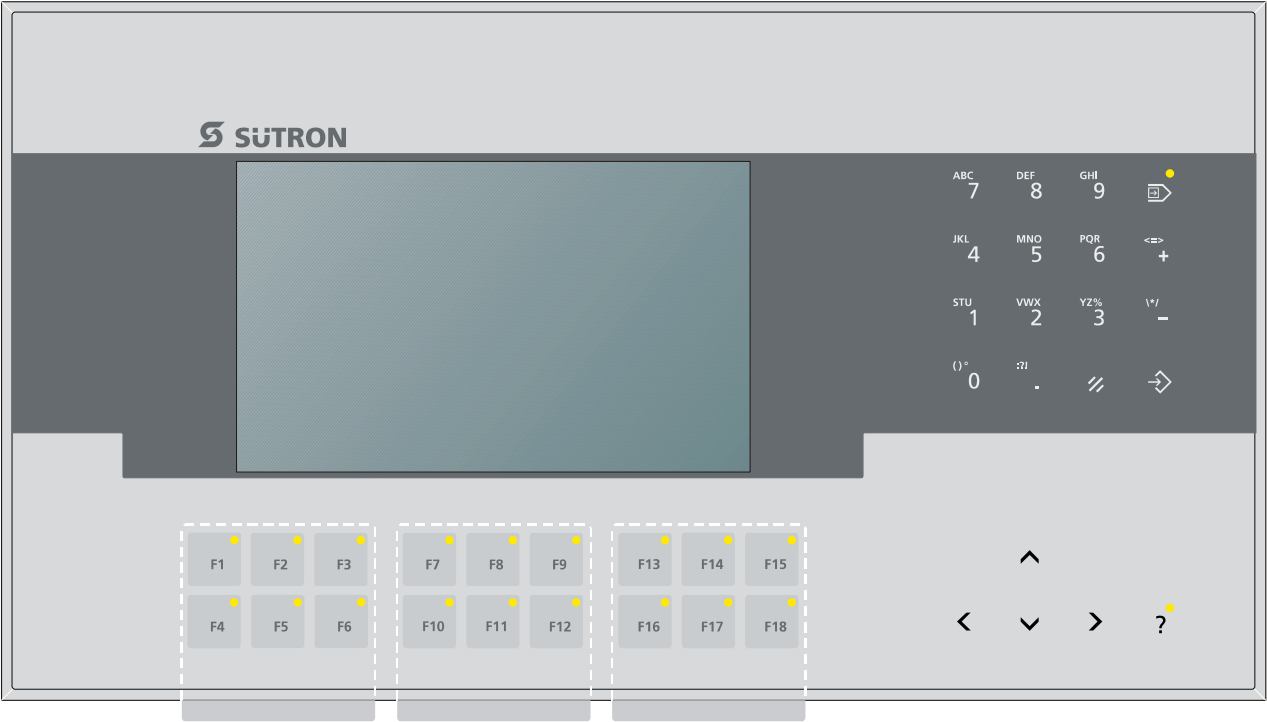


Figure 3-9 Position of the slide-in identification strips at BTM70AT

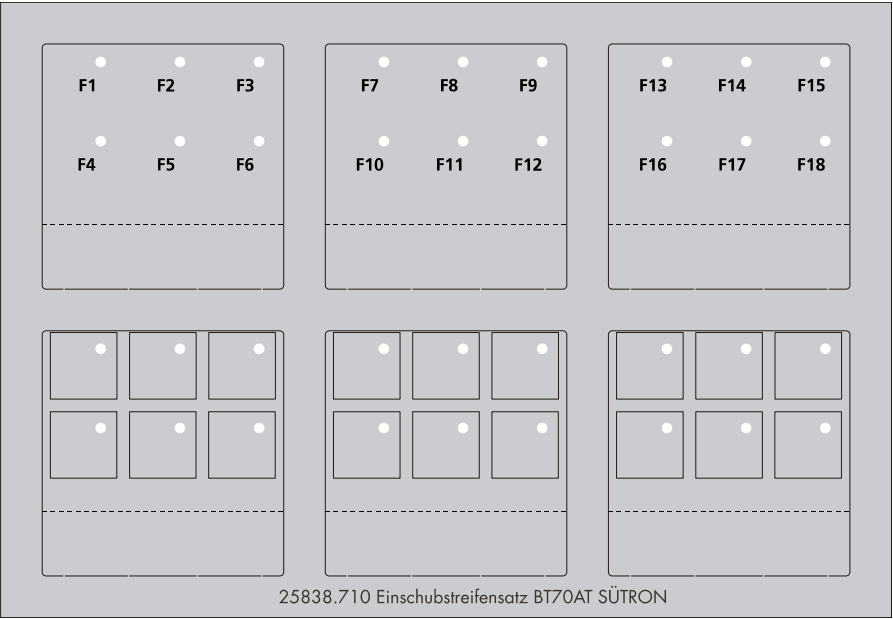


Figure 3-10 Set of slide-in identification strips for BTM70AT



## 3.2 Display



### Danger - Toxic!

If the display is damaged, avoid touching, swallowing or breathing in the liquids or gases which may leak out!



### Danger - Corrosive!

If the display is damaged, avoid touching, swallowing or breathing in the liquids or gases which may leak out!

The operating device is equipped with different displays depending on variant.

### 3.2.1 Setting the Brightness

To be able to set the brightness, you need to use the programming software to setup the system variable **LcdBackLight** in a screen of your choice.



To do so, follow the instructions listed in the programming software's help topic "How do I specify the contrast / brightness setting for the operating device".

In the programming software, enter the following values as lower and upper limits for the representation type.

Table 3-1 Values for the representation type

System Variable	Lower Limit	Upper Limit	Default Setting
LcdBackLight	+ 1	+ 31	+ 15



If you do not configure the system variable **LcdBackLight**, the default setting is used when the device is initialized.



Adjust the brightness to the surrounding conditions at reached operating temperature to be able to read the display optimally.

If you did set up the system variable, you can set the brightness as follows. Open the screen where you set up the system variable and:

1. Press the Data Release key if the data release is not automatically active.
2. Enter a new value for the brightness. To do so, use the keys Plus and Minus.
3. Press the Enter key.
4. Finally press the Data Release key.

The new brightness setting becomes effective immediately after the Enter key is pressed. If necessary, repeat steps 2 and 3 until you are satisfied with the brightness.

### 3.2.2 Setting the Contrast

To be able to set the contrast, you need to use the programming software to setup the system variable **LcdContrast** in a screen of your choice.



To do so, follow the instructions listed in the programming software's help topic "How do I specify the contrast / brightness setting for the operating device".

In the programming software, enter the following values as lower and upper limits for the representation type.

Table 3-2 Values for the representation type

System Variable	Lower Limit	Upper Limit	Default Setting
LcdContrast	+ 1	+ 31	+ 15



If you do not configure the system variable **LcdContrast**, the default setting is used when the device is initialized.



Adjust the contrast to the surrounding conditions at reached operating temperature to be able to read the display optimally.

If you did set up the system variable, you can set the contrast as follows. Open the screen where you set up the system variable and:

1. Press the Data Release key if the data release is not automatically active.
2. Enter a new value for the contrast. To do so, use the keys Plus and Minus.
3. Press the Enter key.
4. Finally press the Data Release key.

The new contrast setting becomes effective immediately after the Enter key is pressed. If necessary, repeat steps 2 and 3 until you are satisfied with the contrast.

### 3.2.3 Character Attributes

The following character attributes can be displayed on the operating device:

- Flashing
- Underline
- Foreground/background color

### 3.2.4 Fonts

You can use Windows fonts. Windows and unicode character sets are possible.

## 4 Interfaces of the Device

The following figure shows the BTM07AM exemplarily for all operating devices described in this manual.

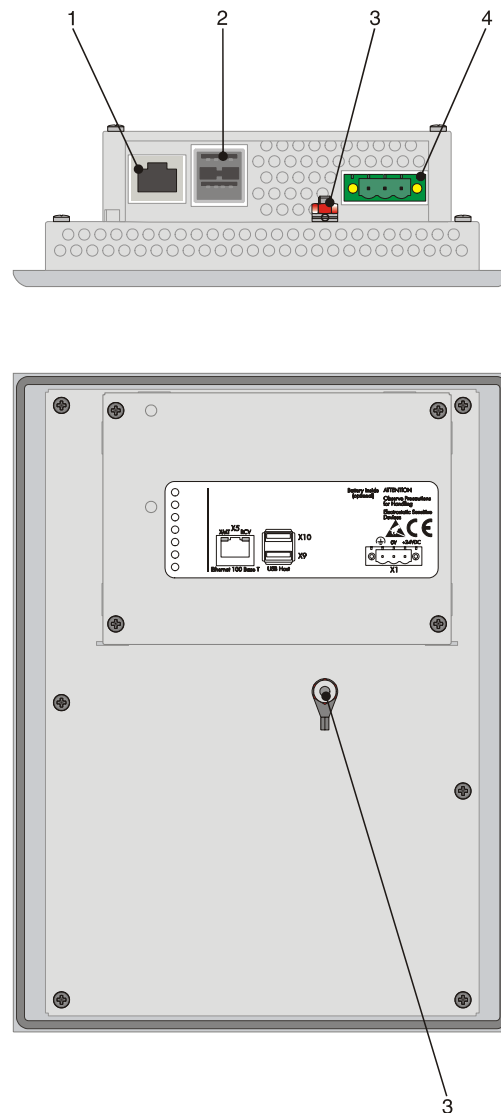


Figure 4-1 Rear view Ethernet

- 1 Female Connector X5 (Ethernet)
- 2 Female Connector X9, X10 (USB Host - Type A)
- 3 Threaded Bolt for Protective Grounding
- 4 Connector X1 (Supply Voltage)

## 4.1 Ethernet (X5)

A 10/100 Base-T Ethernet interface is located on the side of the operating device.

### 4.1.1 Pin Assignment

Connector in the operating device: RJ45 female connector.

Table 4-1 Assignment of the Ethernet interface

Pin	Designation	Function
1	Tx+	Transmitted Data, Positive Polarity
2	Tx-	Transmitted Data, Negative Polarity
3	Rx+	Received Data, Positive Polarity
4	n.c.	Not Connected
5	n.c.	Not Connected
6	Rx-	Received Data, Negative Polarity
7	n.c.	Not Connected
8	n.c.	Not Connected

### 4.1.2 Cable



A twisted pair cable of the category 5 (CAT 5) type must be used. The maximum cable length is 100 m (328.084 feet).



See the IEEE 802.3 standard for further information.

### 4.1.3 Diagnostics

Ethernet diagnostics LEDs are located at the side of the operating device.

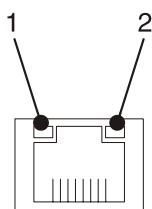


Figure 4-2 Position of the Ethernet diagnostics LEDs

Table 4-2 Function of the Ethernet diagnostics LEDs

No.	Color	State	Designation	Function
1	Green	ON	XMT	Sending Ethernet Data Telegram
2	Yellow	ON	RCV	Receiving Ethernet Data Telegram

## 4.2 USB (X9, X10)

Two host interfaces are available on the operating device.



Using the USB interfaces while normal operating mode is not permitted for maritime applications!

For maritime applications the use of the USB interfaces is allowed for servicing operations only!



Using input devices not suitable for industrial use (e.g. keyboard, mouse) may decrease safety of operation. This includes input devices intended for home and office use.

### 4.2.1 Cable



For the specification of a suitable cable, please refer to the „Universal Serial Bus Specification Rev. 2.0“.



The maximum cable length for the cable used is 2.5 m (8.202 feet).



## 5 Maintenance and Servicing

### 5.1 Front Panel

Only use a damp cloth to remove any dirt from the front panel.

### 5.2 Fuse



The semiconductor fuse cannot be replaced!

---

A semiconductor fuse is used to protect the device. Once the fuse has been tripped, the device must be disconnected from the supply voltage to allow the semiconductor fuse to regenerate. At an ambient temperature of 20 °C (68 °F), the regeneration takes approximately 20 seconds. The higher the ambient temperature, the longer the regeneration takes.

### 5.3 Battery

The built-in battery preserves the data in the SRAM and supplies the real-time clock with power. The minimum battery life is 5 years, even under unfavorable operating conditions. When the battery runs down, the message "Change battery" is generated automatically.

We recommend you change the battery approximately every 4 years as part of the regular maintenance work. A prepared battery including connector can be obtained directly from Sutron electronic.

If the "Change battery" message is detected too late, data in the SRAM may have already been lost. For this reason, after changing a battery, always check data such as editable passwords, parameters in the system variables, data sets of the recipes and entries in the message system.

### 5.3.1 Changing the Battery



At operating devices for the explosive area the batteries must only be changed by Sutron electronic GmbH.



Batteries must only be changed by authorized and trained experts!



For changing the battery you may only use replacement batteries of Sutron electronic.



Electrostatic discharge can damage electronic components! **Observe the ESD protective measures!**



Do not throw lithium batteries into fire, do not heat to 100 °C or higher and do not recharge. **Danger - Explosive!**



Do not open lithium batteries. **Danger - Toxic!**

To ensure that the data in the SRAM and the time are preserved, it is possible to change the battery under operating voltage. Observe the corresponding safety notices!

1. Remove the screws on the rear of the device and lift off the enclosure cover.
2. Remove the cable fastener securing the battery.
3. Disconnect the connector from the battery and remove the dead battery.
4. Plug in the cable for the new battery.
5. Use a cable fastener to attach the new battery to the enclosure.
6. Place the enclosure cover back onto the device.
7. Carefully tighten the screws of the enclosure cover.

### 5.3.2 Battery Disposal



To prevent short circuitry in the collection boxes, insulate the poles of each battery with insulation tape or put each single battery into a plastic bag.

You must always return old batteries to a dealer or to a returns depot set up for this purpose by the public waste disposal body or a licensed battery dealer for recycling. Only dispose of dead batteries in public or commercial collection boxes. The battery is drained when the message „Change battery“ appears on the display of the operating device.



## 6 Technical Data

Keyboard	BTM03AM	BTM05AM	BTM07AM	BTM21AM, BTM21AS	BTM70AT
Type	Membrane keyboard				
Number of keys	18	30	39	40	40
Key area (raised)	11 mm (0.433") (H x W)				
Actuator travel	0.3 mm (0.012")				
Actuating force	3 N				
Switch cycles	Approx. 3 millionen under the following conditions: Pressing element: test plunger (DIN 42115) Pressing force: 10 N Pressing frequency: 1 Hz				
Lifetime (min.)	2 Million switch cycles				
Display elements (status LEDs)	6	9	15	11	20

Display	BTM03AM, BTM05AM	BTM07AM	BTM21AM	BTM21AS	BTM70AT
Type	FSTN (mono)	FSTN (mono)	FSTN (mono)	C-STN (color)	TFT (color)
Resolution (pixels)	160 x 80	320 x 240	320 x 240	320 x 240	800 x 480
Colors	5 Shades of gray	5 Shades of gray	5 Shades of gray	256	65536
Reading angle	80°	80°	90°	60°	100°
Contrast setting	Tempera- ture compen- sated	Tempera- ture compen- sated	Tempera- ture compen- sated	Tempera- ture compen- sated	-
Half-life backlighting	50,000 h	30,000 h	30,000 h	40,000 h	50,000 h
Brightness in cd/m <sup>2</sup>	45	100	140	180	400
Display area (H x W) in mm (Inch)	33,6 x 67,2 (1.323 x 2.646)	57,6 x 76,8 (2.268 x 3.024)	86,4 x 115,2 (3.402 x 4.535)	86,4 x 115,2 (3.402 x 4.535)	91,4 x 152,4 (3.598 x 6.0)

<b>Electrical Data</b>	<b>BTM03AM, BTM05AM, BTM07AM</b>	<b>BTM21AM</b>	<b>BTM21AS</b>	<b>BTM70AT</b>
Supply voltage	24 V DC (SELV in accordance with DIN EN 61131)			
Residual ripple	10 % maximum			
Minimum voltage	18 V			
Maximum voltage	30 V			
Power consumption (typical at 24 V)	0.25 A	0.25 A	0.4 A	0.5 A
Power consumption (maximum)	0.35 A	0.35 A	0.5 A	0.7 A
Connected load	6 W	6 W	9,6 W	12 W
Fuse	Semiconductor fuse, self-resetting			
Protection against polarity reversal	Integrated			

<b>Ethernet</b>	
X5 Ethernet	10/100 Base-T

<b>USB</b>	
Corresponds to the "Universal serial bus specification Rev. 2.0"	
X9, X10 Host	Min.: 1.5 Mbit/s Max.: 12 Mbit/s Max. output current 100 mA per output

<b>Central Processing Unit</b>	
Central processing unit	RISC ARM9
Clock frequency	200 MHz
Other features	Watchdog timer, real-time clock, battery monitoring

<b>Memory</b>	<b>Standard</b>	<b>Optional</b>
Application memory	3 MByte	14 MByte
Flash	16 MByte	32 MByte
SDRAM	32 MByte	64 MByte
SRAM	512 KByte	512 KByte

Connection Method	
RJ45 female connector	
USB female connector A	

Environmental Conditions	
Temperature during operation	0 °C to 50 °C (32 °F to 122 °F)
Temperature during storage, transport	- 25 °C to + 70 °C (-13°F to + 158°F)
Relative air humidity for operation and storage	10 % to 95 %, no condensation
Application area	Degree of pollution 1, overvoltage category II

Standards and Guidelines	
Interference immunity	DIN EN 61000-4-2 DIN EN 61000-4-3 DIN EN 61000-4-4 DIN EN 61000-4-5 DIN EN 61000-4-6 DIN EN 61000-6-2
Emitted interference	DIN EN 55011 limit value class A DIN EN 55022 limit value class A DIN EN 6100-6-4
Equipment requirements	DIN EN 61131-2
Storage and transportation	DIN EN 61131-2
Power supply	DIN EN 61131-2
Electromagnetic compatibility	89/336/EEC (including all applicable amendments)
Degrees of protection	DIN EN 60529
Impact load, shocks	DIN EN 60068-2-27
Sinusoidal vibrations	DIN EN 60068-2-6



This is a class A device. This device may cause radio interference in residential areas. In this case, the user may be required to introduce appropriate countermeasures, and to bear the cost of same.

Approvals
CE, UL, cUL, GL

## Technical Data

Front Panel and Enclosure	BTM03AM	BTM05AM	BTM07AM	BTM21AM, BTM21AS	BTM70AT
Enclosure	Steel sheet, galvanized				
Front panel material	Aluminium, anodized natural finish				
Front panel (H x W x D) in mm (Inch)	96 x 144 x 5 (3.78 x 5.669 x 0.197)	168 x 120 x 5 (6.614 x 8.333 x 0.197)	205 x 155 x 5 (8.071 x 6.102 x 0.197)	160 x 300 x 5 (6.299 x 11.811 x 0.197)	210 x 380 x 5 (8.268 x 14.961 x 0.197)
Front panel cover	Polyester foil				
Seal	Circumferential rubber seal on the rear				
Mounting cutout (H x W) in mm (Inch)	82 x 136 (3.228 x 5.354)	160 x 112 (6.299 x 4.409)	199 x 139 (7.835 x 5.472)	152 x 292 (5.984 x 11.496)	202 x 372 (7.953 x 14.646)
Mounting depth	About 43 mm (1.693")				
Degree of protection	Front: IP65 Rear: IP20				
Total weight	About 500 g	About 500 g	About 800 g	About 1300 g	About 1800 g

## 7 Ordering Data

Table 7-1 Accessories

Description	Part No.
USB 2.0 memory stick 512 MB	81152.512
Battery, assembled with cable and connector (Type: CR2450)	66779.000



# A Index

## A

Accessories.....	7-1
Administration operating mode .....	2-22

## B

Battery.....	5-1
Battery disposal .....	5-2

## C

Cable	
Ethernet .....	4-2
USB .....	4-3
Changing the battery.....	5-2
Character attributes .....	3-10
Connecting.....	2-13
Control keys .....	3-2

## D

Diagnostics	
Ethernet .....	4-3
Dimensions	
Cutout .....	2-4
Front panel.....	2-2
Display .....	3-9

## E

Editing keys.....	3-1
-------------------	-----

## F

Font	
Windows .....	3-10
Function keys.....	3-3
Function of the AppStarter.exe program.....	2-22
Function of the TSvisLD.exe program .....	2-23
Fuse .....	5-1

## I

Identification.....	2-25
Important files and update .....	2-24
Intended use .....	1-2
Interface	
Ethernet .....	4-2
USB .....	4-3

## K

Key	
Cursor down .....	3-2
Cursor home .....	3-2
Cursor left .....	3-2
Cursor right.....	3-2
Cursor up .....	3-2
Data release .....	3-2
Enter .....	3-3
Help .....	3-2
Minus .....	3-2
Page down.....	3-2

Plus .....	3-2
Print.....	3-3
Keyboard.....	3-1

## L

LcdBackLight.....	3-9
LcdContrast.....	3-10
Loading procedure on Windows CE operating system .....	2-15

## M

Maintenance.....	5-1
Memory media used.....	2-23
Mounting .....	2-1

## N

Nameplate .....	2-25
Normal operating mode.....	2-15

## O

Ordering data .....	7-1
---------------------	-----

## P

Pin assignment	
Ethernet .....	4-2

## R

Rear view	
Ethernet .....	4-1

## S

Safety notes .....	1-2
Servicing .....	5-1
Setting the brightness .....	3-9
Setting the contrast .....	3-10
Setup Main operating mode.....	2-15
Slide-in identifications strips.....	3-4
Special keys .....	3-2
Standards.....	6-3
Supply voltage 24 V .....	2-13
Switching on.....	2-15
Symbols	
General .....	1-1
Specific .....	1-1

## T

Target group.....	1-2
Technical data.....	6-1

## U

Unpacking .....	2-1
-----------------	-----

## V

Version key .....	2-25
-------------------	------







**Sütron electronic GmbH**

Kurze Straße 29

D-70794 Filderstadt

Phone: 0049 711 / 77098-0

Fax: 0049 711 / 77098-60

E-Mail: [doku@suetron.de](mailto:doku@suetron.de)

Internet: [www.suetron.com](http://www.suetron.com)