

Dear Client,

Thank you very much for buying a Solara product. With your new Solara SRCX controller you own a state-of-the-art device which was developed according to the latest available technical standards. It comes with a number of outstanding features, like:

- Multifunctional LC display
- Programmable Low Voltage Disconnect with new ALVD (Adaptive Low Voltage Disconnect)
- Sophisticated programmable nightlight function
- Excess Energy Management (EEM) for better utilization of your solar system
- Complete electronic protection

This manual gives important recommendations for installing, using and programming as well as remedies in case of problems with the controller. Read it carefully in your own interest and mind the safety and usage recommendations at the end of this manual.

### Description of Functions

- The charge controller protects the battery from being overcharged by the solar array and from being deep discharged by the loads. The charging characteristics include several stages which includes automatic adaption to the ambient temperature.
- The charge controller adjusts itself automatically to 12V or 24V system voltage.
- The pushbutton allows switching the load on and off.
- The charge controller can be programmed for lighting applications.
- The controller provides a control output for special loads that make use of excess energy, like special solar refrigerators. Additionally, it has a serial interface which can be used with an optional interface adapter (Solara SRCX -I).
- The charge controller has a number of safety and display functions.

### Mounting and Connecting the Charge Controller


The regulator is intended for indoor use only. Protect it from direct sunlight and place it in a dry environment. Never install it in humid rooms (like bathrooms).

The regulator measures the ambient temperature to adapt the charging voltages, therefore it must be installed in the same room as the battery.

The regulator warms up during operation. It shall be installed on a non flammable surface only.

**REMARK:** Connect the controller by following the steps described below to avoid installation faults.


① Open the terminal lid.



② Remove the screws from the strain relief and take off the strain relief bridges.




③ Mount the controller to the wall with screws that fit to the wall material. Use screws with 4 to 5 mm shaft and max. 9 mm head diameter, no counter sunk. Mind that the screws have to carry also the force applied by the wiring. Mind also the minimum required distance to floor and ceiling, this is necessary for ventilation reasons.

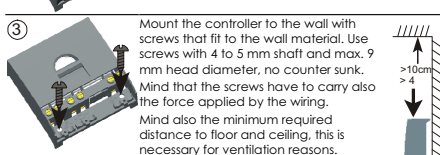

A DIN Rail mounting plate is available as an accessory (Solara SRCX -DR). This allows mounting the controller on a standard 35mm DIN rail. Use the screws supplied with the mounting plate to fix it to the controller.



④ Connect the wires leading to the battery with correct polarity. To avoid any voltage on the wires, first connect the controller, then the battery. Mind the recommended wire length (min 30 cm to max approx. 100 cm) and the wire size: Solara SR170CX: min 2.5 mm<sup>2</sup> Solara SR340CX: min 4 mm<sup>2</sup> Wrong polarity will cause a permanent warning sound.

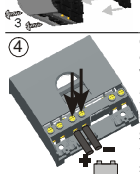

**WARNING:** If the battery is connected with reverse polarity, the load terminals will also have the wrong polarity. Never connect loads during this condition!

**REMARK:** The controller has a built-in voltage drop compensation which automatically compensates battery wire voltage drops of up to 250 mV.

**REMARK:** Mind the recommendations of your battery manufacturer. We strongly recommend connecting a fuse directly to the battery to protect any short circuit at the battery wiring. The fuse must take the charge controller nominal current:

Solara SR170CX: 15A, Solara SR340CX: 30A

⑤ Connect the wires leading to the solar array with correct polarity. To avoid any voltage on the wires, first connect the controller, then the solar array.

Mind the recommended wire size:  
 Solara SR170CX: min 2.5 mm<sup>2</sup>  
 Solara SR340CX: min 4 mm<sup>2</sup>


**REMARK:** place positive and negative wire close to each other to minimize electromagnetic effects.

**REMARK:** Solar panels provide voltage as soon as exposed to sun light. Mind the solar panel manufacturer's recommendations in any case.

⑥ To avoid voltage at the load terminal, push the button to shut off the load output. Connect the wires leading to the loads with correct polarity. Mind the recommended wire size:  
 Solara SR170CX: min 2.5 mm<sup>2</sup>  
 Solara SR340CX: min 4 mm<sup>2</sup>




⑦ Fasten the strain relieves.




⑧ If you intend to use the Excess Energy Management output, follow these steps:  
 a. Remove the green terminal block in the terminal compartment and turn it inside down.  
 b. Mount the excess energy signal wires as shown in the picture beside.  
 c. Connect the signal wires to the excess energy management input of the appropriate load (e.g. special solar coolers)  
 d. Reconnect the green terminal block to the Solara SRCX

⑨ Close the terminal lid.



Now you have successfully connected your Solara SRCX controller.

### Grounding the Solar System

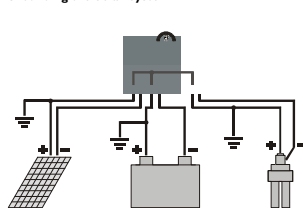

Be aware that the positive terminals of the Solara SRCX controller are connected internally and therefore have the same electrical potential. If any grounding is required, always do this on the positive wires.

**REMARK:** If the Solara SRCX is used in a vehicle which has the battery negative on the chassis, loads and solar panels connected to the regulator must not have an electric connection to the car body. Otherwise the overcharge protection, the Low Voltage Disconnect and the electronic fuse function of the controller is short circuited.

### Starting up the Controller

#### Self Test

As soon as the controller is supplied with power either from the battery or the solar array, it starts a self test routine. This is indicated first by running LCD bars for approx. 0.5 seconds, and then the firmware version is displayed in coded symbols for about another second (This is for service purposes only). Then the display changes to normal operation.

#### System Voltage

The controller adjusts itself automatically to 12 V or 24 V system voltage. As soon as the voltage at the time of start-up exceeds 20.0 V, the controller implies a 24 V system.

If the battery voltage is not within the normal operation range (approx. 12 to 15.5 V or approx. 24 to 31 V) at start-up, a status display according to the section ERROR DESCRIPTION occurs.

#### Battery Type

The controller is preset to operate with lead acid batteries with liquid electrolyte. If you intend to use a VRLA battery (GEL type) you can adjust the controller in [Programming Menu 1](#) (see back page). The equalization charge is deactivated then. In case of any doubts consult your dealer.

The regulator does not need any maintenance or service. Remove dust with a dry tissue.


It is important that the battery gets fully charged frequently (at least monthly). Otherwise the battery will be permanently damaged.

A battery can only be fully charged if not too much energy is drawn during charging. Keep that in mind, especially if you install additional loads.

### Display Functions

In normal operation mode the controller displays the state of charge (available energy) of the battery. Any change of the state of charge (SOC) to a lower status is additionally signalled acoustically.

System conditions are displayed as follows:



The percentage corresponds to the available energy until Low Voltage Disconnect in relation to a fully charged battery.

As long as the solar array supplies enough voltage to charge the battery, this is indicated by up-moving bars alternately to the state of charge display.

In normal operation the loads can be switched on and off by pushing the button. This is indicated in the display:



Special conditions are shown in the LC display if the Low Voltage Disconnect function shuts off the load output or in case of various other error conditions. See section ERROR DESCRIPTION for details.

### Low Voltage Disconnect Function

The controller has 5 different modes to protect the battery from being deep discharged:

- Mode 1: Disconnect at 11.4 V (at nominal load current) up to 11.9 V (at no load current). Normal operation mode for good battery protection.
- Mode 2: Disconnect at 11.0 V (at nominal load current) up to 11.75 V (at no load current). Mode with lower disconnection point. Battery is cycled deeper, this can shorten battery lifetime.
- Mode 3: Disconnect at 11.0 V to 12.2 V depending on load current and previous charging cycles. This adaptive mode leads to longer lifetime of the battery because it allows recovery of the battery by full recharge. Maximum battery life.
- Mode 4: Disconnect at 11.5 V fixed setting. Appropriate if bypass loads draw current directly from battery.
- Mode 5: Disconnect at 11.0 V fixed setting. Appropriate if bypass loads draw current directly from battery. Mode with lower disconnection point. Battery is cycled deeper, this can shorten battery lifetime.

The controller is preset to Mode 1 from the factory. Use [Programming Menu 2](#) to change the setting (see back page).

In case of doubts which mode to choose, consult your dealer because this has to be evaluated depending on the battery used.

### Excess Energy Management Function EEM

The controller provides a built-in excess energy management function. This function, in combination with especially designed loads (e.g. special solar refrigerators/coolers), allows to make use of excess energy which would be lost otherwise because of the overcharge protection of the battery. A better utilization of the solar system is the benefit. Also the battery treatment is improved because more energy comes directly from the solar panel instead of the battery. Ask your dealer about available loads that can make use of excess energy.


To connect your Excess Energy load with the controller, see picture 8 (signal wires).

### Nightlight Function

The Solara SRCX controller comes with a sophisticated nightlight function. It controls the load output at night and is widely programmable.

There are 2 modes available:

DUSK TO DAWN and EVENING/MORNING. The mode can be selected in [Programming Menu 3](#).

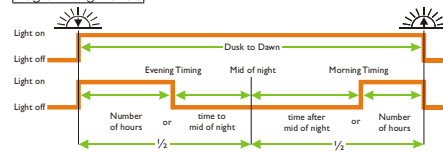

If EVENING/MORNING is selected, [Programming Menu 3](#) allows choosing the MORNING timing behaviour, and [Programming Menu 4](#) allows choosing the EVENING timing behaviour.

Mind that the load output is switched off as soon as the battery has reached the Low Voltage Disconnect threshold. The Low Voltage Disconnect has priority above the nightlight function.


"Mid of night" is detected automatically as the middle between dusk and dawn, no real time setting is required. It may take some days until the controller has "learned" midnight. This method can cause some inaccuracy but avoids any clock readjustment. The controller's "Mid of night" can be different from the real time midnight depending on your location.

### Recommendations for Use

The regulator warms up during normal operation. If there is insufficient ventilation (e.g. in an installation cabinet), the controller limits the solar charge current to prevent overheating.

**Nightlight Function (continued)**

The controller recognizes day and night based on the solar array open circuit voltage. In **Programming Menu 3** this day/night threshold can be modified according to the requirements of the local conditions and the solar array used.

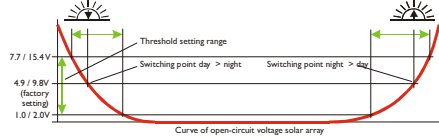

The two voltage levels before/ after the slash are valid for 12 V and 24 V systems respectively.

To find the right value, we recommend measuring the solar array open circuit voltage at the time when twilight has reached the level when the controller should switch on/off. This value (the closest available) can then be set according to the description in the programming section.

**Switching off the Acoustic Signal**

The controller has an acoustic signal which indicates the change of the state of charge. This function can be deactivated in **Programming Menu 7**.

**Using the interface**

The controller comes with a serial interface, which can be connected to a PC with an optional interface adapter (Solara SRCX-I) (see interface adapter manual for details). In **Programming Menu 8** the behaviour of the serial interface can be modified.

**Safety Features**

The controller is protected against wrong installation or use:

|   | At the solar terminal                   | At the battery terminal                                   | At the load terminal                                  |
|---|---|---|---|
| Battery connected with correct polarity | Unrestricted                            | Normal operation  | Unrestricted  |
| Battery connected with wrong polarity   | Unrestricted                            | Unrestricted, Acoustic Warning                            | Unrestricted  |
| Reverse polarity                        | Yes, not at 24V system voltage.         | Yes, if only the battery is connected. Acoustic Warning   | Load output is protected, but loads might be damaged. |
| Short circuit                           | Unrestricted                            | Unrestricted, CAUTION: Battery must be protected by fuse. | Unrestricted  |
| Overcurrent                             | Controller limits current.              | Controller switches off load terminal.                    | Controller switches off load terminal.                |
| Thermal overload                        | Controller is electronically protected. | Controller switches off load terminal.                    | Controller switches off load terminal.                |
| No connection                           | Unrestricted                            | Unrestricted  | Unrestricted  |
| Reverse current                         | Unrestricted                            | Unrestricted  | Unrestricted  |
| Overvoltage                             | Varistor 56 V, 2.3 J                    | Max. 40 V   | Controller switches off load terminal.                |
| Undervoltage                            | Normal operation                        | Controller switches off load terminal.                    | Controller switches off load terminal.                |

**WARNING:** The combination of different error conditions may cause damage to the controller. Always remove an error before you continue connecting the controller!

**Error Description**

| Error condition                      | Display | Reason   | Remedy   |
|--------------------------------------|---------|--|--|
| Battery is low                       |         | Battery is low   | Load will reconnect as soon as battery is recharged.   |
| Overcurrent / Short circuit of loads |         | Overcurrent / Short circuit of loads                               | Switch off all loads. Remove short circuit. Controller will switch on load automatically after max 1 minute. |
| Loads are not supplied               |         | Controller is thermally overloaded and has disconnected the loads. | Check proper ventilation of controller. After cooling down the loads are reconnected automatically.          |
|                                      |         | Battery voltage too high (>15.5 / 31.0 V)                          | Check if other sources overcharge the battery. If not, controller is damaged.                                |
|                                      |         | Battery wires or battery fuse damaged, battery has high resistance | Check battery wires, fuses and battery.  |

**Error Description (continued)**

| Error condition                             | Display           | Reason   | Remedy   |
|---|-------------------|--|--|
| Battery is flat after short time            |                   | Battery has low capacity   | Change battery   |
| Battery is not being charged during daytime | No up-moving bars | Solar array faulty or wrong polarity   | Check Solar array and wiring   |
| Battery wrong polarity                      | Permanent sound   | Battery is connected with reverse polarity   | Remove reverse polarity  |
| Controller limits solar current             |                   | Controller is thermally overloaded<br>Solar array exceeds nominal current of controller. | Mount controller at a location with better ventilation<br>Check solar array current. |

**Programming your SRCX**

You enter the programming mode with a long push on the button. The programming menu structure is described in the right column. Mind that once you have entered the programming menu you can exit it at the last item only.

We therefore recommend that you first note down your required settings in the check boxes beside the menu structure and then do the programming in one go. This makes programming easier and avoids errors.

All programming settings are stored in a non-volatile memory and remain stored even if the controller was disconnected from the battery. If you want to reset the controller to the factory settings, choose **Programming Menu 9**.

**Programming lock-out**

By pushing the button for 8 sec in normal operation mode the programming lock-out is activated to prevent any accidental settings change. Another 8 sec push releases the lock-out.

**General Safety and Usage Recommendations**

**Intended Use**

The charge regulator is intended for use in photovoltaic systems with 12 V or 24 V nominal voltage. It shall be used with vented or sealed (VRLA) lead acid batteries only.

**Safety Recommendations**

- Batteries store a large amount of energy. Never short circuit a battery under all circumstances. We recommend connecting a fuse (slow acting type, according to the nominal regulator current) directly to the battery terminal.
- Batteries can produce flammable gases. Avoid making sparks, using fire or any naked flame. Make sure that the battery room is ventilated.
- Avoid touching or short circuiting wires or terminals. Be aware that the voltages on specific terminals or wires can be up to double the battery voltage. Use isolated tools, stand on dry ground and keep your hands dry.
- Keep children away from batteries and the charge regulator.
- Please observe the safety recommendations of the battery manufacturer. If in doubt, consult your dealer or installer.

**Liability Exclusion**

The manufacturer shall not be liable for damages, especially on the battery, caused by use other than as intended or as mentioned in this manual or if the recommendations of the battery manufacturer are neglected. The manufacturer shall not be liable if there has been service or repair carried out by any unauthorised person, unusual use, wrong installation, or bad system design. Opening case voids warranty.

**Technical Data**

|                           |  |
|---------------------------|--|
| Nominal voltage           | 12 / 24 V, automatic recognition   |
| Absorption voltage        | 14.4 / 28.8 V (25°C), 0.5-2h   |
| Equalization voltage      | 14.8 / 29.6 V (25°C), 2 h  |
| Float voltage             | 13.7 / 27.4 V (25°C)   |
| Load disconnect voltage   | 11.0-12.2 / 22.0-24.4 V depending on setting                               |
| Load reconnect voltage    | 12.8 / 25.6 V  |
| Temperature compensation  | -4 mV/cell*°K  |
| Max. solar panel current  | 10 / 20 A according to model number @ 25°C (without load current at 50°C)  |
| Max. load current         | 10 / 20 A according to model number @ 25°C (without solar current at 50°C) |
| Dimensions                | 89 x 90 x 38 mm (w x h x d)  |
| Weight                    | 168 gr   |
| Max. wire size            | 16 mm <sup>2</sup> (AWG #6)  |
| Self consumption          | 4 mA   |
| Ambient temperature range | -25 to + 50 °C   |
| Case protection           | IP 22  |

Subject to change without notice. Version: Solara SRCX  
 Made in one of the following countries: China - Germany  
 SOLARA, Hamburg, [www.solara.de](http://www.solara.de)



State of Charge: Main Menu | Display Menu | Programming Menu (Flashing) | Setting Factory | Year

Load on/off (1) | Battery type Liquid electrolyte   Year  
 Battery type e.g. GEL (VRLA)   Year

Low voltage disconnect current compensated 11.4 / 11.9 V   Year  
 Low voltage disconnect current compensated 11.0 / 11.75 V   Year  
 LVD current compensated / adaptive 11.0 / 12.2 V   Year

Low voltage disconnect 11.5 V   Year  
 Low voltage disconnect 11.0 V   Year

Nightlight function OFF   Year  
 Nightlight function FROM 10:00   Year  
 Nightlight function EVENING/MORNING   Year

Nightlight function EVENING OFF   Year  
 Nightlight function EVENING 1 HR   Year  
 Nightlight function EVENING 2 HRS   Year  
 Nightlight function EVENING 3 HRS   Year  
 Nightlight function EVENING 4 HRS   Year  
 Nightlight function EVENING 5 HRS   Year  
 Nightlight function EVENING TO 4 HRS before mid of night   Year  
 Nightlight function EVENING TO 3 HRS before mid of night   Year  
 Nightlight function EVENING TO 2 HRS before mid of night   Year

Nightlight function EVENING TO 1 HR before mid of night   Year  
 Nightlight function EVENING TO mid of night   Year

Nightlight function MORNING OFF   Year  
 Nightlight function MORNING 1 HR   Year  
 Nightlight function MORNING 2 HRS   Year  
 Nightlight function MORNING 3 HRS   Year  
 Nightlight function MORNING 4 HRS   Year  
 Nightlight function MORNING 5 HRS   Year  
 Nightlight function MORNING FROM 2 HRS after mid of night   Year  
 Nightlight function MORNING FROM 3 HRS after mid of night   Year  
 Nightlight function MORNING FROM 4 HRS after mid of night   Year  
 Nightlight function MORNING FROM 5 HRS after mid of night   Year

Day/Night threshold 1.0 / 2.0 Solar voltage   Year  
 Day/Night threshold 1.6 / 3.1 Solar voltage   Year  
 Day/Night threshold 2.1 / 4.2 Solar voltage   Year  
 Day/Night threshold 2.7 / 5.4 Solar voltage   Year  
 Day/Night threshold 3.2 / 6.5 Solar voltage   Year  
 Day/Night threshold 3.8 / 7.6 Solar voltage   Year  
 Day/Night threshold 4.4 / 8.8 Solar voltage   Year  
 Day/Night threshold 4.9 / 9.8 Solarvoltage   Year  
 Day/Night threshold 5.5 / 11.0 Solar voltage   Year  
 Day/Night threshold 6.0 / 12.1 V Solar voltage   Year  
 Day/Night threshold 6.6 / 13.2 V Solar voltage   Year  
 Day/Night threshold 7.2 / 14.3 V Solar voltage   Year  
 Day/Night threshold 7.7 / 15.4 V Solar voltage   Year

Buzzer ON   Year  
 Buzzer OFF   Year

Serial interface EXCESS ENERGY & CURRENT DATA   Year  
 Serial interface EXCESS ENERGY & DATALOGGER   Year  
 Serial interface BIDIRECTIONAL NO EXCESS ENERGY   Year

Keep individual settings   Year  
 Date of year on settings:    Year  
 Reset to factory preset   Year