

# NAR-7100 Series Communication Appliance

## User's Manual

Revision: 1.2



7F, No. 186, Jian-Yi Rd., Chung-Ho City, 235 Taipei, Taiwan <http://www.cas-well.com>  
■ T: +886-2-5591-1999 ■ F: +886-2-5591-1666 ■ E-mail: [info@cas-well.com](mailto:info@cas-well.com)



# Table of Contents

<b>Chapter 1</b>	<b>Introduction</b>	<b>2</b>
1.1	<i>About This Manual</i>	2
1.2	<i>Manual Organization</i>	2
1.3	<i>Technical Support Information</i>	2
1.4	<i>Board Layout</i>	3
1.5	<i>System Block Diagram</i>	4
1.6	<i>Product Specifications</i>	5
<b>Chapter 2</b>	<b>Getting Started</b>	<b>6</b>
2.1	<i>Included Hardware</i>	6
2.2	<i>Before You Begin</i>	6
2.3	<i>Hardware Configuration Setting</i>	7
2.4	<i>The Chassis</i>	13
2.5	<i>Open the Chassis</i>	13
2.6	<i>Install a Different Processor</i>	14
2.7	<i>Remove and Install DIMM</i>	17
2.8	<i>Remove and Install Compact Flash Card</i>	20
2.9	<i>Remove and Install Battery</i>	20
2.10	<i>Install HDD</i>	21
2.11	<i>Install or remove Riser Card</i>	21
2.12	<i>Ear Mount Kit Installation</i>	23
2.13	<i>Remove EZIO / LCD</i>	24
2.14	<i>Remove Power Supply</i>	26
2.15	<i>Remove main board</i>	28
2.16	<i>Use a Client Computer</i>	30
<b>Chapter 3</b>	<b>BIOS Setting</b>	<b>33</b>
	<i>BIOS Setup Information</i>	33
<b>Chapter 4</b>	<b>Programming Guide</b>	<b>43</b>
4.1	<i>About EZIO-G400</i>	43
<b>Chapter 5</b>	<b>Appendixes</b>	<b>52</b>
5.1	<i>NAR-7100 Ethernet modules configuration</i>	52

# Chapter 1 Introduction

## 1.1 About This Manual

This manual contains all required information for setting up and using the NAR-7100 series.

NAR-7100 provides the essential platform for delivering optimal performance and functionality in the value communications appliance market segment. This manual should familiarize you with NAR-7100 operations and functions. NAR-7100 series provide up to 24 Ethernet ports to serve communication applications like Firewall, requiring ten Ethernet ports to connect external network (internet), demilitarized zone and internal network.

NAR-7100 series overview:

- ◆ Supports LGA 1366 Intel 55XX series CPU
- ◆ Up to 20GB ECC/Register DDR3 1066/1333MHz
- ◆ Two USB ports and one RJ45 port on COM1.
- ◆ Four SATA connectors for SATA Hard disk
- ◆ User-friendly LCD control panel
- ◆ PCI-E architecture with totally three PCI-Ex8 interfaces.
- ◆ Provides absolute high flexibility of customized I/O configuration for front accessible PCI-E modules

## 1.2 Manual Organization

This manual describes how to configure your NAR-7100 system to meet various operating requirements. It is divided into three chapters, with each chapter addressing the basic concept and operation of this system.

- Chapter 1: Introduction. This section describes how this document is organized. It includes brief guidelines and overview to help find necessary information.
- Chapter 2: Hardware Configuration Setting and Installation. This chapter demonstrated the hardware assembly procedure, including detailed information. It shows the definitions and locations of Jumpers and Connectors that can be used to configure the system.
- Chapter 3: Operation Information. This section provides illustrations and information on the system architecture and how to optimize its performance.
- Chapter 4: This section describes how to programming software. It includes EZIO.

## 1.3 Technical Support Information

Users may find helpful tips or related information on Caswell's web site: <http://www.cas-well.com> A direct contact to Caswell's technical person is also available. For further support, users may also contact Caswell's headquarter in Taipei or local distributors.

**Taipei Office Phone Number: +886-2-5591-1999**

## 1.4 Board Layout



**Figure 1-1 Board Layout of NAR-7100 M/B**

## 1.5 System Block Diagram

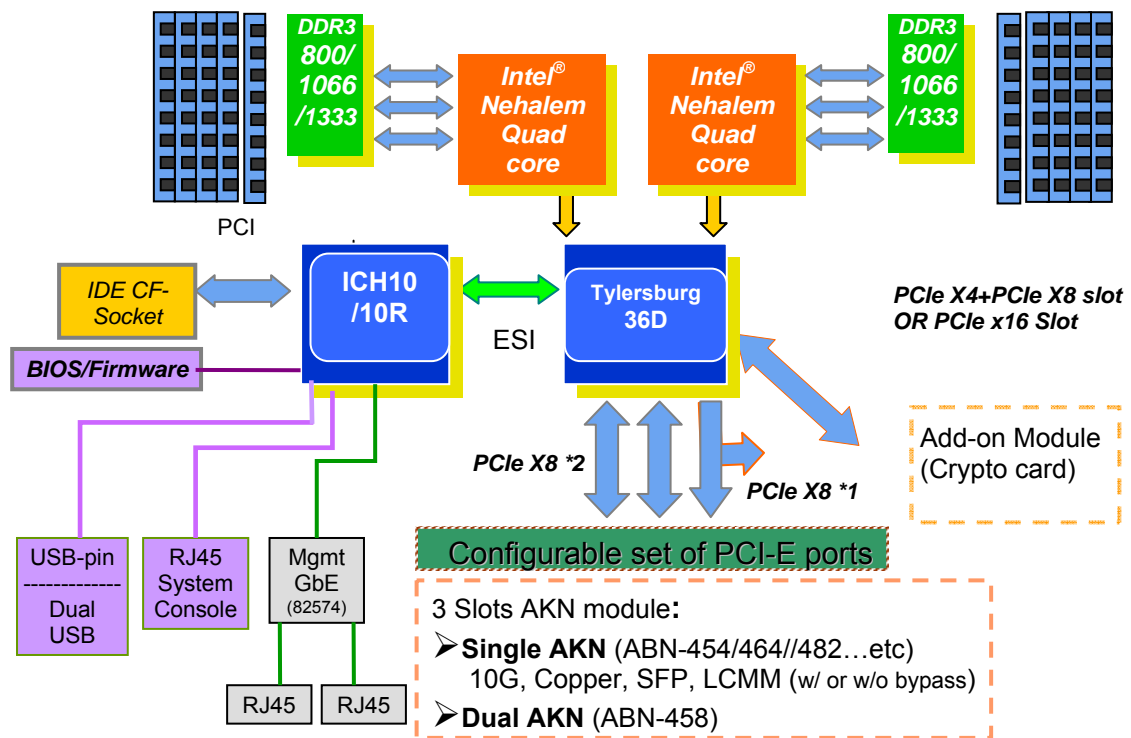


Figure 1-2 NAR-7100 Basic Block Diagram

NAR-7100 Series (Standard model)		
Sub-Model	NAR-7100-1414	NAR-7100-1014
Barebone #	AI2-3298	AI2-3299
ATO #	AI2-3336	AI2-3337
Slot-A1+B1	12 * Copper	4* Fiber + 4* Copper
Slot-C1	ATO Option	ATO Option
Bypass Segment	N/A	N/A
PCI-E X8 slot or 64bit PCI-X Slot	Optional	
HDD	Standard 2* 3.5" HDD tray	
LCM	EZIO-3, EZIO-G400	
USB	2	
Console	RJ45 on COM1	
ATO-Options	CPU, DDR3 (ECC/REG), HDD (SATA)	

For the detail Ethernet modules' configuration, please refer to chapter 5.1: NAR-7100 Ethernet modules configuration.

## 1.6 Product Specifications

CPU Board Chipset	Support for 1). Dual sockets w/ Intel® Xeon® Processor 5500 series (E5540, E5504) 2). Intel® 5520 chipset (Intel Tylersburg 36D/ ICH10)
System Memory	- 5~10 DDR3 800/1066/1333MHz RDIMM. - 6 channels (3 channels per CPU). - Up to 3 dual rank or 2 quad rank RDIMMs/channel. - 20 GB max at launch w/ quad rank RDIMMs.
Ethernet Port	Via ABN or AKN module connected
PCI-E/PCI-X Expansion	1 * PCI-Express X16 slot. Option for raiser card to PCI-X, PCI-E x8 expansion.
Storage Device	2 * 3.5" SATA HDD (Inner or removable).
Serial Port	Two 2X5 pin header
LCD Panel	Option-1. 2x16 (or 2x20) characters LCD module with 4 buttons. Option-2. Graphic LCD (128x64 dot) via RS-232 or USB interfac
LCD LEDs	LED indicator for power status, storage access.
IDE	PCI transfer to IDE (CF socket).
SATA	4 SATA connectors.
USB	Four USB 2.0 compliant devices. Two for Front panel use Two reserve w/ pin-header
VGA	Volari™ Z11 Series GPU
Power	Full range 500W redundant power supply with active PFC control.
Dimension	Dimension: 431 (W) x 580 (D) x 88(H) (max.)
Operation Environment	Temperature: 5~40 (67~130 ) Humidity 20%~90% RH
Storage Environment	Temperature: 0~70 (58~184 ) Humidity 5%~95% RH
Certifications	CE/FCC/UL/cUL.

## Chapter 2 Getting Started

This section describes how the hardware installation and system settings should be done.

### 2.1 Included Hardware

The following hardware is included in package:

- ◆ NAR-7100 Communication Appliance System Board
- ◆ One null serial port cable

### 2.2 Before You Begin

To prevent damage to any system board, it is important to handle it with care. The following measures are generally sufficient to protect your equipment from static electricity discharge:

When handling the board, to use a grounded wrist strap designed for static discharge elimination and touch a grounded metal object before removing the board from the antistatic bag. Handle the board by its edges only; do not touch its components, peripheral chips, memory modules or gold contacts.

When handling processor chips or memory modules, avoid touching their pins or gold edge fingers. Restore the communications appliance system board and peripherals back into the antistatic bag when they are not in use or not installed in the chassis.

Some circuitry on the system board can continue operating even though the power is switched off. Under no circumstances should the Lithium battery cell used to power the real-time clock be allowed to be shorted. The battery cell may heat up under these conditions and present a burn hazard.

#### **WARNING!**


1. **"CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS"**
2. **This guide is for technically qualified personnel who have experience installing and configuring system boards. Disconnect the system board power supply from its power source before you connect/disconnect cables or install/remove any system board components. Failure to do this can result in personnel injury or equipment damage.**
3. **Avoid short-circuiting the lithium battery; this can cause it to superheat and cause burns if touched.**
4. **Do not operate the processor without a thermal solution. Damage to the processor can occur in seconds.**
5. **Do not block air vents. Minimum 1/2-inch clearance required.**



### 2.3.1 NAR-7100 System Board Jumper

In general, jumpers on NAR-7100 system board are used to select options for certain features. Some of the jumpers are configurable for system enhancement. The others are for testing purpose only and should not be altered. To select any option, cover the jumper cap over (Short) or remove (NC) it from the jumper pins according to the following instructions. Here NC stands for “Not Connected”.

#### Location of Jumpers

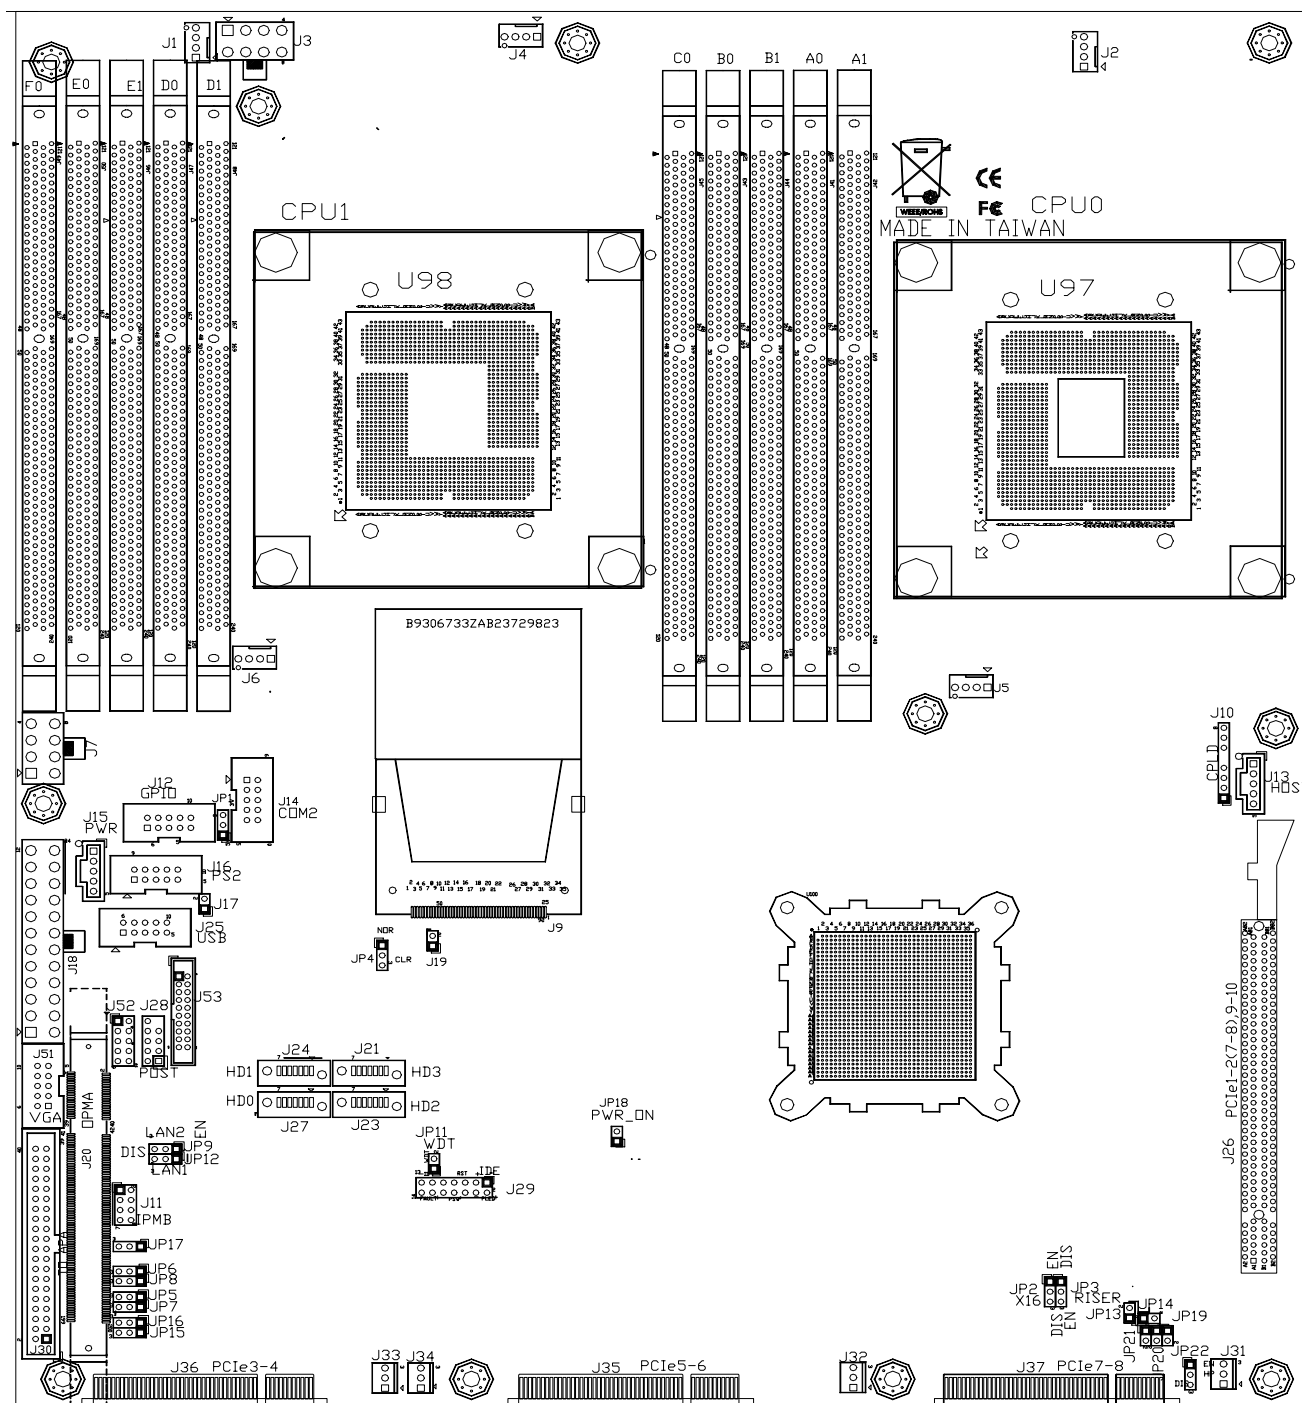



## PPAP-3729L Jump List

<b>JP1; GPIO power source select</b> 1-2*: 5V 2-3: 3.3V	<b>JP2; SLOT D x16 switch setting</b> 1-2: Enable D 1x16(PE7~10) 2-3*: disable D 2x8(PE7~10)
<b>JP3; Slot C/D Riser card switch setting</b> 1-2*: Auto, w/riser C 1x4(PE2), D 2x8(PE7~10) w/o riser C 2x4(PE7,8), D x4(PE2),1x8(PE9,10) 2-3: Enable, C 1x4(PE2), D 2X8(PE7~10) NP: disable, C 2x4(PE7,8),D x4(PE2),x8(PE9,10)	<b>JP4; Clear CMOS Jumper</b> 1-2*: Normal 2-3: Clear
<b>JP5; LAN #1 Setting TxD-</b> 1-2*: On board i82574L 2-3: On OPMA LAN	<b>JP6; LAN #1 Setting RxD-</b> 1-2*: On board i82574L 2-3: On OPMA LAN
<b>JP7; LAN #1 Setting TxD+</b> 1-2*: On board i82574L 2-3: On OPMA LAN	<b>JP8; LAN #1 Setting RxD+</b> 1-2*: On board i82574L 2-3: On OPMA LAN
<b>JP9; LAN #2 enable sector</b> 1-2*: Enable 2-3: Disable	<b>JP10; n/a</b>
<b>JP11; Watchdog reset Enable</b> Open: Enable WDT time-out not Reset Short*: Disable WDT time-out Reset	<b>JP12; LAN #1 enable sector</b> 1-2*: Enable 2-3: Disable
<b>JP13; Hot Plug hardware reset button</b> Open: not Reset Short: Reset	<b>JP14; Hot Plug ATTN button</b> Open: not ATTN Short: ATTN
<b>JP15; LAN #1 Setting Link1000 LED</b> 1-2*: On board i82574L 2-3: On OPMA LAN	<b>JP16; LAN #1 Setting Active LED</b> 1-2*: On board i82574L 2-3: On OPMA LAN
<b>JP17; LAN #1 Setting Link100 LED</b> 1-2*: On board i82574L 2-3: On OPMA LAN	<b>JP18; ATX PSU auto Power-On</b> Short*: Enable Open: Disable
<b>JP19: short, disable Hot Plug +12V</b> <b>JP20: short, disable Hot Plug +3.3V</b> <b>JP21: short, disable Hot Plug +5V standby</b>	<b>JP22: Hot Plug slot C</b> 1-2: Enable 2-3* Disable

\*: default setting

## PPAP-3729L Connector List

U97: CPU 0 socket	U98: CPU 1 socket
J1: Chassis Fan 1	J2: Chassis Fan 3
J3: ATX PSU AUX +12V input 1	J4: Chassis Fan 2
J5: CPU 0 (right) FAN	J6: CPU 1(left) FAN
J7: ATX PSU AUX +12V input 1	J8: n/a
J9: CF socket	J10: CPLD download header
J11: IPMB	J12: GPIO
J13: Host SM bus	J14: COM 2
J15: Power supply SM bus	J16: PS2 Keyboard / Mouse
J17: Over Temperature LED connector	J18: ATX PSU main connector
J19: CASEOPEN 1	J20: BMC socket
J21: SATA 3	J22: n/a
J23: SATA 2	J24: SATA 1
J25: USB 2/3	J26: PCI express x16 expansion slot <b>D</b>
J27: SATA 0	J28: LPC debug port
J29: Front Panel Control	J30: ABA-153 manager board connector
J31: Front Fan	J32: Front Fan
J33: Front Fan	J34: Front Fan
J35: PCI express x8 expansion slot <b>B</b>	J36: PCI express x8 expansion slot <b>A</b>
J37: PCI express x8 expansion slot <b>C</b>	J38: n/a
J39: n/a	J40: Reserved
J41: CPU 0, CH A/0 SLOT1	J47: CPU 1, CH D/0 SLOT1
J42: CPU 0, CH A/0 SLOT0	J48: CPU 1, CH D/0 SLOT0
J43: CPU 0, CH B/1 SLOT1	J50: CPU 1, CH E/1 SLOT1
J44: CPU 0, CH B/1 SLOT0	J46: CPU 1, CH E/1 SLOT0
J45: CPU 0, CH C/2 SLOT0	J49: CPU 1, CH F/2 SLOT0
J51: VGA	J52: OPMA firmware debug port
J53: TPM	

### J29: Front Panel Control

2PWR LED+	4PWR LED-	6PWR ON-	8PWR ON+	10LDF-	12 fault LED +	14fault LED-
1IDE LED+	3IDE LED-	5RESET-	7RESET+	9LDF+	11 ID LED+	13 ID LED -


### J12: GPIO

6 IO10	7 IO11	8 IO12	9 IO13	10 POWER
1 IO17	2 IO16	3 IO15	4 IO14	5 GND

### J16: PS/2 KEYBOARD MOUSE


6 KEY DATA	7 NP	8 GND	9 KEY VCC	10 KEY CLK
1 MOUSE DATA	2 NP	3 GND	4 MOUSE VCC	5 MOUSE CLK

### J30: ABA-153 Connector

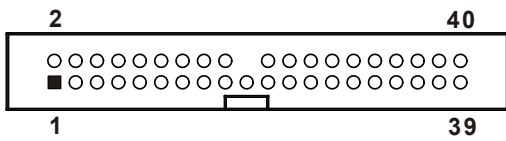

PIN No.	Signal Description	PIN No.	Signal Description
1	LAN1_LINK1000_R#	2	LAN_Ground_EARTH
3	LAN1_MDI+0	4	LAN1_MDI-0
5	LAN1_MDI+1	6	LAN1_MDI-1
7	LAN1_MDI+2	8	LAN1_MDI-2
9	LAN1_MDI+3	10	LAN1_MDI-3
11	LAN2_MDI+0	12	LAN2_MDI-0
13	LAN2_MDI+1	14	LAN2_MDI-1
15	LAN2_MDI+2	16	LAN2_MDI-2
17	LAN2_MDI+3	18	LAN2_MDI-3
19	Ground	20	LAN2_LINK1000_R#
21	LAN1_ACT_R#	22	LAN2_ACT_R#
23	LAN1_LINK100#	24	LAN2_LINK100#
25	COM1_RxD	26	COM1_TxD
27	COM1_CTS	28	COM1_RTS
29	COM1_DSR	30	COM1_DTR
31	COM1_CD	32	COM1_RI
33	Ground	34	USB2_VCC
35	USB1_DATA+	36	USB2_DATA-
37	USB1_DATA-	38	USB2_DATA+
39	USB1_VCC	40	Ground

### J14: COM 2

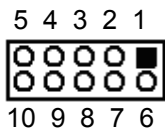

5 GND	4 DTR	3 TXD	2 RXD	1 CD
10NC	9 RI	8 CTS	7 RTS	6 DSR

**J26: PCI express x16 expansion slot D configure**

**1A. PCI express expansion width x8, JP2: 2-3\*, JP3: 2-3\***

J26: PCI express x16 expansion slot D
---------------------------------------

**J26 PCI express map**

Port7: NA	Port8: NA	Port9: X8
-----------	-----------	-----------

**J37: PCI express x8 expansion slot C map**

Port 8 x4	Port 7 x4
-----------	-----------

**2A. PCI express expansion width x16 (4+4+8), JP2: OPEN, JP3: OPEN**

J26: PCI express x16 expansion slot D
---------------------------------------

**J26 PCI express map**

Port7: x4	Port8: x4	Port9: x8
-----------	-----------	-----------

**J37: PCI express x8 expansion slot C map**

Port8: disable	Port 7: disable
----------------	-----------------

**4B. PCI express expansion width x16 (4+4+8), JP2: OPEN, JP3: OPEN**

J26: PCI express x16 expansion slot D
---------------------------------------

**J26 PCI express map**

Port7: x4	Port8: x4	Port9: x8
-----------	-----------	-----------

**J37: PCI express x8 expansion slot C map**

Port 1,2 x4	Port 7 disable
-------------	----------------

**5B. PCI express expansion width x16 (4+8), JP2: OPEN, JP3: 2-3**

J26: PCI express x16 expansion slot D
---------------------------------------

**J26 PCI express map**

Port7: NA	Port8: x4	Port9: x8
-----------	-----------	-----------

**J37: PCI express x8 expansion slot C map**

Port 1,2 x4	Port 7 x4
-------------	-----------

**J36/J35/J37: PCI express x8(or x4 2pcs) expansion slot pin define**

B1	+12V		A1	VCC	
B2	+12V		A2	+12V	
B3	+12V		A3	+12V	
B4	GND		A4	ID BIT1	Identified bit 1
B5	SMBCLK	SMBus clock	A5	VCC	
B6	SMBDAT	SMBus data	A6	VCC	
B7	GND		A7	VCC3	
B8	3.3V		A8	VCC3	
B9	ID BIT0	Identified bit 0	A9	VCC3	
B10	3.3V AUX		A10	VCC3	
B11	WAKE-	Signal for Link reactivation	A11	PERST-	Fundamental reset
B12	PWRGD-	Power good signal	A12	GND	
B13	GND		A13	REFCLK+1	Reference clock (differential pair)
B14	PET+0	Transmitter pair, Lane 0	A14	REFCLK-1	
B15	PET-0		A15	GND	
B16	GND		A16	PER+0	Receiver pair, Lane 0
B17	33MHz	CLOCK 33MHz reference in	A17	PER-0	
B18	GND		A18	GND	
B19	PET+1	Transmitter pair, Lane 1	A19	RSVD	
B20	PET-1		A20	GND	
B21	GND		A21	PER+1	Receiver pair, Lane 1
B22	GND		A22	PER-1	
B23	PET+2	Transmitter pair, Lane 2	A23	GND	
B24	PET-2		A24	GND	
B25	GND		A25	PER+2	Receiver pair, Lane 2
B26	GND		A26	PER-2	
B27	PET+3	Transmitter pair, Lane 3	A27	GND	
B28	PET-3		A28	GND	
B29	GND		A29	PER+3	Receiver pair, Lane 3
B30	REFCLK+2	Reference clock (differential air)	A30	PER-3	
B31	REFCLK-2		A31	GND	
B32	GND		A32	RSVD	
B33	PET+4	Transmitter pair, Lane 4(2nd 0)	A33	RSVD	
B34	PET-4		A34	GND	
B35	GND		A35	PER+4	Receiver pair, Lane 4(2nd 0)
B36	GND		A36	PER-4	
B37	PET+5	Transmitter pair, Lane 5(2nd 1)	A37	GND	
B38	PET-5		A38	GND	
B39	GND		A39	PER+5	Receiver pair, Lane 5(2nd 1)
B40	GND		A40	PER-5	
B41	PET+6	Transmitter pair, Lane 6(2nd 2)	A41	GND	
B42	PET-6		A42	GND	
B43	GND		A43	PER+6	Receiver pair, Lane 6(2nd 2)
B44	GND		A44	PER-6	
B45	PET+7	Transmitter pair, Lane 7(2nd 3)	A45	GND	
B46	PET-7		A46	GND	
B47	GND		A47	PER+7	Receiver pair, Lane 7(2nd 3)
B48	WIDTH0-	(L: one x8, H: two x4)	A48	PER-7	
B49	GND		A49	GND	

\*J36: SLOT ID BIT 0/1 equal 00

\*\* J35: SLOT ID BIT 0/1 equal 01


\*\* \*J37: SLOT ID BIT 0/1 equal 10

## 2.4 The Chassis

The system is integrated in a customized 2U chassis (**Fig. 2-1, Fig. 2-2**). On the front panel user will find a 4-push-button LCD module (EZIO), two USB ports and a COM port and Ethernet ports.



**Fig. 2-1** Front view of the chassis

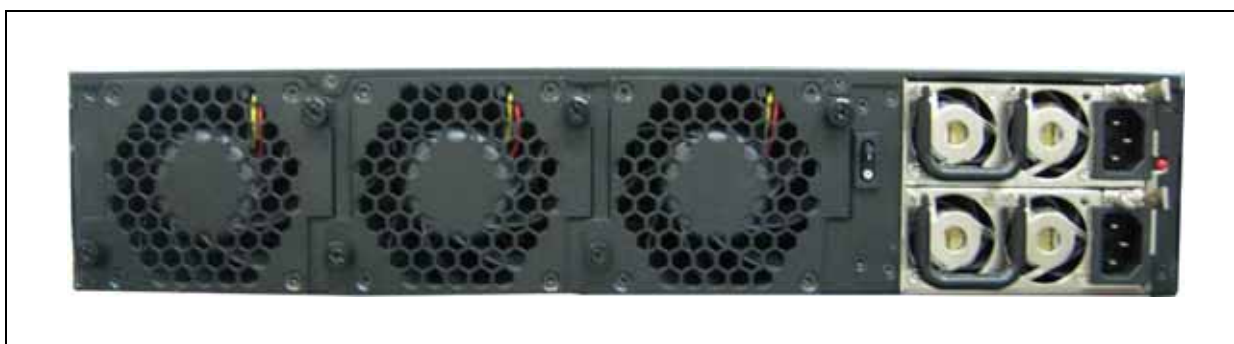

**Fig. 2-2** Rear view of the chassis

## 2.5 Open the Chassis

1. Loosen the 2 screws of the chassis, three on each side and the rest two on the back, to remove the top lead (**Fig. 2-3**).



**Fig. 2-3** Take off screws

2. The top lead (**Fig. 2-4**) can be removed from the base stand (**Fig. 2-5**).



**Fig. 2-4** The top lead



**Fig. 2-5** The base stand

## 2.6 Install a Different Processor



### To install a CPU

1. Local the CPU socket on the motherboard



NAR-7100 CPU socket B ILM



Before installing the CPU, make sure that the socket box is facing towards you and the load lever is on your left.


2. Press the load lever with your thumb (A), then move it to left (B) until it is released from the retention tab



To prevent damage to the socket pins, do not remove the PnP cap unless you are installing a CPU.

3. Lift the load lever in the direction of the arrow to a 135° angle



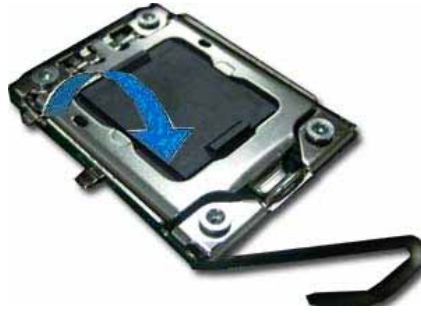


4. Lift the load plate with your thumb and forefinger to a 100° angle (A), then push the PnP cap from the load plate window to remove (B)



5. Position the CPU over the socket, making sure that the gold triangle is on the bottom-left corner of the socket. The socket alignment key should fit into the CPU notch



6. Close the load plate (A), then push the load lever (B) until it snaps into the retention tab

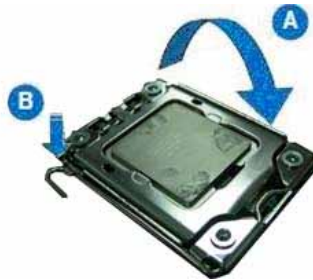

The CPU fits in only one correct orientation. DO NOT force the CPU into the socket to prevent bending the connectors on the socket and damaging the CPU!



## **Configure Processor Speed**

The system was designed to self-detect its CPU speed. So it does not require any system adjustment.

Once the system CPU does not run frequency correctly, try to clean CMOS or enter BIOS setup to load failsafe default then load optimal default one time.


## 2.7 Remove and Install DIMM

### Follow these steps to upgrade RAM module:




Make sure to unplug the power supply before adding or removing DIMMs or other system components. Failure to do so may cause severe damage to both the motherboard and the components.

1. Unlock a DIMM socket by pressing the retaining clips outward
2. Align a DIMM on the socket such that the notch on the DIMM matches the break on the socket

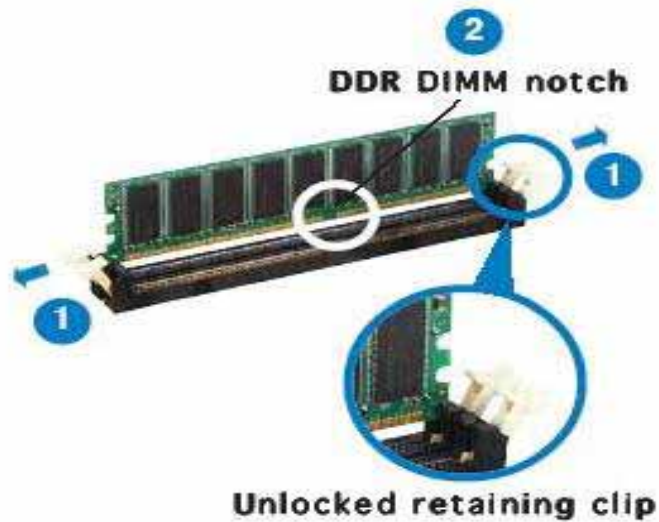


A DDR DIMM is keyed with a notch so that it fits in only one direction. **DO NOT** force a DIMM into a socket to avoid damaging the DIMM.

3. Firmly insert the DIMM into the socket until the retaining clips snap back in place and the DIMM is properly seated

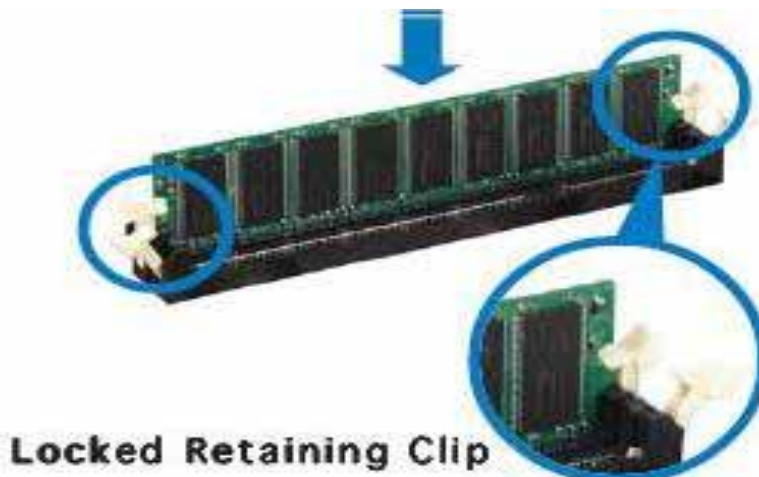

**Follow these steps to remove a DIMM:**

1. Simultaneously press the retaining clips outward to unlock the DIMM

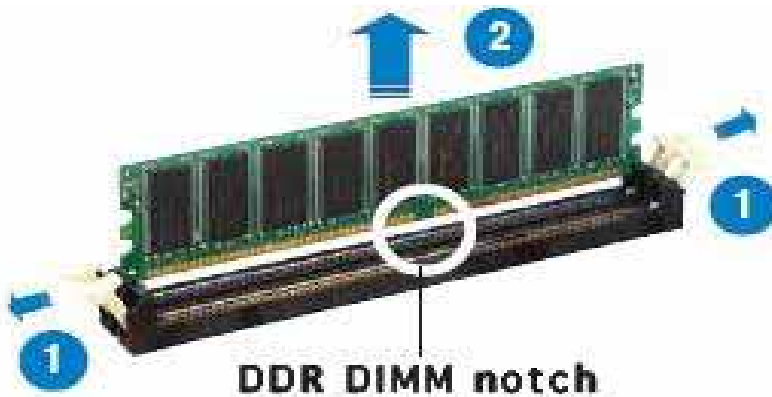

2. Remove the DIMM from the socket

**Follow these steps for DIMM configuration:**

1. Memory socket A0~C0 are controlled by CPU0
2. Memory socket D0~F0 are controlled by CPU1
3. If users use only CPU0, memory can't be used when they are installed on socket D0~F0.
4. When user installs memory, please install them from A0, B0, or C0 first. (Black socket)
5. Memory speed support depends on the types of CPU.



6. Follow the table below for memory installation:

Memory optimal performance for main board with CPU 0 installed.						
	Branch 0		Branch 1		Branch 2	
2 DIMM	A0		B0			
3 DIMM	A0		B0		C0	
5 DIMM	A0	A1	B0	B1	C0	

Memory optimal performance for main board with CPU 1 installed.						
	Branch 0		Branch 1		Branch 2	
2 DIMM	D0		E0			
3 DIMM	D0		E0		F0	
5 DIMM	D0	D1	E0	E1	F0	

Memory optimal performance for main board with two CPUs installed.											
	CPU0					CPU1					
	Branch 0		Branch 1		Branch 2	Branch 0		Branch 1		Branch 2	
6DIMM	A0		B0		C0	D0		E0		F0	
10 DIMM	A0	A1	B0	B1	C0	D0	D1	E0	E1	F0	

Memory speed support table											
Speed (MHz)	CPU0					CPU1					
	Branch 0		Branch 1		Branch 2	Branch 0		Branch 1		Branch 2	
800,1066 1333	A0		B0		C0	D0		E0		F0	
800,1066	A0	A1	B0	B1	C0	D0	D1	E0	E1	F0	



## 2.8 Remove and Install Compact Flash Card

1. Insert the Compact Flash Card (**Fig. 2-7**) into the CF interface (**Fig. 2-8**).



**Fig. 2-6** Compact Flash Card



**Fig. 2-7** Insert Compact Flash Card into the CF interface

The completed installation of Compact Flash Card is shown as Fig. 2-8



**Fig. 2-8** Completion of Compact Flash Card

## 2.9 Remove and Install Battery

1. Press the metal clip back to eject the button battery (**Fig. 2-9**).
2. Replace it with a new one by pressing the battery with fingertip to restore the battery (**Fig. 2-10**).



**Fig. 2-9** Eject the battery



**Fig. 2-10** Restore the battery


## 2.10 Install HDD

The system has an internal drive bay for one 3.5" SATA hard disk drive. If the HDD is not pre-installed, user can install it by himself. Follow the steps below to install the HDD:

1. Fasten the four screws to lock HDD and bracket together (**Fig. 2-11a, 2-11b**).



**Fig. 2-11a** A 3.5" SATA HDD and the HDD bracket

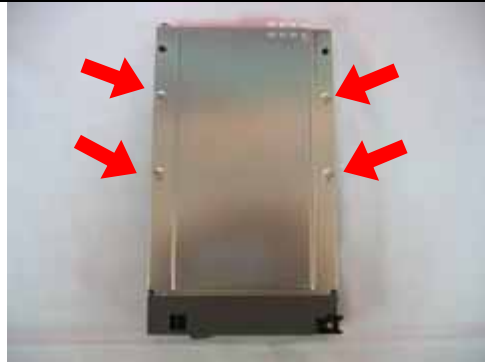

**Fig. 2-11b** Fix HDD to the bracket

2. Install HDD tray to NAR-7100 system (**Fig. 2-12**).



**Fig. 2-12a** Connect HDD bracket to NAR-7100 system then push the switch in.




**Fig. 2-12b** Fix HDD into NAR-7100 system

## 2.11 Install or remove Riser Card / Add-on card

The system has an internal riser card to support up to two PCI-X slots.

1. Fasten the six screws to lock riser and bracket together and fix in NAR-7100 (**Fig. 2-11a, 2-11b**).

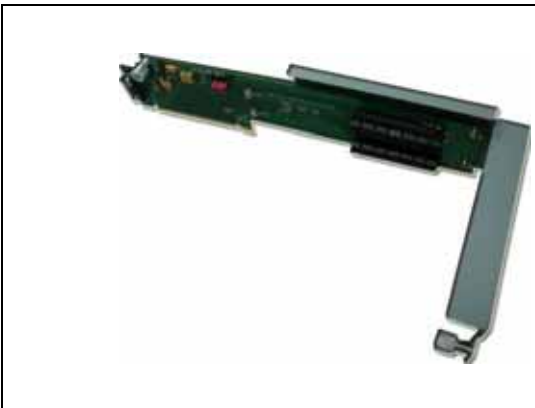

**Fig. 2-11a** ABR-175 riser card and the bracket



**Fig. 2-11b** Fix riser card to NAR-7100




2. For ABR-162 riser card and add-on card, such as raid card. Please follow following steps.
- 3.



**Fig. 2-11c** Loosen the screw.




**Fig. 2-11d** Loosen the screw. Then unplug all SATA cables.

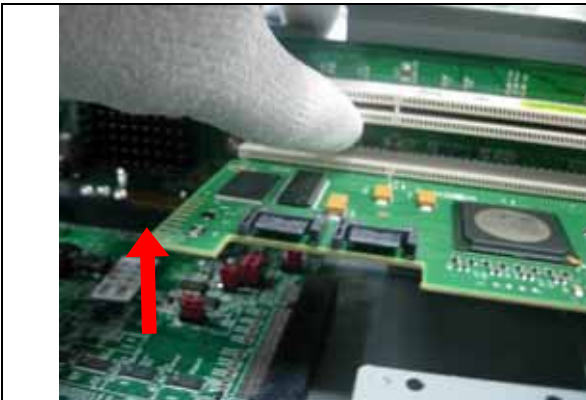

**Fig. 2-11e** Lift up the riser card gently after loosens screws.



**Fig. 2-11f** Rotate the riser to proper angle to move out.

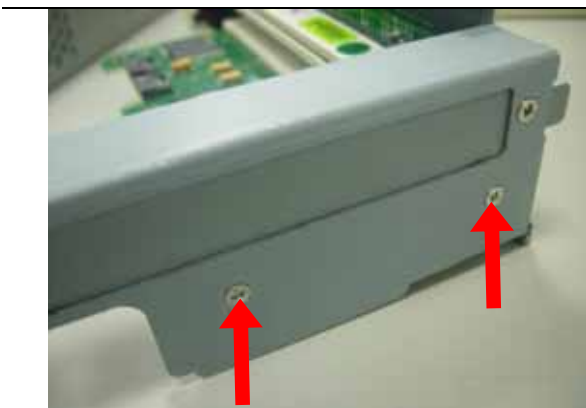


**Fig. 2-11g** After move out riser card kit, loosen two screws then move out the add-on card.

Reverse the steps to install riser card to system.

## 2.12 Ear Mount Kit Installation

The NAR-7100 series shipped with 2 ear mount kits. The following is the installation instruction of these ear mounts:

1. Take out the L shape ear mount kits. One ear mount fits on one side of the chassis,
2. Placing the side with four holes against the chassis and the side with two holes face outward. (**Fig. 2-13.1**)
3. If users need to mount system from front. Fasten five screws on each side (**Fig. 2-13.1**). And push the system from front into rack mount.

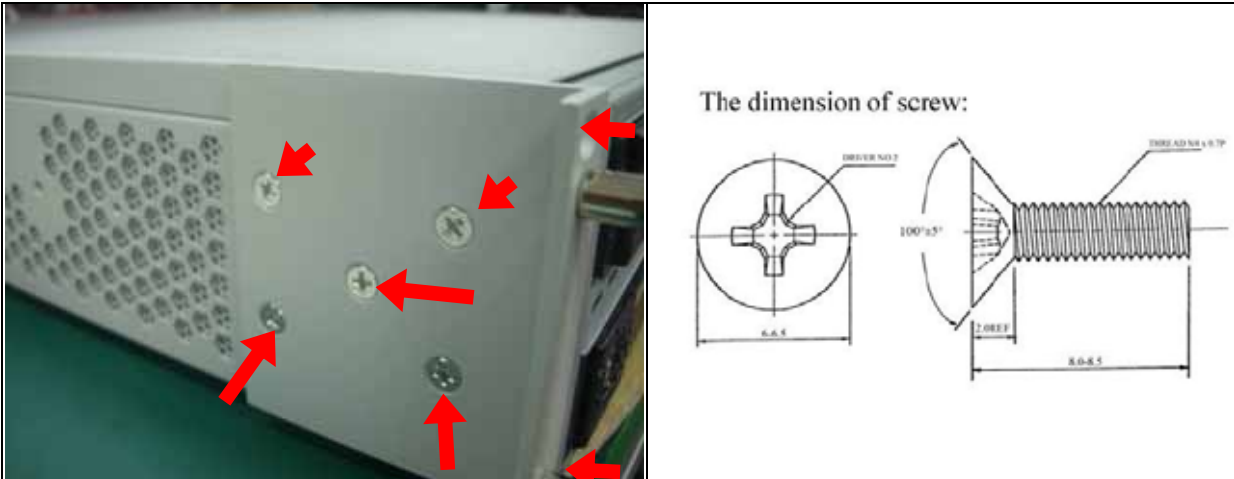

**Fig.2-13.1** Fasten the screws to the side

4. If users need to mount system from rear. Fasten nine screws on each side (**Fig. 2-13.2 and Fig. 2-13.3**). And push the system from rear into rack mount.



**Fig.2-13.2** Fasten the screws to the side

**Fig.2-13.3** Fasten the screws to the side

### 2.13 Remove EZIO / LCD

The NAR-7100 series support EZIO modules. The following is the remove instruction of these EZIO/LCD modules:

1. Remove the system front panel first.
2. Remove all cables from EZIO



**Fig.2-14** Remove the cable from EZIO



**Fig.2-15** After remove the cable from EZIO

3. Remove the screws from chassis.



**Fig.2-16** Remove the screws from EZIO



**Fig.2-17** Remove screws from chassis.

4. Remove the screws from chassis.



**Fig.2-18** Remove the screws from EZIO kit



**Fig.2-19** Remove the screws from EZIO kit

5. Final remove the EZIO/LCD module.




**Fig.2-20** Remove EZIO/LCD from EZIO kit




## 2.14 Remove Power Supply

The following is the remove step instruction of power supply.

1. Remove following screws from chassis first.

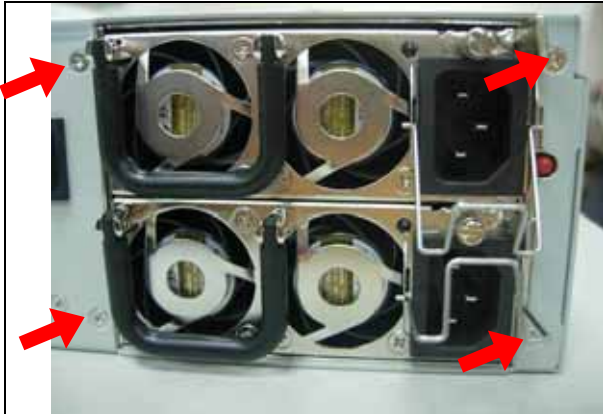

**Fig.2-21** Remove the screws from rear chassis

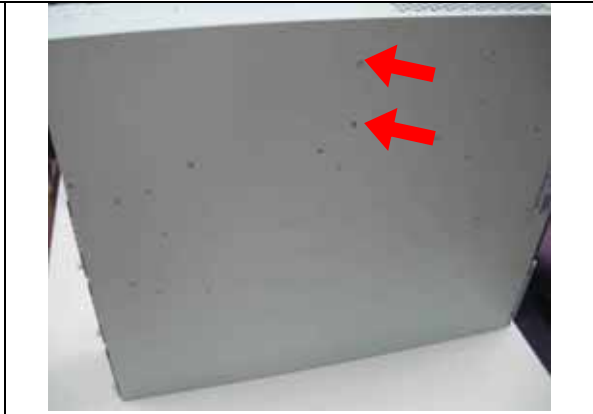

**Fig.2-22** Remove screws from bottom chassis.

2. Remove all power cables from main board and HDD bay. Remove I2C cable from board.



**Fig.2-23** Remove all power cables from board and HDD bay.



**Fig.2-24** Remove all cables from board.

3. Push the power supply inside system then lift up power supply to pull out the power supply.



**Fig.2-25.1** Push the power supply inside system.




**Fig.2-25.2** Pull out the power supply.

4. If user need to change power supply modules. Please follow following steps:



**Fig.2-26.1** Loosen the screw to unlock the power module.

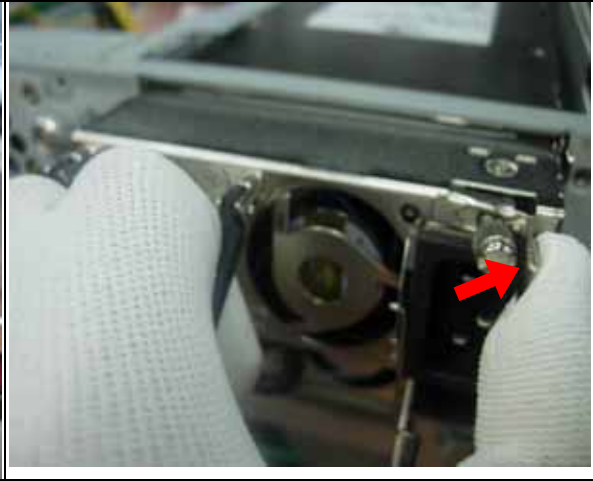

**Fig.2-26.2** Pull out the power modules.

## When install DC PSU, Only allow qualified persons to install NAR-7100 with DC power by the rules of NEC code.

(a) Capacity rating of breaker: -36V~-72V

(b) Installation sequence => considered clause 2.6.5.3 (Please note that must connect ground first before connect positive or negative)

(c) If want remove DC PSU module, please follow step as below:

1. Turn off DC power supply

2. All equipment must be off and than remove power cables from NAR-7100 by screwdriver.

**Note: Switching or disconnecting devices shall not be in the earthed circuit conductor between the d.c. source and the point of connection of the earthing electrode conductor**

## 2.15 Remove main board

The following is the remove step instruction of main board.

1. Remove all add-on modules or riser card devices from system first.




**Fig.2-27** Remove all add-on modules.




**Fig.2-28** Remove riser card.

2. Remove following items from main board: cables, CPU cooler, CPU, memory.

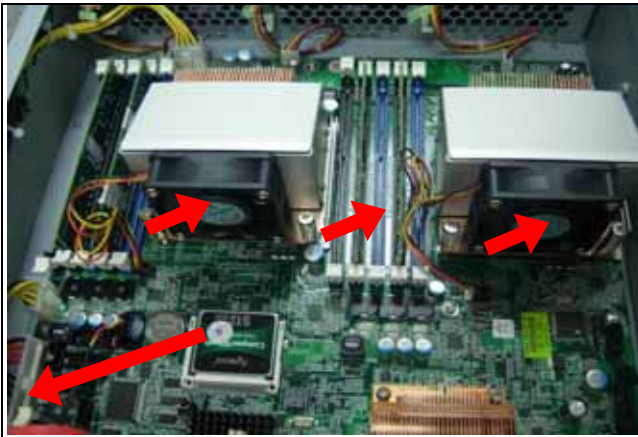

**Fig.2-29** Remove CPU cooler, CPU and memory.

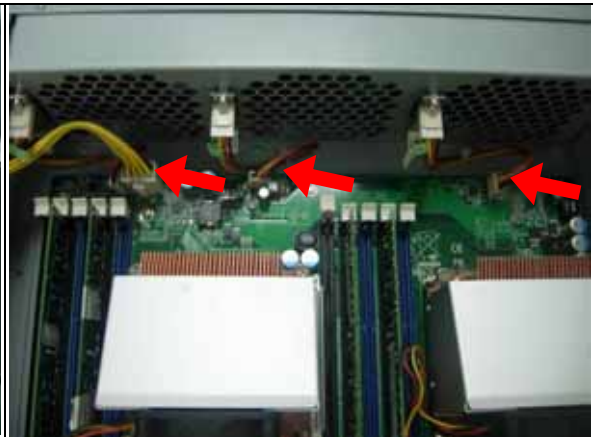

**Fig.2-30** Remove all cable from board.

3. After remove above items, and push the PnP cap back to CPU socket. Users can start remove all screws from board.



**Fig.2-31** Remove all screws from main board.




4. After remove all screws from board. User can remove main board. Please be gentle and carefully. Avoid colliding board with chassis bottom sticks. It may damage the main components.




**Fig.2-32** lift up main board from system from rear side.



**Fig.2-33** Lift the board up for moving.

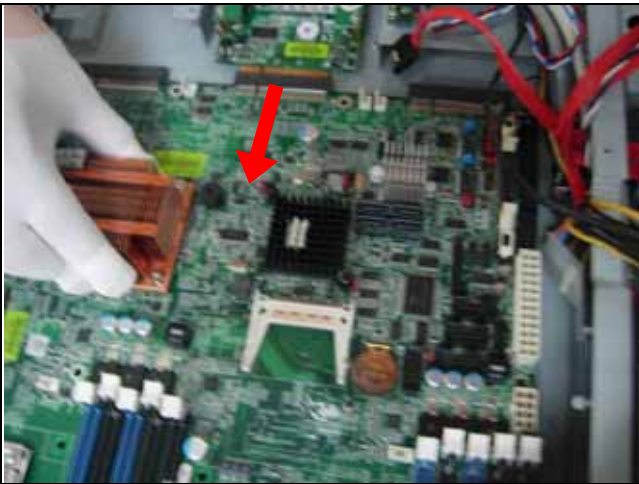

**Fig.2-34** Remove main board from Ethernet modules.

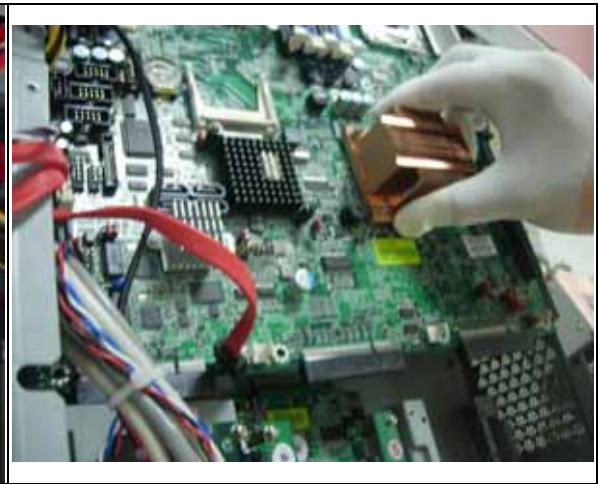

**Fig.2-35** Lift main board up to remove the board.

## 2.16 Use a Client Computer

### Connection Using Hyper Terminal

If users use a headless NAR-7100 system, which has no mouse/keyboard and VGA output connected to it, the console may be used to communicate with NAR-7100.


To access NAR-7100 via the console, Hyper Terminal is one of many choices. Follow the steps below for the setup:



**Fig.2-36** Connect null serial port cable to NAR-7100 console management port.

**Note:** Terminal software may need to update for correct console output.


1. Execute HyperTerminal under C:\Program Files\Accessories\HyperTerminal
2. Enter a name to create new dial

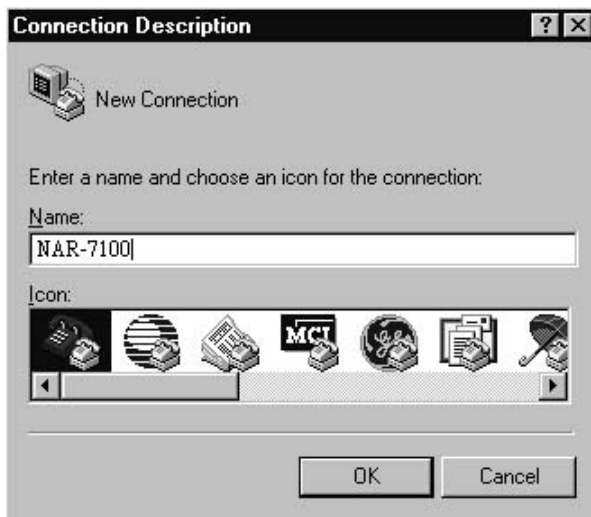


3. For the connection settings, make it Direct to Com1.




4. Please make the port settings to Baud rate 19200, Parity None, Data bits 8, Stop bits 1

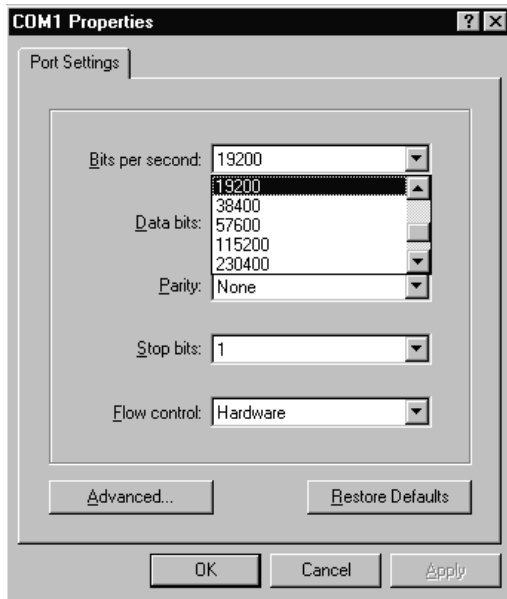

5. Turn on the power of NAR-7100 system, after following screen was shown:

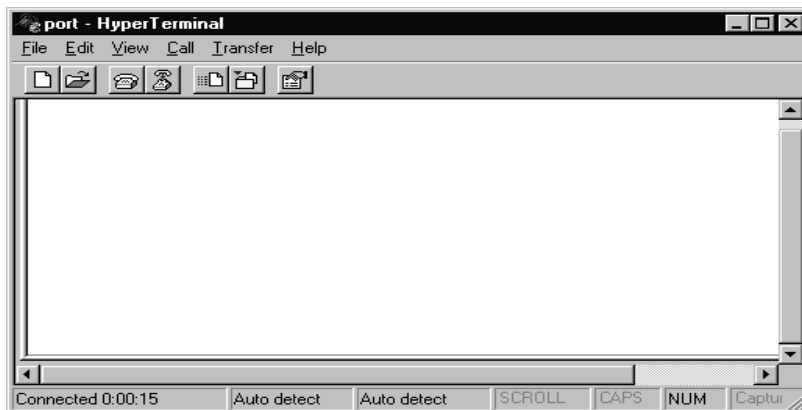

6. User can then see the boot up information of NAR-7100.

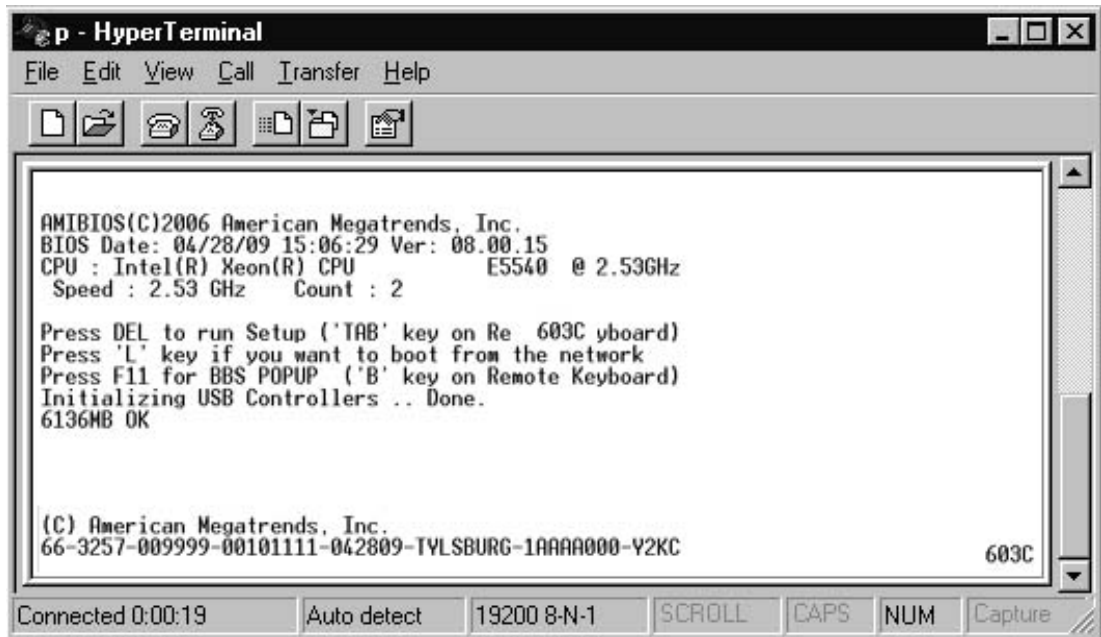

The screenshot shows a HyperTerminal window titled "p - HyperTerminal". The window contains the following text:

```
AMIBIOS(C)2006 American Megatrends, Inc.  
BIOS Date: 04/28/09 15:06:29 Ver: 08.00.15  
CPU : Intel(R) Xeon(R) CPU           E5540  @ 2.53GHz  
Speed : 2.53 GHz    Count : 2  
  
Press DEL to run Setup ('TAB' key on Re 603C yboard)  
Press 'L' key if you want to boot from the network  
Press F11 for BBS POPUP ('B' key on Remote Keyboard)  
Initializing USB Controllers .. Done.  
6136MB OK  
  
(C) American Megatrends, Inc.  
66-3257-009999-00101111-042809-TYLSBURG-1AAAA000-Y2KC
```

The status bar at the bottom of the window shows "Connected 0:00:19", "Auto detect", "19200 8-N-1", "SCROLL", "CAPS", "NUM", and "Capture".

7. When message "Hit <DEL> if user want to run Setup" appear during POST, after turning on or rebooting the computer, press **<Tab>** key *immediately* to enter BIOS setup program.


This is the end of this section. If the terminal did not port correctly, please check the previous steps.

# Chapter 3 BIOS Setting

## BIOS Setup Information

Power on the system, press the <Del> to run BIOS setup. After press the <Delete> key, the main BIOS setup menu displays. User can access the other setup screens from the main BIOS setup menu, such as the Chipset and Power menus.

The BIOS setup/utility uses a key-based navigation system called hot keys. Most of the BIOS setup utility hot keys can be used at any time during the setup navigation process. These keys include <F1>, <F10>, <Enter>, <ESC>, <Arrow> keys, and so on.

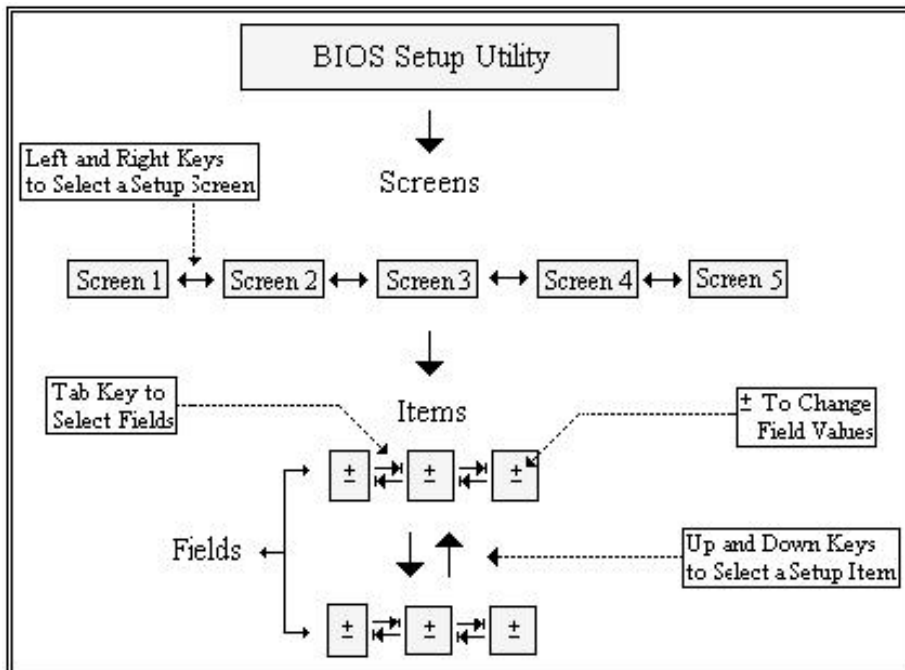

### Control Keys

Key	Function
↑↓Up /Down	The <i>Up and Down</i> <Arrow> keys allow user to select a setup item or sub-screen.
→ ← Left/Right	The <i>Left and Right</i> <Arrow> keys allow user to select a setup screen. For example: Main screen, Advanced screen, Chipset screen, and so on.
+ - Plus/ Minus	The <i>Plus and Minus</i> <Arrow> keys allow user to change the field value of a particular setup item. For example: Date and Time.
Tab	The <Tab> key allows user to select setup fields.

Hot Key	Description																												
F1	<p>The &lt;F1&gt; key allows you to display the <i>General Help</i> screen.</p> <p>Press the &lt;F1&gt; key to open the <i>General Help</i> screen.</p> <div data-bbox="395 255 1353 674" style="border: 1px solid black; padding: 10px;"> <p><b>General Help</b></p> <table border="0" style="width: 100%;"> <tr> <td style="width: 50%;">↔</td> <td>Select Screen</td> <td style="width: 50%;">↓↑</td> <td>Select Item</td> </tr> <tr> <td>+ -</td> <td>Change Screen</td> <td>Enter</td> <td>Go to Sub Screen</td> </tr> <tr> <td>PGDN</td> <td>Next Page</td> <td>PGUP</td> <td>Previous Page</td> </tr> <tr> <td>Home</td> <td>Go to Top of the Screen</td> <td>End</td> <td>Go to Bottom of Screen</td> </tr> <tr> <td>F2/F3</td> <td>Change Colors</td> <td>F7</td> <td>Discard Changes</td> </tr> <tr> <td>F8</td> <td>Load Failsafe Defaults</td> <td>F9</td> <td>Load Optimal Defaults</td> </tr> <tr> <td>F10</td> <td>Save and Exit</td> <td>ESC</td> <td>Exit</td> </tr> </table> <p style="text-align: center;">[Ok]</p> </div>	↔	Select Screen	↓↑	Select Item	+ -	Change Screen	Enter	Go to Sub Screen	PGDN	Next Page	PGUP	Previous Page	Home	Go to Top of the Screen	End	Go to Bottom of Screen	F2/F3	Change Colors	F7	Discard Changes	F8	Load Failsafe Defaults	F9	Load Optimal Defaults	F10	Save and Exit	ESC	Exit
↔	Select Screen	↓↑	Select Item																										
+ -	Change Screen	Enter	Go to Sub Screen																										
PGDN	Next Page	PGUP	Previous Page																										
Home	Go to Top of the Screen	End	Go to Bottom of Screen																										
F2/F3	Change Colors	F7	Discard Changes																										
F8	Load Failsafe Defaults	F9	Load Optimal Defaults																										
F10	Save and Exit	ESC	Exit																										
F10	<p>The &lt;F10&gt; key allows you to save any changes you have made and exit Setup. Press the &lt;F10&gt; key to save your changes. The following screen will appear:</p> <div data-bbox="395 770 1353 958" style="border: 1px solid black; padding: 10px; text-align: center;"> <p>Save configuration changes and exit now?</p> <p>[Ok]                      [Cancel]</p> </div> <p>Press the &lt;Enter&gt; key to save the configuration and exit. You can also use the &lt;Arrow&gt; key to select <i>Cancel</i> and then press the &lt;Enter&gt; key to abort this function and return to the previous screen.</p>																												
ESC	<p>The &lt;Esc&gt; key allows you to discard any changes you have made and exit the Setup. Press the &lt;Esc&gt; key to exit the setup without saving your changes. The following screen will appear:</p> <div data-bbox="395 1155 1353 1344" style="border: 1px solid black; padding: 10px; text-align: center;"> <p>Discard changes and exit setup now?</p> <p>[Ok]                      [Cancel]</p> </div> <p>Press the &lt;Enter&gt; key to discard changes and exit. You can also use the &lt;Arrow&gt; key to select <i>Cancel</i> and then press the &lt;Enter&gt; key to abort this function and return to the previous screen.</p>																												
Enter	<p>The &lt;Enter&gt; key allows you to display or change the setup option listed for a particular setup item. The &lt;Enter&gt; key can also allow you to display the setup sub- screens.</p>																												



## Main Menu

When user first enter the Setup Utility, user will enter the Main setup screen. User can always return to the Main setup screen by selecting the *Main* tab. There are two Main Setup options. They are described in this section.

```
Procomm Plus Terminal
File Edit View Options Data Tools Window Help
Main  Advanced  PCIPnP  Boot  Security  Chipset  Exit
*****
* System Overview                               * Use [ENTER], [TAB] *
* *****                                     * or [SHIFT-TAB] to *
* AMIBIOS                                       * select a field.   *
* Version   : 08.00.15                          *                 *
* Build Date: 04/28/09                          * Use [+] or [-] to *
* ID        : 1AAAA000                          * configure system Time.*
*                                                 *
* Processor                                     *                 *
* Intel(R) Xeon(R) CPU           E5540 @ 2.53GHz *                 *
* Speed      : 2533MHz                       *                 *
* Count      : 2                             *                 *
*
* System Memory                               * *   Select Screen  *
* Size       : 6136MB                         * **  Select Item   *
*                                                 * +-  Change Field   *
* System Time [10:28:40]                       * Tab Select Field  *
* System Date [Wed 04/29/2009]                 * F1  General Help  *
*                                                 * F10 Save and Exit *
*                                                 * ESC  Exit         *
*
*****
v02.61 (C)Copyright 1985-2006, American Megatrends, Inc.
ANSI BBS  ASCII  direct connect-Com4  19200  N-8-1  rd  sd  cd  cts  10:27上午  Row 19 Col 1
```

### **System Date / Time**

Use this option to change the system time and date. Highlight System Time or System Date using the <Arrow> keys. Enter new values through the keyboard. Press the <Tab> key or the <Arrow> keys to move between fields. The date must be entered in MM/DD/YY format. The time is entered in HH:MM:SS format.




## ➤ Advanced BIOS Setup

Select the *Advanced* tab from the setup screen to enter the Advanced BIOS Setup screen.

Select any of the items in the left frame of the screen, such as SuperIO Configuration, to go to the sub menu for that item. It will display an Advanced BIOS

Setup option by highlighting it using the <Arrow> keys. All Advanced BIOS Setup options are described in this section. The Advanced BIOS Setup screen is shown below.

The sub menus are described on the following pages.

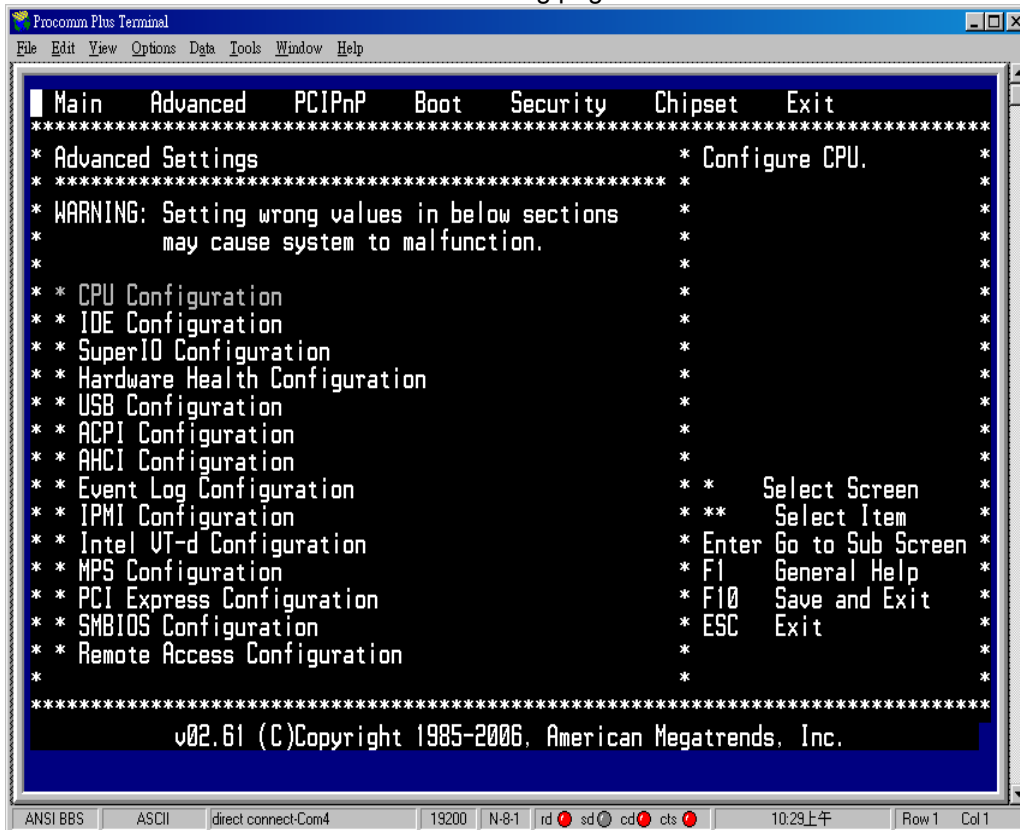

## ➤ IDE Configuration Setup

From the IDE Configuration screen, press <Enter> to access the sub menu. Use the up and down <Arrow> keys to select an item. The settings are described on the following pages.






## Serial Port Mode

Select the baud rate want the serial port to use for console redirection.

## ➤ USB Configuration

Use this screen to select options for the USB Configuration. Use the up and down <Arrow> keys to select an item. Use the <Plus> and <Minus> keys to change the value of the selected option. The settings are described on the following pages. The screen is shown below.

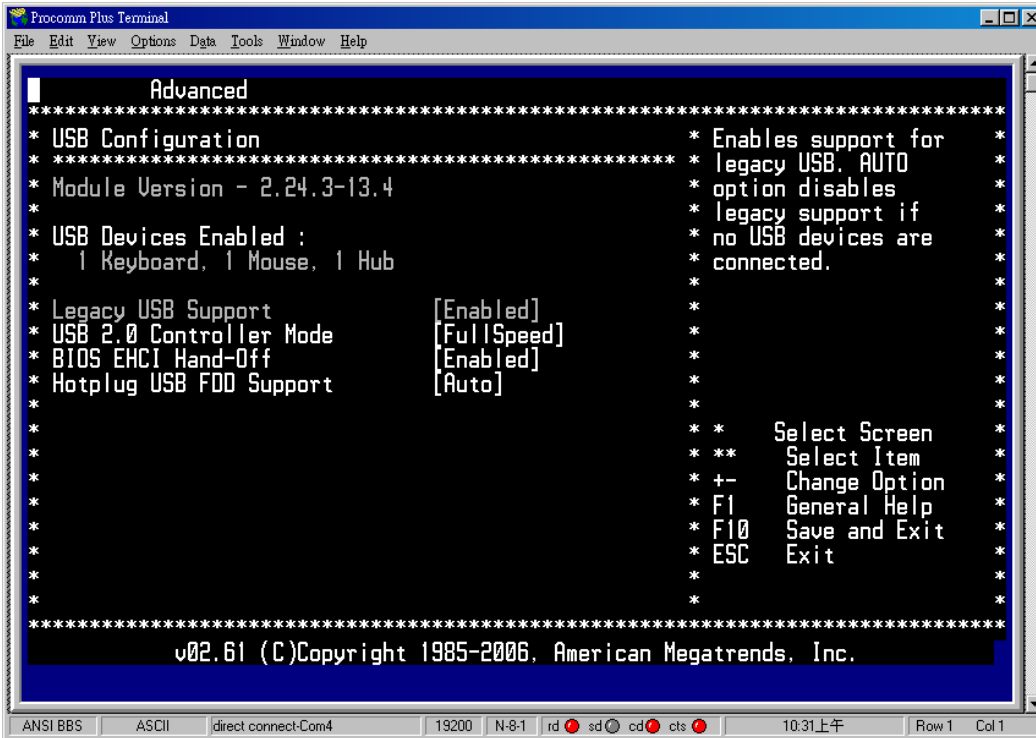

```
Procomm Plus Terminal
File Edit View Options Data Tools Window Help

Advanced
*****
* USB Configuration                               * Enables support for *
* *****                                       * legacy USB. AUTO  *
* Module Version - 2.24.3-13.4                   * option disables   *
* *                                               * legacy support if *
* *                                               * no USB devices are *
* *                                               * connected.        *
* *                                               *                   *
* USB Devices Enabled :                          *                   *
* 1 Keyboard, 1 Mouse, 1 Hub                     *                   *
* *                                               *                   *
* Legacy USB Support                             [Enabled]          *
* USB 2.0 Controller Mode                       [FullSpeed]       *
* BIOS EHCI Hand-Off                            [Enabled]         *
* Hotplug USB FDD Support                       [Auto]            *
* *                                               *                   *
* *                                               * *       Select Screen *
* *                                               * **      Select Item   *
* *                                               * +-      Change Option *
* *                                               * F1      General Help  *
* *                                               * F10     Save and Exit *
* *                                               * ESC     Exit           *
* *                                               * *                   *
* *                                               * *                   *
*****
v02.61 (C)Copyright 1985-2006, American Megatrends, Inc.

ANSI BBS  ASCII  direct connect-Com4  19200  N-8-1  rd  sd  cd  cts  10:31上午  Row 1  Col 1
```

### Legacy USB Support

Legacy USB Support refers to the USB mouse and USB keyboard support. Normally if this option is not enabled, any attached USB mouse or USB keyboard will not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB keyboard can control the system even when there is no USB drivers loaded on the system. Set this value to enable or disable the Legacy USB Support. The Optimal and Fail-Safe default setting is *Disabled*.







**Discarding Changes and Exit**

Select this option to quit Setup without making any permanent changes to the system configuration. Select Exit Discarding Changes from the Exit menu and press <Enter>.

**Discard Changes**

Select Discard Changes from the Exit menu and press <Enter>.

**Load Optimal Defaults**

Automatically sets all Setup options to a complete set of default settings when select this option. Select Load Optimal Defaults from the Exit menu and press <Enter>.

**Load Fail-Safe Defaults**

Automatically sets all Setup options to a complete set of default settings when select this option. The Fail-Safe settings are designed for maximum system stability, but not maximum performance. Select the Fail-Safe Setup options if computer is experiencing system configuration problems.

Select Load Fail-Safe Defaults from the Exit menu and press <Enter>.

**Note:** Strongly suggest user to load fail-Safe default then load optimal default one time after user update BIOS.

### 4.1 About EZIO-G400

The major purpose of this module is to provide an easier man-machine interface for those computing systems in whose applications friendly operation is a “must.” In traditional computing system design, proprietary keypad and LCD display interfaces are implemented and these interfaces are usually different from system to system. The design goals of this interface are:

- A. A single interface for both LCD display and keypad is required.
- B. This interface should be available in every computing system.
- C. The communication implementation should be OS independent.

Our solution is to use “Serial port” as the interface for both LCD display and keypad. A simple protocol is further defined so that applications can directly communicate with this module no matter what the operating system is.



Figure 1: Display area

#### **WARNING!**

**THE LCD DRIVER ICs ARE MADE OF CMOS PROCESS, DAMAGED BY STATIC CHARGE VERY EASILY. MAKE SURE THE USER IS GROUNDED WHEN HANDLING THE LCD.**

#### 4.1.1 Features

- Ideal user interface for communication appliance
- No driver required; OS independent
- Alphanumeric characters display support
- Four key pads can be customized for different applications
- Easy system installation and operation
- Clearly display system status
- Single interface to SBC or M/B



### 4.1.2 Technical Support Information

For further support, users may also contact Caswell's headquarter in Taipei or your local distributors.

**Taipei Office Phone Number: +886-2-5591-1999**

### 4.1.3 Mechanical Specification

Item	Value	Unit
Number of dots	128 X 32	Dot
Dot size	0.341 X 0.334	mm
Dot pitch	0.366 X 0.359	mm
Module dimension	87(W) X 30(H) X 31.85(T)	mm
Viewing Area	55 (W) X 18 (H)	mm
Active Area	46.823 (W) X 11.463 (H)	mm
Duty	1/32	-
Bias	1/6	-
Viewing direction	6 O'clock	-
LCD type	STN (BLUE), TRANSMISSIVE/NEGATIVE	-
INTERFACE	RS-232	-

### 4.1.4 Product Outlook

There are two connectors on the module, as shown in Figure 3 power connector and serial port connector. The power source into this module is 5 volt only. Three pins being used in the serial port interface.


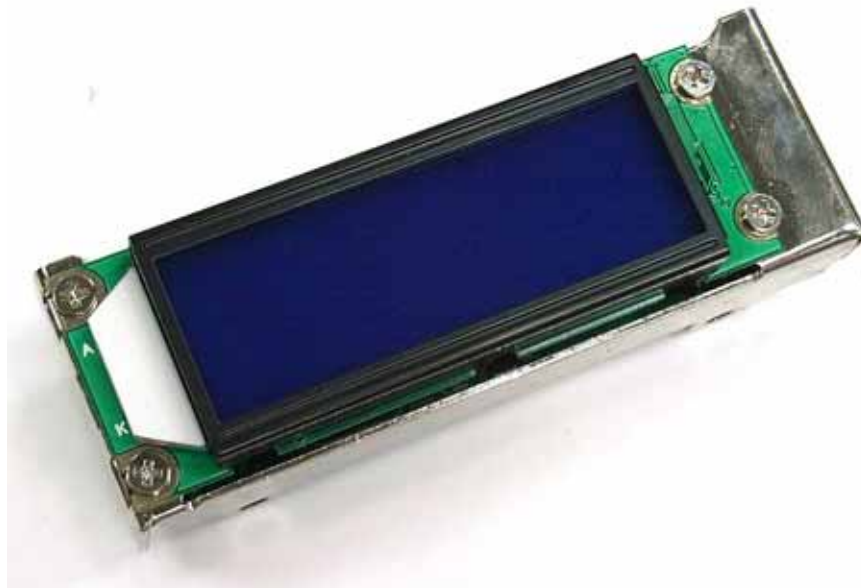


Figure 2: Front of EZIO G400



Figure 3: Back of EZIO G400

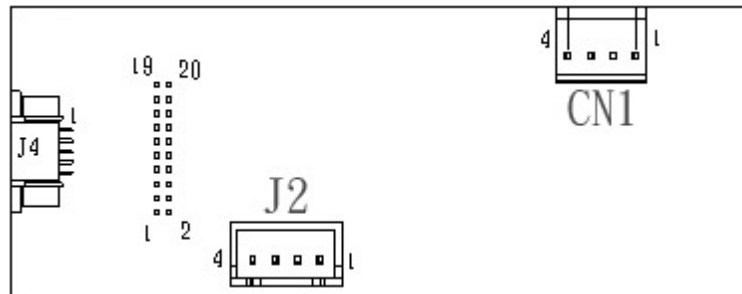

**Connector J2: RS-232**

NO	Signal	Direction	Function Description
1	NC		NC
2	RXD	LCM to PC	Transmit data
3	TXD	PC to LCM	Receiver data
4	GND		Signal ground

### Connector CN1: POWER

NO	Signal
1	5V
2	GND
3	GND
4	NC

In other words, the Serial Port is defined as DCE. Therefore, we can use a straight-through cable to connect it to the Serial Port of most of the computers, defined as DTE.

### 4.1.5 Hardware installation

The installation steps are:

- A. Connect the power connector to the power connector of this module.
- B. Connect the straight-through cable between Serial port of this module and computer.



Figure 4: Connect EZIO-G400

### 4.1.6 EZIO Function Command

4. EZIO is an intelligent device, which will display those data received from RS232 port and reply key pressing status to RS232 port.
5. The valid data range is as following table shows.

Valid data range	Displayed characters
48-57 (30-39 Hex)	0-9
65-90 (41-5A Hex)	A-Z
97-122 (61-7A Hex)	a-z

## 4.1.7 Command Code

COMMAND	CODE DESCRIPTION (HEX)	FUNCTION DESCRIPTION
ESC DC2	1B 12	Vertical scroll mode
ESC DC3	1B 13	Horizontal scroll mode
ESC [ D	1B 5B 44	Move cursor left
BS	08	Move cursor left
ESC [ C	1B 5B 43	Move cursor right
HT	09	Move cursor right
ESC [ A	1B 5B 41	Move cursor up
ESC [ B	1B 5B 42	Move cursor down
LF	0A	Move cursor down
ESC [ H	1B 5B 48	Move cursor to home position
HOM	0B	Move cursor to home position
ESC [ L	1B 5B 4C	Move cursor to left-most position
CR	0D	Move cursor to left-most position
ESC [ R	1B 5B 52	Move cursor to right-most position
ESC [ K	1B 5B 4B	Move cursor to bottom position
ESC I x y	1B 6C x y 00 x 0F 00 y 03	Move cursor to specified position

ESC @	1B 40	Initial display
CLR	0C	Clear display screen
CAN	18	Clear cursor line
ESC _n	1B 5F n n = 00,01	Set cursor ON/OFF
ECS r n	1B 72 n n = 00,01	Select / cancel reverse character.
ESC G [data x 512 bytes]		Download graphic to the LCD display
ESC S n	1B 53 n 01 n 16	Save the graphic in layer n.
ESC P n	1B 50 n 01 n 16	Show the graphic saved in layer n.
ESC B n	1B 5B n n = 00~07	Set Back Light
ESC TEST	1B 54 45 53 54	Scan the baud rate. Send out " OK " = 4F 4B (hex) when detected
ESC R n	1B 52 n n = 0024,0048,0096,0192 0384,0576, 1152 Example: Set the Baud Rate 1B 52 31 31 35 32	Set Baud Rate 0024 = 2400 Baud Rate 0048 = 4800 Baud Rate 0096 = 9600 Baud Rate 0192 = 19200 Baud Rate 0384 = 38400 Baud Rate 0576 = 57600 Baud Rate 1152 = 115200 Baud Rate * (Default)

Read Key function:

Read one byte from RS-232 rx pin if user want to detect which keys are currently pressed.

Function key	Status byte
Escape	41 (H)
Up arrow	44 (H)
Enter	46 (H)
Down arrow	45 (H)

## 4.1.8 SLCM Function control by Flex LCD API

### Purpose:

The purpose of SLCM is to provide a simple CLI command to control EZIO-G400. SLCM can work with Linux kernel 2.4.x and 2.6.x.

### 4.1 Command Description:

#### Use Example:

```
$ slcmapl -d [device] -b [baud rate] -Parameter options
```

#### Device:

Serial port device path.

Ex: /dev/ttyS0/

#### Baud rate:

Support 2400, 4800, 9600, 19200, 38400, 57600, 115200 baud rate.

#### Parameter list:

Parameter	Description
S	Display string message
G	Display 128*64 bmp
C	Clear screen
c	Clear current line
H	Home cursor
s	Set cursor ON/OFF
P	Move cursor to (x, y) position
L	Move cursor 1 character left
R	Move cursor 1 character right
l	Move cursor to left-most
r	Move cursor to right-most
U	Move cursor up
D	Move cursor down
B	Set back light
K	Change device baud rate
h	Help

#### Options list:

Parameter	Options	Description
S	[String]	String will display in LCD
G	[Mode] [Path]	Mode=0: 192*64 1: 128*64 2: 128*32 Path: Bmp file path
s	[1/0]	1: Show cursor 0: Hide cursor
P	[x] [y]	x = 00 ~ 0F y = 00 ~ 03
B	[Baud rate]	Only support 2400, 4800, 9600, 19200, 38400, 57600, 115200 baud rate
K	[Light]	Light = 00 ~ 07

## 4.1.9 Use Example:

### Display string:

If command runs success then string will be displayed on LCD from present cursor's position.

Use Example:

```
$ slcmapi -d /dev/ttyS0 -b 115200 -S "Graphic LCD"
```

### 4.2.9.1 Display bmp:

If command runs success then picture will displayed on LCD.

Use Example:

```
$ slcmapi -d /dev/ttyS0 -b 115200 -G 1 test.bmp
```

### 4.2.9.2 Clean screen:

If command runs success then all screen will cleaned.

Use Example:

```
$ slcmapi -d /dev/ttyS0 -b 115200 -C
```

### 4.2.9.3 Clean cursor line

If command runs success then the line of cursor's position will be cleaned.

Use Example:

```
$ slcmapi -d /dev/ttyS0 -b 115200 -c
```

### 4.2.9.4 Home cursor:

If command runs successes then cursor will be returned to home position.

Use Example:

```
$ slcmapi -d /dev/ttyS0 -b 115200 -H
```

### 4.2.9.5 Set cursor ON/OFF:

If command runs successes then cursor will be shown / hidden.

Use Example:

```
$ slcmapi -d /dev/ttyS0 -b 115200 -s 1
```

### 4.2.9.6 Move cursor to (x, y) position

If command runs successes then cursor will be moved to (x, y) position.

Use Example:

```
$ slcmapi -d /dev/ttyS0 -b 115200 -P 0E 01
```

### 4.2.9.7 Move cursor 1 character left:

If command runs successes then cursor will be moved 1 character left.

Use Example:

```
$ slcmapi -d /dev/ttyS0 -b 115200 -L
```

### 4.2.9.8 Move cursor 1 character right:

If command runs successes then cursor will be moved 1 character left.

Use Example:

```
$ slcmapi -d /dev/ttyS0 -b 115200 -R
```

### 4.2.9.9 Move cursor up

If command runs successes then cursor will be moved up.

Use Example:

```
$ slcmapi -d /dev/ttyS0 -b 115200 -U
```

### 4.2.9.10 Move cursor down

If command runs successes then cursor will be moved down.

Use Example:

```
$ slcmapi -d /dev/ttyS0 -b 115200 -D
```

### 4.2.9.11 Change device baud rate

If command runs successes then device baud rate will be changed after rebooting.

Use Example:

```
$ slcmapi -d /dev/ttyS0 -b 115200 -B 9600
```



#### 4.2.9.12 Set back light

If command runs successfully then back light will be changed.

Use Example:

```
$ slcmapi -d /dev/ttyS0 -b 115200 -K 01
```


#### **Note:**




1. Above operate to all show again SLCM screen.
2. Because this is the sample command, so some functions need modify program just can complete.



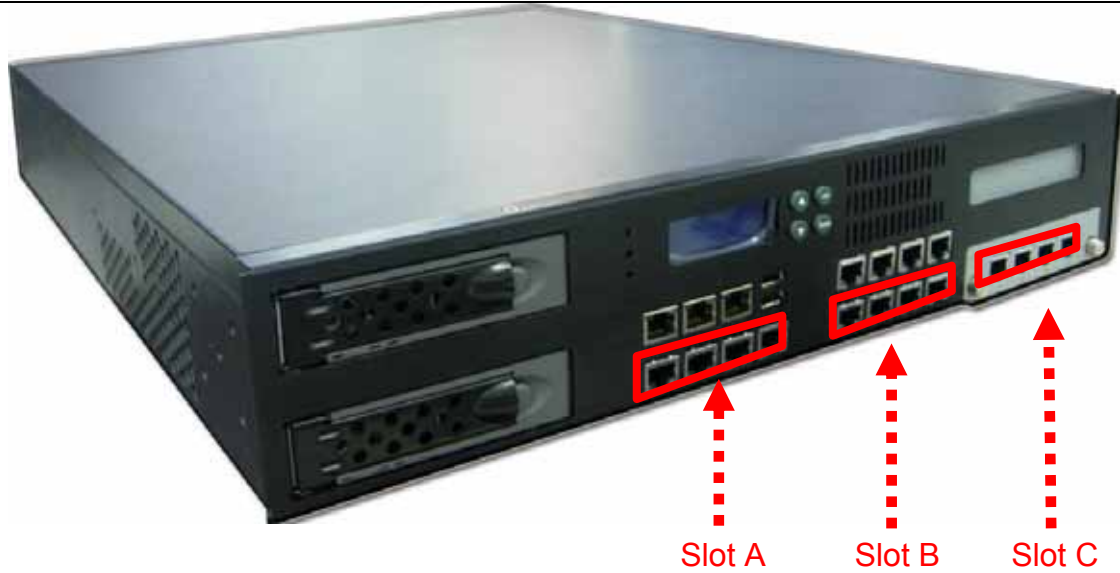

## Chapter 5 Appendixes

### 5.1 NAR-7100 Ethernet modules configuration

This chapter will show what Ethernet modules that NAR-7100 supports. NAR-7100 has three slots to support PCI-E x8 module. The front panel may different when use these modules. Below is the list for all Ethernet modules.



Modules Name	Support Slots	PCI-E Gen2 support	Bypass Gen2 support	RJ-45(C) Fiber (F) Support	Ethernet Chip
 ABN-454	A, B, C	X	X	RJ-45 x4	Intel 82571 x2
 ABN-464	A, B, C	X	X	Fiber x4	Intel 82571 x2
 ABN-458	A, B, C	X	X	RJ-45 x8	Intel 82571 x4

 <p>ABN-482</p>	A, B, C	X	O	Fiber x2	Intel 82571 x1
 <p>ABN-484</p>	A, B, C	X	O	RJ-45 x4	Intel 82571 x2
 <p>ABN-522</p>	A, B, C	X	X	10G Fiber x2	Intel 82598 x1
 <p>NIP-53020</p>	A, B, C	O	X	10G Fiber x2	Intel 82599 x1