


MODELS E1FB180 & E1FB240

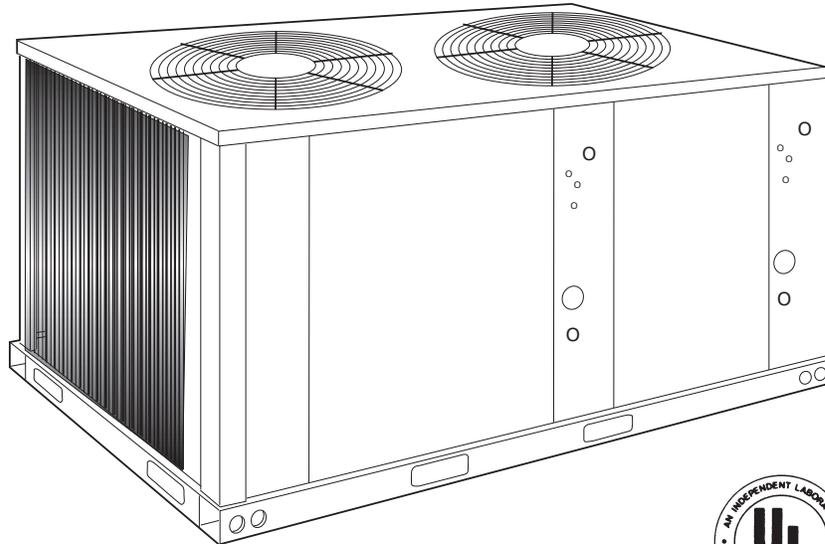

GENERAL

The outdoor units are completely piped and wired at the factory and are shipped ready for immediate installation. Only the interconnecting liquid and suction lines, sight glasses, control wiring, and the main power wiring are required to complete the installation. Every unit is dehydrated, evacuated, leak tested and pressure tested at 450 psig before being pressurized with a holding charge of refrigerant-22 for shipment and/or storage.

To eliminate the costly cabinet deterioration problems usually associated with outdoor equipment, all sheet metal parts are constructed of commercial grade (G90) galvanized steel. After fabrication, each part is thoroughly cleaned to remove any grease or dirt from its surfaces. The parts that will be exposed to the weather are then coated with a "desert sand" powder paint to assure a quality finish for many years. This coating system has passed the 750-hour, salt spray test per ASTM Standard B117.

Every unit includes 2 heavy-duty scroll compressors, 2 suction line accumulators, 2 4-way reversing valves with a 24 volt solenoid, 2 outdoor fan motors with inherent protection, and a copper tube/aluminum fin coil that is positioned vertically for better drainage of the water that will condense on it during the heating cycle.

They also include 2 filter driers, 2 expansion valves and distributors that are only used during the heating cycle plus a check valve to provide the proper flow of refrigerant through the unit during both the cooling and heating cycles.

All controls are located in the front of the unit and are readily accessible for maintenance, adjustment and service. All wiring (Power and Control) can be made through the front of the unit.

REFERENCE

This instruction covers the installation and operation of the basic condensing unit. For information on the installation and operation of the matching indoor units, refer to Installation Instruction part no. 035-16626-000 (form 515.41-N4Y).

All accessories come with a separate Installation Manual.

Refer to Parts Manual for complete listing of replacement parts on this equipment.

All forms may be ordered from:

Standard Register
Norman, OK 73069
Toll Free: Tel. 877-318-9675/Fax. 877-379-7920

INSPECTION

As soon as a unit is received, it should be inspected for possible damage during transit. If damage is evident, the extent of the damage should be noted on the carrier's freight bill. A separate request for inspection by the carrier's agent should be made in writing.

Installer should pay particular attention to the words: **NOTE**, **CAUTION** and **WARNING**. **Notes** are intended to clarify or make installation easier. **Cautions** are given to prevent equipment damage. **Warnings** are given to alert installer that personal injury and/or equipment damage may result if installation procedure is not handled properly.

TABLE OF CONTENTS

GENERAL 1
 REFERENCE 1
 INSPECTION 1
 NOMENCLATURE 2

INSTALLATION

LIMITATIONS 3
 LOCATION 3
 Roof-Top Locations 3
 Ground Level Locations 3
 RIGGING AND HANDLING 3
 CLEARANCES 4
 COMPRESSOR CRANKCASE HEATER 4
 POWER AND CONTROL WIRING 4
 Power Wiring 4
 Control Wiring 4
 REFRIGERANT PIPING 7
 General Guidelines 7
 Line Sizing 7
 Service Valves 7
 Installation 7
 EXTENDING THE SERVICE PORTS 9
 EVACUATING AND CHARGING 9
 BALANCE POINT SETTING 9
 ALTERNATE CHARGING METHODS 10

OPERATION

GENERAL 11
 SYSTEM SEQUENCE OF OPERATION 11
 Cooling Operation 11
 Heating Operation 12
 Defrost Cycle 12
 Operation Below 0°F 13
 Emergency Heat Operation 13

START-UP

CRANKCASE HEATER (10 Ton Unit Only) 14
 PRE-START CHECK 14
 INITIAL START-UP 14
 SAFETY FEATURES 14
 SECURE OWNER'S APPROVAL 14

MAINTENANCE


CLEANING 14
 LUBRICATION 14
 REPLACEMENT PARTS 14
 NOTICE TO OWNER 14

LIST OF FIGURES

Figure No.	Description	Page
1	Center of Gravity	3
2	Typical Rigging	4
3	Typical Field Wiring	5
4	Unit Dimensions & Clearances	6
5	Extending The Service Ports	10
6	Refrigerant Flow Diagram	11
7	Charging Curves EFB180A	15
8	Charging Curves EFB240A	15
9	Heating Mode Charging Chart At 4800 CFM EFB180A	16
10	Heating Mode Charging Chart At 6000 CFM EFB180A	16
11	Heating Mode Charging Chart At 6600 CFM EFB180A	17
12	Heating Mode Charging Chart At 6400 CFM EFB240A	17
13	Heating Mode Charging Chart At 7000 CFM EFB 240A	18
14	Heating Mode Charging Chart At 7600 CFM EFB 240A	18

LIST OF TABLES

Table No.	Description	Page
1	Unit Application Data	3
2	Physical Data	4
3	Electrical Data	5
4	Suction Lines	7
5	Liquid Lines	8
6	Refrigerant Line Charge	8

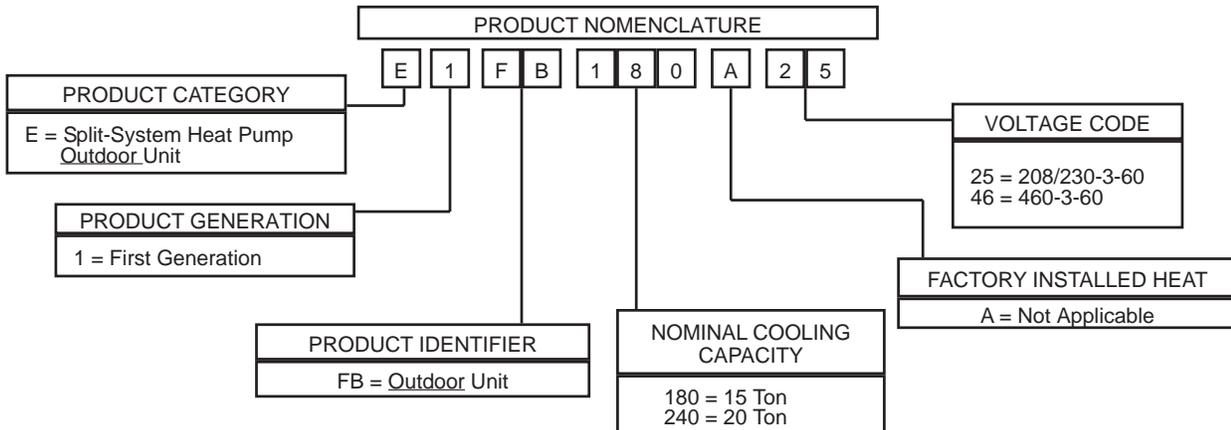

INSTALLATION

LIMITATIONS

These units must be installed in accordance with all national and local safety codes. If no local codes apply, installation must conform with the appropriate national codes. See Table 1 for unit application data. Units are designed to meet National Safety Code Standards. If components are to be added to a unit to meet local codes, they are to be installed at the dealer's and/or the customer's expense.

TABLE 1 - UNIT APPLICATION DATA

APPLICATION LIMITATIONS	MIN	MAX
Voltage Variation (208/230-3-60) - Volts ²	187	253
Voltage Variation (460-3-60) - Volts ²	414	506
Ambient Air on Outdoor Coil (Cooling Cycle) - °F	45	115
Ambient Air on Indoor Coil (Cooling Cycle) - °F	68	86
Ambient Air on Outdoor Coil (Heating Cycle) - °F	0 ¹	70
Ambient Air on Indoor Coil (Heating Cycle) - °F	60	80

¹ Rated in accordance with ARI Standard 110, utilization range "A".

² Below 0 °F, the control circuit will lock out the compressor and allow the electric heat accessory to cycle at its standby capacity.

LOCATION

Use the following guidelines to select a suitable location for these units.

- The outdoor units must be installed outside the building. The outdoor fans are the propeller type and are not suitable for use with duct work.
- The outdoor and indoor units should be installed as close together as possible and with a minimum number of bends in the refrigerant piping. Refer to REFRIGERANT PIPING for additional information.
- The outdoor unit should not be installed beneath windows or between structures where normal operating sounds may be objectionable.

WARNING: The outdoor unit should not be installed in an area where mud and/or ice could cause personal injury. Remember that condensate will drip from the underside of the unit coils during heat and defrost cycles and that this condensate will freeze when the temperature of the outdoor air is below 32°F.

- All units require certain clearances for proper operation and service.

On either rooftop or ground level installations, rubber padding can be applied between the base rails and their supports to lessen any transmission of vibration.

ROOF-TOP LOCATIONS

Be careful not to damage the roof. Consult the building contractor or architect if the roof is bonded. Choose a location with adequate structural strength to support the unit.

The unit must be mounted on solid level supports. The supports can be channel iron beams or wooden beams treated to reduce deterioration.

A minimum of two (2) beams are required to support each unit. The beams should: (1) Be positioned perpendicular to the roof joists. (2) Extend beyond the dimensions of the unit to distribute the load on the roof, (3) Be capable of adequately supporting the entire unit weight. Refer to Figure 1 and Table 2 for load distribution and weights.

Unitary Products Group

These beams can usually be set directly on the roof. Flashing is not required.


NOTE: On bonded roofs, check for special installation requirements.

GROUND LEVEL LOCATIONS

The units must be installed on a substantial base that will not settle. Any strain on the refrigerant lines may cause a refrigerant leak. A one-piece concrete slab with footers that extend below the frost line is recommended. The slab should not be tied to the building foundation because noise and vibration will telegraph.

A unit can also be supported by concrete piers. These piers should: (1) extend below the frost line, (2) be located under the unit's four corners and (3) be sized to carry the entire unit weight. Refer to Figure 1 and Table 2 for the center of gravity and unit weight.

A gravel bed or some other means of handling the condensate that will drop from the underside of the unit coil during the heating and defrost cycles may have to be provided.

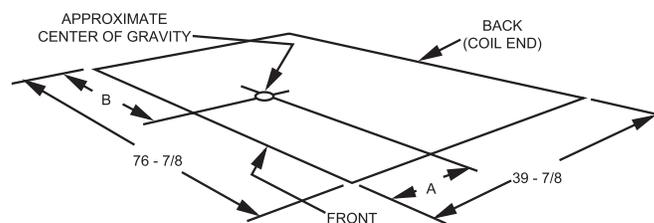

Unit	Dim. (in.)	
	A	B
15 Ton	16	38
20 Ton	16	38

FIG. 1 - CENTER OF GRAVITY

CAUTION: Care should be taken to protect the unit from tampering and unauthorized persons from injury. Screws on access panels will prevent casual tampering. Additional safety precautions such as fences around the unit or locking devices on the panels may be advisable. Check local authorities for safety regulations.

RIGGING AND HANDLING

Exercise care when moving the unit. Do not remove any packaging until the unit is near the place of installation.

Rig the unit by attaching chain or cable slings with hooks to the round lifting holes provided in the base rails.

CAUTION: Spreaders, longer than the largest dimension across the unit, **MUST** be used across the top of the unit. See Figure 2.

WARNING: BEFORE LIFTING A UNIT, MAKE SURE THAT ITS WEIGHT IS DISTRIBUTED EQUALLY ON THE CABLES SO THAT IT WILL LIFT EVENLY.

Units may also be moved or lifted with a fork-lift from the front, rear or the compressor end only through the slotted openings provided in the base rails.

CAUTION: LENGTH OF FORKS MUST BE A MINIMUM OF 54" (when lifting from the compressor end of the unit) and a MINIMUM OF 42" (when lifting from the front or rear of the unit).

Remove the nesting brackets from the four corners on top of the unit. All screws that are removed to take these brackets off must be replaced on the unit.

CLEARANCES

All units require certain minimum clearances for proper operation and service. Refer to Figure 4 for these clearances.

WARNING: Do not permit overhanging structures or shrubs to obstruct air discharge.

Additional height may be required for snow clearance if winter operation is expected.

COMPRESSOR CRANKCASE HEATER

The compressor is equipped with a crankcase heater to prevent refrigerant from mixing with crankcase oil during the "OFF" cycle. The heaters will be energized when the compressor is not running providing the unit disconnect switch is closed.

TABLE 2 - PHYSICAL DATA

DESCRIPTION		UNIT MODEL	
		EFB180	EFB240
Compressor ¹	Rating - (Qty) Tons	(2) 7-1/2	(2) 10
Fans	Quantity	2	2
	Diameter - inches	24	26
	Blades/Pitch (°)	3/32	3/36
	Nominal CFM	10862	11395
Fan Motors ²	HP	1	1
	RPM	1100	1100
	Rows Deep X Rows High	2 X 40	2 X 40
	Finned Length - inches	130	130
	Face Area - square feet	36.11	36.11
	Tube(Copper) OD - inches	3/8	3/8
	Fins (Aluminum) per inch	18	20
	Holding Charge (Sys 1 / Sys 2) ³		1-0/1-0
Operating Charge (Sys 1 / Sys 2) ⁴		16-8/17-8	19-0/19-0
	Shipping	970	1020
	Operating	980	1040

¹These compressors are fully hermetic.

²The ball bearing, 48 frame, single phase condenser fan motor have internal protection and are directly connected to the condenser fins. Motor rotation is counterclockwise when viewing the lead end, which is opposite the shaft end.

³The amount of charge in the unit as shipped from the factory.

⁴Total operating charge for the condensing unit, matching indoor unit, and 25 feet of interconnecting pipe.

CAUTION: Do not attempt to start the compressor without at least eight hours of crankcase heat or compressor damage will occur.

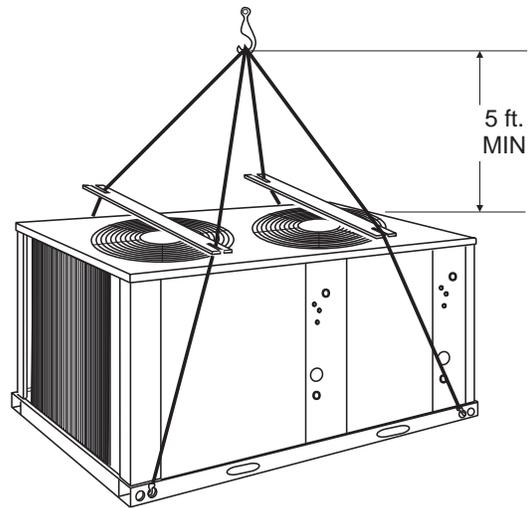


FIG. 2 - TYPICAL RIGGING

If a unit has just been installed or the unit disconnect switch has been open for a long period of time, move the system switch on the room thermostat to the "OFF" position before closing the unit disconnect switch. Eight hours of crankcase heat are required to drive the liquid refrigerant out of the compressor before the compressor can be started.

POWER AND CONTROL WIRING

Install electrical wiring in accordance with the latest National Electrical Code (NFPA Standard No. 70) and/or local regulations. The unit should be grounded in accordance with these codes.

POWER WIRING

Check the voltage of the power supply against the data on the unit nameplate. Check the size of the power wire, the disconnect switch and the fuses against the data in Table 3.

NOTE: Copper conductors must be installed between the disconnect switch and the unit.

Refer to Figure 4 for the location of the power wire access opening through the front of the unit. This opening will require a field-supplied conduit fitting.

The field-supplied disconnect switch must be suitable for an outdoor location. Although it should be installed near the unit, do **NOT** secure it to the unit cabinet.

Refer to Figure 3 for typical field wiring.

CONTROL WIRING

Refer to Figure 4 for the location of the control wire access opening through the front of the unit.

Route the necessary low voltage control wires from terminal block TB2 of the unit control box through this access opening to the indoor unit and to the room thermostat. Refer to Figure 3 for typical field wiring.

The room thermostat should be mounted about 5 feet above the floor and located where it will be exposed to normal room air circulation. Do not locate it on an outside wall, near a supply air grille, or where it may be affected by sunlight


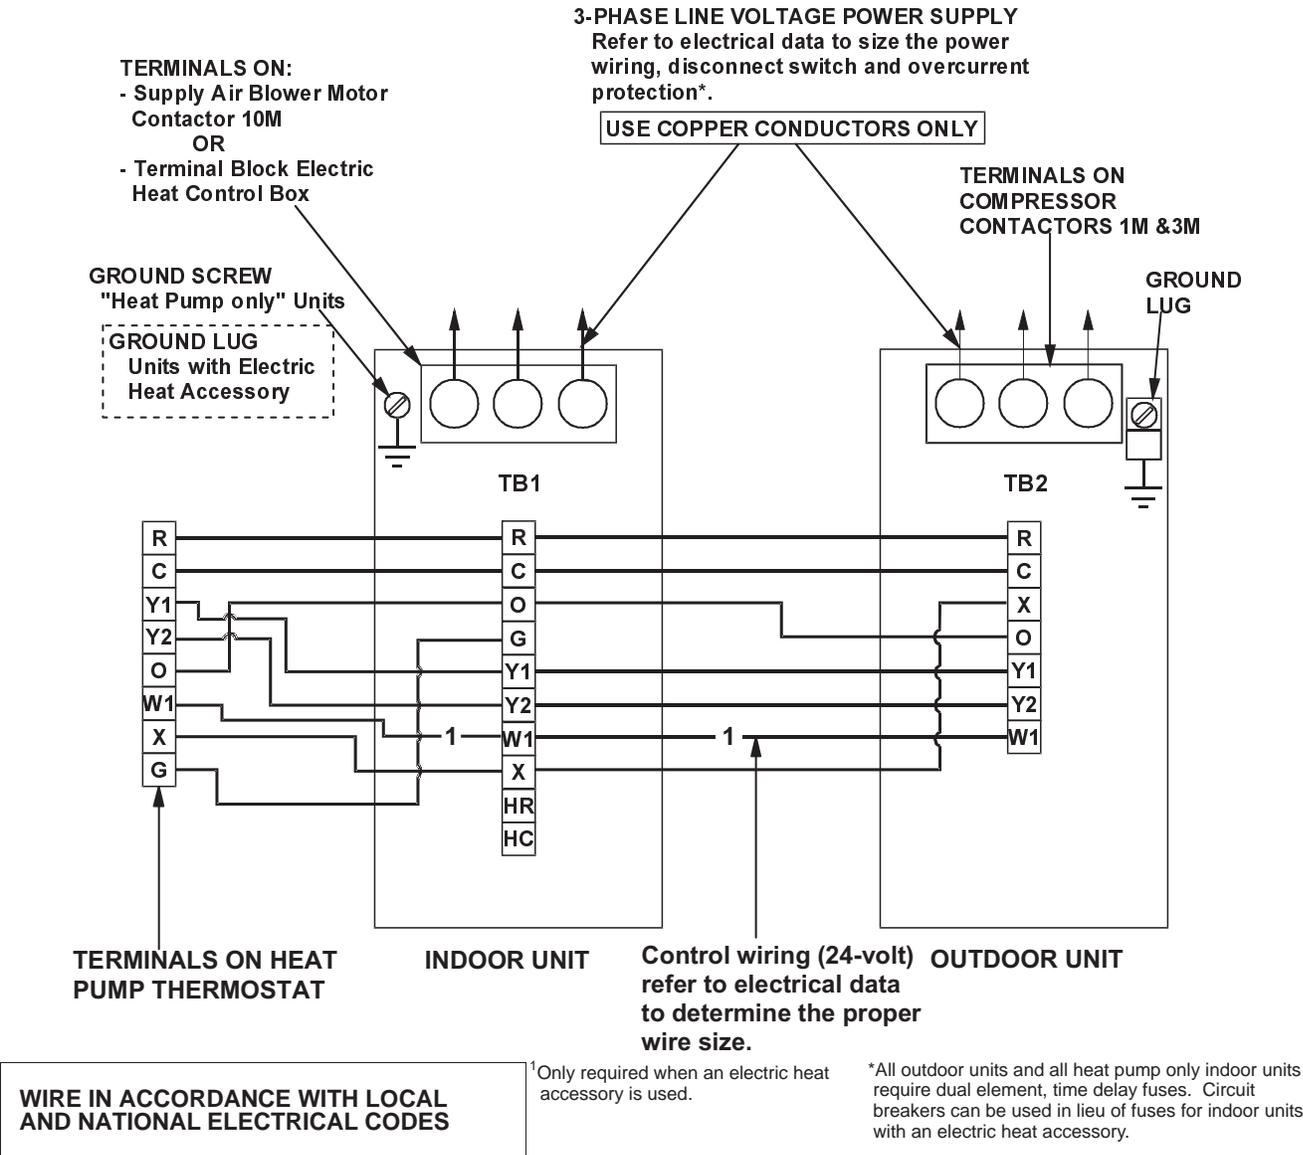


FIG. 3 - TYPICAL FIELD WIRING

TABLE 3 - ELECTRICAL DATA

Model Number	Compressors				Outdoor Fan Motors				Minimum Circuit Ampacity	Maximum Fuse Size ¹	Minimum Wire Size AWG ²	Maximum Wire Length feet ³	Minimum Disconnect Amps		
	Power Supply	System 1		System 2		Power Supply	System 1							System 2	
		RLA	LRA	RLA	LRA		Qty	FLA (Each)						Qty	FLA (Each)
E1FB180A25	208/230-3-60	32.1	195.0	32.1	195.0	208/230-1-60	1	4.7	1	4.7	81.6	90	4 AWG 88 @ 230 V 126 @ 208 V 140 @ 230 V	100	
E1FB180A46	460-3-60	16.4	95.0	16.4	95.0	460-1-60	1	2.5	1	2.5	41.9	45	8 AWG 6 AWG 224	60	
E1FB240A25	208/230-3-60	42.0	239.0	42.0	239.0	208/230-1-60	1	4.7	1	4.7	103.9	110	2 AWG 0 AWG 104 @ 208 V 115 @ 230 V 165 @ 208 V 182 @ 230 V	150	
E1FB240A46	460-3-60	19.2	125.0	19.2	125.0	460-1-60	1	2.5	1	2.5	48.2	50	8 AWG 6 AWG 111 176	60	

¹Maximum fuse or maximum circuit breaker (HACR type per NEC).
²Based on three 75°C insulated copper conductors in conduit and ambient of 30°C.
³Based on 5% voltage drop, since unit controls are powered off the unit supply. Two minute time delay between system 1 and system 2.

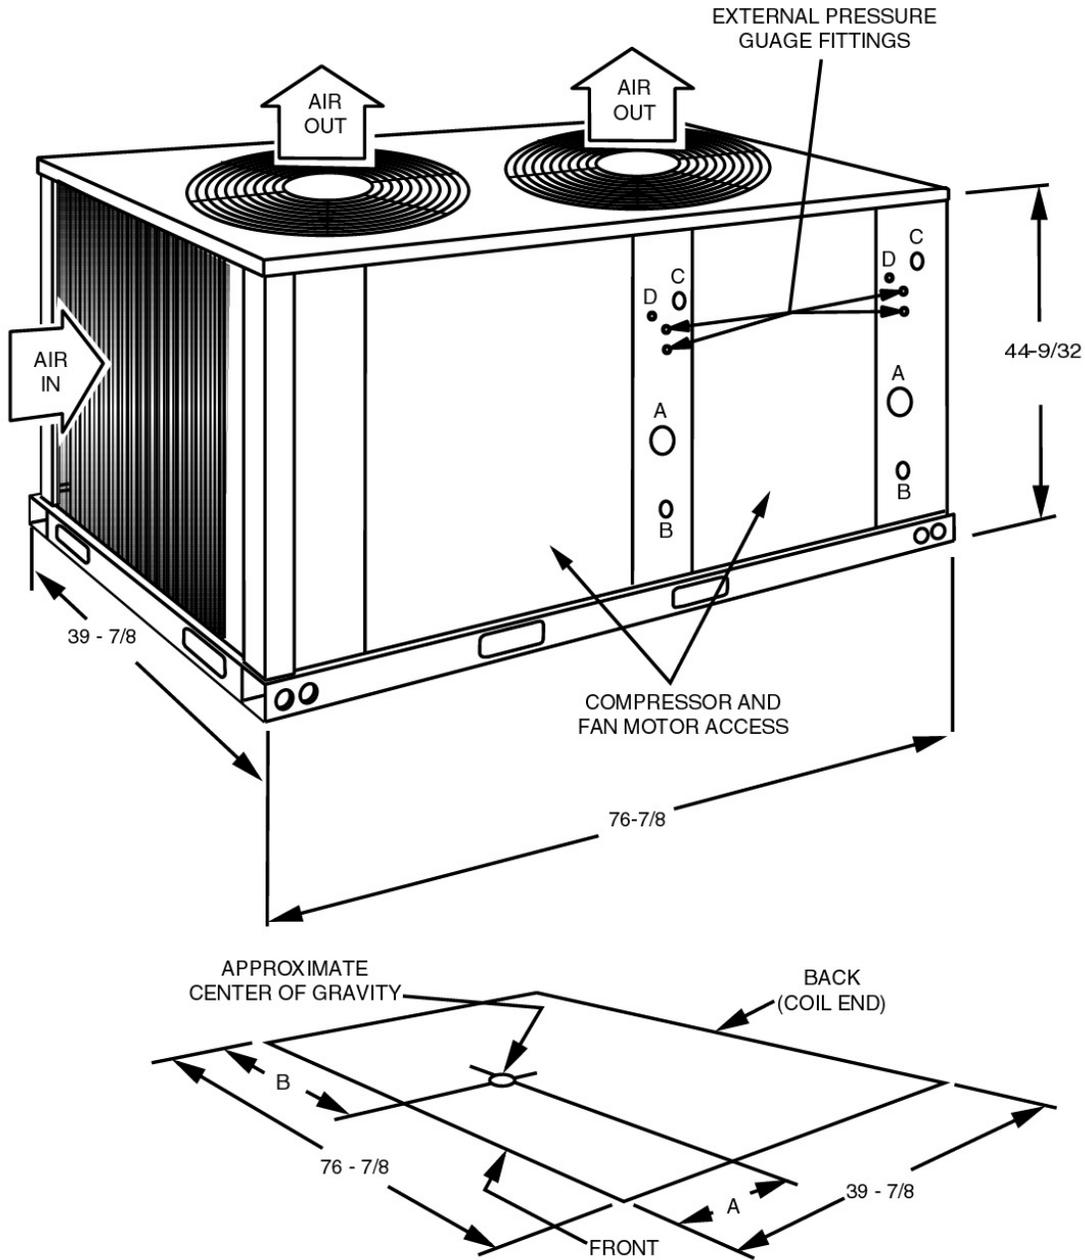

Unit	Dim. (in.)	
	A	B
15 Ton	16	38
20 Ton	16	38

All dimensions are in inches. They are subject to change without notice. Certified dimensions will be provided upon request.

CENTER OF GRAVITY

Connection Entry		Connection Size	
		15 Ton	20 Ton
Suction Line	A	1-1/8 ID	1-3/8 ID
Liquid Line	B	5/8 ID	5/8 ID
Power Wiring	C	2-1/8 KO	2-1/8KO
Control Wiring	D	7/8 KO	7/8 KO

CLEARANCES

Overhead (Top) ¹	120"
Front (Piping and Access Panels)	30"
Left Side	24"
Right Side	24"
Rear	24"
Bottom ²	0"

¹Units must be installed outdoors. Overhanging structures or shrubs should not obstruct condenser air discharge.

²Adequate snow clearance must be provided if winter operation is expected.

FIG. 4 - UNIT DIMENSIONS AND CLEARANCES

TABLE 4 - SUCTION LINES ^{1,2}

Model Designation		Nominal Capacity (Tons)	Refrigerant Flow Rate ³ (Lbs./Min.)	Type L Copper Tubing (Inches O.D.)	Friction Loss ^{4,5} (PSI/100 Ft.)
180	System 1	7-1/2	22.5	1-1/8	4.7
	System 2	7-1/2	22.5	1-1/8	4.7
240	System 1	10	30	1-3/8	2.8
	System 2	10	30	1-3/8	2.8

¹All horizontal suction lines should be pitched at least 1 inch every 20 feet in the direction of the refrigerant flow to aid the return of oil to the compressor.

²Every vertical suction riser greater than 25 feet in height should have a "P" trap at the bottom to facilitate the return of oil to the compressor. Use short radius fittings for these traps.

³Based on Refrigerant-22 at the nominal capacity of the condensing unit, a suction temperature of 40°F and a liquid temperature of 105°F.

⁴Although suction lines should be sized for a friction loss equivalent to a 2°F change in saturation temperature (or approximately 3 psi), sizing the lines for the proper return of oil is more important.

⁵These friction losses do not include any allowances for valves or fittings.

⁶Since the refrigerant gas velocity may be too low to maintain good oil return up a vertical riser, use the next smaller size. The larger size may be used for horizontal runs for a smaller pressure drop.

and/or drafts. Circulation of air to the thermostat should not be blocked by curtains, drapes, furniture, partitions, etc.

Some installations may require a locking cover to protect the thermostat from tampering and/or damage.

Both the manual and the auto changeover thermostats have non-adjustable, voltage-type anticipators for both cooling and heating.

REFRIGERANT PIPING

GENERAL GUIDELINES

Many service problems can be avoided by taking adequate precautions to provide an internally clean and dry system and by using procedures and materials that conform with established standards.

Use hard drawn copper tubing where no appreciable amount of bending around pipes or other obstructions is necessary. Use long radius ells wherever possible with one exception - small radius ells for the traps in all vapor risers. If soft copper is used, care should be taken to avoid sharp bends which may cause a restriction.

Pack fiber glass insulation and a sealing material such as permagum around refrigerant lines where they penetrate a wall to reduce vibration and to retain some flexibility.

Support all refrigerant lines at minimum intervals with suitable hangers, brackets or clamps.

Braze all copper to copper joints with Sil Fos-5 or equivalent brazing material. Do not use soft solder.

Insulate all vapor lines with a minimum of 1/2" ARMA-FLEX or equal. Liquid lines exposed to direct sunlight and/or high temperatures must also be insulated.

Never solder vapor and liquid lines together. They can be taped together for convenience and support purposes, but they must be completely insulated from each other.

LINE SIZING

When sizing refrigerant lines for a split-system air conditioner, check the following:

1. Suction line pressure drop due to friction at full capacity,
2. Liquid line pressure drop due to friction at full capacity,
3. Suction line velocity for oil return at part capacity, and
4. Liquid line pressure drop due to static head.

NOTE: Never base refrigerant line sizes on the OD of the suction and liquid connections on the unit.

Unitary Products Group

Tables 4 and 5 list friction losses for both the suction and liquid lines on the system. Table 6 shows the amount of refrigerant charge required per foot of refrigerant line.

When the evaporator coil is below the condensing unit, the suction line must be sized for both pressure drop and for oil return. For certain piping arrangements, different suction line sizes may have to be used. The velocity of the suction gas must always be great enough to carry oil back to the compressor.

When the condensing unit is below the evaporator coil, the liquid line must be designed for the pressure drop due to both friction loss and vertical rise. If the total pressure drop exceeds 40 psi, some refrigerant may flash before it reaches the thermal expansion valve. This flashing will not only cause erratic valve operation and poor system performance, but could also damage the expansion valve.

SERVICE VALVES

These outdoor units have both vapor and liquid line service valves.

Both valves are shipped from the factory front-seated and closed with the valve stem in the maximum clockwise position.

These service valves are the back-seating type and have a 1/4" male flare access port for evacuating and charging the system.

Shrader access valves are provided on the compressor vapor and discharge lines for pressure checking the system.

All access ports are sealed with a removable cap. Never remove a cap unless the valve is fully back-seated with its valve stem in the maximum counter-clockwise position because the refrigerant charge will be lost.

INSTALLATION

Since these units are shipped with a holding charge of Refrigerant-22, they can be checked for a refrigerant leak by opening the access port on the liquid line service valve as follows:

Open the valve by turning the stem to its maximum counter-clockwise position.

Remove the cap from the access port.

WARNING: Provisions for recovering refrigerant releases must be available during all phases of installation, leak testing and charging. Do NOT release refrigerant into the atmosphere.

TABLE 5 - LIQUID LINES

Model Designation	Nominal Capacity (Tons)	Refrigerant Flow Rate ¹ (Lbs./Min.)	Type L Copper Tubing (Inches O.D.)	Pressure Drop ³		
				Friction ² (PSI/100 Ft.)	Vertical Rise (PSI/Ft.)	
180	System 1	7-1/2	22.5	5/8	3.5	0.5
	System 2					
240	System 1	10	30.0	5/8	5.8	0.5
	System 2					

¹Based on Refrigerant-22 at the nominal capacity of the condensing unit, a liquid temperature of 105°F and a suction temperature of 40°F.

²These friction losses do not include any allowances for a strainer, filter-drier, solenoid valve, isolation valve or fittings.

³The total pressure drop of the liquid line for both friction and vertical rise must not exceed 40 PSI. If the pressure drop exceeds 40 PSI, the liquid refrigerant could flash before it reaches the

TABLE 6 - REFRIGERANT LINE CHARGE

Refrigerant Line ²	Line Size, OD (In.)	Refrigerant Charge (Lb/Ft)
Liquid	5/8	0.113
Vapor	1-1/8	0.013
	1-3/8	

¹Charges are based on 40°F suction temperature and 105°F liquid temperature.

²Type "L" copper tubing.

Use these line charges to adjust the system operating charge when the refrigerant lines are more or less than the 25 feet listed in Table 2.

This warning applies to any disc being removed from a service valve, coil connection, etc.

Remove the cap from the 1/4" access port on the liquid line stop valve.

Connect a supply of dry nitrogen to this access port.

Unbrazed the copper disc from the liquid connection while maintaining a minimum flow of dry nitrogen through the connection.

After the disc has been removed,

Burnish the external surfaces of the liquid connection on the outdoor unit and the end of the field-supplied piping being used for the liquid line.

NOTE: Clean surfaces are essential for a well brazed connection.

- Carefully clean the internal surfaces of the above. Any particles left on these surfaces may lead to a future system malfunction.

NOTE: Use only copper tubing that has been especially cleaned and dehydrated for refrigerant use. If the tubing has been open for an extended period of time, it should be cleaned before being used.

The liquid line connections can now be brazed while maintaining a minimum flow of dry nitrogen through the piping.

NOTE: A filter-drier is factory-mounted in the outdoor unit for the heating cycle and in the indoor unit for the cooling cycle.

Do NOT install another filter-drier in the field-supplied liquid line because refrigerant will flow in both directions on a heat pump system.

Recover the holding charge of the indoor unit and then remove the sealing caps or discs from both its liquid and vapor connections per the following procedure:

- Make sure the refrigerant in the lines has been recovered, then drill a small hole through both the liquid disc and the vapor disc. If the holding charge has already been lost, the coil should be leak-tested and the necessary repairs should be made.
- Move the dry nitrogen supply from the access port on the liquid line service valve of the outdoor unit to the hole through the vapor disc on the indoor unit.
- Unbrazed the coil's liquid line disc while maintaining a flow of dry nitrogen across the connection and through the hole in the liquid line disc.

Turn the stem in (or clockwise) between 1/4 and 1/2 turn to open the access port.

As soon as some internal pressure is relieved, close the access port. DO NOT remove the entire holding charge.

NOTE: The copper disc on the liquid connection will prevent any internal pressure from being relieved through the main port of the liquid line stop valve.

If the unit has already lost its holding charge, it should be leak tested and the necessary repairs should be made. If the unit has maintained its holding charge, you can assume that it has no leaks and proceed with the installation.

CAUTION: Dry nitrogen should always be supplied through a connection while it is being brazed or unbrazed because the temperature required to make or break a brazed joint is sufficiently high to cause oxidation of the copper unless an inert atmosphere is provided. The flow of nitrogen should be continued until the joint has cooled.

WARNING The dry nitrogen must always be supplied through a pressure regulating valve.

Before installing the liquid line between the outdoor and indoor units, remove the copper disc from the liquid connection on the outdoor unit per the following procedure:

Make sure the refrigerant in the line has been recovered and that the liquid service valve on the unit is front-seated and closed. The valve stem should be turned to its maximum clockwise position.

Drill a small hole through the disc before unbrazing it to permit a flow of dry nitrogen through the connection while it is being unbrazed.

WARNING: This hole is also required to prevent the internal pressure from building up as the disc is being unbrazed and from blowing the disc off.

4. After the disc has been removed, burnish the external surfaces and clean the internal surfaces as outlined above.
5. Move the dry nitrogen supply back to the access port on the liquid line service valve.
6. Braze the liquid line to the liquid connection on the indoor unit while maintaining a minimum flow of dry nitrogen through the liquid line, the indoor coil and the hole in the vapor disc.
7. Unbrazed the disc on the vapor connection of the indoor unit while maintaining the flow of dry nitrogen.
8. After the disc has been removed, burnish the external surfaces and clean the internal surfaces as outlined above.

The vapor piping can now be brazed to the vapor connection on the indoor unit while maintaining a minimum flow of dry nitrogen.

Before brazing the vapor line to the outdoor unit, make sure the refrigerant in the line has been recovered, then remove the copper disc from its vapor connection per the following procedure:

1. Make sure that the vapor line service valve on the outdoor unit is front-seated and closed with its valve stem in the maximum clockwise position.
2. Drill a small hole through the disc before unbrazing it to permit a flow of dry nitrogen through the connection while its being unbrazed.
3. Move the dry nitrogen supply to the access port on the vapor line service valve of the outdoor unit.
4. Unbrazed the disc on the vapor line connection of the outdoor unit while maintaining a minimum flow of dry nitrogen through the access port of the vapor line service valve and the hole in the vapor disc.
5. After the disc has been removed, burnish the external surfaces and clean the internal surfaces of the vapor connection and the vapor piping.

The vapor line can now be brazed to the vapor connection on the outdoor unit while maintaining the flow of dry nitrogen.

After the liquid and vapor lines have been installed, the system should be evacuated and charged.

EXTENDING THE SERVICE PORTS

(Refer to Fig. 5)

1. Loosen the screws that secure the service ports in shipping position.
2. Push the service ports through the corner post.

3. Tighten the screws to secure the service ports for installation.

EVACUATING AND CHARGING

With the liquid and suction line service valves closed, connect a vacuum pump through a charging manifold to the access ports on both the liquid and suction line service valves.

NOTE: The vacuum pump connections should be short and no smaller than 3/8" O.D.

The refrigerant lines and the evaporator coil can now be evacuated to 500 Microns without disturbing the charge in the condenser coil or the compressor.

After proper evacuation and dehydration, charge refrigerant through the access port on the liquid line service valve allowing the vacuum to draw in as much refrigerant as possible.

CAUTION: Do not charge liquid refrigerant through the compressor suction connection.

CAUTION: Do not attempt to start the compressor without at least 8 hours of crankcase heat or compressor damage will occur.

to continue charging refrigerant, open the liquid and the suction line service valves fully. Turn the stem of the liquid service valve clockwise 1/4 turn to open its access port for reading pressure.

Start the compressor (after 8 hours of crankcase heat), turn the stem of the suction line service valve clockwise 1/4 turn to open its service port and continue to charge refrigerant gas through this suction access port until you meet the conditions shown on the charging curve, Figures 7 through 15.

Open the liquid and vapor line service valves fully to close their access ports after the system has been charged.

BALANCE POINT SETTING

The balance point of a heat pump is the lowest temperature at which the refrigeration system can heat the building without any supplemental resistance heat.

The balance point is dependent upon -

1. The outdoor design temperature,
2. The building heat loss at the outdoor design temperature, and
3. The heating capacity of the system at the outdoor design temperature.

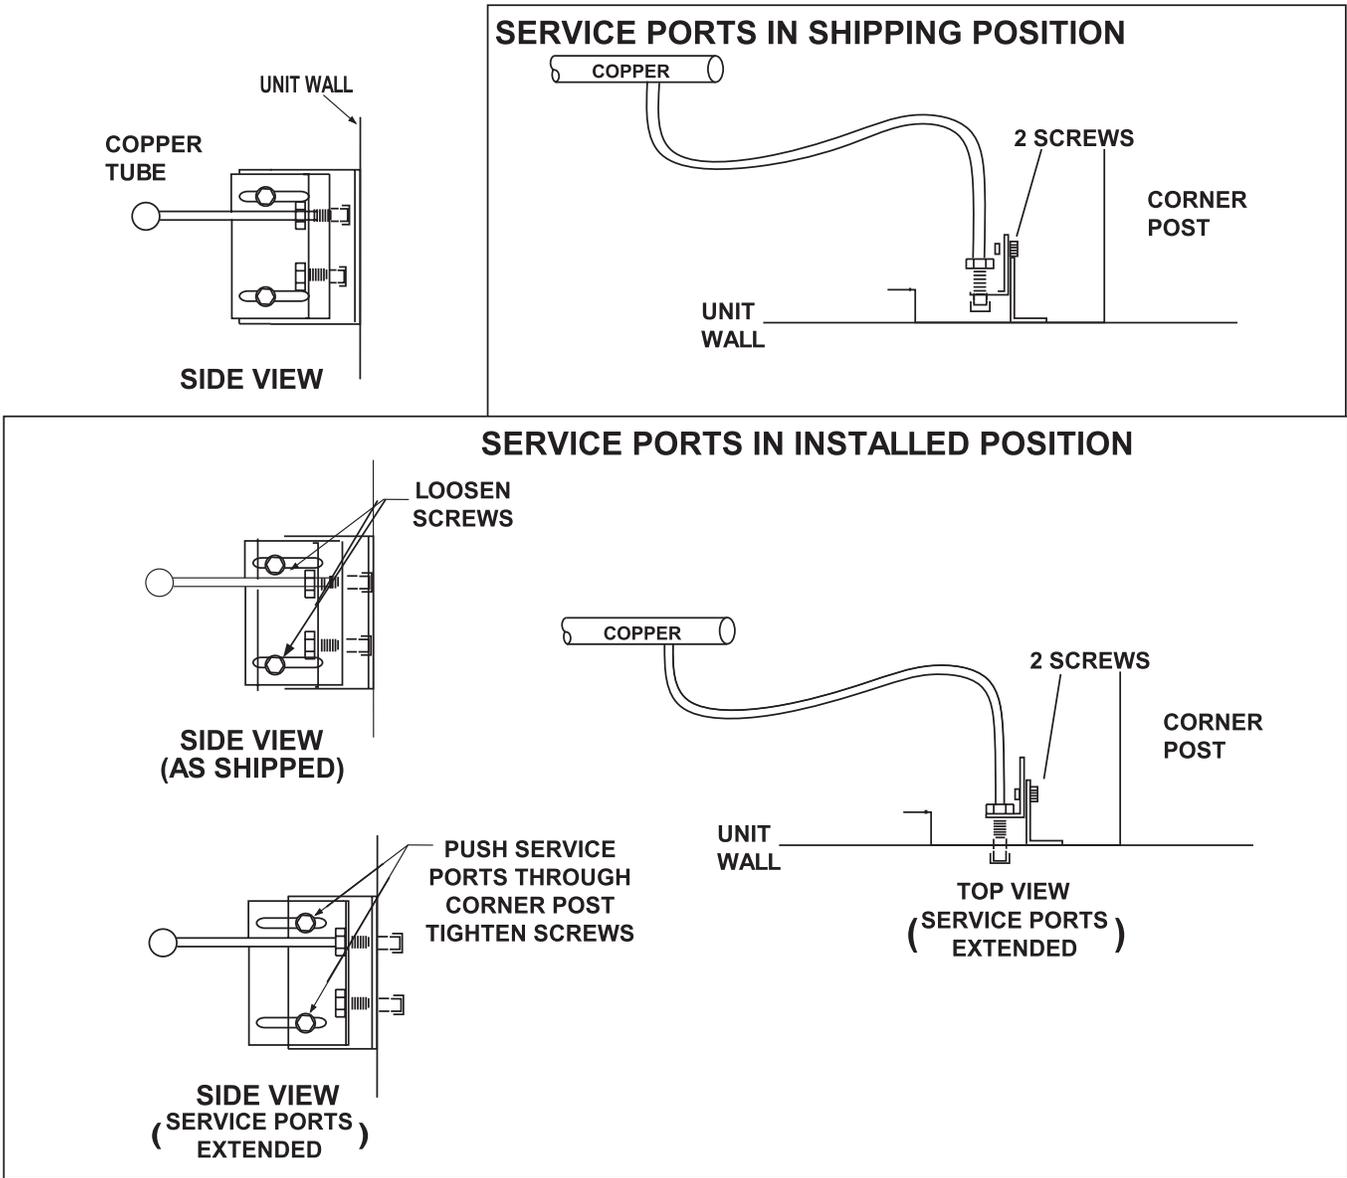


FIG. 5 - EXTENDING THE SERVICE PORTS

ALTERNATE CHARGING METHODS

If you are starting a unit when the ambient temperature is higher or lower than those shown in Figures 7 through 15, either of the following methods may be used.

Method 1: Determine the total weight of the refrigerant for the total system by adding the required charge for the outdoor unit, the indoor unit and the refrigerant lines using information in Tables 2 (Physical Data) and 6 (Refrigerant Line Charge).

Using the charging procedures outlined above, weigh the required amount of refrigerant charge into the unit.

Method 2: Install a field supplied moisture indicating sight glass in the liquid line between the filter-drier and the evaporator coil.

Using the charging procedure outlined above, charge refrigerant until the moisture indicating sight glass is clear. Add approximately 2 extra pounds of refrigerant to assure a liquid refrigerant seal at the expansion valve under all operating conditions. Block the flow of the condenser air, if necessary, to assure a head pressure of 280 psig during the charging procedure.

Note: The installer should return to the job to verify the operating charge when the ambient temperature is within the conditions shown in Figures 7 through 15.

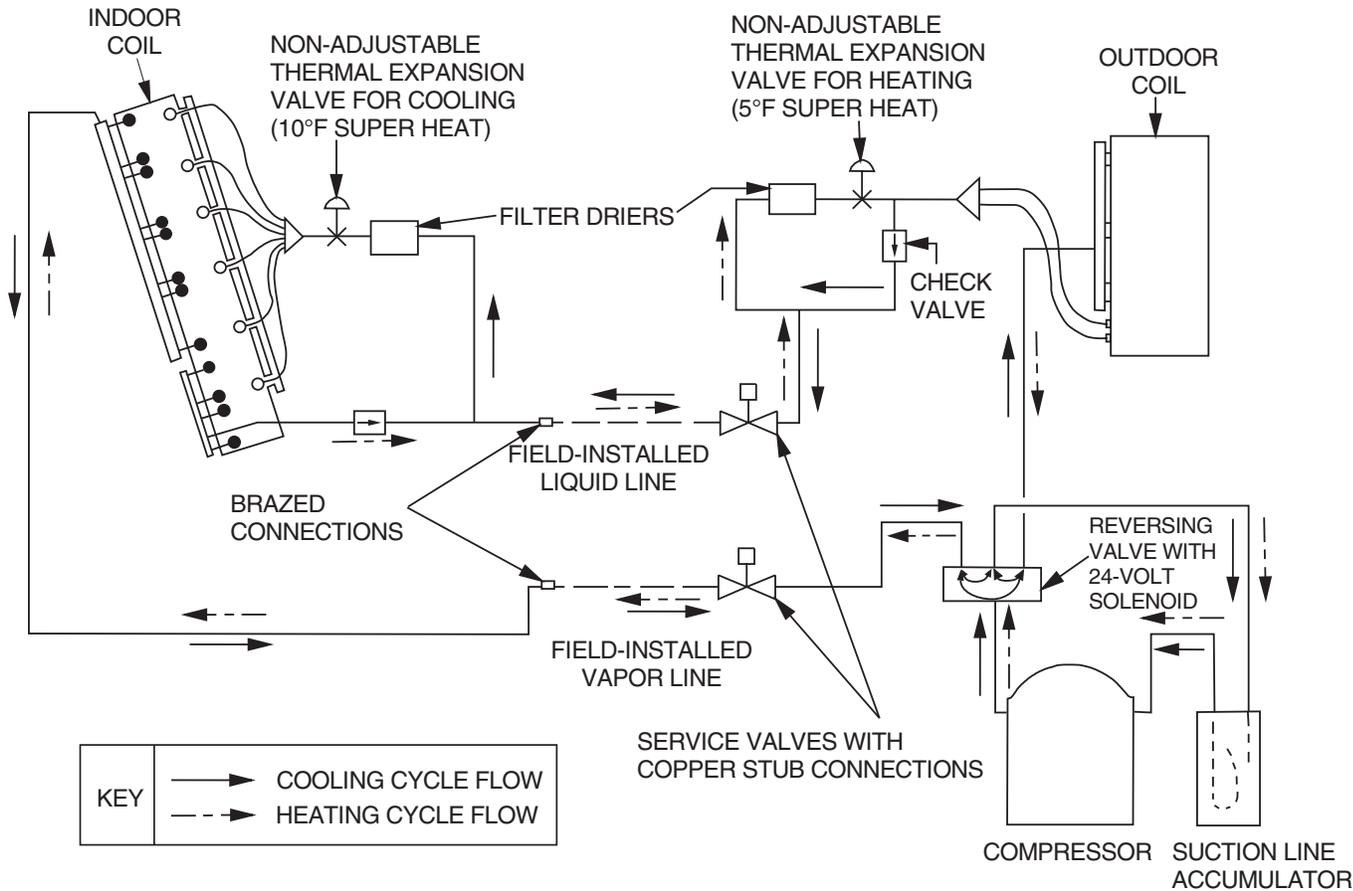


FIG. 6 - REFRIGERANT FLOW DIAGRAM

OPERATION

GENERAL

During the cooling cycle, when the reversing valve solenoids becomes energized, operation will be the same as any conventional air conditioning system.

During the heating cycle, when the reversing valve solenoids becomes de-energized, compressor discharge gas will be diverted to the indoor coil and the outdoor coil will become the evaporator.

Refer to Figure 6 for illustration showing the flow of refrigerant through a heat pump system.

CAUTION: Reversing valves and check valves are precise mechanical devices and will not tolerate any mechanical abuse such as hammering. If a refrigerant system isn't properly cleaned after a compressor burn-out, scale may build up at these devices and prevent them from operating properly.

SYSTEM SEQUENCE OF OPERATION

The following sequences of operation are based on using the manual changeover thermostat. Refer to the respective unit wiring diagram.

COOLING OPERATION

The following controls will be energized through terminal O on the thermostat to put the system in the cooling mode.

- Relays RY3, RY4, RY5, and RY6

If the fan switch on the thermostat is in the "ON" position, indoor section blower motor contactor 10M will be energized through terminal G to provide continuous blower operation. If the switch is in the "AUTO" position, the blower will operate only when the thermostat calls for cooling operation.

3. When TC1 of the thermostat closes on demand for cooling, a circuit is made from the Y terminal on DC1 and DC2

through the defrost control boards and safety switches to energize relays RY1 and RY2, which in turn will energize contactors 1M & 3M, starting the compressors. Contactors 2M and 4M are energized through the NO contacts on auxiliary contactors 1M-AUX and 3M-AUX in order to start the outdoor fan motors.

4. Relays RY1 and RY2 prevent the electric heat accessory referenced as standby electric heat from being utilized whenever the compressor is in operation. This part of the circuit is covered under HEATING OPERATION.
5. The thermostat will cycle the unit to satisfy the cooling requirements of the conditioned space.
6. After the unit has shutdown from a cooling cycle or a power interruption, the anti-short cycle feature of the defrost control board will not permit the unit to restart for 5 minutes. This feature prevents the unit from short cycling.
7. If the discharge pressure reaches 398 psig, the HP1 or HP2 control will open and the defrost control board will lock out the compressor. If the discharge temperature reaches 255°F, TH2 or TH4 thermostat will open and the defrost control board will lock out the compressor. If the suction pressure falls to 7 psig, LP1 or LP2 will open and the defrost control board will lock out the compressor.
8. If the control that caused the lockout has automatically reset, the unit can be restarted by one of the following:
 - a. Turning the system switch on the thermostat to the "OFF" position and back to the "COOLING" position.
 - b. Increasing the set point on the thermostat above the temperature in the conditioned space and then returning it to its original setting.
 - c. Opening and closing the power supply main disconnect switch.

IN ALL THREE RESET METHODS DESCRIBED ABOVE, A FIVE MINUTE TIME DELAY WILL TAKE PLACE AFTER THE RESET BEFORE THE UNIT WILL RESTART.

HEATING OPERATION

1. Reversing valve is de-energized and the system will be in the heating mode.
2. If the fan switch on the thermostat is in the "ON" position, indoor section blower motor contactor 10M will be energized through terminal G to provide continuous blower operation. If the switch is in "AUTO" position, the blower will operate only when thermostat calls for heating operation.
3. When TH1 of the thermostat closes for first-stage heat, a circuit is made for the Y terminal on DC1 and DC2 through the defrost control boards and safety switches to energize relays RY1 and RY2, which in turn will energize contactors 1M and 3M, starting the compressors. Contactors 2M and 4M are energized through the NO contacts on auxiliary contactors 1M-AUX and 3M-AUX in order to start the outdoor fan motors.
4. The thermostat will cycle the unit to satisfy the heating requirements of the conditioned space.
5. After the unit has shutdown from a heating cycle or a power interruption, the anti-short cycle feature of the defrost control board will not permit the unit to restart for 5 minutes. This feature prevents the unit from short cycling.

6. If the discharge pressure reaches 398 psig, the HP1 or HP2 control will open and the defrost control board will lock out the compressor. If the discharge temperature reaches 255°F, TH2 or TH4 thermostat will open and the defrost control board will lock out the compressor. If the suction pressure falls to 7 psig, LP1 or LP2 will open and the defrost control board will lock out the compressor.
 7. If the control that caused the lockout has automatically reset, the unit can be restarted by one of the following:
 - a. Turning the system switch on the thermostat to the "OFF" position and back to the "HEATING" position.
 - b. Decreasing the set point on the thermostat below the temperature in the conditioned space and then returning it to its original setting.
 - c. Opening and closing the power supply main disconnect switch.
- IN ALL THREE RESET METHODS DESCRIBED ABOVE, A FIVE MINUTE TIME DELAY WILL TAKE PLACE AFTER THE RESET BEFORE THE UNIT WILL RESTART.
8. Standby electric heat will be controlled by second stage TH2 of the thermostat and is controlled through low voltage terminal W1. The standby portion of electric heat cannot operate because relays RY1 and RY2 are energized, opening the circuit to W1, whenever the compressor is operating.
 9. When second stage heating TH2 is satisfied, the standby heaters will be de-energized.

DEFROST CYCLE

When condensate freezes on the outdoor coil during heating operation, it must be defrosted before it blocks the flow of air across the coil.

1. A defrost cycle will be initiated by the defrost control board's demand defrost feature which senses both time and outdoor coil temperatures.
2. When the defrost cycle is initiated, the unit operates as follows:
 - a. Relays RY3 and RY5 will be energized causing the reversing valve solenoids to be energized causing the unit to switch to the cooling cycle.
 - b. Contacts in the DC1 and DC2 will open and de-energize contactors 2M and 4M, causing the outdoor fan motors to shut down.
 - c. Standby heat will be energized through contacts in DC1 and DC2. The operation of standby electric heat will prevent cold drafts in the conditioned space.
3. The defrost cycle will be terminated when:
 - a. the liquid temperature exceeds 90°F, or
 - b. 10 minutes have passed since defrost initiation.

The 10 minute cycle time (independent of liquid line temperature) is controlled by the defrost control board.
4. At defrost termination, the unit returns to the normal heating operation.

OPERATION BELOW 0°F OUTDOOR TEMPERATURE

1. At 0°F outdoor temperature, the low temperature compressor cutoff thermostat TH1 and TH3 contacts 1 and 3 will open, de-energizing contactor 1M and 3M which shuts down the compressor. Contacts 1 and 2 of thermostat TH1 and TH3 are closed when contacts 1 and 3 are open. This feature allows the standby electric heat (if installed) to operate under control of first stage heating TH1 of the room thermostat whenever the compressor is shut-down by the 1TH control. The standby electric heat will continue to be controlled by the second stage TH2 of the room thermostat same as described under Item 8 of HEATING OPERATION.
2. The indoor section blower operation will be controlled by the first stage heating TH1 of the room thermostat if the fan switch is in the "AUTO" position.

EMERGENCY HEAT OPERATION

When the system switch on the room thermostat is placed in the EMERGENCY HEAT position, operation is as follows:

1. The emergency heat light on the room thermostat will be energized.
2. Compressors will not operate because the Y circuit of the room thermostat cannot be energized.
3. Standby electric heat (if installed) will be controlled by first stage heating TH1 of room thermostat.
4. Indoor section blower will also be controlled by first stage heating TH1 if fan switch is in the "AUTO" position.

START-UP

CRANKCASE HEATER

The crankcase heaters must be energized at least 8 hours before starting the compressor. To energize the crankcase heaters, the main disconnect switch must be closed. During this 8 hour period, the system switch on the room thermostat must be "OFF" to prevent the compressor from starting.

CAUTION: *DO NOT ATTEMPT TO START THE COMPRESSOR WITHOUT AT LEAST 8 HOURS OF CRANKCASE HEAT OR COMPRESSOR DAMAGE WILL OCCUR.*

Make sure that the bottom of the compressor is warm to the touch to prove crankcase heater operation.

PRE-START CHECK

Before starting the unit, complete the following check list:

1. Have sufficient clearances been provided?
2. Has all foreign matter been removed from the interior of the unit (tools, construction or shipping materials, etc.)?
3. Have the outdoor fans been rotated manually to check for free rotation?
4. Are all wiring connections tight?
5. Does the available power supply agree with the nameplate data on the unit?
6. Have the fuses, disconnect switch and power wire been sized properly?
7. Are all compressor hold-down nuts properly secured?
8. Are any refrigerant lines touching each other or any sheet metal surface? Rubbing due to vibration could cause a refrigerant leak.
9. Are there any visible signs of a refrigerant leak, such as oil residue?
10. Is any electrical wire laying against a hot refrigerant line? Keep in mind that this unit has a reverse cycle and that different lines will be hot during the "HEAT" and "COOL" cycles. Only two lines will remain cool for all cycles - the line between the compressor and the accumulator and the line between the accumulator and the reversing valve.

INITIAL START-UP

1. Supply power to the unit through the disconnect switch prior to starting the compressor.
2. Move the system switch on the room thermostat to the "COOL" position, and lower its set point to energize both the compressor and the reversing valve. Cool air will be supplied to the conditioned space.
3. Check the compressor amperage. It should not exceed the RLA rating printed on the unit data plate or in Table 3 unless the ambient temperature is above 105°F.

SECURE OWNER'S APPROVAL: *When the system is functioning properly, secure the owner's approval. Show him the location of all disconnect switches and the thermostat. Teach him how to start and stop the unit, how to adjust temperature settings within the limitations of the system*

4. Move the system switch on the room thermostat to the "HEAT" position, and increase the set point of the room thermostat until heating is required. The compressor will run, but the reversing valve will be de-energized. Warm air will be supplied to the conditioned space.
5. Check the operation of the indoor unit per Form 515.41-N4Y.
6. Check the entire system for refrigerant leaks.
7. Check for any abnormal noises and/or vibrations, and make the necessary adjustments to correct (e.g. fan blade touching shroud, refrigerant lines hitting on sheet metal, etc.)
8. After the unit has been operating for several minutes, shut off the main power supply at the disconnect switch and inspect all factory wiring connections and bolted surfaces for tightness.

SAFETY FEATURES

1. All outdoor fan motors have inherent protection with automatic reset.
2. Every compressor is internally protected against excessive current and temperature by a line break motor protector that is mounted inside the compressor housing and is connected between each winding and the common terminal.

This motor protector will interrupt power to the compressor if any of the following overload conditions occur:

CAUTION:

DO NOT ATTEMPT TO START THE COMPRESSOR WITHOUT AT LEAST 8 HOURS OF CRANKCASE HEAT OR COMPRESSOR DAMAGE WILL OCCUR.

- a. primary single phasing
 - b. locked rotor
 - c. compressor overload
 - d. insufficient motor cooling
- This type of motor protection works even with the contactor welded closed.
3. Every compressor is protected by crankcase heaters to prevent refrigerant from accumulating in the crankcases of the compressor during an "OFF" cycle.
 4. Outdoor fan motors and the secondary of the control transformer are grounded.
 5. A fusible plug on the top of the suction line accumulator serves as a high temperature/high pressure relief device.

MAINTENANCE

CLEANING

Do not allow dirt to accumulate on the outdoor coil. Clean the coil with a brush or vacuum cleaner as often as necessary to assure good system performance and efficient operation. If the coil is extremely dirty, it may be necessary to use an industrial grade detergent and a hose to clean the fin surface.

LUBRICATION

The outdoor fan motors are equipped with factory lubricated and sealed ball bearings. They do not require any maintenance.

REPLACEMENT PARTS

Contact your local UPG Distribution Center for replacement compressors, fan motors, controls, etc.

NOTICE TO OWNER

If a lockout occurs, check the indoor filters and the outdoor coil before calling a serviceman. If the filters are dirty, clean or replace them. If there is an accumulation of snow, leaves or debris blocking the outdoor air coil, remove the blockage. Reset the thermostat and wait 5 minutes. If the unit doesn't start, call a serviceman.

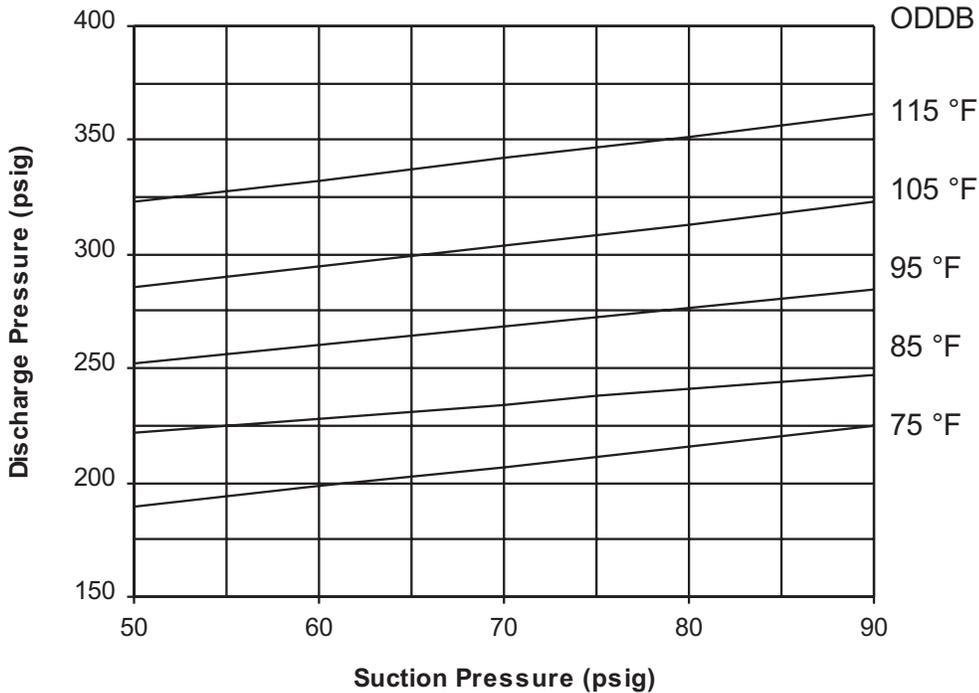


FIG.7 - COOLING MODE CHARGING CHART - EFB180A

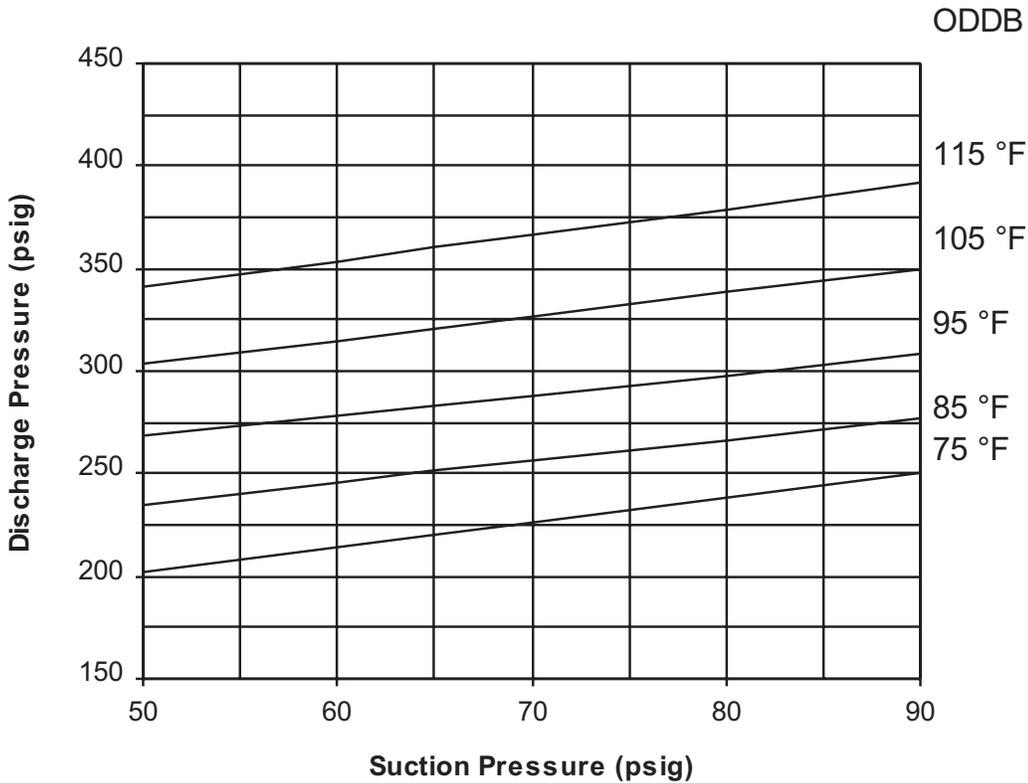


FIG. 8 - COOLING MODE CHARGING CHART - EFB240A

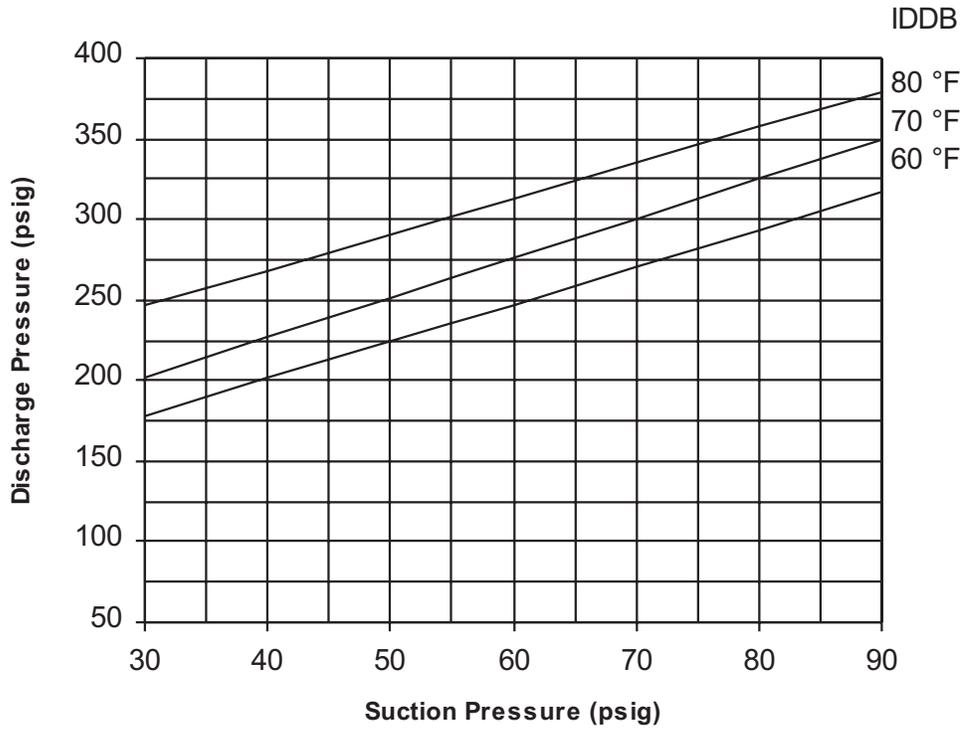


FIG. 9 - HEATING MODE CHARGING CHART AT 4800 CFM - EFB180A

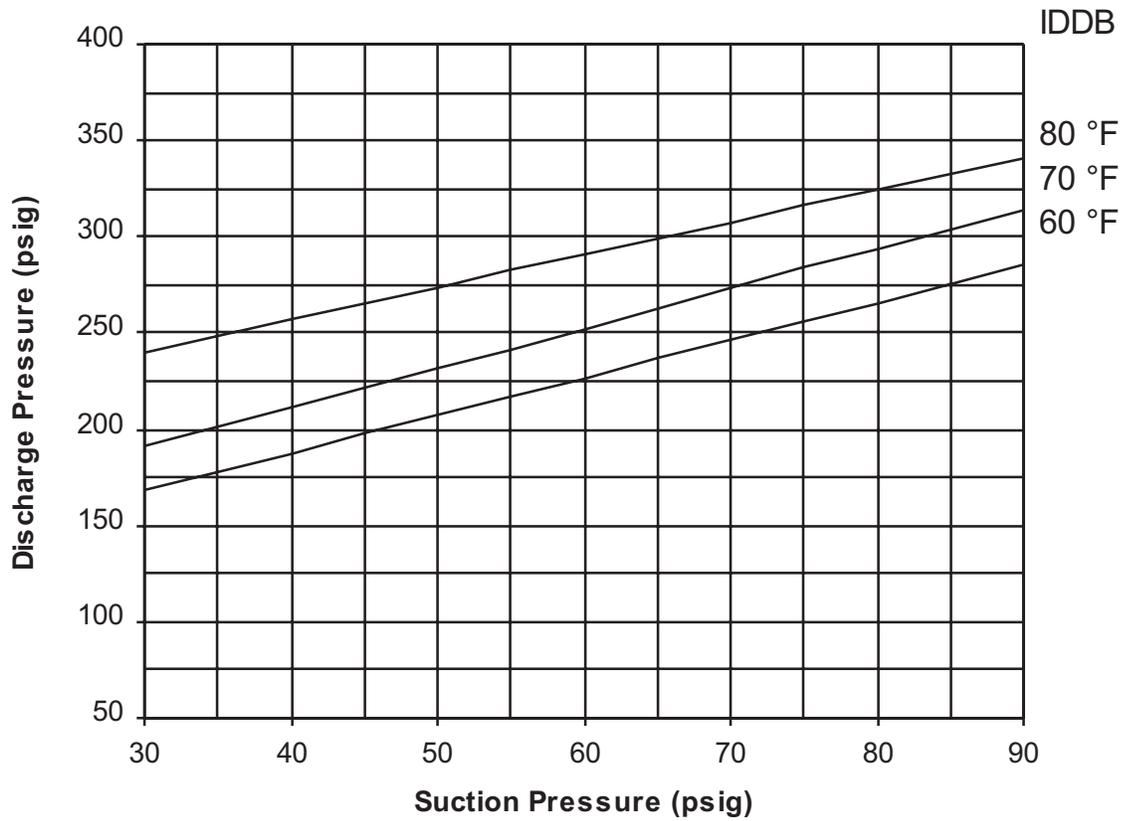


FIG. 10 - HEATING MODE CHARGING CHART AT 6000 CFM - EFB180A

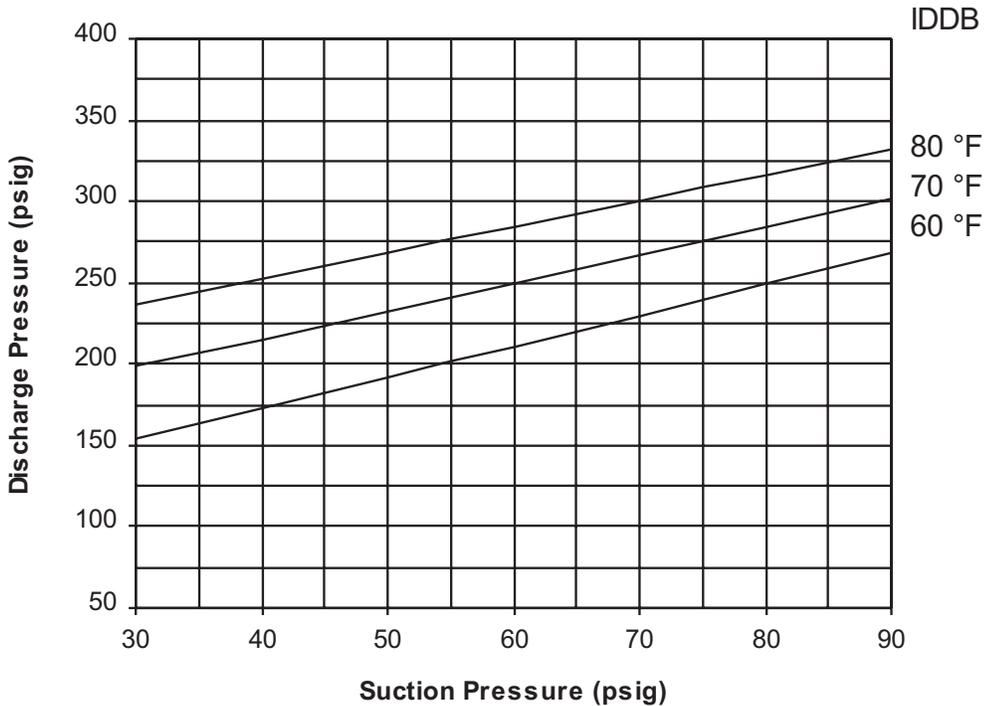


FIG. 11 - HEATING MODE CHARGING CHART AT 6600 CFM - EFB180A

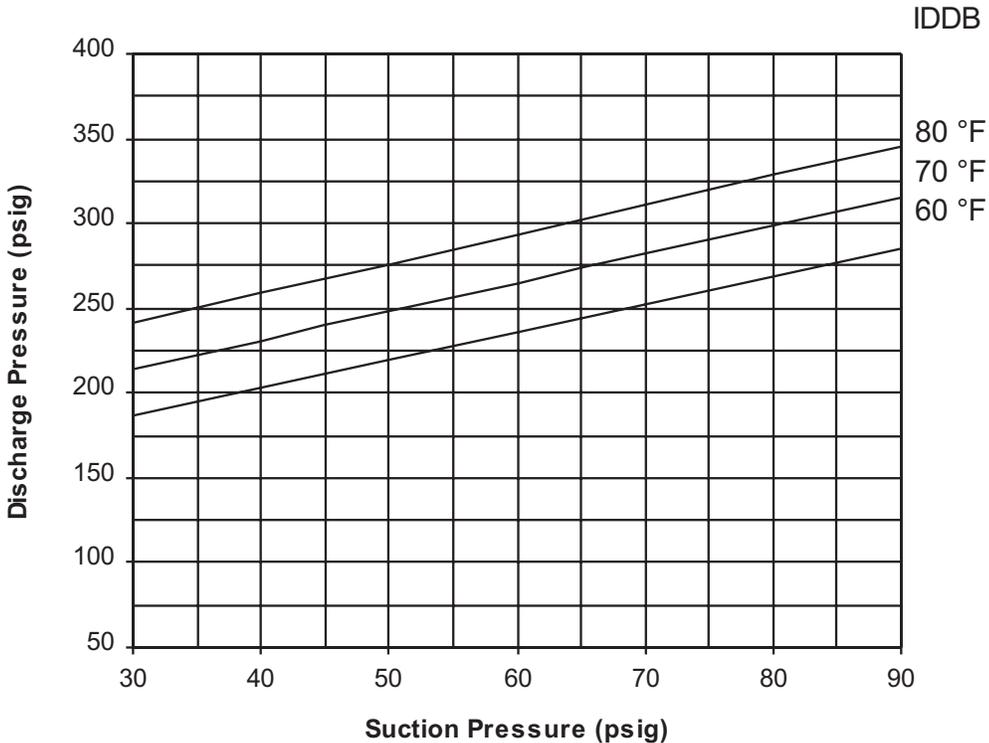


FIG. 12 - HEATING MODE CHARGING CHART AT 6400 CFM - EFB240A

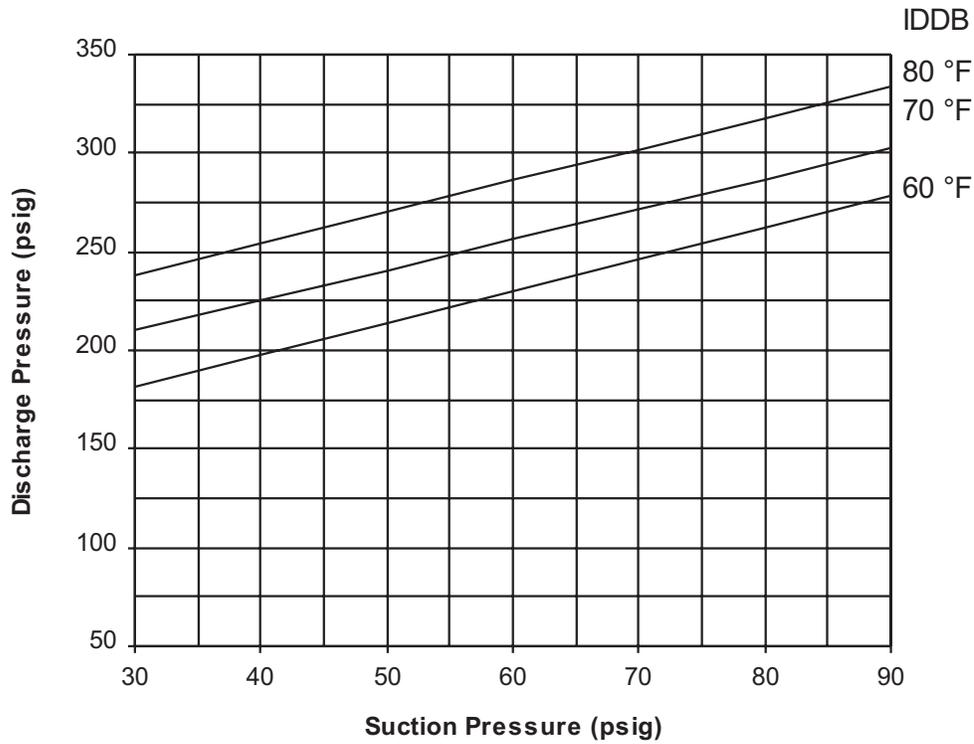


FIG. 13 - HEATING MODE CHARGING CHART AT 7000 CFM - EFB240A

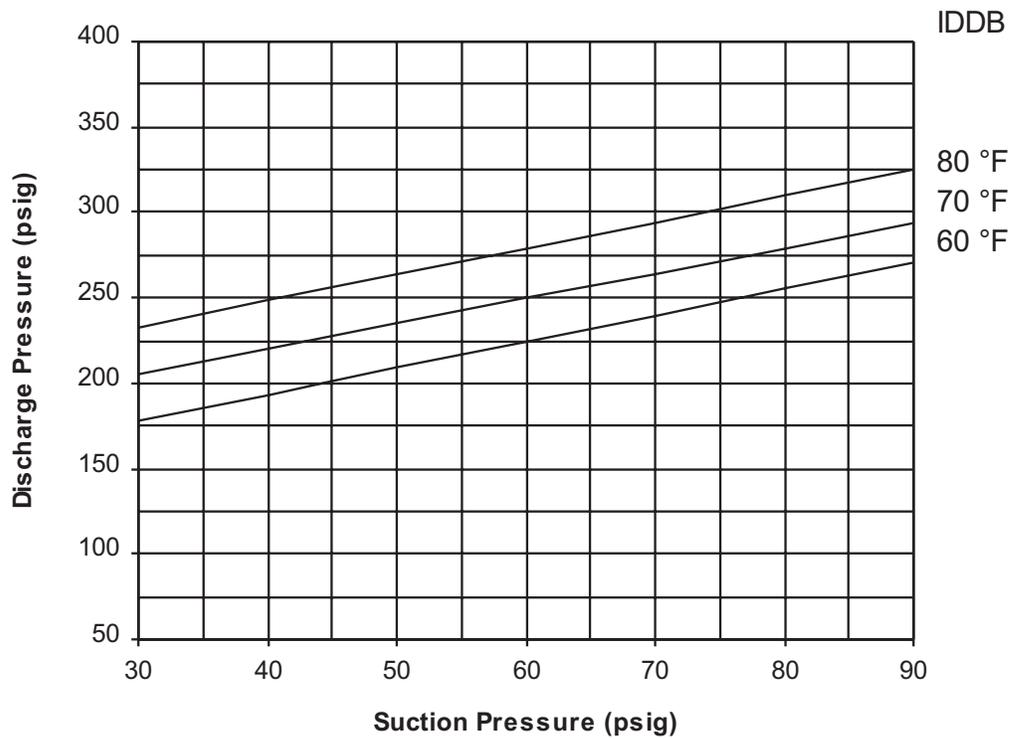


FIG. 14 - HEATING MODE CHARGING CHART AT 7600 CFM - EFB240A

NOTES



Heating and Air Conditioning

Unitary Products Group
5005 York Drive, Norman, Oklahoma 73069
Subject to change without notice. Printed in U.S.A.
Copyright © by York International Corporation 2001. All Rights Reserved.



36USC380
Proud Sponsor
of the 2000
U.S. Olympic Team

Code: SBY

035-16192-001-A-1001
Supersedes: 035-16192-000 (0601)