



## USER'S MANUAL

### Uninterruptible Power Supply GX 100 Series

(1kVA, 1.5kVA, 2kVA, 3kVA)

Model M-UPS010AD1B  
M-UPS015AD1B  
M-UPS020AD1B  
M-UPS030AD1B

## For Safe Use

- About handling of this manual

This manual describes important information for using this product safely. Please read this manual carefully before using this product. Use this product, after reading and understanding especially “Caution about Safety” and “Caution for Use” in this manual well. Furthermore, this manual should be retained for future reference.

## About “Use which Requires High Safety”

This product is designed and manufactured for the general use, such as general office use and personal use, and is not designed and manufactured for uses (control of nuclear reactions at the nuclear facilities, aircraft flight control, air traffic control, mass transport control, medical life support systems, and missile launch control in weapon systems, etc.) that require a high degree of safety, and can cause death or serious injury if the required safety is not maintained. Do not use this product without carrying out measures to ensure the required safety for such a use. If using this product for such a use, consult with our sales representatives.

## About Prevention of Radio Interference

| Important   |
|---|
| This product is class A information technology equipment based on the standard of Voluntary Control Council for Interference by Information Technology Equipment (VCCI). Using this product in a residential area may cause radio interference. In this case, the user may be requested to take an appropriate measure. |

## About Prevention of Harmonic Current Interference

This product is based on the Guideline of harmonic restraint measures for general-purpose UPS.

- Do not reproduce or reprint this manual without notice.



# Introduction

---

An uninterruptible power supply is a device for supplying stable electric power to OA devices, FA devices, and computer devices.

This manual describes installation, running, daily management, troubleshooting, and maintenance of an uninterruptible power supply. Use an uninterruptible power supply correctly in accordance with this manual.

In this manual, an uninterruptible power supply (this product) is described as UPS for short.

## ● Content and organization of this manual

The organization of this manual is as follows:

### Caution about Safety and Caution for Use

The cautions about safety are described. If you use the UPS, be sure to read this section.

#### 1 Unpacking

The cautions about taking out the UPS from a box are described.

#### 2 Outline

The name of each part and the operation mode of the UPS are described.

#### 3 Installation

Installation of the UPS and connection of the cable are described.

#### 4 Running

The methods of run and stop of the UPS are described.

#### 5 Inspection

The cautions about daily inspection and rolling blackouts are described.

#### 6 Troubleshooting

Troubleshooting is described.

#### 7 Maintenance

Replacement of battery and cooling fan and method of storage of the UPS are described.

#### 8 Appendix

Rated specification and the additional description for UL type are described.


Due to the purpose to use, the chapters which should be referred to especially are as follows.


- For installation personnel      Caution about Safety, Caution for Use, Chapters 1, 2, 3, and 4
- For users      Caution about Safety, Caution for Use, Chapters 2, 4, 5, and 6
- For maintenance personnel      Caution about Safety, Caution for Use, Chapters 2, 4, 5, and 7

- **About warning display**

In this manual, the following warning displays are described so that user or the people around the UPS do not suffer damage to the body and property.

---

 **Warning** “Warning” indicates that death or serious injury may result, if the UPS is not used correctly.

 **Caution** “Caution” indicates that slight or moderate injury may result or the UPS or user’s property may be damaged, if the UPS is not used correctly.

**Important** “Important” indicates caution about the use of the UPS.

---

- **About marks in this manual**

Marks in this manual have the following meanings:



The state of the UPS is described.



Have a look if necessary. How to deal with, the reference place, etc. are described.

---

- **About symbols of LED**

The states of LED are described by the following symbols:



: Lighting



: Blinking



: Not lighting

---

### Attention

- Information in this manual is subject to change without notice.

# Caution about Safety

---

- **List of important warnings**

The important warnings described in this manual are as follows.



**Warning** “Warning” indicates that death or serious injury may result, if the UPS is not used correctly.

**Electric shock** **Do not remove the cover of the UPS.**

Since there are some portions with high voltage in the inside of the UPS, there is fear of an electric shock.

---



**Caution**

“Caution” indicates that slight or moderate injury may result or the UPS or user’s property may be damaged, if the UPS is not used correctly.

**Electric shock** **Put neither a stick nor a finger into the cooling fan or the vent hole.**

**Injury**

There is fear of an electric shock or an injury.

---

**Electric shock** **Only maintenance personnel must perform the maintenance other than daily inspection, such as the replacement of battery and cooling fan.**

There is fear of an electric shock.

**Connect an AC input plug to a grounding power receptacle, or connect a grounding wire to a ground terminal. (class D grounding)**

There is fear of an electric shock.

**A commercial power ordinarily has electrodes of a grounding side and an un-grounding side apart from a grounding electrode (ground). Be sure to confirm before connecting.**

If connected in reverse, there is fear of the malfunction by noise or the electric shock.

**When inspecting or maintaining the connection device (a device getting connected to the UPS) or the UPS, turn off the connection device and the UPS. And in the case of M-UPS010AD1B and M-UPS015AD1B, pull out the AC input plug on the back of the UPS from an input power receptacle. In the case of M-UPS020AD1B and M-UPS030AD1B, turn off the input breaker on the back of the UPS, and cut off connection with AC input terminal (R, S).**


There is fear of an electric shock.

---

## Caution about Safety

---

|                          |   |
|--------------------------|---|
| <b>Injury</b>            | <b>Do not ride on or put an object on the UPS.</b><br>There is fear of an injury or an overturn.  |
| <b>Injury<br/>Damage</b> | <b>The UPS is heavy. Pay enough attention to handling the UPS.</b><br>Take out the UPS in a level and flat place. Pay enough attention to prevent an accident such as an overturn or a drop. The weight of the UPS is as follows: <ul style="list-style-type: none"><li>• M-UPS010AD1B : 13.5kg (without battery : 7.5kg)</li><li>• M-UPS015AD1B : 21.5kg (without battery : 12.5kg)</li><li>• M-UPS020AD1B : 33kg (without battery : 21kg)</li><li>• M-UPS030AD1B : 39kg (without battery: 21kg)</li></ul> |
| <b>Fire<br/>Damage</b>   | <b>This UPS can be installed laying down. If installing laying the UPS down, tilt it only to the right side, seeing from the front. Never tilt the UPS to the left side.</b><br>There is fear of a fire or the UPS failure owing to a leak of battery.  |

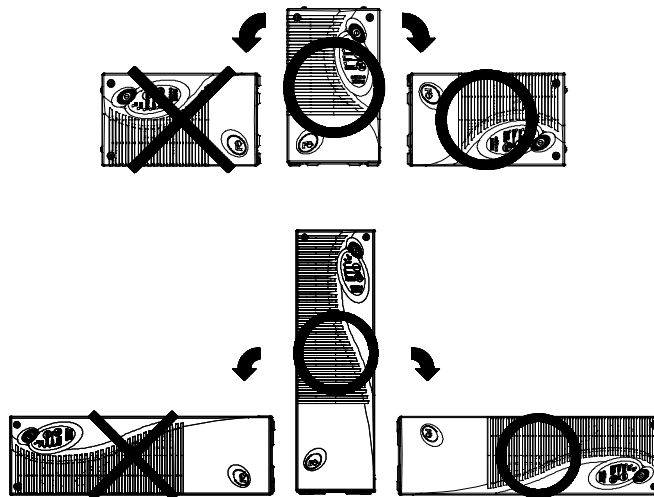

**Damage**      **Do not use the UPS for the uses that may hurt the human body or exert an important influence on the society and public.**

- Medical equipment directly affecting human life
- Device that may affect the human body
- Socially and publicly important computer system

**Do not put an object (CRT display or floppy disk, etc.) vulnerable to magnetism around the UPS.**

There is fear of exerting a bad influence on the object.

**Confirm that the voltage set up by the switch of voltage setting is within the range of input voltage of the connection device.**

There is fear of damaging the connection device.

**Do not operate the switch of voltage setting during operation of the UPS.**

There is fear of damaging the connection device, since the changed voltage is outputted at the restart. And even if operating the switch during operation of the UPS, the output voltage cannot be changed.

**Replace the battery periodically.**

If continuing to use the UPS that the battery life ended, there is fear of a leak of battery and a smoke.

**Replace the battery with one specified by our company and a new one.**

If using the un-specified battery or mixing an old battery and a new battery, it becomes the cause of failure and trouble of the UPS.

**When performing the rolling blackouts or when pulling out the AC input plug from an input power receptacle or turning off the input breaker on the back of the UPS, confirm that the RUN LED (green) is blinking slowly (in the cycles of approximately 1.6 sec.).**

If the breaker of the distribution board is turned off or the AC input plug is pulled out from an input power receptacle or the input breaker on the back of the UPS is turned off, when the RUN LED is lighting, the internal battery will be discharged, since it will be in the same state as a power failure.

There is fear of the battery deterioration or a shortening of a cycle of battery replacement.

---

● **Warning label**

A warning label is stuck on the UPS.

- Never remove the label.
- This warning label is for the UPS users.



# Caution for Use

---

Be careful about the following when using the UPS.

|                  |   |
|------------------|---|
| <b>Important</b> | “Important” indicates caution about the use of the UPS. |
|------------------|---|

**Do not install and store the UPS in the following places:**

- In an outdoor location
- A place exposed to the elements
- An extremely humid place and a dusty place
- A place with corrosive gas or salinity
- A place subjected to direct sunlight
- A place near sparks or heating element
- An extremely hot or cold place or place where the temperature fluctuates greatly
- A place where vibration and a shock are added

**Do not perform the battery check in succession.**

When the battery check is performed, the internal battery is actually discharged and the voltage is checked.

If the battery check is performed in succession, there is fear of the battery deterioration or a shortening of a cycle of battery replacement.

**If the UPS is not used for a long time, charge the battery every two months.**

Charge the battery by operating the UPS 12 hours or more every two months, and after charging the battery, perform the battery check.

If the UPS is left without operating for a long time, there is a possibility that the UPS get unusable since the battery becomes an over-discharge state due to self-discharge.

**The disposal of used battery has legal restrictions.**

Commission industrial waste disposal contractor, or consult with an agent from which you purchased the UPS, or a maintenance company.

**Do not block the vent hole and cooling fan or use the UPS in a stuffy place.**

The vent hole and cooling fan are equipped in order to cool the inside of the UPS.

There is a possibility that the inside and ambient temperature of the UPS may get out of the rated specification.

**Replace the cooling fan periodically.**

If continuing to use the UPS that the fan life ended, there is a possibility that the inside temperature of the UPS may get out of the rated specification.

**Do not use 5 to 9 of the switch of voltage setting.**

It becomes impossible for the UPS to start up normally.

---

---

**The permissible voltage between the input electric cable of the UPS and the ground is 230 VAC.**

If the voltage more than 230 VAC is applied, the filter circuit of the input part may be damaged.

**The permissible input surge voltage of the UPS is 5kV peak ( $1.2 \times 50\mu\text{s}$ ). However, if the model of the UPS is "-UC", it is 2kV peak ( $1.2 \times 50\mu\text{s}$ ).**

If the surge voltage more than 5kV peak ("-UC" is 2kV peak) is applied, the filter circuit of the input part may be damaged.

**The input voltage of the UPS is 85 to 138 VAC.**

When input voltage is different from the rated specification (200 VAC, etc.), install a transformer at the outside of the UPS to convert voltage. If the voltage more than the range of the input voltage is applied, the UPS may be damaged.

**Connect the UPS to an input power supply within the range of the rated input voltage of the connection device.**

At the bypass operation, the input voltage of the UPS is outputted to the connection device directly. If the voltage more than the range of the rated input voltage of the connection device is applied, the connection device may be damaged.

**Do not apply single-line grounding on the output side.**

Between the input and output of the UPS is not insulated. Therefore, do not apply single-line grounding on the output side.

There is a possibility of becoming the cause of the trouble by noise or the failure.


**When connecting the UPS to a three-phase power supply system, be sure to connect the grounding phase of the three-phase power supply system to the electrode of a grounding side of the AC input of the UPS.**

If connecting to an un-grounding power supply, there is a possibility of becoming the cause of the malfunction.

**When using a generator temporarily during the rolling blackouts, use a generator satisfying the following specification.**

If connecting a generator not satisfying the following specification to the input part of the UPS, there is a possibility of becoming the cause of the malfunction or damage of the UPS.

- Voltage variation: 85 to 138 VAC
- Frequency variation: within rated frequency  $\pm 5\%$  (1Hz/sec.)
- Voltage waveform distortion: within 5%
- Voltage zero-cross condition: Zero-cross must not occur twice or more in 1 cycle.

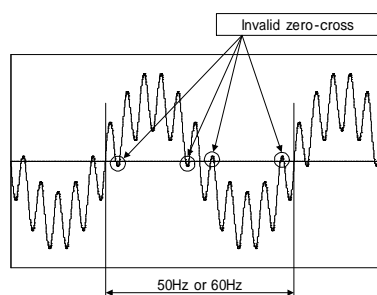

# Index


|   |           |
|---|-----------|
| Introduction.....   | i         |
| Caution about Safety .....  | iii       |
| Caution for Use.....  | vi        |
| <b>1 Unpacking</b>  |           |
| <b>1.1 Opening the Packing .....</b>  | <b>1</b>  |
| ● Opening the packing   |           |
| ● Confirming the contents of the packing                                      |           |
| <b>2 Outline</b>  |           |
| <b>2.1 Name and Main Function of Each Part .....</b>                          | <b>2</b>  |
| <b>2.2 Operation Mode of the UPS .....</b>                                    | <b>4</b>  |
| ● At the normal operation   |           |
| ● At the battery operation (In the event of an input power failure)           |           |
| ● At the bypass operation (In the event of the abnormalities inside the UPS ) |           |
| <b>3 Installation</b>   |           |
| <b>3.1 Installing the UPS.....</b>  | <b>6</b>  |
| ● Caution about installation  |           |
| ● Determining an installation location  |           |
| ● Determining the installation method   |           |
| ● Installation method of M-UPS020AD1B and M-UPS030AD1B                        |           |
| <b>3.2 Connecting the Cable .....</b>   | <b>10</b> |
| ● Caution about connecting the cable  |           |
| ● Preparation before connecting the cable                                     |           |
| ● Connecting the output cable   |           |
| ● Connecting the input cable  |           |
| <b>3.3 Interface Port.....</b>  | <b>15</b> |
| ● CN1 (Standard monitoring interface)   |           |
| ● CN2 (Computer interface)  |           |
| <b>3.4 Setting up the Output Voltage .....</b>                                | <b>17</b> |
| ● The setup procedures of the rated output voltage                            |           |
| <b>4 Running</b>  |           |
| <b>4.1 Turning on the UPS.....</b>  | <b>19</b> |
| ● Confirming cable connection   |           |
| ● Turning on the UPS  |           |
| ● Turning on the connection device  |           |
| <b>4.2 Turning off the UPS.....</b>   | <b>22</b> |
| ● Turning off the connection device   |           |
| ● Turning off the UPS   |           |
| <b>5 Inspection</b>   |           |
| <b>5.1 Care and Daily Inspection .....</b>                                    | <b>24</b> |
| ● How to care for the UPS   |           |
| ● Daily inspection  |           |

|     |   |    |
|-----|---|----|
| 5.2 | <b>Caution and Measures for the Rolling Blackouts</b> ..... | 26 |
|     | ● Operation before the rolling blackouts                    |    |
|     | ● Operation after the rolling blackouts                     |    |
| 5.3 | <b>Inspecting the Battery (Battery Check)</b> .....         | 28 |
|     | ● Confirming the state of the UPS                           |    |
|     | ● Using the manual check function                           |    |
|     | ● Charging the battery                                      |    |
| 6   | <b>Troubleshooting</b>                                      |    |
| 6.1 | <b>If a Warning Beep Sounds</b> .....                       | 32 |
| 6.2 | <b>Operation Mode List</b> .....                            | 33 |
|     | ● Types of blink of LED                                     |    |
|     | ● Types of the warning beep                                 |    |
|     | ● Operation mode list                                       |    |
| 7   | <b>Maintenance</b>  |    |
|     | <b>Replacing the Battery</b> .....                          | 38 |
|     | ● Timing of the battery replacement                         |    |
|     | ● The method of battery replacement                         |    |
|     | ● Disposal and storage of battery                           |    |
| 7.2 | <b>Replacing the Cooling Fan</b> .....                      | 41 |
|     | ● Timing of the cooling fan replacement                     |    |
|     | ● The method of cooling fan replacement                     |    |
| 7.3 | <b>When Not Using the UPS (Storage)</b> .....               | 42 |
|     | ● Work before storage                                       |    |
|     | ● If a storage period exceeds two months                    |    |
| 8   | <b>Appendix</b>   |    |
| 8.1 | <b>Rated Specification</b> .....                            | 43 |
| 8.2 | <b>Additional Description for UL Type</b> .....             | 46 |

# 1 Unpacking

## 1.1 Opening the Packing

- Opening the packing

|  <b>Caution</b> |  |
|--|--|
| <b>Injury<br/>Damage</b>   | <b>The UPS is heavy. Pay enough attention to handling the UPS.</b><br>Take out the UPS in a level and flat place. Pay enough attention to prevent an accident such as an overturn or a drop. The weight of the UPS is as follows: <ul style="list-style-type: none"><li>• M-UPS010AD1B : 13.5kg(without battery: 7.5kg)</li><li>• M-UPS015AD1B : 21.5kg(without battery: 12.5kg)</li><li>• M-UPS020AD1B : 33kg (without battery: 21kg)</li><li>• M-UPS030AD1B : 39kg (without battery: 21kg)</li></ul> |

1. Open the packing box and take out the UPS.

- Confirming the contents of the packing

2. Confirm that there is no damage in the appearance of the UPS.

3. Confirm that all accessories are contained.

| UPS model                | Accessories  | No. of pcs      |
|--------------------------|--|-----------------|
| M-UPS010AD1B<br>(1kVA)   | User's manual (this document)<br>Guarantee (this document)                               | 1 copy          |
| M-UPS015AD1B<br>(1.5kVA) | User's manual (this document)<br>Guarantee (this document)                               | 1 copy          |
| M-UPS020AD1B<br>(2kVA)   | User's manual (this document)<br>Guarantee (this document)<br>Bracket (with 6 setscrews) | 1 copy<br>1 set |
| M-UPS030AD1B<br>(3kVA)   | User's manual (this document)<br>Guarantee (this document)<br>Bracket (with 6 setscrews) | 1 copy<br>1 set |




If the UPS has damage, or accessories are missing:  
Contact an agent from which you purchased the UPS.

# 2 Outline


## 2.1 Name and Main Function of Each Part

This chapter describes the name and main function of each part of the UPS.

M-UPS010AD1B, M-UPS015AD1B

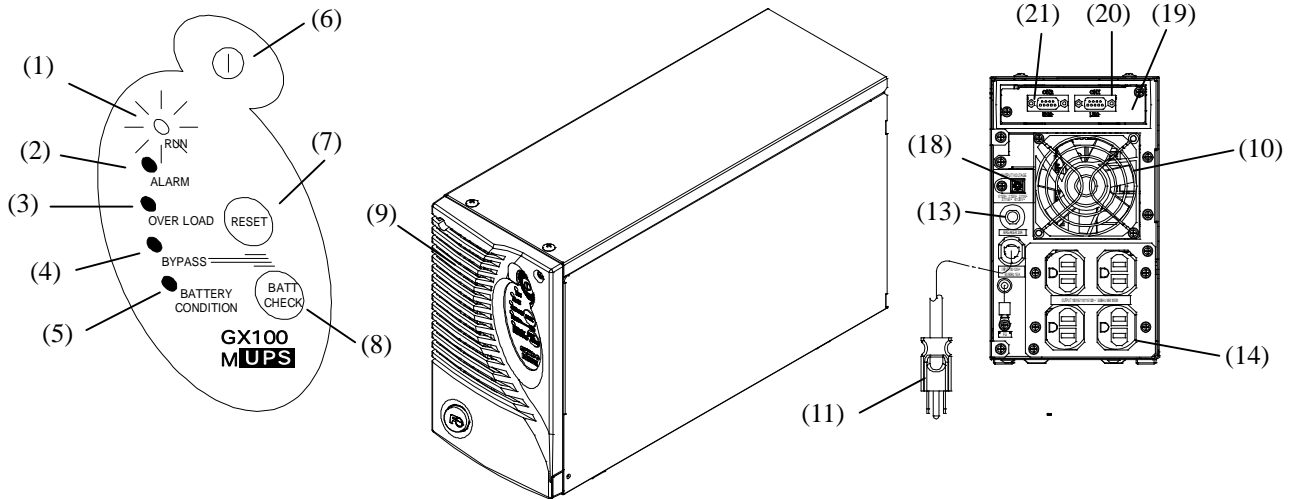

M-UPS020AD1B, M-UPS030AD1B

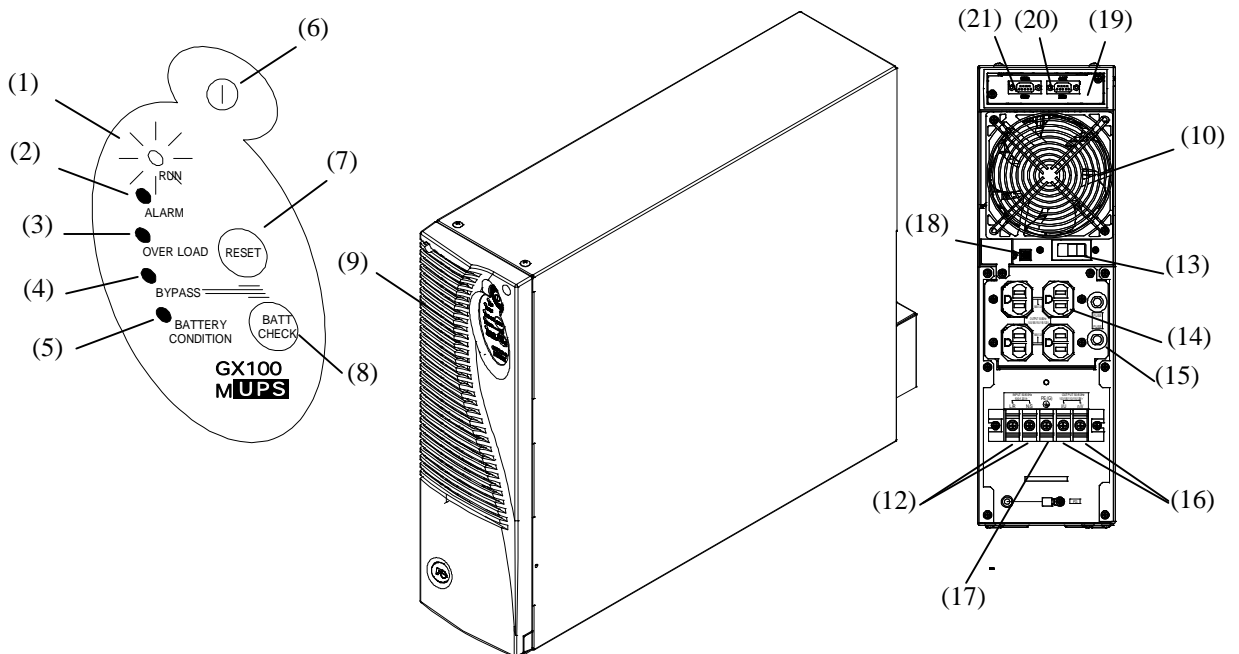


|      | Name   | Main function  |
|------|--|--|
| (1)  | LED  | RUN<br>It blinks (green) when the UPS is connected to an input power supply.<br>It lights up (green) while the UPS is operating normally.  |
| (2)  |  | ALARM<br>It lights up (orange) when the abnormalities occurred inside the UPS.   |
| (3)  |  | OVER LOAD<br>It lights up (orange) when the load capacity of the connection device exceeded the rated specification.   |
| (4)  |  | BYPASS<br>It lights up (orange) while the UPS is performing the bypass operation.  |
| (5)  |  | BATTERY CONDITION<br>When the battery is normal, it indicates the amount of battery charge according to the sort (not lighting/blinking/lighting) of lighting (green).<br>When the battery is abnormal, it lights up (orange).   |
| (6)  | Switch   | RUN/STOP<br>It is the switch for performing operation and stop of the UPS. RUN and STOP are switched every time this switch is pressed for approximately 1 second.   |
| (7)  |  | RESET<br>Press this switch when stopping the warning beep. Also, if this switch is pressed for approximately 3 seconds after the failure is restored, the ALARM LED goes out.  |
| (8)  |  | BATT CHECK<br>It is the switch for performing the battery check manually. By pressing the switch for approximately 2 seconds, the battery check is performed.  |
|      |  | BYPASS<br>Press switch (7) and (8) for approximately 3 seconds simultaneously when switching to the bypass operation forcibly (manually) while the UPS is operating normally. When the switches are pressed for approximately 3 seconds simultaneously again, the UPS returns to the normal operation. |
| (9)  | Vent hole  | The inside of the UPS is ventilated. The direction of air is intake.   |
| (10) | Cooling fan  | The inside of the UPS is cooled. The direction of air is exhaust.  |
| (11) | AC input plug<br>[only M-UPS010AD1B and M-UPS015AD1B]          | Connect to an input power supply.  |
| (12) | Input terminal block<br>[only M-UPS020AD1B and M-UPS030AD1B]   | Connect to an input power supply.  |
| (13) | Input breaker  | It is the breaker for protecting the input circuit.  |
| (14) | AC outlet  | Connect the input plug of the connection device.   |
| (15) | Output breaker<br>[only M-UPS020AD1B and M-UPS030AD1B]         | It is the breaker for protecting the AC outlet.  |
| (16) | Output terminal block<br>[only M-UPS020AD1B, and M-UPS030AD1B] | Connect to an output system.   |
| (17) | Ground terminal<br>[only M-UPS020AD1B, and M-UPS030AD1B]       | Connect a grounding wire.  |
| (18) | Switch of voltage setting                                      | Set up the output voltage.   |
| (19) | Interface slot   | Mount various interface cards.   |
| (20) | Standard monitoring interface (CN1)                            | Output a no-voltage contact signal.  |
| (21) | Computer interface (CN2)                                       | It is a computer interface.  |

## 2.2 Operation Mode of the UPS

- **At the normal operation**

While the UPS is operating normally, the UPS operates an AC power supply as an input, and supplies the output of constant voltage to connection device. Simultaneously, the UPS charges an internal battery and prepares for the battery operation.

Output frequency synchronizes with input frequency.

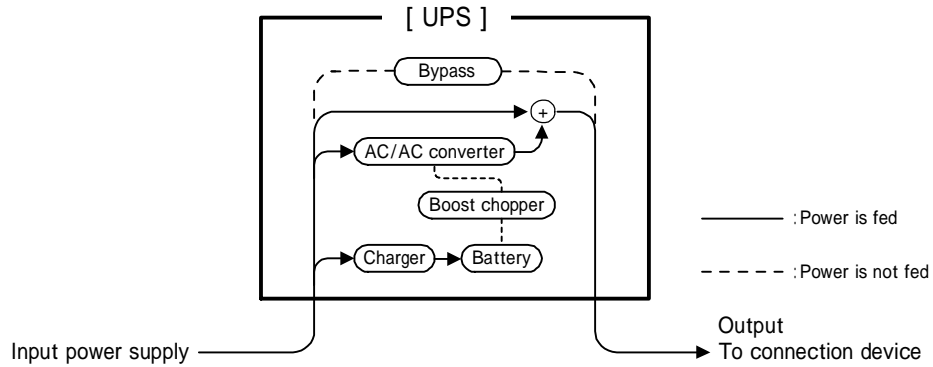


Electricity flow during normal operation

- **At the battery operation (In the event of an input power failure)**

When the power failure or the abnormalities of voltage or frequency of an input power supply occur while the UPS is operating, the UPS starts the electric discharge from the battery, and continues to supply the stable electric power to the connection device. In addition, the changeover to the battery operation is performed without instantaneous power interruption.

If the input power supply returns (the voltage of the input power supply returns within the rated specification), the UPS will return to the above normal operation automatically.

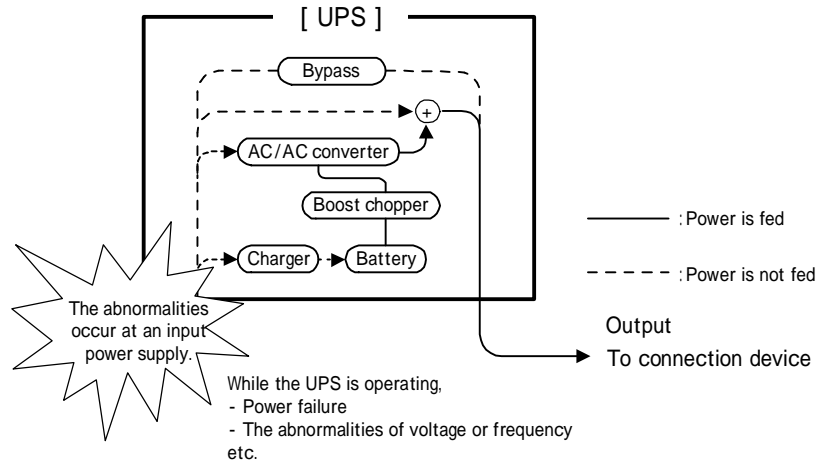

Electricity flow during battery operation




- **At the bypass operation (In the event of the abnormalities inside the UPS)**

When the abnormalities occur inside the UPS, an output changeover circuit switches to a bypass circuit, and continues to supply electric power through the bypass circuit to the connection device.

In the case of M-UPS010AD1B and M-UPS015AD1B, it takes some time (10ms or less) to change the circuit. In the case of M-UPS020AD1B and M-UPS030AD1B, it can be switched without instantaneous power interruption.

It is also the same as when switching to the bypass operation manually with the switch on the front of the UPS.

At the bypass operation, electric power is not supplied (battery operation) from the battery to the connection device.

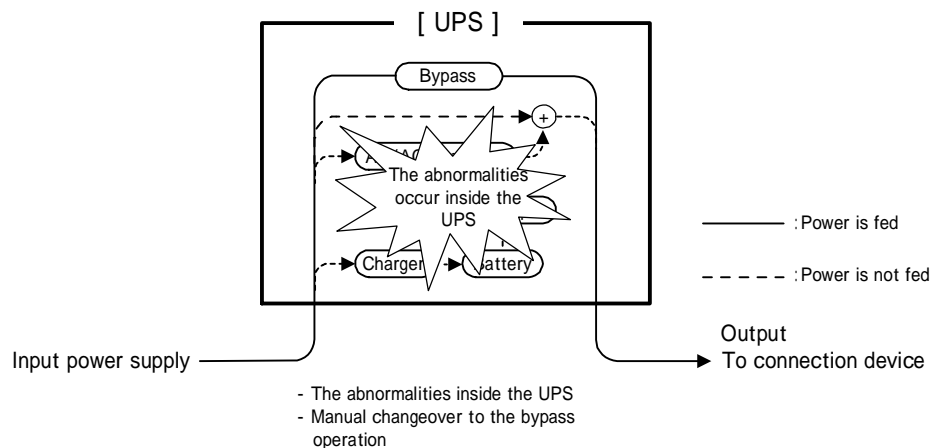


Electricity flow during bypass operation

# 3 Installation

## 3.1 Installing the UPS

- **Caution about installation**


|  <b>Caution</b> |  |
|--|--|
| <b>Injury</b>  | <b>Do not ride on or put an object on the UPS.</b><br>There is fear of an injury or an overturn.   |
| <b>Damage</b>  | <b>Do not put an object (CRT display or floppy disk, etc.) vulnerable to magnetism around the UPS.</b><br>There is fear of exerting a bad influence on the object. |

- **Determining an installation location**


| <b>Important</b>  |
|---|
| <p><b>Do not install the UPS in the following places:</b></p> <ul style="list-style-type: none"><li>• In an outdoor location</li><li>• A place exposed to the elements</li><li>• An extremely humid place and a dusty place</li><li>• A place with corrosive gas or salinity</li><li>• A place subjected to direct sunlight</li><li>• A place near sparks or heating element</li><li>• An extremely hot or cold place or place where the temperature fluctuates greatly</li><li>• A place where vibration and a shock are added</li></ul> |
| <p><b>Do not use the UPS in a residential area or its adjacent area.</b></p> <p>This UPS is class A information technology equipment based on the standard of Voluntary Control Council for Interference by Information Technology Equipment (VCCI). Using this UPS in a residential area may cause radio interference. In this case, the user may be requested to take an appropriate measure.</p>   |
| <p><b>Do not block the vent hole and cooling fan or use the UPS in a stuffy place.</b></p> <p>The vent hole and cooling fan are equipped in order to cool the inside of the UPS. There is a possibility that the inside and ambient temperature of the UPS may get out of the rated specification.</p>  |

The following spaces are required for an installation location.

- The UPS takes in air through the vent hole on the front of the UPS and exhausts air through the cooling fan on the back of the UPS. Therefore, the space of 10cm or more is required in the front and rear of the UPS.

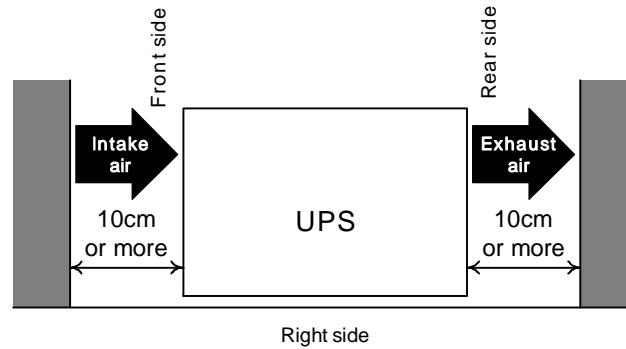


When performing maintenance of the UPS:  
The space of approximately 1m is required in the front and rear of the UPS.

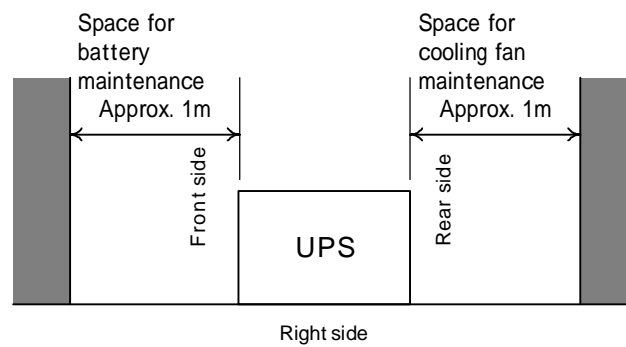


Confirm the environment of the installation location. The recommended environment in consideration of the battery life, etc. is as follows.


| Item        | Recommended environment     |
|-------------|-----------------------------|
| Temperature | 15 to 25 degrees C          |
| Humidity    | 30 to 70% (no condensation) |

● Determining the installation method


 **Caution**

**Fire Damage**      This UPS can be installed laying down. If installing laying the UPS down, tilt it only to the right side, seeing from the front. Never tilt the UPS to the left side.  
There is fear of a fire or the UPS failure owing to a leak of battery.

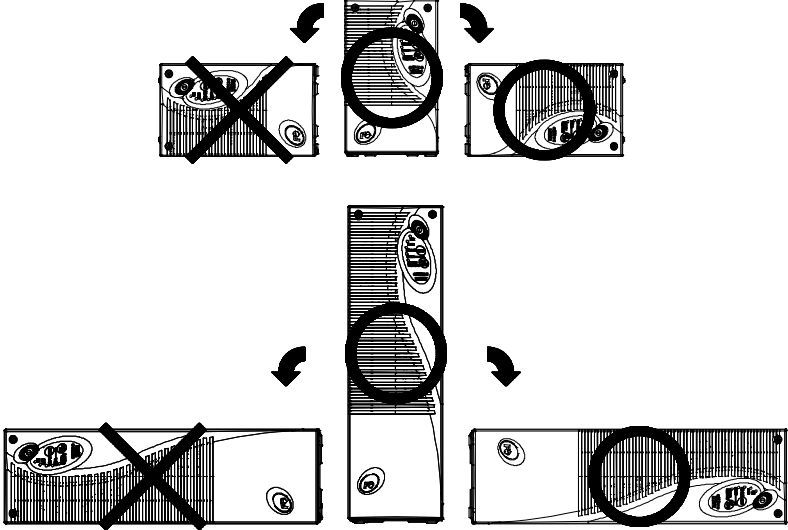


 This UPS can be put in a 19-inch rack using the optional rack mount attachment kit.

● Installation method of M-UPS020AD1B and M-UPS030AD1B


|  Caution |  |
|---|--|
| <b>Injury</b>   | <b>The UPS is heavy. Pay enough attention to handling the UPS.</b>   |
| <b>Damage</b>   | Take out the UPS in a level and flat place. Pay enough attention to prevent an accident such as an overturn or a drop. The weight of the UPS is as follows: <ul style="list-style-type: none"> <li>• M-UPS020AD1B : 33kg (without battery: 21kg)</li> <li>• M-UPS030AD1B : 39kg (without battery: 21kg)</li> </ul> |

When using the bracket (standard attachment) to fasten the UPS to the floor, first fasten the bracket to the UPS, and fasten the bracket to the floor. This bracket is for preventing an overturn of the UPS.

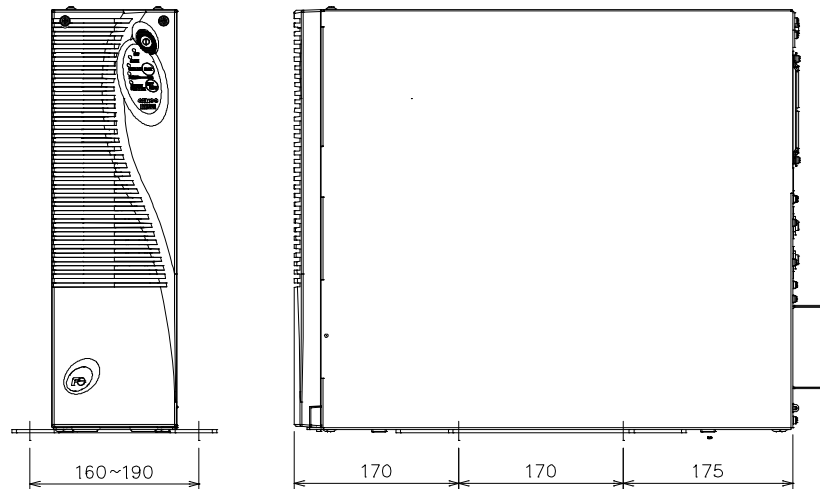


The method of bracket attachment is as follows.

- Tilt the UPS gently to the right and attach the attached bracket to the bottom of the UPS with 6 screws.

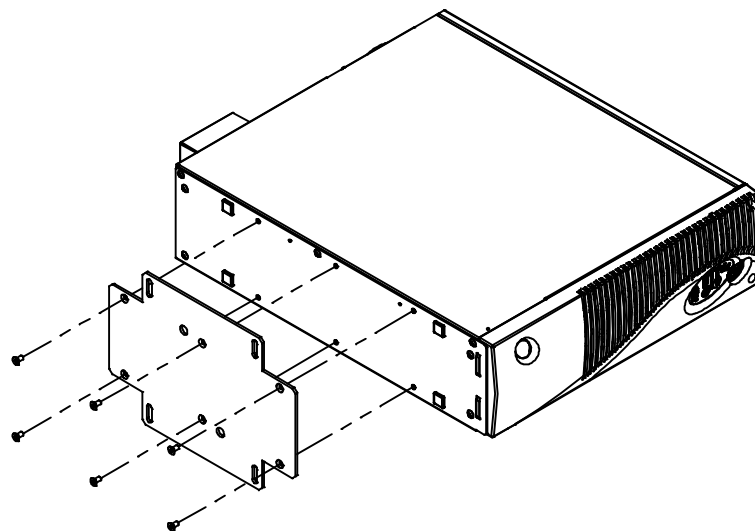

## 3.2 Connecting the Cable

- **Caution about connecting the cable**

|  <b>Caution</b> |  |
|--|--|
| <b>Electric shock</b>  | <p><b>Connect an AC input plug to a grounding power receptacle, or connect a grounding wire to a ground terminal. (class D grounding)</b></p> <p>There is fear of an electric shock.</p> <p><b>A commercial power ordinarily has electrodes of a grounding side and an un-grounding side apart from a grounding electrode (ground). Be sure to confirm before connecting.</b></p> <p>If connected in reverse, there is fear of the malfunction by noise or the electric shock.</p> |

| <b>Important</b>   |  |
|--|--|
| <p><b>The permissible voltage between the input electric cable of the UPS and the ground is 230 VAC.</b></p> <p>If the voltage more than 230 VAC is applied, the filter circuit of the input part may be damaged.</p>  |  |
| <p><b>The permissible input surge voltage of the UPS is 5kV peak (1.2 × 50μs). However, if the model of the UPS is "-UC", it is 2kVpeak (1.2 × 50μs).</b></p> <p>If the surge voltage more than 5kV peak ("-UC" is 2kV peak) is applied, the filter circuit of the input part may be damaged.</p>  |  |
| <p><b>The input voltage of the UPS is 85 to 138 VAC.</b></p> <p>When input voltage is different from the rated specification (200 VAC, etc.), install a transformer at the outside of the UPS to convert voltage. If the voltage more than the range of the input voltage is applied, the UPS may be damaged.</p>  |  |
| <p><b>Connect the UPS to an input power supply within the range of the rated input voltage of the connection device.</b></p> <p>At the bypass operation, the input voltage of the UPS is outputted to the connection device directly. If the voltage more than the range of the rated input voltage of the connection device is applied, the connection device may be damaged.</p> |  |
| <p><b>Do not apply single-line grounding on the output side.</b></p> <p>Between the input and output of the UPS is not insulated. Therefore, do not apply single-line grounding on the output side.</p> <p>There is a possibility of becoming the cause of the trouble by noise or the failure.</p>  |  |

● **Preparation before connecting the cable**

| Important   |
|---|
| <p><b>When connecting the UPS to a three-phase power supply system, be sure to connect the grounding phase of the three-phase power supply system to the electrode of a grounding side of the AC input of the UPS.</b></p> <p>If connecting to an un-grounding power supply, there is a possibility of becoming the cause of the malfunction.</p> <p><b>When using a generator temporarily during the rolling blackouts, use a generator satisfying the following specification.</b></p> <p>If connecting a generator not satisfying the following specification to the input part of the UPS, there is a possibility of becoming the cause of the malfunction or damage of the UPS.</p> <ul style="list-style-type: none"> <li>• Voltage variation: 85 to 138 VAC</li> <li>• Frequency variation: within rated frequency <math>\pm 5\%</math> (1Hz/sec.)</li> <li>• Voltage waveform distortion: within 5%</li> <li>• Voltage zero-cross condition: Zero-cross must not occur twice or more in 1 cycle.</li> </ul> |
|   |

1. Confirm the input power supply. The input power supply which can connect with this UPS is as follows.

| UPS model              | Breaker capacity | Input capacity                                  | Input voltage | Input frequency          | Number of phase       |
|------------------------|------------------|---|---------------|--------------------------|-----------------------|
| M-UPS 010AD1B (1kVA)   | 15A or more      | 1kVA or more                                    | 85 to 138 VAC | 50/60Hz $\pm 5\%$ (Note) | Single-phase two-wire |
| M-UPS 015AD1B (1.5kVA) | 20A or more      | 1.5kVA or more (-L)<br>1.2kVA or more (-U, -UC) |               |                          |                       |
| M-UPS 020AD1B (2kVA)   | 30A or more      | 2kVA or more                                    |               |                          |                       |
| M-UPS 030AD1B (3kVA)   | 40A or more      | 3kVA or more                                    |               |                          |                       |

Remarks If the input voltage and the frequency are out of this range, the UPS may become the following state or be damaged.



When the UPS is turned on:

The UPS will become the “input error at startup”. In this case, the UPS cannot be started up.

### 3 Installation



While the UPS is operating:

“Abnormalities of input voltage” is detected and the battery operation is performed. If the UPS is connected to an input power supply which gets out of this range frequently, by repeating the charge and discharge of the battery, the battery will be in an empty state or will become the cause of deterioration.

Note) The input frequency is automatically chosen according to the area in which the UPS is used.

- The specifications of the AC input plug and AC outlet of M-UPS010AD1B and M-UPS015AD1B are as follows. Prepare an input power receptacle and the plug of connection device which are suitable for specification.

| UPS side      | Specification  | Connect with              |
|---------------|--|---------------------------|
| AC input plug | Parallel 2 pole, grounding plug with a cord<br>(the length of a cord : approximately 2m) | Input power receptacle    |
| AC outlet     | Parallel 2 pole, grounding outlet × 4<br>(Rating capacity 125V, 15A)                     | Plug of connection device |




If there is no ground in an input power receptacle:

Connect the grounding wire to the ground terminal of AC input plug.

- The specifications of the input and output terminal block and AC outlet of M-UPS020AD1B and M-UPS030AD1B are as follows. Select the crimp-type terminal and the plug of connection device which are suitable for specification.

| UPS side                        | Specification  |                               |                            | Connect with                         |
|---------------------------------|--|-------------------------------|----------------------------|--------------------------------------|
| Input and output terminal block | Terminal marking   | Connection                    | Figuration                 | Input power supply and output system |
|                                 | L/R  | AC input (un-grounding side)  | 5 pole screw terminal (M5) |                                      |
|                                 | N/S  | AC input (grounding side)     |                            |                                      |
|                                 | l/U  | AC output (un-grounding side) |                            |                                      |
|                                 | n/V  | AC output (grounding side)    |                            |                                      |
|                                 | PE(G)  | Ground (protective grounding) |                            |                                      |
| AC outlet                       | Parallel 2 pole, grounding outlet × 4<br>(Rating capacity 125V, 15A) |                               |                            | Plug of connection device            |

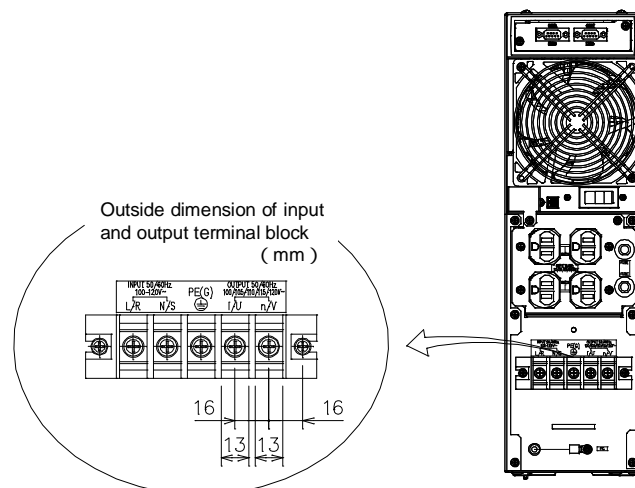




## ● Connecting the output cable


1. In the case of M-UPS010AD1B and M-UPS015AD1B, connect the plug of connection device to the AC outlet on the back of the UPS.  
Confirm that the ground is connected.

Note) Connect the connection device so that the total of the capacity of connection device is below 700W (M-UPS010AD1B), below 1050W (M-UPS015AD1B (-L)), or below 900W (M-UPS015AD1B (-U, -UC)) and the total of one horizontal row (two outlets) of AC outlet is below 12A and the total of two horizontal rows (four outlets) of AC outlet is below 15A.

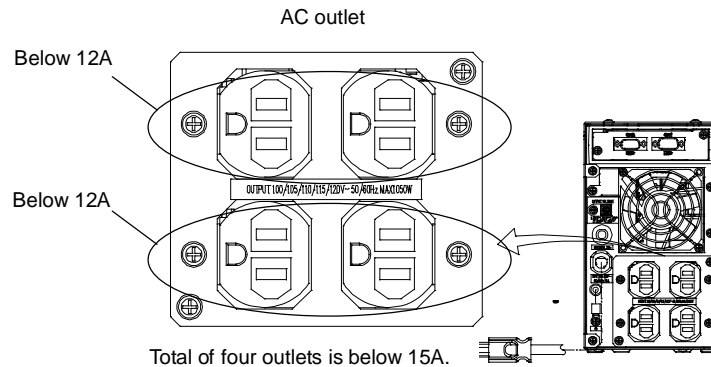

2. In the case of M-UPS020AD1B and M-UPS030AD1B, remove the terminal block cover on the back of the UPS, and connect the AC output cable to the output terminal block. And connect the plug of connection device to the AC outlet on the back of the UPS.  
Confirm that the ground is connected.

Note) Connect the connection device so that the total of the capacity of connection device is below 1400W (M-UPS020AD1B) or 2100W (M-UPS030AD1B) and the total of one horizontal row (two outlets) of AC outlet is below 12A or the total of the AC outlet and the input-output terminal block is below 30A.

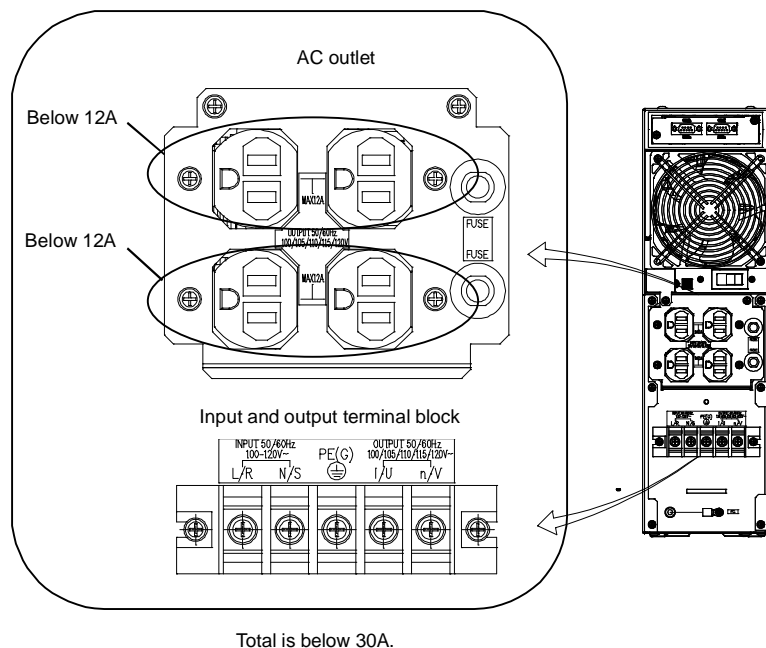


- **Connecting the input cable**

1. In the case of M-UPS010AD1B and M-UPS015AD1B, connect the AC input plug on the back of the UPS to an input power receptacle.  
Confirm that the ground is connected.
2. In the case of M-UPS020AD1B and M-UPS030AD1B, remove the terminal block cover on the back of the UPS, and connect the AC input cable to the input terminal block.  
Confirm that the ground is connected.

### 3.3 Interface Port

The interface port (D-sub 9 pins) is mounted on the back of the UPS and can take out the following signals. Use as necessary.


- **CN1 (Standard monitoring interface)**




D-sub 9 pins, male  
(3mm screw)

| Pin No. | Classification of signal | Name of signal                     | Content   |
|---------|--------------------------|------------------------------------|---|
| 1-4     | “Open” at operation      | UPS failure signal                 | It is the no-voltage contact signal which operates when the abnormalities occur inside the UPS, when the abnormalities occur in the battery, or when the recommendation time of battery replacement comes.        |
| 1-6     | “Close” at operation     |                                    |   |
| 2-5     | “Open” at operation      | Input power supply abnormal signal | It is the no-voltage contact signal which is outputted when the abnormalities, such as the power failure, occur at an input power supply.<br>(In the power failure for 1.5 seconds or less, it does not operate.) |
| 2-7     | “Close” at operation     |                                    |   |
| 3-9     | “Open” at operation      | Battery voltage drop signal        | It is the no-voltage contact signal which is outputted approximately 2 minutes before (at the rated load) the end of battery discharge during the battery operation.  |
| 3-8     | “Close” at operation     |                                    |   |

Use the contact output in the range of the voltage and current in the following graph.

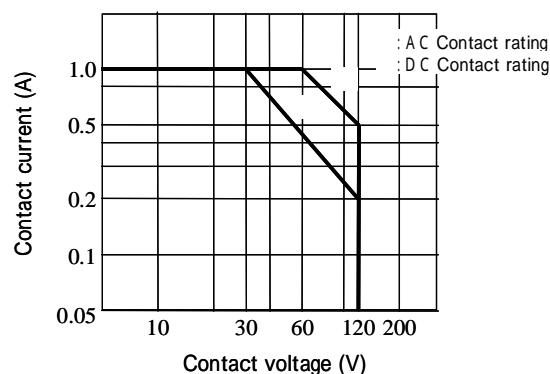

● CN2 (Computer interface)




D-sub 9 pins, female  
(#4-40 inch screw)

| Pin No. | Classification of signal               | Name of signal                          | Content  |
|---------|--|---|--|
| 2-3     | “Close” at operation                   | Input power supply abnormal signal (*1) | It is the no-voltage contact signal which is outputted when the abnormalities, such as the power failure, occur at an input power supply.<br>(In the power failure for 1.5 seconds or less, it does not operate.)                            |
| 1-3     | “Close” at operation                   | Battery voltage drop signal (*1)        | It is the no-voltage contact signal which is outputted approximately 2 minutes before (at the rated load) the end of battery discharge during the battery operation.   |
| 8-7     | AC output stop at ‘H’ signal reception | UPS automatic shutdown signal (*2)      | It is the signal which inputs into the UPS when stopping the AC output of the UPS.<br>(1) The stop of the AC output is possible only during the battery operation.<br>(2) Input this signal (5 to 25 VDC) approximately 0.6 seconds or more. |
| 6-7     | RS-232C serial signal (*3)             | Serial data input (RX)                  | [Communication system]<br>Baud rate : 2400 bps   |
| 9-7     |  | Serial data output (TX)                 | Data length : 8 bits   |
| 7       |  | Signal ground (SG)                      | Stop bit : 1 bit<br>Parity : non<br>Character type : ASCII   |

- \*1 Refer to the graph of the previous page for contact capacity.  
When using the UPS monitoring function (using the above contact signal) preinstalled in the following OS, contact your maintenance staff, since the dedicated cable for contact signal which corresponds to each OS is needed separately. For more detail on the UPS monitoring function preinstalled in each OS, refer to an instructions manual, an on-line manual, etc. of each OS.
- Windows NT/2000/XP:FiFH/WS9 (the dedicated cable for contact signal)
- \*2 In the case of Windows 2000 and XP, although the shutdown of OS can be performed during the power failure, a subsequent UPS automatic shutdown cannot be performed.
- \*3 When performing the RS-232C serial communication, contact your maintenance staff, since the dedicated cable for RS-232C communication is needed separately.
- FiFA/WS9 (the dedicated cable for RS-232C communication)

## 3.4 Setting up the Output Voltage

This UPS can change the rated output voltage by the switch of voltage setting on the back of the UPS.

|  <b>Caution</b> |  |
|--|--|
| <b>Damage</b>  | <p><b>Confirm that the voltage set up by the switch of voltage setting is within the range of input voltage of the connection device.</b></p> <p>There is fear of damaging the connection device.</p> <p><b>Do not operate the switch of voltage setting during operation of the UPS.</b></p> <p>There is fear of damaging the connection device, since the changed voltage is outputted at the restart. And even if operating the switch during operation of the UPS, the output voltage cannot be changed.</p> |

| <b>Important</b>   |  |
|--|--|
| <p><b>Do not use 5 to 9 of the switch of voltage setting.</b></p> <p>It becomes impossible for the UPS to start up normally.</p> |  |

### ● The setup procedures of the rated output voltage

1. Turn off the connection device.
2. Press the RUN/STOP switch on the front of the UPS for approximately 1 second. The buzzer will sound if the switch is received.
3. An output stops.  
The RUN LED (green) on the front of the UPS blinks slowly (in the cycles of approximately 1.6 sec.).
4. In the case of M-UPS010AD1B and M-UPS015AD1B, pull out the AC input plug on the back of the UPS from an input power receptacle.
5. In the case of M-UPS020AD1B and M-UPS030AD1B, turn off the input breaker on the back of the UPS.
6. After confirming that all LEDs on the front of the UPS have gone out, operate the switch of voltage setting on the back of the UPS. The rated output voltage corresponding to a setup of the switch of voltage setting is shown below.

| Setup of the switch of voltage setting | Rated output voltage |
|--|----------------------|
| 0                                      | 100 VAC              |
| 1                                      | 105 VAC              |
| 2                                      | 110 VAC              |
| 3                                      | 115 VAC              |
| 4                                      | 120 VAC              |
| 5-9                                    | They are not used.   |

### 3 Installation

---

- 7.** In the case of M-UPS010AD1B and M-UPS015AD1B, connect the AC input plug on the back of the UPS to an input power receptacle.  
In the case of M-UPS020AD1B and M-UPS030AD1B, turn on the input breaker on the back of the UPS.  
The RUN LED (green) on the front of the UPS blinks slowly (in the cycles of approximately 1.6 sec.).
- 8.** Press the RUN/STOP switch on the front of the UPS for approximately 1 second.  
The buzzer will sound if the switch is received.
- 9.** AC voltage set up is outputted from the AC outlet or the output terminal block. The RUN LED (green) on the front of the UPS lights up.
- 10.** Turn on the connection device, if the normal operation is started with the rated voltage set up.

# 4 Running


## 4.1 Turning on the UPS

### ⚠ Caution

**Damage** Confirm that the voltage set up by the switch of voltage setting is within the range of input voltage of the connection device.  
There is fear of damaging the connection device.

### ● Confirming cable connection


1. Confirm that the UPS is connected to an input power supply and the connection device.  
In the case of M-UPS020AD1B and M-UPS030AD1B, turn on the input breaker on the back of the UPS.  
The RUN LED (green) on the front of the UPS blinks slowly (in the cycles of approximately 1.6 sec.).

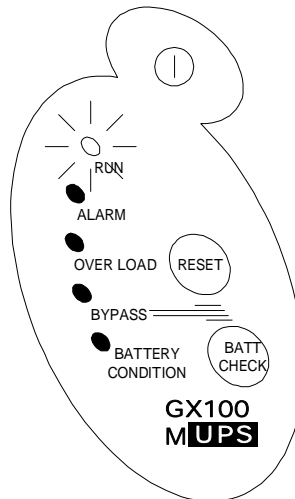


☞ If the UPS is not connected:  
Refer to Chapter 3.2 “Connecting the Cable”.

● **Turning on the UPS**

2. Press the RUN/STOP switch on the front of the UPS for approximately 1 second. The buzzer will sound if the switch is received.

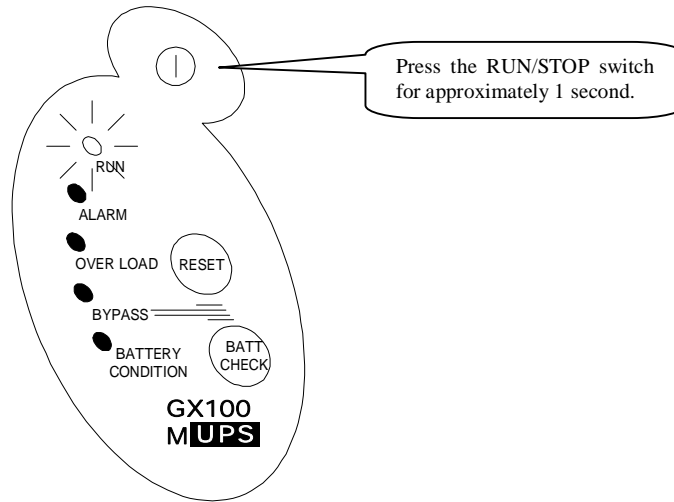


3. AC voltage is outputted from the AC outlet or the output terminal block. The RUN LED (green) on the front of the UPS lights up. The BATTERY CONDITION LED (green) on the front of the UPS indicates the amount of battery charge according to the sort of lighting.

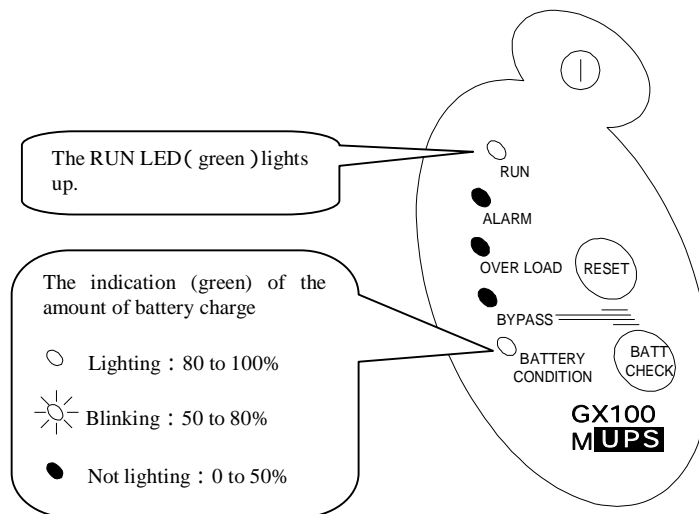




- The battery check is performed automatically.  
The BATTERY CONDITION LED (orange) on the front of the UPS blinks (in the cycles of approximately 1.6 sec.).

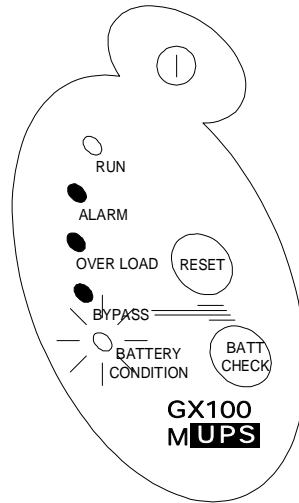

- The battery check is performed for approximately 5 seconds. Then, if the battery is normal, the BATTERY CONDITION LED (green) on the front of the UPS indicates the amount of battery charge again, and the UPS returns to the normal operation.


 If the normal operation is not started:  
Refer to Chapter 6 “Troubleshooting”.

- **Turning on the connection device**


- Turn on the connection device if the normal operation is started.

## 4.2 Turning off the UPS


Also when the rolling blackouts are performed, be sure to perform the following operation. (For details, refer to Chapter 5.2 “Caution and Measures for the Rolling Blackouts”)


|  <b>Caution</b> |  |
|--|--|
| <b>Damage</b>  | <p><b>When pulling out the AC input plug from an input power receptacle or turning off the input breaker on the back of the UPS, confirm that the RUN LED (green) is blinking slowly (in the cycles of approximately 1.6 sec.).</b></p> <p>If the breaker of the distribution board is turned off or the AC input plug is pulled out from an input power receptacle or the input breaker on the back of the UPS is turned off, without turning off the UPS, the internal battery will be discharged, since it will be in the same state as a power failure.</p> <p>There is fear of the battery deterioration or a shortening of a cycle of battery replacement.</p> |

- **Turning off the connection device**
  1. Turn off the connection device.
  
- **Turning off the UPS**
  2. Press the RUN/STOP switch on the front of the UPS for approximately 1 second. The buzzer will sound if the switch is received.

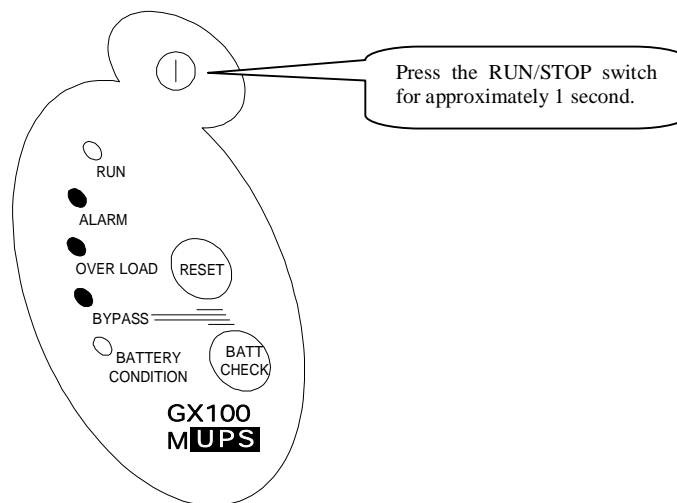

- An output stops.  
The RUN LED (green) on the front of the UPS blinks slowly (in the cycles of approximately 1.6 sec.).

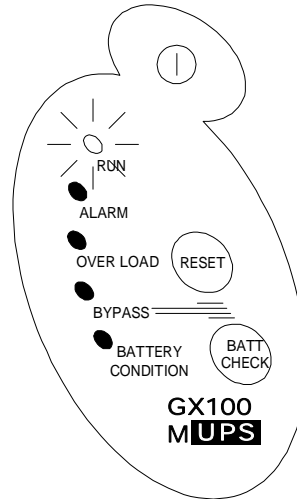

 If an output does not stop normally:  
Refer to Chapter 6 "Troubleshooting".

- In the case of M-UPS010AD1B and M-UPS015AD1B, pull out the AC input plug on the back of the UPS from an input power receptacle.
- In the case of M-UPS020AD1B and M-UPS030AD1B, turn off the input breaker on the back of the UPS.

# 5 Inspection

## 5.1 Care and Daily Inspection

In order to use the UPS safely over the long term, perform the following care and daily inspection regularly.

### Warning

|                       |   |
|-----------------------|---|
| <b>Electric shock</b> | <b>Do not remove the cover of the UPS.</b><br>Since there are some portions with high voltage in the inside of the UPS, there is fear of an electric shock. |
|-----------------------|---|

### Caution

|                       |  |
|-----------------------|--|
| <b>Electric shock</b> | <b>When inspecting or maintaining the connection device (a device getting connected to the UPS) or the UPS, turn off the connection device and the UPS. And in the case of M-UPS010AD1B and M-UPS015AD1B, pull out the AC input plug on the back of the UPS from an input power receptacle. In the case of M-UPS020AD1B and M-UPS030AD1B, turn off the input breaker on the back of the UPS, and cut off connection with AC input terminal (R, S).</b> |
|-----------------------|--|

There is fear of an electric shock.

**Only maintenance personnel must perform the maintenance other than daily inspection, such as the replacement of battery and cooling fan.**

There is fear of an electric shock.

|               |  |
|---------------|--|
| <b>Damage</b> | <b>When pulling out the AC input plug from an input power receptacle or turning off the input breaker on the back of the UPS, confirm that the RUN LED (green) is blinking slowly (in the cycles of approximately 1.6 sec.).</b> |
|---------------|--|

If the breaker of the distribution board is turned off or the AC input plug is pulled out from an input power receptacle or the input breaker on the back of the UPS is turned off, without turning off the UPS, the internal battery will be discharged, since it will be in the same state as a power failure.

There is fear of the battery deterioration or a shortening of a cycle of battery replacement.


- **How to care for the UPS**

1. Turn off the UPS after turning off the connection device, and remove the dust adhering to the vent hole and cooling fan of the UPS with a cleaner, etc.
2. Wipe the surface of the UPS with a dry and soft cloth.

- **Daily inspection**

- Confirm that the dust is not adhering to the vent hole and the cooling fan.
  - ☞ When the dust is adhering:  
Refer to “How to care for the UPS.”
- Confirm that the surface of UPS, the electric cables, and the outlets are not heating unusually.
  - ☞ When they are heating:  
Confirm the state, and contact an agent from which you purchased the UPS, or a maintenance company.
- Confirm that a loud abnormal sound or a nasty smell is not occurring during the operation of the UPS.
  - ☞ When abnormalities have occurred:  
Confirm the state, and contact an agent from which you purchased the UPS, or a maintenance company.

## 5.2 Caution and Measures for the Rolling Blackouts
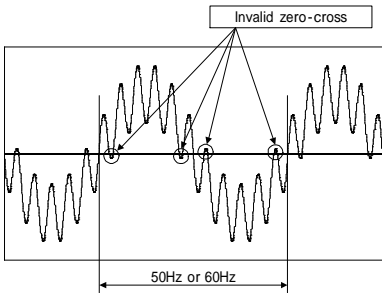
| Important  |
|--|
| <p><b>When using a generator temporarily during the rolling blackouts, use a generator satisfying the following specification.</b></p> <p>If connecting a generator not satisfying the following specification to the input part of the UPS, there is a possibility of becoming the cause of the malfunction or damage of the UPS.</p> <ul style="list-style-type: none"> <li>• Voltage variation: 85 to 138 VAC</li> <li>• Frequency variation: within rated frequency <math>\pm 5\%</math> (1Hz/sec.)</li> <li>• Voltage waveform distortion: within 5%</li> <li>• Voltage zero-cross condition: Zero-cross must not occur twice or more in 1 cycle.</li> </ul> <div style="text-align: center;">  <p>The diagram shows a sine wave with a period of 50Hz or 60Hz. A box labeled 'Invalid zero-cross' points to multiple zero-crossings within a single cycle, indicating that the zero-cross must not occur twice or more in one cycle.</p> </div> |

### ● Operation before the rolling blackouts



Turn off the connection device and the UPS before performing the rolling blackouts (Note).

1. Turn off the connection device.
2. Press the RUN/STOP switch on the front of the UPS for approximately 1 second. The buzzer will sound if the switch is received.
3. An output stops.  
The RUN LED (green) on the front of the UPS blinks slowly (in the cycles of approximately 1.6 sec.).

If the rolling blackouts are performed without turning off the UPS, the UPS will be in the same state as an ordinary power failure. Electric power is supplied to the connection device from the internal battery of the UPS until the rolling blackouts are completed. Electric power is not supplied to the connection device until an input power supply returns after the electric discharge is completed.

Note) The rolling blackouts mean the blackouts to which the date and hour, such as the safety inspection of electricity, is informed beforehand.

● **Operation after the rolling blackouts**

1. Confirm that the UPS is connected to an input power supply and the connection device.  
The RUN LED (green) on the front of the UPS blinks slowly (in the cycles of approximately 1.6 sec.).
2. Press the RUN/STOP switch on the front of the UPS for approximately 1 second.  
The buzzer will sound if the switch is received.
3. AC voltage is outputted from the AC outlet or the output terminal block, and the RUN LED (green) on the front of the UPS lights up.
4. Turn on the connection device if the normal operation is started.
  -  For details, refer to Chapter 4.1 “Turning on the UPS”.
  -  When a warning beep sounds:  
Refer to Chapter 6.1 “If a Warning Beep Sounds”.

### 5.3 Inspecting the Battery (Battery Check)

Inspection of the battery is performed using a battery check function. There are two kinds of battery check functions, an automatic check and a manual check. The manual check is not necessary ordinarily since the automatic check is performed while the UPS is operating.

Automatic check is performed in the following cases:

- When the operation of UPS is started up
- Every two weeks in an operation continuation state
- When having switched to the normal operation from the bypass operation

Perform manual check in the following cases:

- When a warning beep sounds due to the abnormalities in a battery
- When performing the battery check other than the automatic check

#### Important


**Do not perform the battery check in succession.**

When the battery check is performed, the internal battery is actually discharged and the voltage is checked.

If the battery check is performed in succession, there is fear of the battery deterioration or a shortening of a cycle of battery replacement.

- **Confirming the state of the UPS**

1. Confirm that the UPS is operating normally.

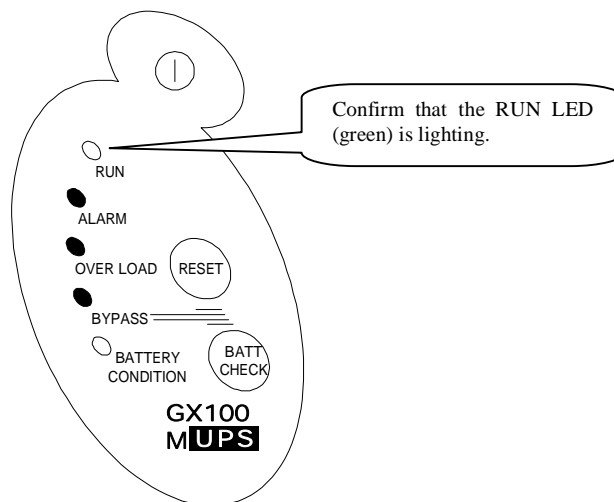


- ☞ When the UPS is in a stop state (all LEDs on the front of the UPS are going out):  
Turn on the UPS, and proceed to Procedure 2.  
For details, refer to Chapter 4.1 "Turning on the UPS".
- ☞ When the normal operation cannot be confirmed in states other than a stop:  
Proceed to Procedure 2 after dealing with the trouble, with reference to Chapter 6 "Troubleshooting".




● Using the manual check function

2. Press the BATT CHECK switch on the front of the UPS for approximately 2 seconds.

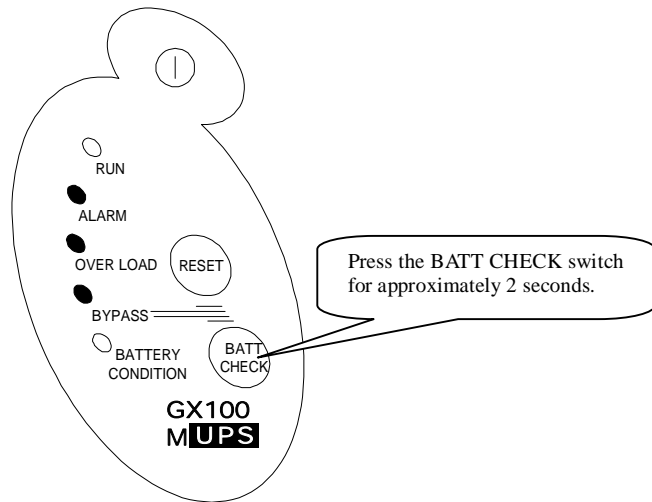

A buzzer sounds and the BATTERY CONDITION LED (orange) blinks (in the cycles of approximately 1.6 sec.). A buzzer sounds again approximately 5 seconds later and the battery check is completed.

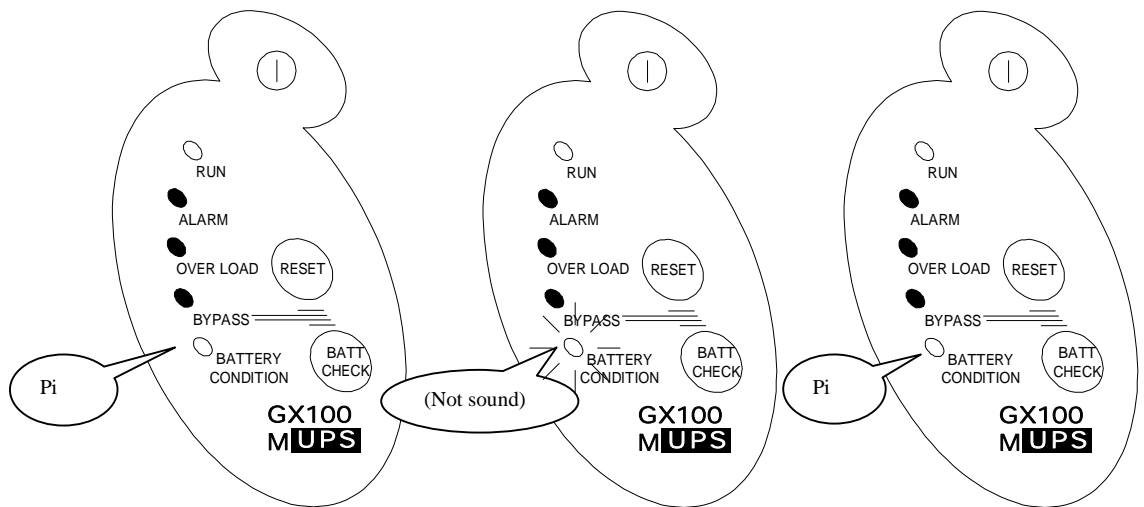

A buzzer sounds.

The BATTERY CONDITION LED (orange) blinks.


A buzzer sounds.

3. As a result of the battery check, the UPS will be in the following state.

☞ If the battery is fully charged:




The RUN LED (green) on the front of the UPS lights up, and the UPS returns to the normal operation.

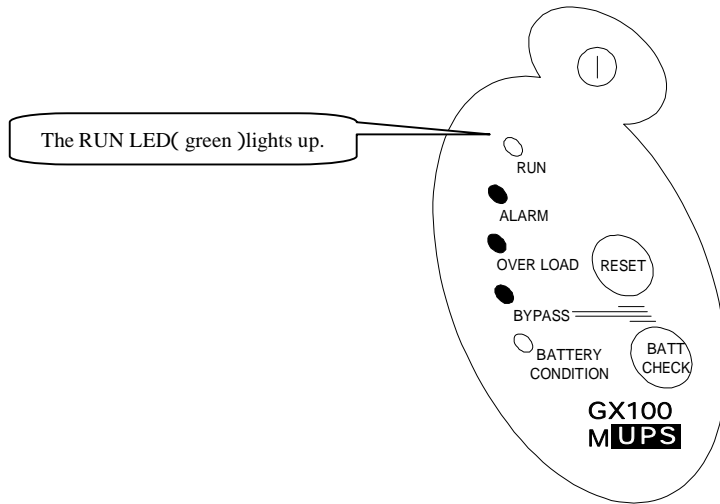

☞ If the battery is not fully charged:



A warning beep sounds and the BATTERY CONDITION LED (orange) on the front of the UPS blinks. Proceed to Procedure 4.

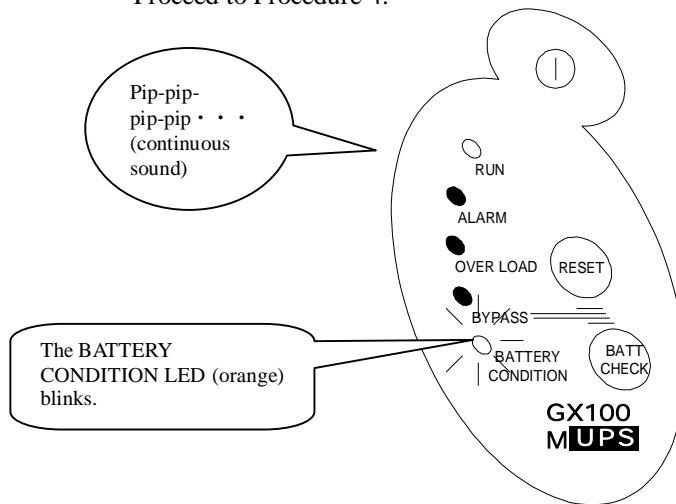


## ● Charging the battery

4. Put out the BATTERY CONDITION LED (orange) by pressing the RESET switch on the front of the UPS for approximately 3 seconds, and operate the UPS 12 hours or more to charge the battery.




When pressing the RESET switch, once the BATTERY CONDITION LED (orange) on the front of the UPS goes out, and is switched to the indication (green) of the amount of battery charge.

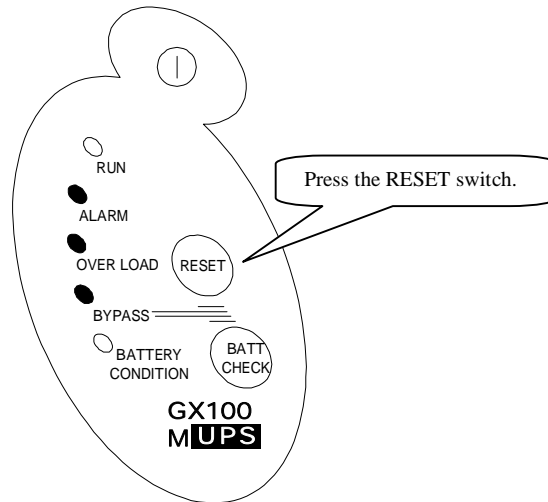

Remarks. In this state, even if a power failure occurs, the battery operation may not be performed.

5. Return to Procedure 2, and perform the battery check again manually.

 When the UPS will be in the state of Procedure 3 “If the battery is not fully charged” again:  
The battery is out of order (end of battery life). Replace the battery.  
For details, refer to Chapter 7.1 “Replacing the Battery”.

# 6 Troubleshooting

## 6.1 If a Warning Beep Sounds

1. Confirm the state of LED on the front of the UPS, and the type of a warning beep.
2. Refer to the “Operation mode list”, and deal with it according to directions.

If the UPS is not connected to an input power supply, connect. For details, refer to Chapter 3.2 “Connecting the Cable”.

### How to stop a warning beep:

A warning beep can be stopped by pressing the RESET switch on the front of the UPS for approximately 1 second. (Note)



However, if a warning beep does not stop even if pressing the RESET switch, stop a warning beep by the following procedures. For details, refer to Chapter 4.2 “Turning off the UPS”.

- (1) Turn off the connection device.
  - (2) Press the RUN/STOP switch on the front of the UPS for approximately 1 second.
  - (3) An output stops.  
The RUN LED (green) on the front of the UPS blinks slowly (in the cycles of approximately 1.6 sec.).
  - (4) In the case of M-UPS010AD1B and M-UPS015AD1B, pull out the AC input plug on the back of the UPS from an input power receptacle.
  - (5) In the case of M-UPS020AD1B and M-UPS030AD1B, turn off the input breaker on the back of the UPS.
- Note) In the output overload state, even if pressing the RESET switch, a warning beep does not stop. Reduce the capacity of the connection device to less than the rated value of the UPS.




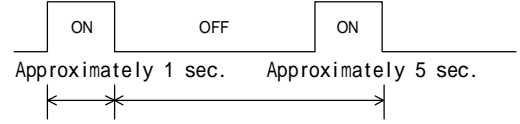
## 6.2 Operation Mode List

When it seems that the abnormalities have occurred inside the UPS or the connection device has stopped, confirm the LED and a warning beep by the following lists, and deal with the trouble in accordance with the remarks in the "Operation mode list".

- **Types of blink of LED (The symbols correspond to the symbols in the "Operation mode list".)**
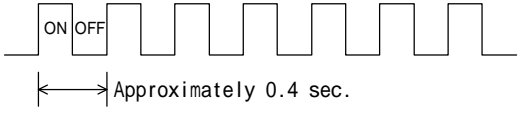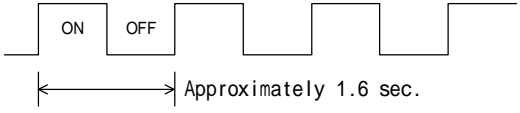
| Symbol   | Blink pattern  |
|--|--|
| (a)<br>Fast blink<br>(in the cycles of approximately 0.4 sec.) |  |
| (b)<br>Slow blink<br>(in the cycles of approximately 1.6 sec.) |  |

- **Types of the warning beep (The symbols correspond to the symbols in the "Operation mode list".)**
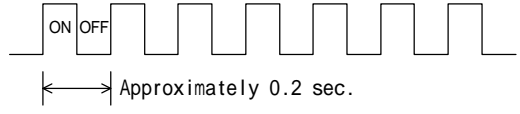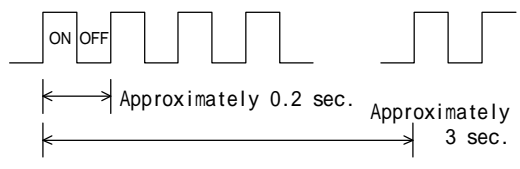
| Symbol   | Warning beep   |
|--|--|
| (1)<br>Pip-pip-pip-pip . . .<br>(continuous sound)   |   |
| (2)<br>Pip-pip-pip-pip (a stop for approximately 2 sec.)<br>Pip-pip-pip-pip<br>(four times every approximately 3 sec.) |  |
| (3)<br>Pi—<br>(continuance)  |  |
| (4)<br>Pi— (a stop for approximately 4 sec.)<br>Pi—  |  |

● Operation mode list

● Symbols of LED: ○ ....Lighting ● ..... Not lighting ☀ ..... Blinking

● The BATTERY CONDITION LED (green) indicates the amount of battery charge according to the sort of lighting as follows:




● (Not lighting)..... 0 to 50% : The battery is not fully charged. Even if a power failure occurs, the UPS may not be able to back up.

☀ (Blinking)..... 50 to 80% : The battery is charged to some extent. However, an adequate backup time cannot be assured.


○ (Lighting) ..... 80 to 100% : The battery is fully charged. There is backup time at full.

| No | LED                 |                |                    |                 |  | Warning beep | Operational status                       | Remarks  |
|----|---------------------|----------------|--------------------|-----------------|--|--------------|--|--|
|    | RUN (green)         | ALARM (orange) | OVER LOAD (orange) | BYPASS (orange) | BATTERY CONDITION (green/orange)                   |              |  |  |
| 1  | Lighting<br>○       | ●              | ●                  | ●               | Indication of the amount of battery charge (green) | -            | Normal operation                         | The UPS is operating normally.   |
| 2  | ●                   | ●              | ●                  | ●               | ●  | -            | Stopping (without an input power supply) | The output of the UPS is stopping. If an input power supply returns, the UPS will become the stopping (No.3). If the UPS does not become the stopping (No.3) even if an input power supply returns, check whether or not the input breaker has tripped. If the breaker has tripped, reset it. Nevertheless, if the UPS does not become the stopping (No.3), contact an agent from which you purchased the UPS, or a maintenance company. When the UPS stopped since the input power failure had continued and electric discharge of a battery had been completed, the UPS will return to the normal operation (No.1) automatically if an input power supply returns. |
| 3  | (b) Slow blink<br>☀ | ●              | ●                  | ●               | ●  | -            | Stopping (with an input power supply)    | The output of the UPS is stopping. The UPS will return to the normal operation (No.1) by pressing the RUN/STOP switch for approximately 1 second.  |

## 6.2 Operation Mode List


























| No. | LED   |   |                    |   |  | Warning beep | Operational status   | Remarks  |
|-----|---|---|--------------------|---|--|--------------|--|--|
|     | RUN (green)   | ALARM (orange)  | OVER LOAD (orange) | BYPASS (orange)   | BATTERY CONDITION (green/orange)                   |              |  |  |
| 4   | ●   | Lighting<br>○   | ●                  | Lighting<br>○   | ●  | (1)          | Bypass operation due to UPS failure  | The UPS became the failure state and switched to the bypass operation. Evacuate important connection device from the UPS.<br>In this state, even if an input power failure occurs, the battery operation cannot be performed.<br>Confirm ambient temperature and ventilation, and press the RESET switch on the front of the UPS for approximately 3 seconds after approximately 10 minutes have passed. If there is no problem, the UPS will return to the normal operation (No.1). If the ALARM LED does not go out or lights up again, even if the above operation is performed, contact an agent from which you purchased the UPS, or a maintenance company. |
| 5   | Lighting<br>○   | ●   | ●                  | ●   | Indication of the amount of battery charge (green) | (3)          | Abnormality in cooling fan   | Abnormalities have occurred in the cooling fan. If this state continues for approximately 2 minutes or the inside temperature of the UPS rises, the UPS will become the failure state of No.4.   |
| 6   | ●   | ●   | ●                  | (b) Slow blink<br> | ●  | -            | Manual bypass operation  | The UPS has been switched to the bypass operation manually. In this state, even if an input power failure occurs, the battery operation cannot be performed.   |
| 7   | (b) Slow blink<br> | (a) Fast blink<br> | ●                  | ●   | ●  | (1)          | Input error at startup   | Since the abnormalities have occurred at an input power supply, the UPS cannot be started up. Stop the UPS once, and restart after confirming that an input power supply is within the range of the following conditions.<br>Input voltage: 85 to 138 VAC<br>Input frequency: 47.5 to 52.5 Hz or 57 to 63 Hz   |
| 8   | Lighting<br>○   | ●   | Lighting<br>○      | ●   | Indication of the amount of battery charge (green) | (1)          | Output overload during the normal operation (M-UPS010A D1B, M-UPS015A D1B) | The capacity of the connection device exceeds the rated value. Reduce the capacity of the connection device to less than the rated value of the UPS. An output voltage is dropped by the output current restriction function. If this state continues for 100 seconds, the UPS will stop due to an output overload (No.12). In addition, even if an input power failure occurs, the battery operation cannot be performed. At an output short circuit, the UPS stops immediately.  |

## 6 Troubleshooting

| No. | LED           |                |                    |   |  | Warning beep | Operational status  | Remarks  |
|-----|---------------|----------------|--------------------|---|--|--------------|---|--|
|     | RUN (green)   | ALARM (orange) | OVER LOAD (orange) | BYPASS (orange)   | BATTERY CONDITION (green/orange)                   |              |   |  |
| 9   | Lighting<br>○ | ●              | Lighting<br>○      | Lighting<br>○   | Indication of the amount of battery charge (green) | (1)          | Bypass operation due to an output overload during the normal operation (M-UPS020A D1B, M-UPS030A D1B) | Since the capacity of the connection device exceeded the rated value and the UPS became the overload state, the UPS has switched to the bypass operation automatically. Reduce the capacity of the connection device to less than the rated value of the UPS. If the capacity of the connection device become below the rated value, the UPS will return to the normal operation (No.1). In the state of the continuation of overload, even if pressing the RESET switch, the warning beep does not stop. Although it may become the overload temporarily by inrush current at the time of a load injection, it is no matter since it is canceled automatically. |
| 10  | ●             | ●              | Lighting<br>○      | (b) Slow blink<br> | ●  | (1)          | Output overload during the bypass operation   | During the bypass operation, the capacity of the connection device exceeds the rated value. Reduce the capacity of the connection device to less than the rated value of the UPS. In this state, even if pressing the bypass switch (pressing the RESET switch and the BATT CHECK switch for approximately 3 seconds simultaneously), the UPS will not return to the normal operation (No.1).  |
| 11  | Lighting<br>○ | ●              | Lighting<br>○      | ●   | Indication of the amount of battery charge (green) | (1)          | Output overload during the battery operation  | During the battery operation, the capacity of the connection device exceeds the rated value. Reduce the capacity of the connection device to less than the rated value of the UPS. If this state continues for 100 seconds, the UPS will stop. Evacuate important connection device from the UPS.  |
| 12  | ●             | Lighting<br>○  | Lighting<br>○      | ●   | ●  | (1)          | A stop due to an output overload (M-UPS010A D1B, M-UPS015A D1B)                                       | Since the UPS continued to be used even after the capacity of the connection device had exceeded the rated value of the UPS, the UPS stopped. Reduce the capacity of the connection device to less than the rated value of the UPS, and restart the UPS.   |
| 13  | Lighting<br>○ | ●              | ●                  | ●   | Indication of the amount of battery charge (green) | (2)          | Battery operation   | Since the abnormalities occurred at an input power supply, the UPS started to supply the electric power to the connection device from the battery. It is not necessary to deal with it especially. If an input power supply returns, the UPS will return to the normal operation (No.1) automatically.   |
| 14  | Lighting<br>○ | ●              | ●                  | ●   | Indication of the amount of battery charge (green) | (1)          | Battery voltage drop due to continuing the battery operation  | The battery voltage dropped since the battery operation has continued. In the rated load, the battery operation will be completed approximately 2 minutes later. Evacuate important connection device from the UPS. If an input power supply returns, the UPS will return to the normal operation (No.1) automatically.  |



## 6.2 Operation Mode List

| No. | LED  |  |   |   |   | Warning beep                 | Operational status                    | Remarks   |
|-----|--|--|---|---|---|------------------------------|---------------------------------------|---|
|     | RUN (green)  | ALARM (orange)   | OVER LOAD (orange)  | BYPASS (orange)   | BATTERY CONDITION (green/orange)  |                              |                                       |   |
| 15  | Lighting<br>            |                         |    |    | (b)<br>Slow blink (orange)<br>   | (4)<br>(at the manual check) | Battery checking                      | The battery check is performed. At the manual battery check, a buzzer sounds at the start and end of the battery check. After the battery check is performed for approximately 5 seconds, the UPS will return to the normal operation (No.1) if there is no problem.  |
| 16  | Lighting<br>            |                         |    |    | (a)<br>Fast blink (orange)<br>   | (1)                          | Battery check error                   | There is possibility that the battery is not fully charged. Perform the battery check manually after operating the UPS 12 hours or more to charge the battery. Since an adequate backup time cannot be assured, evacuate important connection device from the UPS. If the UPS becomes this state again, the battery is out of order. Since it is necessary to replace the battery, contact an agent from which you purchased the UPS, or a maintenance company.   |
| 17  | Lighting<br>            |                         |    |    | Lighting (orange)<br>            | (1)                          | End of battery life                   | The recommendation time of battery replacement has come. Since it is necessary to replace the battery, contact an agent from which you purchased the UPS, or a maintenance company. Although the alarm (indication and warning beep) can be stopped by pressing the RESET switch for 3 seconds, the alarm (warning beep) is issued again 24 hours later or at the restart. When only the warning beep is stopped by pressing the RESET switch 1 second or more, the alarm (warning beep) of the end of battery life will be issued again at the automatic battery check which is performed every two weeks. |
| 18  | (b)<br>Slow blink<br> | (a)<br>Fast blink<br> |  |  |                                | (1)                          | Setting error of rated output voltage | A setup of the switch of voltage setting on the back of the UPS is wrong. Use 0 to 4 of the switch of voltage setting. For details on a setup, refer to Chapter 3.4 "Setting up the Output Voltage".  |
| 19  | (b)<br>Slow blink<br> |                       |  |  | (b)<br>Slow blink (orange)<br> | -                            | Waiting for a restart                 | The output of the UPS has stopped by setup of the RS-232C communication. After a time specified at the setup passes, the UPS will be started up automatically, and return to the normal operation (No.1). Also, the UPS can be started up with the RUN/STOP switch.   |

# 7 Maintenance


## 7.1 Replacing the Battery

- **Timing of the battery replacement**

| ⚠ Caution     |  |
|---------------|--|
| <b>Damage</b> | <p><b>Replace the battery periodically.</b></p> <p>If continuing to use the UPS that the battery life ended, there is fear of a leak of battery and a smoke.</p> |


In the following cases, it is the end of battery life. Replace the battery.

- When the BATTERY CONDITION LED (orange) on the front of the UPS lights up and a warning beep sounds

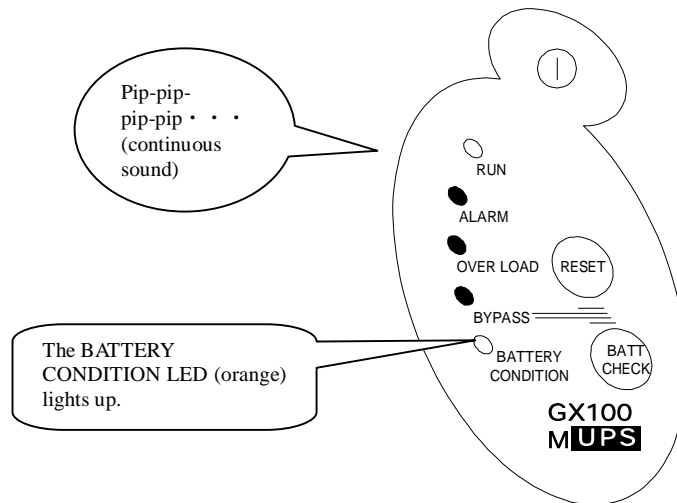


- When the backup time of the battery has been lowered to 3 minutes or less (at the rated load)

Battery life is influenced greatly by ambient temperature and the conditions of connection device. If using the UPS in the standard environment and conditions (an ambient temperature of 25 degrees C, and the rated load), replace the battery in approximately 3 years.

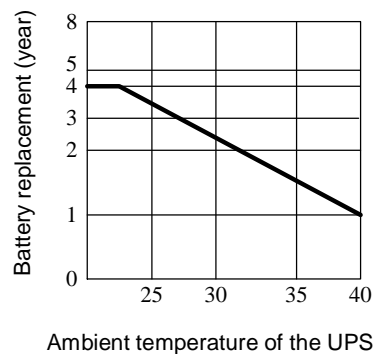

Relation between the ambient temperature and the cycle of battery replacement

- **The method of battery replacement**

|  <b>Caution</b> |  |
|--|--|
| <b>Electric shock</b>  | <b>Only maintenance personnel must perform the battery replacement.</b><br>There is fear of an electric shock.   |
| <b>Damage</b>  | <b>Replace the battery with one specified by our company and a new one.</b><br>If using the un-specified battery or mixing an old battery and a new battery, it becomes the cause of failure and trouble of the UPS. |

| <b>Important</b>   |  |
|--|--|
| <b>The disposal of used battery has legal restrictions.</b><br>Commission industrial waste disposal contractor, or consult with an agent from which you purchased the UPS, or a maintenance company. |  |

The battery of this UPS can be replaced (hot-swap) without turning off the UPS and connection device (Note). For details, consult with an agent from which you purchased the UPS, or a maintenance company.

Note) The UPS performs the bypass operation during hot swapping. In the state of the bypass operation, even if the abnormalities, such as a power failure, occur at an input power supply, the battery operation cannot be performed.

Use the battery shown in the following list. For the method of purchasing the battery unit, consult with an agent from which you purchased the UPS, or a maintenance company.

| UPS model              | Arrange-ment Model        | Type of battery unit | Number of units (Note) (per UPS) | Battery unit      |                  |
|------------------------|---------------------------|----------------------|----------------------------------|-------------------|------------------|
|                        |                           |                      |                                  | Mass (a unit)     | Battery capacity |
| M-UPS 010AD1B (1kVA)   | Battery for M-UPS 010AD1B | RRABU-GX11           | 1 unit                           | Approximately 6kg | 12V, 9Ah × 2     |
| M-UPS 015AD1B (1.5kVA) | Battery for M-UPS 015AD1B | RRABU-GX12           | 1 unit                           | Approximately 9kg | 12V, 9Ah × 3     |
| M-UPS 020AD1B (2kVA)   | Battery for M-UPS 020AD1B | RRABU-GX13           | 2 units                          | Approximately 6kg | 12V, 9Ah × 2     |
| M-UPS 030AD1B (3kVA)   | Battery for M-UPS 030AD1B | RRABU-GX14           | 2 units                          | Approximately 9kg | 12V, 9Ah × 3     |

Note) It is necessary to replace the battery by the unit.

### ● Disposal and storage of battery

- Pay enough attention to disposal and storage of the battery. When disposing of the used battery, dispose of it separately from a dry cell, etc., sticking the insulating tape on the terminal of battery to prevent a short circuit.
- This UPS uses the small sealed lead storage battery. The small sealed lead storage battery uses expensive and rare resources. However, these precious resources are able to recycle. Cooperate in recycling without disposing of the used battery. If you have any questions, consult with an agent from which you purchased the UPS, or a maintenance company.



This mark is the recycle mark of small sealed lead storage battery.


## 7.2 Replacing the Cooling Fan

- **Timing of the cooling fan replacement**

| <b>Important</b>  |  |
|---|--|
| <b>Replace the cooling fan periodically.</b>  |  |
| If continuing to use the UPS that the fan life ended, there is a possibility that the inside temperature of the UPS may get out of the rated specification. |  |

In the following cases, it is the end of cooling fan life. Replace the cooling fan.

- When the ALARM LED (orange) and the BYPASS LED (orange) light up, after a warning beep sounded for 120 seconds

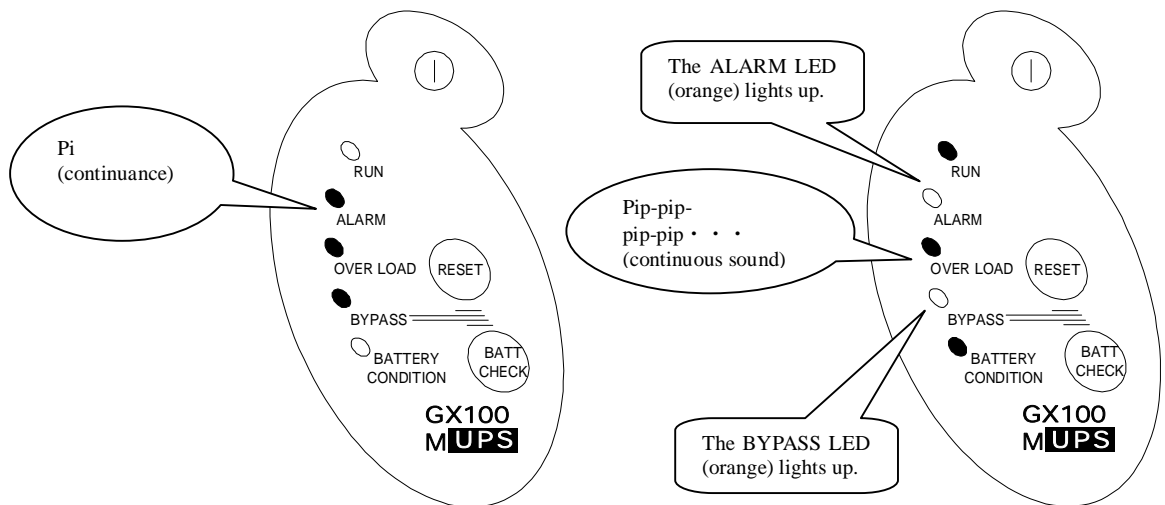

- At the second battery replacement

It is necessary to replace the cooling fan with new one periodically, since the cooling fan has a life by wear of the bearing. However, since the life of cooling fan may become short according to the use environment, replace the cooling fan early.

- **The method of cooling fan replacement**

| <b>⚠ Caution</b>             |  |
|------------------------------|--|
| <b>Electric shock Injury</b> | <b>Put neither a stick nor a finger into the cooling fan or the vent hole.</b><br>There is fear of an electric shock or an injury. |
| <b>Electric shock</b>        | <b>Only maintenance personnel must perform the cooling fan replacement.</b><br>There is fear of an electric shock.                 |

Use the following cooling fan. For the method of purchasing the cooling fan, consult with an agent from which you purchased the UPS, or a maintenance company.

- Type of cooling fan :
- Fan for M-UPS010AD1B (RRAF-GX11 × 1)
  - Fan for M-UPS015AD1B (RRAF-GX11 × 1)
  - Fan for M-UPS020AD1B (RRAF-GX12 × 1)
  - Fan for M-UPS030AD1B (RRAF-GX12 × 1)

## 7.3 When Not Using the UPS (Storage)

- **Work before storage**

| <b>Important</b>   |
|--|
| <p><b>Do not store the UPS in the following places:</b></p> <ul style="list-style-type: none"> <li>• In an outdoor location</li> <li>• A place exposed to the elements</li> <li>• An extremely humid place and a dusty place</li> <li>• A place with corrosive gas or salinity</li> <li>• A place subjected to direct sunlight</li> <li>• A place near sparks or heating element</li> <li>• An extremely hot or cold place or place where the temperature fluctuates greatly</li> <li>• A place where vibration and a shock are added</li> </ul> |

1. Perform the battery check using the manual battery check function after operating the UPS 12 hours or more to charge the battery.  
For details, refer to Chapter 5.3 “Inspecting the Battery (Battery Check)”.  
The period that can store the battery used for this UPS is approximately 2 months from the state charged fully.
2. Turn off the UPS after turning off the connection device. In the case of M-UPS010AD1B and M-UPS015AD1B, pull out the AC input plug on the back of the UPS from an input power receptacle. In the case of M-UPS020AD1B and M-UPS030AD1B, turn off the input breaker on the back of the UPS.  
Pull out the plug of connection device.  
For details, refer to Chapter 4.2 “Turning off the UPS”.
3. Put the UPS in a box (the box, etc. which was packing the UPS) and store it.

- **If a storage period exceeds two months**

| <b>Important</b>  |
|---|
| <p><b>If the UPS is not used for a long time, charge the battery every two months.</b></p> <p>Charge the battery by operating the UPS 12 hours or more every two months, and after charging the battery, perform the battery check.<br/>If the UPS is left without operating for a long time, there is a possibility that the UPS get unusable since the battery becomes an over-discharge state due to self-discharge.</p> |

Perform the battery check using the manual battery check function after operating the UPS 12 hours or more every two months to charge the battery.  
For details, refer to Chapter 5.3 “Inspecting the Battery (Battery Check)”.  
Even if the UPS is not used, the battery is discharged by itself inside the UPS. If the UPS is left two months or more, there is a possibility that the UPS get unusable since the battery becomes an over-discharge state.

# 8 Appendix

## 8.1 Rated Specification

| Model                          |   | M-UPS010AD1B   | M-UPS015AD1B  |                         |
|--------------------------------|---|--|---|-------------------------|
| AC output                      | Rating capacity   | 1000VA/700W  | 1500VA/1050W (-L)<br>1200VA/900W (-U, -UC)  |                         |
|                                | Voltage   | 100/105/110/115/120V $\pm$ 2%  |   |                         |
|                                | Frequency   | 50/60Hz (automatic changeover inside the UPS)                          |   |                         |
|                                | Frequency accuracy  | At the normal operation  | Depend on input frequency   |                         |
|                                |   | At the battery operation   | Within $\pm$ 0.1%   |                         |
|                                | Number of phase   | Single-phase two-wire (with a ground terminal)                         |   |                         |
|                                | Load condition  | Linear load or rectified load with a crest factor of up to three times |   |                         |
|                                | Voltage waveform distortion factor  | At the resistance load:  | 4% or less  |                         |
|                                |   | At the rectified load:   | 6% or less  |                         |
|                                | Overcurrent protection  | Effective value:   | 100% or more  |                         |
|                                |   | Peak value:  | 300% or more of rated effective value (bearing the load of the crest factor of three) |                         |
| Grounding system               | Un-grounding  |  |   |                         |
| Straightforward bypass circuit | Relay system (changeover time:  | 10ms or less)  |   |                         |
|                                | Changeover is impossible at the time of a power failure and overload.         |  |   |                         |
| AC input                       | Voltage *1  | 85 to 138V   |   |                         |
|                                | Frequency   | 50/60Hz $\pm$ 5%   |   |                         |
|                                | Number of phase   | Single-phase two-wire (with a ground terminal)                         |   |                         |
|                                | Capacity  | 1000VA or less   | 1500VA or less (-L)   | 1200VA or less (-U, UC) |
|                                |   |  |   |                         |
|                                | Grounding system  | Un-grounding or single-line grounding                                  |   |                         |
|                                | Power factor  | 0.97 or more (at the rated operation)                                  |   |                         |
| Input harmonic current         | Based on the Guideline of harmonic restraint measures for general-purpose UPS |  |   |                         |
| Battery                        | Type  | Small sealed lead storage battery (long-life battery)                  |   |                         |
|                                | Backup time *2 (initial value)  | Approximately 6 minutes (700W)   | Approximately 6 minutes (1050W)   |                         |
|                                |   |  |   |                         |
| Nominal voltage                | 24V   | 36V  |   |                         |
| Others                         | Ambient temperature   | 0 to +40°C   |   |                         |
|                                | Relative humidity   | 20 to 95% (no condensation)  |   |                         |
|                                | Noise   | 40dB(A) max. (at 1m from the front of the UPS)                         |   |                         |
|                                | Cooling method  | Forced air cooling   |   |                         |

| Model                          |        | M-UPS010AD1B   | M-UPS015AD1B                          |
|--------------------------------|--------|--|---------------------------------------|
| Outside dimension<br>W × D × H |        | 128 × 365 × 214mm  | 128 × 545 × 214mm                     |
| Mass                           |        | 13.5 kg<br>(without battery: 7.5 kg)   | 21.5 kg<br>(without battery: 12.5 kg) |
| Standard                       |        | UL1778 (-U, -UC type)  |                                       |
| Applicable standard            |        | VCCI CLASS A,<br>In conformity with EN60950 (-UC type)                                   |                                       |
| External connection            | Input  | Parallel 2 pole, grounding plug with a cord<br>(the length of a cord : approximately 2m) |                                       |
|                                | Output | Parallel 2 pole, grounding outlet × 4  |                                       |

\*1 Operation of UPS according to an input voltage

Low voltage detection : 77V return : 82V

Overvoltage detection : 148V return : 142V

\*2 The backup time is the test result and is not a guaranteed value.

| Model                          |   | M-UPS020AD1B  | M-UPS030AD1B                    |     |
|--------------------------------|---|---|---------------------------------|-----|
| AC output                      | Rating capacity   | 2000VA/1400W  | 3000VA/2100W                    |     |
|                                | Voltage   | 100/105/110/115/120V ± 2%   |                                 |     |
|                                | Frequency   | 50/60Hz (automatic changeover inside the UPS)   |                                 |     |
|                                | Frequency accuracy  | At the normal operation   | Depend on input frequency.      |     |
|                                |   | At the battery operation  | Within ±0.1%                    |     |
|                                | Number of phase   | Single-phase two-wire (with a ground terminal)  |                                 |     |
|                                | Load condition  | Linear load or rectified load with a crest factor of up to three times                |                                 |     |
|                                | Voltage waveform distortion factor  | At the resistance load:   | 4% or less                      |     |
|                                |   | At the rectified load:  | 6% or less                      |     |
|                                | Overcurrent protection  | Effective value:  | 100% or more                    |     |
| Peak value:                    |   | 300% or more of rated effective value (bearing the load of the crest factor of three) |                                 |     |
| Grounding system               | Un-grounding  |   |                                 |     |
| Straightforward bypass circuit | Thyristor system<br>(changeover time: without instantaneous power interruption)<br>Changeover is impossible at the time of a power failure. |   |                                 |     |
| AC input                       | Voltage *1  | 85 to 138V  |                                 |     |
|                                | Frequency   | 50/60Hz ±5%   |                                 |     |
|                                | Number of phase   | Single-phase two-wire (with a ground terminal)  |                                 |     |
|                                | Capacity  | 2000VA or less  | 3000VA or less                  |     |
|                                | Grounding system  | Un-grounding or single-line grounding   |                                 |     |
|                                | Power factor  | 0.97 or more (at the rated operation)   |                                 |     |
| Input harmonic current         | Based on the Guideline of harmonic restraint measures for general-purpose UPS   |   |                                 |     |
| Battery                        | Type  | Small sealed lead storage battery (long-life battery)                                 |                                 |     |
|                                | Backup time *2 (initial value)  | Approximately 6 minutes (1400W)   | Approximately 6 minutes (2100W) |     |
|                                |   | Nominal voltage   | 48V                             | 72V |
| Others                         | Ambient temperature   | 0 to +40°C  |                                 |     |
|                                | Relative humidity   | 20 to 95% (no condensation)   |                                 |     |
|                                | Noise   | 42dB (A) max. (at 1m from the front of the UPS)                                       |                                 |     |
|                                | Cooling method  | Forced air cooling  |                                 |     |



| Model                          |        | M-UPS020AD1B   | M-UPS030AD1B                   |
|--------------------------------|--------|--|--------------------------------|
| Outside dimension<br>W × D × H |        | 130 × 515 × 434mm  | 130 × 515 × 434mm              |
| Mass                           |        | 33 kg (without battery : 21 kg)  | 39 kg (without battery: 21 kg) |
| Standard                       |        | UL1778 (-U, -UC type)  |                                |
| Applicable standard            |        | VCCI CLASS A,<br>In conformity with EN60950 (-UC type)                             |                                |
| External connection            | Input  | Terminal block (L/R, N/S : M5 screws)  |                                |
|                                | Output | Terminal block (l/U, n/V : M5 screws)<br>and parallel 2 pole, grounding outlet × 4 |                                |
|                                | Ground | Terminal block (PE(G) : M5 screw)  |                                |


\*1 Operation of UPS according to an input voltage

Low voltage detection : 77V return : 82V  
Overvoltage detection : 148V return : 142V

\*2 The backup time is the test result and is not a guaranteed value.

### About the battery backup time

The battery backup time changes with the capacity (electric power of load) of connection device and the use period of battery. Refer to the following graph.

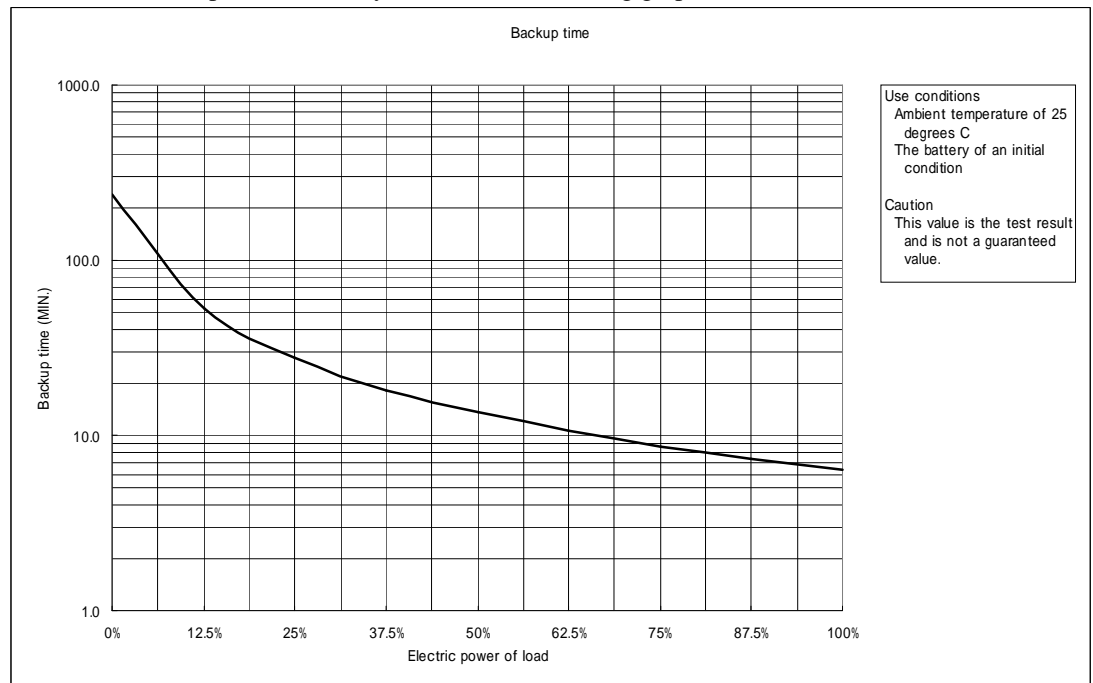

The battery backup time at the time of a power failure is the initial characterization in ordinary temperature (25 degrees C). The backup time tends to become short if the ambient temperature falls. In addition, the battery backup time becomes short to half of the initial characterization at the end of battery life.

## 8.2 Additional Description for UL Type

### IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

This manual contains important instructions for UPS GX100 series Models that should be followed during installation and maintenance of the UPS and batteries.

Internal battery voltage is xx V dc.

Where xx stands for “24” for Models M-UPS010AD1B-U with suffix, “36” for Models M-UPS015AD1B-U with suffix and M-UPS015AD1S-U with suffix, “48” for Models M-UPS020AD1B-U with suffix and “72” for Models M-UPS030AD1B-U with suffix.

This unit intended for installation in a controlled environment and maximum ambient temperature is 40 °C.

(temperature controlled, indoor area free of conductive contaminants).

The socket-outlet shall be installed near the equipment and shall be easily accessible for Models M-UPS010AD1B-U with suffix, M-UPS015AD1B-U with suffix and M-UPS015AD1S-U with suffix.

This UPS is intended for use in Japan-domestic.

For Models M-UPS020AD1B-U with suffix and Models M-UPS030AD1B-U with suffix,

- Need to provide External Disconnect / Overcurrent Protective Device for the AC input and the AC output. -for example ,an UL Listed branch circuit breaker with suitable ratings could provide both functions (disconnect and overcurrent protection).
- A readily accessible disconnect device shall be incorporated in the building installation wiring
- Suitable rating of input circuit breakers are shown in Table1.
- Need to provide an isolating-type transformer in the distribution power source and one leg of the transformer secondary shall be earthed (grounded)
- Field wiring connection must be made by a UL and CSA Listed closed-loop terminal connector sized for the wire gauge involved and fully insulated up to terminals. Connector must be fixed using the crimp tool specified by the connector manufacturer.
- Use 75 °C Copper conductors.
- Wire size and tightening torque are shown in table 1 and table 2.  
Circuit diagrams are shown by figure 1 and figure 2.

Table 1. Input rating, wire size, torque, external input circuit breaker size

| MODEL          | INPUT    |        |               |               | Tightening Torque (N · m) | 2POLE CIRCUIT BREAKER |    |
|----------------|----------|--------|---------------|---------------|---------------------------|-----------------------|----|
|                | Vin(V)   | Iin(A) | Wire size AWG | Terminal Type |                           | V                     | A  |
| M-UPS020AD1B-U | 100-120V | 20     | 10            | R5.5-5        | 2.0                       | AC240                 | 25 |
| M-UPS030AD1B-U |          | 30     | 8             | R8-5          |                           |                       |    |

Table 2. Output rating, wire size, torque, external output circuit breaker size

| MODEL          | OUTPUT   |         |               |               | Tightening Torque (N · m) | 2POLE CIRCUIT BREAKER |    |
|----------------|----------|---------|---------------|---------------|---------------------------|-----------------------|----|
|                | Vout(V)  | Iout(A) | Wire size AWG | Terminal Type |                           | V                     | A  |
| M-UPS020AD1B-U | 100-120V | 20      | 10            | R5.5-5        | 2.0                       | AC240                 | 25 |
| M-UPS030AD1B-U |          | 30      | 8             | R8-5          |                           |                       |    |

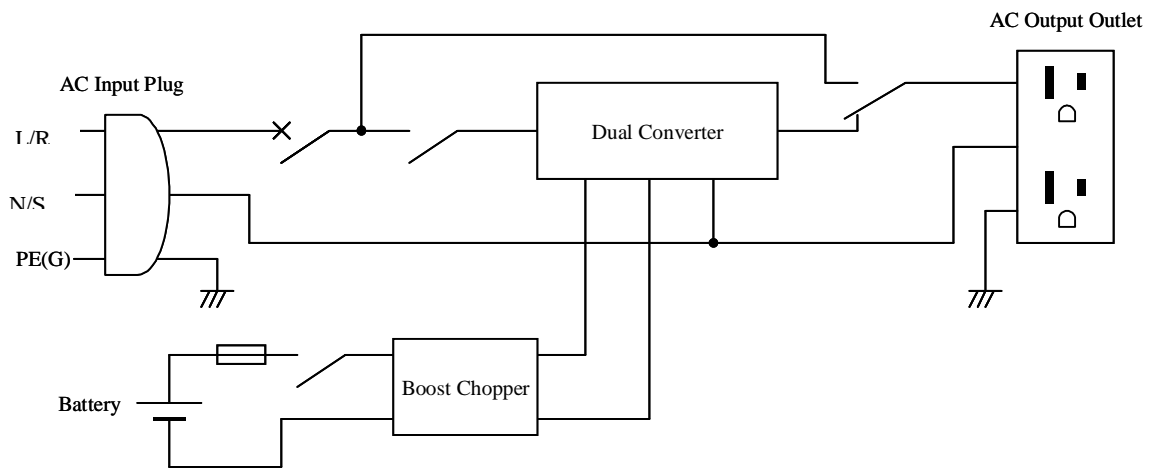


Figure 1 - Circuit diagram of Models M-UPS010AD1B-U, Models M-UPS015AD1B-U and M-UPS015AD1S-U

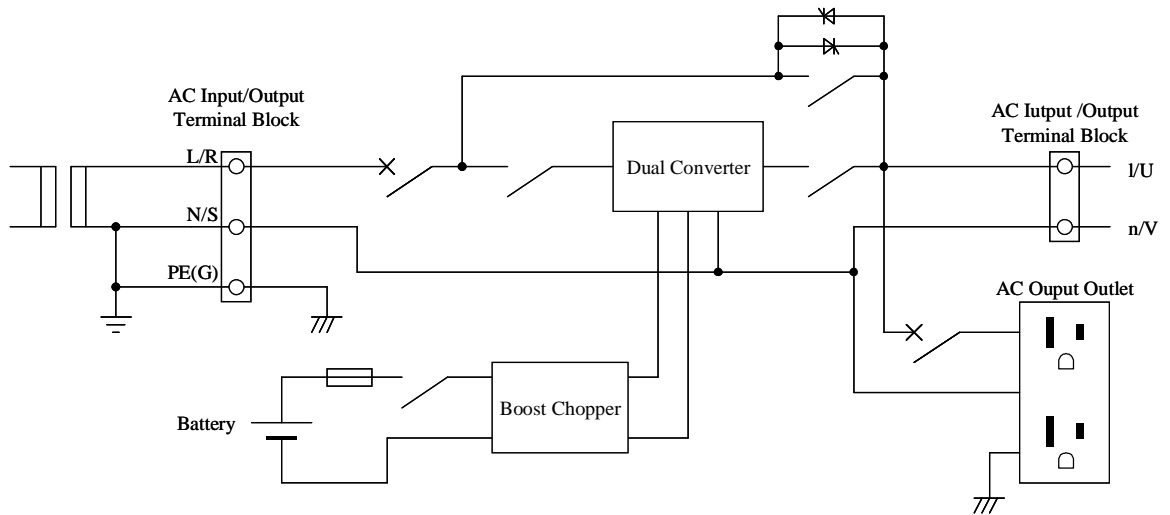


Figure 2 - Circuit diagram of Models M-UPS020AD1B-U and Models M-UPS030AD1B-U

 **DANGER**

Risk of electric shock  
Do not touch uninsulated battery terminal.

 **WARNING**

Risk of electric shock  
• Do not remove the cover for any reason. There are no user-serviceable parts inside the UPS. Refer servicing to qualified service personnel.

 **CAUTION**

Don't use this equipment in life support applications where failure of this equipment can reasonably be expected to cause the failure of the life support equipment or to significantly effect its safety or effectiveness.

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Replace batteries are only the one designated by our company.

Risk of electric shock

- Battery and cooling fan servicing should be performed by only authorized servicing personnel who were qualified technically. Keep unauthorized personnel away from batteries and cooling fan.
- The UPS has an internal energy source (the battery). The output may be energized when the unit is not connected to an AC power outlet.
- Terminal marked "PE(G)" is intended for connection of the Protective Earthing (Grounding) conductor(s). This earth connection is essential before connecting supply conductors. Also ensure the reliability of this connection during any servicing, including connection of protective earthing (grounding) conductors to the output (load).
- Capacitor stores hazardous energy. Do not remove cover until 7 minutes after disconnecting all sources of supply.

Do not dispose of batteries in a fire. The batteries may explode.

Do not open or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.

For Models M-UPS020AD1B-U with suffix and Models M-UPS030AD1B-U with suffix, to reduce the risk of fire, refer table1 and table2 about suitable rating of circuit breaker and field wiring.

A battery can present a risk of electrical shock and high short-circuit current. The following precautions should be observed when working on batteries:

- a) Remove watches, rings, or other metal objects.
- b) Use tools with insulated handles.
- c) Wear rubber gloves and boots.
- d) Do not lay tools or metal parts on top of batteries.
- e) Disconnect charging source prior to connecting or disconnection battery terminals.
- f) Determine if battery is inadvertently grounded.

If inadvertently grounded, remove source from ground.

Contact with any part of a grounded battery can result in electrical shock. The likelihood of such shock can be reduced if such grounds are removed during installation and maintenance (applicable to equipment and remote battery supplies not having a grounded supply circuit).