

Right choice for ultimate yield

LSIS strives to maximize customers' profit in gratitude of choosing us for your partner.

Programmable Logic Controller

XGB Dnet Slave I/F Module

XGT Series

User's Manual

XBL-DSEA



Safety Instructions

- Read this manual carefully before installing, wiring, operating, servicing or inspecting this equipment.
- Keep this manual within easy reach for quick reference.

LSIS


<http://www.lsis.com>


Safety Instruction

Before using the product ...

For your safety and effective operation, please read the safety instructions thoroughly before using the product.

- ▶ Safety Instructions should always be observed in order to prevent accident or risk with the safe and proper use the product.
- ▶ Instructions are divided into “Warning” and “Caution”, and the meaning of the terms is as follows.

 **Warning** This symbol indicates the possibility of serious injury or death if some applicable instruction is violated

 **Caution** This symbol indicates the possibility of severe or slight injury, and property damages if some applicable instruction is violated

Moreover, even classified events under its caution category may develop into serious accidents relying on situations. Therefore we strongly advise users to observe all precautions properly just like warnings.

- ▶ The marks displayed on the product and in the user’s manual have the following meanings.

 Be careful! Danger may be expected.

 Be careful! Electric shock may occur.

- ▶ The user’s manual even after read shall be kept available and accessible to any user of the product.

Safety Instruction

Safety Instructions for design process

Warning

- ▶ **Please install a protection circuit on the exterior of PLC so that the whole system may operate safely regardless of failures from external power or PLC.** Any abnormal output or operation from PLC may cause serious problems to safety in whole system.
 - Install protection units on the exterior of PLC like an interlock circuit that deals with opposite operations such as emergency stop, protection circuit, and forward/reverse rotation or install an interlock circuit that deals with high/low limit under its position controls.
 - If any system error (watch-dog timer error, module installation error, etc.) is detected during CPU operation in PLC, all output signals are designed to be turned off and stopped for safety. However, there are cases when output signals remain active due to device failures in Relay and TR which can't be detected. Thus, you are recommended to install an addition circuit to monitor the output status for those critical outputs which may cause significant problems.
- ▶ **Never overload more than rated current of output module nor allow to have a short circuit.** Over current for a long period time may cause a fire .
- ▶ **Never let the external power of the output circuit to be on earlier than PLC power**, which may cause accidents from abnormal output operation.
- ▶ **Please install interlock circuits in the sequence program for safe operations in the system when exchange data with PLC or modify operation modes using a computer or other external equipments** Read specific instructions thoroughly when conducting control operations with PLC.

Safety Instruction

Safety Instructions for design process



Caution

- ▶ **I/O signal or communication line shall be wired at least 100mm away from a high-voltage cable or power line. Fail to follow this**

Safety Instructions on installation process



Caution

- ▶ **Use PLC only in the environment specified in PLC manual or general standard of data sheet.** If not, electric shock, fire, abnormal operation of the product may be caused.
- ▶ **Before install or remove the module, be sure PLC power is off.** If not, electric shock or damage on the product may be caused.
- ▶ **Be sure that every module is securely attached after adding a module or an extension connector.** If the product is installed loosely or incorrectly, abnormal operation, error or dropping may be caused. In addition, contact failures under poor cable installation will be causing malfunctions as well.
- ▶ **Be sure that screws get tighten securely under vibrating environments.** Fail to do so will put the product under direct vibrations which will cause electric shock, fire and abnormal operation.
- ▶ **Do not come in contact with conducting parts in each module,** which may cause electric shock, malfunctions or abnormal operation.

Safety Instruction

Safety Instructions for wiring process



Warning

- ▶ **Prior to wiring works, make sure that every power is turned off.** If not, electric shock or damage on the product may be caused.
- ▶ **After wiring process is done, make sure that terminal covers are installed properly before its use.** Fail to install the cover may cause electric shocks.



Caution

- ▶ **Check rated voltages and terminal arrangements in each product prior to its wiring process.** Applying incorrect voltages other than rated voltages and misarrangement among terminals may cause fire or malfunctions.
- ▶ **Secure terminal screws tightly applying with specified torque.** If the screws get loose, short circuit, fire or abnormal operation may be caused. Securing screws too tightly will cause damages to the module or malfunctions, short circuit, and dropping.
- ▶ **Be sure to earth to the ground using Class 3 wires for FG terminals which is exclusively used for PLC.** If the terminals not grounded correctly, abnormal operation or electric shock may be caused.
- ▶ **Don't let any foreign materials such as wiring waste inside the module while wiring,** which may cause fire, damage on the product or abnormal operation.
- ▶ **Make sure that pressed terminals get tighten following the specified torque. External connector type shall be pressed or soldered using proper equipments.**

Safety Instruction

Safety Instructions for test-operation and maintenance



Warning

- ▶ **Don't touch the terminal when powered.** Electric shock or abnormal operation may occur.
- ▶ **Prior to cleaning or tightening the terminal screws, let all the external power off including PLC power.** If not, electric shock or abnormal operation may occur.
- ▶ **Don't let the battery recharged, disassembled, heated, short or soldered.** Heat, explosion or ignition may cause injuries or fire.



Caution

- ▶ **Do not make modifications or disassemble each module.** Fire, electric shock or abnormal operation may occur.
- ▶ **Prior to installing or disassembling the module, let all the external power off including PLC power.** If not, electric shock or abnormal operation may occur.
- ▶ **Keep any wireless equipment such as walkie-talkie or cell phones at least 30cm away from PLC.** If not, abnormal operation may be caused.
- ▶ **When making a modification on programs or using run to modify functions under PLC operations, read and comprehend all contents in the manual fully.** Mismanagement will cause damages to products and accidents.
- ▶ **Avoid any physical impact to the battery and prevent it from dropping as well.** Damages to battery may cause leakage from its fluid. When battery was dropped or exposed under strong impact, never reuse the battery again. Moreover skilled workers are needed when exchanging batteries.

Safety Instruction

Safety Instructions for waste disposal



Caution

- ▶ **Product or battery waste shall be processed as industrial waste.** The waste may discharge toxic materials or explode itself.

Revision History

Version	Date	Contents	Chapter
V 1.0	'15.3	First edition	-

※ The number of User’s manual is indicated right part of the back cover.

© 2015 LSIS Co., Ltd All Rights Reserved.

About User's Manual

Thank you for purchasing PLC of LSIS Co.,Ltd.

Before use, make sure to carefully read and understand the User's Manual about the functions, performances, installation and programming of the product you purchased in order for correct use and importantly, let the end user and maintenance administrator to be provided with the User's Manual.

The User's Manual describes the product. If necessary, you may refer to the following description and order accordingly. In addition, you may connect our website (<http://www.lsis.com/>) and download the information as a PDF file.

Relevant User's Manuals

Title	Description
XG5000 User's Manual (for XGK, XGB)	XG5000 software user manual describing online function such as programming, print, monitoring, debugging by using XGK, XGB CPU
XG5000 User's Manual (for XGI, XGR)	XG5000 software user manual describing online function such as programming, print, monitoring, debugging by using XGI, XGR CPU
XGK/XGB Instructions & Programming User's Manual	User's manual for programming to explain how to use instructions that are used PLC system with XGK, XGB CPU.
XGI/XGR/XEC Instructions & Programming User's Manual	User's manual for programming to explain how to use instructions that are used PLC system with XGI, XGR,XEC CPU.
XGK CPU User's Manual (XGK-CPUA/CPUE/CPUH/CPUS/CPUU)	XGK-CPUA/CPUE/CPUH/CPUS/CPUU user manual describing about XGK CPU module, power module, base, IO module, specification of extension cable and system configuration, EMC standard
XGI CPU User's Manual (XGI-CPUU/CPUH/CPUS)	XGI-CPUU/CPUH/CPUS user manual describing about XGI CPU module, power module, base, IO module, specification of extension cable and system configuration, EMC standard
XGR redundant series User's Manual	XGR- CPUH/F, CPUH/T user manual describing about XGR CPU module, power module, extension drive, base, IO module, specification of extension cable and system configuration, EMC standard

Current user manual of XBL-DSEA is written based on the following version.

Related OS version list

Product name	OS version
XBC H Type	V2.40
XBC SU Type	V1.50
XEC SU Type	V1.40
XEC H Type	V1.80
XBM Type	V3.50
XBC U Type	V1.10
XEC U Type	V1.10
XG5000	V4.0

© Contents ©

Chapter 1 Introduction..... 1-1 ~ 1-4

1.1 What is DeviceNet.....	1-1
1.2 Characteristics of the Module	1-2
1.3 Information for Module Operation	1-3
1.4 Configuration of Smart I/O for Dnet	1-4

Chapter 2 Specifications 2-1 ~ 2-6

2.1 General Specifications	2-1
2.2 Performance Specifications	2-2
2.3 Part names and Structure	2-4
2.4 Cable Specifications	2-5
2.5 Terminating Resistances.....	2-6

Chapter 3 Installation and Test Operation..... 3-1 ~ 3-8

3.1 Installation	3-1
3.1.1 Precautions for installation.....	3-1
3.1.2 Materials necessary for installation.....	3-1
3.1.3 Installation.....	3-2
3.2 From Setting to Operation.....	3-7
3.3 Setting Procedure of SyCon and XG5000.....	3-8

Chapter 4 System Configuration..... 4-1 ~ 4-2

4.1 System with Dnet I/F module used	4-1
4.2 System with Dnet I/F module and LSIS or other company's slaves mixed.....	4-2

Chapter 5 SyCon Settings..... 5-1 ~ 5-27

5.1 SyCon S/W Environment.....	5-1
5.1.1 SyCon S/W configuration file.....	5-1
5.1.2 System requirement.....	5-1
5.2 SyCon Program Installations.....	5-2
5.3 SyCon Execution.....	5-7
5.4 Monitoring Information in SyCon.....	5-26

Chapter 6 High-speed Link Setting..... 6-1 ~ 6-16
--

6.1 Introduction.....	6-1
6.2 How to use XG5000.....	6-2
6.3 High-speed Link Editing.....	6-3
6.4 Read and Write of High-speed Link.....	6-9
6.5 Enable Link.....	6-11
6.6 System Diagnosis.....	6-12
6.7 High-speed Link Information.....	6-14

Chapter 7 Communication Program..... 7-1 ~ 7-19
--

7.1 Example Program.....	7-1
--------------------------	-----

Chapter 8 Troubleshooting.....8-1 ~ 8-6
--

8.1 Symptoms and Management by LED Status.....	8-1
8.2 System Diagnosis in XG5000.....	8-1
8.2.1 Communication module information.....	8-2
8.2.2 High-speed link.....	8-2
8.3 Diagnosis of Communication Module through XG5000.....	8-4
8.4 Trouble shooting for Respective Error.....	8-5
8.4.1 XG5000 abnormal connection	8-5
8.4.2 Communication error with Master module.....	8-6

Appendix A-1 ~ A-17

A.1 List of Flags	A-1
A.1.1 Special relays	A-1
A.1.2 Special register for data link	A-9
A.2 Terminology.....	A-10
A.3 External Dimensions.....	A-17

Chapter 1 Introduction

1.1 What is DeviceNet?

This user guide is made out to describe DevicsNet Slave I/F module (Referred to as “XBL-DSEA Module”) among XGB PLC network modules. It is composed of Physical Layer and Data Link Layer only. As of now, it is proposed as ISO 11898 and 11591-1 standards.

DeviceNet is an application layer developed by Rockwell / Allen-Bradley, it has been widely used in the present industrial automation field.

Since DeviceNet uses CAN communication protocol, low-priced CAN micro chip applied will reduce the cost. In addition, flexible counteractions against errors are also available by access to important diagnosis information of device level which was impossible to use via the I/O interface.

1.2 Characteristics of the Module

DeviceNet (hereinafter referred to as Dnet) I/F module have features as follows;

- ▶ 1 master module can control 63 slave modules with the max. 28,000 points of I/O control available.
- ▶ Multi-drop and T-diverged connection is available allowing the system to be extended and changed easily with flexible system operation function provided.
- ▶ Open network available to connect with other company's various slave modules.
- ▶ Master and slave can be set through Configuration Tool (SyCon), and communication control is available through XG5000.
- ▶ Configuration Tool (XG5000)
 - 1) Station number (MAC ID) can be specified (0 ~ 63) through Configuration Tool.
 - 2) Communication speed can be specified (125/250/500 kbps) through Configuration Tool.
- ▶ Setup time and installation cost of the system will be saved from reduced connections and wiring works by using a single cable for communication power(24V) and communication signal line.

1.3 Information for Module Operation

- 1) It describes required components to operate the product.

Classification	Type	Description	Reference
Series	XBL-DSEA	DeviceNet I/F module.	Slave
Software	SyCon	Software for Station number, Speed, Communication methods, configuration of network setting.	Setup for master
	EDS	Including module information (Product code/Type, Maker name/Maker number) - It is used to configure the network in SyCon.	-
	XG 5000	Software for PLC programming	-

Remark

XG 5000 program can be downloaded at our company website. If you do not have an access to the internet, contact the nearest agency for CD-ROM about XG 5000. EDS file related to our slave module (Smart Link) can be downloaded at <http://www.lsis.com>

- 2) It describes about the number of module and position that can be installed in a single CPU module.
- Dnet slave I / F module can be mounted up to two modules, regardless of main unit type.
- Seven kinds of main units (XBC-U, XBC-H, XBC-SU, XEC-U, XEC-H, XEC-SU, XBM-S) can use Dnet slave I / F module. Please consider the supported number of communication modules per main unit when PLC system is organized. In addition, high-speed link function is only used and P2P function is not used in XG5000.

Classification	Description
Attachable Number	A maximum of 2
High-speed link number	A maximum of 2

- 3) Please refer to below User Manuals to write communication program with Dnet I/F module.

- XGB Instruction Manual / XEC Instruction Manual
- XG 5000 User Manual
- LSIS Dnet master User Manual
- Other company's User Manual which is related to Dnet master
- XGB Main Unit User Manual

1.4 Configuration of Smart I/O for Dnet

1) Dnet I/F modules of XGT series

Products			Details
Classification	Code	Designations	
Master	47200005	XGL-DMEA	XGK Dnet Master I/F
Slave	47230166	XBL-DSEA	XGB Dnet Slave I/F

2) Slave Products List of Stand-alone type

Product			Details
Classification	Code	Designations	
Changeable type	47060053	GDL-D22C	DC input 16 points
	47060106	GDL-D22C(Q)	DC input 16 points, Quick mode
	47060052	GDL-D24C	DC input 32 points
	47060107	GDL-D24C(Q)	DC input 32 points, Quick mode
	47060054	GDL-TR2C	TR output 16 points (0.5A, Source)
	47060108	GDL-TR2C(Q)	TR output 16 points (0.5A, Source), Quick mode
	47060087	GDL-TR2C1	TR output 16 points (0.5A, Sink)
	47060115	GDL-TR2C1(Q)	TR output 16 points (0.5A, Sink), Quick mode
	47060055	GDL-TR4C	TR output 32 points (0.5A, Source)
	47060109	GDL-TR4C(Q)	TR output 32 points (0.5A, Source), Quick mode
	47060081	GDL-TR4C1	TR output 32 points (0.5A, Sink)
	47060116	GDL-TR4C1(Q)	TR output 32 points (0.5A, Sink), Quick mode
	47060056	GDL-DT4C	DC input 16 points/TR output 16 points (0.5A, Source)
	47060110	GDL-DT4C(Q)	DC input 16 points/TR output 16 points (0.5A, Source), Quick mode
	47060083	GDL-DT4C1	DC input 16 points/TR output 16 points (0.5A, Sink)
	47060117	GDL-DT4C1(Q)	DC input 16 points/TR output 16 points (0.5A, Sink), Quick mode
	47060057	GDL-RY2C	Relay output 16 points
	47060111	GDL-RY2C(Q)	Relay output 16 points, Quick mode

3) Slave Products List of Extendable type

Products			Details
Classification	Code	Designations	
Communication Adapter	47060131	XDL-BSSA	Dnet I/F Adapter

Remark

- 1) Changeable type: C type of product whose I/O terminal block can be installed or removed.
- 2) Quick mode: Q type of product whose initializing time is 1.5 sec. after the communication power is On.

Chapter 2 Specifications

2.1 General Specifications

General specifications of XGB series are as specified below in Table 2.1.

No.	Item	Specification				Related specifications
1	Operating temp.	0℃ ~ +55℃				-
2	Storage temp.	-25℃ ~ +70℃				-
3	Operating humidity	5 5%RH, no dew allowed				-
4	Storage humidity	5 ~95%RH, no dew				-
5	Vibration immunity	For discontinuous vibration				-
		Frequency	Acceleration	Amplitude	Number	IEC61131-2
		5≤f< 8.4 Hz	-	3.5mm	Each 10 times in X,Y,Z directions	
		8.4≤f≤150 Hz	9.8 m/s ² (1G)	-		
		For continuous vibration				
		Frequency	Acceleration	Amplitude		
		5≤f< 8.4 Hz	-	1.75mm		
		8.4≤f≤150 Hz	4.9 m/s ² (0.5G)	-		
6	Impact immunity	* Max. impact acceleration: 147 m/s ² (15G) * Authorized time: 11 ms * Pulse wave : Sign half-wave pulse (Each 3 times in X,Y,Z directions)				
7	Noise immunity	Square wave impulse noise		AC: ±1,500V DC: ±900V		Test specification of LS Industrial Systems
		Static electric discharging		Voltage : 4kV (contact discharging)		IEC 61131-2, IEC 61000-4-2
		Radiation electromagnetic field noise		80 ~ 1000MHz, 10 V/m		IEC 61131-2, IEC 61000-4-3
		Fast Transient /burst noise	Class	Power module	Digital/Analog I/O communication interface	IEC 61131-2, IEC 61000-4-4
			Voltage	2kV	1kV	
8	Ambient conditions	No corrosive gas or dust				
9	Operating height	2,000m or less				
10	Pollution level	2 or less				
11	Cooling type	Natural air cooling				

Table 2.1 General Specifications

Notes

- 1) IEC (International Electrotechnical Commission):
An international nongovernmental organization which promotes internationally cooperated standardization in electric/electronic field, publishes international standards and manages applicable estimation system related with.
- 2) Pollution level:
An index indicating pollution level of the operating environment which decides insulation performance of the devices. For instance, Pollution level 2 indicates the state generally that only non-conductive pollution occurs. However, this state contains temporary conduction due to dew produced.

2.2 Performance Specifications

1) Performance specifications

Performance specifications of DeviceNet (hereinafter referred to as Dnet) I/F module are as described below.

Item		Performance Specifications
Transmission Specification	Transmission Speed (kbps)	125/250/500
	Transmission Type	Poll, Bit strobe, COS, Cyclic
	Communication distance(m)	Thick Cable 500 (125kbps)/250 (250kbps)/100 (500kbps)
		Thin Cable 100 (125/250/500kbps)
	Terminal resistance (Ω)	121 (1%, 1/4W)
	Max.drop length(m)	125 kbps 6 (Max. extended length 156)
		250 kbps 6 (Max. extended length 78)
		500 kbps 6 (Max. extended length 39)
	Data Packet	0~8 Bytes
	Message Access Control	CSMA/NBA
	Network Structure	<ul style="list-style-type: none"> • Trunk/drop line • Power/Signal cable inside the identical network cable
	Bus Type	<ul style="list-style-type: none"> • Poll type
	Max. number of nodes	Up to 64 (including master) MAC IDs (MAC Identifier)
	System Features	Insertion and removal of node available in voltage On status
	Operation Voltage	DC 24V
XG5000 (High-speed link)	Diagnosis Function	Module: Checks duplicated station/ Checks CRC error SyCon: Detects defective station/Checks BusOff/Auto-scan function XG5000: Monitors High-speed link
	Master/Slave Operation	Available only in slave
	Parameter setting	1) Setting to High-speed link of XG5000 (RS-232C of CPU module or USB port)
Basic Specification	Data process unit	Word
	Send/Receive period	Select among 10ms, 20ms, 50ms, 100ms, 200ms, 500ms, 1s, 5s and 10s - Default : 20ms
	Max. communication point	Send 2048points, Receive 2048 points, 256 bytes respectively
	Max. block number	64 (Setting range: 0~63)
	Max. point number per block	2048 points (256 bytes)
Basic Specification	Max. modules installed	Up to 2
	Internal-consumed current (mA)	Module: 100mA, 5pin Connector: 50mA
	Weight (g)	110g

Remark

- 1) Transmission distance of Dnet I/F module is inversely proportional to data transmission rate. If thin cable is used, the transmission distance will be limited to 100m regardless of data transmission rate.
- 2) CSMA/NBA (Carrier Sense Multiple Access with Non-destructive Bitwise Arbitration)
- 3) If the station No. of Dnet I/F module (master module) is specified, surely reset the applicable slave module.

Chapter 2 Specifications

2) Communication methods

Communication methods can be set Poll, Bit-Strobe, COS(Change of State), Cyclic.

Communication method's features are as shown below.

Communication method	Feature
Poll	Master and slave module Send/Receive the data by one on one.
Bit-Strobe	It is used only in input module. The way to transmit data simultaneously for master module from its input type slave modules when the master module's data transmission request is received.
COS (Change of State)	If input data status of slave module is changed, slave module transmits changed data to master module. But output type slave module, <u>Settings</u> → <u>Device Configuration</u> Menu selection → <u>Connection Object Instance Attributes</u> Setting window → <u>Expected Packet Rate</u> Category, transmits every time according to its setting rates.
Cyclic	Slave module attempts to Send/Receive periodically. Communication period setting, <u>Settings</u> → <u>Device Configuration</u> Menu selection → <u>Connection Object Instance Attributes</u> Setting window → <u>Expected Packet Rate</u> Category, sent/receives data periodically between master and slave module according to its setting periods.

So, Communication method should be used with cautions along with data process of Input/Output module in the system.

3) EDS (Electronic Data Sheet) file

- It is to allow other vendors to use restricted information of product through EDS file format.

Restricted information of product: Maker name and unique number (ODVA Certification)

Module information (Master and slave module)

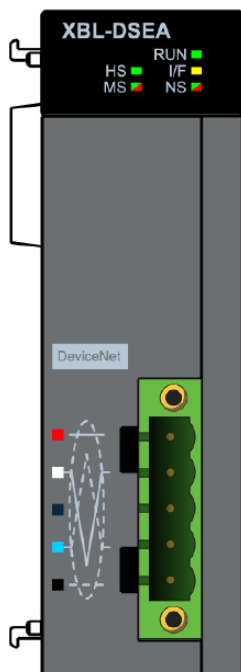
Input/Output module information (Input point, Output point)

Information on communication support method

- EDS file addition: It can be executed by File → Copy EDS.

Copied EDS file can be used only when located under EDS folder of SyCon execution directory

2.3 Part names and Structure



(1) LED display parts

LED	Status	LED display description
RUN	On	Normal
	Off	Error
I/F	Flickering	Normal
	On	Error
HS	On	Normal
	Flickering	Error
	Off	Error
MS	Off	Power Off
	Green Flickering	Waiting
	Green On	Normal
	RED Flickering	Warning
	RED On	Critical error
	Green /RED Flickering	Initialization
NS	Off	Power Off
	Green Flickering	Waiting
	Green On	Normal
	RED Flickering	Warning
	Red On	Critical error
	Green /RED Flickering	Initialization

(2) 5pin connector (for external connection)

Color	Signal	Service	5 pin connector
Red	DC 24V(+)	Vcc	<p>121Ω</p>
White	CAN_H	Signal wire	
Bare	Drain	Shielded wire	
Blue	CAN_L	Signal wire	
Black	DC 24V(-)	GND	

2.4 Cable Specifications

1) Cable specifications (Belden)

Classification	Thick (class1)	Thick (class2)	Thin (class2)	Trunk and Drop line is used concurrently
Type	7897A	3082A	3084A	
Cable Type	Round			
Impedance (Ω)	120			
Temperature range (℃)	-20 ~ 75			
Max. allowable current(A)	8		2.4	
Min. radius of curvature (in.)	4.4	4.6	2.75	
Core wire number	5 wires			

2) Maximum trasmission distance for repective cable types


(1) If one type of trunk line is used

Transmission speed	Maximum distance	
	Thick cable	Thin cable
125kbps	500m	100m
250kbps	250m	100m
500kbps	100m	100m

(2) If mixed with trunk line


Transmission speed	Max. distance if Thin and Thick cables are used as mixed
125kbps	Thick cable length + 5 x Thin cable length \leq 500m
250kbps	Thick cable length + 2.5 x Thin cable length \leq 250m
500kbps	Thick cable length + Thin cable length \leq 100m

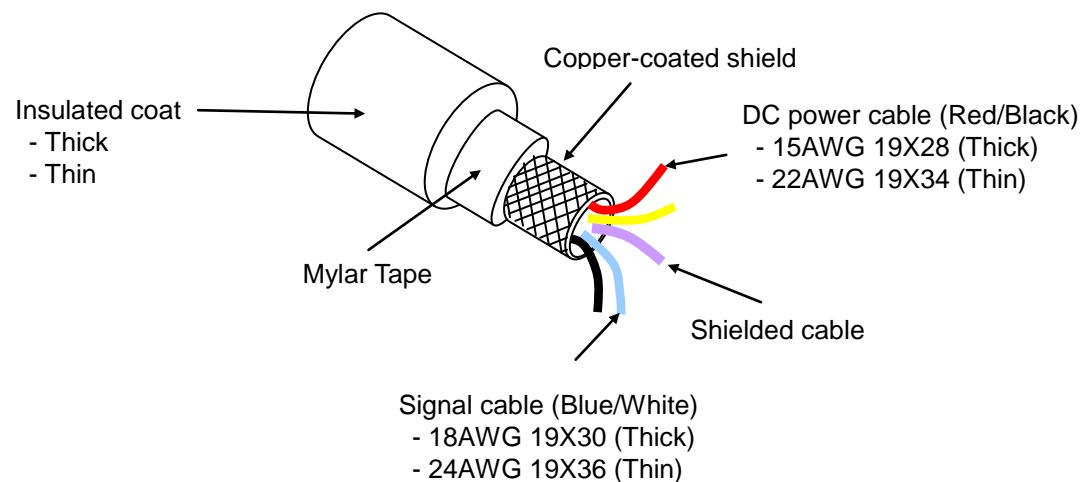3) Structure





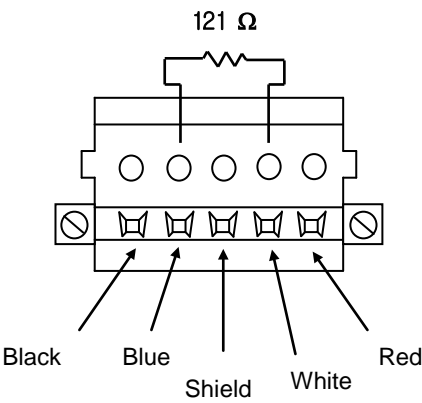2.5 Terminating Resistances

- Attach 121Ω, 1%, 1/4W of resistance to both ends of the network.
- Connect connector's CAN_H (White) with CAN_L (Blue) signal cable.



- Connection Connector

Classification	Cable connection method	
	single direction connector	dual direction connector
Shape		

Remark

- 1) Be sure to attach the terminating resistor to both ends of the network trunk line, or to both ends of the tap if composed of device port tap. If the terminating resistor is omitted, communication will not be normal.
- 2) If the terminating resistor is installed on the port tap, it is not necessary to install an additional terminating resistor.

Chapter 3 Installation and Test Operation

3.1 Installation

3.1.1 Precautions for installation

For system configuration through Dnet Slave I/F module, carefully make sure of the following items prior to installation.

- 1) Check the basic factors necessary for system configuration so to select an appropriate communication module.
- 2) Prepare accessories such as cable, tap and terminating resistor used for communication module.
- 3) Speed of communication modules shall be identical respectively based on the communication speed applicably used for the communication module in compliance with cable specifications.
- 4) If the tap is used, surely apply terminating resistor to the tap of both ends.
- 5) In a single network, it must be set without duplicated station number.
- 6) Before the communication module is installed, check for any power supply, any foreign material on the base connector the module will be installed on and any damage on the connector pin of the module.
- 7) The module when installed on the base board or used solely shall be securely connected with the correspondent. If the connection is incomplete, interface with CPU may be abnormal.
- 8) Communication speed to be applied to this communication module is 125/250/500kbps. In order to change the communication speed of slave module once specified, let it powered off and then change the communication setting switch to apply the changed mode.

3.1.2 Materials necessary for installation

Materials necessary	Dnet I/F module
Communication cable	Thick cable/Thin cable (only for Dnet)
Tap	4,8-port tap
Terminating resistor	Terminating resistor : 121Ω, 1%, 1/4W
24V power supplier	General power supplier
Connector	Open type 5-pin connector

3.1.3 Installation

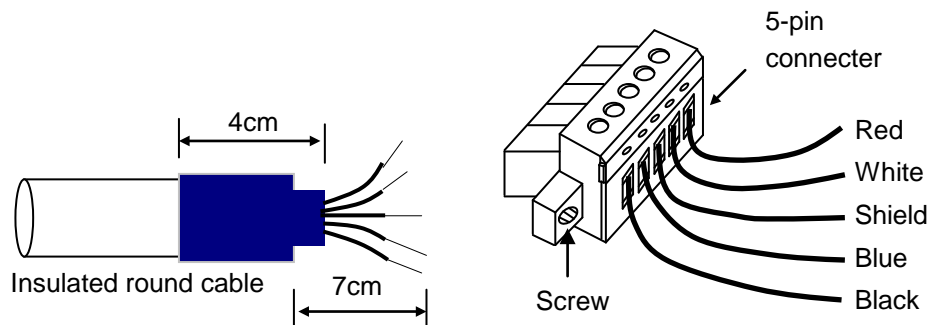
1) Precautions for installation of the connector

Prior to installation of the connector, please pay attention to the following.

- (1) Installation shall be performed when no signal and power supply is carried by cable.
- (2) If the module installed on the system operates, stop the operation prior to installation.


After the installation is complete, secure the applicable cable tightly so to keep from being vibrated or escaped.

2) How to install the connector




- (1) First, slip off the coat of the cable about 7cm to connect.
- (2) Cut the packing cover contracted about 4cm to cover on the cable and wrap up the exposed conductor and insulated coat of the cable.
- (3) Slip off the coat of the cable about 8mm at the both ends respectively and apply heat to the packing cover contracted to adhere closely to the cable.
- (4) Insert the slipped coat into the connector's clamp screw with a proper distance and tighten the screw (DC power supply and signal line is in identical cable, so ,be sure to make designation of the signal identical between cable and connector).

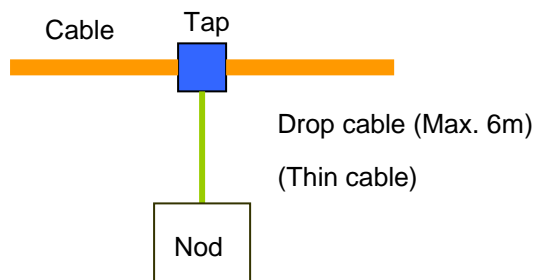Tap-applied method and drop-applied method are available for the cable connection. And DC 24V power is recommended to be installed on the position necessary to keep the voltage when lots of Dnet I/F modules are expected or the cable is expected to get long.



3) How to install the tap (8-port tap)

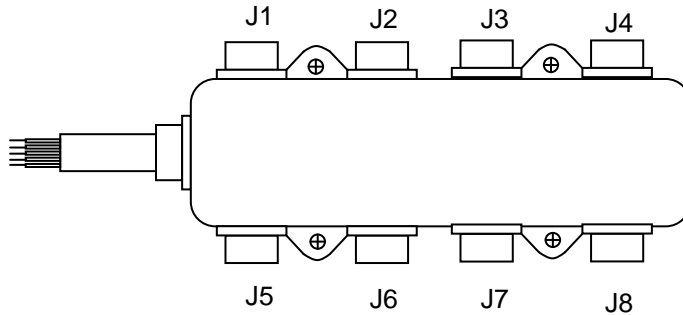
Connect to device port tap's trunk line where up to 8 connections and disconnections are available.




- (1) The drop line composed of Thick or Thin cable can be connected with the device through the tap. And if it is a Open-Style tap, 3 types of connectors can be used.
 - Pluggable screw type
 - Hard-wired screw type
 - Soldered type
- (2) The cable is most desirable to connect with drop line when the system does not operate. If the cable is to be connected when the system operates, check the connection status with other devices and let it connected with the trunk line so to avoid the influence on communication.
- (3) When connected with the trunk line, don't let the max. allowable length exceeded.

4) How to connect with network

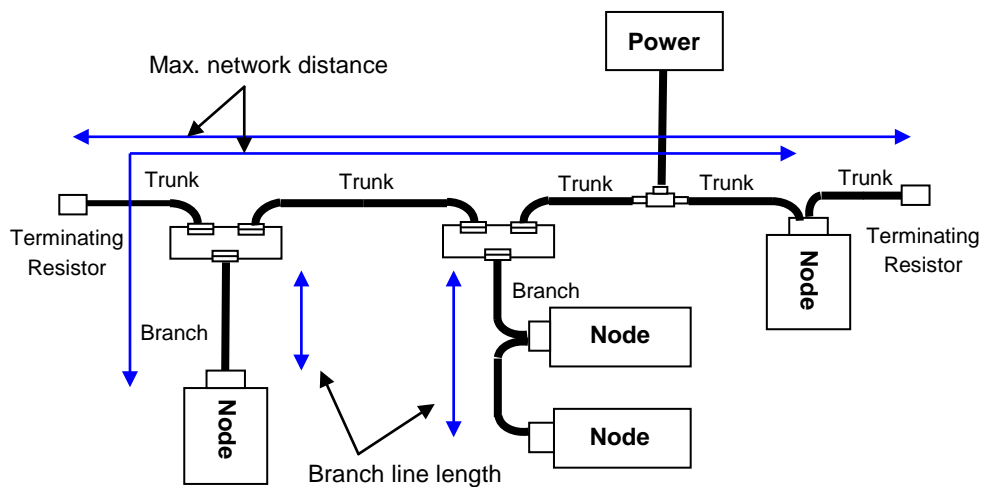- (1) Max. network distance: stands for the distance between nodes most far away or between terminating resistors.



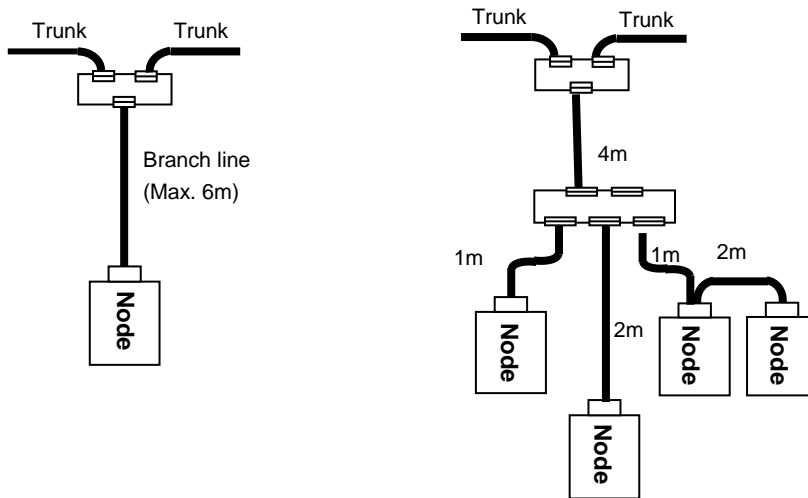(2) Branch line length: stands for the length (max. 6m) from the first branched position of the trunk line to the last of the branch line.




(3) Communication distance compared with communication speed

Communication speed	Max. network length		Branch line length	Branch line length in total
	Thick	Thin		
500kbps	100m or less	100m or less	6m or less	39m or less
250kbps	250m or less			78m or less
125kbps	500m or less			156m or less

5) Branch line length in total

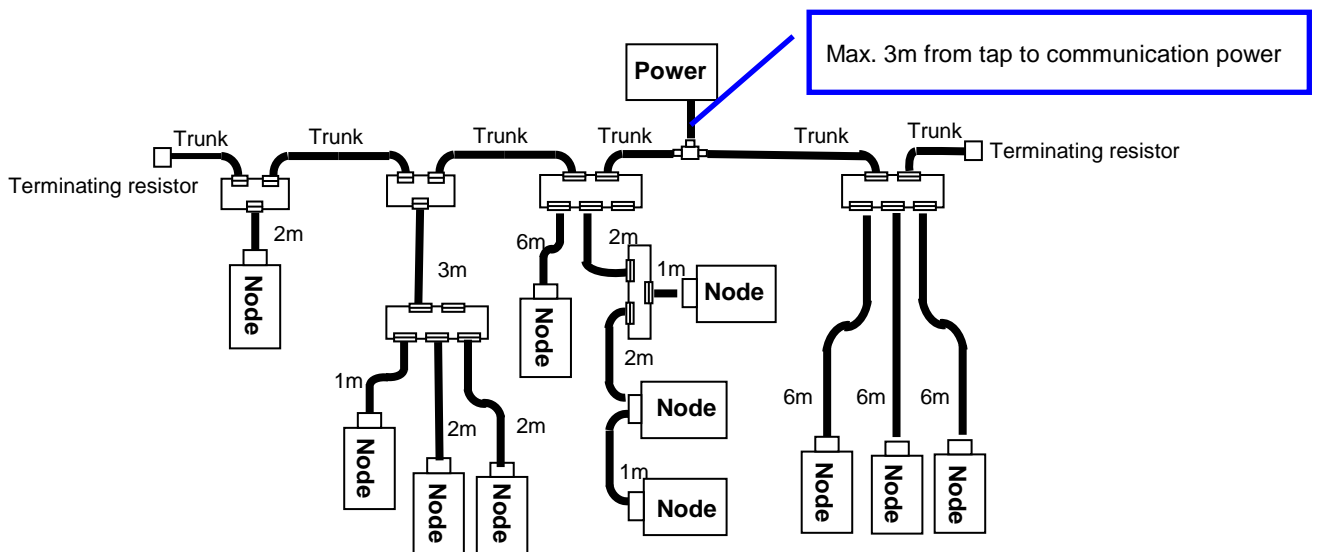
- Distance of accumulated branch line length (length of each branch line shall be within the max. 6m)



As for the configuration example above, since the branch line length is within 6m, there is no problem in the branch line length. However since the total length of the branch line is 40m which does not comply with the max. branch line length of 39m with communication speed of 500kbps, 250 and 125kbps are only available for communication.

6) Network configuration and Checklist

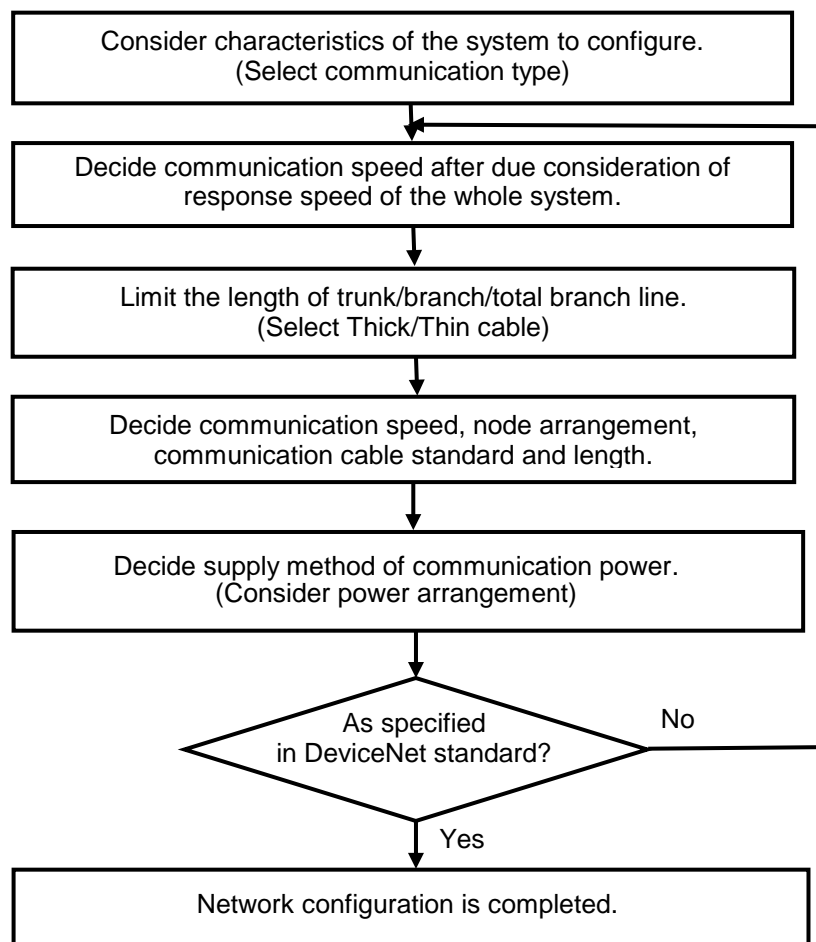Prior to the first network configuration, please check the system to be installed in the sequence as specified below;




7) Power arrangement


4 types of power arrangement are available as shown below.

At this time, the distance between power and power tap shall be within 3m.

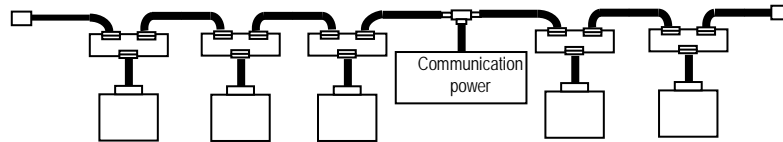
(1) If node is arranged in both directions of power



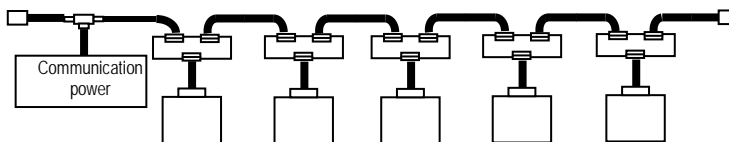
(2) If node is arranged in a direction of power



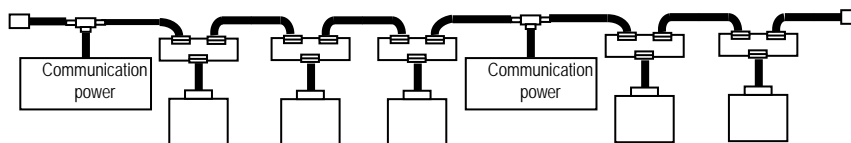(3) If the system of power supply is separated, with the plural power installed




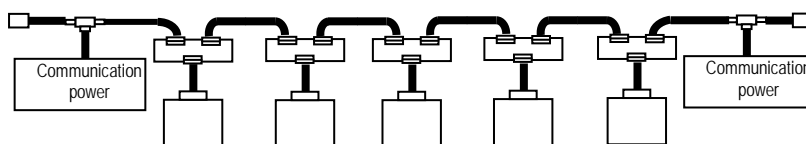(4) If power duplicated



3.2 From Setting to Operation

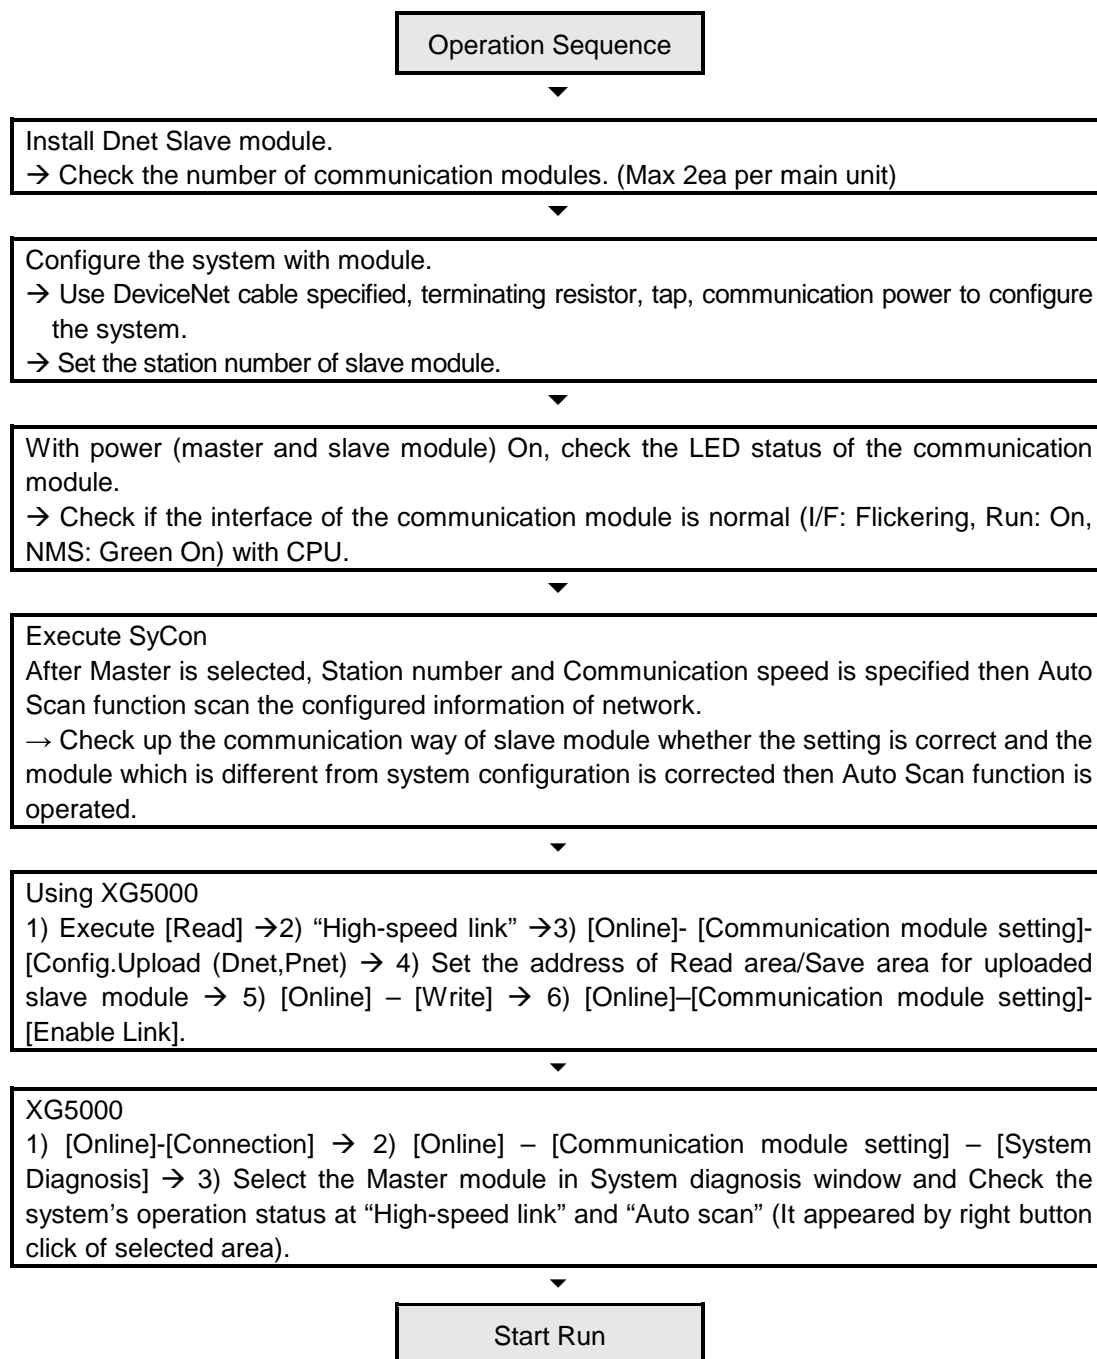The sequence of the product from installation to operation will be described below. After the product installation is complete, install and configure the system to be operated as specified in the following sequence.




Remark

- 1) When the first station No. is initialized, the value read from the communication module will be kept continuously. Thus, the details changed (station No., etc.) during communication will not be applied during operation.

3.3 Setting Procedure of SyCon and XG5000

After setting the network configuration in SyCon software, then set the high speed link parameter and data in XG5000 software.

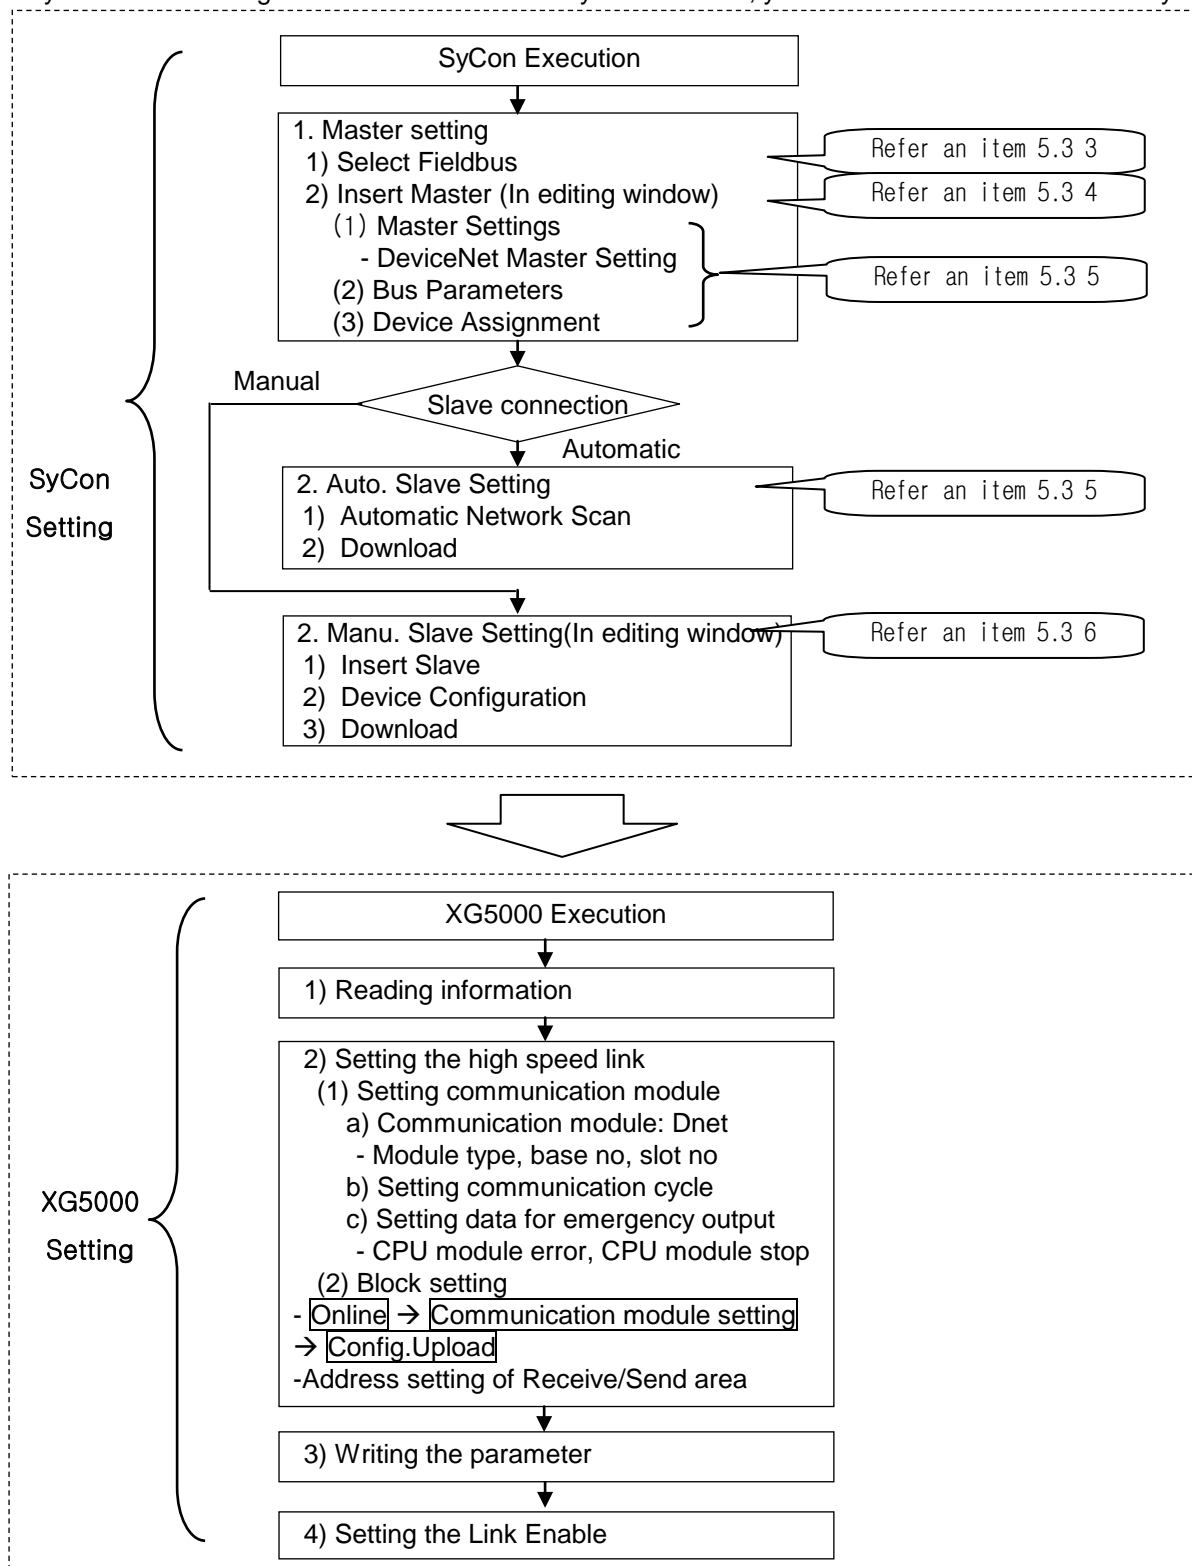
If you don't set configuration of the network in SyCon software, you can not communicate normally.



Chapter 4 System Configuration


4.1 System with Dnet I/F module used

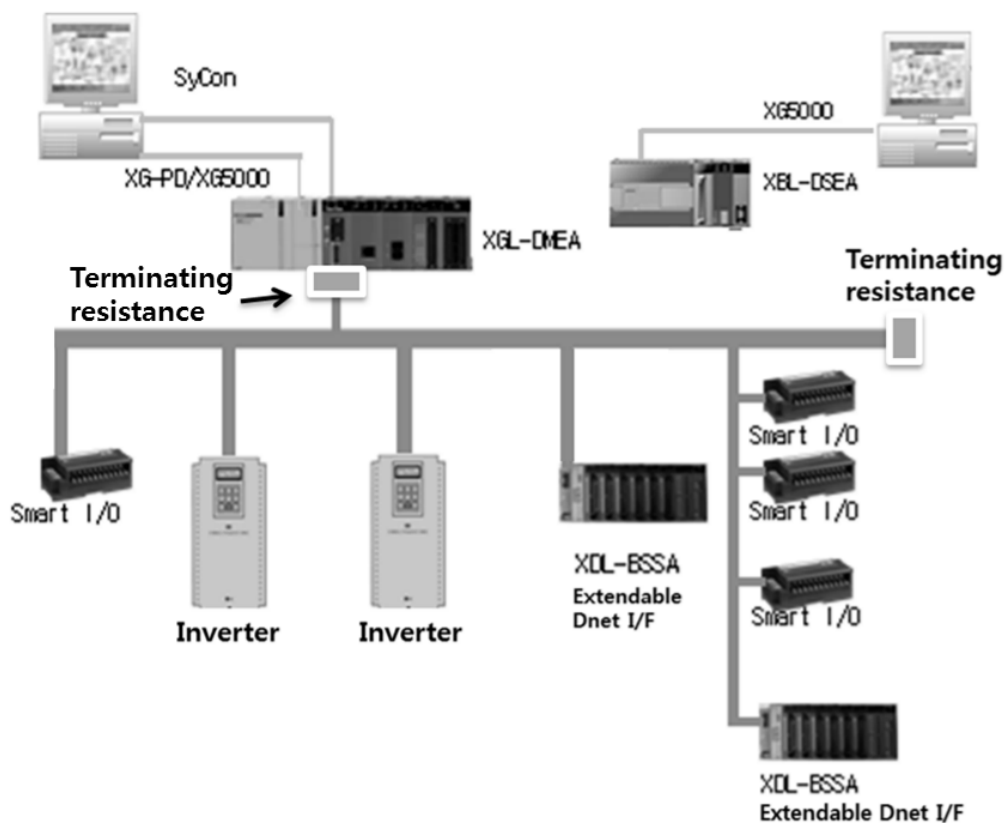Communication system between Dnet I/F modules can be configured as shown below. In the system, XGL-DMEA communication module shall be set to the master and the rest set to slave modules. In order to connect with LS inverter, Dnet I/F option module shall be installed on the applicable product to make the communication available.



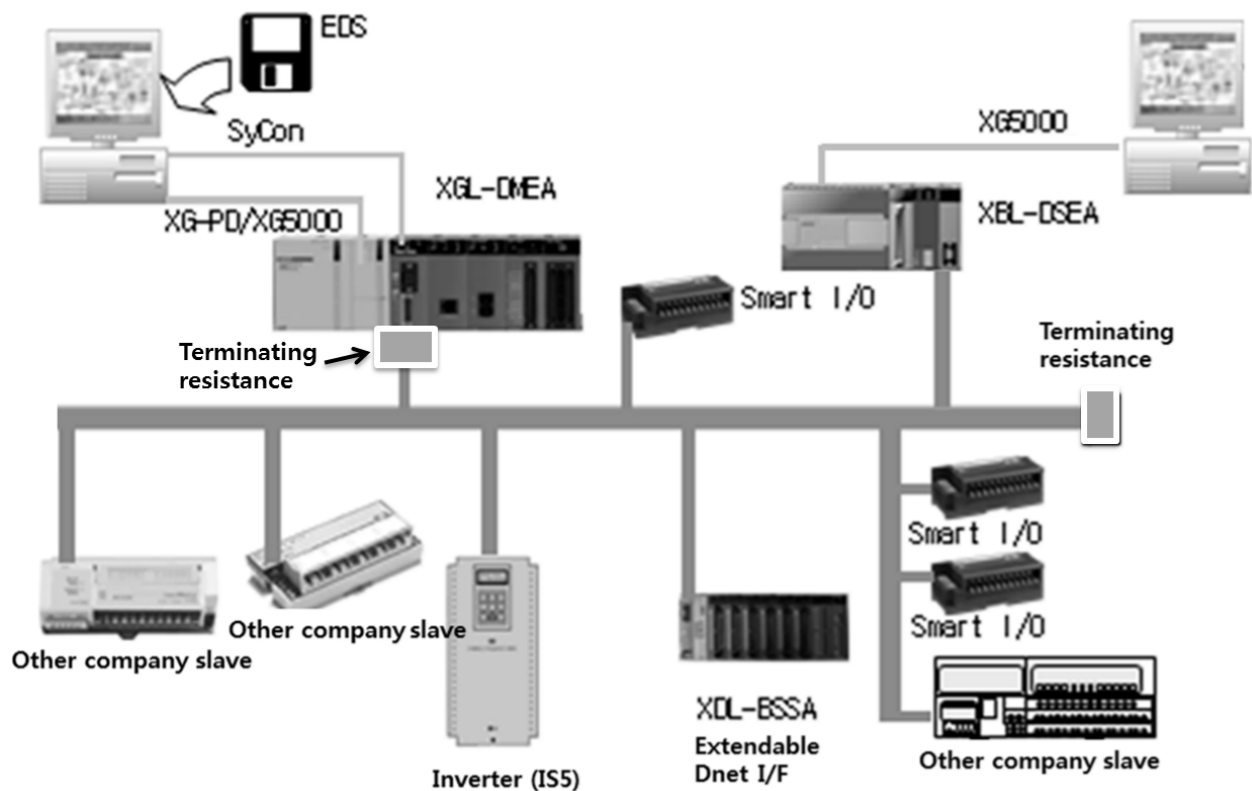4.2 System with Dnet I/F module and LSIS or other company's slaves mixed








In order to use other company's slave module, EDS (Electronic Data Sheet) file provided by its maker is necessary. Copy EDS file on the EDS folder of SyCon, the software tool for Dnet configuration and then use SyCon automatically to set the slave modules existent in the network.



Chapter 5 SyCon Settings

5.1 SyCon S/W Environment

5.1.1 SyCon S/W configuration file


Name	Date modified	Type	Size
 Driver	2013-06-26 오후 8:33	File folder	
 EDS	2013-06-26 오후 8:33	File folder	
 SYCON	2013-06-26 오후 8:33	File folder	
 autorun.bmp	2006-07-06 오후 1:44	BMP File	1,407 KB
 autorun.exe	2002-07-30 오후 12:09	Application	320 KB
 AUTORUN.INF	1998-04-14 오전 11:42	Setup Information	1 KB
 HILSCHER.ICO	1997-02-19 오전 10:17	Icon	1 KB

5.1.2 System requirement

- Pentium 486 MHz above
- Windows 95/98/ME/NT/2000/XP
 - Windows 95: Service Pack 1 above
 - Windows NT: Service Pack 3 above
- 80Mbytes minimum free space
- CD ROM Drive required
- RAM memory minimum 16Mbytes required
- Graphic Resolution: 800 x 600 pixel minimum
- Windows 95: Service Pack 1 above
- Windows NT: Service Pack 3 above

5.2 SyCon Program Installations

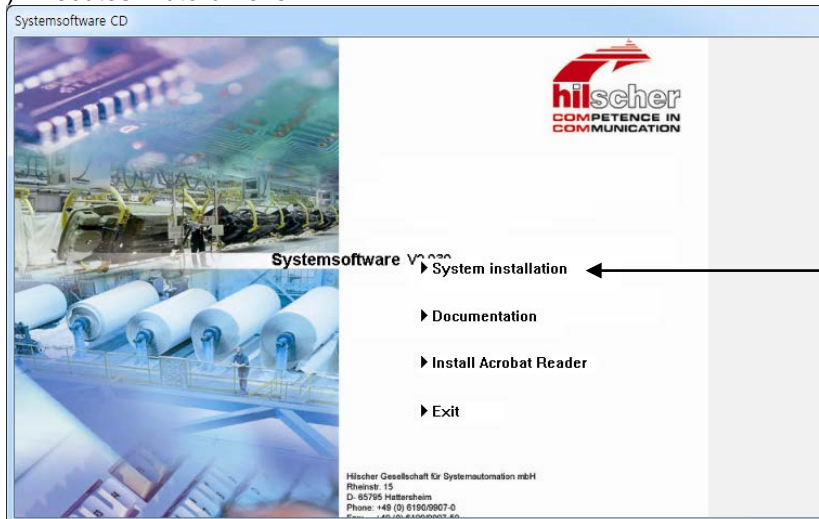1) Executes 'Autorun.exe'.



Select
'System Installation'.

→ Selects 'System Installation'.

2) Executes 'System Installation'.

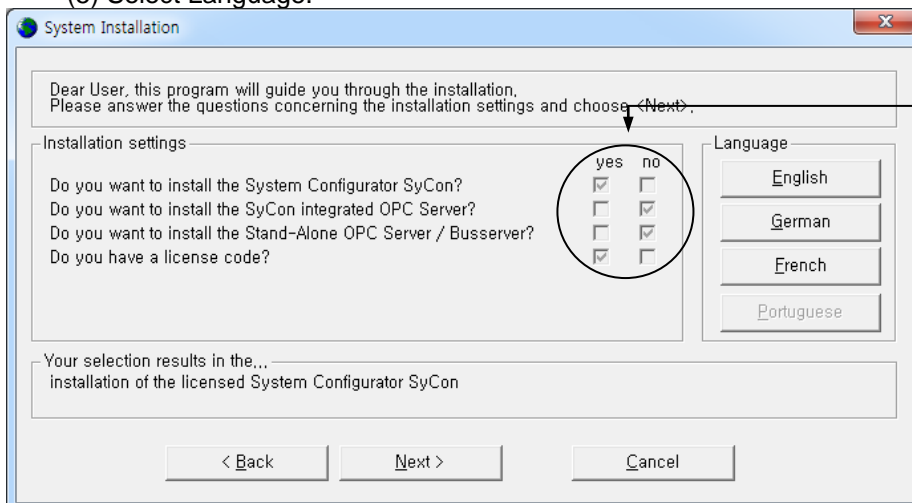
(1) Do you want to install the System Configurator SyCon? → yes

(2) Do you want to install the SyCon Integrated OPC Server? → no

(3) Do you want to the Stand-Alone OPC Server/Busserver? → no

(4) Do you have a License code? → yes


(5) Select Language.



Select here

→ Select 'Next'.

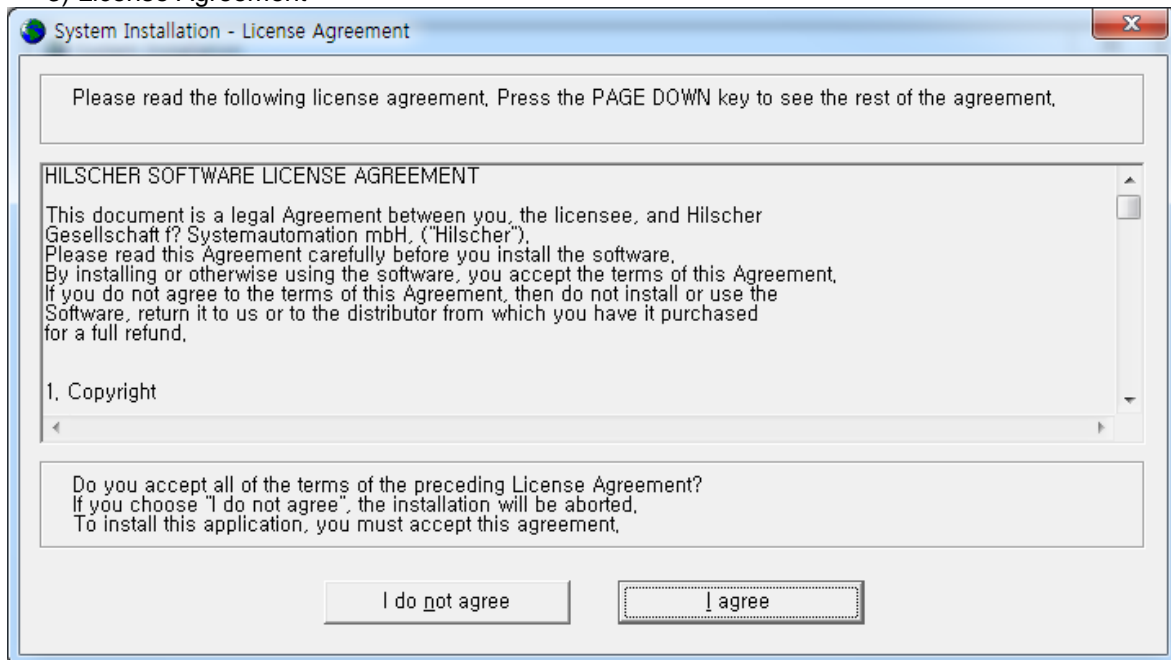3) License Agreement



→ Select 'I agree'.

4) Program Registration

The dialog box titled 'System Installation - Program Registration' contains the following text:

ATTENTION:
Please enter the license code from your CD.

Fields for registration:

Name	System Manager
Company	LSIS
Address	
City, State, Zip	
Country	
License code	F90BF4B3E874

Buttons: Back, OK

License Code: F90BF4B3E874

→ Select 'OK'.

The dialog box titled 'Question' contains the following text:

Are your entries correct?


Name	System Manager
Company	LSIS
License code	F90BF4B3E874

Buttons: Yes, No

→ Select 'Yes'.


Chapter 5 SyCon Settings

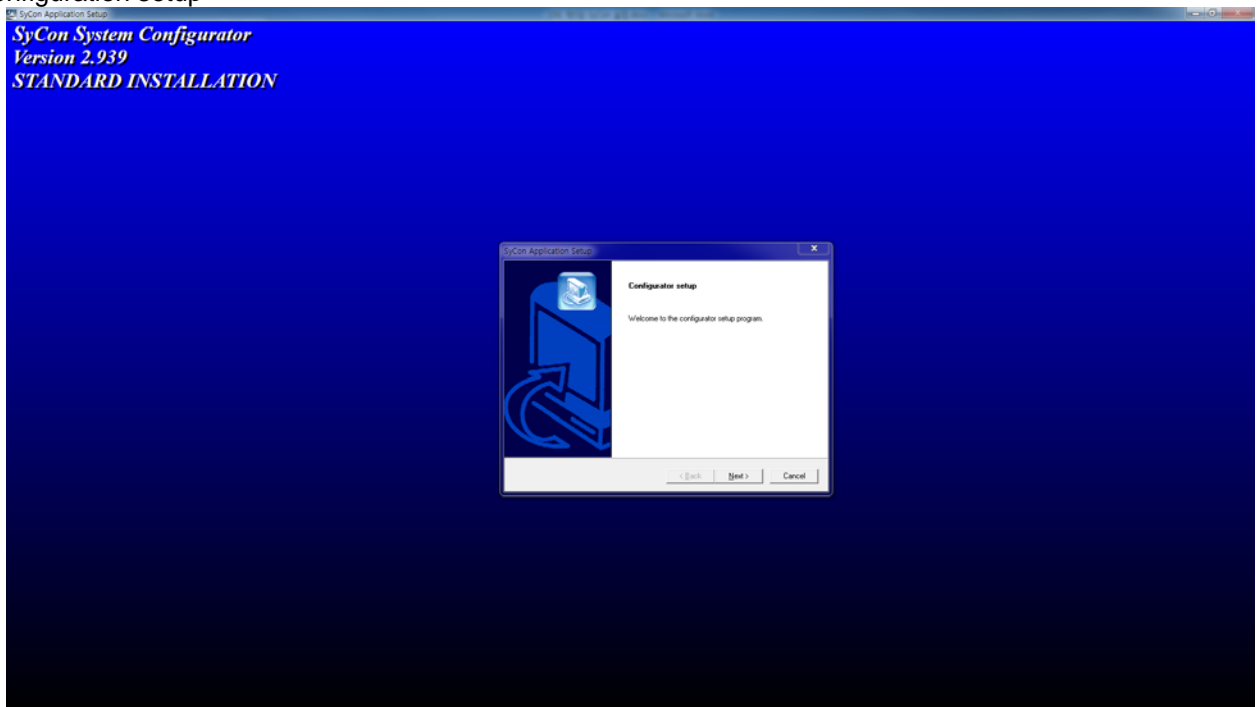5) Configuration setup




→ Select 'Next'.

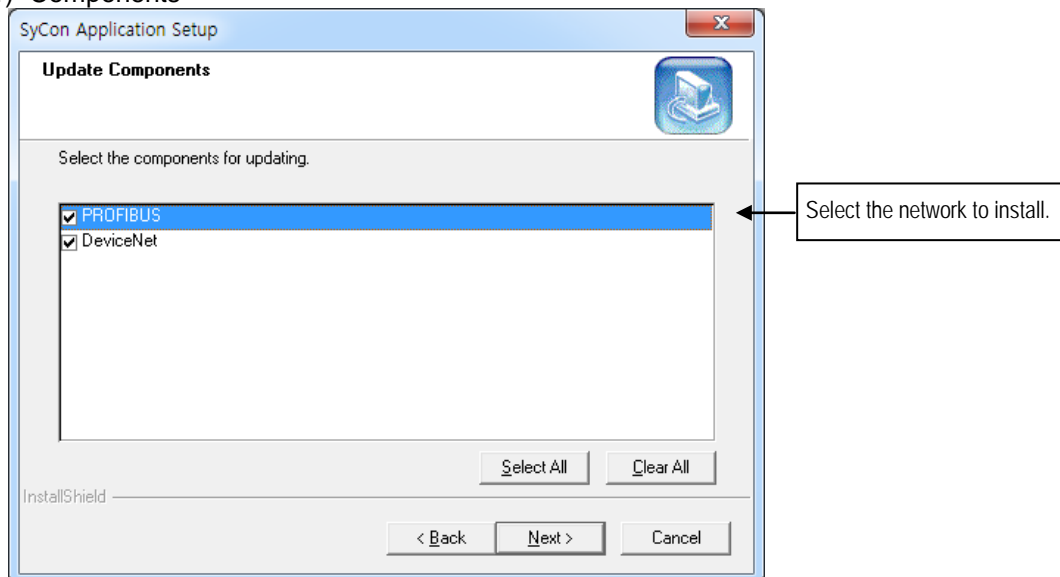
(1) Components




→ Select 'Next'.

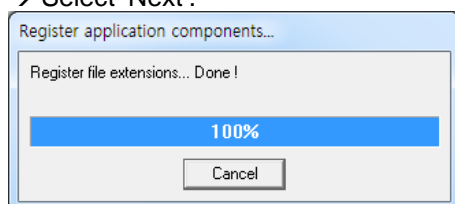

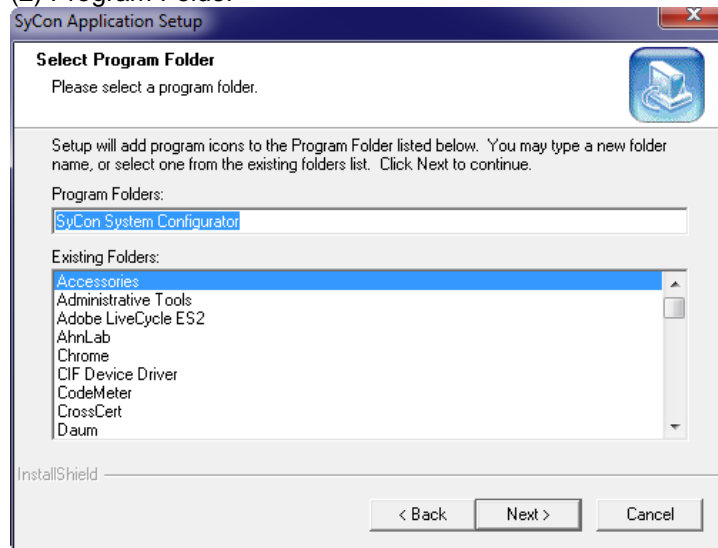
(2) Program Folder



→ Select 'Next'.

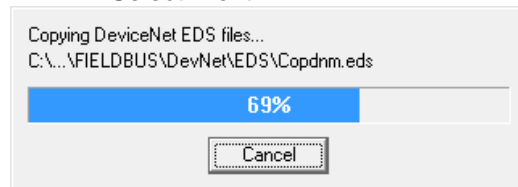

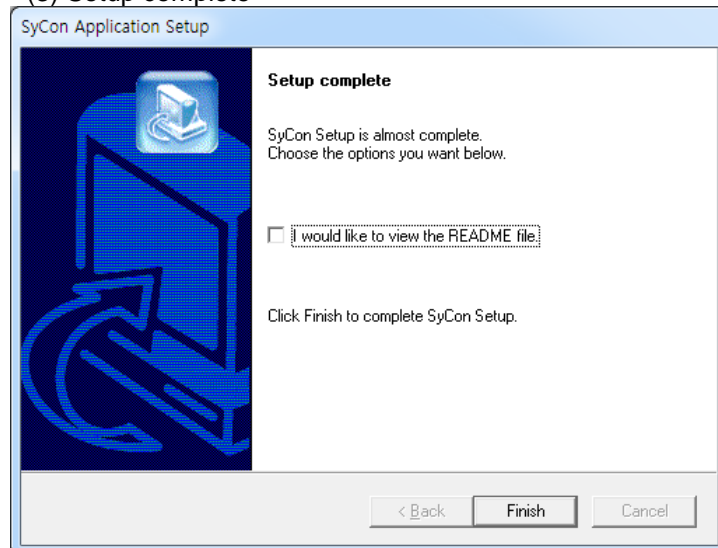
(3) Setup complete



Chapter 5 SyCon Settings


6) Content installed

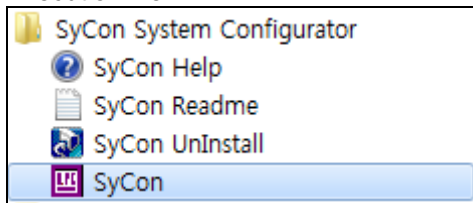(1) Execution file



(2) Folder

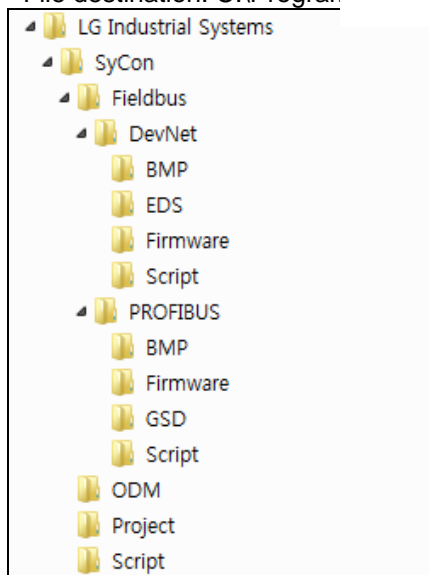- File destination: C:\Program



(3) EDS file for DeviceNet

EDS file is created automatically as shown below.

Name	Date modified	Type	Size
COMDNS.EDS	2004-02-20 오전 10:17	EDS File	2 KB
Copdnm.eds	2004-04-01 오전 11:39	EDS File	1 KB
Ec1dnm.eds	2004-03-31 오후 4:21	EDS File	1 KB
Ec1dns.eds	2004-04-01 오전 11:39	EDS File	2 KB
GDL-D22A.eds	2004-11-23 오전 10:26	EDS File	1 KB
GDL-D24A.eds	2004-11-23 오전 10:26	EDS File	1 KB
GDL-DT4A.eds	2004-11-23 오전 10:26	EDS File	2 KB
GDL-RY2A.eds	2004-11-23 오전 10:27	EDS File	1 KB

5.3 SyCon Execution

Set the basic parameter for Dnet communication between master and slave. Master and slave configuration has 2 methods as shown below.

(1) Configuration with EDS file

Advantages: It can be set the slave which is not connected actually.

Disadvantages: If setting is wrong, the communication is operated abnormally.

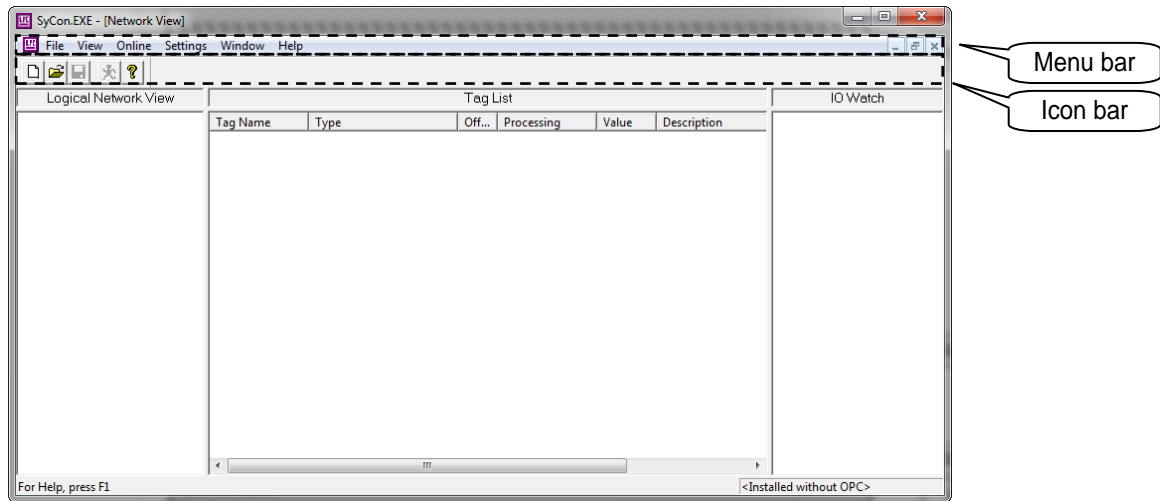
(2) Auto Scan

Advantages: It can be set the parameter easily and speedy.


Disadvantages: It can be set only connected slave.

So, Use the methods properly by situation.

1) Initial screen execution



[Network]

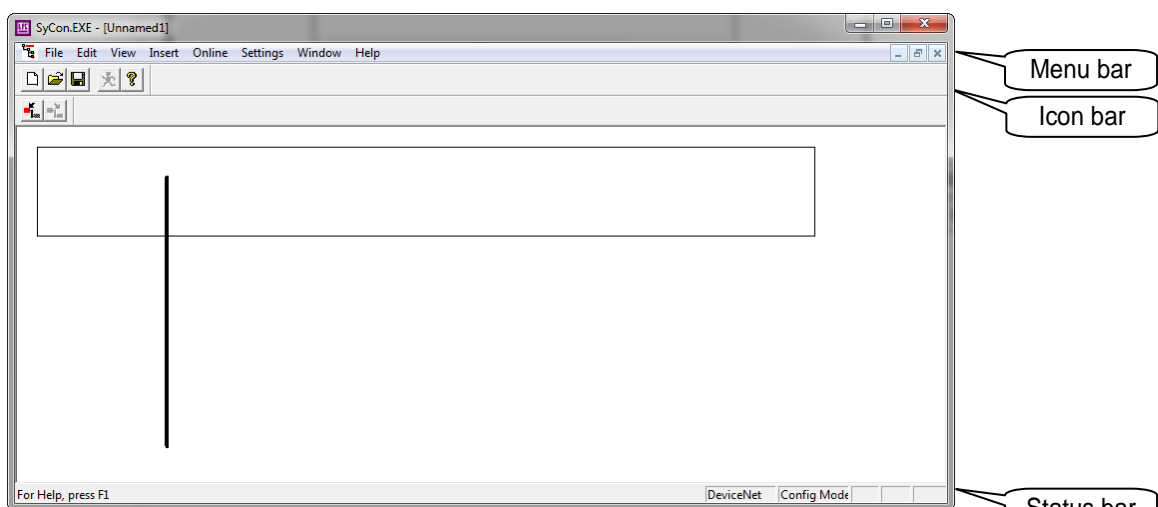

[Editing screen]

Chapter 5 SyCon Settings

2) Configuration menu

Main menu	Submenu	Description	Remark
File	New	Make New File.	M/S
	Open	Open existed File.	M/S
	Close	Close activated file.	M/S
	Save	Save activated file.	M/S
	Save As	Save activated file as another name.	M/S
	Export	Export Project file.	M/S
	Copy EDS		
	Print...	Print.	M/S
	Print Preview	Preview print.	M/S
	Print Setup...	Print setup.	M/S
	Recent File	Display file list recently used.	M/S
	Exit	Exit SyCon.	M/S
	Copy DBM	Copy DBM extension file.	M/S
	Copy CSV	Copy CSV extension file.	M/S
Editor	Cut	Cut.	S
	Copy	Copy.	S
	Paste	Paste.	S
	Delete	Delete.	S
	Replace	Replace.	M/S
View	Device Table	Display of Network setting status. (MAC ID, Master/Slave)	M/S
	Address Table	Display Input/Output size and slave module address.	M/S
	Logical Network View	Change into initial Logical Network View from editing screen.	M/S
	Toolbars	Standard	To activate standard menu bar.
		Fieldbus	To activate Insert Icon menu bar.
	Status Bar	To display Status Bar in basic SyCon screen.	M/S
Insert	Master...	Master	It selects to insert master module.
	Device...	Device	It selects to insert slave module.

* Remark

M: It means Master. It activates when master is selected in editing screen.

S: It means Slave. It activates when slave is selected in editing screen.

Chapter 5 SyCon Settings

Main menu	Submenu	Description	Remark
Online	Download	To download SyCon setting file.	M
	Start Debug Mode	It displays present connection status.	M
	Device Diagnostic	It displays saved diagnostic information.	M
	Firmware Download	It is used for downloading Firmware.	M
	Firmware/Reset	Reset Firmware.	M
	Extended Device Diagnostic	Extended diagnostic function of Device.	M
	Global State Field	It displays present communication status and module status.	M
	Live List	It displays module's information and status per station number.	M
	I/O Monitor	To display I/O data.	M
	Message Monitor	Data analysis between Master and Slave	M
	Automatic Network Scan	Set Network automatically.	M
	Get Device Attribute / Set Device Attribute...	Get Device Attribute/ Set Device Attribute	S
	Start Communication...	Start communication.	M
	Stop Communication...	Stop communication.	M
	Device Info...	Display of Device's manufacture data and Serial number.	M
	Activate Driver...	Register unregistered device.	M
	Read Project Information...	Display Project information.	M
Settings	Device Assignment... Ctrl+B	Device Assignment	M
	Bus Parameters...	Bus Parameters	M
	Master Settings...	Master Settings	M
	Device Settings...	Device Settings	-
	Device Configuration...	Device Configuration	S
	<input checked="" type="checkbox"/> Auto Addressing	Auto Addressing	M/S
	Project Information...	Project Information	M/S
	Path...	Path	M/S
	Language...	Language	M/S
Window	Cascade	Cascade	M/S
	Tile	Tile	M/S
Help	Help Topics...	Help Topics	M/S
	About...	About	M/S

* Remark

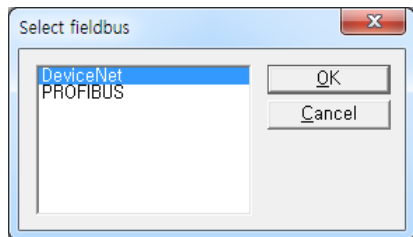
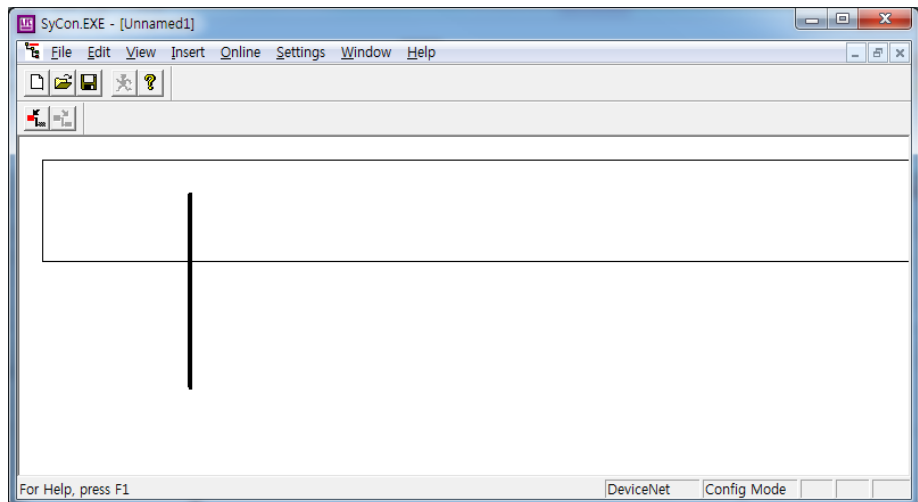
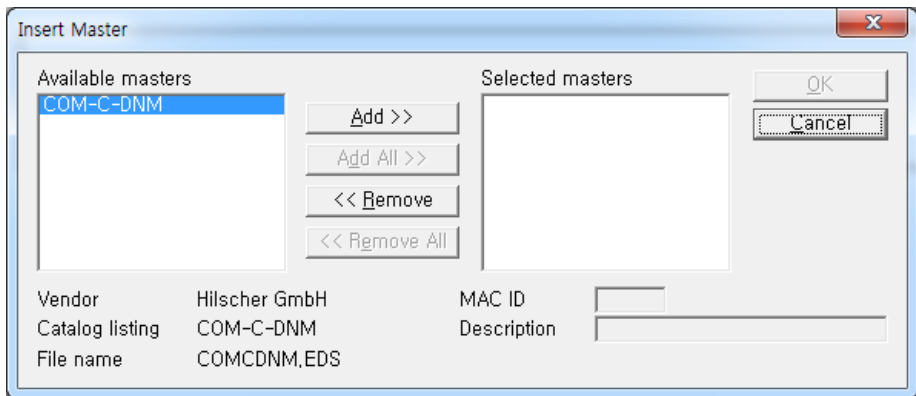
M: It means Master. It activates when Master is selected in editing screen.

S: It means Slave. It activates when Slave is selected in editing screen.

Chapter 5 SyCon Settings

3) New File

Master must be set by New file, It can be set the slave automatically in Auto-scan.


Classification	Configuration screen								
Fieldbus									
Screen Configuration									
Select Master	 <table border="1" data-bbox="466 1843 1412 1946"><thead><tr><th colspan="2">Master type</th><th>EDS File Name</th><th>Master name</th></tr></thead><tbody><tr><td>XGT</td><td>XGL-DMEA</td><td>COMCDNM</td><td>COM-C-DNM</td></tr></tbody></table>	Master type		EDS File Name	Master name	XGT	XGL-DMEA	COMCDNM	COM-C-DNM
Master type		EDS File Name	Master name						
XGT	XGL-DMEA	COMCDNM	COM-C-DNM						

Chapter 5 SyCon Settings

4) Master/Slave selection

(1) Master



A) Selection

Method	Selection sequence
Menu bar	Insert → Master
Icon	

B) Insertion

Master Insertion									
Classification	DeviceNet								
Master Insertion	<div><div>Insert Master</div><div><div>Available masters</div><div>COM-C-DNM</div><div>Add >></div><div>Add All >></div><div><< Remove</div><div><< Remove All</div><div>Selected masters</div><div></div><div>OK</div><div>Cancel</div><div><div>VendorHilscher GmbH</div><div>Catalog listingCOM-C-DNM</div><div>File nameCOMCDNM.EDS</div><div>MAC ID</div><div>Description</div></div></div></div>								
Master Selection	<table><tr><th colspan="2">Master type</th><th>EDS File Name</th><th>Master name</th></tr><tr><td>XGT</td><td>XGL-DMEA</td><td>COMCDNM</td><td>COM-C-DNM</td></tr></table>	Master type		EDS File Name	Master name	XGT	XGL-DMEA	COMCDNM	COM-C-DNM
Master type		EDS File Name	Master name						
XGT	XGL-DMEA	COMCDNM	COM-C-DNM						

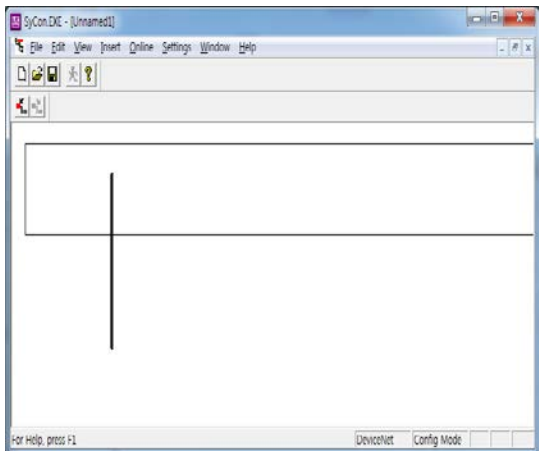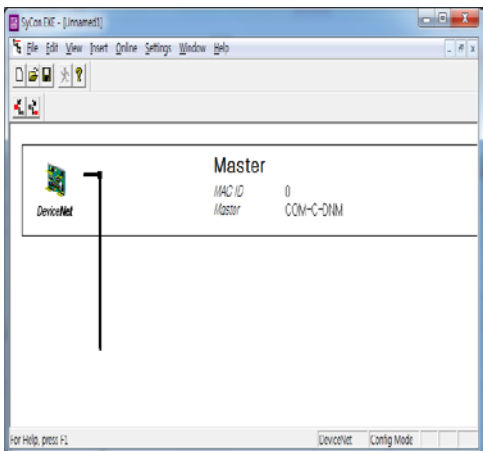C) Editing



	Previous editing	After editing
Master editing	 <p>The window shows a blank workspace with a vertical line and a horizontal line intersecting at the bottom left.</p>	 <p>The window shows the same workspace, but now a 'Master' block is added to the top right. The block contains the text: 'MAC ID 0', 'Master', and 'COM-C-DNM'. A 'DeviceNet' icon is visible on the left side of the workspace.</p>

Chapter 5 SyCon Settings

(2) Slave

It can be executed after master is inserted.


A) Selection

Method	Selection Sequence	Execution Icon
Menu bar	Insert → Slave	
Icon		

B) Insertion

DeviceNet

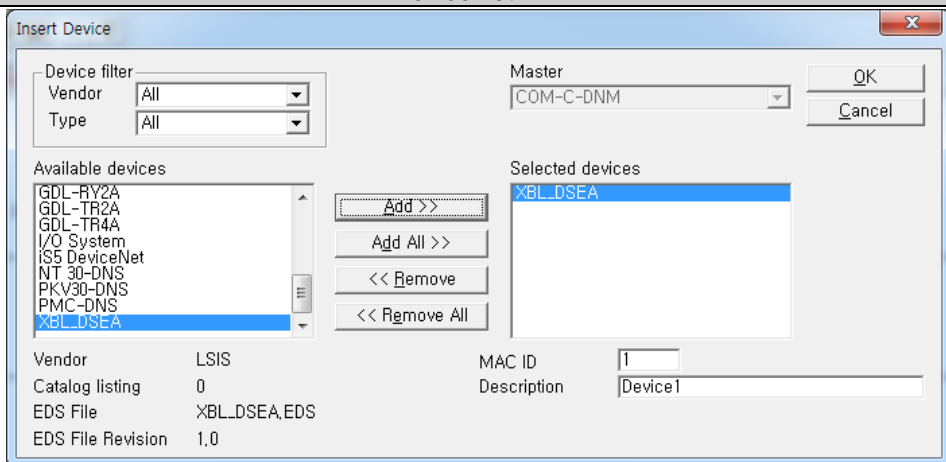Slave Insertion




Slave selection

Slave type	EDS File Name	Slave name	
PLC	DC input 16 point	GDL-D22A	GDL-D22A/D22C
	DC input 32 point	GDL-D24A	GDL-D24A/D24C
	DC input 16point, Tr output 16 point	GDL-DT4A	GDL-DT4A/DT4A1/DT4B/DT4C/D54C1
	Relay output 16 point	GDL-RY2A	GDL-RY2A/R2YC
	Tr output 16 point	GDL-TR2A	GDL-TR2A/TR2A1/TR2B/TR2C/TR2C1
	Tr output 32 point	GDL-TR4A	GDL- TR4A/TR4A1/TR4B/TR4C/TR4C1
	Extendable Smart IO	XDL-BSSA	XDL-BSSA
	XGB Dnet Slave I/F	XBL-DSEA	XBL-DSEA
Inverter	IS5V2_1	IS5	


C) Editing

Slave editing

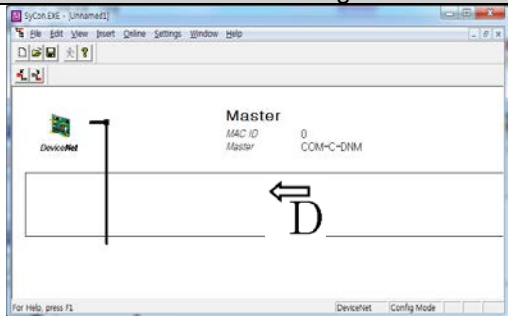Previous editing







After editing

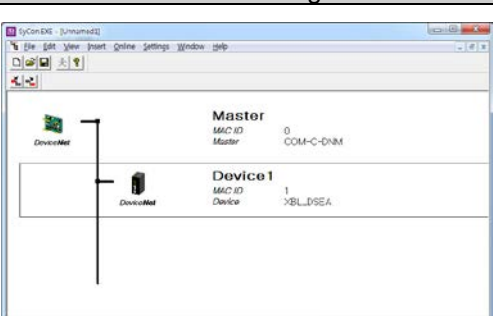





- 5) Master setting
To set Master, Master must be selected in editing screen.


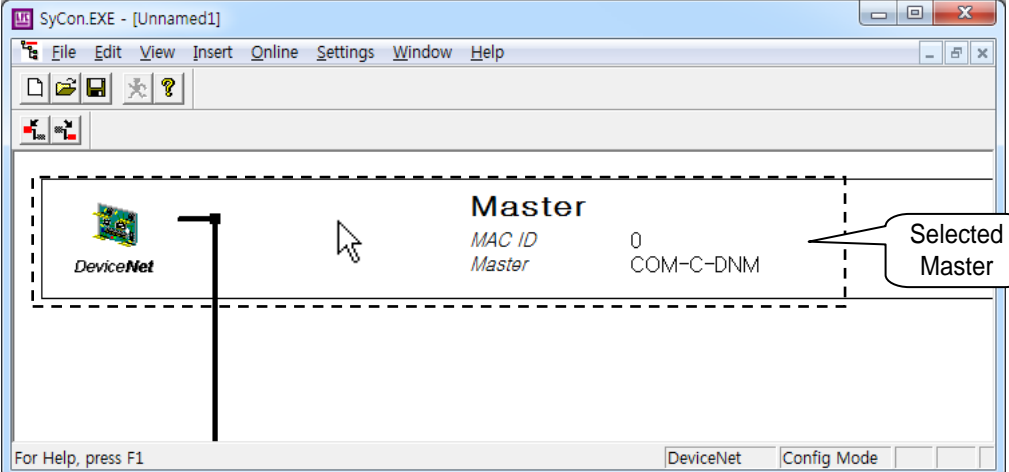
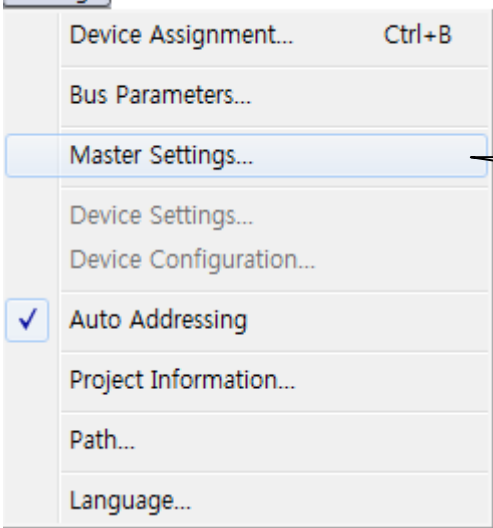
(1) Setting sequence

Step	Description
1	<p>Master selection in editing screen</p>  <p>The screenshot shows the SyCon.EXE application window. The menu bar includes File, Edit, View, Insert, Online, Settings, Window, and Help. The main workspace displays a 'DeviceNet' icon on the left and a 'Master' section on the right. The 'Master' section shows 'MAC ID' as 0 and 'COM-C-DNM'. A dashed rectangular box encloses the 'Master' section. A mouse cursor is positioned over the 'Master' text. A callout bubble with the text 'Selected Master' points to the 'Master' text.</p>
2	<p>Master Setting: Settings → Master Settings</p>  <p>The screenshot shows the 'Settings' menu open. The menu items are: Device Assignment... (Ctrl+B), Bus Parameters..., Master Settings..., Device Settings..., Device Configuration..., Auto Addressing (checked), Project Information..., Path..., and Language... The 'Master Settings...' option is highlighted with a blue background. A callout bubble with the text 'Select' points to the 'Master Settings...' option.</p>


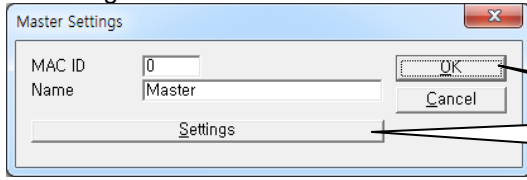
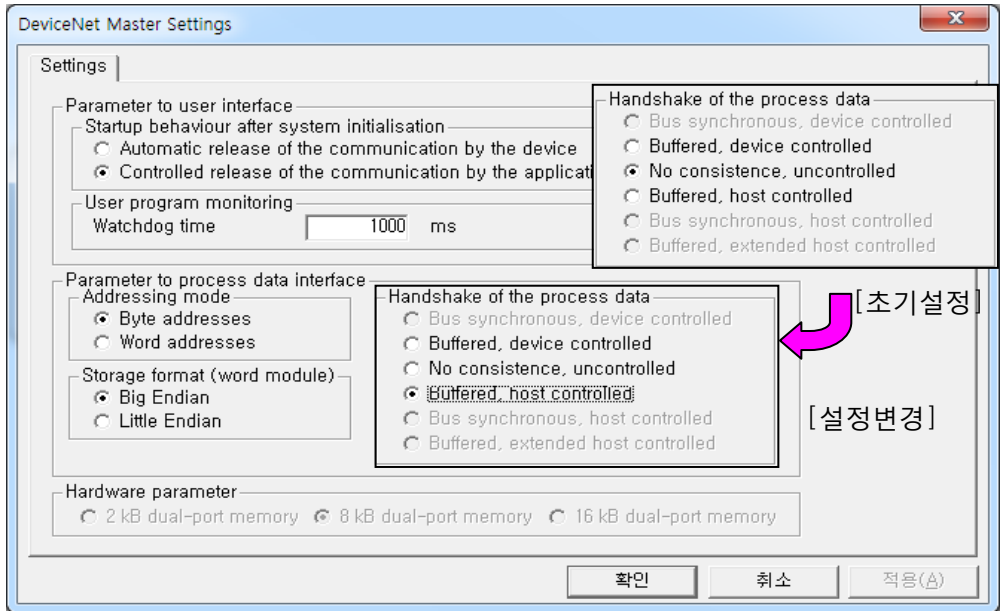

Step	Description
3	<p>1) To change or set MAC ID and Master name</p>  <p>After settings Then Select</p> <p>2) Select Settings</p> <p>DeviceNet Master Setting</p>  <p>[초기 설정]</p> <p>[설정 변경]</p> <p>☞ Select 'Buffered, host controlled' in 'Handshake of the process data' from 'No consistence, uncontrolled'</p> <p>(1) Parameter to user interface: Do not change default setting. Default setting: A) Start behavior after system Initialization. → Controlled release of the communication by the application program B) User program monitoring. → Watch dog time : 1000 (ms)</p> <p>(2) Parameter to process data interface: Do not change default setting. Default setting: A) Address Mode : Byte address B) Storage Format (Word Module): Big Endian</p> <p>(3) Handshake of the process data - Select 'Buffered, host controlled'</p>

Step	Description
4	<p>Bus parameter setting: Settings → Bus Parameters</p> <p>Settings</p> <ul style="list-style-type: none">Device Assignment... Ctrl+BBus Parameters... SelectMaster Settings...Device Settings...Device Configuration...<input checked="" type="checkbox"/> Auto AddressingProject Information...Path...Language... <p>► To change Communication Speed and MAC ID Master</p> <p>Bus Parameter</p> <p>Baudrate: 125 KBits/s OK Cancel After setting and then select 'OK'</p> <p>MAC ID Master: 0</p> <p><input type="checkbox"/> Auto clear mode</p> <p>Baudrate: Among 125, 250, 500 KBits/s</p> <p>1) MAC ID Master: Among 0 ~ 63</p> <p>2) Auto clear mode</p> <p>(1) When Auto clear mode is selected</p> <ul style="list-style-type: none">→ If the error is occurred in slave module, All communication is stopped.→ Dnet I/F module's HS LED flickering, MNS LED Red ON <p>(2) When Auto clear mode is not selected</p> <ul style="list-style-type: none">→ If the error is occurred in slave module, the communication of normal slave module is continued.

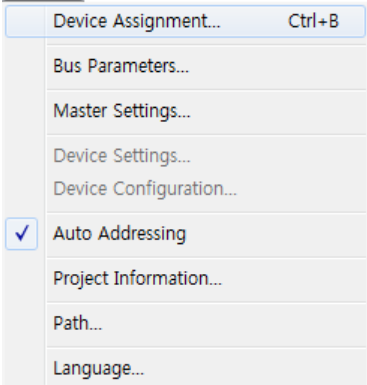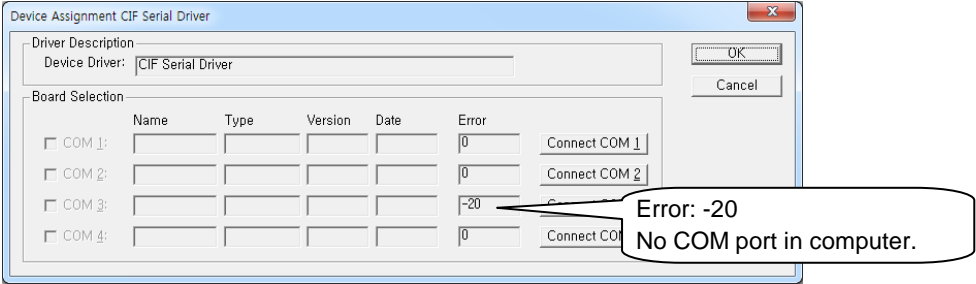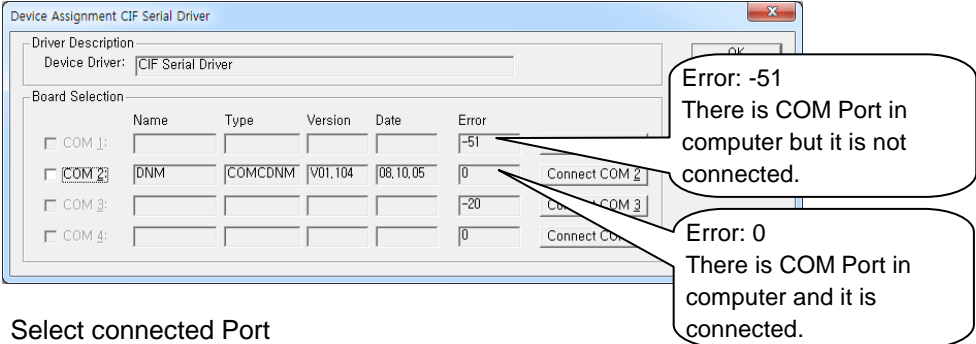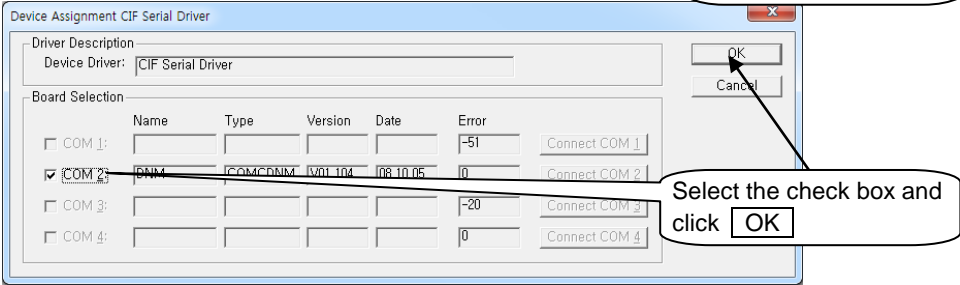Step	Description
5	<p>Serial port selection: Settings → Device Assignment</p> <p>→ Select the disconnected Port in COM Port of computer.</p> <p>Settings</p> 
	<p>1) Initial screen before connection</p> 
	<p>2) Check COM Port connection</p> <p>→ Check 'Connect COM 1, Connect COM 4'</p> 
	<p>3) Select connected Port</p> 

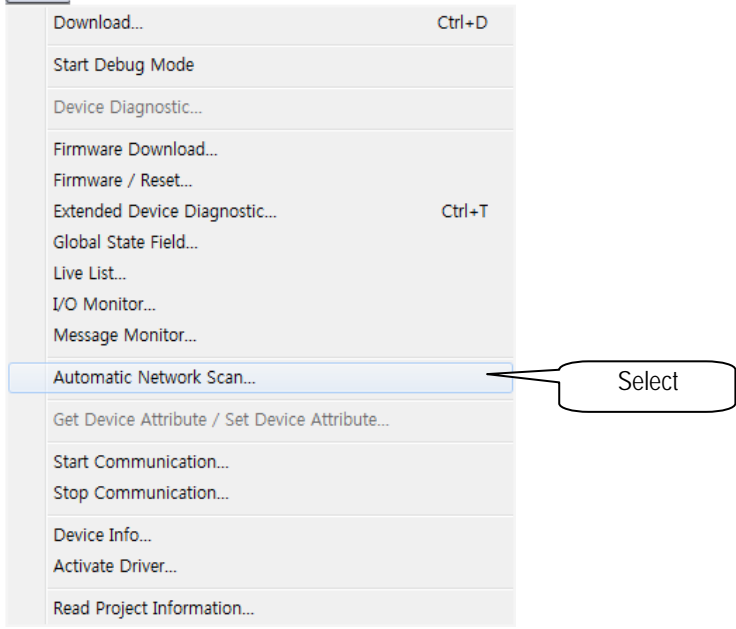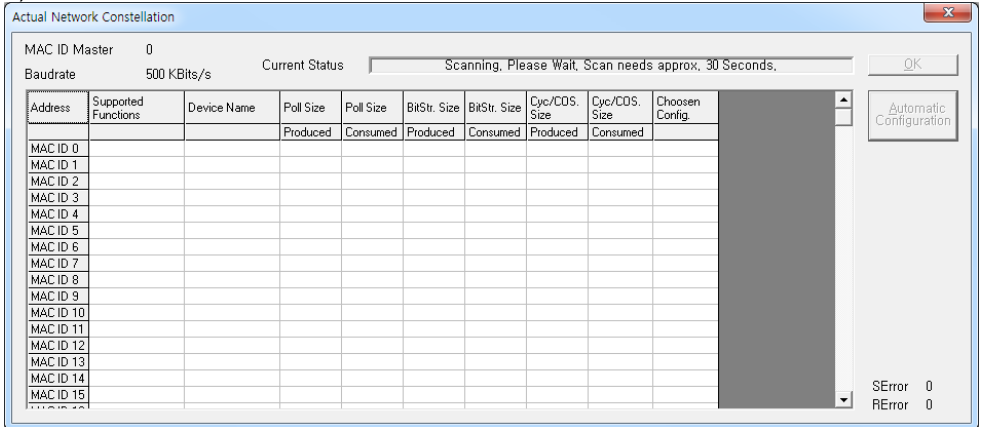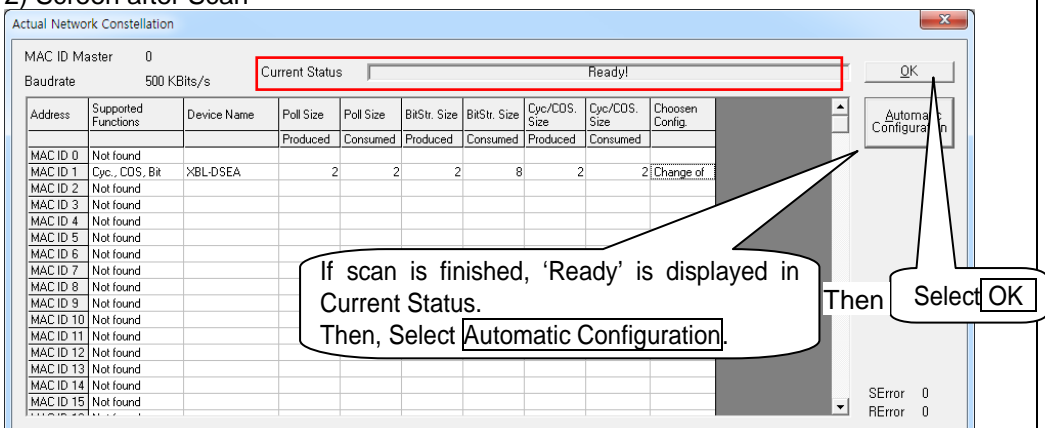Step	Description
6	<p>Automatic Network setting: <u>Online</u> → <u>Automatic Network Scan</u> → Configured slave system information is automatically scanned.</p> <p><u>Online</u></p>  <p>1) Initial screen before Scan</p>  <p>2) Screen after Scan</p> 

Step	Description																																																												
6	<p>→ It displays configured Slave information in Network.</p> <p>Actual Network Constellation</p> <div><div>①</div><div>②</div><div>③</div><div>④</div><div>⑤</div><div>⑥</div><div>⑦</div><div>⑧</div><div>⑨</div><div>⑩</div><table><tr><td>MAC ID Master</td><td>0</td><td colspan="8">Ready!</td></tr><tr><td>Baudrate</td><td>500 KBits/s</td><td colspan="8"></td></tr><tr><td>Address</td><td>Supported Functions</td><td>Device Name</td><td>Poll Size</td><td>Poll Size</td><td>BitStr. Size</td><td>BitStr. Size</td><td>Cyc/COS. Size</td><td>Cyc/COS. Size</td><td>Chosen Config.</td></tr><tr><td></td><td></td><td></td><td>Produced</td><td>Consumed</td><td>Produced</td><td>Consumed</td><td>Produced</td><td>Consumed</td><td></td></tr><tr><td>MAC ID 0</td><td>Not found</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>MAC ID 1</td><td>Cyc., COS, Bit</td><td>XDL-BSSA</td><td>0</td><td>1</td><td>0</td><td>8</td><td>0</td><td>1</td><td>Change of</td></tr></table></div>	MAC ID Master	0	Ready!								Baudrate	500 KBits/s									Address	Supported Functions	Device Name	Poll Size	Poll Size	BitStr. Size	BitStr. Size	Cyc/COS. Size	Cyc/COS. Size	Chosen Config.				Produced	Consumed	Produced	Consumed	Produced	Consumed		MAC ID 0	Not found									MAC ID 1	Cyc., COS, Bit	XDL-BSSA	0	1	0	8	0	1	Change of
	MAC ID Master	0	Ready!																																																										
	Baudrate	500 KBits/s																																																											
	Address	Supported Functions	Device Name	Poll Size	Poll Size	BitStr. Size	BitStr. Size	Cyc/COS. Size	Cyc/COS. Size	Chosen Config.																																																			
				Produced	Consumed	Produced	Consumed	Produced	Consumed																																																				
	MAC ID 0	Not found																																																											
	MAC ID 1	Cyc., COS, Bit	XDL-BSSA	0	1	0	8	0	1	Change of																																																			
	<table><tr><th>No.</th><th>Item</th><th>Description</th></tr><tr><td>①</td><td>MAC ID Master: 0</td><td>Master station number display</td></tr><tr><td>②</td><td>Baudrate: 125KBits/s</td><td>Communication speed setting display</td></tr><tr><td>③</td><td>Current Status</td><td>Processing display Ready: Automatic Network Scan is completed</td></tr><tr><td>④</td><td>Address: MAC ID 0 ~ MAC ID 63</td><td>Max. connectible station with network</td></tr><tr><td>⑤</td><td>Supported Functions</td><td>Communication configuration which is supported function by slave module - Cyclic, COS, Bit-Strobe, Poll</td></tr><tr><td>⑥</td><td>Device Name</td><td>Connected slave Device name</td></tr><tr><td rowspan="2">⑦</td><td rowspan="2">Poll Size</td><td>Produced - Data transmission from slave module to master module - Input module information display - Module points display, Unit: Byte</td></tr><tr><td>Consumed - Data transmission from master module to slave module - Output module information display - Module points display, Unit: Byte</td></tr><tr><td rowspan="2">⑧</td><td rowspan="2">BitStr. Size</td><td>Produced - Data transmission from slave module to master module - Input module information display - Module points display, Unit: Byte</td></tr><tr><td>Consumed - Data transmission from master module to slave module - Output module information display - Max. station information display, Unit: Byte</td></tr><tr><td rowspan="2">⑨</td><td rowspan="2">Cyc/COS. Size</td><td>Produced - Data transmission from slave module to master module - Input module information display - Module points display, Unit: Byte</td></tr><tr><td>Consumed - Data transmission from master module to slave module - Output module information display - Module points display, Unit: Byte</td></tr><tr><td>⑩</td><td>Chosen Config</td><td>User specifies the communication method of slave module. - Setting type: Cyclic, COS, Bit-Strobe, Poll - Setting method: Click the Cell</td></tr></table>	No.	Item	Description	①	MAC ID Master: 0	Master station number display	②	Baudrate: 125KBits/s	Communication speed setting display	③	Current Status	Processing display Ready: Automatic Network Scan is completed	④	Address: MAC ID 0 ~ MAC ID 63	Max. connectible station with network	⑤	Supported Functions	Communication configuration which is supported function by slave module - Cyclic, COS, Bit-Strobe, Poll	⑥	Device Name	Connected slave Device name	⑦	Poll Size	Produced - Data transmission from slave module to master module - Input module information display - Module points display, Unit: Byte	Consumed - Data transmission from master module to slave module - Output module information display - Module points display, Unit: Byte	⑧	BitStr. Size	Produced - Data transmission from slave module to master module - Input module information display - Module points display, Unit: Byte	Consumed - Data transmission from master module to slave module - Output module information display - Max. station information display, Unit: Byte	⑨	Cyc/COS. Size	Produced - Data transmission from slave module to master module - Input module information display - Module points display, Unit: Byte	Consumed - Data transmission from master module to slave module - Output module information display - Module points display, Unit: Byte	⑩	Chosen Config	User specifies the communication method of slave module. - Setting type: Cyclic, COS, Bit-Strobe, Poll - Setting method: Click the Cell																								
	No.	Item	Description																																																										
	①	MAC ID Master: 0	Master station number display																																																										
②	Baudrate: 125KBits/s	Communication speed setting display																																																											
③	Current Status	Processing display Ready: Automatic Network Scan is completed																																																											
④	Address: MAC ID 0 ~ MAC ID 63	Max. connectible station with network																																																											
⑤	Supported Functions	Communication configuration which is supported function by slave module - Cyclic, COS, Bit-Strobe, Poll																																																											
⑥	Device Name	Connected slave Device name																																																											
⑦	Poll Size	Produced - Data transmission from slave module to master module - Input module information display - Module points display, Unit: Byte																																																											
		Consumed - Data transmission from master module to slave module - Output module information display - Module points display, Unit: Byte																																																											
⑧	BitStr. Size	Produced - Data transmission from slave module to master module - Input module information display - Module points display, Unit: Byte																																																											
		Consumed - Data transmission from master module to slave module - Output module information display - Max. station information display, Unit: Byte																																																											
⑨	Cyc/COS. Size	Produced - Data transmission from slave module to master module - Input module information display - Module points display, Unit: Byte																																																											
		Consumed - Data transmission from master module to slave module - Output module information display - Module points display, Unit: Byte																																																											
⑩	Chosen Config	User specifies the communication method of slave module. - Setting type: Cyclic, COS, Bit-Strobe, Poll - Setting method: Click the Cell																																																											
<p>After scan, 'Ready' is displayed at Current Status.</p> <p>→ Select <u>Automatic Configuration</u>.</p> <p>Check the using of scanned information.</p> <p>→ Select <u>OK</u>.</p>																																																													
	<div><div>Question</div><div><div>?</div><div>Do you accept the configuration?</div></div><div><div>Yes</div><div>Select</div></div></div>																																																												

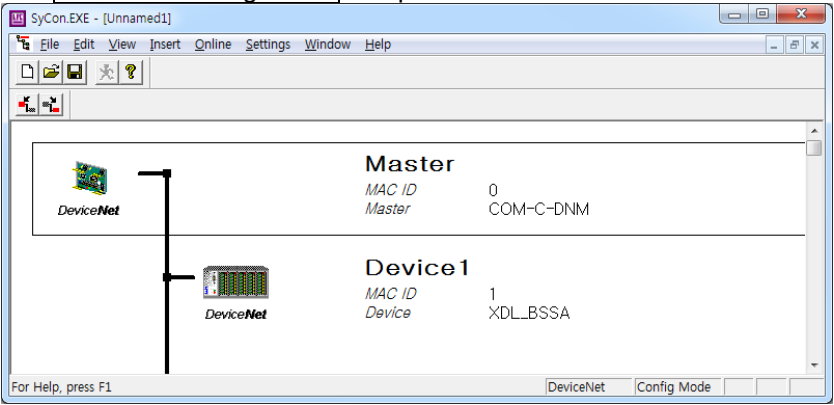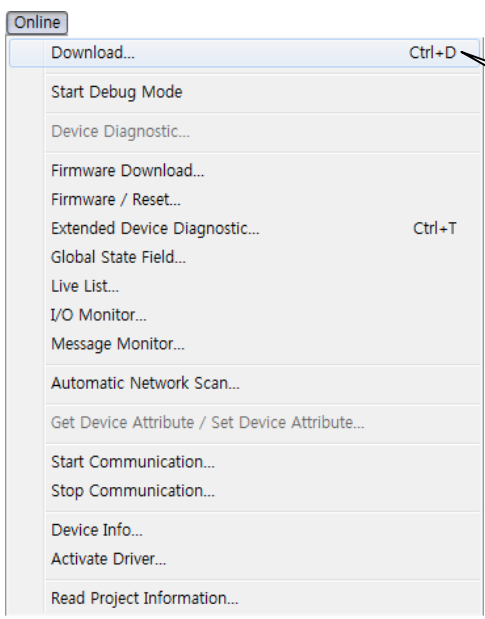
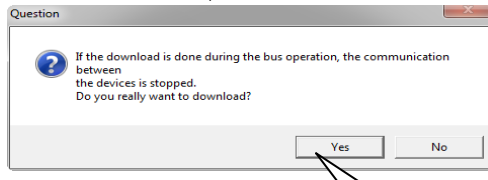
Step	Description
6	<p>After Automatic Configuration completed</p>  <p>→ It displays the configured slave module.</p>
7	<p>System configuration download: Select Online → Download</p>  <p>Select</p>  <p>Select</p>  <p>→ Download window is disappeared after downloading.</p>
8	<p>Save edited configuration file: Select File → Save or Save As</p>


If the above 8 phases is finished, High-speed link setting is available after [Config.Upload] at XG5000. (Online) → Communication module setting → Config.Upload(Dnet, Pnet)



Chapter 5 SyCon Settings

- 6) Slave module setting (Manual setting)
Slave module setting is available on the editor. Select slave module to edit.

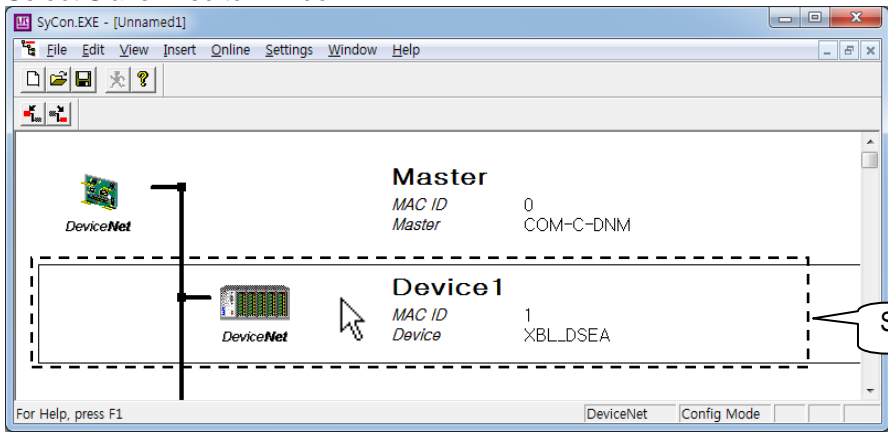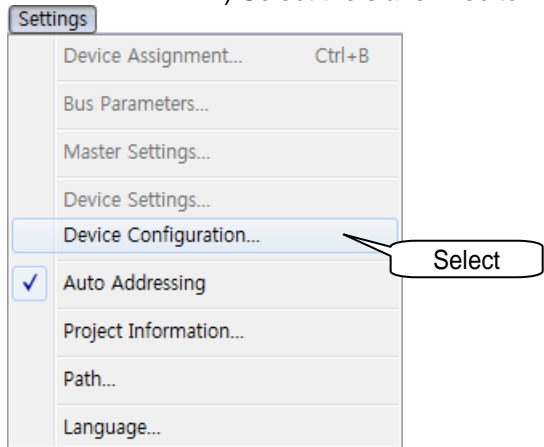(1) Setting sequence

Step	Description
1	<p>Select Slave in editor window</p>  <p>The screenshot shows the SyCon.EXE interface. At the top, there's a menu bar (File, Edit, View, Insert, Online, Settings, Window, Help) and a toolbar. The main workspace displays a 'Master' device with MAC ID 0 and COM-C-DNM. Below it, a 'Device1' (Slave) is shown with MAC ID 1 and XBL_DSEA. A dashed rectangular box encloses the Slave device, and a mouse cursor is positioned over it. A callout bubble with the text 'Select slave' points to the Slave device.</p>
2	<p>Slave setting: 1) Select Settings → Device Configuration 2) Select the slave in editor window and Click the mouse</p>  <p>The screenshot shows the 'Settings' menu open. The menu items are: Device Assignment... (Ctrl+B), Bus Parameters..., Master Settings..., Device Settings..., Device Configuration..., Auto Addressing (checked), Project Information..., Path..., and Language... The 'Device Configuration...' item is highlighted with a blue background. A callout bubble with the text 'Select' points to this item.</p>

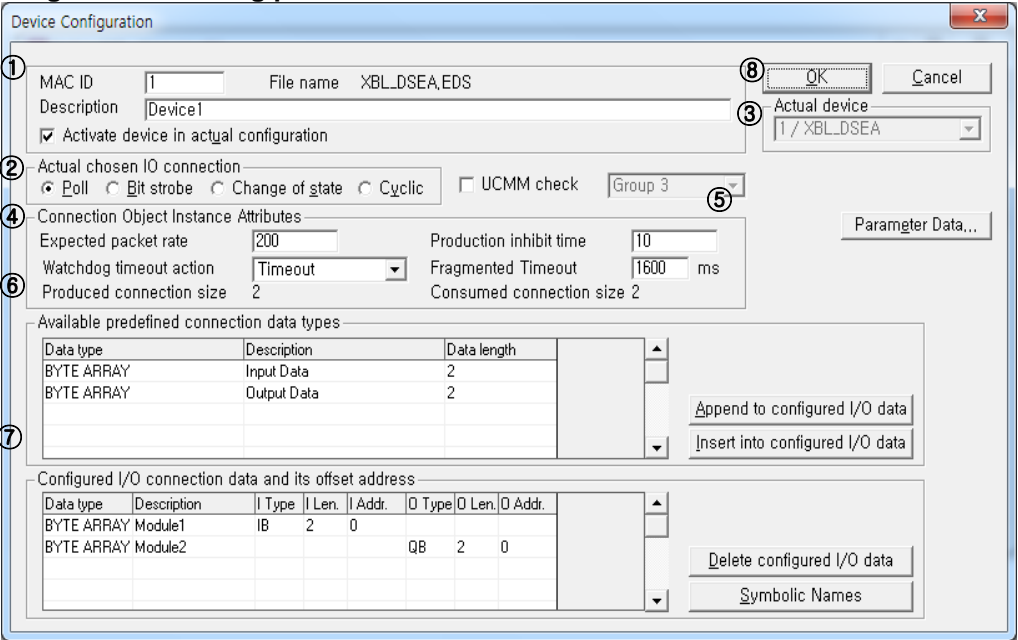Step	Description	
3	Editing of Slave setting parameter 	
	①	MAC ID & Description
	②	Actual chosen IO connection
	③	Actual device
	④	Connection Object Instance Attributes
	⑤	Parameter Data
	⑥	Available predefined connection data types
	⑦	Configured I/O Connection data and offset address
	⑧	OK

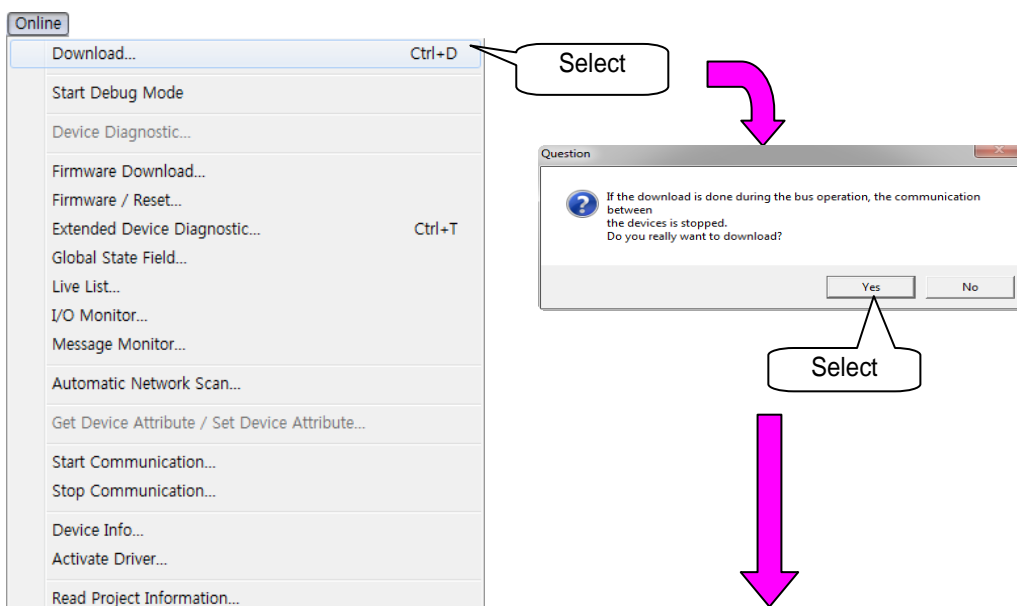Step	Description
4	<p>System configuration download: Online → Download</p> <p>→ Master must be selected when Download menu is executed.</p>  <p>The 'Question' dialog box contains the text: "If the download is done during the bus operation, the communication between the devices is stopped. Do you really want to download?" with 'Yes' and 'No' buttons. A callout 'Select' points to the 'Yes' button. A pink arrow points from the 'Yes' button to the 'Download' progress window.</p>  <p>→ Download window is disappeared when download is completed.</p>
5	<p>Save edited system configuration file: File → Save or Save As</p>

Chapter 5 SyCon Settings

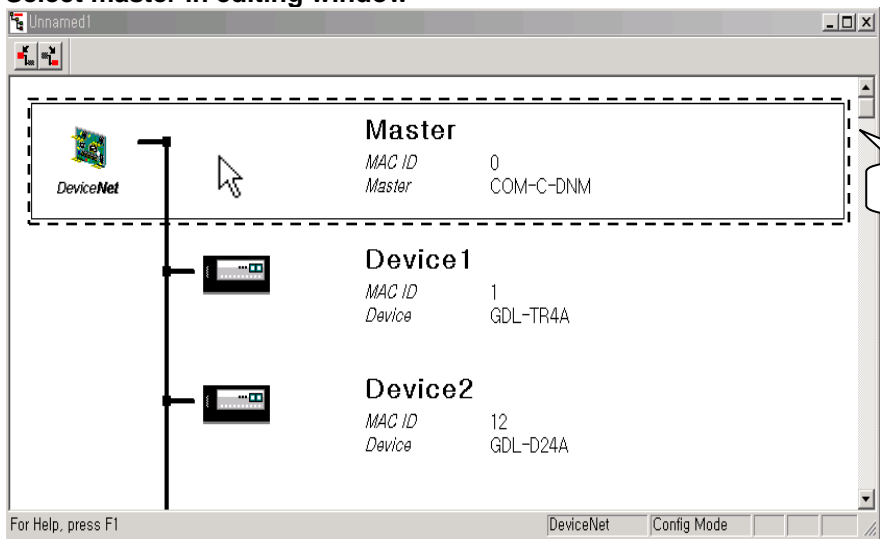
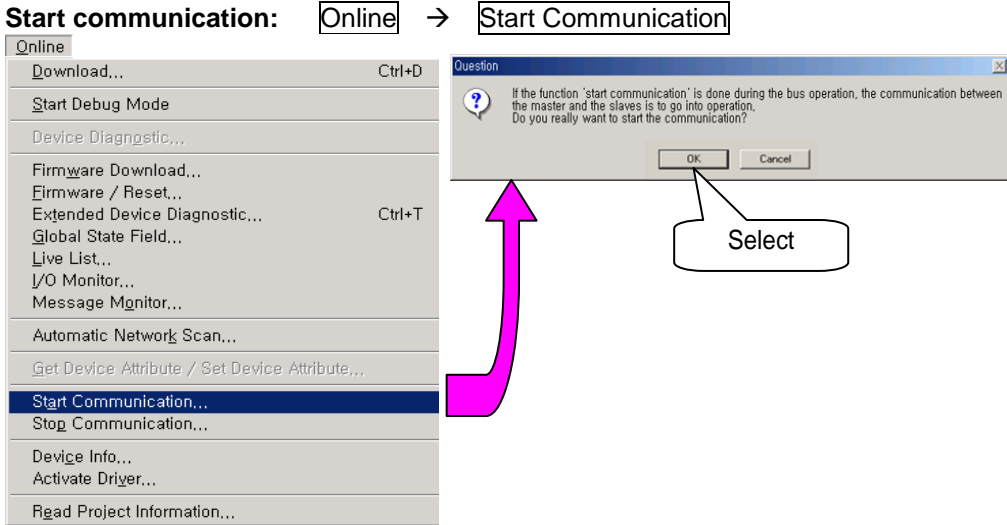
7) Diagnosis



► To diagnose


- It is possible to diagnose that the downloaded file exists at the same editing window.
- It is possible to diagnose when master is selected in editing window.
- To diagnose, above 2 conditions have to satisfy.

- It can confirm the station number, module type, communication speed, communication method and wire diagram through diagnosis.

(1) Setting Sequence

Step	Description
1	Open the file which is downloaded in Dnet I/F master module in editing window → It is possible to diagnose that the downloaded file exists at the same editing window.
2	Select master in editing window 
3	Start communication: Online → Start Communication 

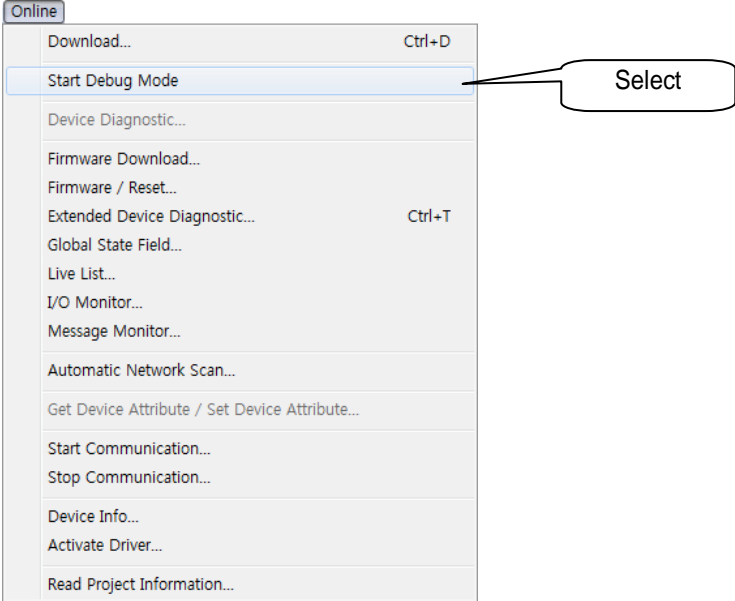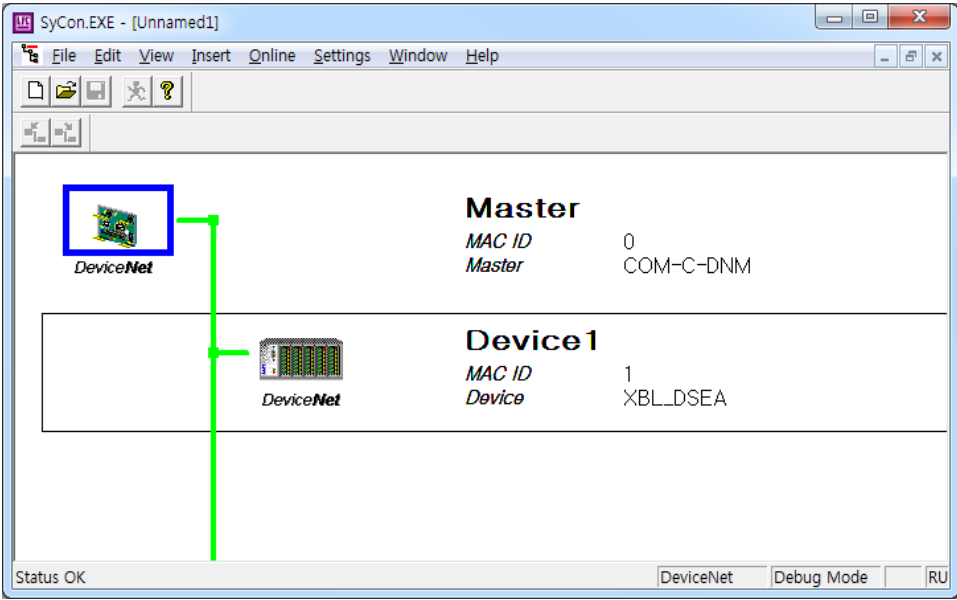Step	Description
	<p>Debug Mode : Select <input type="text" value="Online"/> → <input type="text" value="Start Debug Mode"/></p> 
4	<p>The wire diagram is changed after debug mode started.</p> <ol style="list-style-type: none"> 1) If normal status, wire diagram is displayed green color. 2) If abnormal status, wire diagram is displayed red color. 

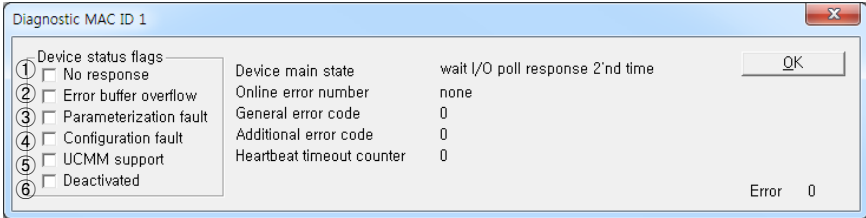Step	Description																					
	<p>To check the slave module status, select and click the applicable slave module. The setting window is appeared as shown below.</p> <div></div> <p>Device status flags menu is checked by slave module status.</p> <table><tr><th>No.</th><th>Item</th><th>Description</th></tr><tr><td>①</td><td>No response</td><td>Specified slave module is not existed in network. (Solution: Check Network cable and Baud rate)</td></tr><tr><td>②</td><td>Error buffer overflow</td><td>Error data's information is overflowed the limited buffer memory in master module.</td></tr><tr><td>③</td><td>Parameterization fault</td><td>Specified slave module's information in SyCon is not correspondent with slave module's information in network.</td></tr><tr><td>④</td><td>Configuration fault</td><td>Input/Output data size of slave module which is specified in SyCon is different from real Input/Output data size.</td></tr><tr><td>⑤</td><td>UCMM support</td><td>Slave module supports the UCMM.</td></tr><tr><td>⑥</td><td>Deactivated</td><td>Slave module status is abnormal.</td></tr></table>	No.	Item	Description	①	No response	Specified slave module is not existed in network. (Solution: Check Network cable and Baud rate)	②	Error buffer overflow	Error data's information is overflowed the limited buffer memory in master module.	③	Parameterization fault	Specified slave module's information in SyCon is not correspondent with slave module's information in network.	④	Configuration fault	Input/Output data size of slave module which is specified in SyCon is different from real Input/Output data size.	⑤	UCMM support	Slave module supports the UCMM.	⑥	Deactivated	Slave module status is abnormal.
No.	Item	Description																				
①	No response	Specified slave module is not existed in network. (Solution: Check Network cable and Baud rate)																				
②	Error buffer overflow	Error data's information is overflowed the limited buffer memory in master module.																				
③	Parameterization fault	Specified slave module's information in SyCon is not correspondent with slave module's information in network.																				
④	Configuration fault	Input/Output data size of slave module which is specified in SyCon is different from real Input/Output data size.																				
⑤	UCMM support	Slave module supports the UCMM.																				
⑥	Deactivated	Slave module status is abnormal.																				

5.4 Monitoring Information in SyCon

It monitors variable status information of communicating network.

1) Global State Field

Menu	Description
Sequence	Online → Global State Field...
<div> <div>Online</div> <div> Download... Ctrl+D Start Debug Mode Device Diagnostic... Firmware Download... Firmware / Reset... Extended Device Diagnostic... Ctrl+T Global State Field Live List I/O Monitor... Message Monitor... Automatic Network Scan... Get Device Attribute / Set Device Attribute... Start Communication... Stop Communication... Device Info... Activate Driver... Read Project Information... </div> </div>	

Global State Field's description is as shown below.

Classification	Description	
Online master main state	OPERATE	Master module is operating.
	STOP	Communication part of Master module is not operation.
Collective status bits	PDUP	Device executes the duplicated MAC ID checking.
	DMAC	Duplicated MAC ID module is existed.
	NRDY	The communication of main program is not ready.
	EVE	Transmission error
	FAT	Communication can not available because of fatal error.
	NEXC	The at least 1 device can not reach Data Exchange State.
	ACLR	All devices stop the communication and are cleared automatically.
	CTRL	Master parameter error
Collective online error location and corresponding error	Error at remote address	Error address displayed
	corresponding error event	Error event displayed
Statistic bus information	Counter of detected bus off report	Counting the number of Bus off
	Counter of rejected telegram transmissions	Counting the rejected telegram transmissions
Device specific status bits	Parameterized Devices	Display of parameterized slave module (Blue)
	Activated Devices	Display of activating slave module (Yellowish green) -The yellowish green is disappeared when slave module has the error.
	Devices with Diagnostic	Display of activating slave module (Red) -The diagnosis window is appeared when red color station is double-clicked. → Refer to 7) Diagnosis's 4 step.

2) Live List

Menu	Description																																																								
Sequence	Online → Live List																																																								
<div><div>Online</div><div><div>Download...Ctrl+D</div><div>Start Debug Mode</div><div>Device Diagnostic...</div><div>Firmware Download...</div><div>Firmware / Reset...</div><div>Extended Device Diagnostic...Ctrl+T</div><div>Global State Field...</div><div>Live List...</div><div>I/O Monitor...</div><div>Message Monitor...</div><div>Automatic Network Scan...</div><div>Get Device Attribute / Set Device Attribute...</div><div>Start Communication...</div><div>Stop Communication...</div><div>Device Info...</div><div>Activate Driver...</div><div>Read Project Information...</div></div></div>	<div><div>Live List</div><div><div>Devices</div><table><tr><td>0</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr><tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td><td>27</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td>33</td><td>34</td><td>35</td><td>36</td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>56</td><td>57</td><td>58</td><td>59</td><td>60</td><td>61</td><td>62</td><td>63</td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table><div>Be activatedBe inactivated</div><div>SErrors0RErrors0</div><div>OK</div></div></div> <div>Devices: It displays slave station number.</div> <div>1) Activation: It displays normal communicating slave module.</div> <div>Inactivation: It displays abnormal communicating slave module.</div>	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27						33	34	35	36						56	57	58	59	60	61	62	63						
0	1	2	3	4	5	6	7	8	9	10	11	12	13																																												
14	15	16	17	18	19	20	21	22	23	24	25	26	27																																												
					33	34	35	36																																																	
56	57	58	59	60	61	62	63																																																		

Chapter 6 High-speed Link Setting

6.1 Introduction

High-speed link specifies the Send/Receive device area and data size between CPU module and the communication module by XG5000.

High-speed link can be set the function as shown below.

Description		High-speed Link		
Communication module setting	Communication module setting	Module type	Dnet	
		Base no.	Base number is only set 0.	
	Communication period setting (Period type)	Select among 10ms, 20ms, 50ms, 100ms, 200ms, 500ms, 1s, 5s, 10s. - Default setting: 20 ms		
	Output data setup in case of emergency	CPU error	Latch	Keep the previous output status.
			Clear	Clear the output.
		CPU stop	Latch	Keep the previous output status.
			Clear	Clear the output.
	Mode ^{note1}	Send : the data transfer from master module to slave module Receive : the data transfer from slave module to master module		
	Station No. ^{note1}	Slave station number (Range: 0 ~ 63)		
	Communication Method ^{note1}	The communication method between master and slave(Poll, Bit-Strobe, COS, Cyclic)		
	Read area (From Master to Slave module)	Address	Head address of the sending device	
		Size ^{note1} (Byte)	Input/Output point of slave module is displayed Byte. - If input /Output module is less than 8 bit, it is processed 1 Byte.	
	Save area (From Slave to Master module)	Address	Head address of the receiving device	
		Size ^{note1} (Byte)	Input/Output point of slave module is displayed in Byte. - If input/Output module is less than 8 bit, it is dealt with 1 Byte.	
PLC connection		RS-232C or USB Port of CPU module		
Control condition		It can control regardless of position of Run mode switch (Run, Stop) of CPU module.		
Max. communication point		Send 2048points, Receive 2048 points, 256 bytes respectively		
Max. block number		64 (Setting Range : 0~63)		
Max. point per block		1024 points (64 Words)		
Number of High-speed link setting		Up to 2		


Note

Note1 : It must be set equal to the slave setting of 'Configuration Tool'.

- ▶ When High-speed link is edited, parameter has to download again.
- ▶ High-speed link is used per a communication module.
- ▶ CPU module saves the written parameter (Standard, High-speed link, P2P).
- ▶ When CPU module is exchanged, parameter in XG5000 has to back-up and then the parameter has to write in CPU module again.


6.2 How to use XG5000

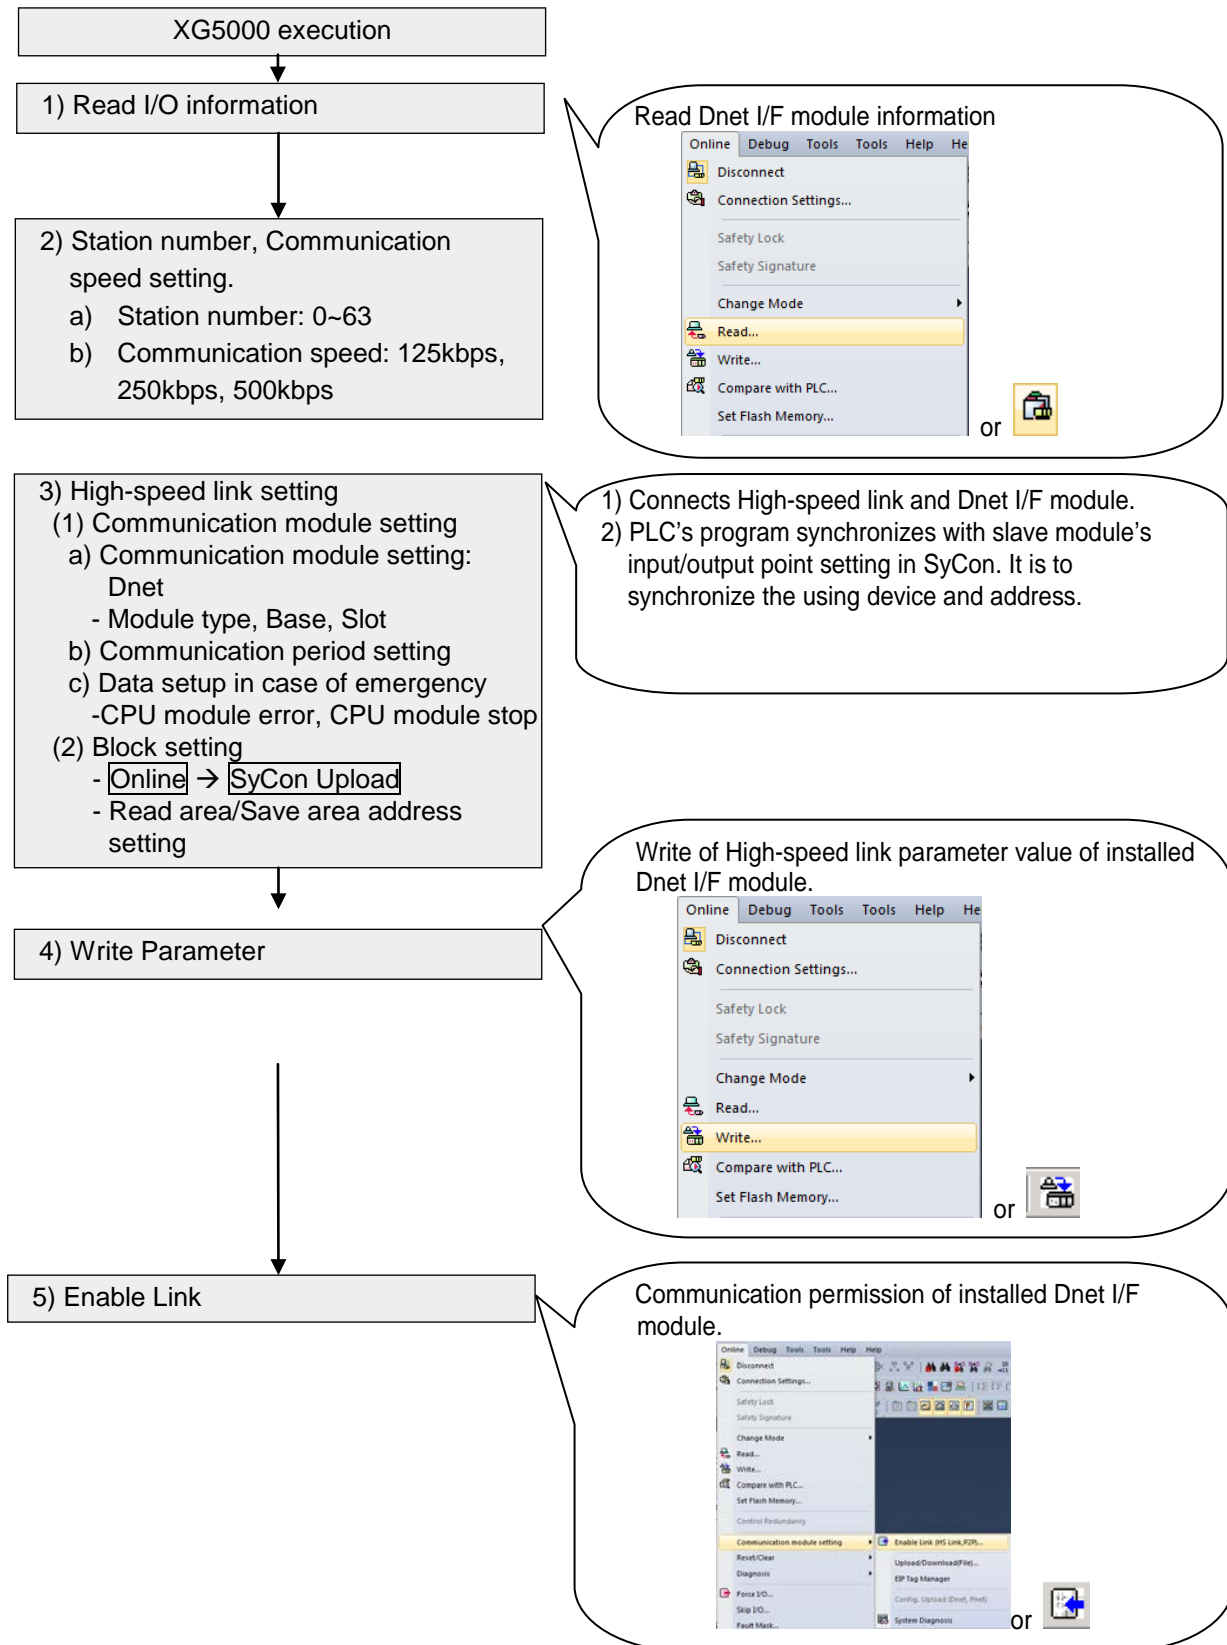XG5000 usage for Dnet I/F module is as shown below.




6.3 High-speed Link Editing

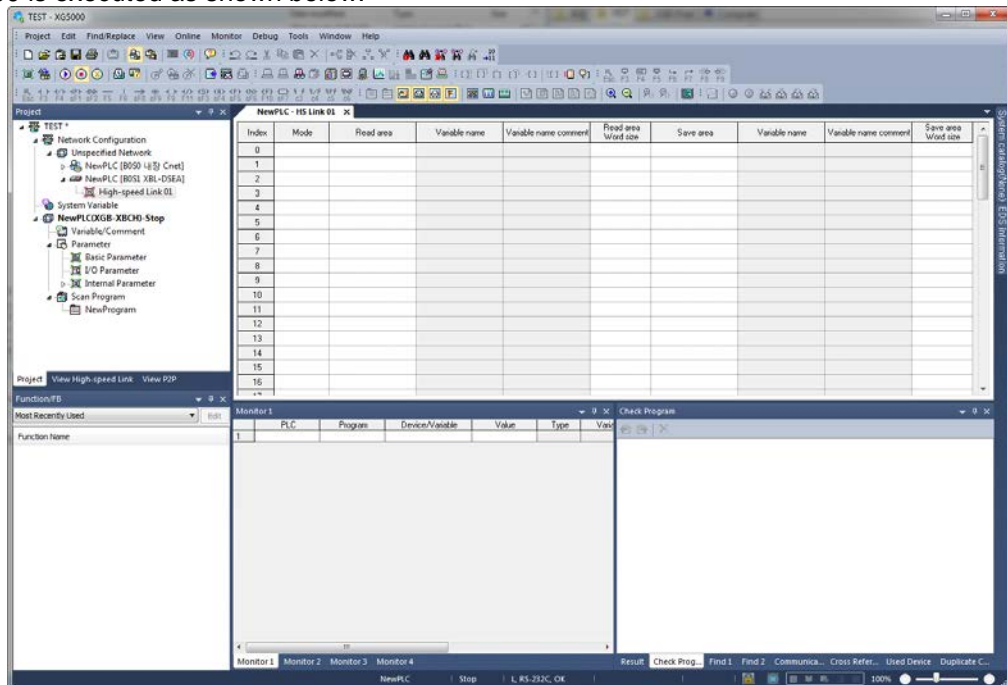XG5000 is executed as shown below.



[Standard window]

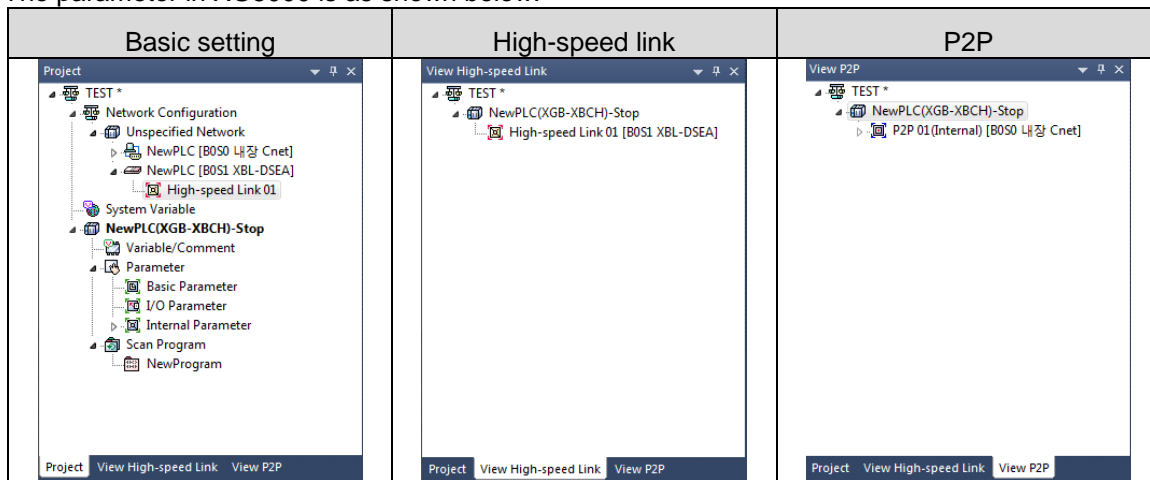The parameter in XG5000 is as shown below.



[Parameter window]

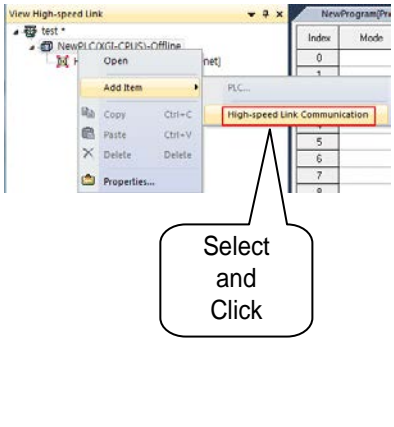
Dnet I/F module is set in High-speed link window. It can use the High-speed link up to maximum 2. A High-speed link is available per a Dnet I/F module.

Chapter 6 High-speed Link Setting

How to use High-speed link window


Parameter is specified at High-speed link window as shown below. There are 2 kinds of parameter setting, Communication module setting and High-speed link block setting.

High-speed link




Parameter setting

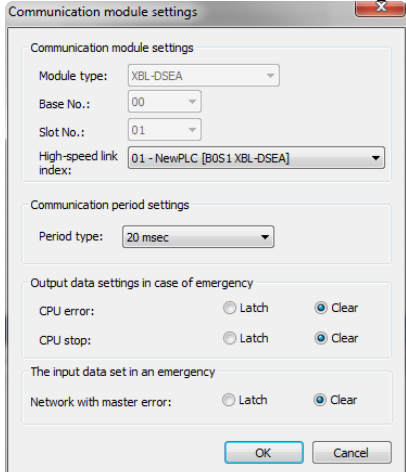Communication module setting



High-speed link block setting

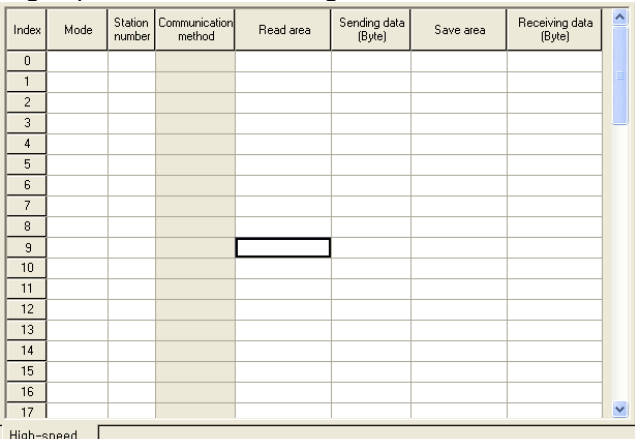

Remark

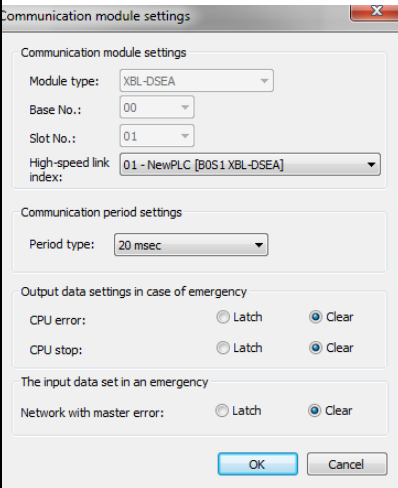
High-speed link1 [B0S1 XBL-DSEA] is as shown below.

- 1) High-speed link 01: It is a serial number of High-speed link.
- 2) B0: It means Base number.
- 3) S0: It means Slot number. (Example: Slot number 1 – S1, Slot number 3 – S3)

Chapter 6 High-speed Link Setting

1) Communication module setting parameter

Communication module parameter setting is as shown below.

Parameter	Setting item		Description	
	Communi- cation module setting	Module type	Dnet	
		Base No ^{note1}	Setting range: 0	
		Slot No ^{note1}	Setting range: 1 ~ 10 It is different from type of main unit.	
		High-speed link index	Setting range: 1 ~ 2 (in case of XBCU, XECU: 1~3) XGB can use 2 of High-speed link.	
	Communication period setting (Period type)		Select among the 10ms, 20ms, 50ms, 100ms, 200ms, 500ms, 1s, 5s, 10s. - Default: 20ms - It is only for transmission data. - Received data is processed every end of program.	
	Output data setup in case of emergency	CPU error	Latch	Keep the output status. (But, P device's data is cleared.)
			Clear	Clear all of the output.
		CPU stop	Latch	Keep the output status. (But, P device's data is cleared.)
			Clear	Clear all of the output.
		Comm error	Latch	Keep the output status. (But, P device's data is cleared.)
			Clear	Clear all of the output.

Remark

Note1: It can be set just once when high-speed link is created.

Cautions of communication period setting

- Setting value of communication period is applicable to transmission data (CPU module's data → Dnet I/F module). If communication period is longer than the time of changing data at scan program, It might be different from the data which is transmitted to slave module.

High-speed link block setting parameter is as shown below.

[illegible]

Classification	Contents
Index	Number of high-speed link block
Read area	Starting address of the device to be transmitted from the slave module to the master module.
Read area Word size	Indicate the size of a send data
Save area	Starting address of the device to be received by the master module.
Save area Word size	Indicate the size of a receive data

Chapter 6 High-speed Link Setting

(2) High-speed link block editing

Head address of Send/Receive address can be edited in High-speed block.

Select index to edit and please set Read area & Save area.

Classification		Description																																																																																																																																																																																											
Screen After uploaded the data	<div>NewPLC - HS Link 01 X</div> <table><thead><tr><th>Index</th><th>Mode</th><th>Read area</th><th>Variable name</th><th>Variable name comment</th><th>Read area Word size</th><th>Save area</th><th>Variable name</th><th>Variable name comment</th><th>Save area Word size</th></tr></thead><tbody><tr><td>0</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>1</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>2</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>3</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>4</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>5</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>6</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>7</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>8</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>9</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>10</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>11</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>12</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>13</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>15</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>16</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></tbody></table> <div>If you complete setting about Read area and Save area, the color of character will be changed from red to black.</div>									Index	Mode	Read area	Variable name	Variable name comment	Read area Word size	Save area	Variable name	Variable name comment	Save area Word size	0										1										2										3										4										5										6										7										8										9										10										11										12										13										14										15										16									
	Index	Mode	Read area	Variable name	Variable name comment	Read area Word size	Save area	Variable name	Variable name comment	Save area Word size																																																																																																																																																																																			
	0																																																																																																																																																																																												
	1																																																																																																																																																																																												
	2																																																																																																																																																																																												
	3																																																																																																																																																																																												
	4																																																																																																																																																																																												
	5																																																																																																																																																																																												
	6																																																																																																																																																																																												
	7																																																																																																																																																																																												
	8																																																																																																																																																																																												
	9																																																																																																																																																																																												
	10																																																																																																																																																																																												
	11																																																																																																																																																																																												
	12																																																																																																																																																																																												
	13																																																																																																																																																																																												
	14																																																																																																																																																																																												
15																																																																																																																																																																																													
16																																																																																																																																																																																													
High-speed link block editing window	Classification	Description																																																																																																																																																																																											
	Station type *1	Select slave.																																																																																																																																																																																											
	Block type *1	Transmission: Data is transmitted from master module to slave module. Reception: Data is transmitted from slave module to master module.																																																																																																																																																																																											
	Station No. *1	Slave station number (range: 0 ~ 63)																																																																																																																																																																																											
	Block No. *1	Not used in Dnet I/F module.																																																																																																																																																																																											
	Read area (Master module → Slave module)	Address	Head address of transmitting device.																																																																																																																																																																																										
		Size *1 (Byte)	Input/Output point of slave module is displayed in Word. - If input module point is less than 8 bit, it is dealt with 1 Byte.																																																																																																																																																																																										
	Save area (Slave module → Master module)	Address	Head address of receiving device.																																																																																																																																																																																										
		Size *1 (Byte)	Input/Output point of slave module is displayed in Word. - If input module point is less than 8 bit, it is dealt with 1 Byte.																																																																																																																																																																																										

The priority order of data is the slave module which has lowest index number.

Remark

Less than 8 point module is processed by 1 Word when address is specified.

(3) How to use High-speed link block editing tool

The editing tool and usage of High-speed link block is as shown below.

Index	Mode	Read area	Variable name	Variable name comment	Read area Word size	Save area	Variable name	Variable name comment	Save area Word size
0	Send								
1	Receive								
2									
3									
4									
5									
6									
7									
8									
9									
10									
11									
12									
13									
14									
15									
16									
17									

Screen 1: Right mouse (right click) button of a selected

Import variable name	Undo	Undo edited index block.
Undo	Redo	Redo edited index block.
Redo	Cut	Cut the edited index block.
Cut	Copy	Copy the edited index block.
Copy	Paste	Paste the copied index block.
Paste	Delete	Delete the edited index block.
Delete		
View tree by Transmission/Reception		

[Screen 1]

View Tree by Transmission/Reception

Display by Tree structure.

View Tree By Transmission/Reception

Register index



	Block nu...	Read area	Save area	Size of transmis...	Index
00Station Number					
Block	00	M0000			00
Block	01	M0100			01


Connection period: 20 msec


OK

6.4 Read and Write of High-speed Link

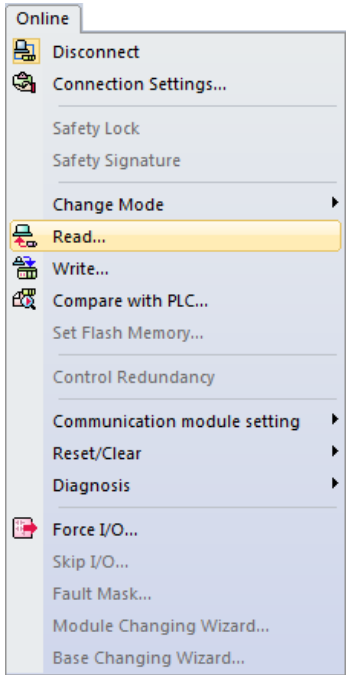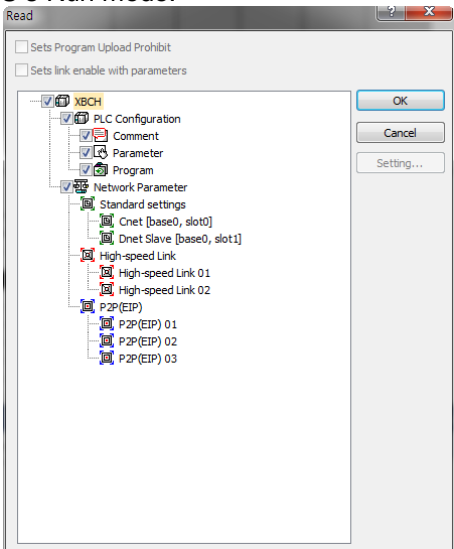The screen is used for read/write of High-speed link's parameter.

Configuration of menu	Description
	<p>1) It can read for each High-speed parameter.</p> <ul style="list-style-type: none">- Select "Online" → "Read" to read network parameter and program. <p>2) Read/Write of High-speed link parameter not affect to CPU's Run mode.</p> 

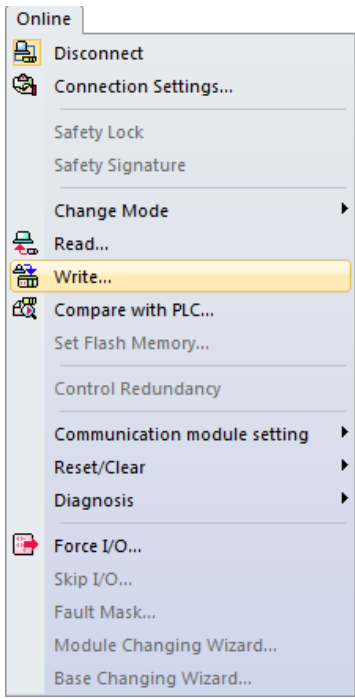
Configuration of menu	Description
	<ol style="list-style-type: none">1) It can read for each High-speed parameter.<ul style="list-style-type: none">- Select "Online" → "Write" to Write network parameter and program.2) Read/Write of High-speed link parameter not affect to CPU's Run mode.

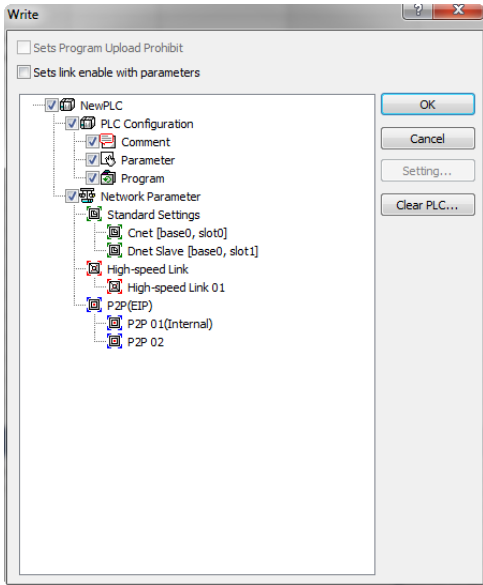

If High-speed link parameter is written to CPU module, CPU module saves the data. If CPU module is exchanged, High-speed link parameter has to backup from CPU module. The parameter has to re-write in exchanged CPU module.


6.5 Enable Link

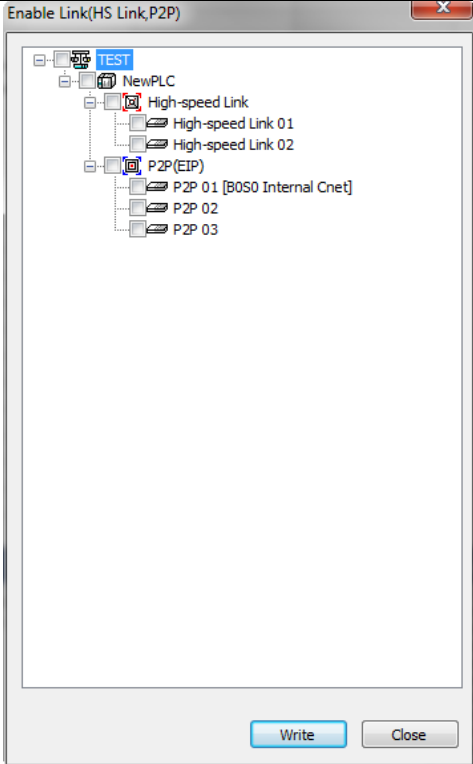You need to enable the link for actual data communication of the downloaded HS link data.


Configuration	Description
	<ol style="list-style-type: none">1) Select “Online” → “Enable Link” on the menu. Then, “Enable Link” screen appears.2) Check the item you want to enable and click “Write”.

6.6 System Diagnosis

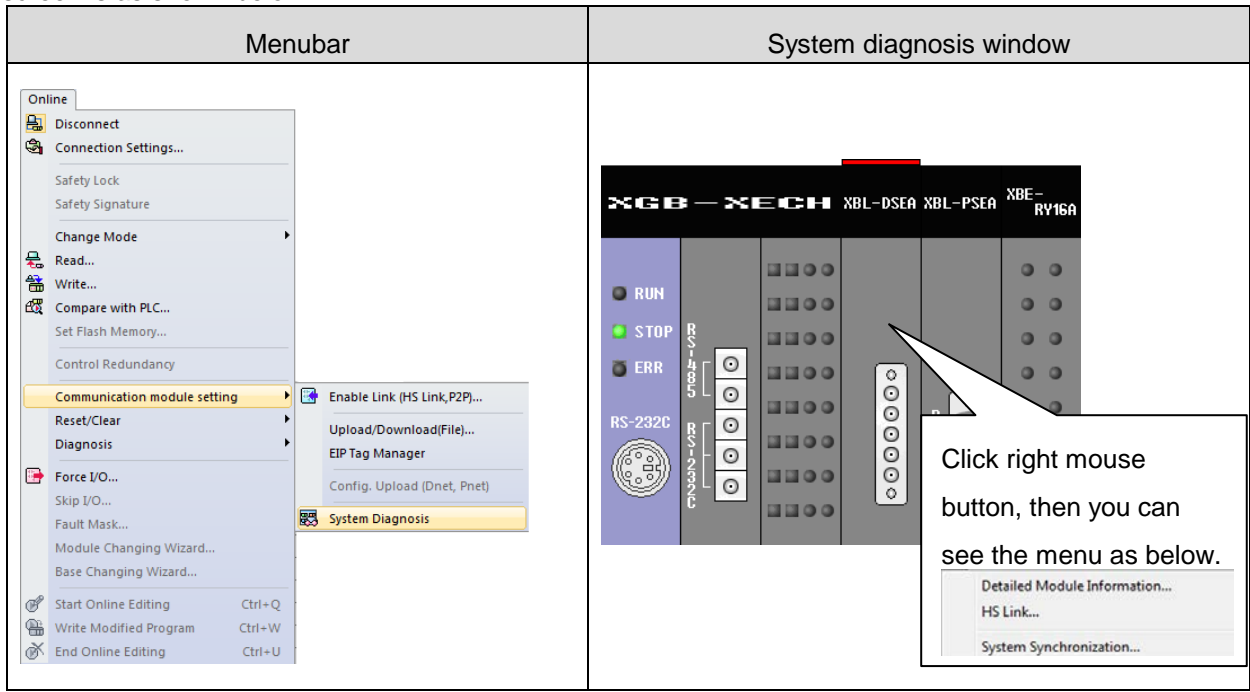
System diagnosis provides the information of Dnet Slave I/F module system. The System diagnosis screen is as shown below.



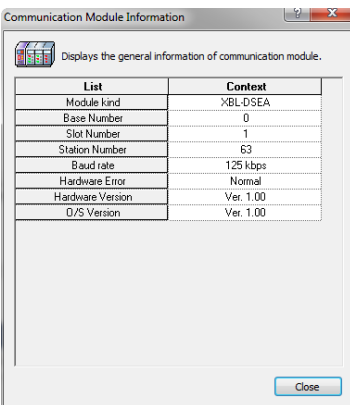It describes the menu of system diagnosis.

Menu	Screen configuration and description	
<div>  <p>Communication module information</p> </div>	Module Kind	Communication module type.
	Base number	Base number of communication module which is connected with High-speed link.
	Slot number	Slot number of communication module which is connected with High-speed link.
	Hardware Error	Hardware error of communication module.
	Hardware version	Hardware version of communication module.
	OS Version	Software version of communication module.

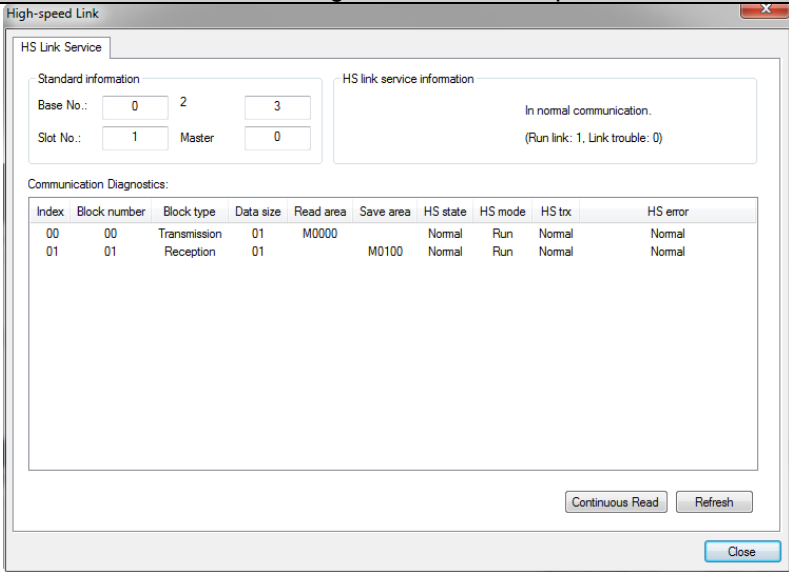Chapter 6 High-speed Link Setting

Menu	Screen configuration and description		
HS (High-speed) link information			
	Standard information	Base no.	Base number of communication module which is connected with High-speed link.
		Communication method	Display communication setting among the communication methods (Poll, Bit-Strobe, Cyclic, COS).
		Slot no.	Slot number of communication module which is connected with High-speed link.
		Master station	Station number of Dnet I/F module.
	Total HS link information	Run link	Status of link enable. (Enable: 1. Disable: 0)
		Link trouble	Error: Error is occurred in slave station after Run link becomes normal status.
	Individual HS link information	Index	Arrange starting from the lowest station number in SyCon.
		Block number	Block number of High-speed link
		Block type	Block type of High-speed link
		Data size	Data size of transmitting/receiving data from master module to slave module.
		Read area	Read device area for transmitting
		Save area	Save device area for receiving
		HS state	Display of error occurring Transmission/Reception status or Error status.
		HS mode	RUN: Normal communication status between master and slave module. STOP: Abnormal communication status between master and slave module.
		HS tx	Display of communication status between master and slave module.
		HS error	Error is displayed while High-speed link data is processed.



6.7 High-speed Link Information

High-speed link swaps the data between master module and all slave modules. It provides the flag of High-speed link operation status classified by individual station or total station. It is useful when checking the reliability of Transmission/Reception data and finding cause of error. Flag kinds and usage is as shown below.

Classification	Run-Link	Link-Trouble	Transmission/Reception status	Operation mode	Error	High-speed link status	Block setting
Information type	All		Respectively				
Flag name (x=High-speed link number)	_HSxRLINK	_HSxLTRBL	_HSxTRX[n] (n=0..63)	_HSxMOD[n] (n=0..63)	_HSxERR[n] (n=0..63)	_HSxSTATE[n] (n=0..63)	_HSxSETBLOCK[n] (n=0..63)
Data type	Bit	Bit	Bit Array	Bit Array	Bit Array	Bit Array	Bit Array
Monitoring	Available	Available	Availability	Availability	Availability	Availability	Availability
Program use	Available	Availability	Availability	Availability	Availability	Availability	Availability

[Table] Function of High-speed link information

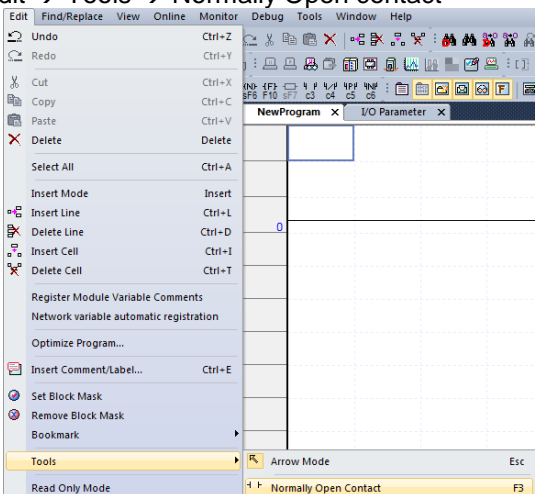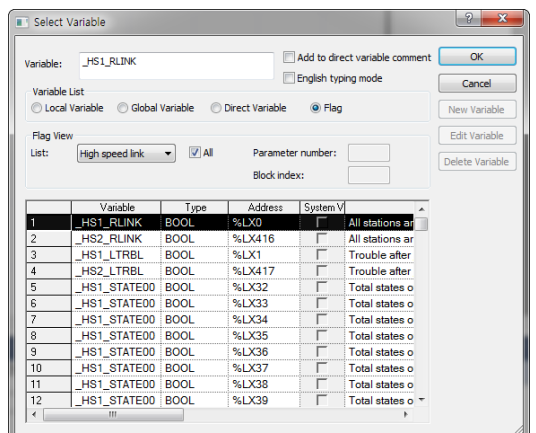The way of selecting flag is as shown below.

<p>Select Contact</p>	<p>1-1 XG5000 → Edit → Tools → Normally Open contact</p> 
<p>Register in Variable/Comment</p>	<p>1-2 Flags</p> 

Use flag in ladder program	<div>1-3 Use flag by Normally Open Contact</div>		
Register in Variable/Comment	<div>2-1 XG-5000 → Monitor window → Right Click → Register in Variable/Comment</div>		
Select PLC, Program			
Select flag	<div>Select Flags</div>		
	Flag type	Select among the System/High-speed link/P2P/PID.	
	Select list	List	Select High-speed link
		All	It is showed the list of all High-speed links.
		Parameter number	It means High-speed link number. The selected number is only displayed in List.
Block index	It is index number of High-speed link block.		

Chapter 6 High-speed Link Setting

Monitoring of flag and device's value is as shown below.

Flag monitor	Monitor 1							
		PLC	Program	Variable/Device	Value	Type	Device/Variable	Comment
	1	NewPLC	<GLOBAL>	_HS1_RLINK	10	BOOL	%LX0	All stations are OK in HS link 1
	2	NewPLC	<GLOBAL>	_HS1_LTRBL	10	BOOL	%LX1	Trouble after _HS 1 RLINK on
	3	NewPLC	<GLOBAL>	_HS1_STATE000	10	BOOL	%LX32	Total states of HS link 1-block 000
	4	NewPLC	<GLOBAL>	_HS1_MOD000	10	BOOL	%LX96	Operation mode of HS link 1-block 000
	5	NewPLC	<GLOBAL>	_HS1_TRX000	10	BOOL	%LX160	Normal communication with HS link 1-block 000
	6	NewPLC	<GLOBAL>	_HS1_ERR000	10	BOOL	%LX224	Error mode of HS link 1-block 000
	7	NewPLC	<GLOBAL>	_HS1_SETBLOCK000	10	BOOL	%LX288	Setting of HS link 1-block 000
- Select variable in Variable/Comment screen and then Drag/Drop the variable to Variable Monitoring Window. The value is appeared in variable Monitoring Window.								


Chapter 7 Communication Program

7.1 Example Program

Basic configuration of example and setting value is as shown below.

Classification				Description		Setting program	Setting phase
System configuration	Slave Module	XBL-DSEA	Station No.	1		XG5000	5-3
			Communication method	Poll		SyCon	5-1
			Read area	Device	M100	XG5000	6-1
				Size	1Word		
			Save area	Device	M110		
				Size	1Word		
		XDL-BSSA (DO 16Point)	Station No.	2		SyCon	4-3
			Communication method	COS		SyCon	5-3
	Master Module	XGL-DMEA	Base No.	0		XG5000	5-1
			Slot No.	0		XG5000	5-1
			Station No.	0		SyCon	1-5, 3-1
			Communication Speed	125kbps		SyCon	3-1
			High-speed link setting	High-speed link 2 area		XG5000	5-1
			Communication period setting	200ms		XG5000	5-1
			Read area	M000		XG5000	6-1 7-1
				2Word		XG5000	
			Save area	M010		XG5000	
				1Word		XG5000	

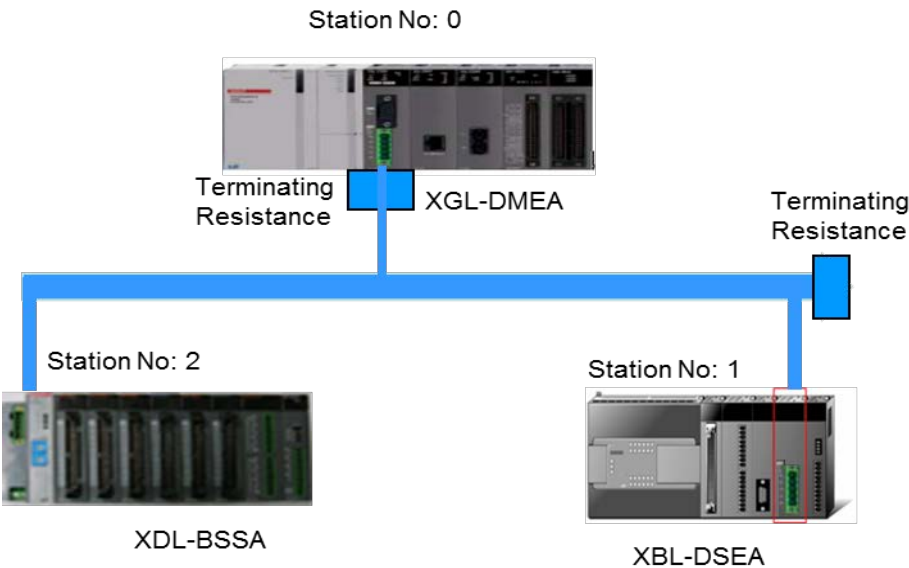• Configuration of system




Chapter 7 Communication Program

XBL-DSEA(Dnet Slave Module) Setting


[XG5000 1 phase] Make a new project

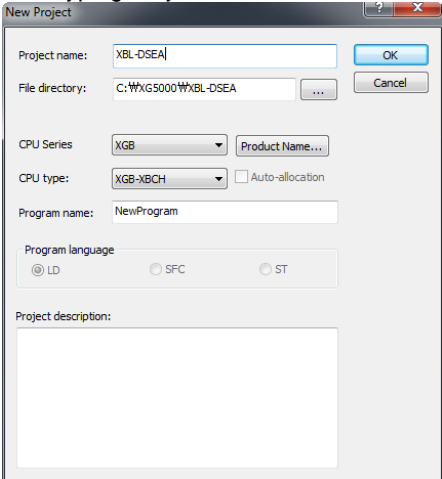Menu : **Project** → **New Project**

Phase	Item	Screen configuration and setting description
1-1	Make a new project	<div>After typing Project name, select CPU series, CPU type. And then click OK</div> <div></div>

[XG5000 2 phase] Connection setting between PC with CPU module

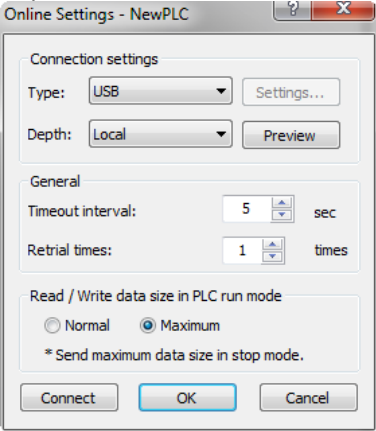Menu : **Online** → **Connection setting**

phase	Item	Screen configuration and setting description
2-1	Connection setting	<div>Type: USB Depth : Local</div> <div></div>

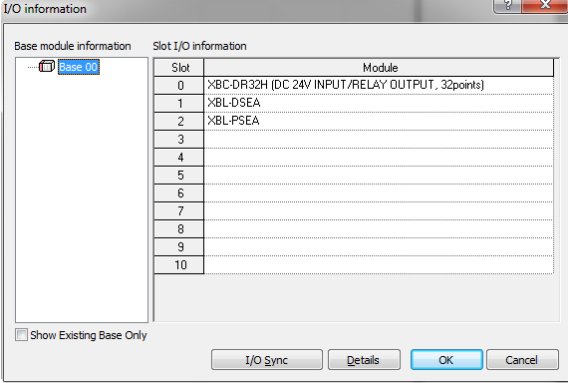
[XG5000 3 phase] Connect

Menu : **Online** → **Connect**



Chapter 7 Communication Program

[XG5000 4 phase] I/O Sync


Menu : **Online** → **Diagnosis** → **I/O Information**

Phase	Item	Screen configuration and setting description
4-1	I/O Sync	<p>Online → Change Mode → Stop and then do I/O Sync</p> 

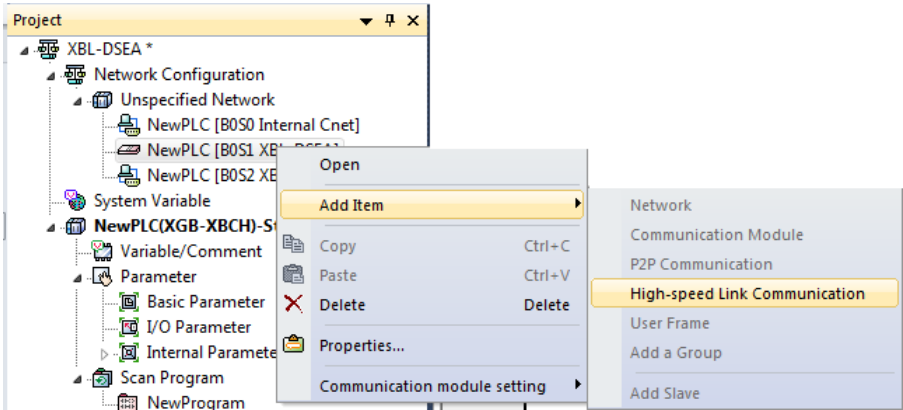[XG5000 5 phase] High-speed link setting

Phase	Item	Screen configuration and setting description
5-1	Add High-speed link	<p>Project window → Add Item → High-speed Link Communication</p> 
5-2	Communication module settings (XBL-DSEA)	<div></div> <p>Initial screen</p> <ul style="list-style-type: none">- Module type, base number, slot number is automatically registered when proceeding I / O synchronization. <p>High-speed link index: 01</p> <p>Period settings: 20ms</p> <p>CPU error: Clear</p> <p>CPU stop: Clear</p> <p>Network with master error: Clear</p>

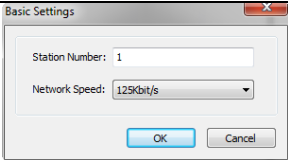Chapter 7 Communication Program


5-3	Communication module settings (XBL-DSEA)	 <p>Station Number : 1 Network Speed : 125Kbps</p>
-----	--	---

[XG5000 6 phase] Read area/Save area setting

Phase	Item	Screen configuration and setting description							
6-1	Communication module setting	Select send, receive mode							
		Index	Mode	Read area	Variable name	Variable name comment	Read area Word size	Save area	Variable name
		0	Send						
		1	Receive						
		2							
		3							
		4							
		5							
		High-speed link block after Read area/Save area setting							
		Index	Mode	Read area	Variable name	Variable name comment	Read area Word size	Save area	Variable name
		0	Send	M0100			1		
		1	Receive					M0110	
		2							
		3							
		4							
	5								

[XG5000 7 phase] Write Network parameter

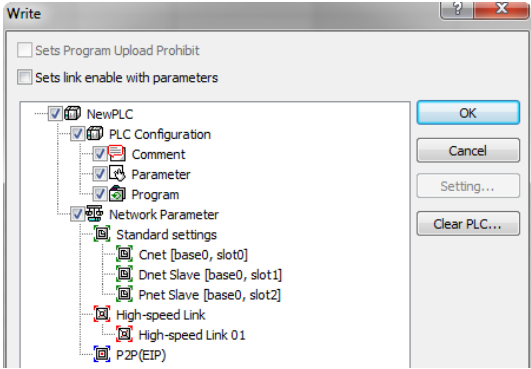Menu : Online → Write

Phase	Item	Screen configuration and setting description
7-1	Write parameter	<p>Initial screen</p> 

- Written parameter is saved CPU module
 - If CPU module is exchanged, High-speed link parameter has to backup from used CPU module

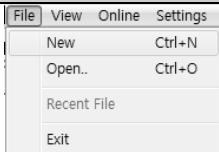
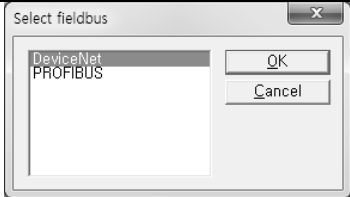

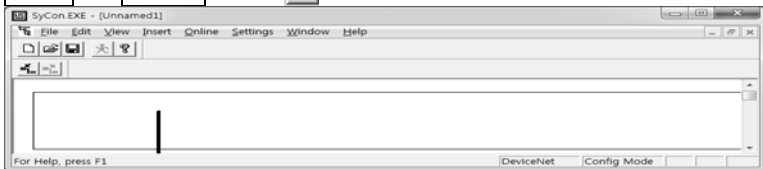
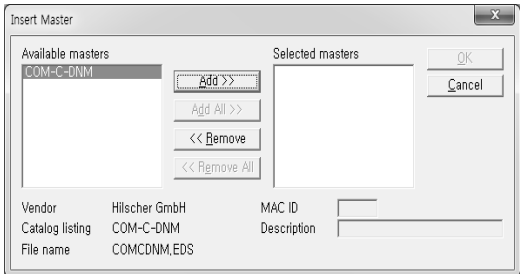
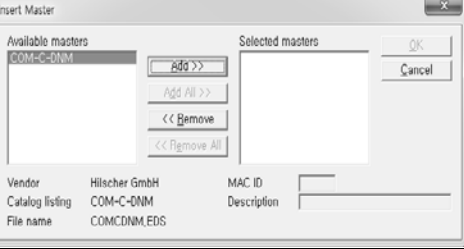
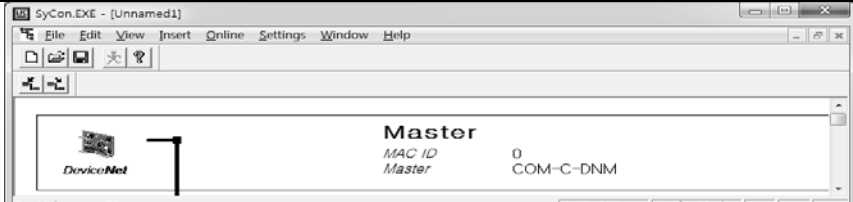
[XG5000 8 phase] High-speed link enabling

Menu : Online → Communication module setting → Enable Link (HS Link, P2P)

Chapter 7 Communication Program

[SyCon 1 phase] Master and MAC ID setting




Menu: **File** → **New**

Phase	Item	Screen configuration and setting description
1-1	Make a new file	 <p>- Make a new file.</p>
1-2	Select fieldbus	 <p>- Select DeviceNet.</p>
1-3	Master setting	<p>Master setting</p> <p>Insert → Master or </p> 
1-4	Select masters	<p>Master type</p> <p>: COM-C-DNM</p> 
1-5	MAC ID setting	 <p>MAC ID: 0</p> <p>Description: Master</p> <p>(Input only English and figure)</p>
1-6	Master setting completion	

Chapter 7 Communication Program

[SyCon 2 phase] Change of Basic setting

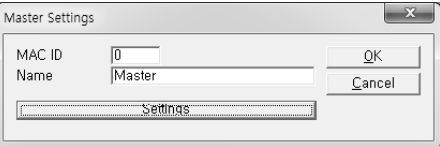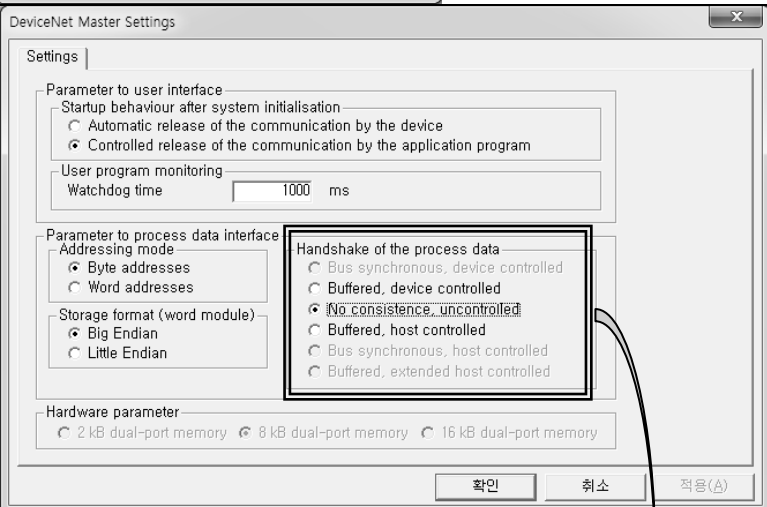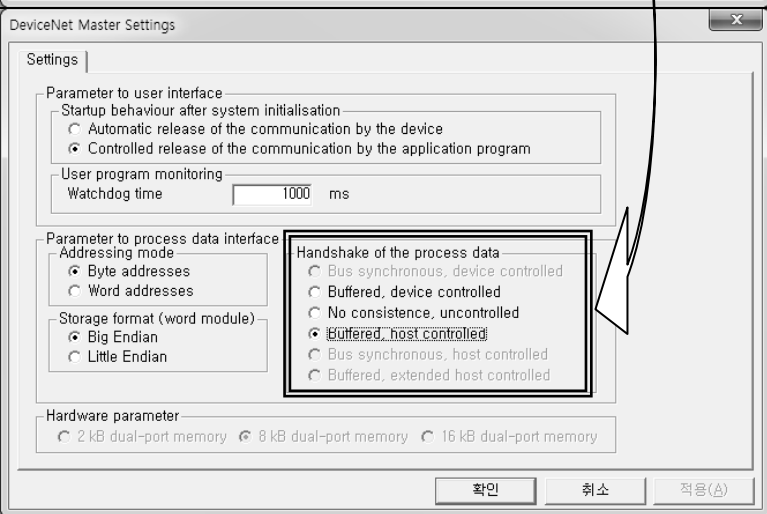Menu: **Settings** → **Master Settings**


Phase	Item	Screen configuration and setting description	
2-1	Master Settings		Master MAC ID: 0 Name: Master
2-2	Settings		
2-3	Change of setting value		

*Only 'Handshake of the process data' setting can be set.

Chapter 7 Communication Program

[SyCon 3 Phase] Baudrate

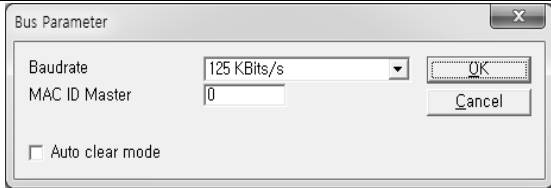Menu: **Settings** → **Bus Parameter**

Phase	Item	Screen configuration and setting description	
3-1	Bus Parameter		Baudrate: 125KBits/s MAC ID Master: 0 Auto clear mode: Refer to 5-3-4.

* Auto clear mode

(1) If Auto clear mode is selected

- If error is occurred in slave module, the communication stops for the whole system.
- Dnet I/F module's HS LED is flickering, MNS LED red light flickering.


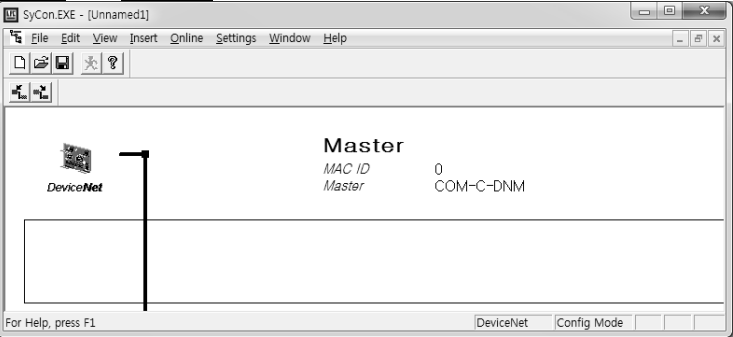
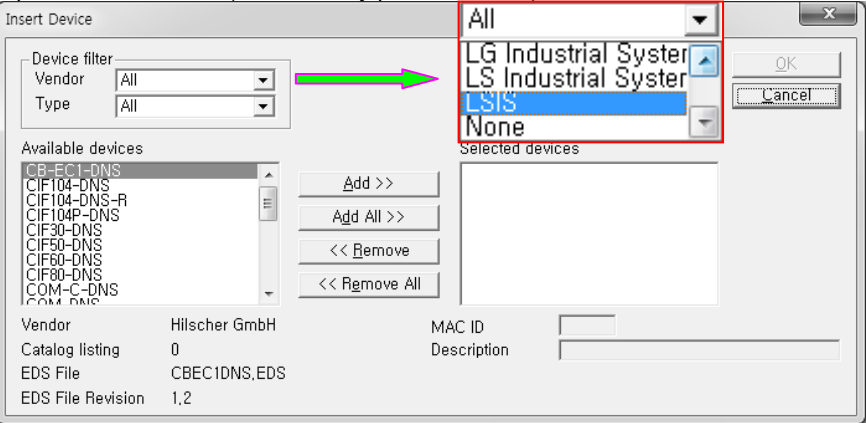
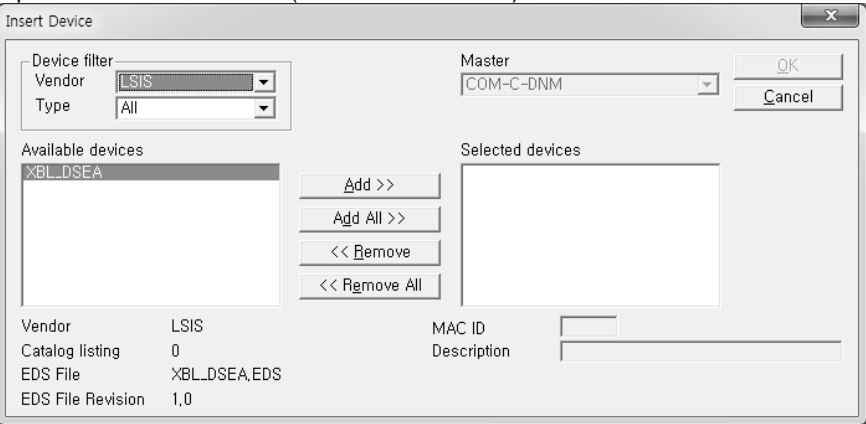
(2) If Auto clear mode is not selected

- If error is occurred in slave module, the communication keeps for normal slave module.



Chapter 7 Communication Program

[SyCon 4 phase] Slave and MAC ID setting

Menu: **Insert** → **Master**

Phase	Item	Screen configuration and setting description
4-1	Slave setting	<div>Master setting</div> <div>Insert → Master or </div> 
4-2	Select slave	<div>1 phase: Device filter (Classified by product maker)</div>  <div>2 phase: Available Devices (Select slave module)</div> 





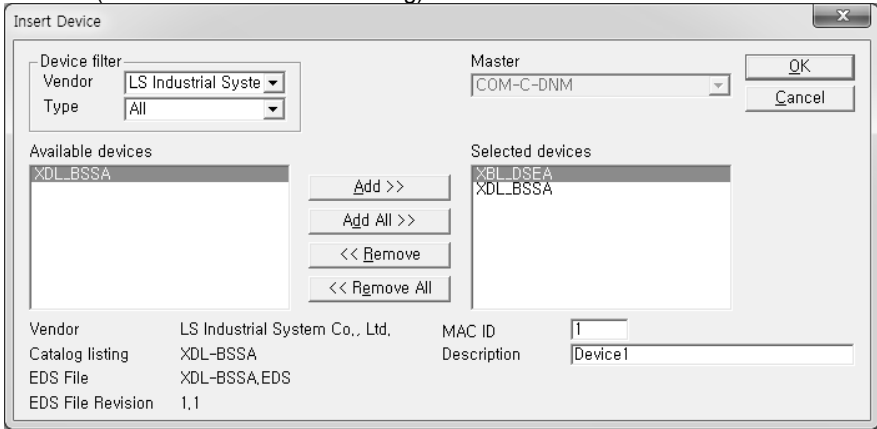
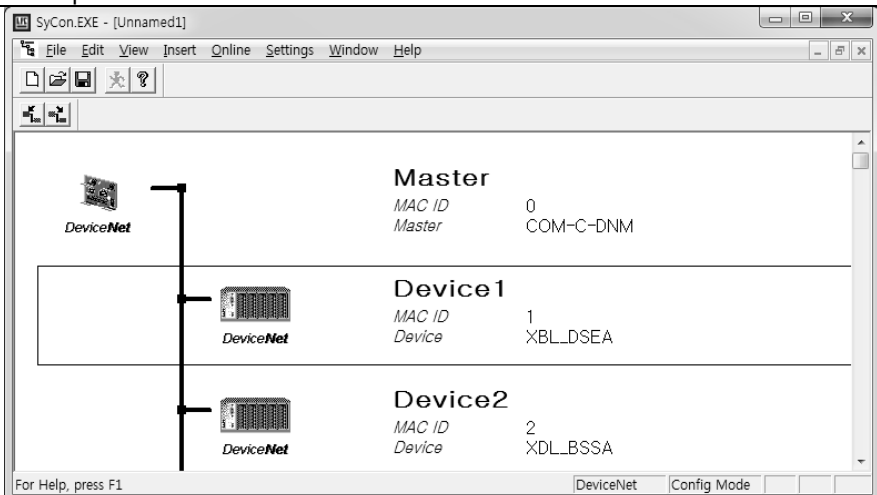
Chapter 7 Communication Program

Phase	Item	Screen configuration and setting description																		
4-3	MAC ID setting	<div><p>MAC ID (Slave module MAC ID setting)</p><table><tr><td>Vendor</td><td>LS Industrial System Co., Ltd.</td><td>MAC ID</td><td>1</td></tr><tr><td>Catalog listing</td><td>XDL-BSSA</td><td>Description</td><td>Device1</td></tr><tr><td>EDS File</td><td>XDL-BSSA.EDS</td><td></td><td></td></tr><tr><td>EDS File Revision</td><td>1.1</td><td></td><td></td></tr></table></div> <p>Description: Device1/ Device2/ Device3</p>	Vendor	LS Industrial System Co., Ltd.	MAC ID	1	Catalog listing	XDL-BSSA	Description	Device1	EDS File	XDL-BSSA.EDS			EDS File Revision	1.1				
Vendor	LS Industrial System Co., Ltd.	MAC ID	1																	
Catalog listing	XDL-BSSA	Description	Device1																	
EDS File	XDL-BSSA.EDS																			
EDS File Revision	1.1																			
4-4	Slave setting completion	 <table><tr><th colspan="2">Master</th></tr><tr><td>MAC ID</td><td>0</td></tr><tr><td>Master</td><td>COM-C-DNM</td></tr><tr><th colspan="2">Device1</th></tr><tr><td>MAC ID</td><td>1</td></tr><tr><td>Device</td><td>XBL_DSEA</td></tr><tr><th colspan="2">Device2</th></tr><tr><td>MAC ID</td><td>2</td></tr><tr><td>Device</td><td>XDL_BSSA</td></tr></table> <p>For Help, press F1</p> <p>DeviceNet Config Mode</p>	Master		MAC ID	0	Master	COM-C-DNM	Device1		MAC ID	1	Device	XBL_DSEA	Device2		MAC ID	2	Device	XDL_BSSA
Master																				
MAC ID	0																			
Master	COM-C-DNM																			
Device1																				
MAC ID	1																			
Device	XBL_DSEA																			
Device2																				
MAC ID	2																			
Device	XDL_BSSA																			

Chapter 7 Communication Program

[SyCon 5-1 phase] Slave module communication methods setting – Slave module: XBL-DSEA

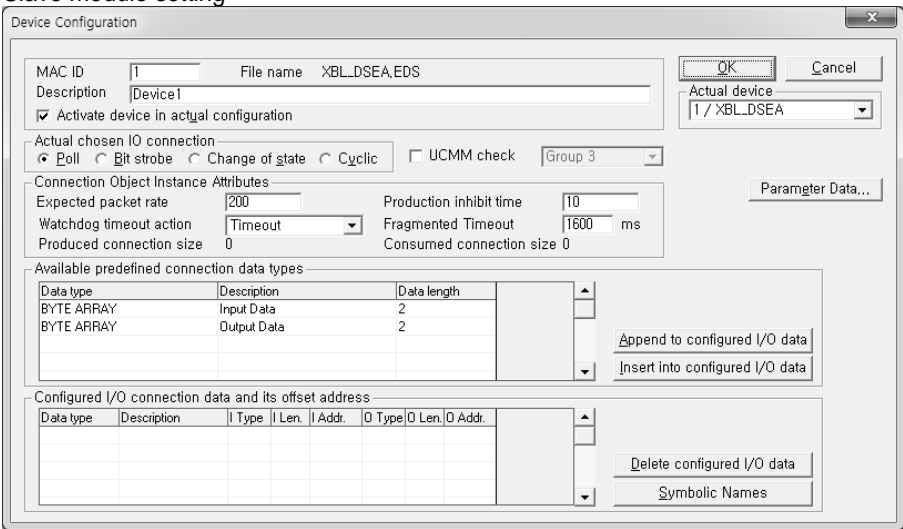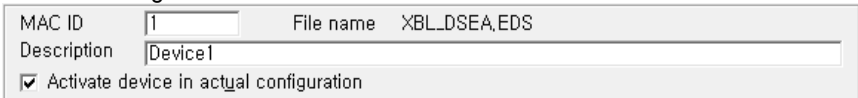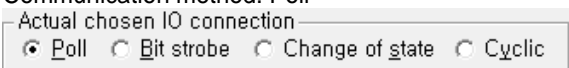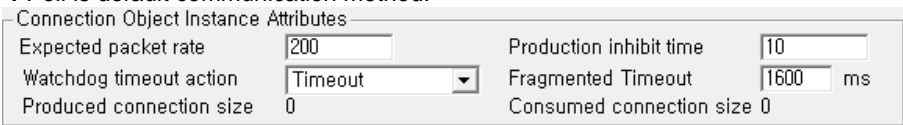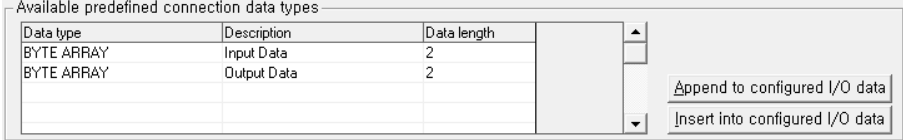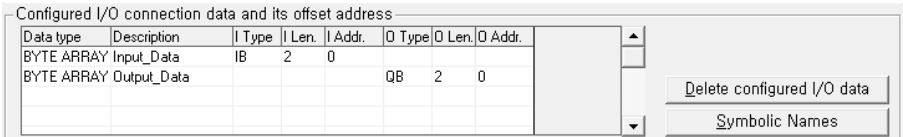Menu: **Settings** → **Device Configuration**

Phase	Item	Screen configuration and setting description
5-1	Slave communication methods setting	<p>Slave module setting</p> 
5-2	Slave MAC ID	<p>MAC ID setting: 1</p> 
5-3	Slave communication method	<p>Communication method: Poll</p> 
5-4	Slave Transmission/Reception period setting	<p>Transmission/Reception data period and response condition setting → Poll is default communication method.</p> 
5-5	Slave data structure (EDS File)	<p>Information of EDS File (Data type, Input/Output characteristic, Data length).</p>  <p>→ Select 'BYTE ARRAY' and then click Append to configured I/O data. The data is displayed as next 5-6 phase.</p>
5-6	Slave data structure	<p>Slave structure (Data type, Input/Output characteristic, Data length) is transmitted to master module.</p> 

Chapter 7 Communication Program

[SyCon 5-2 phase] Slave module communication methods setting – Slave module: XDL-BSSA

Menu: **Settings** → **Device Configuration**



Phase	Item	Screen configuration and setting description
5-1	Slave communication methods setting	<p>Slave module setting</p>
5-2	Slave MAC ID	<p>MAC ID setting: 2</p>
5-3	Slave communication method	<p>Communication method: COS</p> <p>Actual chosen IO connection:</p> <p><input type="radio"/> Poll <input type="radio"/> Bit strobe <input checked="" type="radio"/> Change of state <input type="radio"/> Cyclic <input type="checkbox"/> UCMM check</p>
5-4	Slave Transmission/ Reception period setting	<p>Transmission/Reception data period and response condition setting</p> <p>→ Poll is default communication method.</p> <p>→ In case of COS: Expected packet rate : 200(ms) setting (Expected packet rate > Production Inhibit time)</p>
5-5	Slave data structure (EDS File)	<p>Information of EDS File (Data type, Input/Output characteristic, Data length).</p> <p>→ Select 'BYTE ARRAY' and then click Append to configured I/O data. The data is displayed as next 5-6 phase.</p>
5-6	Slave data structure	<p>Slave structure (Data type, Input/Output characteristic, Data length) is transmitted to master module.</p>

Chapter 7 Communication Program

[SyCon 6 phase] Serial port selection

The cable diagram is same as RS-232C cable diagram using in CPU module. Use same kind cable.

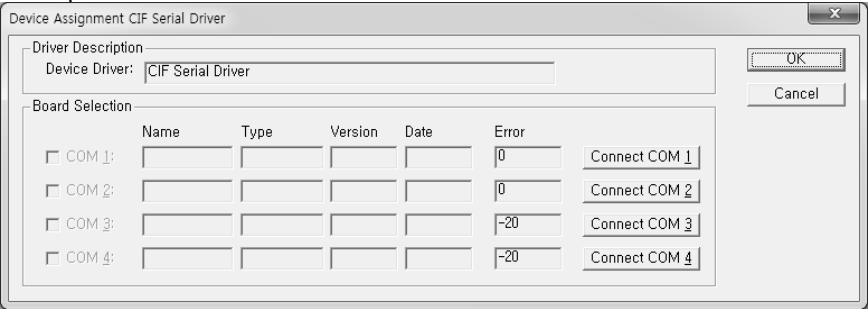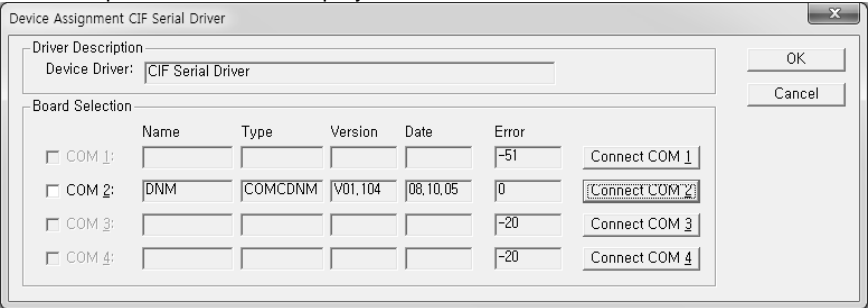Menu: **Settings** → **Device Assignment**

Phase	Item	Screen configuration and setting description
6-1	Serial port setting	<div>Serial port</div> <div></div>
6-2	Port search	<div>Connect COM1 → Connect COM2 → Connect COM3 → Connect COM4</div> <div>Activated port's error value displayed '0'.</div> <div></div> <div>Check COM 1 (<input type="checkbox"/> COM 2: → <input checked="" type="checkbox"/> COM 2:) and Select OK.</div>

[SyCon 7 phase]

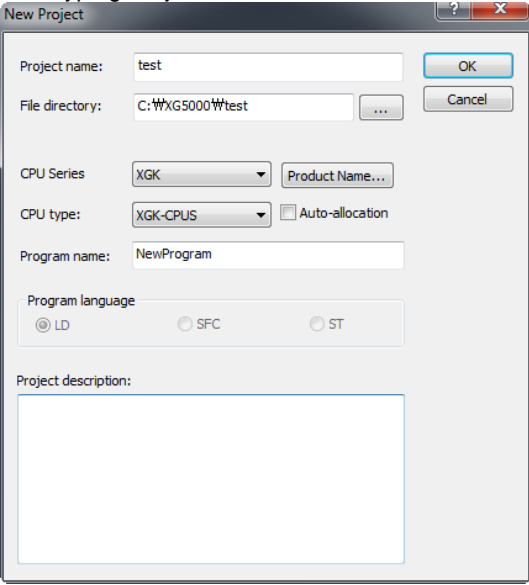
Menu: **Online** → **Download**

Chapter 7 Communication Program

XGL-DMEA(Dnet Master Module) Setting


[XG5000 1 phase] Make a new project

Menu: **Project** → **New Project**

phase	Item	Screen configuration and setting description
1-1	Make a new project	<p>After typing Project name, select CPU series, CPU type. And then click OK</p> 

[XG5000 2 phase] Connection settings

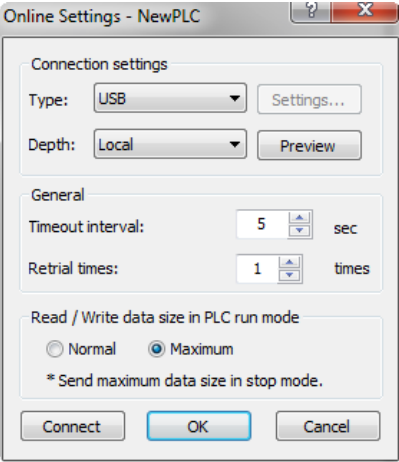
Menu: **Online** → **Connection settings**

phase	Item	Screen configuration and setting description
2-1	Connection settings	 <p>Connection settings: USB Depth : Local</p>

Chapter 7 Communication Program

[XG5000 3 phase] Connect

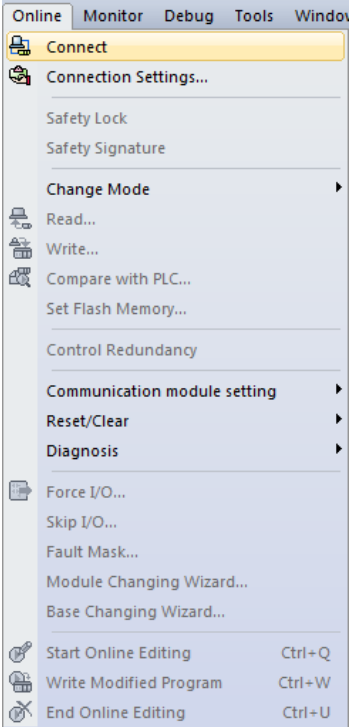Menu: Online → Connect

phase	Item	Screen configuration and setting description
3-1	Connect	

Chapter 7 Communication Program

[XG5000 4 phase] Read I/O Information



Menu: Online → Diagnosis → I/O Information

phase	Item	Screen configuration and setting description
4-1	I/O Information	<div><div><div>Online</div><div><div>Disconnect</div><div>Connection Settings...</div><div>Safety Lock</div><div>Safety Signature</div><div>Change Mode</div><div>Read...</div><div>Write...</div><div>Compare with PLC...</div><div>Set Flash Memory...</div><div>Control Redundancy</div><div>Communication module setting</div><div>Reset/Clear</div><div>Diagnosis</div><div>Force I/O...</div><div>Skip I/O...</div><div>Fault Mask...</div><div>Module Changing Wizard...</div><div>Base Changing Wizard...</div><div>Start Online Editing</div><div>Write Modified Program</div><div>End Online Editing</div></div></div><div><div>PLC Information...</div><div>PLC History...</div><div>PLC Errors/Warnings...</div><div>I/O Information...</div><div>Save PLC History</div></div><div>Ctrl+Q</div><div>Ctrl+W</div><div>Ctrl+U</div></div>

Chapter 7 Communication Program

[XG5000 5 phase] High-speed link setting

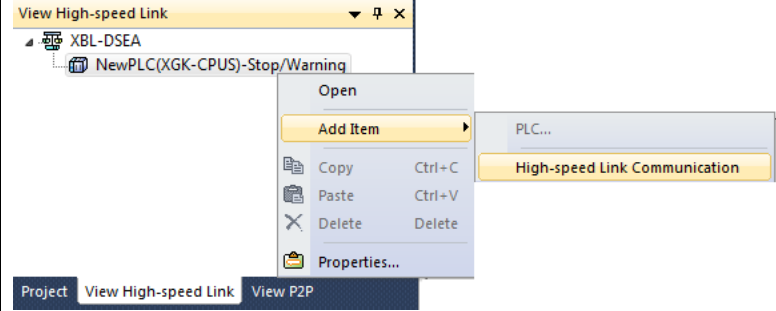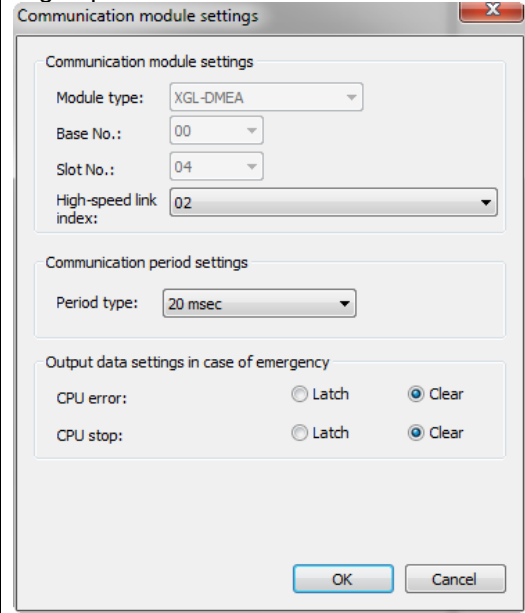Menu : View High-speed link → Add Item → High-speed link communication

phase	Item	Screen configuration and setting description
5-1	Communication module setting	<div>Make a High-speed link</div> <div></div>
		<div>High-speed link 2: Dnet I/F module</div> <div></div> <div>Module type: Dnet</div> <div>Base no.: 00</div> <div>Slot no.: 00</div> <div>Communication period settings: 200ms</div>

Chapter 7 Communication Program

[XG5000 6 phase] SyCon Upload

Menu: [Online](#) → [Communication module setting](#) → [Config.upload \(Dnet, Pnet\)](#)

phase	Item	Screen configuration and setting description							
6-1	Communica tion module settings	Select index							
		Index	Mode	Station number	Communicatio n method	Read area	Variable name	Variable name comment	Sending data (Byte)
		0							
		1							
		2							
		3							
		4							
		5							
		SyCon Upload							
		Index	Mode	Station number	Communicatio n method	Read area	Variable name	Variable name comment	Sending data (Byte)
		0	Send/Receive	1	Poll				2
		1	Send	2	Cyclic				4Long
		2							
		3							
		4							
		5							


[XG5000 7 phase] Read area/Save area setting

phase	Item	Screen configuration and setting description							
7-1	Communicatio n module setting (XGL-DMEA)	Initial screen							
		Index	Mode	Station number	Communicatio n method	Read area	Variable name	Variable name comment	Sending data (Byte)
		0	Send/Receive	1	Poll				2
		1	Send	2	Cyclic				4Long
		2							
		3							
		4							
		5							
		Read area/Save area after setting High-speed link block							
		Index	Mode	Station number	Communicatio n method	Read area	Variable name	Variable name comment	Sending data (Byte)
		0	Send/Receive	1	Poll	M0000			2
		1	Send	2	Cyclic	M0001			4Long
		2							
		3							
		4							
		5							

Chapter 7 Communication Program

[XG5000 8 phase] Write High-speed link parameter

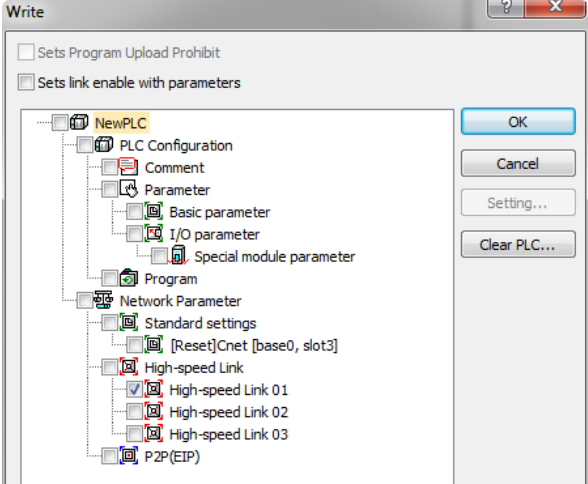Menu : Online → Write

phase	Item	Screen configuration and setting description
8-1	Write Parameter	Select High-speed link and then write
		
		Parameter is downloaded after click 'OK'.

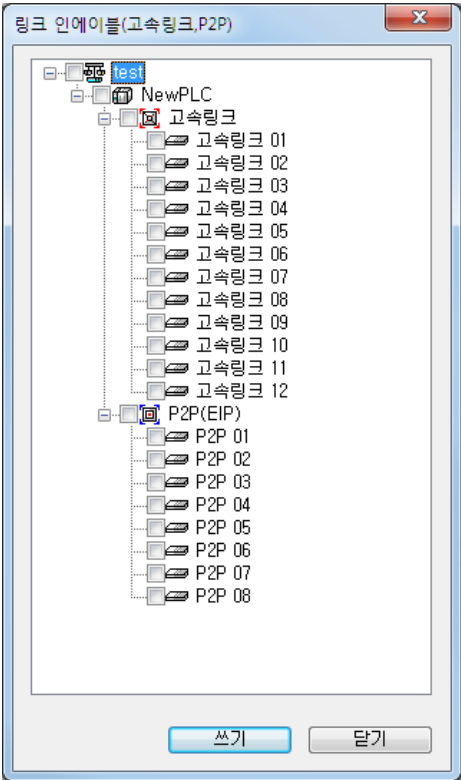
- Written parameter is saved CPU module.
 - If CPU module is exchanged, High-speed link parameter has to backup from used CPU module.

Chapter 7 Communication Program

[XG5000 9 phase] High-speed link enabling

Menu: **Online** → **Enable Link (HS Link, P2P)**

→ Communication is permitted between master module and slave module.

phase	Item	Screen configuration and setting description
9-1	Communication is permitted	

Chapter 8 Troubleshooting

This chapter is to describe various errors that may occur in system operation, their causes and actions to take against. If any error occurs on the communications module, related error details will be displayed through LED of the communication module. Follow the procedures below to shoot the troubles after checking for errors displayed, based on the applicable LED status referring to product specification.

8.1 Symptoms and Management by LED Status

It shows the symptoms of communication module by LED status and the management.
(When High-speed link is enabled)

RUN	I/F	HS	D-RUN	MNS	Symptoms	Management
ON	Flickering	OFF	Flickering	Green ON	High-speed link disable	-
ON	Flickering	ON	ON	Red ON	Slave connection abnormal	Slave connection check Check slave setting
ON	Flickering	Flickering	Flickering	Green ON	SyCon setting changed while High-speed link is executed	-
ON	Flickering	Flickering	Flickering	Red ON	Whole slave connection error	Check slave connection Check slave setting
OFF	OFF	OFF	-	-	Critical defect	Ask customer service center

[Table 8.1] The symptoms of communication module error (High-speed link is enabled)

8.2 System Diagnosis in XG5000

It shows the diagnosis item in XG5000.

Diagnosis item	Description
Communication module information	It displays the standard information of communication module.
High-speed link	It displays the flag information of High-speed link.


[Table 8.2] System diagnosis in XG5000

It diagnoses the system by [Online] – [Communication module setting] – [System Diagnosis] in XG5000.

Chapter 8 Troubleshooting


8.2.1 Communication module information

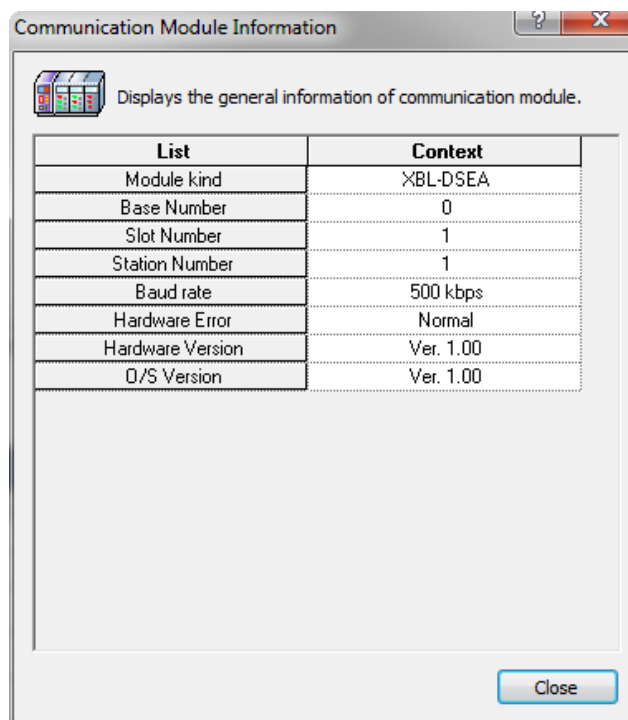It displays the information of Dnet I/F module.



[Figure 8.1] Communication module information

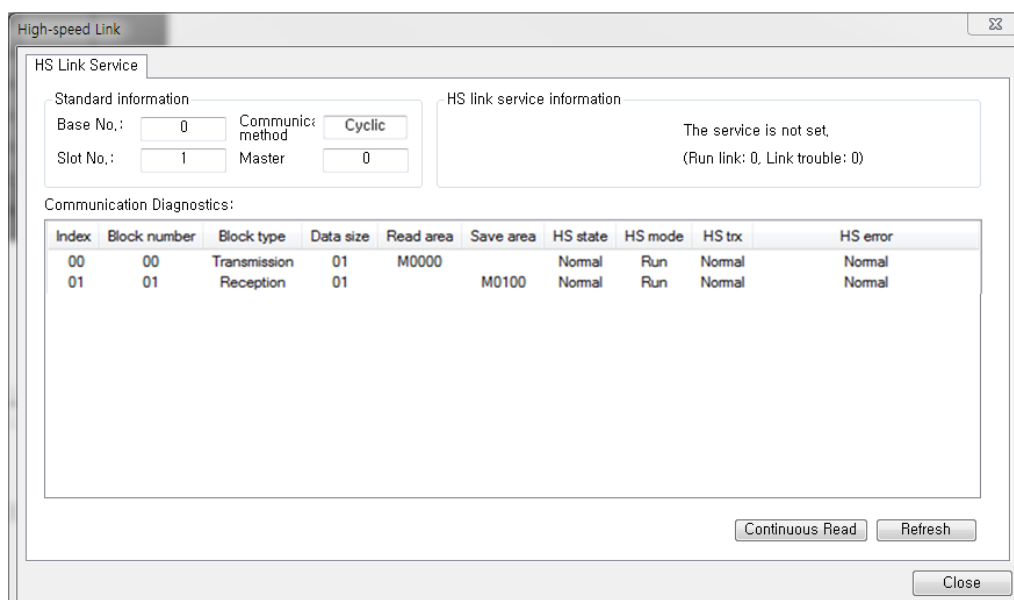8.2.2 High-speed link




[Figure 8.2] High-speed link

High-speed link diagnosis		
Classification (Main item)	Classification (Sub item)	Description
Standard information	Base no.	Base number of attached module
	Slot no.	Slot number of attached module
	Master station	Master station number
	Communication method	Slave's communication method
Total High-speed link information	Run link	Normal: All station is a normal communication. Error: If only one station can not to communicate, it is an error.
	Link trouble	Communication line's status
Individual High- speed link information	Index	High-speed link parameter index
	Block number	High-speed link block number
	Block type	Show the type of transmission
	Data size	Transmission/Reception data size (Byte)
	Read area	Head of read area
	Save area	Head of save area
	HS state	Present HS state
	HS mode	Present operation state
	HS trx	Transmission/reception state
	HS error	Error state

[Table 8.3] High-speed link diagnosis

8.3 Diagnosis of Communication Module through XG5000

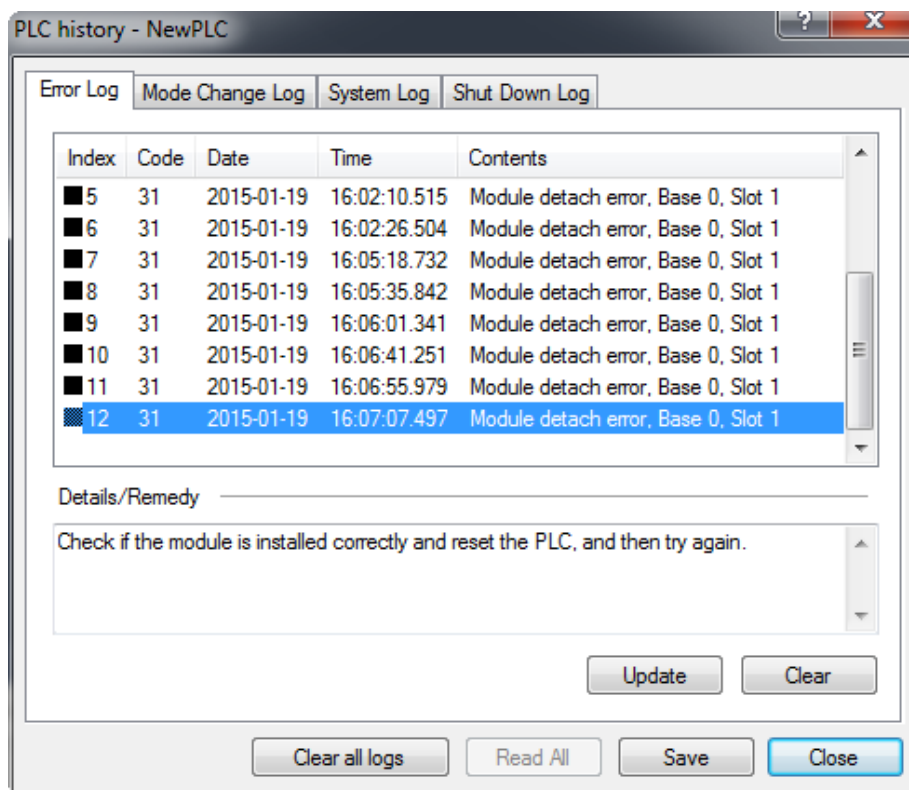It can monitor the communication status by XG5000. Connect to CPU port and [Online] – [PLC History] – [PLC Errors/Warnings].




[Figure 8.5] Detailed information of PLC history

If hardware error or CPU interface error is occurred, communication module's LED operates abnormally. Also, the error information is shown through XG5000.


[Figure 8.5] shows Error/Warning information from [Online] - [PLC History] menu in XG5000.

8.4 Trouble shooting for Respective Error

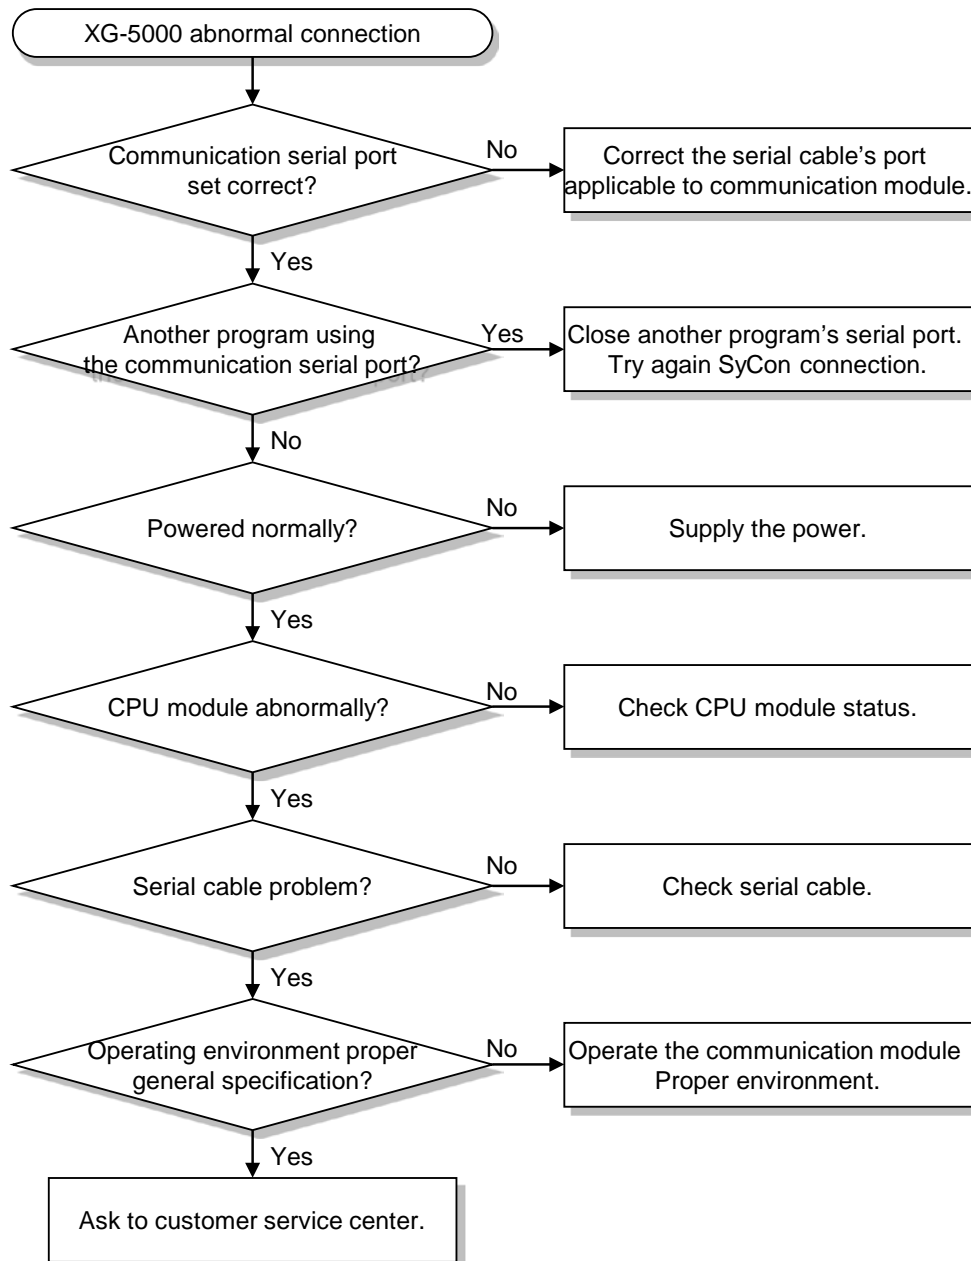8.4.1 XG5000 abnormal connection



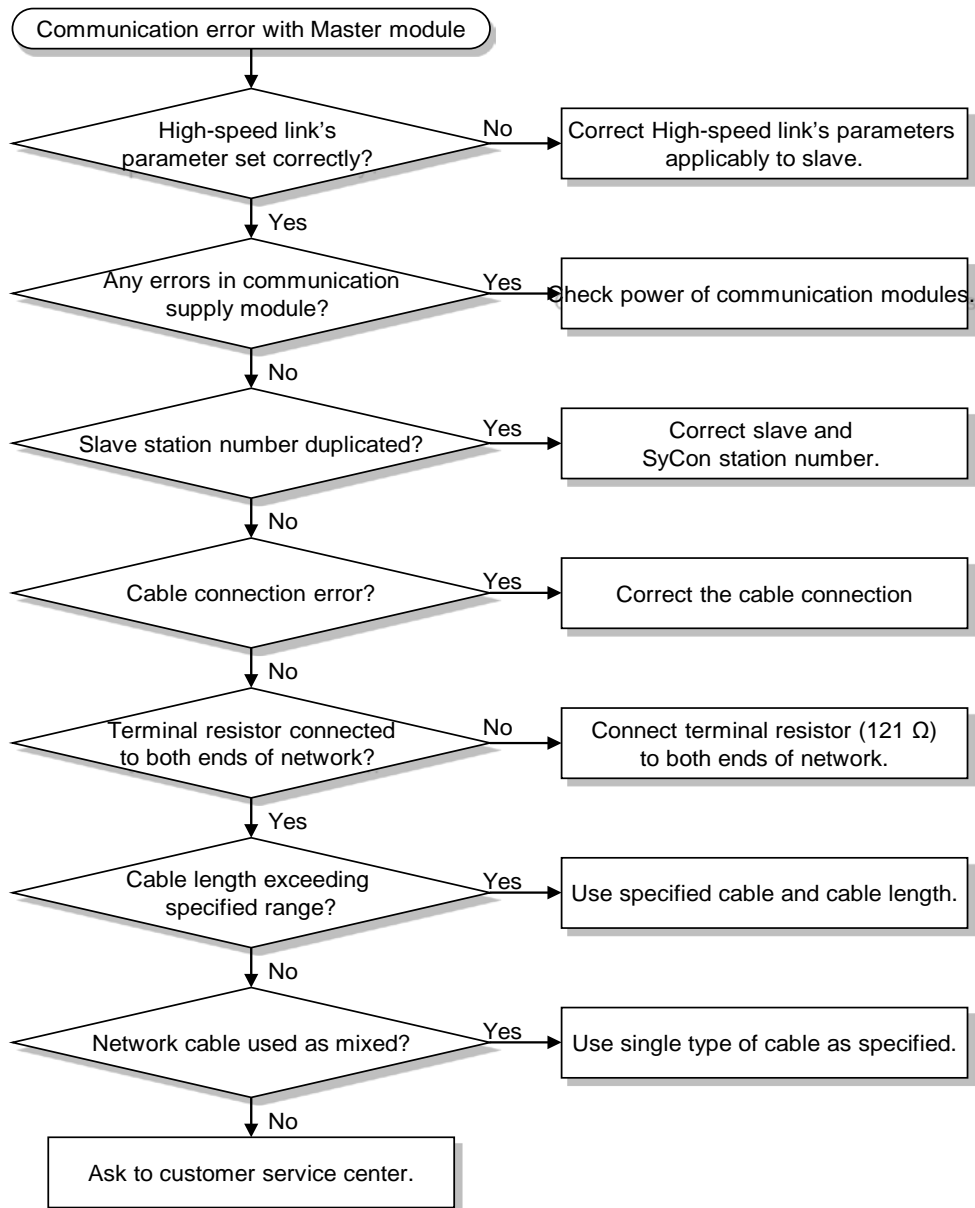8.4.2 Communication error with Master module



A.1 List of Flags

A.1.1 Special relays

Device 1	Device 2	Type	Variable	Function	Description
F0000		DWORD	_SYS_STATE	Mode & Status	PLC mode & run status displayed.
	F00000	BIT	_RUN	RUN	RUN status.
	F00001	BIT	_STOP	STOP	STOP status.
	F00002	BIT	_ERROR	ERROR	ERROR status.
	F00003	BIT	_DEBUG	DEBUG	DEBUG status.
	F00004	BIT	_LOCAL_CON	Local control	Local control mode.
	F00005	BIT	_MODBUS_CO N	Modbus mode	Modbus control mode.
	F00006	BIT	_REMOTE_CO N	Remote mode	Remote control mode.
	F00008	BIT	_RUN_EDIT_ST	Modification during run	Program being downloaded during run.
	F00009	BIT	_RUN_EDIT_C HK	Modification during run	Modification in progress during run.
	F0000A	BIT	_RUN_EDIT_D ONE	Modification complete during run	Modification complete during run.
	F0000B	BIT	_RUN_EDIT_E ND	Modification complete during run	Modification complete during run.
	F0000C	BIT	_CMOD_KEY	Run Mode	Run Mode changed by key.
	F0000D	BIT	_CMOD_LPADT	Run Mode	Run Mode changed by local PADT.
	F0000E	BIT	_CMOD_RPAD T	Run Mode	Run Mode changed by remote PADT.
	F0000F	BIT	_CMOD_RLINK	Run Mode	Run Mode changed by remote communication module.
	F00010	BIT	_FORCE_IN	Compulsory input	Compulsory input status.
	F00011	BIT	_FORCE_OUT	Compulsory output	Compulsory output status.
	F00012	BIT	_SKIP_ON	I/O SKIP	I/O SKIP being executed.
	F00013	BIT	_EMASK_ON	Error mask	Error mask being executed.
	F00014	BIT	_MON_ON	Monitor	Monitor being executed.
	F00015	BIT	_USTOP_ON	STOP	Stopped by STOP function
	F00016	BIT	_ESTOP_ON	ESTOP	Stopped by ESTOP function.
	F00017	BIT	_CONPILE_MO DE	Compiling	Compile being performed.
	F00018	BIT	_INIT_RUN	Initializing	Initialization task being performed.
	F0001C	BIT	_PB1	Program code 1	Program code 1 selected.
	F0001D	BIT	_PB2	Program code 2	Program code 2 selected.
	F0001E	BIT	_CB1	Compile code 1	Compile code 1 selected.
	F0001F	BIT	_CB2	Compile code 2	Compile code 2 selected.

Appendix

Device 1	Device 2	Type	Variable	Function	Description
F0002		DWORD	_CNF_ER	System error	Serious error in system reported.
	F00020	BIT	_CPU_ER	CPU error	CPU configuration error found.
	F00021	BIT	_IO_TYER	Module type error	Module type is not identical.
	F00022	BIT	_IO_DEER90	Module installation error	Module is displaced.
	F00023	BIT	_FUSE_ER	Fuse error	Fuse blown.
	F00024	BIT	_IO_RWER	Module I/O error	Module I/O error found.
	F00025	BIT	_IP_IFER	Module interface error	Error found in Special/communication module interface.
	F00026	BIT	_ANNUM_ER	External equipment Error	Serious error detected in external equipment.
	F00028	BIT	_BPRM_ER	Basic parameter	Basic parameter is abnormal.
	F00029	BIT	_IOPRM_ER	IO parameter	IO configuration parameter abnormal.
	F0002A	BIT	_SPPRM_ER	Special module parameter	Special module parameter abnormal.
	F0002B	BIT	_CPPRM_ER	Communication module parameter	Communication module parameter abnormal.
	F0002C	BIT	_PGM_ER	Program error	Program error found.
	F0002D	BIT	_CODE_ER	Code error	Program code error found.
	F0002E	BIT	_SWDT_ER	System watch-dog	System watch-dog active.
	F0002F	BIT	_BASE_POWER_ER	Power error	Base power abnormal.
	F00030	BIT	_WDT_ER	Scan watch-dog	Scan watch-dog active.
F0004		DWORD	_CNF_WAR	System warning	Slight error in system reported.
	F00040	BIT	_RTC_ER	RTC error	RTC data abnormal.
	F00041	BIT	_DBCK_ER	Back-up error	Data back-up error found.
	F00042	BIT	_HBCK_ER	Restart error	Hot restart unavailable.
	F00043	BIT	_ABSD_ER	Run error stop	Stopped due to abnormal run.
	F00044	BIT	_TASK_ER	Task impact	Task being impacted.
	F00045	BIT	_BAT_ER	Battery error	Battery status abnormal.
	F00046	BIT	_ANNUM_WAR	External equipment error	Slight error detected in external equipment.
	F00047	BIT	_LOG_FULL	Memory full	Log memory full
	F00048	BIT	_HS_WAR1	HS link 1	HS link – parameter 1 error
	F00049	BIT	_HS_WAR2	HS link 2	HS link – parameter 2 error
	F0004A	BIT	_HS_WAR3	HS link 3	HS link – parameter 3 error
	F0004B	BIT	_HS_WAR4	HS link 4	HS link – parameter 4 error
	F0004C	BIT	_HS_WAR5	HS link 5	HS link – parameter 5 error
	F0004D	BIT	_HS_WAR6	HS link 6	HS link – parameter 6 error
	F0004E	BIT	_HS_WAR7	HS link 7	HS link – parameter 7 error
	F0004F	BIT	_HS_WAR8	HS link 8	HS link – parameter 8 error
	F00050	BIT	_HS_WAR9	HS link 9	HS link – parameter 9 error

Appendix

Device 1	Device 2	Type	Variable	Function	Description
	F00051	BIT	_HS_WAR10	HS link 10	HS link – parameter 10 error
	F00052	BIT	_HS_WAR11	HS link 11	HS link - parameter11 error
	F00053	BIT	_HS_WAR12	HS link 12	HS link - parameter12 error
	F00054	BIT	_P2P_WAR1	P2P parameter 1	P2P - parameter1 error
	F00055	BIT	_P2P_WAR2	P2P parameter 2	P2P – parameter2 error
	F00056	BIT	_P2P_WAR3	P2P parameter 3	P2P – parameter3 error
	F00057	BIT	_P2P_WAR4	P2P parameter 4	P2P – parameter4 error
	F00058	BIT	_P2P_WAR5	P2P parameter 5	P2P – parameter5 error
	F00059	BIT	_P2P_WAR6	P2P parameter 6	P2P – parameter6 error
	F0005A	BIT	_P2P_WAR7	P2P parameter 7	P2P – parameter7 error
	F0005B	BIT	_P2P_WAR8	P2P parameter 8	P2P – parameter8 error
	F0005C	BIT	_CONSTANT_ER	Fixed cycle error	Fixed cycle error
F0009		WORD	_USER_F	User contact point	Timer available for user.
	F00090	BIT	_T20MS	20ms	CLOCK of 20ms cycle.
	F00091	BIT	_T100MS	100ms	CLOCK of 100ms cycle.
	F00092	BIT	_T200MS	200ms	CLOCK of 200ms cycle.
	F00093	BIT	_T1S	1s	CLOCK of 1s cycle.
	F00094	BIT	_T2S	2s	CLOCK of 2s cycle.
	F00095	BIT	_T10S	10s	CLOCK of 10s cycle.
	F00096	BIT	_T20S	20s	CLOCK of 20s cycle.
	F00097	BIT	_T60S	60s	CLOCK of 60s cycle.
	F00099	BIT	_ON	Always ON	Bit always ON.
	F0009A	BIT	_OFF	Always OFF	Bit always OFF
	F0009B	BIT	_1ON	1 scan ON	Bit only ON for the first scan.
	F0009C	BIT	_1OFF	1 scan OFF	Bit only OFF for the first scan.
	F0009D	BIT	_STOG	Reverse	Every scan reversed.
F0010		WORD	_USER_CLK	User CLOCK	CLOCK available to set by user.
	F00100	BIT	_USR_CLK0	Repeat specific scan	ON/OFF CLOCK 0 for specific scan
	F00101	BIT	_USR_CLK1	Repeat specific scan	ON/OFF CLOCK 1 for specific scan
	F00102	BIT	_USR_CLK2	Repeat specific scan	ON/OFF CLOCK 2 for specific scan
	F00103	BIT	_USR_CLK3	Repeat specific scan	ON/OFF CLOCK 3 for specific scan
	F00104	BIT	_USR_CLK4	Repeat specific scan	ON/OFF CLOCK 4 for specific scan
	F00105	BIT	_USR_CLK5	Repeat specific scan	ON/OFF CLOCK 5 for specific scan
	F00106	BIT	_USR_CLK6	Repeat specific scan	ON/OFF CLOCK 6 for specific scan
	F00107	BIT	_USR_CLK7	Repeat specific scan	ON/OFF CLOCK 7 for specific scan

Appendix

Device 1	Device 2	Type	Variable	Function	Description
F0011		WORD	_LOGIC_RESULT	Logic result	Logic result displayed.
	F00110	BIT	_LER	Calculation error	ON for 1 scan if calculation in error.
	F00111	BIT	_ZERO	Zero flag	ON if calculation result is 0.
	F00112	BIT	_CARRY	Carry flag	ON if Carry found during calculation.
	F00113	BIT	_ALL_OFF	Whole output OFF	ON if all output OFF
	F00115	BIT	_LER_LATCH	Calculation error latch	ON kept if calculation in error.
F0012		WORD	_CMP_RESULT	Compared result	Compared result displayed.
	F00120	BIT	_LT	LT flag	ON if "less than"
	F00121	BIT	_LTE	LTE flag	ON if "less than or equal"
	F00122	BIT	_EQU	EQU flag	ON if "equal"
	F00123	BIT	_GT	GT flag	ON if "greater than"
	F00124	BIT	_GTE	GTE flag	ON if "greater than or equal"
	F00125	BIT	_NEQ	NEQ flag	ON if "not equal"
F0013		WORD	_AC_F_CNT	Inspected power cut	Number of inspected power-cuts displayed.
F0014		WORD	_FALS_NUM	FALS No.	FALS No. displayed.
F0015		WORD	_PUTGET_ERR0	PUT/GET error 0	Main base PUT / GET error
F0016		WORD	_PUTGET_ERR1	PUT/GET error 1	Added base step 1 PUT / GET error
F0017		WORD	_PUTGET_ERR2	PUT/GET error 2	Added base step 2 PUT / GET error
F0018		WORD	_PUTGET_ERR3	PUT/GET error 3	Added base step 3 PUT / GET error
F0019		WORD	_PUTGET_ERR4	PUT/GET error 4	Added base step 4 PUT / GET error
F0020		WORD	_PUTGET_ERR5	PUT/GET error 5	Added base step 5 PUT / GET error
F0021		WORD	_PUTGET_ERR6	PUT/GET error 6	Added base step 6 PUT / GET error
F0022		WORD	_PUTGET_ERR7	PUT/GET error 7	Added base step 7 PUT / GET error
F0023		WORD	_PUTGET_NDR0	PUT/GET complete 0	Main base PUT / GET complete
F0024		WORD	_PUTGET_NDR1	PUT/GET complete 1	Added base step 1 PUT / GET complete
F0025		WORD	_PUTGET_NDR2	PUT/GET complete 2	Added base step 2 PUT / GET complete
F0026		WORD	_PUTGET_NDR3	PUT/GET complete 3	Added base step 3 PUT / GET complete
F0027		WORD	_PUTGET_NDR4	PUT/GET complete 4	Added base step 4 PUT / GET complete
F0028		WORD	_PUTGET_NDR5	PUT/GET complete 5	Added base step 5 PUT / GET complete
F0029		WORD	_PUTGET_NDR6	PUT/GET complete 6	Added base step 6 PUT / GET complete
F0030		WORD	_PUTGET_NDR7	PUT/GET complete 7	Added base step 7 PUT / GET complete
F0044		WORD	_CPU_TYPE	CPU type	Information on CPU type displayed.
F0045		WORD	_CPU_VER	CPU version	CPU version displayed.
F0046		DWORD	_OS_VER	OS version	OS version displayed.
F0048		DWORD	_OS_DATE	OS date	OS released date displayed.

Appendix

Device 1	Device 2	Type	Variable	Function	Description
F0050		WORD	_SCAN_MAX	Max. scan time	Max. scan time displayed
F0051		WORD	_SCAN_MIN	Min. scan time	Min. scan time displayed
F0052		WORD	_SCAN_CUR	Present scan time	Present scan time displayed.
F0053		WORD	_MON_YEAR	Month / Year	PLC's time information (Month/Year)
F0054		WORD	_TIME_DAY	Hour / Date	PLC's time information (Hour/Date)
F0055		WORD	_SEC_MIN	Second / Minute	PLC's time information (Second/Minute)
F0056		WORD	_HUND_WK	100 years / Day	PLC's time information (100 years/Day)
F0057		WORD	_FPU_INFO	FPU calculation result	Floating decimal calculation result displayed.
	F00570	BIT	_FPU_LFLAG_I	Incorrect error latch	Latched if in incorrect error.
	F00571	BIT	_FPU_LFLAG_U	Underflow latch	Latched if underflow found.
	F00572	BIT	_FPU_LFLAG_O	Overflow latch	Latched if overflow found.
	F00573	BIT	_FPU_LFLAG_Z	Latch divided by 0	Latched if divided by 0.
	F00574	BIT	_FPU_LFLAG_V	Invalid calculation latch	Latched if invalid calculation.
	F0057A	BIT	_FPU_FLAG_I	Incorrect error	Reported if incorrect error found.
	F0057B	BIT	_FPU_FLAG_U	Underflow	Reported if underflow found.
	F0057C	BIT	_FPU_FLAG_O	Overflow	Reported if overflow found.
	F0057D	BIT	_FPU_FLAG_Z	Division by 0	Reported if divided by 0.
	F0057E	BIT	_FPU_FLAG_V	Invalid calculation	Reported if calculation invalid.
	F0057F	BIT	_FPU_FLAG_E	Irregular value input	Reported if irregular value input.
F0058		DWORD	_ERR_STEP	Error step	Error step saved.
F0060		DWORD	_REF_COUNT	Refresh	Increased when module refresh executed.
F0062		DWORD	_REF_OK_CNT	Refresh OK	Increased if module refresh normal
F0064		DWORD	_REF_NG_CNT	Refresh NG	Increased if module refresh abnormal.
F0066		DWORD	_REF_LIM_CNT	Refresh LIMIT	Increased if module refresh abnormal (TIME OUT).
F0068		DWORD	_REF_ERR_CNT	Refresh ERROR	Increased if module refresh abnormal.
F0070		DWORD	_MOD_RD_ERR_CNT	Module READ ERROR	Increased if module reads 1 word abnormally.
F0072		DWORD	_MOD_WR_ERR_CNT	Module WRITE ERROR	Increased if module writes 1 word abnormally.
F0074		DWORD	_CA_CNT	Block service	Increased if module's block data serviced
F0076		DWORD	_CA_LIM_CNT	Block service LIMIT	Increased if module's block data service abnormal.
F0078		DWORD	_CA_ERR_CNT	Block service ERROR	Increased if module's block data service abnormal.
F0080		DWORD	_BUF_FULL_CNT	Buffer FULL	Increased if CPU's internal buffer is FULL.
F0082		DWORD	_PUT_CNT	PUT count	Increased if PUT executed.
F0084		DWORD	_GET_CNT	GET count	Increased if GET executed.
F0086		DWORD	_KEY	Present key	Local key's present status displayed.
F0088		DWORD	_KEY_PREV	Previous key	Local key's previous status displayed.

Appendix

Device 1	Device 2	Type	Variable	Function	Description
F0090		WORD	_IO_TYER_N	Discordant slot	Slot number with discordant module type displayed.
F0091		WORD	_IO_DEER_N	Displaced slot	Slot number with displaced module displayed.
F0092		WORD	_FUSE_ER_N	Fuse blown slot	Slot number with fuse blown displayed.
F0093		WORD	_IO_RWER_N	RW error slot	Slot number with module Read/Write error displayed.
F0094		WORD	_IP_IFER_N	IF error slot	Slot number with module interface error displayed.
F0096		WORD	_IO_TYER0	Module type 0 error	Main base module type error.
F0097		WORD	_IO_TYER1	Module type 1 error	Added base step 1 module type error.
F0098		WORD	_IO_TYER2	Module type 2 error	Added base step 2 module type error.
F0099		WORD	_IO_TYER3	Module type 3 error	Added base step 3 module type error.
F0100		WORD	_IO_TYER4	Module type 4 error	Added base step 4 module type error.
F0101		WORD	_IO_TYER5	Module type 5 error	Added base step 5 module type error
F0102		WORD	_IO_TYER6	Module type 6 error	Added base step 6 module type error
F0103		WORD	_IO_TYER7	Module type 7 error	Added base step 7 module type error
F0104		WORD	_IO_DEER0	Module installation 0 error	Main base module installation error
F0105		WORD	_IO_DEER1	Module installation 1 error	Added base step 1 module installation error
F0106		WORD	_IO_DEER2	Module installation 2 error	Added base step 2 module installation error
F0107		WORD	_IO_DEER3	Module installation 3 error	Added base step 3 module installation error
F0108		WORD	_IO_DEER4	Module installation 4 error	Added base step 4 module installation error
F0109		WORD	_IO_DEER5	Module installation 5 error	Added base step 5 module installation error
F0110		WORD	_IO_DEER6	Module installation 6 error	Added base step 6 module installation error
F0111		WORD	_IO_DEER7	Module installation 7 error	Added base step 7 module installation error
F0112		WORD	_FUSE_ER0	Fuse blown 0 error	Main base Fuse blown error
F0113		WORD	_FUSE_ER1	Fuse blown 1 error	Added base step 1 Fuse blown error
F0114		WORD	_FUSE_ER2	Fuse blown 2 error	Added base step 2 Fuse blown error
F0115		WORD	_FUSE_ER3	Fuse blown 3 error	Added base step 3 Fuse blown error
F0116		WORD	_FUSE_ER4	Fuse blown 4 error	Added base step 4 Fuse blown error
F0117		WORD	_FUSE_ER5	Fuse blown 5 error	Added base step 5 Fuse blown error
F0118		WORD	_FUSE_ER6	Fuse blown 6 error	Added base step 6 Fuse blown error
F0119		WORD	_FUSE_ER7	Fuse blown 7 error	Added base step 7 Fuse blown error
F0120		WORD	_IO_RWER0	Module RW 0 error	Main base module Read/Write error
F0121		WORD	_IO_RWER1	Module RW 1 error	Added base step 1 module Read/Write error
F0122		WORD	_IO_RWER2	Module RW 2 error	Added base step 2 module Read/Write error
F0123		WORD	_IO_RWER3	Module RW 3 error	Added base step 3 module Read/Write error
F0124		WORD	_IO_RWER4	Module RW 4 error	Added base step 4 module Read/Write error
F0125		WORD	_IO_RWER5	Module RW 5 error	Added base step 5 module Read/Write error
F0126		WORD	_IO_RWER6	Module RW 6 error	Added base step 6 module Read/Write error

Appendix

Device 1	Device 2	Type	Variable	Function	Description
F0127		WORD	_IO_RWER7	Module RW 7 error	Added base step 7 module Read/Write error
F0128		WORD	_IO_IFER_0	Module IF 0 error	Main base module interface error
F0129		WORD	_IO_IFER_1	Module IF 1 error	Added base step 1 module interface error
F0130		WORD	_IO_IFER_2	Module IF 2 error	Added base step 2 module interface error
F0131		WORD	_IO_IFER_3	Module IF 3 error	Added base step 3 module interface error
F0132		WORD	_IO_IFER_4	Module IF 4 error	Added base step 4 module interface error
F0133		WORD	_IO_IFER_5	Module IF 5 error	Added base step 5 module interface error
F0134		WORD	_IO_IFER_6	Module IF 6 error	Added base step 6 module interface error
F0135		WORD	_IO_IFER_7	Module IF 7 error	Added base step 7 module interface error
F0136		WORD	_RTC_DATE	RTC date	RTC's present date
F0137		WORD	_RTC_WEEK	RTC day	RTC's present day of the week
F0138		DWORD	_RTC_TOD	RTC time	RTC's present time (ms unit)
F0140		DWORD	_AC_FAIL_CNT	Power-cut times	Power-cut times saved.
F0142		DWORD	_ERR_HIS_CNT	Errors found	Number of found errors saved.
F0144		DWORD	_MOD_HIS_CNT	Mode conversion times	Mode conversion times saved.
F0146		DWORD	_SYS_HIS_CNT	History updated times	System's history updated times saved.
F0148		DWORD	_LOG_ROTATE	Log rotate	Log rotate information saved.
F0150		WORD	_BASE_INFO0	Slot information 0	Main base slot information
F0151		WORD	_BASE_INFO1	Slot information 1	Added base step 1 slot information
F0152		WORD	_BASE_INFO2	Slot information 2	Added base step 2 slot information
F0153		WORD	_BASE_INFO3	Slot information 3	Added base step 3 slot information
F0154		WORD	_BASE_INFO4	Slot information 4	Added base step 4 slot information
F0155		WORD	_BASE_INFO5	Slot information 5	Added base step 5 slot information
F0156		WORD	_BASE_INFO6	Slot information 6	Added base step 6 slot information
F0157		WORD	_BASE_INFO7	Slot information 7	Added base step 7 slot information
F0158		WORD	_RBANK_NUM	Used block number	Presently used block number
F0159		WORD	_RBLOCK_STATUS	Flash status	Flash block status
F0160		DWORD	_RBLOCK_READ_FLAG	Flash Read	ON when reading Flash N block data.
F0162		DWORD	_RBLOCK_WRITE_FLAG	Flash Write	ON when writing Flash N block data.
F0164		DWORD	_RBLOCK_ERROR_FLAG	Flash error	Error found during Flash N block service.
F1024		WORD	_USER_WRITE_F	Available contact	Contact point available in program
	F10240	BIT	_RTC_WR	RTC RW	Data Write & Read in RTC
	F10241	BIT	_SCAN_WR	Scan WR	Scan value initialization
	F10242	BIT	_CHK_ANC_ERROR	Detect external serious error	Detection of serious error in external equipment requested.
	F10243	BIT	_CHK_ANC_WARNING	Detect external slight error	Detection of slight error in external equipment requested.

Appendix

Device 1	Device 2	Type	Variable	Function	Description
F1025		WORD	_USER_STAUS_F	User contact point	User contact point
	F10250	BIT	_INIT_DONE	Initialization complete	Initialization complete displayed.
F1026		WORD	_ANC_ERR	External serious error information	Serious error information in external equipment displayed.
F1027		WORD	_ANC_WAR	External slight error information	Slight error information in external equipment displayed.
F1034		WORD	_MON_YEAR_DT	Month / Year	Time information data (Month/Year)
F1035		WORD	_TIME_DAY_DT	Hour / Date	Time information data (Hour/Date)
F1036		WORD	_SEC_MIN_DT	Second / Minute	Time information data (Second/Minute)
F1037		WORD	_HUND_WK_DT	100 years / Day	Time information data (100 years/Day)

Appendix

A.1.2 Special register for data link

[Table 1] List of communication flags based on HS link No.

HS link No. 1 ~ 12

No.	Keyword	Type	Detail	Description
L000000	_HS1_RLINK	Bit	HS link parameter No.1's all stations normally operated	Displays all stations normally operated as specified in HS link parameter, which will be On if 1. There is no RUN mode error in all stations specified in parameter 2. All data block is in normal communication as specified in parameter. 3. The parameter specified in each station itself is in normal communication. Run_link will be kept On if once On until stopped by link disable.
L000001	_HS1_LTRBL	Bit	After _HS1RLINK is ON, abnormal status displayed	This flag will be On if the station specified in parameter and the data block's communication status are as described below with _HSmRLINK flag On., 1. When the station specified in parameter is not in RUN mode, 2. When the station specified in parameter is in error, 3. When data block's communication status specified in parameter is unstable, The link trouble will be On if one of those conditions 1,2 and 3 Above occurs. And if such a condition is back to normal, it will be Off.
L000020 ~ L00009F	_HS1_STATE[k] (k=000~127)	Bit Array	HS link parameter No.1, Block No.k's general status displayed	Displays the general status of the communication information for the specified parameter's respective data blocks. HS1STATE[k]=HS1MOD[k]&_HS1TRX[k]&(~_HSmERR[k])
L000100 ~ L00017F	_HS1_MOD[k] (k=000~127)	Bit Array	HS link parameter No.1, Block No.k station's Run operation mode	Displays the operation mode of the station specified in parameter's data block k.
L000180 ~ L00025F	_HS1_TRX[k] (k=000~127)	Bit Array	Normal communication displayed with HS link parameter No.1, Block No.k station	Displays the communication status of parameter's data block k to check if normal as specified.
L000260 ~ L00033F	_HS1_ERR[k] (k=000~127)	Bit Array	HS link parameter No.1, Block No.k station's Run error mode	Displays the communication status of parameter's data block k to check for any error.
L000340 ~ L00041F	_HS1_SETBLOCK [k]	Bit Array	HS link parameter No.1, Block No.k setting displayed	Displays the setting status of parameter's data block k.

* In the case of Dnet and Pnet, Block No.k stands for the station No. of the slave (in other words, it is station No.k).

Remark

HS link No.	L area address	Remarks
2	L000500~L00099F	Compared with HS link of 1 in [Table 1], other HS link station number's flag address will be simply calculated as follows; * Calculation formula: L area address = L000000 + 500 x (HS link No. – 1)
3	L001000~L00149F	
4	L001500~L00199F	
5	L002000~L00249F	
6	L002500~L00299F	
7	L003000~L00349F	In order to use HS link flag for program and monitoring, use the flag map registered in XG5000 for convenient application..
8	L003500~L00399F	
9	L004000~L00449F	
10	L004500~L00499F	
11	L005000~L00549F	

K as a block number is displayed through 8 words by 16 for 1 word for the information of 128 blocks from 000 to 127.

For example, block information of 16~31, 32~47, 48~63, 64~79, 80~95, 96~111, 112~127 will be displayed in L00011, L00012, L00013, L00014, L00015, L00016, L00017 from block 0 to block 15 for mode information (_HS1MOD). Thus, the mode information of the block No. 55 will be displayed in L000137.

A.2 Terminology

General terms of DeviceNet I/F module are as described below for the suitable application of the product. Refer to DeviceNet specification for more details.

1) Fieldbus

Electric system to transmit small quantity of data between automatic devices fast and reliably so to execute a given task thoroughly.

2) Master Module

A module to send/receive and control data.

3) Slave Module

A module to respond to the data sent from the master module.

4) CAN (Controller Area Network) Protocol

Communication protocol designed compatible with dedicated automobile communication. CAN technology has been adopted in the device network. CAN is divided into 11-bit Identifier Field and Data Field which can transmit up to 8 bytes.

Identifier Field	RTR	Data Length	Data
------------------	-----	-------------	------

- Identifier Field : Area to set address (composed of 11 bits)

- Data : Field composed of actual data (up to 8 bytes can be transmitted)

5) Bus-Off

It produces an applicable error to abnormal network power.

6) ODVA (Open DeviceNet Vendor Association)

An association established to propagate DeviceNet communication widely.

7) Connection

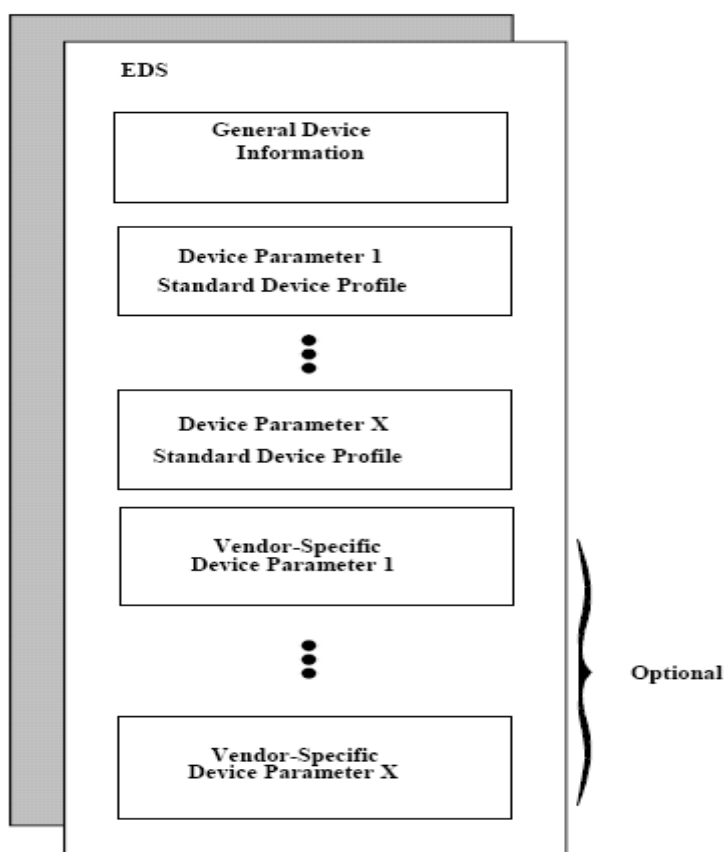
As logic connection between master and slave which are connected through DeviceNet, it is used to keep and control all kinds of communication.

8) DeviceNet station No. (DeviceNet MAC ID)

Station No. of the communication module which has adopted DeviceNet standard. XGL_DMEA is specified through SyCon, and generally the station No. used for DeviceNet module is set by means of the switch installed on the front of the communication module. And this station No. is used as the station No. for all the services including HS link service.

9) Profile

It provides information on the device configuration data. (Printed data sheet, EDS; Electronic Data Sheet, etc.) It is named EDS in DeviceNet. It contains attributes of device and object address information of parameter. EDS's constitution is as shown below.



10) Packet

A data packet which is the basic unit used to transmit data through the network. With the header (Message identifier) attached in front, information on destination of the packet and other information necessary are added thereto.

11) CRC (Cyclic Redundancy Check)

As one of the error detection methods mostly used for synchronous transmission, it is also called as patrol signed type. CRC field of CAN protocol is displayed in 15-bit CRC and 'r' bit, composed of 1-bit CRC delimiter. If Rx node receives data frame, it deletes stuffing bits first and then checks for errors from SOF to data field through CRC. Since 15-bits CRC is suitable for the frame with bit counts less than 127 bits and CAN is of the max. 108-bit frame, it is appropriate to check for errors. If CRC divides transmitted value by multinomial expression created when transmitting and sends the value together attached to the back of message, the Rx side will divide the received data by the identical multinomial expression. And if the remainder is 'zero', it is regarded as No Error identified in this method.

12) Terminating resistance

Resistance used to adjust mutual impedance between Tx and Rx sides on the Physical Layer. Terminating resistance of DeviceNet is 121Ω, 1/4 W, 1% .

13) High-speed Link

A communication type used only between DeviceNet communication modules for the user to send/receive data at high speed, which execute communication with HS link parameters setting of XG5000.

14) XG5000 (PLC Programming And Debugging Tool)

Software used for programming, downloading, run, stop, debugging applicably to PLC CPU module, where a diagnosis function is included to check the status of respective communication modules.

15) SyCon (System Configuration Tool)

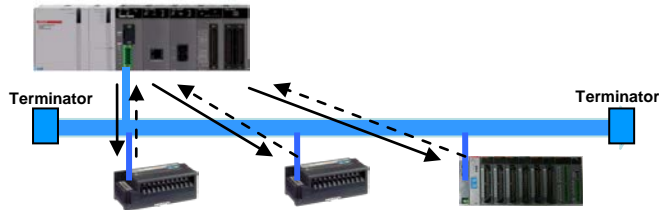
Software used for system configuration through DeviceNet, where basic DeviceNet parameters can be set for master module and slave module, and setting details can be monitored through XG5000 as well.

16) Communication Type

4 types of DeviceNet communication are available (Poll, Bit-Strobe, COS and Cyclic). The communication types provided by respective slaves (remote I/O) may be different as such. DeviceNet can use the 4 communication types as mixed in a single network.


17) Poll

Master executes monitoring and data Tx/Rx for the respective slaves whenever scanned.




18) Bit Strobe

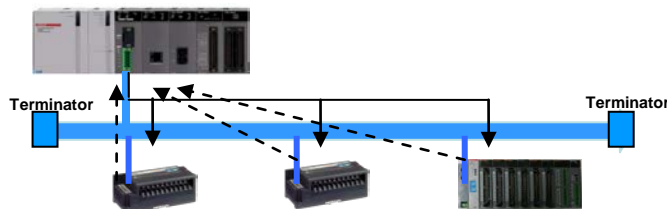Master sends 1-bit output signal to respective slaves. Each slave which receives the output sign operates as specified. With data Tx/Rx minimized between master and slaves, the speed of the whole scan can be increased.




19) Cyclic

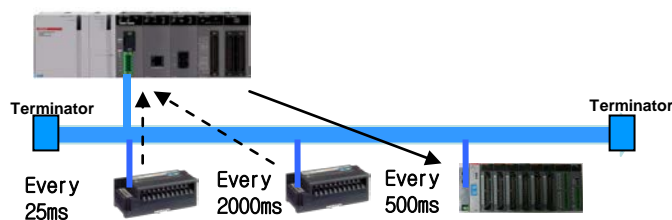The slave set to cyclic sends the data of one time to the master for every cycle (max. 65535mS) specified.



20) COS (Change of State)

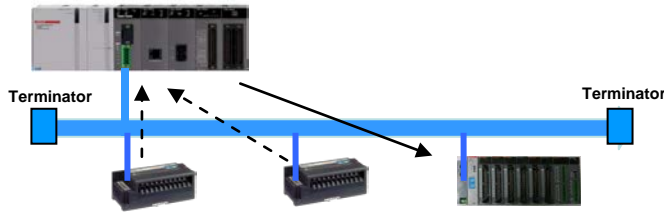If any change occurs in the status of respective slaves, communication will be executed with the master. It is effective only for the slave monitoring the objects whose distance of status change is long. Data will be also sent to the master even if there is no change in the status with the max. COS distance of 65535ms specified in the slave.



21) MAC ID (Media Access Control Identifier)

Node Address on the DeviceNet network is defined as MAC ID, which uses 6 bits among 11 bits of CAN Identifier Field. MAC ID range of DeviceNet is available up to 0 ~ 63.

22) CSMA/NBA (Carrier Sense Multiple Access with Non-destructive Bitwise Arbitration)

Data Tx mechanism of CAN is similar to IEEE 802.3 CSMA/CD protocol. In other words, respective nodes check the status of the bus previously to sending the data, and then send the ready message if the bus is inactive. In CSMA/CD if two or more nodes send the messages at a time, the message will be collided and all lost. However, in CAN the message to be sent has 11-bit identifier allowing the message of high priority to be sent first. In other words, if two or more nodes send the messages at a time, the message of the highest priority (that is, the message with the lowest identifier value) will be sent while transmission of other messages of lower priority is stopped after identifiers are compared with each other bit by bit. As for the bus, '0' bit is superior to '1' bit. In other words, '0' bit is called as 'dominant' ('d' bit) and '1' as 'recessive' ('r' bit). Tx node monitors the bus whenever sending a bit. If a node sends 'r' bit and the monitoring result of the bus is 'd' bit, it means other node in the bus is sending the message of higher priority, thus the node will promptly stop transmitting the message to convert to Rx mode. The node which stops transmitting will monitor the status of the bus and then restart to transmit the message automatically if the bus is back to inactive status.

23) Reset

Communication module is initialized when error is occurred. It is executed [Online] – [Reset] menu in XG5000. PLC is restarted.

24) Expected Packet Rate

Transmission value from slave module for I/O data exchange of master module

- a) Cyclic communication : Slave update the data by this setting value.
- b) COS communication : Slave can set the time of Watchdog timeout through this setting value.

25) Production inhibit time

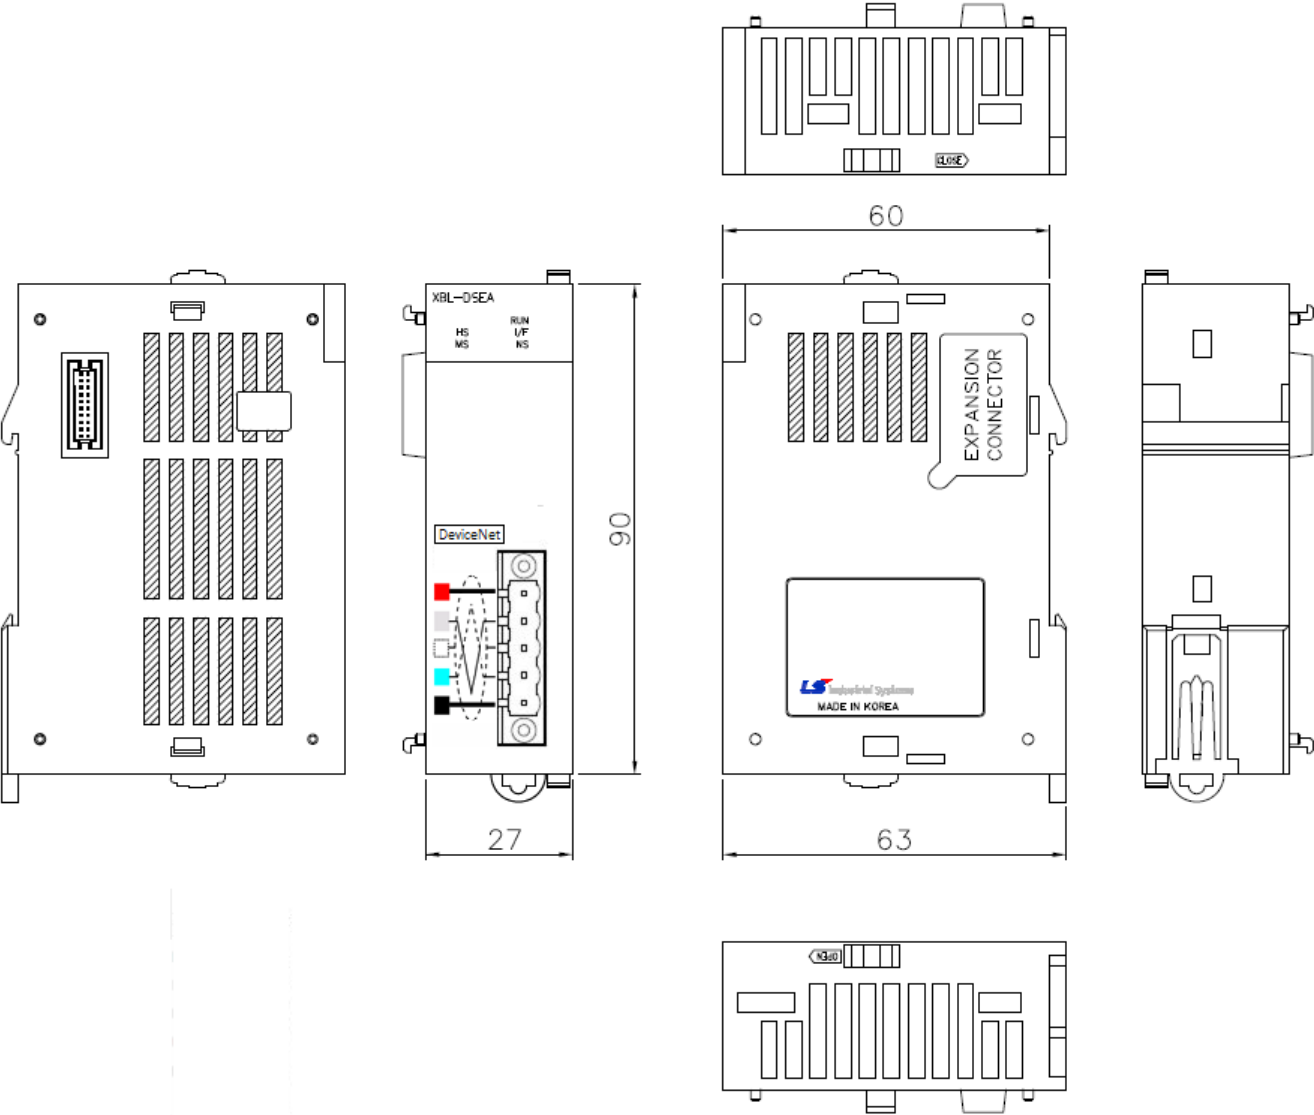
Minimum delay time for updating of new data. It is not updated during this production inhibit time.

26) Fragmented Timeout

If I/O data is 8 bytes more than, master module wait until slave module give response within fragmented timeout setting.

A.3 External Dimensions

Unit: mm



Warranty and Environmental Policy

Warranty

1. Warranty Period

The product you purchased will be guaranteed for 18 months from the date of manufacturing.

2. Scope of Warranty

Any trouble or defect occurring for the above-mentioned period will be partially replaced or repaired. However, please note the following cases will be excluded from the scope of warranty.

- (1) Any trouble attributable to unreasonable condition, environment or handling otherwise specified in the manual,
- (2) Any trouble attributable to others' products,
- (3) If the product is modified or repaired in any other place not designated by the company,
- (4) Due to unintended purposes
- (5) Owing to the reasons unexpected at the level of the contemporary science and technology when delivered.
- (6) Not attributable to the company; for instance, natural disasters or fire

3. Since the above warranty is limited to PLC unit only, make sure to use the product considering the safety for system configuration or applications.

Environmental Policy

LSIS Co., Ltd supports and observes the environmental policy as below.

Environmental Management

LSIS considers the environmental preservation as the preferential management subject and every staff of LSIS use the reasonable endeavors for the pleasurable environmental preservation of the earth.

About Disposal

LSIS' PLC unit is designed to protect the environment. For the disposal, separate aluminum, iron and synthetic resin (cover) from the product as they are reusable.



LSIS values every single customers.
Quality and service come first at LSIS.
Always at your service, standing for our customers.

<http://www.lsis.com>

LSIS

10310001414

■ **HEAD OFFICE**

LS Tower, 127, LS-ro, Dongan-gu, Anyang-si, Gyeonggi-do, 431-848, Korea
 Korea <http://www.lsis.com/>
 Tel : (82-2)2034-4870/Fax : 82-2-2034-4648 e-mail : cshwang@lsis.com

■ **LSIS Tokyo Office _ Tokyo, Japan**

Address: 16FL, Higashi-Kan, Akasaka Twin Tower 17-22,
 Akasaka, Minato-ku Tokyo 107-8470, Japan
 Tel : 81-3-3582-9128/Fax : 81-3-3582-2667 e-mail : jschuna@lsis.com

■ **LSIS (ME) FZE _ Dubai, U.A.E.**

Address : Jafza View Tower Lob 19, Room 205 Along Sheikh Zayed
 Road Jebel Aali Free Zone Dubai, United Arab Emirates
 Tel : 971-4-886-5360/Fax : 971-4-886-5361 e-mail : jungyongqi@lsis.com

■ **LSIS Shanghai Office _ Shanghai, China**

Address : Room E-G, 12FL Hiamin Empire Plaza, No.726, West,
 Yan'an Road Shanghai 200050, P.R. China e-mail : liyong@lsis.com.cn
 Tel : 86-21-5237-9977(609)/Fax : 89-21-5237-7189

■ **LSIS Beijing Office _ Beijing, China**

Address : B-Tower 17FL, Beijing Global Trade Center B/D, No. 36,
 East Beisanhuan-Road, Dongcheng-District, Beijing 100013, P.R. China
 Tel : 86-10-5825-6027(666)/Fax : 86-10-5825-6028 e-mail : xunmi@lsis.com.cn

■ **LSIS Guangzhou Office _ Guangzhou, China**

Address : Room 1403, 14FL, New Poly Tower,
 2 Zhongshan Liu Road, Guangzhou, P.R. China
 Tel : 86-20-8328-6754/Fax : 86-20-8326-6287 e-mail : chenxs@lsis.com.cn

■ **LSIS Chengdu Office _ Chengdu, China**

Address : 12FL, Guodong Building, No.52 Jindun
 Road Chengdu, 610041, P.R. China
 Tel : 86-28-8612-9151(9226)/Fax : 86-28-8612-9236 e-mail : comysb@lsis.com

■ **LSIS Qingdao Office _ Qingdao, China**

Address : YinHe Bldg, 402 Room No. 2P Shandong Road,
 Qingdao-City, Shandong-province 266071, P.R. China
 Tel : 86-532-8501-6068/Fax : 86-532-8501-6057 e-mail : wangzy@lsis.com.cn

■ **LSIS Europe B.V., Netherlands**

Address : 1st. Floor, Tupolevlaan 48, 1119NZ, Schiphol-Rijk, The Netherlands
 Tel : +31 (0)20 654 1420/Fax : +31 (0)20 654 1429 e-mail : junshickp@lsis.com

■ **Wuxi LSIS Co., Ltd _ Wuxi, China**

Address : 102-A, National High & New Tech Industrial Development Area,
 Wuxi, Jiangsu, 214028, P.R. China
 Tel : 86-510-8534-6666/Fax : 86-510-8534-4078 e-mail : caidx@lsis.com.cn

■ **Dalian LSIS Co., Ltd. _ Dalian, China**

Address : No. 15, Liaohexi 3-Road, Economic and Technical Development zone,
 Dalian 116600, China
 Tel : 86-411-273-7777/Fax : 86-411-8730-7560 e-mail : cuibx@lsis.com.cn

※ LSIS constantly endeavors to improve its product so that
 information in this manual is subject to change without notice.

© LSIS Co., Ltd 2015 All Rights Reserved.

2015.3