




# SuperStack® II Switch 9300 Getting Started Guide



<http://www.3com.com/>

Part No. 10012935  
Published August 1999

---

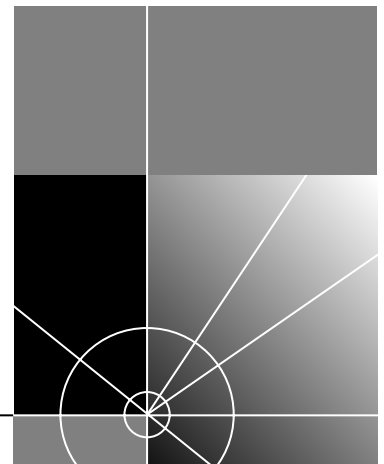

Copyright © 1999, 3Com Corporation. All rights reserved. No part of this documentation may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without written permission from 3Com Corporation.

3Com Corporation reserves the right to revise this documentation and to make changes in content from time to time without obligation on the part of 3Com Corporation to provide notification of such revision or change.

3Com Corporation provides this documentation without warranty, term, or condition of any kind, either implied or expressed, including, but not limited to, the implied warranties, terms, or conditions of merchantability, satisfactory quality, and fitness for a particular purpose. 3Com may make improvements or changes in the product(s) and/or the program(s) described in this documentation at any time.

If there is any software on removable media described in this documentation, it is furnished under a license agreement included with the product as a separate document, in the hardcopy documentation, or on the removable media in a directory file named LICENSE.TXT or !LICENSE.TXT. If you are unable to locate a copy, please contact 3Com and a copy will be provided to you.

#### **UNITED STATES GOVERNMENT LEGEND**

*If you are a United States government agency, then this documentation and the software described herein are provided to you subject to the following:*

All technical data and computer software are commercial in nature and developed solely at private expense. Software is delivered as "Commercial Computer Software" as defined in DFARS 252.227-7014 (June 1995) or as a "commercial item" as defined in FAR 2.101(a) and as such is provided with only such rights as are provided in 3Com's standard commercial license for the Software. Technical data is provided with limited rights only as provided in DFAR 252.227-7015 (Nov 1995) or FAR 52.227-14 (June 1987), whichever is applicable. You agree not to remove or deface any portion of any legend provided on any licensed program or documentation contained in, or delivered to you in conjunction with, this guide.

#### **EMISSIONS COMPLIANCE STATEMENTS FOR CLASS A PRODUCTS**

##### **United States — Federal Communications Commission Notice**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide responsible protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his or her own expense.

##### **Canada — Emissions Requirements**

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

##### **Japan — VCCI Class A Compliance**

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

### **EMC DIRECTIVE COMPLIANCE**

This equipment was tested and found to conform to the Council Directive 89/336/EEC for electromagnetic compatibility. Conformity with this Directive is based upon compliance with the following harmonized standards:

EN 55022 Limits and Methods of Measurement of Radio Interference

EN 50082-1 Electromagnetic Compatibility Generic Immunity Standard: Residential, Commercial, and Light Industry

**Warning:** This is a Class A product. In a domestic environment, this product may cause radio interference, in which case you may be required to take adequate measures.

### **LOW VOLTAGE DIRECTIVE COMPLIANCE**

This equipment was tested and found to conform to the Council Directive 72/23/EEC for safety of electrical equipment. Conformity with this Directive is based upon compliance with the following harmonized standard:

EN 60950 Safety of Information Technology Equipment

### **UK GENERAL APPROVAL STATEMENT**

This equipment is manufactured to the international Safety Standard EN60950 and is approved in the UK under the General Approval Number NS/G/12345/J/100003 for indirect connection to the public telecommunication network.

### **AUSTRALIAN EMC FRAMEWORKS COMPLIANCE**

This product conforms to the EMC Frameworks and meets the Class A limits of AS3548.

### **TRADEMARKS**

Unless otherwise indicated, 3Com registered trademarks are registered in the United States and may or may not be registered in other countries.

3Com, the 3Com logo, SuperStack, and Transcend are registered trademarks of 3Com Corporation. 3Com Facts is a service mark of 3Com Corporation.

Apple, AppleTalk, and Macintosh are trademarks of Apple Computer, Inc. Ultrajet is a trademark of Chemtronics. HP and OpenView are registered trademarks of Hewlett-Packard Co. IBM and NetView AIX are registered trademarks of International Business Machines Corporation. MS-DOS and Windows are registered trademarks of Microsoft Corporation. SunNet Manager, SunOS, and OpenWindows are trademarks of Sun Microsystems, Inc. Microswabs and Texwipe are registered trademarks of Texwipe. Liqui-Tool is a trademark of Triangle Tool Group. UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company.

All other company and product names may be trademarks of the respective companies with which they are associated.



# CONTENTS

---

## ABOUT THIS GUIDE

- Finding Specific Information in This Guide 7
- Conventions 8
- SuperStack II Switch 9300 Documentation 9
  - Paper Documents 9
  - Documents and Help on CD-ROM 10
- Related Publications 10
- Documentation Comments 11
- Year 2000 Compliance 11

---

## 1 SYSTEM AND SETUP OVERVIEW

- Switch 9300 Intelligent Switch 13
  - System Features and Benefits 13
  - Switch 9300 System Management 14
- Network Configuration Example 14
  - Speeding Up Server Access 14
- System Overview — Front Panel of the SX and LX Models (SX Shown) 15
- System Overview — Front Panel of the SX/LX Model 16
- System Overview — Back Panel of All Models 17
- System Overview — Sample Switch 9300 Application 18

---

## 2 INSTALLING THE SYSTEM

- Before You Begin 19
- Installing the System on a Table Top or in a Free-Standing Stack 20

- Installing the System in a Distribution Rack 21
  - Preparing the System and Rack 21
  - Mounting the System in a Distribution Rack 23

---

## 3 CABLING SWITCH 9300 PORTS

- Overview of Cabling 25
- Fiber Safety Precautions 25
- Gigabit Ethernet Ports 26
  - Guidelines for Gigabit Ethernet Cabling 26
    - Recommended Distances for 1000BASE-SX Ports or Transceivers 26
    - Recommended Distances for 1000BASE-LX Transceivers 26
  - Cabling 1000BASE-SX and 1000BASE-LX (SC) Ports 27
  - Cabling the Console Port 28
- Console Port Pin Assignments 29
- Cabling the Out-of-Band Management Port 29

---

## 4 SYSTEM POWER UP

- Power Options 31
  - AC Power Cord 31
  - Optional Advanced Redundant Power System 31
  - Optional Uninterruptible Power System 31
- Power Up 32
  - To Power the Switch 9300 with the RPS 32
  - To Power the Switch 9300 from the Wall Receptacle 32

Power-up Diagnostics	32
System Diagnostics	33
Power LED Activity	33
Fault LED Activity	33
Ethernet Port Diagnostics	33
Packet LED Activity	33
Status LED Activity	33
System Checks	34
Next Step: Software Configuration	34

## 5 QUICK SETUP FOR MANAGEMENT ACCESS

About Switch 9300 System Management	35
How Do You Want to Manage the System?	35
Terminal Connection	36
Modem Connection	36
IP Management Interface	36
Initial Management Access	37
Setting the Console Port Baud	37
Configuring the IP Interface	38
In-band Management	38
Out-of-band Management	38

## 6 TROUBLESHOOTING THE SYSTEM

Getting Additional Help	39
Diagnosing Problems	39
Power Failures	39
Abnormal LED Activity	39
Cleaning Dirty Fiber Optic Ports and Connectors	42

## A SYSTEM SPECIFICATIONS

## B SITE REQUIREMENTS AND SAFETY CODES

General Safety Requirements	45
Wiring Closet Recommendations	45
Distribution Rack Requirements	46
Protective Grounding for the Rack	46
Space Requirements for the Rack	46
Mechanical Requirements for the Rack	47
Building and Electrical Codes	48
U.S. Building Codes	48
U.S. Electrical Codes	49

## C TECHNICAL SUPPORT

Online Technical Services	51
World Wide Web Site	51
3Com Knowledgebase Web Services	51
3Com FTP Site	52
3Com Bulletin Board Service	52
Access by Analog Modem	52
Access by Digital Modem	52
3Com Facts Automated Fax Service	52
Support from Your Network Supplier	53
Support from 3Com	53
Returning Products for Repair	55

## INDEX

## 3COM CORPORATION LIMITED WARRANTY

# ABOUT THIS GUIDE

## Introduction

This guide provides all the information that you need to set up your SuperStack® II Switch 9300 system and get it operating in your network. This guide provides an overview of your system and step-by-step procedures for planning your configuration, installing your system, cabling, powering up, configuring, and troubleshooting. When you are ready to configure your system, see the *Command Reference Guide* and the *Implementation Guide* on the *Documentation CD*.



*If the information in the Software Installation and Release Notes that are shipped with your Switch 9300 system differs from the information in this guide, follow the instructions in the Release Notes.*

This guide is intended for the system or network administrator who is responsible for installing and managing network hardware. It assumes that you have a working knowledge of local area network (LAN) operations, but it does not assume prior knowledge of the Switch 9300 system.

## Finding Specific Information in This Guide

This table shows where to find specific information.




For information on	Turn to
Best ways to use the Switch 9300 system	"System Features and Benefits" on page 13
The front and back panels	"System Overview — Front Panel of the SX and LX Models (SX Shown)" starting on page 15
Site requirements and other issues to consider before you install your Switch 9300 system	"General Safety Requirements" starting on page 45
Installing the system on a table or in a distribution rack	"Installing the System on a Table Top or in a Free-Standing Stack" on page 20 and "Installing the System in a Distribution Rack" on page 21
Cabling the Switch 9300 system	"Overview of Cabling" starting on page 25
Checking system power-up diagnostics and LEDs	"Power Up" on page 32
Deciding how to manage your system	"How Do You Want to Manage the System?" on page 35
Setting the Console port baud	"Setting the Console Port Baud" on page 37
Configuring the IP management interface	"Configuring the IP Interface" on page 38

For information on	Turn to
Troubleshooting hardware and software problems	"Diagnosing Problems" on page 39
Complying with environmental and compliance specifications	Appendix A: System Specifications
Checking your site for environmental and safety considerations	Appendix B: Site Requirements and Safety Codes
Getting help from your network supplier or 3Com	Appendix C: Technical Support
Returning 3Com products to 3Com for repair	"Returning Products for Repair" on page 55

## Conventions

Table 1 and Table 2 list conventions that are used throughout this guide.

**Table 1** Notice Icons

Icon	Type	Description
	Information Note	Information that describes important features or instructions
	Caution	Information that alerts you to potential loss of data or potential damage to an application, system, or device
	Warning	Information that alerts you to potential personal injury

**Table 2** Text Conventions

Convention	Description
Screen display	This typeface represents information as it appears on the screen.
Commands	<p>The word "command" means that you must enter the command exactly as shown and then press Return or Enter. Commands appear in bold. Example:</p> <p>To update the system software, enter the following command:</p> <p><b>system softwareUpdate</b></p> <p><i>This guide always gives the full form of a command in uppercase and lowercase letters. However, you can abbreviate commands by entering the fewest letters in each command that identify a unique command. Commands are not case sensitive.</i></p>
The words "enter" and "type"	When you see the word "enter" in this guide, you must type something, and then press Return or Enter. Do not press Return or Enter when an instruction simply says "type."
Keyboard key names	<p>If you must press two or more keys simultaneously, the key names are linked with a plus sign (+). Example:</p> <p>Press Ctrl+Alt+Del</p>
Words in <i>italics</i>	<p>Italics are used to:</p> <ul style="list-style-type: none"> <li>■ Emphasize a point.</li> <li>■ Denote a new term at the place where it is defined in the text.</li> </ul>

## SuperStack II Switch 9300 Documentation

The following documents comprise the SuperStack II Switch 9300 documentation set. Documents are shipped with your system in one of two forms:

- Paper documents

The paper documents that are shipped with your system and components are listed in the next section.

- Online documentation

The *SuperStack II Switch 3900 and 9300 Documentation CD* contains online versions of the paper documents, the multiplatform *Command Reference Guide*, and the *Implementation Guide*.

To order a paper copy of a document that you see on the compact disc, or to order additional compact discs, contact your network supplier.

- Most user guides and release notes are available in Adobe Acrobat Reader Portable Document Format (PDF) or HTML on the 3Com Web site:

<http://www.3com.com>

### Paper Documents

These documents are shipped with your system:

- *Unpacking Instructions for the SuperStack II Switch 3900 and 9300*

How to unpack your system. Also, an inventory list of items that are shipped with your system.

- *Software Installation and Release Notes for the SuperStack II Switch 3900 and 9300*

All of the new features, system issues, known problems, and software corrections for the software release. It also describes any changes to the Switch 9300 system's documentation.

- *Quick Installation Guide for the SuperStack II Switch 3900 and 9300 Quick Installation Guide*

How to perform a quick installation of your system. For more details on installation, see the Chapter 2 in this guide.

- *SuperStack II Switch 9300 Getting Started Guide*

All the procedures necessary for getting your system up and running, including information on installing, cabling, powering up, configuring, and troubleshooting the system.

- *SuperStack II Switch 3900 and 9300 Administration Console Command Quick Reference* booklet

A quick reference guide to all of the Administration Console switching commands for the Switch 9300. For complete descriptions of commands, see the *Command Reference Guide* on the *Documentation CD*.

- *Web Management User Guide for the SuperStack II Switch 3900 and 9300*

How to use the Web Management suite of applications for the systems.

These documents are shipped with optional components:

- *SuperStack II Switch Advanced RPS User Guide*  
How to install the Advanced Redundant Power System Type 2 (RPS) and how to use it to provide redundant and resilient power supplies for the Switch 9300.
- *SuperStack II Switch Advanced RPS 'Y' Cable Type 2 User Guide*  
How to install the Y cable with the Advanced Redundant Power System (RPS) to provide fully redundant capabilities.

## Documents and Help on CD-ROM

The compact disc that is shipped with your system contains online versions of the paper guides, as well as these new guides:

- *Command Reference Guide*  
A complete multiplatform reference of all Administration Console commands for this system and several others.
- *SuperStack II Switch 3900 and Switch 9300 Implementation Guide*  
Information and examples about how to use the features of these systems.

## Related Publications

Depending on how you install and manage your system, several related documents can provide helpful information:

- **SNMP Network Manager documents**  
The Switch 9300 uses SNMP (Simple Network Management Protocol), which can be accessed by a remote network management application. 3Com has network management applications for a variety of platforms. Contact your network supplier for current product information. Each network management application includes a guide that explains how to manage your system.  
  
If you are using network management software from another vendor, refer to the sections of the product's documentation that describe how to manage SNMP devices.
- **SNMP documents**  
3Com recommends these books for easy-to-read descriptions of SNMP:
  - Marshall T. Rose. *The Simple Book: An Introduction to Networking Management*. Englewood Cliffs, NJ: Prentice-Hall; 1996.
  - "Introduction to SNMP" Self-Study Guide. Order from 3Com: Part Number 3CS-350A.
- **Telnet documents**  
To manage the Switch 9300 system over a TCP/IP network using telnet, see the documentation that is supplied with your telnet application.

## Documentation Comments

Your suggestions are very important to us. They help us make our documentation more useful to you. Please send e-mail comments about this guide to:

`sdtechpubs_comments@ne.3com.com`

Please include this information when commenting:

- Document title
- Document part number (found on front or back page of document)
- Page number (if appropriate)

Example:

*SuperStack II Switch 9300 Getting Started Guide*

*Part Number 10012935*


*Page 25*

## Year 2000 Compliance

For information on Year 2000 compliance and 3Com products, visit the 3Com Year 2000 Web page:

`http://www.3com.com/products/yr2000.html`



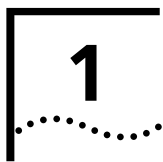

# SYSTEM AND SETUP OVERVIEW

This chapter contains:

- An overview of the SuperStack® II Switch 9300 and how it provides solutions for your network
- A description of the major features and components of the system
- A network configuration example

## Switch 9300 Intelligent Switch

The SuperStack II Switch 9300 family delivers full line rate, nonblocking switching among all 12 Gigabit Ethernet ports. The three models give you options for using multimode (MMF) or single-mode (SMF) fiber:

- **3C93010** — 12 1000BASE-LX ports (MMF or SMF) for fiber with SC connectors. See Figure 1.
- **3C93011** — 10 1000BASE-SX (MMF) ports plus 2 1000BASE-LX ports (MMF or SMF) for fiber with SC connectors. See Figure 2.
- **3C93012** — 12 1000BASE-SX ports (MMF) for fiber with SC connectors. See Figure 1.

The Switch 9300 supports full-duplex mode on all Gigabit Ethernet ports and up to 16,000 MAC addresses. To deliver even higher performance rates among switches, the Switch 9300 supports trunking, which allows combining up to six Gigabit Ethernet ports into a single multigigabit connection.

## System Features and Benefits

The Switch 9300 is part of 3Com's SuperStack family. To combine technologies as your network grows, install the Switch 9300 in a SuperStack network.

Some key features of the Switch 9300 system:

- **High-density Gigabit Ethernet configuration**  
The SuperStack II Switch 9300 exhibits no packet loss or delays even under maximum network traffic on its 12 Gigabit Ethernet ports.
- **Trunking of Gigabit Ethernet ports**  
The Switch 9300 allows you to choose performance-level links between switches, with up to 6 Gigabits of bandwidth.
- **Resilient Links**  
Resilient links protect your network against an individual link or device failure by providing a secondary backup link that is inactive until needed.
- **Trunking links, Spanning Tree Protocol, and Advanced Redundant Power System (RPS) support**  
The Switch 9300 protects against cable and equipment failures with Spanning Tree Protocol and trunking links. The SuperStack II Advanced RPS protects against power interruptions for fault-tolerant networks. See Figure 3.

- Manageability

The Switch 9300 provides full support for VLANs and RMON Version 1, as well as a roving analysis port through SNMP management.

### Switch 9300 System Management

Switch 9300 systems include integrated management to provide fault tolerance and maximum network availability. This management is accessible in two ways:

- Switch 9300 Administration Console
- Standard network managers based on SNMP, such as 3Com's Transcend® Network Control Services, Sun's SunNet Manager, HP OpenView, and IBM's NetView AIX applications

## Network Configuration Example

This section discusses one way to place the Switch 9300 in your network.

### Speeding Up Server Access

To centralize your servers for easier service and support, use a configuration like the one in Figure 4.

Suppose all of your organization's servers are located in the same physical space. These servers must support a large number of clients that are distributed throughout the organization's campus. The client connections are switched Fast Ethernet.

You can multiplex the traffic from each grouping of desktop clients into one higher-bandwidth stream through a SuperStack II Switch 3900.


Each Switch 3900 can, in turn, pass its traffic along to a Switch 9300, which multiplexes the traffic into Gigabit Ethernet streams for the servers.

This architecture eliminates bottlenecks that are caused by each Fast Ethernet device as it vies for access to the server.

You can also use the Switch 9300 for many other applications, such as to consolidate LAN backbones or to provide more flexible trunking configurations.


## System Overview — Front Panel of the SX and LX Models (SX Shown)

**Figure 1** Front Panel of the SuperStack II Switch 9300 SX and LX Models (SX Shown)

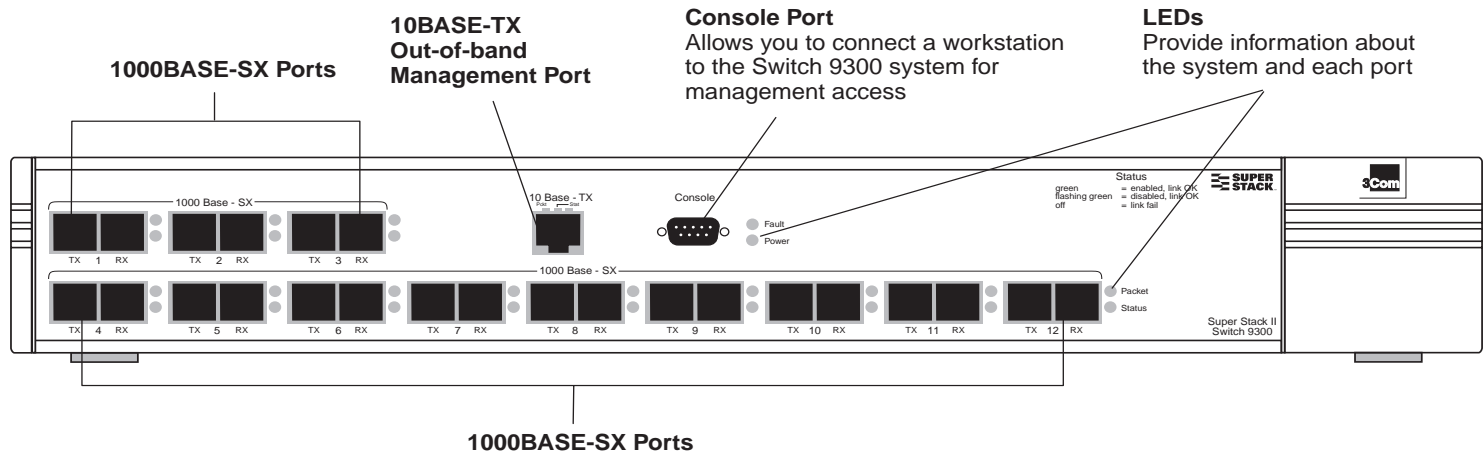


## System Overview — Front Panel of the SX/LX Model

**Figure 2** Front Panel of the SuperStack II Switch 9300 SX/LX Model

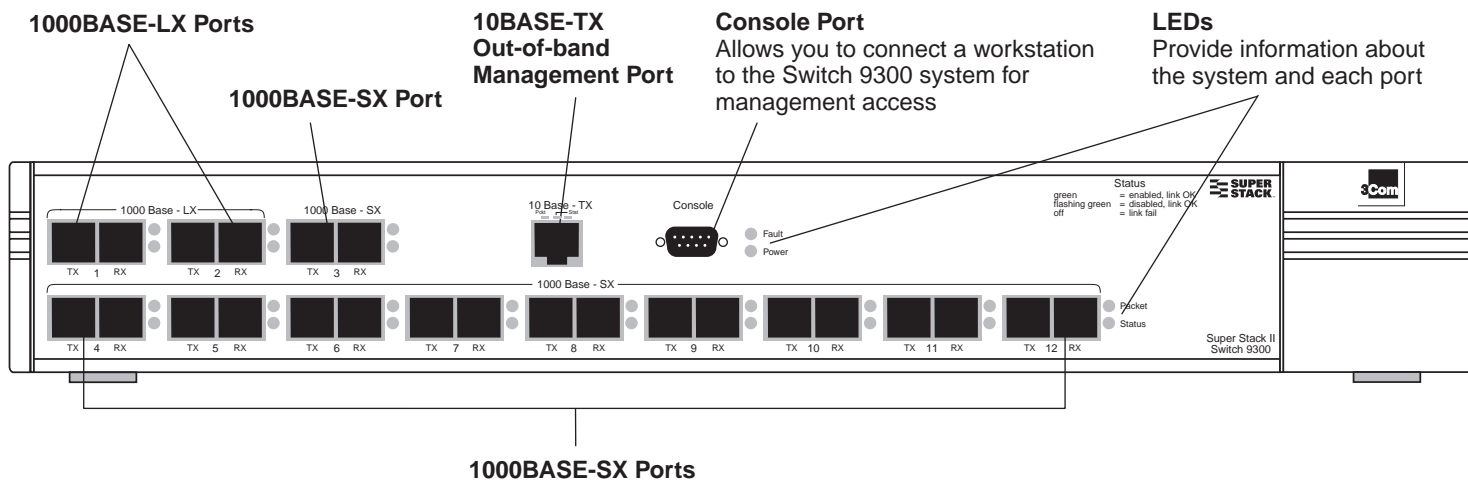


## System Overview — Back Panel of All Models

**Figure 3** Back Panel of the SuperStack II Switch 9300

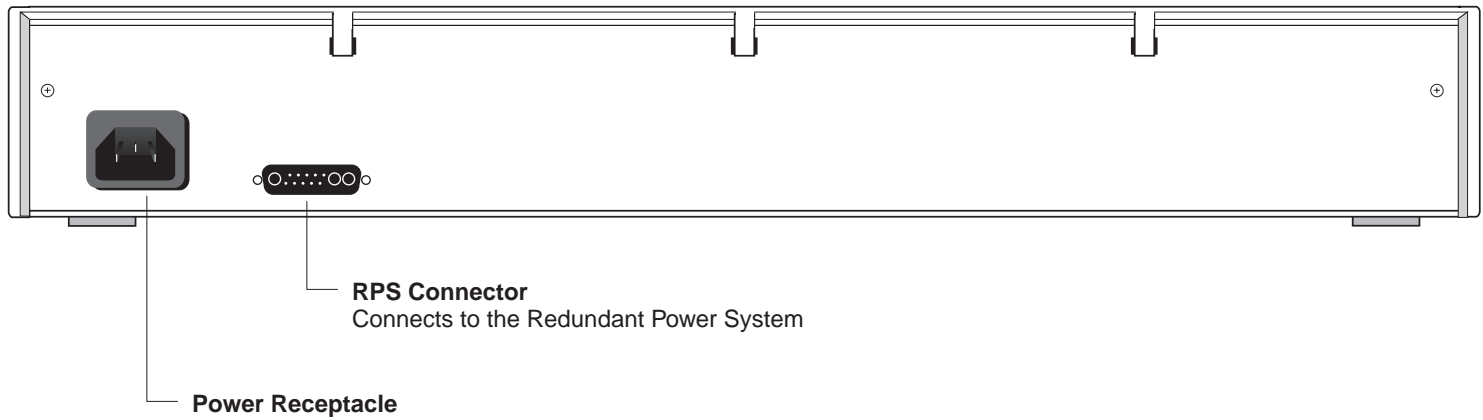

## System Overview — Sample Switch 9300 Application

**Figure 4** Centralizing a Data Center with the SuperStack II Switch 9300

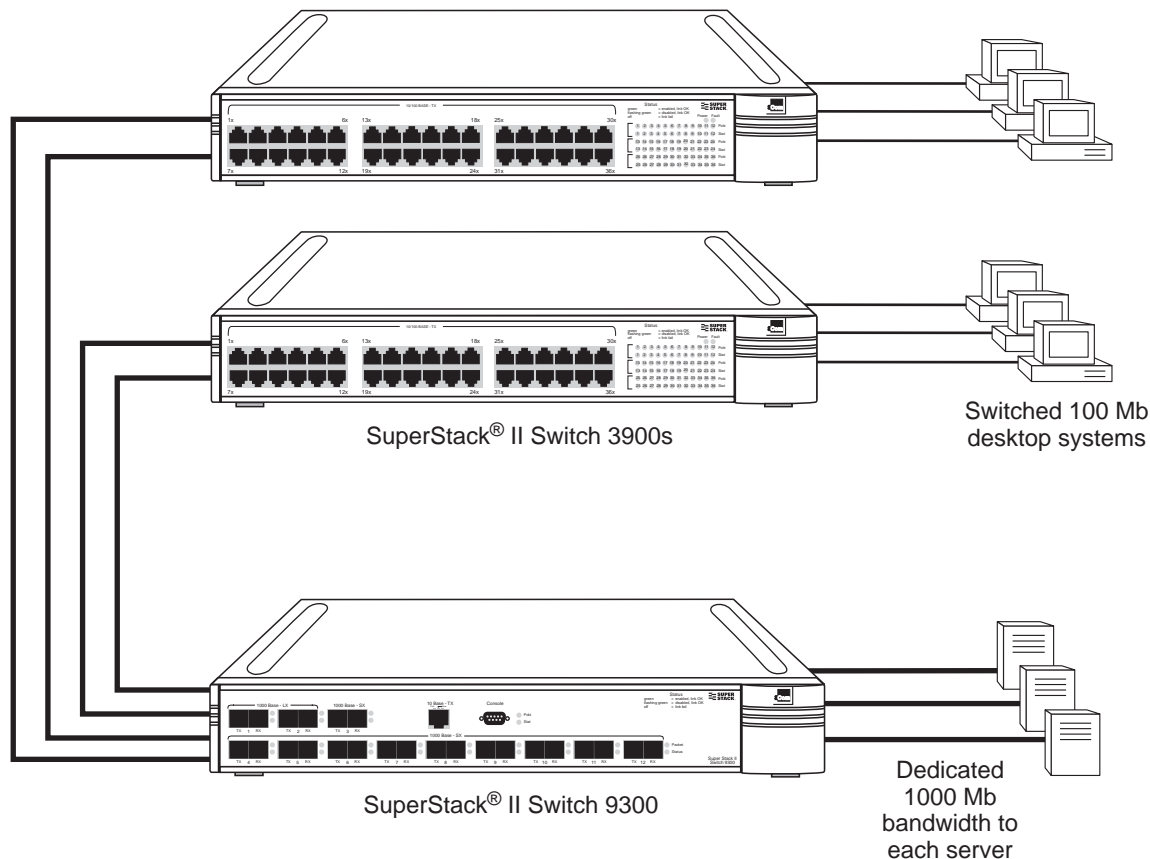

# 2

## INSTALLING THE SYSTEM

This chapter describes how to install your SuperStack® II Switch 9300 on a table top, in a free-standing stack with other SuperStack II products, or in a distribution rack.



*See Appendix B for site requirements and safety codes.*

- To install the Switch 9300 system on a table top or in a free-standing stack, read these sections:
  - “Before You Begin” (the next section)
  - “Installing the System on a Table Top or in a Free-Standing Stack” on page 20
- To install the Switch 9300 system in a distribution rack, read these sections:
  - “Before You Begin” (the next section)
  - “Installing the System in a Distribution Rack” on page 21

### Before You Begin

Before you begin this procedure, be sure to:

- Move the Switch 9300 system close to where you plan to install it.



*Install the system near an easily accessible power outlet. You can power down the system only by removing the power cord from the power source.*

- Have a No. 1 Phillips screwdriver available.
- Have the system mounting kit available. See Table 3.

**Table 3** Switch 9300 System Mounting Kit

Qty	Item	To use in
4	Rubber feet (self-adhesive)	Stacking the system on a table or in a stack
2	Mounting brackets	Installing the system in a distribution rack
6	M4 x 10 pan-head screws	Installing the distribution rack brackets

## Installing the System on a Table Top or in a Free-Standing Stack

To install the Switch 9300 system on a table top or in a free-standing stack, follow these instructions:

- 1 See Appendix B for site requirements.
- 2 Turn the system on its side.
- 3 Remove the protective covering from the rubber feet.
- 4 Place one rubber foot in each marked area at the four corners of the unit.
- 5 Turn the system onto its feet.
- 6 Verify that the air intake vents and fan exhaust vents at the sides of the system are not blocked.

To install the system into a free-standing stack, place the system on top of another. Be sure that the rubber feet of the upper unit fit securely in the recesses in the top of the lower unit. See Figure 5.




**CAUTION:** Stack no more than eight SuperStack II systems in a single free-standing stack.

You are now ready to cable your system. For instructions, see Chapter 3.

**Figure 5** Stacking the Switch 9300

Place the feet of one system into the mounting recesses of the system below it.

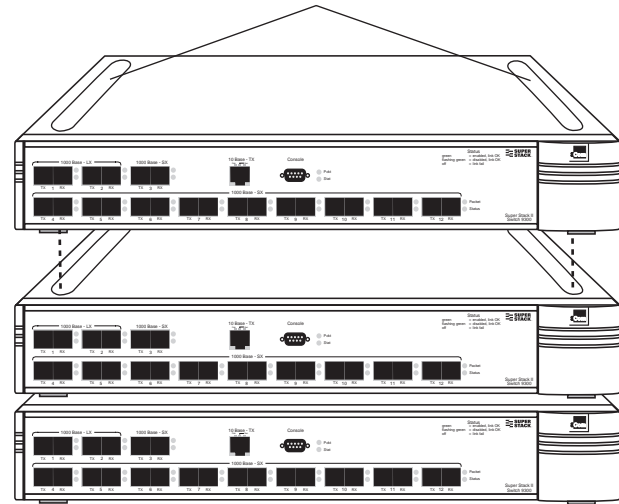

## Installing the System in a Distribution Rack

You can mount the Switch 9300 system into a 48.26 mm (19-in.) distribution rack. This section describes how to prepare the system and distribution rack for installation and how to mount the system in the rack.




*Install your distribution rack near an easily accessible power outlet. You can power down the system only by removing the power cord from the power source.*

### Preparing the System and Rack

To prepare the system and distribution rack for installing the Switch 9300 system:

- 1 See Appendix B for distribution rack requirements.
- 2 Attach the mounting brackets to the left and right sides of the system using the M4 x 10 mounting bracket screws. See Figure 6.

**Figure 6** Installing System Mounting Brackets

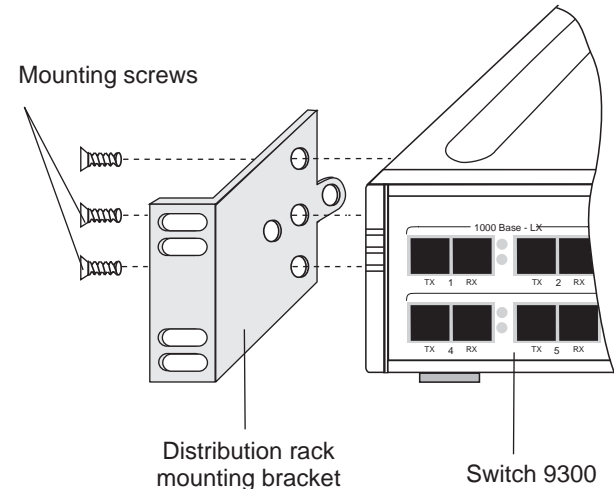


- 3 Locate the top of a universal mounting hole pattern on either mounting rail of the distribution rack.

In this pattern, the spacing between holes is  $\frac{1}{2}$  inch,  $\frac{5}{8}$  inch,  $\frac{5}{8}$  inch, and  $\frac{1}{2}$  inch.

To find the top of the pattern, locate the midpoint between any two holes that are spaced  $\frac{1}{2}$  inch apart. Figure 7 shows the universal mounting hole pattern.

**Figure 7** Universal Mounting Hole Pattern

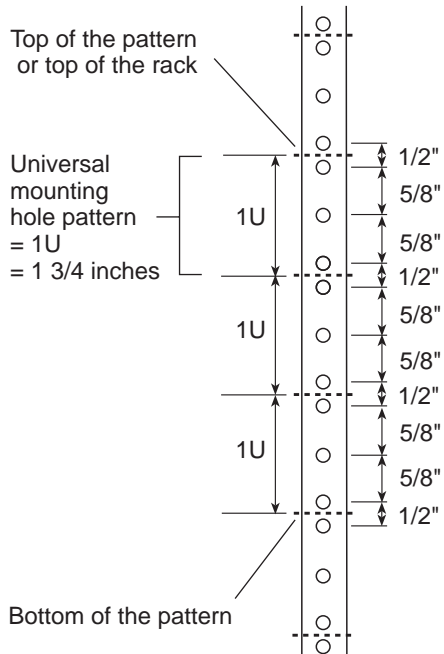


**4** Determine which holes to use to mount your system.

Two Switch 9300s are designed to mount in any 3U space of the rack (that is, the space occupied by three instances of the universal mounting hole pattern).

Figure 8 illustrates the positions of two Switch 9300s, one attached to holes 1 and 3 and the other attached to holes 6 and 8.

To mount only one Switch 9300, use either position.

**Figure 8** Placement of Switch 9300s in a Distribution Rack

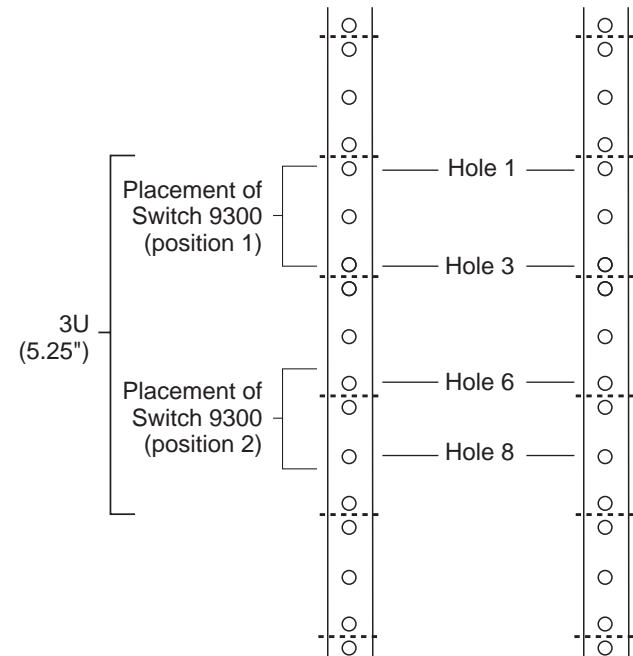

**5** Repeat the process on the other rail.




*Be sure to select holes that are parallel to each other on the mounting rails.*

## Mounting the System in a Distribution Rack

To mount the system into a distribution rack:

- 1 Carefully lift the system into place and align the appropriate holes in the mounting brackets with the designated holes in the distribution rack.

**Figure 9** Aligning Bracket and Distribution Rack Holes

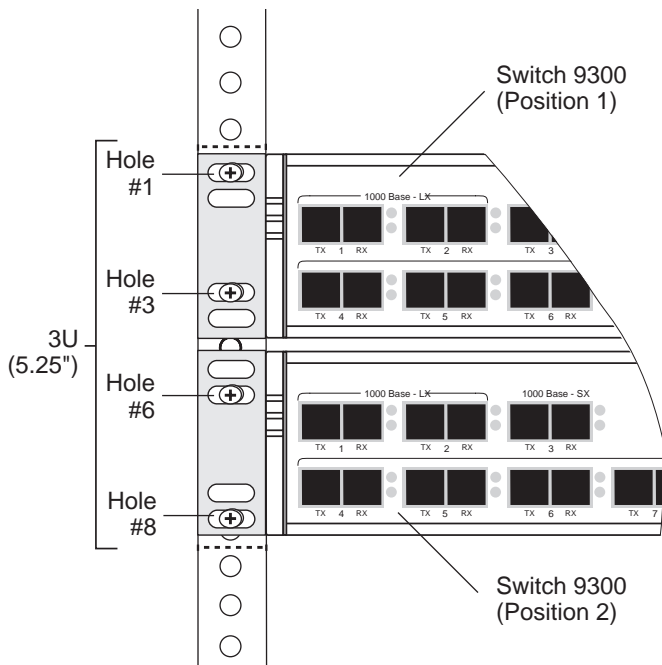


- 2 Have another person hold the system in place. Insert the four suitable mounting screws (not provided) into the designated mounting holes on the bracket. Repeat for the other side.
- 3 Verify that the system is level.

- 4 Tighten the mounting screws. The system is now installed in the distribution rack.

Figure 10 shows two Switch 9300 systems installed in a distribution rack.

**Figure 10** Two Systems Installed in a Rack

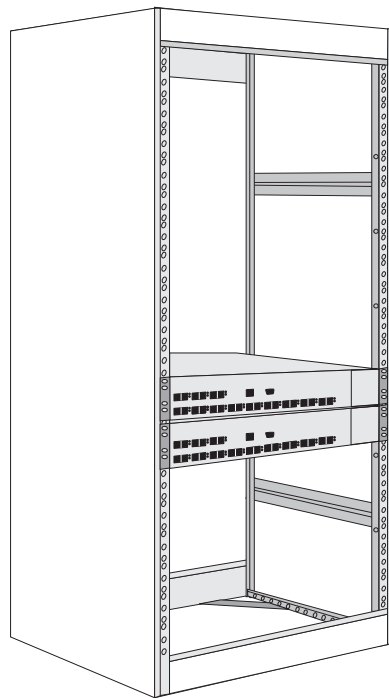

You are now ready to cable the system. For cabling instructions, see Chapter 3.



# 3

## CABLING SWITCH 9300 PORTS

This chapter describes how to cable your SuperStack® II Switch 9300 system for connection to the network. It gives an overview of module cabling and describes how to cable:

- Gigabit Ethernet ports
- Console port
- Out-of-band management port

When all your Gigabit Ethernet and system network connections are complete, see Chapter 4.



*If you are staging the system, you do not need to connect it to the network at this point. See Chapter 4 to start your system before you cable it.*

### Overview of Cabling

The Switch 9300 system is a Gigabit Ethernet switch with one of these fixed configurations:

- Twelve 1000BASE-SX (MMF) ports
- Twelve 1000BASE-LX (MMF or SMF) ports
- Ten 1000BASE-SX and two 1000BASE-LX ports

All 1000BASE ports accept SC connectors.

### Fiber Safety Precautions

The SuperStack II Switch 9300 system use lasers in its fiber optic ports. To ensure your safety when you install or work with these modules, comply with the following precautions.



**WARNING:** *The fiber optic lasers used in these modules meet the regulatory requirements for casual exposure to the eye. As with any source of bright light, however, 3Com recommends that you do not look into the laser light source.*



*IEC 825, Class 1 Laser Devices are for connection only to Class 1 Laser Devices. MMF and SMF fiber optic interfaces use lasers.*

CLASS 1  
LASER PRODUCT

## Gigabit Ethernet Ports

This section contains information on how to cable SC connectors to 1000BASE-SX and 1000BASE-LX ports.



**CAUTION:** You *may not* want to connect the network cables before you power on the system (Chapter 4) if you need to configure trunks, resilient links, or the Spanning Tree Protocol (STP). To avoid bridge loops, you should configure trunks, resilient links, and STP using the Administration Console before you connect the cables and after you power up the system. See the Command Reference Guide and the Implementation Guide for your system.

## Guidelines for Gigabit Ethernet Cabling

For all Gigabit Ethernet cabling, keep the ports and connectors free of dust. See “Cleaning Dirty Fiber Optic Ports and Connectors” on page 42 for details.

### Recommended Distances for 1000BASE-SX Ports or Transceivers

When you cable SC connectors to 1000BASE-SX ports or transceivers, verify that the length of the fiber cable from the system to any attached device does not exceed these recommended distances:

- Use 62.5-micron MMF fiber with a modal bandwidth specification of 160 MHz\*km for distances of up to 220 meters (722 feet).
- Use 62.5-micron MMF fiber with a modal bandwidth specification of 200 MHz\*km for distances of up to 275 meters (902 feet).

- Use 50-micron MMF fiber with a modal bandwidth specification of 400 MHz\*km for distances of up to 500 meters (1645 feet).
- Use 50-micron, 500 MHz\*km modal bandwidth, MMF fiber for distances of up to 550 meters (1805 feet).

### Recommended Distances for 1000BASE-LX Transceivers

When cabling SC connectors to 1000BASE-LX transceivers, be sure that the length of the fiber cable from the system to any attached device does not exceed these recommended distances:

- Use 62.5-micron MMF fiber with a modal bandwidth specification of 160 MHz\*km for distances of up to 550 meters (1805 feet).
- Use 62.5-micron MMF fiber with a modal bandwidth specification of 200 MHz\*km for distances of up to 550 meters (1805 feet).
- Use 50-micron MMF fiber with a modal bandwidth specification of 400 MHz\*km for distances of up to 550 meters (1805 feet).
- Use 50-micron MMF fiber with a modal bandwidth specification of 500 MHz\*km for distances of up to 550 meters (1805 feet).
- Use 9-micron SMF fiber for distances of up to 10 kilometers (6.2 miles). The specification requires and specifies 5 kilometers (3.1 miles).



Use a conditioned launch cable to connect the 1000BASE-LX transceiver to multimode fiber. Using this cable ensures reliability over the maximum 550 meter distance.

## Cabling 1000BASE-SX and 1000BASE-LX (SC) Ports

Use this section when you cable either version of the 1000BASE ports.

Follow these guidelines when cabling SC connectors:


- Verify that the length of the fiber cable from the system to any attached device does not exceed the distances recommended in “Guidelines for Gigabit Ethernet Cabling” earlier in this chapter.
- The Gigabit Ethernet fiber cable terminates in a pair of SC connectors. The 1000BASE-LX cable connectors are blue, and the 1000BASE-SX cable connectors are black. The connectors are made so that you can only insert them correctly.
- Keep the ports and connectors free of dust. See “Cleaning Dirty Fiber Optic Ports and Connectors” on page 42 for details.

To cable an SC port:

- 1 Remove the dust covers and save them for future use.
- 2 Examine the port and connector pair for dust. Verify that nothing blocks the light transmission between the port and its connectors.
- 3 Attach one male connector of the SC cable connector pair to the right side of a fixed Gigabit Ethernet port.
- 4 Attach the remaining connector of the SC cable connector pair to the left side of the Gigabit Ethernet port.
- 5 To cable another port, repeat steps 1 through 4.

Figure 11 shows the Gigabit Ethernet cabling.

**Figure 11** Cabling the Gigabit Ethernet Port

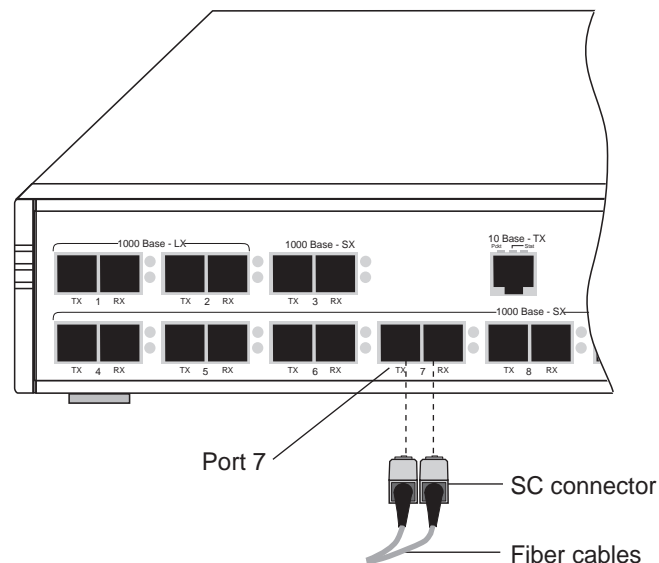

## Cabling the Console Port

The Console port provides access for either local or remote administration.

For local administration of the Switch 9300, the Console port provides an RS-232 connection to a local terminal or workstation that runs a terminal emulation program and acts as the console.

For remote administration, the Console port provides the means to connect an external modem, which you can use to establish a connection between your current Console session and the modem port.

The Console port has a male 9-pin, D-type connector.


To cable the Console port:

- 1 Attach the female DB-9 cable connector to the Console port's male connector.
- 2 Attach the other end of the serial cable to your terminal.

Figure 12 shows the cabling of the Console port.

You can also access the system remotely through any Ethernet port using Telnet. See the *Implementation Guide*.

**Figure 12** Cabling the Console Port

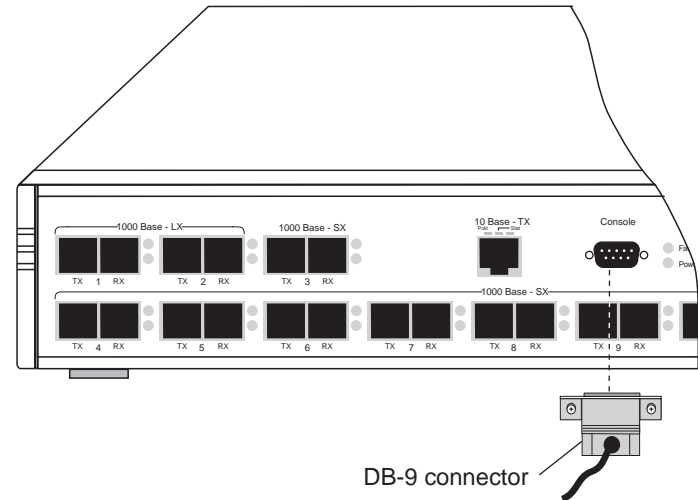

*To use the Administration Console to configure the system for management access through the Console port, see Chapter 5.*

## Console Port Pin Assignments

Table 4 shows the Console port pin assignments.

**Table 4** Console Port Pin Assignments

Pin No.	Signal	Description
1	DCD	Data Carrier Detect
2	RDA	Received Data
3	TD	Transmitted Data
4	DTR	Data Terminal Ready
5	GND	Signal Ground
6	DSR	Data Set Ready
7	RTS	Request To Send
8	CTS	Clear To Send
9	–	Not used

## Cabling the Out-of-Band Management Port


You can use the 10BASE-TX port on the Switch 9300 to manage your network out-of-band. Out-of-band management lets you diagnose network problems easily because you manage your network from a workstation on a different network.

To cable the out-of-band 10BASE-TX port:

- 1 Plug the male RJ-45 connector on the 10BASE-TX cable into the 10BASE-TX port until it clicks into place.
- 2 Attach the other end of the 10/100BASE-TX cable to the workstation.

To configure your system to use out-of-band network management, see your *Command Reference and the Implementation Guide*.

**Figure 13** Cabling the Out-of-Band Management Port

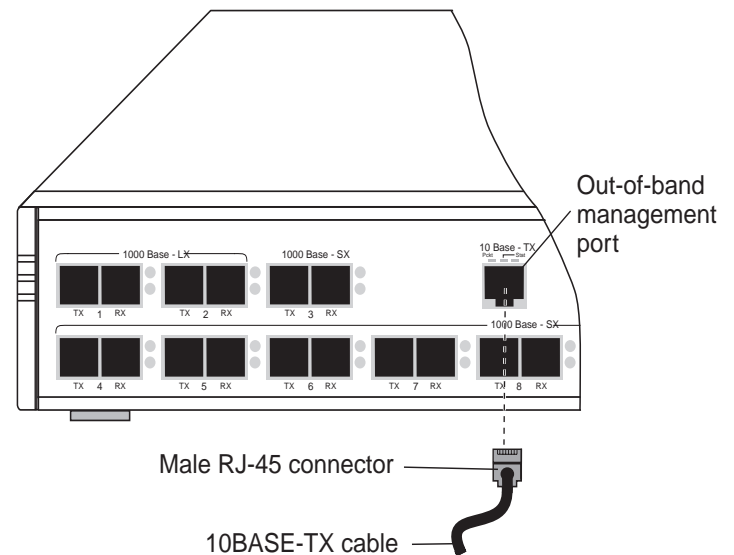



# 4

## SYSTEM POWER UP

This chapter describes:

- “Power Options” for the SuperStack® II Switch 9300
- “Power Up” instructions for the Switch 9300 system
- “Power-up Diagnostics”
- “System Checks” after power up

For information on troubleshooting the system during power up, see Chapter 6.

### Power Options

You have three options for how to power up your Switch 9300 system.



*Place the system near a power receptacle. You can power down the system only by removing the power cord from the power source.*

### AC Power Cord

You can connect the system directly to a wall receptacle with the AC power cord that is shipped with the system. See “Power Up” for details.

### Optional Advanced Redundant Power System

To protect against internal power supply failures, you can connect a 3Com Advanced Redundant Power System Type 2 (RPS) to the Switch 9300 system. The RPS connector is located on the rear panel.



**CAUTION:** *Connect only a 3Com Advanced Redundant Power System Type 2 to this connector, using the external Type 2 Y cable that is shipped with the RPS.*

For details, follow the installation instructions and safety precautions that are shipped with the redundant power system.

### Optional Uninterruptible Power System

To protect against external power interruption from brownouts, blackouts, surges, and spikes, connect an uninterruptible power system (UPS) to the Switch 9300 system. Connect only a 3Com Uninterruptible Power System. Use the appropriate UPS for your region:

- United States
- European/International
- Japan

To install the UPS, follow the instructions and safety precautions that are shipped with the UPS.

## Power Up

This section provides instructions on how to power up your system. See Chapter 3 and Chapter 5 for information about cabling and configuring the Console port.



*To view error messages while the system runs power-up diagnostics, connect a terminal, a workstation, or a PC that has terminal emulation to the system's Console port.*

### To Power the Switch 9300 with the RPS

To install the Advanced Redundant Power Supply (RPS) Type 2, follow the installation instructions that are shipped with the RPS and its cable.



**CAUTION:** *To prevent damage to the system and the power supply, insert the AC power cord into the Switch 9300 **before** you insert it into the redundant power system.*

### To Power the Switch 9300 from the Wall Receptacle

To get your Switch 9300 powered up and ready to operate, follow these steps:

- 1 Verify that the power outlet is near the system and easily accessible. You can turn the system off only by removing the power cord from the power source.
- 2 Insert the power cord into the system.
- 3 Insert the other end of the power cord into the power outlet. The LEDs provide information while the system runs power-up diagnostics.

## Power-up Diagnostics

The Switch 9300 system runs diagnostic software at power up. This software verifies that the system works before you add it to the network.

If any component fails during power-up diagnostics, the system either fails to power up or keeps faulty ports off-line. To see if any ports have failed diagnostics, look at the system configuration display in the Switch 9300 Administration Console. See the *Implementation Guide*.



*To view error messages that are displayed during power-up diagnostics, connect a terminal in the Administration Console, workstation, or PC that has terminal emulation to the system's Console port.*

During power up, the system and port status LEDs provide information on components in the Switch 9300 system. See Figure 1 and Figure 2 for the location of the LEDs.

## System Diagnostics

This section describes the LEDs that provide information about the system as a whole.

### Power LED Activity

- **Green** — The system is powered on; the system is running or has run diagnostics.
- **No Light** — The system has no power; no diagnostics are running.

### Fault LED Activity

- **No Light** — System diagnostics have been successfully completed and the system is operational.
- **Solid or Blinking Yellow** — The system has failed diagnostics, or some other operational error has occurred.

See Chapter 6 for troubleshooting information.

## Ethernet Port Diagnostics

This section summarizes the information displayed by the port LEDs.

### Packet LED Activity

- **No Light** — Data is not passing through the port.
- **Blinking Yellow** — Data is passing through the port.
- **Yellow** — Data is passing through the port.

### Status LED Activity

- **No Light** — The port is off-line.
- **Blinking Green** — The port is online but disabled.
- **Green** — The port is online and enabled.

See Chapter 6 for troubleshooting information.

## System Checks

After the system has successfully completed the power-up diagnostics, check the items in Table 5 to verify that the system is operating correctly. If you discover abnormal conditions, see Chapter 6.

**Table 5** System Power-Up Checklist

Check	Description
Power-up error messages	If there is a problem during power-up, the messages are displayed in the Administration Console connection through the Console port.
Normal LED activity	<p>When the power-up diagnostics are running, the LEDs light in a certain pattern as described in the “Power-up Diagnostics” section. After you properly cable the system and the system successfully completes the power-up diagnostics, look for the following normal LED activity:</p> <p><b>System:</b></p> <p><b>Power</b> LED = Green</p> <p><b>Fault</b> LED = Not lit</p> <p><b>Each port:</b></p> <p><b>Pckt</b> status LED = Yellow</p> <p><b>Stat</b> status LED = Green</p> <p>If an LED does not light or shows a color different from the one indicated here, see Chapter 6 for information about the cause of the problem.</p>

## Next Step: Software Configuration

Your Switch 9300 system is shipped from the factory with the software installed and IEEE 802.1d bridging disabled. To configure your system for your particular networking environment (including customized filtering and setting up SNMP), you must first establish management access. See Chapter 5.



# QUICK SETUP FOR MANAGEMENT ACCESS

This chapter provides easy instructions for configuring the SuperStack® II Switch 9300 system for management access. After you decide how you want to manage your system, follow the configuration instructions for your preferred type of management access.

## About Switch 9300 System Management

To configure and manage your Switch 9300 system, you can use one of several applications:

- Switch 9300 Administration Console
- Other SNMP-based network management applications

The Switch 9300 Administration Console is the character-oriented, menu-driven user interface for administering the system. You can access the Administration Console in-band using the network ports through the IP network protocol. For more detailed information, see the *Command Reference Guide* and the *Implementation Guide*.

For more complete network management, access the system with an external SNMP-based management application such as 3Com's Transcend® Network Control Services for UNIX or Windows or another network management application.

## How Do You Want to Manage the System?

You can manage your system locally through a terminal connection or through the network with an IP connection. Table 6 describes the access mechanisms.

**Table 6** Management Access Mechanisms

Access Mechanism	Allows you to	Using
Terminal	Connect directly to the Administration Console and stay attached across system reboots	Console port
Modem	Connect remotely to the Administration Console	Console port
IP	<ul style="list-style-type: none"><li>■ Access the Administration Console with the rlogin or telnet commands.</li><li>■ Use an external SNMP management application to communicate with the Switch 9300 SNMP agent.</li><li>■ Use your Internet browser to connect to the embedded Web Management suite of configuration forms.</li></ul>	One of the Ethernet ports assigned an IP address

These mechanisms are described more fully in the next sections.

## Terminal Connection

Direct access through the Console port is often preferred because it allows you to monitor the system during system boots. A Macintosh or PC attachment can use any terminal emulation program for connecting to the Console port. A workstation attachment under UNIX can use the emulator TIP. For more details, see the documentation that is shipped with your terminal emulation program.

## Modem Connection

You can manage the Administration Console using a modem by establishing a connection between your current Console session and the Console port. When you configure the external modem from the Administration Console menu system, the Console appears to be directly connected to the external modem. See the *Command Reference Guide* and the *Implementation Guide* for more information.



*Use the Console port for either a terminal connection or a modem connection.*

## IP Management Interface

An IP management interface is the connection between the Switch 9300 system and a subnetwork. You can use the IP interface to manage the system in two ways:

- **In-band** — Through a Gigabit Ethernet port

You can use this port for switching and managing the system simultaneously.



*This method decreases the total bandwidth available on the port for switching.*

- **Out-of-band** — Through the 10BASE-TX port that is located to the left of the Console port.

You can use this port to manage the system. You cannot use it for switching. Managing your system out-of-band conserves all available bandwidth for the Gigabit Ethernet ports.

With an IP interface, you can use the rlogin or telnet commands to access the Administration Console using TCP/IP from a host computer; or to manage the system with an external management application; or to manage the system with the Web Management embedded software through an Internet browser.

## Initial Management Access

The first time that you access your system, you connect through the Console port using a terminal. These are the default settings for this port: 9600 baud, 8 bits, 1 stop bit, No parity.

When you first access the Administration Console using the Console port, you see this prompt:

Select access level (read, write, administer):

- 1 At the prompt, enter:

**administer**

- 2 At the password prompt, press Return.

The Administration Console top-level menu appears:

```
Menu options (SuperStack II Switch-8C6AD7): -----
system      - Administer system-level functions
ethernet    - Administer Ethernet ports
bridge      - Administer bridging/VLANs
ip          - Administer IP
snmp        - Administer SNMP
analyzer    - Administer Roving Analysis
script      - Run a script of console commands
logout      - Logout of the Administration Console
```

Use this menu to change the Console port baud setting for the terminal or to configure your system for another management access mechanism.

## Setting the Console Port Baud

To change the baud setting of the Console port:

- 1 From the top level of the Administration Console, at the `Select menu option` prompt, enter:  
**system serialPort serialPortMode**
- 2 At the command prompt, if the default value shown in brackets is `modem`, enter **console**. Otherwise, press Return.
- 3 Enter **baudRate**.
- 4 At the prompt, enter a baud setting of 9600 for the Console port. The system supports these baud settings: 19200, 9600, 4800, 2400, and 1200.

The system displays this message:

```
Enter new value (1200-19200) [1200]: 9600
Error setting baud rate to 9600.
Baud rate will change upon next connection.
```

## Configuring the IP Interface

These instructions include information on how to define an IP interface through which you can manage your Switch 9300 system. An IP interface contains the following parameters:

- **IP address** — This address, which is specific to your network, is used to manage the system. The IP address defines both the number of the network to which the interface is attached and its host number on that network.
- **Subnet mask** — This 32-bit number uses the same format as an IP address. The subnet mask determines which bits in the IP address are interpreted as the network number, as the subnet number, and as the host number. Each IP address bit that corresponds to a 1 in the subnet mask is in the network and subnet part of the address. Each IP address bit that corresponds to a 0 is in the host part of the IP address.

## In-band Management

To set the IP interface parameters to manage the system in-band:

- 1 From the top level of the Administration Console, enter:

```
system ip interface define
```

- 2 Enter the IP address of the interface.
- 3 Enter the subnetwork mask of the subnet to which the interface is to be connected.
- 4 Enter the interface type as: **vlan**

For more detailed instructions on assigning interface parameters, see the *Command Reference Guide* and the *Implementation Guide*.

## Out-of-band Management

To set the IP interface parameters to manage the system out-of-band:

- 1 From the top level of the Administration Console, enter:

```
ip interface define
```

- 2 Enter the IP address of the interface.
- 3 Enter the subnetwork mask of the subnet to which the interface is to be connected.
- 4 Enter the interface type as: **system**

For more detailed instructions on assigning interface parameters, see the *Command Reference Guide* and the *Implementation Guide*.

This chapter explains how to troubleshoot certain problems with the SuperStack® II Switch 9300 system. It covers:

- Getting Additional Help
- Diagnosing Problems
- Cleaning Dirty Fiber Optic Ports and Connectors

## Getting Additional Help

If you experience system problems that are not addressed in this chapter, contact your network supplier or 3Com Technical Support. Before you call, gather the following information and have it available:

- System serial number
- Maintenance agreement or warranty information and the date of purchase
- Software revision number
- Brief description of the problem

You can view some of this information in the Administration Console. From the top-level menu, enter **system display**.



*For additional information and phone numbers, see Appendix C.*

## Diagnosing Problems

By observing system diagnostics, you can identify and correct problems that might occur when the system powers up.

## Power Failures

If the system does not respond when you insert the power cord, see the troubleshooting suggestions in Table 7.

## Abnormal LED Activity

The Switch 9300 system contains two LEDs that indicate system or port problems. If you see abnormal LED activity, see Table 8 and Table 9 for troubleshooting suggestions.

**Table 7** Troubleshooting Power Failures

Symptom	Possible Sources of the Problem	Steps to Take
System does not power up.	<ul style="list-style-type: none"> <li>■ System is not receiving power.</li> <li>■ Power supply malfunctioned.</li> </ul>	<ol style="list-style-type: none"> <li><b>1</b> Verify that the building's power outlet has power.</li> <li><b>2</b> Check that the power cord is firmly inserted into the system and either the building's power outlet, the redundant power system, or the uninterruptible power system.</li> <li><b>3</b> If you are using an RPS or a UPS, check that it is firmly inserted into the building's power outlet.</li> <li><b>4</b> Try another power cable.</li> <li><b>5</b> If the system still does not operate, contact your network supplier or 3Com Technical Support.</li> </ol>

**Table 8** Troubleshooting Abnormal System LED Activity

LED Status	Possible Sources of the Problem	Steps to Take
<b>Fault</b> LED blinks yellow.	Diagnostic software is not running.	<ol style="list-style-type: none"> <li><b>1</b> Check the Administration Console display.</li> <li><b>2</b> Contact your network supplier or 3Com Technical Support.</li> </ol>
<b>Power</b> LED does not light.	System has failed.	<ol style="list-style-type: none"> <li><b>1</b> Shut down the system by removing the power plug.</li> <li><b>2</b> Contact your network supplier or 3Com Technical Support.</li> </ol>

**Table 9** Troubleshooting Abnormal Port LED Activity

LED Status	Possible Sources of the Problem	Steps to Take
<b>Pckt</b> LED does not light.	Software error	Check the Administration Console display.
<b>Stat</b> LED does not light.	<div>System does not recognize a connection to the port.<ul style="list-style-type: none"><li>■ Cable is not fully attached to the port.</li><li>■ Port cable is faulty.</li><li>■ Fiber optic ports or connectors are dirty.</li></ul></div>	<div><div><div>1</div>Verify that all cables are firmly inserted into both the system's affected port and the attached device.</div><div><div>2</div>Test for faulty cables.</div><div><div>3</div>Clean the fiber optic ports and connectors. See next section.</div></div> <div>When the problem is corrected, the LED lights green.</div> <div>If the LED still does not light, contact your network supplier or 3Com Technical Support.</div>

## Cleaning Dirty Fiber Optic Ports and Connectors

Fiber optic transceivers are sensitive optical devices. Handle them carefully. If dirt collects on a fiber optic lens, the associated LED may not light. You may also notice degradation in port performance, indicated by an increase in the Link Error Rate (LER) count on a port.

To prevent dust from collecting on the fiber optic lens, keep the dust covers on the ports at all times when they are not in use.



**WARNING:** Follow all safety precautions in Chapter 3 when you work with fiber optic components.

To clean a fiber optic lens, take these steps:


- 1 Remove any accumulated dust or debris from the port or connector by blowing across all surfaces with a canned air duster.

Compressed gas is recommended, such as Chemtronics' Ultrajet or the Triangle Tool Group's Liqui-Tool Dust-A-Way. Do not use commercial compressed air or "house air" because of the risk of oil contamination.

- 2 Reconnect the cable to the port to check whether dusting has corrected the problem.
- 3 Gently wipe the ports with a lint-free, nonabrasive, nonadhesive swab. Microswabs by Texwipe are recommended.
- 4 Gently wipe the connectors with a lint-free, nonabrasive wipe or pad. Texwipe pads are recommended.



*Avoid touching any connector surface after you clean the connectors.*

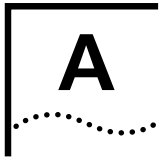

# SYSTEM SPECIFICATIONS

**Table 10** System Specifications for the SuperStack II Switch 9300


Specifications	
Physical Dimensions	6.5 cm (H) x 44 cm (W) x 30.5 cm (D) 2.59 in. (H) x 17.32 in. (W) x 12.00 in. (D) Weight: 4.1 kg (12 lbs)
Environmental Requirements	
Operating Temperature	0 to 50 °C (32 to 122 °F)
Operating Humidity	10 to 95% relative humidity, noncondensing
Storage Temperature	–20 to 85 °C (–4 to 185 °F)
Storage Humidity	95% maximum relative humidity, noncondensing
Safety	
Agency Certifications	UL 1950, CSA 22.2 No. 950, TUV EN60950
	<b>UK General Approval Statement</b> The SuperStack® II Switch 9300 is manufactured to the international Safety Standard EN60950 and is approved in the UK under the General Approval Number NS/G/12345/J/100003 for indirect connection to the public telecommunication network.
Designed to Comply with...	IEC 950
Electromagnetic Emissions (Agency Certification)	Meets FCC part 15, Subparagraph J, Class A limits, and CISPR Class A limits Complies with EMC Council Directive 89/336/EEC, Class A limits
Heat Dissipation	175 watts maximum (547 BTU/hour maximum)
Power Supply	
Receptacles	15 ampere service receptacles, type N5/15 or NEMA 5-15R (United States and Canada only)
AC Line Frequency	47 to 63 Hz
Input Voltage Options	100 to 240 VAC
Current Rating	1.3 amperes at 120 volts

**Table 11** Standards Supported by the Switch 9300

Standard Type	RFC Supported
<b>SNMP</b>	<ul style="list-style-type: none"> <li>■ SNMP protocol (RFC 1157)</li> <li>■ MIB II (RFC 1213)</li> <li>■ Ethernet MIB (RFC 1284)</li> <li>■ Bridge MIB (RFC 1286)</li> </ul>
<b>Software Installation</b>	<ul style="list-style-type: none"> <li>■ tftp (RFC 959)</li> </ul>
<b>Terminal Emulation</b>	<ul style="list-style-type: none"> <li>■ Telnet (RFC 854)</li> <li>■ rlogin (RFC 1282)</li> </ul>
<b>Protocols Used for Administration</b>	<ul style="list-style-type: none"> <li>■ UDP (RFC 768)</li> <li>■ IP (RFC 791)</li> <li>■ ICMP (RFC 792)</li> <li>■ TCP (RFC 793)</li> <li>■ ARP (RFC 826)</li> </ul>

**Table 12** LED Indicators on the Switch 9300

LED	Type	Description
<b>System LEDs</b>	■ <b>Power</b>	■ <b>Green</b> — System is on.
		■ <b>Off</b> — System is receiving no power.
	■ <b>Fault</b>	■ <b>Off</b> — System is operational. ■ <b>Solid or Blinking Yellow</b> — System failed diagnostics, or some other operational failure has occurred.
<b>Port LEDs</b>	■ <b>Stat</b>	■ <b>Off</b> — Port is off-line.
		■ <b>Blinking Green</b> — Port is online but disabled.
		■ <b>Green</b> — Port is online and enabled.
	■ <b>Pckt</b>	■ <b>Off</b> — Port is off-line.
		■ <b>Blinking Yellow</b> — Port is passing data. ■ <b>Yellow</b> — Port is passing data.

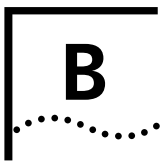

# SITE REQUIREMENTS AND SAFETY CODES

You took careful steps to plan and prepare your site for new or additional SuperStack® II Switch 9300 stackable switch systems. For your reference, this appendix summarizes the criteria that your site should meet for the Switch 9300 to operate safely and effectively.

This appendix covers these topics:

- General Safety Requirements
- Wiring Closet Recommendations
- Distribution Rack Requirements, if you mount one or more Switch 9300 systems in a distribution rack
- Building and Electrical Codes

## General Safety Requirements

For safe operation, your site must meet these general safety requirements:

- All environmental requirements in Appendix A and in “Wiring Closet Recommendations” next. Pay special attention to temperature and humidity.
- All building and electrical codes for your city and country. See relevant “Building and Electrical Codes” for more information.
- All grounding requirements listed in “Wiring Closet Recommendations” and “Distribution Rack Requirements.”

## Wiring Closet Recommendations

The cabling system plan at your facility probably covers most wiring closet concerns. 3Com also recommends that you check these items:

- Verify that your wiring closet meets all of the requirements in your facility cabling plan.
- Verify that your wiring closet and your facility meet all state, local, and country building and wiring codes.
- Be sure that your system is easily accessible for installation and service.
- Provide adequate overhead lighting for easy maintenance.
- Be sure that all wiring closet doors have locks to prevent unauthorized access.
- Assign wiring closet identification numbers using architectural location codes or some type of floor-grid matrix.
- Select a vinyl floor covering for your wiring closet. Concrete floors accumulate dust; carpets can cause static electricity.
- Be sure that the wiring closet floor is flat and level. If you are using distribution racks and the floor is not level, bolt the racks to the floor to prevent them from tipping over.

- Be sure that each wiring closet has a suitable ground. Ground all metal racks, enclosures, boxes, and raceways in the closet.
- Use AC power, 15-ampere service receptacles, type N5/15 or NEMA 5-15R for 120 VAC, and the other system specifications shown in Appendix A.
- Be especially sure to meet all system environmental requirements in Appendix A, such as ambient temperature and humidity.
- Be sure that the ventilation in the wiring closet is adequate to maintain a temperature below 40 °C (104 °F).
- Install a reliable air conditioning and ventilation system if you plan to have two or more Switch 9300 systems in a single wiring closet.
- To prevent overheating during nonbusiness hours, guard against the ventilation being shut down while a Switch 9300 system remains powered up.

## Distribution Rack Requirements

If you plan to mount your SuperStack II Switch 9300 systems in a distribution rack, verify that your rack meets the basic mechanical and space requirements described in this section.

### Protective Grounding for the Rack


Proper distribution rack grounding ensures that voltages induced into wiring by lightning or other disturbances are directed to ground. Normally, you use a distribution rack grounding kit and a ground conductor that is carried back to earth or to another suitable building ground. To order the grounding kit, contact your network supplier.

### Space Requirements for the Rack

Provide enough space in front of and behind the system so that you can service it easily. Allow a minimum of 76 cm (30 in.) between the rack and any wall behind or in front of it. Extra room on each side is optional. See Figure 14.



*Install your distribution rack near an easily accessible power outlet. You can power down the system only by removing the power cord from the power source.*

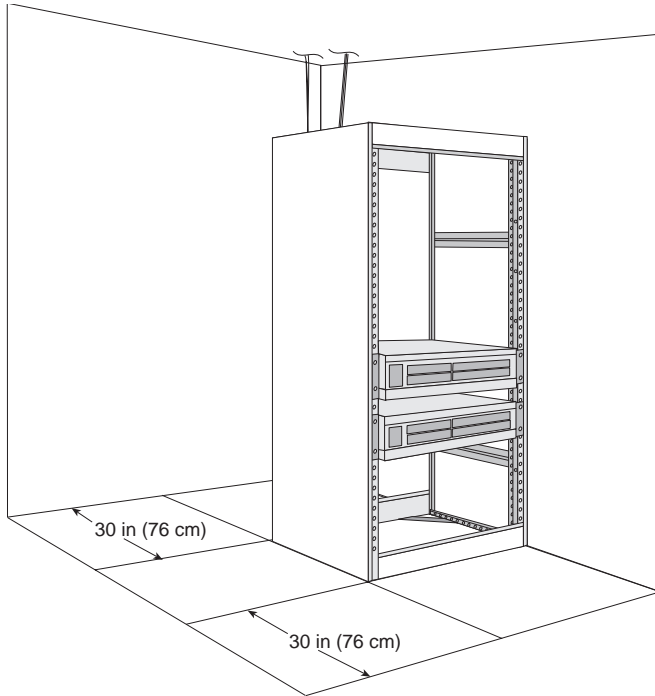**Figure 14** Recommended Service Access

### Mechanical Requirements for the Rack


Verify that your racks comply with the standards and requirements in your cabling system plan and conform to these conventional standards:

- In the United States, comply with EIA Standard RS-310C: Racks, Panels, and Associated Equipment.

- In countries other than the United States, comply with IEC Standard 297: Dimensions of Panels and Racks.

In addition, 3Com recommends that your distribution racks meet these requirements:

- Use an open style, 19-inch rack. The rack styles shown in Figure 15 facilitate easy maintenance and provide excellent ventilation.
- Use a rack that has the universal mounting rail hole pattern identified in IEC Standard 297. See Figure 7 for a description of the universal mounting hole pattern.
- Use a rack that is made of steel.
- Install equipment in the lower half of the distribution rack to avoid making it top heavy.
- Use a rack that supports approximately 272 kg (600 lb)
- Use a rack that has adequate electrical grounding, for instance, with a distribution rack grounding kit.
- Verify that the floor under the rack is level within 5 mm ( $\frac{3}{16}$  in.). Use a floor-leveling cement compound or bolt the racks to the floor.
- Attach the rack to the wiring closet floor with 9.5 mm ( $\frac{3}{8}$  in.) lag screws or equivalent hardware.
- Brace open distribution racks if the channel thickness is less than 6.4 mm ( $\frac{1}{4}$  in.).

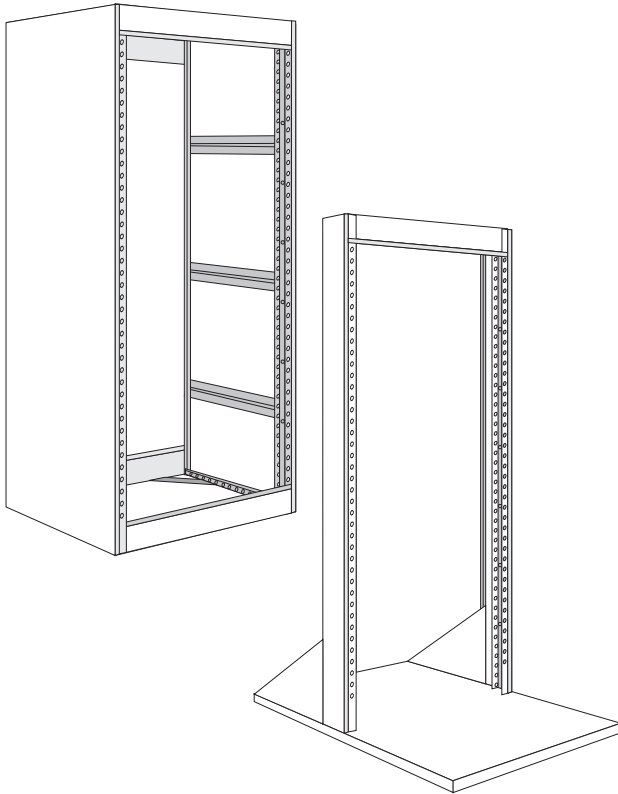**Figure 15** Recommended Rack Styles

## Building and Electrical Codes

Follow all appropriate building codes and authorities on electrical codes when planning your site and installing your cable for the Switch 9300 system.

Specific building and electrical codes vary depending on your location. The following lists are provided as resources to help you to find additional information.

### U.S. Building Codes

Major building codes:

- Uniform Building Code

International Conference of Building Officials  
(ICBO)

Headquarters: 5360 Workman Mill Road  
Whittier CA 90601-2298 USA  
[www.icbo.org](http://www.icbo.org)

- BOCA Basic Building Code

Building Officials and Code Administrators  
(BOCA) International, Inc.

Headquarters: 4051 West Flossmoor Road  
Country Club Hills IL 60478 USA  
[www.bocai.org](http://www.bocai.org)

- Standard Building Code (SBC)

Southern Building Code Congress  
International, Inc.

900 Montclair Road  
Birmingham AL 35213-1206 USA  
[www.sbcci.org](http://www.sbcci.org)

## U.S. Electrical Codes

Authorities on electrical codes:

- **National Electrical Code (NEC) Classification** — A recognized authority on safe electrical wiring. U.S. Federal, state, and local governments use NEC standards to establish their own laws, ordinances, and codes on wiring specifications. The NEC Classification is published by:

National Fire Protection Association (NFPA)  
1 Batterymarch Park  
P.O. Box 9101  
Quincy MA 02269-9109 USA  
[www.nfpa.org](http://www.nfpa.org)

- **Underwriters' Laboratories (UL) Listing** — An independent research and testing laboratory. UL evaluates the performance and capability of electrical wiring and equipment to determine whether they meet certain safety standards when properly used. Acceptance is usually indicated by the words "UL Approved" or "UL Listed."

UL  
333 Pfingsten Road  
Northbrook IL 60062-2096 USA  
[www.ul.com](http://www.ul.com)


- **National Electrical Manufacturers Association (NEMA)** — An organization of electrical product manufacturers. Members develop consensus standards for cables, wiring, and electrical components.

NEMA  
1300 North 17th Street, Suite 1847  
Rosslyn VA 22209 USA  
[www.nema.org](http://www.nema.org)

- **Electronic Industries Association (EIA)** — A trade association that develops technical standards, disseminates marketing data, and maintains contact with government agencies in matters relating to electronics and related industries.

EIA  
2500 Wilson Boulevard  
Arlington VA 22201-3834 USA  
[www.eia.org](http://www.eia.org)



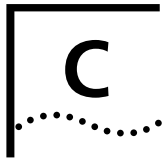

# TECHNICAL SUPPORT

3Com provides easy access to technical support information through a variety of services. This appendix describes these services.

Information contained in this appendix is correct at time of publication. For the most recent information, 3Com recommends that you access the 3Com Corporation World Wide Web site.

## Online Technical Services

3Com offers worldwide product support 24 hours a day, 7 days a week, through the following online systems:

- World Wide Web site
- 3Com Knowledgebase Web Services
- 3Com FTP site
- 3Com Bulletin Board Service (3Com BBS)
- 3Com Facts<sup>SM</sup> Automated Fax Service

## World Wide Web Site

To access the latest networking information on the 3Com Corporation World Wide Web site enter this URL into your Internet browser:

**<http://www.3com.com/>**

This service provides access to online support information such as technical documentation and software library, as well as support options that range from technical education to maintenance and professional services.

## 3Com Knowledgebase Web Services

This interactive tool contains technical product information compiled by 3Com expert technical engineers around the globe. Located on the World Wide Web at **<http://knowledgebase.3com.com>**, this service gives all 3Com customers and partners complementary, round-the-clock access to technical information on most 3Com products.

### 3Com FTP Site

Download drivers, patches, software, and MIBs across the Internet from the 3Com public FTP site. This service is available 24 hours a day, 7 days a week.

To connect to the 3Com FTP site, enter the following information into your FTP client:

- Hostname: **ftp.3com.com**
- Username: **anonymous**
- Password: **<your Internet e-mail address>**



*You do not need a user name and password with Web browser software such as Netscape Navigator and Internet Explorer.*

### 3Com Bulletin Board Service

The 3Com BBS contains patches, software, and drivers for 3Com products. This service is available through analog modem or digital modem (ISDN) 24 hours a day, 7 days a week.

#### Access by Analog Modem

To reach the service by modem, set your modem to 8 data bits, no parity, and 1 stop bit. Call the telephone number nearest you:

Country	Data Rate	Telephone Number
Australia	Up to 14,400 bps	61 2 9955 2073
Brazil	Up to 28,800 bps	55 11 5181 9666
France	Up to 14,400 bps	33 1 6986 6954
Germany	Up to 28,800 bps	4989 62732 188

Country	Data Rate	Telephone Number
Hong Kong	Up to 14,400 bps	852 2537 5601
Italy	Up to 14,400 bps	39 2 27300680
Japan	Up to 14,400 bps	81 3 5977 7977
Mexico	Up to 28,800 bps	52 5 520 7835
P.R. of China	Up to 14,400 bps	86 10 684 92351
Taiwan, R.O.C.	Up to 14,400 bps	886 2 377 5840
U.K.	Up to 28,800 bps	44 1442 438278
U.S.A.	Up to 53,333 bps	1 847 262 6000

#### Access by Digital Modem

ISDN users can dial in to the 3Com BBS using a digital modem for fast access up to 64 Kbps. To access the 3Com BBS using ISDN, call the following number:

**1 847 262 6000**

### 3Com Facts Automated Fax Service

The 3Com Facts automated fax service provides technical articles, diagrams, and troubleshooting instructions on 3Com products 24 hours a day, 7 days a week.

Call 3Com Facts using your Touch-Tone telephone:

**1 408 727 7021**

## Support from Your Network Supplier

If you require additional assistance, contact your network supplier. Many suppliers are authorized 3Com service partners who are qualified to provide a variety of services, including network planning, installation, hardware maintenance, application training, and support services.

When you contact your network supplier for assistance, have the following information ready:

- Product model name, part number, and serial number
- A list of system hardware and software, including revision levels
- Diagnostic error messages
- Details about recent configuration changes, if applicable

If you are unable to contact your network supplier, see the following section on how to contact 3Com.

## Support from 3Com

If you are unable to obtain assistance from the 3Com online technical resources or from your network supplier, 3Com offers technical telephone support services. To find out more about your support options, call the 3Com technical telephone support phone number at the location nearest you.

When you contact 3Com for assistance, have the following information ready:

- Product model name, part number, and serial number
- A list of system hardware and software, including revision levels
- Diagnostic error messages
- Details about recent configuration changes, if applicable

Here is a list of worldwide technical telephone support numbers:

Country	Telephone Number
<b>Asia Pacific Rim</b>	
Australia	1 800 678 515
Hong Kong	800 933 486
India	+61 2 9937 5085
Indonesia	001 800 61 009
Japan	0031 61 6439
Malaysia	1800 801 777
New Zealand	0800 446 398
Pakistan	+61 2 9937 5085
Philippines	1235 61 266 2602
P.R. of China	10800 61 00137 or 021 6350 1590
Singapore	800 6161 463
S. Korea	
From anywhere in S. Korea:	00798 611 2230
From Seoul:	(0)2 3455 6455
Taiwan, R.O.C.	0080 611 261
Thailand	001 800 611 2000

Country	Telephone Number
<b>Europe</b>	
From anywhere in Europe, call:	+31 (0)30 6029900 phone +31 (0)30 6029999 fax
<b>Europe, South Africa, and Middle East</b>	
From the following countries, you may use the toll-free numbers:	
Austria	0800 297468
Belgium	0800 71429
Denmark	800 17309
Finland	0800 113153
France	0800 917959
Germany	0800 1821502
Hungary	00800 12813
Ireland	1800 553117
Israel	1800 9453794
Italy	1678 79489
Netherlands	0800 0227788
Norway	800 11376
Poland	00800 3111206
Portugal	0800 831416
South Africa	0800 995014
Spain	900 983125
Sweden	020 795482
Switzerland	0800 55 3072
U.K.	0800 966197
<b>Latin America</b>	
Argentina	AT&T +800 666 5065
Brazil	0800 13 3266
Chile	1230 020 0645
Colombia	98012 2127
Mexico	01 800 CARE (01 800 2273)
Peru	AT&T +800 666 5065
Puerto Rico	800 666 5065
Venezuela	AT&T +800 666 5065
<b>North America</b>	
	1 800 NET 3Com (1 800 638 3266)
	Enterprise Customers: 1 800 876-3266

## Returning Products for Repair

Before you send a product directly to 3Com for repair, you must first obtain an authorization number. Products sent to 3Com without authorization numbers will be returned to the sender unopened, at the sender's expense.

To obtain an authorization number, call or fax:

Country	Telephone Number	Fax Number
Asia, Pacific Rim	+65 543 6500	+65 543 6348
Europe, South Africa, and Middle East	+31 30 6029900	+31 30 6029999

From the following countries, you may call the toll-free numbers; select option 2 and then option 2:

Austria	0800 297468
Belgium	0800 71429
Denmark	800 17309
Finland	0800 113153
France	0800 917959
Germany	0800 1821502
Hungary	00800 12813
Ireland	1800 553117
Israel	1800 9453794
Italy	1678 79489
Netherlands	0800 0227788
Norway	800 11376
Poland	00800 3111206
Portugal	0800 831416
South Africa	0800 995014
Spain	900 983125
Sweden	020 795482
Switzerland	0800 55 3072
U.K.	0800 966197

Country	Telephone Number	Fax Number
Latin America	1 408 326 2927 (not toll-free)	1 408 326 3355 (not toll-free)
U.S.A. and Canada	1 800 NET 3Com (1 800 638 3266)	1 408 326 7120 (not toll-free)
	Enterprise Customers: 1 800 876 3266	



# INDEX

---

## Numbers

1000BASE-LX ports 25  
    cabling 26, 27  
1000BASE-SX ports 25  
    cabling 27  
10BASE-TX port 29  
3Com bulletin board service (3Com BBS) 52  
3Com Facts 52  
3Com URL 51

---

## A

AC components  
    Redundant Power System 31  
    Uninterruptible Power System 31  
Administration Console  
    accessing 37  
    configuring IP addresses 38  
air conditioning  
    requirements for system 46  
audience 7

---

## B

baud setting  
    changing 37  
brackets, mounting 21  
building codes  
    BOCA (Basic Building Code) 48  
    ICBO (International Conference of Building Officials) 48  
    SBC (Standard Building Code) 48  
    Uniform Building Code 48  
bulletin board service 52

---

## C

cabling  
    1000BASE-SX (SC) ports 26, 27  
    Console port 28  
    Gigabit Ethernet 26 to 27  
    modem 28  
    out-of-band management port 29  
    overview 25  
    serial port 28  
cabling system plans 47  
cautions in text  
    defined 8  
CD-ROM documentation 10  
Console port  
    baud setting 37  
    cabling 28  
    default settings 37  
    pin assignments 29  
    terminal 35  
conventions in text  
    defined 8  
cooling the system 46

---

## D

DB-9 connector pin assignments 28  
diagnostic signs 39 to 41  
distribution rack  
    mounting the system 23  
    preparing for system installation 21  
    requirements 46  
    universal mounting hole pattern 22  
documentation  
    comments 11  
    for the Switch 9300 system 9  
documents on CD-ROM 10

---

## E

EIA (electrical code)  
    standard equipment rack 47  
    standards 49  
electrical codes  
    EIA (Electronics Industry Association) 49  
    NEC (National Electrical Code) 49  
    NEMA (National Electrical Manufacturing Association) 49  
    Underwriters' Laboratory (UL) Listing 49  
environmental specifications  
    requirements 43, 46  
Ethernet LEDs 33, 41  
Ethernet Pckt LED  
    troubleshooting 41  
Ethernet Stat LED  
    troubleshooting 41

---

## F

Fault LED 33  
    troubleshooting 40  
fault tolerance 14  
fax service (3Com Facts) 52  
feedback on documentation 11  
fiber optic cables  
    cleaning 42  
floor plan 45

---

## G

Gigabit Ethernet  
    cabling 26 to 27

---

**H**

humidity  
specifications 43, 46

---

**I**

ICBO (building code) 48  
IEC Standard 297 47  
installation  
distribution rack 20  
free-standing stack 20  
table-top 20  
integrated management 14  
interface parameters (IP) 38  
IP address 38  
and Switch 3900 management 35  
quick configuration 38

---

**L**

LEDs  
abnormal activity 39  
port status 33  
system fault 33  
system power 33  
system status 33  
local management 35

---

**M**

management access 14, 35  
management, Switch 3900  
IP 35  
modem 35  
terminal 35  
modem 28, 35  
mounting  
brackets 21  
mounting rails 47

---

**N**

NEC (electrical code) 49  
NEMA (electrical code) 49  
network supplier support 53  
NFPA (National Fire Protection Association) 49  
notes in text  
defined 8

---

**O**

online technical services 51  
out-of-band management  
port cabling 29

---

**P**

pin assignments  
Console port 29  
port, out-of-band management 29  
ports  
cleaning 42  
fiber optic LED safety 25  
problems 39  
status 33  
power  
cord, troubleshooting 40  
down 46  
system options 31  
wiring 46  
power cord 31  
Power LED 33  
troubleshooting 40  
power system  
malfunction 40  
options 31  
redundant 31  
specifications 43  
uninterruptible 31

---

power up  
and staging the system 32  
and system cabling 32  
diagnostics 32  
LED activity 32  
protective grounding  
wiring closet 46  
protocols supported 44

---

**R**

rack  
open-style 47  
requirements 47  
redundant power system  
connecting 31  
release notes 7  
returning products for repair 55  
RJ-45 connector 29

---

**S**

safety  
requirements 45  
working with fiber optic ports 25  
SBC (Standard Building Code) 48  
SC connectors 26, 27  
serial line, and management access 35  
serial port  
cabling 28  
single-mode fiber  
safety 25  
site planning  
environmental and safety requirements 45  
rack requirements 46  
wiring closet considerations 45  
SNMP  
agent 35  
and Switch 3900 management 35  
standards supported 44  
software release notes 7  
space requirements 47  
stacking systems 19  
subnet mask 38

Switch 3900  
  management 35  
Switch 9300  
  cabling 25  
  description 13  
  distribution rack installation 21 to 23  
  installing 19 to 23  
  power options 31  
  table-top installation 20  
Switch 9300 documentation 9  
system  
  turning on 32  
system cooling 46

---

## T

table-top installation 20  
technical support  
  3Com URL 51  
  bulletin board service 52  
  fax service 52  
  network suppliers 53  
  product repair 55  
temperature  
  specifications 43  
transceiver  
  fiber optic port safety 25  
troubleshooting  
  LED activity 40  
  power failures 40  
  power-up system checks 33  
turning off the system 46  
turning on the system 31

---

## U

Uniform Building Code 48  
uninterruptible power system (UPS) 31  
universal mounting hole pattern 22  
URL 51  
URLs for industry organizations 48

---

## V

ventilation  
  air conditioning 46  
  wiring closet 46

---

## W

warnings in text  
  defined 8  
wiring 25  
wiring closet  
  floor 45  
  recommendations 45  
World Wide Web (WWW) 48, 49, 51



# 3Com Corporation LIMITED WARRANTY

## SuperStack® II Switch 9300

---

### HARDWARE

3Com warrants to the end user ("Customer") that this hardware product will be free from defects in workmanship and materials, under normal use and service, for one (1) year from the date of purchase from 3Com or its authorized reseller.

3Com's sole obligation under this express warranty shall be, at 3Com's option and expense, to repair the defective product or part, deliver to Customer an equivalent product or part to replace the defective item, or if neither of the two foregoing options is reasonably available, 3Com may, in its sole discretion, refund to Customer the purchase price paid for the defective product. All products that are replaced will become the property of 3Com. Replacement products may be new or reconditioned. 3Com warrants any replaced or repaired product or part for ninety (90) days from shipment, or the remainder of the initial warranty period, whichever is longer.

---

### SOFTWARE

3Com warrants to Customer that each software program licensed from it will perform in substantial conformance to its program specifications, for a period of ninety (90) days from the date of purchase from 3Com or its authorized reseller. 3Com warrants the media containing software against failure during the warranty period. 3Com's sole obligation under this express warranty shall be, at 3Com's option and expense, to refund the purchase price paid by Customer for any defective software product, or to replace any defective media with software which substantially conforms to applicable 3Com published specifications. Customer assumes responsibility for the selection of the appropriate applications program and associated reference materials. 3Com makes no warranty or representation that its software products will meet Customer's requirements or work in combination with any hardware or applications software products provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected. For any third-party products listed in the 3Com software product documentation or specifications as being compatible, 3Com will make reasonable efforts to provide compatibility, except where the noncompatibility is caused by a "bug" or defect in the third party's product or from use of the software product not in accordance with 3Com's published specifications or user manual.

THIS 3COM PRODUCT MAY INCLUDE OR BE BUNDLED WITH THIRD-PARTY SOFTWARE, THE USE OF WHICH IS GOVERNED BY A SEPARATE END-USER LICENSE AGREEMENT. THIS 3COM WARRANTY DOES NOT APPLY TO SUCH THIRD-PARTY SOFTWARE. FOR THE APPLICABLE WARRANTY, PLEASE REFER TO THE END-USER LICENSE AGREEMENT GOVERNING THE USE OF SUCH SOFTWARE.

---

### YEAR 2000 WARRANTY

In addition to the Hardware Warranty and Software Warranty stated above, 3Com warrants that each product sold or licensed to Customer on and after January 1, 1998, that is date sensitive will continue performing properly with regard to such date data on and after January 1, 2000, provided that all other products used by Customer in connection or combination with the 3Com product, including hardware, software, and firmware, accurately exchange date data with the 3Com product, with the exception of those products identified at 3Com's Web site, <http://www.3com.com/products/yr2000.html>, as not meeting this standard. If it appears that any product that is stated to meet this standard does not perform properly with regard to such date data on and after January 1, 2000, and Customer notifies 3Com before the later of April 1, 2000, or ninety (90) days after purchase of the product from 3Com or its authorized reseller, 3Com shall, at its option and expense, provide a software update which would effect the proper performance of such product, repair such product, deliver to Customer an equivalent product to replace such product, or, if none of the foregoing is feasible, refund to Customer the purchase price paid for such product.

Any software update or replaced or repaired product will carry a Year 2000 Warranty for ninety (90) days after purchase or until April 1, 2000, whichever is later.

---

### OBTAINING WARRANTY SERVICE

Customer must contact a 3Com Corporate Service Center or an Authorized 3Com Service Center within the applicable warranty period to obtain warranty service authorization. Dated proof of purchase from 3Com or its authorized reseller may be required. Products returned to 3Com's Corporate Service Center must be preauthorized by 3Com with a Return Material Authorization (RMA) number or User Service Order (USO) number marked on the outside of the package, and sent prepaid and packaged appropriately for safe shipment, and it is recommended that they be insured or sent by a method that provides for tracking of the package. Responsibility for loss or damage does not transfer to 3Com until the returned item is received by 3Com. The repaired or replaced item will be shipped to Customer, at 3Com's expense, not later than thirty (30) days after 3Com receives the defective product.

3Com shall not be responsible for any software, firmware, information, or memory data of Customer contained in, stored on, or integrated with any products returned to 3Com for repair, whether under warranty or not.

*Dead- or Defective-on-Arrival.* In the event a product completely fails to function or exhibits a defect in materials or workmanship within the first forty-eight (48) hours of installation but no later than thirty (30) days after the date of purchase, and this is verified by 3Com, it will be considered dead- or defective-on-arrival (DOA) and a replacement shall be provided by advance replacement. The replacement product will normally be shipped not later than three (3) business days after 3Com's verification of the DOA product, but may be delayed due to export or import procedures. The shipment of advance replacement products is subject to local legal requirements and may not be available in all locations. When an advance replacement is provided and Customer fails to return the original product to 3Com within fifteen (15) days after shipment of the replacement, 3Com will charge Customer for the replacement product, at list price.

#### **INCLUDED SERVICES:**

*Telephone Support.* This SuperStack® product comes with telephone technical support for ninety (90) days. The ninety (90) days period begins on the date of Customer's product purchase.

The telephone technical support is available from 3Com from 9 a.m. to 5 p.m., local time, Monday through Friday, excluding local holidays. Telephone technical support is limited to the 3Com products designated above and may include assistance with installation, product specific configuration, and identification of equipment problems. Please refer to the Technical Support appendix in the Getting Started Guide for telephone numbers.

Response to requests for telephone technical support will be in the form of a return call from a 3Com representative by close of business the following business day.

To qualify for this ninety (90) days of telephone technical support, Customer must register on the 3Com Web site at <http://support.3Com.com/index.htm>, and provide the date of purchase, product number, and serial number. 3Com reserves the right to modify or cancel this offering at any time, without advance notice. This offering is not available where prohibited or restricted by law.

3Com's Web and Bulletin Board Services provide 3Knowledgebase, bug tracking, documentation, release notes, and some software maintenance releases at no charge.

---

#### **WARRANTIES EXCLUSIVE**

IF A 3COM PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY FOR BREACH OF THAT WARRANTY SHALL BE REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT 3COM'S OPTION. TO THE FULL EXTENT ALLOWED BY LAW, THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, TERMS, OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES, TERMS, OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, SATISFACTORY QUALITY, CORRESPONDENCE WITH DESCRIPTION, AND NONINFRINGEMENT, ALL OF WHICH ARE EXPRESSLY DISCLAIMED. 3COM NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, OR USE OF ITS PRODUCTS.

3COM SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT OR MALFUNCTION IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO OPEN, REPAIR, OR MODIFY THE PRODUCT, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, POWER CUTS OR OUTAGES, OTHER HAZARDS, OR ACTS OF GOD.

---

#### **LIMITATION OF LIABILITY**

TO THE FULL EXTENT ALLOWED BY LAW, 3COM ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF 3COM OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT 3COM'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

---

#### **DISCLAIMER**

Some countries, states, or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages for certain products supplied to consumers, or the limitation of liability for personal injury, so the above limitations and exclusions may be limited in their application to you. When the implied warranties are not allowed to be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights which may vary depending on local law.

---

#### **GOVERNING LAW**

This Limited Warranty shall be governed by the laws of the State of California, U.S.A., excluding its conflicts of laws principles and excluding the United Nations Convention on Contracts for the International Sale of Goods.

#### **3Com Corporation**

5400 Bayfront Plaza, P.O. Box 58145, Santa Clara, CA 95052-8145  
(408) 326-5000