



PROGRAMMABLE CONTROLLERS

MELSEC iQ-F

FX5U SERIES

PROGRAMMABLE CONTROLLERS

Hardware Manual

FX5U

This manual describes the part names, dimensions, installation, cabling and specifications for the product. This manual is extracted from MELSEC iQ-F FX5U Series User's Manual [Hardware]. Refer to MELSEC iQ-F FX5U Series User's Manual [Hardware] for more details. Before use, read this manual and manuals of relevant products fully to acquire proficiency in the handling and operating the product. Make sure to learn all the product information, safety information, and precautions.

And, store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

Registration: Ethernet is a trademark of Xerox Corporation. MODBUS® is a registered trademark of Schneider Electric SA. Phillips is a registered trademark of Phillips Screw Company. The company name and the product name to be described in this manual are the registered trademarks or trademarks of each company.

Effective October 2014  
 Specifications are subject to change without notice.  
 © 2014 MITSUBISHI ELECTRIC CORPORATION

Safety Precaution (Read these precautions before use.)

This manual classifies the safety precautions into two categories:

**WARNING** and **CAUTION** .

<b>WARNING</b>	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
<b>CAUTION</b>	Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Depending on the circumstances, procedures indicated by **CAUTION** may also cause severe injury.  
 It is important to follow all precautions for personal safety.

STARTUP AND MAINTENANCE PRECAUTIONS	WARNING
<ul style="list-style-type: none"> <li>Do not touch any terminal while the PLC's power is on. Doing so may cause electric shock or malfunctions.</li> <li>Before cleaning or rightening terminals, cut off all phases of the power supply externally. Failure to do so in the power ON status may cause electric shock.</li> <li>Before modifying the program in mid-operation, forcing output, running or stopping the PLC, read through this manual carefully, and ensure complete safety.</li> <li>An operation error may damage the machinery or cause accidents.</li> <li>Do not change the program in the PLC from two or more peripheral equipment devices at the same time. (i.e. from an engineering tool and a GOT)</li> <li>Doing so may cause destruction or malfunction of the PLC program.</li> <li>Use the battery for memory backup in conformance with the MELSEC iQ-F FX5U Series User's Manual [Hardware].               <ul style="list-style-type: none"> <li>Use the battery for the specified purpose only.</li> <li>Connect the battery correctly.</li> <li>Do not charge, disassemble, heat, put in fire, short-circuit, connect reversely, weld, swallow or burn the battery, or apply excessive force (vibration, impact, drop, etc.) to the battery.</li> <li>Do not store or use the battery at high temperatures or expose to direct sunlight.</li> <li>Do not expose to water, bring near fire or touch liquid leakage or other contents directly.</li> </ul> </li> </ul> <p>Incorrect handling of the battery may cause excessive heat, bursting, ignition, liquid leakage or deformation, and lead to injury, fire or failures and malfunction of facilities and other equipment.</p>	

JY997D53401A

1

2

STARTUP AND MAINTENANCE PRECAUTIONS	CAUTION
<ul style="list-style-type: none"> <li>Do not disassemble or modify the PLC. Doing so may cause fire, equipment failures, or malfunctions. For repair, contact your local Mitsubishi Electric representative.</li> <li>Turn off the power to the PLC before connecting or disconnecting any extension cable. Failure to do so may cause equipment failures or malfunctions.</li> <li>Turn off the power to the PLC before attaching or detaching the following devices. Failure to do so may cause equipment failures or malfunctions.               <ul style="list-style-type: none"> <li>Peripheral devices, expansion board, and expansion adapter</li> <li>Extension modules, bus conversion module, and battery</li> </ul> </li> </ul>	

DISPOSAL PRECAUTIONS	CAUTION
<ul style="list-style-type: none"> <li>Please contact a certified electronic waste disposal company for the environmentally safe recycling and disposal of your device.</li> <li>When disposing of batteries, separate them from other waste according to local regulations. (For details on the Battery Directive in EU countries, refer to the MELSEC iQ-F FX5U Series User's Manual [Hardware].)</li> </ul>	

TRANSPORTATION PRECAUTIONS	CAUTION
<ul style="list-style-type: none"> <li>When transporting the PLC with the optional battery, turn on the PLC before shipment, confirm that the battery mode is set in PLC parameters and the BAT LED is OFF, and check the battery life. If the PLC is transported with the BAT LED ON or the battery exhausted, the battery-backed data may be lost during transportation.</li> <li>The PLC is a precision instrument. During transportation, avoid impacts larger than those specified in the general specifications (Section 2.1) by using dedicated packaging boxes and shock-absorbing palettes. Failure to do so may cause failures in the PLC. After transportation, verify operation of the PLC and check for damage of the mounting part, etc.</li> <li>When transporting lithium batteries, follow required transportation regulations. (For details on the regulated products, refer to the MELSEC iQ-F FX5U Series User's Manual [Hardware].)</li> </ul>	

Associated manuals

How to obtain manuals
For the necessary product manuals or documents, consult with your local Mitsubishi Electric representative.

**Associated manuals**  
 FX5U Series PLC (CPU module) comes with this document (hardware manual). For a detailed explanation of the FX5U Series hardware and information on instructions for PLC programming and intelligent function module, refer to the relevant documents.

Manual name	Manual No.	Description
MELSEC iQ-F FX5 Series User's Manual [Startup]	JY997D58201	Explains performance specifications, procedures before operation, and troubleshooting of the FX5 Series PLC.
MELSEC iQ-F FX5U Series User's Manual [Hardware]	JY997D55301	Explains FX5U Series PLC specification details for I/O, wiring, installation, and maintenance.
MELSEC iQ-F FX5 Series User's Manual [Serial Communication]	JY997D55901	Explains the non-protocol communication and inverter communication.
MELSEC iQ-F FX5 Series User's Manual [MODBUS Communication]	JY997D56101	Explains the MODBUS serial communication.
MELSEC iQ-F FX5 Series User's Manual [Ethernet Communication]	JY997D56201	Functions for communication via built-in Ethernet port

Certification of UL, cUL standards

Please consult with Mitsubishi Electric for information on UL, cUL standard practices and the corresponding types of equipment.

Compliance with EC directive (CE Marking)

This document does not guarantee that a mechanical system including this product will comply with the following standards.  
 Compliance to EMC directive and LVD directive of the entire mechanical system should be checked by the user/manufacturer. For more details please contact the local Mitsubishi Electric sales site.

Attention

- This product is designed for use in industrial applications.

Note

- Manufactured by: Mitsubishi Electric Corporation  
2-7-3 Marunouchi, Chiyoda-ku, Tokyo, 100-8310 Japan
- Manufactured at: Mitsubishi Electric Corporation Himeji Works  
840 Chiyoda-machi, Himeji, Hyogo, 670-8677 Japan
- Authorized Representative in the European Community: Mitsubishi Electric Europe B.V.  
Gothaer Str. 8, 40880 Ratingen, Germany

Caution for compliance with EC Directive

Installation in Enclosure

Programmable controllers are open-type devices that must be installed and used within conductive control boxes. Please use the FX5U Series programmable controllers while installed in conductive shielded control boxes. Please secure the control box lid to the control box (for conduction). Installation within a control box greatly affects the safety of the system and aids in shielding noise from the programmable controller.

For other cautions, refer to the MELSEC iQ-F FX5U Series User's Manual [Hardware].


Incorporated Items

Check if the following product and items are included in the package:

	Included Items	
■ CPU module		
FX5U-32M□, FX5U-64M□, FX5U-80M□	Product	1 module
	Dust proof protection sheet	1 sheet
	Manuals [Japanese /English]	1 manual
■ I/O module		
FX5-8E□, FX5-16E□	Product	1 module
	Dust proof protection sheet	1 sheet
FX5-32E□	Product	1 module
	Dust proof protection sheet	1 sheet
	Extension cable	1 cable


1. Outline

1.1 Part names

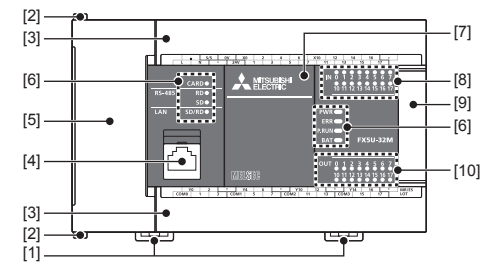

No.	Name		
[1]	DIN rail mounting hooks		
[2]	Expansion adapter connecting hooks		
[3]	Terminal block covers		
[4]	Built-in Ethernet communication connector (with cover)		
[5]	Top cover		
[6]	Operation status display LEDs		
	PWR	Green	On while the PLC is powered.
	ERR	Red	Lit/flashing when an error occurs.
	P.RUN	Green	On while the PLC is running.
	BAT	Red	Lit when the battery voltage drops.
	CARD	Green	Lit when the SD memory card is inserted.
	RD	Green	Lit when data is received through communication via built-in RS-485.
	SD	Green	Lit when data is sent through communication via built-in RS-485.
	SD/RD	Green	Lit when data is sent or received through communication via built-in Ethernet.
[7]	Expansion board connector cover		
[8]	Input display LEDs (Green)		
[9]	Extension connector cover		
[10]	Output display LEDs (Green)		

With cover open

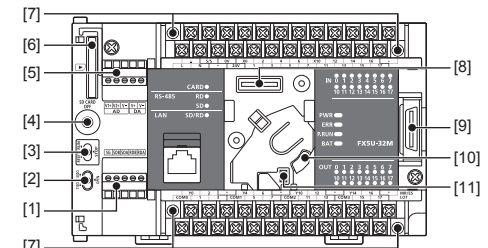


No.	Name	
[1]	Built-in RS-485 communication terminal block	
[2]	RS-485 terminal resistor selector switch	
[3]	RUN/STOP/RESET switch	
[4]	SD memory card disable switch	
[5]	Built-in analog I/O terminal block	
[6]	SD memory card slot	
[7]	Terminal block mounting screws	
[8]	Expansion board connector	
[9]	Extension connector	

No.	Name
[10]	Battery holder
[11]	Battery connector

Left side

Right side

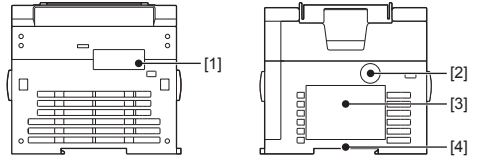


No.	Name
[1]	Expansion adapter connector cover
[2]	Label of authenticity*1
[3]	Nameplate*1
[4]	DIN rail mounting groove

\*1 Products that do not have the genuine product certification label or nameplate are not covered by the warranty.

## 1.2 External dimensions and weight

2-φ4.5-diam mounting holes (FX5U-32M□)  
4-φ4.5-diam mounting holes (FX5U-64M□, FX5U-80M□)  
FX5U-32M□ do not have the (\*)-marked mounting holes.

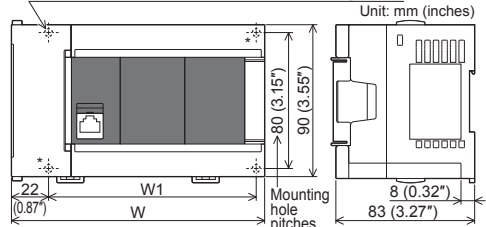

Model name	W: mm (inches)	W1:mm (inches) Mounting hole pitches	MASS (Weight): kg (lbs.)
FX5U-32M□	150 (5.91")	123 (4.85")	Approx. 0.65 (1.43 lbs)
FX5U-64M□	220 (8.67")	193 (7.60")	Approx. 1.0 (2.20 lbs)
FX5U-80M□	285 (11.23")	258 (10.16")	Approx. 1.2 (2.64 lbs)

Outer paint color Body: Munsell 0.6B7.6/0.2

## 2. Installation (general specifications)

As for installation of the I/O modules, expansion adapters and expansion boards, refer to MELSEC IQ-F FX5U Series User's Manual [Hardware].

INSTALLATION PRECAUTIONS	WARNING
<ul style="list-style-type: none"> <li>Use the product within the generic environment specifications described in section 2.1 of this manual.</li> <li>Never use the product in areas with excessive dust, oily smoke, conductive dusts, corrosive gas (salt air, Cl<sub>2</sub>, H<sub>2</sub>S, SO<sub>2</sub> or NO<sub>2</sub>), or flammable gas, subject it to vibration or impact, or expose it to high temperature, condensation, or rain and wind.</li> <li>If the product is used in such conditions, electric shock, fire, malfunctions, deterioration or damage may occur.</li> </ul>	

INSTALLATION PRECAUTIONS	CAUTION
<ul style="list-style-type: none"> <li>Do not touch the conductive parts of the product directly. Doing so may cause device failures or malfunctions.</li> <li>When drilling screw holes or wiring, make sure cutting or wire debris does not enter the ventilation slits of the PLC.</li> <li>Failure to do so may cause fire, equipment failures or malfunctions.</li> </ul>	

INSTALLATION PRECAUTIONS	CAUTION
<ul style="list-style-type: none"> <li>For product supplied together with a dust proof sheet, the sheet should be affixed to the ventilation port before installation and wiring work to block foreign objects such as cutting and wiring debris. However, when the installation work is completed, make sure to remove the sheet to provide adequate ventilation.</li> <li>Failure to do so may cause fire, equipment failures or malfunctions.</li> <li>Install the product on a flat surface. If the mounting surface is rough, undue force will be applied to the PC board, thereby causing nonconformities.</li> <li>Install the product securely using a DIN rail or mounting screws.</li> <li>Connect the extension cables, peripheral device cables, input/output cables and battery connecting cable securely to their designated connectors.</li> <li>Loose connections may cause malfunctions.</li> <li>Turn off the power to the PLC before attaching or detaching the following devices.</li> <li>Failure to do so may cause equipment failures or malfunctions.</li> <li>Peripheral devices, expansion board, and expansion adapter</li> <li>Extension modules, bus conversion module, and battery</li> </ul>	

## 2.1 Generic specifications

Item	Specification				
Operating ambient temperature*1	0 to 55 °C (32 to 131 °F)*2				
Storage ambient temperature	-25 to 75 °C (-13 to 167 °F)				
Operating ambient humidity	5 to 95%RH, non-condensing				
Storage ambient humidity	5 to 95%RH, non-condensing				
Vibration resistance*3		Frequency (Hz)	Acceleration (m/s <sup>2</sup> )	Half amplitude (mm)	Sweep count
	Installed on DIN rail	10 to 57	—	0.035	10 times each in X, Y, Z directions (80 min in each direction)
		57 to 150	4.9	—	
	Installed directly	10 to 57	—	0.075	
57 to 150		9.8	—		
Shock resistance*3	147 m/s <sup>2</sup> Acceleration, Action time: 11 ms, 3 times by half-sine pulse in each direction X, Y, and Z				
Noise durability	By noise simulator of 1000Vp-p noise voltage, 1μs noise width and 30 to 100Hz noise frequency				
Dielectric withstand voltage*4	1.5 kV AC for 1 minute 500 V AC for 1 minute			Between each terminal and ground terminal	
Insulation resistance*4	10MΩ or higher by 500VDC insulation resistance tester				
Grounding	Class D grounding (Grounding resistance: 100 Ω or less) <Common grounding with a heavy electrical system is not allowed.>*5				
Working atmosphere	Free from corrosive or flammable gas and excessive conductive dusts				
Operating altitude	2000 m or less*6				
Installation location	Inside a control panel				
Overvoltage category	II or less				
Pollution degree*7	2 or less				
Equipment class	Class 2				

\*1 The simultaneous ON ratio of available PLC inputs or outputs changes with respect to the ambient temperature, refer to MELSEC IQ-F FX5U Series User's Manual [Hardware].

\*2 For intelligent function modules, refer to the manual for each product.

\*3 The criterion is shown in IEC61131-2.

\*4 Dielectric withstand voltage and insulation resistance are shown in the following table.

Terminal	Dielectric strength	Insulation resistance
■ CPU modules, I/O modules		
Between power supply terminal (AC power) and ground terminal	1.5 kV AC for 1 minute	10MΩ or higher by 500VDC insulation resistance tester
Between 24 V DC service power supply connected to input terminal (24 V DC) and ground terminal	500 V AC for 1 minute	

Terminal	Dielectric strength	Insulation resistance
Between output terminal (relay) and ground terminal	1.5 kV AC for 1 minute	10MΩ or higher by 500VDC insulation resistance tester
Between output terminal (transistor) and ground terminal	500 V AC for 1 minute	
■ Expansion boards, expansion adapters, intelligent function module		
Between terminal of expansion board and ground terminal	Not allowed	Not allowed
Between terminal of expansion adapter and ground terminal	500 V AC for 1 minute	10MΩ or higher by 500VDC insulation resistance tester
Intelligent function module	Each manual	

For dielectric withstand voltage test and insulation resistance test of each product, refer to the following manual.

→ Refer to MELSEC IQ-F FX5U Series User's Manual [Hardware].

\*5 For common grounding, refer to Section 3.3.


\*6 The PLC cannot be used at a pressure higher than the atmospheric pressure to avoid damage.

\*7 This index indicates the degree to which conductive material is generated in the environment in which the equipment is used. Pollution level 2 is when only non-conductive pollution occurs. Temporary conductivity caused by condensation must be expected occasionally.

## 2.2 Installation location

Install the PLC in an environment conforming to the generic specifications (Section 2.1), installation precautions and notes.


### Installation location in enclosure

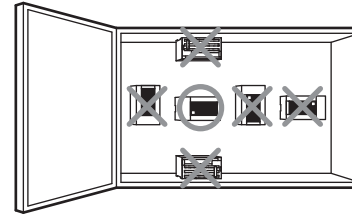

### Space in enclosure

Extension devices can be connected on the left and right sides of the CPU module.

If you intend to add extension devices in the future, keep necessary spaces on the left and right sides.

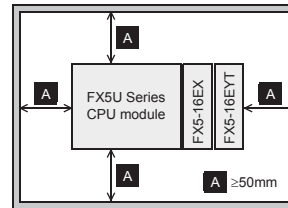

### 2.2.1 Affixing the dust proof sheet

The dust proof sheet should be affixed to the ventilation port before beginning the installation and wiring work.

→ For the affixing procedure, refer to the instructions on the dust proof sheet.


Be sure to remove the dust proof sheet when the installation and wiring work is completed.

## 2.3 Procedures for installing to and detaching from DIN rail


The products can be installed on a DIN46277 rail [35 mm (1.38") wide]. This section explains the installations of the CPU modules.

### 2.3.1 Installation


- 1) Connect the expansion boards and expansion adapters to the CPU module.
- 2) Push out all DIN rail mounting hooks (below fig. A)

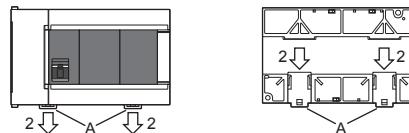

- 3) Fit the upper edge of the DIN rail mounting groove (right fig. B) onto the DIN rail.



- 4) Lock the DIN rail mounting hooks (below fig. C) while pressing the PLC against the DIN rail.

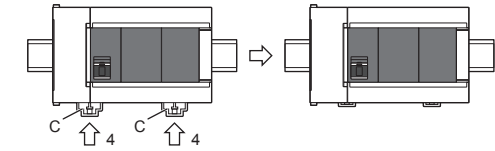

## 2.4 Procedures for installing directly (with M4 screws)

The product can be installed directly on the panel (with screws). This section explains the installation of the CPU modules.


### 2.4.1 Mounting hole pitches

Refer to the External Dimensions (Section 1.2) for the product's mounting hole pitch information.

### 2.4.2 Installation

- 1) Make mounting holes in the mounting surface referring to the external dimensions diagram.

- 2) Fit the CPU module (right fig. A) B based on the holes, and secure it with M4 screws (right fig. B).

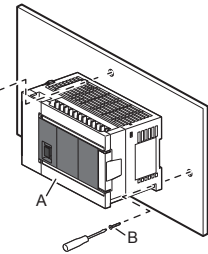

## 3. Specifications and examples of external wiring

As for the details of the power supply wiring and input/output wiring, refer to MELSEC IQ-F FX5U Series User's Manual [Hardware].

DESIGN PRECAUTIONS	WARNING
<ul style="list-style-type: none"> <li>Make sure to set up the following safety circuits outside the PLC to ensure safe system operation even during external power supply problems or PLC failure.</li> <li>Otherwise, malfunctions may cause serious accidents.</li> <li>Most importantly, set up the following: an emergency stop circuit, a protection circuit, an interlock circuit for opposite movements (such as forward vs. reverse rotation), and an interlock circuit to prevent damage to the equipment at the upper and lower positioning limits.</li> <li>Note that when the CPU module detects an error, such as a watchdog timer error, during self-diagnosis, all outputs are turned off. Also, when an error that cannot be detected by the CPU module occurs in an input/output control block, output control may be disabled.</li> <li>External circuits and mechanisms should be designed to ensure safe machine operation in such a case.</li> <li>Note that the output current of the 24V DC service power supply varies depending on the model and the absence/presence of extension modules. If an overload occurs, the voltage automatically drops, inputs in the PLC are disabled, and all outputs are turned off.</li> <li>External circuits and mechanisms should be designed to ensure safe machine operation in such a case.</li> <li>Note that when an error occurs in a relay, triac or transistor of an output circuit, the output might stay on or off.</li> <li>For output signals that may lead to serious accidents, external circuits and mechanisms should be designed to ensure safe machine operation.</li> <li>Construct an interlock circuit in the program to ensure safe operation for the whole system when executing control (for data change) of the PLC in operation. Read the manual thoroughly and sufficiently ensure complete safety before executing other controls (for program change, parameter change, forced output and operation status change) of the PLC in operation.</li> <li>Otherwise, improper operation may damage machines or cause accidents.</li> </ul>	

DESIGN PRECAUTIONS	CAUTION
<ul style="list-style-type: none"> <li>Simultaneously turn on and off the power supplies of the CPU module and extension modules.</li> </ul>	

## WIRING PRECAUTIONS WARNING

- Make sure to cut off all phases of the power supply externally before attempting installation or wiring work.  
Failure to do so may cause electric shock or damage to the product.
- Make sure to attach the terminal cover, provided as an accessory, before turning on the power or initiating operation after installation or wiring work.  
Failure to do so may cause electric shock.
- The temperature rating of the cable should be 80°C or more.
- Make sure to wire the screw terminal block in accordance with the following precautions.  
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
  - Wire terminals should follow the dimensions described in the manual.
  - Tightening torque should follow the specifications in the manual.
  - Tighten the screws using a Phillips-head screwdriver No.2 (shaft diameter 6 mm (0.24") or less). Make sure that the screwdriver does not touch the partition part of the terminal block.
- Make sure to wire the terminal block (European type) in accordance with the following precautions.  
Failure to do so may cause electric shock, equipment failures, a short-circuit, wire breakage, malfunctions, or damage to the product.
  - Wire terminals should follow the dimensions described in the manual.
  - Tightening torque should follow the specifications in the manual.
  - Twist the end of stranded wires and make sure that there are no loose wires.
  - Do not solder-plate the electric wire ends.
  - Do not connect more than the specified number of wires or electric wires of unspecified size.
  - Affix the electric wires so that neither the terminal block nor the connected parts are directly stressed.

## WIRING PRECAUTIONS CAUTION


- Perform class D grounding (grounding resistance: 100 Ω or less) of the grounding terminal on the CPU module and extension modules with a wire 2 mm<sup>2</sup> or thicker. Do not use common grounding with heavy electrical systems (refer to section 3.3).
  - Connect the power supply wiring to the dedicated terminals described in this manual.  
If an AC power supply is connected to a DC input/output terminal or DC power supply terminal, the PLC will burn out.
  - Do not wire vacant terminals externally.  
Doing so may damage the product.
  - Make sure to observe the following precautions in order to prevent any damage to the machinery or accidents due to malfunction of the PLC caused by abnormal data written to the PLC due to the effects of noise.
    - Do not bundle the power line, control line and communication cables together with or lay them close to the main circuit, high-voltage line, load line or power line. As a guideline, lay the power line, control line and communication cables at least 100 mm (3.94") away from the main circuit, high-voltage line, load line or power line.
    - Ground the or shield of the shielded wire or shielded cable at one point on the PLC. However, do not use common grounding with heavy electrical systems.
    - Ground the shield of the analog input/output cable at one point on the signal receiving side.
- However, do not use common grounding with heavy electrical systems.

### 3.1 Cable end treatment and tightening torque

#### 3.1.1 Screw type terminal block

For the terminals of FX5U Series PLC, M3 screws are used.  
The electric wire ends should be treated as shown below.  
Tighten the screws to a torque of 0.5 to 0.8 N·m.  
Do not tighten terminal screws with a torque outside the above-mentioned range.  
Failure to do so may cause equipment failures or malfunctions.


- When one wire is connected to one terminal



#### <Reference>

Terminal Manufacturer	Type No.	Certification	Pressure Bonding Tool
JST Mfg. Co., Ltd.	FV1.25-B3A	UL Listed	YA-1 (JST Mfg. Co., Ltd.)
	FV2-MS3		

- When two wires are connected to one terminal

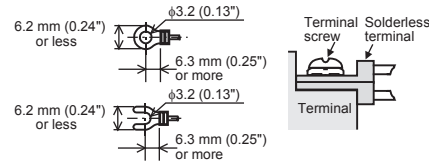

#### <Reference>

Terminal Manufacturer	Type No.	Certification	Pressure Bonding Tool
JST Mfg. Co., Ltd.	FV1.25-B3A	UL Listed	YA-1 (JST Mfg. Co., Ltd.)


#### 3.1.2 European type terminal block

##### 1) Wire size

No. of wire per terminal	Wire size	
	Solid wire/Stranded wire	Ferrules with insulating sleeve
1	AWG24 to 20	AWG24 to 20
2	AWG24	—

##### 2) Treatment of wire ends

Strip the coating of strand wire and twist the cable core before connecting it, or strip the coating of single wire before connecting it. An alternative connection is to use a ferrule with insulating sleeve.

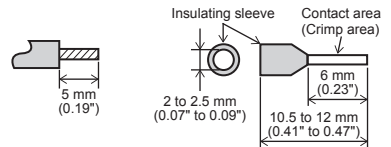

Manufacturer	Model	Caulking tool
Phoenix Contact GmbH & Co. KG	AI 0.5-6WH	CRIMPFOX 6


When using a wire ferrule with an insulating sleeve, choose a wire with proper cable sheath referring to the above outside dimensions, otherwise the wire cannot be inserted easily.

Tighten the screws to a torque of 0.22 to 0.25 N·m.  
Do not tighten terminal screws exceeding with a torque outside the above-mentioned range.

Failure to do so may cause equipment failures or malfunctions.

##### 3) Tool

For tightening the terminal, use a commercially available small screwdriver having a straight form that is not widened toward the end as shown right.

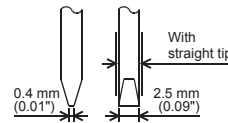

#### Note:

If the diameter of screwdriver grip is too small, tightening torque may not be achieved. To achieve the appropriate tightening torque shown in the table above, use the following screwdriver or appropriate replacement (grip diameter: approximately 25 mm (0.98")).

Manufacturer	Model names
Phoenix Contact GmbH & Co. KG	SZS 0.4×2.5

### 3.2 Power supply specifications and external wiring

#### 3.2.1 Power supply specifications [CPU module, FX5-32E□]

Item	Specification
Rated voltage	100 to 240 V AC
Allowable supply voltage range	85 to 264 V AC
Frequency rating	50/60 Hz
Allowable instantaneous power failure time	Operation can be continued upon occurrence of instantaneous power failure for 10 ms or less.
Power fuse	FX5U-32M□, FX5-32E□ 250 V 3.15 A Time-lag Fuse
	FX5U-64M□, FX5U-80M□ 250 V 5 A Time-lag Fuse

Item	Specification
Rush current	FX5U-32M□ 25 A max. 5 ms or less/100 V AC 50 A max. 5 ms or less/200 V AC
	FX5U-64M□, FX5U-80M□ 30 A max. 5 ms or less/100 V AC 60 A max. 5 ms or less/200 V AC
	FX5-32E□ 30 A max. 5 ms or less/100 V AC 65 A max. 5 ms or less/200 V AC
Power consumption <sup>1</sup>	FX5U-32M□ 30 W
	FX5U-64M□ 40 W
	FX5U-80M□ 45 W
	FX5-32E□ 25 W
24 V DC service power supply capacity <sup>2</sup>	FX5U-32M□ 400 mA (When 24 V DC service power supply is supplied to the input circuit)
	FX5U-64M□ 480 mA (When external power supply is supplied to the input circuit)
	FX5U-80M□ 600 mA (When 24 V DC service power supply is supplied to the input circuit)
	FX5-32E□ 740 mA (When external power supply is supplied to the input circuit)
	600 mA (When 24 V DC service power supply is supplied to the input circuit)
	770 mA (When external power supply is supplied to the input circuit)
	250 mA (When 24 V DC service power supply is supplied to the input circuit)
	310 mA (When external power supply is supplied to the input circuit)
5 V DC built-in power supply capacity <sup>3</sup>	FX5U-32M□ 900 mA
	FX5U-64M□, FX5U-80M□ 1100 mA
	FX5-32E□ 965 mA

<sup>1</sup> This item shows value when all 24 V DC service power supplies are used in the maximum configuration connectable to the CPU module. (The current of the input circuit is included.)

<sup>2</sup> When I/O modules are connected, they consume current from the 24 V DC service power.


<sup>3</sup> Power is supplied to I/O modules, intelligent function modules, expansion adapters and expansion boards.

The following manual shows further information.

→ Refer to MELSEC iQ-F FX5U Series User's Manual [Hardware].

#### 3.2.2 Example of external wiring

100 to 240 V AC power is supplied to the CPU module and FX5-32E□. For the details of wiring work, refer to Section 3.1.

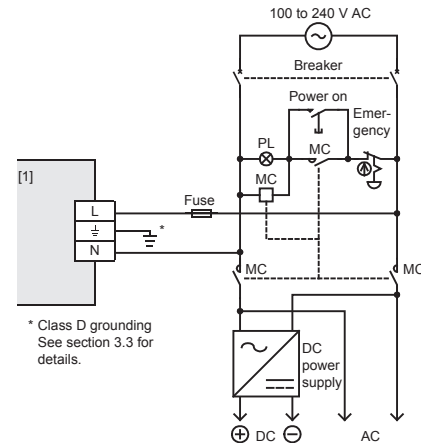

\* Class D grounding  
See section 3.3 for details.


[1]: CPU module, FX5-32E□

Power supply for loads connected to CPU module output terminals

### 3.3 Grounding

Ground the PLC as stated below.

- Perform class D grounding. (Grounding resistance: 100 Ω or less)
- Ground the PLC independently if possible.  
If it cannot be grounded independently, ground it jointly as shown below.




- Use ground wires thicker than AWG14 (2 mm<sup>2</sup>).
- Position the grounding point as close to the PLC as possible to decrease the length of the ground wire.

### 3.4 Input specifications and external wiring

#### 3.4.1 Input specifications (24 V DC input type)

Item	Specification
Input signal voltage	24 V DC +20%, -15%
Input impedance	CPU module X000 to X017 4.3 kΩ
	X020 or more 5.6 kΩ
	FX5 series I/O module 5.6 kΩ
Input signal current	CPU module X000 to X017 5.3 mA/24 V DC
	X020 or more 4 mA/24 V DC
	FX5 series I/O module 4 mA/24 V DC
ON input sensitivity current	CPU module X000 to X017 3.5 mA or more
	X020 or more 3.0 mA or more
	FX5 series I/O module 3.0 mA or more
OFF input sensitivity current	1.5 mA or less
Input response time	Refer to MELSEC iQ-F FX5U Series User's Manual [Hardware]
Input signal form	Sink input No-voltage contact input NPN open collector transistor
	Source input No-voltage contact input PNP open collector transistor
Input operation display	LED on panel turns on when input.

#### 3.4.2 Examples of input wiring (when 24 V DC service power supply is used)

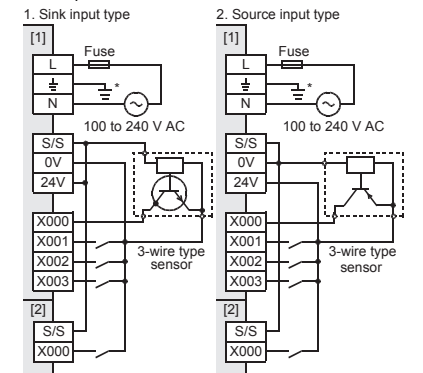

\* Class D grounding  
See section 3.3 for details.

[1]: CPU module, FX5-32E□

[2]: Input module



### 3.5 Relay output specifications and external wiring

#### 3.5.1 Relay output specifications

Item	Specification	
External power supply	30 V DC or less 240 V AC or less ("250 V AC or less" if not a CE, UL, cUL compliant item)	
Max. load	2 A/point <sup>*1</sup>	
Min. load	5 V DC, 2 mA (reference value)	
Open circuit leakage current	—	
Response time	OFF↔ON	Approx. 10 ms
Output operation display	LED on panel turns on when output.	


<sup>\*1</sup> The total load current of resistance loads per common terminal should be the following value.

- 4 output points/common terminal: 8 A or less
- 8 output points/common terminal: 8 A or less

As for the number of outputs per common terminal, refer to Chapter 4 and the following manual.

→ Refer to MELSEC IQ-F FX5U Series User's Manual [Hardware].

#### 3.5.2 Example of relay output wiring

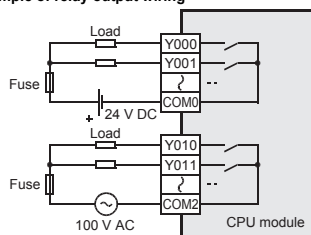

### 3.6 Transistor output specifications and external wiring

#### 3.6.1 Transistor output specifications

Item	Specification	
Output form	FX5U-□MT/ES, FX5-□EYT/ES, FX5-32ET/ES	Transistor (Sink)
	FX5U-□MT/ESS, FX5-□EYT/ESS, FX5-32ET/ESS	Transistor (Source)
External power supply	5 to 30 V DC	
Max. load	0.5 A/point <sup>*1</sup>	
Min. load	—	
Open circuit leakage current	0.1 mA or less/30 V DC	
ON voltage	CPU module	Y000 to Y003 1.0 V or less
	Y004 or more	1.5 V or less
	I/O module	1.5 V or less
Response time	CPU module	Y000 to Y003 2.5 μs or less/10 mA or more (5 to 24 V DC)
	Y004 or more	0.2 ms or less/200 mA or more (at 24 V DC)
	I/O module	0.2 ms or less/200 mA or more (at 24 V DC)
Output operation display	LED on panel turns on when output.	

<sup>\*1</sup> The total load current of resistance loads per common terminal should be the following value.


- 4 output point/common terminal: 0.8 A or less
- 8 output point/common terminal: 1.6 A or less

As for the number of outputs per common terminal, refer to Chapter 4 and the following manual.


→ Refer to MELSEC IQ-F FX5U Series User's Manual [Hardware].

### 3.6.2 External wiring of transistor output

#### 1. External wiring of sink output type

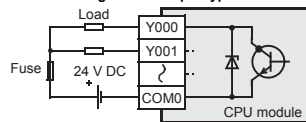

#### 2. External wiring of source output type

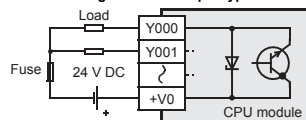

### 3.7 Built-in analog input/output specifications and external wiring

As for the details on the built-in analog input/output specifications and external wiring, refer to the following manual.

→ Refer to MELSEC IQ-F FX5U Series User's Manual [Hardware].

#### 3.7.1 Analog input specifications

Item	Specifications	
Analog input points	2 points (2 channels)	
Analog input	0 to 10 V DC (Input resistance: 115.7 kΩ)	
Digital output	12 bit unsigned binary	
Device allocation	SD6020 (Input data of ch1) SD6060 (Input data of ch2)	
I/O characteristics, Maximum resolution	Digital output value	0 to 4000
	Maximum resolution	2.5 mV
Accuracy (Accuracy in respect to maximum digital output value)	When ambient temperature is 25 ±5°C Within ±0.5% (±20 digit) <sup>*1</sup> When ambient temperature is 0 to 55°C Within ±1.0% (±40 digit) <sup>*1</sup>	
Absolute maximum input	-0.5 V, +15 V	
Insulation method	No insulation between each channel or the PLC.	
Occupied points	0 point (Dose not occupy of input and output points of the PLC.)	


<sup>\*1</sup> Digit indicates a digital value.

#### 3.7.2 Analog output specifications

Item	Specifications	
Analog output points	1 points (1 channels)	
Digital input	12 bit unsigned binary	
Analog output	0 to 10 V DC (Input resistance: 2k to 1MΩ)	
Device allocation	SD6180 (Output setting data of ch1)	
I/O characteristics, Maximum resolution	Digital input value	0 to 4000
	Maximum resolution	2.5 mV
Accuracy (Accuracy in respect to maximum analog output value)	When ambient temperature is 25 ±5°C Within ±0.5% (±20 digit) <sup>*1</sup> When ambient temperature is 0 to 55°C Within ±1.0% (±40 digit) <sup>*1</sup>	
Insulation method	No insulation between the PLC.	
Occupied points	0 point (Dose not occupy any input and output points of the PLC.)	

<sup>\*1</sup> Digit indicates a digital value.

#### 3.7.3 Example of analog input




V0+, ch□: □ represents the channel number

<sup>\*1</sup> Use 2-core shielded twisted pair cable for the analog input lines, and separate the analog input lines from other power lines or inductive lines.

<sup>\*2</sup> Make sure to short-circuit the "V0+" and "V-" terminals when channel is not used.

### 3.7.4 Example of analog output



<sup>\*1</sup> Use 2-core shielded twisted pair cable for the analog output lines, and separate the analog output lines from other power lines or inductive lines.

<sup>\*2</sup> Ground the shielded wire at one point on the signal receiving side.

### 3.7.5 Terminal block layouts

The terminals of the built-in analog input/output are arranged as follows:

	Signal	Application
Analog input	V1+	Channel 1 analog input (+)
	V2+	Channel 2 analog input (+)
	V-	Analog input (-) <sup>*1</sup>
Analog output	V+	Analog output (+)
	V-	Analog output (-) <sup>*1</sup>

<sup>\*1</sup> The V- terminals are connected internally.

### 3.8 Built-in Ethernet communication specifications and external wiring

As for the details on the built-in Ethernet communication specifications and external wiring, refer to the following manual.

→ Refer to MELSEC IQ-F FX5 Series User's Manual [Ethernet Communication].

#### 3.8.1 Communication specification

Item	Specification	
Data transmission speed	100Mbps/10Mbps	
Communication method	Full-duplex/Half-duplex	
Transmission method	Base band	
Maximum segment length	100 m	
Maximum number of nodes/connection	10BASE-T	Cascade connection maximum 4 stages <sup>*1</sup>
	100BASE-TX	Cascade connection maximum 2 stages <sup>*1</sup>
Protocol type	MELSOFT connection, SLMP (3E frames), Socket communication	
Number of simultaneously open connections allowed	MELSOFT connection + SLMP + Socket communication ≤ 8	
Insulation method	Pulse transformer	
Connector	RJ-45	

<sup>\*1</sup> The value indicates the number of connectable stages when a repeater hub is used.  
Contact the manufacturer of the switching hub for the number of connectable stages when using a switching hub.

#### 3.8.2 Wiring

For the wiring, refer to the following manual.

→ Refer to MELSEC IQ-F FX5 Series User's Manual [Ethernet Communication].

#### 3.8.3 Pin Configuration

The connector of the built-in Ethernet communication are arranged as follows:

Pin No.	Signal	Contents
1	TXD+	Transmit data (+)
2	TXD-	Transmit data (-)
3	RXD+	Receive data (+)
4	Not used	
5	Not used	
6	RXD-	Receive data (-)
7	Not used	
8	Not used	

#### Applicable cable

10BASE-T	Cable conforming to Ethernet standard practice: Category 3 or higher (STP cable)
100BASE-TX	Cable conforming to Ethernet standard practice: Category 5 or higher (STP cable)

A straight cable is used. A cross cable can also be used when using direct connection (simple connection) between a personal computer and the FX5U Series PLC.

### 3.9 Built-in RS-485 communication specifications and external wiring

#### 3.9.1 Communication specification

Item	Specification
Transmission standard	In conformance to RS-485/RS-422
Data transmission speed	Max. 115.2k bps
Communication method	Full-duplex/Half-duplex
Maximum total extension distance	50 m
Protocol type	MELSOFT connection, Non-protocol communication, MODBUS RTU, Inverter communication
Insulation method	No insulation between the PLC.
Terminal resistors	Built-in (OPEN/110 Ω/330 Ω)
Connection method	European terminal block

#### 3.9.2 Wiring

For the wiring, refer to the following manual.

→ Refer to MELSEC IQ-F FX5 Series User's Manual [Serial Communication].

→ Refer to MELSEC IQ-F FX5 Series User's Manual [MODBUS Communication].

#### 3.9.3 Terminal block layouts

The terminals of the built-in RS-485 communication are arranged as follows:

Signal name	Function
RDA	Receive data
RDB	
SDA	Send data
SDB	
SG	Signal ground


### 4. Terminal block layouts

For details on the terminal block layout, refer to the following manual.

→ Refer to MELSEC IQ-F FX5U Series User's Manual [Hardware].

#### Interpretation of partition

The partition of the output terminals (see following figure) indicates the range of the output connected to the same common.

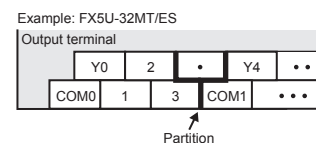

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

#### Warranty

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; opportunity loss or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

#### For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.
- This product has been manufactured under strict quality control. However when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

## MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN  
HIMEJI WORKS : 840, CHIYODA MACHI, HIMEJI, JAPAN