



REACH VGA Encoder ENC120

User Manual

V2.5
2012-01

Shenzhen Reach IT Co., Ltd. provides full technical supports for the customers. If you have any inquiries, please contact the local Reach office or directly contact the headquarters of the company.

Shenzhen Reach IT Co., Ltd.

Address: Unit 601, Block B, Kingdee Software Park, No. 2, Postal code:
Technology Southern No. 12 Rd. South District of 518057
Hi-Tech Industrial Park, Nanshan District, Shenzhen

Website: <http://www.szreach.com>

Tel.: 0755-86073600

Customer 4007160868

service hotline:

Customer 0755-86073689

service fax:

Copyright© Shenzhen Reach IT Co., Ltd. 2011. All rights reserved.

Any part of this document, including the text, image and graph, is the property of Shenzhen Reach IT Co., Ltd. No part of this document shall be copied in any means without the prior written consent of Shenzhen Reach IT Co., Ltd. Reach reserves the right to revise this document without any prior notice.

Reach provides warranty of limited liabilities for the software and hardware product. For any loss of the users caused by the design defect of the software and hardware, Reach will compensate the user with the amount up to the price specified in the product purchase contract.

Trademark Statement

, Reach, REACH,  and Reach Software are the trademarks of Shenzhen Reach IT Co., Ltd. Windows, Windows 95, Windows 98, Windows NT, Windows 2000, Windows 2003, Windows XP and Win7 are the trademarks of Microsoft. Other trademarks are the properties of their respective owners.

Note:

This user manual is compiled to ensure easy installation and configuration of the product. Please read carefully this manual before using the product, so that you can make best use of all its functions.

This manual is subject to update from time to time without prior notice. If you come

across any problem that cannot be solved according to the manual, please contact our technical department for solutions. Thank you.

Contents

I. Basic Information.....	5
1.1 Product Introduction	5
1.2 Product Parameters.....	5
1.3 Product View	6
1.4 Product Interface	6
1.5 Packing List	6
II. Product Configuration.....	8
2.1 Installation Illustration	8
2.2 Unit Startup.....	8
2.3 IP Address Viewing.....	8
2.4 Normal Startup Confirmation	8
2.5 Logging on Encoder Configuration Interface	9
2.6 System Setting	10
2.6.1 Set system language	10
2.6.2 Change password.....	11
2.6.3 Upgrade system.....	11
2.6.4 Change encoder IP address	11
2.7 Parameter Setting.....	12
2.7.1 Video setting	12
2.7.2 Screen adjustment.....	12
2.7.3 Audio setting	12
2.7.4 Caption setting.....	13

I. Basic Information

1.1 Product Introduction

The VGA encoder is the special hardware equipment developed by Shenzhen Reach Software Technology Co., Ltd for VGA signal coding and network transmission. It can be used together with the full range of Multimedia Record & Play Servers of Reach. The VGA encoder has VGA input and output interface and Ethernet interface to access the VGA signal and transmit the hardware-coded signal on the IP network. This product fills the industry blank. It can be widely used in the applications that require the acquisition, transmission, record and play of VGA signals, such as VGA signal acquisition of multimedia record & play system, VGA signal remote network transmission, two-way transmission of videoconference, and man-machine interface monitoring. The VGA encoder adopts DSP processing chip and embedded operating system, and features high stability and reliability.

1.2 Product Parameters

Hardware parameters

Outline dimensions: L x W x H = 240mm×170mm×45.5mm

Weight: 1.35kg

Environmental parameters

Relative humidity: 5%~95%

Operating temperature: -20℃ to 60 ℃

Electrical specifications

Operating voltage: DC12V /3A

Power consumption: 8W

Network interface

LAN: LAN interface connected to Intranet

1.3 Product View



Fig.1 REACH ENC120 VGA Encoder

1.4 Product Interface

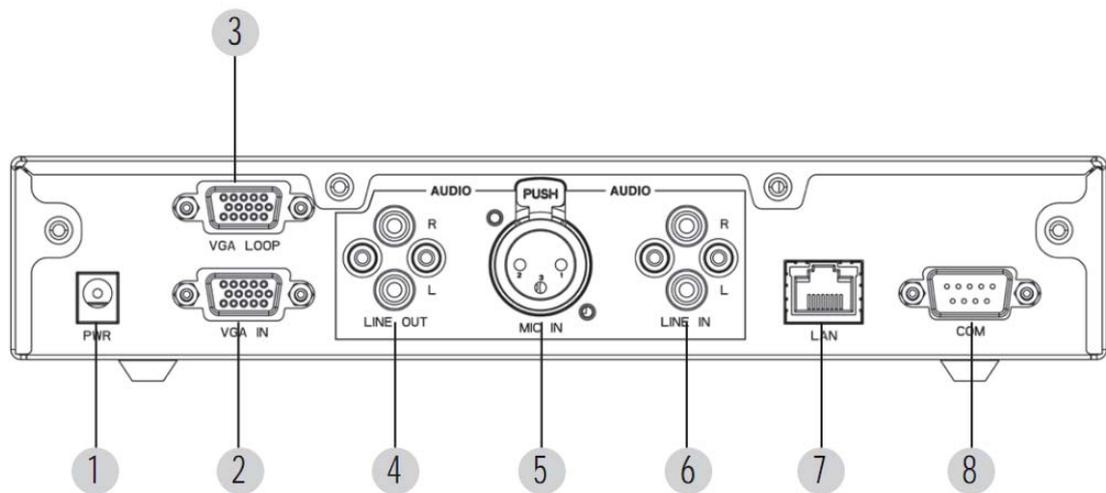


Fig.2 Interfaces of ENC120

- | | |
|----------------|----------------|
| 1 Power Input | 5 MIC In (XLR) |
| 2 VGA In | 6 Line In |
| 3 VGA Loop Out | 7 LAN |
| 4 Line Out | 8 COM (RS232) |

1.5 Packing List

SN	Name	Qty.	Description
1	ENC-120 encoder	1 set	VGA signal acquisition and coding equipment
2	Power adaptor	1 PCS	To supply power to encoder
3	Network cable	1 PCS	To connect LAN

4	VGA cable	1 PCS	To transmit VGA signal to the encoder
5	Video/audio cable	1 PCS	To transmit the audio signal to the encoder
6	Certificate of conformity	1 copy	

II. Product Configuration

2.1 Installation Illustration

Not available

2.2 Unit Startup

Check the power cable, and ensure that the power adaptor is properly and reliably connected to the unit.

When the power adaptor is connected to the encoder, the PWR LED on the panel will be on, indicating that the external power is connected, and the equipment has started operation.

2.3 IP Address Viewing

The default IP address of the encoder is a random address. You can view the IP address of the current encoder at the rolling information display field of the LCD panel. *(Note: For the convenience of illustration, assuming that the IP address of the encoder is 192.168.1.100, and the subnet mask is 255.255.255.0.)*

To ensure the normal network connection between your computer and the encoder, change the IP address of your computer to the same network segment of the encoder, e.g., 192.168.1.110, 255.255.255.0.

2.4 Normal Startup Confirmation

Before setting the IP address of the encoder, check if the encoder has been normally started. Open the command line mode window with the system tool. For instance, in the Windows system, click Start→run→command to open the command line window, and enter <ping 192.168.1.100> in the command line window, and then click Enter key. If the following message appears, it indicates that the encoder has been normally started.

```
C:\WINNT\system32\cmd.exe
C:\WINNT\system32>ping 192.168.1.100

Pinging 192.168.1.100 with 32 bytes of data:

Reply from 192.168.1.100: bytes=32 time<10ms TTL=64

Ping statistics for 192.168.1.100:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
```

2.5 Logging on Encoder Configuration Interface


The encoder has built-in WEB server. All the encoder configurations can be performed through the web browser (e.g., Internet Explorer). Enter 192.168.1.100 to the browser address field, and then the following log-on page will appear.



Enter user name: admin (default administrator user)

Enter password: admin (default administrator password) (Note: The default administrator account name of the system cannot be changed, but you can change the password according to the actual needs.)

Click “log on” button to enter the encoder management configuration page, as shown in the following figure:

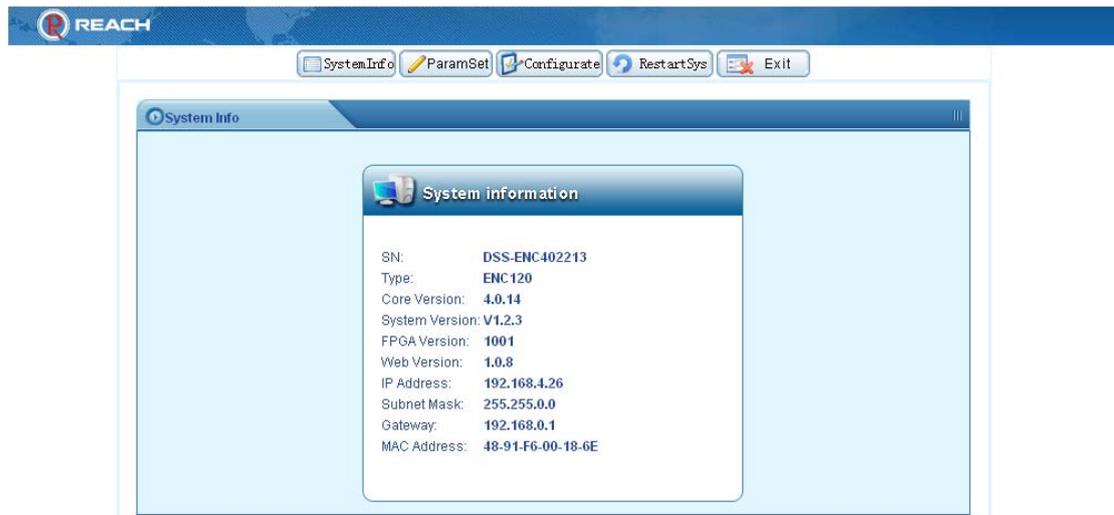

The encoder system configuration interface mainly includes: **system information, parameter setting, system setting, restart and exit.**

2.6 System Setting

Select the “system setting” menu, and then you can set the encoder system language, change the password, upgrade the system and change the encoder IP address.

2.6.1 Set system language



The system supports simplified Chinese interface and English interface. To set the system language, you need to select the corresponding language and then click “save”. The system will exit the log-on interface, and you need to log on the system again.

2.6.2 Change password

Change Password	
Password:	<input type="password" value="•••••"/>
New Password:	<input type="password"/>
Password Confirm:	<input type="password"/>
<input type="button" value="Save"/>	

Enter the old password, and then enter the new password, and click “save”.

2.6.3 Upgrade system

Update System	
Upgrade File:	<input type="text"/> <input type="button" value="Browse..."/>
<input type="button" value="Upload"/>	
Attention: 1.It takes some time to upload updated file, please do not make other operations while the file is uploading. 2.After uploaded a updated file, please restart the system to complete the upgrade operation.	

- (1) Prepare the upgrade package;
- (2) Click “browse” to locate the upgrade package file;
- (3) Click “upload”;
- (4) The encoder needs to restart after upgrade. Click  to restart the system. You can view the “system information” to check whether the system upgrade is successful or not.

2.6.4 Change encoder IP address

IP Address Modification	
IP Address:	<input type="text" value="192.168.23.3"/>
Subnet Mask:	<input type="text" value="255.255.0.0"/>
Gateway:	<input type="text" value="192.168.6.1"/>
<input type="button" value="Modify"/>	
Attention: 1. Please check the IP address carefully to avoid address conflict. 2. The encoder will restart automatically after the IP address is modified.	

- (1) Enter new IP address;
- (2) Click “change”;

(3) The encoder will restart automatically to complete the change.

2.7 Parameter Setting

Through the parameter setting, you can set the frame rate, code rate of the encoder to acquire the VGA signal, the recording quality, the coded image position as well as the caption adding function.

2.7.1 Video setting

Through the video setting, you can set the coding frame rate for the encoder to acquire the VGA signal and the image mode. The coding mode includes the fixed code rate mode and fixed quality mode. The users with low available network bandwidth are advised to adopt the fixed code rate mode, especially those with the activity of public network live broadcast. They can adjust the coding bandwidth to the appropriate range in the fixed code rate mode.

Video Setting	
Video Frame Rate:	5 (1~30)
Mode:	<input checked="" type="radio"/> Rate Mode: 1000 Kbps <input type="radio"/> Quality Mode: 10
<input type="button" value="Save"/>	

2.7.2 Screen adjustment

If the acquired image is slanting, you can correct it through screen adjustment. As shown in the following figure, you can adjust the screen position through the up, down,



left and right buttons in the . You can set the adjustment range by selecting the fine tuning proportion.

Screen Adjust			
			
			Speed: <input type="radio"/> Low <input checked="" type="radio"/> Medium <input type="radio"/> High
			

2.7.3 Audio setting

Through the audio setting, you can set the sampling rate and coding frame rate for the encoder to acquire the audio signal, and select the audio acquisition interface

according to the actual situation. This product currently supports the acquisition of MIC audio signal and linear audio signal. The users with low available network bandwidth are advised to adopt low audio code rate, especially those with the activity of public network live broadcast. They can adjust the audio code rate to the appropriate range according to the actual needs.

Audio Setting			
Sampling Frequency:	48 <input type="button" value="v"/> KHz	Bandwidth:	64 <input type="button" value="v"/> Kbps
Input:	<input type="radio"/> Mic <input checked="" type="radio"/> Line		
<input type="button" value="Save"/>			

2.7.4 Caption setting

Through the caption setting, you can set captions in the image acquired by the encoder. The caption position can be set through the horizontal coordinate and vertical coordinate parameters. To ensure the consistence between the image acquisition time and local time, you can synchronize the time through



Subtitles Setting			
Abscissa:	<input type="text" value="0"/> (0~1000)	Ordinate:	<input type="text" value="0"/> (0~744)
Content:	<input type="text"/>	<input checked="" type="checkbox"/> Display Time	<input type="button" value="Synchronize"/>
<input type="button" value="OK"/>			

