

CCTV Tester

User's Manual



Table of Contents

1, Safety Information	2
1.1 Precaution before using the tester	2
1.2 Precautions when using the tester	2
1.3 Precautions for battery charging and using	2
2, Introduction:	2
2.1 Features and function	2
2.2 Standard items	3
2.3 Function of each part	4
2.4 Specification	6
3, Operation Introduction	7
3.1 Power and battery	7
3.2 Video test	7
3.3 PTZ test	8
3.4 System information menu	9
3.5 UTP cable test	10
3.6 Video generating	11
3.7 RS485 data test	12
4, Warranty	13
4.1 Warranty items	13
4.2 Warranty exception	13
4.3 Complemented items	13

1, Safety Information

1.1 Precaution before using the tester

- A. Make sure to read the user's manual before using the product.
- B. Make sure to check the input and output range of voltage or current at every input and output ports before connecting, so that the system cannot be overloaded.
- C. The following operational environment should be maintained constantly:
 - Temperature: -30°C--- 70°C
 - Relative humidity: 30% ~ 90%
 - Recharging voltage: 9V ---12V

1.2 Precautions when using the tester

- A. Do not use the tester in damp humidity or leaking gas environments.
- B. Do not touch the tester with wet hands.
- C. Be mindful not to shock or shake the tester while in use to avoid damage.
- D. Avoid the places of strong magnetism or electric wave, which could cause incorrect measuring.
- E. Be careful not to expose the ports or joints to dirt or liquid.
- F. Do not disassemble the tester.

1.3 Precautions for battery charging and using

- A. Use only original chargeable battery with the tester, when charge the batteries, please use the original power adapter.
- B. Make sure not to disorient the polarization of batteries.
- C. Do not short-circuit or disassemble batteries.

2, Introduction:

2.1 Features and function

A. Video test

The video signal and the quality of picture can be tested.

B. PTZ controlling

It has the basic operational test of PTZ products, function include pan/tilt, zoom in/out, preset setting and operation, speed adjustment etc; support multi-protocol and baud rate, communication via RS-232, RS422 simplex and RS485 port.

RS485 protocol include: Pelco D,P, Samsung, Panasonic, Molyntx. Additional Protocols may be added as per customer requests.

Baud rate include: 2400, 4800, 9600, 19200.

C. UTP cable test

The wiring condition (disconnected, short of UTP cable) can be tested and show in the screen clearly.

D. Video signal generating

It can output Green, white Black and Blue screen to allow technician to inspect video monitor or DVR. The generating signal support PAL or NTSC (don't support both meanwhile) format.


E. RS485 data test




It can test the RS485 data sent from controlling device, display the hexadecimal data content for engineer to analyze.

2.2 Standard items

Item	Quantity
CCTV tester	1
3.6V battery	2
UTP cable tester	1
Power adapter	1
RS485 connector	1
BNC connect cable	1
User's manual	1

2.3 Function of each part

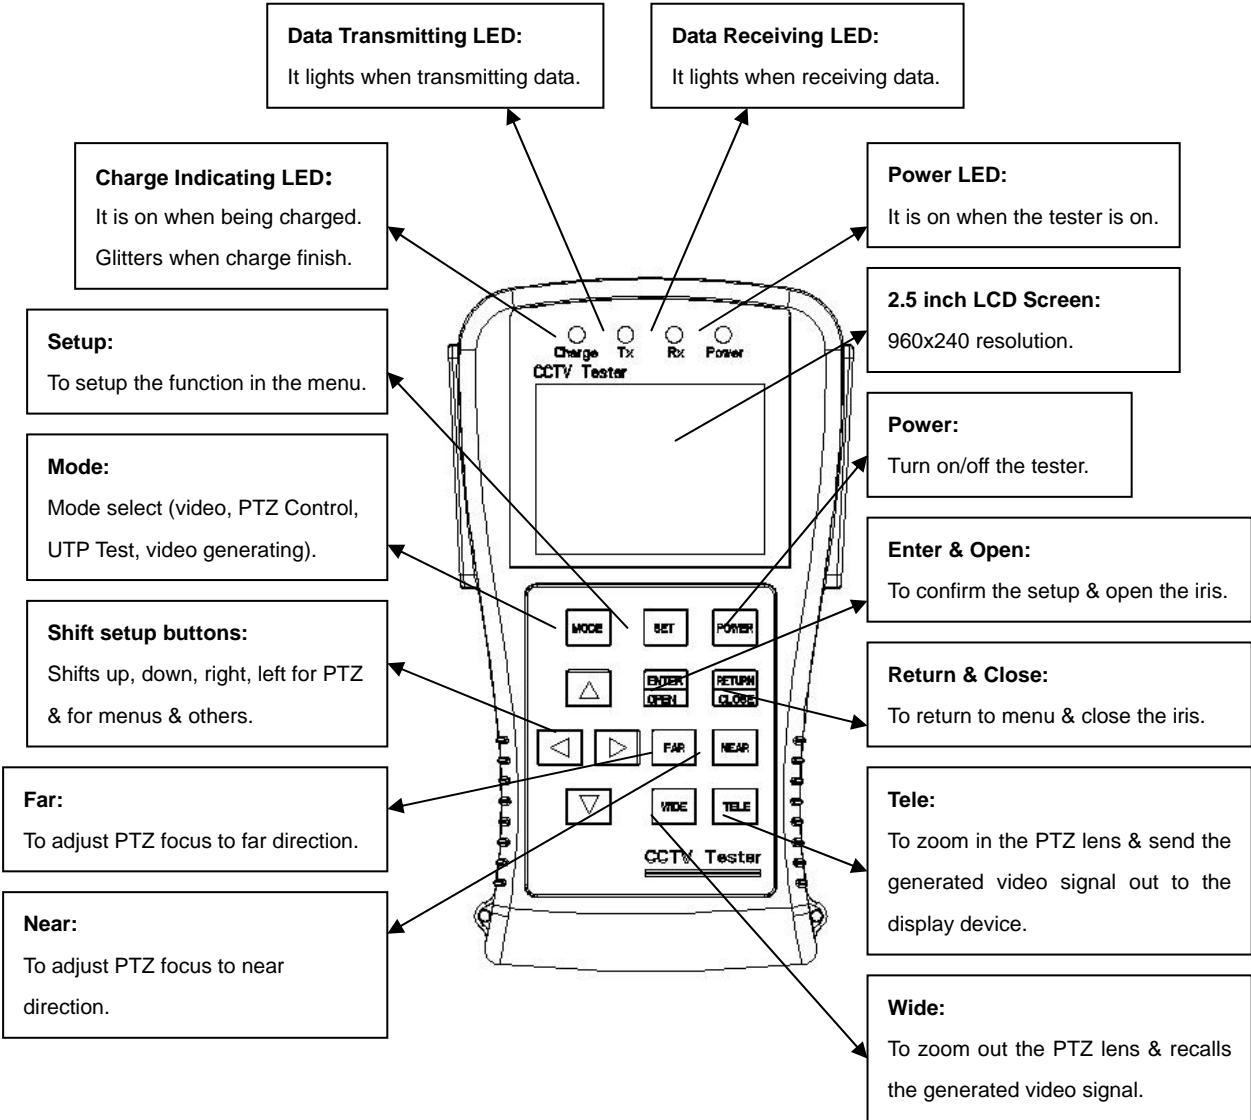

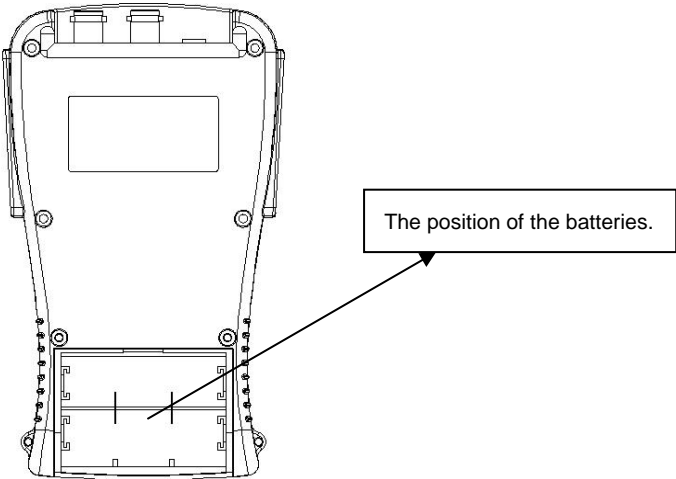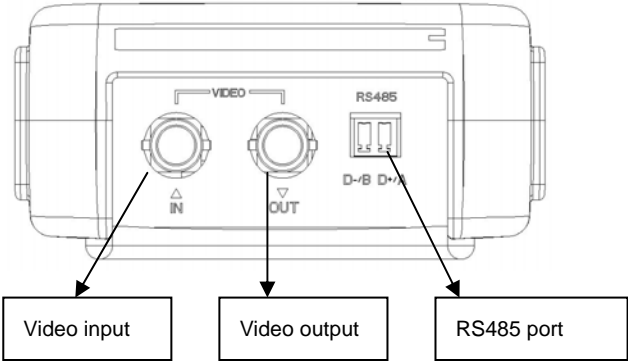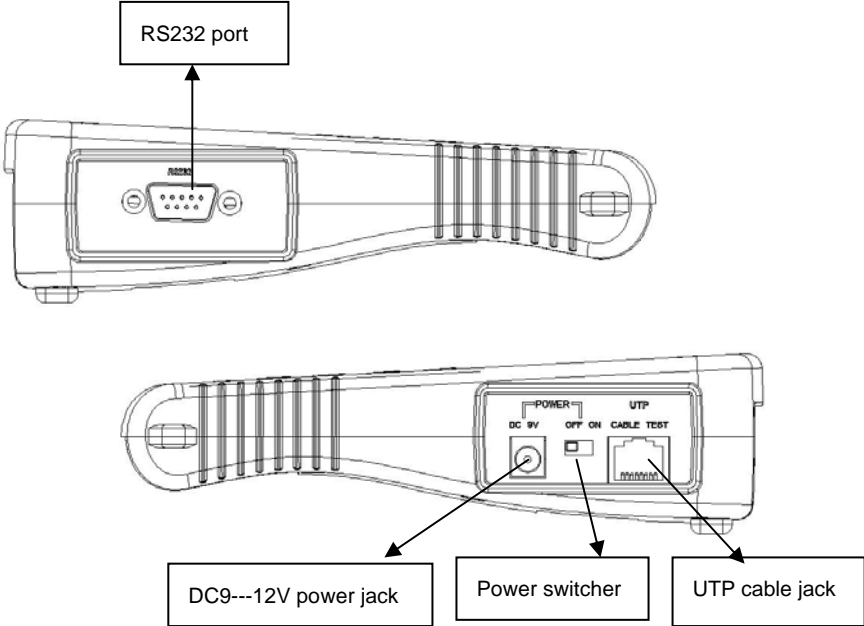


2.4 Specification

Model	CCTV Tester
Video Test	
Signal Mode	NTSC/PAL automatically suitable
Display	2.5 inch LCD screen,960 x 240 resolution
Video Input	1 channel BNC
Video Output	1 channel BNC
PTZ Controlling	
Communication	RS232, RS422 simplex and RS485
Protocol	Pelco D, P; Samsung, Panasonic or customized
Baud Rate	2400,4800,9600,19200
Other Function	
Signal Generating	Output 1 channel video signal for testing monitor
UTP Cable Test	Test UTP cable connection state and display in the screen
RS485 Data Test	Test the RS485 data sent from controlling device
Operation	English OSD menu
Power	
Power Adapter	DC9V---12V
Battery	2 pcs 18490 standard batteries 3.6V,capacity 2800mAh
Rechargeable	5 hours recharging time, work for 5 hours
Low Consumption	Sleeping mode, display battery power state
Other Parameters	
Work Temperature	-30°C---+70°C
Work Humidity	30%-90%
Dimension	170mm x 99mm x 48mm


3, Operation Introduction

3.1 Power and battery

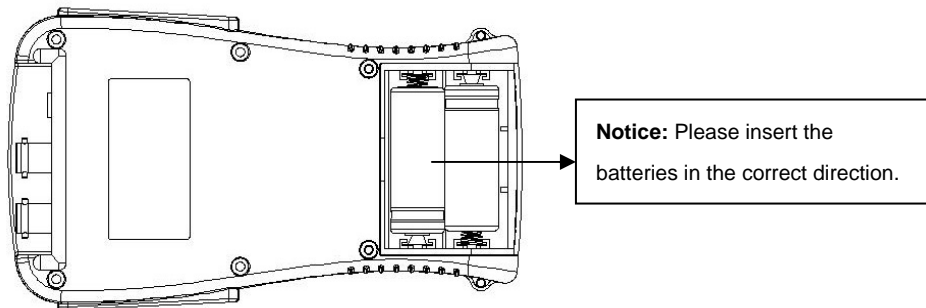

- A. The power slide switch is located at the side of the tester. Turn the power slide switch on to power on the tester, to press the **Power** more than 3 seconds to make it turn into sleeping mode.
- B. Press the **Power** more than 3 seconds to turn on the tester after it turning to sleeping mode.
- C. Press the **Power** less than 1 second to shut off the OSD menu.
- D. Turn the power slide switch off to power off the tester.
- E. The batteries should be plugged in over 5 hours for full charge, when charged the **Charge Indicating LED** will on.
- F. After full charging, the **Charge Indicating LED** light will glitter and the charging work can stop automatically.
- G. The charged batteries can operate for 5 hours or more.
- H. When the battery indicator in system information menu shows 25 (the status number includes 100, 90, 75, 50, 25, 5), please recharge it for use.
- I. The tester can be used when it is being charged.


3.2 Video test

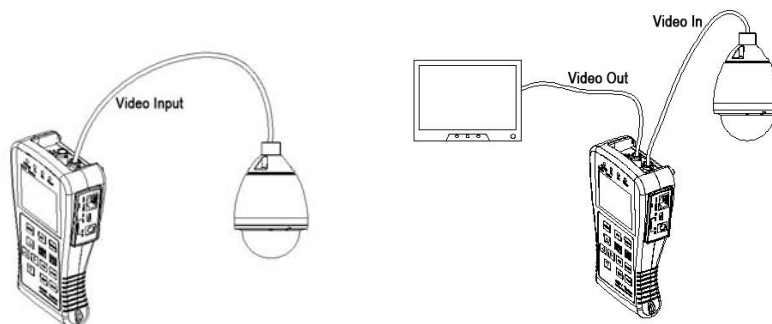


- A. Connect the output terminal of video output system to the video input BNC of tester, turn on the tester, the video can be display on the screen.
- B. Connect the video output BNC of tester to the video input of other display device, it can display the video signal generated by the tester or looped by tester.

3.3 PTZ test

A. Connection

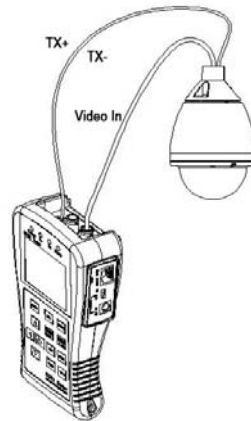

- Connect the tester with the PTZ camera as the picture shows.
- When the tester is on, it will show the PTZ test menu as follows:

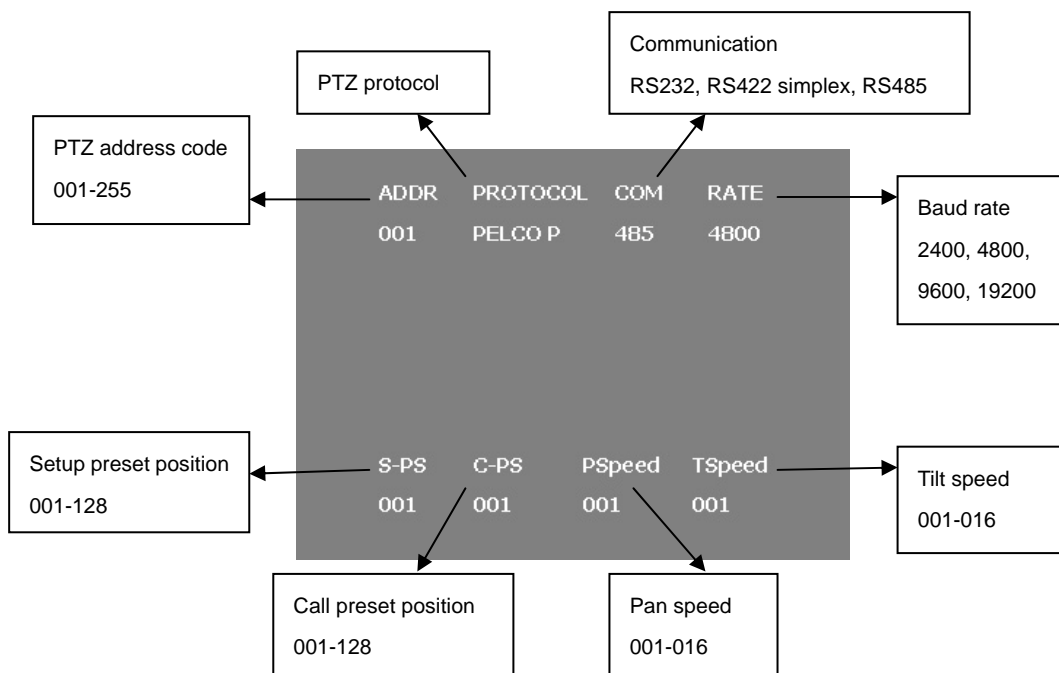

B. Operation setup

- Press **Set** to start the setup operation and switch between the 1st line and the 2nd

line in menu.

- Press **Left** and **Right** to switch the optional item in the same line.
- Press **Up** and **Down** to change and select the parameter in each optional item.
- Press **Enter** to confirm the setup operation.
- Press **Return** to finish the setup operation and back to menu.


C. PTZ controlling

When connect to the PTZ camera, the video can be displayed in the screen, after setup the protocol, baud rate and the address correctly, user can control the PTZ camera in the below method:

- Press **Up/Down/Left/Right** to pan tilt to control the camera.
- Press **Open/Close** to control the iris.
- Press **Far/Near** to adjust the focus manually.
- Press **Wide/Tele** to zoom in/out the camera lens.

3.4 System information menu


A. Press **Mode** to switch to the system information menu as follows:

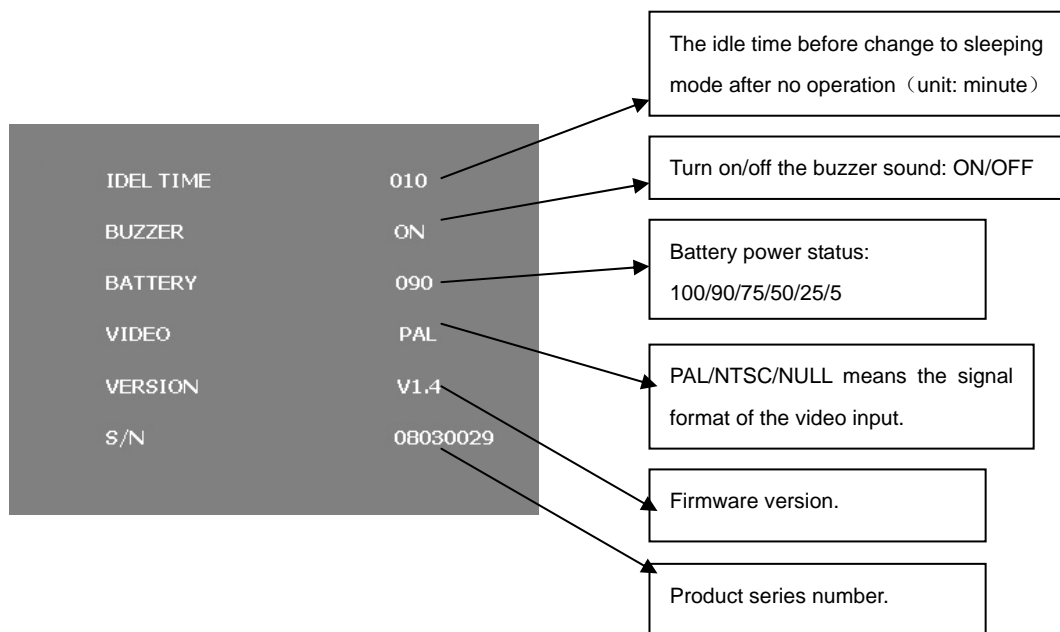

- B. Press **Set** to start the setup operation.
- C. Press **Up/Down** to select the optional items (just available for IDLE TIME and BUZZER).
- D. Press **Left/Right** to change the optional information.
- E. Press **Enter** to confirm the setup operation.
- F. Press **Return** to finish the setup operation and back to menu.

3.5 UTP cable test

A. Connect the tester to the UTP cable tester as the picture shows:

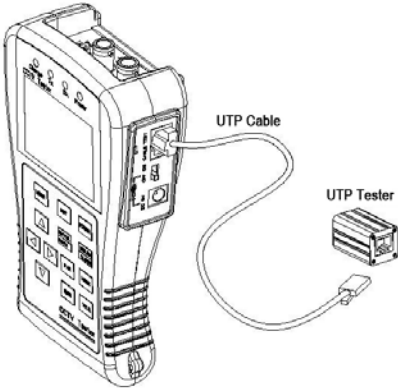

B. Press **Mode** to switch to video UTP cable test menu.

Test side sequence Terminal side sequence Terminal part sequence (Double time check)

UTP Cable Test

1	---	3	---	3
2	---	6	---	6
3	---	1	---	1
4	---	0	---	0
5	---	0	---	0
6	---	2	---	2
7	---	7	---	7
8	---	8	---	8

"0" means disconnection


If there are 2 lines shows "0" state, it maybe means:
1, both of them are disconnection.
2, the 2 lines are short connected to each other.

C. Press **Set** to start the test, UTP cable information will be displayed in the screen.


D. User can estimate the UTP cable connection situation from the information.

3.6 Video generating

A. Connect the tester to the displayer device as the picture shows:

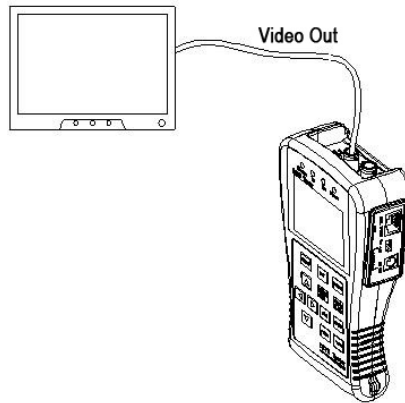

B. Press **Mode** to switch to video generating menu as follows:

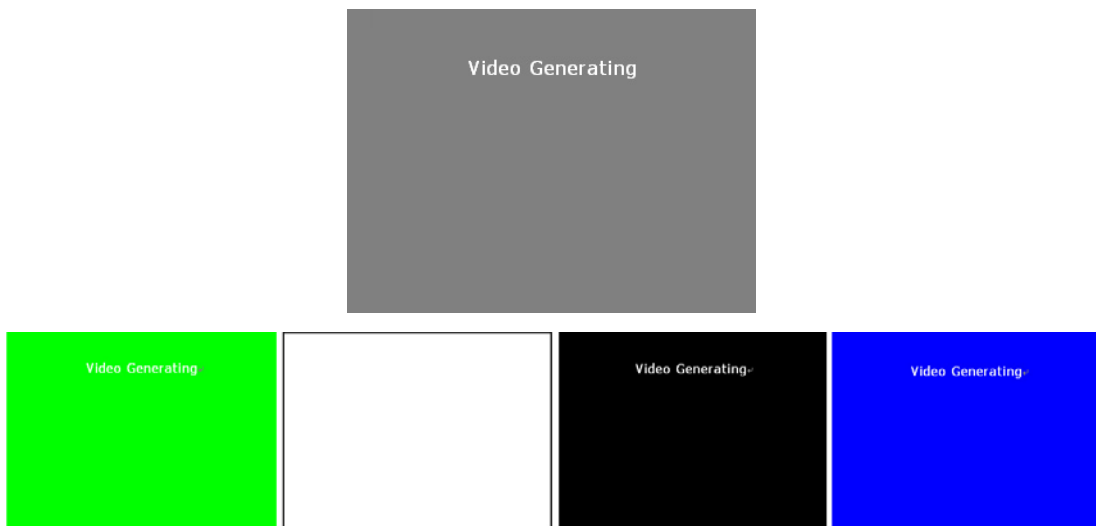


C. Operation setup

- Press the **Mode** to switch to the video generating mode
- Press **Set** to switch the video generating signal: Green, White, Black and Blue.
- Press **Tele** to send the generated video signal to the display device.
- Press **Wide** to recall the generated video signal.
- Press **Return** to finish the video generating operation.

(Notice: If didn't press **Return** to finish the video generating operation mode, the Tester will couldn't be switch to other function mode.)

3.7 RS485 data test

A. Connect the tester to the controlling device as the picture shows:

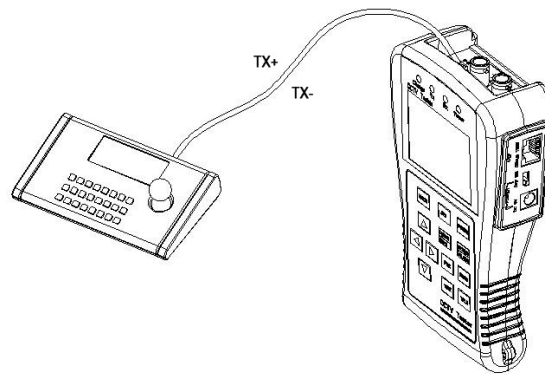


B. Press **Mode** to switch to RS485 data test menu as follows:



C. Press **Set** to start the setup of baud rate.

D. Press **Up/Down** to select the tester's baud rate, make it same with the controlling device's. baud rate in using.

E. Make the controlling device transfer the RS485 data to the tester, the hexadecimal signal data will displayed in the screen as follows, engineer can analyze the data to know if the controlling device work with the correct protocol.

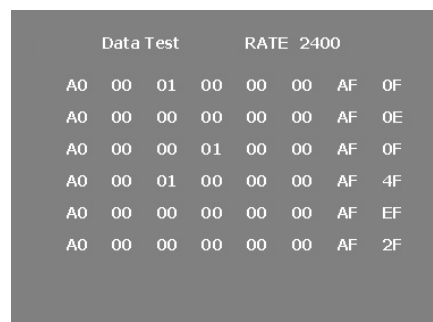

4, Warranty

4.1 Warranty items

Since the delivery day:

- 1) Exchanging service within 7 days from the receiving day, we responsible for the freight charge (battery exchanging service within 90 days from the receiving day).
- 2) Repairing service within 2 years, change accessories and repair for free, customers should responsible for the freight charge (repairing service don't include battery).
- 3) We provide whole life repairing service for our products with proper charge, customers should responsible for the freight charge.

4.2 Warranty exception

We provide repairing service with proper charge, customers responsible for the freight charge

- 1) Damage caused by abuse, unreasonable use, mistreatment, or neglect.
- 2) Damage caused by modification or repair not authorized by our company, working in hostile environments, or natural disaster.
- 3) Damage caused by improper or improperly used packaging, or other devices work in the same system.

4.3 Complemented items

- 1) Company is not responsible for other assurance and other derivative from capital loss: The product and the user guides are not assured for particular users and some special purpose of use.
- 2) If the products returning for exchanging was damaged, modified or miss accessory, we will charge the proper payment.
- 3) If the components are no longer produced during the warranty-limited period, company will make a decision to replace similar products at no charge.
- 4) Don't offer exchanging service for special design products by customers.