#### **ENGINE SECTION 2**

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

FUEL INJECTION (FUEL SYSTEMS)	FU(H4DOTC)
EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)	EC(H4DOTC)
INTAKE (INDUCTION)	IN(H4DOTC)
MECHANICAL	ME(H4DOTC)
EXHAUST	EX(H4DOTC)
COOLING	CO(H4DOTC)
LUBRICATION	LU(H4DOTC)
SPEED CONTROL SYSTEMS	SP(H4DOTC)
IGNITION	IG(H4DOTC)
STARTING/CHARGING SYSTEMS	SC(H4DOTC)
ENGINE (DIAGNOSTICS)	EN(H4DOTC)(diag)

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

**FUJI HEAVY INDUSTRIES LTD.** 

G2320GE3

# **ENGINE (DIAGNOSTICS)**

# EN(H4DOTC)(diag)

		Page
1.	Basic Diagnostic Procedure	2
2.	Check List for Interview	3
3.	General Description	5
4.	Electrical Component Location	8
5.	Engine Control Module (ECM) I/O Signal	15
6.	Engine Condition Data	19
7.	Data Link Connector	20
8.	Subaru Select Monitor	21
9.	Read Diagnostic Trouble Code (DTC)	27
10.	Inspection Mode	28
11.	Clear Memory Mode	30
12.	Compulsory Valve Operation Check Mode	31
13.	Malfunction Indicator Light	
14.	Diagnostics for Engine Starting Failure	
15.	List of Diagnostic Trouble Code (DTC)	55
16.	Diagnostic Procedure with Diagnostic Trouble Code (DTC)	60
17.	General Diagnostic Table	202

### 1. Basic Diagnostic Procedure

### A: PROCEDURE

#### 1. ENGINE

	Step	Check	Yes	No
1	CHECK ENGINE START FAILURE.  1) Ask the customer when and how the trouble occurred using the interview check list. <ref. check="" check,="" en(h4dotc)(diag)-3,="" for="" interview.="" list="" to="">  2) Start the engine.</ref.>	Does the engine start?	Go to step 2.	Inspection using "Diagnostics for Engine Starting Failure". <ref. )-42,="" diagnostics="" en(h4dotc)(diag="" engine="" failure.="" for="" ing="" start-="" to=""></ref.>
2	CHECK ILLUMINATION OF MALFUNCTION INDICATOR LIGHT.	Does malfunction indicator light illuminate?	Go to step 3.	Inspection using "General Diagnos- tic Table". <ref. to<br="">EN(H4DOTC)(diag )-202, General Diagnostic Table.&gt;</ref.>
3	CHECK INDICATION OF DTC ON SCREEN.  1) Turn the ignition switch to OFF.  2) Connect the Subaru Select Monitor to data link connector.  3) Turn the ignition switch to ON, and the Subaru Select Monitor switch to ON.  4) Read DTC on Subaru Select Monitor.	Is DTC displayed on the Sub- aru Select Monitor?	Record the DTC. Repair the trouble cause. <ref. (dtc).="" )-55,="" code="" diag-="" en(h4dotc)(diag="" list="" nostic="" of="" to="" trouble=""> Go to step 4.</ref.>	Repair the related parts.  NOTE: If DTC is not shown on display although the malfunction indicator light illuminates, perform the diagnostics for malfunction indicator light circuit or combination meter. <ref. en(h4dotc)(diag)-33,="" indicator="" light.="" malfunction="" to=""></ref.>
4	PERFORM THE DIAGNOSIS.  1) Perform clear memory mode. <ref. clear="" en(h4dotc)(diag)-30,="" memory="" mode.="" to=""> 2) Perform the inspection mode. <ref. en(h4dotc)(diag)-28,="" inspection="" mode.="" to=""></ref.></ref.>	Is DTC displayed on the Sub- aru Select Monitor?	Check on "Diag- nostic Chart with Diagnostic Trou- ble Code (DTC)" <ref. to<br="">EN(H4DOTC)(diag )-60, Diagnostic Procedure with Diagnostic Trou- ble Code (DTC).&gt;</ref.>	Finish the diagnosis.

### 2. Check List for Interview

### A: CHECK

#### 1. CHECK LIST No. 1

Check the following items when problem has occurred.

NOTE:

Use copies of this page for interviewing customers.

Customer's name		Engine No.	
Date of sale		Fuel brand	
Date of repair		Odomotov voodino	km
V.I.N.		Odometer reading	miles
Weather	☐ Fine ☐ Cloudy ☐ Rainy ☐ Snowy ☐ Various/Others:		
Ambient air temperature	°C (°F)		
	☐ Hot☐ Warm☐ Cool☐ Cold		
Place	☐ Highway ☐ Suburbs ☐ Inner city ☐ Uphill ☐ Downhill ☐ Rough road ☐ Others:		
Engine temperature	☐ Cold ☐ Warming-up ☐ After warming-up ☐ Any temperature ☐ Others:		
Engine speed	rpm		
Vehicle speed	km/h (MPH)		
Driving conditions	<ul> <li>□ Not affected</li> <li>□ At starting</li> <li>□ While idling</li> <li>□ At racing</li> <li>□ While accelerating</li> <li>□ While cruising</li> <li>□ While decelerating</li> <li>□ While turning (RH/LH)</li> </ul>		
Headlight	□ ON / □ OFF	Rear defogger	□ ON / □ OFF
Blower	□ ON / □ OFF	Audio	□ ON / □ OFF
A/C compressor	□ ON / □ OFF	Car phone	□ ON / □ OFF
Radiator fan	□ ON / □ OFF		
Front wiper	□ ON / □ OFF		
Rear wiper	□ ON / □ OFF		

#### 2. CHECK LIST No. 2

Check the following items about the vehicle's state when malfunction indicator light turns on.

NOTE:

Use copies of this page for interviewing customers.

a) Other warning lights or indicators turn on. □ Yes / □ No
□ Low fuel warning light
☐ Charge indicator light
☐ AT diagnostic indicator light
□ ABS warning light
☐ Oil pressure indicator light
b) Fuel level
Lack of gasoline: ☐ Yes / ☐ No
Indicator position of fuel gauge:
Experienced running out of fuel: □ Yes / □ No
c) Intentional connecting or disconnecting of harness connectors or spark plug cords: ☐ Yes / ☐ No
What:
d) Intentional connecting or disconnecting of hoses: □ Yes / □ No
• What:
e) Installing of other parts except genuine parts:   Yes /   No
What:
Where:
f) Occurrence of noise: ☐ Yes / ☐ No
From where:
What kind:
g) Occurrence of smell:  \(\mathref{\Pi}\) Yes / \(\mathref{\Pi}\) No
From where:
What kind:
h) Intrusion of water into engine compartment or passenger compartment:   Yes /   No
i) Troubles occurred
☐ Engine does not start.
☐ Engine stalls during idling.
☐ Engine stalls while driving.
☐ Engine speed decreases.
☐ Engine speed does not decrease.
□ Rough idling
□ Poor acceleration
□ Back fire
□ After fire
□ Does not shift.
□ Excessive shift shock

# 3. General Description A: CAUTION

1) Airbag system wiring harness is routed near the ECM, main relay and fuel pump relay.

#### **CAUTION:**

- All airbag system wiring harnesses and connectors are colored yellow. Do not use the electrical test equipment on these circuits.
- Be careful not to damage the airbag system wiring harness when servicing the ECM, TCM, main relay and fuel pump relay.
- 2) Never connect the battery in reverse polarity. The ECM will be destroyed instantly.
- The fuel injector and other part will be damaged.
- 3) Do not disconnect the battery terminals while the engine is running.
- A large counter electromotive force will be generated in the generator, and this voltage may damage electronic parts such as ECM, etc.
- 4) Before disconnecting the connectors of each sensor and the ECM, be sure to turn the ignition switch to OFF.
- 5) Poor contact has been identified as a primary cause of this problem. Measure the voltage or resistance of individual sensor or all electrical control modules using a tapered pin with a diameter of less than 0.64 mm (0.025 in). Do not insert the pin more than 5 mm (0.20 in) into the part.
- 6) Remove the ECM from the located position after disconnecting two cables on battery.

Otherwise, the ECM may be damaged.

#### **CAUTION:**


When replacing the ECM, be careful not to use the wrong spec. ECM to avoid any damage on the fuel injection system.

#### NOTE:

Immobilizer system must be registered when installing the ECM of the model with immobilizer. For doing so, all ignition keys and ID cards should be prepared. Refer to "REGISTRATION MANUAL FOR IMMOBILIZER".


7) Connectors to each sensor in the engine compartment and the harness connectors on the engine side and body side are all designed to be waterproof. However, it is still necessary to take care not to allow water to get into the connectors when washing the vehicle, or when servicing the vehicle on a rainy day.

8) Use ECM mounting stud bolts as the grounding point to the body when measuring voltage and resistance inside the passenger compartment.

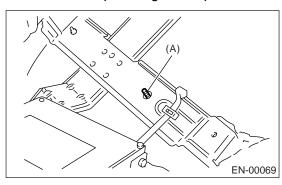

(A) Stud bolt

9) Use engine grounding terminal or engine proper as the grounding point to the body when measuring voltage and resistance in the engine compartment.

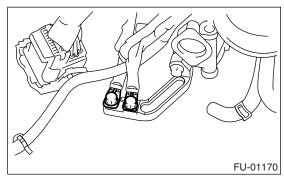

- 10) Every MFI-related part is a precision part. Do not drop them.
- 11) Observe the following cautions when installing a radio in MFI equipped models.

#### **CAUTION:**

- The antenna must be kept as far apart as possible from the control unit. (The ECM is located under the steering column, inside of the instrument panel lower trim panel.)
- The antenna feeder must be placed as far apart as possible from the ECM and MFI harness.
- Carefully adjust the antenna for correct matching.
- When mounting a large power type radio, pay special attention to the three items above mentioned.
- Incorrect installation of the radio may affect the operation of the ECM.
- 12) Before disconnecting the fuel hose, disconnect the fuel pump connector and crank the engine for more than five seconds to release pressure in the fuel system. If engine starts during this operation, run it until it stops.

- 13) Diagnostics should be conducted by rotating with simple, easy operations and proceeding to complicated, difficult operations. The most important thing in diagnostics is to understand the customer's complaint, and distinguish between the three causes.
- 14) On the model with ABS, when performing driving test in jacked-up or lifted-up position, sometimes the warning light may be lit, but this is not a malfunction of the system. The reason for this is the speed difference between the front and rear wheels. After diagnosis of engine control system, perform the ABS memory clearance procedure of self-diagnosis function.

#### **B: INSPECTION**

Before performing diagnostics, check the following items which might affect engine problems:

#### 1. BATTERY

1) Measure battery voltage and specific gravity of electrolyte.


Standard voltage: 12 V

Specific gravity: Above 1.260

2) Check the condition of the main and other fuses, and harnesses and connectors. Also check for proper grounding.

#### 2. ENGINE GROUND

Make sure the engine grounding terminal is properly connected to the engine.

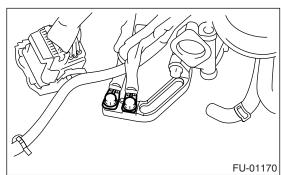

#### 3. SELF-DIAGNOSIS FUNCTION

When detecting a malfunction by self-diagnosis function on ECM, malfunction indicator light illuminates and malfunction occurrence is displayed. Calling the self-diagnosis result is performed by Subaru Select Monitor.

### **C: PREPARATION TOOL**


ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
ST24082AA230	24082AA230	CARTRIDGE	Troubleshooting for electrical system.
ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for electrical system.  • English: 22771AA030 (Without printer)  • German: 22771AA070 (Without printer)  • French: 22771AA080 (Without printer)  • Spanish: 22771AA090 (Without printer)

### 4. Electrical Component Location


#### A: LOCATION

#### 1. ENGINE


· Control module

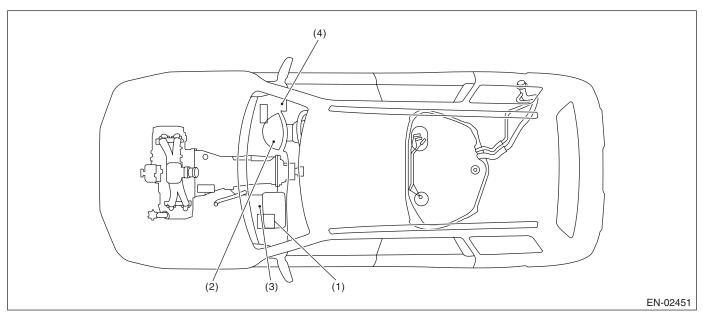


- (1) Engine control module (ECM)
- (2) Malfunction indicator light
- (3) Test mode connector
- (4) Data link connector

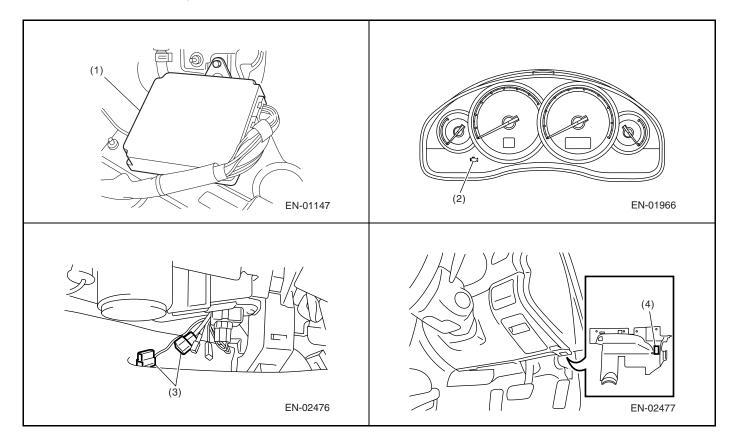


#### Sensor

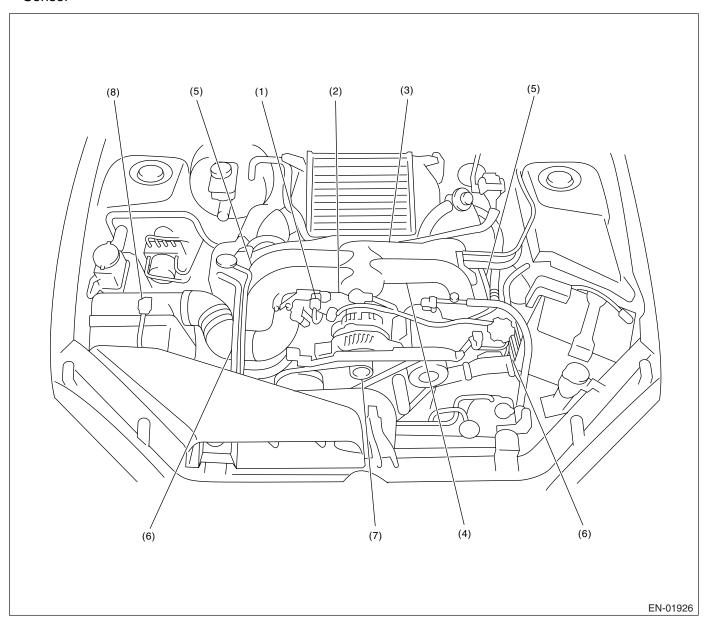


- (1) Manifold absolute pressure sensor
- (2) Engine coolant temperature sen-
- (3) Electronic throttle control
- (4) Knock sensor
- (5) Intake camshaft position sensor
- (6) Exhaust camshaft position sensor
- (7) Crankshaft position sensor
- (8) Mass air flow and intake air temperature sensor

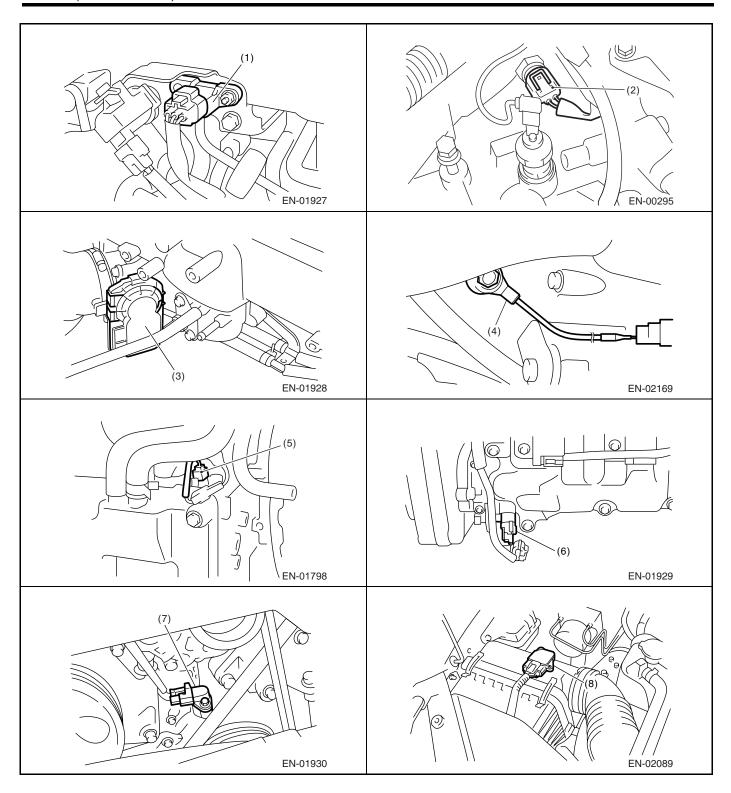


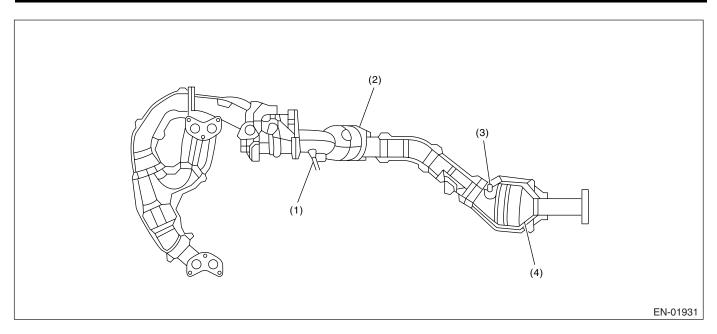

- (1) Front oxygen (A/F) sensor
- (2) Front catalytic converter
- (3) Rear oxygen sensor
- (4) Rear catalytic converter

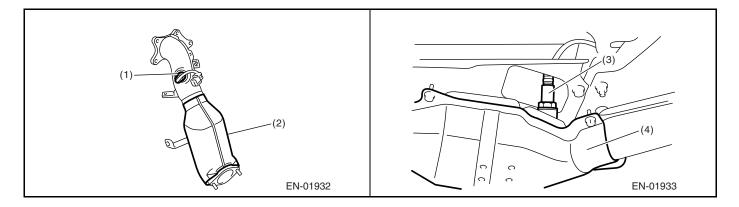



· Solenoid valve, actuator, emission control system parts and ignition system parts

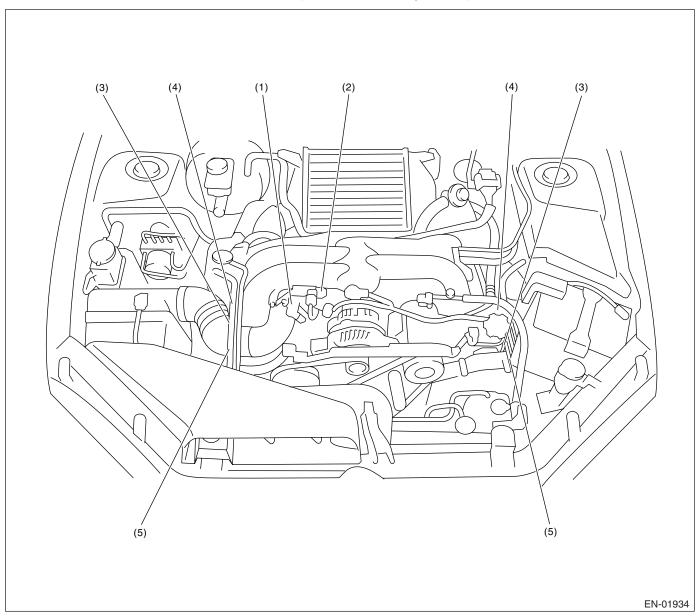

- (1) Wastegate control solenoid valve
- (2) Purge control solenoid valve
- (3) Ignition coil


- (4) Intake oil flow control solenoid valve
- (5) Exhaust oil flow control solenoid valve

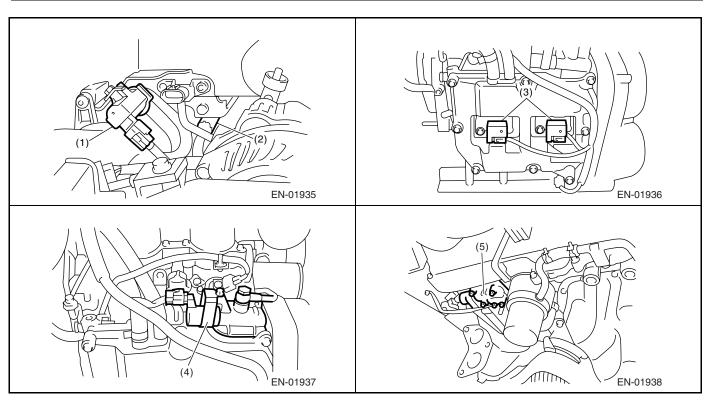

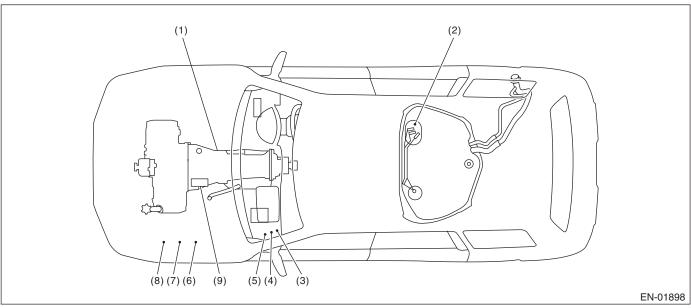


- (1) Inhibitor switch
- (2) Fuel pump
- (3) Main relay

- (4) Fuel pump relay
- (5) Electronic throttle control relay
- (6) Radiator main fan relay 1
- (7) Radiator sub fan relay
- (8) Radiator main fan relay 2
- (9) Starter

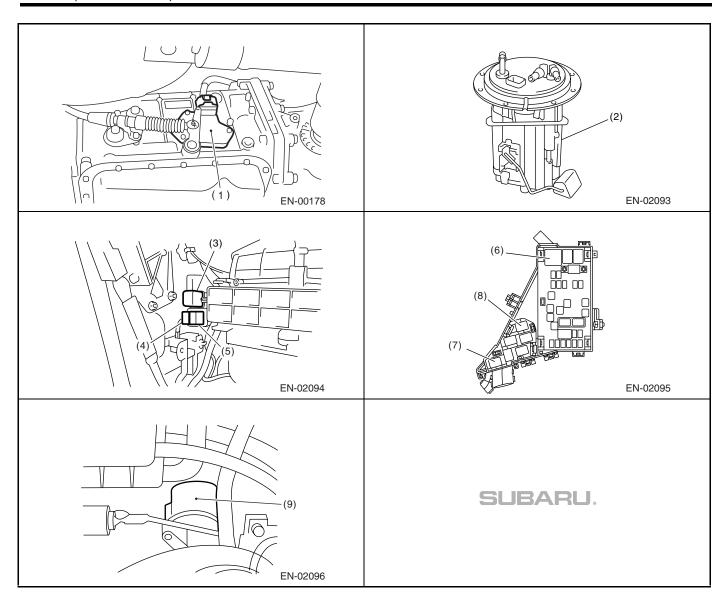

### 5. Engine Control Module (ECM) I/O Signal

### A: ELECTRICAL SPECIFICATION

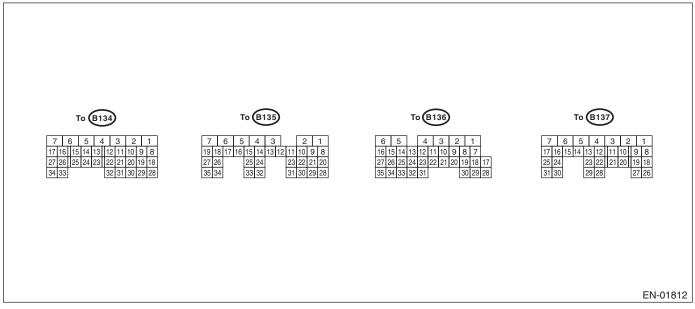

Description		Con-	Termi-	Signa	al (V)	
		nector No.	nal No.	Ignition SW ON (engine OFF)	Engine ON (idling)	Note
Crank-	Signal (+)	B135	10	0	-7 <b>—</b> +7	Waveform
shaft posi-	Signal (-)	B135	22	0	0	_
tion sensor	Shield	B135	31	0	0	_
Door over	Signal	B137	25	0	0 — 0.9	_
Rear oxy- gen sen-	Shield	B137	31	0	0	_
sor	GND (sensor)	B136	35	0	0	_
Front oxy-	Signal 1	B134	3	_	_	Waveform
gen (A/F) sensor heater	Signal 2	B134	2	_	_	Waveform
Rear oxygen sensor heater signal		B135	2	0 — 13	_	Waveform
Engine	Signal	B136	14	1.0 — 1.4	1.0 — 1.4	After engine is warmed-up.
coolant tempera- ture sen- sor	GND (sensor)	B136	35	0	0	After engine is warmed-up.
۸: <b>دا</b> م	Signal	B136	23	_	0.3 — 4.5	_
Air flow sensor	Shield	B136	32	0	0	_
0011001	GND	B136	31	0	0	_
Intake air temperature sensor signal		B136	13	0.3 — 4.6	0.3 — 4.6	_
Wastegate control sole- noid valve		B134	32	0 or 10 — 13	0 or 13 — 14	Waveform
Starter switch		B137	8	0	0	Cranking: 8 — 14
A/C switch		B137	17	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	_
Ignition swit	ch	B137	14	10 — 13	13 — 14	_
Neutral position switch		B137	9	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	_

		Con-		Sign	al (V)	
Description		nector	Termi-	Ignition SW ON	Engine ON	Note
2000	pt.or.	No.	nal No.	(engine OFF)	(idling)	1,616
Test mode connector		B137	15	10 — 13	13 — 14	When connected: 0
Knock	Signal	B136	25	2.8	2.8	_
sensor	Shield	B136	33	0	0	_
Back-up po	wer supply	B135	19	10 — 13	13 — 14	Ignition switch "OFF": 10 — 13
Control mod	dule power	B135	5	10 — 13	13 — 14	_
supply		B135	6	10 — 13	13 — 14	_
Sensor pow	er supply	B136	16	5	5	_
	#1	B135	18	0	13 — 14	Waveform
Ignition	#2	B135	17	0	13 — 14	Waveform
control	#3	B135	16	0	13 — 14	Waveform
	#4	B135	16	0	13 — 14	Waveform
	#1	B136	6	10 — 13	1 — 14	Waveform
Fuel injec-	#2	B136	5	10 — 13	1 — 14	Waveform
tor	#3	B136	4	10 — 13	1 — 14	Waveform
	#4	B136	3	10 — 13	1 — 14	Waveform
Fuel pump	Signal 1	B137	28	10 — 13	13 — 14	_
control unit	Signal 2	B135	27	0 or 5	0 or 5	Waveform
A/C relay co	ontrol	B135	33	ON: 0.5 or less	ON: 0.5 or less	
		D133	33	OFF: 10 — 13	OFF: 13 — 14	_
Radiator far	n relay 1	B135	25	ON: 0.5 or less	ON: 0.5 or less	_
control				OFF: 10 — 13	OFF: 13 — 14	
Radiator far control	n relay 2	B135	24	ON: 0.5 or less OFF: 10 — 13	ON: 0.5 or less OFF: 13 — 14	Model with A/C
Malfunction indicator light		B134	17	_	_	Light "ON": 1 or less Light "OFF": 10 — 14
Engine spe	ed output	B134	23	_	0 — 13 or more	Waveform
Purge contr valve	ol solenoid	B134	14	ON: 1 or less OFF: 10 — 13	ON: 1 or less OFF: 13 — 14	Waveform
	Signal	B136	22	1.7 — 2.4	1.1 — 1.6	
Manifold absolute pressure	Power supply	B136	16	5	5	_
sensor	GND (sensor)	B136	35	0	0	
Blower fan	switch	B137	13	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	With manual A/C model only
Power steer sure switch	ring oil pres-	B137	10	10 — 13	ON: 0 OFF: 13 — 14	_
Front oxygen (A/F) sensor signal (+)		B134	33	2.8 — 3.2	2.8 — 3.2	_
Front oxygen (A/F) sensor signal (-)		B134	26	2.4 — 2.7	2.4 — 2.7	_
Front oxygen (A/F) sensor shield		B134	25	0	0	
SSM communication line		B137	20	Less than 1←→ More than 4	Less than 1←→ More than 4	_
GND (injector)		B137	7	0	0	_
GND (sense	or)	B136	35	0	0	_
GND (ignition	on system)	B135	12	0	0	_
		B135	4	0	0	_
GND (powe	er supply)	B135	1	0	0	_
CND /a1	ol oveter-\	B137	1	0	0	_
GND (contr	oi system)	B137	2	0	0	_

	Con- Tormi Signal (V)		al (V)			
Description		nector No.	Termi- nal No.	Ignition SW ON (engine OFF)	Engine ON (idling)	Note
GND (Front oxygen (A/F) sensor heater 1)		B134	7	0	0	_
GND (Front F) sensor he	eater 2)	B134	6	0	0	_
Intake cams tion sensor	(LH)	B135	8	0 or 5	0 or 5	Waveform
Intake cams tion sensor		B135	9	0 or 5	0 or 5	Waveform
	Main	B136	18	0.64 — 0.72 Fully open: 3.96	0.64 — 0.72 (After engine is warmed-up.)	Fully closed: 0.6 Fully open: 3.96
Electronic throttle control	Sub	B136	29	1.51 — 1.58 Fully open: 4.17	1.51 — 1.58 (After engine is warmed-up.)	Fully closed: 1.48 Fully open: 4.17
CONTO	Power supply	B136	16	5	5	_
	GND (sensor)	B136	35	0	0	_
Electronic the trol motor (+	-)	B137	5	Duty waveform	Duty waveform	Drive frequency: 500 Hz
Electronic the trol motor (-		B137	4	Duty waveform	Duty waveform	Drive frequency: 500 Hz
Electronic the trol motor po		B137	6	10 — 13	13 — 14	_
Electronic the trol motor re		B135	35	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	When ignition switch is turned to ON: ON
Intake AVCS	Signal (+)	B134	19	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	_
solenoid (LH)	Signal (-)	B134	29	0	0	_
Intake AVCS	Signal (+)	B134	18	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	_
solenoid (RH)	Signal (–)	B134	28	0	0	_
Exhaust AVCS	Signal (+)	B134	21	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	_
solenoid (LH)	Signal (-)	B134	31	0	0	_
Exhaust AVCS	Signal (+)	B134	20	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	_
solenoid (RH)	Signal (-)	B134	30	0	0	_
Exhaust	Signal (+)	B135	20	0	-7 <b>—</b> +7	Waveform
camshaft position	Signal (-)	B135	28	0	0	_
sensor (LH)	Shield	B135	30	0	0	_
Exhaust	Signal (+)	B135	21	0	-7 <b>—</b> +7	Waveform
camshaft	Signal (-)	B135	29	0	0	_
position sensor (RH)	Shield	B135	30	0	0	_

### **Engine Control Module (ECM) I/O Signal**

Con- Signal (V)				al (V)		
Desc	ription	nector No.	Termi- nal No.	Ignition SW ON (engine OFF)	Engine ON (idling)	Note
	Main	B136	17	Fully closed: 1 Fully open: 3.3	Fully closed: 1 Fully open: 3.3	_
	Power supply	B136	15	5	5	_
Accelera-	GND (sensor)	B136	34	0	0	Ī
tor position sensor	Sub	B136	28	Fully closed: 1 Fully open: 3.3	Fully closed: 1 Fully open: 3.3	1
	Shield	B137	2	0	0	
	Power supply	B136	16	5	5	_
	GND (sensor)	B136	35	0	0	_
Starter relay	У	B135	32	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	ON: Cranking
A/C middle switch	pressure	B136	30	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	_
Clear memo	ory switch	B137	24	5	5	When connected: 0
Clutch switch	ch	B134	1	When clutch pedal is depressed: 0 When clutch pedal is released: 10 — 13	When clutch pedal is depressed: 0 When clutch pedal is released: 13 — 14	_
Brake switch	h 1	B136	9	When brake pedal is depressed: 0 When brake pedal is released: 10 — 13	When brake pedal is depressed: 0 When brake pedal is released: 13 — 14	_
Brake switch 2		B136	8	When brake pedal is depressed: 10 — 13 When brake pedal is released: 0	When brake pedal is depressed: 13 — 14 When brake pedal is released: 0	I
Cruise cont mand switch		B136	11	When operating nothing: 3.5 — 4.5 When operating RES/ACC: 2.5 — 3.5 When operating SET/COAST: 0.5 — 1.5 When operating CANCEL: 0 — 0.5	When operating nothing: 3.5 — 4.5 When operating RES/ACC: 2.5 — 3.5 When operating SET/COAST: 0.5 — 1.5 When operating CANCEL: 0 — 0.5	_
Cruise cont switch	rol main	B136	7	ON: 0 OFF: 5	ON: 0 OFF: 5	_

### 6. Engine Condition Data

### A: ELECTRICAL SPECIFICATION

Remarks	Specification
Engine load	1.2 — 2.9 (%): Idling
Engine load	4.7 — 12.8 (%): 2,500 rpm racing

#### Measuring condition:

- After engine is warmed-up.
- Gear position is in neutral.
- A/C is turned off.
- Turn all accessory switches to OFF.


#### 7. Data Link Connector

#### A: NOTE

This connector is used for Subaru Select Monitor.

#### **CAUTION:**

Do not connect any scan tools other than Subaru Select Monitor, because the circuit for the Subaru Select Monitor may be damaged.

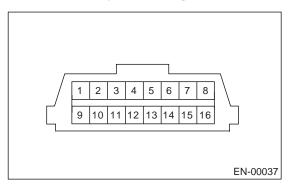


Terminal No.	Remarks	Terminal No.	Remarks
1	Power supply	9	Empty
2	Empty	10	Subaru Select Monitor signal
3	Empty	11	Empty
4	Empty	12	Ground
5	Empty	13	Ground
6	Line end check signal 1	14	Empty
7	Empty	15	Empty
8	Empty	16	Empty

### 8. Subaru Select Monitor


#### A: OPERATION

# 1. HOW TO USE SUBARU SELECT MONITOR


1) Prepare the Subaru Select Monitor kit. <Ref. to EN(H4DOTC)(diag)-7, PREPARATION TOOL, General Description.>

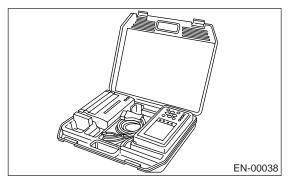

- 2) Connect the diagnosis cable to Subaru Select Monitor.
- 3) Insert the cartridge to Subaru Select Monitor. <Ref. to EN(H4DOTC)(diag)-7, PREPARATION TOOL, General Description.>

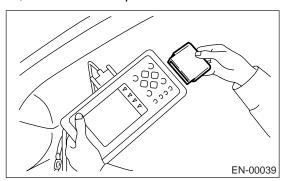

- 4) Connect the Subaru Select Monitor to data link connector.
  - (1) Data link connector is located in the lower portion of the instrument panel (on the driver's side).

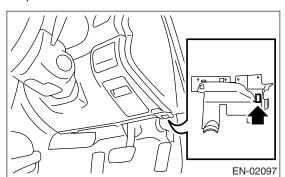


(2) Connect the diagnosis cable to data link connector.

#### **CAUTION:**

Do not connect the scan tools except for Subaru Select Monitor.

5) Turn ignition switch to ON (engine OFF) and turn Subaru Select Monitor switch to ON.

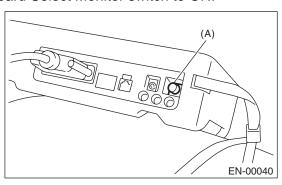

(A) Power switch

6) Using the Subaru Select Monitor, call up DTC and data, then record them.

# 2. READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE (NORMAL MODE)

Refer to "Read Diagnostic Trouble Code (DTC)" for information about how to indicate DTC. <Ref. to EN(H4DOTC)(diag)-27, Read Diagnostic Trouble Code (DTC).>

# 3. READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE (OBD MODE)

Refer to "Read Diagnostic Trouble Code (DTC)" for information about how to indicate DTC. <Ref. to EN(H4DOTC)(diag)-27, Read Diagnostic Trouble Code (DTC).>

#### 4. READ CURRENT DATA FOR ENGINE. (NORMAL MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Engine} and press the [YES] key.
- 3) Press the [YES] key after the information of engine type was displayed.
- 4) On the «Engine Diagnosis» screen, select the {Current Data Display/Save}, and then press the [YES] key.
- 5) On the «Data Display Menu» screen, select the {Data Display} and press the [YES] key.
- 6) Using the scroll key, move the display screen up or down until the desired data is shown.
- A list of the support data is shown in the following table.

Remarks	Display	Unit of measure	Note (at idling)
Engine coolant temperature signal	Coolant Temp.	°C	80 — 100°C
A/F correction 1	A/F Correction #1	%	-10 <b>—</b> +10%
A/F learning 1	A/F Learning #1	%	−15 <b>—</b> +15%
Intake manifold absolute pressure	Mani. Absolute Pressure	mmHg	220 — 275 mmHg
Engine speed signal	Engine Speed	rpm	630 — 770 rpm (Agree with the tachometer indication)
Vehicle speed signal	Vehicle Speed	km/h	0 km/h (at parking)
Ignition timing signal	Ignition Timing	deg	10 — 15 deg
Intake air temperature signal	Intake Air Temp.	°C	20 — 50°C
Amount of intake air	Mass Air Flow	g/s	2.1 — 3.1 g/s
Throttle opening angle signal	Throttle Opening Angle	%	2.0 — 2.4%
Rear oxygen sensor voltage	Rear O2 Sensor	V	0 — 1.0 V
Battery voltage	Battery Voltage	V	12 — 15 V
Mass air flow voltage	Air Flow Sensor Voltage	V	1.0 — 1.7 V
Injection 1 pulse width	Fuel Injection #1 Pulse	ms	1.2 — 2.2 ms
Knock sensor correction	Knock Correction	deg	0.0 deg
Acceleration opening angle signal	Accel. Opening Angle	%	0.0%
Primary supercharged pressure control signal	Primary Control	%	0.0%
Purge control solenoid duty ratio	CPC Valve Duty Ratio	%	0 — 25%
Generator duty ratio	ALT Duty	%	0 — 100%
Fuel pump duty ratio	Fuel Pump Duty	%	30 — 40%
AVCS advance angle amount RH	VVT Adv. Ang. Amount R	deg	±5 deg
AVCS advance angle amount LH	VVT Adv. Ang. Amount L	deg	±5 deg
Oil flow control solenoid valve duty RH (AVCS)	OCV Duty R	%	0 — 20%
Oil flow control solenoid valve duty LH (AVCS)	OCV Duty L	%	0 — 20%
Oil flow control solenoid valve current RH	OCV Current R	mA	40 — 100 mA
Oil flow control solenoid valve current LH	OCV Current L	mA	40 — 100 mA
A/F sensor current value 1	A/F Sensor #1 Current	mA	−20 <b>—</b> 20 mA
A/F sensor resistance value 1	A/F Sensor #1 Resistance	ohm	27 — 35 mA
A/F sensor output lambda 1	A/F Sensor #1	_	1.0
A/F correction 3	A/F Correction #3	%	0.00%
Throttle motor duty	Throttle Motor Duty	%	-5%
Throttle power supply voltage	Throttle Motor Voltage	V	12 — 15 V
Sub throttle sensor voltage	Sub-throttle Sensor	V	1.5 V
Main throttle sensor voltage	Main-throttle Sensor	V	0.6 V
Sub accelerator sensor voltage	Sub-accelerator Sensor	V	1.1 V
Main accelerator sensor voltage	Main-accelerator Sensor	V	1.0 V
Atmospheric pressure signal	Atmospheric Pressure	mmHg	_
Intake manifold relative pressure	Mani. Relative Pressure	mmHg	Intake manifold absolute pressure – Atmospheric pressure

Remarks	Display	Unit of measure	Note (at idling)
Memory vehicle speed	Memorized Cruise Speed	km/h	_
Estimated cumulative driving distance	Estimated Cumulative Driving Distance	km	_
Exhaust AVCS retard angle amount RH	Exh. VVT Retard Ang. R	deg	±5 deg
Exhaust AVCS retard angle amount LH	Exh. VVT Retard Ang. L	deg	±5 deg
Exhaust oil flow control solenoid valve duty ratio RH	Exh. OCV Duty R	%	0 — 20%
Exhaust oil flow control solenoid valve duty ratio LH	Exh. OCV Duty L	%	0 — 20%
Exhaust oil flow control solenoid valve current value RH	Exh. OCV Current R	mA	40 — 100 mA
Exhaust oil flow control solenoid valve current value LH	Exh. OCV Current L	mA	40 — 100 mA

#### NOTE:

For detailed operation procedure, refer to the "SUBARU SELECT MONITOR OPERATION MANUAL".

#### 5. READ CURRENT DATA FOR ENGINE (OBD MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Engine} and press the [YES] key.
- 3) Press the [YES] key after the information of engine type was displayed.
- 4) On the «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
- 5) On the «OBD Menu» screen, select the {Current Data Display/Save}, and then press the [YES] key.
- 6) On the «Data Display Menu» screen, select the {Data Display} and press the [YES] key.
- 7) Using the scroll key, move the display screen up or down until the desired data is shown.
- A list of the support data is shown in the following table.

Description	Display	Unit of measure
Number of diagnosis code	Number of Diag. Code:	_
Condition of malfunction indicator light	MI (MIL)	ON or OFF
Monitoring test of misfire	Misfire monitoring	no support
Monitoring test of fuel system	Fuel system monitoring	complete or incomplete
Monitoring test of comprehensive component	Component monitoring	complete or incomplete
Test of catalyst	Catalyst Diagnosis	no support
Test of heating-type catalyst	Heated catalyst	no support
Test of evaporative emission purge control system	Evaporative purge system	no support
Test of secondary air system	Secondary air system	no support
Test of air conditioning system refrigerant	A/C system refrigerant	no support
Test of oxygen sensor	Oxygen sensor	complete or incomplete
Test of oxygen sensor heater	O2 Heater Diagnosis	complete or incomplete
Test of EGR system	EGR system	no support

#### NOTE:

For detailed operation procedure, refer to the "SUBARU SELECT MONITOR OPERATION MANUAL".

#### 6. LED OPERATION MODE FOR ENGINE

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Engine} and press the [YES] key.
- 3) Press the [YES] key after the information of engine type was displayed.
- 4) On the «Engine Diagnosis» screen, select the {Current Data Display/Save}, and then press the [YES] key.
- 5) On the «Data Display» screen, select the {Data & LED Display} and press the [YES] key.
- 6) Using the scroll key, move the display screen up or down until the desired data is shown.
- A list of the support data is shown in the following table.

Remarks	Display	Message	LED "ON" requirements
AT/MT identification signal	AT Vehicle ID Signal	ON or OFF	Illuminate (AT model)
Test mode signal	Test Mode Signal	ON or OFF	When test mode connector is connected.
Clear memory signal	Clear Memory Terminal	ON or OFF	When clear memory connector is connected.
Neutral position switch signal	Neutral Position Switch	ON or OFF	When neutral position signal is entered.
Idle switch signal	Idle Switch Signal	ON or OFF	When idle switch signal is entered.
Ignition switch signal	Ignition Switch	ON or OFF	When ignition switch is turned to ON.
Power steering switch signal	P/S Switch	ON or OFF	When power steering switch is entered.
Handle switch signal	Handle SW	LHD or RHD	When handle switch signal is input.
Starter switch signal	Starter Switch	ON or OFF	When starter switch is input.
Air conditioning switch signal	A/C Switch	ON or OFF	When air conditioning switch is input.
Rear oxygen sensor rich sig- nal	Rear O2 Rich Signal	ON or OFF	When rear oxygen sensor mixture ratio is rich.
Knocking signal	Knocking Signal	ON or OFF	When knocking signal is input.
Crankshaft position sensor signal	Crankshaft Position Signal	ON or OFF	When crankshaft position sensor signal is input.
Camshaft position sensor signal	Camshaft Position Signal	ON or OFF	When camshaft position sensor signal is input.
Rear defogger switch signal	Rear Defogger Switch	ON or OFF	When rear defogger switch is turned to ON.
Blower fan switch signal	Blower Fan Switch	ON or OFF	When blower fan switch is turned to ON.
Small light switch signal	Light Switch	ON or OFF	When small light switch is turned to ON.
Windshield wiper switch signal	Wiper SW	ON or OFF	When windshield wiper switch is turned to ON.
A/C middle pressure switch signal	A/C Mid Pressure Switch	ON or OFF	When A/C middle pressure switch is turned to ON.
Air conditioning relay signal	A/C Compressor Signal	ON or OFF	When air conditioning relay is in function.
Radiator fan relay 1 signal	Radiator Fan Relay #1	ON or OFF	When radiator fan relay 1 is in function.
Radiator fan relay 2 signal	Radiator Fan Relay #2	ON or OFF	When radiator fan relay 2 is in function.
AT retard angle demand signal	Retard Signal	ON or OFF	When AT retard angle demand signal is input.
AT fuel cut signal	Fuel Cut	ON or OFF	When AT fuel cut signal is input.

#### **Subaru Select Monitor**

#### **ENGINE (DIAGNOSTICS)**

Remarks	Display	Message	LED "ON" requirements
Torque down output signal	Torque Down Output	ON or OFF	When torque down output signal is input.
Torque down demand signal	Request Torque Down	ON or OFF	When torque down demand signal is input.
AT coordinate permission signal	Torque Control Permission	ON or OFF	When AT coordinate permission signal is input.
Electronic throttle control motor relay signal	ETC Motor Relay	ON or OFF	When electronic throttle control motor relay is in function.
Clutch switch signal	Clutch Switch	ON or OFF	When clutch switch is turned to ON.
Stop light switch signal	Stop Light Switch	ON or OFF	When stop switch is turned to ON.
SET/COAST switch signal	SET/COAST Switch	ON or OFF	When SET/COAST switch is turned to ON.
RES/ACC switch signal	RESUME/ACCEL Switch	ON or OFF	When RES/ACC switch is turned to ON.
Brake switch signal	Brake Switch	ON or OFF	When brake switch is turned to ON.
Main switch signal	Main Switch	ON or OFF	When main switch is turned to ON.
Cancel switch signal	Cancel Switch	ON or OFF	When cancel switch is turned to ON.
Data reception signal	Body Int. Unit Data	ON or OFF	When data reception signal is entered.
Counter update signal	Body Int. Unit Count	ON or OFF	When counter update signal is entered.

### NOTE:

For detailed operation procedure, refer to the "SUBARU SELECT MONITOR OPERATION MANUAL".

# 9. Read Diagnostic Trouble Code (DTC)

#### A: OPERATION

# 1. SUBARU SELECT MONITOR (NORMAL MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Engine} and press the [YES] key.
- 3) Press the [YES] key after the information of engine type was displayed.
- 4) On the «Engine Diagnosis» screen, select the {DTC Display}, and then press the [YES] key.
- 5) On the "Diagnostic Code(s) Display" screen, select the {Current Diagnostic Code(s)} or {History Diagnostic Code(s)}, and then press the [YES] key.

#### NOTE:

- For detailed operation procedure, refer to the "SUBARU SELECT MONITOR OPERATION MANUAL".
- For details concerning DTCs, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4DOTC)(diag)-55, List of Diagnostic Trouble Code (DTC).>

# 2. SUBARU SELECT MONITOR (OBD MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Engine} and press the [YES] key.
- 3) Press the [YES] key after the information of engine type was displayed.
- 4) On the «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
- 5) On the «OBD Menu» display screen, select the {DTC Display} and press the [YES] key.
- 6) Make sure DTC is shown on the screen.

#### NOTE

- For detailed operation procedure, refer to the "SUBARU SELECT MONITOR OPERATION MANUAL".
- For details concerning DTCs, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to EN(H4DOTC)(diag)-55, List of Diagnostic Trouble Code (DTC).>


# 10.Inspection Mode A: PROCEDURE

# 1. PREPARATION FOR THE INSPECTION MODE

- 1) Check battery voltage is more than 12 V and fuel remains half [20 to 40 & (5.3 to 10.6 US gal, 4.4 to 8.8 Imp gal)].
- 2) Lift-up the vehicle using a garage jack and place it on rigid racks, or drive the vehicle onto free rollers.

#### **WARNING:**


- Before lifting-up the vehicle, ensure parking brakes are applied.
- Do not use a pantograph jack in place of a rigid rack.
- Secure a rope or wire to the front or rear towing hooks to prevent the lateral runout of front wheels.
- Do not abruptly depress/release clutch pedal or accelerator pedal during works even when the engine is operating at low speeds since this may cause vehicle to jump off free rollers.
- In order to prevent the vehicle from slipping due to vibration, do not place any wooden blocks or similar items between the rigid racks and the vehicle.
- Since the rear wheels will also rotate, do not place anything near them. Also, make sure that nobody goes in front of the vehicle.

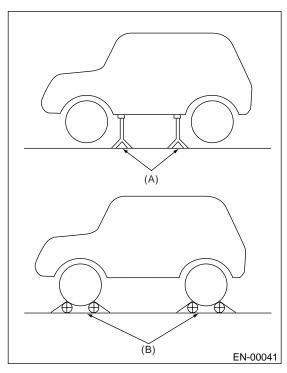


- (A) Rigid rack
- (B) Free rollers

#### 2. SUBARU SELECT MONITOR


- 1) After clearing the memory, check for any remaining unresolved trouble data. <Ref. to EN(H4DOTC)(diag)-30, Clear Memory Mode.>
- 2) Idle the engine.
- 3) Prepare the Subaru Select Monitor kit. <Ref. to EN(H4DOTC)(diag)-7, PREPARATION TOOL, General Description.>

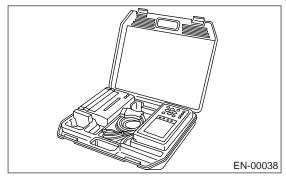


- 4) Connect the diagnosis cable to Subaru Select Monitor
- 5) Insert the cartridge to Subaru Select Monitor. <Ref. to EN(H4DOTC)(diag)-7, PREPARATION TOOL, General Description.>

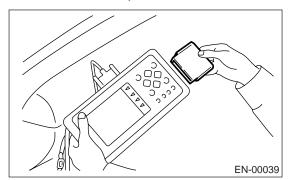

6) Connect the test mode connector (A) located at the lower portion of glove box.

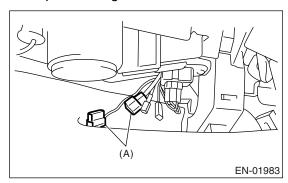


7) Connect the Subaru Select Monitor to data link connector located in the lower portion of the instrument panel (on the driver's side).

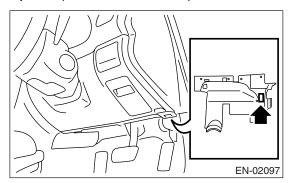

#### **CAUTION:**

Do not connect the scan tools except for Subaru Select Monitor.

8) Turn the ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

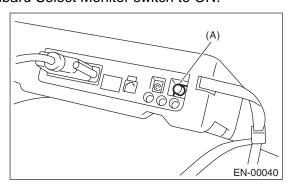

(A) Power switch

- 9) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
- 10) On the «System Selection Menu» display screen, select the {Engine} and press the [YES] key.
- 11) Press the [YES] key after the information of engine type was displayed.
- 12) On the «Engine Diagnosis» screen, select the {D Check} and press the [YES] key.
- 13) When the "Perform D Check?" is shown on the screen, press the [YES] key.
- 14) Perform subsequent procedures as instructed on the display screen.
- If trouble still remains in the memory, the corresponding DTC appears on the display screen.

#### NOTE:

- For detailed operation procedure, refer to the "SUBARU SELECT MONITOR OPERATION MANUAL".
- For details concerning DTCs, refer to the List of Diagnostic Trouble Code (DTC).
- <Ref. to EN(H4DOTC)(diag)-55, List of Diagnostic Trouble Code (DTC).>

- Release the parking brake.
- The speed difference between front and rear wheels may light either the ABS warning light, but this indicates no malfunctions. When engine control diagnosis is finished, perform the ABS memory clearance procedure of self-diagnosis function.

### 11.Clear Memory Mode

#### A: OPERATION

# 1. SUBARU SELECT MONITOR (NORMAL MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Engine} and press the [YES] key.
- 3) Press the [YES] key after the information of engine type was displayed.
- 4) On the «Engine Diagnosis» display screen, select the {Memory Clear} and press the [YES] key.
- 5) When the "Done" and "Turn Ignition Switch OFF" are shown on the display screen, turn the ignition switch to OFF and then Subaru Select Monitor to OFF.

#### NOTE:

For detailed operation procedure, refer to the "SUBARU SELECT MONITOR OPERATION MANUAL".

# 2. SUBARU SELECT MONITOR (OBD MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Engine} and press the [YES] key.
- 3) Press the [YES] key after the information of engine type was displayed.
- 4) On the «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
- 5) On the «OBD Menu» display screen, select the {DTC Clear} and press the [YES] key.
- 6) When the "Perform Diagnostic Code(s) Clear?" is shown on the screen, press the [YES] key.
- 7) Turn the ignition switch to OFF and then turn the Subaru Select Monitor switch to OFF.


#### NOTE:

For detailed operation procedure, refer to the "SUBARU SELECT MONITOR OPERATION MANUAL".


# 12. Compulsory Valve Operation Check Mode

#### A: OPERATION


1) Prepare the Subaru Select Monitor kit. <Ref. to EN(H4DOTC)(diag)-7, PREPARATION TOOL, General Description.>

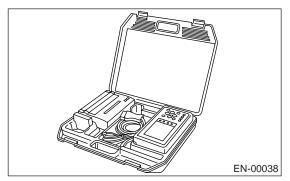


- 2) Connect the diagnosis cable to Subaru Select Monitor.
- 3) Insert the cartridge to Subaru Select Monitor. <Ref. to EN(H4DOTC)(diag)-7, PREPARATION TOOL, General Description.>

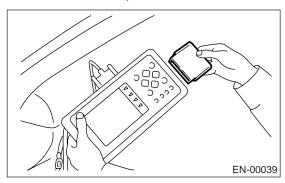

4) Connect the test mode connector (A) located at the lower portion of glove box.

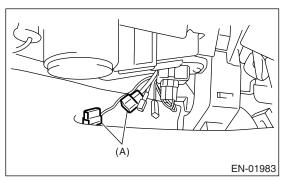


5) Connect the Subaru Select Monitor to data link connector located in the lower portion of the instrument panel (on the driver's side).

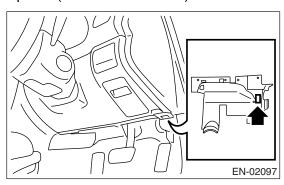

#### **CAUTION:**

Do not connect the scan tools except for Subaru Select Monitor.

6) Turn ignition switch to ON (engine OFF) and turn Subaru Select Monitor switch to ON.

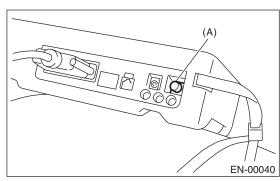

(A) Power switch

- 7) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
- 8) On the «System Selection Menu» display screen, select the {Engine} and press the [YES] key.
- 9) Press the [YES] key after the information of engine type was displayed.
- 10) On the «Engine Diagnosis» display screen, select the {System Operation Check Mode} and press the [YES] key.
- 11) On the «System Operation Check Mode» screen, select the {Actuator ON/OFF Operation} and press the [YES] key.
- 12) On the «Actuator ON/OFF Operation» screen, select the desired compulsory actuator and press the [YES] key.
- 13) Pressing the [NO] key completes the compulsory valve operation check mode. The display will then return to the «Actuator ON/OFF Operation» screen.

### **Compulsory Valve Operation Check Mode**

#### **ENGINE (DIAGNOSTICS)**

• A list of the support data is shown in the following table.

Description	Display
Compulsory fuel pump relay operation check	Fuel Pump
Compulsory radiator fan relay operation check	Radiator Fan Relay
Compulsory air conditioning relay operation check	A/C Compressor Relay
Compulsory purge control solenoid valve operation check	CPC Solenoid
Compulsory wastegate control sole- noid valve operation check	Wastegate control solenoid

#### NOTE:

• The following parts will be displayed but not functional.

Display
EGR Solenoid
ASV Solenoid
FICD Solenoid
Pressure Switching Solenoid
PCV Solenoid
AAI Solenoid
Vcut Solenoid
Fuel Tank Sensor Control Valve

• For detailed operation procedure, refer to the "SUBARU SELECT MONITOR OPERATION MANUAL".

# 13.Malfunction Indicator Light A: PROCEDURE

LIGHT REMAINS BLINKING., Malfunction Indicator Light.>

1. Activation of malfunction indicator light. <Ref. to EN(H4DOTC)(diag)-34, ACTIVATION OF MALFUNCTION INDICATOR LIGHT, Malfunction Indicator Light.>

2. Check that the malfunction indicator light does not come on. <Ref. to EN(H4DOTC)(diag)-35, MALFUNCTION INDICATOR LIGHT DOES NOT COME ON, Malfunction Indicator Light.>

3. Check that the malfunction indicator light does not go off. <Ref. to EN(H4DOTC)(diag)-37, MALFUNCTION INDICATOR LIGHT DOES NOT GO OFF., Malfunction Indicator Light.>

4. Check that the malfunction indicator light does not blink. <Ref. to EN(H4DOTC)(diag)-38, MALFUNCTION INDICATOR LIGHT DOES NOT BLINK., Malfunction Indicator Light.>


5. Check that the malfunction indicator light remains blinking. <Ref. to EN(H4DOTC)(diag)-40, MALFUNCTION INDICATOR

# B: ACTIVATION OF MALFUNCTION INDICATOR LIGHT


1) When the ignition switch is turned to ON (engine OFF), the malfunction indicator light (A) in the combination meter illuminates.

#### NOTE:

If the malfunction indicator light does not illuminate, perform the diagnosis of malfunction indicator light circuit or the combination meter circuit. <Ref. to EN(H4DOTC)(diag)-35, MALFUNCTION INDICATOR LIGHT DOES NOT COME ON, Malfunction Indicator Light.>

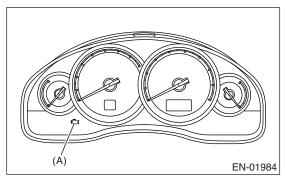


2) After starting the engine, the malfunction indicator light goes out. If it does not, either the engine or the emission control system is malfunctioning.

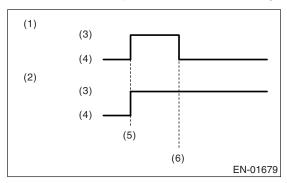

- (1) No trouble
- (2) Trouble occurs
- (3) ON
- (4) OFF
- (5) Ignition switch ON
- (6) Engine start
- 3) Turn the ignition switch to OFF and connect the test mode connector.
  - (1) When the ignition switch is turned to ON (engine OFF), the malfunction indicator light illuminates.
  - (2) Malfunction indicator light blinks at a cycle of 0.5 Hz after starting the engine. (During diagnosis)

(3) Malfunction indicator light blinks at a cycle of 3 Hz after diagnosis if there is no trouble. Malfunction indicator light illuminates if faulty.

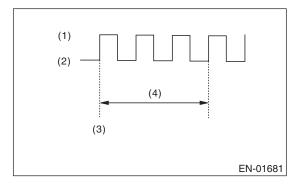


- (1) ON
- (2) OFF
- (3) Ignition switch ON
- (4) 1 second

# C: MALFUNCTION INDICATOR LIGHT DOES NOT COME ON DIAGNOSIS:

The malfunction indicator light circuit is open or shorted.

#### TROUBLE SYMPTOM:

When the ignition switch is turned to ON (engine OFF), malfunction indicator light does not come on. **WIRING DIAGRAM:** 

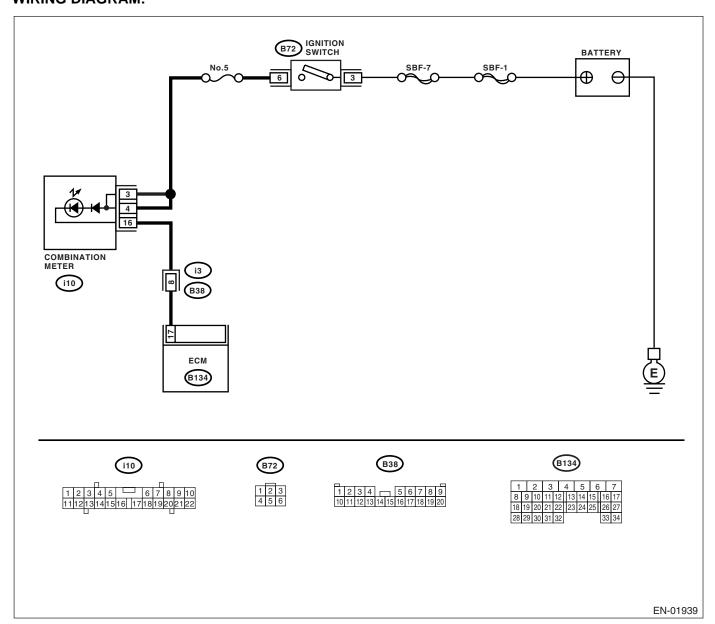

	Step	Check	Yes	No
1	CHECK OUTPUT SIGNAL FROM ECM.  1) Turn the ignition switch to ON.  2) Measure the voltage between ECM connector and chassis ground.  Connector & terminal  (B134) No. 17 (+) — Chassis ground (-):	Is the voltage less than 1 V?	Go to step 4.	Go to step 2.
2	CHECK POOR CONTACT.  Check for poor connection when shaking or pulling ECM connector and harness.	Does malfunction indicator light illuminate?	Repair the poor contact in ECM connector.	Go to step 3.
3	CHECK ECM CONNECTOR. Check the connection of ECM connector.	Is the ECM connector correctly connected?	Replace the ECM. <ref. to<br="">FU(H4DOTC)-35, Engine Control Module (ECM).&gt;</ref.>	Repair the con- nection of ECM connector.
4	CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.  1) Turn the ignition switch to OFF.  2) Remove the combination meter. <ref. assembly.="" combination="" idi-16,="" meter="" to="">  3) Disconnect the connector from ECM and combination meter.  4) Measure the resistance of harness between ECM and combination meter connector.  Connector &amp; terminal  (B134) No. 17 — (i10) No. 16:</ref.>	Is the resistance less than 1 $\Omega$ ?	Go to step 5.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between ECM and combination meter connector Poor contact in coupling connector
5	CHECK POOR CONTACT.  Check poor contact in combination meter connector.	Is there poor contact in combination meter connector?	Repair the poor contact in combination meter connector.	Go to step 6.
6	CHECK HARNESS BETWEEN COMBINA- TION METER AND IGNITION SWITCH CON- NECTOR.  1) Turn the ignition switch to ON. 2) Measure the voltage between combination meter connector and chassis ground.  Connector & terminal  (i10) No. 3 (+) — Chassis ground (-):  (i10) No. 4 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Replace the board of combination meter. <ref. idi-<br="" to="">16, Combination Meter Assembly.&gt;</ref.>	Check the following and repair if necessary.  NOTE:  Blown out fuse  Open or short circuit in harness between fuse and battery terminal  Poor contact in ignition switch connector


### D: MALFUNCTION INDICATOR LIGHT DOES NOT GO OFF.

### **DIAGNOSIS:**

The malfunction indicator light circuit is shorted.

### TROUBLE SYMPTOM:

Although malfunction indicator light comes on when the engine runs, DTC is not shown on the Subaru Select Monitor display.

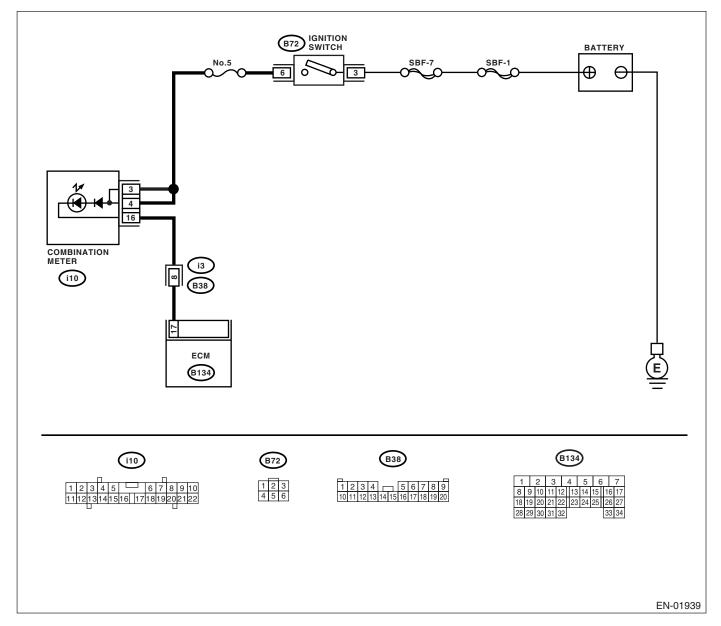

	Step	Check	Yes	No
1	CHECK HARNESS BETWEEN COMBINA-	Does malfunction indicator	Repair the short	Replace the ECM.
	TION METER AND ECM CONNECTOR.	light illuminate?	circuit in harness	<ref. th="" to<=""></ref.>
	<ol> <li>Turn the ignition switch to OFF.</li> </ol>		between combina-	FU(H4DOTC)-35,
	<ol><li>Disconnect the connector from ECM.</li></ol>		tion meter and	Engine Control
	3) Turn the ignition switch to ON.		ECM connector.	Module (ECM).>


### **E: MALFUNCTION INDICATOR LIGHT DOES NOT BLINK.**

### **DIAGNOSIS:**

- The malfunction indicator light circuit is open or shorted.
- Test mode connector circuit is in open.

### **TROUBLE SYMPTOM:**

Malfunction indicator light does not blink during inspection mode.

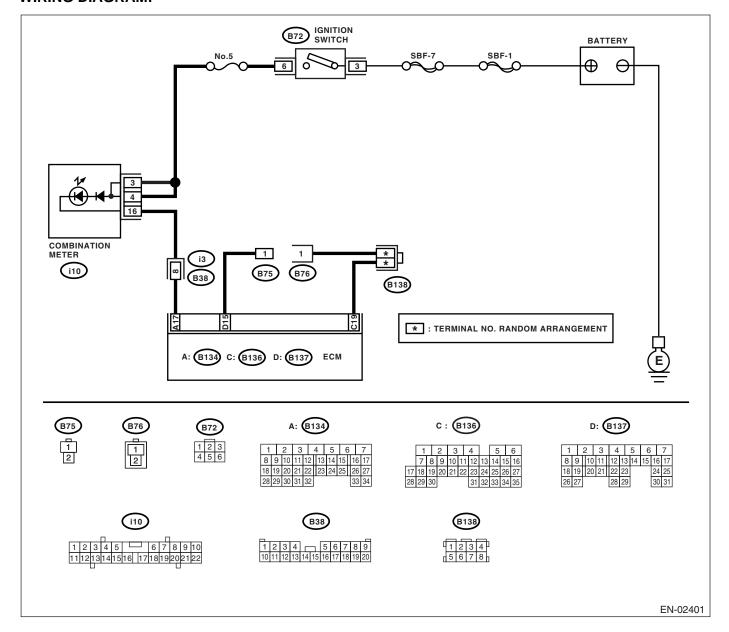

	Step	Check	Yes	No
1	CHECK STATUS OF MALFUNCTION INDI- CATOR LIGHT.  1) Turn the ignition switch to OFF. 2) Disconnect the test mode connectors. 3) Turn the ignition switch to ON. (engine OFF)	Does malfunction indicator light illuminate?	Go to step 2.	Repair the mal- function indictor light circuit. <ref. to<br="">EN(H4DOTC)(diag )-35, MALFUNC- TION INDICA- TOR LIGHT DOES NOT COME ON, Mal- function Indicator Light.&gt;</ref.>
2	CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Turn the ignition switch to ON.	Does malfunction indicator light illuminate?	Repair the ground short circuit in harness between combination meter and ECM connector.	Go to step 3.
3	CHECK HARNESS BETWEEN TEST MODE CONNECTOR AND ECU.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Measure the resistance of harness between test mode connector and ECM.  Connector & terminal (B76) No. 1 — (B136) No. 19:	Is the resistance less than 1 $\Omega$ ?	Go to step 4.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between test mode connector and ECM Poor contact in joint connector
4	CHECK POOR CONTACT. Check poor contact in ECM connector.	Is the poor contact in ECM connector?	Repair the poor contact in ECM connector.	Go to step 5.
5	CHECK HARNESS BETWEEN ECM AND TEST MODE CONNECTOR.  Measure the resistance of harness between ECM and test mode connector.  Connector & terminal  (B137) No. 15 — (B75) No. 1:	Is the resistance less than 1 $\Omega$ ?	Go to step 6.	Repair the open circuit in harness between ECM and test mode connector.
6	CHECK POOR CONTACT. Check poor contact in ECM connector.	Is the poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <ref. to<br="">FU(H4DOTC)-35, Engine Control Module (ECM).&gt;</ref.>


### F: MALFUNCTION INDICATOR LIGHT REMAINS BLINKING.

### **DIAGNOSIS:**

Test mode connector circuit is shorted.

### TROUBLE SYMPTOM:

Malfunction indicator light blinks when test mode connector is not connected.

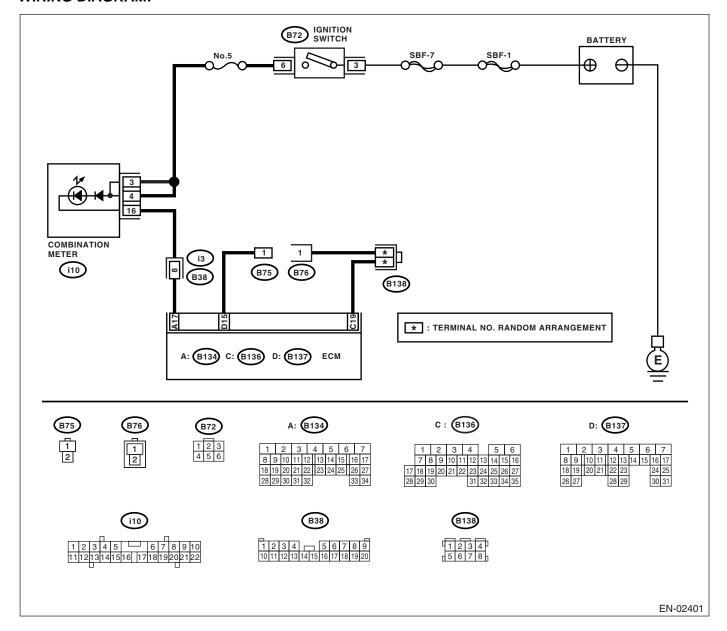

	Step	Check	Yes	No
1	CHECK TEST MODE CONNECTOR.  1) Disconnect the test mode connectors	Does the malfunction indicator light blink?	Go to step 2.	System is in good order.
	2) Turn the ignition switch to ON.			NOTE: Malfunction indica-
				tor light blinks at a cycle of 3 Hz when
				test mode connec-
				tor is connected.
2	CHECK HARNESS BETWEEN ECM CON-	Is the resistance less than 5	Repair the short	Replace the ECM.
	NECTOR AND CHASSIS GROUNDING TER-	$\Omega$ ?	circuit in harness	<ref. th="" to<=""></ref.>
	MINAL.		between ECM and	FU(H4DOTC)-35,
	<ol> <li>Turn the ignition switch to OFF.</li> </ol>		test mode connec-	Engine Control
	<ol><li>Disconnect the connector from ECM.</li></ol>		tor.	Module (ECM).>
	3) Measure the resistance of harness			
	between ECM connector and chassis ground.			
	Connector & terminal			
	(B137) No. 15 — Chassis ground:			


# **14.Diagnostics for Engine Starting Failure A: PROCEDURE**

1. Check for fuel amount.
<b>↓</b>
2. Inspection of starter motor circuit. <ref. circuit,="" diagnostics="" en(h4dotc)(diag)-43,="" engine="" failure.="" for="" motor="" starter="" starting="" to=""></ref.>
<b>↓</b>
3. Inspection of ECM power supply and ground line. <ref. (ecm),="" and="" check="" control="" diagnostics="" en(h4dotc)(diag)-46,="" engine="" failure.="" for="" ground="" line="" module="" of="" power="" starting="" supply="" to=""></ref.>
$\downarrow$
4. Inspection of ignition control system. <ref. control="" diagnostics="" en(h4dotc)(diag)-48,="" engine="" failure.="" for="" ignition="" starting="" system,="" to=""></ref.>
$\downarrow$
5. Inspection of fuel pump circuit. <ref. circuit,="" diagnostics="" en(h4dotc)(diag)-51,="" engine="" failure.="" for="" fuel="" pump="" starting="" to=""></ref.>
<b>↓</b>
6. Inspection of fuel injector circuit. <ref. circuit,="" diagnostics="" en(h4dotc)(diag)-53,="" engine="" failure.="" for="" fuel="" injector="" starting="" to=""></ref.>

### **B: STARTER MOTOR CIRCUIT**

### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

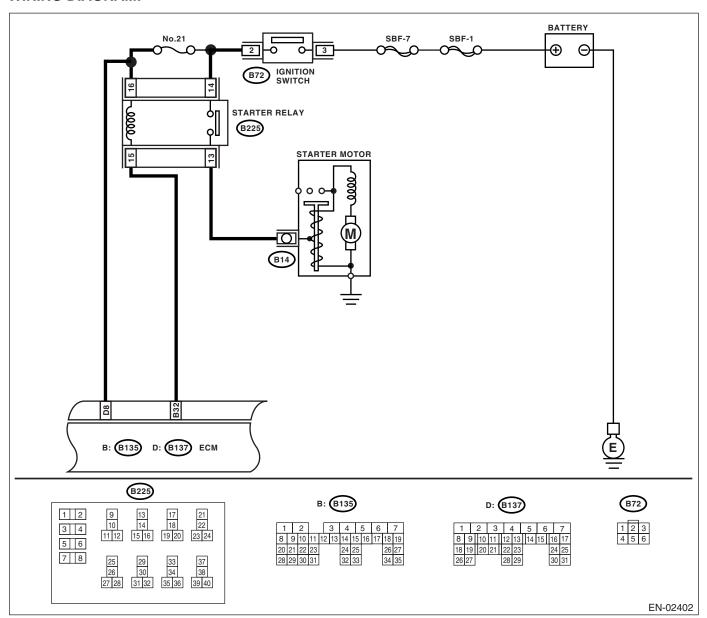


	Step	Check	Yes	No
1	CHECK OPERATION OF STARTER MOTOR.	Does the starter motor oper-	Go to step 2.	Go to step 3.
		ate?	-	-
2	CHECK DTC.	Is DTC displayed? <ref. to<br="">EN(H4DOTC)(diag)-27, OPERATION, Read Diagnostic Trouble Code (DTC).&gt;</ref.>	Inspect the relevant DTC using List of Diagnostic Trouble Code (DTC). <ref. (dtc).="" )-55,="" code="" diagnostic="" en(h4dotc)(diag="" list="" of="" to="" trouble=""></ref.>	Repair the poor contact in ECM connector.
3	CHECK INPUT SIGNAL FOR STARTER MOTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from starter motor. 3) Turn the ignition switch to START. 4) Measure the power supply voltage between starter motor connector terminal and engine ground.  Connector & terminal  (B14) No. 1 (+) — Engine ground (-):  NOTE: Set the selector lever in the "P" or "N" range.  CHECK GROUND CIRCUIT OF STARTER	Is the voltage more than 10 V?	Go to step 4.  Check the starter	Go to step <b>5</b> .  Repair the open
4	MOTOR.  1) Turn the ignition switch to OFF.  2) Disconnect the ground cable terminal from starter motor.  3) Measure the resistance of ground cable between ground cable terminal and engine ground.	$\Omega$ ?	motor. <ref. to<br="">SC(H4SO 2.0)-6, Starter.&gt;</ref.>	circuit of ground cable.
5	CHECK HARNESS BETWEEN BATTERY AND IGNITION SWITCH CONNECTOR.  1) Disconnect the connector from ignition switch.  2) Measure the power supply voltage between ignition switch connector and chassis ground.  Connector & terminal  (B72) No. 3 (+) — Chassis ground (-):	Is the voltage more than 10 V?		Check the following and repair if necessary.  • Blown out fuse  • Open circuit in harness between ignition switch and battery
6	CHECK IGNITION SWITCH.  1) Disconnect the connector from ignition switch.  2) Measure the resistance between ignition switch terminals while turning the ignition switch to START position.  Terminals  No. 2 — No. 3:	Is the resistance less than 5 $\Omega$ ?	Go to step 7.	Replace the ignition switch.

	Step	Check	Yes	No
7	CHECK INPUT VOLTAGE OF STARTER RE-LAY.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from starter relay.  3) Connect the connector to ignition switch.  4) Measure the input voltage between starter relay connector and chassis ground while turning the ignition switch to START position.  Connector & terminal  (B225) No. 14 (+) — Chassis ground (-):  (B225) No. 16 (+) — Chassis ground (-):			Repair the open or ground short circuit in harness between starter relay and ignition switch.
8	CHECK STARTER RELAY.  1) Connect the battery to starter relay terminals No. 15 and No. 16.  2) Measure the resistance between starter relay terminals.  Terminals  No. 13 — No. 14:	Is the resistance less than 1 $\Omega$ ?	Go to step 9.	Replace the starter relay.
9	<ol> <li>CHECK INPUT VOLTAGE FROM ECM.</li> <li>Turn the ignition switch to OFF.</li> <li>Connect the starter relay connector.</li> <li>Disconnect the connectors from ECM.</li> <li>Measure the resistance of harness between ECM and starter relay connector.</li> <li>Connector &amp; terminal         <ul> <li>(B135) No. 32 — (B225) No. 15:</li> </ul> </li> </ol>	Is the resistance less than 1 $\Omega$ ?	Go to step 10.	Repair the open circuit in harness between ECM and starter relay.
10	CHECK INPUT VOLTAGE FOR STARTER MOTOR.  1) Turn the ignition switch to OFF.  2) Connect the connector to ECM.  3) Turn the ignition switch to START.  4) Measure the voltage between starter motor and engine ground.  Connector & terminal  (B14) No. 1 (+) — Engine ground (-):	Is the voltage more than 10 V?	Go to step 11.	Repair the open or ground short cir- cuit in harness between starter relay and starter.
11	CHECK HARNESS BETWEEN IGNITION SWITCH AND ECM.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ignition switch and ECM.  3) Measure the resistance of harness between ignition switch and ECM connector.  Connector & terminal  (B137) No. 8 — (B72) No. 2:	Is the resistance less than 1 $\Omega$ ?		circuit between ignition switch and ECM.

### C: CHECK POWER SUPPLY AND GROUND LINE OF ENGINE CONTROL MOD-ULE (ECM)

### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

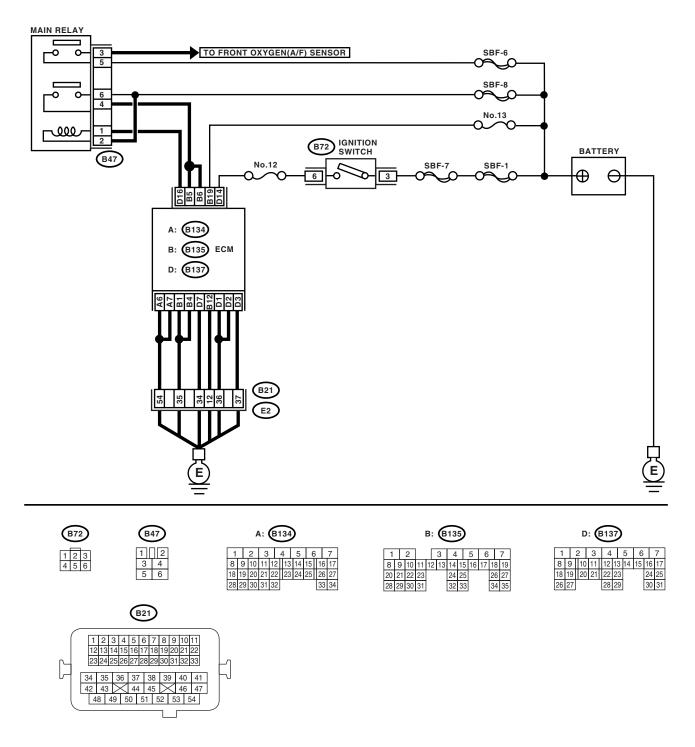


	Step	Check	Yes	No
1	<ul><li>CHECK MAIN RELAY.</li><li>1) Turn the ignition switch to OFF.</li><li>2) Remove the main relay.</li><li>3) Connect the battery to main relay terminals</li></ul>	Is the resistance less than 10 $\Omega$ ?	Go to step 2.	Replace the main relay.
	No. 1 and No. 2. 4) Measure the resistance between main relay terminals.  Terminals  No. 3 — No. 5:			
2	No. 4 — No. 6:  CHECK GROUND CIRCUIT FOR ECM.	Is the resistance less than 5	Go to step 3.	Repair the open
2	1) Disconnect the connector from ECM. 2) Measure the resistance of harness between ECM and chassis ground.  Connector & terminal  (B134) No. 6 — Chassis ground:  (B134) No. 7 — Chassis ground:	$\Omega$ ?	G0 10 step <b>3.</b>	circuit in harness between ECM connector and engine grounding terminal.
	(B134) No. 7 — Chassis ground: (B135) No. 1 — Chassis ground: (B135) No. 4 — Chassis ground: (B137) No. 12 — Chassis ground: (B137) No. 1 — Chassis ground: (B137) No. 2 — Chassis ground: (B137) No. 3 — Chassis ground: (B137) No. 7 — Chassis ground:			
3	CHECK INPUT VOLTAGE OF ECM.	Is the voltage more than 10 V?	Go to step 4.	Repair the open or
	Measure the voltage between ECM connector and chassis ground.  Connector & terminal  (B135) No. 19 (+) — Chassis ground (-):			ground short cir- cuit of power sup- ply circuit.
4	CHECK INPUT VOLTAGE OF ECM.  1) Turn the ignition switch to ON.  2) Measure the voltage between ECM connector and chassis ground.  Connector & terminal  (B137) No. 14 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 5.	Repair the open or ground short circuit of power supply circuit.
5	CHECK INPUT VOLTAGE OF MAIN RELAY. Measure the voltage between main relay connector and chassis ground.  Connector & terminal  (B47) No. 2 (+) — Chassis ground (-):  (B47) No. 5 (+) — Chassis ground (-):  (B47) No. 6 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 6.	Repair the open or ground short circuit in harness of power supply circuit.
6	CHECK INPUT VOLTAGE OF ECM.  1) Connect the main relay connector.  2) Turn the ignition switch to ON.  3) Measure the voltage between ECM connector and chassis ground.  Connector & terminal  (B135) No. 5 (+) — Chassis ground (-):  (B135) No. 6 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Check ignition control system. <ref. to<br="">EN(H4DOTC)(diag )-48, IGNITION CONTROL SYS- TEM, Diagnostics for Engine Start- ing Failure.&gt;</ref.>	Repair the open or ground short circuit in harness between ECM connector and main relay connector.


### D: IGNITION CONTROL SYSTEM

### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

**WIRING DIAGRAM:** 

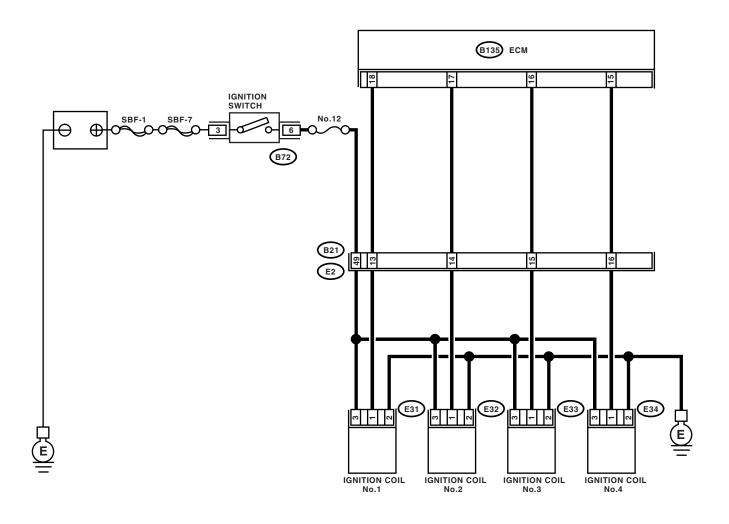

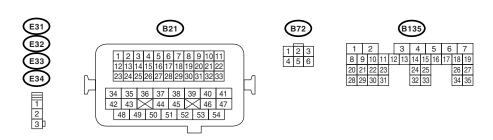

EN-02404

	Step	Check	Yes	No
1	CHECK SPARK PLUG CONDITION.	Is the spark plug's status OK?	Go to step 2.	Replace the spark
	<ol> <li>Remove the spark plug. <ref. li="" to<=""> <li>IG(H4DOTC)-4, REMOVAL, Spark Plug.&gt;</li> <li>Check the spark plug condition. <ref. li="" to<=""> </ref.></li></ref.></li></ol>		·	plug.
	IG(H4DOTC)-5, INSPECTION, Spark Plug.>			
2	INSPECTION FOR SPARK OF IGNITION SYSTEM.  1) Connect the spark plug to ignition coil.  2) Release the fuel pressure. <ref. fu(h4dotc)-40,="" fuel="" fuel.="" of="" pressure,="" procedure,="" releasing="" to="">  3) Contact the spark plug's thread portion on engine.  4) While the throttle valve is opening fully, crank the engine to check that spark occurs at each cylinder.</ref.>	Does spark occur at each cylinder?	Check fuel pump system. <ref. to<br="">EN(H4DOTC)(diag )-51, FUEL PUMP CIRCUIT, Diag- nostics for Engine Starting Failure.&gt;</ref.>	
3	CHECK POWER SUPPLY CIRCUIT FOR IGNITION COIL & IGNITOR ASSY.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ignition coil & ignitor ASSY.  3) Turn the ignition switch to ON.  4) Measure the power supply voltage between ignition coil & ignitor ASSY connector and engine ground.  Connector & terminal  (E31) No. 3 (+) — Engine ground (-):  (E32) No. 3 (+) — Engine ground (-):  (E33) No. 3 (+) — Engine ground (-):	Is the voltage more than 10 V?	Go to step 4.	Repair the har- ness and connec- tor.  NOTE: In this case, repair the following:  Open circuit in harness between ignition coil & igni- tor ASSY, and igni- tion switch connector  Poor contact in coupling connector
4	CHECK HARNESS OF IGNITION COIL & IGNITOR ASSY GROUND CIRCUIT.  1) Turn the ignition switch to OFF.  2) Measure the resistance between ignition coil & ignitor ASSY connector and engine ground.  Connector & terminal  (E31) No. 2 — Engine ground:  (E32) No. 2 — Engine ground:  (E33) No. 2 — Engine ground:  (E34) No. 2 — Engine ground:	Is the resistance less than 5 $\Omega$ ?	Go to step 5.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between ignition coil & ignitor ASSY connector and engine grounding terminal
5	CHECK HARNESS BETWEEN ECM AND IGNITION COIL & IGNITOR ASSY CONNECTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Disconnect the connector from ignition coil & ignitor ASSY. 4) Measure the resistance of harness between ECM and ignition coil & ignitor ASSY connector.  Connector & terminal (B135) No. 15 — (E34) No. 1: (B135) No. 16 — (E33) No. 1: (B135) No. 17 — (E32) No. 1: (B135) No. 18 — (E31) No. 1:	Is the resistance less than 1 $\Omega$ ?	Go to step 6.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between ECM and ignition coil & ignitor ASSY connector  Poor contact in coupling connector

### **Diagnostics for Engine Starting Failure**


### ENGINE (DIAGNOSTICS)

	Step	Check	Yes	No
6	CHECK HARNESS BETWEEN ECM AND IGNITION COIL & IGNITOR ASSY CONNECTOR.  Measure the resistance of harness between ECM and engine ground.  Connector & terminal  (B135) No. 15 — Engine ground:  (B135) No. 16 — Engine ground:  (B135) No. 17 — Engine ground:  (B135) No. 18 — Engine ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 7.	Repair the ground short circuit in harness between ECM and ignition coil & ignitor ASSY connector.
7	CHECK POOR CONTACT. Check poor contact in ECM connector.	Is the poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ignition coil & ignitor ASSY.

### **E: FUEL PUMP CIRCUIT**

### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

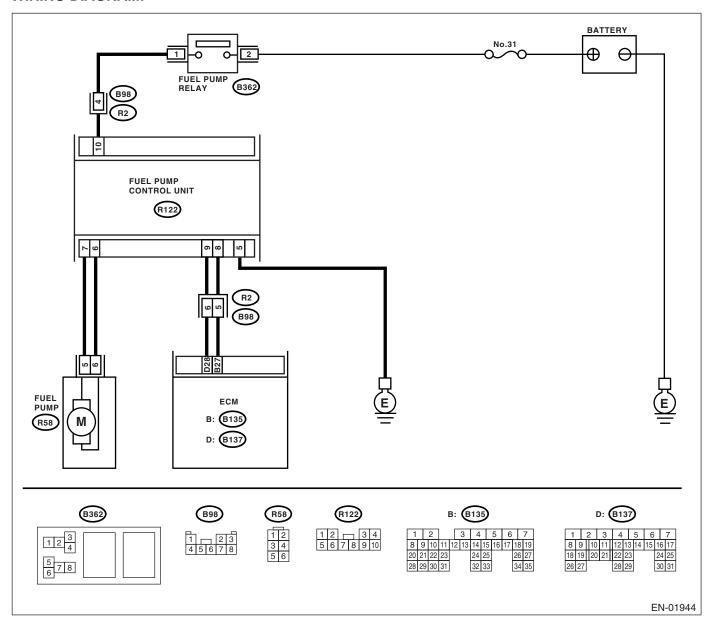

### **Diagnostics for Engine Starting Failure**

### ENGINE (DIAGNOSTICS)


Step	Check	Yes	No
1 CHECK OPERATING SOUND OF FUEL PUMP.  Make sure that fuel pump is in operation for 2 seconds when turning the ignition switch to ON.  NOTE: Fuel pump operation can also be executed using Subaru Select Monitor. Refer to "Compulsory Valve Operation Check Mode" for procedures. <ref. check="" compulsory="" en(h4dotc)(diag)-31,="" mode.="" operation="" to="" valve=""></ref.>	Does the fuel pump produce operating sound?	injector circuit. <ref. to<br="">EN(H4DOTC)(diag )-53, FUEL INJEC- TOR CIRCUIT,</ref.>	


### F: FUEL INJECTOR CIRCUIT

### **CAUTION:**

- Check or repair only faulty parts.
- After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

**WIRING DIAGRAM:** 

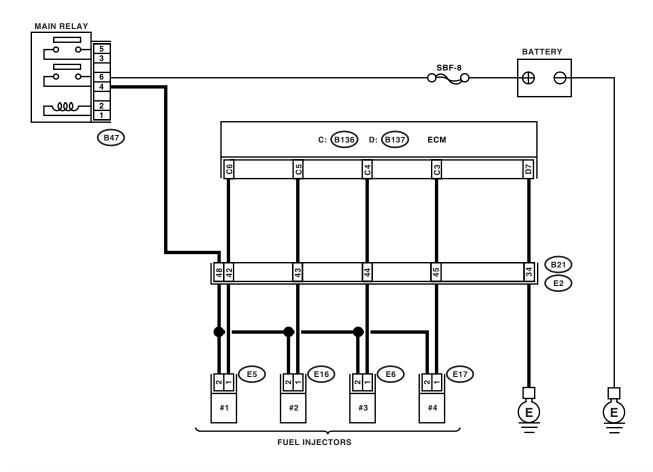

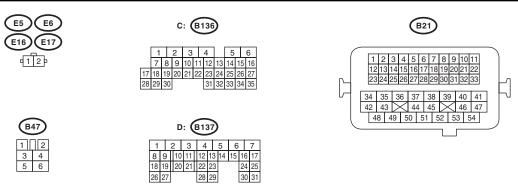

EN-01945

	Step	Check	Yes	No
1	CHECK OPERATION OF EACH FUEL INJECTOR.  While cranking the engine, check that each fuel injector emits operating sound. Use a sound scope or attach a screwdriver to the injector for this check.	Does the fuel pump produce operating sound?	Check the fuel pressure. <ref. to<br="">ME(H4DOTC)-26, INSPECTION, Fuel Pressure.&gt;</ref.>	Go to step 2.
2	CHECK POWER SUPPLY TO EACH FUEL INJECTOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from fuel injector.  3) Turn the ignition switch to ON.  4) Measure the power supply voltage between fuel injector terminal and engine ground.  Connector & terminal  #1 (E5) No. 2 (+) — Engine ground (-):  #2 (E16) No. 2 (+) — Engine ground (-):  #3 (E6) No. 2 (+) — Engine ground (-):  #4 (E17) No. 2 (+) — Engine ground (-):	Is the voltage more than 10 V?	Go to step 3.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between main relay and fuel injector connector  Poor contact in main relay connector  Poor contact in coupling connector  Poor contact in fuel injector connector
3	CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.  1) Disconnect the connector from ECM.  2) Measure the resistance of harness between ECM and fuel injector connector.  Connector & terminal  (B136) No. 6 — (E5) No. 1:  (B136) No. 5 — (E16) No. 1:  (B136) No. 4 — (E6) No. 1:  (B136) No. 3 — (E17) No. 1:	Is the resistance less than 1 $\Omega$ ?	Go to step 4.	Repair the har- ness and connec- tor.  NOTE: In this case, repair the following:  Open circuit in harness between ECM and fuel injector connector Poor contact in coupling connector
4	CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.  Measure the resistance of harness between ECM and chassis ground.  Connector & terminal  (B136) No. 6 — Chassis ground:  (B136) No. 5 — Chassis ground:  (B136) No. 4 — Chassis ground:  (B136) No. 3 — Chassis ground:	Is the resistance more than 1 $\mbox{M}\Omega\mbox{?}$	Go to step 5.	Repair the ground short circuit in har- ness between ECM and fuel injector connector.
5	CHECK EACH FUEL INJECTOR.  1) Turn the ignition switch to OFF.  2) Measure the resistance between each fuel injector terminals.  Terminals  No. 1 — No. 2:	Is the resistance 5 — 20 $\Omega$ ?	Go to step 6.	Replace the faulty fuel injector.
6	CHECK POOR CONTACT. Check poor contact in ECM connector.	Is the poor contact in ECM connector?	Repair the poor contact in ECM connector.	Inspection using "General Diagnostic Table" <ref. )-202,="" diagnostic="" en(h4dotc)(diag="" general="" inspection,="" table.="" to=""></ref.>

### 15.List of Diagnostic Trouble Code (DTC)

### A: LIST

DTC	Item	Note
P0031	HO2S Heater Control Circuit Low (Bank 1 Sensor 1)	<ref. (bank="" (dtc).="" 1="" 1),="" circuit="" code="" control="" diagnostic="" dtc="" en(h4dotc)(diag)-60,="" heater="" ho2s="" low="" p0031="" procedure="" sensor="" to="" trouble="" with=""></ref.>
P0032	HO2S Heater Control Circuit High (Bank 1 Sensor 1)	<ref. control<br="" dtc="" en(h4dotc)(diag)-62,="" heater="" ho2s="" p0032="" to="">CIRCUIT HIGH (BANK 1 SENSOR 1), Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P0037	HO2S Heater Control Circuit Low (Bank 1 Sensor 2)	<ref. control<br="" dtc="" en(h4dotc)(diag)-64,="" heater="" ho2s="" p0037="" to="">CIRCUIT LOW (BANK 1 SENSOR 2), Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P0038	HO2S Heater Control Circuit High (Bank 1 Sensor 2)	<ref. control<br="" dtc="" en(h4dotc)(diag)-67,="" heater="" ho2s="" p0038="" to="">CIRCUIT HIGH (BANK 1 SENSOR 2), Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P0102	Mass or Volume Air Flow Circuit Low Input	<ref. (dtc).="" air="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-69,="" flow="" input,="" low="" mass="" or="" p0102="" procedure="" to="" trouble="" volume="" with=""></ref.>
P0103	Mass or Volume Air Flow Circuit High Input	<ref. air<br="" dtc="" en(h4dotc)(diag)-72,="" mass="" or="" p0103="" to="" volume="">FLOW CIRCUIT HIGH INPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P0107	Manifold Absolute Pressure/Barometric Pressure Circuit Low Input	<ref. absolute<br="" dtc="" en(h4dotc)(diag)-74,="" manifold="" p0107="" to="">PRESSURE/BAROMETRIC PRESSURE CIRCUIT LOW INPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P0108	Intake Air Pressure Sensor Circuit High Input	<ref. (dtc).="" absolute="" barometric="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-76,="" high="" input,="" manifold="" p0108="" pressure="" procedure="" to="" trouble="" with=""></ref.>
P0112	Intake Air Temperature Circuit Low Input	<ref. (dtc).="" air="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-78,="" input,="" intake="" low="" p0112="" procedure="" temperature="" to="" trouble="" with=""></ref.>
P0113	Intake Air Temperature Circuit High Input	<ref. (dtc).="" air="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-80,="" high="" input,="" intake="" p0113="" procedure="" temperature="" to="" trouble="" with=""></ref.>
P0117	Engine Coolant Temperature Circuit Low Input	<ref. (dtc).="" circuit="" code="" coolant="" diagnostic="" dtc="" en(h4dotc)(diag)-83,="" engine="" input,="" low="" p0117="" procedure="" temper-ature="" to="" trouble="" with=""></ref.>
P0118	Engine Coolant Temperature Circuit High Input	<ref. (dtc).="" circuit="" code="" coolant="" diagnostic="" dtc="" en(h4dotc)(diag)-85,="" engine="" high="" input,="" p0118="" procedure="" temper-ature="" to="" trouble="" with=""></ref.>
P0122	Throttle/Pedal Position Sensor/ Switch "A" Circuit Low Input	<ref. "a"="" (dtc).="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-88,="" input,="" low="" p0122="" pedal="" position="" procedure="" sensor="" switch="" throttle="" to="" trouble="" with=""></ref.>
P0123	Throttle/Pedal Position Sensor/ Switch "A" Circuit High Input	<ref. "a"="" (dtc).="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-90,="" high="" input,="" p0123="" pedal="" position="" procedure="" sensor="" switch="" throttle="" to="" trouble="" with=""></ref.>
P0131	O2 Sensor Circuit Low Voltage (Bank 1 Sensor 1)	<ref. (bank="" (dtc).="" 1="" 1),="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-92,="" low="" o2="" p0131="" procedure="" sensor="" to="" trouble="" voltage="" with=""></ref.>
P0132	O2 Sensor Circuit High Voltage (Bank 1 Sensor 1)	<ref. (bank="" (dtc).="" 1="" 1),="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-94,="" high="" o2="" p0132="" procedure="" sensor="" to="" trouble="" voltage="" with=""></ref.>
P0134	O2 Sensor Circuit No Activity Detected (Bank 1 Sensor 1)	<ref. (bank="" (dtc).="" 1="" 1),="" activity="" circuit="" code="" detected="" diagnostic="" dtc="" en(h4dotc)(diag)-96,="" no="" o2="" p0134="" procedure="" sensor="" to="" trouble="" with=""></ref.>
P0137	O2 Sensor Circuit Low Voltage (Bank 1 Sensor 2)	<ref. (bank="" (dtc).="" 1="" 2),="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-98,="" low="" o2="" p0137="" procedure="" sensor="" to="" trouble="" voltage="" with=""></ref.>

DTC	Item	Note
P0138	O2 Sensor Circuit High Voltage (Bank 1 Sensor 2)	<ref. (bank="" (dtc).="" 1="" 2),="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-101,="" high="" o2="" p0138="" procedure="" sensor="" to="" trouble="" voltage="" with=""></ref.>
P0171	System Too Lean (Bank 1)	<ref. (bank="" (dtc).="" 1),="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-103,="" lean="" p0171="" procedure="" system="" to="" too="" trouble="" with=""></ref.>
P0172	System Too Rich (Bank 1)	<ref. (bank="" (dtc).="" 1),="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-104,="" p0172="" procedure="" rich="" system="" to="" too="" trouble="" with=""></ref.>
P0222	Throttle/Pedal Position Sensor/ Switch "B" Circuit Low Input	<ref. "b"="" (dtc).="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-107,="" input,="" low="" p0222="" pedal="" position="" procedure="" sensor="" switch="" throttle="" to="" trouble="" with=""></ref.>
P0223	Throttle/Pedal Position Sensor/ Switch "B" Circuit High Input	<ref. "b"="" (dtc).="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-109,="" high="" input,="" p0223="" pedal="" position="" procedure="" sensor="" switch="" throttle="" to="" trouble="" with=""></ref.>
P0230	Fuel Pump Primary Circuit	<ref. cir-<br="" dtc="" en(h4dotc)(diag)-111,="" fuel="" p0230="" primary="" pump="" to="">CUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P0245	Turbo/Super Charger Wastegate Solenoid "A" Low	<ref. "a"="" (dtc).="" charger="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-114,="" low,="" p0245="" procedure="" solenoid="" super="" to="" trouble="" turbo="" wastegate="" with=""></ref.>
P0246	Turbo/Super Charger Wastegate Solenoid "A" High	<ref. "a"="" (dtc).="" charger="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-116,="" high,="" p0246="" procedure="" solenoid="" super="" to="" trouble="" turbo="" wastegate="" with=""></ref.>
P0261	Cylinder 1 Injector Circuit Low	<ref. (dtc).="" 1="" circuit="" code="" cylinder="" diagnostic="" dtc="" en(h4dotc)(diag)-118,="" injector="" low,="" p0261="" procedure="" to="" trouble="" with=""></ref.>
P0264	Cylinder 2 Injector Circuit Low	<ref. (dtc).="" 2="" circuit="" code="" cylinder="" diagnostic="" dtc="" en(h4dotc)(diag)-118,="" injector="" low,="" p0264="" procedure="" to="" trouble="" with=""></ref.>
P0267	Cylinder 3 Injector Circuit Low	<ref. (dtc).="" 3="" circuit="" code="" cylinder="" diagnostic="" dtc="" en(h4dotc)(diag)-118,="" injector="" low,="" p0267="" procedure="" to="" trouble="" with=""></ref.>
P0270	Cylinder 4 Injector Circuit Low	<ref. (dtc).="" 4="" circuit="" code="" cylinder="" diagnostic="" dtc="" en(h4dotc)(diag)-119,="" injector="" low,="" p0270="" procedure="" to="" trouble="" with=""></ref.>
P0327	Knock Sensor 1 Circuit Low Input (Bank 1 or Single Sensor)	<ref. (bank="" (dtc).="" 1="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-122,="" input="" knock="" low="" or="" p0327="" procedure="" sensor="" sensor),="" single="" to="" trouble="" with=""></ref.>
P0328	Knock Sensor 1 Circuit High Input (Bank 1 or Single Sensor)	<ref. (bank="" (dtc).="" 1="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-124,="" high="" input="" knock="" or="" p0328="" procedure="" sensor="" sensor),="" single="" to="" trouble="" with=""></ref.>
P0335	Crankshaft Position Sensor "A" Circuit	<ref. "a"="" (dtc).="" circuit,="" code="" crankshaft="" diagnostic="" dtc="" en(h4dotc)(diag)-126,="" p0335="" position="" procedure="" sensor="" to="" trouble="" with=""></ref.>
P0340	Camshaft Position Sensor "A" Circuit (Bank 1or Single Sensor)	<ref. camshaft="" dtc="" en(h4dotc)(diag)-128,="" p0340="" position="" sen-<br="" to="">SOR "A" CIRCUIT (BANK 1 OR SINGLE SENSOR), Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P0345	Camshaft Position Sensor "A" Circuit (Bank 2)	<ref. camshaft="" dtc="" en(h4dotc)(diag)-130,="" p0345="" position="" sen-<br="" to="">SOR "A" CIRCUIT (BANK 2), Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P0350	Ignition Coil Primary/Secondary Circuit	<ref. <br="" coil="" dtc="" en(h4dotc)(diag)-132,="" ignition="" p0350="" primary="" to="">SECONDARY CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P0365	Camshaft Position Sensor "B" Circuit (Bank 1)	<ref. camshaft="" dtc="" en(h4dotc)(diag)-135,="" p0365="" position="" sen-<br="" to="">SOR "B" CIRCUIT (BANK 1), Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P0390	Camshaft Position Sensor "B" Circuit (Bank 2)	<ref. "b"="" (bank="" (dtc).="" 2),="" camshaft="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-137,="" p0390="" position="" procedure="" sensor="" to="" trouble="" with=""></ref.>
P0458	Evaporative Emission Control System Purge Control Valve Circuit Low	<ref. (dtc).="" circuit="" code="" control="" diagnostic="" dtc="" emission="" en(h4dotc)(diag)-139,="" evaporative="" low,="" p0458="" procedure="" purge="" system="" to="" trouble="" valve="" with=""></ref.>

DTC	Item	Note
P0459	Evaporative Emission Control System Purge Control Valve Circuit High	<ref. (dtc).="" circuit="" code="" control="" diagnostic="" dtc="" emission="" en(h4dotc)(diag)-141,="" evaporative="" high,="" p0459="" procedure="" purge="" system="" to="" trouble="" valve="" with=""></ref.>
P0500	Vehicle Speed Sensor	<ref. dtc="" en(h4dotc)(diag)-143,="" p0500="" sensor,<br="" speed="" to="" vehicle="">Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P0512	Starter Request Circuit	<ref. cir-<br="" dtc="" en(h4dotc)(diag)-144,="" p0512="" request="" starter="" to="">CUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P0513	Incorrect Immobilizer Key	<ref. (dtc).="" code="" diagnostic="" dtc="" im(diag)-17,="" immobilizer="" incorrect="" key,="" p0513="" procedure="" to="" trouble="" with=""></ref.>
P0519	Idle Control System Malfunction (Fail-Safe)	<ref. (dtc).="" (fail-safe),="" code="" control="" diagnostic="" dtc="" en(h4dotc)(diag)-146,="" idle="" malfunction="" p0519="" procedure="" system="" to="" trouble="" with=""></ref.>
P0562	System Voltage Low	<ref. (dtc).="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-147,="" low,="" p0562="" procedure="" system="" to="" trouble="" voltage="" with=""></ref.>
P0563	System Voltage High	<ref. (dtc).="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-149,="" high,="" p0563="" procedure="" system="" to="" trouble="" voltage="" with=""></ref.>
P0600	Serial Communication Link	<ref. (dtc).="" code="" communication="" diagnostic="" dtc="" en(h4dotc)(diag)-151,="" link,="" p0600="" procedure="" serial="" to="" trouble="" with=""></ref.>
P0604	Internal Control Module Read Access Memory (RAM) Error	<ref. control="" dtc="" en(h4dotc)(diag)-151,="" internal="" mod-<br="" p0604="" to="">ULE READ ACCESS MEMORY (RAM) ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P0605	Internal Control Module Read Only Memory (ROM) Error	<ref. control="" dtc="" en(h4dotc)(diag)-151,="" internal="" mod-<br="" p0605="" to="">ULE READ ONLY MEMORY (ROM) ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P0607	Control Module Performance	<ref. (dtc).="" code="" control="" diagnostic="" dtc="" en(h4dotc)(diag)-152,="" module="" p0607="" per-formance,="" procedure="" to="" trouble="" with=""></ref.>
P0638	Throttle Actuator Control Range/ Performance (Bank 1)	<ref. (bank="" (dtc).="" 1),="" actuator="" code="" control="" diagnostic="" dtc="" en(h4dotc)(diag)-154,="" p0638="" performance="" procedure="" range="" throttle="" to="" trouble="" with=""></ref.>
P0700	Transmission Control System (MIL Request)	<ref. (dtc).="" (mil="" code="" control="" diagnostic="" dtc="" en(h4dotc)(diag)-154,="" p0700="" procedure="" request),="" system="" to="" transmission="" trouble="" with=""></ref.>
P0851	Neutral Switch Input Circuit Low	<ref. (dtc).="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-154,="" input="" low,="" neutral="" p0851="" procedure="" switch="" to="" trouble="" with=""></ref.>
P0852	Neutral Switch Input Circuit High	<ref. (dtc).="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-154,="" high,="" input="" neutral="" p0852="" procedure="" switch="" to="" trouble="" with=""></ref.>
P1110	Atmospheric Pressure Sensor Circuit Malfunction (Low Input)	<ref. atmospheric="" dtc="" en(h4dotc)(diag)-155,="" p1110="" pressure<br="" to="">SENSOR CIRCUIT MALFUNCTION (LOW INPUT), Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P1111	Atmospheric Pressure Sensor Circuit Malfunction (High Input)	<ref. (dtc).="" (high="" atmospheric="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-155,="" input),="" malfunction="" p1111="" pressure="" procedure="" sensor="" to="" trouble="" with=""></ref.>
P1160	Return Spring Failure	<ref. dtc="" en(h4dotc)(diag)-155,="" failure,<br="" p1160="" return="" spring="" to="">Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P1518	Starter Switch Circuit Low Input	<ref. (dtc).="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-156,="" input,="" low="" p1518="" procedure="" starter="" switch="" to="" trouble="" with=""></ref.>
P1560	Back-Up Voltage Circuit Malfunction	<ref. back-up="" cir-<br="" dtc="" en(h4dotc)(diag)-158,="" p1560="" to="" voltage="">CUIT MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P1570	Antenna	<ref. (dtc).="" antenna,="" code="" diagnostic="" dtc="" im(diag)-18,="" p1570="" procedure="" to="" trouble="" with=""></ref.>
P1571	Reference Code Incompatibility	<ref. code="" dtc="" im(diag)-21,="" incompatibility,<br="" p1571="" reference="" to="">Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
P1572	IMM Circuit Failure (Except Antenna Circuit)	<ref. (dtc).="" (except="" antenna="" circuit="" circuit),="" code="" diagnostic="" dtc="" failure="" im(diag)-22,="" imm="" p1572="" procedure="" to="" trouble="" with=""></ref.>

DTC	Item	Note
P1574	Key Communication Failure	<ref. (dtc).="" code="" communication="" diagnostic="" dtc="" failure,="" im(diag)-25,="" key="" p1574="" procedure="" to="" trouble="" with=""></ref.>
P1576	EGI Control Module EEPROM	<ref. (dtc).="" code="" control="" diagnostic="" dtc="" eeprom,="" egi="" im(diag)-25,="" module="" p1576="" procedure="" to="" trouble="" with=""></ref.>
P1577	IMM Control Module EEPROM	<ref. (dtc).="" code="" control="" diagnostic="" dtc="" eeprom,="" im(diag)-25,="" imm="" module="" p1577="" procedure="" to="" trouble="" with=""></ref.>
P1578	Meter Failure	<ref. (dtc).="" code="" diagnostic="" dtc="" failure,="" im(diag)-26,="" meter="" p1578="" procedure="" to="" trouble="" with=""></ref.>
P2088	OCV Solenoid Valve Signal A Circuit Open (Bank 1)	<ref. (bank="" (dtc).="" 1),="" a="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-160,="" ocv="" open="" p2088="" procedure="" signal="" solenoid="" to="" trouble="" valve="" with=""></ref.>
P2089	OCV Solenoid Valve Signal A Circuit Short (Bank 1)	<ref. (bank="" (dtc).="" 1),="" a="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-162,="" ocv="" p2089="" procedure="" short="" signal="" solenoid="" to="" trouble="" valve="" with=""></ref.>
P2090	OCV Solenoid Valve Signal B Circuit Open (Bank 1)	<ref. (bank="" (dtc).="" 1),="" b="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-164,="" ocv="" open="" p2090="" procedure="" signal="" solenoid="" to="" trouble="" valve="" with=""></ref.>
P2091	OCV Solenoid Valve Signal B Circuit Short (Bank 1)	<ref. (bank="" (dtc).="" 1),="" b="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-166,="" ocv="" p2091="" procedure="" short="" signal="" solenoid="" to="" trouble="" valve="" with=""></ref.>
P2092	OCV Solenoid Valve Signal A Circuit Open (Bank 2)	<ref. (bank="" (dtc).="" 2),="" a="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-168,="" ocv="" open="" p2092="" procedure="" signal="" solenoid="" to="" trouble="" valve="" with=""></ref.>
P2093	OCV Solenoid Valve Signal A Circuit Short (Bank 2)	<ref. (bank="" (dtc).="" 2),="" a="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-170,="" ocv="" p2093="" procedure="" short="" signal="" solenoid="" to="" trouble="" valve="" with=""></ref.>
P2094	OCV Solenoid Valve Signal B Circuit Open (Bank 2)	<ref. (bank="" (dtc).="" 2),="" b="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-172,="" ocv="" open="" p2094="" procedure="" signal="" solenoid="" to="" trouble="" valve="" with=""></ref.>
P2095	OCV Solenoid Valve Signal B Circuit Short (Bank 2)	<ref. (bank="" (dtc).="" 2),="" b="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-174,="" ocv="" p2095="" procedure="" short="" signal="" solenoid="" to="" trouble="" valve="" with=""></ref.>
P2101	Throttle Actuator Control Motor Circuit Range/Performance	<ref. (dtc).="" actuator="" circuit="" code="" control="" diagnostic="" dtc="" en(h4dotc)(diag)-176,="" motor="" p2101="" performance,="" procedure="" range="" throttle="" to="" trouble="" with=""></ref.>
P2102	Throttle Actuator Control Motor Circuit Low	<ref. (dtc).="" actuator="" circuit="" code="" control="" diagnostic="" dtc="" en(h4dotc)(diag)-181,="" low,="" motor="" p2102="" procedure="" throttle="" to="" trouble="" with=""></ref.>
P2103	Throttle Actuator Control Motor Circuit High	<ref. (dtc).="" actuator="" circuit="" code="" control="" diagnostic="" dtc="" en(h4dotc)(diag)-183,="" high,="" motor="" p2103="" procedure="" throttle="" to="" trouble="" with=""></ref.>
P2109	Throttle/Pedal Position Sensor A Minimum Stop Performance	<ref. (dtc).="" angle="" closed="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-184,="" error,="" p2109="" position="" procedure="" throttle="" to="" trouble="" with=""></ref.>
P2122	Throttle/Pedal Position Sensor/ Switch "D" Circuit Low Input	<ref. "d"="" (dtc).="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-185,="" input,="" low="" p2122="" pedal="" position="" procedure="" sensor="" switch="" throttle="" to="" trouble="" with=""></ref.>
P2123	Throttle/Pedal Position Sensor/ Switch "D" Circuit High Input	<ref. "d"="" (dtc).="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-188,="" high="" input,="" p2123="" pedal="" position="" procedure="" sensor="" switch="" throttle="" to="" trouble="" with=""></ref.>
P2127	Throttle/Pedal Position Sensor/ Switch "E" Circuit Low Input	<ref. "e"="" (dtc).="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-190,="" input,="" low="" p2127="" pedal="" position="" procedure="" sensor="" switch="" throttle="" to="" trouble="" with=""></ref.>
P2128	Throttle/Pedal Position Sensor/ Switch "E" Circuit High Input	<ref. "e"="" (dtc).="" circuit="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-193,="" high="" input,="" p2128="" pedal="" position="" procedure="" sensor="" switch="" throttle="" to="" trouble="" with=""></ref.>

### **List of Diagnostic Trouble Code (DTC)**

**ENGINE (DIAGNOSTICS)** 

DTC	Item	Note
P2135	Throttle/Pedal Position Sensor/ Switch "A"/"B" Voltage Rationality	<ref. "a"="" "b"="" (dtc).="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-195,="" p2135="" pedal="" position="" procedure="" rationality,="" sensor="" switch="" throttle="" to="" trouble="" voltage="" with=""></ref.>
P2138	Throttle/Pedal Position Sensor/ Switch "D"/"E" Voltage Rationality	<ref. "d"="" "e"="" (dtc).="" code="" diagnostic="" dtc="" en(h4dotc)(diag)-198,="" p2138="" pedal="" position="" procedure="" rationality,="" sensor="" switch="" throttle="" to="" trouble="" voltage="" with=""></ref.>

### 16. Diagnostic Procedure with Diagnostic Trouble Code (DTC)


### A: DTC P0031 HO2S HEATER CONTROL CIRCUIT LOW (BANK 1 SENSOR 1)

### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCE-DURE, Inspection Mode.>.

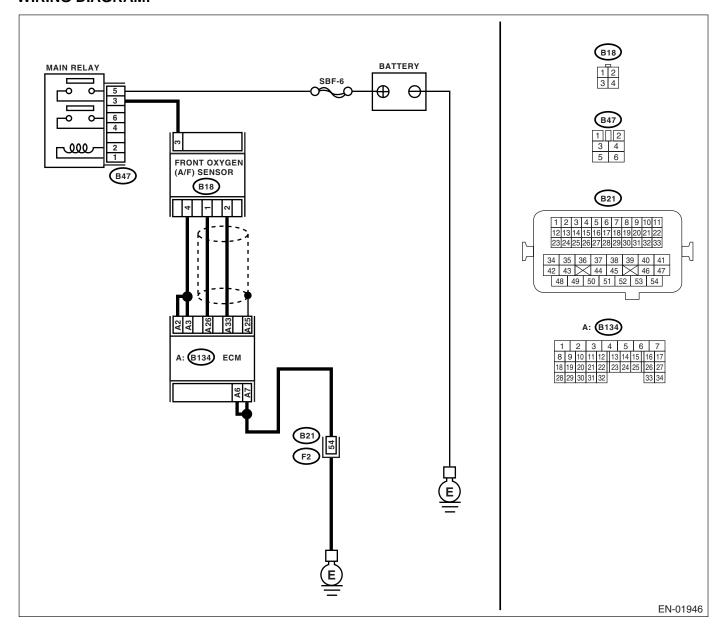


	Step	Check	Yes	No
1	CHECK POWER SUPPLY TO FRONT OXY-GEN (A/F) SENSOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from front oxygen (A/F) sensor.  3) Turn the ignition switch to ON.  4) Measure the voltage between front oxygen (A/F) sensor connector and engine ground.  Connector & terminal  (B18) No. 3 (+) — Engine ground (-):	Is the voltage more than 10 V?	Go to step 2.	Repair the power supply line. NOTE: In this case, repair the following: • Open circuit in harness between main relay and front oxygen (A/F) sensor connector • Poor contact in front oxygen (A/F) sensor connector • Poor contact in main relay connector
2	CHECK HARNESS BETWEEN FRONT OXY-GEN (A/F) SENSOR AND ECM.  1) Turn the ignition switch to OFF.  2) Disconnect the connectors from ECM.  3) Measure the voltage between front oxygen (A/F) sensor connector and ECM.  Connector & terminal  (B18) No. 4 — (B134) No. 2:  (B18) No. 4 — (B134) No. 3:	Is the resistance less than 1 $\Omega$ ?	Go to step 3.	Repair the open circuit in harness between ECM and front oxygen (A/F) sensor.
3	CHECK HARNESS BETWEEN FRONT OXY- GEN (A/F) SENSOR AND ECM. Measure the resistance between ECM connec- tor and chassis ground. Connector & terminal (B134) No. 2 — Chassis ground: (B134) No. 3 — Chassis ground:	Is the resistance more than 1 $\mbox{M}\Omega\mbox{?}$	Go to step 4.	Repair the ground short circuit in har- ness between ECM and front oxygen (A/F) sen- sor.
4	CHECK FRONT OXYGEN (A/F) SENSOR.  1) Turn the ignition switch to OFF.  2) Measure the resistance between front oxygen (A/F) sensor connector terminals.  Terminals  No. 3 — No. 4:	Is the resistance 2.4 $\Omega$ ?	Repair the poor contact in ECM connector.	Replace the front oxygen (A/F) sen- sor. <ref. to<br="">FU(H4DOTC)-33, Front Oxygen (A/ F) Sensor.&gt;</ref.>

## B: DTC P0032 HO2S HEATER CONTROL CIRCUIT HIGH (BANK 1 SENSOR 1) DTC DETECTING CONDITION:

Detect as soon as the malfunction occurs.

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

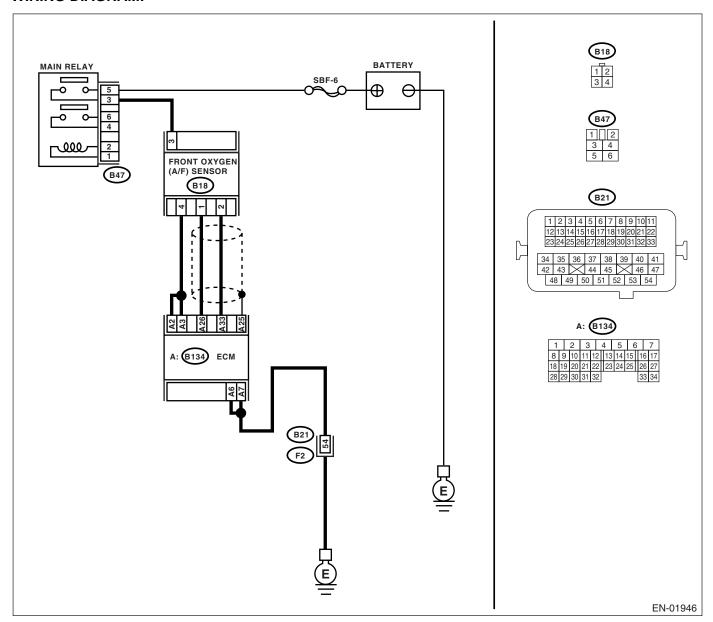


	Step	Check	Yes	No
1	CHECK GROUND CIRCUIT FOR ECM.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Measure the resistance between ECM connector and chassis ground.  Connector & terminal  (B134) No. 6 — Chassis ground:  (B136) No. 7 — Chassis ground:	Is the resistance less than 5 $\Omega$ ?	Go to step 2.	Repair the open circuit in harness between ECM connector and chassis ground.
2	CHECK VOLTAGE BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR.  Measure the voltage between ECM connector and chassis ground.  Connector & terminal  (B137) No. 2 (+) — Chassis ground (-): (B137) No. 3 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Repair the battery short circuit in har- ness between ECM and front oxygen (A/F) sen- sor connector.	Repair the poor contact in ECM connector.

## C: DTC P0037 HO2S HEATER CONTROL CIRCUIT LOW (BANK 1 SENSOR 2) DTC DETECTING CONDITION:

Two consecutive driving cycles with fault

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCE-DURE, Inspection Mode.>.

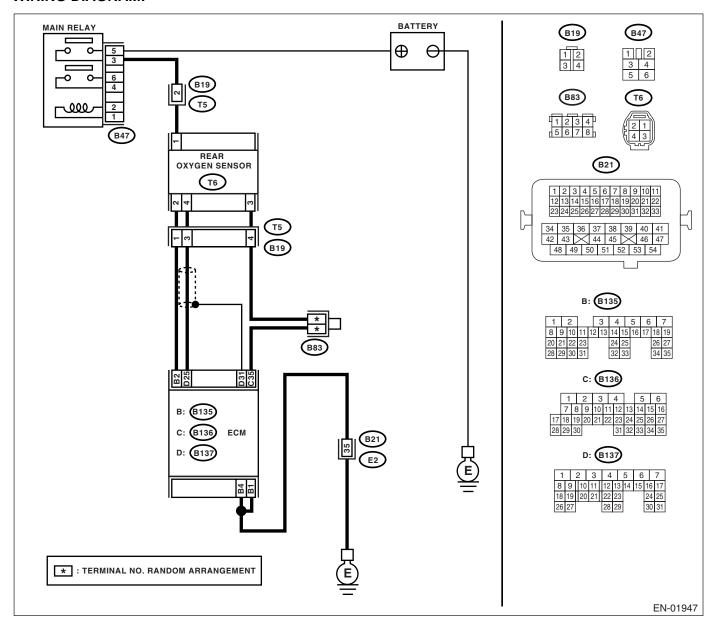

	Step	Check	Yes	No
1	CHECK GROUND CIRCUIT FOR ECM.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Measure the resistance of harness between ECM connector and chassis ground.  Connector & terminal  (B135) No. 1 — Chassis ground:  (B135) No. 4 — Chassis ground:	Is the resistance less than 5 $\Omega$ ?	Go to step 2.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between ECM and engine ground cable Poor contact in ECM connector Poor contact in coupling connector
2	CHECK HARNESS BETWEEN ECM AND REAR OXYGEN SENSOR.  1) Disconnect the connector from rear oxygen sensor.  2) Measure the resistance between ECM connector and chassis ground.  Connector & terminal  (B135) No. 2 — Chassis ground:	Is the voltage more than 1 $\mbox{M}\Omega ?$	Go to step 3.	Repair the ground short circuit in har- ness between ECM and rear oxy- gen sensor con- nector.
3	CHECK HARNESS BETWEEN ECM AND REAR OXYGEN SENSOR.  Measure the resistance between ECM connector and chassis ground.  Connector & terminal  (B135) No. 2 — Chassis ground:	Does the resistance change by shaking the ECM harness and connector?	Repair the poor contact in ECM connector.	Go to step 4.
4	CHECK POWER SUPPLY TO REAR OXY-GEN SENSOR.  1) Connect the connector to ECM. 2) Turn the ignition switch to ON. 3) Measure the voltage between rear oxygen sensor connector and chassis ground.  Connector & terminal  (T6) No. 1 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 5.	Repair the power supply line. NOTE: In this case, repair the following: • Open circuit in harness between main relay and rear oxygen sensor connector • Poor contact in rear oxygen sensor connector • Poor contact in coupling connector


Step	Check	Yes	No
5 CHECK REAR OXYGEN SENSOR.  1) Turn the ignition switch to OFF.  2) Measure the resistance between rear oxygen sensor connector terminals.  Terminals  No. 1 — No. 2:	Is the resistance less than 30 $\Omega$ ?	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between rear oxygen sensor and ECM connector  Poor contact in rear oxygen sensor connector  Poor contact in ECM connector  Poor contact in ECM connector  Poor contact in coupling connector	Replace the rear oxygen sensor. <ref. to<br="">FU(H4DOTC)-34, Rear Oxygen Sen- sor.&gt;</ref.>

## D: DTC P0038 HO2S HEATER CONTROL CIRCUIT HIGH (BANK 1 SENSOR 2) DTC DETECTING CONDITION:

Two consecutive driving cycles with fault

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

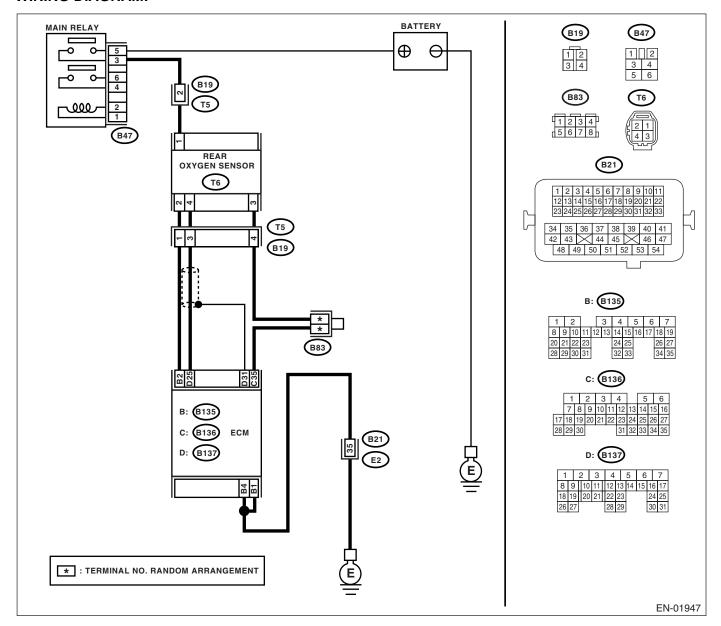

	Step	Check	Yes	No
1	CHECK GROUND CIRCUIT FOR ECM.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Measure the resistance of harness between ECM connector and chassis ground.  Connector & terminal  (B135) No. 4 — Chassis ground:  (B135) No. 1 — Chassis ground:	Is the resistance less than 5 $\Omega$ ?	Go to step 2.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between ECM and engine ground cable  Poor contact in ECM connector  Poor contact in coupling connector
2	CHECK HARNESS BETWEEN ECM AND REAR OXYGEN SENSOR.  Measure the voltage between ECM and chassis ground.  Connector & terminal  (B135) No. 2 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Repair the battery short circuit in har- ness between ECM and rear oxy- gen sensor.	connector.

### E: DTC P0102 MASS OR VOLUME AIR FLOW CIRCUIT LOW INPUT

### DTC DETECTING CONDITION:


Detect as soon as the malfunction occurs.

### **TROUBLE SYMPTOM:**

- Erroneous idling
- Engine stalls.
- · Poor driving performance

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCE-DURE, Inspection Mode.>.

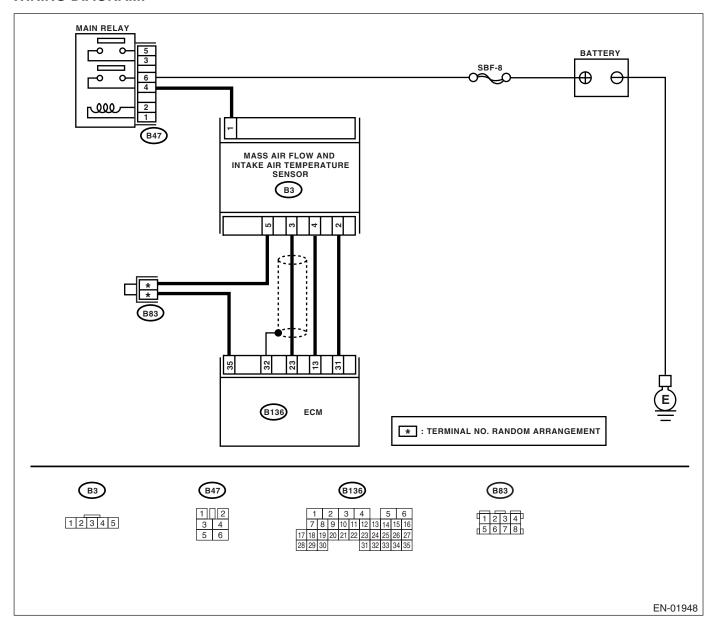

	Step	Check	Yes	No
1	READ THE DATA CONNECTING SUBARU	Is the voltage 0.2 — 4.7 V?	Even if the mal-	Go to step 2.
1	READ THE DATA CONNECTING SUBARU SELECT MONITOR.  1) Turn the ignition switch to OFF. 2) Connect the Subaru Select Monitor to data link connector. 3) Turn the ignition switch to ON, and the Subaru Select Monitor switch to ON. 4) Start and idle the engine. 5) Read the voltage of mass air flow sensor using Subaru Select Monitor.  NOTE: For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <ref. en(h4dotc)(diag)-21,="" moni-<="" select="" subaru="" th="" to=""><th>Is the voltage 0.2 — 4.7 V?</th><th>Even if the mal- function indicator light illuminates, the circuit has returned to a nor- mal condition at this time. A tempo- rary poor contact of the connector or harness may be the cause. Repair harness or con- nector in the mass air flow sensor. NOTE:</th><th>-</th></ref.>	Is the voltage 0.2 — 4.7 V?	Even if the mal- function indicator light illuminates, the circuit has returned to a nor- mal condition at this time. A tempo- rary poor contact of the connector or harness may be the cause. Repair harness or con- nector in the mass air flow sensor. NOTE:	-
	tor.>		In this case, repair the following:  Open or ground short circuit in harness between mass air flow sensor and ECM connector  Poor contact in mass air flow sensor or ECM connector	
2	CHECK INPUT SIGNAL FROM ECM.  Measure the voltage between ECM connector and chassis ground while engine is idling.  Connector & terminal  (B136) No. 23 (+) — Chassis ground (-):	Is the voltage more than 0.2 V?	Go to step 4.	Go to step 3.
3	CHECK INPUT SIGNAL FOR ECM (USING SUBARU SELECT MONITOR).  Measure the voltage between ECM connector and chassis ground while engine is idling.	Does the voltage change by shaking the harness and connector of ECM while monitoring the value with Subaru Select Monitor?	Repair the poor contact in ECM connector.	Replace and check it again because of ECM malfunction possibility.
4	CHECK POWER SUPPLY TO MASS AIR FLOW SENSOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from mass air flow sensor.  3) Turn the ignition switch to ON.  4) Measure voltage between mass air flow sensor connector and chassis ground.  Connector & terminal  (B3) No. 1 (+) — Chassis ground (-):	Is the voltage more than 10 V?		Repair the open circuit between mass air flow sensor and main relay.
5	CHECK HARNESS BETWEEN ECM AND MASS AIR FLOW SENSOR CONNECTOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Measure the resistance of harness between ECM and mass air flow sensor connector.  Connector & terminal  (B136) No. 23 — (B3) No. 3:  (B136) No. 31 — (B3) No. 2:  (B136) No. 35 — (B3) No. 5:	Is the resistance less than 1 $\Omega$ ?	Go to step 6.	Repair the open circuit between ECM and mass air flow sensor connector.

	Step	Check	Yes	No
6	CHECK HARNESS BETWEEN ECM AND MASS AIR FLOW SENSOR CONNECTOR. Measure the resistance of harness between ECM and chassis ground. Connector & terminal (B136) No. 23 — Chassis ground: (B136) No. 31 — Chassis ground: (B136) No. 35 — Chassis ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 7.	Repair the ground short circuit between ECM and mass air flow sen- sor connector.
7	CHECK POOR CONTACT. Check poor contact in mass air flow sensor connector.	Is there poor contact in mass air flow sensor connector?	Repair the poor contact in mass air flow sensor connector.	Replace the mass air flow and intake air temperature sensor. <ref. to<br="">FU(H4DOTC)-28, Mass Air Flow and Intake Air Temper- ature Sensor.&gt;</ref.>

### F: DTC P0103 MASS OR VOLUME AIR FLOW CIRCUIT HIGH INPUT

#### **DTC DETECTING CONDITION:**


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- Erroneous idling
- Engine stalls.
- · Poor driving performance

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCE-DURE, Inspection Mode.>.

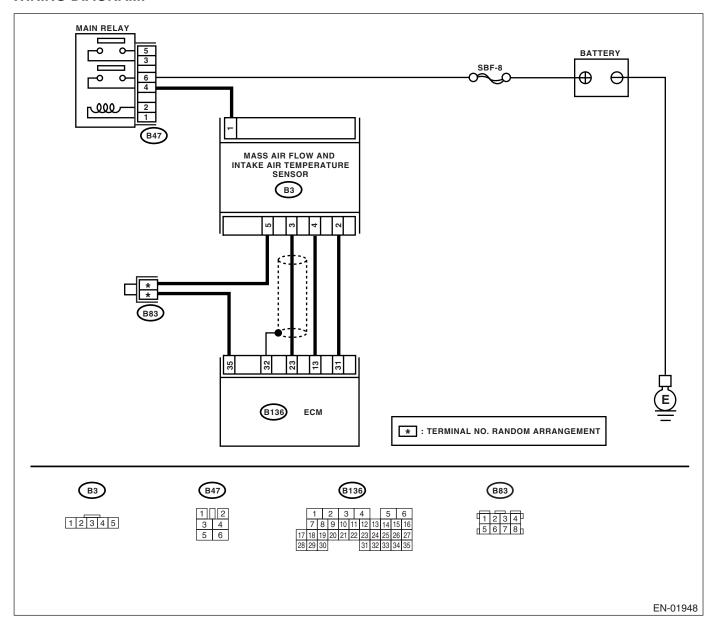

			T	
	Step	Check	Yes	No
1	READ THE DATA CONNECTING SUBARU SELECT MONITOR.  1) Turn the ignition switch to OFF. 2) Connect the Subaru Select Monitor to data link connector. 3) Turn the ignition switch to ON, and the Subaru Select Monitor switch to ON. 4) Start and idle the engine. 5) Read the voltage of mass air flow sensor using Subaru Select Monitor.  NOTE: For detailed operation procedure, refer to	Is the voltage 0.2 — 4.7 V?	Even if the mal- function indicator light illuminates, the circuit has returned to a nor- mal condition at this time.	Go to step 2.
	"READ CURRENT DATA SHOWN ON DIS- PLAY FOR ENGINE". <ref. to<br="">EN(H4DOTC)(diag)-21, Subaru Select Moni- tor.&gt;</ref.>			
2	CHECK HARNESS BETWEEN ECM AND MASS AIR FLOW SENSOR CONNECTOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from mass airflow sensor.  3) Turn the ignition switch to ON.  4) Measure voltage between mass air flow sensor connector and chassis ground.  Connector & terminal  (B3) No. 3 (+) — Chassis ground (-):	Is the voltage more than 5 V?	Repair the battery short circuit in har- ness between mass air flow sen- sor connector and ECM connector.	Go to step 3.
3	CHECK HARNESS BETWEEN ECM AND MASS AIR FLOW SENSOR CONNECTOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Measure the resistance of harness between ECM connector and mass air flow sensor connector.  Connector & terminal  (B3) No. 2 — (B136) No. 31:	Is the resistance less than 1 $\Omega$ ?	Replace the mass air flow sensor. <ref. to<br="">FU(H4DOTC)-28, Mass Air Flow and Intake Air Temper- ature Sensor.&gt;</ref.>	Repair the open circuit in harness between mass air flow sensor connector and ECM connector.


### G: DTC P0107 MANIFOLD ABSOLUTE PRESSURE/BAROMETRIC PRESSURE CIRCUIT LOW INPUT

#### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

#### CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCE-DURE, Inspection Mode.>.

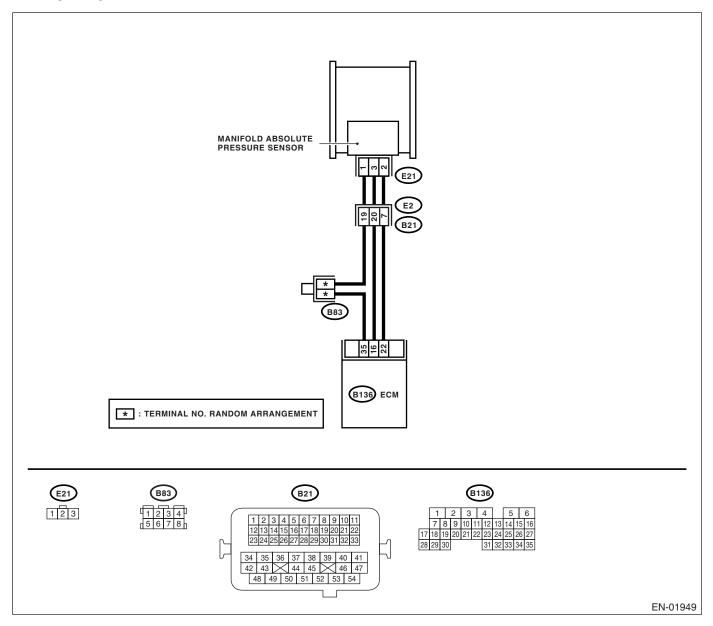

	Step	Check	Yes	No
1	CHECK INPUT SIGNAL FROM ECM.	Is the voltage more than 4.5 V?	Go to step 3.	Go to step 2.
	Measure the voltage between ECM connector and chassis ground.			
	Connector & terminal (B136) No. 16 (+) — Chassis ground (-):			

	Step	Check	Yes	No
2	CHECK INPUT SIGNAL FROM ECM.  Measure the voltage between ECM connector and chassis ground.  Connector & terminal  (B136) No. 16 (+) — Chassis ground (-):	Does the voltage change by shaking the harness and connector of ECM while monitoring the value with voltage meter?	Repair the poor contact in ECM connector.	Replace the ECM. <ref. to<br="">FU(H4DOTC)-35, Engine Control Module (ECM).&gt;</ref.>
3	CHECK INPUT SIGNAL FROM ECM.  Measure the voltage between ECM and chassis ground.  Connector & terminal  (B136) No. 22 (+) — Chassis ground (-):	Is the voltage less than 0.7 V?	Go to step 4.	Replace the ECM. <ref. to<br="">FU(H4DOTC)-35, Engine Control Module (ECM).&gt;</ref.>
4	CHECK HARNESS BETWEEN ECM AND MANIFOLD ABSOLUTE PRESSURE SENSOR CONNECTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from the manifold absolute pressure sensor. 3) Turn the ignition switch to ON. 4) Measure the voltage between manifold absolute pressure sensor connector and engine ground.  Connector & terminal  (E21) No. 3 (+) — Engine ground (-):	Is the voltage more than 4.5 V?	Go to step 5.	Repair the open circuit in harness between ECM and manifold absolute pressure sensor connector.
5	CHECK HARNESS BETWEEN ECM AND MANIFOLD ABSOLUTE PRESSURE SENSOR CONNECTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Measure the resistance of harness between ECM and manifold absolute pressure sensor connector.  Connector & terminal (B136) No. 35 — (E21) No. 1:	Is the resistance less than 1 $\Omega$ ?	Go to step 6.	Repair the open circuit in harness between ECM and manifold absolute pressure sensor connector.
6	CHECK HARNESS BETWEEN ECM AND MANIFOLD ABSOLUTE PRESSURE SENSOR CONNECTOR.  Measure the resistance of harness between manifold absolute pressure sensor connector and engine ground.  Connector & terminal  (E21) No. 1 — Engine ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 7.	Repair the ground short circuit in har- ness between ECM and mani- fold absolute pres- sure sensor connector.
7	CHECK POOR CONTACT. Check poor contact in manifold absolute pressure sensor connector.	Is there poor contact in manifold absolute pressure sensor connector?	Repair the poor contact in manifold absolute pressure sensor connector.	Replace the manifold absolute pressure sensor. <ref. air="" and="" flow="" fu(h4dotc)-28,="" intake="" mass="" sensor.="" temperature="" to=""></ref.>


### H: DTC P0108 MANIFOLD ABSOLUTE PRESSURE/BAROMETRIC PRESSURE CIRCUIT HIGH INPUT

#### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCE-DURE, Inspection Mode.>.

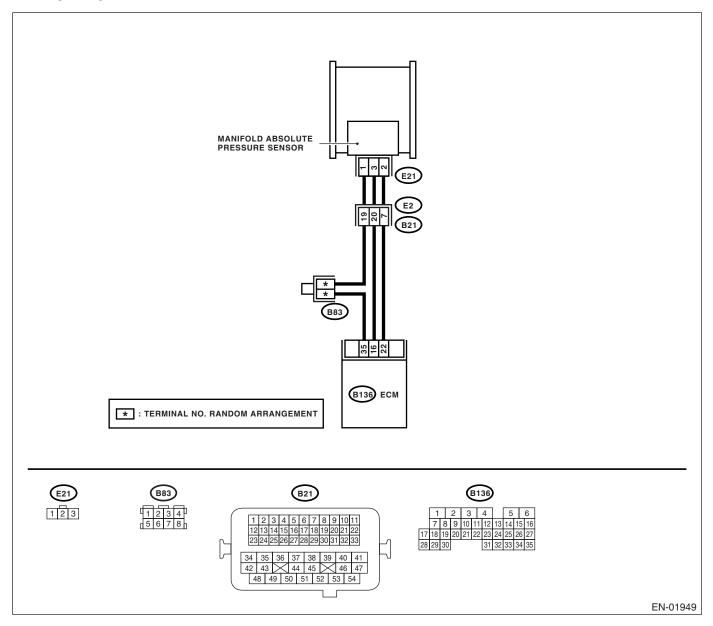

	Step	Check	Yes	No
1	CHECK INPUT SIGNAL FROM ECM.	Is the voltage more than 4.5 V?	Go to step 3.	Go to step 2.
	Measure the voltage between ECM connector and chassis ground.			
	Connector & terminal (B136) No. 16 (+) — Chassis ground (-):			

	Step	Check	Yes	No
2	CHECK INPUT SIGNAL FROM ECM.	Does the voltage change by	Repair the poor	Replace the ECM.
	Measure the voltage between ECM connector	shaking the harness and con-	contact in ECM	<ref. th="" to<=""></ref.>
	and chassis ground.	nector of ECM while monitor-	connector.	FU(H4DOTC)-35,
	Connector & terminal	ing the value with voltage		Engine Control
	(B136) No. 16 (+) — Chassis ground (-):	meter?		Module (ECM).>
3	CHECK INPUT SIGNAL FROM ECM.	Is the voltage more than 4.5 V?	Go to sten 4	Replace the ECM.
	Measure the voltage between ECM connector	le the veltage mere than he v.	00 to 0top 11	<ref. th="" to<=""></ref.>
	and chassis ground.			FU(H4DOTC)-35,
	Connector & terminal			Engine Control
	(B136) No. 22 (+) — Chassis ground (-):			Module (ECM).>
4	CHECK HARNESS BETWEEN ECM AND	Is the voltage more than 4.5 V?	Go to sten 5	Repair the open
-	MANIFOLD ABSOLUTE PRESSURE SEN-	is the voltage more than 4.5 v :	00 to step <b>3.</b>	circuit in harness
	SOR CONNECTOR.			between ECM and
	Turn the ignition switch to OFF.			manifold absolute
	<ul><li>2) Disconnect the connector from the manifold</li></ul>			pressure sensor
	absolute pressure sensor.			connector.
	3) Turn the ignition switch to ON.			001111001011
	Measure the voltage between manifold			
	absolute pressure sensor connector and			
	engine ground.			
	Connector & terminal			
	(E21) No. 3 (+) — Engine ground (–):			
5	CHECK HARNESS BETWEEN ECM AND	Is the resistance less than 1	Go to step 6.	Repair the open
ľ	MANIFOLD ABSOLUTE PRESSURE SEN-	$\Omega$ ?		circuit in harness
	SOR CONNECTOR.			between ECM and
	1) Turn the ignition switch to OFF.			manifold absolute
	2) Disconnect the connector from ECM.			pressure sensor
	3) Measure the resistance of harness			connector.
	between ECM and manifold absolute pressure			
	sensor connector.			
	Connector & terminal			
	(B136) No. 22 — (E21) No. 2:			
6	CHECK HARNESS BETWEEN ECM AND	Is the resistance less than 1	Go to step 7.	Repair the open
	MANIFOLD ABSOLUTE PRESSURE SEN-	$\Omega$ ?	•	circuit in harness
	SOR CONNECTOR.			between ECM and
	Measure the resistance of harness between			manifold absolute
	ECM and manifold absolute pressure sensor			pressure sensor
	connector.			connector.
	Connector & terminal			
	(B136) No. 35 — (E21) No. 1:			
7	CHECK POOR CONTACT.	Is there poor contact in mani-	Repair the poor	Replace the mani-
	Check poor contact in manifold absolute pres-	fold absolute pressure sensor	contact in mani-	fold absolute pres-
	sure sensor connector.	connector?	fold absolute pres-	sure sensor. <ref.< th=""></ref.<>
			sure sensor	to FU(H4DOTC)-
			connector.	29, Manifold Abso-
				lute Pressure Sen-
				sor.>

#### I: DTC P0112 INTAKE AIR TEMPERATURE CIRCUIT LOW INPUT

#### DTC DETECTING CONDITION:


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- Erroneous idling
- Poor driving performance

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

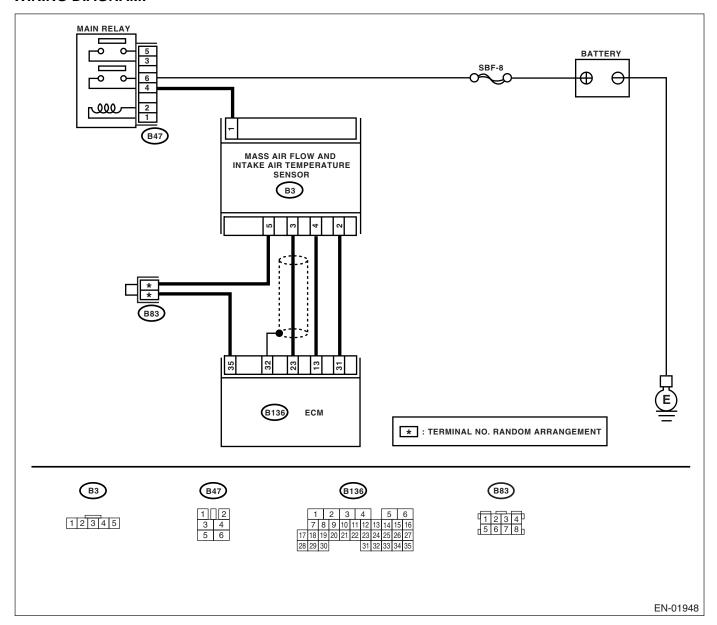

				,
	Step	Check	Yes	No
1	CHECK CURRENT DATA.  1) Start the engine.	Is engine coolant temperature more than 55°C (131°F)?	Go to step 2.	Repair the poor contact.
	Read the data of intake air temperature sensor signal using Subaru Select Monitor.  NOTE:			NOTE: In this case, repair the following:
	For detailed operation procedure, refer to "READ CURRENT DATA SHOWN ON DIS-			Poor contact in mass air flow and
	PLAY FOR ENGINE". <ref. en(h4dotc)(diag)-21,="" moni-<="" select="" subaru="" th="" to=""><th></th><th></th><th>intake air tempera- ture sensor</th></ref.>			intake air tempera- ture sensor
	tor.>			Poor contact in ECM
				Poor contact in joint connector
2	CHECK HARNESS BETWEEN MASS AIR FLOW AND INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector mass air flow and intake air temperature sensor. 3) Turn the ignition switch to ON. 4) Read the data of intake air temperature	Is the value less than -36°C (-33°F)?	Replace the mass air flow and intake air temperature sensor. <ref. to<br="">FU(H4DOTC)-28, Mass Air Flow and Intake Air Temper- ature Sensor.&gt;</ref.>	Repair the ground short circuit in har- ness between mass air flow and intake air tempera- ture sensor and ECM connector.
	sensor signal using Subaru Select Monitor.  NOTE: For detailed operation procedure, refer to  "READ CURRENT DATA SHOWN ON DIS- PLAY FOR ENGINE". <ref. en(h4dotc)(diag)-21,="" monitor.="" select="" subaru="" to=""></ref.>		ature derison.	

#### J: DTC P0113 INTAKE AIR TEMPERATURE CIRCUIT HIGH INPUT

#### **DTC DETECTING CONDITION:**


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- Erroneous idling
- Poor driving performance

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

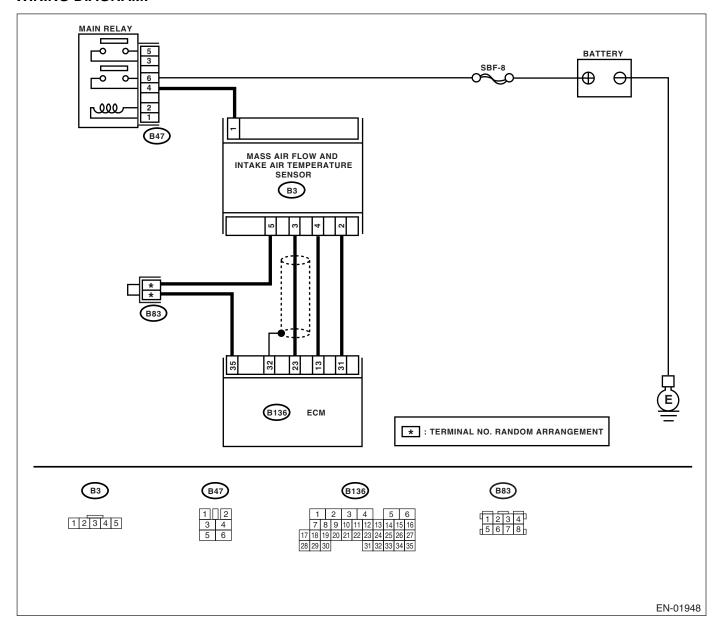

	Step	Check	Yes	No
1	CHECK CURRENT DATA.  1) Start the engine. 2) Read the data of intake air temperature sensor signal using Subaru Select Monitor.  NOTE: For detailed operation procedure, refer to "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <ref. en(h4dotc)(diag)-21,="" monitor.="" select="" subaru="" to=""></ref.>			Repair the poor contact.  NOTE: In this case, repair the following:  • Poor contact in mass air flow and intake air temperature sensor  • Poor contact in ECM  • Poor contact in joint connector
2	CHECK HARNESS BETWEEN MASS AIR FLOW AND INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector mass air flow and intake air temperature sensor.  3) Measure the voltage between mass air flow and intake air temperature sensor connector and engine ground.  Connector & terminal  (B3) No. 4 (+) — Engine ground (-):	Is the voltage more than 10 V?	Repair the battery short circuit in har- ness between mass air flow and intake air tempera- ture sensor and ECM connector.	Go to step 3.
3	CHECK HARNESS BETWEEN MASS AIR FLOW AND INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.  1) Turn the ignition switch to ON. 2) Measure the voltage between mass air flow and intake air temperature sensor connector and engine ground.  Connector & terminal  (B3) No. 4 (+) — Engine ground (-):	Is the voltage more than 10 V?	Repair the battery short circuit in har- ness between mass air flow and intake air tempera- ture sensor and ECM connector.	Go to step 4.
4	CHECK HARNESS BETWEEN MASS AIR FLOW AND INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.  Measure the voltage between mass air flow and intake air temperature sensor connector and engine ground.  Connector & terminal  (B3) No. 4 (+) — Engine ground (-):	Is the voltage more than 4 V?	Go to step 5.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in ness between mass air flow and intake air temperature sensor and ECM connector  Poor contact in mass air flow and intake air temperature sensor  Poor contact in mass air flow and intake air temperature sensor  Poor contact in ECM  Poor contact in joint connector

Step	Check	Yes	No
5 CHECK HARNESS BETWEEN MASS AIR FLOW AND INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.  1) Turn the ignition switch to OFF.  2) Measure the resistance of harness between mass air flow and intake air temperature sensor and engine ground.  Connector & terminal  (B3) No. 5 — Engine ground:	Is the resistance less than 5 Ω?	Replace the mass air flow and intake air temperature sensor. <ref. th="" to<=""><th>Repair the har- ness and connec- tor. NOTE: In this case, repair the following:</th></ref.>	Repair the har- ness and connec- tor. NOTE: In this case, repair the following:

### K: DTC P0117 ENGINE COOLANT TEMPERATURE CIRCUIT LOW INPUT DTC DETECTING CONDITION:


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- · Hard to start
- Erroneous idling
- Poor driving performance

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCE-DURE, Inspection Mode.>.

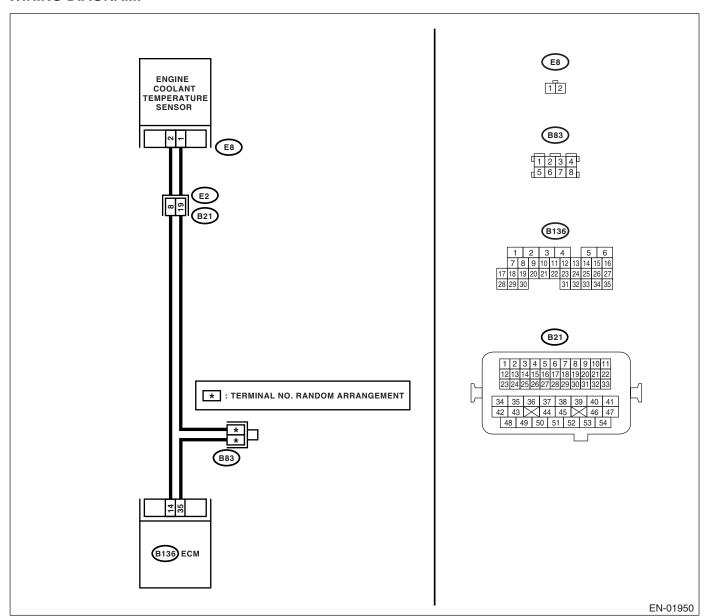

	Step	Check	Yes	No
1	CHECK CURRENT DATA.  1) Start the engine.	Is engine coolant temperature more than 120°C (248°F)?	Go to step 2.	Repair the poor contact.
	<ol> <li>Read the data of engine coolant tempera- ture sensor signal using Subaru Select Moni- tor.</li> </ol>			NOTE: In this case, repair the following:
	NOTE: For detailed operation procedure, refer to  "READ CURRENT DATA SHOWN ON DIS-			Poor contact in engine coolant temperature sen-
	PLAY FOR ENGINE". <ref. en(h4dotc)(diag)-21,="" moni-<="" select="" subaru="" td="" to=""><td></td><td></td><td>sor • Poor contact in</td></ref.>			sor • Poor contact in
	tor.>			Poor contact in
				<ul><li>coupling connector</li><li>Poor contact in ioint connector</li></ul>
2	CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connectors from the engine coolant temperature sensor. 3) Turn the ignition switch to ON. 4) Read the data of engine coolant temperature sensor signal using Subaru Select Monitor. NOTE:	Is engine coolant temperature more than -40°C (-40°F)?	Replace the engine coolant temperature sensor. <ref. coolant="" engine="" fu(h4dotc)-23,="" sensor.="" temperature="" to=""></ref.>	Repair the ground short circuit in har- ness between engine coolant temperature sen- sor and ECM con- nector.
	For detailed operation procedure, refer to "READ CURRENT DATA SHOWN ON DIS-PLAY FOR ENGINE". <ref. en(h4dotc)(diag)-21,="" monitor.="" select="" subaru="" to=""></ref.>			

### L: DTC P0118 ENGINE COOLANT TEMPERATURE CIRCUIT HIGH INPUT DTC DETECTING CONDITION:


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- · Hard to start
- Erroneous idling
- Poor driving performance

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCE-DURE, Inspection Mode.>.

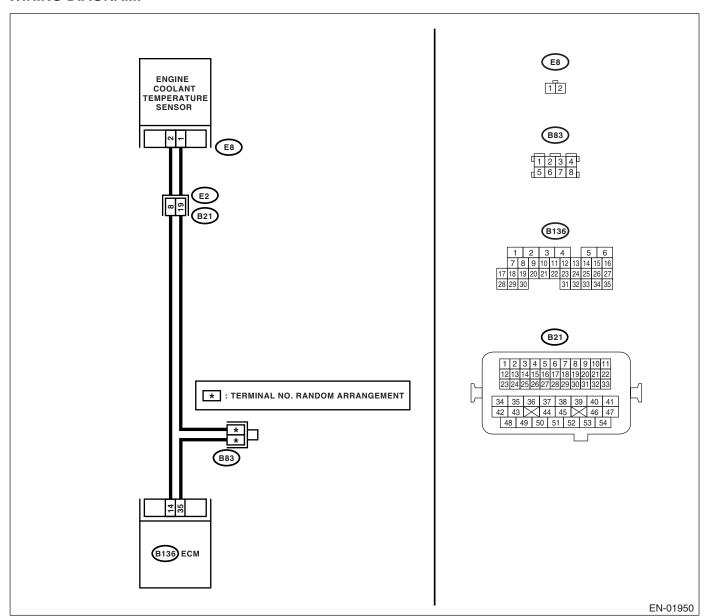

	Step	Check	Yes	No
1	CHECK CURRENT DATA.  1) Start the engine.  2) Read the data of engine coolant temperature sensor signal using Subaru Select Monitor.  NOTE: For detailed operation procedure, refer to "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <ref. en(h4dotc)(diag)-21,="" monitor.="" select="" subaru="" to=""></ref.>	Is engine coolant temperature less than -40°C (-40°F)?	Go to step 2.	Repair the poor contact.  NOTE: In this case, repair the following:  Poor contact in engine coolant temperature sensor Poor contact in ECM Poor contact in coupling connector Poor contact in joint connector
2	CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connectors from the engine coolant temperature sensor. 3) Measure the voltage between engine coolant temperature sensor connector and engine ground.  Connector & terminal (E8) No. 2 (+) — Engine ground (-):		Repair the battery short circuit in harness between ECM and engine coolant temperature sensor connector.	Go to step 3.
3	CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.  1) Turn the ignition switch to ON. 2) Measure the voltage between engine coolant temperature sensor connector and engine ground.  Connector & terminal (E8) No. 2 (+) — Engine ground (-):	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and engine coolant temperature sensor connector.	Go to step 4.
4	CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.  Measure the voltage between engine coolant temperature sensor connector and engine ground.  Connector & terminal (E8) No. 2 (+) — Engine ground (-):	Is the voltage more than 4 V?	Go to step 5.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between ECM and engine coolant temperature sensor connector  Poor contact in engine coolant temperature sensor connector  Poor contact in ECM connector  Poor contact in coupling connector  Poor contact in coupling connector  Poor contact in coupling connector

Step	Check	Yes	No
5 CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.  1) Turn the ignition switch to OFF.  2) Measure the resistance of harness between engine coolant temperature sensor connector and engine ground.  Connector & terminal  (E8) No. 1 — Engine ground:	Is the resistance less than 5 $\Omega$ ?	Replace the engine coolant temperature sensor. <ref. coolant="" engine="" fu(h4dotc)-23,="" sensor.="" temperature="" to=""></ref.>	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between ECM and engine coolant temperature sensor connector  Poor contact in engine coolant temperature sensor connector  Poor contact in ECM connector  Poor contact in coupling connector  Poor contact in coupling connector


### M: DTC P0122 THROTTLE/PEDAL POSITION SENSOR/SWITCH "A" CIRCUIT **LOW INPUT**

#### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- · Erroneous idling
- Engine stalls.
- Poor driving performance

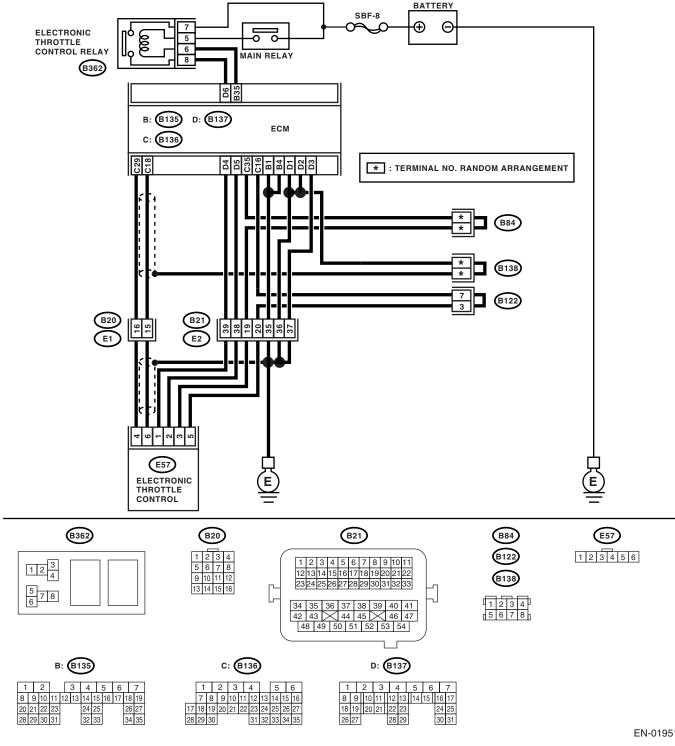

	Step	Check	Yes	No
1	CHECK SENSOR OUTPUT.  1) Turn the ignition switch to ON.  2) Read the data of main throttle sensor signal using Subaru Select Monitor.	Is the voltage more than 0.4 V?	Go to step 2.	Go to step 3.
2	CHECK POOR CONTACT.  Check the poor contact in connector between ECM and electronic throttle control.	Is there poor contact in con- nector between ECM and elec- tronic throttle control?	Repair the poor contact.	Temporary poor contact occurred, but it is normal at present.
3	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Disconnect the connectors from the electronic throttle control.  4) Measure the resistance between ECM connector and electronic throttle control connector.  Connector & terminal  (B136) No. 16 — (E57) No. 5:  (B136) No. 18 — (E57) No. 6:	Is the resistance less than 1 $\Omega$ ?	Go to step 4.	Repair the open circuit of harness connector.
4	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  Measure the resistance between ECM connector and chassis ground.  Connector & terminal  (B136) No. 18 — Chassis ground:  (B136) No. 16 — Chassis ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 5.	Repair the chassis short circuit of harness.
5	CHECK POWER SUPPLY OF ELECTRONIC THROTTLE CONTROL.  1) Connect the ECM connector.  2) Turn the ignition switch to ON.  3) Measure the voltage between electronic throttle control connector and engine ground.  Connector & terminal  (E57) No. 5 (+) — Engine ground (-):	Is the voltage 4.5 — 5.5 V?	Go to step 6.	Repair the poor contact in ECM connector. Replace the ECM if defective. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>
6	CHECK SHORT CIRCUIT INSIDE THE ECM.  1) Turn the ignition switch to OFF.  2) Measure the resistance between electronic throttle control connector and engine ground.  Connector & terminal  (E57) No. 6 — Engine ground:	Is the resistance more than 10 $\Omega$ ?	Repair the poor contact of electronic throttle control connector. Replace the electronic throttle control if defective.	Repair the poor contact in ECM connector. Replace the ECM if defective. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>


### N: DTC P0123 THROTTLE/PEDAL POSITION SENSOR/SWITCH "A" CIRCUIT **HIGH INPUT**

#### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- · Erroneous idling
- Engine stalls.
- Poor driving performance

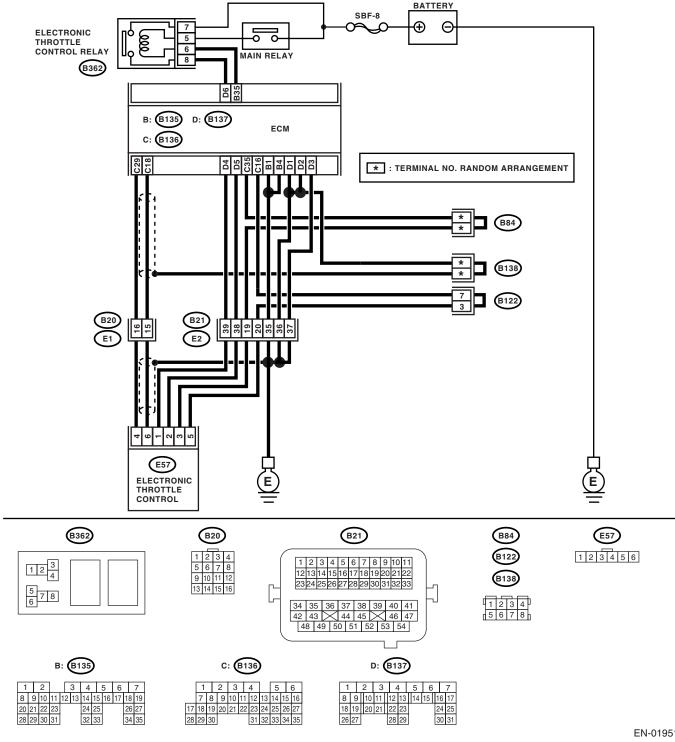

	Step	Check	Yes	No
1	<ul><li>CHECK SENSOR OUTPUT.</li><li>1) Turn the ignition switch to ON.</li><li>2) Read the data of main throttle sensor signal using Subaru Select Monitor.</li></ul>	Is the voltage less than 4.63 V?	Go to step 2.	Go to step 3.
2	CHECK POOR CONTACT.  Check the poor contact in connector between ECM and electronic throttle control.	Is there poor contact in con- nector between ECM and elec- tronic throttle control?	Repair the poor contact.	Temporary poor contact occurred, but it is normal at present.
3	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Disconnect the connectors from the electronic throttle control.  4) Measure the resistance between ECM connector and electronic throttle control connector.  Connector & terminal  (B136) No. 18 — (E57) No. 6:  (B136) No. 35 — (E57) No. 3:	Is the resistance less than 1 $\Omega$ ?	Go to step 4.	Repair the open circuit of harness connector.
4	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  1) Turn the ignition switch to ON.  2) Measure the voltage between electronic throttle control connector and engine ground.  Connector & terminal  (E57) No. 6 (+) — Engine ground (-):  3) Check the voltage change by shaking the harness and connector of ECM and engine harness connector while monitoring the value with voltage meter.	Is the voltage less than 10 V?	Go to step 5.	Repair the battery short circuit in harness between ECM connector and electronic throttle control connector.
5	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Measure the resistance between ECM connectors.  Connector & terminal  (B136) No. 18 — (B136) No. 16:	Is the resistance more than 1 $\mbox{M}\Omega\mbox{?}$	Repair the poor contact in harness. Repair the elec- tronic throttle con- trol.	Repair the short circuit to sensor power supply.


### O: DTC P0131 O2 SENSOR CIRCUIT LOW VOLTAGE (BANK 1 SENSOR 1)

DTC DETECTING CONDITION:

Detect as soon as the malfunction occurs.

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

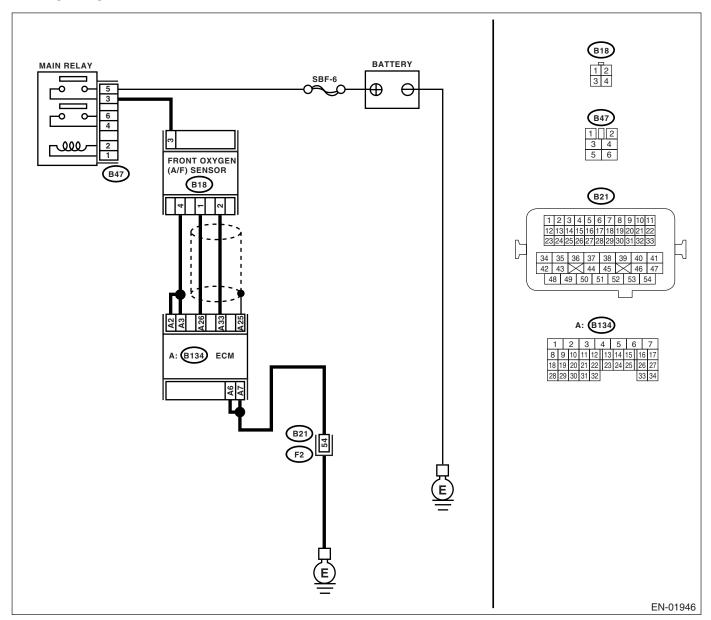

	Step	Check	Yes	No
1	CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM and front oxygen (A/F) sensor connector. 3) Measure the resistance of harness between ECM connector and chassis ground.  Connector & terminal  (B134) No. 26 — Chassis ground:  (B134) No. 33 — Chassis ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 2.	Repair the ground short circuit in har- ness between ECM and front oxygen (A/F) sen- sor connector.
2	CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.  Measure the resistance of harness between ECM connectors.  Connector & terminal  (B134) No. 26 — (B134) No. 33:	Is the resistance more than 1 $\mbox{M}\Omega\mbox{?}$	Replace the front oxygen (A/F) sen- sor. <ref. to<br="">FU(H4DOTC)-33, Front Oxygen (A/ F) Sensor.&gt;</ref.>	Repair harness short in harness between ECM and front oxygen (A/F) sensor connector.


### P: DTC P0132 O2 SENSOR CIRCUIT HIGH VOLTAGE (BANK 1 SENSOR 1)

**DTC DETECTING CONDITION:** 

Detect as soon as the malfunction occurs.

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

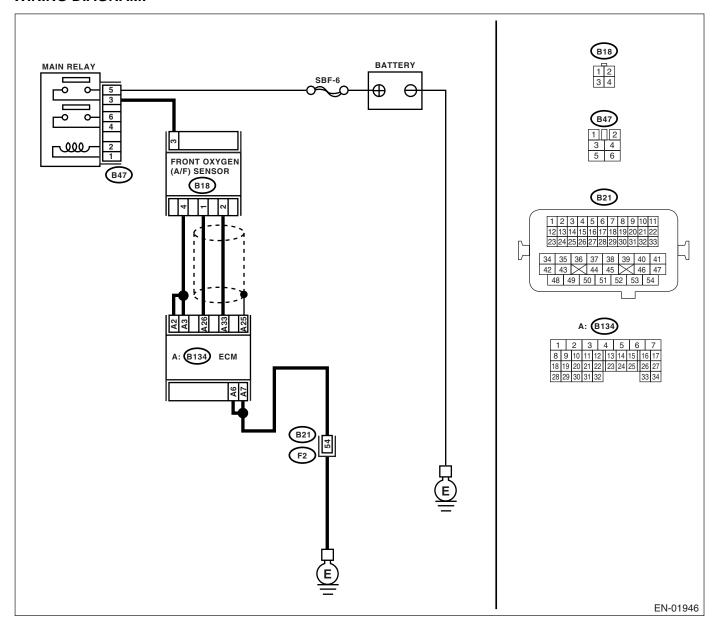

Step	Check	Yes	No
1 CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR. 1) Turn the ignition switch to ON. 2) Disconnect the connector from front oxygen (A/F) sensor. 3) Measure the voltage of harness between ECM connector and chassis ground. Connector & terminal (B134) No. 26 (+) — Chassis ground (-): (B134) No. 33 (+) — Chassis ground (-):	Is the voltage more than 8 V?	oxygen (A/F) sen- sor. <ref. th="" to<=""><th>Repair the battery short circuit in har- ness between ECM and front oxygen (A/F) sen- sor connector.</th></ref.>	Repair the battery short circuit in har- ness between ECM and front oxygen (A/F) sen- sor connector.


### Q: DTC P0134 O2 SENSOR CIRCUIT NO ACTIVITY DETECTED (BANK 1 SENSOR 1)

#### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

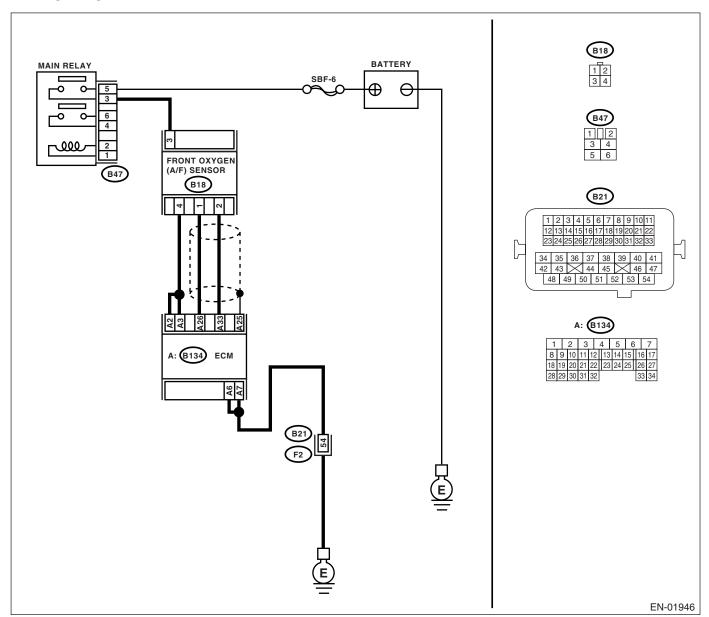


	Step	Check	Yes	No
FRON TOR. 1) Tur 2) Dis front o 3) Me betwee connec Coni (B1	K HARNESS BETWEEN ECM AND T OXYGEN (A/F) SENSOR CONNEC-  In the ignition switch to OFF. In th	Is the resistance less than 1 Ω?	Replace the front oxygen (A/F) sen- sor. <ref. to<br="">FU(H4DOTC)-33, Front Oxygen (A/ F) Sensor.&gt;</ref.>	Repair the open circuit in harness between ECM and front oxygen (A/F) sensor connector.

### R: DTC P0137 O2 SENSOR CIRCUIT LOW VOLTAGE (BANK 1 SENSOR 2) DTC DETECTING CONDITION:

Two consecutive driving cycles with fault

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCE-DURE, Inspection Mode.>.

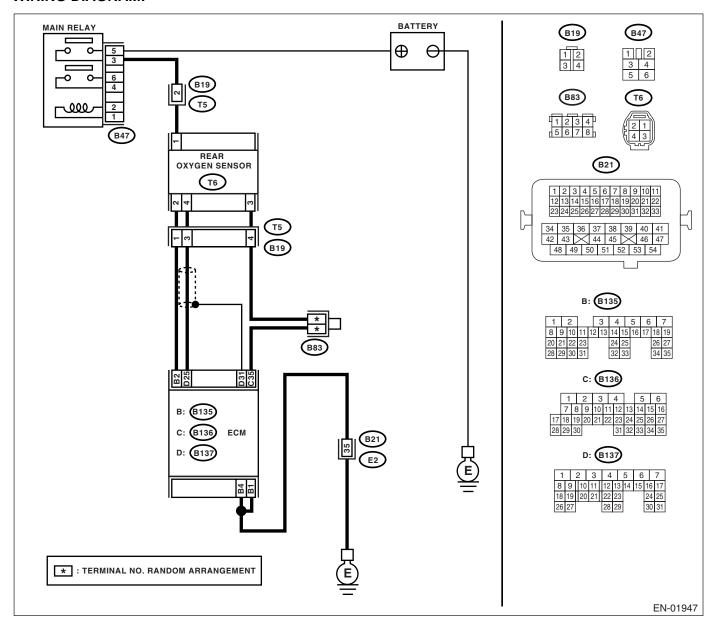

	Step	Check	Yes	No
1	CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Inspect the DTC using "List of Diagnostic Trouble Code (DTC)". <ref. (dtc).="" code="" diagnostic="" en(h4dotc)(diag)-55,="" list="" of="" to="" trouble=""></ref.>	Go to step 2.
2	CHECK REAR OXYGEN SENSOR DATA.  1) Warm-up the engine until engine coolant temperature is above 70°C (158°F), and keep the engine speed at 2,000 rpm to 3,000 rpm for 2 minutes.  2) Read the data of rear oxygen sensor signal using Subaru Select Monitor.  NOTE: For detailed operation procedure, refer to "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <ref. en(h4dotc)(diag)-21,="" monitor.="" select="" subaru="" to=""></ref.>		Go to step 6.	Go to step 3.
3	CHECK REAR OXYGEN SENSOR DATA. Read the data of rear oxygen sensor signal using Subaru Select Monitor.	Is the voltage 0.2 — 0.4 V?	Go to step 4.	Replace the rear oxygen sensor. <ref. to<br="">FU(H4DOTC)-34, Rear Oxygen Sen- sor.&gt;</ref.>
4	CHECK HARNESS BETWEEN ECM AND REAR OXYGEN SENSOR CONNECTOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM and rear oxygen sensor.  3) Measure the resistance in harness between ECM and rear oxygen sensor connector.  Connector & terminal  (B137) No. 25 — (T6) No. 4:	Is the resistance more than 3 $\Omega$ ?	Repair the open circuit in harness between ECM and rear oxygen sensor connector.	Go to step <b>5</b> .
5	CHECK HARNESS BETWEEN REAR OXY-GEN SENSOR AND ECM CONNECTOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from rear oxygen sensor.  3) Turn the ignition switch to ON.  4) Measure the voltage between rear oxygen sensor harness connector and chassis ground.  Connector & terminal  (T6) No. 4 (+) — Chassis ground (-):	Is the voltage more than 0.2 V?	Replace the rear oxygen sensor. <ref. to<br="">FU(H4DOTC)-34, Rear Oxygen Sen- sor.&gt;</ref.>	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between rear oxygen sensor and ECM connector Poor contact in rear oxygen sensor connector Poor contact in ECM connector


	Step	Check	Yes	No
6	CHECK EXHAUST SYSTEM. Check exhaust system parts.	Is there a fault in exhaust system?	Repair or replace the faulty part.	Replace the rear oxygen sensor.
	NOTE: Check the following items: Loose part of exhaust system and incomplete installation Damage (crack, hole etc.) of parts Looseness and ill fitting of parts between front oxygen (A/F) sensor and rear oxygen			<ref. to<br="">FU(H4DOTC)-34, Rear Oxygen Sen- sor.&gt;</ref.>

### S: DTC P0138 O2 SENSOR CIRCUIT HIGH VOLTAGE (BANK 1 SENSOR 2) DTC DETECTING CONDITION:

Two consecutive driving cycles with fault

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

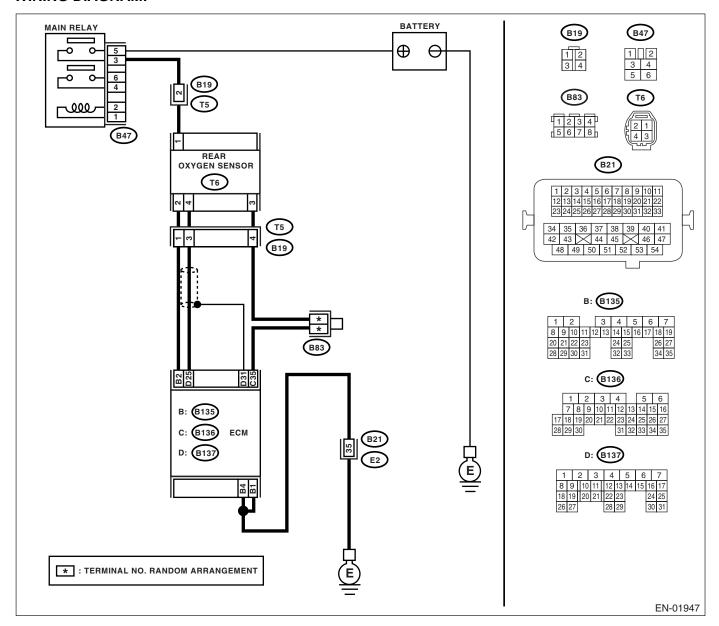

	Step	Check	Yes	No
1	CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Inspect the DTC using "List of Diagnostic Trouble Code (DTC)". <ref. (dtc).="" code="" diagnostic="" en(h4dotc)(diag)-55,="" list="" of="" to="" trouble=""></ref.>	Go to step 2.
2	CHECK REAR OXYGEN SENSOR DATA.  1) Warm-up the engine until engine coolant temperature is above 70°C (158°F), and keep the engine speed at 2,000 rpm to 3,000 rpm for two minutes.  2) Read the data of rear oxygen sensor signal using Subaru Select Monitor.  NOTE: For detailed operation procedure, refer to "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <ref. en(h4dotc)(diag)-21,="" monitor.="" select="" subaru="" to=""></ref.>		Go to step 6.	Go to step 3.
3	CHECK REAR OXYGEN SENSOR DATA. Read the data of rear oxygen sensor signal using Subaru Select Monitor.	Is the voltage 0.2 — 0.4 V?	Go to step 4.	Replace the rear oxygen sensor. <ref. to<br="">FU(H4DOTC)-34, Rear Oxygen Sen- sor.&gt;</ref.>
4	CHECK HARNESS BETWEEN ECM AND REAR OXYGEN SENSOR CONNECTOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM and rear oxygen sensor.  3) Measure the resistance in harness between ECM and rear oxygen sensor connector.  Connector & terminal  (B137) No. 25 — (T6) No. 4:	Is the resistance more than 3 $\Omega$ ?	Repair the open circuit in harness between ECM and rear oxygen sensor connector.	Go to step <b>5</b> .
5	CHECK HARNESS BETWEEN REAR OXY-GEN SENSOR AND ECM CONNECTOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from rear oxygen sensor.  3) Turn the ignition switch to ON.  4) Measure the voltage between rear oxygen sensor harness connector and chassis ground.  Connector & terminal  (T6) No. 4 (+) — Chassis ground (-):	Is the voltage more than 0.2 V?	Replace the rear oxygen sensor. <ref. to<br="">FU(H4DOTC)-34, Rear Oxygen Sen- sor.&gt;</ref.>	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between rear oxygen sensor and ECM connector Poor contact in rear oxygen sensor connector Poor contact in ECM connector

### **Diagnostic Procedure with Diagnostic Trouble Code (DTC)**

ENĜINE (ĎIAGNOSTICS)

	Step	Check	Yes	No
6	CHECK EXHAUST SYSTEM. Check exhaust system parts.	Is there a fault in exhaust system?	Repair or replace the faulty part.	Replace the rear oxygen sensor. < Ref. to
	NOTE: Check the following items: Loose part of exhaust system and incomplete installation Damage (crack, hole etc.) of parts Looseness and ill fitting of parts between front oxygen (A/F) sensor and rear oxygen sensor			FU(H4DOTC)-34, Rear Oxygen Sensor.>

### T: DTC P0171 SYSTEM TOO LEAN (BANK 1)

#### NOTE:

For diagnostic procedure, refer to DTC P0172. <Ref. to EN(H4DOTC)(diag)-104, DTC P0172 SYSTEM TOO RICH (BANK 1), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

### **Diagnostic Procedure with Diagnostic Trouble Code (DTC)**

ENGINE (DIAGNOSTICS)

### U: DTC P0172 SYSTEM TOO RICH (BANK 1)

#### **DTC DETECTING CONDITION:**

Two consecutive driving cycles with fault

#### TROUBLE SYMPTOM:

- · Erroneous idling
- Engine stalls.
- Poor driving performance

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

	Step	Check	Yes	No
1	CHECK EXHAUST SYSTEM.	Are there holes or loose bolts on exhaust system?	Repair exhaust system.	Go to step 2.
2	CHECK AIR INTAKE SYSTEM.	Are there holes, loose bolts or disconnection of hoses on air intake system?	Repair air intake system.	Go to step 3.
3	CHECK FUEL PRESSURE.  Warning: Place "NO FIRE" signs near the working area. Be careful not to spill fuel.  Release the fuel pressure.  Start the engine and run it until it stalls.  Start the engine stalls, crank it for 5 more seconds.  Turn the ignition switch to OFF.  Connect the connector to fuel pump relay.  Disconnect the fuel delivery hose from fuel filter, and connect the fuel pressure gauge.  Install the fuel filler cap.  Start the engine and idle while gear position is neutral.  Measure the fuel pressure while disconnecting pressure regulator vacuum hose from intake manifold.  Warning: Release fuel pressure before removing the fuel pressure gauge.	Is fuel pressure 284 — 314 kPa (2.9 — 3.2 kg/cm <sup>2</sup> , 41 — 46 psi)?	Go to step 4.	Repair the following items. Fuel pressure is too high:  • Clogged fuel return line or bent hose Fuel pressure is too low:  • Improper fuel pump discharge • Clogged fuel supply line
	NOTE: If fuel pressure does not increase, squeeze the fuel return hose 2 to 3 times, then measure fuel pressure again.			

Step	Check	Yes	No
4 CHECK FUEL PRESSURE.  After connecting the pressure regulator vacuum hose, measure fuel pressure.  Warning: Release fuel pressure before removing the fuel pressure gauge.  NOTE:  • If fuel pressure does not increase, squeeze fuel return hose 2 to 3 times, then measure fuel pressure again.  • If out of specification as measured at this step, check or replace pressure regulator and pressure regulator vacuum hose.	Is measured value 206 — 235 kPa (2.1 — 2.4 kg/cm <sup>2</sup> , 30 — 34 psi)?	Go to step 5.	Repair the following items. Fuel pressure is too high:
5 CHECK ENGINE COOLANT TEMPERATURE SENSOR.  1) Start the engine and warm-up completely. 2) Read the data of engine coolant temperature sensor signal using Subaru Select Monitor.  NOTE: For detailed operation procedure, refer to "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <ref. en(h4dotc)(diag)-21,="" monitor.="" select="" subaru="" to=""></ref.>	Is engine coolant temperature more than 60°C (140°F)?	Go to step 6.	Replace the engine coolant temperature sensor. <ref. coolant="" engine="" fu(h4dotc)-23,="" sensor.="" temperature="" to=""></ref.>
6 CHECK MASS AIR FLOW AND INTAKE AIR TEMPERATURE SENSOR.  1) Start and warm-up the engine until engine coolant temperature is greater than 60°C (140°F).  2) Place the shift lever in neutral position.  3) Turn the A/C switch to OFF.  4) Turn all accessory switches to OFF.  5) Read the data of mass air flow and intake air temperature sensor signal using Subaru Select Monitor.  NOTE: For detailed operation procedure, refer to "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <ref. en(h4dotc)(diag)-21,="" monitor.="" select="" subaru="" to=""></ref.>		Go to step 7.	Replace the mass air flow and intake air temperature sensor. <ref. air="" and="" flow="" fu(h4dotc)-28,="" intake="" mass="" sensor.="" temperature="" to=""></ref.>

Step	Check	Yes	No
7 CHECK MASS AIR FLOW AND INTAKE AIR TEMPERATURE SENSOR.  1) Start and warm-up the engine until engine coolant temperature is greater than 60°C (140°F).  2) Place the shift lever in neutral position.  3) Turn the A/C switch to OFF.  4) Turn all accessory switches to OFF.  5) Open the hood.  6) Measure the ambient temperature.  7) Read the data of mass air flow and intake air temperature sensor signal using Subaru Select Monitor.  NOTE: For detailed operation procedure, refer to "READ CURRENT DATA SHOWN ON DIS PLAY FOR ENGINE". <ref. en(h4dotc)(diag)-21,="" monitor.="" select="" subaru="" to=""></ref.>		Replace the ECM. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>	Check mass air flow and intake air temperature sensor. <ref. air="" and="" flow="" fu(h4dotc)-28,="" intake="" mass="" sensor.="" temperature="" to=""></ref.>


### V: DTC P0222 THROTTLE/PEDAL POSITION SENSOR/SWITCH "B" CIRCUIT LOW INPUT

#### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- Erroneous idling
- · Poor driving performance
- Engine stalls.

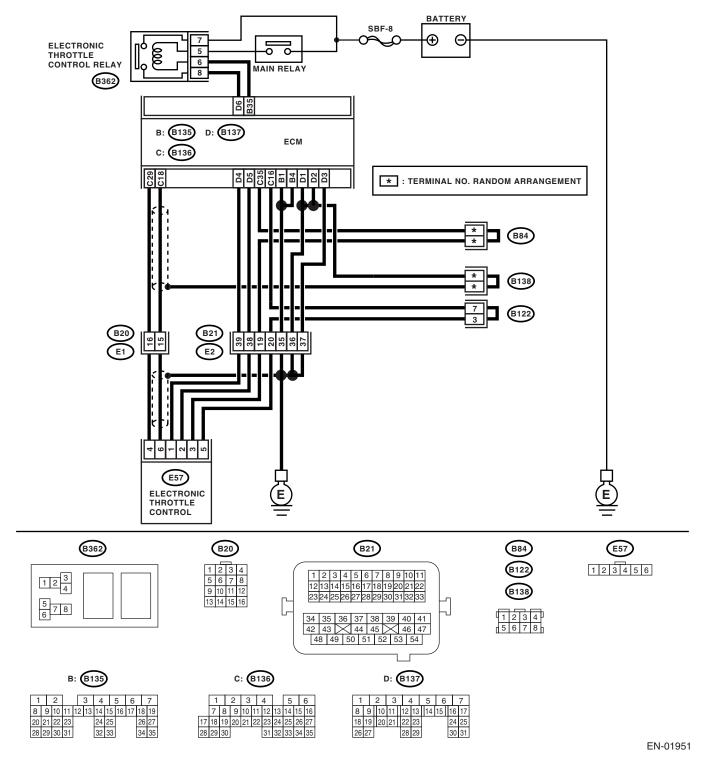

	Step	Check	Yes	No
1	<ul><li>CHECK SENSOR OUTPUT.</li><li>1) Turn the ignition switch to ON.</li><li>2) Read the data of sub throttle sensor signal using Subaru Select Monitor.</li></ul>	Is the voltage more than 0.8 V?	Go to step 2.	Go to step 3.
2	CHECK POOR CONTACT.  Check the poor contact in connector between ECM and electronic throttle control.	Is there poor contact?	Repair the poor contact.	Temporary poor contact occurred, but it is normal at present.
3	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Disconnect the connectors from the electronic throttle control.  4) Measure the resistance between ECM connector and electronic throttle control connector.  Connector & terminal  (B136) No. 16 — (E57) No. 5:  (B136) No. 29 — (E57) No. 4:	Is the resistance less than 1 $\Omega$ ?	Go to step 4.	Repair the open circuit of harness connector.
4	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  Measure the resistance between ECM connector and chassis ground.  Connector & terminal  (B136) No. 29 — Chassis ground:  (B136) No. 16 — Chassis ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 5.	Repair the chassis short circuit of harness.
5	CHECK SENSOR POWER SUPPLY.  1) Connect the ECM connector.  2) Turn the ignition switch to ON.  3) Measure the voltage between electronic throttle control connector and engine ground.  Connector & terminal  (E57) No. 5 (+) — Engine ground (-):	Is the voltage 4.5 — 5.5 V?	Go to step 6.	Repair the poor contact in ECM connector. Replace the ECM if defective. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>
6	CHECK SHORT CIRCUIT INSIDE THE ECM.  1) Turn the ignition switch to OFF.  2) Measure the resistance between electronic throttle control connector and engine ground.  Connector & terminal  (E57) No. 4 — Engine ground:	Is the resistance more than 10 $\Omega$ ?	Repair the poor contact of electronic throttle control connector. Replace the electronic throttle control if defective.	Repair the poor contact in ECM connector. Replace the ECM if defective. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>


# W: DTC P0223 THROTTLE/PEDAL POSITION SENSOR/SWITCH "B" CIRCUIT HIGH INPUT

### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- Erroneous idling
- Poor driving performance
- Engine stalls.

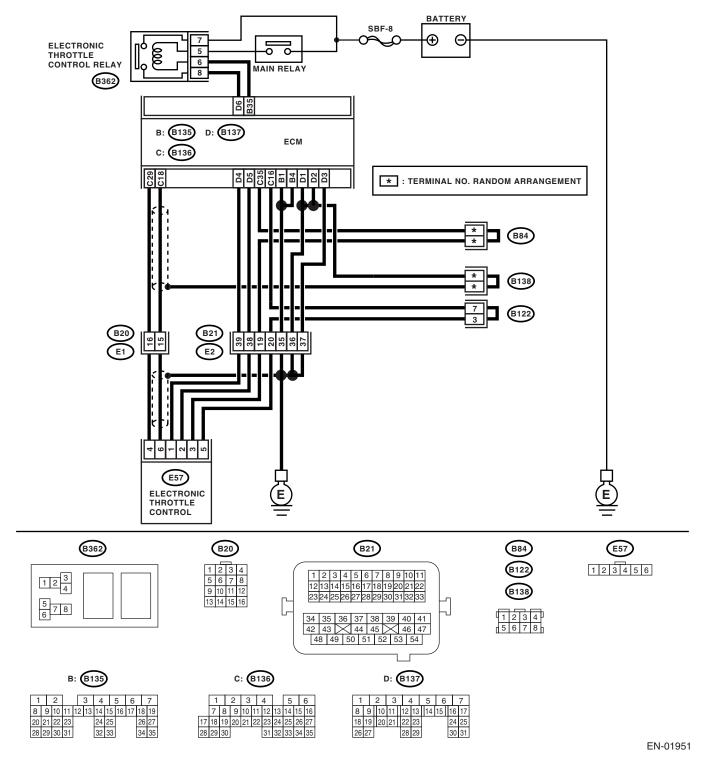

	Step	Check	Yes	No
1	<ul><li>CHECK SENSOR OUTPUT.</li><li>1) Turn the ignition switch to ON.</li><li>2) Read the data of sub throttle sensor signal using Subaru Select Monitor.</li></ul>	Is the voltage less than 4.73 V?	Go to step 2.	Go to step 3.
2	CHECK POOR CONTACT.  Check the poor contact in connector between ECM and electronic throttle control.	Is there poor contact in con- nector between ECM and elec- tronic throttle control?	Repair the poor contact.	Temporary poor contact occurred, but it is normal at present.
3	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Disconnect the connectors from the electronic throttle control.  4) Measure the resistance between ECM connector and electronic throttle control connector.  Connector & terminal  (B136) No. 35 — (E57) No. 3:  (B136) No. 29 — (E57) No. 4:	Is the resistance less than 1 $\Omega$ ?	Go to step 4.	Repair the open circuit of harness connector.
4	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  1) Connect the ECM connector.  2) Turn the ignition switch to ON.  3) Measure the voltage between electronic throttle control connector and engine ground.  Connector & terminal  (E57) No. 4 (+) — Engine ground (-):	Is the voltage less than 10 V?	Go to step 5.	Repair the battery short circuit in harness between ECM connector and electronic throttle control connector.
5	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Measure the resistance between connector terminals.  Connector & terminal  (B136) No. 29 — (B136) No. 16:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Repair the poor contact. Repair the electronic throttle control.	Sensor power sup- ply circuit may be shorted.


## X: DTC P0230 FUEL PUMP PRIMARY CIRCUIT

#### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

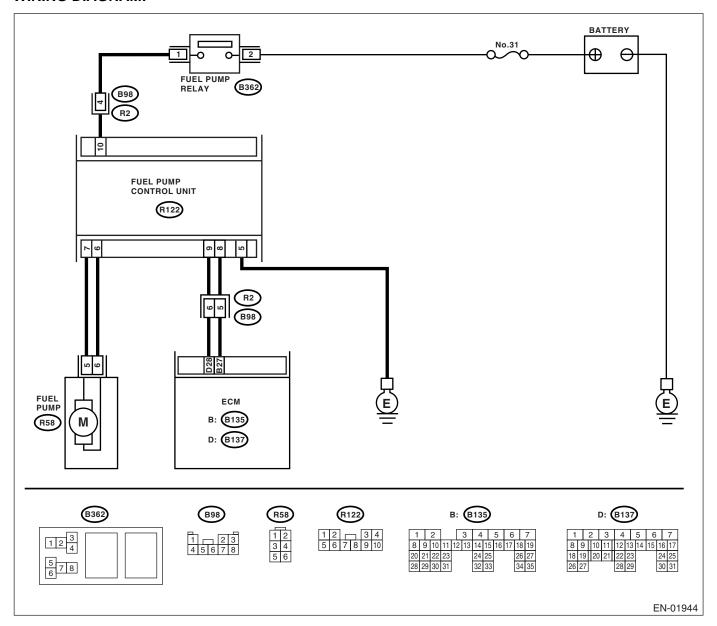

	Step	Check	Yes	No
F 1 2 c c 3 4	CHECK POWER SUPPLY CIRCUIT TO FUEL PUMP CONTROL UNIT.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from fuel pump control unit.  3) Turn the ignition switch to ON.  4) Measure the voltage between fuel pump control unit and chassis ground.  Connector & terminal  (R122) No. 10 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 2.	Repair the power supply circuit.  NOTE: In this case, repair the following:  Open or ground short circuit in harness between fuel pump relay and fuel pump control unit Poor contact in fuel pump control unit connector Poor contact in fuel pump relay connector
1 2 b	CHECK GROUND CIRCUIT OF FUEL PUMP CONTROL UNIT.  1) Turn the ignition switch to OFF.  2) Measure the resistance of harness between fuel pump control unit and chassis ground.  Connector & terminal  (R122) No. 5 — Chassis ground:	Is the resistance less than 5 Ω?	Go to step 3.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit between fuel pump control unit and chassis ground Poor contact in fuel pump control unit connector
1 1 2 b	CHECK HARNESS BETWEEN FUEL PUMP CONTROL UNIT AND FUEL PUMP CONNECTOR.  1) Disconnect the connector from fuel pump. 2) Measure the resistance of harness between fuel pump control unit and fuel pump connector.  Connector & terminal  (R122) No. 7 — (R58) No. 5:  (R122) No. 6 — (R58) No. 6:	Is the resistance less than 1 $\Omega$ ?	Go to step 4.	Repair the open circuit between fuel pump control unit and fuel pump.
7 N	CHECK HARNESS BETWEEN FUEL PUMP CONTROL UNIT AND FUEL PUMP CONNECTOR.  Measure the resistance of harness between uel pump control unit and chassis ground.  Connector & terminal  (R122) No. 7 — Chassis ground:  (R122) No. 6 — Chassis ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 5.	Repair the ground short circuit between fuel pump control unit and fuel pump.

	Step	Check	Yes	No
5	CHECK HARNESS BETWEEN FUEL PUMP CONTROL UNIT AND ECM CONNECTOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Measure the resistance in harness between fuel pump control unit and ECM connector.  Connector & terminal  (R122) No. 9 — (B137) No. 28:  (R122) No. 8 — (B135) No. 27:	Is the resistance less than 1 $\Omega$ ?	Go to step 6.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit between fuel pump control unit and ECM Poor contact in fuel pump control unit and ECM connector
6	CHECK HARNESS BETWEEN FUEL PUMP CONTROL UNIT AND ECM CONNECTOR.  Measure the resistance of harness between fuel pump control unit and chassis ground.  Connector & terminal  (R122) No. 9 — Chassis ground:  (R122) No. 8 — Chassis ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 7.	Repair the ground short circuit between fuel pump control unit and ECM.
7	CHECK POOR CONTACT.  Check poor contact in ECM and fuel pump control unit connector.	Is there poor contact in ECM and fuel pump control unit connector?	Repair the poor contact in ECM and fuel pump control unit.	Go to step 8.
8	CHECK EXPERIENCE OF RUNNING OUT OF FUEL.	Did the vehicle experience running out of fuel?	Finish the diagnosis.  NOTE: DTC record may be conducted as a result of fuel pump idling while running out of fuel.	Fuel Pump Control

# Y: DTC P0245 TURBO/SUPER CHARGER WASTEGATE SOLENOID "A" LOW DTC DETECTING CONDITION:


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

Erroneous idling

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

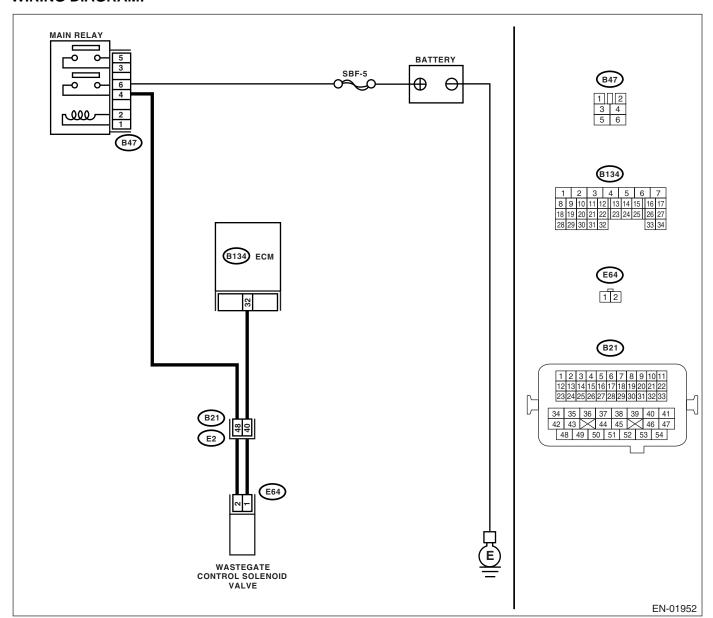

	Step	Check	Yes	No
2	CHECK OUTPUT SIGNAL FROM ECM.  1) Turn the ignition switch to ON.  2) Measure the voltage between ECM and chassis ground.  Connector & terminal  (B134) No. 32 (+) — Chassis ground (-):  CHECK HARNESS BETWEEN WASTEGATE	Is the voltage more than 10 V?	Even if the mal- function indicator light illuminates, the circuit has returned to a nor- mal condition at this time. Go to step 3.	Go to step 2.  Repair the ground
	CONTROL SOLENOID VALVE AND ECM CONNECTOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connectors from wastegate control solenoid valve and ECM.  3) Measure the resistance in harness between wastegate control solenoid valve connector and engine ground.  Connector & terminal  (E64) No. 1 — Engine ground:	ΜΩ?		short circuit in har- ness between ECM and waste- gate control sole- noid valve connector.
3	CHECK HARNESS BETWEEN WASTEGATE CONTROL SOLENOID VALVE AND ECM CONNECTOR.  Measure the resistance of harness between wastegate control solenoid valve of harness connector and ECM.  Connector & terminal (B134) No. 32 — (E64) No. 1:	Ω?	Go to step 4.	Repair the open circuit in harness between ECM and wastegate control solenoid valve connector.  NOTE: In this case, repair the following:  Open circuit in harness between ECM and wastegate control solenoid valve connector
4	CHECK WASTEGATE CONTROL SOLE-NOID VALVE.  1) Remove the wastegate control solenoid valve.  2) Measure the resistance between wastegate control solenoid valve terminals.  Terminals  No. 1 — No. 2:	Is the resistance 30 — 34 $\Omega$ ?	Go to step 5.	Replace the wastegate control solenoid valve. <ref. con-="" fu(h4dotc)-32,="" solenoid="" to="" trol="" valve.="" wastegate=""></ref.>
5	CHECK POWER SUPPLY TO WASTEGATE CONTROL SOLENOID VALVE.  1) Turn the ignition switch to ON.  2) Measure the voltage between wastegate control solenoid valve and engine ground.  Connector & terminal  (E64) No. 2 (+) — Engine ground (-):	Is the voltage more than 10 V?	Go to step <b>6.</b>	Repair the open circuit in harness between main relay and wastegate control solenoid valve connector.
6	CHECK POOR CONTACT. Check poor contact in wastegate control solenoid valve connector.	Is there poor contact in waste- gate control solenoid valve connector?	Repair the poor contact in wastegate control solenoid valve connector.	Replace the ECM. <ref. to<br="">FU(H4DOTC)-35, Engine Control Module (ECM).&gt;</ref.>

# Z: DTC P0246 TURBO/SUPER CHARGER WASTEGATE SOLENOID "A" HIGH DTC DETECTING CONDITION:


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

Erroneous idling

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

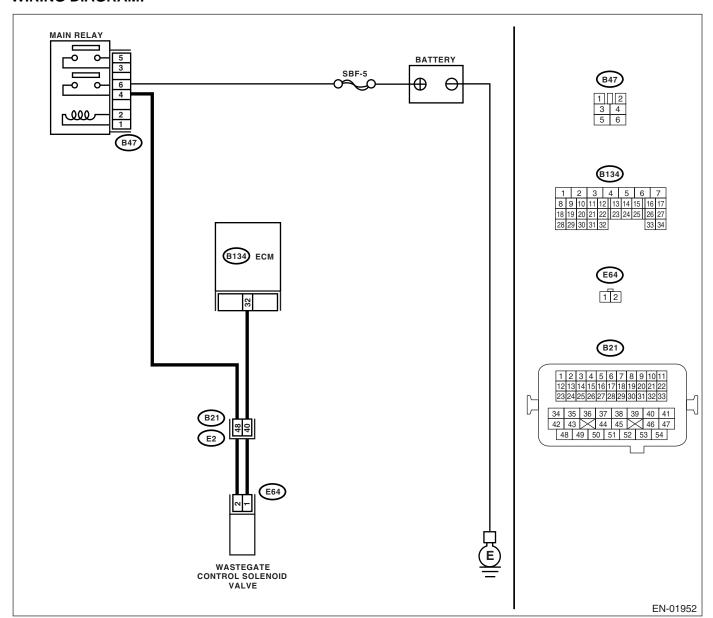

	Step	Check	Yes	No
1	CHECK OUTPUT SIGNAL FROM ECM.  1) Turn the ignition switch to ON.  2) Measure the voltage between ECM and chassis ground.  Connector & terminal  (B134) No. 32 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 3.	Go to step 2.
2	CHECK POOR CONTACT. Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <ref. to<br="">FU(H4DOTC)-35, Engine Control Module (ECM).&gt;</ref.>
3	CHECK HARNESS BETWEEN WASTEGATE CONTROL SOLENOID VALVE AND ECM CONNECTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from wastegate control solenoid valve. 3) Turn the ignition switch to ON. 4) Measure the voltage between ECM and chassis ground. Connector & terminal (B134) No. 32 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Repair the battery short circuit in harness between ECM and wastegate control solenoid valve connector. After repair, replace the ECM. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>	Go to step 4.
4	CHECK WASTEGATE CONTROL SOLE-NOID VALVE.  1) Turn the ignition switch to OFF.  2) Measure the resistance between wastegate control solenoid valve terminals.  Terminals  No. 1 — No. 2:	Is the resistance less than 1 $\Omega$ ?	Replace the wastegate control solenoid valve and ECM. <ref. control="" fu(h4dotc)-32,="" solenoid="" to="" valve.="" wastegate=""> <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.></ref.>	Go to step 5.
5	CHECK POOR CONTACT. Check poor contact in ECM connector.	Is the poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <ref. to<br="">FU(H4DOTC)-35, Engine Control Module (ECM).&gt;</ref.>

# **Diagnostic Procedure with Diagnostic Trouble Code (DTC)**

**ENGINE (DIAGNOSTICS)** 

### AA: DTC P0261 CYLINDER 1 INJECTOR CIRCUIT LOW

NOTE

For the diagnostic procedure, refer to DTC P0270. <Ref. to EN(H4DOTC)(diag)-119, DTC P0270 CYLIN-DER 4 INJECTOR CIRCUIT LOW, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

### AB:DTC P0264 CYLINDER 2 INJECTOR CIRCUIT LOW

NOTE:

For the diagnostic procedure, refer to DTC P0270. <Ref. to EN(H4DOTC)(diag)-119, DTC P0270 CYLIN-DER 4 INJECTOR CIRCUIT LOW, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

### AC:DTC P0267 CYLINDER 3 INJECTOR CIRCUIT LOW

NOTE:

For the diagnostic procedure, refer to DTC P0270. <Ref. to EN(H4DOTC)(diag)-119, DTC P0270 CYLIN-DER 4 INJECTOR CIRCUIT LOW, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

# **Diagnostic Procedure with Diagnostic Trouble Code (DTC)**

ENĜINE (ĎIAGNOSTICS)

## **AD:DTC P0270 CYLINDER 4 INJECTOR CIRCUIT LOW**

#### DTC DETECTING CONDITION:

Detect as soon as the malfunction occurs.


#### TROUBLE SYMPTOM:

- Engine stalls.
- · Erroneous idling
- Rough driving

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

## **WIRING DIAGRAM:**

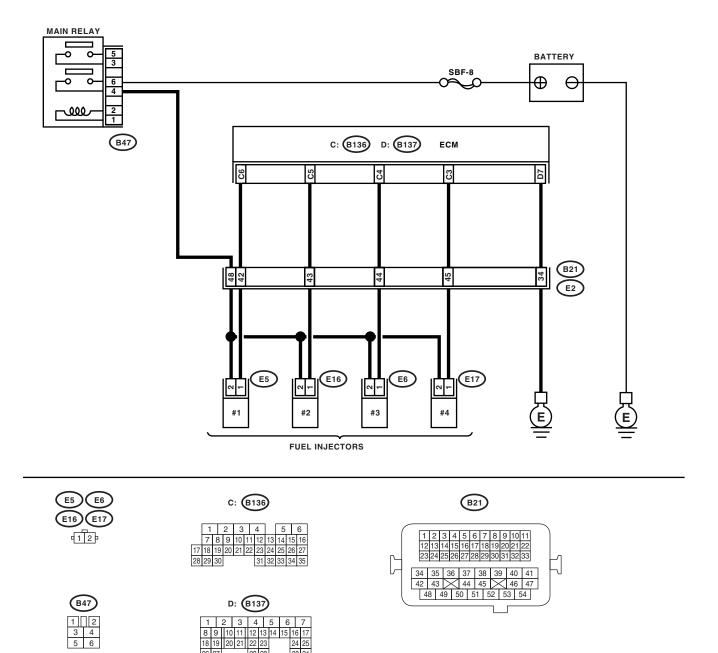

EN-01945

	Step	Check	Yes	No
1	CHECK POWER SUPPLY LINE.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from fuel injector.  3) Turn the ignition switch to ON.  4) Measure the voltage between fuel injector and engine ground on faulty cylinders.  Connector & terminal  #1 (E5) No. 2 (+) — Engine ground (-):  #2 (E16) No. 2 (+) — Engine ground (-):  #3 (E6) No. 2 (+) — Engine ground (-):  #4 (E17) No. 2 (+) — Engine ground (-):	Is the voltage more than 10 V?	Go to step 2.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between main relay and fuel injector connector on faulty cylinders  Poor contact in coupling connector  Poor contact in main relay connector  Poor contact in fuel injector connector on faulty cylinders
2	CHECK FUEL INJECTOR.  1) Turn the ignition switch to OFF.  2) Measure the resistance between fuel injector terminals on faulty cylinder.  Terminals  No. 1 — No. 2:	Is the resistance less than 11 — 12 Ω?	Go to step 3.	Replace the faulty fuel injector and ECM. <ref. fu(h4dotc)-30,="" fuel="" injector.="" to=""></ref.>
3	CHECK OUTPUT SIGNAL FROM ECM.  1) Connect the connector to the fuel injector.  2) Turn the ignition switch to ON.  3) Measure the voltage between ECM connector and chassis ground on faulty cylinders.  Connector & terminal  #1 (B136) No. 6 (+) — Chassis ground (-):  #2 (B136) No. 5 (+) — Chassis ground (-):  #3 (B136) No. 4 (+) — Chassis ground (-):  #4 (B136) No. 3 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Go to step 4.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between ECM and fuel injector connector  Poor contact in coupling connector
4	CHECK GROUND CIRCUIT FOR ECM.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Measure the resistance between ECM connector and chassis ground.  Connector & terminal  (B137) No. 7 — Chassis ground:	Is the resistance less than 5 $\Omega$ ?	Repair the poor contact in fuel injector and ECM connector.	Repair ground open circuit in ECM.

# AE:DTC P0327 KNOCK SENSOR 1 CIRCUIT LOW INPUT (BANK 1 OR SINGLE SENSOR)

### **DTC DETECTING CONDITION:**


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- Poor driving performance
- · Knocking occurs.

### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

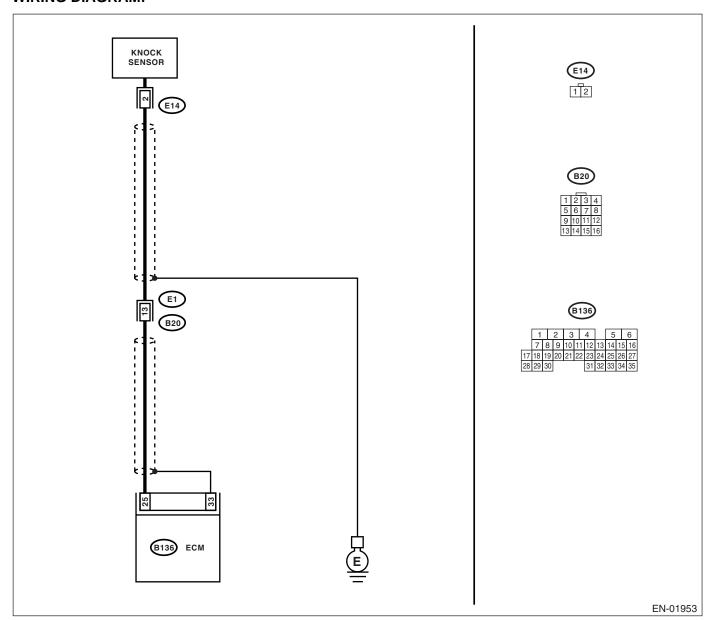

	Step	Check	Yes	No
1	CHECK HARNESS BETWEEN KNOCK SENSOR AND ECM CONNECTOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Measure the resistance between ECM harness connector and chassis ground.  Connector & terminal  (B136) No. 25 — Chassis ground:	Is the resistance more than 700 kΩ?	Go to step 2.	Repair the harness and connector.  NOTE: In this case, repair the followingin this case, repair the following:  Open circuit in harness between knock sensor and ECM connector  Poor contact in knock sensor connector  Poor contact in coupling connector
2	CHECK KNOCK SENSOR.  1) Disconnect the connector from knock sensor.  2) Measure the resistance between knock sensor connector terminal and engine ground.  Terminals  No. 2 — Engine ground:	Is the resistance more than 700 k $\Omega$ ?	Go to step 3.	Repair the har- ness and connec- tor.  NOTE: In this case, repair the followingin this case, repair the fol- lowing: Poor contact in knock sensor con- nector Poor contact in coupling connector
3	CHECK CONDITION OF KNOCK SENSOR INSTALLATION.	Is the knock sensor installation bolt tightened securely?	Replace the knock sensor. <ref. to<br="">FU(H4DOTC)-26, Knock Sensor.&gt;</ref.>	Tighten knock sensor installation bolt securely.

# AF:DTC P0328 KNOCK SENSOR 1 CIRCUIT HIGH INPUT (BANK 1 OR SINGLE SENSOR)

### **DTC DETECTING CONDITION:**


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- Poor driving performance
- · Knocking occurs.

### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCE-DURE, Inspection Mode.>.

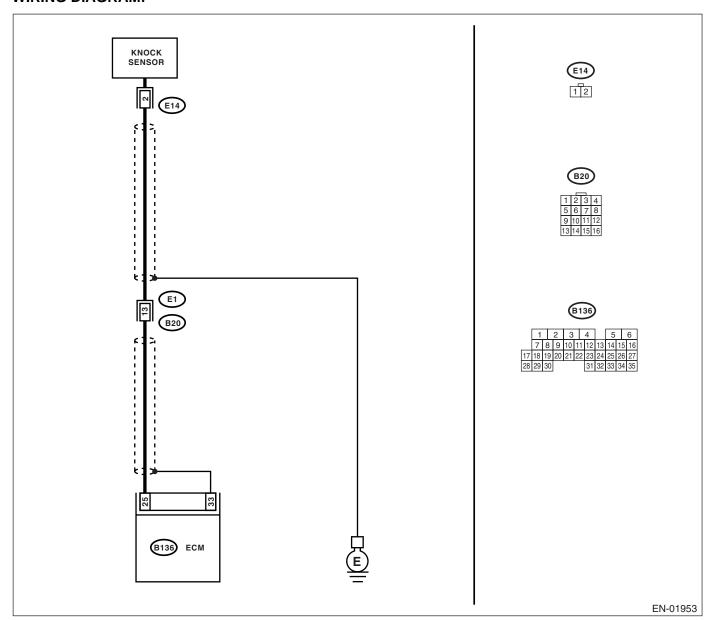

	Step	Check	Yes	No
1	CHECK HARNESS BETWEEN KNOCK SEN- SOR AND ECM CONNECTOR.  Measure the resistance of harness between ECM connector and chassis ground.  Connector & terminal  (B136) No. 25 — Chassis ground:	Is the resistance less than 400 k $\Omega$ ?	Go to step 2.	Go to step 3.
2	CHECK KNOCK SENSOR.  1) Disconnect the connector from knock sensor.  2) Measure the resistance between knock sensor connector terminal and engine ground.  Terminals  No. 2 — Engine ground:	Is the resistance less than 400 $\mbox{k}\Omega ?$	Replace the knock sensor. <ref. to<br="">FU(H4DOTC)-26, Knock Sensor.&gt;</ref.>	Repair the ground short circuit in harness between knock sensor connector and ECM connector.  NOTE: The harness between both connectors are shielded. Repair the short circuit in harness covered with shield.
3	CHECK INPUT SIGNAL FROM ECM.  1) Connect the connectors to ECM and knock sensor.  2) Turn the ignition switch to ON.  3) Measure the voltage between ECM and chassis ground.  Connector & terminal  (B136) No. 25 (+) — Chassis ground (-):	Is the voltage more than 2 V?	Even if the mal- function indicator light illuminates, the circuit has returned to a nor- mal condition at this time. (How- ever, the possibility of poor contact still remains.) NOTE: In this case, repair the following:  Poor contact in knock sensor con- nector Poor contact in ECM connector Poor contact in coupling connector	

# **AG:DTC P0335 CRANKSHAFT POSITION SENSOR "A" CIRCUIT**

#### DTC DETECTING CONDITION:


Detect as soon as the malfunction occurs.

#### **TROUBLE SYMPTOM:**

- Engine stalls.
- · Failure of engine to start

#### CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

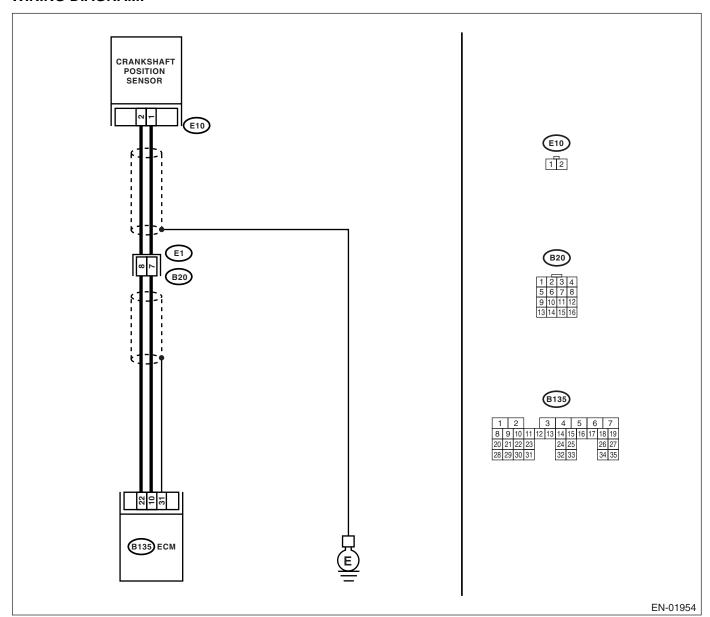

	Stan	Check	Yes	No
1	Step CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Inspect the DTC	Go to step 2.
		is any other DTC displayed?	using "List of Diagnostic Trouble Code (DTC)". <ref. (dtc).="" code="" diagnostic="" en(h4dotc)(diag)-55,="" list="" of="" to="" trouble=""></ref.>	·
2	CHECK HARNESS BETWEEN CRANK-SHAFT POSITION SENSOR AND ECM CONNECTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from the crankshaft position sensor. 3) Measure the resistance of harness between crankshaft position sensor connector and engine ground.  Connector & terminal  (E10) No. 1 — (B135) No. 10:  (E10) No. 2 — (B135) No. 22:	Is the resistance more than 100 k $\Omega$ ?	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between crankshaft position sensor and ECM connector Poor contact in ECM connector Poor contact in coupling connector	Go to step 3.
3	CHECK HARNESS BETWEEN CRANK-SHAFT POSITION SENSOR AND ECM CONNECTOR.  Measure the resistance of harness between crankshaft position sensor connector and engine ground.  Connector & terminal  (E10) No. 1 — Engine ground:  (E10) No. 2 — Engine ground:	Is the resistance more than 1 $M\Omega$ ?	Go to step 4.	Repair the ground short circuit in harness between crankshaft position sensor and ECM connector.  NOTE: The harness between both connectors are shielded. Repair the ground short circuit in harness together with shield.
4	CHECK CONDITION OF CRANKSHAFT PO- SITION SENSOR.	Is the crankshaft position sensor installation bolt tightened securely?	Go to step 5.	Tighten the crank- shaft position sen- sor installation bolt securely.
5	<ul> <li>CHECK CRANKSHAFT POSITION SENSOR.</li> <li>1) Remove the crankshaft position sensor.</li> <li>2) Measure the resistance between connector terminals of crankshaft position sensor.</li> <li>Terminals</li> <li>No. 1 — No. 2:</li> </ul>	Is the resistance 1 — 4 k $\Omega$ ?	Repair the poor contact in crank-shaft position sensor connector.	Replace the crank- shaft position sen- sor. <ref. to<br="">FU(H4DOTC)-24, Crankshaft Posi- tion Sensor.&gt;</ref.>

# AH:DTC P0340 CAMSHAFT POSITION SENSOR "A" CIRCUIT (BANK 1 OR SINGLE SENSOR)

### **DTC DETECTING CONDITION:**


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- · Engine stalls.
- · Failure of engine to start

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCE-DURE, Inspection Mode.>.

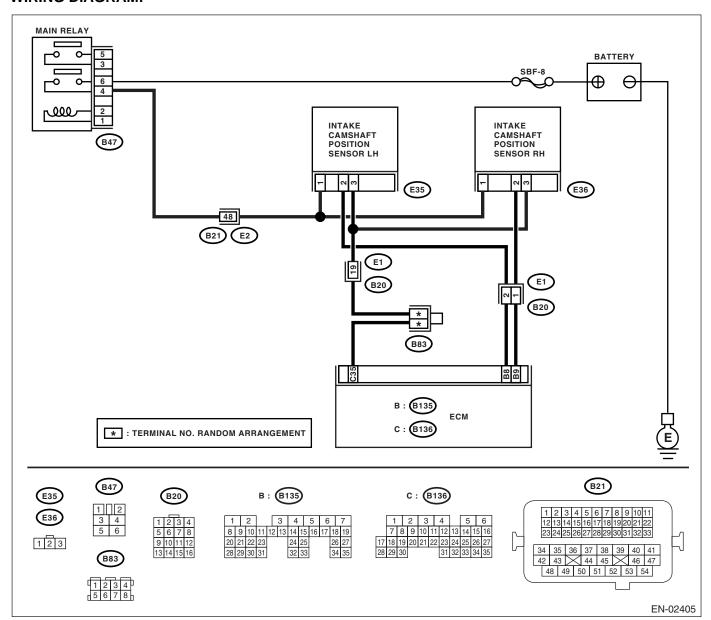

	Step	Check	Yes	No
1	CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Inspect the DTC using "List of Diagnostic Trouble Code (DTC)". <ref. (dtc).="" code="" diagnostic="" en(h4dotc)(diag)-55,="" list="" of="" to="" trouble=""></ref.>	
2	CHECK POWER SUPPLY OF CAMSHAFT POSITION SENSOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from camshaft position sensor.  3) Measure the voltage between camshaft position sensor connector and engine ground.  Connector & terminal  (E36) No. 1 (+) — Engine ground (-):	Is the voltage more than 10 V?	Repair the battery short circuit between main relay connector and camshaft position sensor connector.	Go to step 3.
3	CHECK POWER SUPPLY OF CAMSHAFT POSITION SENSOR.  1) Turn the ignition switch to ON.  2) Measure the voltage between camshaft position sensor connector and engine ground.  Connector & terminal  (E36) No. 1 (+) — Engine ground (-):	Is the voltage more than 10 V?	Go to step 4.	Repair the open or ground short circuit between main relay connector and camshaft position sensor connector.
4	CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR CONNECTOR AND ECM.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Measure the resistance between camshaft position sensor connector and ECM.  Connector & terminal  (E36) No. 2 — (B135) No. 9:  (E36) No. 3 — (B136) No. 35:	Is the resistance less than 1 $\Omega$ ?	Go to step 5.	Repair the open circuit between camshaft position sensor and ECM.
5	CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR CONNECTOR AND ECM.  Measure the resistance between camshaft position sensor connector and engine ground.  Connector & terminal  (E36) No. 2 — Engine ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 6.	Repair the ground short circuit between camshaft position sensor and ECM.
6	CHECK CONDITION OF CAMSHAFT POSITION SENSOR.	Is the camshaft position sensor installation bolt tightened securely?	Go to step 7.	Tighten the cam- shaft position sen- sor installation bolt securely.
7	CHECK CAMSHAFT POSITION SENSOR. Check waveform of camshaft position sensor. <ref. (ecm)="" control="" en(h4dotc)(diag)-15,="" engine="" i="" module="" o="" signal.="" to=""></ref.>	Is there any abnormality in waveform?	Replace the cam- shaft position sen- sor. <ref. to<br="">FU(H4DOTC)-24, Crankshaft Posi- tion Sensor.&gt;</ref.>	Go to step 8.
8	CHECK POOR CONTACT. Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <ref. to<br="">FU(H4DOTC)-35, Engine Control Module (ECM).&gt;</ref.>

## AI: DTC P0345 CAMSHAFT POSITION SENSOR "A" CIRCUIT (BANK 2)

#### **DTC DETECTING CONDITION:**


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- Engine stalls.
- · Failure of engine to start

#### CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

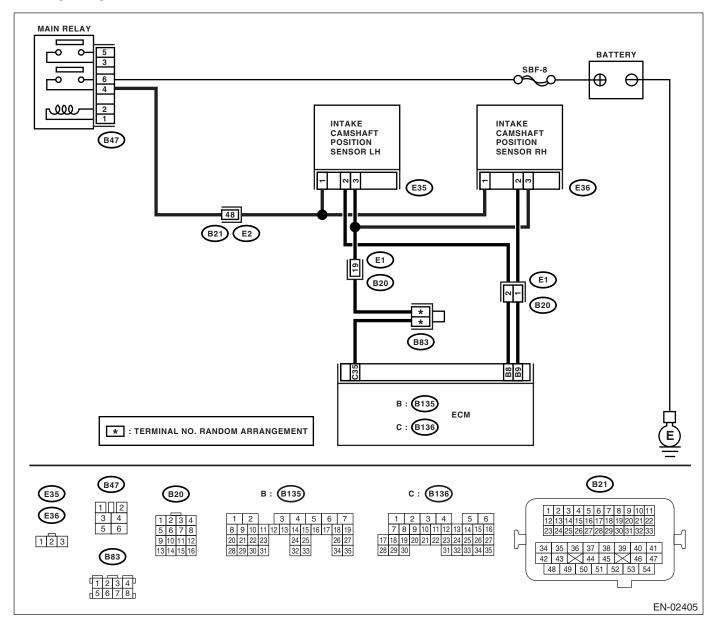

	Step	Check	Yes	No
1	CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Inspect the DTC using "List of Diagnostic Trouble Code (DTC)". <ref. (dtc).="" code="" diagnostic="" en(h4dotc)(diag)-55,="" list="" of="" to="" trouble=""></ref.>	Go to step 2.
2	CHECK POWER SUPPLY OF CAMSHAFT POSITION SENSOR.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from camshaft position sensor.  3) Measure the voltage between camshaft position sensor connector and engine ground.  Connector & terminal  (E35) No. 1 (+) — Engine ground (-):	Is the voltage more than 10 V?	short circuit between main relay connector and camshaft position sensor connector.	Go to step 3.
3	CHECK POWER SUPPLY OF CAMSHAFT POSITION SENSOR.  1) Turn the ignition switch to ON.  2) Measure the voltage between camshaft position sensor connector and engine ground.  Connector & terminal  (E35) No. 1 (+) — Engine ground (-):	Is the voltage more than 10 V?		Repair the open or ground short circuit between main relay connector and camshaft position sensor connector.
4	CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR CONNECTOR AND ECM.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Measure the resistance between camshaft position sensor connector and ECM.  Connector & terminal  (E35) No. 2 — (B135) No. 8:  (E35) No. 3 — (B136) No. 35:	Is the resistance less than 1 $\Omega$ ?	Go to step 5.	Repair the open circuit between camshaft position sensor and ECM.
5	CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR CONNECTOR AND ECM.  Measure the resistance between camshaft position sensor connector and engine ground.  Connector & terminal  (E35) No. 2 — Engine ground:	Is the resistance more than 1 $\mbox{M}\Omega\mbox{?}$	Go to step 6.	Repair the ground short circuit between camshaft position sensor and ECM.
6	CHECK CONDITION OF CAMSHAFT POSITION SENSOR.	Is the camshaft position sensor installation bolt tightened securely?	Go to step 7.	Tighten the cam- shaft position sen- sor installation bolt securely.
7	CHECK CAMSHAFT POSITION SENSOR. Check waveform of camshaft position sensor. <ref. (ecm)="" control="" en(h4dotc)(diag)-15,="" engine="" i="" module="" o="" signal.="" to=""></ref.>	Is there any abnormality in waveform?	Replace the cam- shaft position sen- sor. <ref. to<br="">FU(H4DOTC)-25, Camshaft Position Sensor.&gt;</ref.>	Go to step 8.
8	CHECK POOR CONTACT. Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <ref. to<br="">FU(H4DOTC)-35, Engine Control Module (ECM).&gt;</ref.>

# **Diagnostic Procedure with Diagnostic Trouble Code (DTC)**

ENGINE (DIAGNOSTICS)

## AJ:DTC P0350 IGNITION COIL PRIMARY/SECONDARY CIRCUIT

#### DTC DETECTING CONDITION:

Detect as soon as the malfunction occurs.


### TROUBLE SYMPTOM:


- Engine stalls.
- Idle mixture is out of specifications.

#### CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

### **WIRING DIAGRAM:**

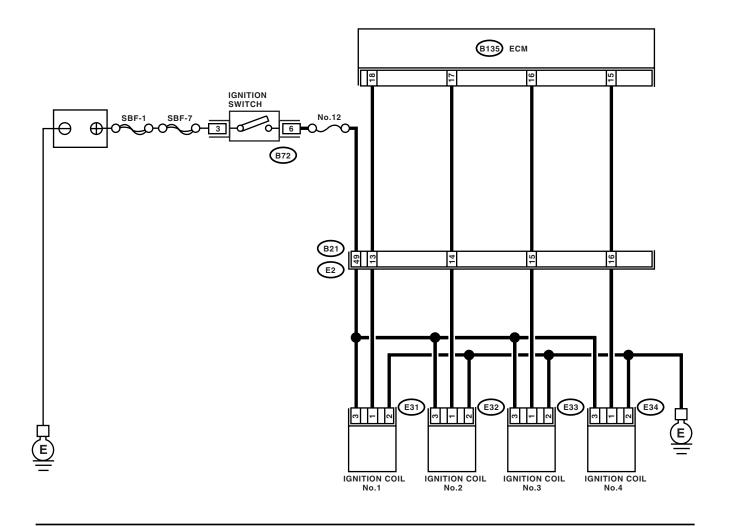

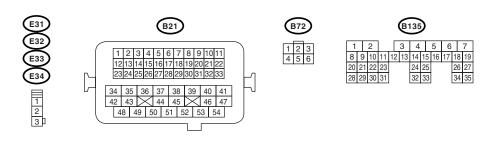

EN-02404

	Step	Check	Yes	No
1	CHECK POWER SUPPLY CIRCUIT FOR IG-	Is the voltage more than 10 V?		Repair the har-
	NITION COIL & IGNITOR ASSY.	is the voltage more than 10 v :	00 to stop 2.	ness and connec-
	Turn the ignition switch to OFF.			tor.
	2) Disconnect the connector from ignition coil			NOTE:
	& ignitor ASSY.			In this case, repair
	3) Turn the ignition switch to ON.			the following:
	4) Measure the power supply voltage between			Open circuit in
	ignition coil & ignitor ASSY connector and			harness between
	engine ground.			ignition coil & igni-
	Connector & terminal			tor ASSY and igni-
	(E31) No. 3 (+) — Engine ground (–):			tion switch
	(E32) No. 3 (+) — Engine ground (–):			connector
	(E33) No. 3 (+) — Engine ground (-):			<ul> <li>Poor contact in</li> </ul>
	(E34) No. 3 (+) — Engine ground (−):			coupling connector
2	CHECK HARNESS OF ECM AND IGNITION	Is the resistance less than 5	Go to step 3.	Repair the har-
	COIL & IGNITOR ASSY GROUND CIRCUIT.	Ω?		ness and connec-
	1) Turn the ignition switch to OFF.			tor.
	2) Disconnect the connector from ECM.			NOTE:
	3) Measure the resistance between ignition			In this case, repair
	coil & ignitor ASSY connector and engine ground.			the following:
	Connector & terminal			<ul> <li>Open circuit in harness between</li> </ul>
	(E31) No. 2 — Engine ground:			ignition coil & igni-
	(E32) No. 2 — Engine ground:			tor ASSY connec-
	(E33) No. 2 — Engine ground:			tor and engine
	(E34) No. 2 — Engine ground:			grounding terminal
	(=0.) = =g g. caa.			Poor contact in
				coupling connector
3	CHECK HARNESS BETWEEN ECM AND IG-	Is the resistance less than 1	Go to step 4.	Repair the har-
	NITION COIL & IGNITOR ASSY CONNEC-	$\Omega$ ?	•	ness and connec-
	TOR.			torrepair the
	1) Disconnect the connector from ignition coil			harness and con-
	& ignitor ASSY.			nector.
	Measure the resistance of harness			NOTE:
	between ECM and ignition coil & ignitor ASSY			In this case, repair
	connector.			the following:
	Connector & terminal			Open circuit in
	(B135) No. 18 — (E31) No. 1: (B135) No. 17 — (E32) No. 1:			harness between
	(B135) No. 17 — (E32) No. 1: (B135) No. 16 — (E33) No. 1:			ECM and ignition coil & ignitor ASSY
	(B135) No. 10 — (E33) No. 1. (B135) No. 15 — (E34) No. 1:			connector
	(= 100) 1101 10 (= 1007) 1101 11			Poor contact in
				coupling connector
4	CHECK HARNESS BETWEEN ECM AND IG-	Is the resistance more than 1	Repair the poor	Repair the har-
	NITION COIL & IGNITOR ASSY CONNEC-	$M\Omega$ ?	contact in terminal.	•
	TOR.			torrepair the
	Measure the resistance of harness between			harness and con-
	ignition coil & ignitor ASSY connector and			nector.
	engine ground.			
	Connector & terminal:			
	(E31) No. 1 — Engine ground:			
	(E32) No. 1 — Engine ground:			
	(E32) No. 1 — Engine ground:			
	(E34) No. 1 — Engine ground:			

# **AK:DTC P0365 CAMSHAFT POSITION SENSOR "B" CIRCUIT (BANK 1)**

#### DTC DETECTING CONDITION:


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- Engine stalls.
- · Failure of engine to start

#### CAUTION

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

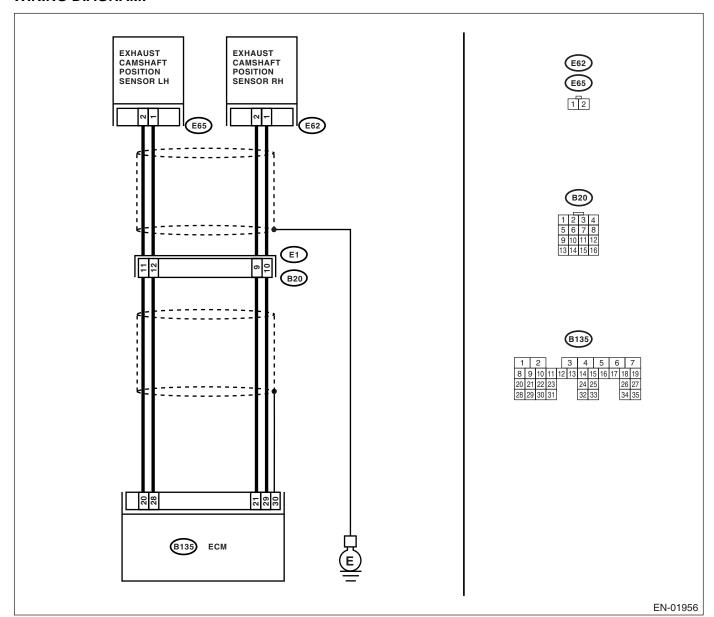

	Step	Check	Yes	No
1	CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from camshaft position sensor. 3) Measure the resistance of harness between camshaft position sensor connector and ECM.  Connector & terminal  (E62) No. 1 — (B135) No. 29:  (E62) No. 2 — (B135) No. 21:	Is the resistance less than 1 $\Omega$ ?	Go to step 2.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between camshaft position sensor and ECM connector  Poor contact in ECM connector  Poor contact in coupling connector
2	CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.  Measure the resistance of harness between camshaft position sensor connector and engine ground.  Connector & terminal  (E62) No. 1 — Engine ground:  (E62) No. 2 — Engine ground:	Is the resistance more than 1 $\mbox{M}\Omega\mbox{?}$	Go to step 3.	Repair the ground short circuit in harness between camshaft position sensor and ECM connector.  NOTE: The harness between both connectors are shielded. Repair the ground short circuit in harness together with shield.
3	CHECK CONDITION OF CAMSHAFT POSITION SENSOR.	Is the crankshaft position sensor installation bolt tightened securely?	Go to step 4.	Tighten the crank- shaft position sen- sor installation bolt securely.
4	CHECK CAMSHAFT POSITION SENSOR.  1) Remove the camshaft position sensor.  2) Measure the resistance between connector terminals of camshaft position sensor.  Terminals  No. 1 — No. 2:	Is the resistance 1 — 4 k $\Omega$ ?	Repair the poor contact in cam- shaft position sen- sor connector.	Replace the cam- shaft position sen- sor. <ref. to<br="">FU(H4DOTC)-25, Camshaft Position Sensor.&gt;</ref.>

# **AL:DTC P0390 CAMSHAFT POSITION SENSOR "B" CIRCUIT (BANK 2)**

#### DTC DETECTING CONDITION:


Detect as soon as the malfunction occurs.

#### **TROUBLE SYMPTOM:**

- Engine stalls.
- · Failure of engine to start

#### CAUTION

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

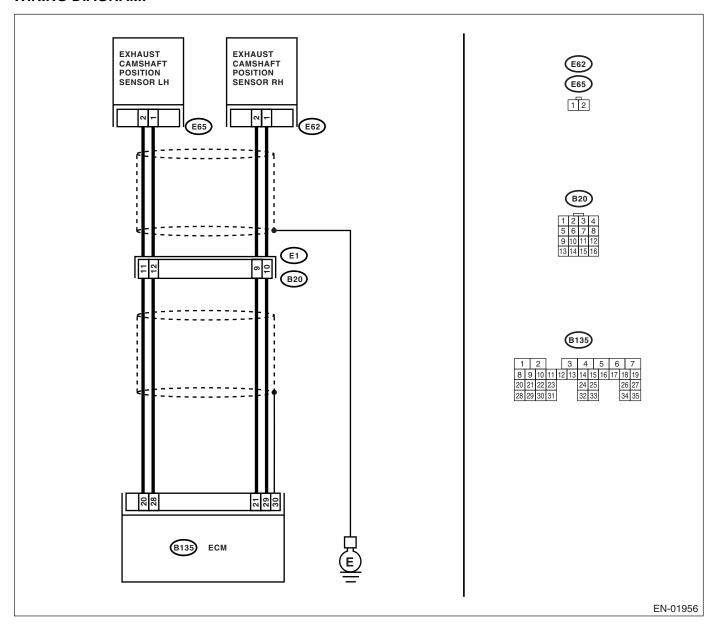

	Step	Check	Yes	No
1	CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from camshaft position sensor. 3) Measure the resistance of harness between camshaft position sensor connector and ECM.  Connector & terminal  (E65) No. 1 — (B135) No. 28:  (E65) No. 2 — (B135) No. 20:	Is the resistance less than 1 $\Omega$ ?	Go to step 2.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between camshaft position sensor and ECM connector  Poor contact in ECM connector  Poor contact in coupling connector
2	CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.  Measure the resistance of harness between camshaft position sensor connector and engine ground.  Connector & terminal  (E65) No. 1 — Engine ground:  (E65) No. 2 — Engine ground:	Is the resistance more than 1 $M\Omega$ ?	Go to step 3.	Repair the ground short circuit in harness between camshaft position sensor and ECM connector.  NOTE: The harness between both connectors are shielded. Repair the ground short circuit in harness together with shield.
3	CHECK CONDITION OF CAMSHAFT POSITION SENSOR.	Is the crankshaft position sensor installation bolt tightened securely?	Go to step 4.	Tighten the crank- shaft position sen- sor installation bolt securely.
4	CHECK CAMSHAFT POSITION SENSOR.  1) Remove the camshaft position sensor.  2) Measure the resistance between connector terminals of camshaft position sensor.  Terminals  No. 1 — No. 2:	Is the resistance 1 — 4 k $\Omega$ ?	Repair the poor contact in camshaft position sensor connector.	Replace the cam- shaft position sen- sor. <ref. to<br="">FU(H4DOTC)-25, Camshaft Position Sensor.&gt;</ref.>

**ENĞINE (ĎIAGNOSTICS)** 

# AM:DTC P0458 EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT LOW

### **DTC DETECTING CONDITION:**


Two consecutive driving cycles with fault

### TROUBLE SYMPTOM:

Erroneous idling

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

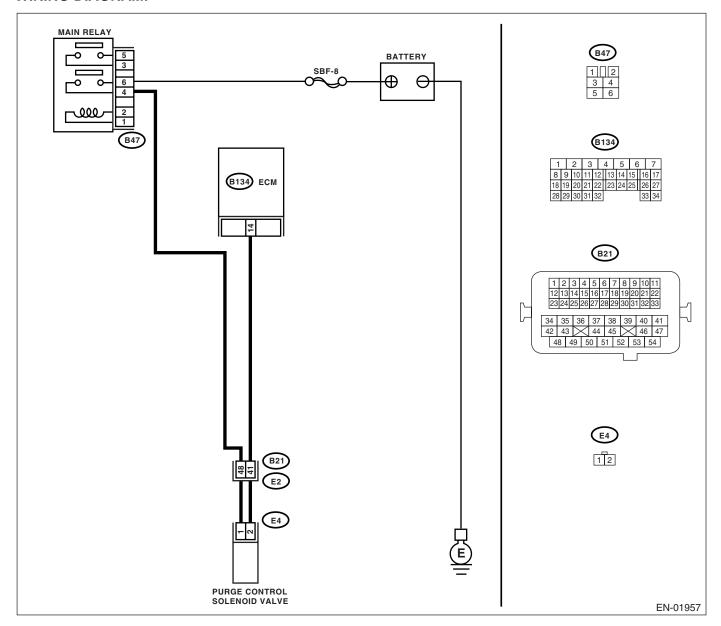

	Ston	Check	Yes	No
1	Step CHECK OUTPUT SIGNAL FROM ECM.		Even if the mal-	_
1	1) Turn the ignition switch to ON. 2) Measure the voltage between ECM and chassis ground.  Connector & terminal  (B134) No. 14 (+) — Chassis ground (-):	Is the voltage more than 10 V?	function indicator light illuminates, the circuit has returned to a normal condition at this time.	Go to step 2.
2	CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connectors from purge control solenoid valve and ECM. 3) Measure the resistance of harness between purge control solenoid valve connector and engine ground.  Connector & terminal  (E4) No. 2 — Engine ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 3.	Repair the ground short circuit in har- ness between ECM and purge control solenoid valve connector.
3	CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.  Measure the resistance of harness between ECM and purge control solenoid valve of harness connector.  Connector & terminal  (B134) No. 14 — (E4) No. 2:	Is the resistance less than 1 $\Omega$ ?	Go to step 4.	Repair the open circuit in harness between ECM and purge control solenoid valve connector.  NOTE: In this case, repair the following:  Open circuit in harness between ECM and purge control solenoid valve connector  Poor contact in coupling connector
4	CHECK PURGE CONTROL SOLENOID VALVE.  1) Remove the purge control solenoid valve. 2) Measure the resistance between purge control solenoid valve terminals.  Terminals No. 1 — No. 2:	Is the resistance 29 — 35 $\Omega$ ?	Go to step 5.	Replace the purge control solenoid valve. <ref. to<br="">EC(H4DOTC)-6, Purge Control Solenoid Valve.&gt;</ref.>
5	CHECK POWER SUPPLY TO PURGE CONTROL SOLENOID VALVE.  1) Turn the ignition switch to ON. 2) Measure the voltage between purge control solenoid valve and engine ground.  Connector & terminal  (E4) No. 1 (+) — Engine ground (-):	Is the voltage more than 10 V?	Go to step 6.	Repair the open circuit in harness between main relay and purge control solenoid valve connector.
6	CHECK POOR CONTACT.  Check poor contact in purge control solenoid valve connector.	Is there poor contact in purge control solenoid valve connector?	Repair the poor contact in purge control solenoid valve connector.	Replace the ECM. <ref. to<br="">FU(H4DOTC)-35, Engine Control Module (ECM).&gt;</ref.>

# AN:DTC P0459 EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT HIGH

### DTC DETECTING CONDITION:


Two consecutive driving cycles with fault

### TROUBLE SYMPTOM:

Erroneous idling

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

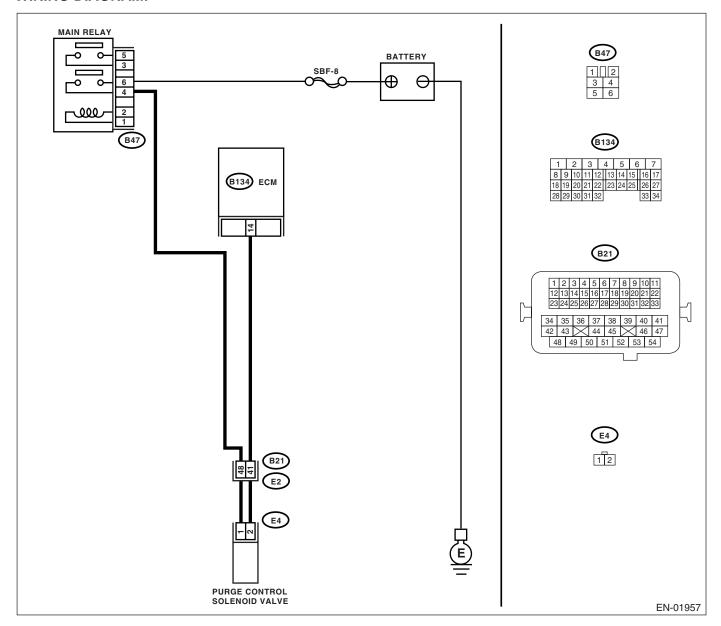

	Step	Check	Yes	No
1	CHECK OUTPUT SIGNAL FROM ECM.  1) Turn the ignition switch to OFF.  2) Connect the test mode connector at the lower portion of instrument panel (on the driver's side).  3) Turn the ignition switch to ON.	Does the purge control sole- noid valve operate?	Go to step 2.	Even if the mal- function indicator light illuminates, the circuit has returned to a nor- mal condition at this time. In this case, repair the poor contact in ECM connector.
2	CHECK PURGE CONTROL SOLENOID VALVE.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from purge control solenoid valve.  3) Measure the resistance between purge control solenoid valve terminals.  Terminals  No. 1 — No. 2:	Is the resistance less than 29 — 35 $\Omega$ ?	Go to step 3.	Replace the purge control solenoid valve. <ref. to<br="">EC(H4DOTC)-6, Purge Control Solenoid Valve.&gt;</ref.>
3	CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from purge control solenoid valve. 3) Turn the ignition switch to ON. 4) Measure the voltage between ECM and chassis ground.  Connector & terminal  (B134) No. 14 (+) — Chassis ground (-):	Is the voltage less than 1 V?	Go to step 4.	Repair the battery short circuit in harness between ECM and purge control solenoid valve connector. After repair, replace the ECM. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>
4	CHECK POOR CONTACT. Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair the poor contact in ECM connector.	Replace the ECM. <ref. to<br="">FU(H4DOTC)-35, Engine Control Module (ECM).&gt;</ref.>

# **Diagnostic Procedure with Diagnostic Trouble Code (DTC)**

ENĜINE (ĎIAGNOSTICS)

# **AO:DTC P0500 VEHICLE SPEED SENSOR**

### DTC DETECTING CONDITION:

Detect as soon as the malfunction occurs.

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

Step	Check	Yes	No
1 CHECK DTC OF ABS. Check DTC of ABS.	Is DTC of ABS displayed?	Perform the diagnosis according to the DTC. <ref. (dtc).="" abs(diag)-39,="" code="" diagnostic="" list="" of="" to="" trouble=""></ref.>	

#### **AP:DTC P0512 STARTER REQUEST CIRCUIT**

#### **DTC DETECTING CONDITION:**


Two consecutive driving cycles with fault

#### TROUBLE SYMPTOM:

Failure of engine to start

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

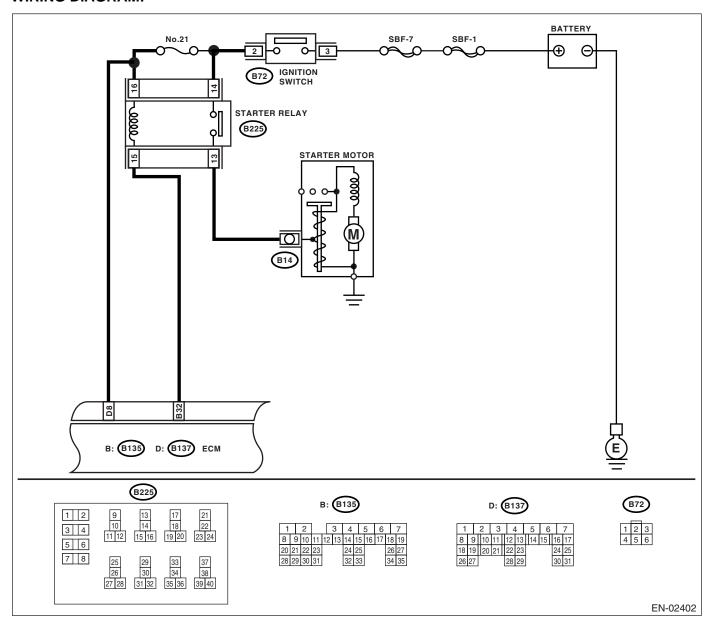

Step	Check	Yes	No
1 CHECK HARNESS BETWEEN IGNITION SWITCH AND ECM. 1) Disconnect the connectors from ECM. 2) Measure the voltage between ECM and chassis ground. Connector & terminal (B137) No. 32 (+) — Chassis ground (-):		Repair the battery short circuit in har- ness between igni- tion switch and ECM.	contact in ECM.

### **Diagnostic Procedure with Diagnostic Trouble Code (DTC)**

ENGINE (DIAGNOSTICS)

### **AQ:DTC P0519 IDLE CONTROL SYSTEM MALFUNCTION (FAIL-SAFE)**

#### DTC DETECTING CONDITION:

Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- Engine keeps running at higher revolution than specified idling revolution.
- Fuel is cut according to fail-safe function.

#### CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

	Step	Check	Yes	No
1	CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <ref. (dtc).="" code="" diagnostic="" en(h4dotc)(diag)-55,="" list="" of="" to="" trouble=""> NOTE: In this case, it is not necessary to inspect DTC P0519.</ref.>	Go to step 2.
2	CHECK AIR INTAKE SYSTEM.  1) Turn the ignition switch to ON.  2) Start and idle the engine.  3) Check the following items:  • Loose installation of intake manifold and throttle body  • Cracks of intake manifold gasket and throttle body gasket  • Disconnections of vacuum hoses	Is there any fault in air intake system?	Repair air suction and leaks.	Go to step 3.
3	CHECK ELECTRONIC THROTTLE CONTROL.  1) Turn the ignition switch to OFF.  2) Remove the electronic throttle control.  3) Check the electronic throttle control.	Are foreign matters found inside the electronic throttle control?	Remove foreign matters from the electronic throttle control.	Perform the diagnosis of DTC P2101.

#### AR:DTC P0562 SYSTEM VOLTAGE LOW

#### **DTC DETECTING CONDITION:**


Detect in case of low power supply voltage of ECM.

#### TROUBLE SYMPTOM:

Charge indicator light illuminates.

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

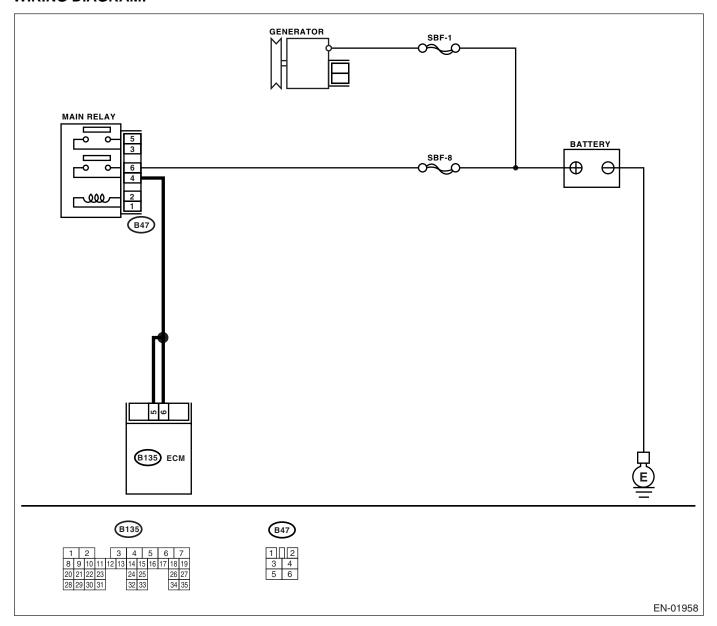

	Step	Check	Yes	No
1	CHECK BATTERY.	Is the voltage more than 12 V	Go to step 2.	Charge or replace
	<ol> <li>Turn the ignition switch to OFF.</li> </ol>	and the gravity more than		the battery.
	<ol><li>Measure battery voltage and specific grav-</li></ol>	1.26?		
	ity of electrolyte.			
2	CHECK GENERATOR.	Is the voltage less than 10.8	Go to step 3.	Repair the genera-
	<ol> <li>Start the engine.</li> </ol>	V?		tor. <ref. th="" to<=""></ref.>
	<ol><li>Run the engine at idle after warming up.</li></ol>			SC(H4SO 2.0)-14,
	3) Measure the voltage between generator B			Generator.>
	terminal and chassis ground.			
	Terminals			
	Generator B terminal (+) — Chassis			
	ground (–):			
3	CHECK GENERATOR.	Is the voltage less than 10.8	Go to step 4.	Repair the genera-
	1) Run the engine at 5,000 rpm.	V?		tor. <ref. th="" to<=""></ref.>
	Measure the voltage between generator B     terminal and chaosis ground			SC(H4SO 2.0)-14, Generator.>
	terminal and chassis ground. <b>Terminals</b>			Generator.>
	Generator B terminal (+) — Chassis			
	ground (–):			
4	CHECK BATTERY TERMINAL.	Are the positive and negative	Go to step 5.	Tighten the clamp
	Turn the ignition switch to OFF.	battery terminals clamped	Co to stop <b>c.</b>	of terminal.
	<ul><li>2) Check the installation of positive and nega-</li></ul>	tightly?		or torrimia.
	tive terminals of battery.	1.9.1.7		
5	CHECK INPUT VOLTAGE OF ECM.	Is the voltage less than 10.8	Go to step 6.	Repair the har-
	1) Run the engine at idle.	V?	'	ness connectors
	2) Measure the voltage between ECM con-			between battery,
	nector and chassis ground.			main relay and
	Connector & terminal			ECM.
	(B135) No. 5 (+) — Chassis ground (–):			
	(B135) No. 6 (+) — Chassis ground (–):			
6	CHECK POOR CONTACT IN CONNECTORS.	Is there poor contact in con-	Repair the poor	Go to step 7.
	Check the poor contact in connectors between	nectors between generator,	contact.	
	generator, battery and ECM.	battery and ECM?		
7	CHECK ECM.	Is the same DTC displayed?	Replace the gen-	Go to step 8.
	<ol> <li>Connect all the connectors.</li> </ol>		erator.	
	2) Erase the memory. <ref. th="" to<=""><th></th><th></th><th></th></ref.>			
	EN(H4DOTC)(diag)-30, Clear Memory Mode.>			
	3) Perform the inspection mode. <ref. th="" to<=""><th></th><th></th><th></th></ref.>			
	EN(H4DOTC)(diag)-28, Inspection Mode.> 4) Read the DTC. <ref. th="" to<=""><th></th><th></th><th></th></ref.>			
	EN(H4DOTC)(diag)-27, Read Diagnostic Trou-			
	ble Code (DTC).>			
	Check if the same DTC is displayed.			
8	CHECK ANY OTHER DTC IS DISPLAYED.	Is any other DTC displayed?	Perform the diag-	Temporary poor
١	Check if any other DTC is displayed.	lis any other DTO displayed?	nosis of DTC dis-	contact occurs.
	Chook if any other bit of adoptayou.		played.	Somasi Socials.
1		1	r · ~ , ~ ~ .	

#### AS:DTC P0563 SYSTEM VOLTAGE HIGH

#### DTC DETECTING CONDITION:


Detect in case of high power supply voltage of ECM.

#### TROUBLE SYMPTOM:

Charge indicator light illuminates.

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

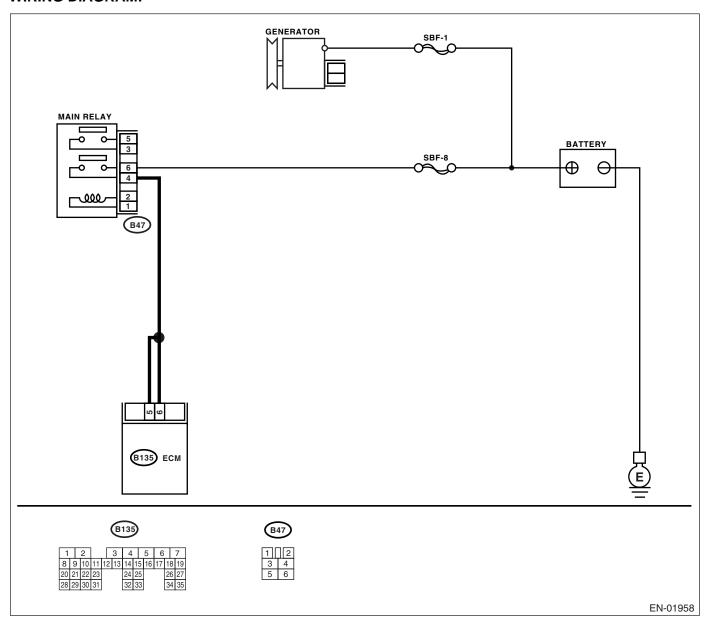

	Step	Check	Yes	No
1	CHECK BATTERY.	Is the voltage more than 12 V	Go to step 2.	Replace the bat-
	<ol> <li>Turn the ignition switch to OFF.</li> </ol>	and the gravity more than		tery.
	<ol><li>Measure battery voltage and specific grav-</li></ol>	1.26?		
	ity of electrolyte.			
2	CHECK GENERATOR.	Is the voltage more than 16.2	Go to step 3.	Repair the genera-
	<ol> <li>Start the engine.</li> </ol>	V?		tor. <ref. th="" to<=""></ref.>
	<ol><li>Run the engine at idle after warming up.</li></ol>			SC(H4SO 2.0)-14,
	3) Measure the voltage between generator B			Generator.>
	terminal and chassis ground.			
	Terminals			
	Generator B terminal (+) — Chassis			
	ground (–):			
3	CHECK GENERATOR.	Is the voltage more than 16.2	Go to step 4.	Repair the genera-
	1) Run the engine at 5,000 rpm.	V?		tor. <ref. th="" to<=""></ref.>
	2) Measure the voltage between generator B			SC(H4SO 2.0)-14,
	terminal and chassis ground.  Terminals			Generator.>
	Generator B terminal (+) — Chassis			
	ground (–):			
4	CHECK BATTERY TERMINAL.	Are the positive and negative	Go to step 5.	Tighten the clamp
-	Turn the ignition switch to OFF.	battery terminals clamped	Go to step 3.	of terminal.
	<ul><li>2) Check the installation of positive and nega-</li></ul>	tightly?		or terminal.
	tive terminals of battery.	ingritiy :		
5	CHECK INPUT VOLTAGE OF ECM.	Is the voltage more than 16.2	Go to step 6.	Repair the har-
١	Run the engine at idle.	V?	00 to step <b>0.</b>	ness connectors
	Measure the voltage between ECM con-			between battery,
	nector and chassis ground.			main relay and
	Connector & terminal			ECM.
	(B135) No. 5 (+) — Chassis ground (-):			
	(B135) No. 6 (+) — Chassis ground (-):			
6	CHECK POOR CONTACT IN CONNECTORS.	Is there poor contact in con-	Repair the poor	Go to step 7.
	Check the poor contact in connectors between	nectors between generator,	contact.	
	generator, battery and ECM.	battery and ECM?		
7	CHECK ECM.	Is the same DTC displayed?	Replace the gen-	Go to step 8.
	<ol> <li>Connect all the connectors.</li> </ol>		erator.	
	<ol><li>Erase the memory. <ref. li="" to<=""></ref.></li></ol>			
	EN(H4DOTC)(diag)-30, Clear Memory Mode.>			
	<ol><li>Perform the inspection mode. <ref. li="" to<=""></ref.></li></ol>			
	EN(H4DOTC)(diag)-28, Inspection Mode.>			
	4) Read the DTC. <ref. th="" to<=""><th></th><th></th><th></th></ref.>			
	EN(H4DOTC)(diag)-27, Read Diagnostic Trou-			
	ble Code (DTC).>			
	Check if the same DTC is displayed.			
8	CHECK ANY OTHER DTC IS DISPLAYED.	Is any other DTC displayed?	Perform the diag-	Temporary poor
	Check if any other DTC is displayed.		nosis of DTC dis-	contact occurs.
			played.	

### **Diagnostic Procedure with Diagnostic Trouble Code (DTC)**

**ENĞINE (ĎIAGNOSTICS)** 

#### AT: DTC P0600 SERIAL COMMUNICATION LINK

NOTE:

For the diagnostic procedure, refer to LAN system.

# AU:DTC P0604 INTERNAL CONTROL MODULE READ ACCESS MEMORY (RAM) ERROR

NOTE:

For the diagnostic procedure, refer to DTC P0607. <Ref. to EN(H4DOTC)(diag)-152, DTC P0607 CONTROL MODULE PERFORMANCE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

## AV:DTC P0605 INTERNAL CONTROL MODULE READ ONLY MEMORY (ROM) ERROR

NOTE:

For the diagnostic procedure, refer to DTC P0607. <Ref. to EN(H4DOTC)(diag)-152, DTC P0607 CONTROL MODULE PERFORMANCE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

### **Diagnostic Procedure with Diagnostic Trouble Code (DTC)**

ENGINE (DIAGNOSTICS)

### **AW:DTC P0607 CONTROL MODULE PERFORMANCE**

#### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.


#### **TROUBLE SYMPTOM:**

- · Erroneous idling
- · Poor driving performance

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

#### WIRING DIAGRAM:

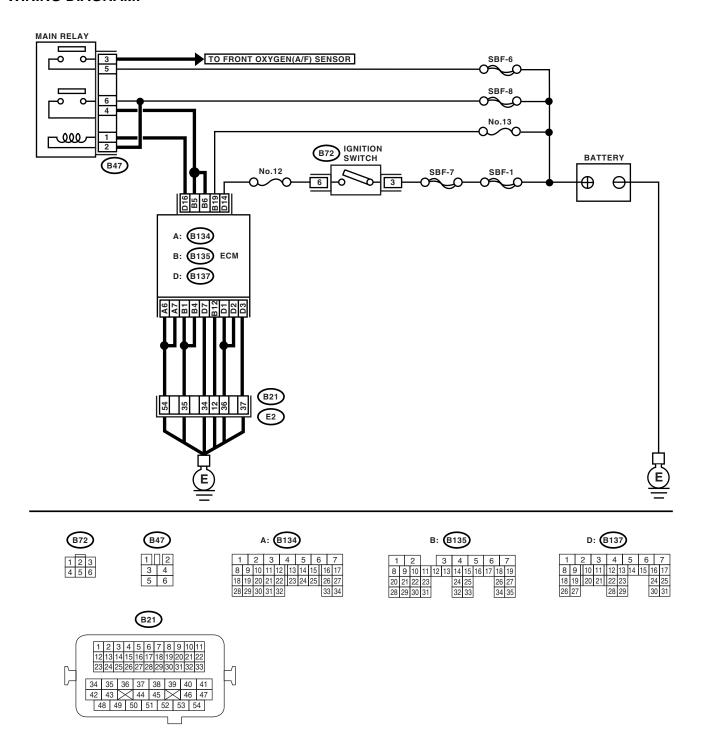

EN-02403

### **Diagnostic Procedure with Diagnostic Trouble Code (DTC)**

ENGINE (DIAGNOSTICS)

	Step	Check	Yes	No
1	CHECK INPUT VOLTAGE OF ECM.  1) Turn the ignition switch to ON.  2) Measure the voltage between ECM connector and chassis ground.  Connector & terminal  (B135) No. 5 (+) — Chassis ground (-):  (B135) No. 6 (+) — Chassis ground (-):	Is the voltage 10 — 13 V?	Go to step 2.	Repair the open or ground short circuit of power supply circuit.
2	CHECK INPUT VOLTAGE OF ECM.  1) Start the engine. 2) Measure the voltage between ECM connector and chassis ground.  Connector & terminal  (B135) No. 5 (+) — Chassis ground (-):  (B135) No. 6 (+) — Chassis ground (-):	Is the voltage 13 — 15 V?	Go to step 3.	Repair the open or ground short circuit of power supply circuit.
3	CHECK ECM GROUND HARNESS.  Measure the voltage between ECM connector and chassis ground.  Connector & terminal  (B137) No. 1 (+) — Chassis ground (-):  (B137) No. 2 (+) — Chassis ground (-):	Is the voltage less than 1 V?	Repair the poor contact in ECM connector. Replace the ECM if defective. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>	Further tighten the engine ground terminal.

# AX:DTC P0638 THROTTLE ACTUATOR CONTROL RANGE/PERFORMANCE (BANK 1)

NOTE:

For diagnostic procedure, refer to DTC P2101. <Ref. to EN(H4DOTC)(diag)-176, DTC P2101 THROTTLE ACTUATOR CONTROL MOTOR CIRCUIT RANGE/PERFORMANCE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

### AY:DTC P0700 TRANSMISSION CONTROL SYSTEM (MIL REQUEST)

NOTE:

For the diagnostic procedure, refer to AT section. <Ref. to 5AT(diag)-2, Basic Diagnostics Procedure.>

#### AZ:DTC P0851 NEUTRAL SWITCH INPUT CIRCUIT LOW

NOTE:

For the diagnostic procedure, refer to AT section. <Ref. to 5AT(diag)-2, Basic Diagnostics Procedure.>

#### **BA:DTC P0852 NEUTRAL SWITCH INPUT CIRCUIT HIGH**

NOTE:

For the diagnostic procedure, refer to AT section. <Ref. to 5AT(diag)-2, Basic Diagnostics Procedure.>

### Diagnostic Procedure with Diagnostic Trouble Code (DTC)

**ENĞINE (ĎIAGNOSTICS)** 

# BB:DTC P1110 ATMOSPHERIC PRESSURE SENSOR CIRCUIT MALFUNCTION (LOW INPUT)

#### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

#### CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

	Step	Check	Yes	No
1 CHE	ECK ANY OTHER DTC ON DISPLAY.		•	contact occurs.

# BC:DTC P1111 ATMOSPHERIC PRESSURE SENSOR CIRCUIT MALFUNCTION (HIGH INPUT)

#### DTC DETECTING CONDITION:

Detect as soon as the malfunction occurs.

#### CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

Step	Check	Yes	No
		Replace the ECM. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""> NOTE: Atmospheric pressure sensor is built in ECM.</ref.>	

#### **BD:DTC P1160 RETURN SPRING FAILURE**

#### NOTE:

For diagnostic procedure, refer to DTC P2101. <Ref. to EN(H4DOTC)(diag)-176, DTC P2101 THROTTLE ACTUATOR CONTROL MOTOR CIRCUIT RANGE/PERFORMANCE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

#### **BE:DTC P1518 STARTER SWITCH CIRCUIT LOW INPUT**

#### **DTC DETECTING CONDITION:**


Two consecutive driving cycles with fault

#### TROUBLE SYMPTOM:

Failure of engine to start

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

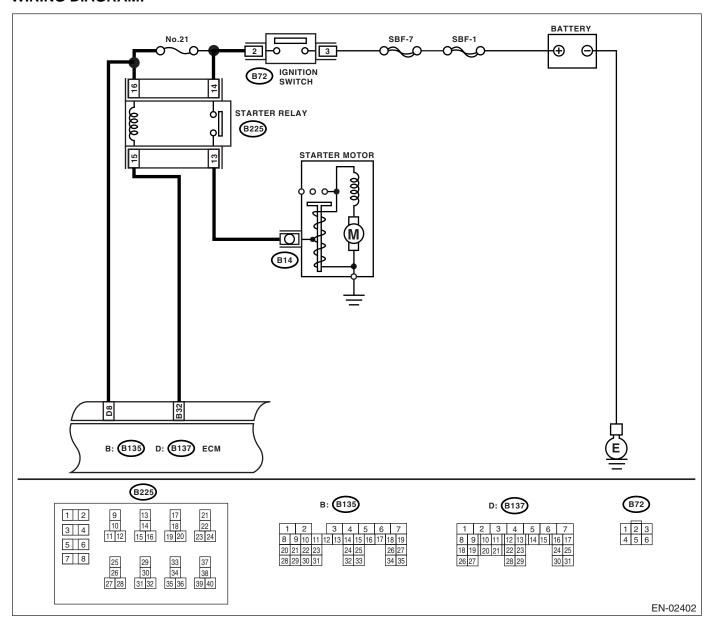

	Step	Check	Yes	No
1	CHECK ANY OTHER DTC ON DISPLAY.	Is any other DTC displayed?	Inspect the DTC using "List of Diagnostic Trouble Code (DTC)". <ref. (dtc).="" code="" diagnostic="" en(h4dotc)(diag)-55,="" list="" of="" to="" trouble=""></ref.>	
2	CHECK HARNESS BETWEEN STARTER RELAY AND ECM.  1) Disconnect the connectors from starter relay and ECM.  2) Measure the resistance of harness between ECM and chassis ground.  Connector & terminal  (B135) No. 32 — Chassis ground:	Is the resistance more than 1 M $\Omega$ ?	Repair the ground short circuit between starter motor and ECM.	Repair the poor contact in ECM connector.


#### BF:DTC P1560 BACK-UP VOLTAGE CIRCUIT MALFUNCTION

#### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCE-DURE, Inspection Mode.>.

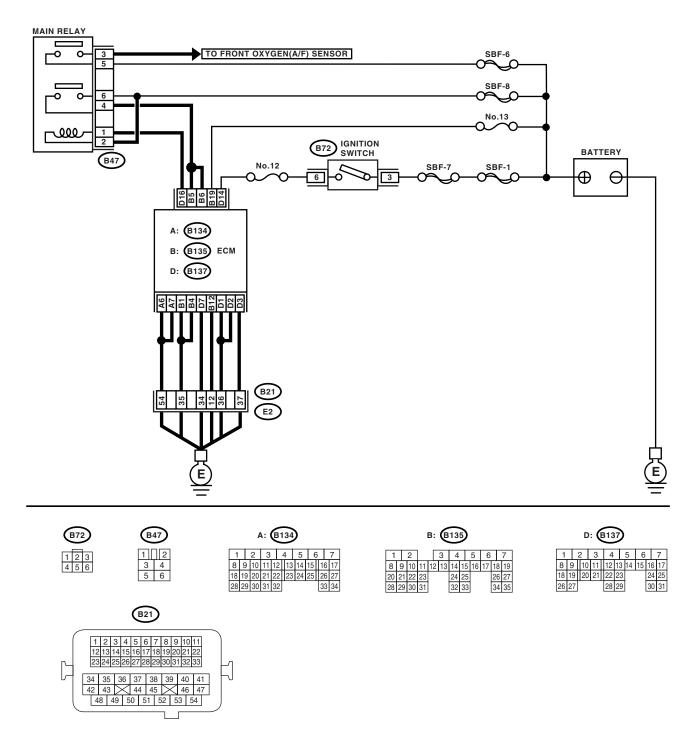

_			T	T
	Step	Check	Yes	No
1	CHECK INPUT SIGNAL FROM ECM.  1) Turn the ignition switch to OFF.  2) Measure the voltage between ECM and chassis ground.  Connector & terminal  (B135) No. 19 (+) — Chassis ground (-):	Is the voltage more than 10 V?	Repair the poor contact in ECM connector.	Go to step 2.
2	CHECK HARNESS BETWEEN ECM AND MAIN FUSE BOX CONNECTOR.  1) Disconnect the connector from ECM.  2) Measure the resistance of harness between ECM and chassis ground.  Connector & terminal  (B135) No. 19 — Chassis ground:	Is the resistance less than 10 $\Omega$ ?	short circuit in har- ness between ECM connector and battery termi- nal.	Go to step 3.
3	CHECK FUSE No. 13	Is the fuse blown out?	Replace the fuse.	Repair the harness and connector.  NOTE: In this case, repair the following:  Open circuit in harness between ECM and battery Poor contact in ECM connector Poor contact in battery terminal

### **BG:DTC P2088 OCV SOLENOID VALVE SIGNAL A CIRCUIT OPEN (BANK 1)**

#### **DTC DETECTING CONDITION:**


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

Erroneous idling

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

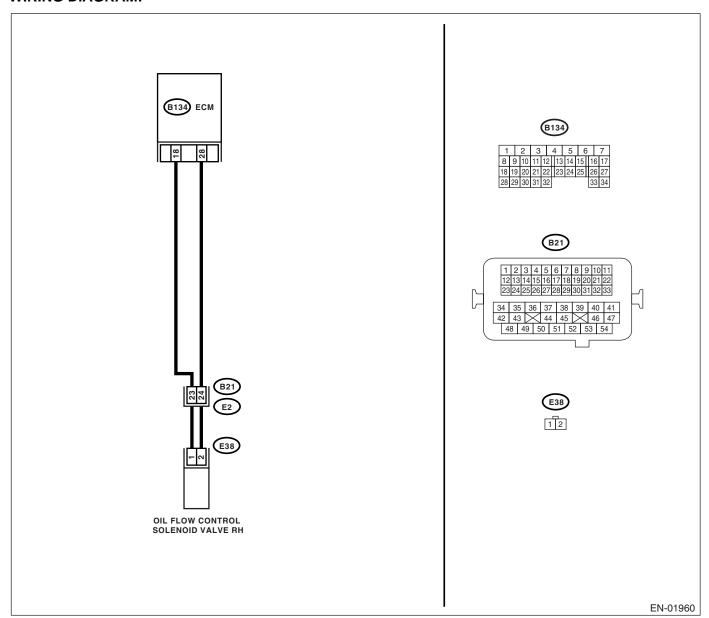

	Step	Check	Yes	No
1	CHECK HARNESS BETWEEN ECM AND OIL FLOW CONTROL SOLENOID VALVE.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM and oil flow control solenoid valve.  3) Measure the resistance between ECM and oil flow control solenoid valve.  Connector & terminal  (B134) No. 18 — (E38) No. 1:  (B134) No. 28 — (E38) No. 2:	Is the resistance less than 1 $\Omega$ ?	Go to step 2.	Repair the open circuit in harness between ECM and oil flow control solenoid valve connector.  NOTE: In this case, repair the following:  • Open circuit in harness between ECM and oil flow control solenoid valve connector  • Poor contact in coupling connector
2	CHECK OIL FLOW CONTROL SOLENOID VALVE.  1) Disconnect the oil flow control solenoid valve connector.  2) Measure the resistance between oil flow control solenoid valve terminals.  Terminals  No. 1 — No. 2:	Is the resistance 6 — 12 $\Omega$ ?	Repair the poor contact in ECM and oil flow con- trol solenoid valve.	Replace the oil flow control sole- noid valve. <ref. to ME(H4DOTC)- 53, Camshaft.&gt;</ref. 

### **BH:DTC P2089 OCV SOLENOID VALVE SIGNAL A CIRCUIT SHORT (BANK 1)**

#### **DTC DETECTING CONDITION:**


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

Erroneous idling

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

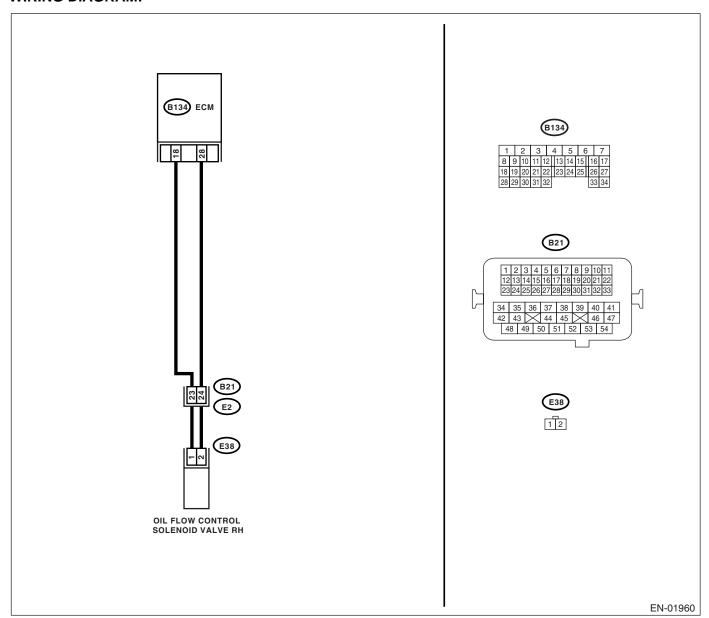

	Step	Check	Yes	No
1	CHECK HARNESS BETWEEN ECM AND OIL FLOW CONTROL SOLENOID VALVE.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM and oil flow control solenoid valve. 3) Measure the resistance between oil flow control solenoid valve and engine ground.  Connector & terminal  (E38) No. 1 — Engine ground:  (E38) No. 2 — Engine ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 2.	Repair the short circuit between ECM and oil flow control solenoid valve connector.
2	CHECK OIL FLOW CONTROL SOLENOID VALVE.  1) Disconnect the oil flow control solenoid valve connector.  2) Measure the resistance between oil flow control solenoid valve terminals.  Terminals  No. 1 — No. 2:	Is the resistance 6 — 12 $\Omega$ ?	Repair the poor contact in ECM and oil flow con- trol solenoid valve.	Replace the oil flow control sole- noid valve. <ref. to ME(H4DOTC)- 53, Camshaft.&gt;</ref. 

### **BI: DTC P2090 OCV SOLENOID VALVE SIGNAL B CIRCUIT OPEN (BANK 1)**

#### **DTC DETECTING CONDITION:**


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

Erroneous idling

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

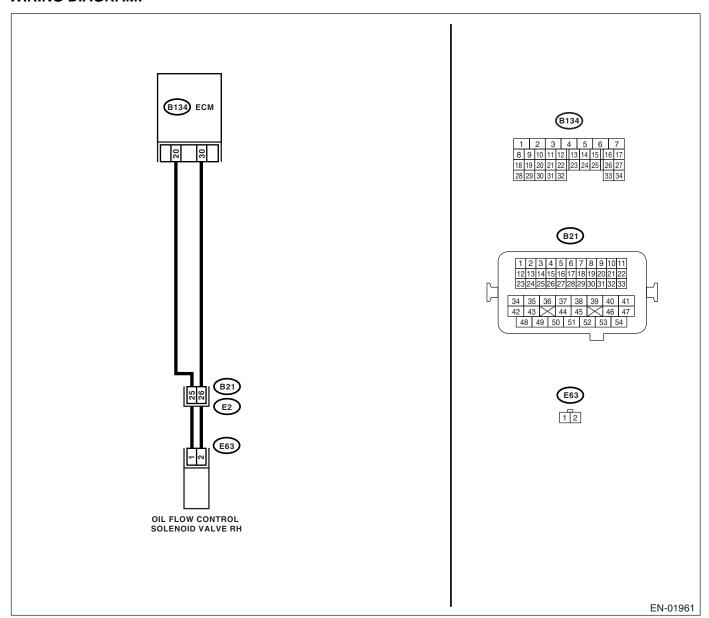

	Step	Check	Yes	No
1	CHECK HARNESS BETWEEN ECM AND OIL FLOW CONTROL SOLENOID VALVE.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM and oil flow control solenoid valve.  3) Measure the resistance between ECM and oil flow control solenoid valve.  Connector & terminal  (B134) No. 20 — (E63) No. 1:  (B134) No. 30 — (E63) No. 2:	Is the resistance less than 1 $\Omega$ ?	Go to step 2.	Repair the open circuit in harness between ECM and oil flow control solenoid valve connector.  NOTE: In this case, repair the following:  • Open circuit in harness between ECM and oil flow control solenoid valve connector  • Poor contact in coupling connector
2	CHECK OIL FLOW CONTROL SOLENOID VALVE.  1) Disconnect the oil flow control solenoid valve connector.  2) Measure the resistance between oil flow control solenoid valve terminals.  Terminals  No. 1 — No. 2:	Is the resistance 6 — 12 $\Omega$ ?	Repair the poor contact in ECM and oil flow con- trol solenoid valve.	Replace the oil flow control sole- noid valve. <ref. to ME(H4DOTC)- 53, Camshaft.&gt;</ref. 

### **BJ:DTC P2091 OCV SOLENOID VALVE SIGNAL B CIRCUIT SHORT (BANK 1)**

#### **DTC DETECTING CONDITION:**


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

Erroneous idling

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

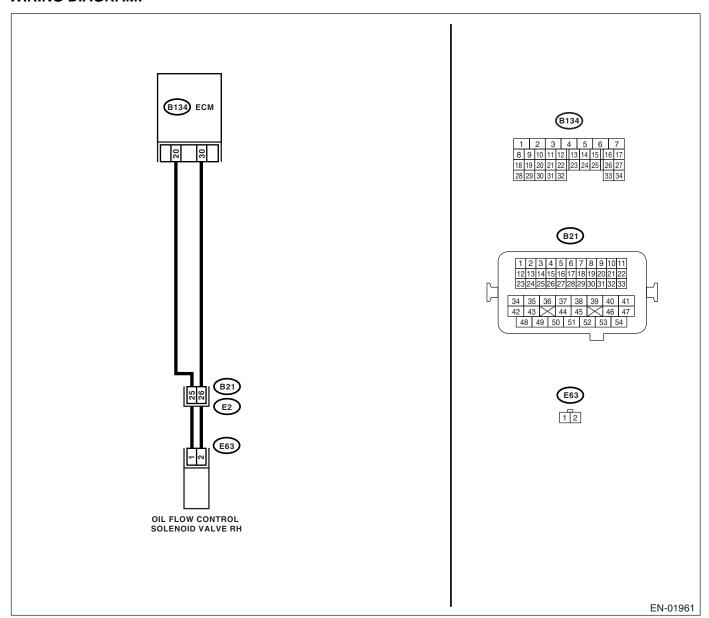

	Step	Check	Yes	No
1	CHECK HARNESS BETWEEN ECM AND OIL FLOW CONTROL SOLENOID VALVE.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM and oil flow control solenoid valve. 3) Measure the resistance between oil flow control solenoid valve and engine ground.  Connector & terminal  (E63) No. 1 — Engine ground:  (E63) No. 2 — Engine ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 2.	Repair the short circuit between ECM and oil flow control solenoid valve connector.
2	CHECK OIL FLOW CONTROL SOLENOID VALVE.  1) Disconnect the oil flow control solenoid valve connector.  2) Measure the resistance between oil flow control solenoid valve terminals.  Terminals  No. 1 — No. 2:	Is the resistance 6 — 12 $\Omega$ ?	Repair the poor contact in ECM and oil flow con- trol solenoid valve.	Replace the oil flow control sole- noid valve. <ref. to ME(H4DOTC)- 53, Camshaft.&gt;</ref. 

## **BK:DTC P2092 OCV SOLENOID VALVE SIGNAL A CIRCUIT OPEN (BANK 2)**

#### **DTC DETECTING CONDITION:**


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

Erroneous idling

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

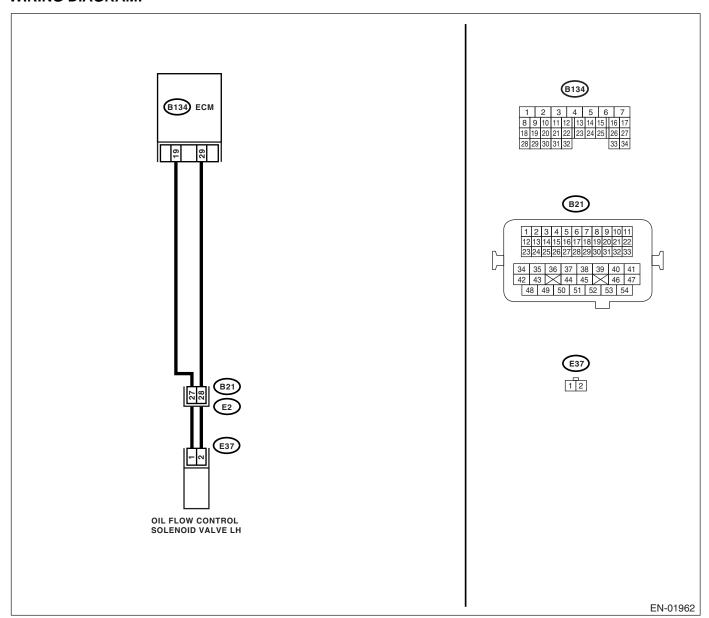

	Step	Check	Yes	No
1	CHECK HARNESS BETWEEN ECM AND OIL FLOW CONTROL SOLENOID VALVE.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM and oil flow control solenoid valve.  3) Measure the resistance between ECM and oil flow control solenoid valve.  Connector & terminal  (B134) No. 19 — (E37) No. 1:  (B134) No. 29 — (E37) No. 2:	Is the resistance less than 1 $\Omega$ ?	Go to step 2.	Repair the open circuit in harness between ECM and oil flow control solenoid valve connector.  NOTE: In this case, repair the following:  Open circuit in harness between ECM and oil flow control solenoid valve connector  Poor contact in coupling connector
2	CHECK OIL FLOW CONTROL SOLENOID VALVE.  1) Disconnect the oil flow control solenoid valve connector.  2) Measure the resistance between oil flow control solenoid valve terminals.  Terminals  No. 1 — No. 2:	Is the resistance 6 — 12 $\Omega$ ?	Repair the poor contact in ECM and oil flow con- trol solenoid valve.	Replace the oil flow control sole- noid valve. <ref. to ME(H4DOTC)- 53, Camshaft.&gt;</ref. 

### **BL:DTC P2093 OCV SOLENOID VALVE SIGNAL A CIRCUIT SHORT (BANK 2)**

#### **DTC DETECTING CONDITION:**


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

Erroneous idling

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

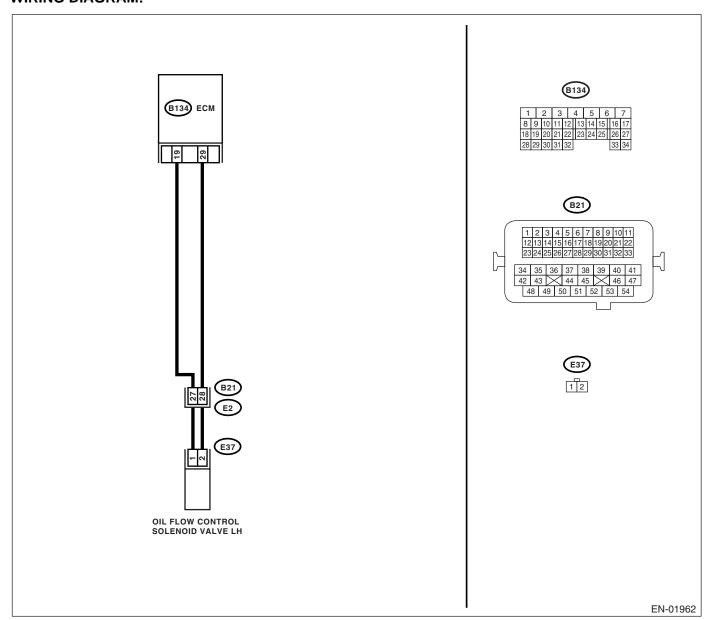

	Step	Check	Yes	No
1	CHECK HARNESS BETWEEN ECM AND OIL FLOW CONTROL SOLENOID VALVE.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM and oil flow control solenoid valve. 3) Measure the resistance between oil flow control solenoid valve and engine ground.  Connector & terminal  (E37) No. 1 — Engine ground:  (E37) No. 2 — Engine ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 2.	Repair the short circuit between ECM and oil flow control solenoid valve connector.
2	CHECK OIL FLOW CONTROL SOLENOID VALVE.  1) Disconnect the oil flow control solenoid valve connector.  2) Measure the resistance between oil flow control solenoid valve terminals.  Terminals  No. 1 — No. 2:	Is the resistance 6 — 12 $\Omega$ ?	Repair the poor contact in ECM and oil flow con- trol solenoid valve.	Replace the oil flow control sole- noid valve. <ref. to ME(H4DOTC)- 53, Camshaft.&gt;</ref. 

### BM:DTC P2094 OCV SOLENOID VALVE SIGNAL B CIRCUIT OPEN (BANK 2)

#### **DTC DETECTING CONDITION:**


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

Erroneous idling

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

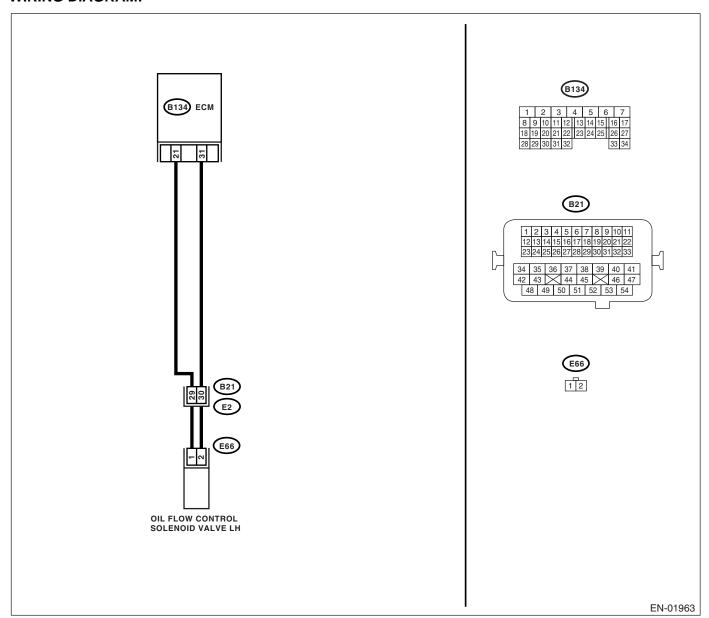

	Step	Check	Yes	No
1	CHECK HARNESS BETWEEN ECM AND OIL FLOW CONTROL SOLENOID VALVE.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM and oil flow control solenoid valve.  3) Measure the resistance between ECM and oil flow control solenoid valve.  Connector & terminal  (B134) No. 21 — (E66) No. 1:  (B134) No. 31 — (E66) No. 2:	Is the resistance less than 1 $\Omega$ ?	Go to step 2.	Repair the open circuit in harness between ECM and oil flow control solenoid valve connector.  NOTE: In this case, repair the following:  Open circuit in harness between ECM and oil flow control solenoid valve connector  Poor contact in coupling connector
2	CHECK OIL FLOW CONTROL SOLENOID VALVE.  1) Disconnect the oil flow control solenoid valve connector.  2) Measure the resistance between oil flow control solenoid valve terminals.  Terminals  No. 1 — No. 2:	Is the resistance 6 — 12 $\Omega$ ?	Repair the poor contact in ECM and oil flow con- trol solenoid valve.	Replace the oil flow control sole- noid valve. <ref. to ME(H4DOTC)- 53, Camshaft.&gt;</ref. 

### **BN:DTC P2095 OCV SOLENOID VALVE SIGNAL B CIRCUIT SHORT (BANK 2)**

#### **DTC DETECTING CONDITION:**


Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

Erroneous idling

#### **CAUTION:**

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)(diag)-30, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)(diag)-28, PROCEDURE, Inspection Mode.>.

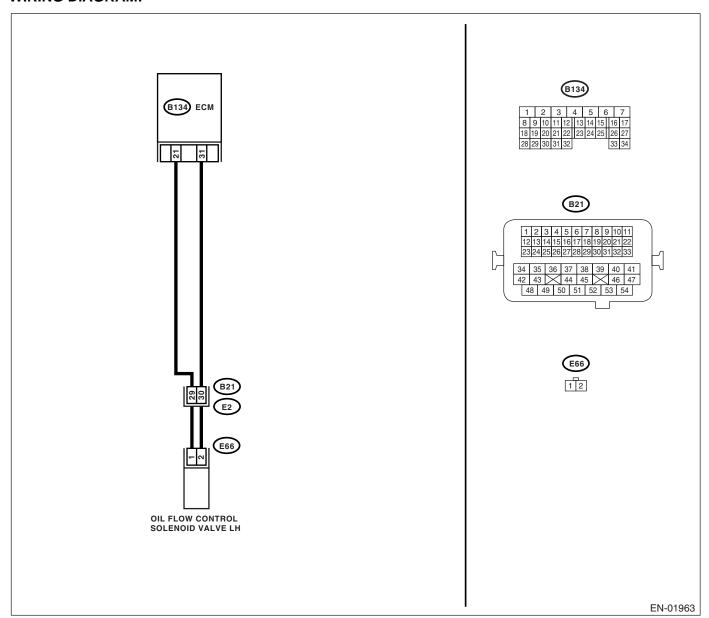

	Step	Check	Yes	No
1	CHECK HARNESS BETWEEN ECM AND OIL FLOW CONTROL SOLENOID VALVE.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM and oil flow control solenoid valve.  3) Measure the resistance between oil flow control solenoid valve and engine ground.  Connector & terminal  (E66) No. 1 — Engine ground:  (E66) No. 2 — Engine ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 2.	Repair the short circuit between ECM and oil flow control solenoid valve connector.
2	CHECK OIL FLOW CONTROL SOLENOID VALVE.  1) Disconnect the oil flow control solenoid valve connector.  2) Measure the resistance between oil flow control solenoid valve terminals.  Terminals  No. 1 — No. 2:	Is the resistance 6 — 12 $\Omega$ ?	and oil flow con-	Replace the oil flow control sole- noid valve. <ref. to ME(H4DOTC)- 53, Camshaft.&gt;</ref. 


### BO:DTC P2101 THROTTLE ACTUATOR CONTROL MOTOR CIRCUIT RANGE/ PERFORMANCE

#### DTC DETECTING CONDITION:

Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- Erroneous idling
- Poor driving performance
- Engine stalls.

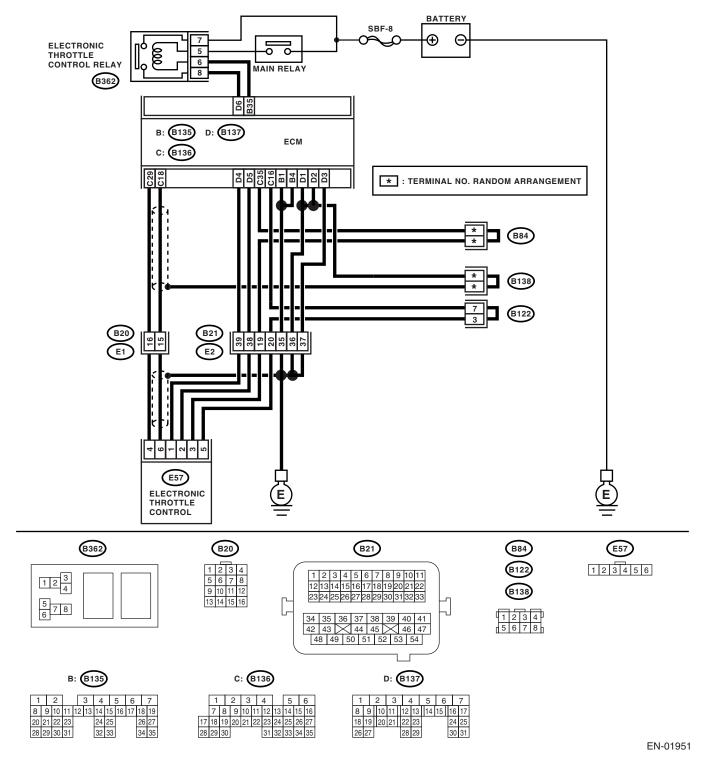

	Step	Check	Yes	No
1	CHECK ELECTRONIC THROTTLE CON-	Is the resistance less than 1	Go to step 2.	Replace the elec-
	TROL RELAY.	Ω?	-	tronic throttle con-
	<ol> <li>Turn the ignition switch to OFF.</li> </ol>			trol relay.
	2) Remove the electronic throttle control relay.			
	3) Connect the battery to terminals No. 5 and			
	No. 6 of electronic throttle control relay.			
	4) Measure the resistance between electronic throttle control relay terminals.			
	Terminals			
	No. 7 — No. 8:			
2		Is the voltage more than 5 V?	Go to step 3.	Repair the open or
	THROTTLE CONTROL RELAY.	le the veltage mere than e v :	00 to 0top 01	ground short cir-
	Measure the voltage between electronic throt-			cuit of power sup-
	tle control relay connector and chassis ground.			ply circuit.
	Connector & terminal			
	(B362) No. 7 (+) — Chassis ground (–):			
	(B362) No. 5 (+) — Chassis ground (-):			
3	CHECK HARNESS BETWEEN ECM AND	Is the voltage less than 5 V?	Go to step 4.	Repair power sup-
	ELECTRONIC THROTTLE CONTROL RE-			ply short circuit in
	LAY.			harness between
	Disconnect the connector from ECM.			ECM and elec-
	2) Turn the ignition switch to ON.			tronic throttle con-
	Measure the voltage between electronic throttle control relay connector and chassis			trol.
	ground.			
	Connector & terminal			
	(B362) No. 6 (+) — Chassis ground (-):			
4	CHECK HARNESS BETWEEN ECM AND	Is the resistance more than 1	Go to step 5.	Repair the ground
	ELECTRONIC THROTTLE CONTROL RE-	$M\Omega$ ?	60 to stop <b>6.</b>	short circuit in har-
	LAY.			ness between
	Turn the ignition switch to OFF.			ECM and elec-
	2) Measure the resistance between electronic			tronic throttle con-
	throttle control relay connector and chassis			trol relay.
	ground.			
	Connector & terminal			
	(B362) No. 6 — Chassis ground:			
	(B362) No. 8 — Chassis ground:			
5	CHECK HARNESS BETWEEN ECM AND	Is the resistance less than 1	Go to step 6.	Repair the open
	ELECTRONIC THROTTLE CONTROL RE-	$\Omega$ ?		circuit in harness
	LAY.  Massure the resistance between ECM connec			between ECM and electronic throttle
	Measure the resistance between ECM connector and electronic throttle control relay connec-			control relay.
	tor.			Contion relay.
	Connector & terminal			
	(B135) No. 35 — (B362) No. 6:			
	(B137) No. 6 — (B362) No. 8:			
6	CHECK SENSOR OUTPUT.	Is the voltage more than 0.4 V?	Go to step 7.	Go to step 9.
	Connect all the connectors.	]		
	2) Turn the ignition switch to ON.			
	3) Measure the voltage between ECM con-			
	nector terminals.			
	Connector & terminal			
	(B136) No. 18 (+) — (B136) No. 35 (-):			
7	CHECK SENSOR OUTPUT.	Is the voltage more than 0.8 V?	Go to step 8.	Go to step 9.
	<ol> <li>Connect all the connectors.</li> </ol>			
	2) Turn the ignition switch to ON.			
	Measure the voltage between ECM con-			
	nector terminals.			
	Connector & terminal			
	(B136) No. 29 (+) — (B136) No. 35 (−):			

	Step	Check	Yes	No
8	CHECK POOR CONTACT.	Is there poor contact?	Repair the poor	Go to step 13.
	Check the poor contact in connector between		contact.	
	ECM and electronic throttle control.			
9	CHECK HARNESS BETWEEN ECM AND	Is the resistance less than 1	Go to step 10.	Repair the open
	ELECTRONIC THROTTLE CONTROL.	Ω?		circuit of harness
	<ol> <li>Turn the ignition switch to OFF.</li> </ol>			connector.
	<ol><li>Disconnect the connector from ECM.</li></ol>			
	3) Disconnect the connectors from the elec-			
	tronic throttle control.			
	4) Measure the resistance between ECM con-			
	nector and electronic throttle control connector.			
	Connector & terminal			
	(B136) No. 16 — (E57) No. 5:			
10	CHECK HARNESS BETWEEN ECM AND	Is the resistance more than 1	Go to step 11.	Repair the ground
	ELECTRONIC THROTTLE CONTROL.	ΜΩ?		short circuit of har-
	Measure the resistance between ECM connec-			ness.
	tor and chassis ground.  Connector & terminal			
	(B136) No. 16 — Chassis ground:			
	(B136) No. 18 — Chassis ground:			
	(B136) No. 29 — Chassis ground:			
11	CHECK SENSOR POWER SUPPLY.	Is the voltage 4.5 — 5.5 V?	Go to step 12.	Repair the poor
''	Connect the ECM connector.	is the voltage 4.5 — 5.5 v :	00 to step 12.	contact in ECM
	2) Turn the ignition switch to ON.			connector.
	Measure the voltage between electronic			Replace the ECM
	throttle control connector and engine ground.			if defective.
	Connector & terminal			<ref. td="" to<=""></ref.>
	(E57) No. 5 (+) — Engine ground (-):			FU(H4DOTC)-35,
				Engine Control
				Module (ECM).>
12	CHECK SHORT CIRCUIT IN ECM.	Is the resistance more than 10	Go to step 13.	Repair the poor
	<ol> <li>Turn the ignition switch to OFF.</li> </ol>	Ω?		contact in ECM
	2) Measure the resistance between electronic			connector.
	throttle control connector and engine ground.			Replace the ECM
	Connector & terminal			if defective.
	(E57) No. 6 — Engine ground:			<ref. td="" to<=""></ref.>
	(E57) No. 4 — Engine ground:			FU(H4DOTC)-35,
				Engine Control
		1 4 22 1/2		Module (ECM).>
13	CHECK SENSOR OUTPUT.	Is the voltage 4.63 V?	Go to step 14.	Go to step 16.
	Connect all the connectors.     Turn the ignition quitely to ON.			
	2) Turn the ignition switch to ON.			
	<ol><li>Read the data of main throttle sensor signal using Subaru Select Monitor.</li></ol>			
4.4		lo the veltage 4.72.1/2	Co to otor 45	Co to oto - 40
14	CHECK SENSOR OUTPUT.  Read the data of sub throttle sensor signal	Is the voltage 4.73 V?	Go to step 15.	Go to step 16.
	•			
45	using Subaru Select Monitor.  CHECK POOR CONTACT.	le there may agree at 2	Danain the corre	O a ta ata = 20
15	Check the poor contact in connector between	Is there poor contact?	Repair the poor contact.	Go to step 20.
	ECM and electronic throttle control.		COITIACI.	
	EGIVI AND ELECTIONIC UNFOLLIE CONTROL.			

	Step	Check	Yes	No
16	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Disconnect the connectors from the electronic throttle control.  4) Measure the resistance between ECM connector and electronic throttle control connector.  Connector & terminal  (B136) No. 35 — (E57) No. 3:  (B136) No. 18 — (E57) No. 6:	Is the resistance less than 1 $\Omega$ ?	Go to step 17.	Repair the open circuit of harness connector.
17	(B136) No. 29 — (E57) No. 4:  CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  1) Connect the ECM connector.  2) Measure the resistance between electronic throttle control connector and engine ground.  Connector & terminal  (E57) No. 3 — Engine ground:	Is the resistance less than 5 $\Omega$ ?	Go to step 18.	Repair the poor contact in ECM connector. Replace the ECM if defective. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>
18	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  Measure the voltage between electronic throttle control connector and engine ground.  Connector & terminal  (E57) No. 6 (+) — Engine ground (-):  (E57) No. 4 (+) — Engine ground (-):	Is the voltage less than 10 V?	Go to step 19.	Repair the short circuit in harness between ECM connector and electronic throttle control connector.
19	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  1) Turn the ignition switch to OFF.  2) Remove the ECM.  3) Measure the resistance between ECM connectors.  Connector & terminal (B136) No. 18 — (B136) No. 35: (B136) No. 29 — (B136) No. 35:	Is the resistance more than 1 $\mbox{M}\Omega\mbox{?}$	Go to step 20.	Repair the short circuit to sensor power supply.
20	CHECK SENSOR OUTPUT.  1) Turn the ignition switch to OFF.  2) Connect the connectors except of the electric control throttle relay.  3) Turn the ignition switch to ON.  4) Read the data of main throttle sensor signal using Subaru Select Monitor.	Is the voltage 0.81 — 0.87 V?	Go to step 21.	Repair the poor contact of electronic throttle control connector. Replace the electronic throttle control if defective.
21	CHECK SENSOR OUTPUT.  Read the data of sub throttle sensor signal using Subaru Select Monitor.	Is the voltage 1.64 — 1.70 V?	Go to step 22.	Repair the poor contact in ECM connector. Replace the electronic throttle control if defective.


	Step	Check	Yes	No
22	Step  CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL MOTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Disconnect the connectors from the electronic throttle control. 4) Measure the resistance between ECM connector and electronic throttle control connector.  Connector & terminal (B137) No. 5 — (E57) No. 2: (B137) No. 4 — (E57) No. 1:  CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL MOTOR. 1) Connect the connector to ECM.	Check Is the resistance less than 1 Ω?	Yes Go to step 23. Go to step 24.	Repair the open circuit of harness connector.  Repair power supply short circuit in harness between ECM and elec-
	<ol> <li>Turn the ignition switch to ON.</li> <li>Measure the voltage between electronic throttle control connector and engine ground.</li> <li>Connector &amp; terminal         (E57) No. 2 (+) — Engine ground (-):         (E57) No. 1 (+) — Engine ground (-):     </li> </ol>			tronic throttle control.
24	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL MOTOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Measure the resistance between electronic throttle control connector and engine ground.  Connector & terminal  (E57) No. 2 — Engine ground:  (E57) No. 1 — Engine ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 25.	Repair the short circuit of harness.
25	CHECK ELECTRONIC THROTTLE CONTROL MOTOR HARNESS.  Measure the resistance between electronic throttle control connector terminals.  Connector & terminal  (E57) No. 2 — (E57) No. 1:	Is the resistance more than 1 M $\Omega$ ?	Go to step 26.	Repair the short circuit of harness.
26	CHECK ELECTRONIC THROTTLE CONTROL GROUND CIRCUIT.  Measure the resistance between ECM connector and chassis ground.  Connector & terminal  (B137) No. 3 — Chassis ground:	Is the resistance less than 10 $\Omega$ ?	Go to step 27.	Repair the open circuit of harness.
27	CHECK ELECTRONIC THROTTLE CONTROL.  Measure the resistance between electronic throttle control terminals.  Terminals  No. 1 — No. 2:	Is the resistance less than 5 $\Omega$ ?	Go to step 28.	Replace the electronic throttle control.
28	CHECK ELECTRONIC THROTTLE CONTROL.  Move the throttle valve to the fully open and fully closed positions with fingers.  Check the valve returns to the specified position when releasing fingers.	Does the valve return to the specified position? Standard value: 3 mm (0.12 in) from fully closed position	Repair the poor contact in ECM connector. Replace the ECM if defective. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>	Replace the electronic throttle control.

### BP:DTC P2102 THROTTLE ACTUATOR CONTROL MOTOR CIRCUIT LOW DTC DETECTING CONDITION:

Detect as soon as the malfunction occurs.

### **TROUBLE SYMPTOM:**


- Erroneous idling
- · Poor driving performance
- · Engine stalls.

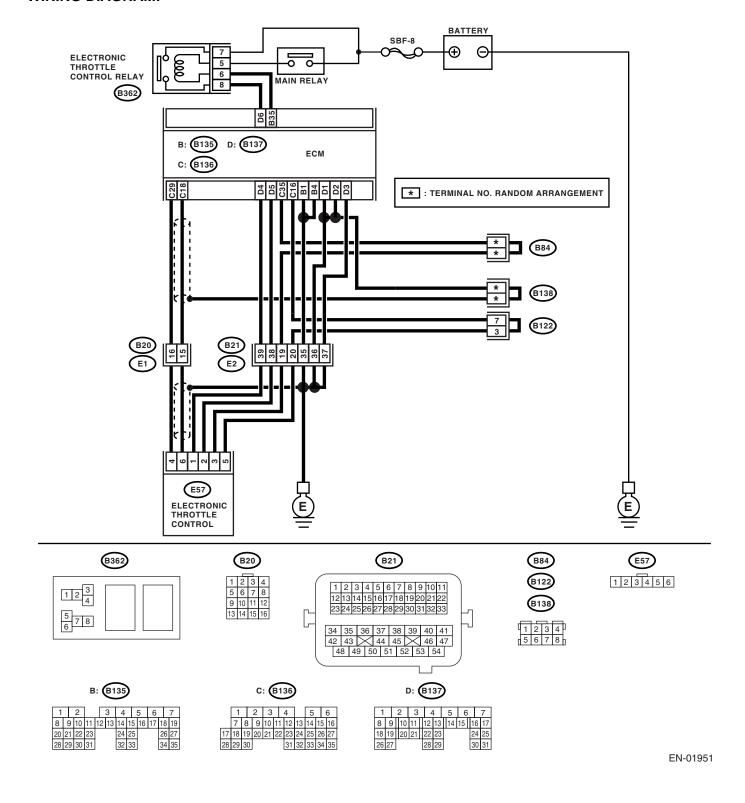

Step	Check	Yes	No
1 CHECK ELECTRONIC THROTTLE CON- TROL RELAY.	Is the resistance less than 1 $\Omega$ ?	Go to step 2.	Replace the electronic throttle con-
Turn the ignition switch to OFF.			trol relay.
<ol> <li>Remove the electronic throttle control relay.</li> </ol>			li oi roidy.
3) Connect the battery to terminals No. 5 and			
No. 6 of electronic throttle control relay.			
4) Measure the resistance between electronic			
throttle control terminals.			
Terminals			
(B362) No. 7 — (B362) No. 8:			
2 CHECK POWER SUPPLY OF ELECTRONIC	Is the voltage more than 5 V?	Go to step 3.	Repair the open or
THROTTLE CONTROL RELAY.			ground short cir-
Measure the voltage between electronic throt-			cuit of power sup-
tle control relay connector and chassis ground.			ply circuit.
Connector & terminal			
(B362) No. 7 (+) — Chassis ground (-):			
(B362) No. 5 (+) — Chassis ground (-):			
3 CHECK HARNESS BETWEEN ECM AND	Is the voltage less than 5 V?	Go to step 4.	Repair power sup-
ELECTRONIC THROTTLE CONTROL RE-			ply short circuit in
LAY.			harness between
Disconnect the connector from ECM.			ECM and elec-
2) Turn the ignition switch to ON.			tronic throttle con-
Measure the voltage between electronic			trol relay.
throttle control relay connector and chassis			
ground.  Connector & terminal			
(B362) No. 6 (+) — Chassis ground (-):			
4 CHECK HARNESS BETWEEN ECM AND	Is the resistance more than 1	Go to step 5.	Repair the ground
ELECTRONIC THROTTLE CONTROL RE-	$M\Omega$ ?	<b>Co</b> to otop <b>c</b> :	short circuit in har-
LAY.			ness between
Turn the ignition switch to OFF.			ECM and elec-
Measure the resistance between electronic			tronic throttle con-
throttle control relay connector and chassis			trol relay.
ground.			
Connector & terminal			
(B362) No. 6 — Chassis ground:			
(B362) No. 8 — Chassis ground:			
5 CHECK HARNESS BETWEEN ECM AND	Is the resistance less than 1	Repair the poor	Repair the open
ELECTRONIC THROTTLE CONTROL RE-	$\Omega$ ?	contact in ECM	circuit in harness
LAY.		connector.	between ECM and
Measure the resistance between ECM connec-	•	Replace the ECM	electronic throttle
tor and electronic throttle control relay connec-		if defective.	control relay.
tor.		<ref. td="" to<=""><td> </td></ref.>	
Connector & terminal		FU(H4DOTC)-35,	
(B135) No. 35 — (B362) No. 6:		Engine Control	
(B137) No. 6 — (B362) No. 8:		Module (ECM).>	

### BQ:DTC P2103 THROTTLE ACTUATOR CONTROL MOTOR CIRCUIT HIGH DTC DETECTING CONDITION:

Detect as soon as the malfunction occurs.

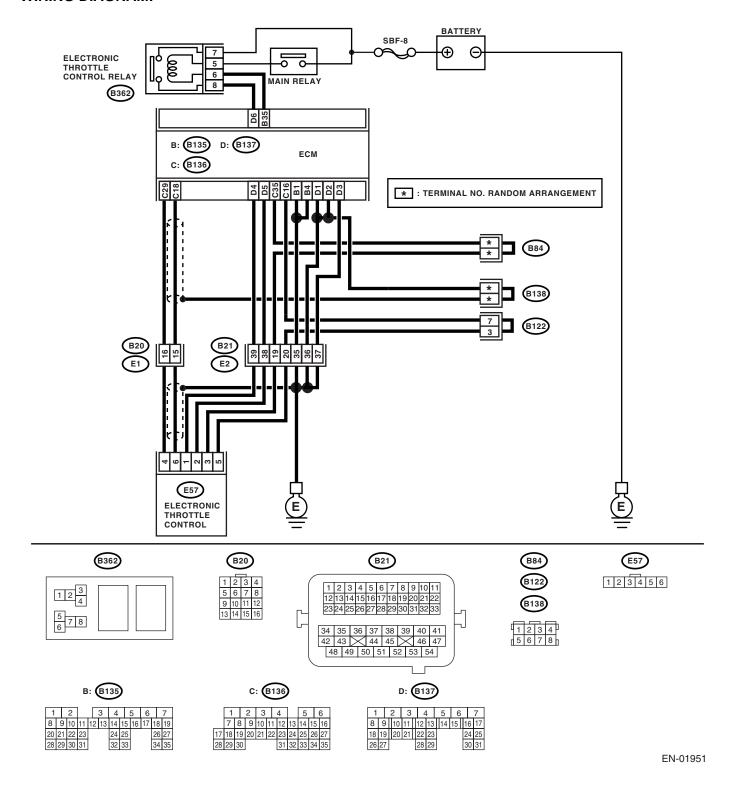

### **Diagnostic Procedure with Diagnostic Trouble Code (DTC)**

ENGINE (DIAGNOSTICS)

	Step	Check	Yes	No
1	CHECK ELECTRONIC THROTTLE CONTROL RELAY.  1) Turn the ignition switch to OFF.  2) Remove the electronic throttle control relay.  3) Measure the resistance between electronic throttle control relay terminals.  Terminals  No. 7 — No. 8:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 2.	Replace the electronic throttle control relay.
2	CHECK POWER SUPPLY SHORT CIRCUIT OF ELECTRONIC THROTTLE CONTROL RELAY.  1) Turn the ignition switch to ON. 2) Measure the voltage between electronic throttle control relay connector and chassis ground. Connector & terminal (B362) No. 8 (+) — Chassis ground (-):	Is the voltage more than 5 V?	Go to step 3.	Repair power sup- ply short circuit in harness between ECM and elec- tronic throttle con- trol relay.
3	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL RELAY.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Measure the resistance between ECM connector and chassis ground.  Connector & terminal  (B135) No. 35 — Chassis ground:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Repair the poor contact in ECM connector. Replace the ECM if defective. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>	Repair the ground short circuit in har- ness between ECM and elec- tronic throttle con- trol relay.

### **BR:DTC P2109 THROTTLE ANGLE CLOSED POSITION ERROR**

### NOTE:

For diagnostic procedure, refer to DTC P2101. <Ref. to EN(H4DOTC)(diag)-176, DTC P2101 THROTTLE ACTUATOR CONTROL MOTOR CIRCUIT RANGE/PERFORMANCE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

**ENĞINE (ĎIAGNOSTICS)** 


### BS:DTC P2122 THROTTLE/PEDAL POSITION SENSOR/SWITCH "D" CIRCUIT LOW INPUT

### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- · Erroneous idling
- · Poor driving performance

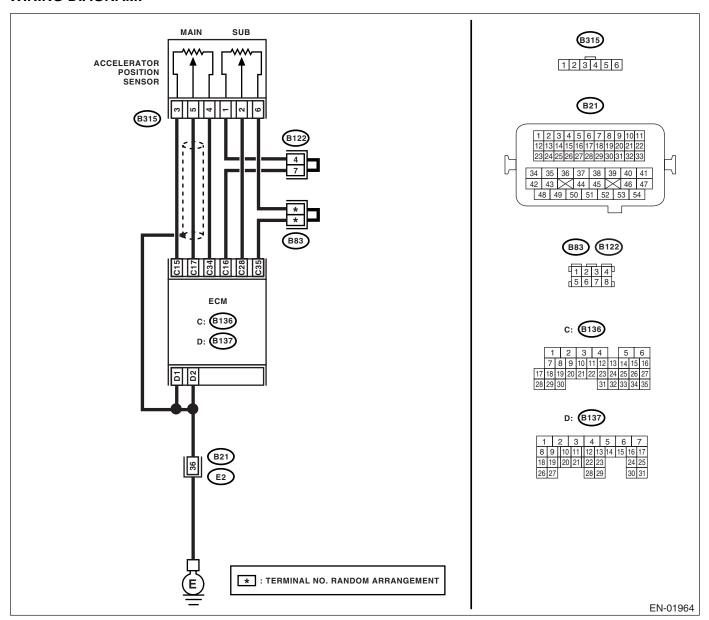

	Step	Check	Yes	No
1	CHECK ACCELERATOR POSITION SEN-	Is the voltage more than 0.4 V?	Go to step 2.	Go to step 3.
	SOR OUTPUT.			
	1) Turn the ignition switch to ON.			
	2) Read the data of main accelerator position			
	sensor signal using Subaru Select Monitor.			
2	CHECK POOR CONTACT.	Is there poor contact?	Repair the poor	Temporary poor
	Check poor contact in connector between		contact.	contact occurred,
	ECM and accelerator position sensor.			but it is normal at
	OUTOK HADNEGO DETMEEN FOM AND AG	le the marietane a leasth and	0-111	present.
3	CHECK HARNESS BETWEEN ECM AND AC- CELERATOR POSITION SENSOR.	$\Omega$ ?	Go to step 4.	Repair the open circuit of harness
	Turn the ignition switch to OFF.	22:		connector.
	<ul><li>2) Disconnect the connector from ECM.</li></ul>			conficción.
	Disconnect the connector from the acceler-			
	ator position sensor.			
	4) Measure the resistance between ECM con-			
	nector and accelerator position sensor connec-			
	tor.			
	Connector & terminal			
	(B136) No. 17 — (B315) No. 5:			
	(B136) No. 15 — (B315) No. 3:			
4	CHECK HARNESS BETWEEN ECM AND AC- CELERATOR POSITION SENSOR.	Is the resistance more than 1 $M\Omega$ ?	Go to step 5.	Repair the chas-
	Measure the resistance between ECM connec-			sis short circuit of harness.
	tor and chassis ground.			namess.
	Connector & terminal			
	(B136) No. 17 — Chassis ground:			
	(B136) No. 15 — Chassis ground:			
5	CHECK POWER SUPPLY OF ACCELERA-	Is the voltage 4.5 — 5.5 V?	Go to step 6.	Repair the poor
	TOR POSITION SENSOR.			contact in ECM
	<ol> <li>Connect the ECM connector.</li> <li>Turn the ignition switch to ON.</li> </ol>			connector.
	<ul><li>3) Measure the voltage between accelerator</li></ul>			Replace the ECM if defective.
	position sensor connector and chassis ground.			<ref. td="" to<=""></ref.>
	Connector & terminal			FU(H4DOTC)-35,
	(B315) No. 3 (+) — Chassis ground (-):			Engine Control
				Module (ECM).>
6	CHECK ACCELERATOR POSITION SEN-		Go to step 7.	Replace the accel-
	SOR.	kΩ?		erator position
	Measure the resistance of accelerator position			sensor.
	sensor. <b>Terminals</b>			
	No. 3 — No. 4:			
7	CHECK ACCELERATOR POSITION SEN-	Is the resistance 0.2 — 1.0	Go to step 8.	Replace the accel-
[	SOR.	$k\Omega$ ?	00 to step <b>0.</b>	erator position
	Measure the resistance of accelerator position			sensor.
	sensor.			
	Terminals			
	No. 5 — No. 4:			
	Check the measured value is within the specifi-			
	cation without depressing the accelerator			
	pedal.			

	Step	Check	Yes	No
8	CHECK ACCELERATOR POSITION SENSOR.  Measure the resistance of accelerator position sensor.  Terminals  No. 5 — No. 4:  Check the measured value is within the specification with the accelerator pedal depressed.	Is the resistance 0.5 — 2.5 $k\Omega$ ?		Replace the accelerator position sensor.


### BT:DTC P2123 THROTTLE/PEDAL POSITION SENSOR/SWITCH "D" CIRCUIT HIGH INPUT

### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

### TROUBLE SYMPTOM:

- · Erroneous idling
- · Poor driving performance

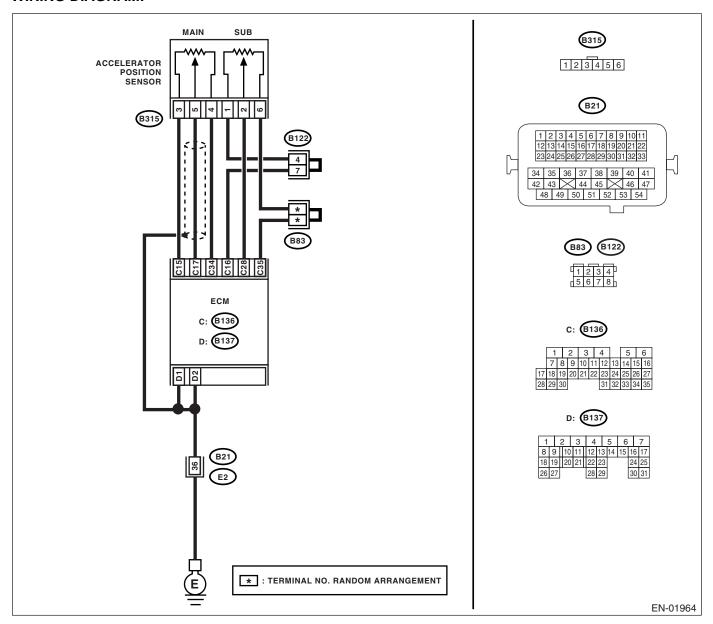

	Step	Check	Yes	No
1	CHECK ACCELERATOR POSITION SENSOR OUTPUT.	Is the voltage less than 4.8 V?	Go to step 2.	Go to step 3.
	Turn the ignition switch to ON.			
2	CHECK POOR CONTACT.  Check poor contact in connector between ECM and accelerator position sensor.	Is there poor contact?	Repair the poor contact.	Temporary poor contact occurred, but it is normal at present.
3	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Disconnect the connector from the accelerator position sensor. 4) Measure the resistance between ECM connector and accelerator position sensor connector.  Connector & terminal (B136) No. 34 — (B315) No. 4:	Is the resistance less than 1 $\Omega$ ?	Go to step 4.	Repair the open circuit of harness connector.
4	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.  1) Connect the ECM connector.  2) Measure the resistance between accelerator position sensor connector and chassis ground.  Connector & terminal  (B315) No. 4 — Chassis ground:	Is the resistance less than 5 $\Omega$ ?	Go to step 5.	Repair the poor contact in ECM connector. Replace the ECM if defective. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>
5	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.  1) Connect the ECM connector. 2) Turn the ignition switch to ON. 3) Measure the voltage between accelerator position sensor connector and chassis ground.  Connector & terminal  (B315) No. 5 (+) — Chassis ground (-):		Go to step 6.	Repair the battery short circuit in har- ness between ECM connector and accelerator position sensor connector.
6	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Measure the resistance between ECM connector terminals.  Connector & terminal  (B136) No. 17 — (B136) No. 15:  (B136) No. 17 — (B136) No. 16:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Repair the poor contact in accelerator position sensor connector. Replace the accelerator position sensor if defective.	Repair the short circuit to sensor power supply.


### BU:DTC P2127 THROTTLE/PEDAL POSITION SENSOR/SWITCH "E" CIRCUIT LOW INPUT

### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

### **TROUBLE SYMPTOM:**

- · Erroneous idling
- · Poor driving performance

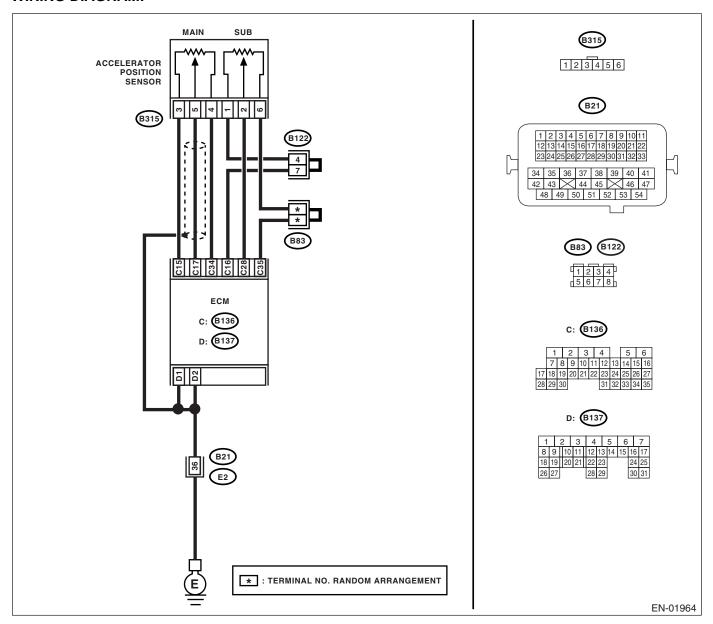

	Step	Check	Yes	No
1	CHECK ACCELERATOR POSITION SENSOR OUTPUT.  1) Turn the ignition switch to ON.  2) Read the data of sub accelerator position	Is the voltage more than 0.4 V?	Go to step 2.	Go to step 3.
2	sensor signal using Subaru Select Monitor.  CHECK POOR CONTACT.  Check poor contact in connector between ECM and accelerator position sensor.	Is there poor contact?	Repair the poor contact.	Temporary poor contact occurred, but it is normal at present.
3	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Disconnect the connector from the accelerator position sensor. 4) Measure the resistance between ECM connector and accelerator position sensor connector.  Connector & terminal (B136) No. 28 — (B315) No. 2: (B136) No. 16 — (B315) No. 1:	Ω?	Go to step 4.	Repair the open circuit of harness connector.
4	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.  Measure the resistance between ECM connector and chassis ground.  Connector & terminal  (B136) No. 28 — Chassis ground:  (B136) No. 16 — Chassis ground:	ΜΩ?	Go to step 5.	Repair the chassis short circuit of harness.
5	CHECK POWER SUPPLY OF ACCELERATOR POSITION SENSOR.  1) Connect the ECM connector.  2) Turn the ignition switch to ON.  3) Measure the voltage between accelerator position sensor connector and chassis ground.  Connector & terminal  (B315) No. 1 (+) — Chassis ground (-):	Is the voltage 4.5 — 5.5 V?	Go to step 6.	Repair the poor contact in ECM connector. Replace the ECM if defective. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>
6	CHECK ACCELERATOR POSITION SENSOR.  Measure the resistance of accelerator position sensor.  Terminals  No. 1 — No. 6:	Is the resistance 0.75 — 3.15 $k\Omega$ ?	Go to step 7.	Replace the accelerator position sensor.
7	CHECK ACCELERATOR POSITION SENSOR.  1) Measure the resistance of accelerator position sensor.  Terminals  No. 2 — No. 6:  2) Check the measured value is within the specification without depressing the accelerator pedal.	Is the resistance 0.15 — 0.63 k $\Omega$ ?	Go to step 8.	Replace the accelerator position sensor.

	Step	Check	Yes	No
8	CHECK ACCELERATOR POSITION SENSOR.  1) Measure the resistance of accelerator position sensor.  Terminals  No. 2 — No. 6:  2) Check the measured value is within the specification with the accelerator pedal depressed.	kΩ?	Repair the poor contact in ECM connector. Replace the ECM if defective. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>	Replace the accelerator position sensor.


### BV:DTC P2128 THROTTLE/PEDAL POSITION SENSOR/SWITCH "E" CIRCUIT HIGH INPUT

### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- · Erroneous idling
- · Poor driving performance

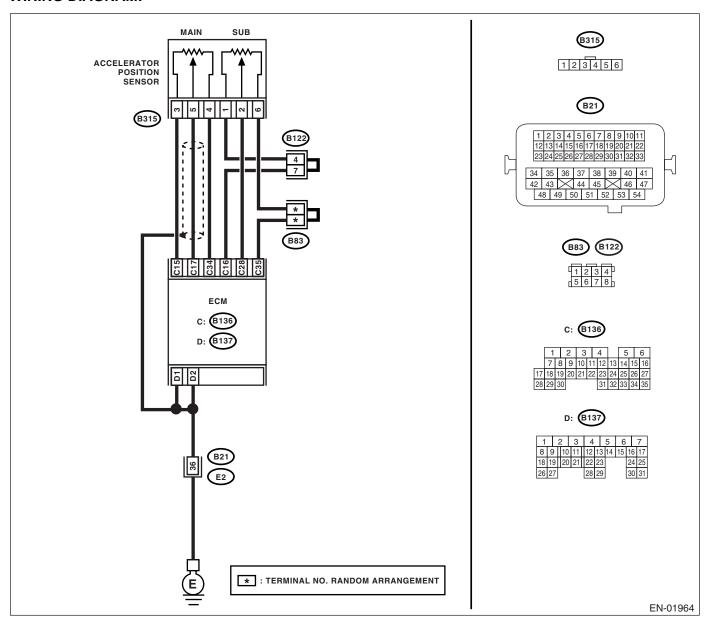

	Step	Check	Yes	No
1	CHECK ACCELERATOR POSITION SENSOR OUTPUT.  1) Turn the ignition switch to ON. 2) Read the data of sub accelerator position sensor signal using Subaru Select Monitor.	Is the voltage less than 4.8 V?	Go to step 2.	Go to step 3.
2	CHECK POOR CONTACT. Check poor contact in connector between ECM and accelerator position sensor.	Is there poor contact?	Repair the poor contact.	Temporary poor contact occurred, but it is normal at present.
3	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Disconnect the connector from the accelerator position sensor. 4) Measure the resistance between ECM connector and accelerator position sensor connector.  Connector & terminal (B136) No. 35 — (B315) No. 6:	Is the resistance less than 1 $\Omega$ ?	Go to step 4.	Repair the open circuit of harness connector.
4	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.  1) Connect the ECM connector.  2) Measure the resistance between accelerator position sensor connector and chassis ground.  Connector & terminal  (B315) No. 6 — Chassis ground:	Is the resistance less than 5 $\Omega$ ?	Go to step 5.	Repair the poor contact in ECM connector. Replace the ECM if defective. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>
5	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.  1) Connect the ECM connector. 2) Turn the ignition switch to ON. 3) Measure the voltage between accelerator position sensor connector and chassis ground.  Connector & terminal  (B315) No. 2 (+) — Chassis ground (-):		Go to step 6.	Repair the battery short circuit in har- ness between ECM connector and accelerator position sensor connector.
6	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.  1) Turn the ignition switch to OFF.  2) Measure the resistance between ECM connector terminals.  Connector & terminal  (B137) No. 28 — (B137) No. 15:  (B137) No. 28 — (B137) No. 16:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Repair the poor contact in accelerator position sensor connector. Replace the accelerator position sensor if defective.	Repair the short circuit to sensor power supply.


### BW:DTC P2135 THROTTLE/PEDAL POSITION SENSOR/SWITCH "A" / "B" **VOLTAGE RATIONALITY**

### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- · Erroneous idling
- Poor driving performance

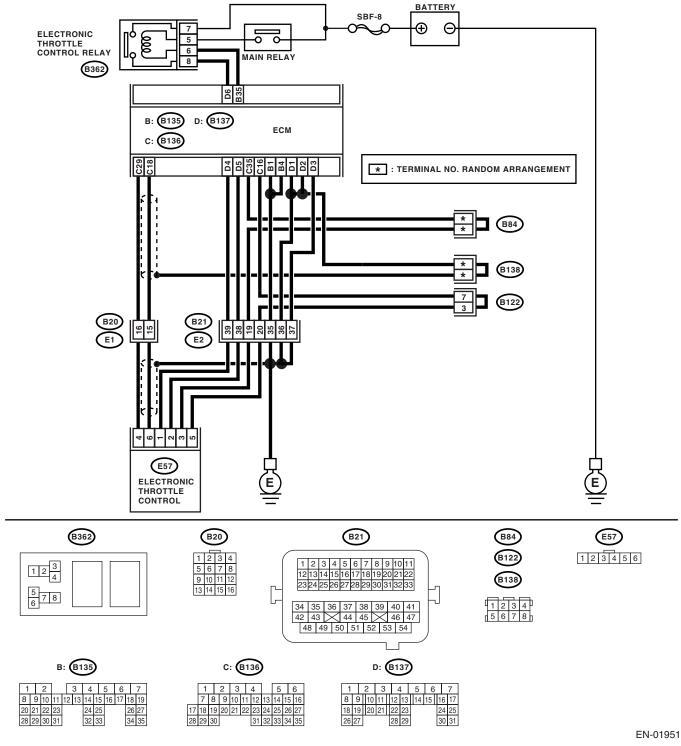

	Step	Check	Yes	No
1	CHECK SENSOR OUTPUT.	Is the voltage more than 0.4 V?	Go to step 2.	Go to step 4.
	Turn the ignition switch to ON.	li and remage meneral man en re		
	2) Measure the voltage between ECM con-			
	nector terminals.			
	Connector & terminal			
	(B136) No. 18 (+) — (B136) No. 35 (-):			
2	CHECK SENSOR OUTPUT.	Is the voltage more than 0.8 V?	Go to step 3.	Go to step 4.
	Measure the voltage between ECM connector			
	terminals.			
	Connector & terminal			
	(B136) No. 29 (+) — (B136) No. 35 (−):			
3	CHECK POOR CONTACT.	Is there poor contact?	Repair the poor	Go to step 14.
	Check the poor contact in connector between		contact.	
	ECM and electronic throttle control.		_	
4	CHECK HARNESS BETWEEN ECM AND	Is the resistance less than 1	Go to step 5.	Repair the open
	ELECTRONIC THROTTLE CONTROL.	$\Omega$ ?		circuit of harness
	Turn the ignition switch to OFF.      Disconnect the connector from ECM.			connector.
	<ul><li>2) Disconnect the connector from ECM.</li><li>3) Disconnect the connectors from the elec-</li></ul>			
	tronic throttle control.			
	Measure the resistance between ECM con-			
	nector and electronic throttle control connector.			
	Connector & terminal			
	(B136) No. 16 — (E57) No. 5:			
5	CHECK HARNESS BETWEEN ECM AND	Is the resistance more than 1	Go to step 6.	Repair the ground
	ELECTRONIC THROTTLE CONTROL.	ΜΩ?		short circuit of har-
	Measure the resistance between ECM connec-			ness.
	tor and chassis ground.			
	Connector & terminal			
	(B136) No. 18 — Chassis ground:			
	(B136) No. 29 — Chassis ground:			
_	(B136) No. 16 — Chassis ground:			
6	CHECK SENSOR POWER SUPPLY.	Is the voltage 4.5 — 5.5 V?	Go to step 7.	Repair the poor
	Connect the ECM connector.      Turn the ignition guitable to CN.			contact in ECM
	<ul><li>2) Turn the ignition switch to ON.</li><li>3) Measure the voltage between electronic</li></ul>			connector. Replace the ECM
	throttle control connector and engine ground.			if defective.
	Connector & terminal			<ref. td="" to<=""></ref.>
	(E57) No. 5 (+) — Engine ground (–):			FU(H4DOTC)-35,
				Engine Control
				Module (ECM).>
7	CHECK SHORT CIRCUIT IN ECM.	Is the resistance more than 10	Go to step 8.	Repair the poor
	<ol> <li>Turn the ignition switch to OFF.</li> </ol>	Ω?	-	contact in ECM
	2) Measure the resistance between electronic			connector.
	throttle control connector and engine ground.			Replace the ECM
	Connector & terminal			if defective.
	(E57) No. 6 — Engine ground:			<ref. td="" to<=""></ref.>
	(E57) No. 4 — Engine ground:			FU(H4DOTC)-35, Engine Control
				Module (ECM).>
8	CHECK SENSOR OUTPUT.	Is the voltage less than 4.63	Go to step 9.	Go to step 11.
	1) Connect all the connectors.	V?	oo to step <b>3.</b>	Co to step 11.
	<ul><li>2) Turn the ignition switch to ON.</li></ul>	· .		
	3) Read the data of main throttle sensor signal			
	using Subaru Select Monitor.			
9	CHECK SENSOR OUTPUT.	Is the voltage less than 4.73	Go to step 10.	Go to step 11.
	Read the data of sub throttle sensor signal	V?		20.000000
	using Subaru Select Monitor.			
		<u>l</u>		

	Step	Check	Yes	No
10	CHECK POOR CONTACT.  Check the poor contact in connector between ECM and electronic throttle control.	Is there poor contact?	Repair the poor contact.	Temporary poor contact occurred, but it is normal at present.
11	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Disconnect the connectors from the electronic throttle control.  4) Measure the resistance between ECM connector and electronic throttle control connector.  Connector & terminal  (B136) No. 35 — (E57) No. 3:  (B136) No. 18 — (E57) No. 6:  (B136) No. 29 — (E57) No. 4:	Is the resistance less than 1 $\Omega$ ?	Go to step 12.	Repair the open circuit of harness connector.
12	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  1) Connect the ECM connector.  2) Measure the resistance between electronic throttle control connector and engine ground.  Connector & terminal  (E57) No. 3 — Engine ground:	Is the resistance less than 5 $\Omega$ ?	Go to step 13.	Repair the poor contact in ECM connector. Replace the ECM if defective. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>
13	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  1) Connect the ECM connector.  2) Turn the ignition switch to ON.  3) Measure the voltage between electronic throttle control connector and engine ground.  Connector & terminal  (E57) No. 5 (+) — Engine ground (-):	Is the voltage more than 10 V?	Go to step 14.	Repair the battery short circuit in har- ness between ECM connector and electronic throttle control connector.
14	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  Measure the voltage between electronic throttle control connector and engine ground.  Connector & terminal  (E57) No. 6 (+) — Engine ground (-):  (E57) No. 4 (+) — Engine ground (-):	Is the voltage less than 10 V?	Go to step 15.	Repair the short circuit in harness between ECM connector and electronic throttle control connector.
15	CHECK HARNESS BETWEEN ECM AND ELECTRONIC THROTTLE CONTROL.  1) Turn the ignition switch to OFF.  2) Disconnect the connector from ECM.  3) Measure the resistance between ECM connectors.  Connector & terminal  (B136) No. 18 — (B136) No. 35:  (B136) No. 29 — (B136) No. 35:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 16.	Repair the short circuit to sensor power supply.
16	CHECK ELECTRONIC THROTTLE CONTROL HARNESS.  1) Disconnect the connector from ECM. 2) Disconnect the connectors from the electronic throttle control. 3) Measure the resistance between electronic throttle control connector terminals.  Connector & terminal (E57) No. 6 — (E57) No. 4:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Repair the poor contact in ECM connector. Replace the ECM if defective. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>	Repair the short circuit of harness.


### BX:DTC P2138 THROTTLE/PEDAL POSITION SENSOR/SWITCH "D" / "E" VOLTAGE RATIONALITY

### **DTC DETECTING CONDITION:**

Detect as soon as the malfunction occurs.

#### TROUBLE SYMPTOM:

- · Erroneous idling
- · Poor driving performance

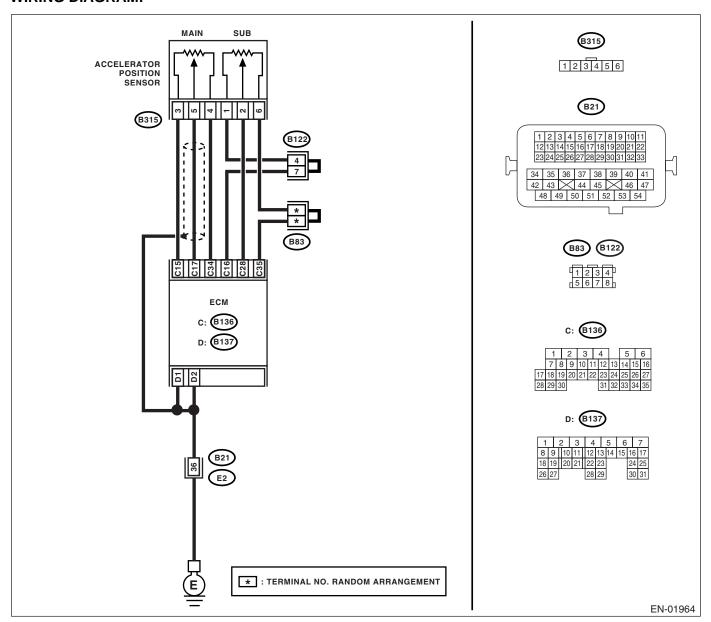

	Step	Check	Yes	No
1	CHECK ACCELERATOR POSITION SENSOR OUTPUT.	Is the voltage more than 0.4 V?	Go to step 2.	Go to step 3.
	1) Turn the ignition switch to ON.			
	2) Read the data of main accelerator position			
	sensor signal using Subaru Select Manitor			
2	sensor signal using Subaru Select Monitor.  CHECK POOR CONTACT.	la thora poor contact?	Danair the near	Co to oton 42
2	Check poor contact in connector between	Is there poor contact?	Repair the poor contact.	Go to step 12.
	ECM and accelerator position sensor.		Contact.	
3	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.	Is the resistance less than 1 Ω?	Go to step 4.	Repair the open circuit of harness
	Turn the ignition switch to OFF.			connector.
	<ol> <li>Disconnect the connector from ECM.</li> </ol>			
	3) Disconnect the connector from the acceler-			
	ator position sensor.			
	4) Measure the resistance between ECM con-			
	nector and accelerator position sensor connec-			
	tor.			
	Connector & terminal			
	(B136) No. 17 — (B315) No. 5:			
	(B136) No. 15 — (B315) No. 3: (B136) No. 28 — (B315) No. 2:			
	(B136) No. 16 — (B315) No. 1:			
4	CHECK HARNESS BETWEEN ECM AND AC-	Is the resistance more than 1	Go to step 5.	Repair the ground
	CELERATOR POSITION SENSOR.	$M\Omega$ ?	00 to 5top <b>0</b> 1	short circuit of har-
	Measure the resistance between ECM connec-			ness.
	tor and chassis ground.			
	Connector & terminal			
	(B136) No. 17 — Chassis ground:			
	(B136) No. 15 — Chassis ground:			
	(B136) No. 28 — Chassis ground:			
_	(B136) No. 16 — Chassis ground:	Le the coult are 4.5 . 5.5 VO	0-440	Danaia tha ana
5	CHECK POWER SUPPLY OF ACCELERA- TOR POSITION SENSOR.	Is the voltage 4.5 — 5.5 V?	Go to step 6.	Repair the poor contact in ECM
	Connect the ECM connector.			connector.
	2) Turn the ignition switch to ON.			Replace the ECM
	3) Measure the voltage between accelerator			if defective.
	position sensor connector and chassis ground.			<ref. td="" to<=""></ref.>
	Connector & terminal			FU(H4DOTC)-35,
	(B315) No. 3 (+) — Chassis ground (-):			Engine Control
	(B315) No. 1 (+) — Chassis ground (−):			Module (ECM).>
6	CHECK ACCELERATOR POSITION SEN-	Is the resistance 1.2 — 4.8	Go to step 7.	Replace the accel-
	SOR.	kΩ?		erator position
	Measure the resistance of accelerator position sensor.			sensor.
	Terminals			
	No. 3 — No. 4:			
7	CHECK ACCELERATOR POSITION SEN-	Is the resistance 0.75 — 3.15	Go to step 8.	Replace the accel-
	SOR.	kΩ?		erator position
	Measure the resistance of accelerator position			sensor.
	sensor.			
	Terminals			
	No. 1 — No. 6:			<u> </u>
8	CHECK ACCELERATOR POSITION SENSOR.	Is the resistance $0.2 - 0.8$ k $\Omega$ ?	Go to step 9.	Replace the accel-
	Measure the resistance of accelerator position	N22!		erator position
	sensor without depressing the accelerator			sensor.
	pedal.			
	Terminals			
	reminais			

	Step	Check	Yes	No
9	CHECK ACCELERATOR POSITION SENSOR.	Is the resistance 0.15 — 0.63 $k\Omega$ ?	Go to step 10.	Replace the accelerator position
	Measure the resistance of accelerator position sensor without depressing the accelerator			sensor.
	pedal.  Terminals  No. 2 — No. 6:			
10	CHECK ACCELERATOR POSITION SEN-	Is the resistance 0.5 — 2.5	Co to stop 11	Daniago the agest
10	<b>SOR.</b> Measure the resistance of accelerator position sensor with the accelerator pedal depressed.	$k\Omega$ ?	Go to step 11.	Replace the accelerator position sensor.
	Terminals No. 5 — No. 4:			
11	CHECK ACCELERATOR POSITION SEN-	Is the resistance 0.28 — 1.68	Go to step 12.	Replace the accel-
''	SOR.  Measure the resistance of accelerator position	k $\Omega$ ?	Go to step 12.	erator position sensor.
	sensor with the accelerator pedal depressed.  Terminals			
	No. 2 — No. 6:			
12	CHECK ACCELERATOR POSITION SENSOR OUTPUT.  1) Turn the ignition switch to OFF.	Is the voltage less than 4.8 V?	Go to step 13.	Go to step 14.
	<ul><li>2) Connect all the connectors.</li><li>3) Turn the ignition switch to ON.</li></ul>			
	<ul><li>4) Read the data of main throttle sensor signal</li></ul>			
	and sub accelerator position sensor signal using Subaru Select Monitor.			
13	CHECK POOR CONTACT.	Is there poor contact?	Repair the poor	Go to step 18.
	Check poor contact in connector between ECM and accelerator position sensor.		contact.	·
14	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Disconnect the connector from the accelerator position sensor. 4) Measure the resistance between ECM connector and accelerator position sensor connec-	Is the resistance less than 1 $\Omega$ ?	Go to step 15.	Repair the open circuit of harness connector.
	tor.			
	Connector & terminal (B136) No. 34 — (B315) No. 4: (B136) No. 35 — (B315) No. 6:			
15	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.	Is the resistance less than 5 $\Omega$ ?	Go to step 16.	Repair the poor contact in ECM
	<ol> <li>Connect the ECM connector.</li> <li>Measure the resistance between accelerator position sensor connector and chassis ground.</li> </ol>			connector. Replace the ECM if defective. <ref. td="" to<=""></ref.>
	Connector & terminal (B315) No. 4 — Chassis ground: (B315) No. 6 — Chassis ground:			FU(H4DOTC)-35, Engine Control Module (ECM).>
16	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.  1) Connect the ECM connector. 2) Turn the ignition switch to ON. 3) Measure the voltage between accelerator position sensor connector and chassis ground.  Connector & terminal  (B315) No. 5 (+) — Chassis ground (-):	Is the voltage less than 6 V?	Go to step 17.	Repair the battery short circuit in har- ness between ECM connector and accelerator position sensor connector.
	(B315) No. 2 (+) — Chassis ground (-):			

	Step	Check	Yes	No
17	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Measure the resistance between ECM connector terminals.  Connector & terminal  (B136) No. 17 — (B136) No. 15:  (B136) No. 17 — (B136) No. 16:  (B136) No. 28 — (B136) No. 15:  (B136) No. 28 — (B136) No. 16:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Go to step 18.	Repair the short circuit to sensor power supply.
18	CHECK HARNESS BETWEEN ECM AND ACCELERATOR POSITION SENSOR.  1) Turn the ignition switch to OFF. 2) Disconnect the connector from ECM. 3) Disconnect the connector from the accelerator position sensor. 4) Measure the resistance between connector terminals of accelerator position sensor.  Connector & terminal (B315) No. 5 — (B315) No. 2:	Is the resistance more than 1 $\mbox{M}\Omega ?$	Repair the poor contact in ECM connector. Replace the ECM if defective. <ref. (ecm).="" control="" engine="" fu(h4dotc)-35,="" module="" to=""></ref.>	Repair the short circuit in harness between ECM connector and accelerator position sensor connector.

### 17. General Diagnostic Table

### A: INSPECTION

### 1. ENGINE

### NOTE:

Malfunction of parts other than those listed is also possible. <Ref. to ME(H4DOTC)-90, Engine Trouble in General.>

Symptom	Problem parts
	1) Electronic throttle control
	2) Manifold absolute pressure sensor
	3) Mass air flow and intake air temperature sensor
1. Engine stelle during idling	4) Ignition parts (*1)
Engine stalls during idling.	5) Engine coolant temperature sensor (*2)
	6) Crankshaft position sensor (*3)
	7) Camshaft position sensor (*3)
	8) Fuel injection parts (*4)
	1) Electronic throttle control
	2) Manifold absolute pressure sensor
	3) Mass air flow and intake air temperature sensor
	4) Engine coolant temperature sensor (*2)
	5) Ignition parts (*1)
2. Rough idling	6) Air intake system (*5)
3.0	7) Fuel injection parts (*4)
	8) Crankshaft position sensor (*3)
	9) Camshaft position sensor (*3)
	10) Oxygen sensor
	11) Fuel pump and fuel pump relay
	1) Electronic throttle control
	2) Engine coolant temperature sensor
3. Engine does not return to idle.	3) Manifold absolute pressure sensor
	4) Mass air flow sensor
	,
	Manifold absolute pressure sensor     Mass air flow and intake air temperature sensor
	3) Electronic throttle control 4) Evel injection parts (*4)
	4) Fuel injection parts (*4) 5) Fuel pump and fuel pump relay
4. Poor acceleration	
4. FOOI acceleration	6) Engine coolant temperature sensor (*2)
	7) Crankshaft position sensor (*3) 8) Camshaft position sensor (*3)
	9) A/C switch and A/C cut relay
	10) Engine torque control signal circuit
	11) Ignition parts (*1)
	, , , , ,
	Manifold absolute pressure sensor
	2) Mass air flow and intake air temperature sensor
5 Famine stelle en ensier en en le citate et	3) Engine coolant temperature sensor (*2)
5. Engine stalls or engine sags or hesitates at	4) Crankshaft position sensor (*3)
acceleration.	5) Camshaft position sensor (*3)
	6) Purge control solenoid valve
	7) Fuel injection parts (*4)
	8) Fuel pump and fuel pump relay
	Manifold absolute pressure sensor
	Mass air flow and intake air temperature sensor
	3) Engine coolant temperature sensor (*2)
6.Surge	4) Crankshaft position sensor (*3)
	5) Camshaft position sensor (*3)
	6) Fuel injection parts (*4)
	7) Throttle position sensor
	8) Fuel pump and fuel pump relay

Symptom	Problem parts
7. Spark knock	1) Manifold absolute pressure sensor 2) Mass air flow and intake air temperature sensor 3) Engine coolant temperature sensor 4) Knock sensor 5) Fuel injection parts (*4) 6) Fuel pump and fuel pump relay
8. After burning in exhaust system	1) Manifold absolute pressure sensor 2) Mass air flow and intake air temperature sensor 3) Engine coolant temperature sensor (*2) 4) Fuel injection parts (*4) 5) Fuel pump and fuel pump relay

<sup>\*1:</sup> Check ignition coil & ignitor ASSY and spark plug.

<sup>\*2:</sup> Indicate the symptom occurring only in cold temperatures.

<sup>\*3:</sup> Ensure the secure installation.

<sup>\*4:</sup> Check fuel injector, fuel pressure regulator and fuel filter.

<sup>\*5:</sup> Inspect air leak in air intake system.