



TELECOM-RANGE

EN

Outdoor packaged unit

 HFC
R-410A

 **CLIMAVENETA**

MED
0001 ÷ 0091

INDEX

General warnings	3
Fundamental safety rules	3
Identification	4
Receiving and handling the product	4
Description of the appliance	5
Operating modes	6
Dimensions and installation templates	7
Table of technical data	18
Operating limits	18
Electrical connections	19

ELECTRICAL WIRING DIAGRAM ON THE MACHINE

Control diagram	21
Controller	22
Menu structure	23
Display screen	25
“LAN” Local Network	39
Interconnection between the units by shielded cable	39
Setting the addresses of the units (from 1 to 10) and the user terminals (from 11 to 20)	39
Configuring the software for the recognition and management of the units	41
Special functions of the LAN network	42
Serial boards and supervisory system	45
Alarm (Troubleshooting)	47
Troubleshooting	47
Operating characteristics	48
Extended shutdown	48
Routine maintenance	48
Special maintenance	49
Disposal	49
Condensate drain	49

Liability disclaimer

This bulletin refers to standard executions, particularly as regards dimensions, weight, electric, hydraulic, aeraulic and refrigerant connections (where applicable). Contact Climaveneta Commercial Office for further drawings and schemes. Climaveneta declines any liability deriving from use of the bulletin. This bulletin is the exclusive property of Climaveneta and all forms of copy are prohibited. The data contained herein are subject to change without notice.

In some parts of this manual, the following symbols are used:



WARNING = for actions that require special care and suitable preparation




PROHIBITED = for actions that absolutely MUST

Specialist personnel
(electrician)

Person with in-depth knowledge and experience such as to be able to recognise risks and avoid dangers that may derive from electricity (IEV 826-09-01).

GENERAL WARNINGS

 Incorrect installation, control and maintenance, improper use or installation by unqualified personnel absolves the **manufacturer** from all liability, whether contractual or otherwise, for damage to people, animals or things. Only those applications specifically indicated in this list are permitted.

Read this manual carefully. All work must be carried out by qualified personnel in conformity with legislation in force in the country concerned.

The warranty is void if the above instructions are not respected and if the unit is started up for the first time without the presence of personnel authorised by the Company (where specified in the supply contract) who should draw up a “start-up report”.

The documentation supplied with the unit must be consigned to the owner who should keep it carefully for future consultation.

When the items are consigned by the carrier, check that the packaging and the unit are undamaged.

If damage, missing components or consignment errors are noted, indicate this on the delivery note.

A formal complaint should be sent via fax or registered post to the After Sales Service within eight days from the date of receipt of the items.

All the operations involved in handling, installing, starting up and testing the unit must be carried out by qualified personnel.

Failure to observe this warning could cause serious damage.

This appliance contains R410A refrigerant gas: at the end of its working life, it should be taken to a special collection centre; care should be taken to avoid damage to the gas circuit and the finned coil.


Too low temperatures are harmful to health and a useless waste of energy.

Avoid direct contact with the air flow for prolonged periods.

These appliances have been designed for cooling and must be used for this purpose in applications compatible with their performance characteristics.

FUNDAMENTAL SAFETY RULES

When operating equipment involving the use of electricity and refrigerant gas, a number of fundamental safety rules must be observed, namely:

 **The unit must not be used** by children or by unfit persons without suitable supervision.

Do not touch the unit with bare feet or with wet or damp parts of the body.

Do not carry out cleaning operations without first disconnecting the unit from the electricity supply by placing the mains switch in the “off” position.

Do not modify safety or control devices without authorisation and instructions from the manufacturer.

Do not pull, detach or twist the electrical cables coming from the unit, even when disconnected from the mains electricity supply.

Do not open doors or panels providing access to the internal parts of the unit.

Do not dispose of, abandon or leave within reach of children packaging materials (cardboard, staples, plastic bags, etc) as they may represent a hazard.

Do not allow refrigerant gas to leak into the atmosphere. Avoid contact with the refrigerant gas as it is potentially hazardous.

Do not sit or stand on the appliance and/or rest any type of object on top of it.

Do not spray or throw water directly on the appliance.

Do not introduce pointed objects through the air intake grills.



Respect safety distances between the unit and other equipment or structures. Guarantee adequate space for access to the unit for maintenance and/or service operations..

Power supply: the cross section of the electrical cables must be adequate for the power of the unit and the power supply voltage must correspond with the value indicated on the respective units. All units must be earthed in conformity with legislation in force in the country concerned. Electrical connections should be carried out as indicated in the instructions to guarantee correct operation of the unit. Handle the unit with the utmost care to avoid damage.

IDENTIFICATION

The direct expansion units can be identified by the:

Packaging label


Giving the data identifying the product.

Rating plate


Giving the technical and performance data of the unit.

If this is lost, ask the After Sales Service for a replacement.

The rating plate is fixed in a panel inside the electric board

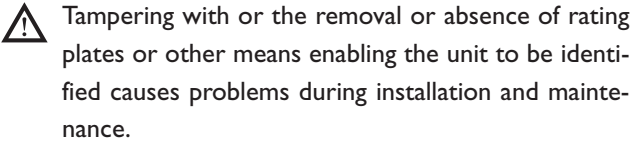

Tampering with or the removal or absence of rating plates or other means enabling the unit to be identified causes problems during installation and maintenance.

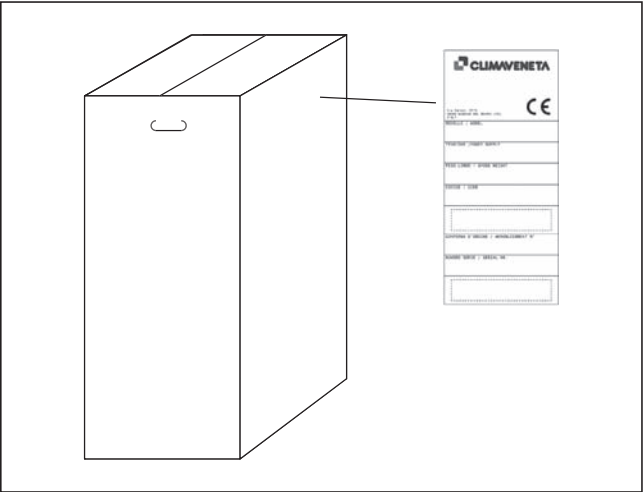


RECEIVING AND HANDLING THE PRODUCT

The direct expansion units are supplied accompanied by:


- instruction manual.
- warranty certificate.
- CE declaration.

These are contained in a plastic bag attached to the top of the unit.

The unit should always be handled by qualified personnel using equipment adequate for the weight of the unit.

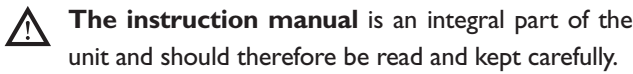

The instruction manual is an integral part of the unit and should therefore be read and kept carefully.

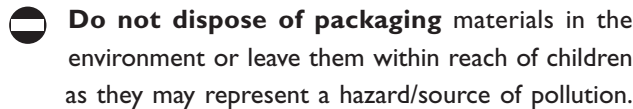

Do not dispose of packaging materials in the environment or leave them within reach of children as they may represent a hazard/source of pollution.

DESCRIPTION OF THE APPLIANCE

The MED packaged units are suitable for the precision air-conditioning of mobile telephone shelters. They are designed for outdoor installation and fitted with a freecooling damper to allow energy savings.

STRUCTURE

Panelling, base and internal structure made from epoxy-coated metal, with stainless steel condensate collection pan. The cover panels are internally coated with a thermal and acoustic insulation, closed cell polyethylene foam extinguishing.

POWER AND CONTROL ELECTRICAL PANEL

Power and control electrical panel constructed in accordance with IEC 204-1/EN60204-1, complete with compressor contactor and thermal solenoid switch and door lock safety device. The electrical panel is divided into two compartments: high voltage compartment, low voltage compartment.

EXCHANGE BATTERIES

Made using copper tubes and aluminium fins with a high exchange surface area.

AIR FILTERS

Filter Removable and washable made of acrylic material self-extinguishing with efficiency class EU3 (standard) or higher EU4.

EVAPORATOR FAN

Radial or centrifugal fan with standard AC power supply or in alternative 48VDC power supply.

CONDENSER FAN

Axial fans, with external impeller, statically and dynamically balanced. Six-pole electric motor with built-in thermal cut-out. Housed in aerodynamic tubes with accident prevention grill. Device for operation according to the outside air temperature: continuous fan rotation speed control via pressure transducer.

REFRIGERANT CIRCUIT

Refrigerant circuit featuring the following components: thermostatic valve, dewatering filter, liquid indicator, liquid receiver, pressure switches for controlling the discharge and suction pressure. Unit supplied complete with non-freezing oil and refrigerant charge, factory tested.

COMPRESSORS

A hermetic compressor depending the size selected, complete with thermal protection. Crankcase heater installed as standard on all versions.

ELECTRIC HEATERS

Electric heaters, with double safety feature. Heating capacity 1,7 or 3,4 kW, depending on the size selected

DIFFERENTIAL PRESSURE SWITCHES

Two differential air pressure switches for detecting faults with the indoor fan or blocked filters.


PLC

The operation of the unit is managed by a PLC with a graphic display.

OPTIONAL ACCESSORIES TO BE REQUESTED WHEN ORDERING


- Humidity Sensor
- Function Dehumidification
- Clock Card
- Serial adapter for interfacing with external BMS
- Soundproof compressor jacket
- Shutter management and free cooling
- Air filter EU4 instead EU3 standard
- Air filter for fresh air intake
- Power supply from UPS 48 VDC for evaporator fan and damper free cooling if req.
- Electric heater

For any further request please contact the office.

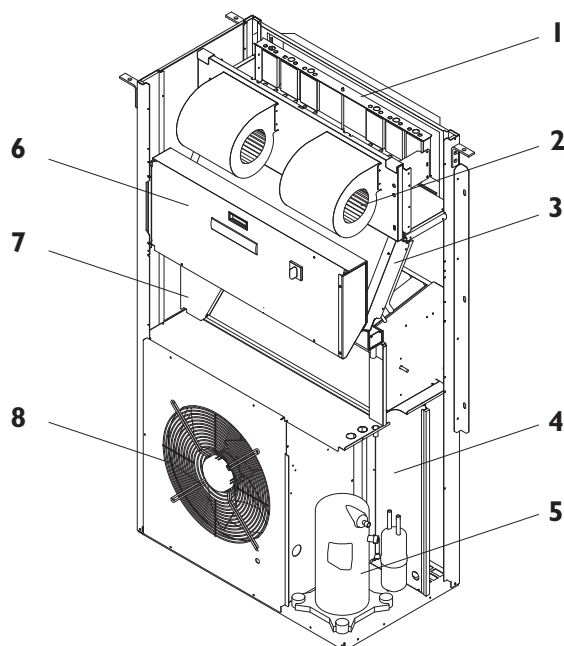


- 1 Electric heater (optional)
- 2 Centrifugal fan
- 3 Evaporator coil
- 4 Condenser
- 5 Compressor
- 6 Electrical panel
- 7 Freecooling damper
- 8 Condenser fan


Operation in freecooling or emergency mode

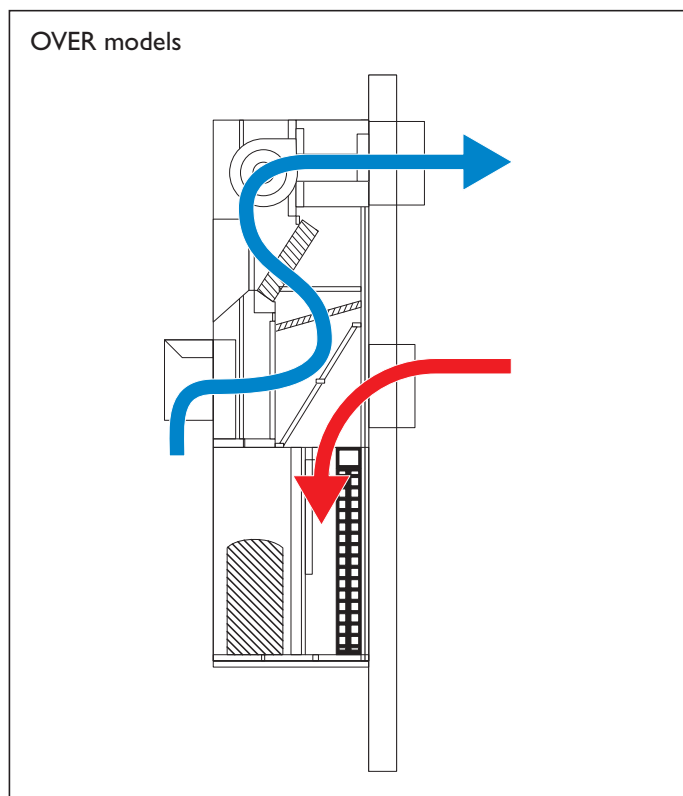


Operation in mechanical cooling mode

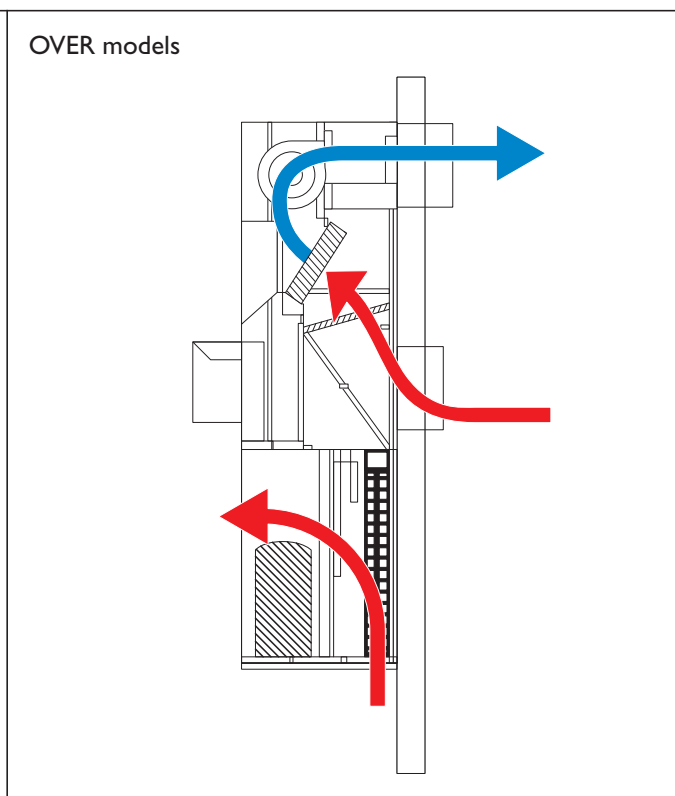


Operation in freecooling or emergency mode

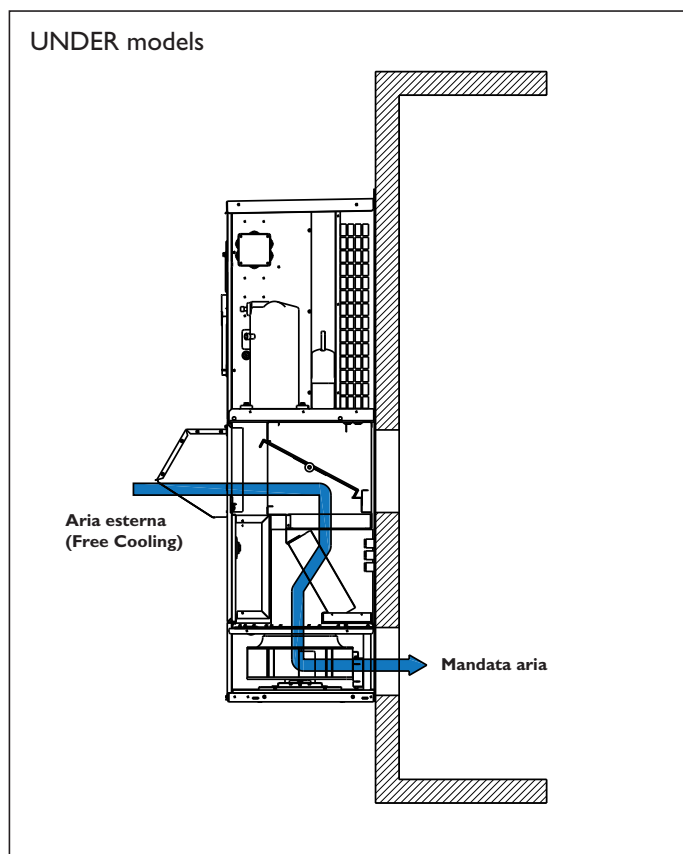

Operation in mechanical cooling mode

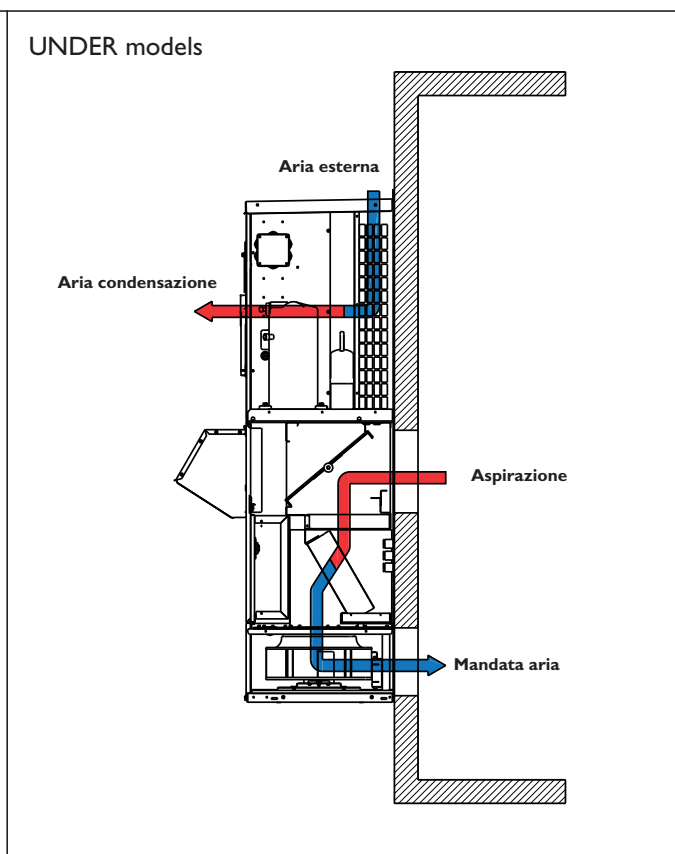


MED 0003-0004 UNDER

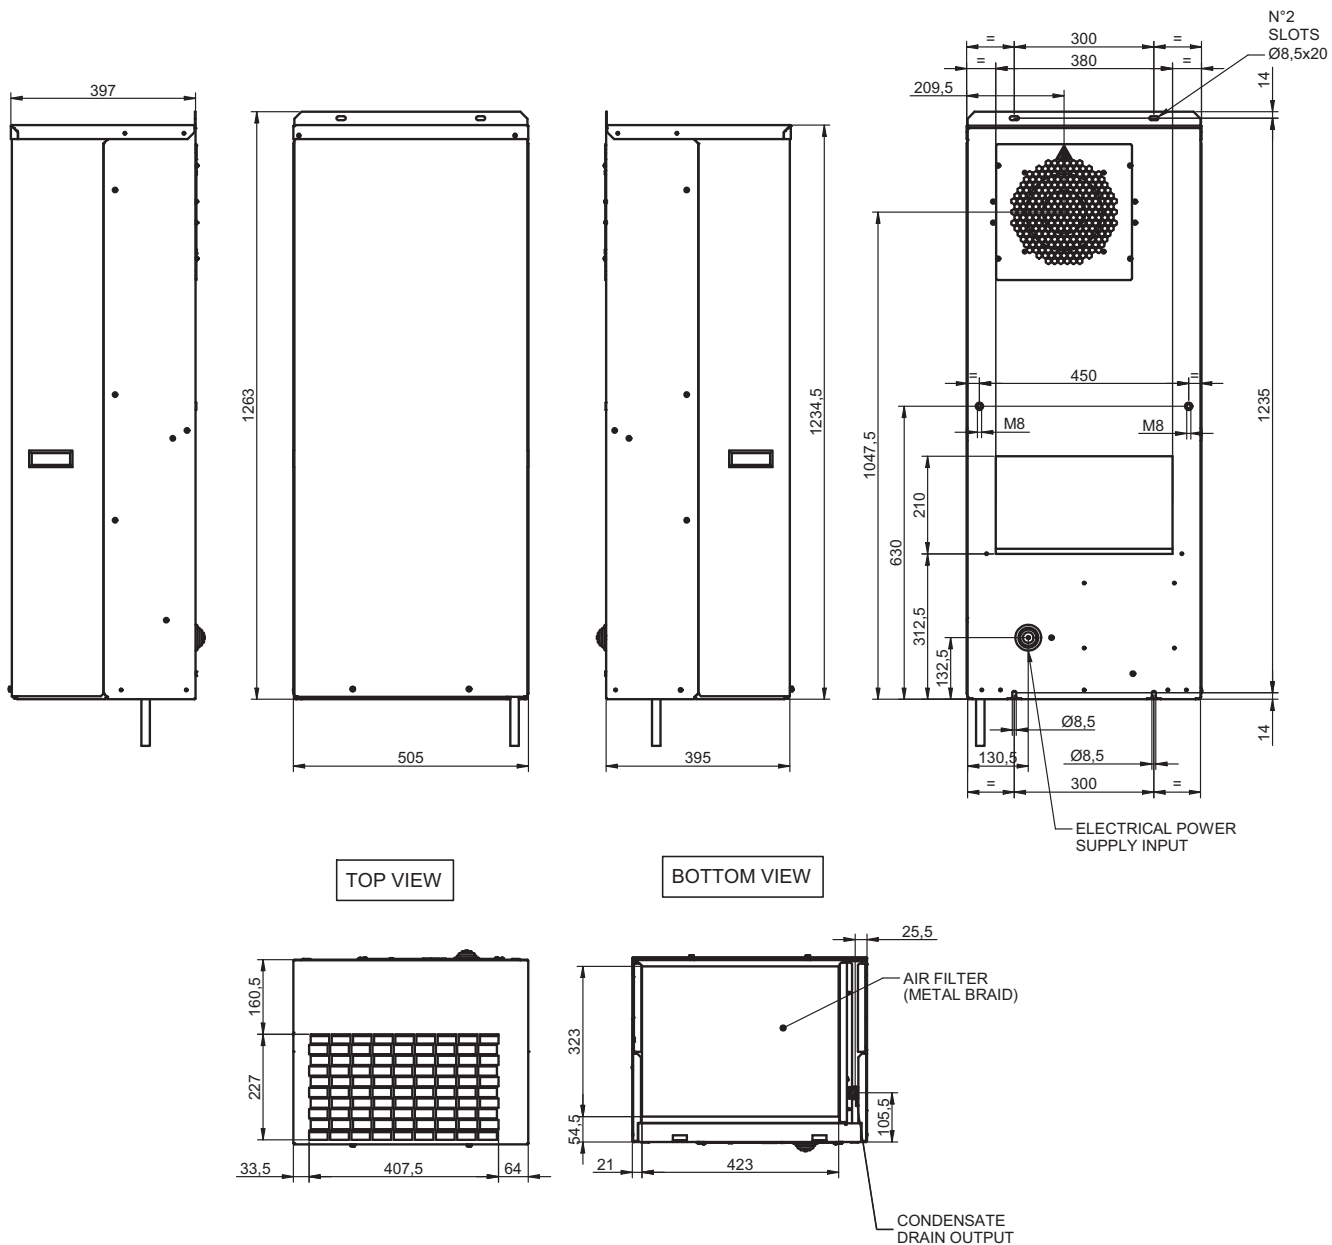


MED 0003-0004 UNDER - WALL DRILLING PATTERN


VIEW FROM INSIDE
THE SHELTER

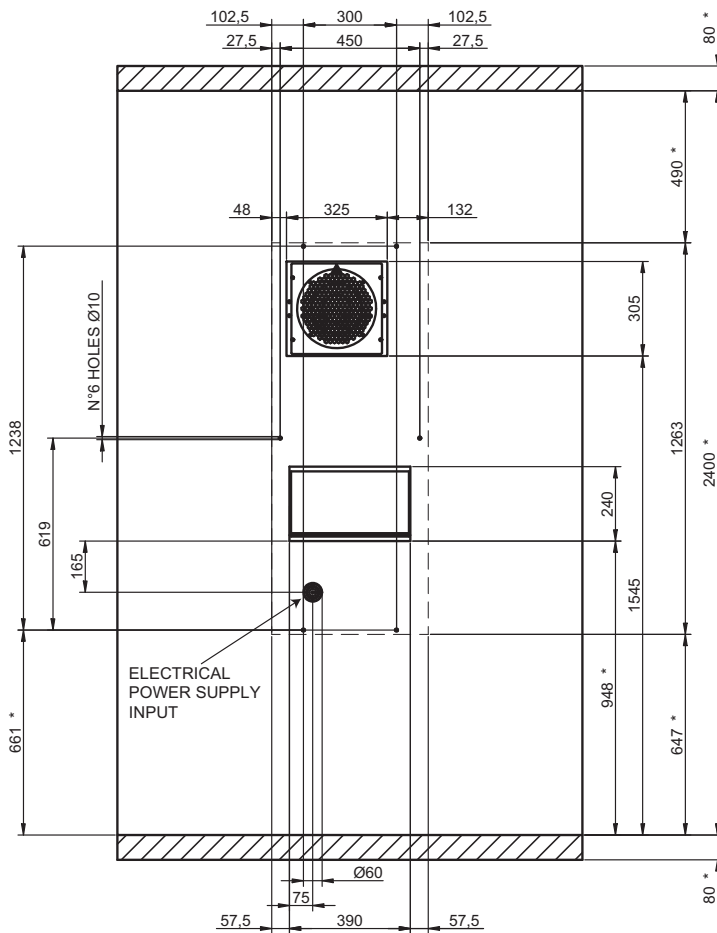

* = HIPOTESIZED


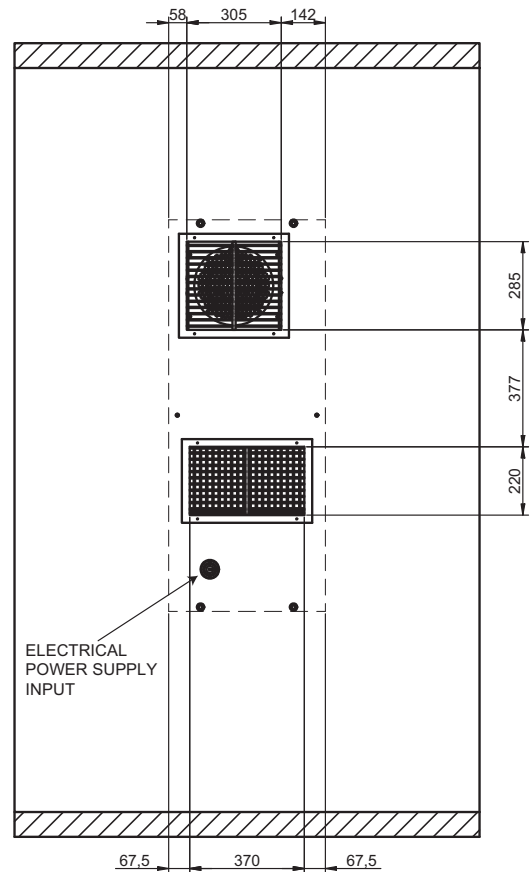


MED 001 I ÷ 003 I UNDER

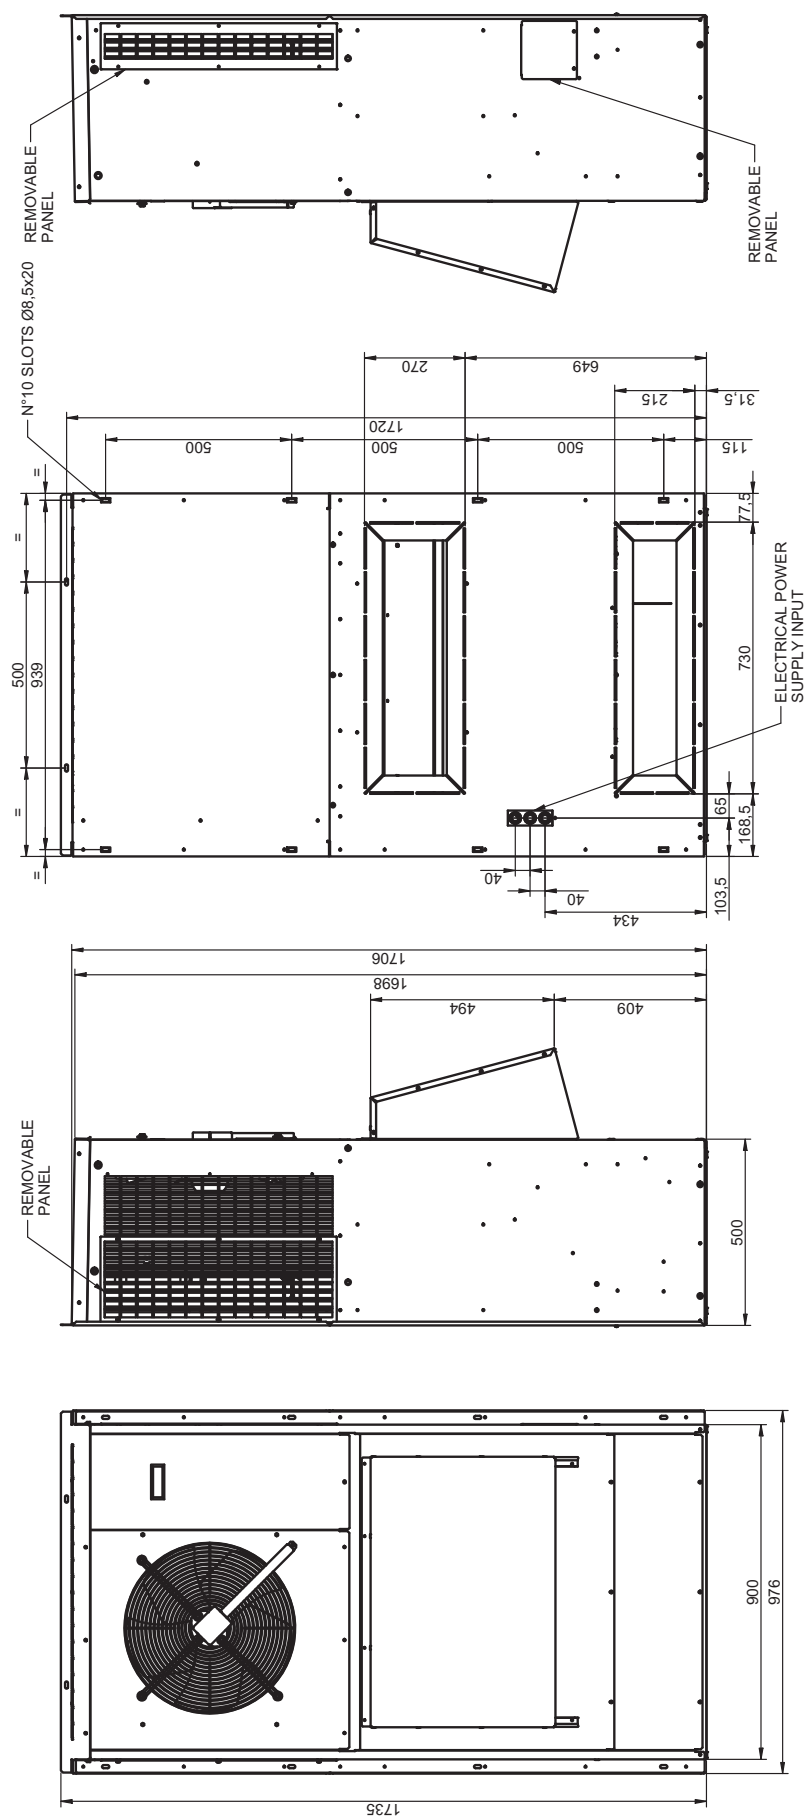


BOTTOM VIEW


TOP VIEW

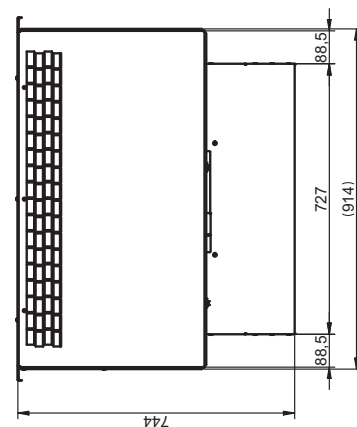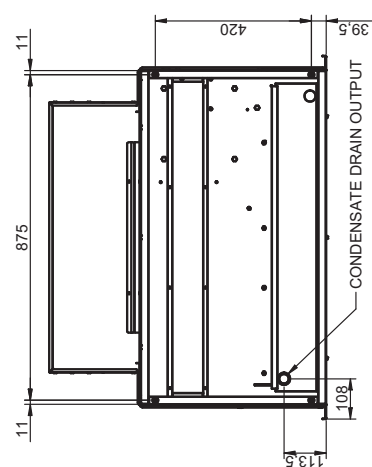


MED 001 I ÷ 003 I UNDER - WALL DRILLING PATTERN

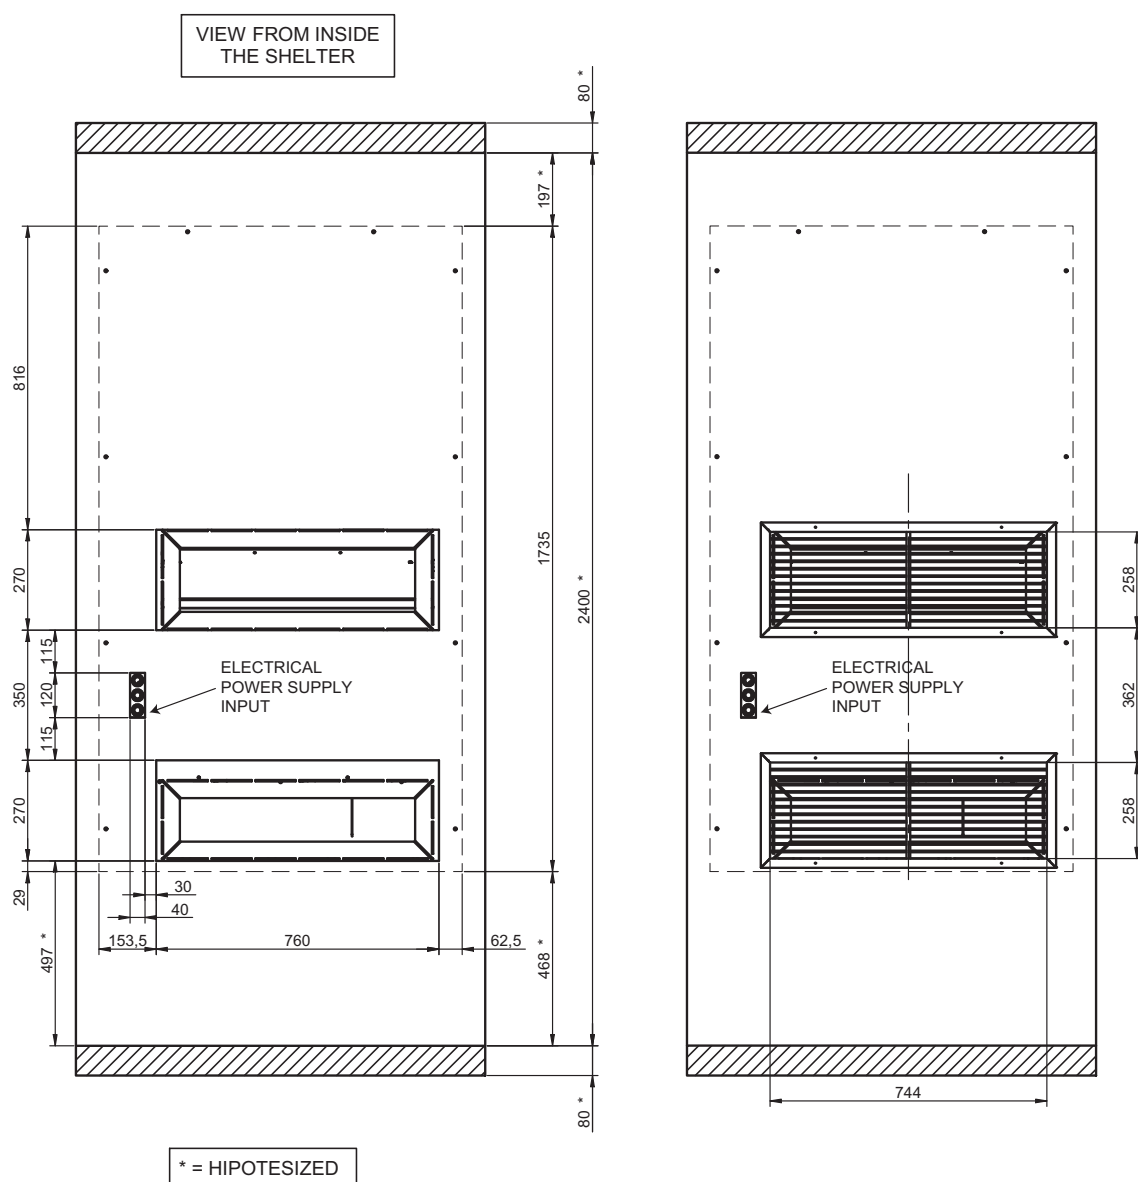


MED 001 I ÷ 003 I OVER

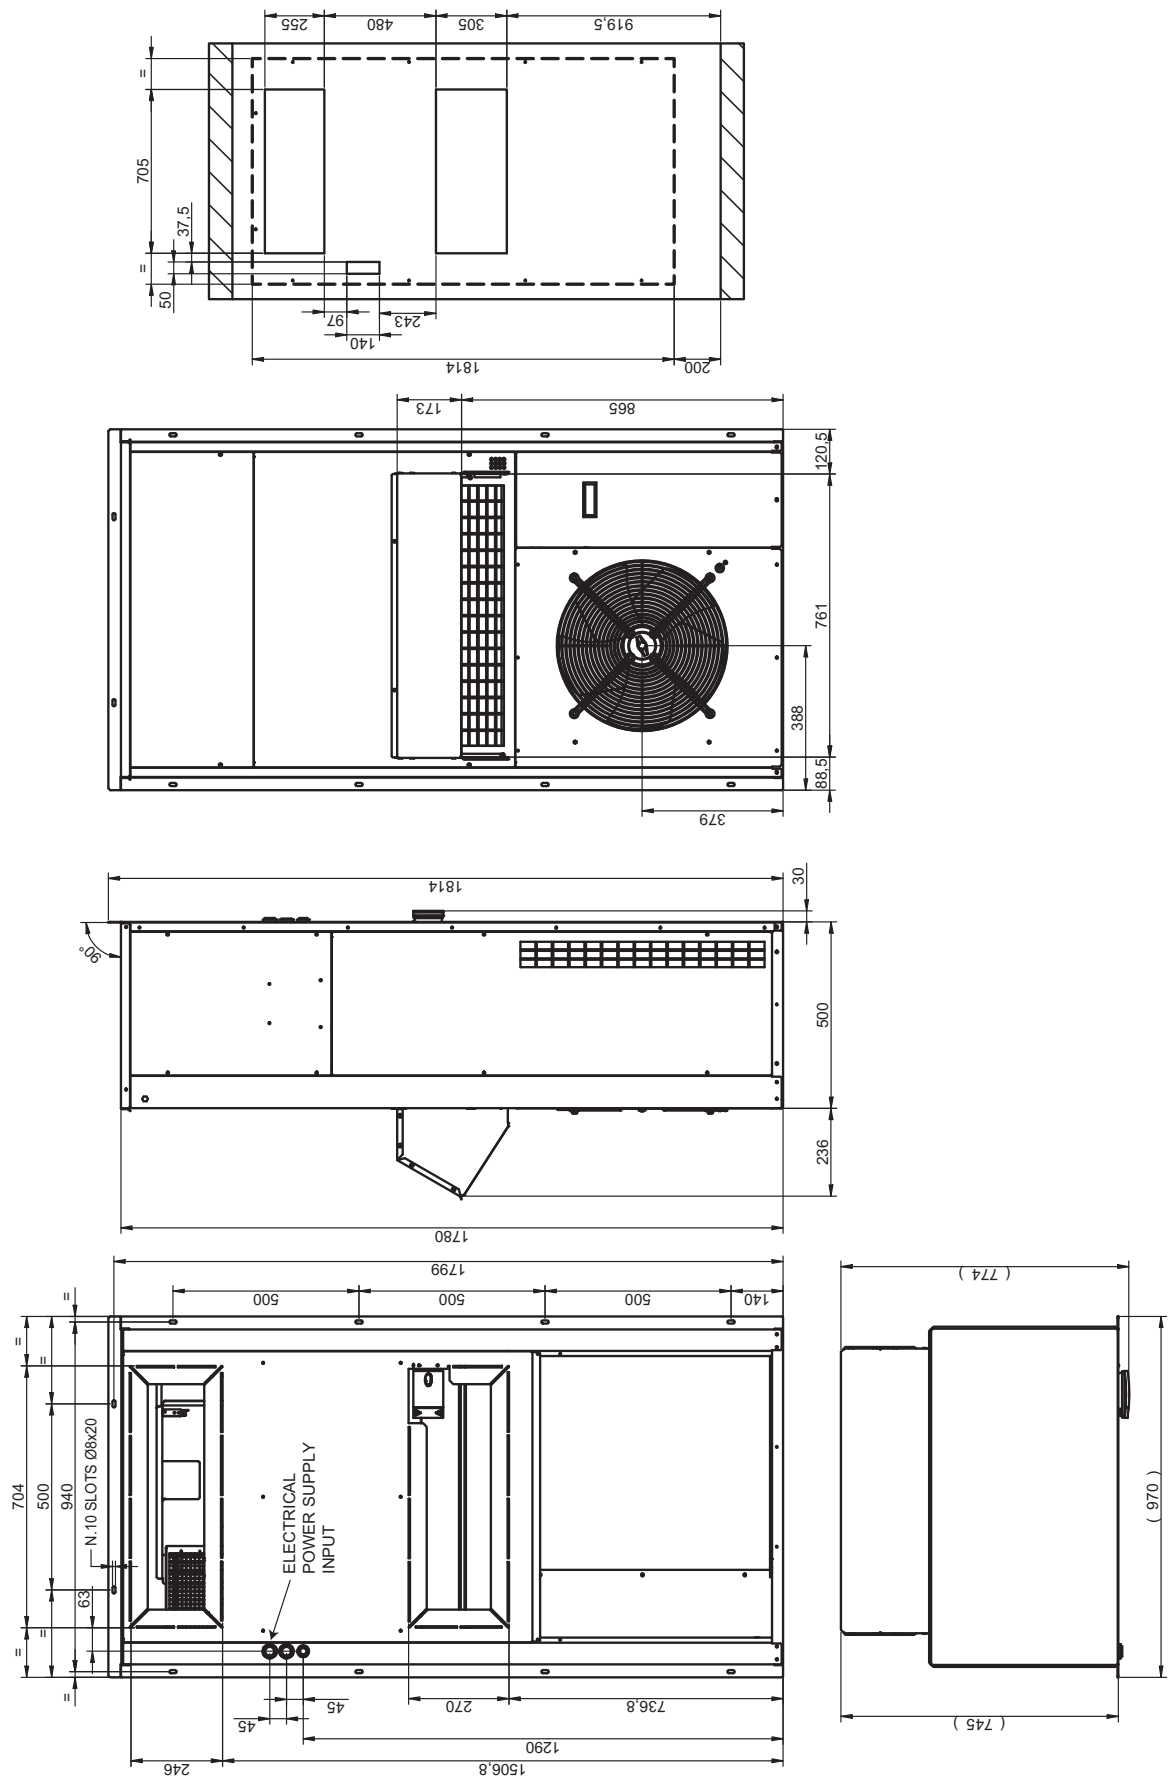


MED 0041÷0056 UNDER

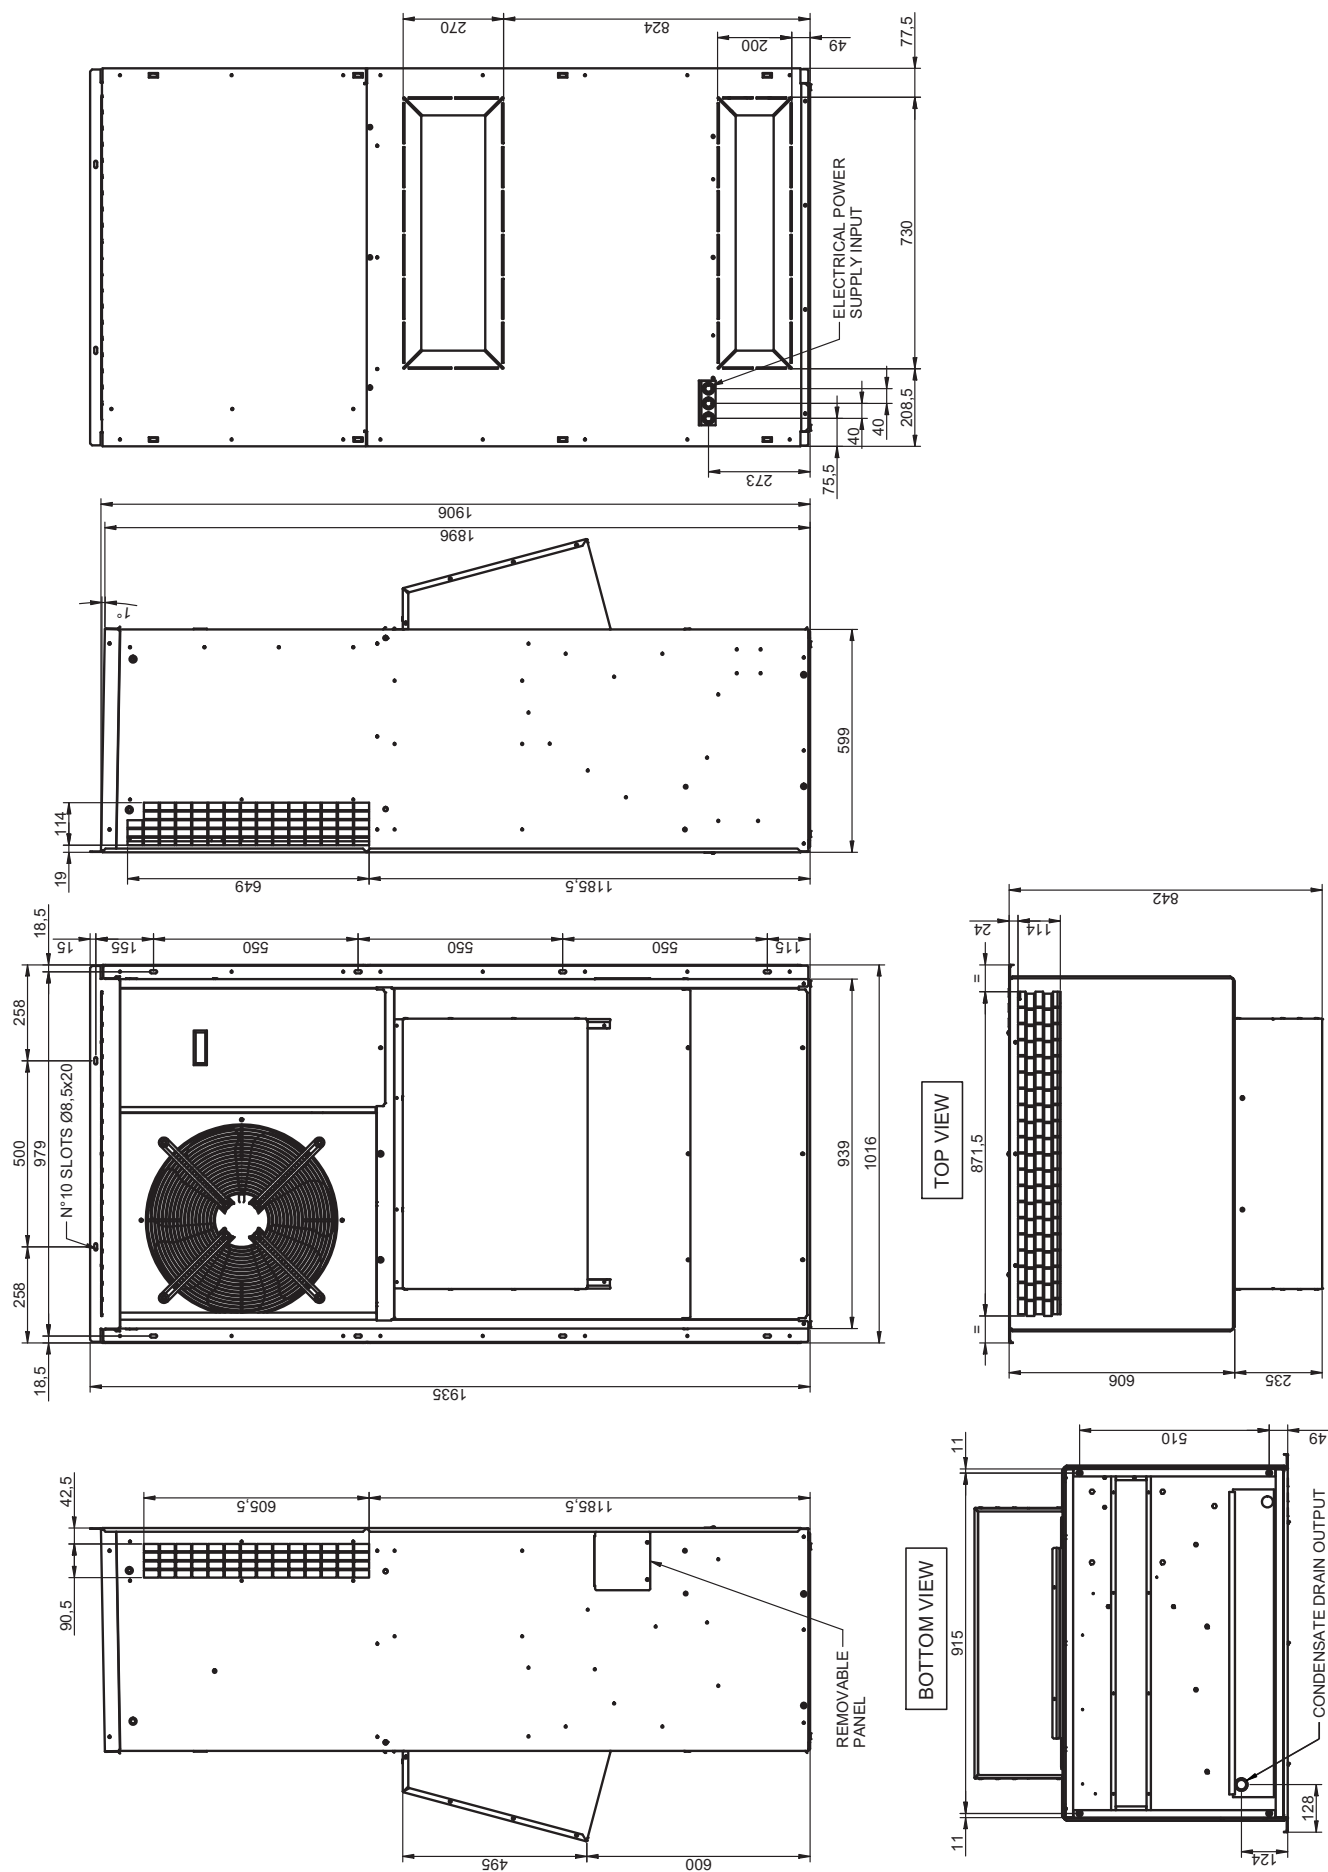


MED 0041÷0056 UNDER - WALL DRILLING PATTERN

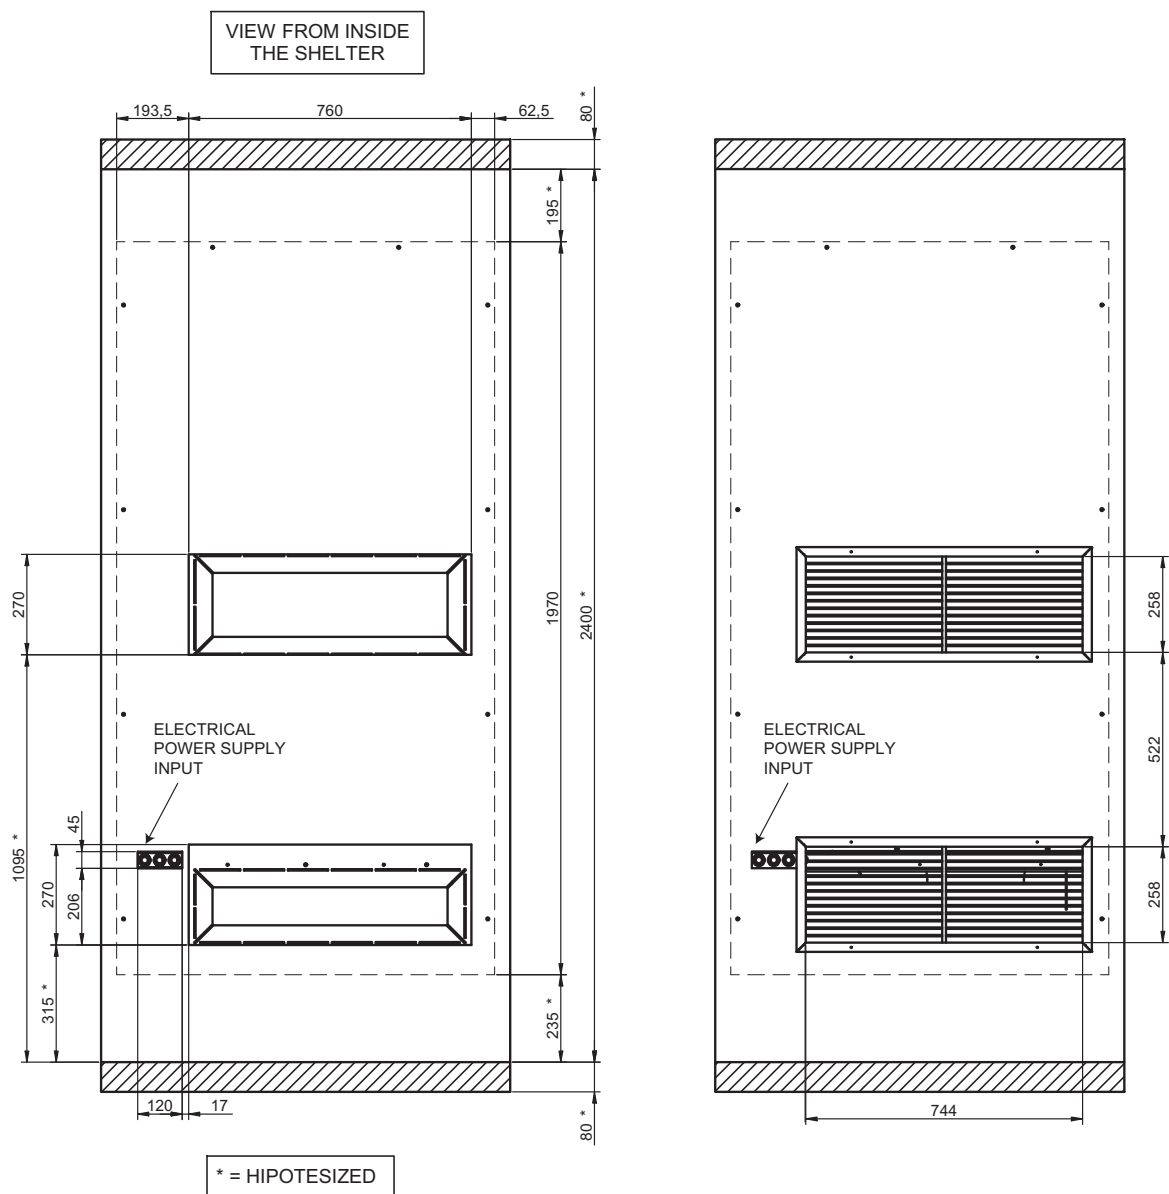

MED 0061÷0091 UNDER

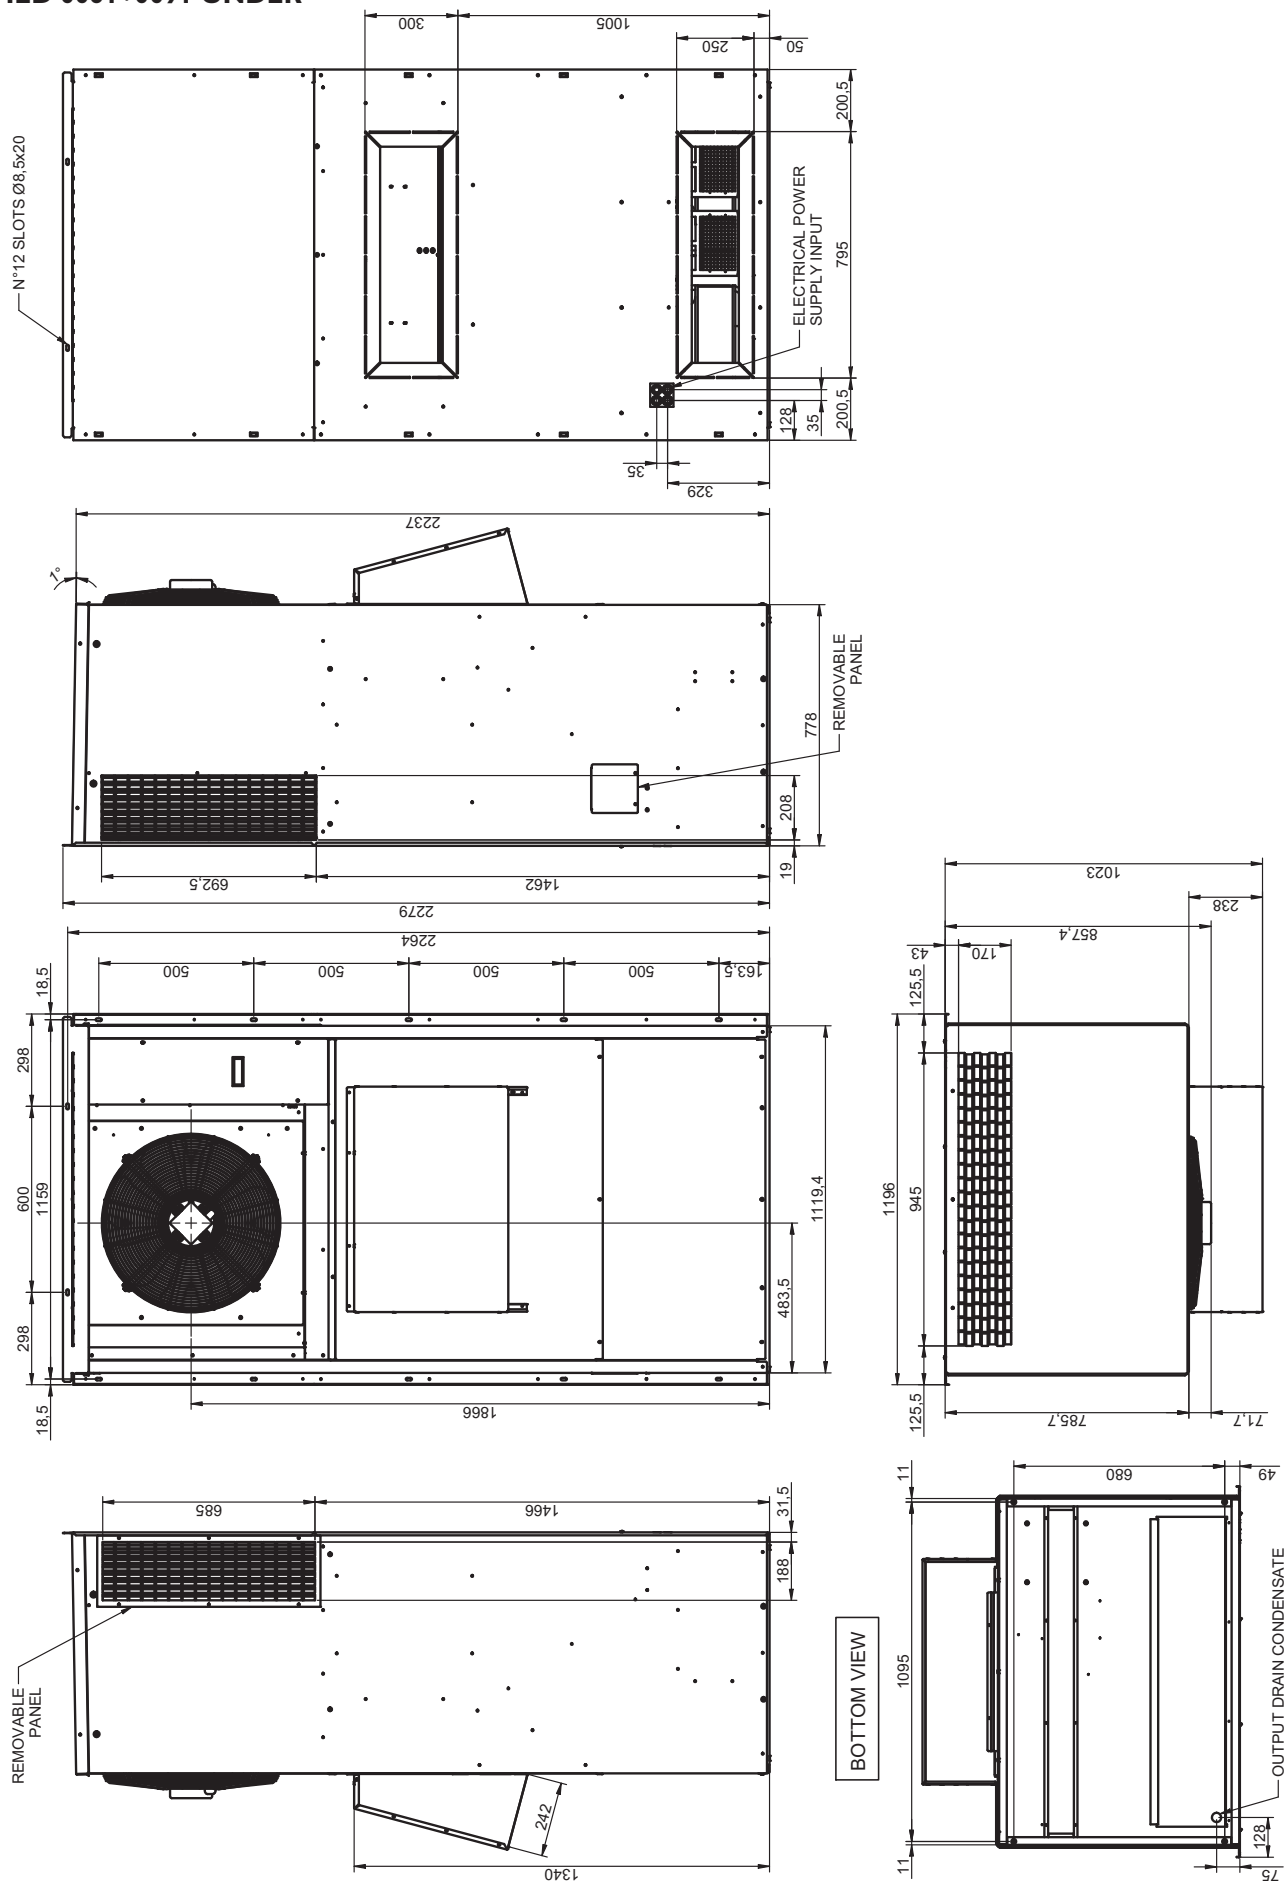

MED 006I÷009I UNDER - WALL DRILLING PATTERN

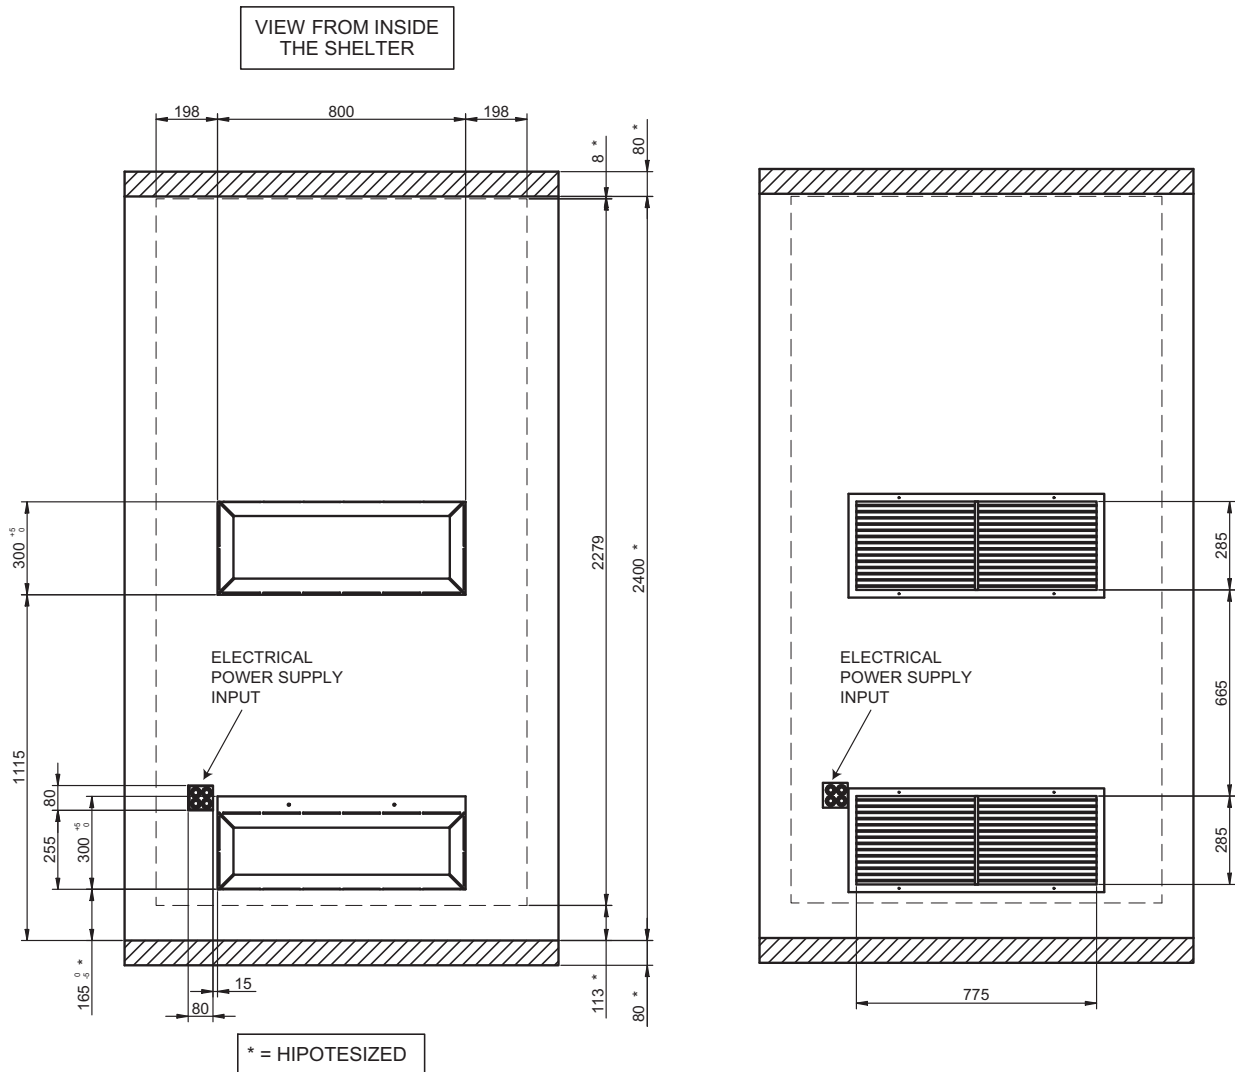

MED 0061÷0091 OVER

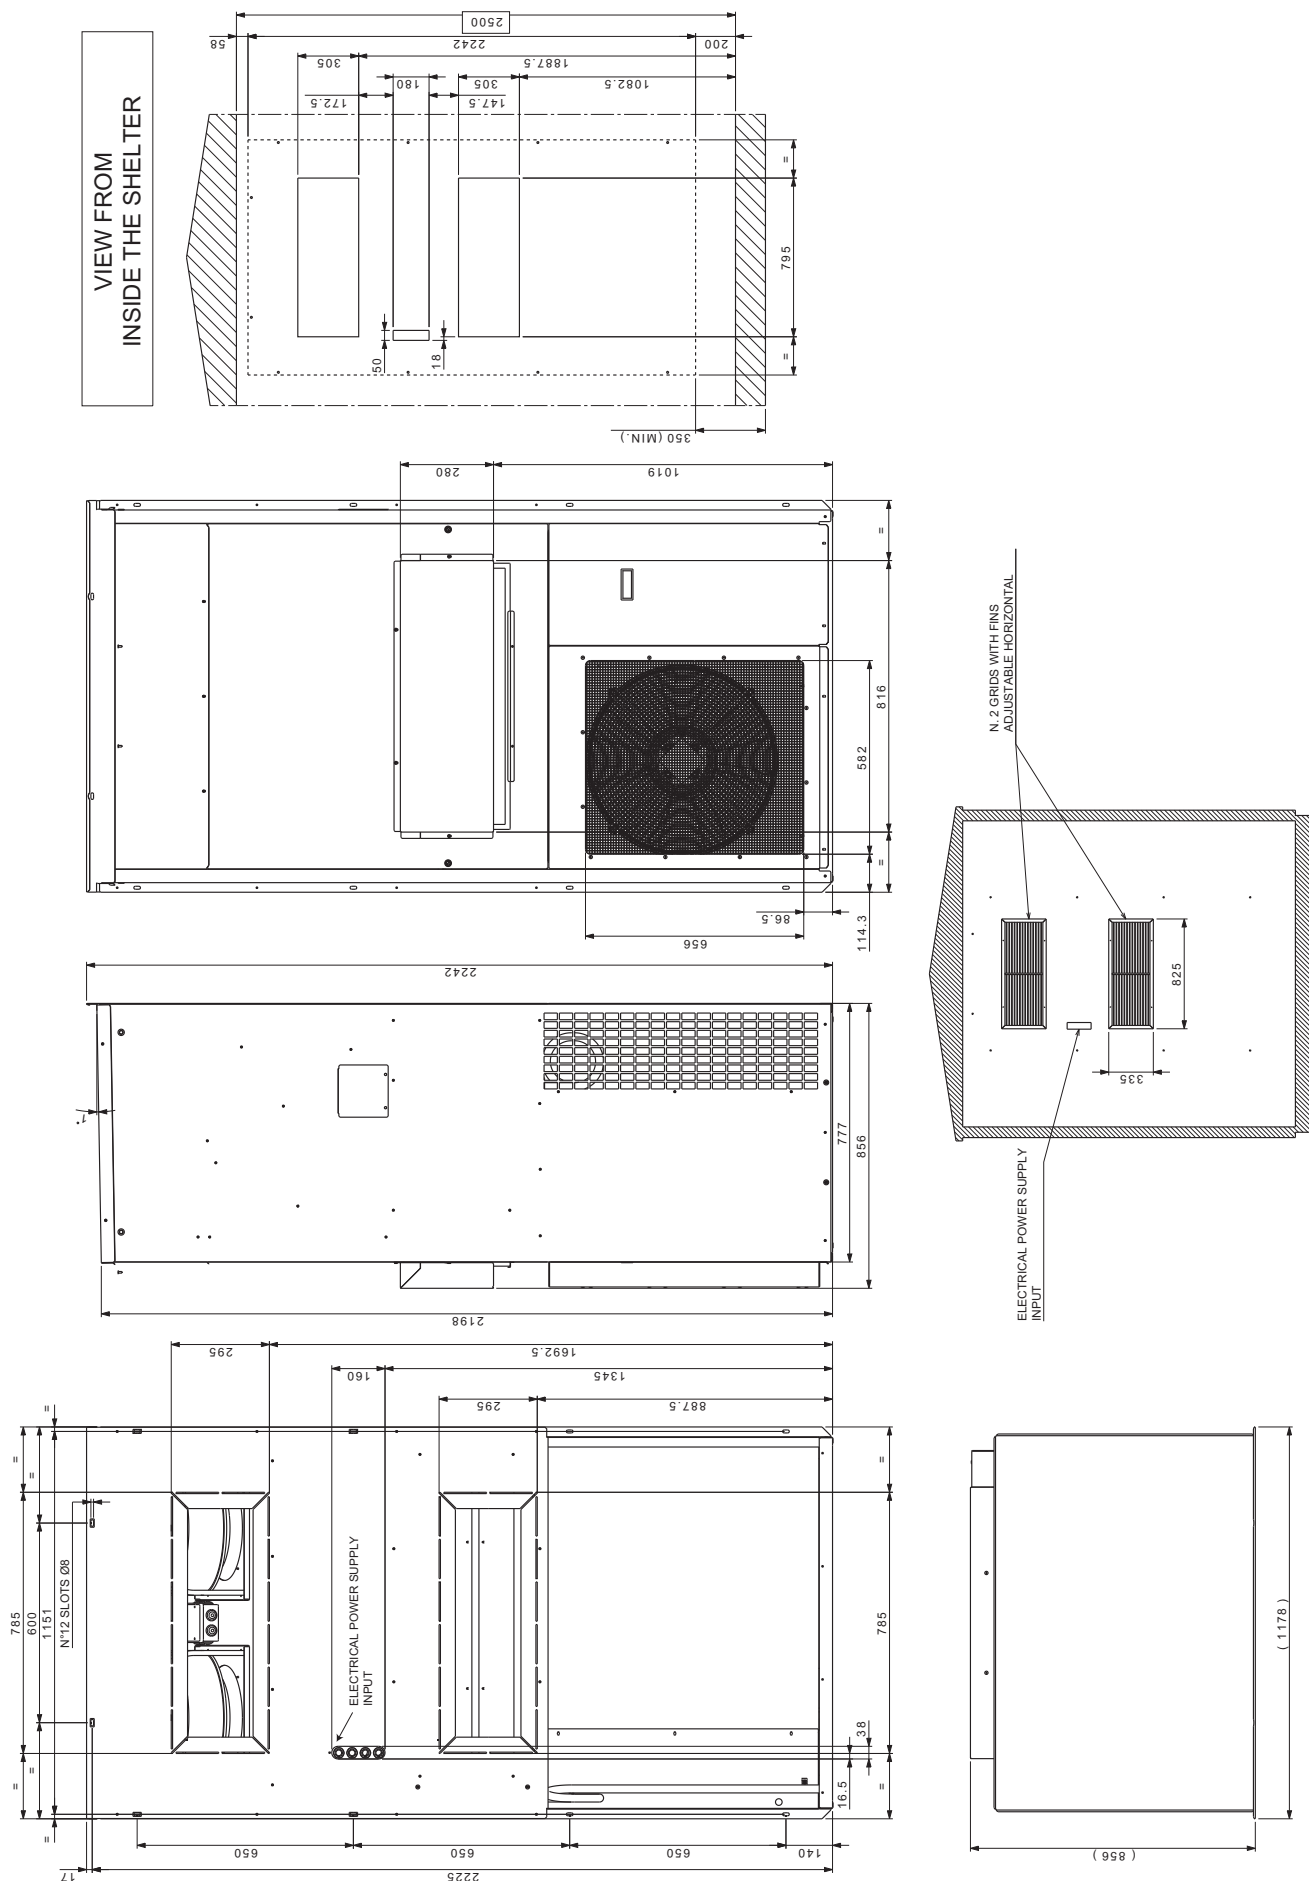


TABLE OF TECHNICAL DATA

Model			0001	0003	0004	0011	0021	0031	0031	0041	0051	0056	0061	0071	0091
N. Circuit(s) / N. Compressor(s)			I/I	I/I	I/I	I/I	I/I	I/I	I/I	I/I	I/I	I/I	I/I	I/I	I/I
Refrigerant			R410A	R410A	R410A	R410A	R410A	R410A	R410A	R410A	R410A	R410A	R410A	R410A	R410A
Power supply V/Ph/Hz			230/1/50						400/3N/50						
COOLING CAPACITY															
Total cooling capacity (I)	kW	1,95	2,91	3,45	4,94	6,36	8,43	8,34	9,72	10,62	14,26	16,8	18,36	20,57	
Sensible cooling capacity (I)	kW	1,42	2,67	2,88	4,94	5,65	6,77	6,73	9,18	9,53	12,54	14,2	14,82	16,56	
SHR (I)		0,73	0,92	0,83	1,00	0,89	0,80	0,81	0,94	0,90	0,88	0,85	0,81	0,81	
Compressor(s) power input (I)	kW	0,6	0,81	0,98	1,18	1,62	2,27	2,26	2,38	2,74	3,41	3,90	4,85	5,61	
Evaporator air flow	mc/h	300	700	700	1450	1450	1600	1600	2450	2450	3200	3500	3500	3900	
Free-cooling air flow	mc/h	300	700	700	1450	1450	1600	1600	2450	2450	3200	3500	3500	3900	
Evaporator fan 48V DC power input	kW	0,03	n.a.	n.a.	0,36	0,36	0,36	0,36	0,54	0,54	0,54	1,08	1,08	1,08	
Evaporator fan AC power input	kW	n.a.	0,15	0,15	0,27	0,27	0,27	0,27	0,49	0,49	0,49	0,98	0,98	0,98	
Condenser max. air flow	mc/h	500	1100	1100	2500	2500	2500	2500	4000	4000	4900	5900	5900	5900	
Condenser fan AC power input	kW	0,15	0,16	0,16	0,16	0,16	0,16	0,16	0,22	0,22	0,75	0,41	0,41	0,41	
Sound pressure level (r=1m, Q=2)	dB(A)	49	52	52	52	52	52	52	54	54	58	62	62	62	
ELECTRIC HEATER															
Total heating capacity	kW	n.a.	1,7	1,7	1,7	1,7	1,7	1,7	3,4	3,4	3,4	3,4	3,4	3,4	
DIMENSIONS & WEIGHT															
Width	OVER	mm	394	n.a.	n.a.	970	970	970	970	1011	1011	1011	1178	1178	1178
	UNDER	mm	n.a.	505	505	976	976	976	976	1016	1016	1016	1196	1196	1196
Depth (2)	OVER	mm	250	n.a.	n.a.	500 (745)	500 (745)	500 (745)	500 (745)	600 (850)	600 (850)	600 (850)	777 (856)	777 (856)	777 (856)
	UNDER	mm	n.a.	394	394	500 (745)	500 (745)	500 (745)	500 (745)	600 (840)	600 (840)	600 (840)	780 (1025)	780 (1025)	780 (1025)
Height	OVER	mm	900	n.a.	n.a.	1814	1814	1814	1814	2115	2115	2115	2240	2240	2240
	UNDER	mm	n.a.	1236	1236	1735	1735	1735	1735	1935	1935	1935	2280	2280	2280
Net weight	OVER	kg	43,5	n.a.	n.a.	160	180	175	175	205	215	220	290	295	300
	UNDER	kg	n.a.	75	75	165	175	170	170	265	270	275	300	310	325

(1) Ref. Conditions: Indoor=27°C, 45%UR Outdoor=35°C

(2) The dimension between () considers rain hood dimension

OPERATING LIMITS

COOLING	Inside temp. DB/WB °C.	Outside temp. DB/WB °C
Max	32/23,5	48/-
Min	22/15,5	-25/-

DB: Dry bulb WB: wet bulb

CALIBRATION OF PROTECTION DEVICES MED 0001-0003-0004-0011	Opens (bar)	Closed (bar)	Reset
High pressure switch	41,5 (+0-1,4)	33(+2)	automatic
Low pressure switch	3 (+0,2)	3,9 (+0,3)	automatic

CALIBRATION OF PROTECTION DEVICES MED 0021÷0091	Opens (bar)	Closed (bar)	Reset
High pressure switch	42 (+0-1,4)	33(+2)	automatic
Low pressure switch	3 (+0,2)	3,9 (+0,3)	automatic

The condensing units leave the factory fully wired. Installation is limited to connection to the mains electrical supply and connection of the remote (ON/OFF) switch, operations that must be carried out by qualified personnel in compliance with current legislation. For all electrical work, refer to the electrical wiring diagrams in this manual.

You are also recommended to check that:

- The characteristics of the mains electricity supply are adequate for the power values indicated in the electrical characteristics table below, also bearing in mind the possible use of other equipment at the same time.



Power to the unit must be turned on only after installation work (refrigerant and electrical) has been completed.

All electrical connections must be carried out by qualified personnel in accordance with legislation in force in the country concerned.

Respect instructions for connecting phase, neutral, earth conductors and the 48VDC polarities. The power line should be fitted upstream with a suitable device to protect against short-circuits and leakage to earth, isolating the installation from other equipment.



Voltage must be within a tolerance of $\pm 10\%$ of the rated power supply voltage for the unit. If these parameters are not respected, contact the electricity supply company.

For electrical connections, use double insulation cable in conformity with current legislation in the country concerned.

Install, if possible near the unit, an appropriate protection device to isolate the unit from the mains supply. This should have a delayed characteristic curve, contact opening of at least 3 mm and an adequate interruption and differential protection capacity.

If this device is not visible from the electrical panel of the unit, it should be lockable

An efficient earth connection is obligatory. Failure to earth the appliance absolves the manufacturer of all liability for damage.

In the case of three phase units, ensure the phases are connected correctly.



Do not use refrigerant pipes to earth the unit. *ra dell'apparecchio. (Used the dedicated clamps)*

ELECTRICAL PANEL

The electrical panel is located inside the unit at the top of the technical compartment where the various components of the refrigerant circuit are also to be found. To access the electrical panel, remove the front panel of the unit by undoing the self-tapping screws. To access the components in the electrical panel and the terminal boards, undo the four screws on the panel itself.

ELECTRICAL WIRING DIAGRAM ON THE MACHINE

Only for the machines with 48VDC power supply:

Must protect the 48VDC power supply with a bipolar thermal Overload switch.


(The negative and even the positive)



POWER INPUT OF THE INDIVIDUAL COMPONENTS

		COMPRESSOR R410A			EVAPORATOR FAN AC power input			EVAPORATOR FAN 48V DC power input			CONDENSER FAN			ELECTRIC HEATER		
Model	Power input	F.L.I.	F.L.A.	L.R.A.	Nr.	F.L.I.	F.L.A.	Nr.	F.L.I.	F.L.A.	Nr.	F.L.I.	F.L.A.	Nr.	F.L.I.	F.L.A.
	V/Ph/Hz	kW	A	A		kW	A		kW	A		kW	A		kW	A
0001	230/1/50	n.a.	n.a.	n.a.	n.a.	n.a.	n.a.	1	0,03	0,8	1	0,15	0,63	1	1,0	4,35
0003	230/1/50	1,0	4,7	18,7	1	0,1	0,5	n.a.	n.a.	n.a.	1	0,2	0,7	1	1,0	4,4
0004	230/1/50	1,5	7,5	24	1	0,1	0,5	n.a.	n.a.	n.a.	1	0,2	0,7	1	1,0	4,4
0011	230/1/50	1,9	8,5	39	1	0,3	1,2	1	0,4	6,2	1	0,2	0,7	1	1,7	7,4
0021	230/1/50	2,7	16,0	58	1	0,3	1,2	1	0,4	6,2	1	0,2	0,7	1	1,7	7,4
0031	230/1/50	3,4	17,1	67	1	0,3	1,2	1	0,4	6,2	1	0,2	0,7	1	1,7	7,4
0031	400/3N/50	3,5	6,0	35	1	0,3	1,2	1	0,4	6,2	1	0,2	0,7	1	1,7	7,4
0041	400/3N/50	3,7	7,0	46	1	0,5	2,4	1	0,5	9,8	1	0,3	1,3	2	3,4	14,8
0051	400/3N/50	4,3	8,0	48	1	0,5	2,4	1	0,5	9,8	1	0,3	1,3	2	3,4	14,8
0056	400/3N/50	5,9	10,0	64	1	0,5	2,4	1	0,5	9,8	1	0,8	3,4	2	3,4	14,8
0061	400/3N/50	5,9	11,8	64	2	1,0	4,7	2	1,1	19,5	1	0,4	1,8	2	3,4	14,8
0071	400/3N/50	7,3	15,0	75	2	1,0	4,7	2	1,1	19,5	1	0,4	1,8	2	3,4	14,8
0091	400/3N/50	8,3	15,0	101	2	1,0	4,7	2	1,1	19,5	1	0,4	1,8	2	3,4	14,8

TOTAL UNIT POWER INPUT MED R410A


		COOLING ONLY, with EVAPORA- TOR FAN AC power input			COOLING ONLY, with EVAPORATOR FAN AC power input and ELECTRIC HEATER		COOLING ONLY, with EVAPORATOR FAN 48V DC power input			COOLING ONLY, with EVAPORATOR FAN 48V DC power input and ELECTRIC HEATER		48V DC POWER SUPPLY (EVAP. FAN + FREE COOLING DAMPER + ELECTRIC BOARD)	
Model	Power input	F.L.I.	F.L.A.	S.A.	F.L.I.	F.L.A.	F.L.I.	F.L.A.	S.A.	F.L.I.	F.L.A.	F.L.I.	F.L.A.
	V/Ph/Hz	kW	A	A	kW	A	kW	A	A	kW	A	kW	A
0001	230/1/50	n.a.	n.a.	n.a.	n.a.	n.a.	1,0	4,6	15,6	1,0	4,4	0,05	1,2
0003	230/1/50	1,2	5,9	19,9	1,1	4,9	n.a.	n.a.	n.a.	n.a.	n.a.	n.a.	n.a.
0004	230/1/50	1,8	8,7	25,2	1,1	4,9	n.a.	n.a.	n.a.	n.a.	n.a.	n.a.	n.a.
0011	230/1/50	2,3	10,4	40,9	2,0	8,6	2,1	9,2	39,7	1,7	7,4	0,4	6,6
0021	230/1/50	3,1	17,9	59,9	2,0	8,6	2,9	16,7	58,7	1,7	7,4	0,4	6,6
0031	230/1/50	3,8	19,0	68,9	2,0	8,6	3,5	17,8	67,7	1,7	7,4	0,4	6,6
0031	400/3N/50	3,9	7,9	36,9	2,0	8,6	3,6	6,7	35,7	1,7	7,4	0,4	6,6
0041	400/3N/50	4,5	10,6	49,6	3,9	17,2	4,0	8,3	47,3	3,4	14,8	0,6	10,2
0051	400/3N/50	5,1	11,6	51,6	3,9	17,2	4,6	9,3	49,3	3,4	14,8	0,6	10,2
0056	400/3N/50	7,1	15,7	69,7	3,9	17,2	6,6	13,4	67,4	3,4	14,8	0,6	10,2
0061	400/3N/50	7,3	18,3	70,5	4,4	19,5	6,3	13,6	65,8	3,4	14,8	1,1	19,9
0071	400/3N/50	8,7	21,5	81,5	4,4	19,5	7,7	16,8	76,8	3,4	14,8	1,1	19,9
0091	400/3N/50	9,7	21,5	107,5	4,4	19,5	8,7	16,8	102,8	3,4	14,8	1,1	19,9

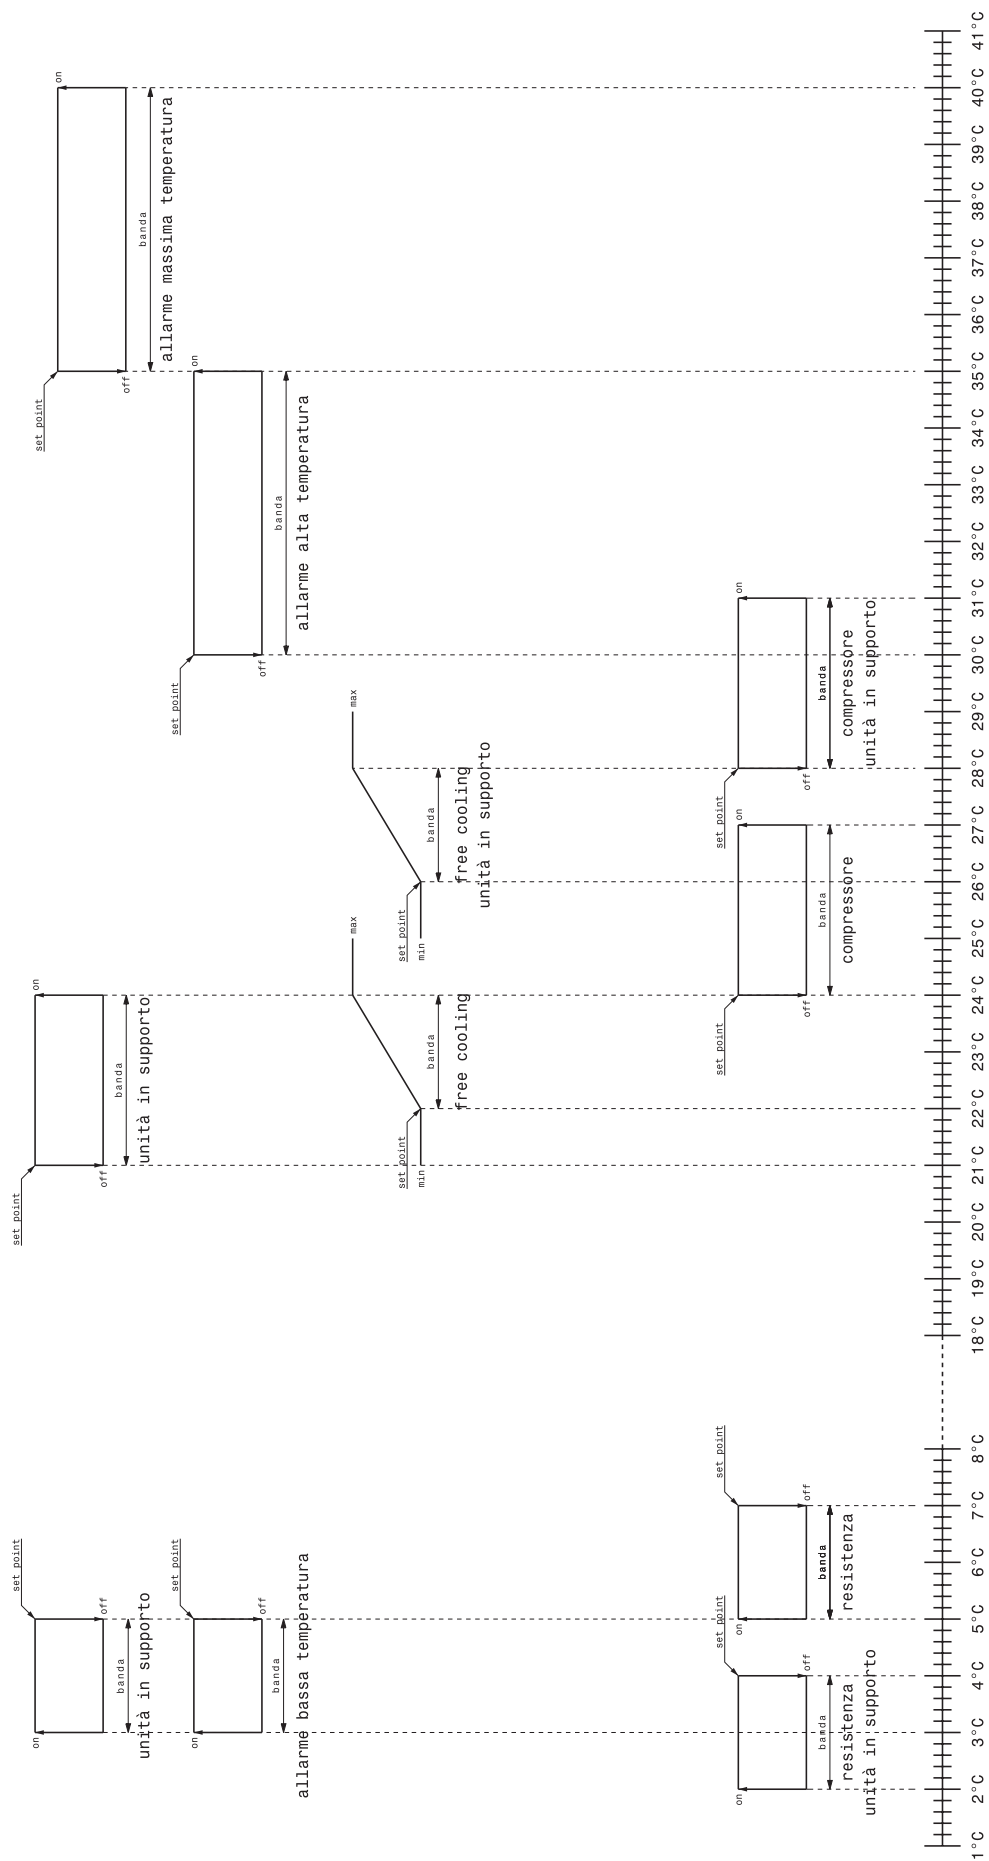

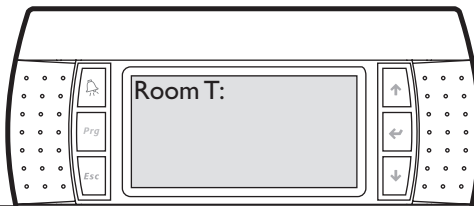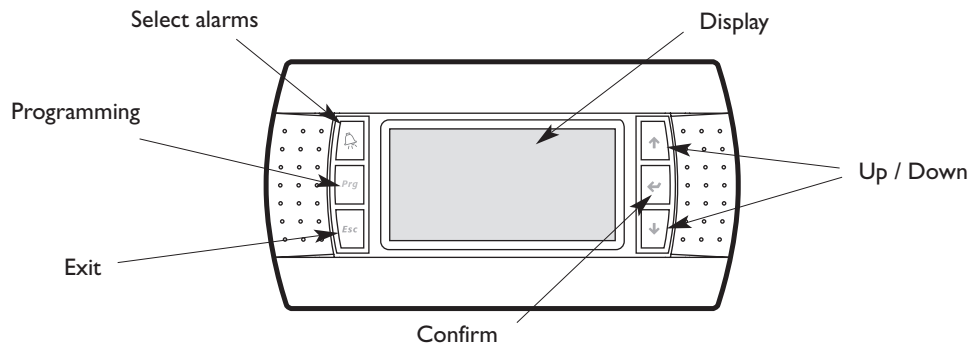

Display

The display shows the main values managed by the unit.

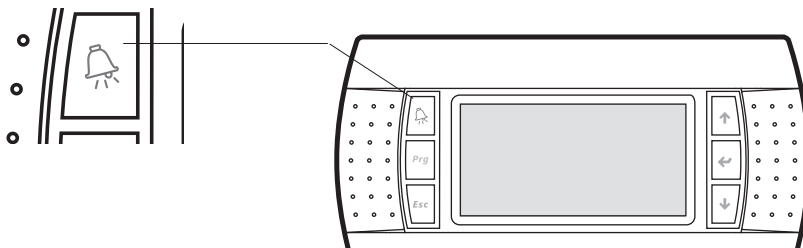


Alarms

Alarms are signalled by the light on the alarm button. Pressing the button displays the details of the causes of alarm.

To reset the alarms, press the alarm button again.

The controller saves up to 100 alarms.

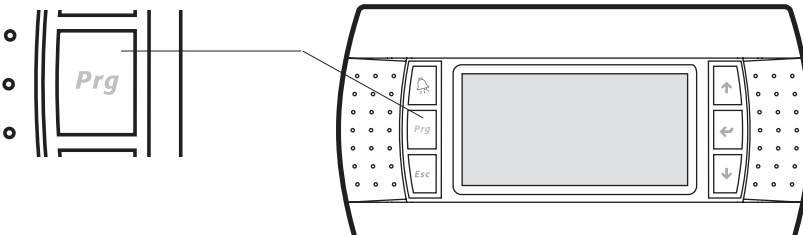

Displaying and setting the unit parameters


Pressing the Prg button and entering the password accesses the menu for setting the parameters.

The operating parameters are sub-divided into the following levels:

- Level 1 (incorrect PSW): general unit status, alarms and graphs.
- Level 2 (user PSW required): USER MENU (0000).
- Level 3 (maintenance PSW required): MAINTENANCE MENU.

FIRST PAGE

Menu structure: the pages in the main loop are scrolled using the UP and DOWN buttons.

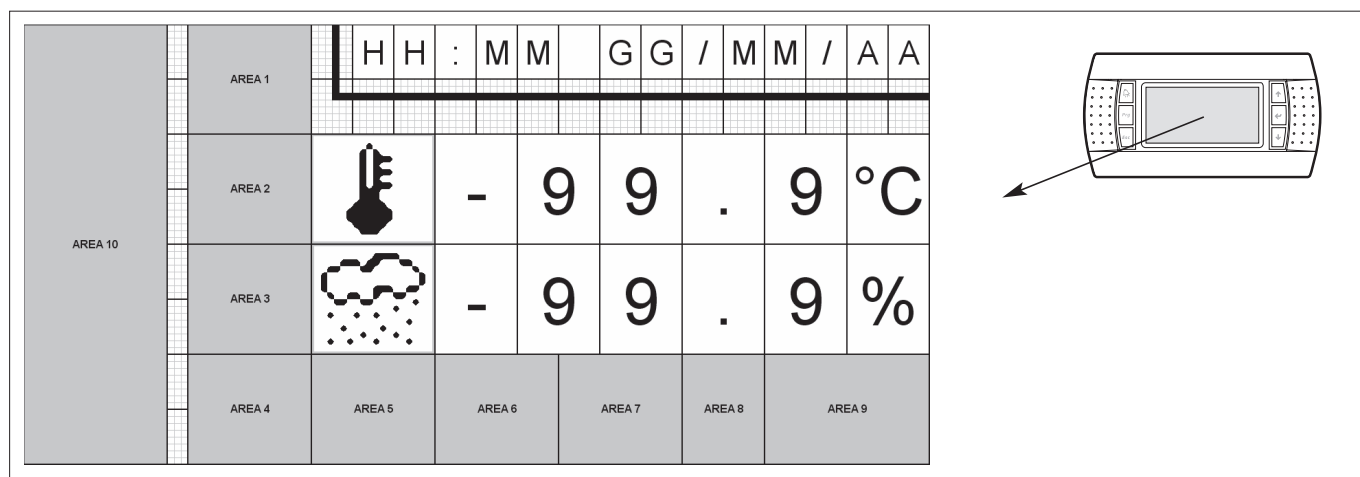

If the clock is fitted and operating, the time and date are displayed.

If an analogue input is configured as the room temperature, this is displayed.

If an analogue input is configured as the room humidity, this is displayed.

AREA 1: this displays the general status of the unit.
















	Unit off		Unit on and fan off		Unit on and fan on
	Unit on and air-conditioner 1 fan active		Unit on and air-conditioner 2 fan active		Unit on and air-conditioner 1 and 2 fan active

AREA 2: this displays the detailed status of the unit.

	Active alarm		Maintenance signal		Manual controls active
	Unit off from keypad		Unit off from digital input		Unit off from time bands
	Unit off from supervisor		Unit in emergency mode		Unit in night mode
	Unit on in LAN due to high room temperature		Unit on in LAN due to low room temperature		Unit awaiting LAN
	Unit on in LAN				

AREA 3: this displays an icon that, in the event of an alarm or a maintenance signal, indicates the type of alarm or the device that requires maintenance respectively.





	Configuration alarm		Fire/smoke/flood alarm		Fire/smoke alarm
	Flood alarm		Outlet fan flow alarm		Outlet fan thermal overload alarm
	Blackout /incorrect phase sequence alarm		High pressure alarm from digital input/analogue input		Low pressure alarm
	Compressor alarm on air-conditioner 1 and 2		Compressor alarm on air-conditioner 2		Compressor alarm on air-conditioner 1
	Condenser fan thermal overload alarm		Heater alarm		Blocked filter alarm
	Damper alarm		EPROM alarm		Room temperature probe alarm
	Outside temperature probe alarm		Outlet temperature probe alarm		Room humidity probe alarm
	Condensing pressure probe alarm		LAN disconnected alarm		Maximum room temperature alarm

	High room temperature alarm		Low room temperature alarm		High room humidity alarm
	Low room humidity alarm		Room thermostat alarm	AUX	Auxiliary alarm
	Clock alarm		Compressor maintenance		Outlet fan maintenance
	Condenser fan maintenance		Compressor maintenance, air-conditioner 1 and 2		Compressor maintenance, air-conditioner 2
	Compressor maintenance, air-conditioner 1		Outlet fan maintenance air-conditioner 1 and 2		Outlet fan maintenance, air-conditioner 2
	Outlet fan maintenance, air-conditioner 1				





AREA 4: this displays the unit operating mode, heating or cooling, if the outlet fan temperature control function is enabled.

	Unit in cooling mode		Unit in heating mode		Fan temperature control not active
-----------------------------------------------------------------------------------	----------------------	-----------------------------------------------------------------------------------	----------------------	--	------------------------------------



AREA 5: all the devices currently operating are displayed.

	Compressor active		Air-conditioner 1 compressor active		Air-conditioner 2 compressor active
	Air-conditioner 1 and 2 compressor active				

AREA 6: all the devices currently operating are displayed.

	Heater active		Air-conditioner 1 heater active		Air-conditioner 2 heater active.
	Air-conditioner 1 and 2 heaters active				



AREA 7: all the devices currently operating are displayed.

	Dehumidification active		Emergency fan active		
-------------------------------------------------------------------------------------	-------------------------	-------------------------------------------------------------------------------------	----------------------	--	--









AREA 8: this displays the Unit LAN address.

LAN 1	Unit LAN address				
-------	------------------	--	--	--	--

AREA 9: if the ON/OFF from keypad option is enabled, this displays the corresponding icon.






	Press ENTER for 5 seconds to switch the unit off		Press ENTER for 5 seconds to switch the unit on		
-------------------------------------------------------------------------------------	--------------------------------------------------	-------------------------------------------------------------------------------------	-------------------------------------------------	--	--

AREA 10: this displays the layout of the unit.

	Packaged unit without freecooling		Packaged unit with freecooling closed, inside air recirculation		Packaged unit with freecooling 50%, inside/outside air mixture
	Packaged unit with freecooling open, full outside air		Split unit without freecooling		Split unit with freecooling closed, inside air recirculation
	Split unit with freecooling 50%, inside/outside air mixture		Split unit with freecooling open, full outside air		












SECOND PAGE

This displays the values of the analogue inputs enabled, identified by icons.

	Room air temperature		Outlet air temperature		Outside air temperature
	Room air humidity		Condensing pressure		

THIRD PAGE




This shows the set point and band for all the devices enabled, identified by icons.

	Outlet fan temperature control in cooling		Outlet fan temperature control in heating		Freecooling
	Compressor		Heaters		Dehumidification
	Compressor 1		Compressor 2		Heater 1
	Heater 2		Emergency fan		

FOURTH PAGE

This shows information relating to the software and hardware.



NOTE:

LANGUAGE SETTING		Press both bottom at the same time, then select your own language		
TO CHANGE THE DISPLAY CONTRAST		Press at the same time		To adjust (up or down) the contrast

DISPLAY SCREENS


MAIN LOOP

FIRST PAGE

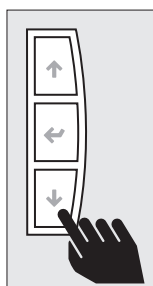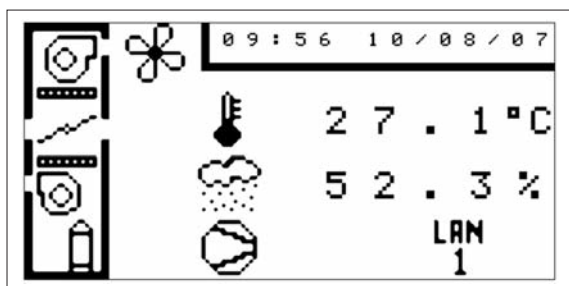


Press the ↓ button displays the following status screens in sequence.


SECOND PAGE

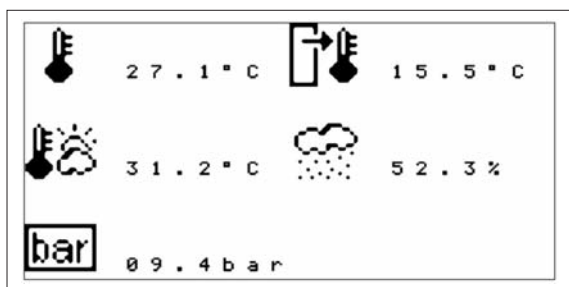

THIRD PAGE


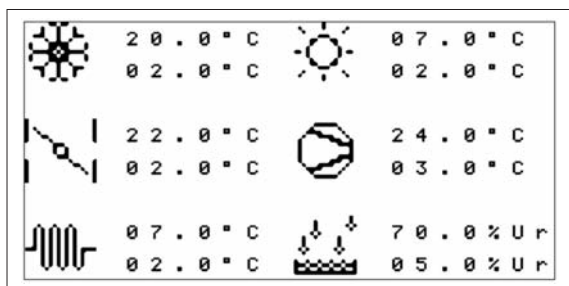


1 unit controlled by the electrical panel controller

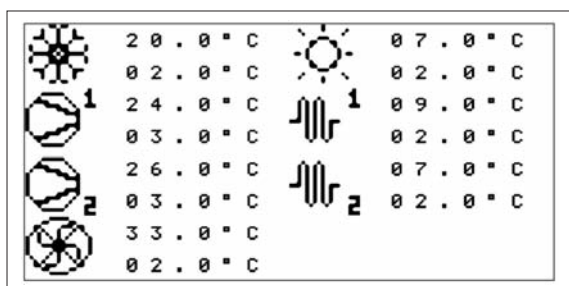



2 units controlled by the electrical panel controller

FOURTH PAGE

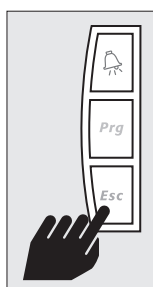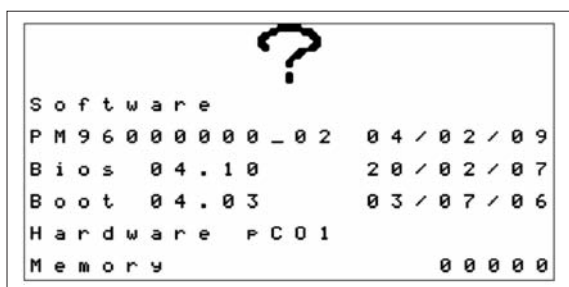

Press the **Esc** button repeatedly to return to the main menu.


PASSWORD ENTRY

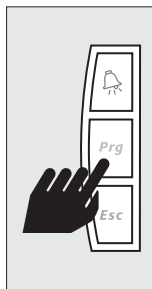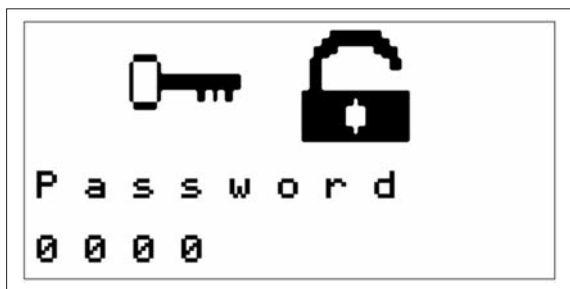


Secondary loop


Pressing the **Prg** button accesses the password entry page. Depending on the password entered, 3 loops of screens may be enabled:

- level 0 - incorrect password;
- level 1 - user password 0000 (modifiable);
- level 2 - maintenance password (modifiable);

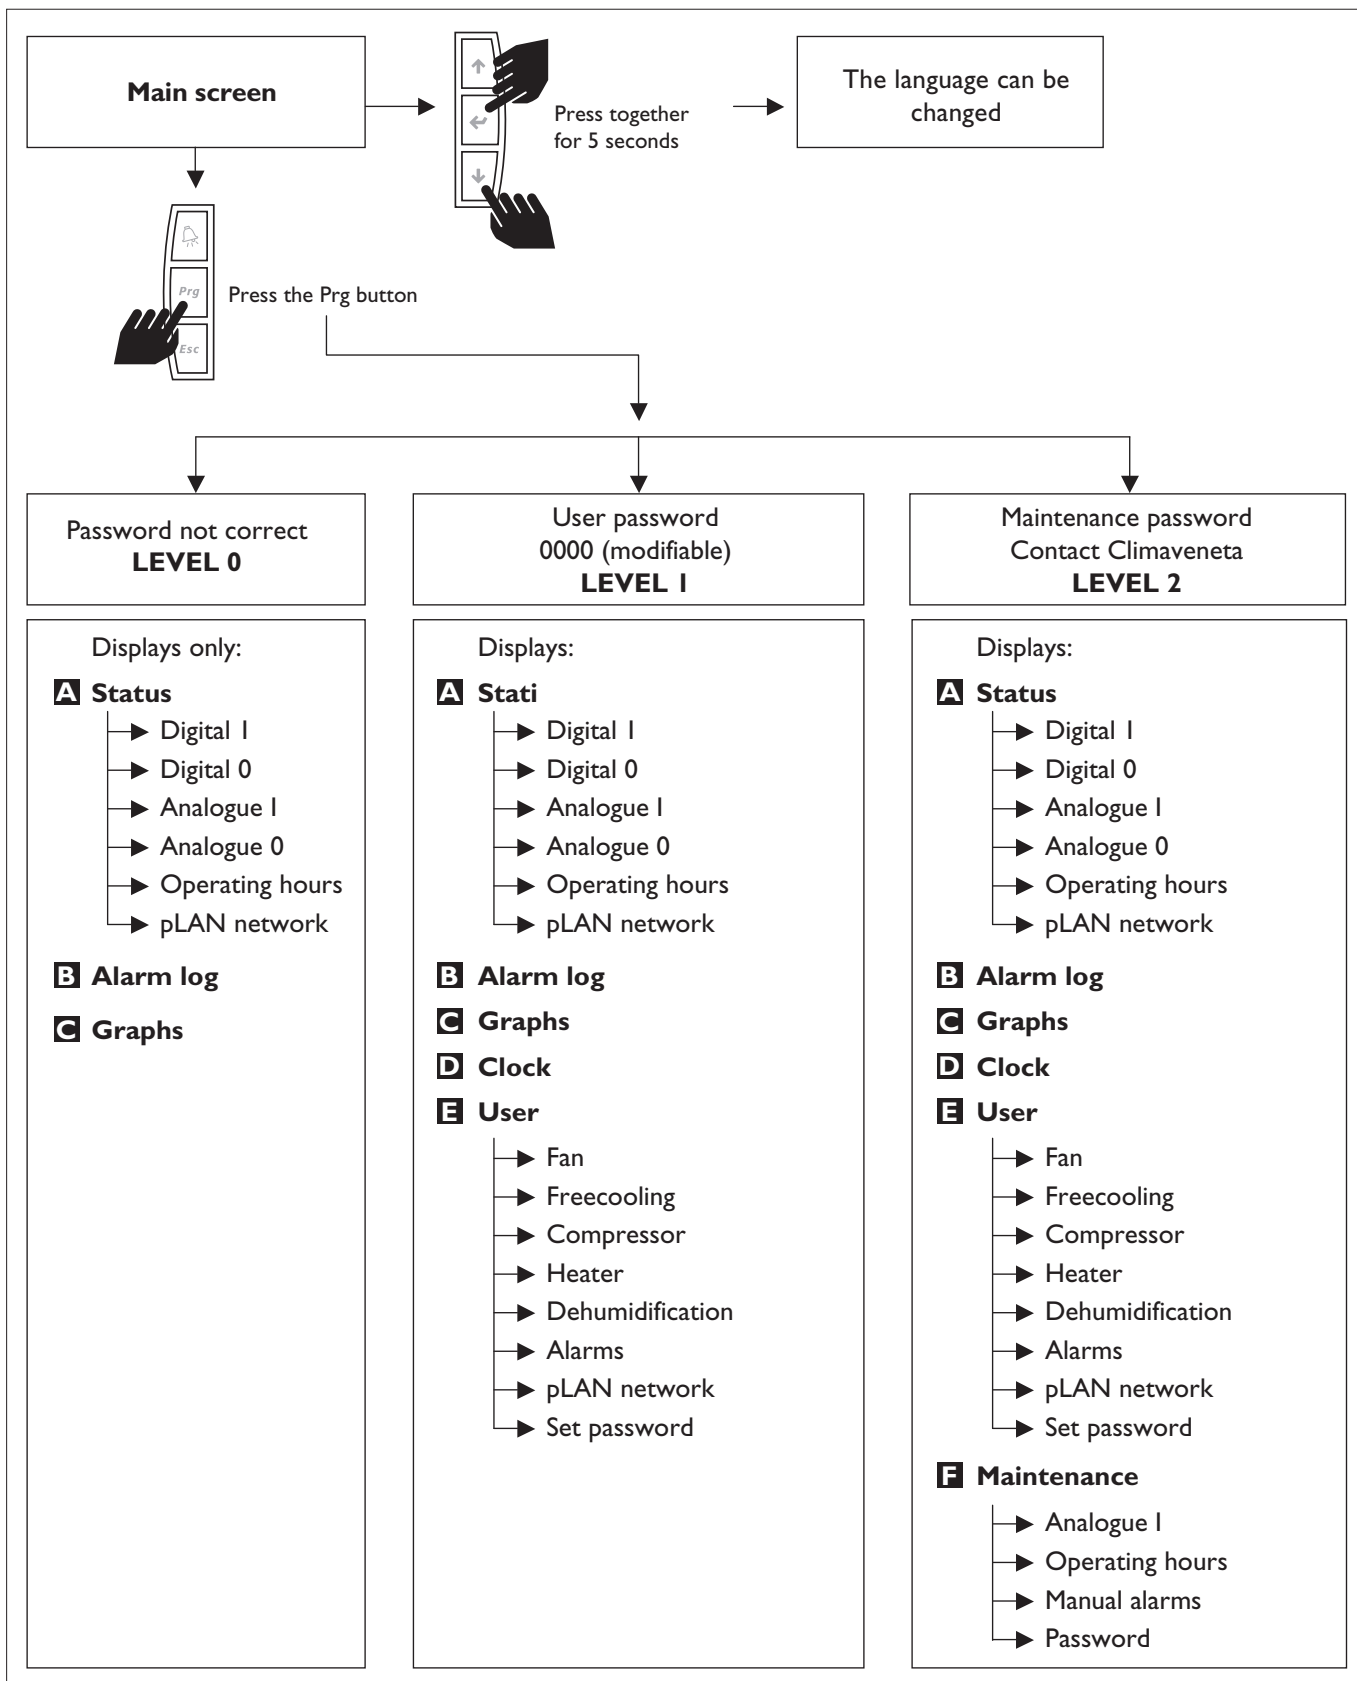


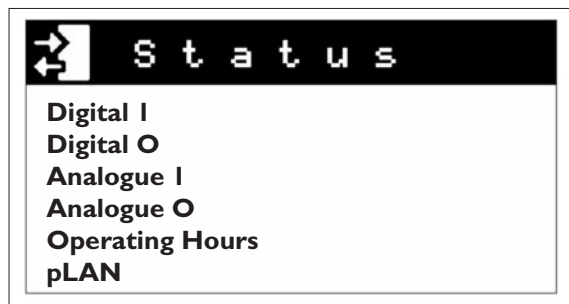A ALARM LOG


The inputs are already configured during production of the unit. Before changing any settings, contact the office.

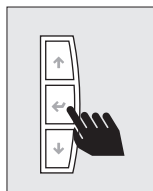


To change the value press ←.

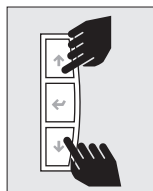

To change the value press ↑ and ↓.

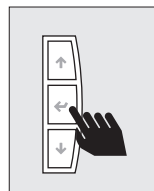


Confirm by pressing ←.

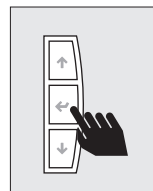


To move to the next row press ←.

STATUS

Digital I	Screen displaying the status of the digital inputs
Digital O	Screen displaying the status of the digital outputs
Analogue I	Screen displaying the status of the analogue inputs
Analogue O	Screen displaying the status of the analogue outputs
Operating hours	Screen displaying the device operating hours
pLAN	Screen displaying the status of the pLAN network

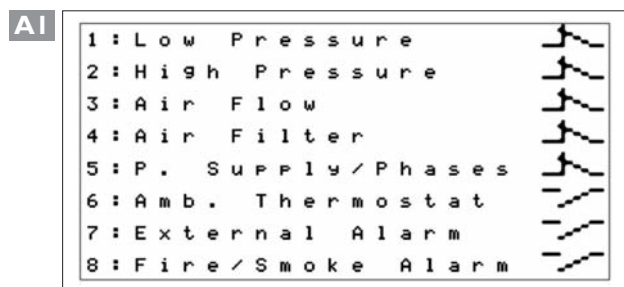Digital I**Possible configurations of the digital inputs**

Value	Description
0	Not used
1	Low pressure switch
2	High pressure switch
3	Outlet fan thermal overload
4	Condenser fan thermal overload
5	Heater thermal overload
6	Outlet fan flow
7	Outlet fan filters blocked
8	230/400Vac power connected and incorrect phase sequence
9	Room thermostat
10	External alarm
11	Fire/smoke alarm
12	Flood alarm
13	Flood and fire/smoke alarm
14	Remote ON/OFF
15	Remote ON impulse
16	Remote OFF impulse
17	Air-conditioner 1 alarm
18	Air-conditioner 2 alarm
19	Air-conditioner 1 compressor on
20	Air-conditioner 2 compressor on
21	Enable freecooling

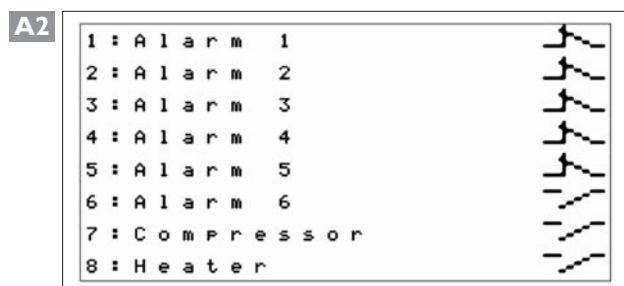DIGITAL O**Possible configurations of the digital outputs**

Value	Description
0	Not used
1	Alarm 1 control
2	Alarm 2 control
3	Alarm 3 control
4	Alarm 4 control
5	Alarm 5 control
6	Alarm 6 control
7	Alarm 7 control
8	Open freecooling damper control
9	Close freecooling damper control
10	Outlet fan control
11	Condenser fan control
12	Compressor control
13	Dehumidification control
14	Electric heater control
15	Compressor status
16	Outlet fan status
17	Freecooling status
18	Heater status
19	Air-conditioner 1 fan control
20	Air-conditioner 2 fan control
21	Air-conditioner 1 compressor control
22	Air-conditioner 2 compressor control
23	Air-conditioner 1 heater control
24	Air-conditioner 2 heater control
25	Unit status

ANALOGUE I

A3

1: Pressure	012.8 bar
2: Humidity	054.2 %Ur
3: T. Room	027.3 °C
4: T. Delivery	018.1 °C
5: T. Ambient	018.3 °C

Pressure
Humidity
Room T.
Outlet T.
Outside T.

ANALOGUE O

A4

1: Open FC	015 %
2: Main Fan	100 %
3: Cond Fan	000 %
4: Not Used	000 %

Open FC
Outlet fan
Cond. fan
Not used

Operating hours

A5

Main Fan	000000 h
Compressor	000000 h
Start Up Compr.	0000
Cond Fan	000000 h
Heater	000000 h
Free Cooling	000000 h

This screen is displayed in systems with:
1 unit controlled by one PLC

A6

Main Fan	1	000000 h
Main Fan	2	000000 h
Compressor	1	000000 h
Compressor	2	000000 h
Start Up Compr.	1	0000
Start Up Compr.	2	0000

This screen is displayed in systems with:
2 units controlled by the same PLC


A7

Heater 1	000000 h
Heater 2	000000 h
Free Cooling	000000 h

This screen is displayed in systems with:
2 units controlled by the same PLC

pLAN network

A8

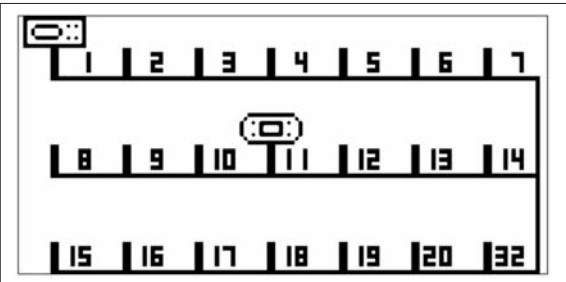

pLAN network status screen

This screen, only active if the LAN is enabled, displays the status of the units connected in the pLAN network. Addresses 1 to 10 are used for controllers, addresses 11 to 20 for private terminals, and address 32 for the shared terminal.


B ALARM LOG



ALARM LOG screen

In this screen this displays the alarm log.
A maximum of 100 events can be saved, once having reached the one hundredth alarm, i.e. the last space available in the memory, the next alarm is saved over the oldest alarm (001), which is deleted, and so on for subsequent.

To scroll the list of logged alarms press \uparrow/\downarrow .

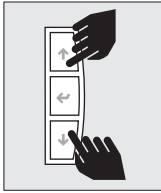


List of alarms

- Reset memory
- AC 1 fan hour threshold
- AC 2 fan hour threshold
- AC 1 comp. hour threshold
- AC 2 comp. hour threshold
- Fan hour threshold
- Compressor hour threshold
- Clock
- Auxiliary
- Room thermostat
- Low humidity
- High humidity
- Low temperature
- High temperature
- Maximum temperature
- pLAN network
- Pressure probe
- Humidity probe
- Outlet temp. probe
- Outside temp. probe
- Room temp. probe
- EPROM
- Freecooling damper
- Dirty filters
- Heater thermal overload
- Fan thermal overload
- AC 1 compressor
- AC 2 compressor
- Low pressure
- High pressure A (Analogue)
- High pressure D (Digital)
- No power
- Fan thermal overload
- No flow
- Flood
- Fire/smoke
- Flood Fire/smoke
- DA CFG (Digital/Analogue configuration)
- AO CFG (Analogue Output configuration)
- DO CFG (Digital Output configuration)
- AI CFG (Analogue Input configuration)
- DI CFG (Digital Input configuration)
- Reset log

C GRAPHS

C1

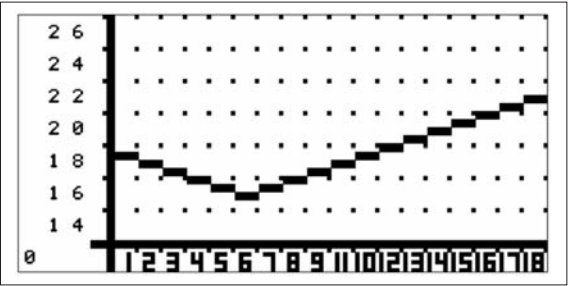

C2

01 ÷ 06			07 ÷ 12			13 ÷ 18		
19.5 °C	17.5 °C	20.5 °C	19.0 °C	18.0 °C	21.0 °C	18.5 °C	18.5 °C	21.5 °C
18.0 °C	19.0 °C	22.0 °C	17.5 °C	19.5 °C	22.5 °C	17.0 °C	20.0 °C	23.0 °C


GRAPHS screens

The first screen displays a graph showing the trend in room air temperature, the screen is enabled if an analogue input is configured as the room air temperature reading.


Note: The second screen displays the logged values (temperature only)

LEVEL I


- Status
- Alarm log
- Graphs
- Clock

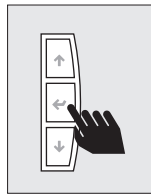


To change the value press ←.

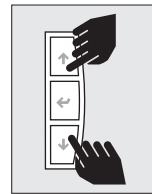

To change the value press ↑ and ↓.

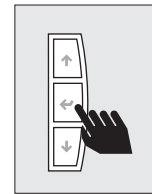


Confirm by pressing ←.

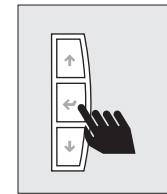

To move to the next row press ←.


D CLOCK

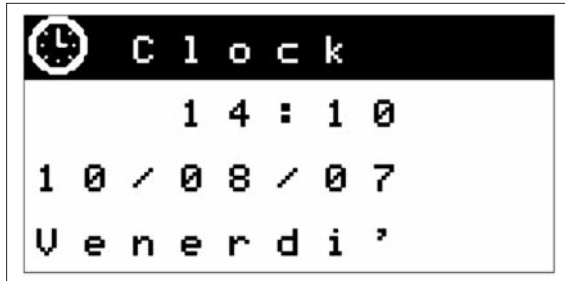

CLOCK screen

This screen is used to set the time and date.

E USER

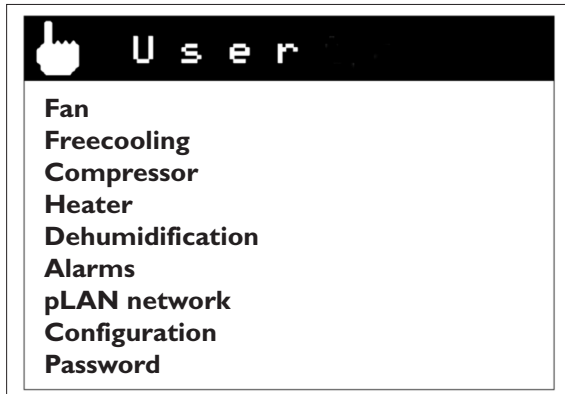

The set points for all the resources can be set in the USER level.

USER

Fan	Screens for setting the main fan operating parameters
Freecooling	Screens for setting the freecooling operating parameters
Compressor	Screen for setting the compressor operating parameters
Heater	Screen for setting the heater operating parameters
Dehumidification	Screen for setting the dehumidification operating parameters
Alarms	Screens for setting the alarm parameters
pLAN network	Screen for setting the pLAN network parameters
Configuration	Screen for setting the configuration parameters
Password	Screen for setting the level I password

The loops of screens are displayed if the corresponding devices are enabled.

Fan

E1

Termoregulation	Yes
Cooling Set	20.0°C
Cooling Band	02.0°C
Heating Set	07.0°C
Heating Band	02.0°C
Regulation Type	P+I
Integr. Time	0600sec

Fan digital control

Temperature control: with temperature control the fan switches on and off depending on the value of the heating and cooling set point.
YES / NO

Cooling set point: used to set the cooling set point temperature.

Cooling band: used to set the band in cooling mode.

Heating set point: used to set the heating set point temperature.

Heating band: used to set the band in heating mode.

P+I control: used to choose between proportional or proportional-integral control (in the latter control depends on the time set).

Integral time: used to set the time for proportional-integral control.

E2

Termoregulation	Yes
Modulation	Yes
Cooling Set	20.0°C
Cooling Band	02.0°C
Cooling Cut-Off	01.0°C
Heating Set	07.0°C
Heating Band	02.0°C
Heating Cut-Off	01.0°C

Fan analogue control

Temperature control: with temperature control the fan switches on and off depending on the value of the heating and cooling set point.
YES / NO

Modulation: enables modulating operation of the fan. YES / NO

Cooling set point: used to set the cooling set point temperature.

Cooling band: used to set the band in cooling mode.

Cooling cut-off: used to set the temperature in the shut-down phase in cooling mode.

Heating set point: used to set the heating set point temperature.

Heating band: used to set the band in heating mode.

Heating cut-off: used to set the temperature in the shut-down phase in heating mode.

E3

```

Recirculation      100%
Compressor         100%
Heater             100%
Free Cooling       100%
Dehumidify        Yes 050%
Regulation Type    P+I
Integr. Time       0600sec
Start-Up Time      02sec

```

Fan non-modulating analogue control

If selecting modulating NO this screen is displayed with the fixed parameters.

E4

```

Min. Cooling       030%
Max. Cooling       100%
Min. Heating       030%
Max. Heating       100%
Dehumidify        Yes 050%
Start-Up Time      00sec
Regulation Type    P+I
Integr. Time       0600sec

```

Fan modulating analogue control

If selecting modulating YES this screen is displayed with the values that can be set for the fan.

Minimum cooling: used to set the minimum fan speed in cooling mode.
Maximum cooling: used to set the maximum fan speed in cooling mode.
Minimum heating: used to set the minimum fan speed in heating mode.
Maximum heating: used to set the maximum fan speed in heating mode.
Dehumidification: enables the dehumidification function.
Start-up time: used to set the delay in starting the fan.
P+I control: used to choose between proportional or proportional-integral control (in the latter control depends on the time set).
Integral time: used to set the time for proportional-integral control.

E5

```

ON-OFF Fan Cicles Yes
ON Fan             00060sec
OFF Fan            00900sec

```

Sniffing: allows of switch on / turn off the fan per a time determined.
Fan ON: used to set the fan on time.
Fan OFF: used to set the fan off time.

E6

```

Air Conditioner 1 - 2
Rotation Time Hours 24
Rotation Test      No

```

This screen is displayed in systems with:
2 units controlled by the controller

Rotation hours: used to set the hours for master and slave rotation.
Rotation test: used to set the minutes to test the operation of master / slave rotation

Freecooling

E7

```

Set Point          22.0°C
Band               02.0°C
Min.               000%
Max.               100%
Regulation Type    P+I
Integr. Time       0600sec
Modulation FC      Yes

```

Page 1

Set point: used to set the temperature per the opening of the freecooling damper.
Band: used to set the band.
Minimum: used to set the minimum damper opening.
Maximum: used to set the maximum damper opening.
P+I control: used to choose between proportional or proportional-integral control (in the latter control depends on the time set).
Integral time: used to set the time for proportional-integral control
FC Modulating: used to set the damper in modulating mode. YES / NO

E8

```

Delta In/Out       03.0°C
Band DT            01.0°C
FC With Compressor No
Delay              0180sec
Delivery Limit     Yes
Min. Temp.         14.0°C
Band               04.0°C

```

Page 2

In/out delta: used to set the delta between the inside temperature and the outside temperature for opening the freecooling damper
DT band: used to set the band for opening the freecooling damper.
FC with compressor: allows simultaneous operation of freecooling and the compressor. YES / NO
Delay: used to set a delay for opening the freecooling damper.
Outlet limit: enables a limit to ensure too much cool air is not introduced into the site. YES / NO
Minimum temp.: used to set the minimum inlet temperature via the freecooling damper.
Band: used to set the band for the minimum temp.

E9

```

Emergency Mode      Yes
Set Point           31.0 °C
Band                01.0 °C
Delta T             01.0 °C
Band DT             00.5 °C
FC With Compressor Yes
Compressor Alarm    Yes

```

Page 3

Emergency mode: enables the freecooling damper in the event of emergencies. YES / NO

Set point: used to set the temperature for activating emergency mode.

Band: used to set the set point band.

Delta T: used to set the temperature delta in emergency mode.

DT band: used to set the temperature delta band in emergency mode.

FC with compressor: allows simultaneous operation of freecooling and the compressor in emergency mode. YES / NO

Compressor alarm: allows freecooling operation if the compressor alarm is activated. YES / NO

Compressor

E10

```

Set Point           24.0 °C
Band                03.0 °C

```

This screen is displayed in systems with:
1 unit controlled by one PLC

Set point: used to set the set point for activating the compressor.

Band: used to set the band for activating the compressor.

E11

```

Set Point CDZ 1     24.0 °C
Band    CDZ 1       03.0 °C
Set Point CDZ 2     26.0 °C
Band    CDZ 2       03.0 °C

```

This screen is displayed in systems with:
2 units controlled by the same PLC

Set point AC 1: used to set the set point for activating the compressor relating to the 1st air-conditioner.

Band: used to set the band of start-up of the compressor.

Set point AC 2: used to set the set point for activating the compressor relating to the 2nd air-conditioner.

Band: used to set the band for activating the compressor.

Heater

E12

```

Set Point           07.0 °C
Band                02.0 °C

```

This screen is displayed in systems with:
1 unit controlled by one PLC

Set point AC 1: used to set the set point for activating the heater.

Band: used to set the band for activating the heater.

E13

```

Set Point CDZ 1     07.0 °C
Band    CDZ 1       02.0 °C
Set Point CDZ 2     05.0 °C
Band    CDZ 2       02.0 °C

```

This screen is displayed in systems with:
2 units controlled by the same PLC

Set point AC 1: used to set the set point for activating the heater relating to the 1st air-conditioner.

Band: used to set the band for activating the heater.

Set point AC 2: used to set the set point for activating the heater relating to the 2nd air-conditioner.

Band: used to set the band for activating the heater.

Dehumidification

E14

```

Abilitation          Yes
Set Point            70.0 %Ur
Band                05.0 %Ur
Temp. Limit          10.0 °C
Temp. Band           02.0 °C
Abilit. Limit FC     Yes
FC Limit             70.0 %Ur
FC Limit Band        05.0 %Ur

```

Enable: enables the dehumidification function. YES / NO

Set point: used to set the set point for operation of the dehumidifier.

Band: used to set the band for operation of the dehumidifier.

Temp. limit: used to set the minimum temperature limit, for operation of the dehumidifier.

Temp. band: used to set the band for the operating temperature limit.

Enable FC limit: enables the humidity limit for activating the freecooling damper. YES / NO

FC limit: used to set the humidity limit for activating freecooling.

FC limit band: used to set the humidity limit band for activating freecooling.

Alarms

E15

High Temp.	30.0 °C
Band	05.0 °C
Max. Temp.	35.0 °C
Band	05.0 °C
Low Temp.	05.0 °C
Band	02.0 °C

Used to set the alarm set points.
The set points are pre-set in the factory.

E16

High Humid.	75.0 %Ur
Band	05.0 %Ur
Low Humid.	25.0 %Ur
Band	05.0 %Ur

E17

Alarm 1 Command		
01: No	02: No	03: No
04: No	05: No	06: No
07: No	08: No	09: No
10: No	11: No	12: No
13: No	14: No	15: No

This screen is displayed in systems with:
1 unit controlled by one PLC

Page 1

Used to configure the alarm signals (from 1 to 7, depending on the controller and configuration).


The user can select which alarms activate the alarm signal output.

E18

Alarm 1 Command		
16: No	17: No	18: No
19: No	20: No	21: No
22: No	23: No	24: No
25: No	26: No	27: No
28: No	29: No	30: No

Page 2

E19

Alarm 1 Command		
31: No	32: No	33: No
34: No	35: No	36: No
37: No	38: No	39: No
40: No	41: No	42: No
Status NC / NO 		

Page 3

E20

Alarms	Actions	N° 2	C D Z
01: 0	02: 0	03: 0	
04: 0	05: 0	06: 0	
07: 0	08: 0	09: 0	
10: 0	11: 0	12: 0	
14: 0	15: 0	16: 0	
17: 0	18: 0	19: 0	
20: 0	20: 0	21: 0	

This screen is displayed in systems with:
2 units controlled by one PLC.

Page 1

Each alarm can be configured to perform an action on the system.

0 No action

1 Add unit to network.

2 Switch unit off and switch on another in the network.

3 Switch off all the units in the network

E21

Alarms	Actions	N° 2	C D Z
22: 0	23: 0	24: 0	
25: 0	26: 0	27: 0	
28: 0	29: 0	30: 0	
31: 0	32: 0	33: 0	
34: 0	35: 0	36: 0	
37: 0	38: 0	39: 0	
40: 0	41: 0	42: 0	

Page 2

Note: When an alarm is activated, the main screen shows the alarm symbol (page 14-15) in area 3; pressing the ALARM button opens the alarm display screens and the audible alarm sounds; if more than one alarm is active, these can be scrolled using the UP and DOWN buttons. Pressing the ALARM button on one of the alarm display screens resets all the alarms; if the alarms are still active, the audible alarm sounds again.

pLAN network

E22

```

P L A N   A b i l i t a t i o n       Y e s
N °   U n i t s   P L A N             0 2
M e d i u m   T e m p e r a t u r e   N o
N °   U n i t s   i n   S T B Y       1
R o t a t i o n   T i m e   H o u r s   2 4
R o t a t i o n   T e s t             N o
  
```

The network can have a maximum of 10 units and 11 terminals, one of which shared. Unit operation in the LAN network is configured on unit 01.

Page 1

Enable LAN: enables the LAN function. YES / NO

No. of units in LAN: used to set how many units are connected to the LAN.

Average temperature: this function allows temperature control on the individual units using the average temperature measured by the active units connected to the pLAN. YES / NO

No. of units in STBY: sets how many units are in Standby.

Rotation hours: this function is used to balance the operating hours of the units connected in a pLAN network. Rotation is performed based on the set time, expressed in hours, activating the unit with the lowest address first. A maximum of 2 units can be set in standby if there are more than 4 units connected in the pLAN network.

Rotation test: runs the test to verify the exact operation of the rotation function.

E23

```

P L A N   S U P P O R T               Y e s
C o o l i n g   S e t                 2 1 . 0 ° C
C o o l i n g   B a n d               0 3 . 0 ° C
C o o l i n g   S e t   D             0 5 . 0 ° C
H e a t i n g   S e t                 0 5 . 0 ° C
H e a t i n g   B a n d               0 2 . 0 ° C
H e a t i n g   S e t   D             0 2 . 0 ° C
  
```

Pag. 2

Used to set the pLAN Support set points.

E24

```

P L A N   A L A R M   A C T I O N S
0 1 0   0 2 0   0 3 0
0 4 0   0 5 0   0 6 0
0 7 0   0 8 0   0 9 0
1 0 0   1 1 0   1 2 0
1 3 0   1 4 0   1 5 0
1 6 0   1 7 0   1 8 0
1 9 0   2 0 0   2 1 0
  
```

E25

```

P L A N   A L A R M   A C T I O N S
2 2 0   2 3 0   2 4 0
2 5 0   2 6 0   2 7 0
2 8 0   2 9 0   3 0 0
3 1 0   3 2 0   3 3 0
3 4 0   3 5 0   3 6 0
3 7 0   3 8 0   3 9 0
4 0 0   4 1 0   4 2 0
  
```

Page 3

Each alarm can be configured to perform an action on the LAN.

0. No action
1. Add unit to network.
2. Switch unit off and switch on another in the network.
3. Switch off all the units in the network.

Page 4

See the paragraph on “LAN - local network”

Configuration

E26

```

O N / O F F   K e y b o a r d       N o
T i m e   B a n d                   Y e s
S t a r t                               2 2 : 0 0
E n d                               0 7 : 0 0
S u p e r v i s i o n               Y e s
A d d r e s s                       0 0 1
B a u d   R a t e                   1 9 2 0 0 b p s
P r o t o c o l                     M o d b u s
  
```

Page 1

ON/ OFF keypad: enabling this function means the unit can be switched on and off by pressing the ENTER button for 5 seconds on the main screen. YES / NO

Time bands: enabling this function means the unit can be switched on and off based on time bands.

Start: used to set the time the unit starts operating.

End: used to set the time the unit stops operating.

Supervision: enabling this function allows the unit to be managed by a supervisor, fitting an optional board.

Address: used to set the address for the supervisor.

Speed: selects the communication baud rate.

Protocol: selects the communication protocol.

Modbus/Carel/Lon

E27

```

N i g h t   F u n c t i o n         Y e s
S t a r t                               2 1 : 0 0
E n d                               0 8 : 0 0
C o m p r e s s o r   S e t          2 6 . 0 ° C
M F   R e d u c t i o n              0 5 0 %
M F   C o o l i n g   S e t          2 4 . 0 ° C
M F   H e a t i n g   S e t          0 3 . 0 ° C
U C   R e d u c t i o n              0 5 0 %
  
```

Page 2

Night function: by enabling this function, in specific time bands a different set point can be set for the fan and the compressor, plus a reduced outlet fan speed. YES / NO

Start: used to set the Night function start time.

End: used to set the Night function end time.

Compressor set: used to set the compressor set point for the night function.

Out fan reduction: used to reduce the outlet fan speed for the night function.

Cooling set point: used to set the cooling set point for the night function.

Heating set point: used to set the heating set point for the night function.


Cond.fan reduction: used to reduce the condenser fan speed for the night function.

Password

E28

```


P a s s w o r d
L e v e l   1
0 0 0 0
  
```




Screen for setting the level 1 password

LEVEL 2


- Status
- Alarm log
- Graphs
- Clock
- User

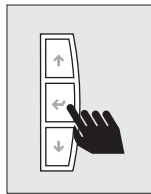


To change the value press ←.

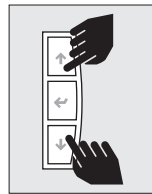

To change the value press ↑ and ↓.

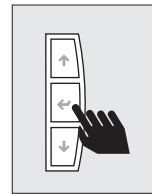

Confirm by pressing ←.

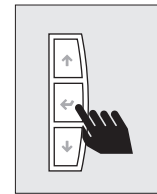

To move to the next row press ←.

F MAINTENANCE



MAINTENANCE

Analogue I	Screens for calibrating the analogue inputs.
Operating hours	Screen to reset the device operating hours.
Alarms	Screens for setting the alarm and log reset modes.
Manual	Screens for activating manual mode and probe simulation.
Password	Screen for setting the level 2 password.

The loops of screens are displayed if the corresponding devices are enabled.

Analogue I

F1

```
1: Pressure
Cal. 0.0 Val. 012.0 bar
2: Humidity
Cal. 0.0 Val. 054.2 %Ur
3: Room Temperature
Cal. 0.0 Val. 027.2 °C
4: Delivery Temperature
Cal. 0.0 Val. 018.0 °C
```

Page 1

Analogue input calibration

F2

```
5: Ambient Temperature
Cal. 0.0 Val. 017.5 °C
```

Page 2

Operating hours

F3

```
MF Hours Reset No
Compr. Hours Reset No
Start-Up C. Reset No
CF Hours Reset No
Heater Hours Reset No
FC Hours Reset No
```

This screen is displayed in systems with 1 unit controlled by one PLC

Used the reset the various operating hours YES / NO.

F4

```
MF 1 Hours Reset No
MF 2 Hours Reset No
Comp. 1 Hours Reset No
Comp. 2 Hours Reset No
Start-Up C. 1 Reset No
Start-Up C. 2 Reset No
```

This screen is displayed in systems with: 2 units controlled by the same PLC

Page 1

Used the reset the various operating hours YES / NO.

F5

```

Heat.1 Hours Reset No
Heat.2 Hours Reset No
FC Hours Reset      No

```

Page 2

Alarms

F6

```

Reset Mode

01:Man.02:Man.03:Man.
04:Man.05:Man.06:Man.
07:Man.08:Man.09:Man.
10:Man.11:Man.12:Man.
13:Man.14:Man.15:Man.

```

Each alarm can be set as manual or automatic reset; the MAINTENANCE LOOP, ALARM screens feature the corresponding parameters.

For alarms with automatic reset, the display on the main screen disappears when the alarm is not longer active, however the alarm display screens and buzzer remain active until the alarm is reset by pressing the ALARM button.

F7

```

Reset Mode

16:Man.17:Man.18:Man.
19:Man.20:Man.21:Man.
22:Man.23:Man.24:Man.
25:Man.26:Man.27:Man.
28:Man.29:Man.30:Man.

```

F8

```

Reset Mode

31:Man.32:Man.33:Man.
34:Man.35:Man.36:Man.
37:Man.38:Man.39:Man.
40:Man.41:Man.42:Man.

History Reset      No

```

Manual

F9

```

Manual          Yes
Main Fan        000%
Compressor      No
Condensing Fan  000%
Free Cooling    000%
Deumidify       No
Heater          No

```

This screen is displayed in systems with:
1 unit controlled by one PLC

In manual mode, the devices can be activated independently of the control functions, while the safety features are still active. Manual mode can last a maximum of 30 minutes.

F10

```

Manual          Yes
Main Fan      1  No
Main Fan      2  No
Compressor    1  No
Compressor    2  No
Heater        1  No
Heater        2  No
Free Cooling  000%

```

This screen is displayed in systems with:
2 units controlled by the same PLC

Page 1

In manual mode, the devices can be activated independently of the control functions, while the safety features are still active. Manual mode can last a maximum of 30 minutes.


Simulation Probes	No
1: Pressure	000.0 bar
2: Umidity	000.0 %Ur
3: T. Room	000.0 °C
4: T. Delivery	000.0 °C
5: T. Ambient	000.0 °C

Password

Password

Level 2

0 0 0 0



Screen for setting the level 2 password



"LAN" - LOCAL NETWORK (E22- E23 - E24 DISPLAY SCREENS)

MAIN FUNCTIONS OF THE LAN

The connection of the units (that is, the PCO boards fitted on each unit) in the pLAN network allows the following functions to be performed:

- balance the operating hours between the air-conditioners by rotation of the standby unit.
- start the standby unit if the other unit shuts down due to a serious alarm or blackout
- start the standby unit to provide for excessive thermal load.
- control up to 10 air-conditioners from just one user terminal (shared user terminal)
- operation of all the air-conditioners based on the average of the temperature and humidity values read by the probes on the air-conditioners that are operating at that moment

1. The local network connection is used to manage the operation of a series of air-conditioners operating inside the same environment,
2. The number of units that can be connected is 10 MAX.
3. The maximum extension of the network connections is **500 metres**.
4. All the units connected in the network must have the **same version of the program** installed in the flash memory on the board.
5. A terminal can be configured as "private" or "shared":
 - a **private terminal** can display the operating status only of the unit it is connected to via telephone cable
 - a **shared terminal** can display the operating status of all the units connected in the network.
6. Each board can "talk" to a maximum of 3 terminals; in common applications, generally no more than two are used: one fitted on the unit and another optional remote terminal.

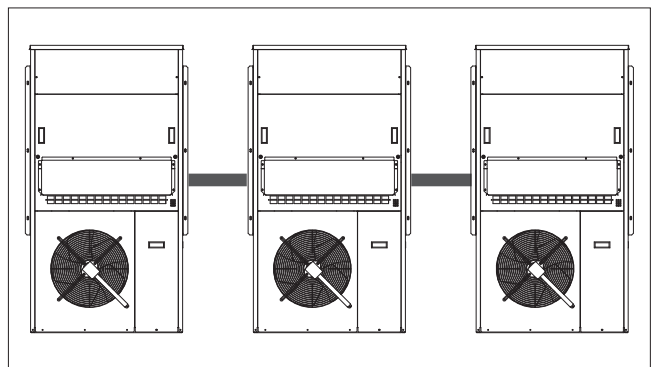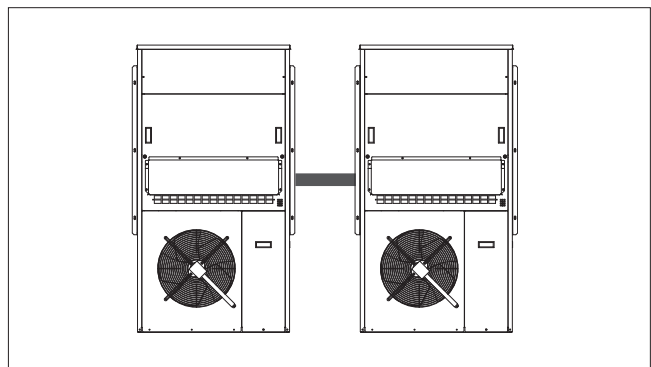

The priority on the terminal is always the display of the alarms, even if when the alarm is activated the terminal is displaying the parameters from another unit.

7. To be able to communicate over a local network, the units must be configured so as to be able to send the other units the required information for correct operation.

In this regard, the first step involves assigning a progressive number to the different units (1, 2, 3,... 10) and then correctly setting the addresses of the various terminals and LAN boards, and making the electrical connections, step-by-step, as described in the following paragraphs.

1) INTERCONNECTION BETWEEN THE UNITS BY SHIELDED CABLE

In order to realize a LAN (Local Area Network) between the units, it is required that installers provide to link together all units with a dedicated cable. The cable is not supplied by CLIMAVENETA. AWG 24 cables with two twisted pairs plus shield, such as the Belden 8723 or 8102, and AWG 24 cables with three twisted pairs plus shield, Belden 8103 or similar, are recommended.

The electrical connections must be completed when the units are off and disconnected from the power supply following the below reported schema.


Connections must be provided directly on the main terminal block of the units (on the El.Panel) and not on the main board directly.

Connectors RX/TX+, RX/TX-, & GND are in different positions/Clamps based on the unit type and size: consequently please always refer to the electrical diagram inside the units where such connectors are clearly indicated.

Remember that connection between 3 connectors RX/TX+, RX/TX-, & GND has to be similar among the units: the shield has to be connected to the earth connector only in 1 unit.

Refer to the below unit for the unit interconnection. (for the right clamps refer to the el. Diagram on the unit)

LAN CONNECTION BETWEEN 2 OR MORE UNITS

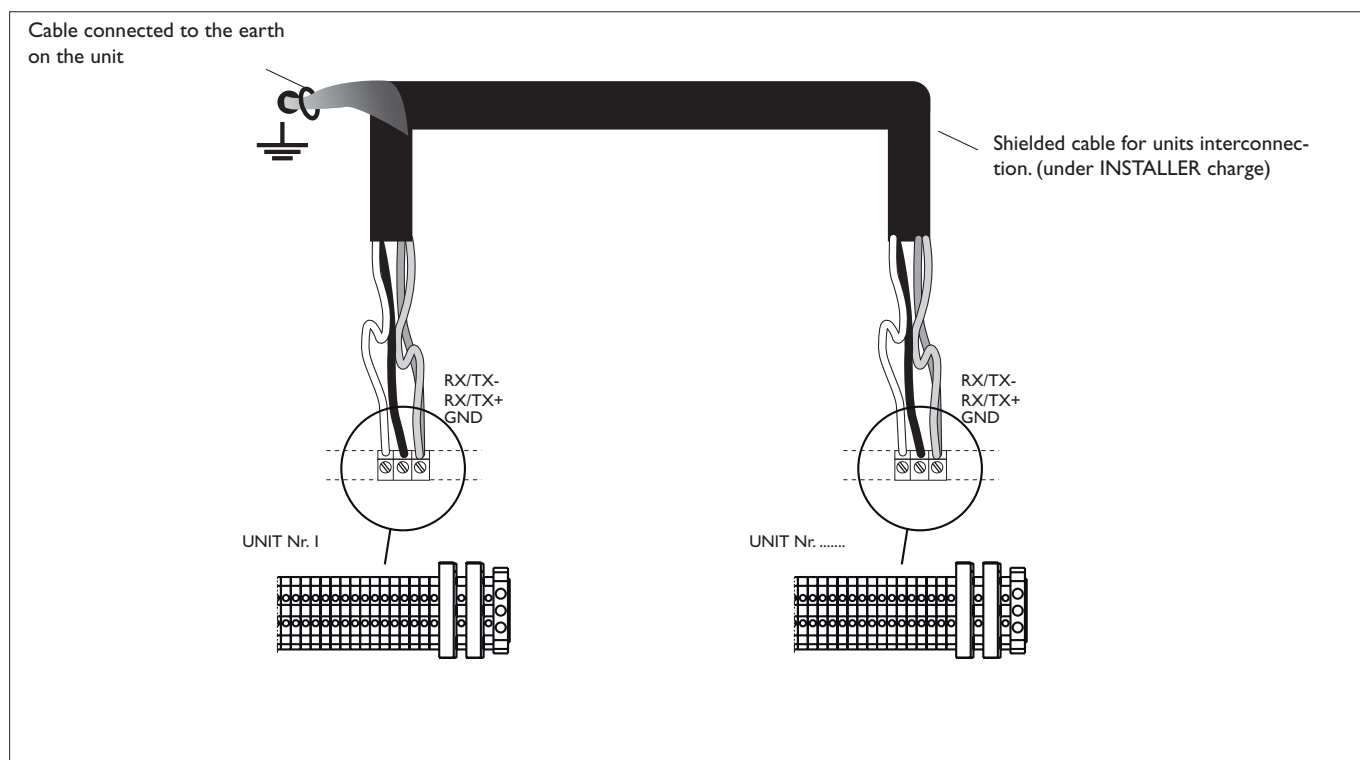

2) SETTING THE ADDRESSES OF THE UNITS (FROM 1 TO 10) AND THE USER TERMINALS (FROM 11 TO 20)

CONFIGURING THE NETWORK

When it has been realized the electrical interconnection as reported on phase 1) it is required to switch to phase 2) for the address configuration for:

A) units, addresses from 1 to 11

B) user terminal/Display, addresses from 11 to 20

Remember that standard configuration from factory is the following:

Address 1 for the unit

Address 11 for the user terminal/Display

Remember that the MAX amount of units per LAN line are 10 (with max 2 in stand-by).

Right configuration and addresses for units and user terminals/Display are reported on the following resuming table.

TABLE OF TERMINAL ADDRESSES AND LAN BOARD ADDRESSES

LAN Board Address	Terminal address / Display
1	11
2	12
3	13
4	14
5	15
6	16
7	17
8	18
9	19
10	20

LAN Board Address	Terminal address / Display
-	32 (remote / shared)

A) UNITS ADDRESSES (FROM 1 TO 11)

Right units configuration is fundamental for the network in order to recognize all units connected.

Same addressing for 2 or more units in the same LAN network is not allowed: in such case the following alarm screen will appear .

NO LINK

Units addressing can be done only from user terminal/display.

Units addressing can be done only if the user terminal/display is previously setted with "0" (zero) address.

A1) PROCEDURE TO ADDRESS THE USER TERMINAL/DISPLAY AT "0" ZERO

It is possible to set the user terminal/display address only after giving it a power supply through the telephone cable on its rear side (**connected to the main board**).

To enter configuration mode press simultaneously following buttons UP, ENTER, DOWN for 5 sec.; the following screen will appear with cursor blinking on the top -left side.

Display address	
setting.....:	11
I/O Board address:	01

B) USER TERMINAL/DISPLAY ADDRESSING FROM 11 TO 20

At this point unit n°1 has to be connected with user terminal/display 11, unit n°2 has to be connected with user terminal/display 12 etc.....unit n°10 has to be connected with user terminal/display 20 (look the following table)

To enter configuration mode press simultaneously following buttons UP, ENTER, DOWN for 5 sec.; the following screen will appear with cursor blinking on the top -left side.

Display address	
setting.....:	00
I/O Board address:	01

- To modify the terminal address (display address setting), press the ENTER button once: the cursor will move to the address field (n°00).
- Use the UP and DOWN buttons to select the right value reported on the table
If the value selected is different from the one saved previously, the following screen will be displayed and the new value will be saved to the permanent memory on the display.

**Display address
changed**

- To set the terminal address (display address setting), press the ENTER button once: the cursor will move to the address field (n°11).
- Use the UP and DOWN buttons to select the "0" (zero) value and confirm by pressing ENTER again.
If the value selected is different from the one saved previously, the following screen will be displayed and the new value will be saved to the permanent memory on the display.

**Display address
changed**

A2) PROCEDURE TO ADDRESS THE UNITS (ADDRESSES FROM 1 TO 10)

Once the terminal address is set to "0" (zero), disconnect power supply from the board and then power it up again while at the same time holding the ALARM and UP buttons on the user terminal: wait until the following screen is displayed.

pLan address:	1
UP:	increase
DOWN:	decrease
ENTER:	save & exit

Release the buttons and set the correct address as per the table shown above, from 1 to 10. Same addressing for 2 or more units or user terminals/display in the same LAN network is not allowed.

Set the right value. Remember to set units addresses progressively from 1 to 10 within the same LAN line.

TABLE OF TERMINAL ADDRESSES AND LAN BOARD ADDRESSES

LAN Board Address	Terminal address / Display
1	11
2	12
3	13
4	14
5	15
6	16
7	17
8	18
9	19
10	20

LAN Board Address	Terminal address / Display
-	32 (remote / shared)

3) CONFIGURING THE SOFTWARE FOR UNIT RECOGNITION AND MANAGEMENT

All the settings corresponding to the LAN can be made starting from the settings menu and accessing (second row) the branch of LAN/serial configuration screens. All the parameters can be set on the MASTER unit only (that is, the unit with address 1), which automatically sends any changes to all the other units in the network.

E22

PLAN	Abilitation	Yes
N° Units	PLAN	02
Medium	Temperature	No
N° Units	in STBY	1
Rotation	Time Hours	24
Rotation	Test	No

The network can have a maximum of 10 units and 11 terminals, one of which shared. Unit operation in the LAN network is configured on unit 01.

Page 1

Enable LAN: enables the LAN function. YES / NO

No. of units in LAN: used to set how many units are connected to the LAN.

Average temperature: this function allows temperature control on the individual units using the average temperature measured by the active units connected to the pLAN. YES / NO

No. of units in STBY: sets how many units are in Standby.

Rotation hours: this function is used to balance the operating hours of the units connected in a pLAN network. Rotation is performed based on the set time, expressed in hours, activating the unit with the lowest address first. A maximum of 2 units can be set in standby if there are more than 4 units connected in the pLAN network.

Rotation test: runs the test to verify the exact operation of the rotation function.

E23

PLAN	Support	Yes
Cooling	Set	21.0°C
Cooling	Band	03.0°C
Cooling	Set D	05.0°C
Heating	Set	05.0°C
Heating	Band	02.0°C
Heating	Set D	02.0°C

Page 2

Used to set the pLAN Support set points.

E24

PLAN	Alarm	Actions
01:0	02:0	03:0
04:0	05:0	06:0
07:0	08:0	09:0
10:0	11:0	12:0
14:0	15:0	16:0
17:0	18:0	19:0
20:0	20:0	21:0

E25

PLAN	Alarm	Actions
22:0	23:0	24:0
25:0	26:0	27:0
28:0	29:0	30:0
31:0	32:0	33:0
34:0	35:0	36:0
37:0	38:0	39:0
40:0	41:0	42:0

Page 3

Each alarm can be configured to perform an action on the LAN.

0. No action

1. Add unit to network.

2. Switch unit off and switch on another in the network.

3. Switch off all the units in the network.

Page 4

See the paragraph on “LAN - local network”

NB: For each pCO controller can be connected to two user terminals one private and one shared, the user terminal can be directly connected to the card pCO on the connector RJ12 phone or through a derivative. In the network there can be at most one shared terminal with address 32. The shared terminal is able to connect to all the controllers present in pCO network plans, to move from one address to another, simply press the keys simultaneously ESC + ALARM. In any mask of view, you can see which is the address of a controller connected by simultaneously pressing the keys UP + DOWN for 5 seconds.

MANAGEMENT OF AVERAGE TEMPERATURE AND HUMIDITY

When the units are connected in a LAN this network connection can be exploited to have them operate based on the average temperature and humidity of all the readings made on the active units (that is, fan operating) without alarms.

Calculation of the average

The average is calculated by the MASTER unit (that is, the unit with pLAN address 1) only if control based on the average values has been enabled on the user terminal.

The MASTER unit, to perform this calculation, receives the ambient temperature and humidity values read by the probes on all the units connected in a LAN, calculates the average and then sends the resulting value to all the units.

The average temperature and humidity is only calculated on the readings from the units that:

- are not in standby (if the rotation of the standby unit is enabled);
- do not have a serious alarm (see the following paragraphs);
- have not been switched off from the user terminal.

Enabling the use of the average reading

The use of the average temperature and humidity value for control is only enabled if:

- the function is enabled;
- there are no problems in the LAN connection between the units.

When problems are detected in the LAN, the unit immediately disables control based on the average values and works with the local values (that is, the values read by the probes on the unit itself).

MANAGEMENT OF THE STANDBY UNIT

In an installation made up of units that are operating and units in standby, the operating hours of the units will not be equal, as the former will be operating for longer than the latter, which are off. To overcome this problem the pLAN network can rotate the operation of the units, thus balancing the operating hours. In practice, rotation places a unit that is on in standby and starts the unit that is in standby.

Management of the rotation function

The rotation of the standby unit is managed entirely by the unit with address 1 (in this case, the MASTER, while all the others are SLAVES) and is performed based on times, starting from the unit with the lowest address, that is, the unit with address 1, and then progressively incrementing the address... Two standby units can be set, however only if there are at least four units connected in the LAN; in this case, the rotation of the units in standby starts with the first two (addresses 1 and 2), then the second two (2 and 3) and so on...

Alarm management

The network may be disconnected due to one of the following situations:

- fault with the PCO LAN board (integrated inside the PCO board: in this case, the entire board needs to be replaced);
- detachment of the connection cable from the PCO LAN board;
- power down of the unit or the PCO board;
- breakage of the cable at a point between two units

There are two possible situations:

- one or more units are no longer visible;
- the network is broken into one (or more) branches


Each unit constantly receives information on the status (that is, the visibility) of all the other units that should theoretically be connected to the network (based on the number of units in the LAN set on the user terminal). Each unit can therefore detect any disconnections. When a unit detects a disconnection in the LAN, the following occur:

- signal on the main screen;
- the unit is started if in standby;
- control based on average values disabled, if enabled;
- time count for the rotation of the standby unit suspended.

CONNECTION TO THE REMOTE TERMINAL FROM THE BOARD


This configuration requires:

1. the use of two 'T' shunts: one fitted on the unit and one near the remote terminal;
2. the use of the 3x2 shielded cable, so that the power to the remote terminal is also supplied by the board on unit 1, connected using the 'T' shunt;
3. near the terminal, insert the ferrite to reduce any electromagnetic disturbance.

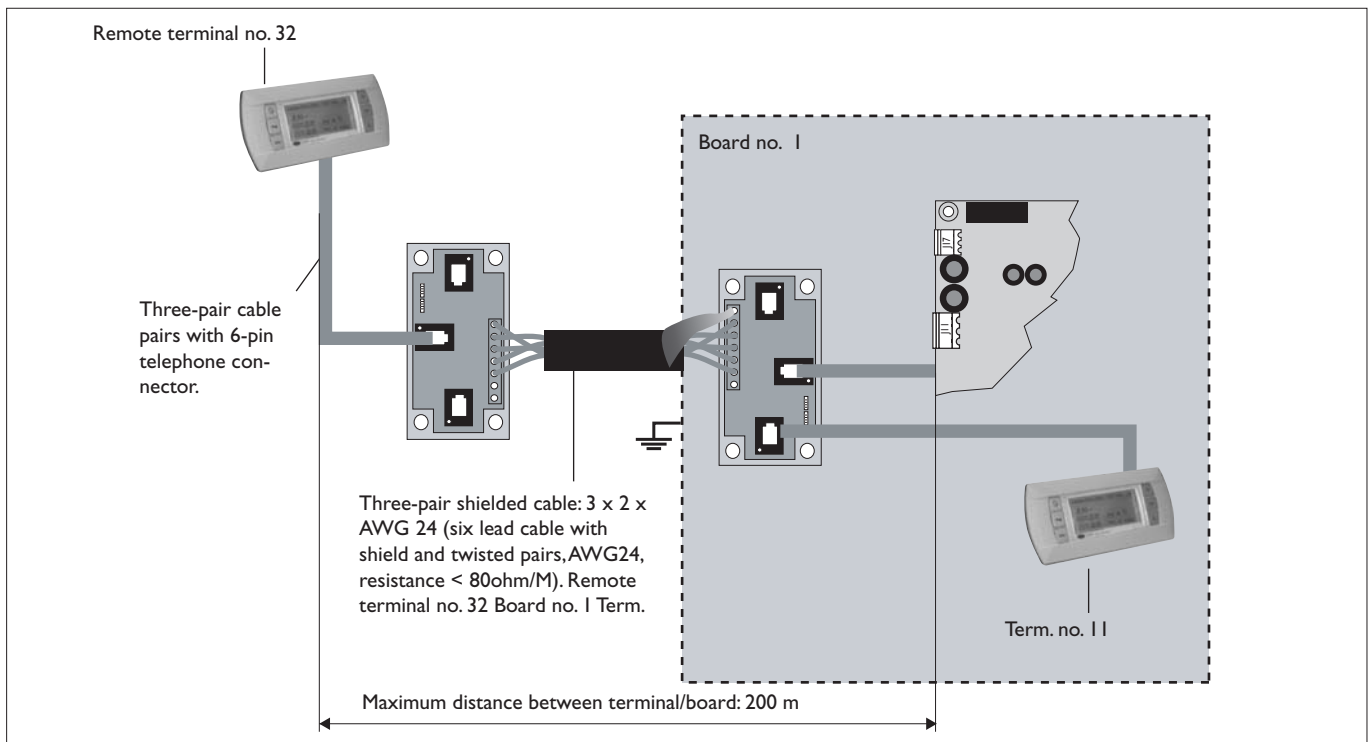


Connections for the 2 x 2 x AWG 24 CABLE
(for connecting the remote terminal: without transferring the power supply)

terminal	function	cable connections
0	Earth	shield
1	+ VRL \approx 30V _{cc}	
2	Gnd	First pair
3	Rx/Tx -	Second pair
4	Rx/Tx +	Second pair
5	Gnd	First pair
6	+ VRL \approx 30V _{cc}	

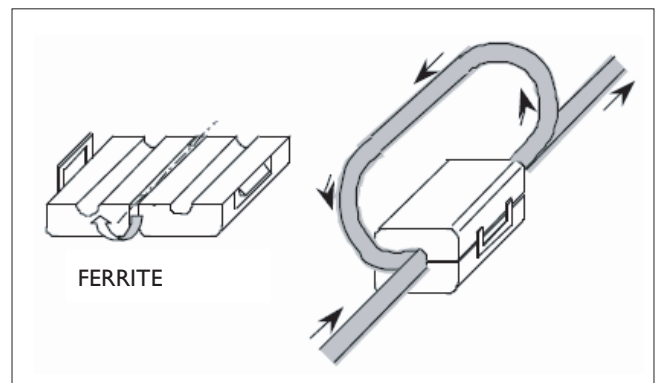

ELECTRICAL CONNECTIONS

The electrical connections must be completed when the units are off and disconnected from the power supply. The network can have different configurations, according to the maximum distance of the connections between the boards and the remote terminal; for the connections between the remote terminal and the main board, a 'T' shunt may be required, as shown in the drawing.

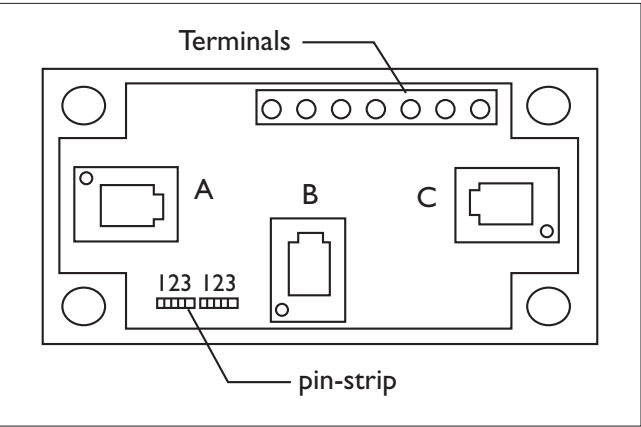

terminal	function
0	Earth (shield)
1	+VRL \approx 30Vcc
2	Gnd
3	Rx/Tx-
4	Rx/Tx+
5	Gnd
6	+VRL \approx 30Vcc

If both the jumpers are installed between 2 and 3 the flow of current is interrupted between the connectors separated by the dashed line.
If power is required on all the connectors, both the jumpers must be installed between 1 and 2.
Terminal 0 is an auxiliary terminal and can be used to earth the shield of the cable; the 'T' shunt must in any case be connected to a metallic part of the unit that is already earthed.

MAXIMUM DISTANCE BETWEEN THE TERMINAL AND THE BOARD

- 1 For local terminals the connection to the main board is already made using a 3-pair cable and 6-pin telephone connector. The length of this cable generally does not exceed 3 metres.
- 2 The remote terminals can be connected to the main board using the type of telephone cable described in point 1, with a maximum distance of 50 metres.
- 3 For greater distances, up to a maximum of 200 metres, a shielded cable must be used (six lead cable with shield and twisted pairs, AWG24, resistance < 80 ohm/M). The cable may have 3 or 2 pairs, depending on whether the power needs to be supplied to the terminals. The cable is not supplied by CLI-MAVENETA.
AWG 24 cables with two twisted pairs plus shield, such as the Belden 8723 or 8102, and AWG 24 cables with three twisted pairs plus shield, Belden 8103 or similar, are recommended.

DISPLAYING THE NETWORK FROM THE TERMINAL

From any terminal in the network, holding the UP + ENTER + DOWN buttons for at least 10 seconds, will display the << NetSTAT >> screen (see Fig. 2).
The NetSTAT screen shows all the LAN boards and all the terminals connected in the network, including the shared remote terminal, with the corresponding addresses.

In the example, the network is made up of 3 LAN boards with addresses 1, 2, 3, and 4 user terminals with addresses 11, 12, 13 and 32.

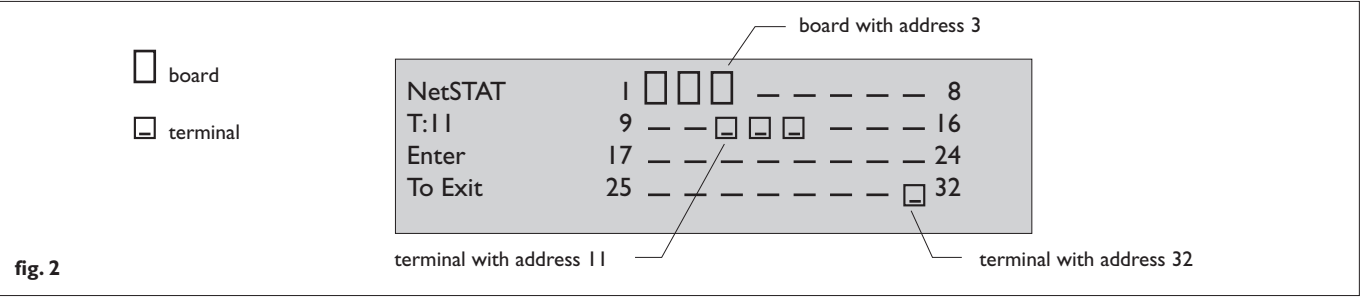


fig. 2

NB: this part is not intended to go into detail on the various versions and options available in the CLIMAVENETA range as regards supervisory systems, a topic that will be dealt with in a special manual. Rather, the purpose is to provide a rapid indication of the operations to be performed on the unit software by setting parameters from the user terminal so as to activate the database on the controller.

Therefore below is a short list of the operations to be carried out for the management of a serial interface board, in particular:

- 1) Options and serial boards currently available
- 2) Installation
- 3) Configuration of the software from the terminal
- 4) Configuration / Physical development of the serial network

1) Options and serial boards currently available

Currently CLIMAVENETA offers the market a series of serial interfaces that allow the ACCURATE precision air-conditioners to share their control variables with local or remote BMS (Building Management Systems), both proprietary systems and those more commonly found on the market today.


The interfacing and sharing of the control variables with such systems can be performed using serial boards/interfaces that are compatible with the BMS that the variables should be exchanged with.

Consequently, the various OPTIONS that can be ordered when purchasing the unit (and can also be supplied subsequently) include the following serial interface boards:


- **CLOCK** board used for identifying alarm events by time. The clock board **MUST NOT** be installed in the same SLOT as the serial boards listed below
- **RS485** for dialogue with protocols: CAREL and MODBUS
- **RS232** for dialogue with protocol RS232
- **BACNET** for dialogue with protocol: BACNET
- **ETHERNET** for dialogue with protocols: SNMP and TCP/IP-
- **LON** for dialogue with protocol: LON



CLOCK BOARD

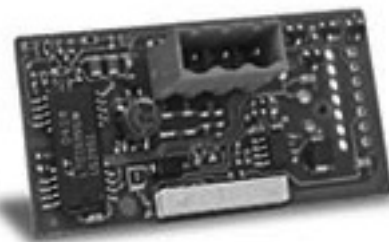

RS485 - MODBUS SERIAL CARD

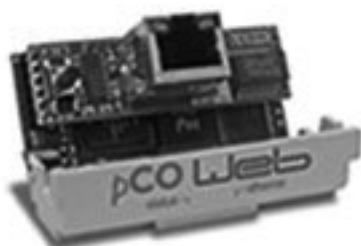

ETHERNET / BACNET SERIAL CARD













RS232 SERIAL CARD




LON SERIAL CARD

ALARMS (TROUBLESHOOTING)

Alarm	Description	Solution	Devices switched off
	Configuration alarm	No user action possible. Contact Service	Signal only
	Fire/smoke/flood alarm	Check status on site.	Stops operation of the unit
	Fire/smoke alarm.	Check status on site. Reset if possible.	Stops operation of the unit
	Flood alarm	Check status on site. Reset if possible.	Stops operation of the unit
	Outlet fan flow alarm.	Check operation on site.	Stops operation of the unit
	Outlet fan thermal overload alarm.	Check operation on site.	Stops operation of the unit
	Blackout/incorrect phase sequence alarm.	Check operation on site.	Stops operation of the compressor, condenser fan and heater.
	High pressure alarm from digital input / analogue input.	Check operation on site.	Stops operation of the compressor
	Low pressure alarm.	Check operation on site.	Stops operation of the compressor
	Compressor alarm on air-conditioner 1 and 2	Check operation on site.	Stops operation of the unit
	Compressor alarm on air-conditioner 2	Check operation on site.	Stops operation of the unit
	Compressor alarm on air-conditioner 1	Check operation on site.	Stops operation of the unit
	Condenser fan thermal overload alarm	Check operation on site.	Stops operation of the unit
	Heater alarm	Check operation of the safety thermostat on site. Contact Service if necessary	Stops operation of the unit
	Blocked filter alarm	Clean the filters. Change of filters	Signal only
	Damper alarm.	Check correct closing of the damper or incorrect activation of the heater.	Signal only
	EPROM alarm	Check operation of the buffer memory on site.	Signal only
	Room temperature probe alarm.	Check probe connections.	Stops operation of the unit
	Outside temperature probe alarm.	Check probe connections.	Freecooling
	Outlet temperature probe alarm	Check probe connections.	Compressor
	Room humidity probe alarm.	Check probe connections.	Signal only
	Condensing pressure probe alarm	Check probe connections.	Signal only
	LAN disconnected alarm.	Check LAN network or unit power supply connection.	Signal only
	Maximum room temperature alarm	Check the temperature and unit status on site.	Signal only
	High room temperature alarm.	Check the temperature and unit status on site.	Signal only
	Low room temperature alarm.	Check the temperature and unit status on site.	Signal only
	High room humidity alarm.	Check the temperature and unit status on site.	Signal only
	Low room humidity alarm	Check the temperature and unit status on site.	Signal only
	Room thermostat alarm.	Contact open, check on site.	Signal only
AUX	Auxiliary alarm.	Contact open, check on site.	Signal only

Alarm	Description	Solution	Devices switched off
	Clock alarm	Clock board not working. Check on site.	Signal only
	Compressor maintenance.	Compressor operating hours exceeded.	Signal only
	Outlet fan maintenance.	Check operation on site.	Stops the fan
	Condenser fan maintenance.	Check operation on site.	Stops the fan
	Compressor maintenance, air-conditioner 1 and 2.	Check operation on site.	Stops the compressor + outdoor fan
	Compressor maintenance, air-conditioner 2.	Check operation on site.	Stops the compressor + outdoor fan
	Compressor maintenance, air-conditioner 1.	Check operation on site.	Stops the compressor + outdoor fan
	Maintenance on air-conditioner 1 and 2 outlet fan	Check operation on site.	Stops the fan
	Maintenance on air-conditioner 2 outlet fan	Check operation on site.	Stops the fan
	Maintenance on air-conditioner 1 outlet fan	Check operation on site.	Stops the fan

TROUBLESHOOTING

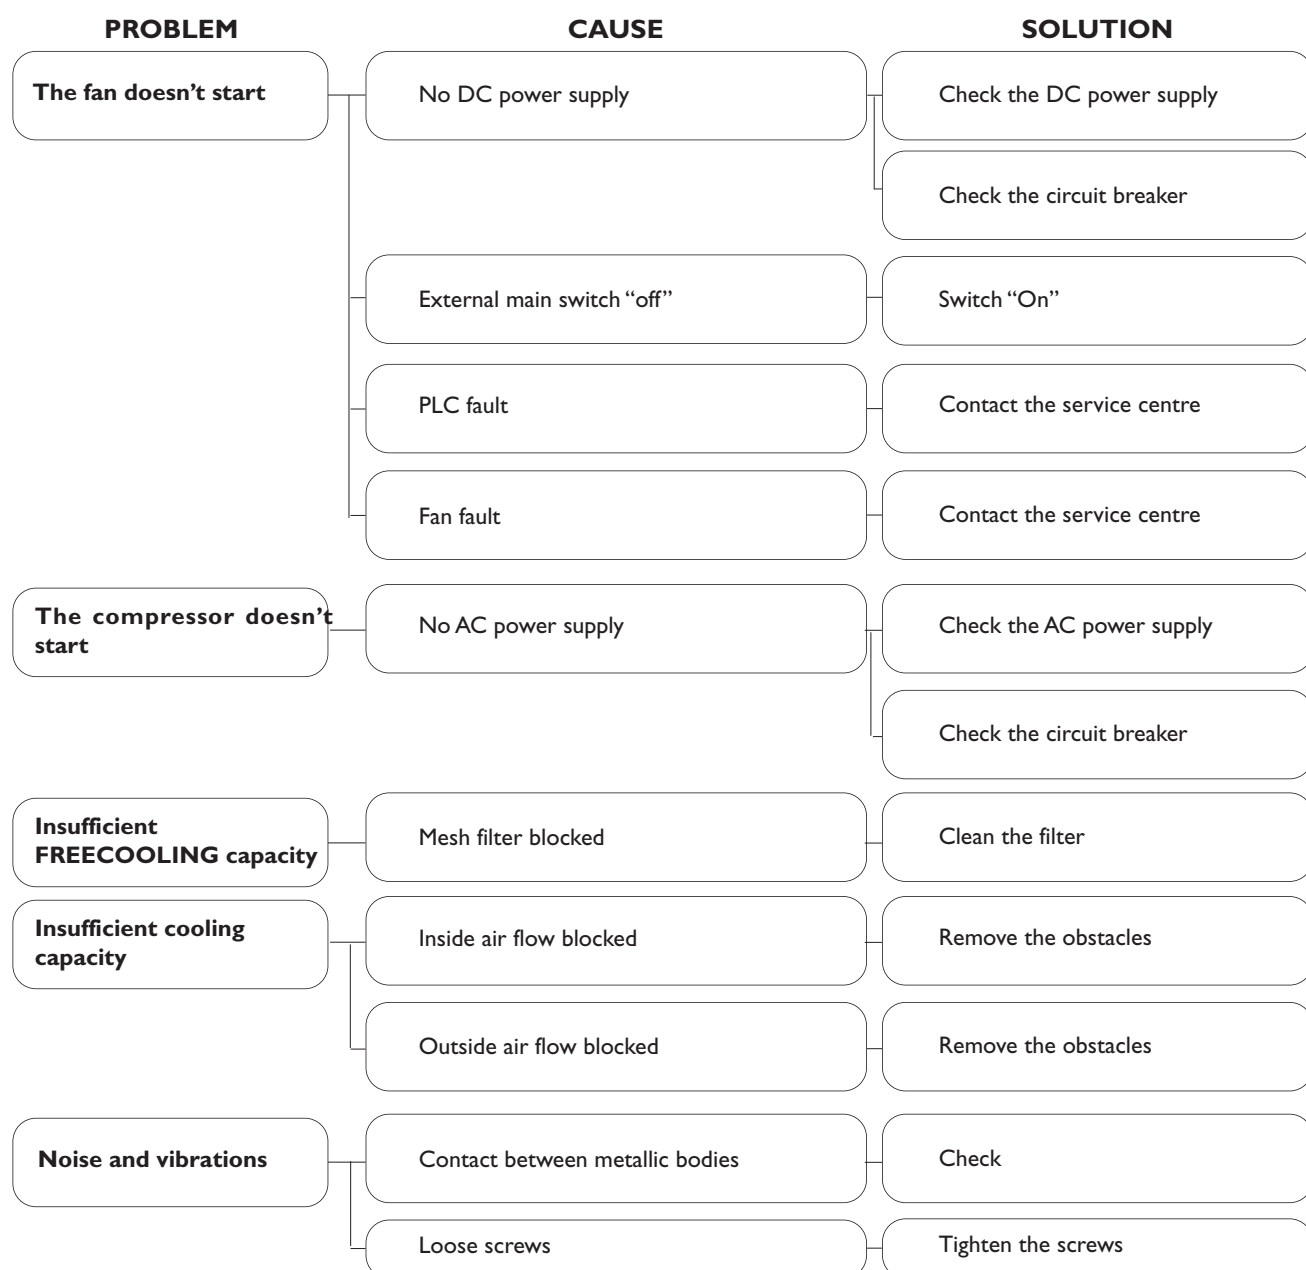

OPERATING CHARACTERISTICS

SWITCHING ON AND OFF

To switch the unit on and off use the disconnect switch QSI.

When switching on, the compressor oil heater is powered and the electronic board goes to standby.

In the event of temporary power failures, when power returns, the mode set previously will be stored in the memory.

COMPRESSOR ACTIVATION

Two functions prevent the compressor from starting:

- Minimum time since last stopping: 180 seconds
- Minimum time since last starting: 300 seconds

EXTENDED SHUTDOWN

After having deactivated the condensing unit:

- Deactivate the indoor unit, moving the unit switch to the "OFF" position.

ROUTINE MAINTENANCE

Regular maintenance is fundamental to ensure efficient operation of the unit and energy consumption.

Technical Service must follow an annual maintenance plan, which includes the following operations and check:

- Charge gas
- Correct operation of the safety devices;
- Power supply
- Power input.
- Electrical and refrigerant connections.
- Condition of the compressor contactor;
- Operating pressure, heating and cooling function
- Correct operation of the compressor heater

- Cleaning of the finned coil
- Cleaning of the fan grills
- Cleaning of the condensate drain



For units installed near the sea, the maintenance intervals should be halved.

REFRIGERANT GAS CONTENT

The units are charged with gas and tested in the factory, to identify the type of refrigerant see the rating plate on the unit.

In normal conditions, there should be no need for the Technical Service to intervene to check the refrigerant gas. However, over time, small leaks may develop at the joints leading to loss of refrigerant and emptying of the circuit, causing the unit to function poorly.

In this case, the leaks of refrigerant must be identified and repaired and the refrigerant circuit recharged, in compliance with national legislation in force on substances that are harmful to the ozone layer.

For the MED models, use special equipment for the refrigerant collection, so as to protect the environment.

Proceed as follows:

- Empty and dry the entire refrigerant circuit using a vacuum pump connected to the low and high pressure tap until the vacuumometer reads about 10 Pa.
Wait a couple of minutes and check that this value does not rise to more than 50 Pa.
- Connect the refrigerant gas cylinder to the low pressure line.
- Fill with the quantity of refrigerant gas indicated on the unit's rating plate.

- Always check the superheat and subcooling values.
- After a couple of hours of operation, check that the liquid indicator indicates the circuit is dry.



In the event of partial leaks (R410A gas), the circuit must be completely emptied before being recharged

The MED units must be charged in the liquid phase.

Operating conditions other than rated conditions may produce considerably different values.



The refrigerant circuit must not be charged with a refrigerant other than that indicated.

The use of a different refrigerant may cause serious damage to the compressor.

Oxygen, acetylene or other inflammable or poisonous gases must never be used in the refrigerant circuit as they may cause explosion or intoxication.

Oils other than those indicated must not be used.

The use of a different oil may cause serious damage to the compressor.

DISPOSAL



INFORMATION ON THE CORRECT DISPOSAL OF THE PRODUCT IN COMPLIANCE WITH EUROPEAN DIRECTIVE 2002/96/EC

At the end of its working life, the product must not be disposed as municipal waste.

It must be collected by specific local waste collection authorities and segregated in the waste collection centre or by the reseller who provides this service.

The separate disposal of an electrical appliance avoids possible negative effects on human health and on the environment due to improper disposal and allows the recovery of materials and consequently significant savings in energy and resources.

To highlight the need to dispose of electrical appliances separately, the product has been labelled with the crossed-out wheeled bin symbol.

CONDENSATE DRAIN

The condensate is removed from the pan located underneath the coil through a hose with drain trap, already fitted in the unit; the end of the hose should be connected to the sewerage system in the building via a rubber or plastic hose with an inside diameter of 20 mm.

During installation, pour water into the condensate collection pan so as to fill the drain trap inside the unit with water.

Climaveneta S.p.A.

Via Sarson 57/c
36061 Bassano del Grappa (VI)
Italy
Tel +39 0424 509500
Fax +39 0424 509509
info@climaveneta.com
www.climaveneta.com

Climaveneta France

3, Village d'Entreprises
ZA de la Couronne des Prés
Avenue de la Mauldre
78680 Epone
France
Tel +33 (0)1 30 95 19 19
Fax +33 (0)1 30 95 18 18
info@climaveneta.fr
www.climaveneta.fr

Climaveneta Deutschland

Rhenus Platz, 2
59439 Holzwickede
Germany
Tel +49 2301 91222-0
Fax +49 2301 91222-99
info@climaveneta.de
www.climaveneta.de

Climaveneta**Espana - Top Clima**

Londres 67, 1° 4°
08036 Barcelona
Spain
Tel +34 963 195 600
Fax +34 963 615 167
topclima@topclima.com
www.climaveneta.com

Climaveneta Chat Union**Refrig. Equipment Co Ltd**

88 Bai Yun Rd, Pudong Xinghuo
New dev. zone 201419 Shanghai
China
Tel 008 621 575 055 66
Fax 008 621 575 057 97

Climaveneta Polska Sp. z o.o.

Ul. Sienkiewicza 13A
05-120 Legionowo
Poland
Tel +48 22 766 34 55-57
Fax +48 22 784 39 09
info@climaveneta.pl
www.climaveneta.pl

Climaveneta India**Climate Technologies (P) LTD**

#3487, 14th Main, HAL 2nd stage,
Indiranagar, Bangalore 560008
India
Tel +91-80-42466900 - 949
Fax +91-80-25203540
sales@climaveneta.in

Climaveneta UK LTD

Highlands Road,
Shirley Solihull
West Midlands B90 4NL
Tel: +44 (0)871 663 0664
Fax: +44 (0)871 663 1664
Freephone: 0800 801 819
response@climaveneta.co.uk
www.climaveneta.co.uk