

## COLOR LCD SOUNDER FCV-1100L

### *Installation Manual*

---

|  |      |                                     |      |
|--|------|-------------------------------------|------|
| SAFETY INSTRUCTIONS.....                 | i    | APPENDIX 1 TRANSDUCER               |      |
| SYSTEM CONFIGURATION .....               | iii  | 50BL-12/50BL-24H .....              | AP-1 |
| EQUIPMENT LISTS .....                    | iv   | APPENDIX 2 BLT TRANSDUCERS .....    |      |
| 1. MOUNTING .....                        | 1-1  | .....                               | AP-2 |
| 1.1 Display Unit .....                   | 1-1  | APPENDIX 3 TRANSDUCER 82B-35R ..... |      |
| 1.2 Transducer .....                     | 1-4  | .....                               | AP-4 |
| 1.3 Water Temperature Sensor (option) .. |      | PACKING LIST .....                  | A-1  |
| .....                                    | 1-4  | OUTLINE DRAWINGS.....               | D-1  |
| 2. WIRING .....                          | 2-1  | INTERCONNECTION DIAGRAM .....       | S-1  |
| 2.1 Wiring Standard Equipment .....      | 2-2  |                                     |      |
| 2.2 Wiring Optional Equipment .....      | 2-3  |                                     |      |
| 2.3 Input/Output Sentences .....         | 2-3  |                                     |      |
| 3. INITIAL SETTING .....                 | 3-1  |                                     |      |
| 3.1 Language Setting .....               | 3-1  |                                     |      |
| 3.2 Transducer Data .....                | 3-2  |                                     |      |
| 3.3 Water Temperature Sensor Setting...  |      |                                     |      |
| .....                                    | 3-7  |                                     |      |
| 3.4 Nav Data, Heading Sensor Setting     |      |                                     |      |
| .....                                    | 3-9  |                                     |      |
| 3.5 Propagation Velocity .....           | 3-11 |                                     |      |
| 3.6 Demonstration Mode .....             | 3-12 |                                     |      |
| 3.7 Restoring Default Settings .....     | 3-13 |                                     |      |



**FURUNO ELECTRIC CO., LTD.**

[www.furuno.co.jp](http://www.furuno.co.jp)

All brand and product names are trademarks, registered trademarks or service marks of their respective holders.

**ECF**

(Elemental Chlorine Free)

The paper used in this manual  
is elemental chlorine free.

**FURUNO ELECTRIC CO., LTD.**

9-52 Ashihara-cho,  
Nishinomiya, 662-8580, JAPAN

Telephone : +81-(0)798-65-2111

Fax : +81-(0)798-65-4200

• FURUNO Authorized Distributor/Dealer

All rights reserved. Printed in Japan

Pub. No. IME-23670-E3

(HIMA ) FCV-1100L

A : AUG . 2001

E3 : FEB . 02 , 2009








\* 0 0 0 8 0 9 2 2 0 1 2 \*





# SAFETY INSTRUCTIONS

The operator and installer must read the applicable safety instructions before attempting to install or operate the equipment.

|  |   |
|--|---|
|  <b>DANGER</b>  | Indicates a potentially hazardous situation which, if not avoided, will result in death or serious injury.  |
|  <b>WARNING</b> | Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. |
|  <b>CAUTION</b> | Indicates a potentially hazardous situation which, if not avoided, can result in minor or moderate injury.  |

|  |  |  |
|--|--|--|
|  Warning, Caution |  Prohibitive Action |  Mandatory Action |
|--|--|--|

 **WARNING**

 **ELECTRICAL SHOCK HAZARD**  
Do not open the equipment unless totally familiar with electrical circuits and service manual.

Only qualified personnel should work inside the equipment.

**Turn off the power at the switchboard before beginning the installation.**


Fire or electrical shock can result if the power is left on.

**Do not install the equipment where it may get wet from rain or water splash.**

Water in the equipment can result in fire, electrical shock or equipment damage.

**Be sure no water leaks in at the transducer mounting location.**

Water leakage can sink the vessel. Also, confirm that the transducer will not loosen by ship's vibration. The installer of the equipment is solely responsible for the proper installation of the equipment. FURUNO will assume no responsibility for any damage associated with improper installation.

 **WARNING**

**Install the transducer according to the installation instructions.**

Failure to install the transducer correctly may result in water leakage and damage to the ship's hull.

**For wooden or FRP vessel using a steel tank, attach a zinc plate to the hull to prevent electrolytic corrosion.**

Electrolytic corrosion can, in the worst case, result in loss of the transducer.

**Be sure that the power supply is compatible with the voltage rating of the equipment.**

Connection of an incorrect power supply can cause fire or equipment damage. The voltage rating of the equipment appears on the label above the power connector.



## CAUTION



Ground the equipment to prevent mutual interference.

Observe the following compass safe distances to prevent interference to a magnetic compass:

|          | Standard compass | Steering compass |
|----------|------------------|------------------|
| CV-1100L | 0.7 m            | 0.5 m            |

**Do not allow warm water or any other liquid other than seawater or freshwater to contact the transducer.**

Damage to the transducer may result.

**Do not install the transducer where noise or air bubbles is present.**

Performance will be affected.




## CAUTION

The transducer cable must be handled carefully, following the guidelines below.

- Keep fuels and oils away from the cable.
- Locate the cable where it will not be damaged.
- The cable sheath is made of chlorophrene or polychloride vinyl, which are easily damaged by plastic solvents such as toluene. Locate the cable well away from plastic solvents.

# SYSTEM CONFIGURATION

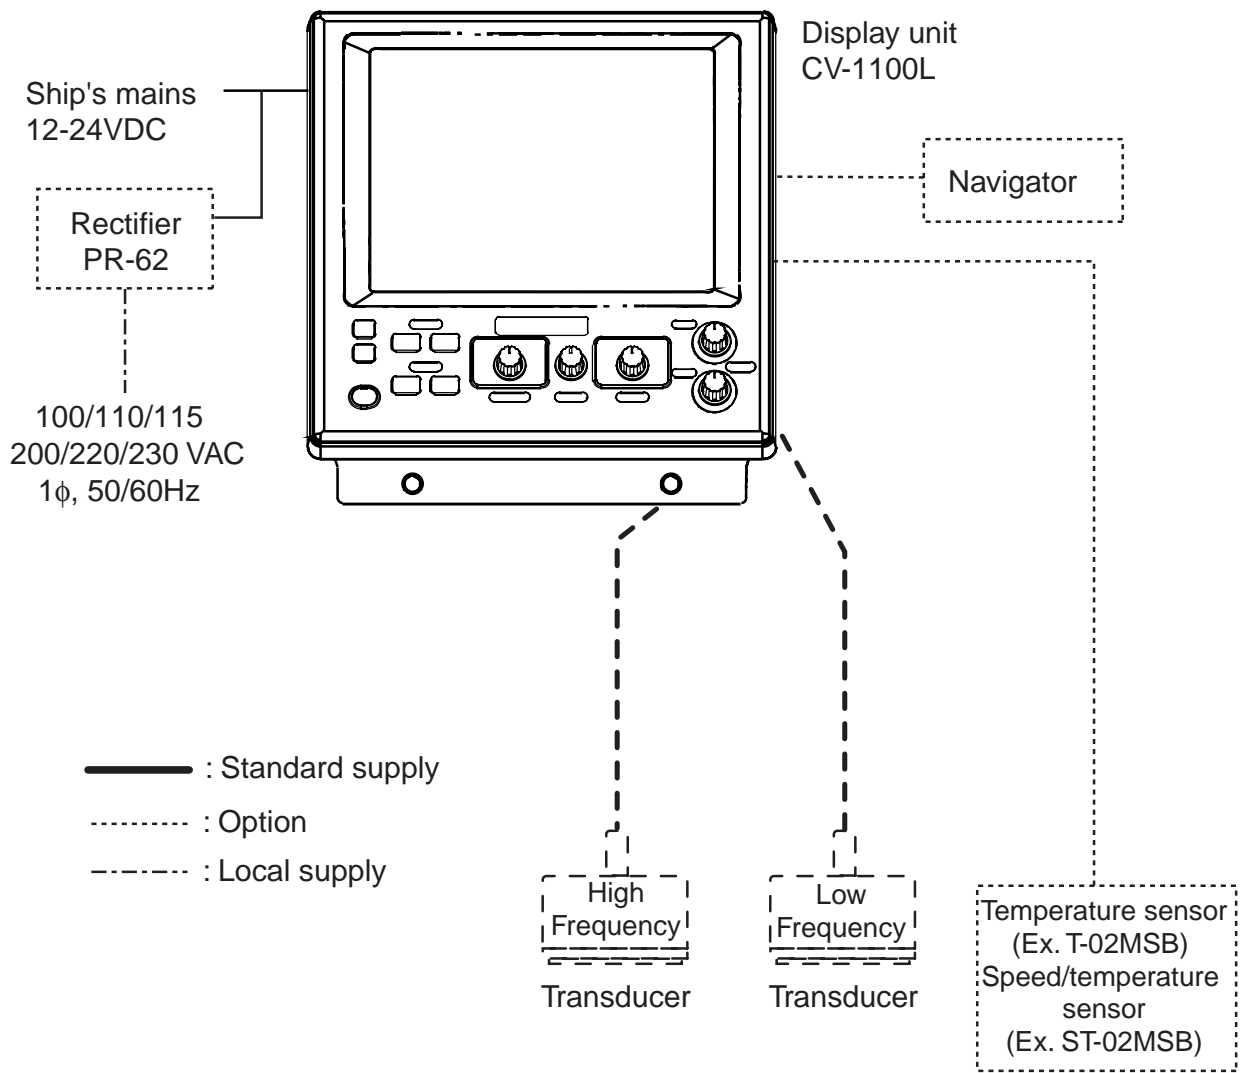

# EQUIPMENT LISTS

## Standard supply

| Name                   | Type       | Code No.    | Qty   | Remarks                                 |
|------------------------|------------|-------------|-------|---|
| Display unit           | CV-1100L   | -           | 1     |   |
| Spare Parts            | SP02-04401 | 001-402-100 | 1 set | Fuse                                    |
| Accessories            | FP02-05300 | 000-012-509 | 1 set | Hood                                    |
| Installation Materials | CP02-06900 | 000-012-508 | 1 set | MJ-A3SPF0013-035 (3.5 m),<br>CP02-06901 |

## Options

| Name                     | Type   | Code No.    | Qty | Remarks                        |
|--------------------------|--|-------------|-----|--------------------------------|
| Transducer               | Transducer available in 1, 2 and 3 kW models. See page vi – xiii for details. No selection also available. |             |     |                                |
| Cable Assy               | MJ-A6SPF0012-050   | 000-134-424 | 1   | 6P-6P, 5m, for navigator       |
|                          | MJ-A6SPF0012-100   | 000-133-817 | 1   | 6P-6P, 10m, for navigator      |
|                          | MJ-A6SPF0011-050   | 000-132-244 | 1   | 6P-4P, 5m, for navigator       |
|                          | MJ-A6SPF0011-100   | 000-132-336 | 1   | 6P-4P, 10m, for navigator      |
|                          | NCS255AD-254P-L500   | 000-142-518 | 1   | For dual –frequency transducer |
| Water Temperature Sensor | T-02MSB  | 000-040-040 | 1   | Thru-hull mount                |
|                          | T-02MTB  | 000-040-026 | 1   | Transom mount                  |
|                          | T-03MSB  | 000-040-027 | 1   | Thru-hull mount                |
| Speed/Temperature Sensor | ST-02MSB   | 000-137-986 | 1   |                                |
|                          | ST-02PSB   | 000-137-987 | 1   |                                |
| Rectifier                | PR-62  | 000-013-484 | 1   | 100 VAC                        |
|                          |  | 000-013-485 |     | 110 VAC*                       |
|                          |  | 000-013-486 |     | 220 VAC                        |
|                          |  | 000-013-487 |     | 230 VAC                        |

\*: Use this type for 115 VAC.

**Available transducers****1 kW transducer**

| Frequency (kHz) | Hull Material | Transducer | Thru-Hull Pipe | Tank  |
|-----------------|---------------|------------|----------------|-------|
| 28/50           | Steel         | 28F-8      | -              | -     |
|                 | FRP           | 50B-6/6B   | -              | -     |
|                 | Steel         | 28F-8      | TWB-6000 (2)   | T-656 |
|                 | FRP           | 5B-9/9B    | -              | -     |
|                 | Steel         | -          | -              | -     |
|                 | FRP           | -          | -              | -     |
| 28/68           | Steel         | 28F-8      | -              | -     |
|                 | FRP           | 68F-8H     | -              | -     |
| 28/88           | Steel         | 28F-8      | TWB-6000 (2)   | T-657 |
|                 | FRP           | 88B-8      | -              | -     |
| 28/200          | Steel         | 28F-8      | -              | -     |
|                 | FRP           | 88B-8      | -              | -     |
| 50/88           | Steel         | 50B-6/6B   | -              | -     |
|                 | FRP           | 88B-8      | -              | -     |
|                 | Steel         | 50B-9/9B   | TWB-6000 (2)   | T-658 |
|                 | FRP           | 88B-8      | -              | -     |
|                 | Steel         | 50F-8G     | -              | -     |
|                 | FRP           | 88B-8      | -              | -     |
| 50/200          | Steel         | 50B-6/6B   | -              | -     |
|                 | FRP           | 200B-5S    | -              | -     |
|                 | Steel         | 50B-9/9B   | -              | -     |
|                 | FRP           | 200B-5S    | -              | -     |
|                 | Steel         | 50F-8G     | -              | -     |
|                 | FRP           | 200B-5S    | -              | -     |
|                 | Steel         | 50/200-1T  | -              | -     |
|                 | FRP           |            | -              | -     |
|                 | Steel         | 50/200-1ST | -              | -     |
| FRP             | -             |            | -              |       |
| 68/200          | Steel         | 68F-8H     | -              | -     |
|                 | FRP           | 200B-5S    | -              | -     |
| 88/200          | Steel         | 88B-8      | -              | -     |
|                 | FRP           | 200B-5S    | -              | -     |

**2 kW transducer**

| <b>Frequency<br/>(kHz)</b> | <b>Hull Material</b> | <b>Transducer</b> | <b>Thru-Hull Pipe</b> | <b>Tank</b> |
|----------------------------|----------------------|-------------------|-----------------------|-------------|
| 28/50                      | Steel                | 28F-18            | TFB-7000 (2)          | T-634       |
|                            | FRP                  | 50B-12            | -                     | -           |
| 28/68                      | Steel                | 28F-18            | -                     | -           |
|                            | FRP                  | 68F-30H           | TRB-1100 (2)          | T-634-F     |
| 28/88                      | Steel                | 28F-18            | TFB-7000 (2)          | T-636       |
|                            | FRP                  | 88B-10            | TFB-1100 (2)          | T-636-F     |
| 28/200                     | Steel                | 28F-18            | TFB-7000 (2)          | T-638       |
|                            | FRP                  | 200B-8/8B/8N      | TFB-1100 (2)          | T-638-F     |
| 50/88                      | Steel                | 50B-12            | TFB-7000 (2)          | T-645       |
|                            | FRP                  | 200B-8/8B/8N      | TFB-1100 (2)          | T-643-F     |
| 50/200                     | Steel                | 50B-12            | TFB-7000 (2)          | T-645       |
|                            | FRP                  | 200B-8/8B/8N      | -                     | -           |
| 68/200                     | Steel                | 68F-30H           | TFB-7000 (2)          | -           |
|                            | FRP                  | 200B-8/8B/8N      | TFB-1100 (2)          | -           |
| 88/200                     | Steel                | 88B-10            | TFB-7000 (2)          | T-649       |
|                            | FRP                  | 200B-8/8B/8N      | TFB-1100 (2)          | T-649-F     |



**3 kW transducer**

| Frequency (kHz) | Hull Material | Transducer         | Thru-Hull Pipe | Tank    |
|-----------------|---------------|--------------------|----------------|---------|
| 28/50           | Steel         | 28F-24H, 50F-24H   | TFB-7000 (2)   | T-681   |
|                 | FRP           |                    | TRB-1100 (2)   | T-681-F |
| 28/68           | Steel         | 28F-24H, 68F-30H   | -              | -       |
|                 | FRP           |                    | -              | -       |
| 28/88           | Steel         | 28F-24H, 88F-126H  | TFB-7000 (2)   | T-682   |
|                 | FRP           |                    | TRB-1100 (2)   | T-682-F |
| 28/107          | Steel         | 28F-24H, 100B-10R  | -              | -       |
|                 | FRP           |                    | -              | -       |
| 28/150          | Steel         | 50B-6/6B, 88B-8    | -              | -       |
|                 | FRP           |                    | -              | -       |
| 28/200          | Steel         | 28F-24H, 200B-12H  | -              | -       |
|                 | FRP           |                    | -              | -       |
| 50/88           | Steel         | 50F-24H, 88F-126H  | TFB-7000 (2)   | T-682   |
|                 | FRP           |                    | TRB-1100 (2)   | T-682-F |
| 50/107          | Steel         | 50F-24H, 100B-10R  | -              | -       |
|                 | FRP           |                    | -              | -       |
| 50/150          | Steel         | 50F-24H, 150B-12H  | TFB-7000 (2)   | T-683   |
|                 | FRP           |                    | TRB-1100 (2)   | T-683-F |
| 50/200          | Steel         | 50F-24H, 200B-12H  | TFB-7000 (2)   | T-683   |
|                 | FRP           |                    | TFB-1100 (2)   | T-638-F |
| 68/107          | Steel         | 68F-30H, 100B-10R  | -              | -       |
|                 | FRP           |                    | -              | -       |
| 68/150          | Steel         | 68F-30H, 150B-12H  | TFB-7000 (2)   | T-646   |
|                 | FRP           |                    | TFB-1100 (2)   | T-646-F |
| 68/200          | Steel         | 68F-30H, 200B-12H  | TFB-7000 (2)   | T-646   |
|                 | FRP           |                    | TFB-1100 (2)   | T-646F  |
| 88/150          | Steel         | 88F-126H, 150B-12H | -              | -       |
|                 | FRP           |                    | -              | -       |
| 88/200          | Steel         | 88F-126H, 200B-12H | TFB-7000 (2)   | T-685   |
|                 | FRP           |                    | TFB-1100 (2)   | T-685-F |
| 107/200         | Steel         | 100B-10R, 200B-12H | TFB-7000 (2)   | -       |
|                 | FRP           |                    | TFB-1100 (2)   | -       |

**1 kW/2 kW transducer**

| Output (W) | Frequency (kHz) | Hull Material | Transducer           | Thru-Hull Pipe | Tank    |
|------------|-----------------|---------------|----------------------|----------------|---------|
| 1 k/2 k    | 28/50           | Steel         | 28F-8, 50B-12        | -              | -       |
|            |                 | FRP           |                      | -              | -       |
|            | 28/68           | Steel         | 28F-8                | -              | -       |
|            |                 | FRP           | 68F-30H              | -              | -       |
|            | 28/200          | Steel         | 28F-8                | TWB-6000 (2)   | T-657   |
|            |                 | FRP           | 200B-8/8B/8N         | -              | -       |
|            | 50/88           | Steel         | 50B-6/6B             | -              | -       |
|            |                 | FRP           | 88B-10               | -              | -       |
|            |                 | Steel         | 50B-9/9B             | -              | -       |
|            |                 | FRP           | 88B-10               | -              | -       |
|            |                 | Steel         | 5F-8G                | TFB-7000 (2)   | T-636   |
|            |                 | FRP           | 88B-10               | TRB-1100 (2)   | T-636-F |
|            | 50/200          | Steel         | 50F-24H,<br>88F-126H | TFB-7000 (2)   | T-682   |
|            |                 | FRP           | -                    | TRB-1100 (2)   | T-682-F |
|            | 50/107          | Steel         | 50B-6/6B             | -              | -       |
|            |                 | FRP           | 200B-8/8B/8N         | -              | -       |
|            |                 | Steel         | 50B-9                | TWB-6000 (2)   | T-658   |
|            |                 | FRP           | 200B-8/8B/8N         | -              | -       |
|            |                 | Steel         | 50F-8G               | TFB-7000 (2)   | T-683   |
|            |                 | FRP           | 200B-8/8B/8N         | TFB-1100 (2)   | T-638-F |
|            | 88/200          | Steel         | 88B-8                | TWB-6000 (2)   | T-689   |
|            |                 | FRP           | 200B-8/8B/8N         | -              | -       |

**1 kW/3 kW transducer**

| Output (W) | Frequency (kHz) | Hull Material | Transducer | Thru-Hull Pipe | Tank |
|------------|-----------------|---------------|------------|----------------|------|
| 1 k/3 k    | 28/45           | Steel         | 28F-8      | -              | -    |
|            |                 | FRP           | 45F-12H    | -              | -    |
|            | 28/50           | Steel         | 28F-8      | -              | -    |
|            |                 | FRP           | 50F-24H    | -              | -    |
|            | 28/68           | Steel         | 28F-8      | -              | -    |
|            |                 | FRP           | 68F-30H    | -              | -    |
|            | 28/88           | Steel         | 28F-24H,   | -              | -    |
|            |                 | FRP           | 100B-10R   | -              | -    |
|            | 28/150          | Steel         | 28F-8      | -              | -    |
|            |                 | FRP           | 88F-126H   | -              | -    |
|            | 28/107          | Steel         | 28F-8      | -              | -    |
|            |                 | FRP           | 100B-10R   | -              | -    |
|            | 28/150          | Steel         | 28F-8      | -              | -    |
|            |                 | FRP           | 150B-12H   | -              | -    |
|            | 28/200          | Steel         | 28F-8      | -              | -    |
|            |                 | FRP           | 200B-12H   | -              | -    |
|            | 50/88           | Steel         | 50B-6/6B   | -              | -    |
|            |                 |               | 88F-126H   | -              | -    |
|            |                 | FRP           | 50B-9B     | -              | -    |
|            |                 |               | 88F-126H   | -              | -    |
|            |                 | Steel         | 50F-8G     | -              | -    |
|            | 88F-126H        |               | -          | -              |      |
|            | 50/107          | Steel         | 50B-6/6B   | -              | -    |
|            |                 |               | 100B-10R   | -              | -    |
|            |                 | FRP           | 50B-9/9B   | -              | -    |
|            |                 |               | 100B-10R   | -              | -    |
|            |                 | Steel         | 50F-8      | -              | -    |
|            | 100B-10R        |               | -          | -              |      |
|            | 50/150          | Steel         | 50B-6/6B   | -              | -    |
|            |                 |               | 150B-12H   | -              | -    |
| FRP        |                 | 50B-9/9B      | -          | -              |      |
|            |                 | 150B-12H      | -          | -              |      |
| Steel      |                 | 50F-8G        | -          | -              |      |
|            | 150B-12H        | -             | -          |                |      |

## EQUIPMENT LISTS

| Output (W) | Frequency (kHz) | Hull Material | Transducer | Thru-Hull Pipe | Tank |
|------------|-----------------|---------------|------------|----------------|------|
| 1 k/3 k    | 50/200          | Steel         | 50B-6/6B   | -              | -    |
|            |                 | FRP           | 200B-12H   | -              | -    |
|            |                 | Steel         | 50B-9/9B   | -              | -    |
|            |                 | FRP           | 200B-12H   | -              | -    |
|            |                 | Steel         | 50F-8G     | -              | -    |
|            |                 | FRP           | 200B-12H   | -              | -    |
|            | 68/107          | Steel         | 68F-8H     | -              | -    |
|            |                 | FRP           | 100B-10R   | -              | -    |
|            | 68/150          | Steel         | 68F-8H     | -              | -    |
|            |                 | FRP           | 150B-12H   | -              | -    |
|            | 68/200          | Steel         | 68F-8H     | -              | -    |
|            |                 | FRP           | 200B-12H   | -              | -    |
|            | 88/150          | Steel         | 88B-8      | -              | -    |
|            |                 | FRP           | 150B-12H   | -              | -    |
|            | 88/200          | Steel         | 88B-8      | -              | -    |
|            |                 | FRP           | 200B-12H   | -              | -    |

**2 kW/3 kW transducer**

| Output (W) | Frequency (kHz) | Hull Material | Transducer | Thru-Hull Pipe | Tank    |
|------------|-----------------|---------------|------------|----------------|---------|
| 2 k/3 k    | 28/45           | Steel         | 28F-18     | -              | -       |
|            |                 | FRP           | 45F-12H    | -              | -       |
|            | 28/50           | Steel         | 28F-18     | -              | -       |
|            |                 | FRP           | 50F-24H    | -              | -       |
|            | 28/68           | Steel         | 28F-18     | -              | -       |
|            |                 | FRP           | 68F-30H    | -              | -       |
|            | 28/88           | Steel         | 28F-18     | -              | -       |
|            |                 | FRP           | 88F-126H   | -              | -       |
|            | 28/107          | Steel         | 28F-18     | TFB-7000 (2)   | T-636   |
|            |                 | FRP           | 100B-10R   | TRB-1100 (2)   | T-636-F |
|            | 28/150          | Steel         | 28F-18     | TFB-7000 (2)   | T-637   |
|            |                 | FRP           | 150B-12H   | TRB-1100 (2)   | T-637-F |
|            | 28/200          | Steel         | 28F-18     | -              | -       |
|            |                 | FRP           | 200B-12H   | -              | -       |
|            | 50/88           | Steel         | 50B-12     | -              | -       |
|            |                 | FRP           | 88F-126H   | -              | -       |
|            | 50/107          | Steel         | 50B-12     | TFB-7000 (2)   | T-643   |
|            |                 | FRP           | 100B-10R   | TRB-1100 (2)   | T-643-F |
|            | 50/150          | Steel         | 50B-12     | TFB-7000 (2)   | T-644   |
|            |                 | FRP           | 150B-12H   | TRB-1100 (2)   | T-644-F |
|            | 50/200          | Steel         | 50B-12     | -              | -       |
|            |                 | FRP           | 200B-12H   | -              | -       |
|            | 68/107          | Steel         | 68F-30H    | -              | -       |
|            |                 | FRP           | 100B-10R   | -              | -       |
|            | 68/150          | Steel         | 68F-30H    | -              | -       |
|            |                 | FRP           | 150B-12H   | -              | -       |
|            | 68/200          | Steel         | 68F-30H    | -              | -       |
|            |                 | FRP           | 200B-12H   | -              | -       |
|            | 88/150          | Steel         | 88B-10     | -              | -       |
|            |                 | FRP           | 150B-12H   | -              | -       |
| 88/200     | Steel           | 88B-10        | -          | -              |         |
|            | FRP             | 200B-12H      | -          | -              |         |

## EQUIPMENT LISTS

**3 kW/2 kW transducer**

| Output (W) | Frequency (kHz) | Hull Material | Transducer   | Thru-Hull Pipe | Tank    |
|------------|-----------------|---------------|--------------|----------------|---------|
| 3 k/2 k    | 28/50           | Steel         | 28F-24H      | -              | -       |
|            |                 | FRP           | 50B-12       | -              | -       |
|            | 28/68           | Steel         | 28F-24H      | -              | -       |
|            |                 | FRP           | 68F-30H      | -              | -       |
|            | 28/88           | Steel         | 28F-24H      | -              | -       |
|            |                 | FRP           | 88B-10       | -              | -       |
|            | 28/200          | Steel         | 28F-24H      | -              | -       |
|            |                 | FRP           | 200B-8/8B/8N | -              | -       |
|            | 50/88           | Steel         | 50F-24H      | -              | -       |
|            |                 | FRP           | 88B-10       | -              | -       |
|            | 50/200          | Steel         | 50F-24H      | -              | -       |
|            |                 | FRP           | 200B-8/8B/8N | -              | -       |
|            | 68/200          | Steel         | 68F-30H      | TFB-7000 (2)   | T-647   |
|            |                 | FRP           | 200B-8/8B/8N | TRB-1100 (2)   | T-645-F |
|            | 88/200          | Steel         | 88F-126H     | -              | -       |
|            |                 | FRP           | 200B-8/8B/8N | -              | -       |
|            | 107/200         | Steel         | 100B-10R     | TFB-7000 (2)   | T-649   |
|            |                 | FRP           | 200B-8/8B/8N | TRB-1100 (2)   | T-649-F |
| FRP        |                 |               | -            | -              |         |

# 1. MOUNTING

---

## NOTICE

**Do not apply paint, anti-corrosive sealant or contact spray to coating or plastic parts of the equipment.**

Those items contain organic solvents that can damage coating and plastic parts, especially plastic connectors.

## 1.1 Display Unit



## WARNING

**Turn off the power at the switchboard before beginning the installation.**

Fire or electrical shock can result if the power is left on.

### Mounting considerations


- Locate the unit out of direct sunlight.
- The operator should face the bow while viewing the display screen.
- Select a location where the display screen can be easily observed while operating the control unit.
- Leave sufficient space around the unit for maintenance and servicing. Recommended maintenance space appears in the outline drawing at the back of this manual.

## 1. MOUNTING

### Mounting procedure

#### Desktop mounting

1. Loosen two M6 x 25 bolts at the front of the display unit to remove the mounting base.

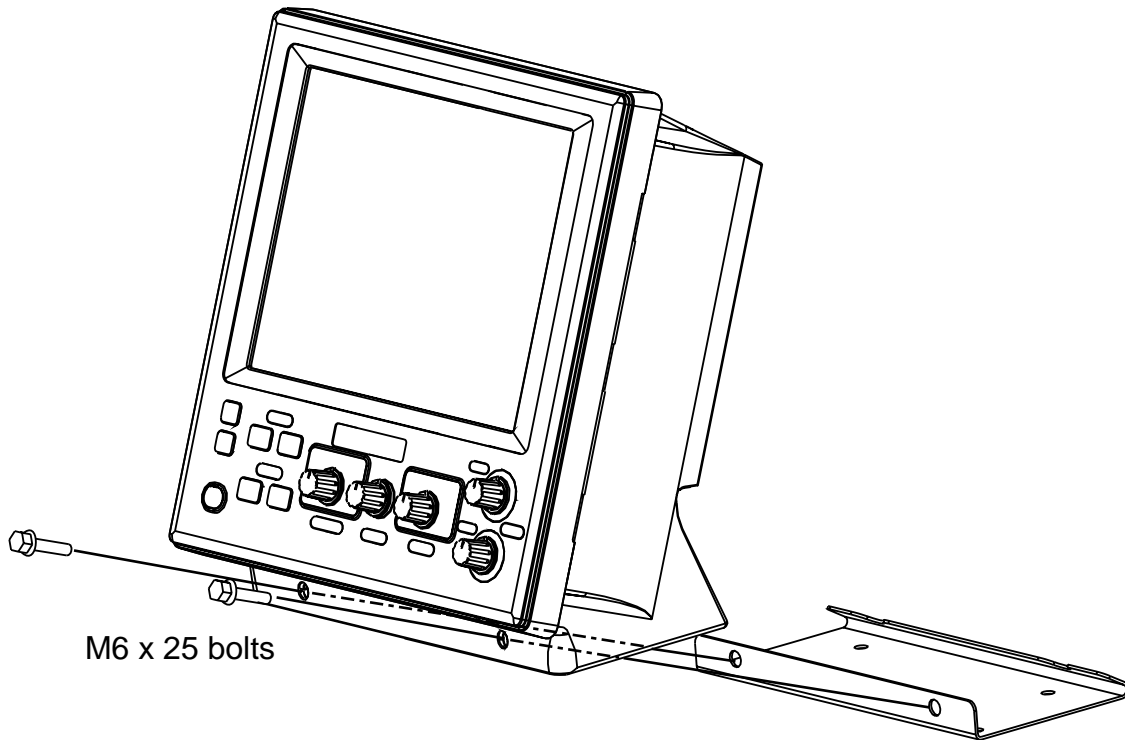



#### *Removing the display unit from the mounting base*

2. Use the four tapping screws (5 x 20, supplied as installation materials) to fasten the mounting base.
3. Apply grease to the bolts removed at step 1.
4. Lay the display unit on the mounting base. Fasten the display unit to the mounting base with the two M6 x 25 bolts greased at step 3.




**Flush mounting**

1. Make cutout in mounting location referring to the outline drawing show below.
2. Attach the flush mounting sponge (supplied as installation materials) to the display unit.
3. Fasten the display unit to the mounting location with four pan head screws.

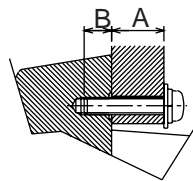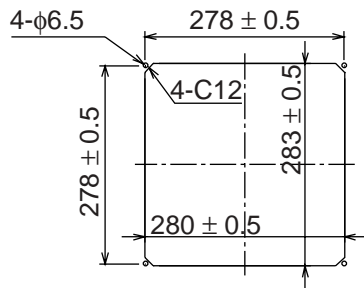


Fixing screw, side view

Use pan head screws (local supply) when the thickness of the bulkhead is from 11 to 14 mm. For bulkhead which exceeds 14 mm in thickness the length of the pan head screws should be bulkhead thickness (A) plus 7.3 + 1.5 mm. Also the length of B should be max. 7 mm.

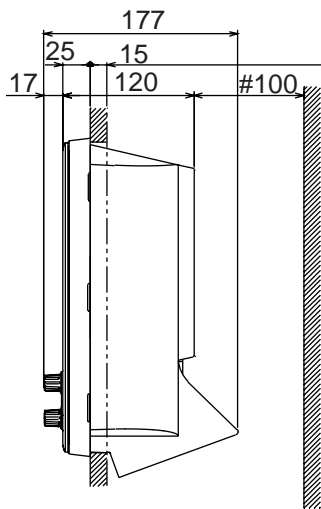

Side view

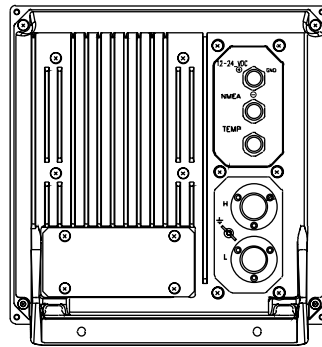

Rear view

*Flush mounting display unit*

## 1. MOUNTING

### 1.2 Transducer


The performance of the video sounder depends upon the transducer position. A place least affected by air bubbles should be selected since turbulence blocks the sounding path. Further, select a place least influenced by engine noise. It is known that air bubbles are fewest at the place where the bow first falls and the next wave rises, at usual cruising speed.

**Note:** The face of the transducer must be facing the sea bottom in normal cruising trim of the boat.

### 1.3 Water Temperature Sensor (option)

#### Transom mount water temperature sensor T-02MTB



- Fix the cable at a convenient location on the transom with the cable clamp.
- When the cable is led through the transom board, make a hole of approx. 17 mm in diameter to pass the connector. After passing the cable. Seal the hole with a sealing compound.

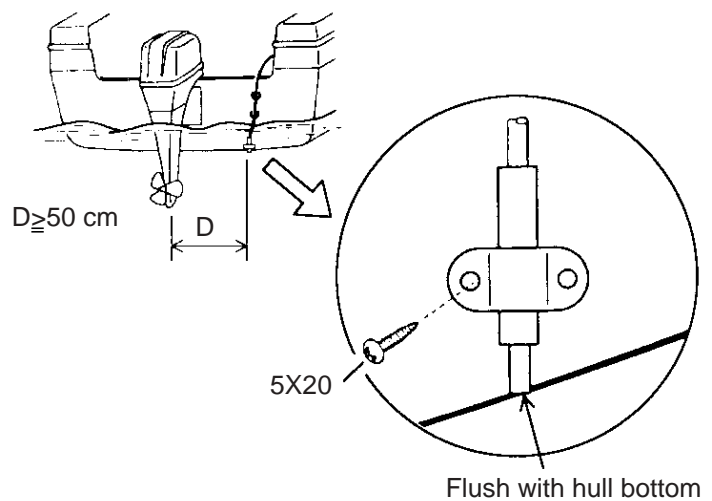

*How to mount transom mount water  
Temperature sensor T-02MTB*

## Thru-hull mount water temperature sensor T-02MSB, T-03MSB

- Select a suitable mounting location considering the following points:
- Select a mid-boat flat position. The sensor does not have to be installed perfectly perpendicular; however, the location should not be such that the transducer may be damaged when the boat is dry-docked.
- Locate away from equipment which gives off heat.
- Locate away from drain pipes.
- Select a location where vibration is minimal.
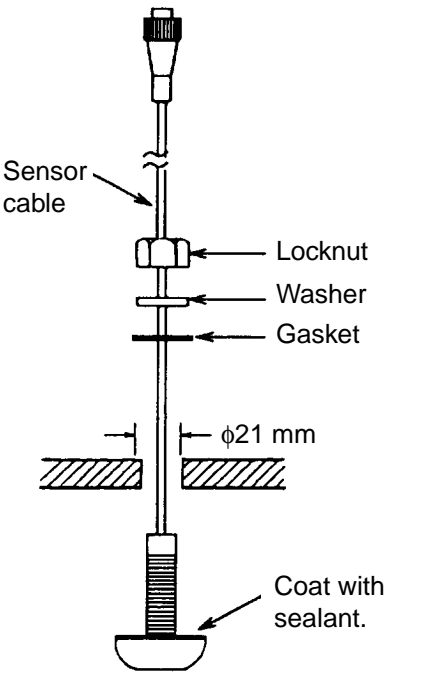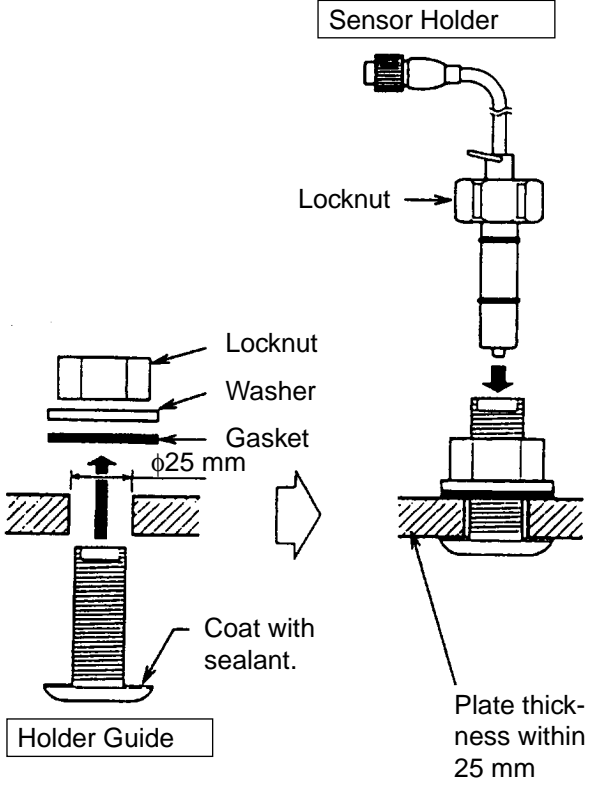
| T-02MSB  | T-03MSB   |
|--|---|
|  <p>The diagram shows the T-02MSB sensor assembly. A sensor cable passes through a hole in a plate. From top to bottom, the components are: a locknut, a washer, and a gasket. The sensor cable ends in a flange that is coated with sealant and inserted into the hole. The hole diameter is labeled as <math>\phi 21</math> mm.</p> <p><b>Mounting procedure</b></p> <ol style="list-style-type: none"> <li>1. Drill a hole of 21 mm in diameter in the mounting location.</li> <li>2. Pass the sensor cable through the hole.</li> <li>3. Pass gasket, washer and locknut onto cable in that order.</li> <li>4. Coat the sensor flange with high quality sealant and then fasten the sensor with the locknut. (Torque: max. 59N·m)</li> <li>5. Launch the boat to check for water leakage around the sensor.</li> </ol> |  <p>The diagram shows the T-03MSB sensor assembly. It includes a 'Sensor Holder' and a 'Holder Guide'. The holder guide is a vertical tube with a hole of <math>\phi 25</math> mm diameter. The sensor holder is inserted into this hole from the inside of the boat. The holder guide is coated with sealant. A locknut, washer, and gasket are used to secure the holder guide to the plate. The plate thickness is noted as being within 25 mm.</p> <p><b>Mounting procedure</b></p> <ol style="list-style-type: none"> <li>1. Drill a hole of 25 mm in diameter in the mounting location.</li> <li>2. Coat holder guide with high quality sealant, and pass gasket, washer and locknut onto holder guide in that order and then tighten the locknut.</li> <li>3. Set the sensor holder to the holder guide from inside the boat and then tighten the locknut.</li> <li>4. Launch the boat to check for water leakage around the sensor.</li> </ol> |

*Assembling thru-hull water temperature sensor T-02MSB, T-03MSB*


## 1. MOUNTING

### Through-hull mount water temperature/speed sensor ST-02MSB, ST02-PSB

Select a suitable mounting location considering the following:

- Select a mid-boat flat position. The sensor does not have to be installed perfectly perpendicular. The sensor must not be damaged in dry-docking operation.
- Select a place apart from equipment generating heat.
- Select a place in the forward direction viewing from the drain hole, to allow for circulation of cooling water.
- Select a place free from vibration.


1. Dry-dock the boat.
2. Make a hole of approx. 51 mm diameter.
3. Unfasten locknut and remove the sensor section.
4. Apply high-grade sealant to the flange of the sensor.
5. Pass the sensor casing through the hole.
6. Face the notch on the sensor toward boat's bow and tighten the flange.
7. Set the sensor section to the sensor casing and tighten the locknut.
8. Launch the boat and check for water leakage around the sensor.

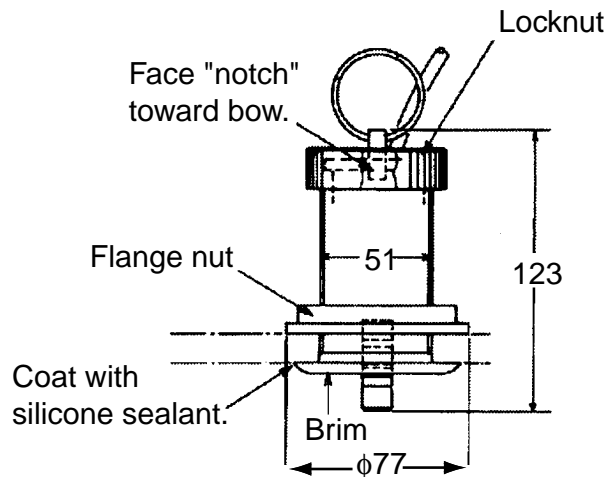

*Water temperature/speed sensor ST-02MSB, ST-02PSB*

# 2. WIRING

Refer to the interconnection diagram at the back of this manual for detailed information.

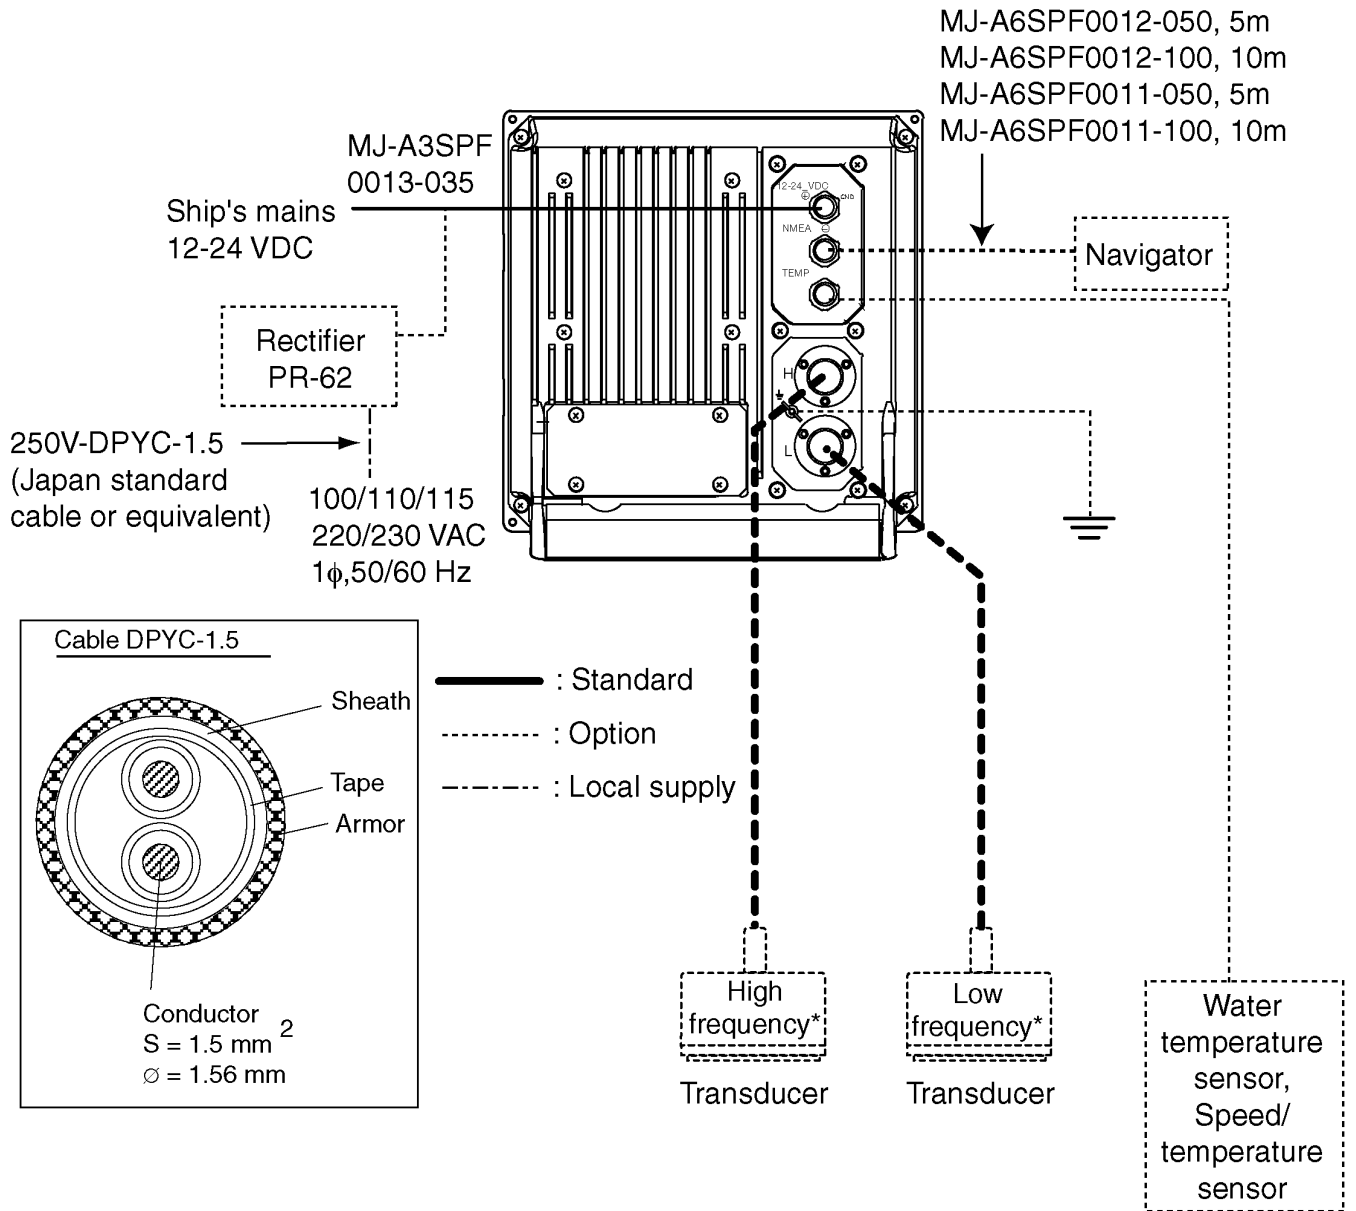


Wiring diagram for standard-type FCV-1100L

## 2.1 Wiring Standard Equipment

### Transducer

Separate the transducer cable well away from power cables to prevent interference. Connect the cable to the transducer connector at the rear of the display unit. Fabricate the cable as below.

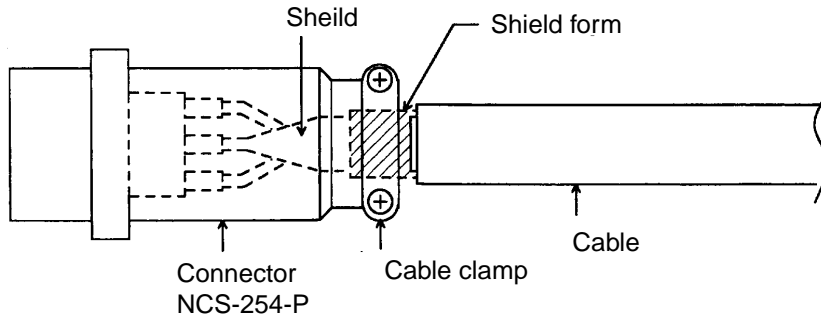

*Fabrication of transducer cable*

**Note 1:** For connection of dual-frequency transducer, use cable assy. NCS255AD-254P-L500 (option).

**Note 2:** Do not connect the transducer of 38 kHz or lower to the high frequency connector.


**Note 3:** FCV-1100L cannot accept the transducers of 54 – 64 kHz, 112 – 122 kHz and 171 – 181 kHz.

### Power cable

This video sounder is designed to be powered with 12-24 VDC power. Use the cable assy MJ-A3SPF0013-035 (supplied as installation material).

### Ground

The display unit should be grounded to prevent mutual interference. Connect an earth wire (2 sq, local supply) between unit and ship's superstructure to ground. The length of the earth wire should be as short as possible.

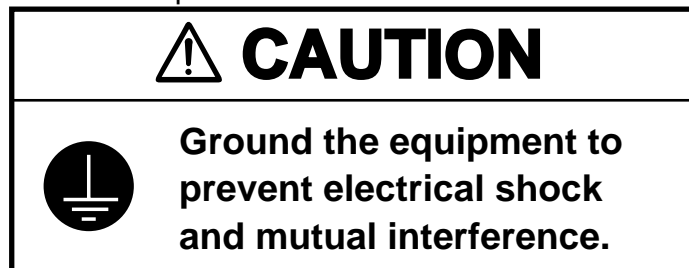

## 2.2 Wiring Optional Equipment

### Navigator

Use cable type MJ-A6SPF0011/0012 (option) to connect the navigator to the NMEA connector.

### Water temperature sensor T-02MSB, T-02MTB, T-03MSB

Connect the water temperature sensor cable to the TEMP connector.

## 2.3 Input/Output Sentences

### Input sentences

| Sentence | Data  | Remarks      |
|----------|---|--------------|
| BWC      | Range/bearing to waypoint   |              |
| GGA      | Time, position  |              |
| GLC      | GRI, TD (Loran C)   |              |
| GLL      | Latitude and longitude  |              |
| GTD      | TD (Loran C)  |              |
| MTW      | Water temperature   |              |
| RMA      | Latitude and longitude, TD, ground speed and course by a LORAN-C receiver |              |
| RMB      | Recommended minimum navigation information                                |              |
| RMC      | Latitude and longitude, speed over ground and course over by a GPS        |              |
| VHW      | True/magnetic bearing, speed through water                                | Great circle |
| VTG      | Speed through the ground and course                                       |              |
| XTE      | Cross track error   |              |

### Output sentences

| Sentences | Talker | Data                    | Remarks   |
|-----------|--------|-------------------------|---|
| DBS       | SD     | Depth below sea surface | Ver. 1.5  |
| DBT       | SD     | Depth below transducer  | Ver. 1.5  |
| DPT       | SD     | Depth below transducer  | Ver. 2.0  |
| MTW       | YC     | Water temperature       | Ver. 1.5 Ver. 2.0 with connection of water temperature sensor |
| TLL       | SD     | Marker line position    | Ver. 2.0  |
| VRM       | SD     | VRM depth               |   |
| VHW       | VW     | Ship's speed            |   |

## 2. WIRING

This page is intentionally left blank.




# 3. INITIAL SETTING

---

This section provides the information necessary for initial setup of the equipment. First turn on the power and set display language. In addition, either transducer used, by model number (FURUNO transducer only) or by specifications.

## 3.1 Language Setting

1. Turn on the power. The following display appears.

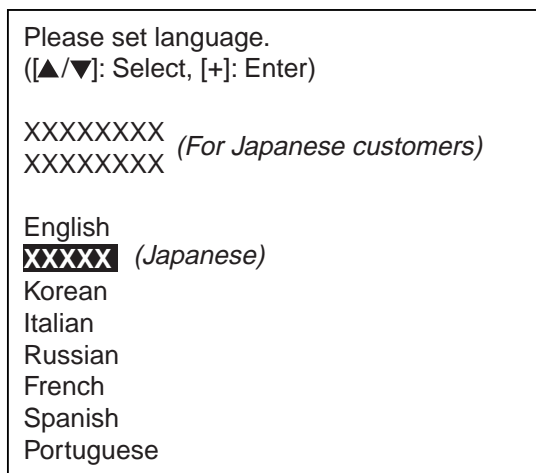

*Initial display screen*

2. Press [▲] to select English, and then press the [+] key to set. The following display appears. For other languages, select appropriately.


```
Carry out transducer setting.
Press any key to go to Transducer setting menu.
```


3. Set transducer type. Then, go to applicable section (s) by pressing any key.

**Note:** If the language setting is inappropriate follow the procedure below to choose appropriate language.

1. Rotate the [FUNCTION] switch fully clockwise to open the menu.
2. Press the [▲] key to move the cursor to the top of the menu.
3. Press the [+] key to choose menu item (SYSTEM) at far-right side of screen.
4. Press the [▼] key to choose 1st item (SYSTEM SETTING) in menu.
5. Press the [+] key.
6. Press the [▼] key to choose last item (LANGUAGE) in menu.
7. Press the [+] or [-] key to choose appropriate language.
8. Press the [▲] key.
9. Rotate the [FUNCTION] switch.

### 3.2 Transducer Data

|  |
|--|
|  <b>CAUTION</b>   |
| <p><b>Set the transducer model number properly.</b></p> <p>Wrong transducer setting can damage the transducer and void the warranty.</p> |

|  |
|--|
|  <b>CAUTION</b>   |
| <p><b>Do not enter transducer data by specifications if model number of transducer used is programmed in the equipment.</b></p> <p>Wrong transducer setting can damage the transducer and void the warranty.</p> |

The following models are programmed in the FCV-1100L.

| Maker  | Frequency   | Type              | Remarks                               |
|--------|-------------|-------------------|---------------------------------------|
| Simrad | 38 kHz      | 38E-9-18S1 (2kW)  |                                       |
| Airmar | 38 kHz      | 38E-M42 (3 kW)    |                                       |
| Honda  | 36 kHz      | 32/40 (3 kW)      |                                       |
|        | 41 kHz      | 40/75 (3 kW)      |                                       |
|        | 50 kHz      | 50/200/400 (2 kW) |                                       |
|        |             | 50/3K/3F (3 kW)   |                                       |
|        | 67 kHz      | 40/75 (3 kW)      |                                       |
|        | 200 kHz     | 50/200/400 (2 kW) |                                       |
| Suzuki | 50, 200 kHz | TGM50/200         | Same as Furuno makes 50/200-1T (1 kW) |

## Entering transducer data by transducer model number

**Note 1:** If you are continuing from paragraph 3.1 go to step 2.

**Note 2:** If you have already entered transducer settings and to reconfirm them turn on the power while pressing any key.

1. Turn on the power.
2. Press any key to show the following menu.


| XDCR SELECT                             | INSTALLATION | DEMO          |
|---|--------------|---------------|
| XDCR SELECT : XDCR TYPE                 |              |               |
| [HIGH]                                  |              |               |
| CONNECTION                              | :            | NOT CONNECTED |
| FREQ                                    | :            | ---kHz        |
| TRANSDUCER                              | :            | ----          |
| TAP                                     | :            | --            |
| [LOW]                                   |              |               |
| CONNECTION                              | :            | NOT CONNECTED |
| FREQ                                    | :            | --- kHz       |
| TRANSDUCER                              | :            | ----          |
| TAP                                     | :            | --            |
| POWER REDUCTION : OFF                   |              |               |
| [-/+]: Change setting, Turn OFF to exit |              |               |

*Installation main menu*

**Note:** XDCR SETTING is set to “XDCR TYPE” at the default setting.


### 3. INITIAL SETTINGS

3. Press [▼] to select [HIGH] CONNECTION or [LOW] CONNECTION (whichever is installed), and then press [+] or [-] to show the dialog box. Select CONNECTED for the connection of transducer.
4. Press [▲] or [▼] to close the dialog box.
5. Press [▼] to select FREQ.
6. Press [+] or [-] to show the dialog box. The scroll bar at the bottom of the dialog box shows cursor position in relation to the entire menu.

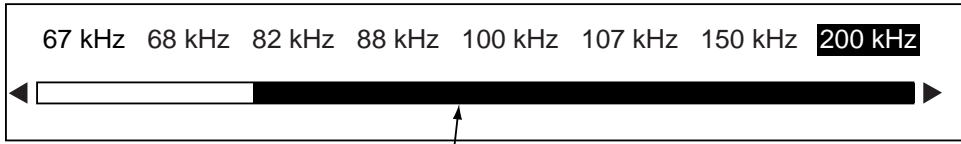

Scroll bar

7. Press [+] or [-] to select frequency, (HIGH: 41 kHz and higher, LOW: 28 kHz and higher are available.) and then press [▲] or [▼] to close the dialog box.
8. Press [▼] to select TRANSDUCER, and then press [+] or [-] to open the dialog box.

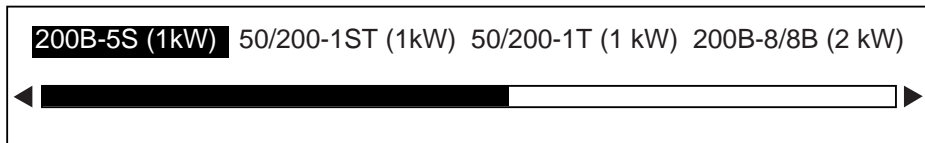

Dialog box for 200 kHz

9. Press [+] or [-] to select model number, and then press [▲] or [▼] to close the dialog box.
10. Jot down alphabet which appears on "TAP" line. You may change the terminal board setting at the rear of the display unit depending on the transducer type which is connected. For details, see page 3-5.
11. Follow steps 3-10 to enter model number of other transducer if installed.  
**Note:** For dual-frequency transducer, enter both high and low frequencies and set the same transducer model number for both high and low frequencies.
12. Press [▼] to select PWR REDUCTION, and then press [+] or [-] to open the dialog box.



13. Press [+] or [-] to turn the power reduction ON or OFF (default setting).
14. Press [▲] or [▼] to close the dialog box.
15. Confirm settings and turn off the power.

**Note:** If the system detects frequency mismatch the message "Frequency unmatched error! Press any key to go to Transducer setting menu." appears at the next powering of the equipment. Press any key to go to the transducer setting menu and reenter transducer data.


## Transducer setting

Change the terminal board setting at the rear of the display unit according to the transducer connected.

Note the alphabet which appeared when selecting the transducer type on the installation main menu (page 3-4), and then do the following procedures.

1. Dismount the display unit from the mounting place.
2. Loosen four screws to remove the rear cover.


**Note:** There is no gasket for lid. (The groove around the terminal board does not hold a gasket.)

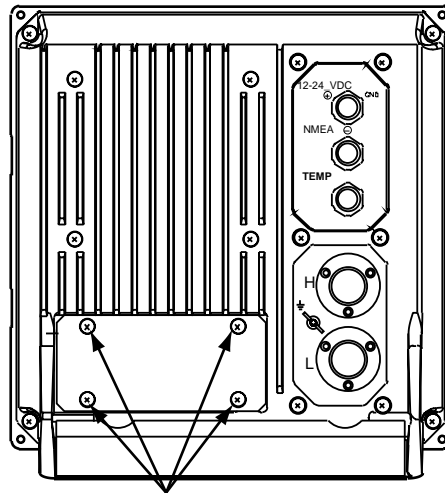

Loosen these screws.

*Display unit, rear view*

3. Fasten the crimp-on lug to the appropriate terminal according to alphabet appearing on the installation menu.

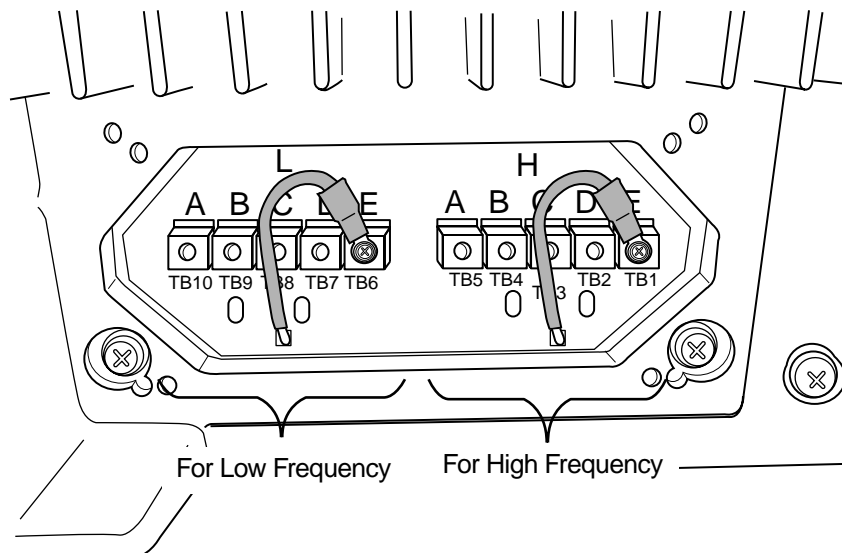

*Terminal board*

4. Remount the display unit.

### 3. INITIAL SETTINGS

## Entering transducer data by transducer specifications

**For dealer:** When connecting the transducers which are not programmed, contact to PRODUCT SERVICE SECTION SERVICE CENTER, FURUNO HEAD OFFICE. For new transducer or other make of transducer see FURUNO information for further information.

**Note 1:** If you are continuing from paragraph 3.1, go to step 2.

**Note 2:** If you have already entered transducer settings and wait to reconfirm them turn on the power while pressing any key.

**Note 3:** The transducers of 54 – 64 kHz, 112 – 122 kHz and 171 – 181 kHz cannot be connected to the FCV-1100L because of noise. (Available range: HIGH; 40 – 220 kHz, LOW; 25 –220 kHz).

1. Turn on the power.
2. Press any key.
3. Press [▼] to select XDCR SELECT, and then press [+] or [-] to show the dialog below.

**XDCR TYPE** MANUAL

4. Press [+] to select MANUAL, and then press [▲] or [▼] to close the dialog box. The display should now look something like the one below.

|   |
|---|
| <b>XDCR SELECT</b> INSTALLATION DEMO                                    |
| <b>XDCR SELECT</b> : <b>MANUAL</b>                                      |
| [HIGH]<br>CONNECTION : NOT CONNECTED<br>FREQ : ---kHz                   |
| [LOW]<br>CONNECTION : NOT CONNECTED<br>FREQ : --- kHz                   |
| POWER REDUCTION : OFF   |
| Select how to set XDCR type.<br>[-/+]: Change setting, Turn OFF to exit |

#### *Menu for manual entry of transducer specifications*

5. Do the following for both the high and low frequency transducers, or whichever transducer is installed.
  - a) Press [▼] to select CONNECTION of [HIGH] or [LOW], and then press [+] or [-] to open the dialog box.

NOT CONNECTED **CONNECTED**

- b) Use [+] or [-] to select CONNECTED, and then press [▲] or [▼] to close the dialog box.
- c) Press [▼] to select FREQ, and press [+] or [-] to display the frequency setting dialog box.

--- kHz

- d) Use [+] or [-] to set the value for the frequency which is connected, and then press [▲] or [▼] to close the dialog box. (Available range: HIGH; 40 – 220 kHz, LOW; 25 – 220 kHz)
- e) To operate the transducer in reduced power (for example, when vessel is in dry dock), press [▼] to select PWR REDUCTION, and then press [+] or [-] to open the dialog box.



- f) Press [+] or [-] to turn the power reduction ON, and then press [▲] or [▼] to close the dialog box.
6. Confirm settings and turn off the power.

### 3.3 Water Temperature Sensor Setting

If a water temperature sensor is connected, set up as follows:

1. Turn on the power and turn the [FUNCTION] switch to the MENU position.
2. Press [▲] and [+] to select SYSTEM at the top of the screen.
3. Press [▼] to select TEMP SETTING, and then press [+] to open that menu.

|                                 |     |                   |     |               |
|---------------------------------|-----|-------------------|-----|---------------|
| DISP                            | ALM | TX/RX             | E/S | <b>SYSTEM</b> |
| <b>TEMP SETTING</b>             |     |                   |     |               |
| <b>TEMP UNIT</b>                | :   | <b>°F</b>         |     |               |
| TEMP INPUT                      | :   | SENSOR            |     |               |
| TEMP ADJUST                     | :   | +0.00°F (-20~+20) |     |               |
| TEMP OUTPUT                     | :   | OFF               |     |               |
| TEMP READOUT                    | :   | OFF               |     |               |
| TEMP GRAPH                      | :   | OFF               |     |               |
| TEMP COLOR                      | :   | STD               |     |               |
| Select temperature unit.        |     |                   |     |               |
| [-/+]: Change set, [EXIT]: Exit |     |                   |     |               |

#### TEMP SETTING menu

4. The cursor is selecting TEMP UNIT; press [+] or [-] to open the dialog box.



5. Press [+] or [-] to select the temperature unit, and then press [▲] or [▼] to close the dialog box.

### 3. INITIAL SETTINGS

6. Press [▼] to select TEMP INPUT, and then press [+] or [-] to open the dialog box.

**SENSOR** NMEA

7. Use [+] or [-] to select source of water temperature data, and then press [▲] or [▼] to close the dialog box.

SENSOR: Water temperature sensor T-02MSB, T-02MTB or T-03MSB inputs water temperature data. This is the default setting.

NMEA: Water temperature data input from external equipment.

8. When selecting SENSOR at TEMP INPUT, you may offset water temperature data to further refine its accuracy. This must be done with the boat in water.

- a) Press [▼] to select TEMP ADJUT, and then press [+] or [-] to open the dialog box.

**+0.00**

- b) Watch the water temperature readout on the monitor (if it is not displayed set TEMP READOUT to ON) and compare it with known value.
- c) Use [+] or [-] to enter the difference found in b) above. For example, if the indication of the FCV-1100L is +5° higher than the actual value, enter -5 (degree).
- d) Press [▲] or [▼] to close the dialog box.

9. Press [▼] to select TEMP OUTPUT, and then press [+] or [-] to open the dialog box.

**OFF** ON

10. Use [-] or [+] to turn the water temperature indication (NMEA) ON or OFF respectively, and then press [▲] or [▼] to close the dialog box.

11. Press [▼] to select TEMP READOUT, and then press [+] to open the dialog box.

**OFF** ON

12. Use [-] or [+] to select the temperature display, and press [▲] or [▼] to close the dialog box.

13. Press [▼] to select TEMP GRAPH and [+] or [-] to open the dialog box.

**OFF** NARROW STD EXPAND

14. Press [+] or [-] to select temperature scale graduation interval, and then press [▲] or [▼] to close the dialog box.

15. Press [▼] to select TEMP COLOR and [+] or [-] to open the dialog box.

**STD** WHITE RED BLACK YELLOW

16. Use [+] or [-] to select the color of the water temperature graph for STD (blue in default setting but then press [▲] or [▼] to close the dialog box.

17. Turn the [FUNCTION] switch to EXIT position to quit.



## 3.4 Nav Data, Heading Sensor Setting

Select navigator and heading sensor used as below.

1. Turn on the power and turn the [FUNCTION] switch to the MENU position.
2. Press [ $\blacktriangle$ ] and [+] to select SYSTEM at the top of the screen.
3. Press [ $\blacktriangledown$ ] to select NAV DATA SETTING, and then press [+] to open that menu. (If a heading sensor is connected but not a navigator, go to step 18.)

|                                 |     |               |     |               |
|---------------------------------|-----|---------------|-----|---------------|
| DISP                            | ALM | TX/RX         | E/S | <b>SYSTEM</b> |
| <b>NAV DATA SETTING</b>         |     |               |     |               |
| <b>SPEED UNIT</b>               | :   | <b>kt</b>     |     |               |
| SPEED INPUT                     | :   | SENSOR        |     |               |
| SPEED ADJUST                    | :   | +0% (-50~+50) |     |               |
| SPEED OUTPUT                    | :   | ON            |     |               |
| SPEED INFO                      | :   | OFF           |     |               |
|                                 |     |               |     |               |
| NMEA VERSION                    | :   | Ver 2.0       |     |               |
| NAV DATA                        | :   | AUTO          |     |               |
| COURSE                          | :   | TRUE          |     |               |
|                                 |     |               |     |               |
| TLL OUTPUT                      | :   | OFF           |     |               |
|                                 |     |               |     |               |
| Select speed unit.              |     |               |     |               |
| [-/+]: Change set, [EXIT]: Exit |     |               |     |               |

### NAV DATA SETTING menu

4. The cursor is selecting SPEED UNIT; press [+] or [-] to open the dialog box.

|           |      |     |
|-----------|------|-----|
| <b>kt</b> | km/h | MPH |
|-----------|------|-----|

5. Use [-] or [+] to select the speed unit, and then press [ $\blacktriangle$ ] or [ $\blacktriangledown$ ] to close the dialog box.
6. Press [ $\blacktriangledown$ ] to select SPEED INPUT, and then press [+] or [-] to open the dialog box.

|               |      |
|---------------|------|
| <b>SENSOR</b> | NMEA |
|---------------|------|

7. Use [+] or [-] to select the source of speed data, and then press the [ $\blacktriangle$ ] or [ $\blacktriangledown$ ] to close the dialog box.

SENSOR: Speed/temperature sensor

NMEA: Speed data input from the equipment connected.

8. Press [ $\blacktriangledown$ ] to select SPEED ADJUST, and the press [+] to open the dialog box.

|             |
|-------------|
| <b>+0.0</b> |
|-------------|

9. You may offset speed data to further refine its accuracy. This is not possible when the speed input is "NMEA".
  - a) Watch the speed sensor readout on the monitor (if it is not displayed set SPEED INFO to ON) and compare it with known value.
  - b) Use [+] or [-] to enter the difference found in a) above. For example, if the indication of the FCV-1100L is +5 % faster than the actual value, enter -5.

### 3. INITIAL SETTINGS

$$\text{Adjustment value} = \frac{\text{Actual value} - \text{Indication of FCV-1100L}}{\text{Actual value}} \times 100 (\%)$$

c) Press [ $\blacktriangle$ ] or [ $\blacktriangledown$ ] to close the dialog box.

10. Press [ $\blacktriangledown$ ] to select SPEED OUTPUT, and then press the [+] or [-] key to open the dialog box.

**OFF** ON

11. Use [+] or [-] to turn the speed output ON (default setting) or OFF, and press [ $\blacktriangle$ ] or [ $\blacktriangledown$ ] to close the dialog box.

12. Press [ $\blacktriangledown$ ] to select SPEED INFO, and then press [+] or [-] to open the dialog box.

**OFF** ON

13. Press [+] or [-] to turn the speed indication (NMEA) OFF (default setting) or ON, and then press [ $\blacktriangle$ ] or [ $\blacktriangledown$ ] to close the dialog box. If no navigator is connected, turn the [FUNCTION] switch to other position to quit.

14. Press [ $\blacktriangledown$ ] to select NMEA VERSION, and then press [+] or [-] to open the dialog box.

Ver 1.5 **Ver 2.0** Ver 3.0 SPECIAL

15. Use [+] or [-] to select NMEA version no. (default setting is Ver 2.0) of the navigator, and then press [ $\blacktriangle$ ] or [ $\blacktriangledown$ ] to close the dialog box. If you are unsure of the version no., try all three to see which one successfully receives position data. SPECIAL is for use with a navigator whose baud rate is 600 bps.

16. Press [ $\blacktriangledown$ ] to select NAV DATA, and then press [+] or [-] to open the dialog box.

LC LA DECCA GPS DR **AUTO**

17. Use [+] to select type of navigator connected, and then press [ $\blacktriangle$ ] or [ $\blacktriangledown$ ] to close the dialog box. AUTO (default setting) selects a navigator in the order of GPS, Loran C, Loran A, Decca, DR (Dead Reckoning).

18. Press [ $\blacktriangledown$ ] to select COURSE, and then press [+] or [-] to open the dialog box.

**TRUE** MAG

19. Use [+] or [-] to select TRUE or MAG (magnetic bearing) as appropriate, and then press [ $\blacktriangle$ ] or [ $\blacktriangledown$ ] to close the dialog box. TRUE is the default setting.

20. Press [ $\blacktriangledown$ ] to select TLL (Target latitude, Longitude) OUTPUT, and then press [+] or [-] to open the dialog box.

**OFF** ON

21. TLL OUTPUT enables or disables output of position data from the video sounder to external equipment, at the moment the [MARKER TLL] key is pressed. Use [+] or [-] to select ON or OFF (default setting) as appropriate, and then press [ $\blacktriangle$ ] or [ $\blacktriangledown$ ] to close the dialog box.

22. Turn the [FUNCTION] switch to EXIT position to quit.

## 3.5 Propagation Velocity

This section provides the information for adjustment of propagation velocity. Normally, no adjustment is necessary, however if the depth indication is wrong, lower or raise propagation velocity as appropriate.

1. Turn on the power while pressing any key to show the installation main menu.
2. Press [+] or [-] to select INSTALLATION.

|   |                     |      |
|---|---------------------|------|
| XDCR SETTING                            | <b>INSTALLATION</b> | DEMO |
| SOUND SPEED : 1500.0 m/s (200~2000)     |                     |      |
| INVERTER FREQ : LO (59/118/177 kHz)     |                     |      |
| [-/+]: Change setting, Turn OFF to exit |                     |      |

### *INSTALLATION menu*

3. Press [▼] to select SOUND SPEED, and then press [+] or [-] to open the dialog box.

|                   |
|-------------------|
| <b>1500.0 m/s</b> |
|-------------------|

4. Use [+] or [-] to enter value, and then press [▲] or [▼] to close the dialog box. The default setting is 1500.0 (m/s) and the setting range is 200-2000 (m/s).
5. Turn off the power to quit.

## 3.6 Demonstration Mode

The demonstration mode provides a simulated video sounder picture. Connection of the transducer is not necessary. All controls are operational.

1. Turn on the power while pressing any key to display the installation main menu.
2. Press [+] to select DEMO.

|  |
|--|
| XDCR SETTING INSTALLATION <b>DEMO</b>    |
| DEMO MODE : OFF                          |
| [-/+] : Change setting, Turn OFF to exit |

### *DEMO menu*

3. Press [▼] to select DEMO MODE, and then press [+] or [-] to open the dialog box.

|               |
|---------------|
| <b>OFF</b> ON |
|---------------|

4. Use [+] or [-] to select ON or OFF (default setting) as appropriate, and then press [▲] or [▼] to close the dialog box.
5. Turn off the power.
6. Turn on the power again after five seconds. "<DEMO>" appears at the bottom of the screen when the demonstration mode is on.

## 3.7 Restoring Default Settings

The procedure below restores most default settings. Are not affected: target setting, language, demo mode, transducer settings, user color settings and user clutter settings.

1. Turn on the power and turn the [FUNCTION] switch to the MENU position.
2. Press [ $\blacktriangle$ ] and [+] to select SYSTEM at the top of the screen.
3. Press [ $\blacktriangledown$ ] to select DEFAULT SETTING, and then press [+] key.

|  |
|--|
| DISP ALM TX/RX E/S <span style="border: 1px solid black; padding: 2px;">SYSTEM</span>  |
| <span style="border: 1px solid black; padding: 2px;">DEFAULT SETTING</span>  |
| <div style="display: flex; justify-content: space-between; align-items: center;"> <span style="background-color: black; color: white; padding: 2px 5px;"><b>DEFAULT SET</b></span> <span style="font-size: 2em;">:</span> <span style="background-color: black; color: white; padding: 2px 5px;"><b>NO</b></span> </div> |
| <p style="font-size: 0.8em; margin-top: 20px;">[-/+]: Change set, [EXIT]: Exit</p>   |

4. Press [+] or [-] to open the dialog box.

[-]: NO [+] : YES

5. Press [+] to restore default settings.
6. Three beeps sound and then normal operation is restored.

This page is intentionally left blank.

# APPENDIX 1

## TRANSDUCER 50BL-12/50BL-24H

When using the transducer 50BL-12/50BL-24H, see this appendix.

### Transducer, thru-hull pipe and tank list

| Frequency (kHz) | Transducer        | Hull Material | Tank (Code No.)         | Fasten inside hull (Code No.) | Fasten outside hull (Code No.) |
|-----------------|-------------------|---------------|-------------------------|-------------------------------|--------------------------------|
| 50/200          | 50BL-12/200B-8B   | Steel         | T-693<br>(000-015-044)  | TWB-6000<br>(000-015-207)     | TFB-7000<br>(000-015-209)      |
|                 |                   | FRP           | T-693F<br>(000-015-241) | TWB-1100<br>(000-015-218)     | -                              |
| 28/50           | 28F-24H/50BL-24H  | Steel         | T-696<br>(000-015-048)  | TWB-6000<br>(000-015-207)     | TFB-7000<br>(000-015-209)      |
|                 |                   | FRP           | T-696F<br>(000-015-244) | TRB-1100<br>(000-015-218)     | -                              |
| 50/88           | 50BL-24H/88F-126H | Steel         | T-697<br>(000-015-239)  | TWB-6000<br>(000-015-207)     | TFB-7000<br>(000-015-209)      |
|                 |                   | FRP           | T-697F<br>(000-015-245) | TRB-1100<br>(000-015-218)     | -                              |
| 50/200          | 50BL-24H/200B-12H | Steel         | T-695<br>(000-015-047)  | TWB-6000<br>(000-015-207)     | TFB-7000<br>(000-015-209)      |
|                 |                   | FRP           | T-695F<br>(000-015-243) | TRB-1100<br>(000-015-218)     | -                              |

### Settings

- Referring page 3-6, set the menu as below.  
 XDCR SELECT:       MANUAL  
 FREQ:                50 kHz
- At the terminal board at the rear of the display unit, fasten the crimp-on lug to C position.  
 (See page 3-5.)

| Frequency | Output (kW) | Transducer | Terminal |
|-----------|-------------|------------|----------|
| 50        | 2           | 50BL-12    | C        |
|           | 3           | 50BL-24H   | C        |

# APPENDIX 2

## BLT TRANSDUCERS

The BLT transducer (Bolt-clamp Langevin Transducer) has large bandwidth, good sound efficiency, compact structure and is reinforced for protection against slamming.

### Transducer, thru-hull pipe and tank list

| Frequency (kHz) | Transducer          | Hull Material | Tank (Code No.)         | Fasten inside hull (Code No.) | Fasten outside hull (Code No.) |
|-----------------|---------------------|---------------|-------------------------|-------------------------------|--------------------------------|
| 28/200          | 28BL-6HR/200B-8B    | Steel         | T-693<br>(000-015-044)  | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209)  |
|                 |                     | FRP           | T-693F<br>(000-015-241) | TRB-1100 (2)<br>(000-015-219) | -                              |
| 38/200          | 38BL-9HR/200B-8B    | Steel         | T-693<br>(000-015-044)  | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209)  |
|                 |                     | FRP           | T-693F<br>(000-015-241) | TRB-1100 (2)<br>(000-015-219) | -                              |
| 50/200          | 50BL-12HR/200B-8B   | Steel         | T-693<br>(000-015-044)  | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209)  |
|                 |                     | FRP           | T-693F<br>(000-015-241) | TRB-1100 (2)<br>(000-015-219) | -                              |
| 28/38           | 28BL-12HR/38BL-15HR | Steel         | T-681<br>(000-015-849)  | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209)  |
|                 |                     | FRP           | T-681F<br>(000-015-850) | TRB-1100 (2)<br>(000-015-219) | -                              |
| 28/50           | 28BL-12HR/50BL-24HR | Steel         | T-681<br>(000-015-849)  | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209)  |
|                 |                     | FRP           | T-681F<br>(000-015-850) | TRB-1100 (2)<br>(000-015-219) | -                              |
| 38/50           | 38BL-15HR/50BL-24HR | Steel         | T-681<br>(000-015-849)  | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209)  |
|                 |                     | FRP           | T-681F<br>(000-015-850) | TRB-1100 (2)<br>(000-015-219) | -                              |
| 28/88           | 28BL-12HR/88F-126H  | Steel         | T-682<br>(000-015-851)  | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209)  |
|                 |                     | FRP           | T-682F<br>(000-015-852) | TRB-1100 (2)<br>(000-015-219) | -                              |
| 38/88           | 38BL-15HR/88F-126H  | Steel         | T-682<br>(000-015-851)  | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209)  |
|                 |                     | FRP           | T-682F<br>(000-015-852) | TRB-1100 (2)<br>(000-015-219) | -                              |



|        |                    |       |                         |                               |                               |
|--------|--------------------|-------|-------------------------|-------------------------------|-------------------------------|
| 50/88  | 50BL-24HR/88-126H  | Steel | T-682<br>(000-015-851)  | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209) |
|        |                    | FRP   | T-682F<br>(000-015-852) | TRB-1100 (2)<br>(000-015-219) | -                             |
| 28/200 | 28BL-12HR/200B-12H | Steel | T-683<br>(000-015-853)  | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209) |
|        |                    | FRP   | T-683F<br>(000-015-854) | TRB-1100 (2)<br>(000-015-219) | -                             |
| 38/200 | 38BL-15HR/200B-12H | Steel | T-683<br>(000-015-853)  | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209) |
|        |                    | FRP   | T-683F<br>(000-015-854) | TRB-1100 (2)<br>(000-015-219) | -                             |
| 50/200 | 50BL-24HR/200B-12H | Steel | T-683<br>(000-015-853)  | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209) |
|        |                    | FRP   | T-683F<br>(000-015-854) | TRB-1100 (2)<br>(000-015-219) | -                             |
| 28/150 | 28BL-12HR/150B-12H | Steel | T-683<br>(000-015-853)  | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209) |
|        |                    | FRP   | T-683F<br>(000-015-854) | TRB-1100 (2)<br>(000-015-219) | -                             |
| 38/150 | 38BL-15HR/150-12H  | Steel | T-683<br>(000-015-853)  | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209) |
|        |                    | FRP   | T-683F<br>(000-015-854) | TRB-1100 (2)<br>(000-015-219) | -                             |
| 38/150 | 50BL-24HR/156-12H  | Steel | T-683<br>(000-015-853)  | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209) |
|        |                    | FRP   | T-683F<br>(000-015-854) | TRB-1100 (2)<br>(000-015-219) | -                             |

**Settings**

1. Referring page 3-6, set the menu as below.

XDCR SELECT:       MANUAL  
 FREQ:                28/38/50 kHz

| Transducer | Output | Tap |
|------------|--------|-----|
| 28BL-6HR   | 2      | C   |
| 38BL-9HR   |        | C   |
| 50BL-12HR  |        | C   |
| 28BL-12HR  | 3      | D   |
| 38BL-15HR  |        | E   |
| 50BL-24HR  |        | E   |

# APPENDIX 3

## TRANSDUCER 82B-35R

The 82B-35R is a transducer with wide bandwidth of 65 kHz-110 kHz. It is constructed to provide protection against slamming.

### Transducer, thru-hull pipe and tank list

| Frequency (kHz) | Transducer                         | Hull Material | Tank (Code No.)          | Fasten inside hull (Code No.) | Fasten outside hull (Code No.) |
|-----------------|------------------------------------|---------------|--------------------------|-------------------------------|--------------------------------|
| 15/88           | 15F-4S/82B-35R                     | Steel         | T-628<br>(000-015-921)   | TWB-6000 (2)<br>(000-015-207) | -                              |
|                 |                                    | FRP           | T-628-F<br>(000-015-922) | TRB-1100 (2)<br>(000-015-218) | -                              |
|                 | 15F-10/82B-35R                     | Steel         | T-629<br>(000-015-804)   | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209)  |
|                 |                                    | FRP           | T-629-F<br>(270-601-660) | TRB-1100 (2)<br>(000-015-218) | -                              |
| 28/88           | 28F-18/82B-35R                     | Steel         | T-636<br>(000-015-813)   | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209)  |
|                 |                                    | FRP           | T-636F<br>(000-015-814)  | TRB-1100 (2)<br>(000-015-218) | -                              |
| 50/88           | 50F-8G/82B-35R                     | Steel         | T-636<br>(000-015-813)   | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209)  |
|                 |                                    | FRP           | T-636F<br>(000-015-814)  | TRB-1100 (2)<br>(000-015-218) | -                              |
|                 | 50B-12/82B-35R                     | Steel         | T-643<br>(000-015-821)   | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209)  |
|                 |                                    | FRP           | T-643F<br>(000-015-822)  | TRB-1100 (2)<br>(000-015-218) | -                              |
| 88/200          | 82B-35R/200B-8/200B-8B<br>/200B-8N | Steel         | T-649<br>(000-015-833)   | TWB-6000 (2)<br>(000-015-207) | TFB-7000 (2)<br>(000-015-209)  |
|                 |                                    | FRP           | T-649F<br>(000-015-834)  | TRB-1100 (2)<br>(000-015-218) | -                              |

### Settings

- Referring page 3-6, set the menu as below.  
 XDCR SELECT:       MANUAL  
 FREQ:                88 kHz  
 TAP:                 E

**Setting for dual frequency transmitting**

1. Connect the 82B-35R transducer to either the “H” or “L” connector, referring to page 2-1.
2. Set the XDCR SELECT menu as follows (see page 3-3 and 3-4).

Setting for "H" connection at step 1

| <b>XDCR SELECT</b> INSTALLATION DEMO    |                 |
|---|-----------------|
| XDCR SELECT                             | : XDCR TYPE     |
| [HIGH]                                  |                 |
| CONNECTION                              | : CONNECTED     |
| FREQ                                    | : 82kHz         |
| TRANSDUCER                              | : 82B-35R       |
| TAP                                     | : E             |
| [LOW]                                   |                 |
| CONNECTION                              | : NOT CONNECTED |
| FREQ                                    | : --- kHz       |
| TRANSDUCER                              | : ----          |
| TAP                                     | : --            |
| POWER REDUCTION : OFF                   |                 |
| [-/+]: Change setting, Turn OFF to exit |                 |

Setting for "L" connection at step 1

| <b>XDCR SELECT</b> INSTALLATION DEMO    |                 |
|---|-----------------|
| XDCR SELECT                             | : XDCR TYPE     |
| [HIGH]                                  |                 |
| CONNECTION                              | : NOT CONNECTED |
| FREQ                                    | : ---kHz        |
| TRANSDUCER                              | : ----          |
| TAP                                     | : --            |
| [LOW]                                   |                 |
| CONNECTION                              | : CON NECTED    |
| FREQ                                    | : 82kHz         |
| TRANSDUCER                              | : 82B-35R       |
| TAP                                     | : E             |
| POWER REDUCTION : OFF                   |                 |
| [-/+]: Change setting, Turn OFF to exit |                 |

3. Press the [PWR] key to turn the power off, and turn it on again.
4. Rotate the [FUNCTION] switch to choose MENU.
5. Press the [+] or [-] key to choose E/S.
6. See the section “2.5 E/S Menu” in the Operator’s Manual for how to set values for high and low frequencies.








This page is intentionally left blank.

# PACKING LIST

02FM-X-9851 -5 1/1

FCV-1100L

A-1
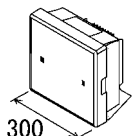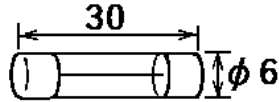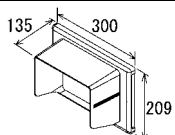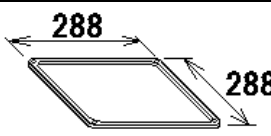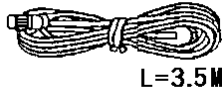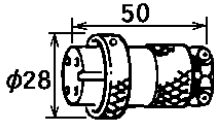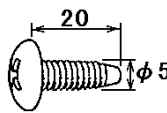
| NAME  | OUTLINE   | DESCRIPTION/CODE   | Q'TY |
|---|---|--|------|
| <b>ユニット</b><br>UNIT                           |   |  |      |
| 指示器<br>DISPLAY UNIT                           |    | CV-1100L<br>000-002-538-00   | 1    |
| <b>予備品</b><br>SPARE PARTS                     |   | <b>SP02-04401</b>  |      |
| ヒューズ<br>FUSE                                  |    | FGBO-A 125V 5A PBF<br>FGBO-A 5A AC125V<br>000-155-853-10<br>000-549-064-00 | 3    |
| <b>付属品</b><br>ACCESSORIES                     |   | <b>FP02-05300</b>  |      |
| フード 組品<br>HOOD ASSY.                          |    | FP02-05301<br>001-402-110-00   | 1    |
| <b>工事材料</b><br>INSTALLATION MATERIALS         |   | <b>CP02-06900</b>  |      |
| フラッシュマウントスポンジ<br>FLUSH MOUNTING SPONGE        |    | 02-137-1061-0<br>100-323-850-00  | 1    |
| ケーブル組品MJ<br>CABLE ASSY.                       |   | MJ-A3SPF0013-035C(5A)<br>000-157-939-10                                    | 1    |
| コネクタ(NCS)<br>CONNECTOR                        |  | NCS-254-P *ROHS*<br>NCS-254-P<br>000-160-159-10<br>000-506-505-10          | 2    |
| +self-tapping screw 1pc<br>SELF-TAPPING SCREW |  | 5X20 SUS304<br>5X20 SUS304<br>000-162-608-10<br>000-802-081-00             | 4    |

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。

TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)





02FM-X-9851

| 寸法区分 (mm)     | 公差 (mm)   |
|---------------|-----------|
| DIMENSION     | TOLERANCE |
| L ≤ 50        | ± 1.5     |
| 50 < L ≤ 100  | ± 2.5     |
| 100 < L ≤ 500 | ± 3       |




表 1 TABLE 1

- 注 記 1) #印寸法は最小サービス空間寸法とする。  
 2) 指定外の寸法公差は表 1 による。  
 3) 取付用ネジは M6 ボルト、またはコーチボルト呼び径 5 を使用のこと。

- NOTE 1. #: RECOMMENDED SERVICE CLEARANCE.  
 2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.  
 3. USE M6 BOLTS OR COACH SCREWS #5 FOR FIXING THE UNIT.

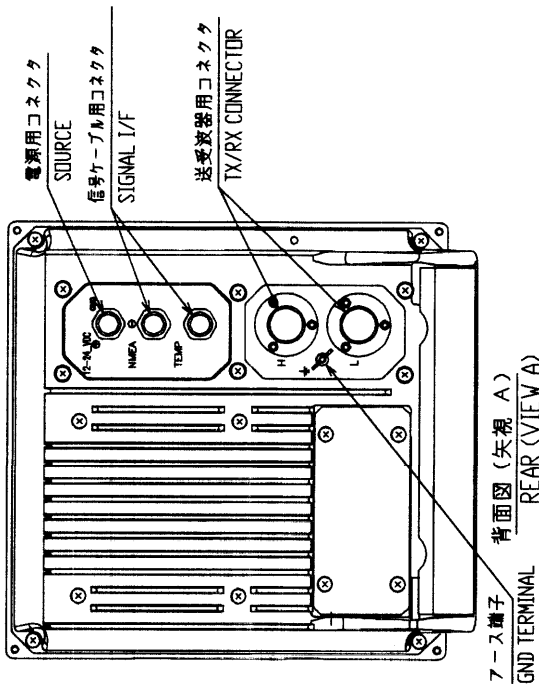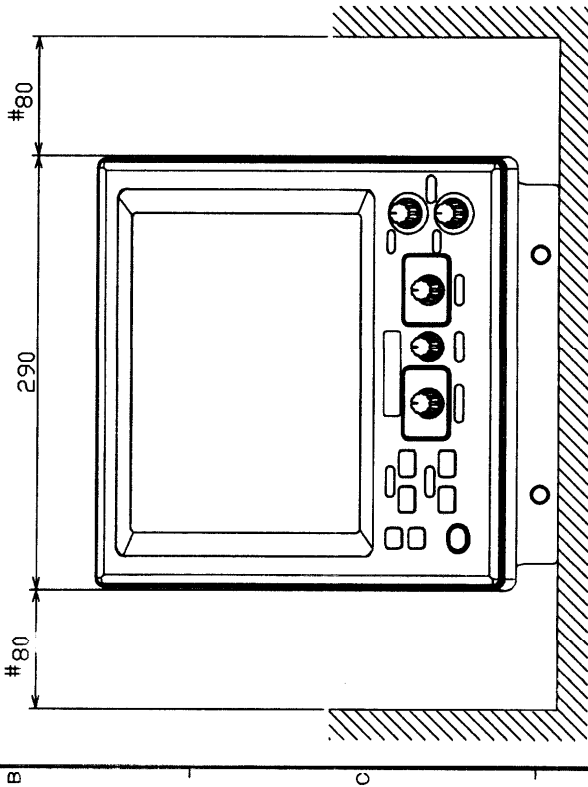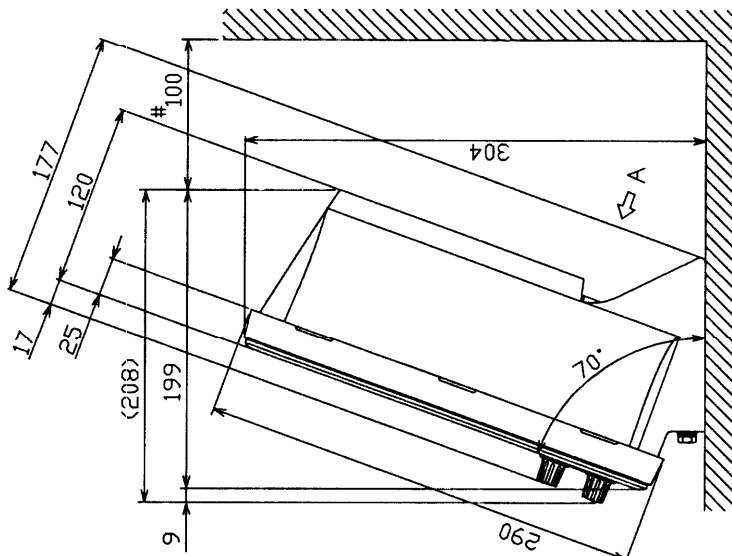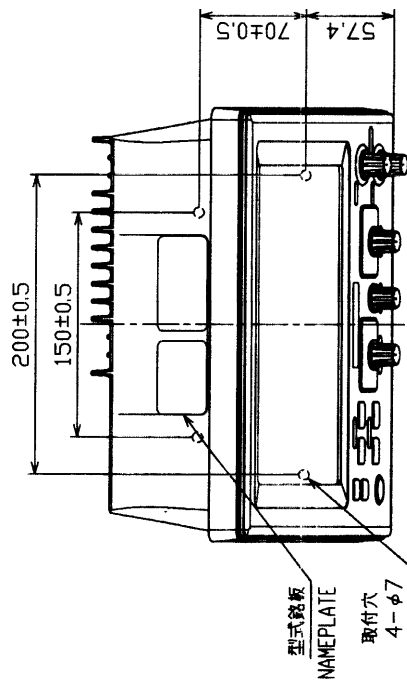


|          |                       |                         |                              |
|----------|-----------------------|-------------------------|------------------------------|
| DRAWN    | AWD 21/01 T. YAMASAKI | TITLE                   | CV-1100L                     |
| CHECKED  | 21/08 21/01 Y. K.     | 名称                      | 指示部 (卓上装備)                   |
| APPROVED | 21/08 21/01 Y. K.     | 外寸図                     |                              |
| SCALE    | 1/5 MASS 6.5 ± 10%    | NAME                    | DISPLAY UNIT (DESKTOP MOUNT) |
| DWG No.  | C2367-601-B           | INTERCONNECTION DIAGRAM | 02-137-110G-1                |

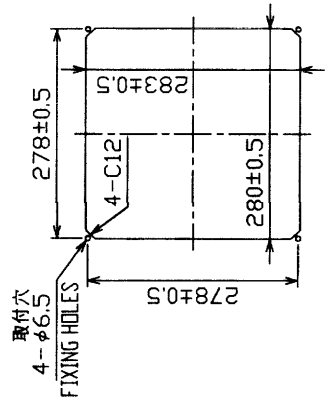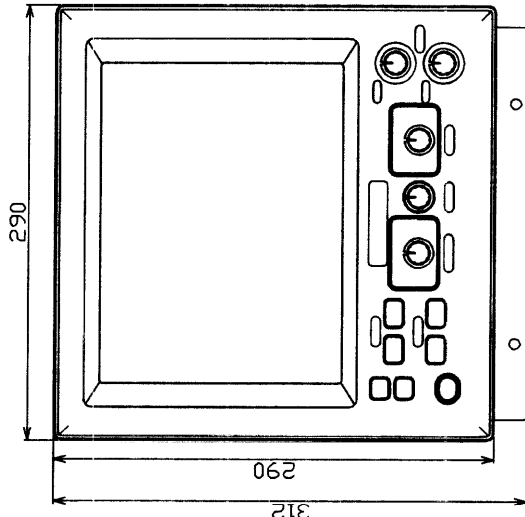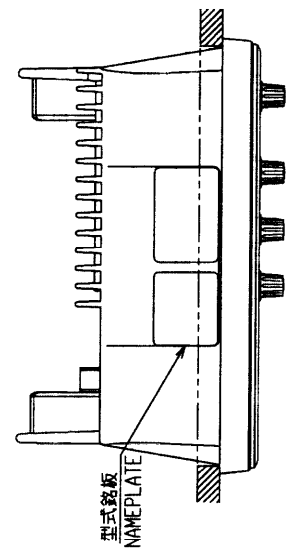


取付寸法図 (R 度 1/10)  
CUTOUT DIMENSIONS (SCALE: 1/10)

| 寸法区分 (mm)<br>DIMENSION | 公差 (mm)<br>TOLERANCE |
|------------------------|----------------------|
| L ≤ 50                 | ± 1.5                |
| 50 < L ≤ 100           | ± 2.5                |
| 100 < L ≤ 500          | ± 3                  |

表 1  
TABLE 1

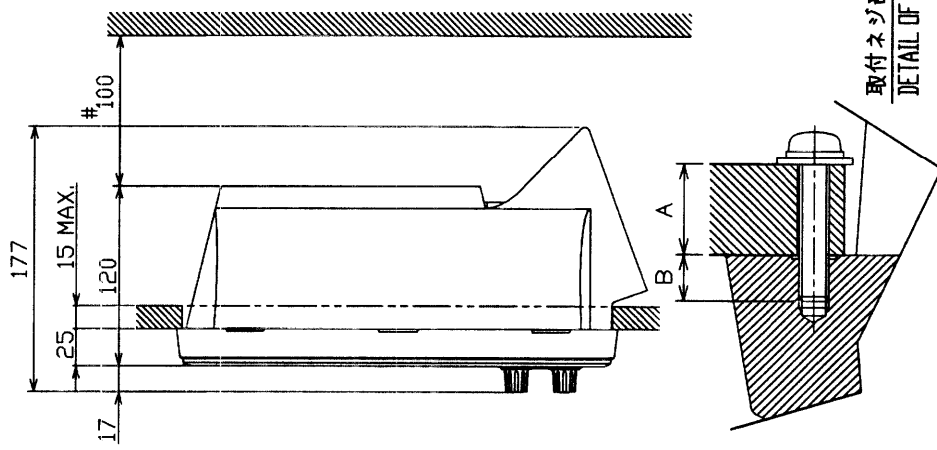



取付ネジ部断面 (R 度 1/1)  
DETAIL OF FIXING (SCALE: 1/1)

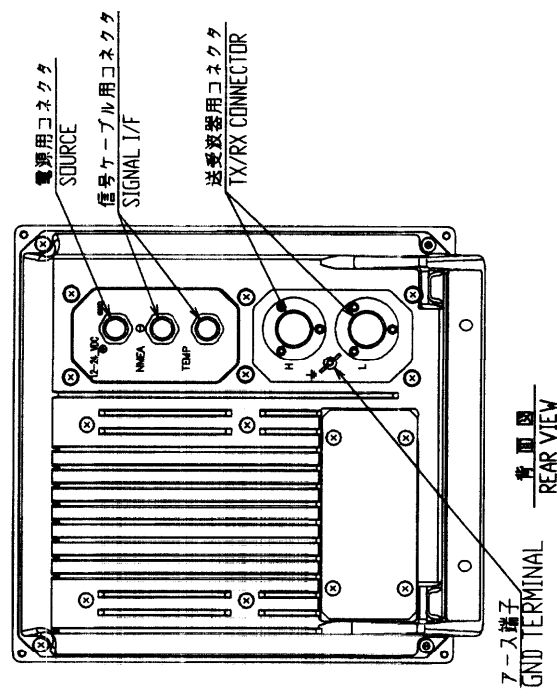

- 注 記
- 1) # 印寸法は最小サージス空圍寸法とする。
  - 2) 指定外の寸法公差は表 1 による。
  - 3) 取付用ネジはセムスネジ B M5 x 2.0 を使用のこと。壁の厚さ (A) は  $11 \leq A \leq 14$ 。これ以外の壁に装着する場合、ネジ長さは  $(A+7.3) \pm 1.5$  (セムスネジ B) とする。筐体にはネジ部を 7mm 以上いれないこと。(B 部)

- NOTE
1. # RECOMMENDED SERVICE CLEARANCE.
  2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.
  3. USE TAPPING SCREWS M5x2.0 FOR FIXING THE UNIT. THICKNESS A:  $11 \leq A \leq 14$  OR SCREW LENGTH:  $(A+7.3) \pm 1.5$ . DO NOT FASTEN SCREWS INTO UNIT MORE THAN 7 mm (B ≤ 7)

|          |                        |       |                            |
|----------|------------------------|-------|----------------------------|
| DRAWN    | Aug. 21/01 T. YAMASAKI | TITLE | CV-1100L                   |
| CHECKED  | Asahi                  | 名称    | 指示部 (埋込装備)                 |
| APPROVED | Asahi                  | 外寸図   |                            |
| SCALE    | 1/5 MASS 6.1           | NAME  | DISPLAY UNIT (FLUSH MOUNT) |
| FIG. No. | C2367-002-B            |       | INTERCONNECTION DIAGRAM    |
|          |                        |       | 02-137-120G-1              |

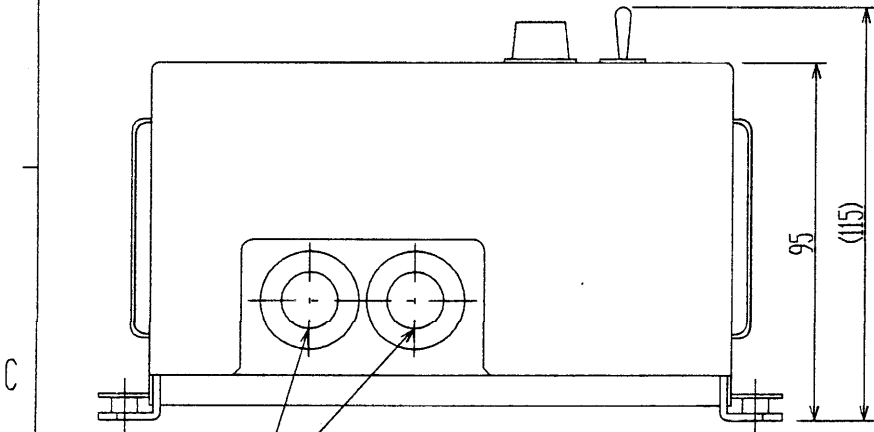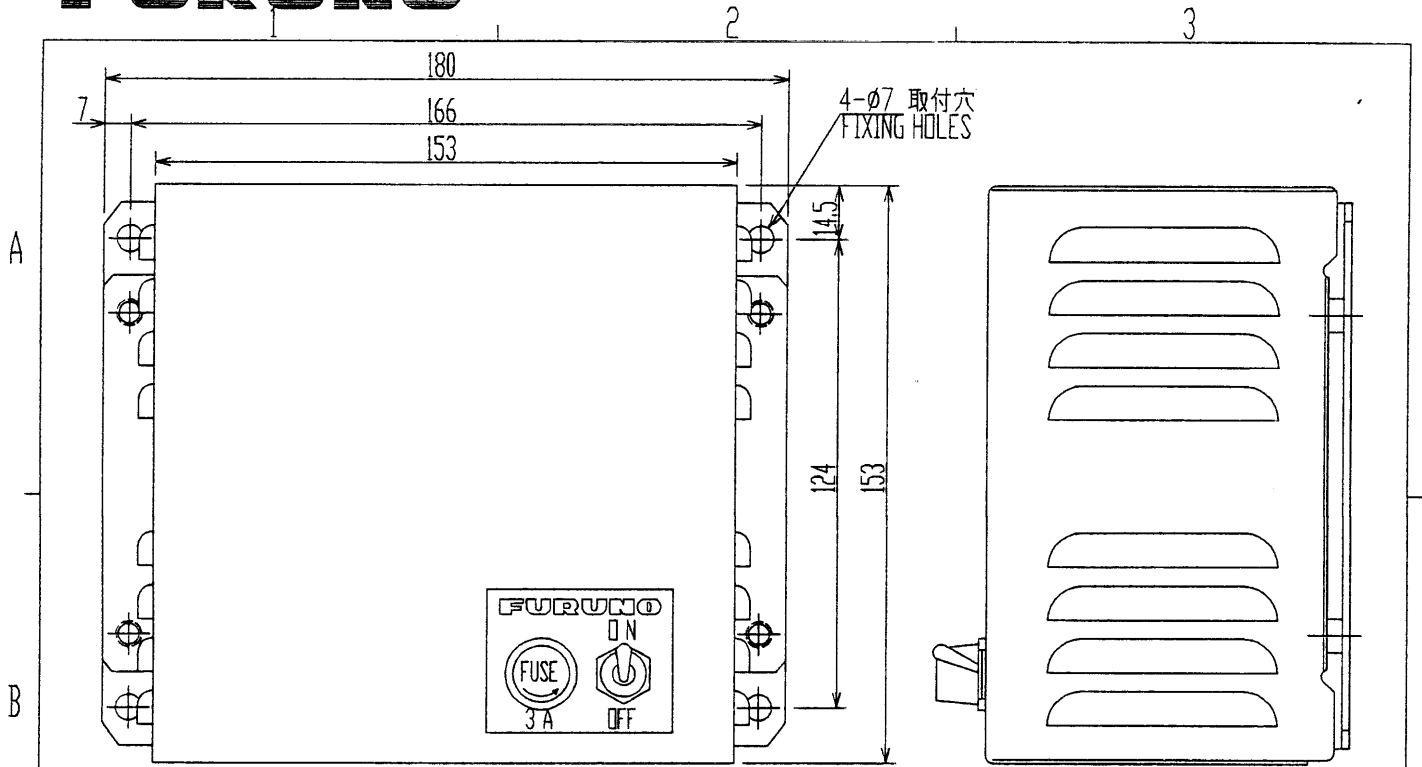


ケーブル導入口  
CABLE ENTRY

表1 TABLE 1

| 寸法区分(mm)<br>DIMENSION | 公差(mm)<br>TOLERANCE |
|-----------------------|---------------------|
| 0 < L ≤ 50            | ±1.5                |
| 50 < L ≤ 100          | ±2.5                |
| 100 < L ≤ 500         | ±3                  |

入力電圧に応じて接続を変更して下さい。  
CHANGE TAP CONNECTIONS DEPENDING ON SUPPLY VOLTAGE.

|    | AC100V | AC110/<br>115V | AC220V | AC230V |
|----|--------|----------------|--------|--------|
| *1 | (A)    | (A)            | (B)    | (B)    |
| *2 | (C)    | (D)            | (D)    | (D)    |

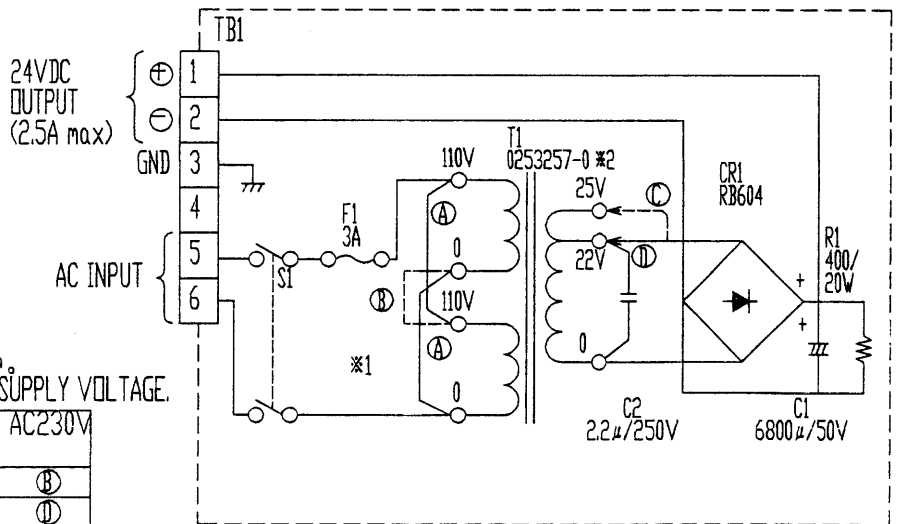

|                                 |                   |
|---------------------------------|-------------------|
| DRAWN<br>Sep. 14 '01 T.YAMASAKI | TITLE<br>PR-62    |
| CHECKED<br>Y.Ki                 | 名称<br>整流器         |
| APPROVED<br>Y.Ki                | 外寸図               |
| SCALE<br>1/2 MASS 3 ±10% kg     | NAME<br>RECTIFIER |
| DWG.No.<br>C5003-034-E          | OUTLINE DRAWING   |



表1 TABLE 1


| 寸法区分(mm)<br>DIMENSION | 公差(mm)<br>TOLERANCE |
|-----------------------|---------------------|
| $0 < L \leq 50$       | $\pm 1.5$           |
| $50 < L \leq 100$     | $\pm 2.5$           |

A

B

C

D

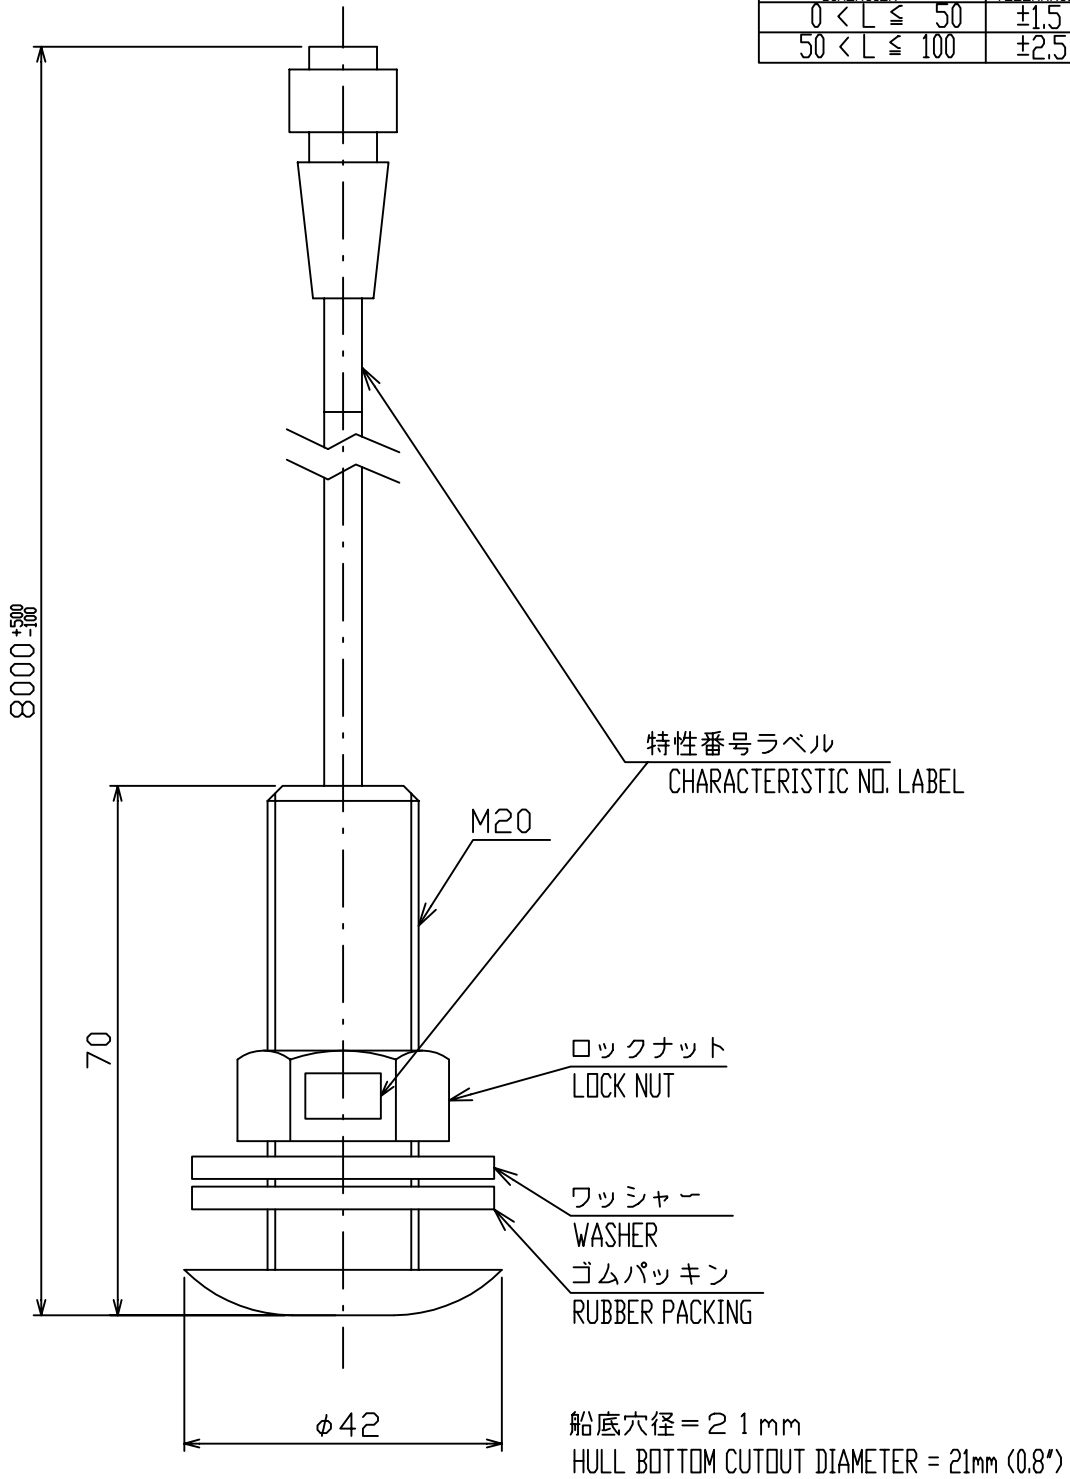

**注記**

1) 指定なき寸法公差は表1による。


**NOTE**

1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.

|  |                        |                       |
|--|------------------------|-----------------------|
| DRAWN<br>Nov. 14 '02<br>T.YAMASAKI           |                        | TITLE<br>T-02MSB      |
| CHECKED<br>Nov. 14 '02<br>Y.KIMURA           |                        | 名称<br>水温センサー          |
| APPROVED<br>Nov. 14, '02<br><i>Y. Kimura</i> | T-2000                 | 外寸図                   |
| SCALE<br>1/1                                 | MASS<br>0.5 ±10%<br>kg | NAME<br>THERMO SENSOR |
| DWG.No.<br>C4322-007-C                       |                        | OUTLINE DRAWING       |

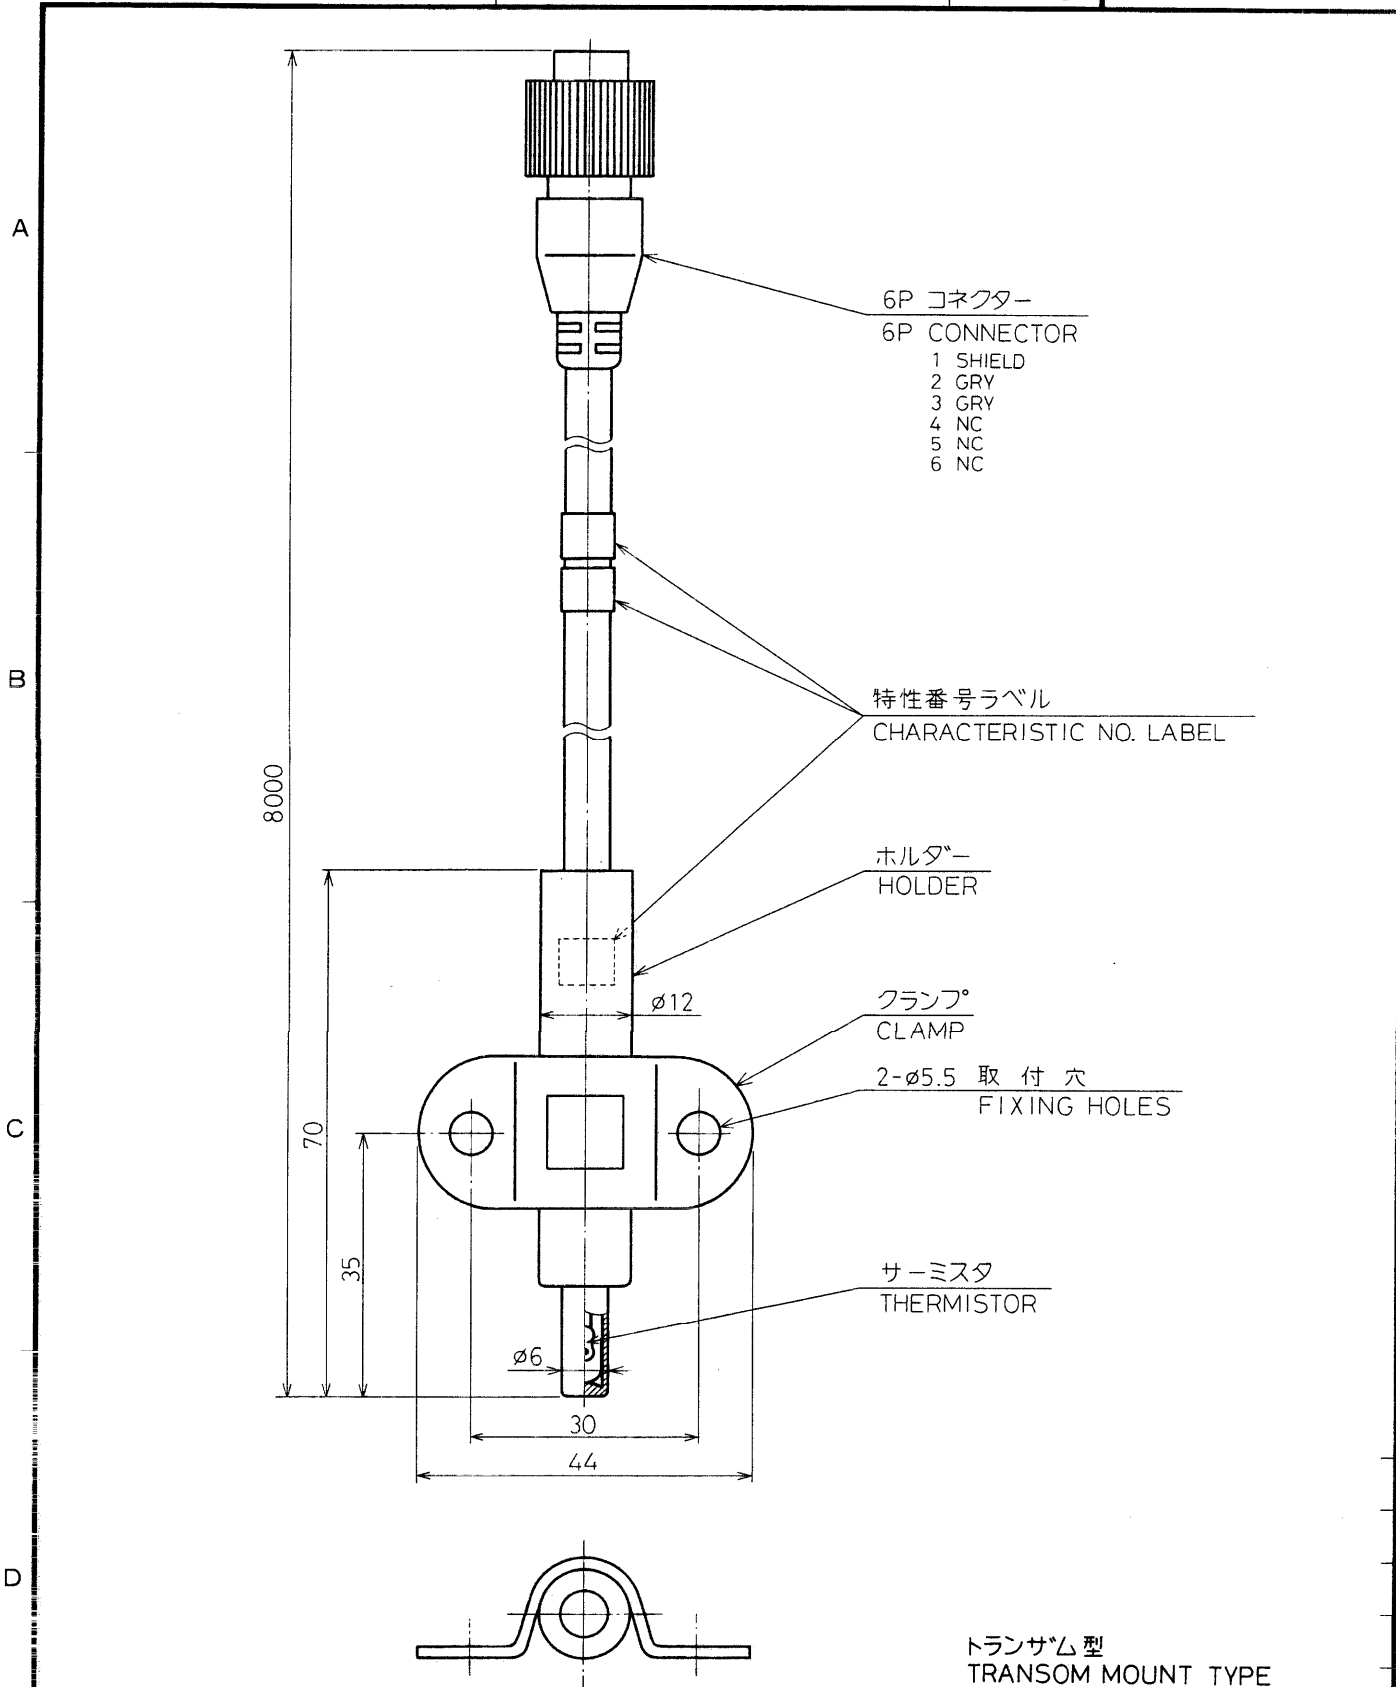


| 品番<br>ITEM     | 品名<br>NAME             | 材質<br>MATERIAL                | 数量<br>Q'TY  | 図番<br>DWG.NO.                           | 摘要<br>REMARKS |
|----------------|------------------------|-------------------------------|-------------|---|---------------|
| 承認<br>APPROVED | FEB.28.89<br>T.NAKANO  | 三角法<br>THIRD ANGLE PROJECTION | 名称<br>TITLE | T-02MTB<br>水温センサー<br>TEMPERATURE SENSOR |               |
| 検図<br>CHECKED  | Feb.28.89<br>T.KODRA   | 尺度<br>SCALE                   | 1/1         |   |               |
| 製図<br>DRAWN    | Feb.28.89<br>T.MIYOSHI | 質量<br>MASS                    | kg          | 図番<br>DWG.NO.                           | C2317-G01-B   |

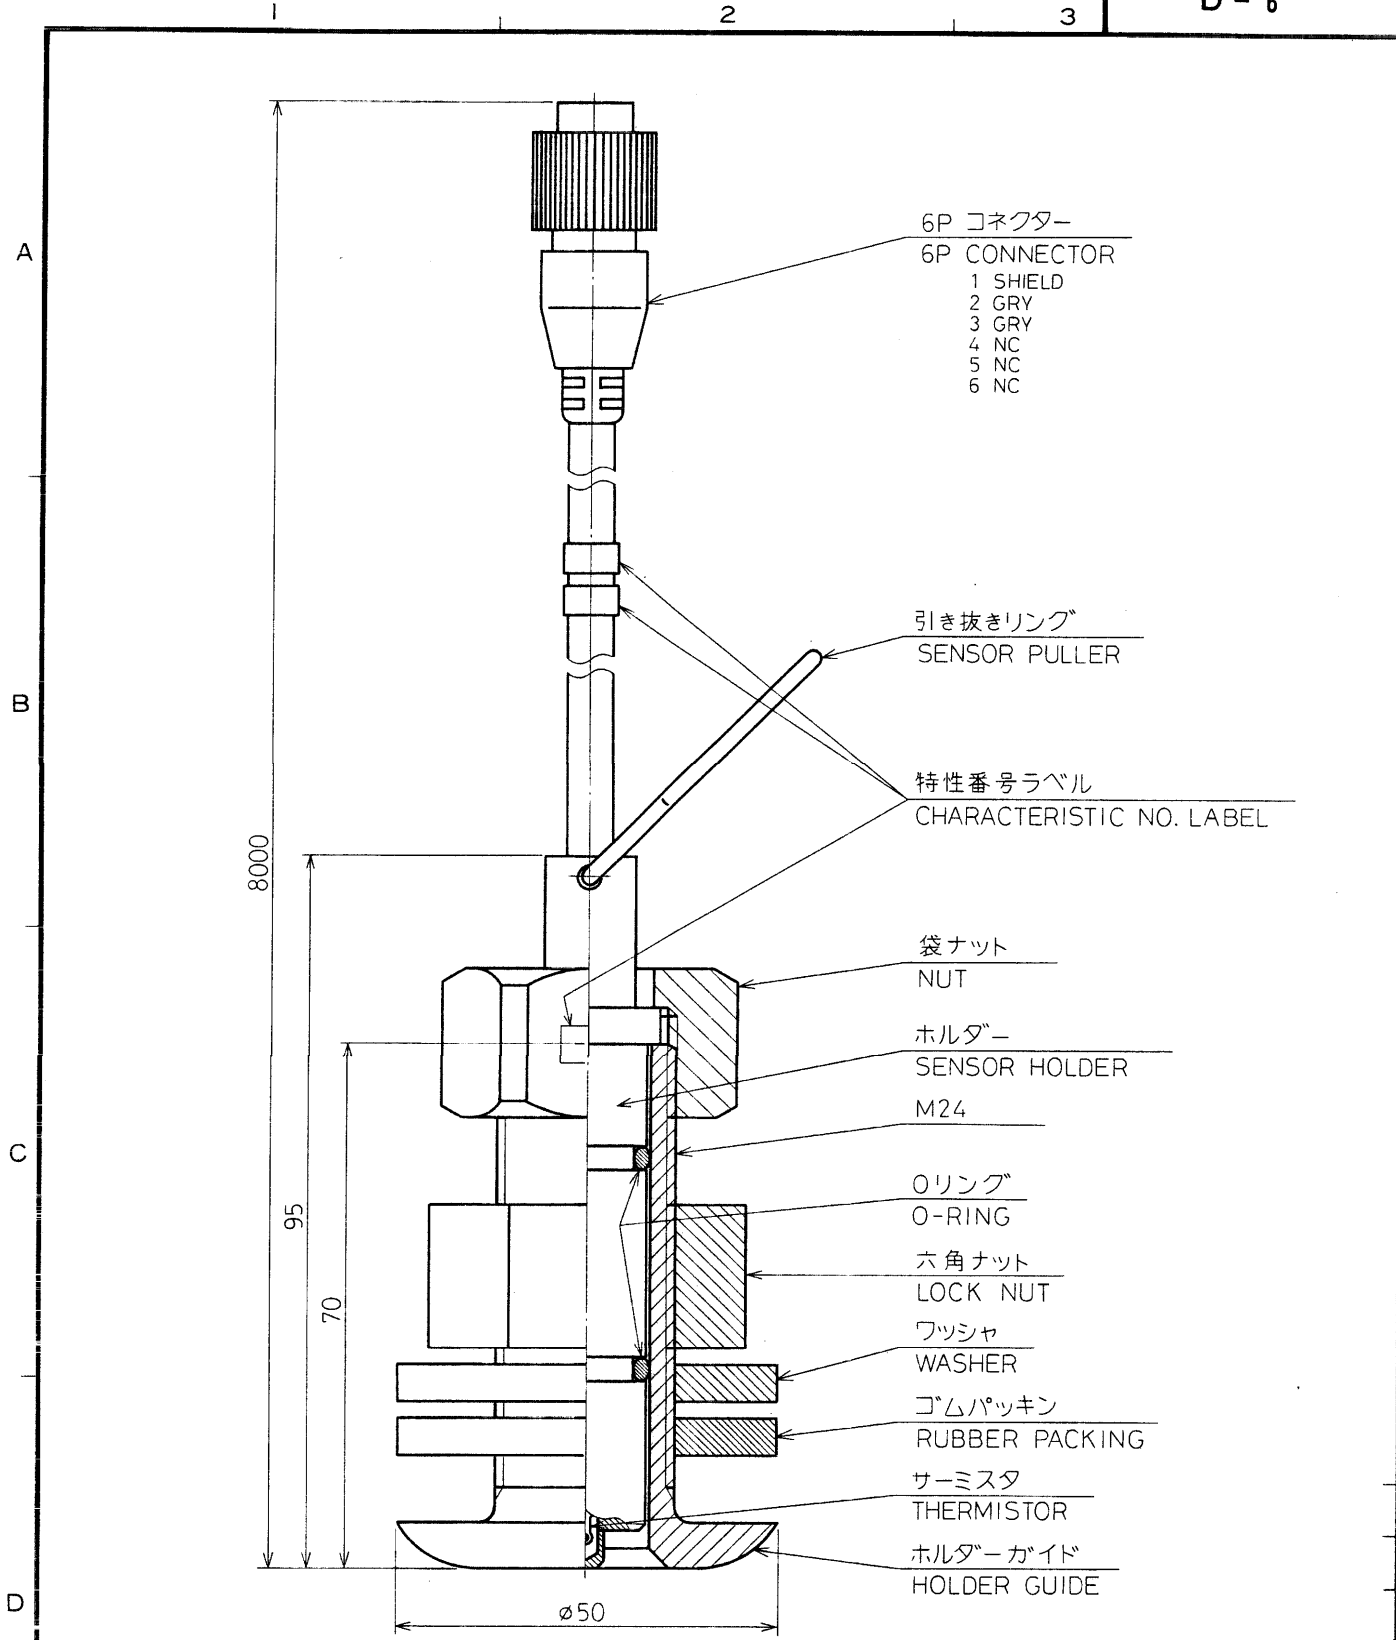

船底貫通型 (取り外し可能)  
THRU HULL MOUNT

| 品番<br>ITEM     | 品名<br>NAME                | 材質<br>MATERIAL                | 数量<br>Q'TY  | 図番<br>DWG.NO.                           | 摘要<br>REMARKS |
|----------------|---------------------------|-------------------------------|-------------|---|---------------|
| 承認<br>APPROVED | FEB. 28. 89<br>T. WAKANO  | 三角法<br>THIRD ANGLE PROJECTION | 名称<br>TITLE | T-03MSB<br>水温センサー<br>TEMPERATURE SENSOR |               |
| 検図<br>CHECKED  | Feb. 28. 89<br>T. KODA    | 尺度<br>SCALE                   | 1 / 1       |   |               |
| 製図<br>DRAWN    | Feb. 28. 89<br>T. MIYOSHI | 質量<br>MASS                    | kg          | 図番<br>DWG.NO.                           | C2317-G02-B   |

## 指示部 DISPLAY UNIT CV-1100L

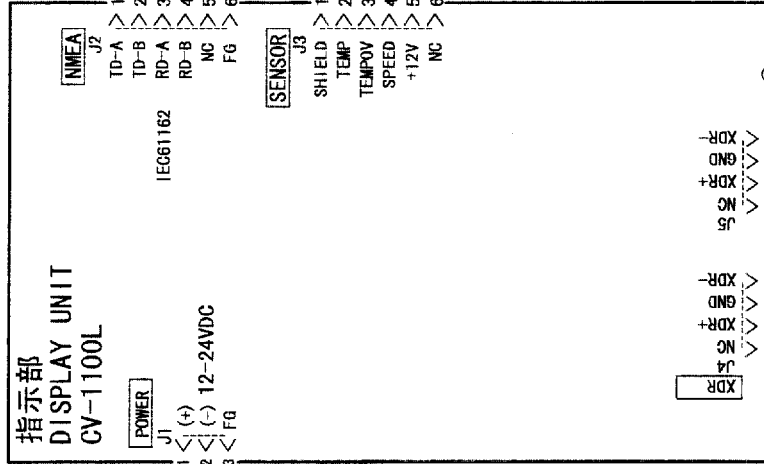

航法装置など  
NAVIGATION DEVICE, ETC.



MJ-A6SPFD MJ-A6SPFD  
MJ-A6SPFD MJ-A6SPFD  
5/10m, 6P-6P 5/10m, 6P-4P

NMEA

水温センサー  
TEMP. SENSOR  
IT-02MTB  
IT-03MSB  
IT-02MSB

水温・速度センサー  
TEMP./SPEED SENSOR  
ST-02MSB  
ST-02PSB

水温・速度センサー  
TEMP./SPEED SENSOR

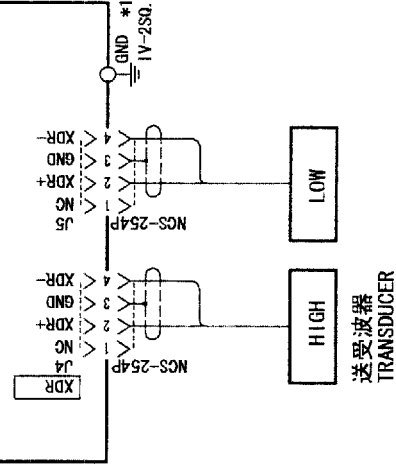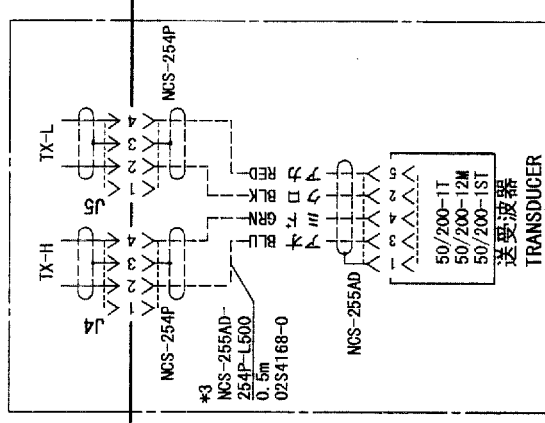

注記

- \*1) 現地手配。
- \*2) コネクタは工場にて取付済み。
- \*3) オプション。

NOTE

- \*1. LOCAL SUPPLY.
- \*2. CONNECTOR PLUG FITTED AT FACTORY.
- \*3. OPTION.

|          |                   |                         |                     |
|----------|-------------------|-------------------------|---------------------|
| DRWN     | 14_01 I. YAMASAKI | TITLE                   | FCV-1100L           |
| CHKD     | 01/12/84 Y. K.    | 名称                      | カラ一魚群探知機            |
| APPRD    | 01/2/84 Y. K.     | 相互結線図                   |                     |
| NAME     |                   | NAME                    | COLOR VIDEO SOUNDER |
| DRG. No. | C2367-C01-D       | INTERCONNECTION DIAGRAM |                     |
|          | A02-137-1000-0    |                         |                     |