

# Service Service Service



# Service Manual

## Table of Contents

Technical Specification .....	1-1
Location of Printed Circuit Boards .....	1-2
Safety Instructions .....	2-1
Instruction for use (excerpt) .....	3-1
Mechanical Instructions .....	4-1
Service Tools .....	5-1
Service Test Program .....	5-2
Blockdiagram .....	5-3
Wiring Diagram .....	6-1

### AF BOARD

Circuit Diagram Supply Part .....	7-1
Component Layout .....	7-2
Circuit Diagram DAC Part .....	7-3
Component Layout .....	7-4

### FRONT BOARD

Circuit Diagram .....	7-5
Component Layout .....	7-6



### HEADPHONE BOARD

Circuit Diagram .....	7-6
Component Layout .....	7-6

### CD BOARD

Circuit Diagram .....	7-7
Component Layout .....	7-8
Fault Finding Tree CD .....	7-9

### EXPLODED VIEW

Set .....	10-1
CD Short Loader .....	10-2
Electrical Partslist .....	10-3

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

© Copyright 1997 Philips Consumer Electronics B.V. Eindhoven, The Netherlands  
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by HB 9823 Service Audio Printed in The Netherlands Subject to modification

(GB) 4822 725 26026

CS 53 132



**CLASS 1  
LASER PRODUCT**

**PHILIPS**

# TECHNICAL SPECIFICATION

## General

Dimensions (WxHxD) : 435 x 86 x 265mm  
Weight : 2,9kg

## Accessories

Instruction for use : 4822 736 16255 for /00  
: 4822 736 16256 for /01  
: 4822 736 16257 for /14

Remote control : 4822 219 10538

## Mains voltage

/00 : 220-230V(±10%) 50Hz  
/01 : 120/230V(±15%) 50/60Hz  
/14 : 220-230V(±10%) 50Hz

## Power consumption

stand by : ≤5W  
operating : approx. 8W

## Audio performance

Number of channels : 2  
Output voltage (Line out) : 2VRMS ±3dB  
Unbalance left-right : ≤1dB  
Frequency response : 20Hz-20kHz ≤0,4dB  
Signal to noise ratio : 108 dB typ.  
Dynamic range : 105dB typ. at 1kHz  
THD : ≤0,0063% at 1kHz  
Channel separation : 98dB typ. at 1kHz

## Headphone output


Output level (1kHz, 0dB) : ≥5VRMS  
Unbalance left-right : ≤1,2dB  
Output impedance : 120Ω  
Load impedance : 32Ω - 600Ω  
Output power : 25mW at 32Ω  
: 52mW at 120Ω  
: 29mW at 600Ω

## Laser

Output power : <5mW (3mW typ.)  
Wavelength : 780nm

## Measurement setup

Use Audio Signal disc SBC429 4822 397 30184

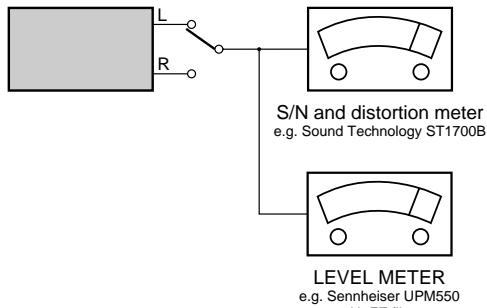


## RC 5 Commands

### System code = 20

Command	Code	Command	Code	Command	Code
KEY "0"	0	DISPLAY SCROLL	15	SHUFFLE	28
KEY "1"	1	PLAY	53	HIGHLIGHT	43
KEY "2"	2	STOP	54	REPEAT	29
KEY "3"	3	PAUSE	48	FADE	120
KEY "4"	4	TIME	11	VOLUME UP	16
KEY "5"	5	PREVIOUS	33	VOLUME DOWN	17
KEY "6"	6	REVIEW	50	STAND BY	12
KEY "7"	7	CUE	52	CD TEXT	88
KEY "8"	8	PROGRAM	36	NEXT	32
KEY "9"	9	REPEAT A/B	59		

## LOCATION OF PRINTED CIRCUIT BOARDS

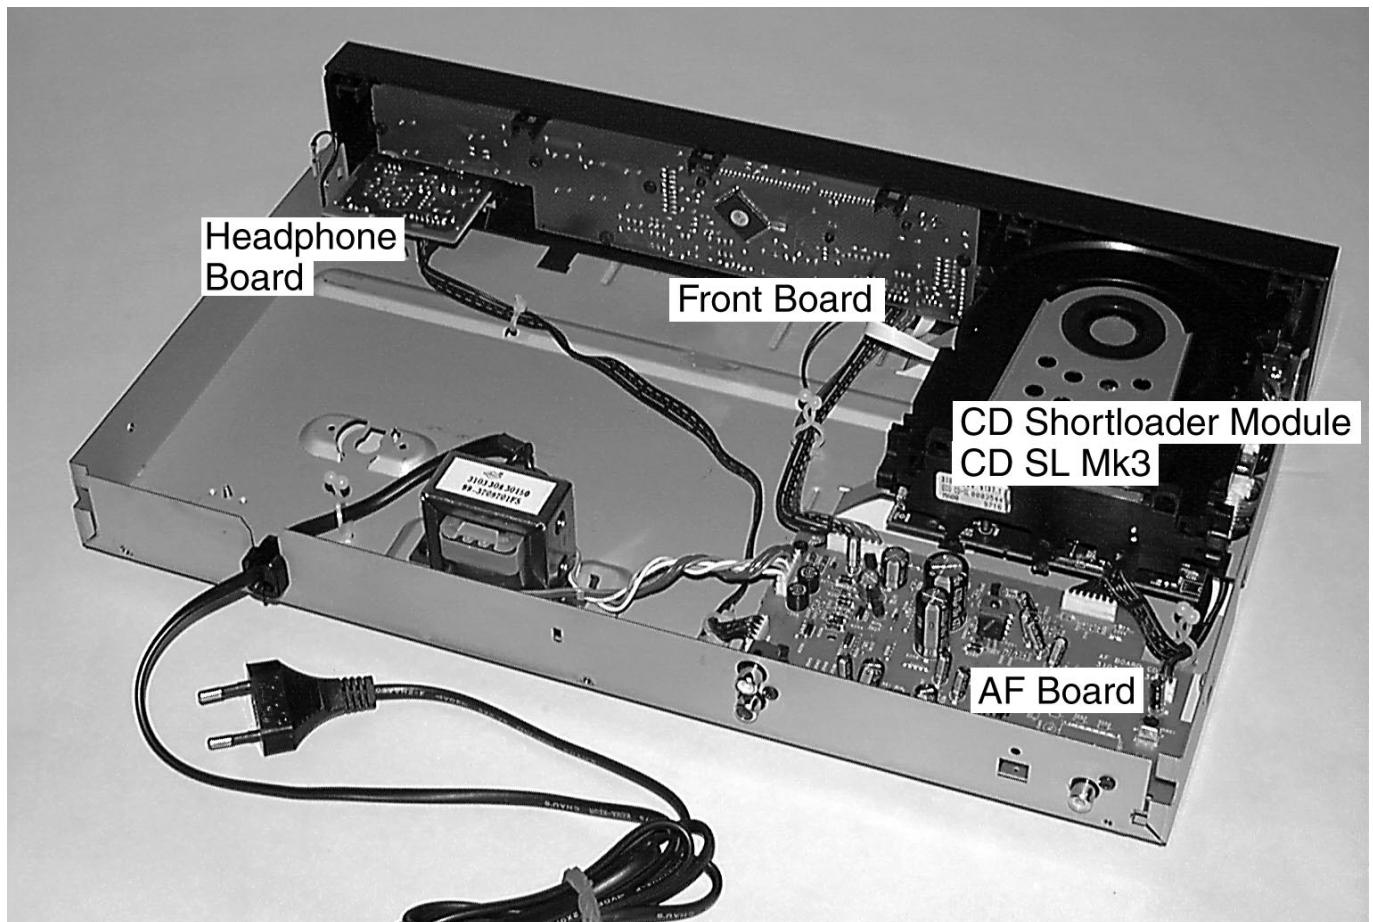

**(GB) WARNING**

All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.

When repairing, make sure that you are connected with the same potential as the mass of the set via a wristband with resistance. Keep components and tools at this potential.

**(F) ATTENTION**

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD). Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation.

Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfilez le bracelet serré d'une résistance de sécurité.

Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

**(D) WARNUNG**

Alle ICs und viele andere Halbleiter sind empfindlich gegenüber elektrostatischen Entladungen (ESD). Unsorgfältige Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren.

Sorgen Sie dafür, daß sie im Reparaturfall über ein Pulssarmband mit Widerstand mit dem Massepotential des Gerätes verbunden sind.

Halten Sie Bauteile und Hilfsmittel ebenfalls auf diesem Potential.

**(NL) WAARSCHUWING**

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD).

Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat.

Houd componenten en hulpmiddelen ook op ditzelfde potentiaal.

**(I) AVVERTIMENTO**

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD).

La loro longevità potrebbe essere fortemente ridotta in caso di non osservanza della più grande cautela alla loro manipolazione. Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza.

Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

**(GB) AVAILABLE ESD PROTECTION EQUIPMENT :**

**anti-static table mat**      large 1200x650x1.25mm  
                                  small 600x650x1.25mm

**anti-static wristband**

**connection box** (3 press stud connections, 1MΩ)

**extendible cable** (2m, 2MΩ, to connect wristband to connection box)

**connecting cable** (3m, 2MΩ, to connect table mat to connection box)

**earth cable** (1MΩ, to connect any product to mat or to connection box)

**KIT ESD3** (combining all 6 prior products - small table mat)

**wristband tester**

4822 466 10953  
4822 466 10958  
4822 395 10223  
4822 320 11307  
4822 320 11305  
4822 320 11306  
4822 320 11308  
4822 310 10671  
4822 344 13999

**(GB)**

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

Safety components are marked by the symbol

**(F)**

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.

Les composants de sécurité sont marqués

**SAFETY****(D)**

Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Gerätes darf nicht verändert werden. Für Reparaturen sind Originalersatzteile zu verwenden.

Sicherheitsbauteile sind durch das Symbol

**(NL)**

Veiligheidsbepalingen vereisen, dat het apparaat in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast. De Veiligheidsonderdelen zijn aangeduid met het symbool

**(I)**

Le norme di sicurezza estigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati. Componenti di sicurezza sono marcati con

**(GB) DANGER:** Invisible laser radiation when open.  
AVOID DIRECT EXPOSURE TO BEAM.

**CLASS 1  
LASER PRODUCT**

**(S) Varning !**

Osynlig laserstrålning när apparaten är öppnad och spärren är urkopplad. Betrakta ej strålen.

**(DK) Advarsel !**

Usynlig laserstrålning ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå utsættelse for stråling.

**(SF) Varoitus !**

Avatussa laitteessa ja suojalukituksen ohittaa olet alittina näkymättömälle laserisäteilylle. Älä katso sääteenseen !

**(GB)**

After servicing and before returning the set to customer perform a leakage current measurement test from all exposed metal parts to earth ground, to assure no shock hazard exists.

The leakage current must not exceed 0.5mA.

**(F)**

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".

# INSTRUCTION FOR USE

## GENERAL INFORMATION

### Table of contents

#### GENERAL INFORMATION

Maintenance ..... 4  
Technical data ..... 4

#### CONTROLS AND CONNECTIONS

Controls on the front ..... 5  
Connections at the back ..... 5

At the bottom ..... 5

#### INSTALLATION AND REMOTE CONTROL

Accessories ..... 6

Connections ..... 6

Usual connection, LINE OUT ..... 6

Digital connection, DIGITAL OUT ..... 6

Mains ..... 6

Remote control ..... 6

Batteries ..... 6

#### PLAYBACK

CD Text ..... 7

Playing a CD ..... 7

#### ADDITIONAL FUNCTIONS

Selecting a track and searching ..... 8

Selecting a track when CD play is stopped ..... 8

Searching for a passage during CD play ..... 8

Random order playing (SHUFFLE) ..... 8

Repeating a CD, a track or a program ..... 8

Repeating a part of the CD ..... 8

Programming track numbers ..... 9

Clearing the program ..... 9

Loudest passage searching ..... 9

Time display ..... 9

Fading out and in ..... 10

Volume adjustment ..... 10

Locking the volume ..... 10

Headphone listening ..... 10

Scanning the CD ..... 10

Recording setup ..... 11

*Environmental information* ..... 11

#### TROUBLESHOOTING

Warning ..... 12

Troubleshooting ..... 12



#### Maintenance

Clean the CD player with a soft, slightly dampened lint-free cloth. Do not use any cleaning agents as they may have a corrosive effect.




Do not expose the CD player, batteries or CDs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight).

This CD player can play all kinds of Audio Discs such as CD-Recordables, CD-Rewriteables and CD-Text CDs. Do not try to play a CD-ROM, CD-I, CDV or computer CD.

If the CD player cannot read CDs correctly use a commonly available cleaning CD to clean the lens before taking the CD player to repair. Other cleaning methods may destroy the lens. Always keep the tray closed to avoid dust on the lens.

The lens may cloud over when the CD player is suddenly moved from cold to warm surroundings. Playing a CD is not possible then. Leave the CD player in a warm environment until the moisture evaporates.

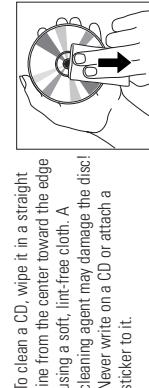

To clean a CD, wipe it in a straight line from the center toward the edge using a soft, lint-free cloth. A cleaning agent may damage the disc! Never write on a CD or attach a sticker to it.

#### Technical data


Subject to modification without notice.

Standby power consumption ..... < 5W  
Frequency range ..... 20–20,000Hz  
Amplitude linearity ..... < 0.5dB (1kHz, -90dB)  
Dynamic range ..... 108dB (1kHz, A-weighted)  
Signal-to-noise ratio ..... 100dB (1kHz)  
Channel separation ..... 98dB (1kHz)  
Total harmonic distortion ..... 0.004% – 88dB (1kHz)  
Audio output ..... 2V RMS ±3dB, 1kΩ  
Digital coaxial output ..... 75Ω acc. IEC 958  
Impedance headphones ..... 30–800Ω (5V e. m. f. from 120Ω)  
Dimensions ..... 435 × 88 × 265mm  
Weight ..... 2.9kg



## CONTROLS AND CONNECTIONS

### English

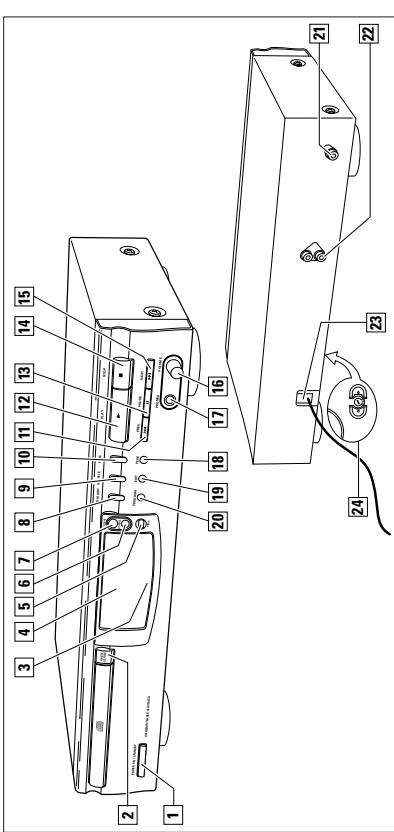

#### Controls on the front

- [1] **POWER ON / STANDBY** ..... switches the CD player on and to standby
- [2] **OPEN/CLOSE** ..... opens and closes the CD tray
- [3] Sensor for the infrared remote control
- [4] Display
- [5] **TIME** ..... switches through the different time information
- [6] **SCROLL** ..... scrolls CD-Text information
- [7] **CD TEXT** ..... scrolls through the different CD-text information
- [8] **HIGHLIGHT** ..... plays the beginning of each track or – if a CD-Text disc contains highlights – the highlights of a CD
- [9] **SHUFFLE** ..... plays a CD on a program in random order
- [10] **FADE** ..... fades CD play out and in
- [11] **PREV. ▶◀** ..... selects the beginning of the current or a previous track, and searches backward
- [12] **PLAY ▶** ..... starts CD play
- [13] **PAUSE II** ..... interrupts CD play
- [14] **STOP ■** ..... stops CD play and clears a program
- [15] **NEXT ▶▶** ..... selects the beginning of a subsequent track and searches forward

#### At the bottom

- [24] **VOLTAGE SELECTOR** ..... (Not on all versions.) Disconnect the mains lead first, if this selector must be reset.

#### At the back

- [16] **VOLUME** ..... decreases or increases the volume level of the headphones
- [17] **PHONES** ..... 6.3mm headphone socket
- [18] **PEAK** ..... searches the loudest passage of a CD
- [19] **EDIT** ..... changes the settings for recording on tape or CD-Recordable programs track numbers
- [20] **PROGRAM** ..... connections at the back
- [21] **DIGITAL OUT** ..... to connect the digital input of a digital audio device
- [22] **LINE OUT L/R** ..... to connect the audio input of an amplifier
- [23] **Mains lead** ..... After all other connections have been made, connect this mains lead to the wall socket.

## INSTALLATION AND REMOTE CONTROL


## PLAYBACK

# INSTRUCTION FOR USE

### Accessories


This CD player is supplied including:  
– a remote control  
– 2 batteries for the remote control  
– a connection cable  
– this instruction booklet

### Remote control

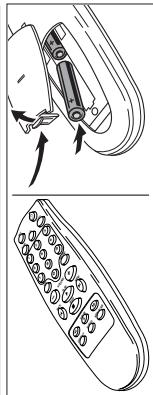

### English

### English

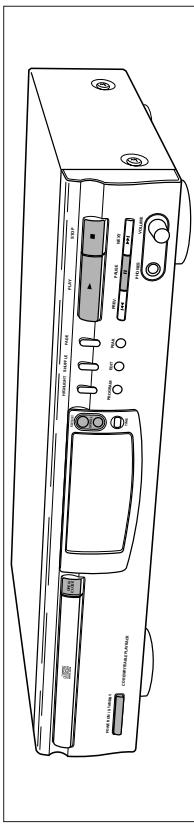

### Connections

#### Usual connection, LINE OUT

1 Insert the red plug of the supplied connection cable into R and the other plug into L.

2 Insert the other side of the cable into the corresponding sockets of the CD or AUX input of your amplifier.

#### Important!

You may also use the TUNER or TAPE but **never** the PHONO input of your amplifier!

#### Digital connection, DIGITAL OUT

Never connect this socket to a non-digital input – such as ALIX, CD, PHONO, TAPE – of an amplifier. This output supplies a digital signal and can therefore only be connected to a digital input.

1 Insert an optional coaxial cable into DIGITAL OUT.

2 Insert the other side of the cable into the digital input of your digital device i.e. g. CD Recorder).


### Mains

#### The type plate is located on the back of the CD player.

1 If your set is equipped with a VOLTAGE selector (at the bottom), set this selector to your local mains voltage if necessary. Position 120V includes 110V–127V. Position 230V includes 220V–240V.

2 Connect the mains cable to the wall socket. This switches on the mains supply.

Note: To disconnect the CD player from the mains completely, remove the mains plug from the wall socket.

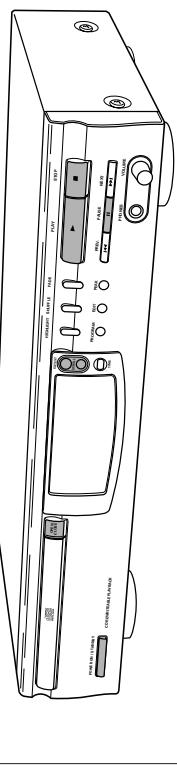

### CD-Text

This CD player can show information which is stored on CD-Text discs. It will only reproduce the text which is recorded on the disc.

#### Playing a CD

- 1 Use POWER ON / STANDBY to switch on the CD player.
- 2 Press OPEN/CLOSE to open the CD tray.  
OPEN appears on the display.

#### CD-Text

- 1 When inserting a disc with CD-Text the display shows CD TEXT and performing artist or group. In case there are various artists the album title is shown.
- 2 Press CD TEXT before playing a CD to switch between album title and performing artist(s) if available.
- 3 Press CD TEXT during CD play to switch between album title, performing artist(s) and track title if available.
- 4 Press PLAY ▶ to start CD play.  
The display shows ▶: TRACK, TIME, and the number and time of the actual track. If the disc contains CD-Text the display shows CD-Text information.

- 5 Insert an audio CD (printed side up) and press OPEN/CLOSE to close the CD compartment.  
CLOSE appears on the display.
- 3 Insert an audio CD (printed side up) and press OPEN/CLOSE to close the CD compartment. Then the number of tracks and the playing time is shown. If the disc contains CD-Text the display shows CD TEXT and CD-Text information (see "CD-Text").

- 1 When inserting a disc with CD-Text the display shows CD TEXT and performing artist or group. In case there are various artists the album title is shown.
- 2 Press CD TEXT before playing a CD to switch between album title and performing artist(s) if available.
- 3 Press CD TEXT during CD play to switch between album title, performing artist(s) and track title if available.
- 4 At the beginning of a new track the track title is scrolled once. Then the first 12 digits of the track title are displayed.

- 5 CD-Text information is scrolled every 30 seconds. Press SCROLL to scroll the text through the display any time.

- Continue CD play by pressing PAUSE II again.

#### TIME

- 5 Press STOP ■ to stop CD play.

- You can interrupt CD play by pressing PAUSE II. The display shows ▶: and the track number and time where playback was stopped.

- Continue CD play by pressing PAUSE II again.

- 5 Press STOP ■ to stop CD play.

- Note: Playback will also stop if the end of the CD is reached.

### SCROLL

### REPEAT A/B

### CD TEXT

### PAUSE II

### NEXT ▶

### STOP ■

### PREV ▶

### ◀

### ▶

### SCROLL

### REPEAT A/B

### PAUSE II

### NEXT ▶

### STOP ■

### PREV ▶


### ◀

### SCROLL

### REPEAT A/B

# INSTRUCTION FOR USE

## ADDITIONAL FUNCTIONS

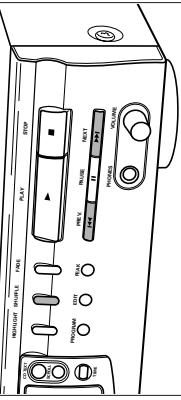

### Selecting a track and searching

#### Selecting a track during CD play

- Briefly press PREV. ▶ or NEXT ▶ (PREV. ▶ or NEXT ▶ on the remote control) once or several times to skip to the beginning of the current, previous or subsequent track(s), or:
- Use the digits 1-0 on the remote control to key in the number of a track.


CD play continues with the selected track.

#### Searching for a passage during CD play

- Hold down PREV. ▶ or NEXT ▶ (◀ or ▶ on the remote control) to find a particular passage in a backward or forward direction.
- CD play continues at a low volume.
- Release the button when you have reached the desired passage.
- Press PLAY▶ to return to normal CD play.

*Note: In the shuffle and repeat mode and when playing a program, searching is only possible within the particular track.*

## ADDITIONAL FUNCTIONS

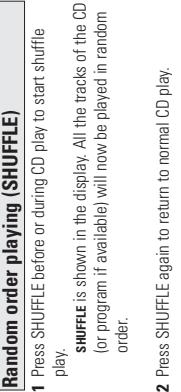

### Repeating the CD, a track or a program

#### 1 Press REPEAT on the remote control during CD play.

The display shows the different repeating modes.

- REPEAT 1:** the current track is played repeatedly.
- REPEAT:** the entire CD or program (if available) is played repeatedly.

2 Press REPEAT again to return to normal CD play.

#### 2 Press REPEAT until the display indication disappears to return to normal CD play.

*Note: It is possible to activate the different playing modes at the same time, e.g. you can repeatedly play the entire CD or program in random order (PROGRAM REPEAT SHUFFLE).*

### Repeating a part of the CD

#### 1 Press PLAY▶ to start CD play.

- Press REPEAT A/B on the remote control to mark the beginning of the passage to be repeated.
- REPEAT is shown and A- is flashing in the display.

- Press REPEAT A/B on the remote control to mark the end of the passage to be repeated.
- REPEAT A-B is shown in the display. The part of the CD between the marked points is played repeatedly.


#### 4 Press PLAY▶ to return to normal CD play.

### Clearing the program

#### 1 If necessary press STOP■ to stop program playing.

- 2 Press STOP■ to clear the program.
- PROGRAM, CLEAR, and PROGRAM scrolls through the display, PROGRAM disappears and your program is cleared.

*Note: The program will also be cleared if you open the tray.*

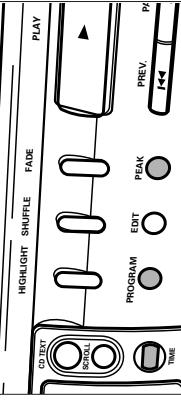

### Programming track numbers

You can select a number of tracks and store these in the memory in the desired sequence. You can store any track more than once. At most, 30 tracks can be stored in the memory.

- 1 Press PROGRAM to start programming.
- PROGRAM flashes.

2 Press PEAK to start searching.

PEAK starts flashing. Searching may need a few minutes. Then 4 seconds of the loudest passage are played repeatedly.

- 1 If necessary press STOP■ to stop CD play.
- 2 Press PEAK to start searching.
- PEAK starts flashing. Searching may need a few minutes. Then 4 seconds of the loudest passage are played repeatedly.

- You can interrupt peak play by pressing PAUSE■. Continue peak play by pressing PAUSE■ again.

- 3 Press STOP■ to stop playing.
- or
- 4 Press STOP■ to stop programming.

PROGRAM lights permanently.

*Note: If you press PROGRAM while playing a CD, the actual track will be added to the program.*

- 2 Press PREV. ▶ or NEXT ▶ (PREV. ▶ or NEXT ▶ on the remote control) to select the desired track or:
- Key in the number of a track with the digits 1-0 on the remote control.

3 Press PROGRAM to store the track number.

*Note: If you press PROGRAM while playing a CD, the actual track will be added to the program.*

- TRACK, TOTAL TIME, and the number of the programmed track is displayed. The number of programmed tracks is increased and the time of the track is added to the total time of the program.
- 4 Repeat steps 2 and 3 for all tracks to be programmed.

5 Press STOP■ to end programming.

PROGRAM lights permanently.

- 6 Press PLAY▶ to start program play.
- It is possible to review the program using the PREV. ▶ or NEXT ▶ (PREV. ▶ or NEXT ▶ on the remote control). You can add more tracks by pressing PROGRAM like you have done before.

*Note: If you try to store more than 30 tracks*

*PROGRAM, FILL scrolls through the display.*


*Note: If you press TIME when the CD is not playing you may only display the total time of the CD.*

English

English

## ADDITIONAL FUNCTIONS

## ADDITIONAL FUNCTIONS

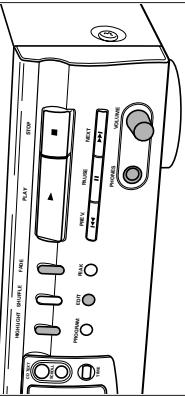

### Headphone listening

- 1 Connect your headphones to the 6.3mm PHONES socket.

- 2 Use VOLUME to adjust the volume of the headphones.

Note: The maximum volume on the headphones is set through VOLUME →/- on the remote control.

### Important!

The volume of the headphones is in line with the volume of the output. Therefore do not use VOLUME →/+ during recording.

### Scanning the CD

It is possible to listen to the beginning of each track of a CD or program. You can choose whether to play 10, 20 or 30 seconds of each track. If a disc contains CD-Text highlights this part of the tracks is scanned and HIGHLIGHT is displayed.

- 1 Press HIGHLIGHT repeatedly to switch through the different scan modes.

HIGHLIGHT, SCAN, SCAN 10, SCAN 20, SCAN 30, SCAN OFF ... [SCAN OFF aborts the scan function]

- 2 As soon as the desired scan mode is displayed do not press the button again.

After 1 second scanning starts. The number and remaining time of the actual track, and REM TIME are displayed.

- You can interrupt scan by pressing PAUSE II. Continue scan by pressing PAUSE II again.

- 3 Press STOP ■ to stop scanning.

or  
Press PLAY ▶ to start CD play with the actual track.

- Note: If you press HIGHLIGHT while SHUFFLE is active, shuffle will be stopped before scanning.

### Volume adjustment

The volume of the CD player can be adjusted. This affects the DIGITAL OUT output as well.

- Press VOLUME – or VOLUME + on the remote control.

The display shows the actual value between 'VOLUME MIN' and 'VOLUME MAX'.

### Important!

VOLUME →/- is altering the signal of the output. Before recording set the volume at 'VOLUME MAX' and do not change during recording.

### Locking the volume

It is possible to lock the output volume to its maximum. This affects the DIGITAL OUT output as well. Locking the volume can be useful when recording from the CD-player.

- Keep EDIT pressed for more than 2 seconds.


#### If the volume was unlocked:

The display shows 'VOLUME F T C' and the volume is locked.

#### If the volume was locked:

The display shows 'VOLUME MR' and the volume is unlocked.

Note: If you press VOLUME →/- and the volume is locked the display shows 'VOLUME F T C'.

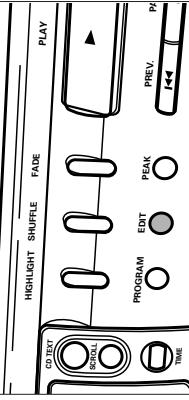

### Recording setup

It is possible to set up the CD player in a way that it will calculate which tracks will fit on your recording media. It is only possible to use the edit function if a disc has not more than 29 tracks.

If you use 'CDTFL' the recording stops after the last track that fits on one side of your recording media. Notice that CD-Recordables are single-sided only! If you use 'CDTFL' some tracks will be skipped to minimise the unused space on your recording media. The sequence of the tracks stays as the original.

- 1 Insert a CD and, if desired, program track numbers.

2 Press EDIT to start the setup.  
The display shows EDIT and NCNPNL.

3 Press PREV ▲ or NEXT ▼ (PREV ▲ or NEXT ▼ on the remote control) to switch through the different scan modes. NCNPNL, BPTFL, STGP ... [STGP aborts the edit function).

- 4 As soon as the desired edit mode is displayed press EDIT.  
The display shows E SC.

- 5 Press PREV ▲ or NEXT ▼ on the different recording times and media to switch through the different recording times and media.

[C00, C120, C240, C360, C720, C900...]  
[C30, C45, C60, C75...]

Note: C is for cassette, CDR is for CD-Recordable and CDRW is for CD-Rewritable and therefore for single-sided recording only.

- 6 As soon as the desired recording time and media is displayed press EDIT.  
The number of tracks and the playing time are displayed.

- 7 Start your recording and press PLAY ▶ to start CD play.  
If cassette [C] was selected the CD player pauses after playing the calculated tracks for side A. If CD-Recordable [CDR] was selected the CD player stops.

- 8 If required switch tape sides.

- 9 Press PLAY ▶ to start CD play again.  
If cassette [C] was selected the CD player pauses after playing the calculated tracks for side B. If CD-Recordable [CDR] was selected the CD player stops.

### Environmental information

All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into three mono materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

## INSTRUCTION FOR USE

### English


## ADDITIONAL FUNCTIONS

### English


## MECHANICAL INSTRUCTIONS

### Dismantling Top Cover

- 1) Loosen 7x screw as shown in picture 1.

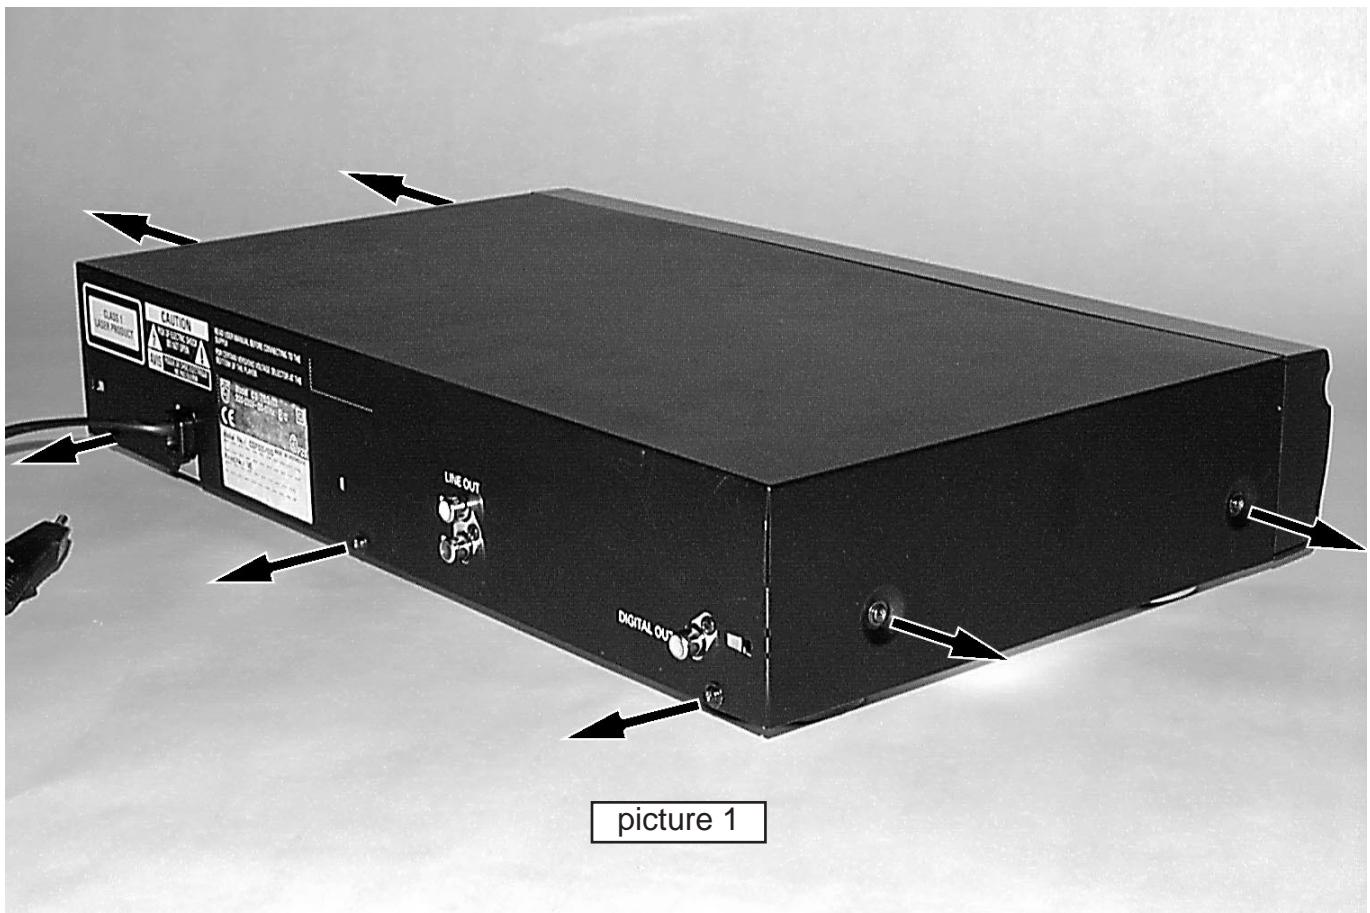


- 2) Lift top cover as shown in picture 2.
- 3) Remove top cover.

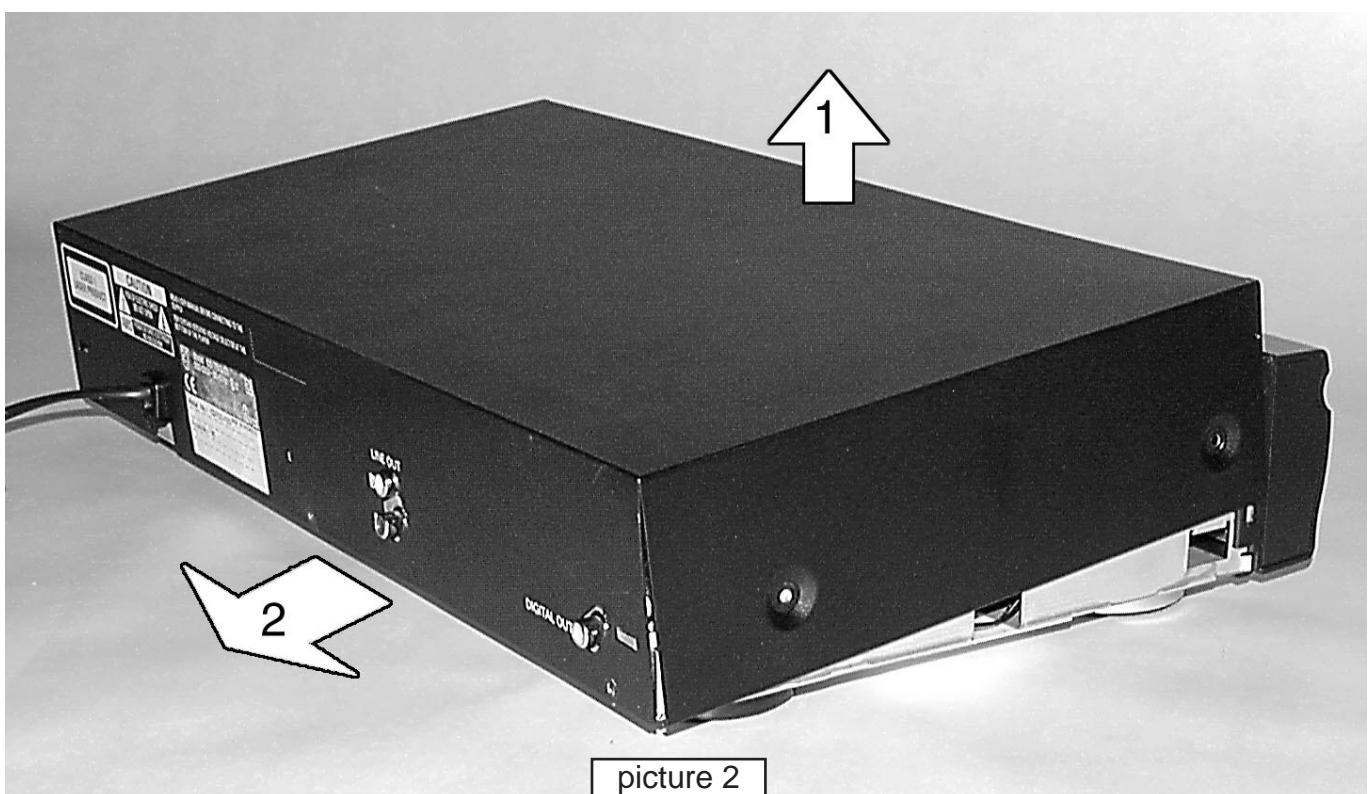


## MECHANICAL INSTRUCTIONS

### Dismantling Front

- 1) Loosen 2x screw as shown in picture 3.

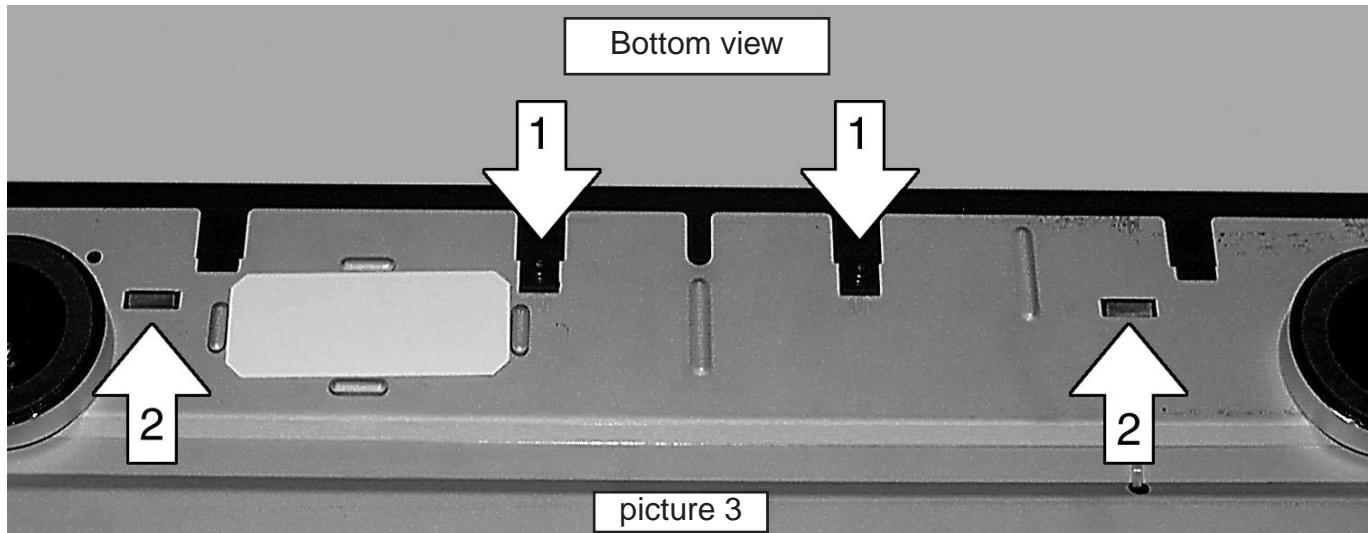

- 2) Release 2x snap on bottom (see picture 3).
- 3) Release 2x snap on side (see picture 4).
- 4) Remove front.

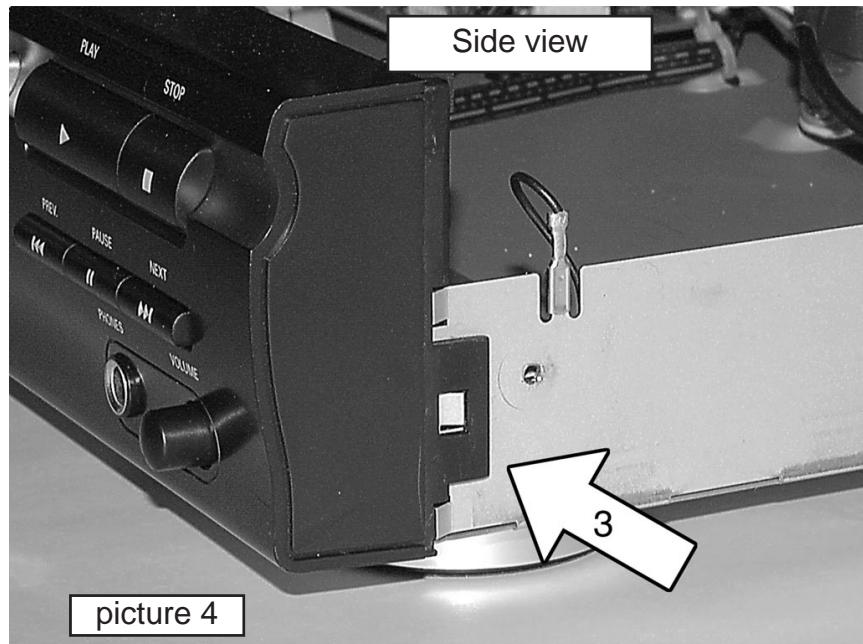

## **Dismantling hints CD Short Loader**

### **Dismantling the tray**

- Press open/close button to open the tray. If the tray doesn't work, use a small screwdriver as shown in Fig.1 step 1 to move the tray outside. After the first centimetre it is possible to pull the tray out by hand.
- Release two snaps and remove tray.

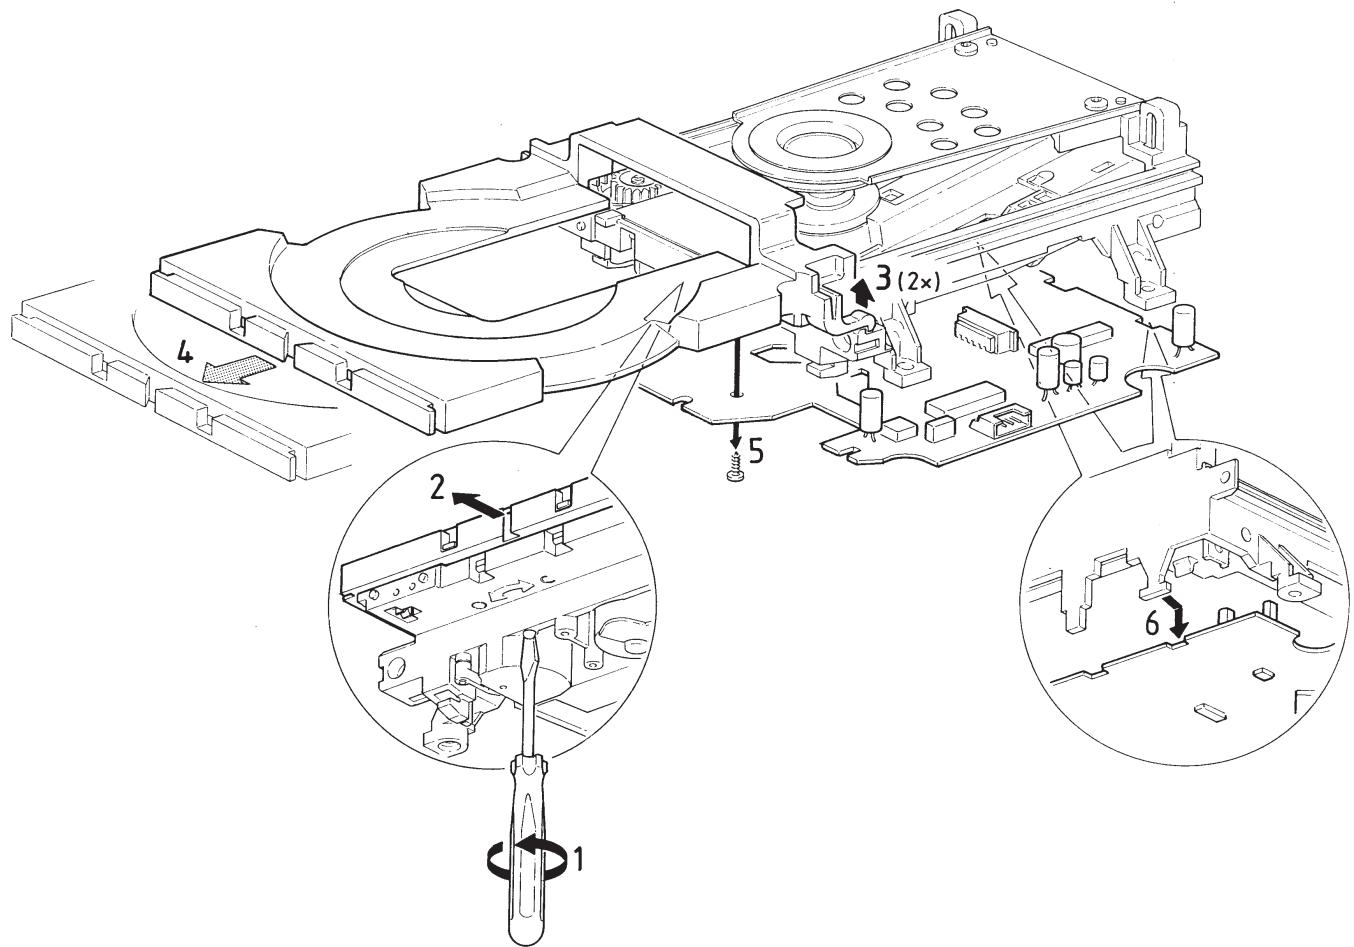


Fig. 1

***Assembly of gear***

a) Use a pin (e.g. a paperclip) to align the cam wheel (a) with the gear wheel (b). See Fig. 2.

b) Fix the wheels with the small plastic washers.



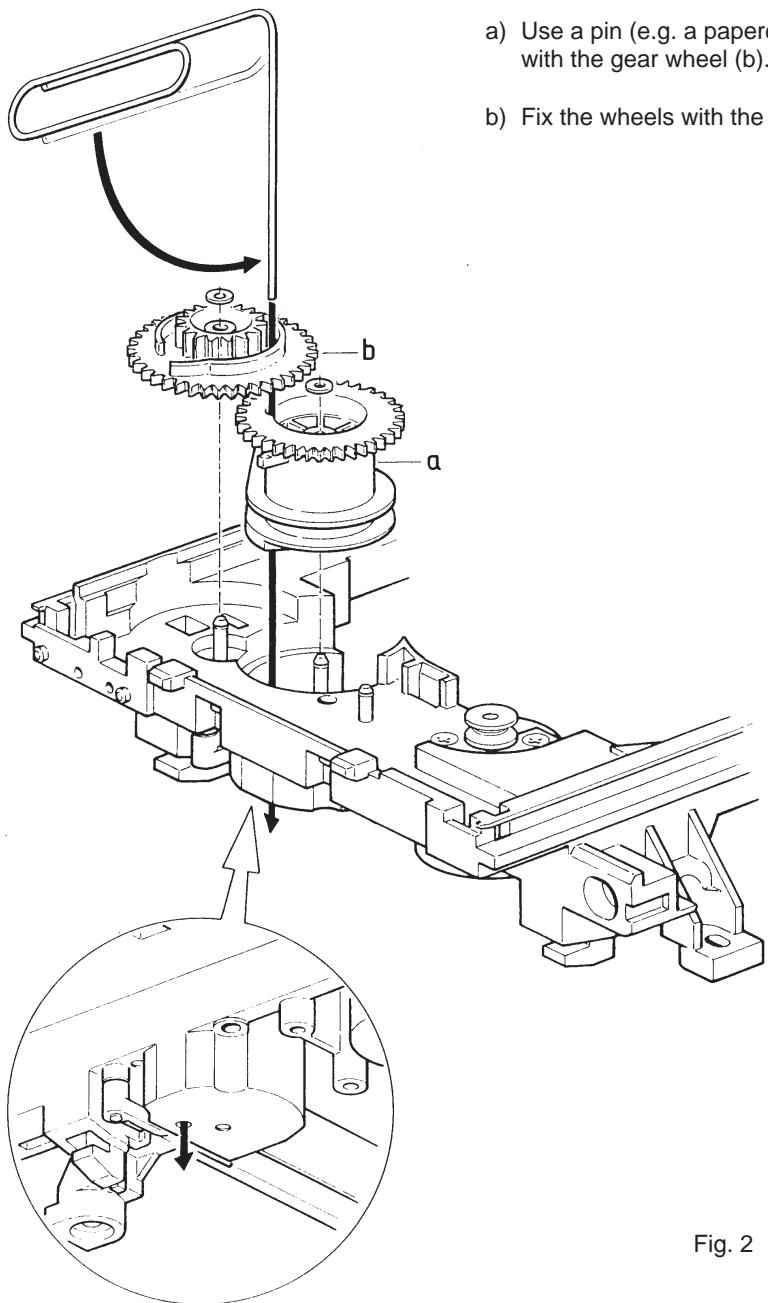


Fig. 2


- c) Mount idle wheel 2 (c) and idle wheel 1 (d) in any position. See Fig. 3.
- d) Fix the idle wheel 1 (d) with the small plastic washer.
- e) Mount the driving belt.

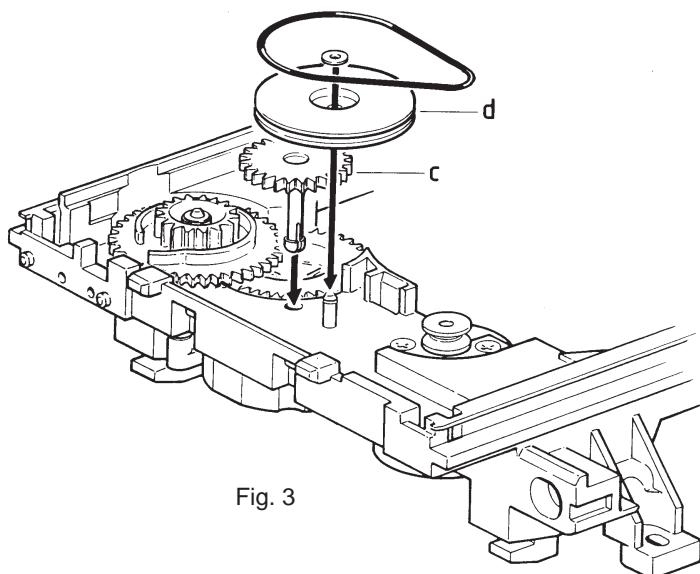

- f) Mount the pinion guiding assy and the cover as shown in Fig. 4.
- g) Turn the gear wheel (b) counter clockwise to endposition.

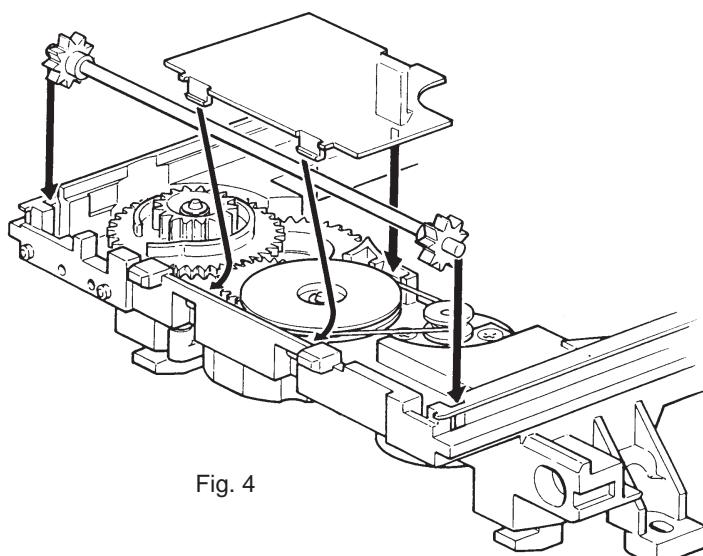

- h) Mount the CD Mechanism as shown in Fig. 5.
- i) Mount the tray (Align the tray to the chassis and push it inside).

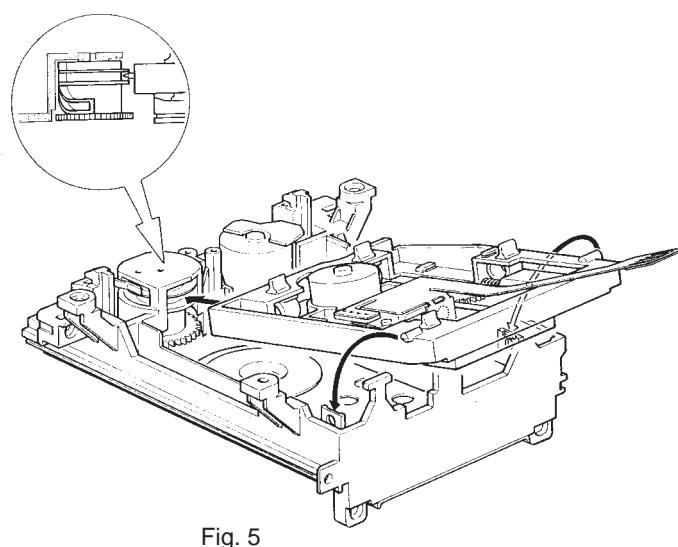

### **Check if tray mechanism works correctly!**


- 1) Turn the gear wheel (b) clockwise to its endposition (Use a small screwdriver as shown in Fig. 1 step 1).

The tray has to move to inner position first and then the CD mechanism has to move to its upper position.

- 2) Turn the gear wheel (b) counter clockwise to its endposition.

The CD Mechanism has to move to its lower position first and then the tray has to move outside.

## HANDLING CHIP COMPONENTS

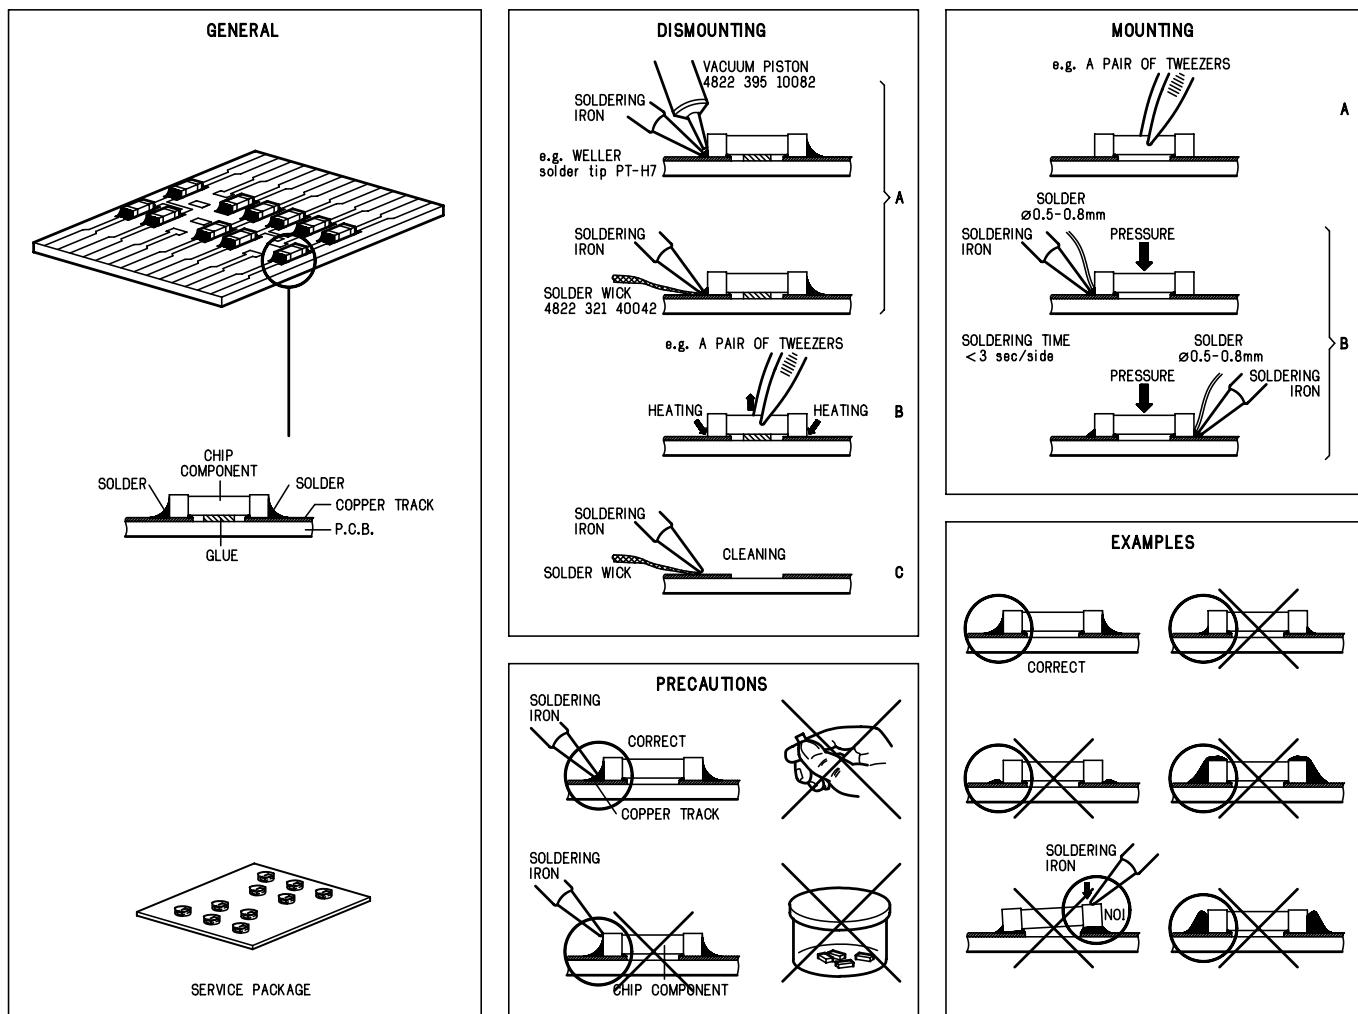

## SERVICE TOOLS

**TORX T10** screwdriver with shaftlength 150mm ..... 4822 395 50423

**TORX** screwdriver set **T6 - T20** SBC 163..... 4822 395 50145

**Audio signal disc** SBC 429..... 4822 397 30184

**Playability test disc** SBC444/444A..... 4822 397 30245


**Test disc 444** (disc without errors) +

**Test disc 444A** (disc with dropout errors, black spots and fingerprints)

**Burn in test disc SBC442** ..... 4822 397 30155

(65 min. 1kHz signal at -30dB level without "pause")

## SERVICE TEST PROGRAM

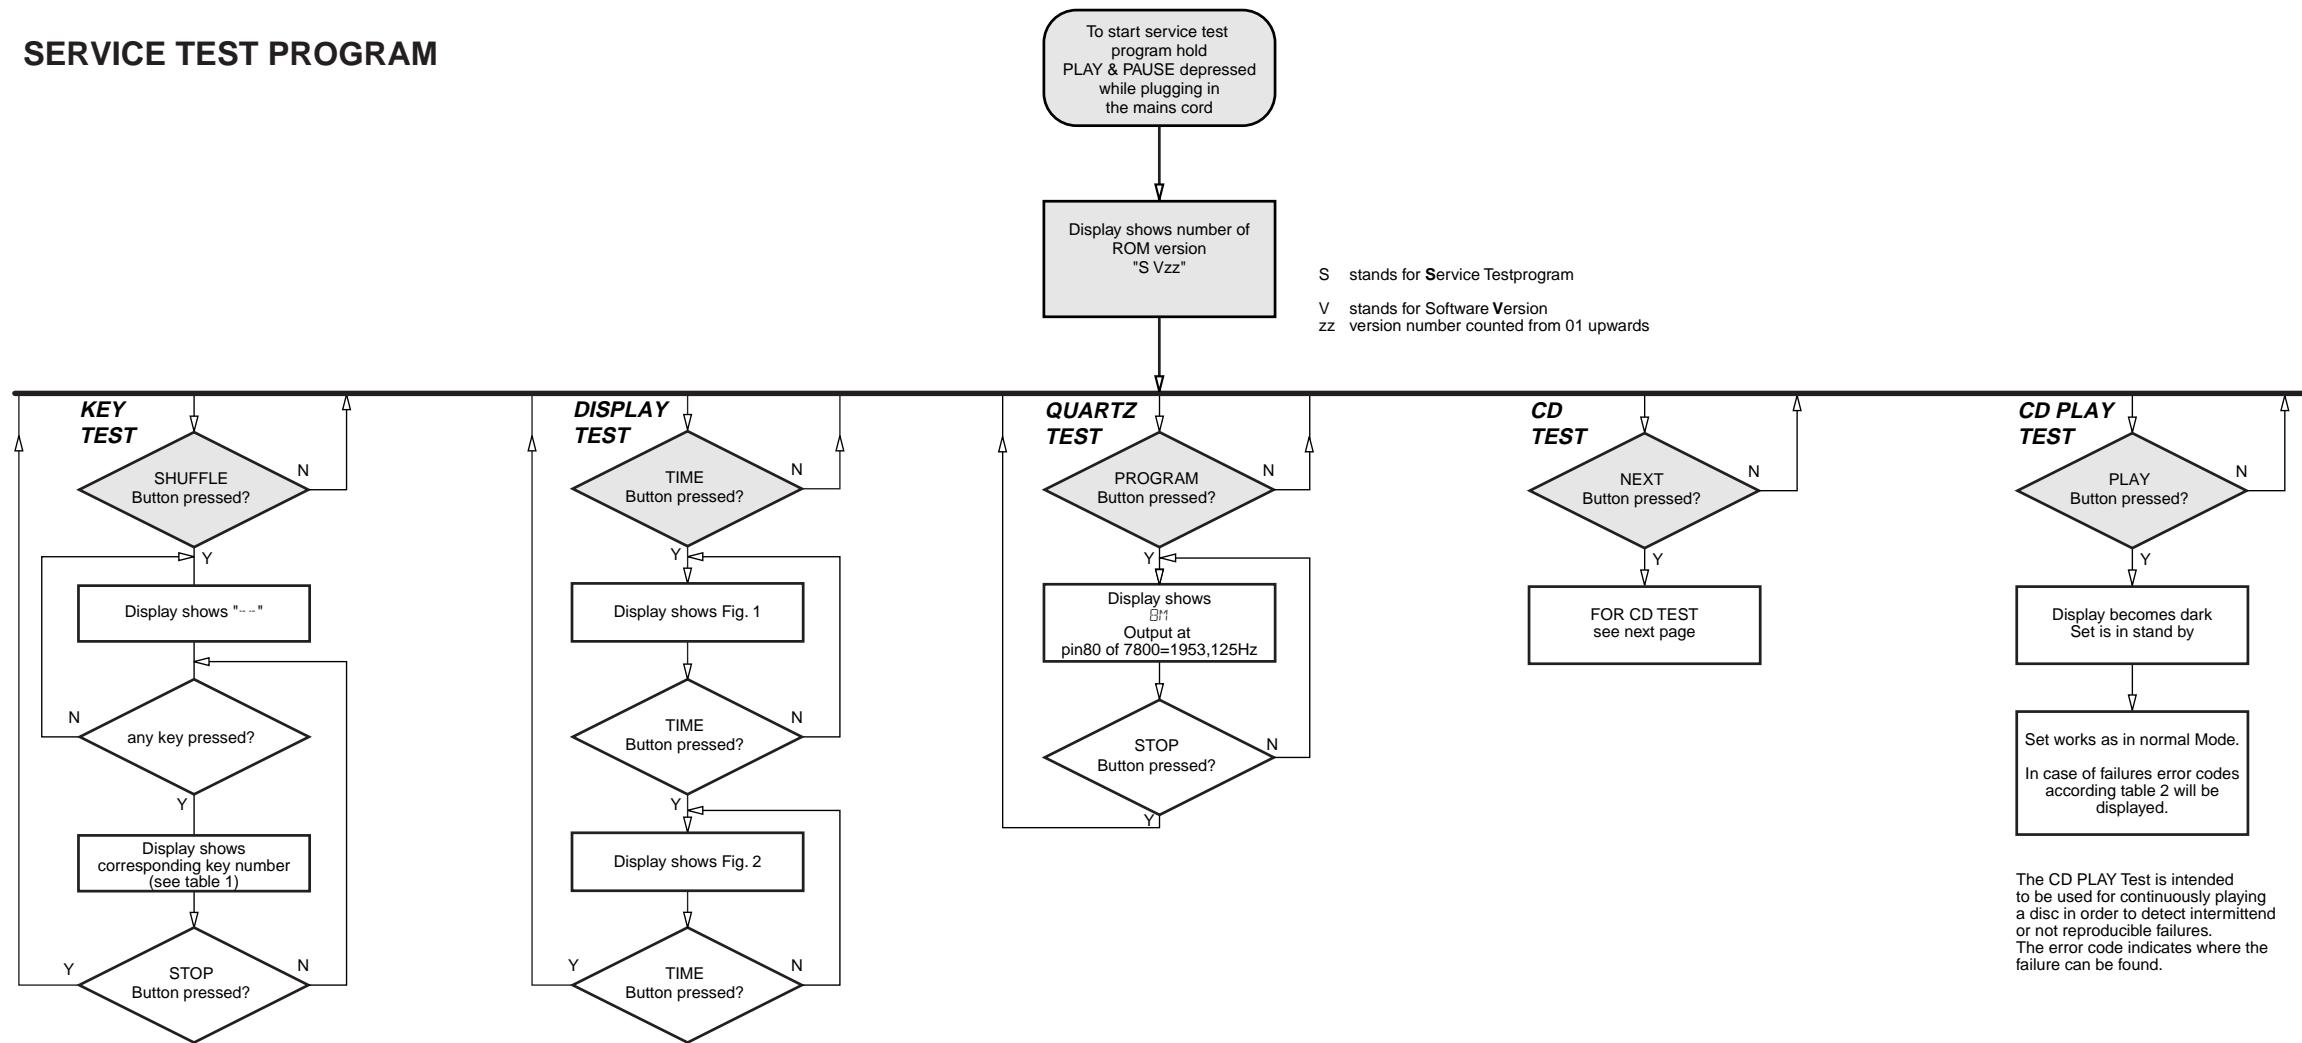

### KEY TEST

Key	Number	Key	Number	Key	Number
Next	1	Shuffle	7	Fade	13
Previous	2	Scan	8	Time	14
Play	3	Program	9	CD-Text	15
Stop	EXIT	Peak search	10	Scroll	16
Open/Close	5	Repeat	11	Stand by	17
Edit	6	Pause	12	any RC button	RC

Table 1

### DISPLAY TEST

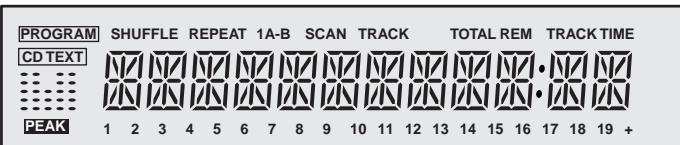


Fig. 1

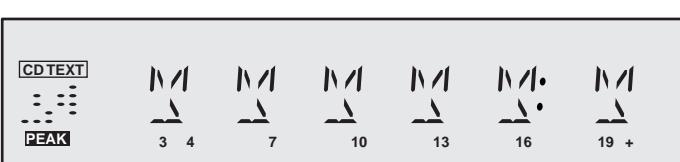


Fig. 2

### CD PLAY TEST

Error number	Type	Description
1000	W	<b>Focus error</b> Triggered when the focus could not be found within a certain time when starting up the CD or when the focus is lost for a certain time during playing the CD.
1001	W	<b>Radial error</b> Triggered when the radial servo is not on track for a certain time during playing the CD.
1002	W	<b>Slide in error</b> Generated when the slide did not reach its inner position (innerswitch is closed) before 6 seconds have passed by. Innerswitch or slide motor problem.
1003	W	<b>Slide out error</b> Generated when the slide did not come out of its inner position (innerswitch is open) before 250ms have passed by. Innerswitch or slide motor problem.
1005	W	<b>Jump error</b> Generated when the jump destination could not be found within a certain time.
1006	W	<b>Subcode error</b> No valid subcode for a certain time.
1007	W	<b>PLL error</b> The Phase -Lock-Loop could not lock within a certain time.
1008	W	<b>Turntable motor error</b> Generated when the CD could not reach 75% of speed during starting up within a certain time. Disc motor problem
1020	F	<b>Focus search error</b> Focus point has not been found within a certain time.


Table 2

W = Warning


Error number remains on display till next warning/error

F = Fatal error

Set stops playing → Error number remains on display

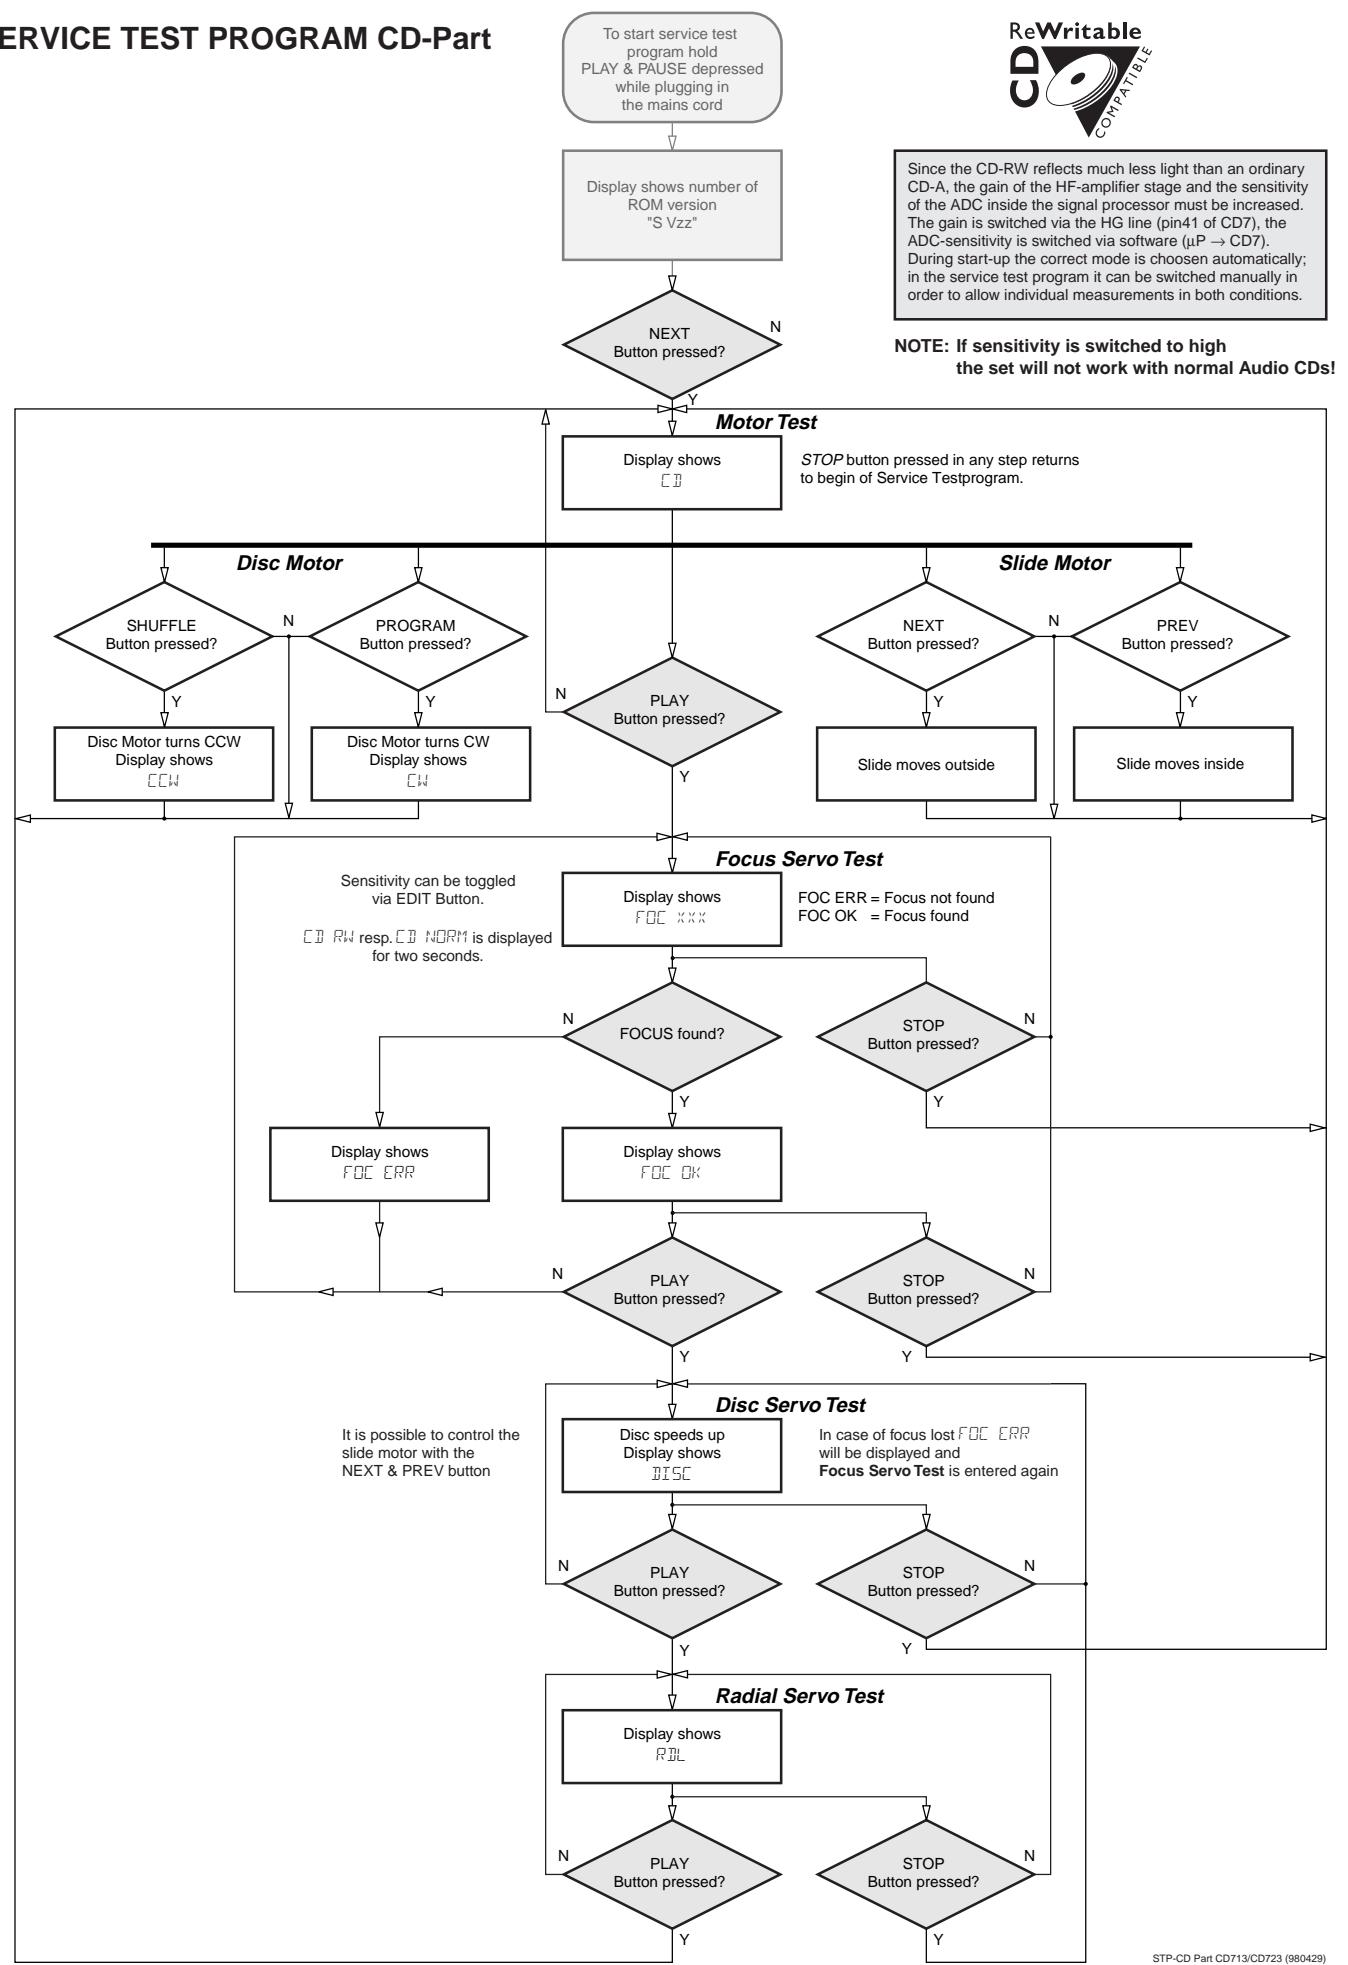
**SERVICE TEST PROGRAM CD-Part****Abbreviations CD Part****SAA7372 – DECODER AND DIGITAL SERVO IC CD7**


Pin	Name	Direction	Description
1	VSSA1	GND	supply (analog) of CD7
2	VDDA1	+4V	supply (analog) of CD7
3	D1	HF-preamp → CD7	unipolar current input (central diode signal input)
4	D2	HF-preamp → CD7	unipolar current input (central diode signal input)
5	D3	HF-preamp → CD7	unipolar current input (central diode signal input)
6	VRL	GND	reference input for ADC
7	D4	HF-preamp → CD7	unipolar current input (central diode signal input)
8	R1	HF-preamp → CD7	unipolar current input (satellite diode signal input)
9	R2	HF-preamp → CD7	unipolar current input (satellite diode signal input)
10	IREFT	→ CD7	current reference for calibration ADC
11	VRH	not connected	reference output from ADC
12	VSSA2	GND	supply (analog) of CD7
13	SEPLL	+4V	selects whether internal clock multiplier PLL is used
14	ISLICE	CD7 →	current feedback from data slicer
15	HFIN	→ CD7	comparator signal input
16	VSSA3	GND	supply (analog) of CD7
17	HFREF	→ CD7	comparator common mode input
18	IREF	→ CD7	reference current pin (nom. VDD/2)
19	VDDA2	+4V	supply (analog) of CD7
20	TEST1	GND	test control input
21	CRIN	X-Tal → CD7	crystal/resonator input
22	CDOUT	X-Tal → CD7	crystal/resonator output
23	TEST2	GND	test control input
24	CL16	not connected	16.9344MHz system clock output
25	CL11	not connected	11.2896MHz or 5.6448MHz clock output (3-state)
26	RA	CD7 → servo driver	radial actuator output
27	FO	CD7 → servo driver	focus actuator output
28	SL	CD7 → servo driver	slide actuator output
29	TEST3	GND	test control input
30	VDD1P	+4V	supply (digital) of CD7
31	DOB1	CD7 → digital output	bi-phase mark output (3-state)
32	VSS1	GND	supply (digital) of CD7
33	MOTO1	CD7 → servo driver	motor output1 of CD7; versatile (3-state)
34	MOTO2	CD7 → servo driver	motor output2 of CD7; versatile (3-state)
35	SBSY	not connected	subcode block sync (3-state)
36	SFSY	not connected	subcode frame sync (3-state)
37	RCK	GND	subcode clock input
38	SUB	not connected	P to W subcode bits (3-state)
39	VSS2	GND	supply (digital) of CD7
40	V5	not connected	versatile output pin of CD7
41	V4	not connected	versatile output pin of CD7
42	V3	not connected	versatile output pin of CD7 (open drain)
43	KILL	CD7 →	kill output; programmable (open drain)
44	MISC	not connected	C2 error flag; output only defined in CD-ROM modes (3-state)
45	DATA	CD7 → DAC	serial data output (3-state)
46	WCLK	CD7 → DAC	word clock output (3-state)
47	VDD2P	+4V	supply (digital) of CD7
48	BCLK	CD7 → DAC	serial bit clock output (3-state)
49	VSS3	GND	supply (digital) of CD7
50	CL4	not connected	4.2336MHz μP clock output
51	SDA	μP → CD7	μP interface data I/O line (open drain output)
52	SCL	μP → CD7	μP interface clock line
53	RAB	μP → CD7	μP interface R/W and load control line
54	SILD	μP → CD7	μP interface R/W and load control line
55	NC		no connection
56	VSS4	GND	supply (digital) of CD7
57	RESET	μP → CD7	power-on reset input (active low)
58	STATUS	not connected	servo interrupt request line/CD7 status register output (open drain)
59	VDD3C	+4V	supply core (digital)
60	C2FAIL	not connected	indication of correction failure (open drain)
61	CFLG	not connected	correction flag output (open drain)
62	V1	→ CD7	versatile input pin
63	V2	→ CD7	versatile input pin
64	LDON	CD7 → 7820	laser drive on output (open drain)

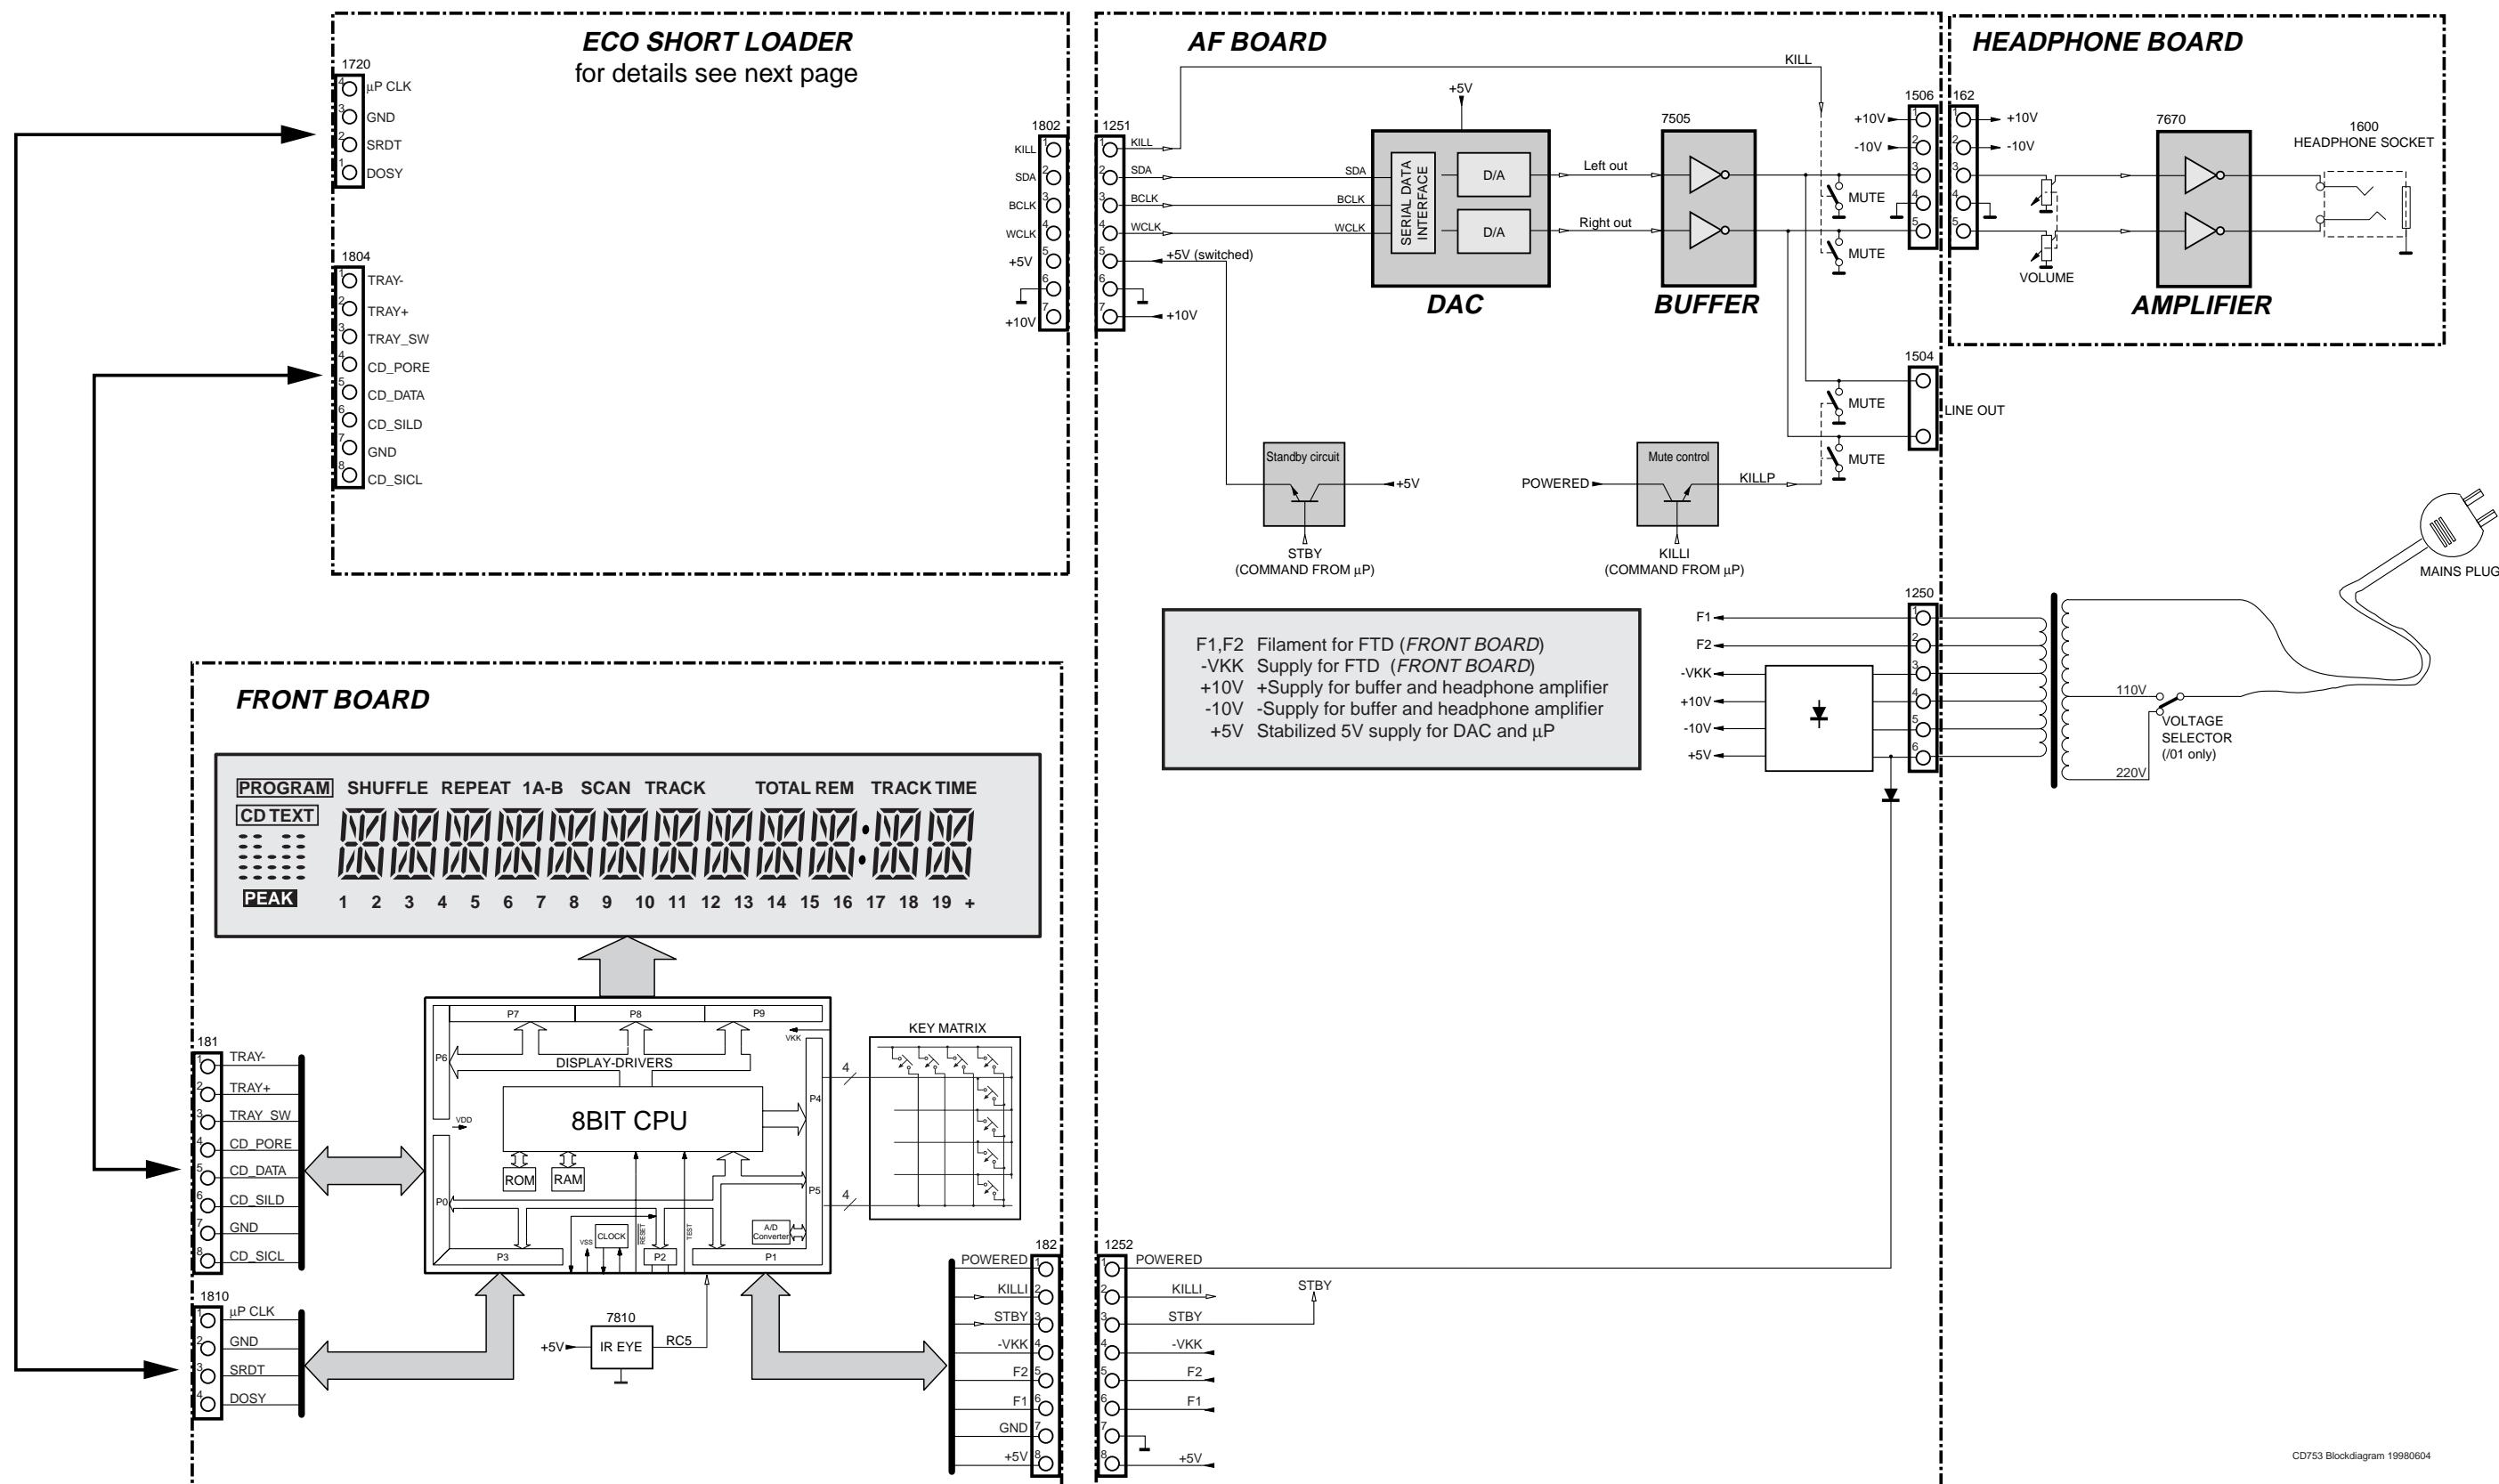
**BLOCKDIAGRAM**

CD753 Blockdiagram 19980604

## BLOCKDIAGRAM ECO SHORTLOADER Mk3

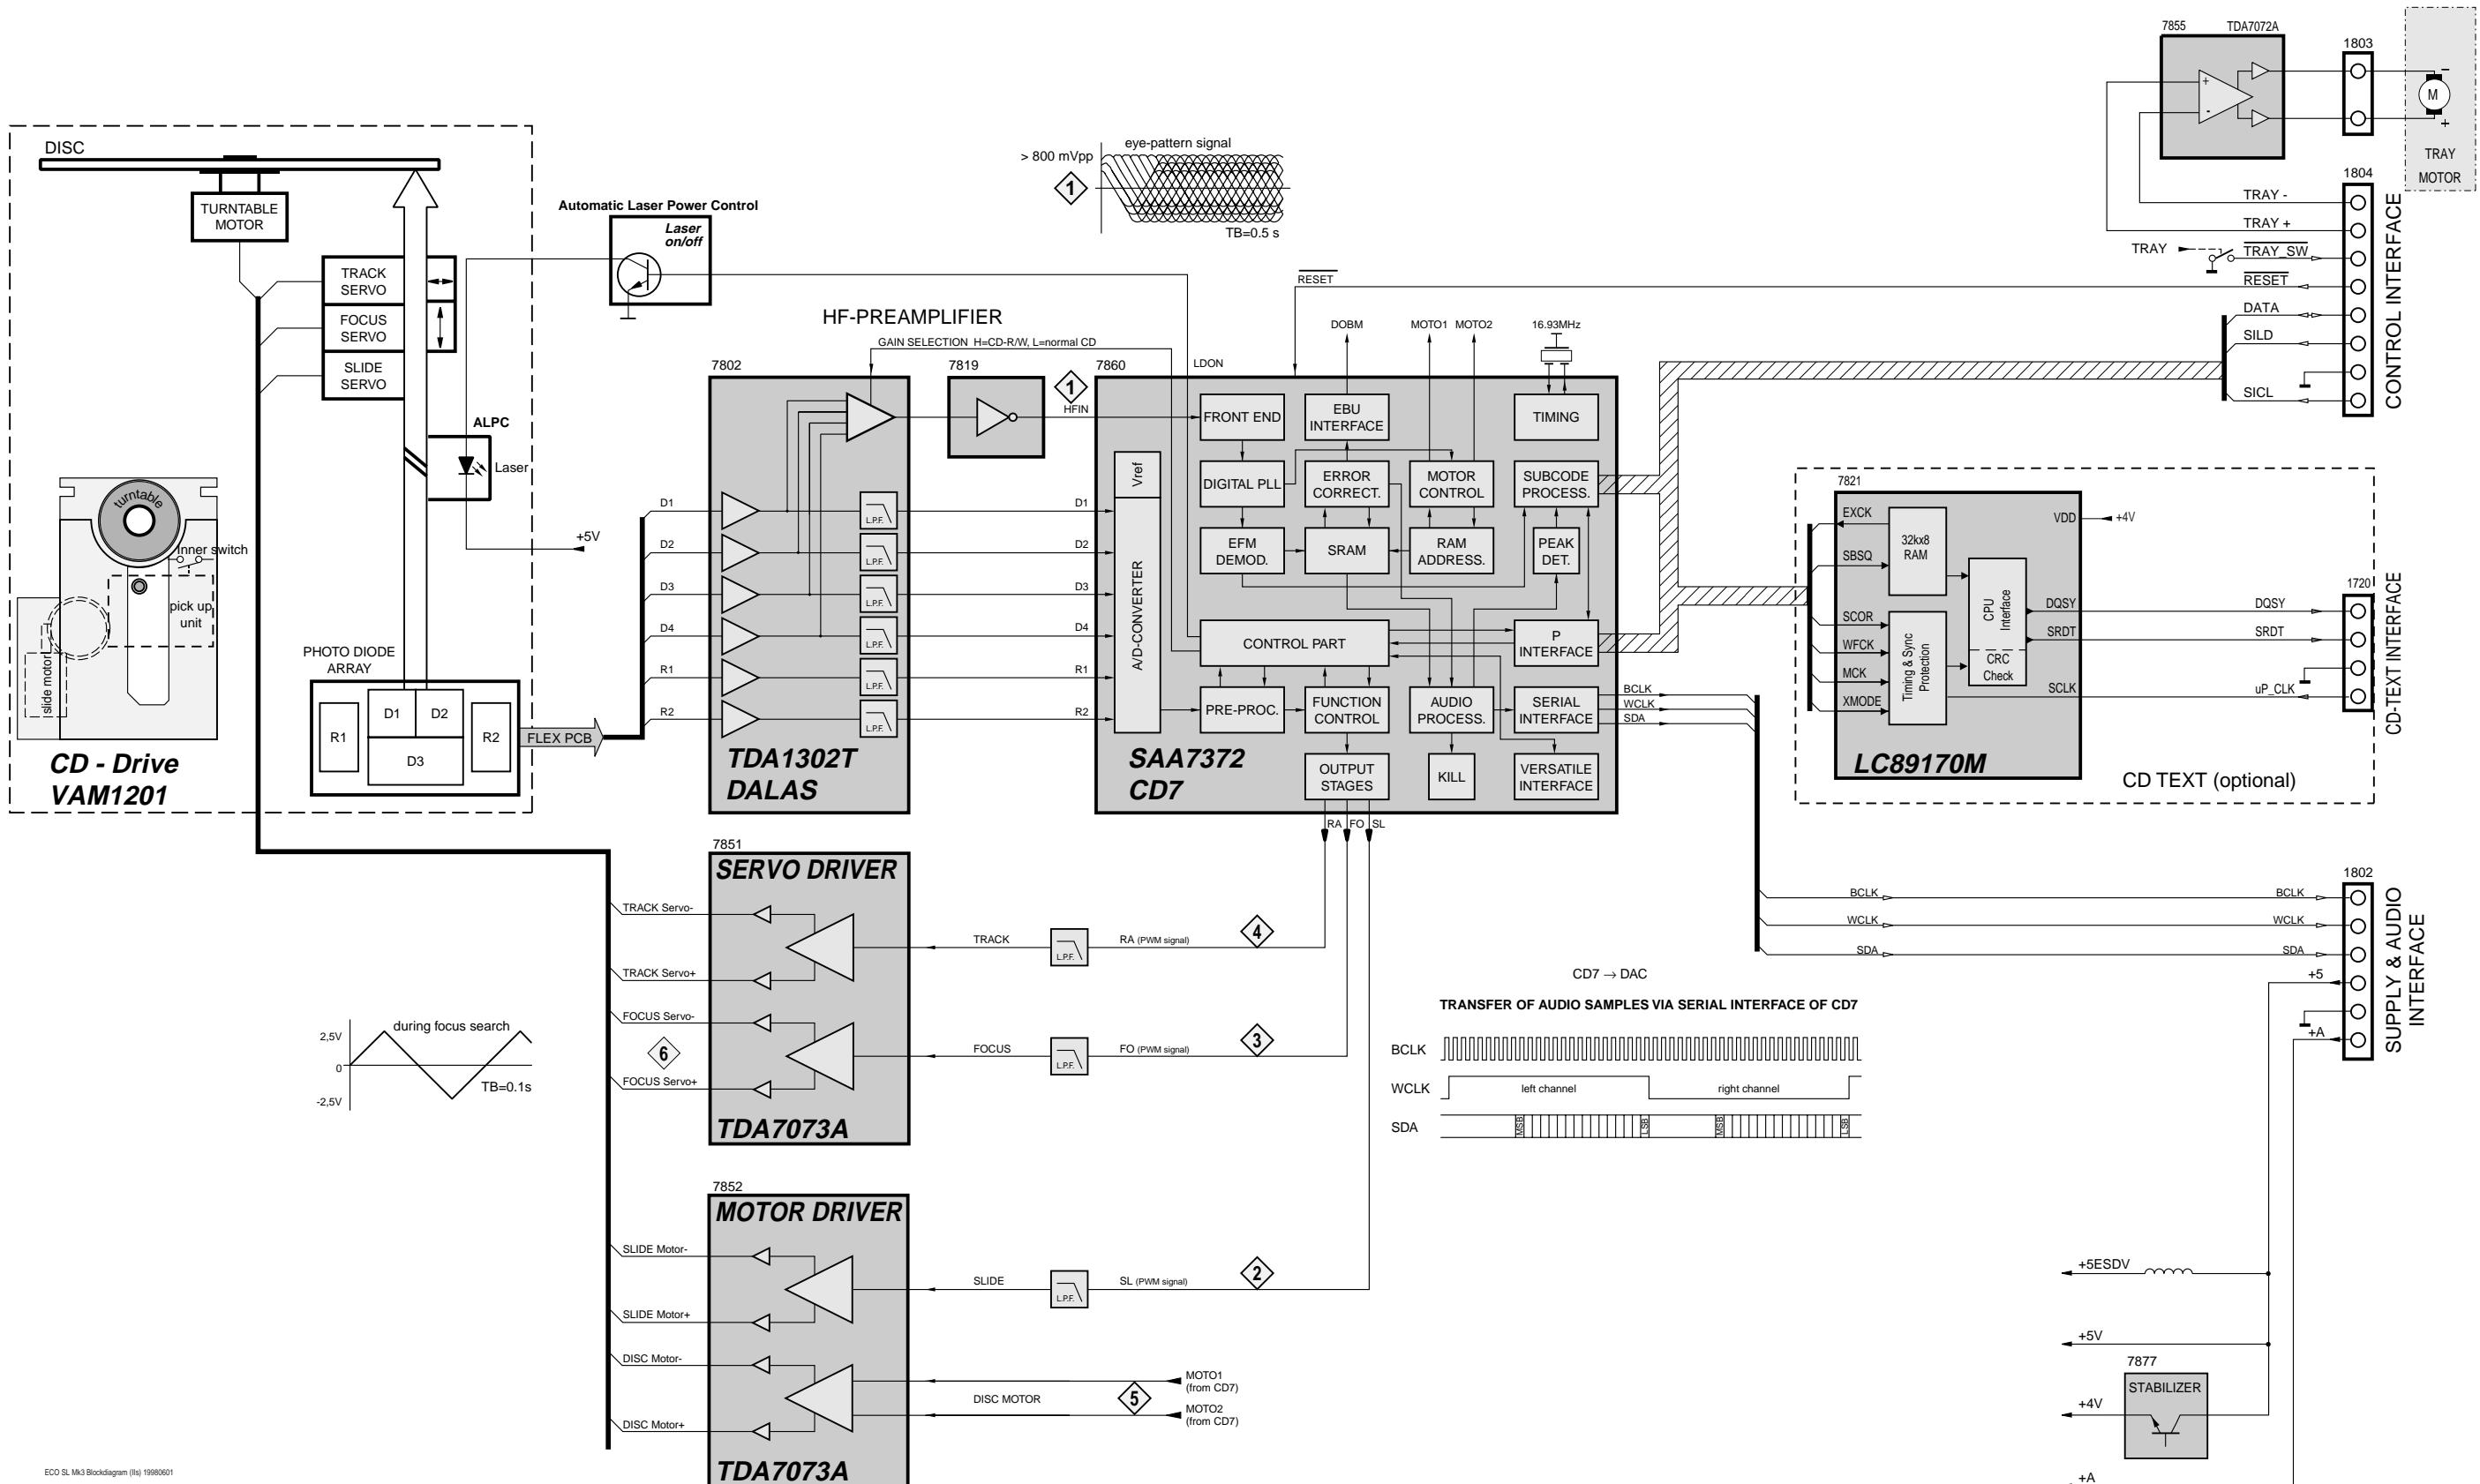

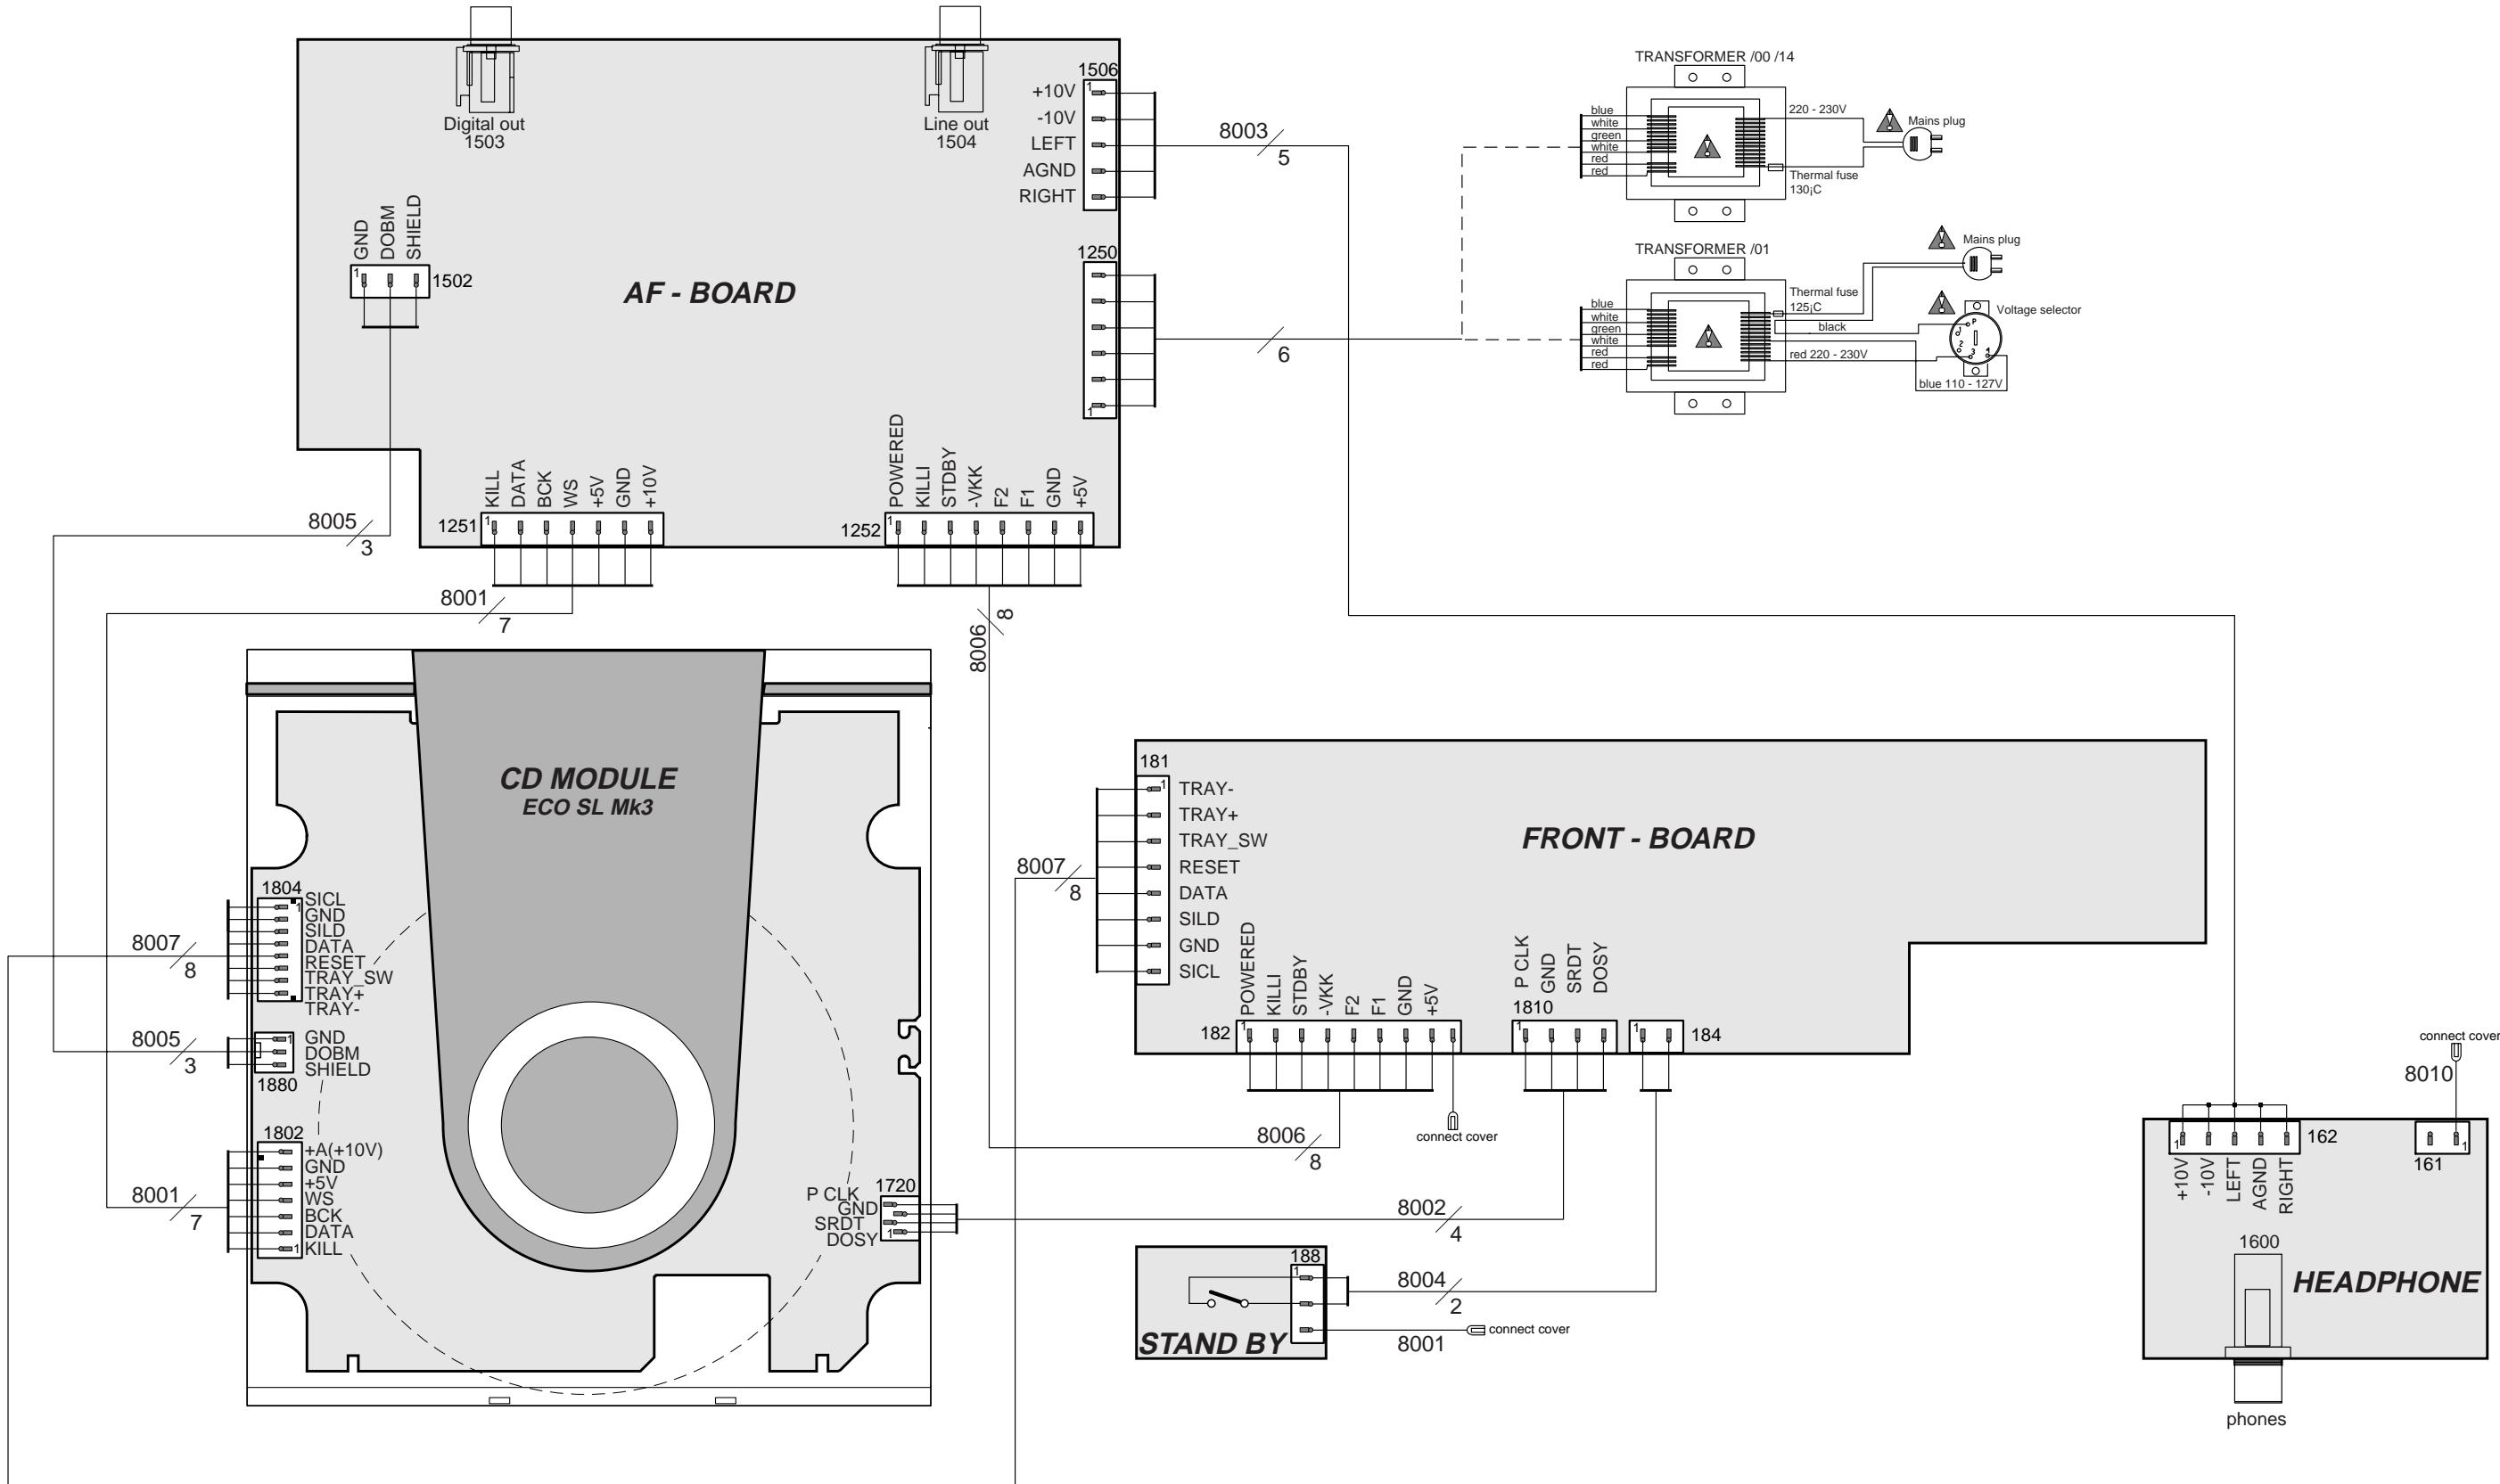**WIRING DIAGRAM**

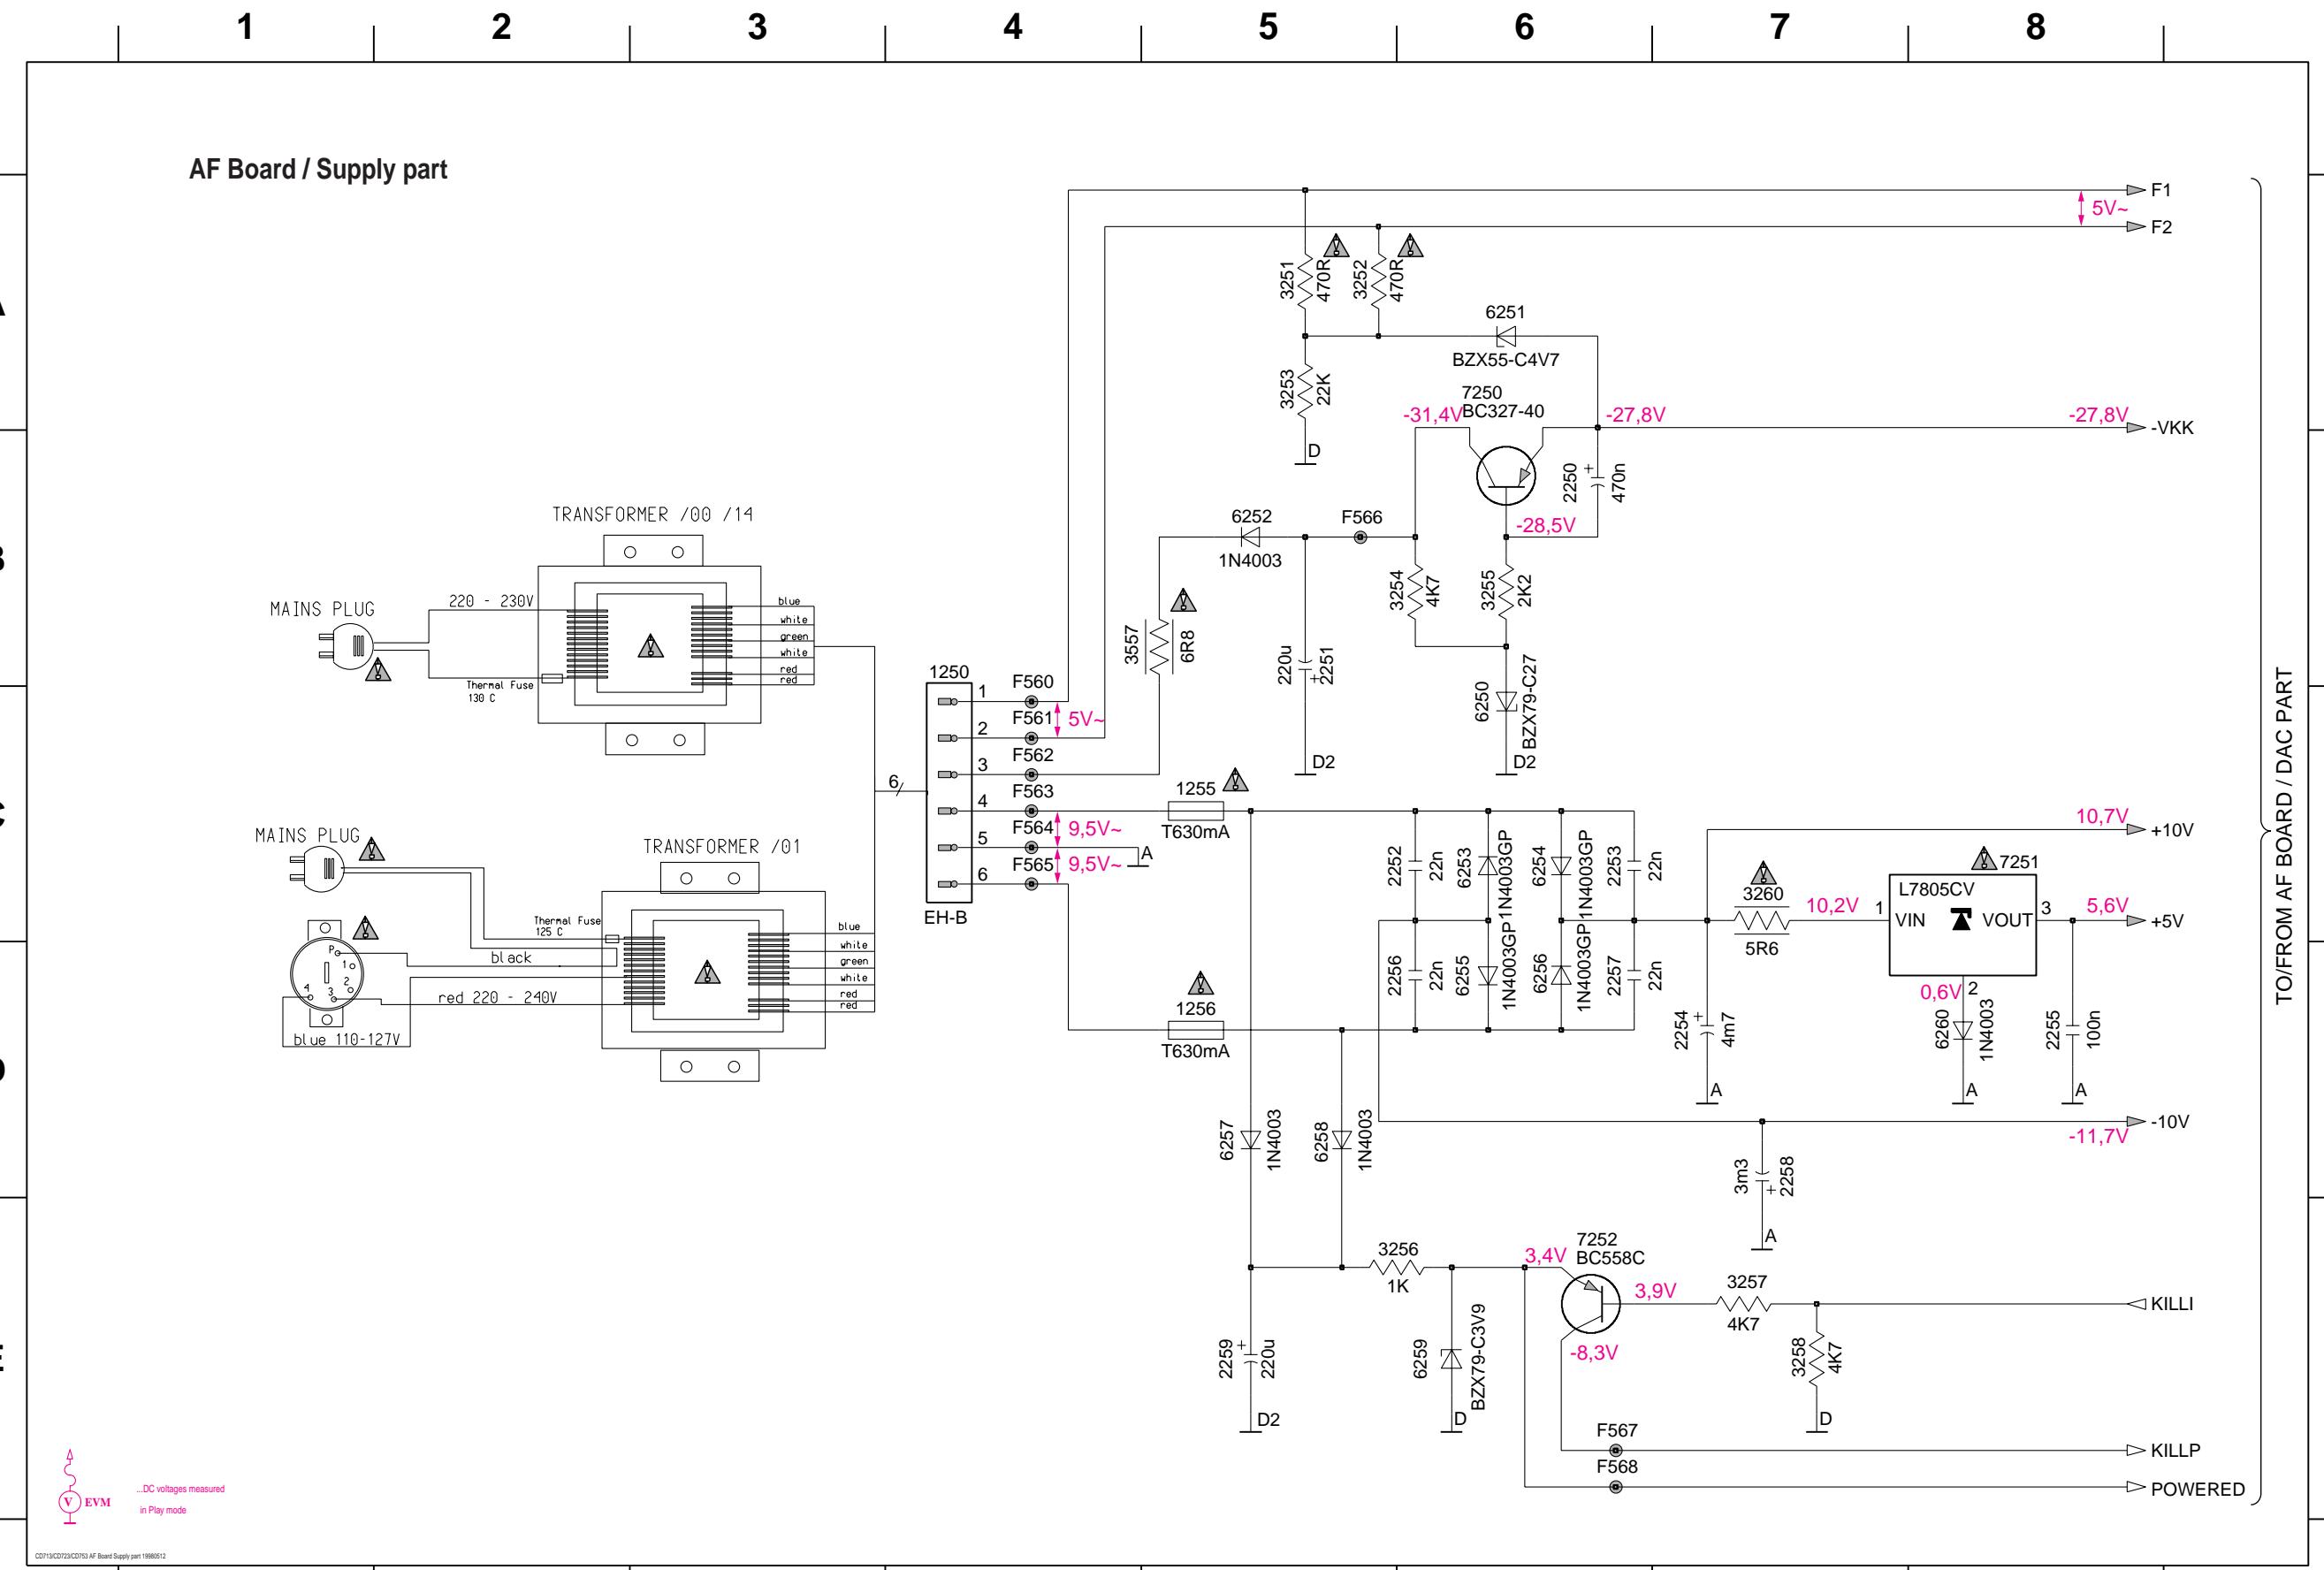

1250 A1	1506 B1	2258 A2	2508 B3	2523 A3	3252 A1	3501 A2	3510 B3	3534 A3	3544 B2	5801 B4	6257 A2	7501 A2	9254 A2	9267 B1
1251 A4	2250 A1	2259 A2	2511 B2	2524 A4	3253 A1	3502 A4	3511 B2	3535 A3	3545 B1	5803 B4	6258 A1	7504 A2	9256 A2	9269 A2
1252 A1	2251 A2	2501 A3	2512 B2	2527 B4	3254 A2	3503 A4	3512 B2	3537 B2	3547 B1	6250 A1	6259 A2	7505 B2	9257 A2	9270 A3
1255 A1	2252 A1	2502 A3	2513 B2	2540 B4	3255 A1	3504 A4	3513 B2	3538 B3	3548 A2	6251 A1	6260 A3	7507 B1	9258 A2	9272 A4
1256 A1	2253 A1	2503 A4	2514 B1	2541 A4	3256 A2	3505 A3	3514 B2	3539 B2	3550 A4	6252 A1	6500 A2	7508 B1	9262 A3	9274 B4
1502 A4	2254 A2	2504 A3	2515 A3	2543 B4	3257 A2	3506 A3	3515 A3	3540 B1	3552 A4	6253 A1	7250 A1	7509 B1	9263 A3	
1503 B4	2255 A3	2505 A4	2516 A4	2544 A4	3258 A2	3507 B2	3527 A2	3541 B2	3553 A4	6254 A2	7251 A3	7510 B1	9264 A3	
1504 B1	2256 A1	2506 A4	2521 B2	2545 B4	3260 A3	3508 B2	3532 A2	3542 B2	3556 B4	6255 A1	7252 A2	7511 B4	9265 A3	
1505 B4	2257 A1	2507 A3	2522 B3	3251 A1	3500 A3	3509 B3	3533 B4	3543 B1	3557 A1	6256 A1	7500 A3	9253 A1	9266 B3	


1

2


3

4


AF Board Componentside view

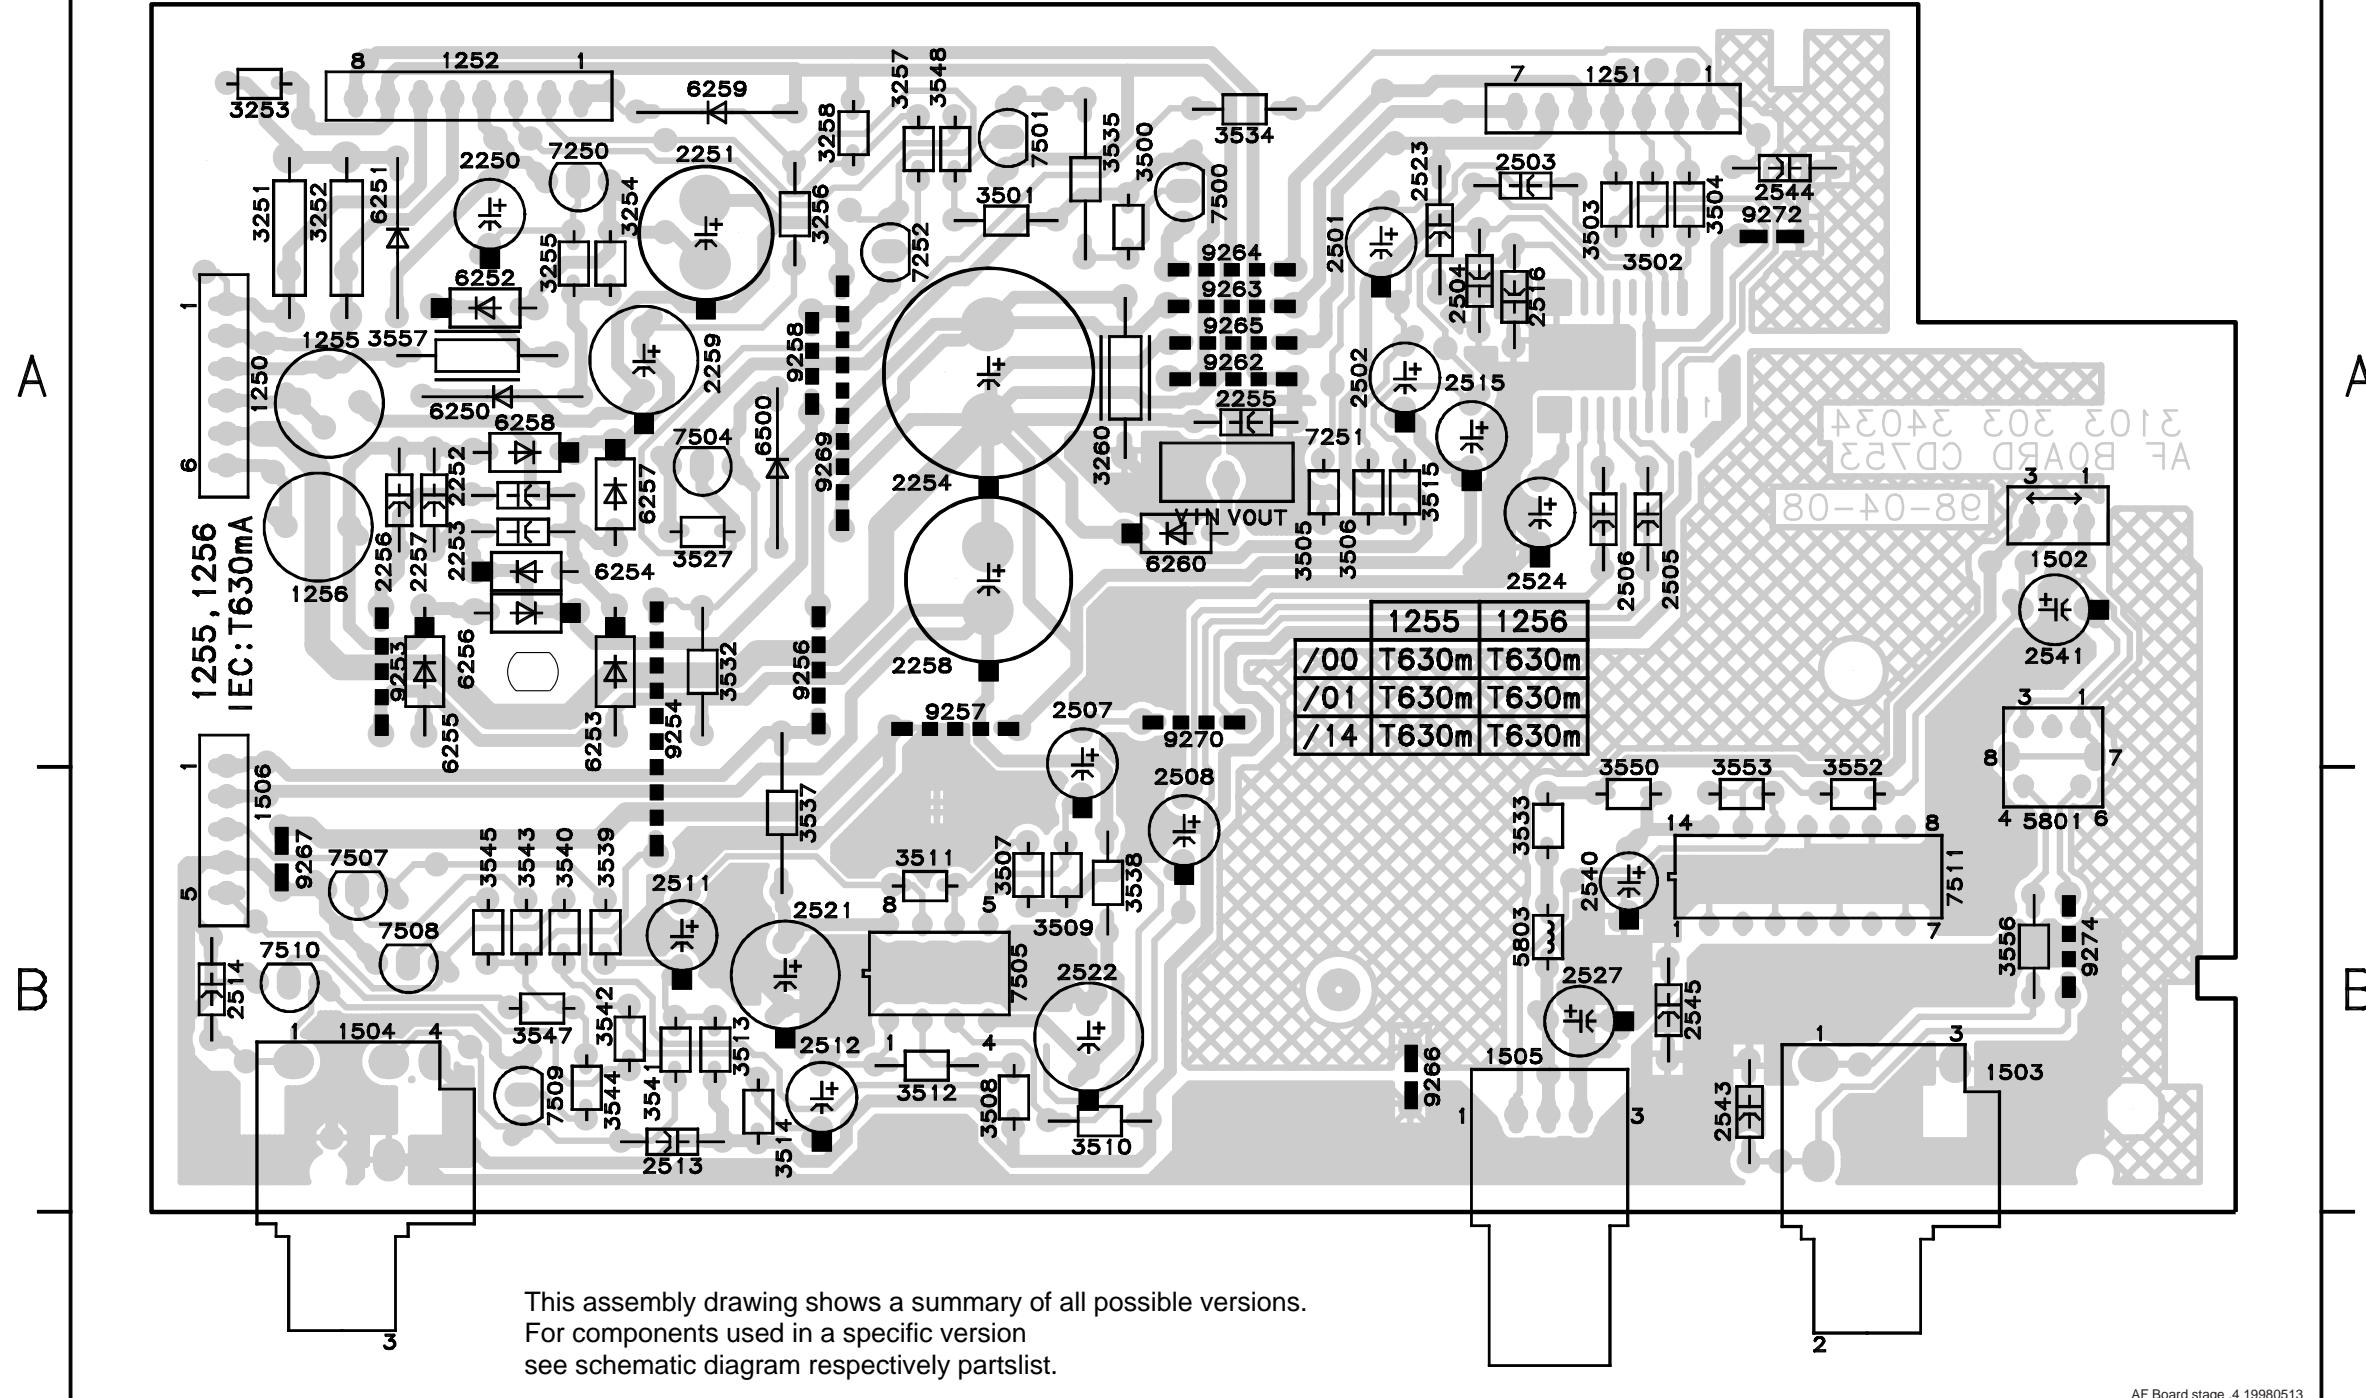


1251 B1	1505 F7	2504 D4	2511 B10	2516 E4	2522 F6	2545 H3	3504 C3	3509 B8	3514 E10	3534 C10	3540 C12	3545 G4	7500 C2	7505-B B9	7511-F F4	F514 C1	F519 C5	F524 E7	F529 C14	F541 G2	F546 F7	F554 G14
1252 F14	1506 B14	2505 D7	2512 E10	2521 A9	2540 F2	3500 D2	3505 C4	3510 E8	3515 D4	3535 D2	3541 D12	3547 E12	3556 G4	7501 E2	7507 B13	F510 B1	F515 C1	F520 D5	F525 B14	F530 D14	F542 G2	F550 F14
1502 G2	2501 C4	2506 D5	2513 D13	2522 F9	2541 G3	3501 D2	3506 D4	3511 C9	3527 C10	3537 A8	3542 E12	3548 E3	5801 G3	7502 C7	7508 C13	F511 B1	F516 C1	F521 B8	F526 B14	F531 D14	F543 G4	F551 G14
1503 G4	2502 D4	2507 B8	2514 E13	2523 C2	2543 H4	3502 B3	3507 B8	3512 D9	3532 D10	3538 F8	3543 B12	3550 F4	5803 F6	7504 C10	7509 D13	F512 B1	F517 D2	F522 E7	F527 C14	F532 D14	F544 G4	F552 G14
1504 D14	2503 C4	2508 E7	2515 E4	2524 D7	2544 B2	3503 B3	3508 E8	3513 B10	3533 F5	3539 B12	3544 D12	3552 F4	6500 F11	7505-A E9	7510 E13	F513 B1	F518 C4	F523 B8	F528 C14	F540 G2	F545 F7	F553 G14

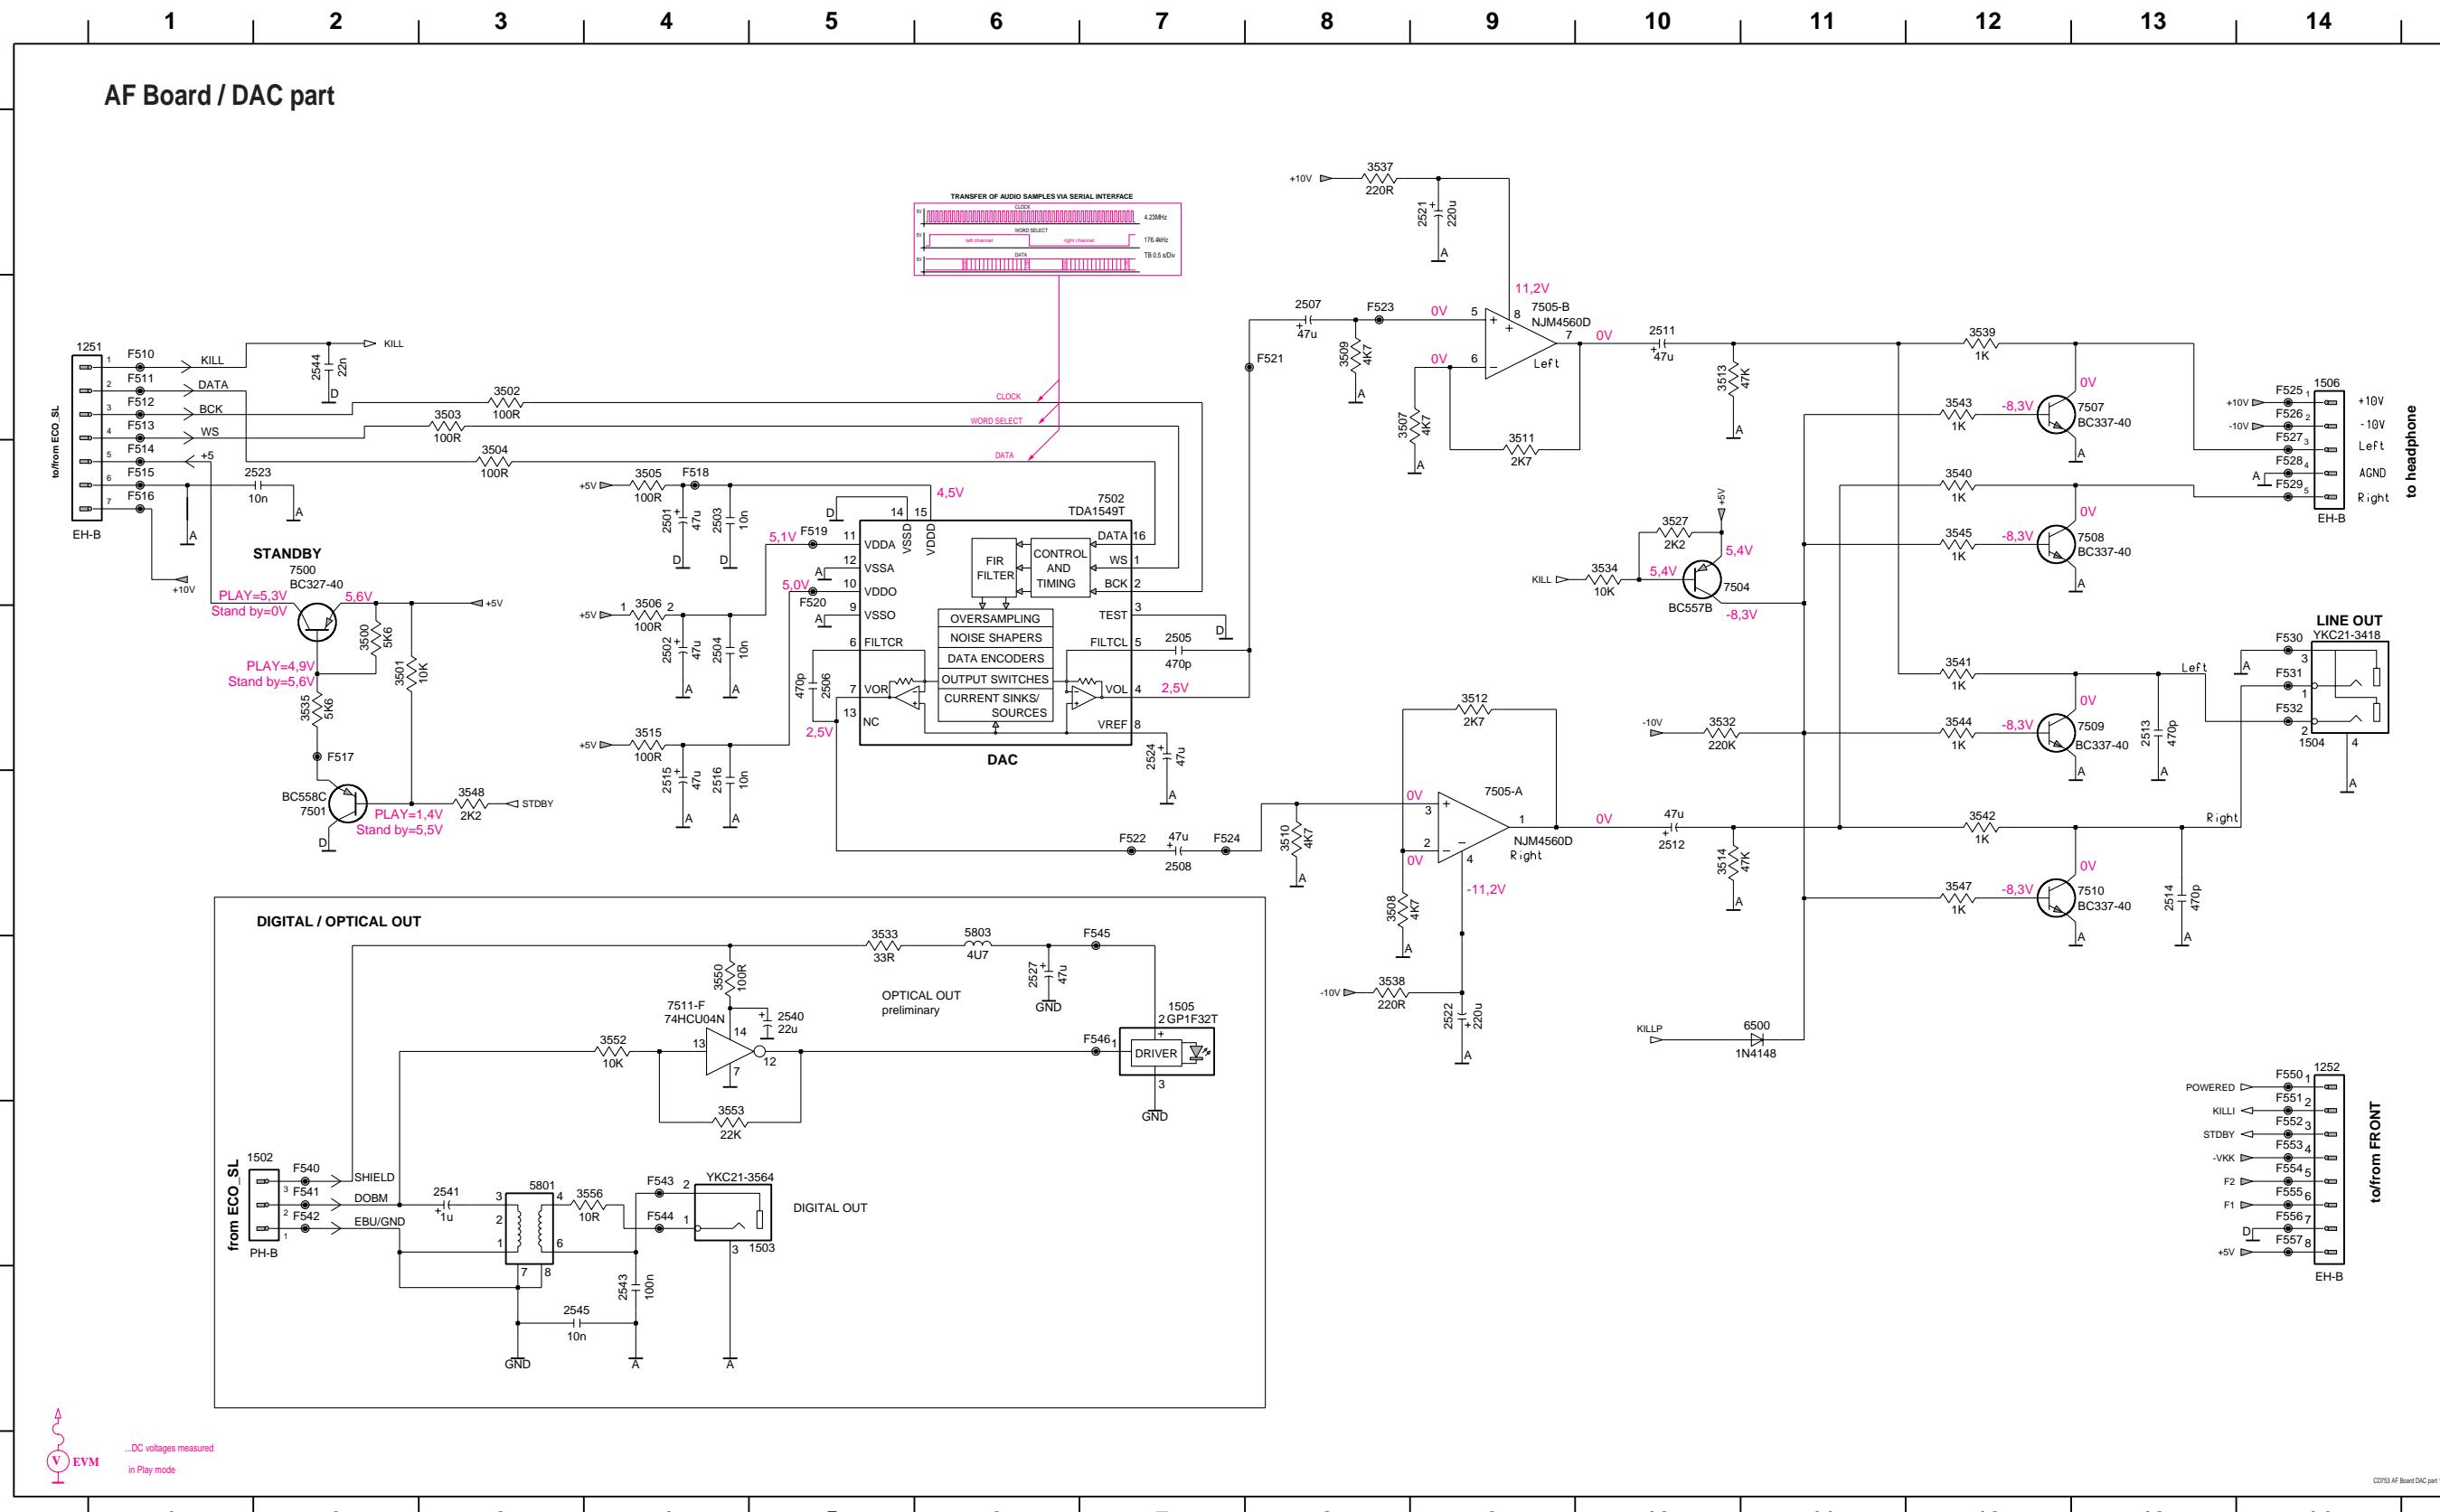

1250 A1	1506 B1	2258 A2	2508 B3	2523 A3	3252 A1	3501 A2	3510 B3	3534 A3	3544 B2	5801 B4	6257 A2	7501 A2	9254 A2	9267 B1
1251 A4	2250 A1	2259 A2	2511 B2	2524 A4	3253 A1	3502 A4	3511 B2	3535 A3	3545 B1	5803 B4	6258 A1	7504 A2	9256 A2	9269 A2
1252 A1	2251 A2	2501 A3	2512 B2	2527 B4	3254 A2	3503 A4	3512 B2	3537 B2	3547 B1	6250 A1	6259 A2	7505 B2	9257 A2	9270 A3
1255 A1	2252 A1	2502 A3	2513 B2	2540 B4	3255 A1	3504 A4	3513 B2	3538 B3	3548 A2	6251 A1	6260 A3	7507 B1	9258 A2	9272 A4
1256 A1	2253 A1	2503 A4	2514 B1	2541 A4	3256 A2	3505 A3	3514 B2	3539 B2	3550 A4	6252 A1	6500 A2	7508 B1	9262 A3	9274 B4
1502 A4	2254 A2	2504 A3	2515 A3	2543 B4	3257 A2	3506 A3	3515 A3	3540 B1	3552 A4	6253 A1	7250 A1	7509 B1	9263 A3	
1503 B4	2255 A3	2505 A4	2516 A4	2544 A4	3258 A2	3507 B2	3527 A2	3541 B2	3553 A4	6254 A2	7251 A3	7510 B1	9264 A3	
1504 B1	2256 A1	2506 A4	2521 B2	2545 B4	3260 A3	3508 B2	3532 A2	3542 B2	3556 B4	6255 A1	7252 A2	7511 B4	9265 A3	
1505 B4	2257 A1	2507 A3	2522 B3	3251 A1	3500 A3	3509 B3	3533 B4	3543 B1	3557 A1	6256 A1	7500 A3	9253 A1	9266 B3	

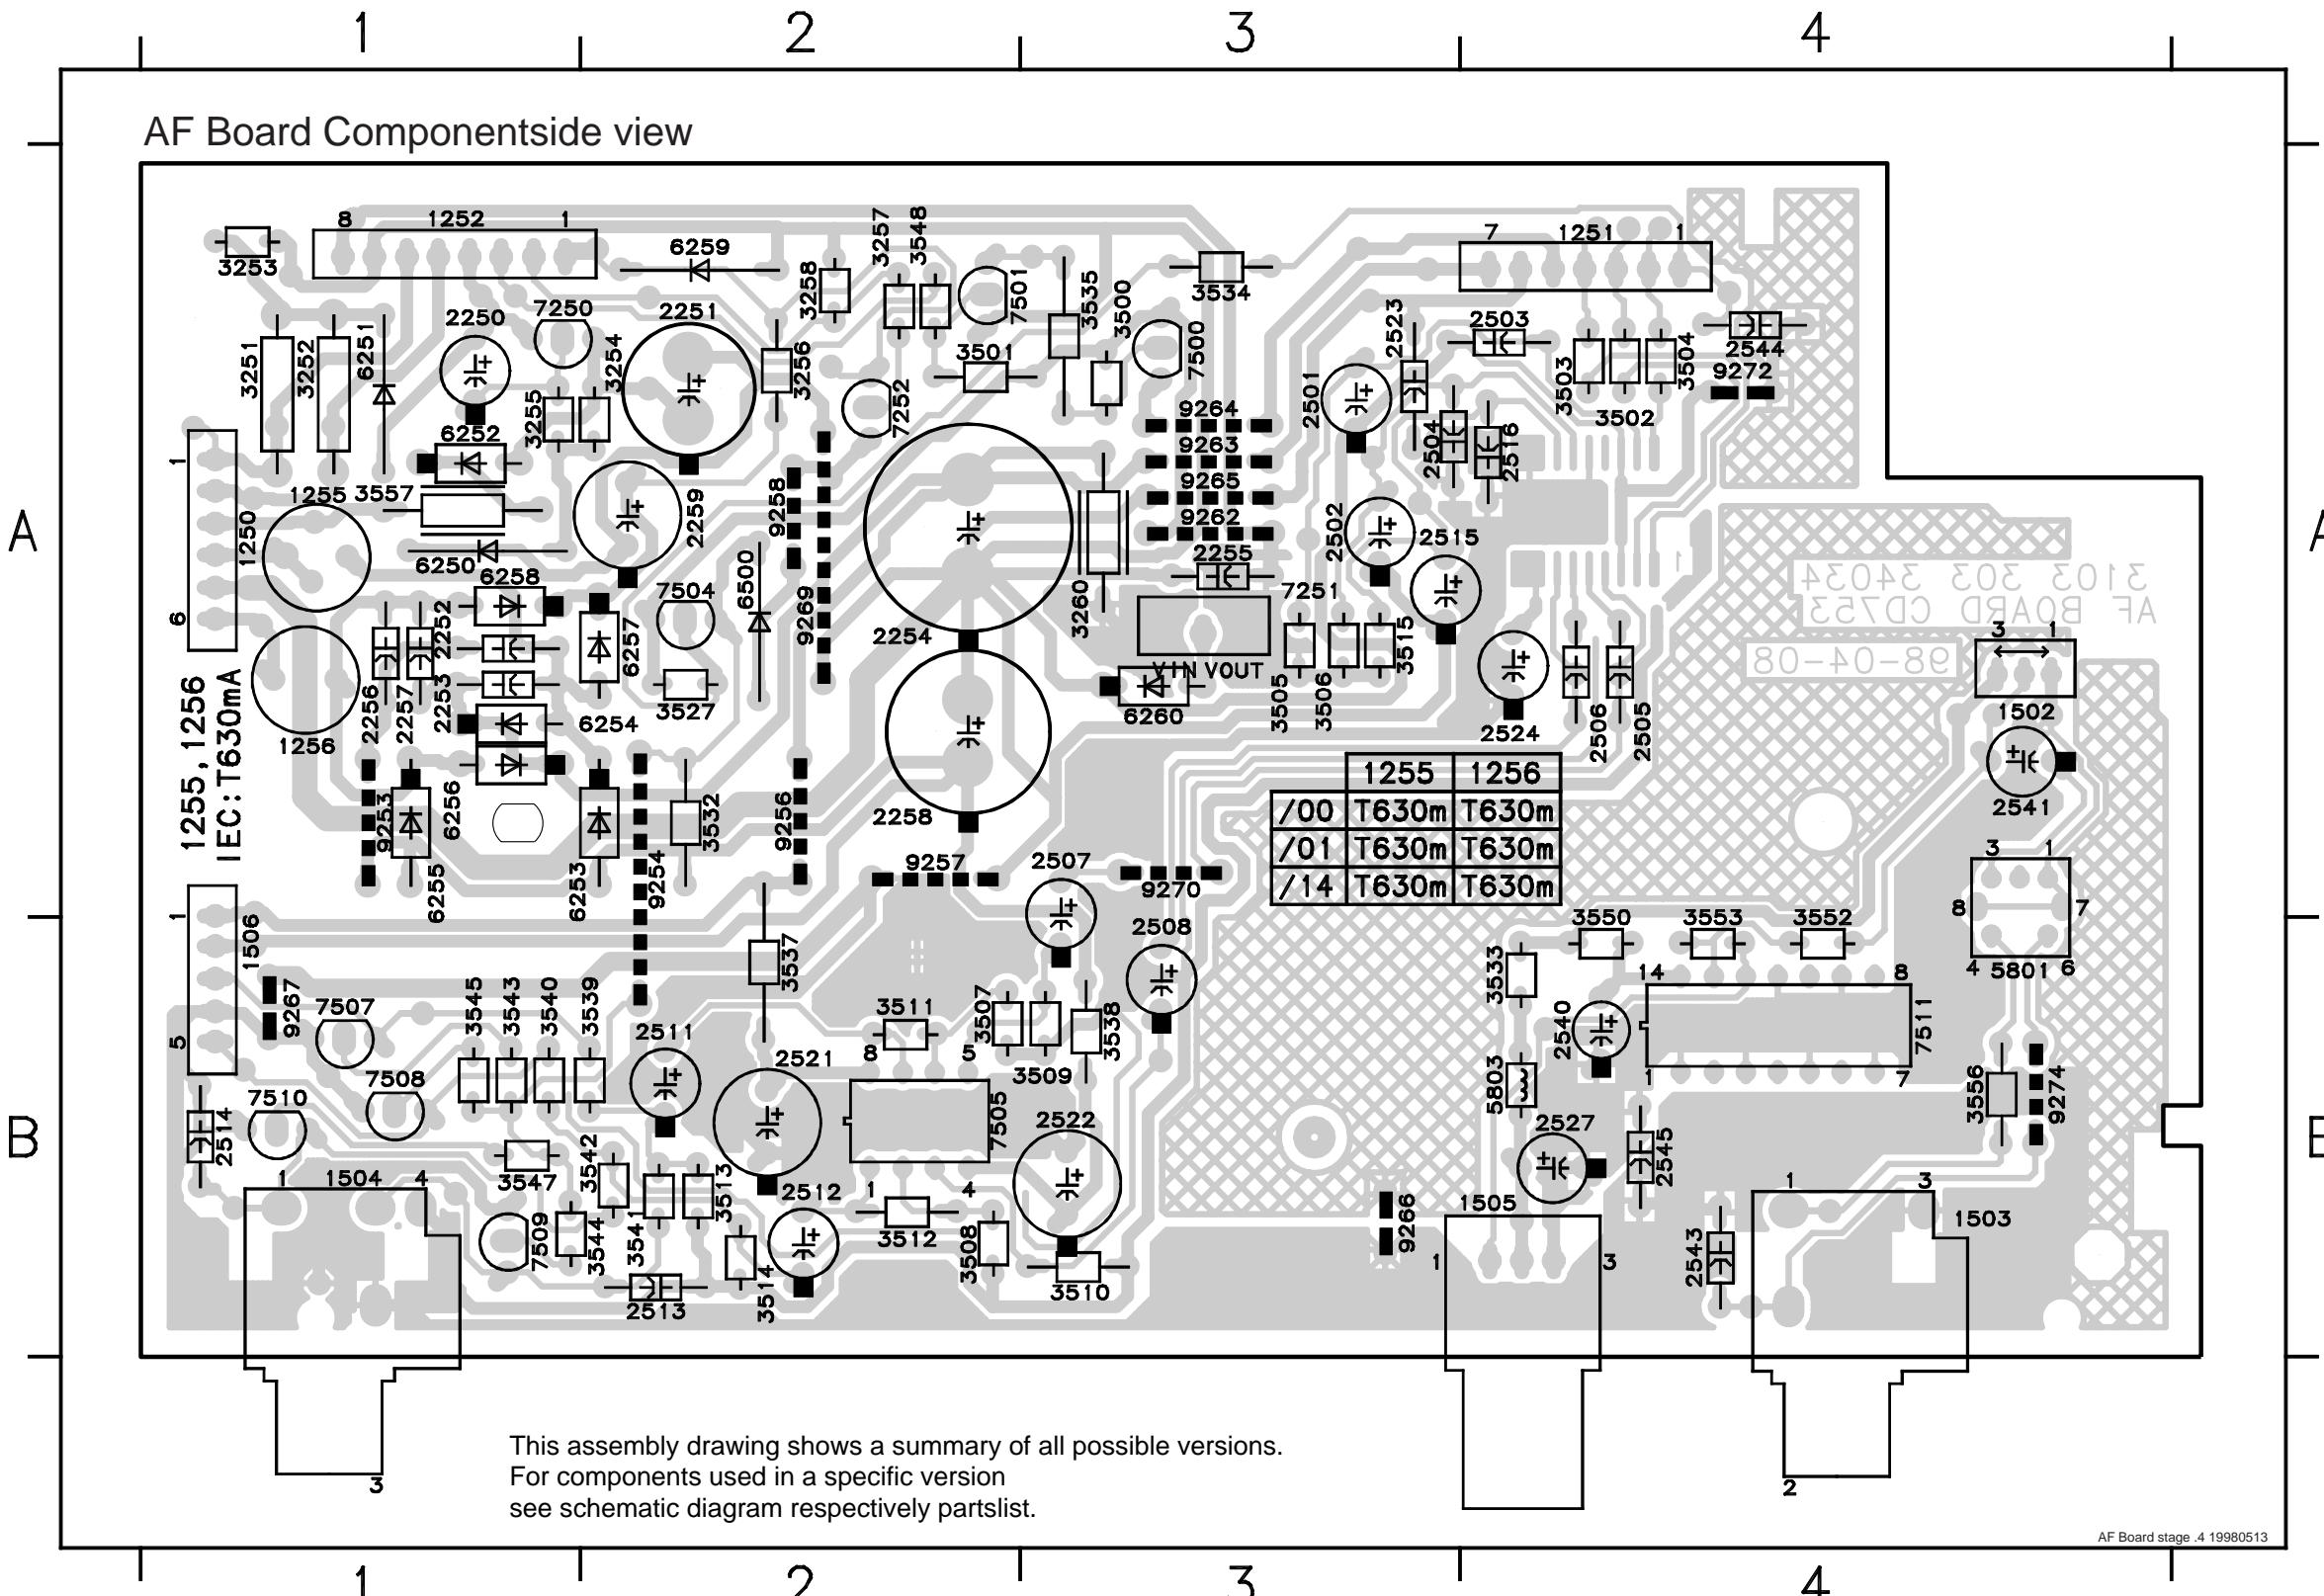

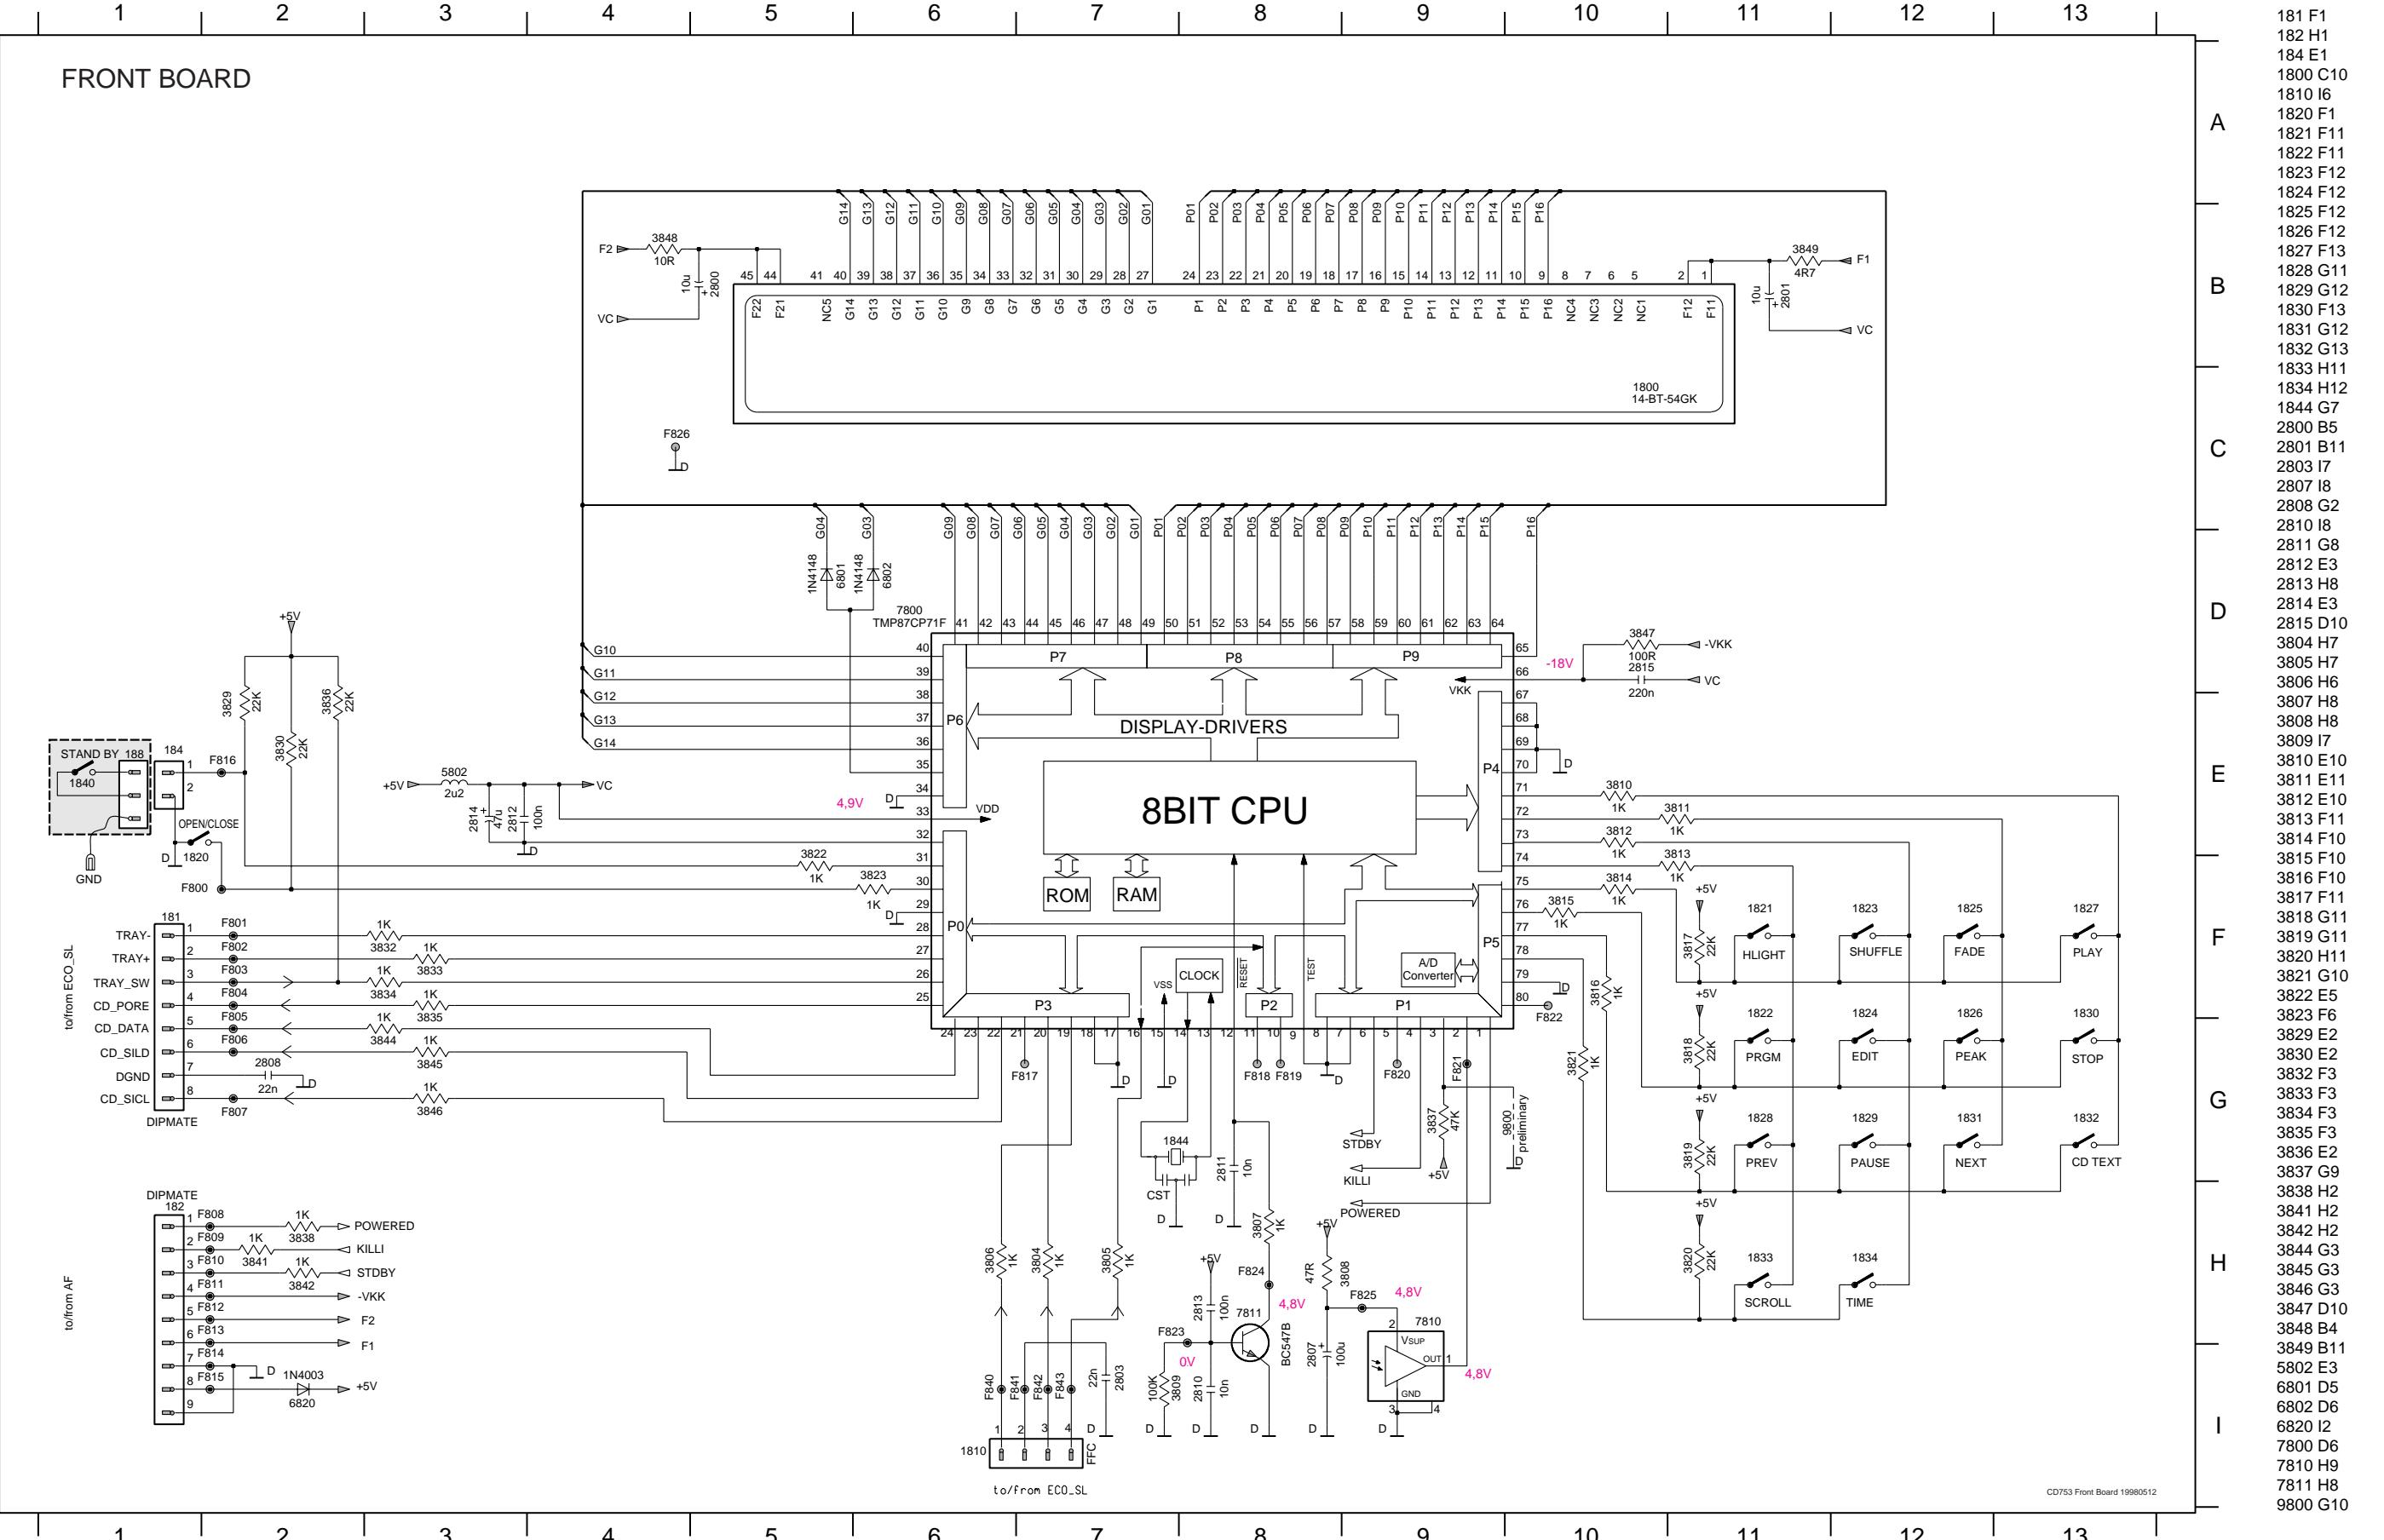

181 F1  
 182 H1  
 184 E1  
 1800 C10  
 1810 I6  
 1820 F1  
 1821 F11  
 1822 F11  
 1823 F12  
 1824 F12  
 1825 F12  
 1826 F12  
 1827 F13  
 1828 G11  
 1829 G12  
 1830 F13  
 1831 G12  
 1832 G13  
 1833 H11  
 1834 H12  
 1844 G7  
 2800 B5  
 2801 B11  
 2803 I7  
 2807 I8  
 2808 G2  
 2810 I8  
 2811 G8  
 2812 E3  
 2813 H8  
 2814 E3  
 2815 D10  
 3804 H7  
 3805 H7  
 3806 H6  
 3807 H8  
 3808 H8  
 3809 I7  
 3810 E10  
 3811 E11  
 3812 E10  
 3813 F11  
 3814 F10  
 3815 F10  
 3816 F10  
 3817 F11  
 3818 G11  
 3819 G11  
 3820 H11  
 3821 G10  
 3822 E5  
 3823 F6  
 3824 E2  
 3825 F3  
 3826 F3  
 3827 F3  
 3828 F3  
 3829 F3  
 3830 F3  
 3831 F3  
 3832 F3  
 3833 F3  
 3834 F3  
 3835 F3  
 3836 F3  
 3837 F3  
 3838 F3  
 3839 F3  
 3840 F3  
 3841 F3  
 3842 F3  
 3843 F3  
 3844 F3  
 3845 F3  
 3846 F3  
 3847 F3  
 3848 F3  
 3849 F3  
 5802 E3  
 6801 D5  
 6802 D6  
 7800 D6  
 7810 H9  
 9800 G10



CD753 Front Board 19980512

7-6



7-6

181 B1	1821 A5	1827 A7	1833 A4	2807 B2	2814 B3	3808 B2	3814 B5	3820 B4	3832 B1	3838 B1	3847 B2	6820 B2	9803 A5	9809 A7	9815 B3
182 B2	1822 B5	1828 B7	1834 B4	2808 B1	2815 A3	3809 B5	3815 B5	3821 A4	3833 B1	3841 B1	3848 A1	7810 B3	9804 A4	9810 B2	9816 B4
184 B3	1823 A5	1829 B7	1844 B4	2810 B5	3804 B4	3810 A5	3816 B5	3822 B3	3834 B1	3842 B2	3849 A3	7811 B5	9805 A5	9811 B2	9817 B4
1800 A3	1824 B5	1830 A8	2800 A1	2811 B4	3805 B4	3811 A5	3817 B5	3823 B2	3835 B1	3844 B1	5802 B3	9800 B4	9806 A6	9812 B2	9818 B5
1810 B1	1825 A6	1831 B8	2801 A4	2812 B3	3806 B3	3812 A5	3818 B5	3829 B4	3836 B2	3845 B1	6801 A2	9801 A3	9807 A6	9813 B2	9819 B1
1820 A1	1826 B6	1832 A4	2803 B1	2813 B4	3807 B4	3813 B5	3819 B5	3830 B2	3837 B4	3846 B1	6802 A2	9802 A3	9808 A7	9814 B4	9820 A1

7800 B3

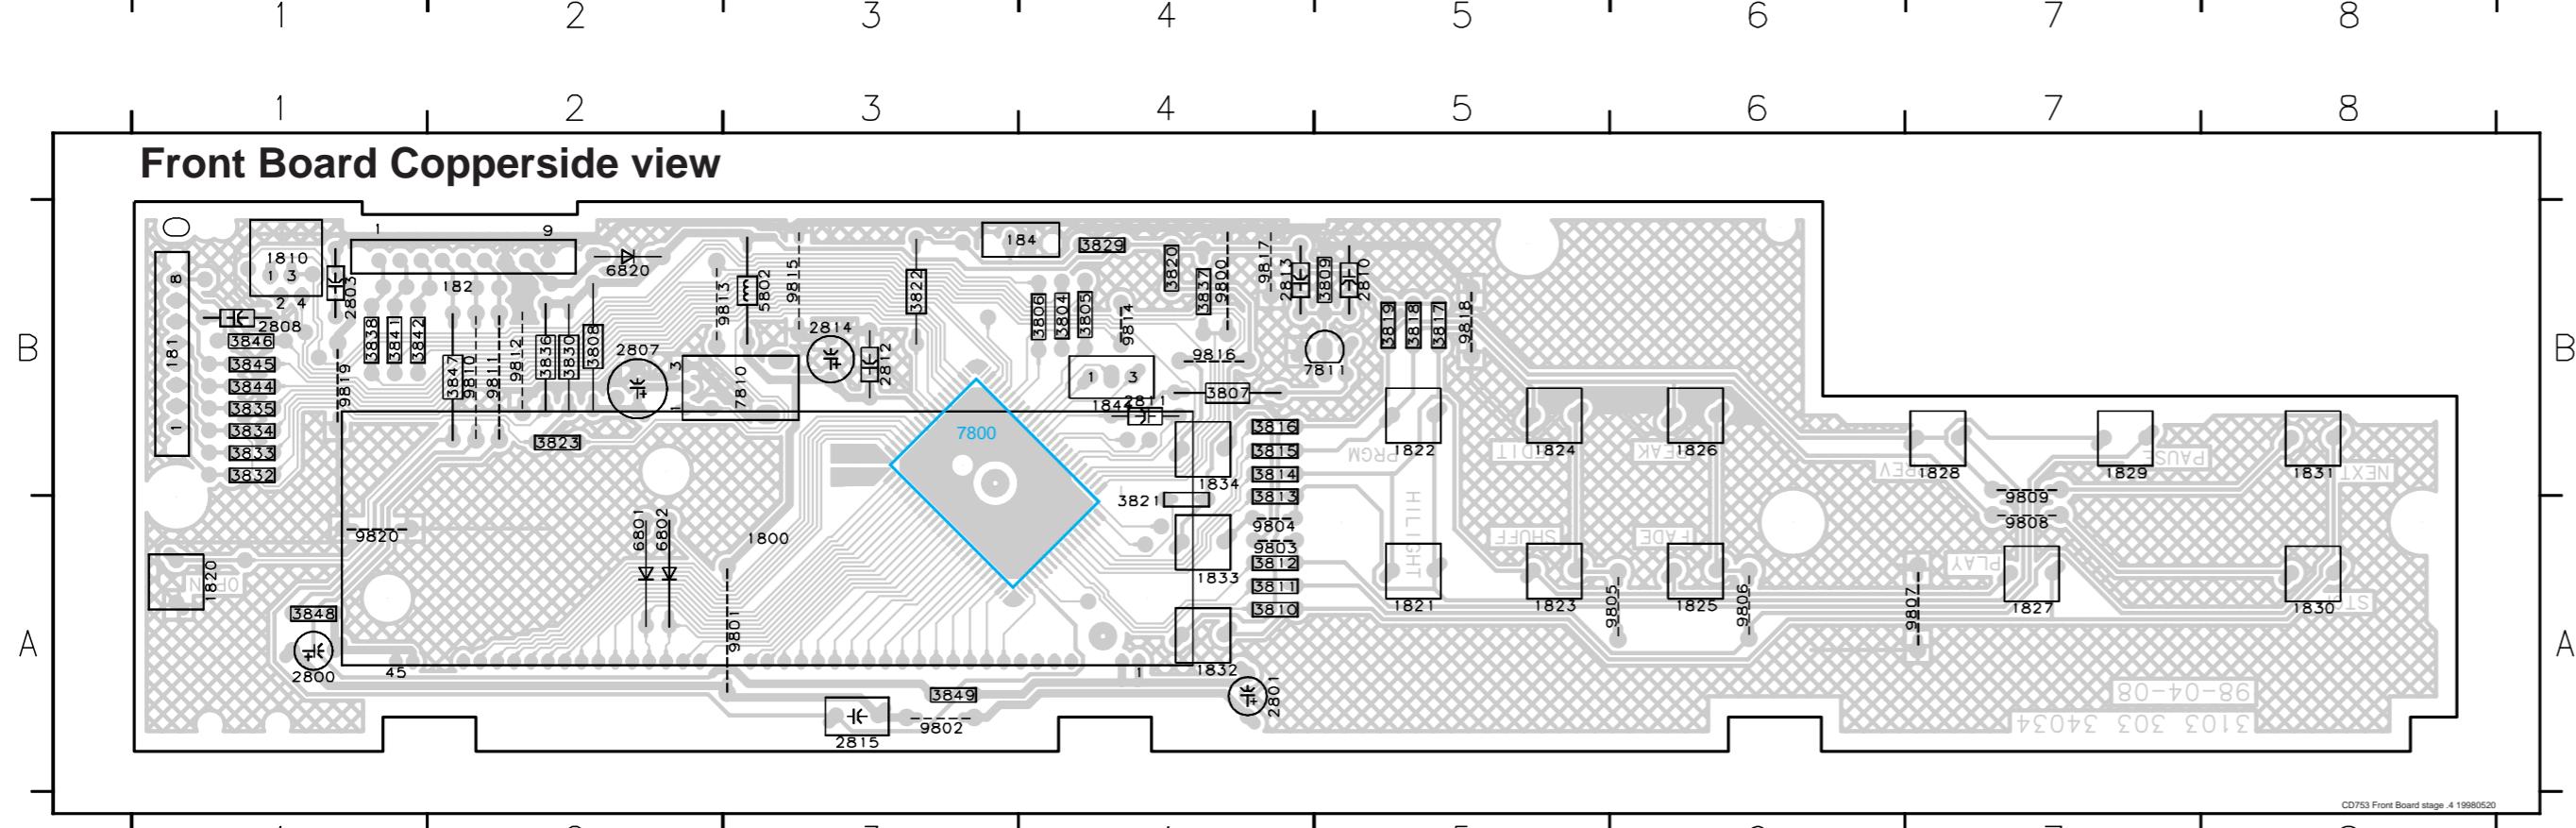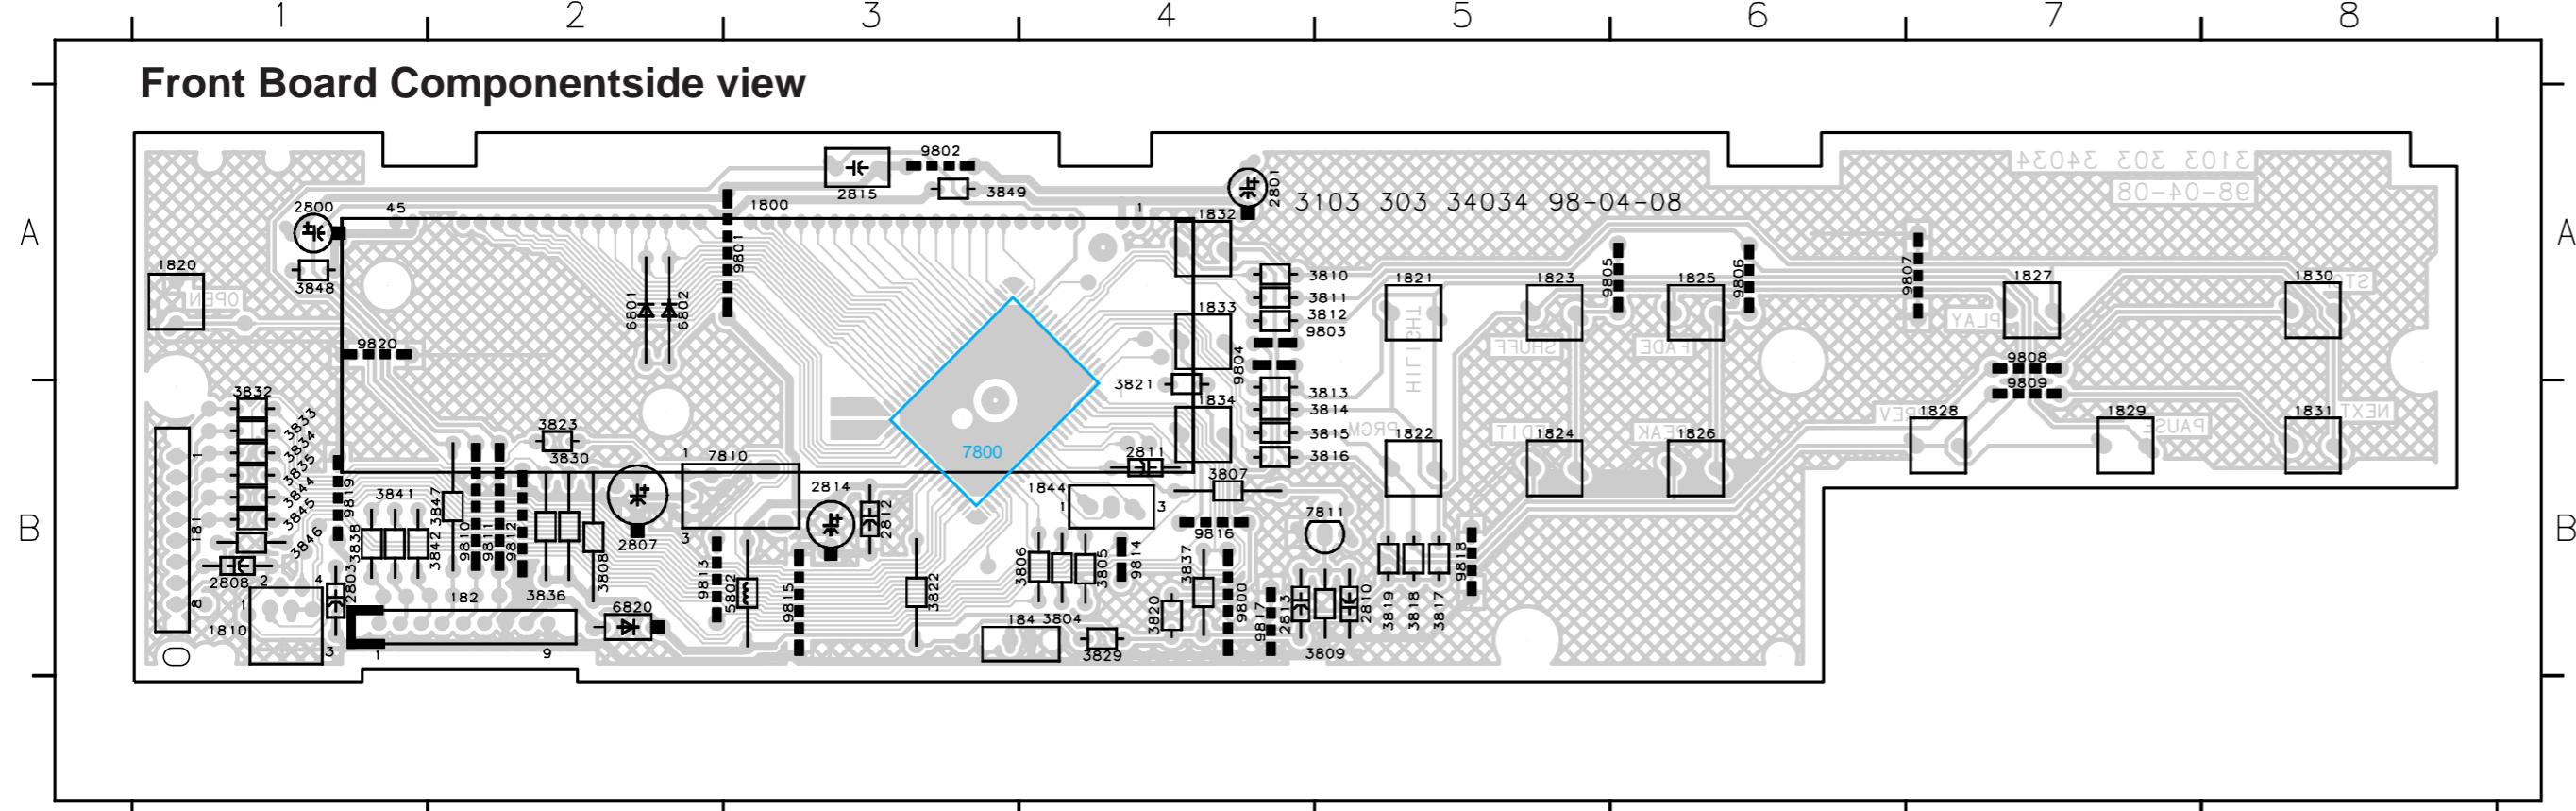

7-6

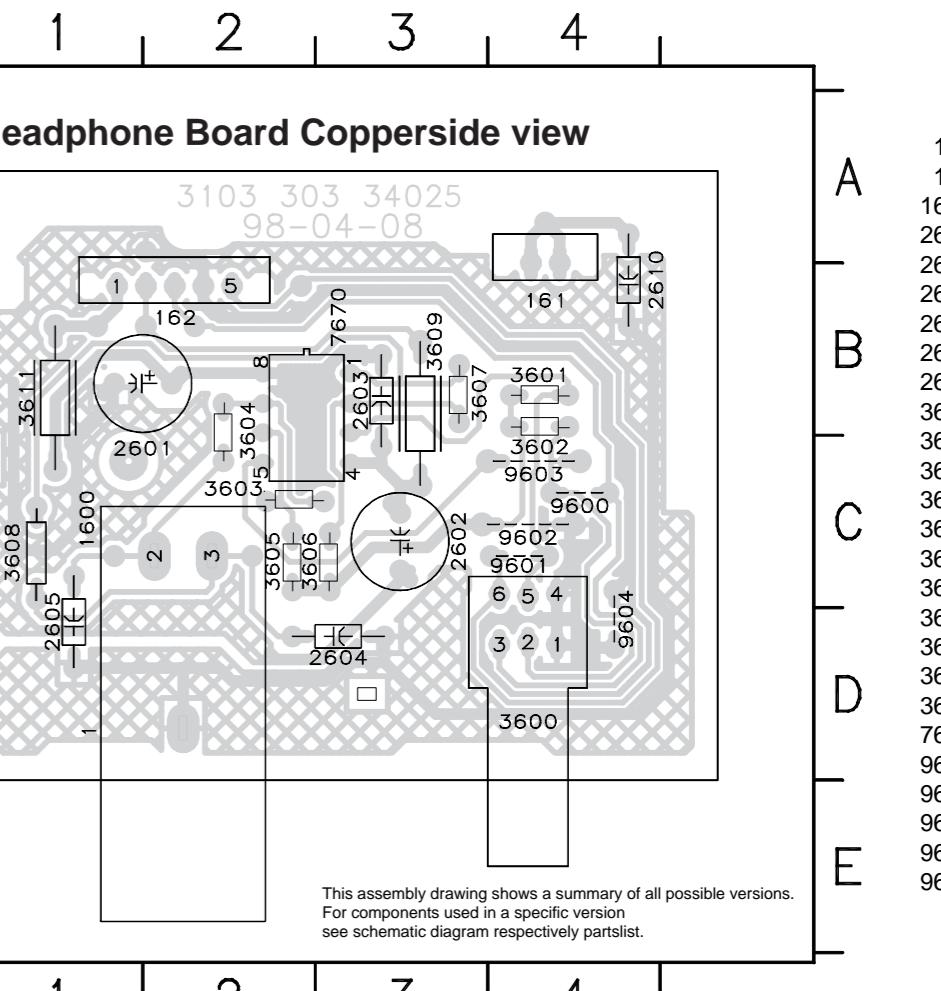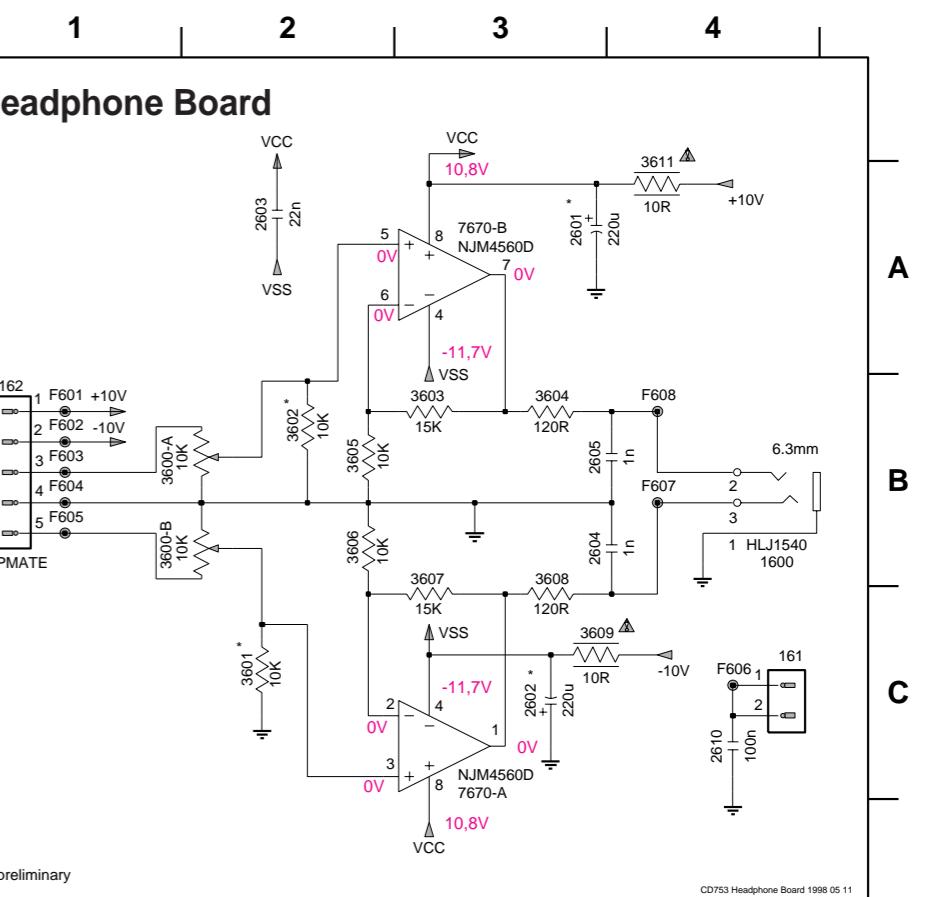

161 C4  
162 B1  
1600 B4  
2601 A3  
2602 C3  
2603 A2  
2604 B3  
2605 B3  
2610 C4  
3600-A B1  
3600-B B1  
3602 B2  
3603 B3  
3605 B2  
3606 B2  
3607 B3  
3611 A4  
3608 B3  
3609 C3  
7670-B C3  
7670-B A3


161 B4  
162 B2  
1600 D2  
2601 B2  
2602 C3  
2603 B3  
2605 D1  
2610 B4  
3600 D4  
3601 B4  
3602 B4  
3603 C2  
3604 B2  
3605 D2  
3606 D3  
3607 B3  
3608 C1  
3609 B3  
3611 B1  
7670 B3  
9600 C4  
9601 C4  
9602 C4  
9603 C4  
9604 D4

\* preliminary



CD753 Headphone Board 1998 05 11

CS 53 156


This assembly drawing shows a summary of all possible versions.  
For components used in a specific version  
see schematic diagram respectively partslist.

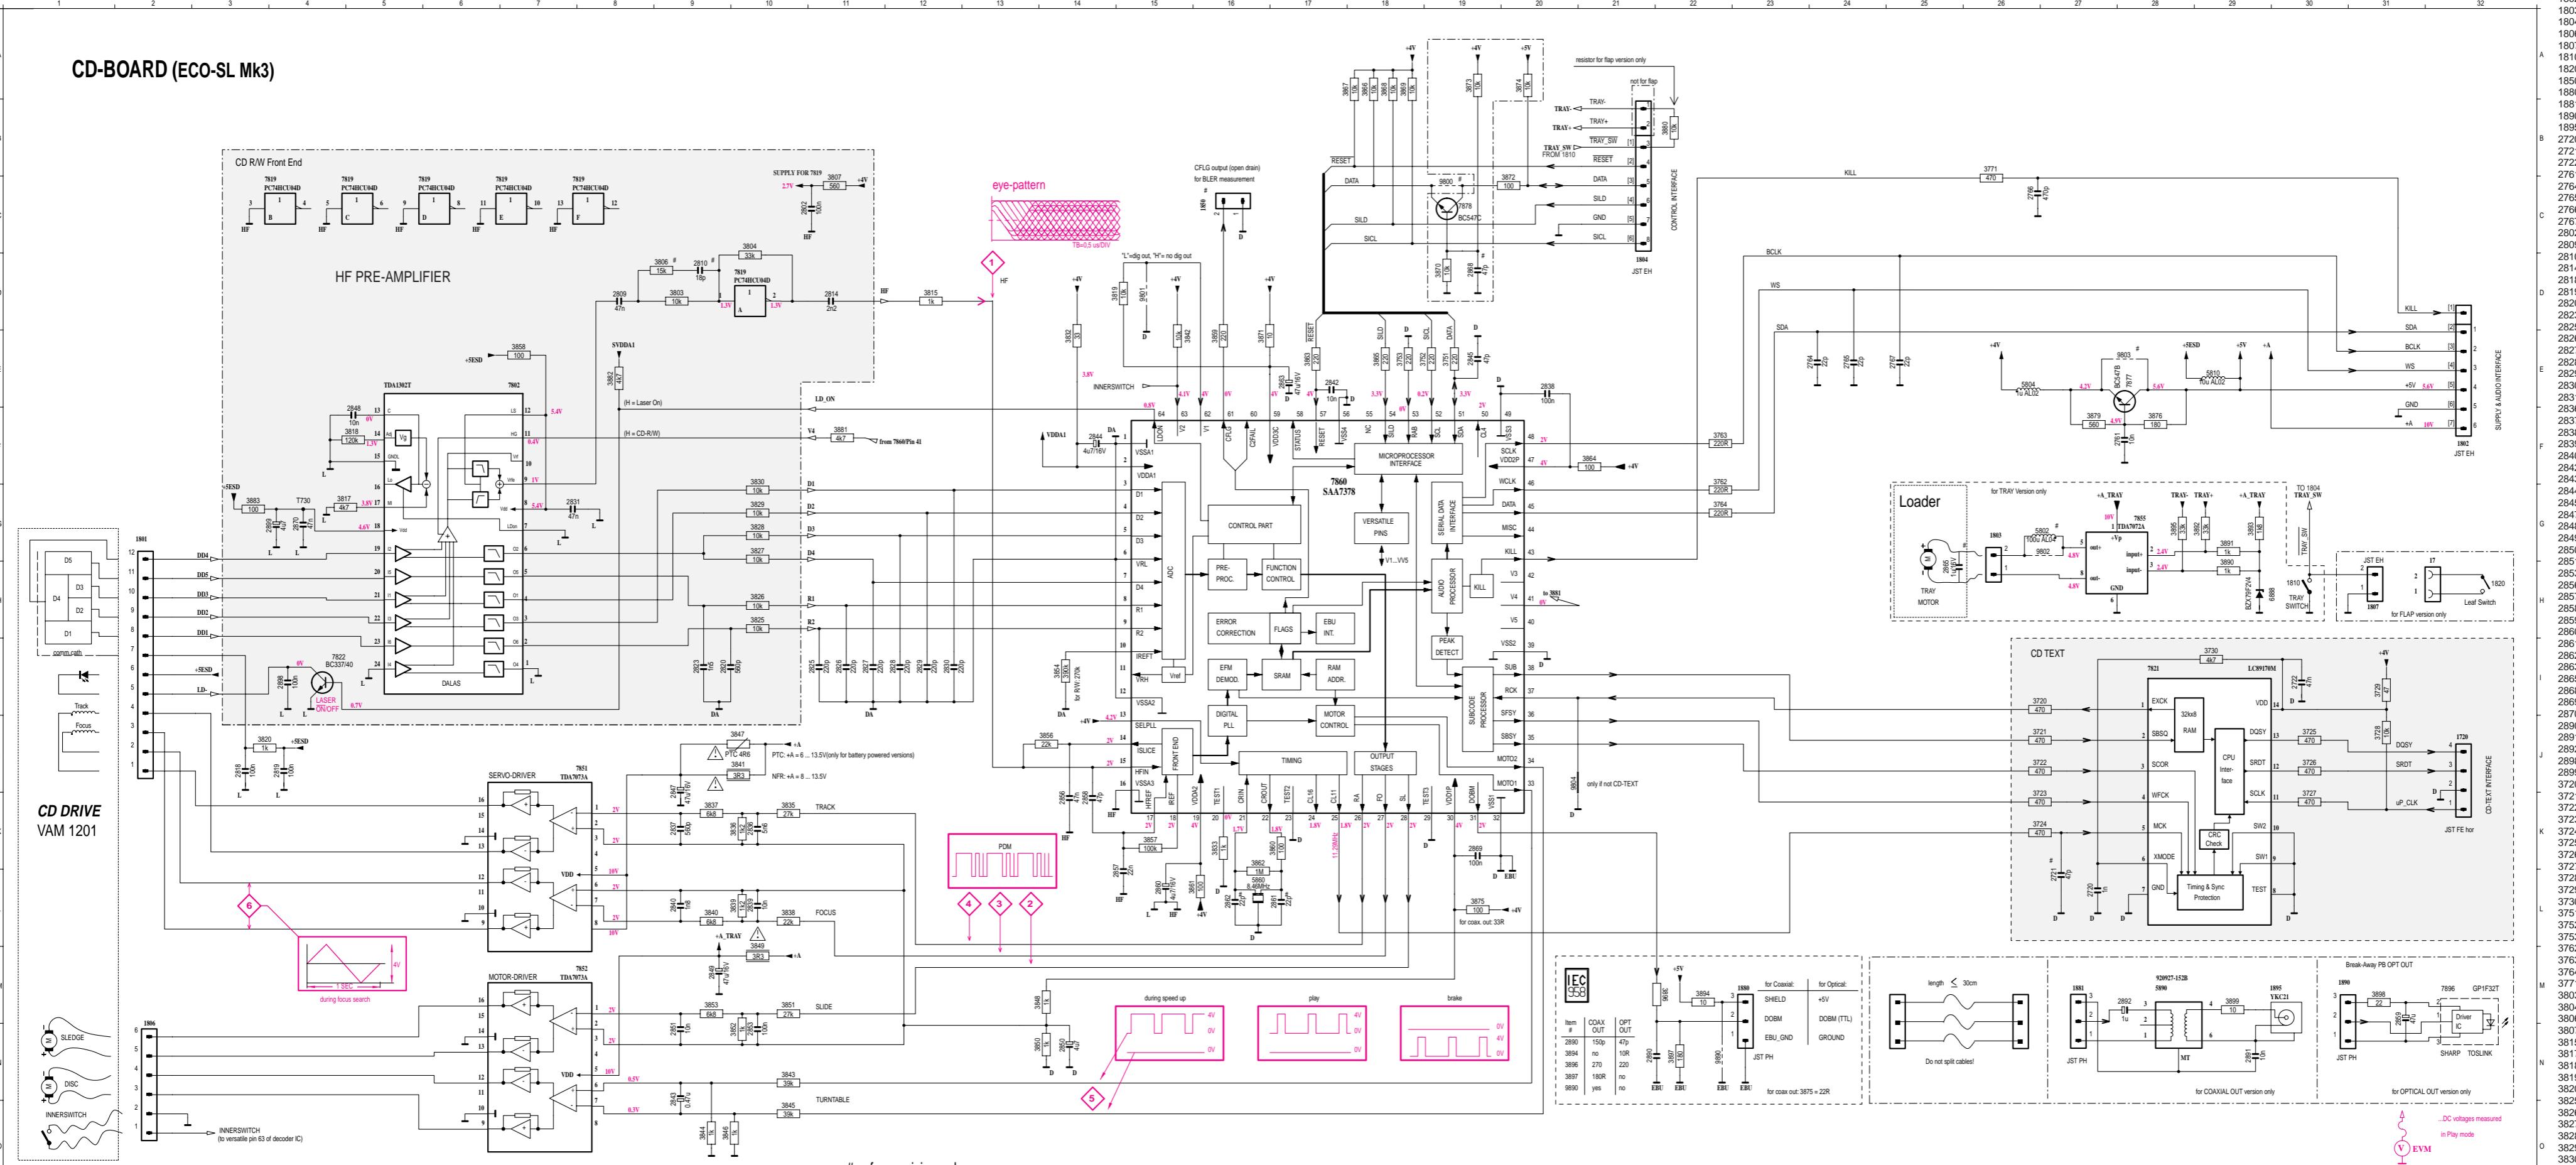


A	1720 J33	3836 K10
B	1801 G2	3837 K9
C	1802 F3	3838 L10
D	1803 G26	3839 N10
E	1804 D21	3840 L9
F	1806 M2	3841 J10
G	1807 H31	3842 E15
H	1810 H30	3843 N10
I	1850 C16	3844 O9
J	1880 M23	3845 O10
K	1881 M27	3847 J10
L	1890 M33	3848 M14
M	1895 M29	3849 M10
N	2720 L27	3850 N14
O	2721 L27	3851 M10
P	2722 J30	3852 N10
Q	2764 E24	3854 J14
R	2766 E26	3855 J14
S	2767 E25	3857 K15
T	2802 C10	3858 E7
U	2809 D8	3860 K17
V	2810 D9	3861 L16
W	2814 D11	3862 K16
X	2819 J4	3864 F21
Y	2823 I9	3866 A18
Z	2826 E11	3867 A18
AA	2828 B11	3868 A18
AB	2829 D12	3870 D19
AC	2831 G7	3871 E16
AD	2836 K17	3872 C20
AE	2838 E20	3873 A19
AF	2840 L9	3875 L19
AG	2842 E17	3879 F27
AH	2843 N9	3882 E8
AI	2844 F14	3883 G3
AJ	2847 J9	3890 H29
AK	2848 F5	3891 G29
AL	2849 M9	3893 G29
AM	2850 N14	3894 M22
AN	2851 N9	3895 G28
AO	2856 K11	3896 M22
AP	2858 K11	3899 M29
AQ	2860 L15	3898 E26
AR	2862 L16	3890 E29
AS	2863 E17	3891 L19
AT	2865 H26	3892 M28
AU	2868 D19	3893 H30
AV	2869 K19	3894 E7
AW	2870 G4	3895 C3
AX	2891 N21	3899 C6
AY	2892 M28	3899 C7
AZ	2898 I4	3910 D10
BAA	2899 G4	3921 L28
BAB	2870 J27	3922 B15
BAC	3721 J27	3923 M8
BAD	3722 J27	3924 F15
BAE	3723 K27	3925 E28
BAF	3724 K27	3926 C19
BAG	3725 J30	3927 M32
BAH	3726 J30	3928 C19
BAL	3727 K31	3929 D15
BAM	3728 J31	3930 G27
BAN	3729 J31	3931 E19
BAP	3751 E19	3932 E28
BAR	3752 E18	3934 J20
BAS	3762 F22	3935 G22
BAT	3763 F22	3971 C26
BAS	3764 G22	3803 D9
BAS	3771 C26	3804 C10
BAS	3804 D9	3807 C11
BAS	3807 C11	3815 D12
BAS	3817 G4	3818 F5
BAS	3819 D15	3820 J3
BAS	3825 H10	3826 H10
BAS	3827 G10	3828 G10
BAS	3829 G10	3830 G10
BAS	3830 G10	3831 E14
BAS	3831 E14	3833 K16
BAS	3833 K16	3835 K10

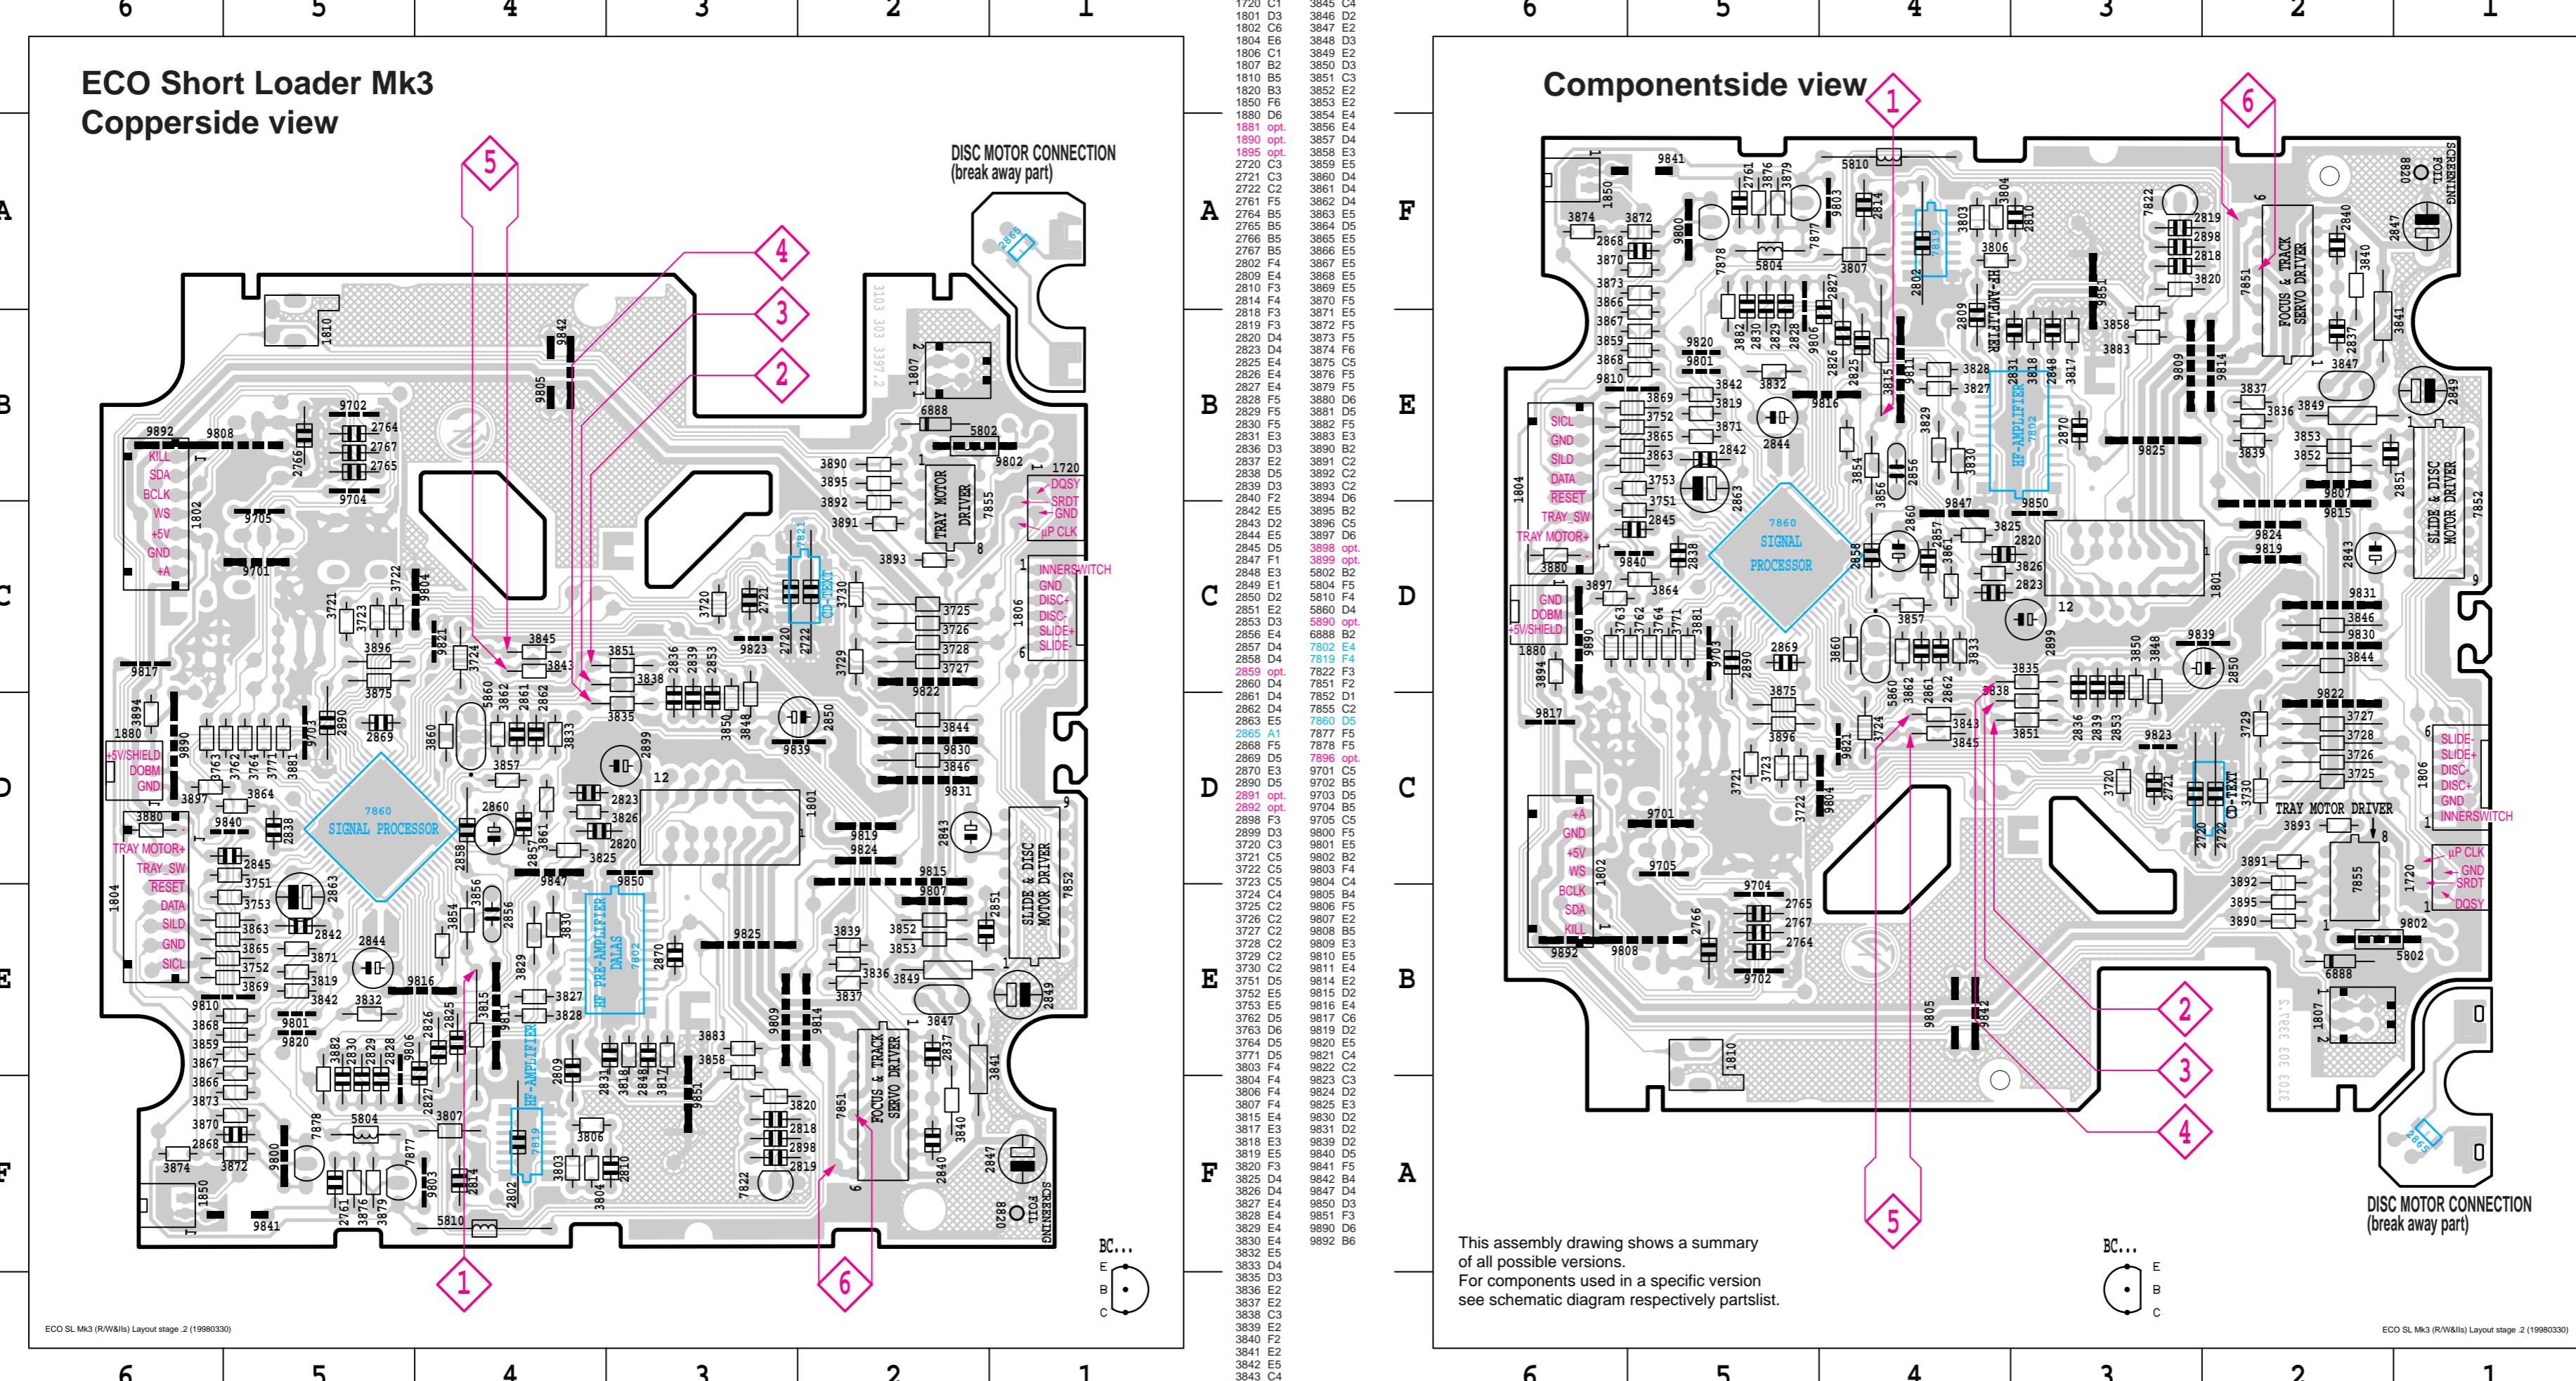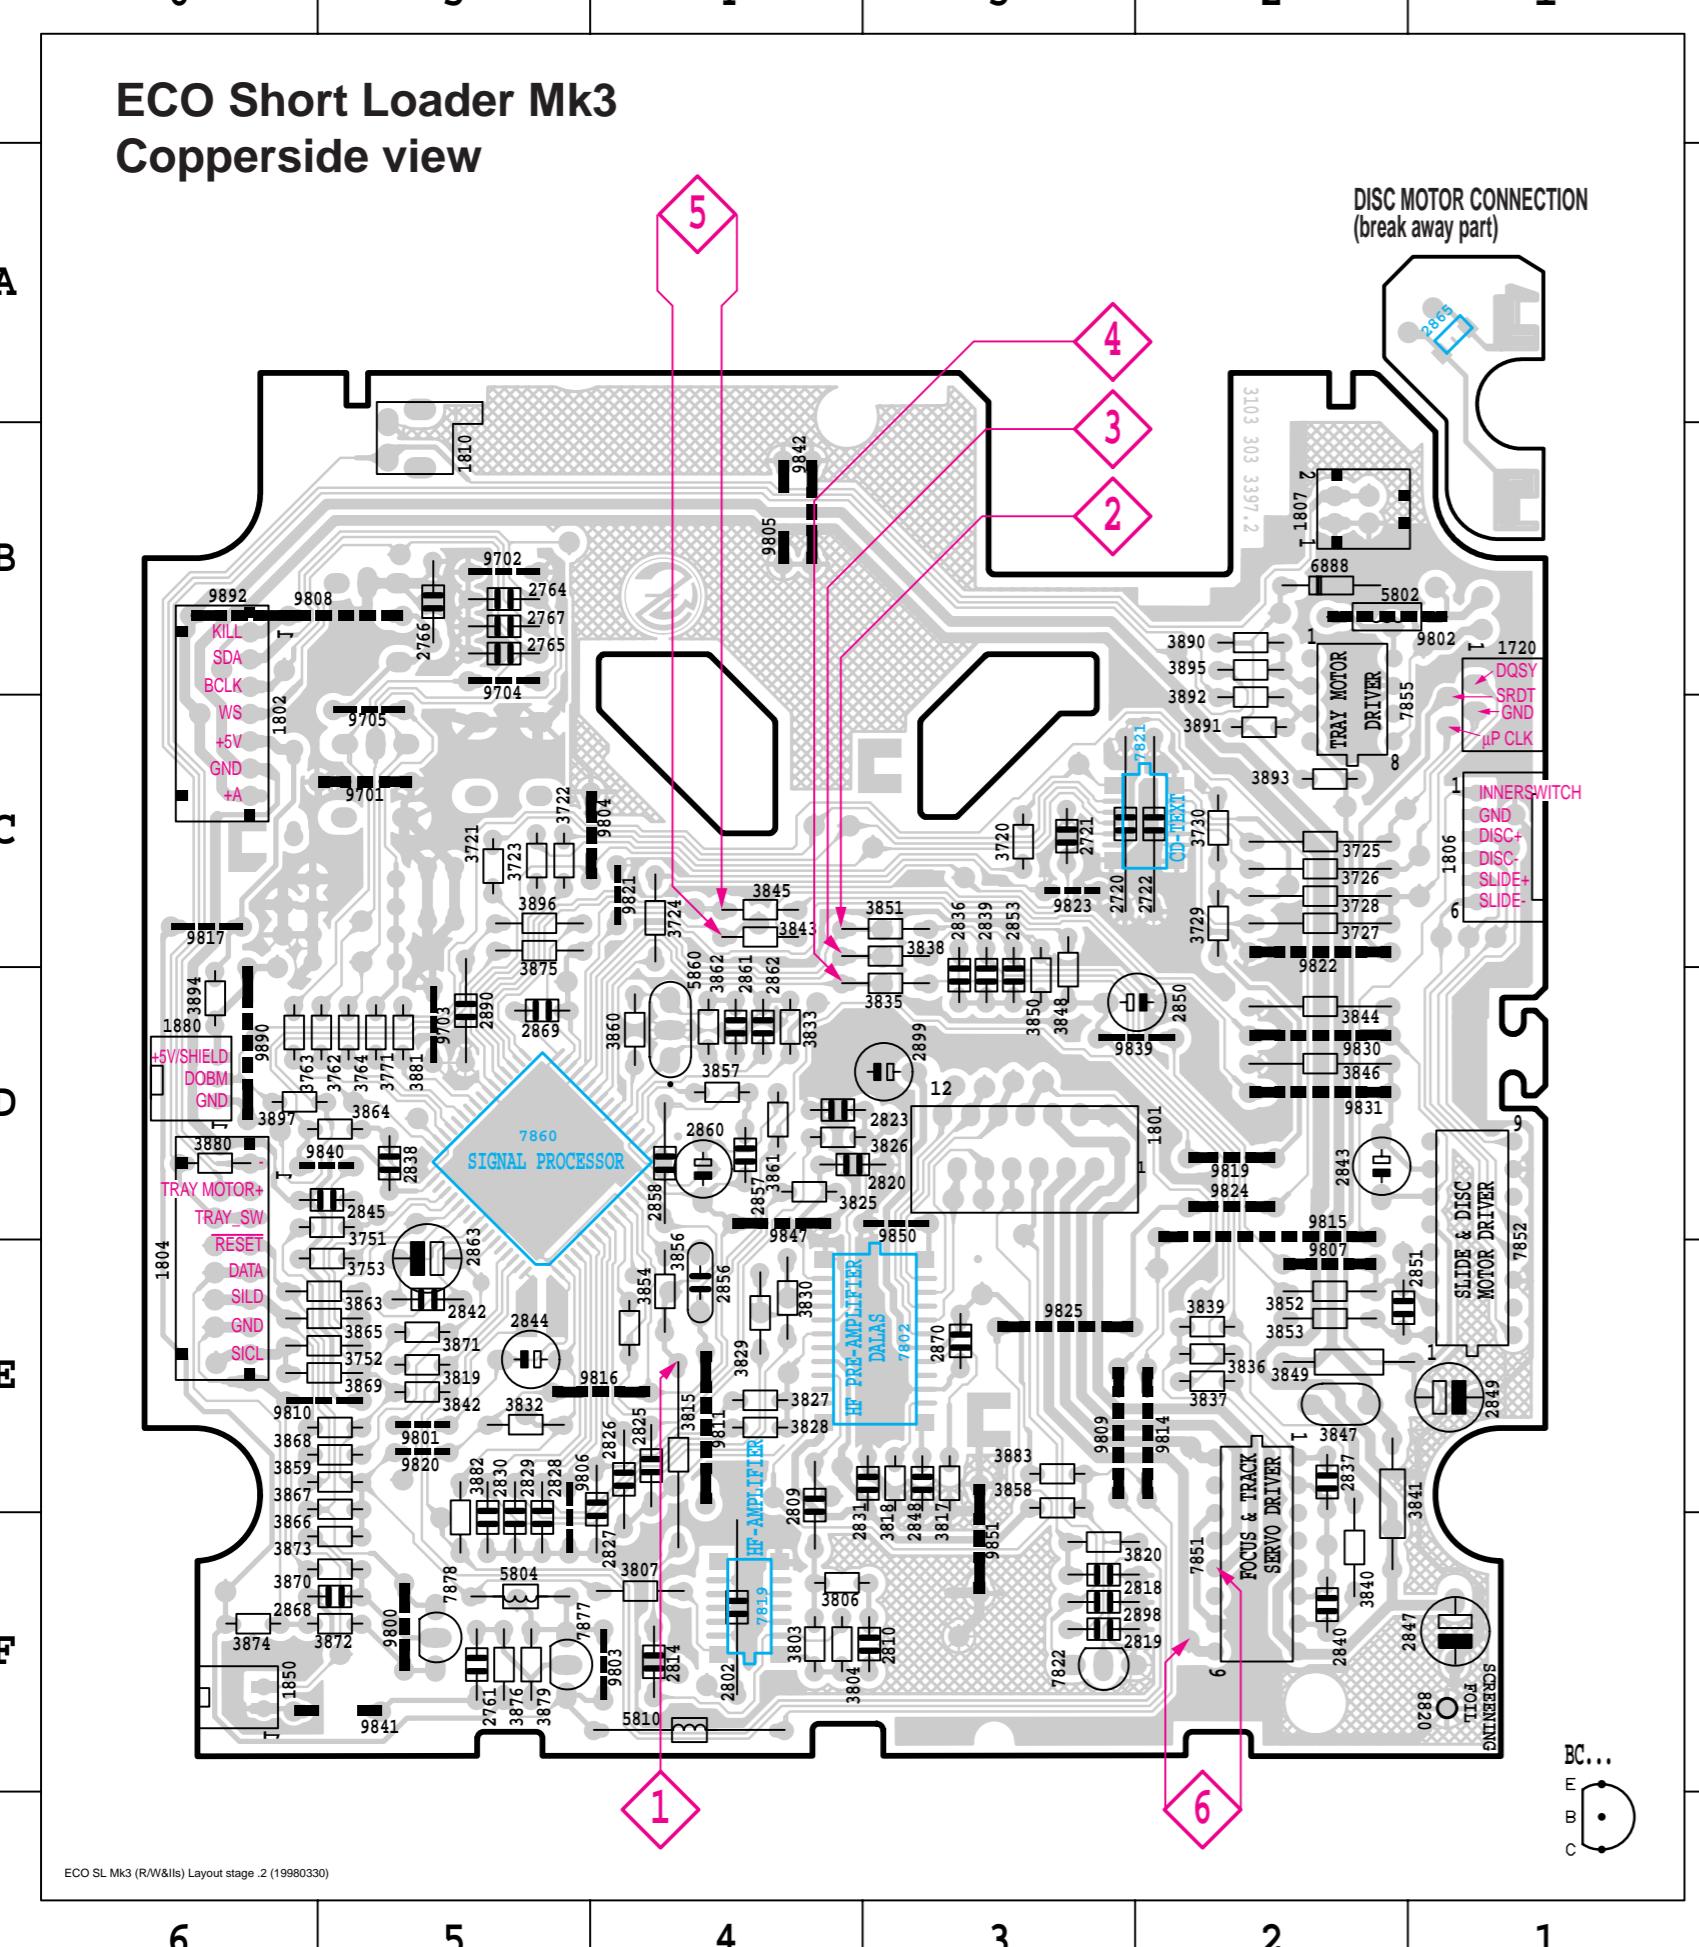


**OPTIONAL**  
FOR SETS WITH OPTICAL OUT  
**Copperside view**

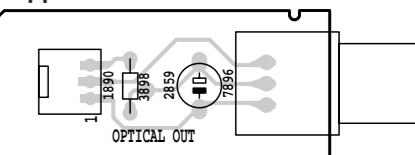


**Componentside view**

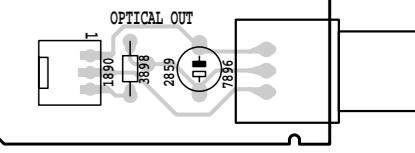


**OPTIONAL**  
FOR SETS WITH COAXIAL OUT  
**Copperside view**

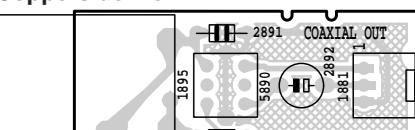


**Componentside view**

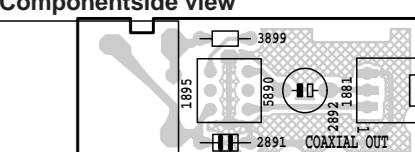

**OPTIONAL**  
FOR FLAP LOADERS  
**Copperside view**

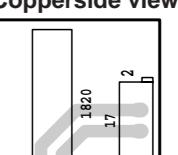

**Componentside view**

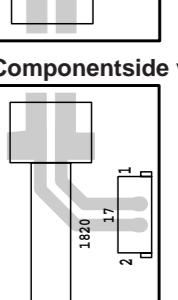

## WARNING

**CHARGED CAPACITORS ON THE CD BOARD MAY DAMAGE THE CD-ELECTRONICS WHEN CONNECTING A NEW CD DRIVE. THAT'S WHY, BESIDES THE SAFETY MEASURES LIKE**

- **SWITCH OFF POWER SUPPLY**
- **ESD PROTECTION**

**ADDITIONAL ACTIONS MUST BE TAKEN BY THE REPAIR TECHNICIAN.**

The following steps have to be done when replacing the CDM mechanism:

1. Disconnect old CD drive flexfoil from printed board
2. Connect paperclip to CD drive flexfoil to short-circuit flexfoil (fig.1)
3. Short-circuit printed board with **brass-sheet (4822 321 11197)** plugged into the flexfoil connector (fig.2)
4. Remove old CD drive
5. Position new CD drive in its studs
6. Remove short-circuit from printed board connector
7. Remove short-circuit from flexfoil of new CD drive
8. Connect new flexfoil to print connector (fig.3)

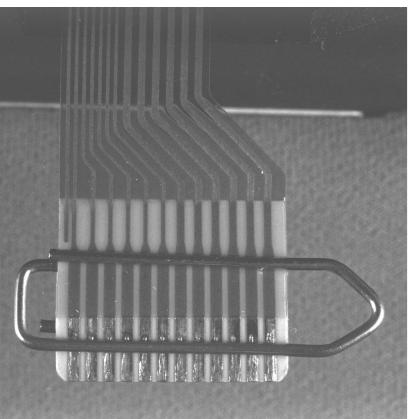


fig.1

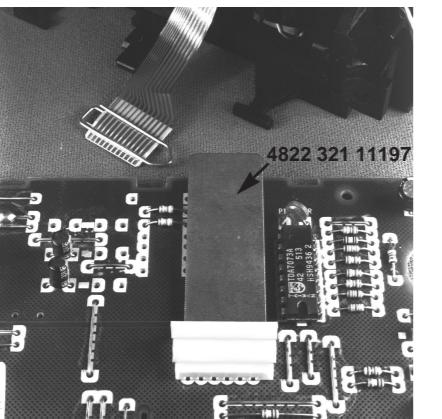


fig.2




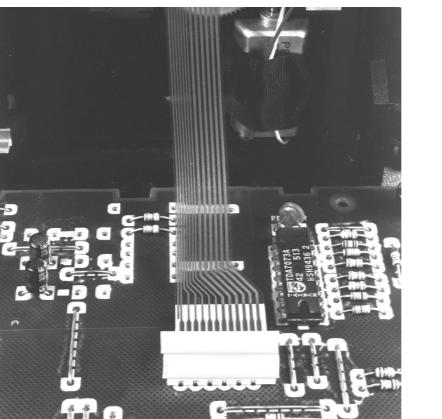


fig.3

## Remarks

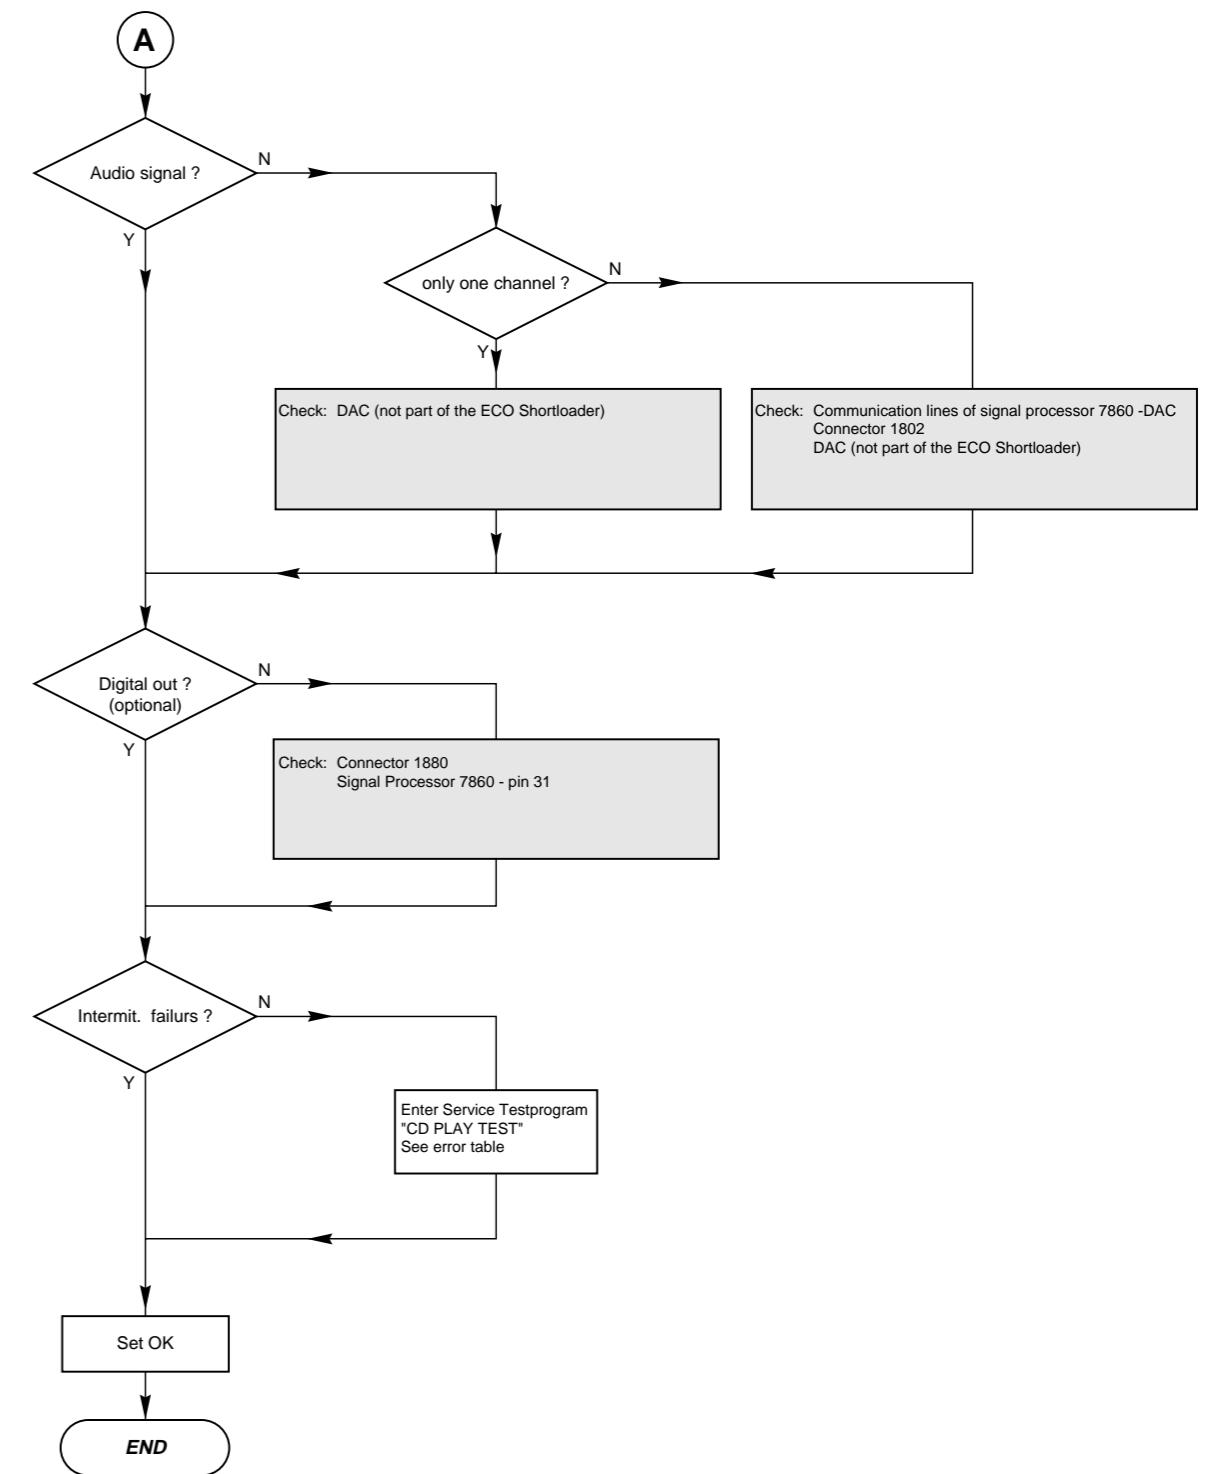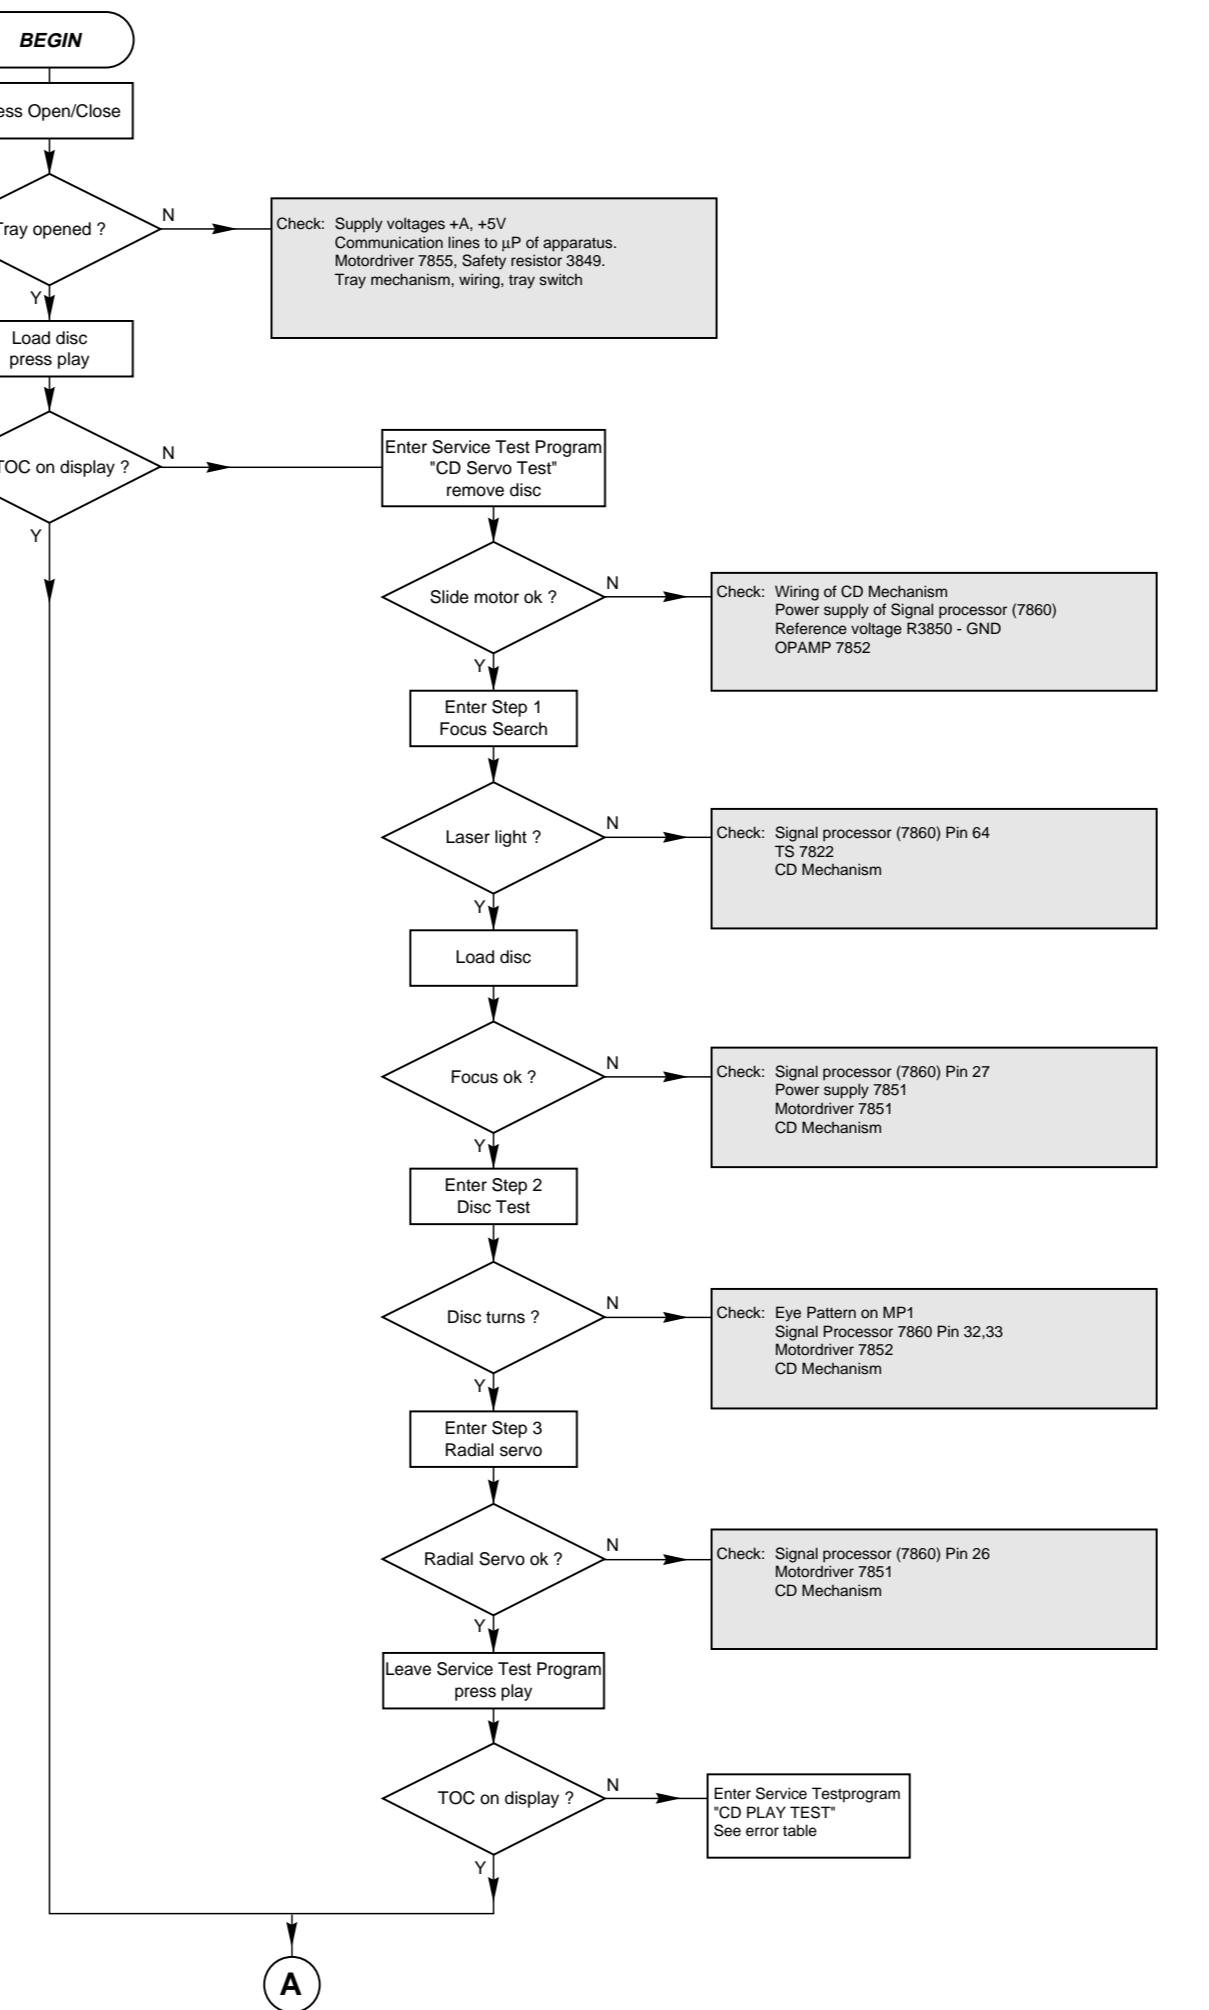


## EXPLODED VIEW of SET

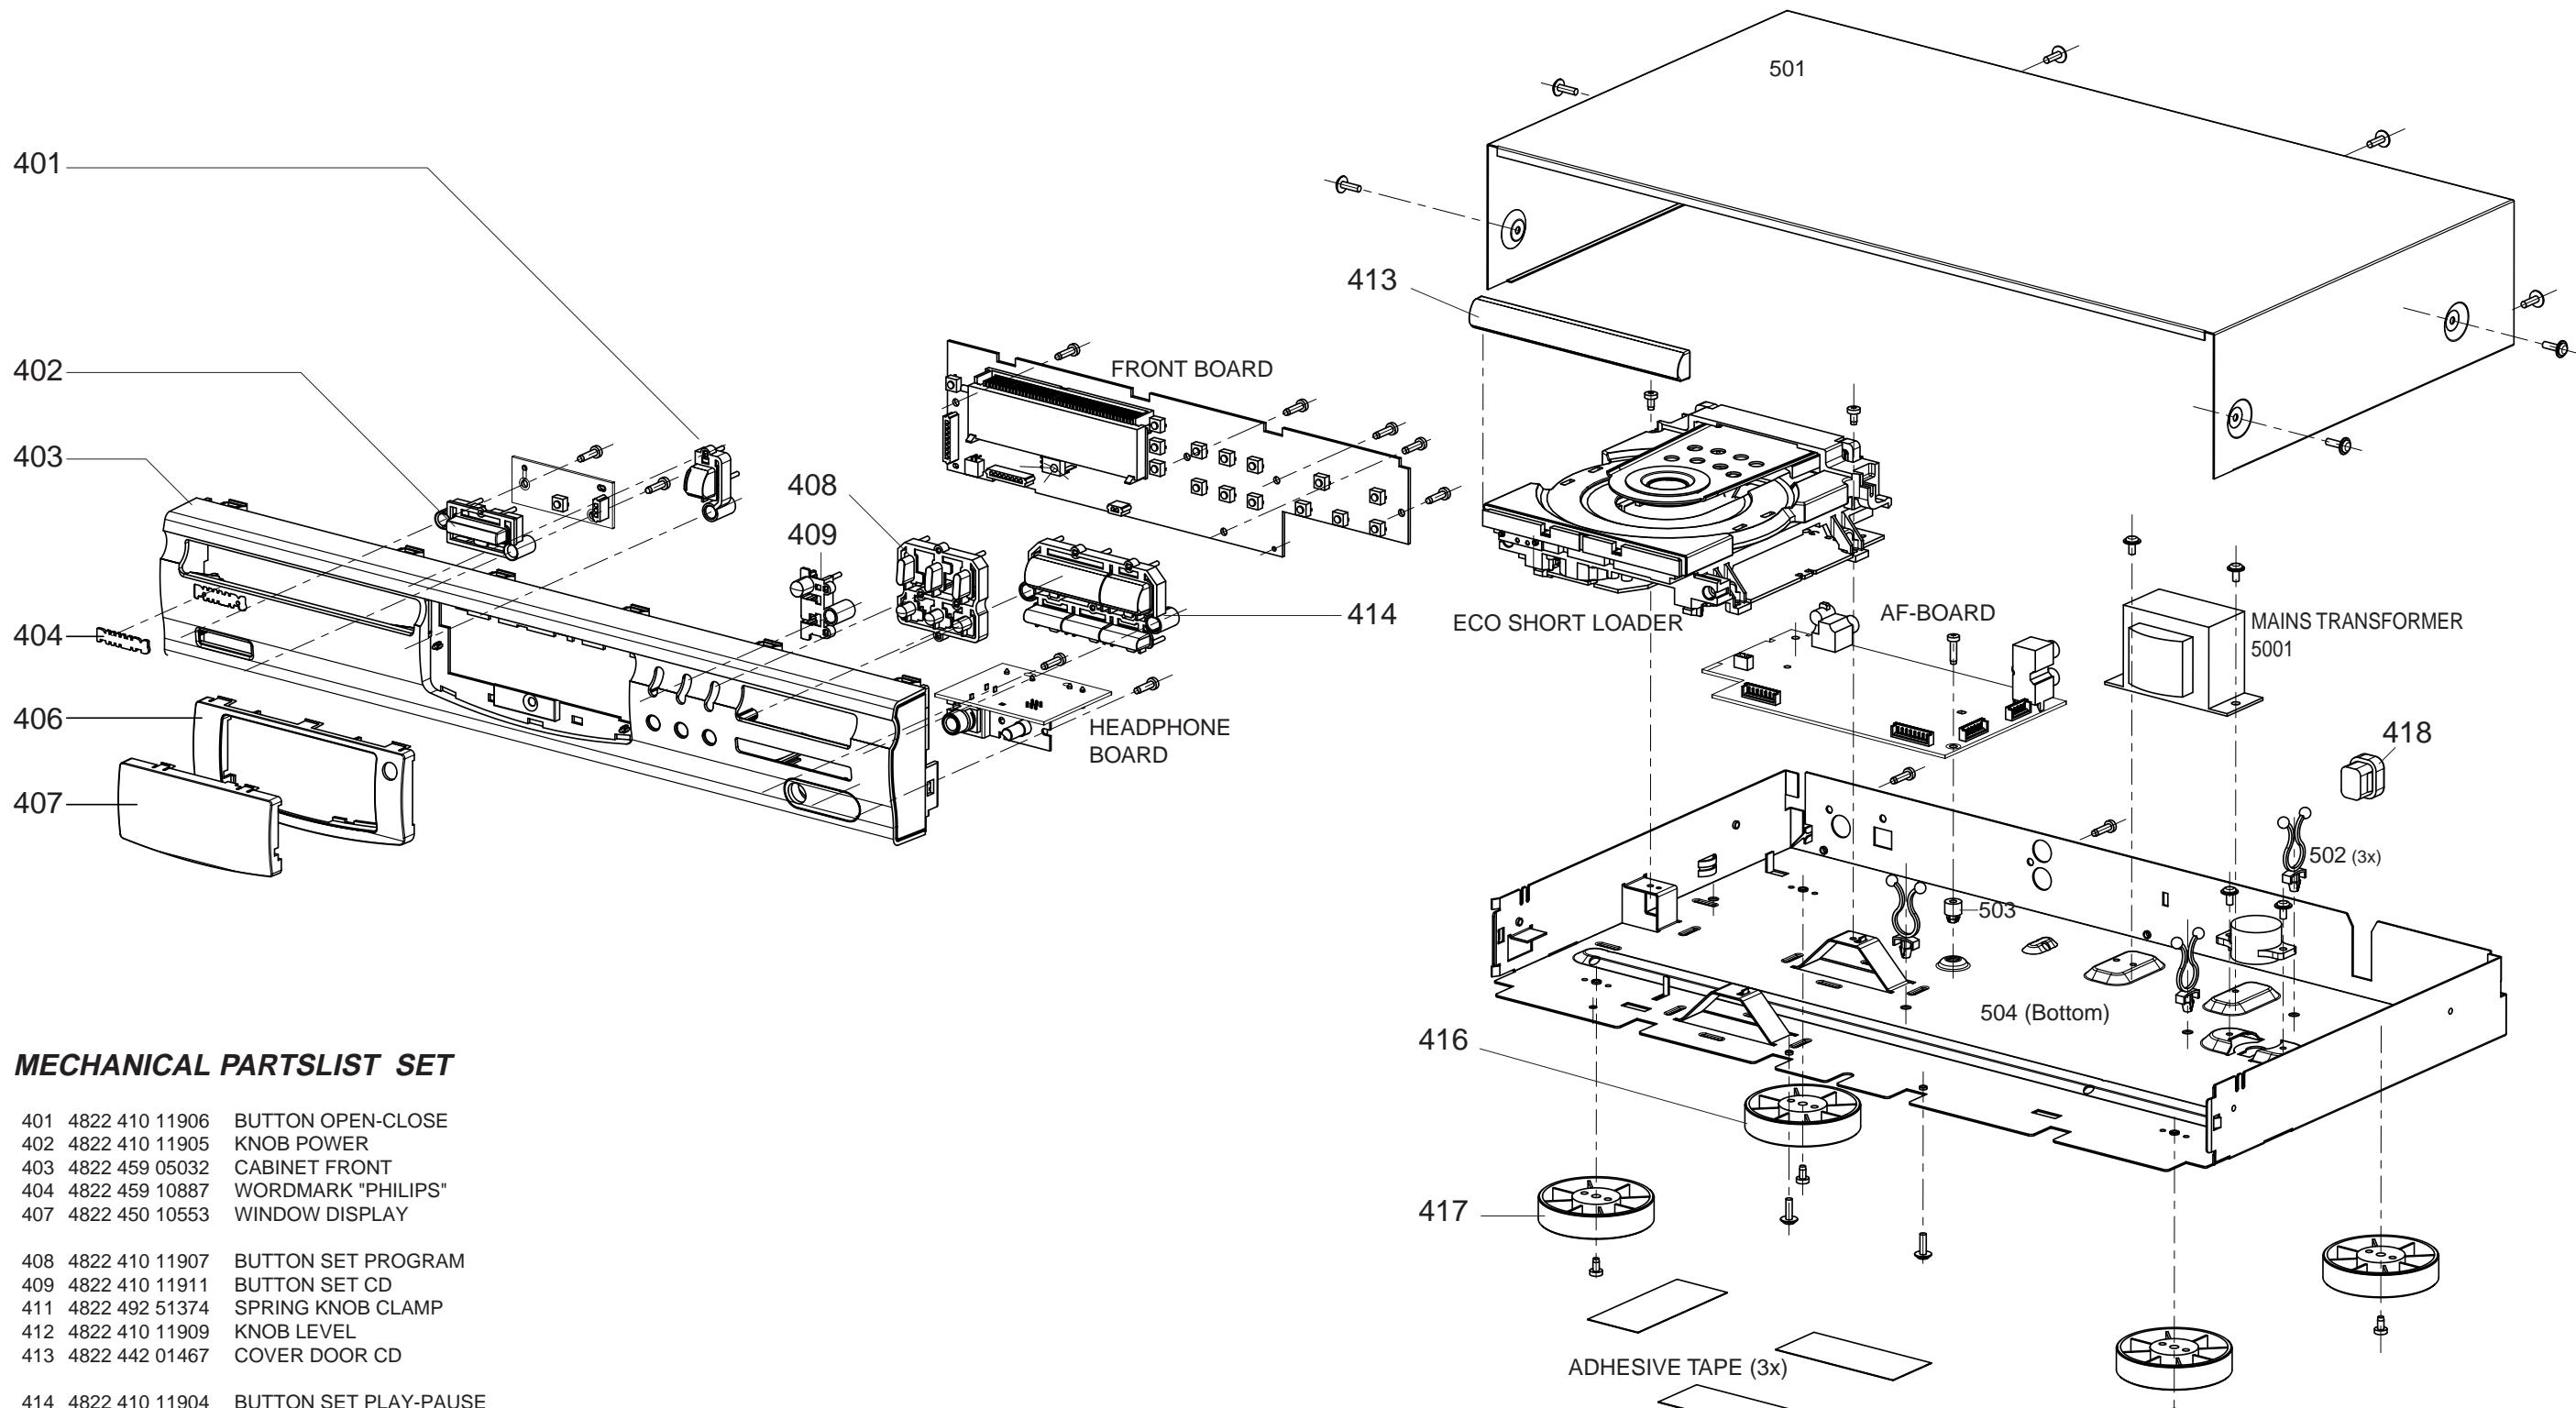

## MECHANICAL PARTSLIST SET

401	4822 410 11906	BUTTON OPEN-CLOSE
402	4822 410 11905	KNOB POWER
403	4822 459 05032	CABINET FRONT
404	4822 459 10887	WORDMARK "PHILIPS"
407	4822 450 10553	WINDOW DISPLAY
408	4822 410 11907	BUTTON SET PROGRAM
409	4822 410 11911	BUTTON SET CD
411	4822 492 51374	SPRING KNOB CLAMP
412	4822 410 11909	KNOB LEVEL
413	4822 442 01467	COVER DOOR CD
414	4822 410 11904	BUTTON SET PLAY-PAUSE
416	4822 462 72095	FOOT BLACK
417	4822 462 42159	FOOT SILVER
418	4822 532 60948	CABLE BUSH
5001	4822 146 11031	TRANSFORMER MAINS not for /01
5001	4822 146 11032	TRANSFORMER MAINS for /01 only
	4822 219 10538	RC07105/01 (Remote Control)
	4822 321 22832	CINCH-CABLE

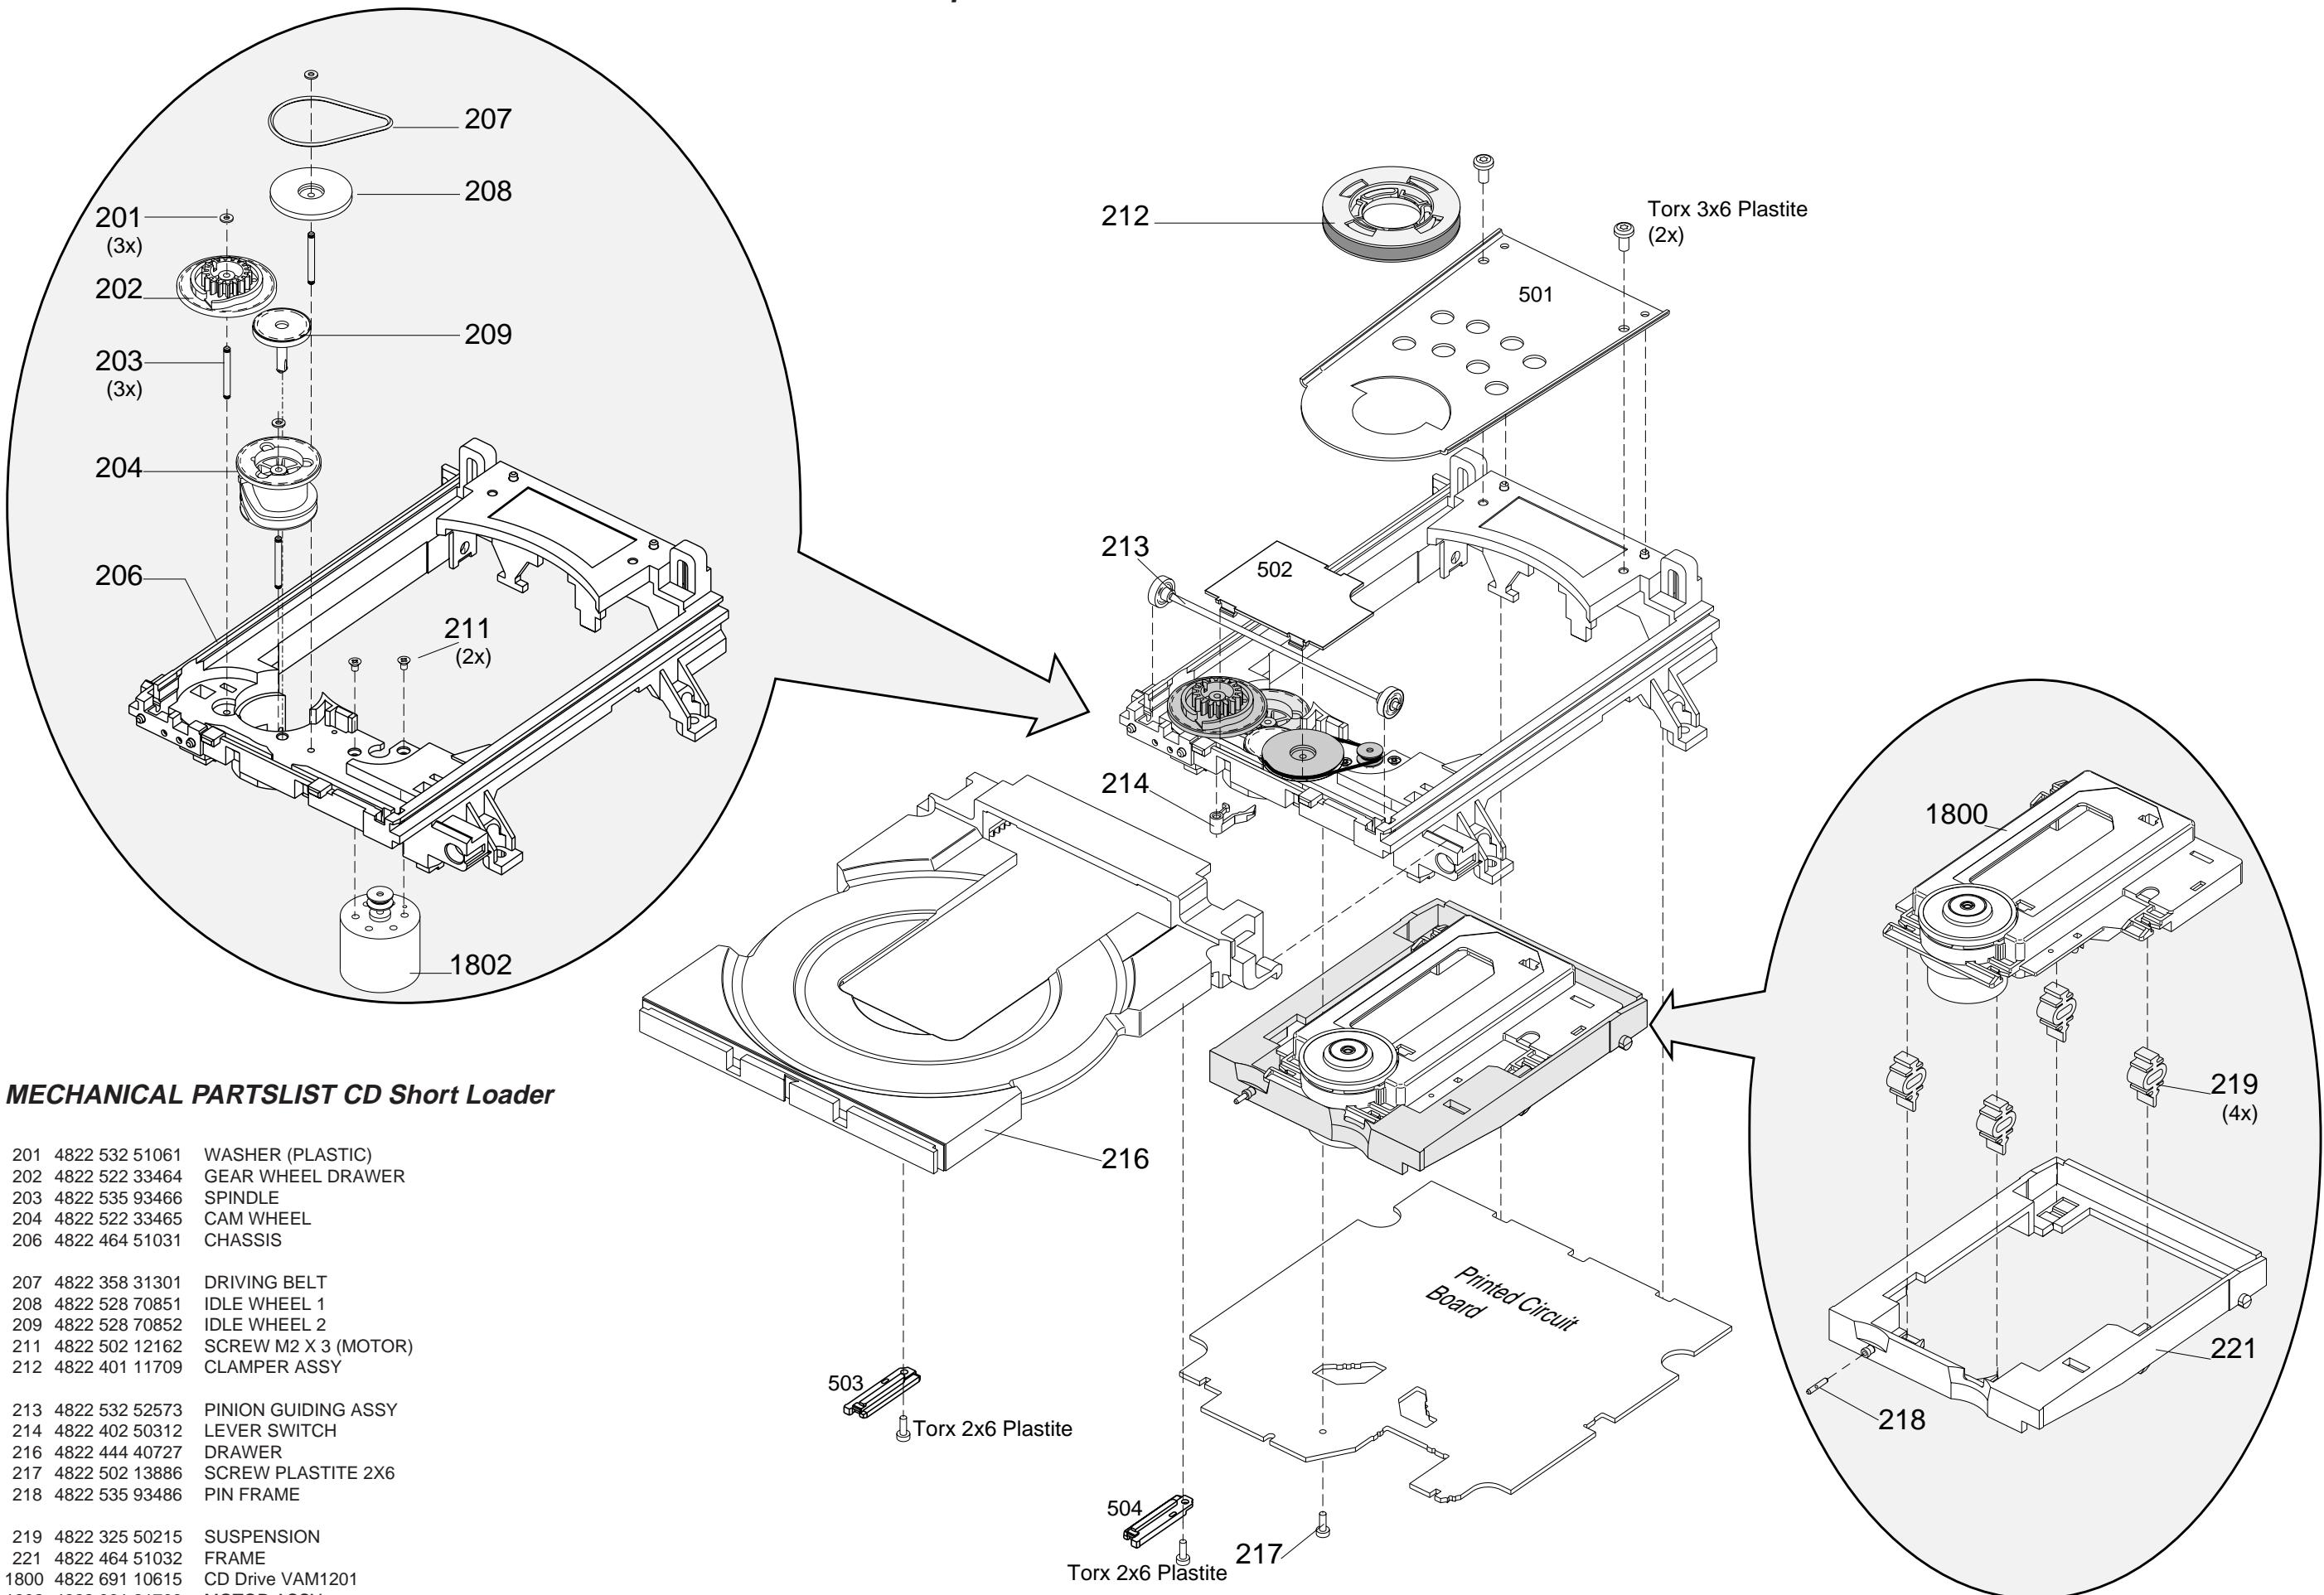***Exploded view CD Short Loader***



ELECTRICAL PARTSLIST CD BOARD

## RESISTORS

3863	4822 116 83872	220Ω	5%	0,5W
3864	4822 116 52175	100Ω	5%	0,5W
3865	4822 116 83872	220Ω	5%	0,5W
3866	4822 116 83864	10kΩ	5%	0,5W
3867	4822 116 83864	10kΩ	5%	0,5W
3868	4822 116 83864	10kΩ	5%	0,5W
3869	4822 116 83864	10kΩ	5%	0,5W
3870	4822 116 83864	10kΩ	5%	0,5W
3871	4822 116 52176	10Ω	5%	0,5W
3872	4822 116 52175	100Ω	5%	0,5W
3873	4822 116 83864	10kΩ	5%	0,5W
3874	4822 116 83864	10kΩ	5%	0,5W
3875	4822 116 52191	33Ω	5%	0,5W
3876	4822 116 52213	180Ω	5%	0,5W
3879	4822 116 52226	560Ω	5%	0,5W
3881	4822 116 52283	4,7kΩ	5%	0,5W
3882	4822 116 52283	4,7kΩ	5%	0,5W
3883	4822 116 52175	100Ω	5%	0,5W
3890	4822 050 11002	1kΩ	5%	0,2W
3891	4822 050 11002	1kΩ	5%	0,2W
3892	4822 116 52271	33kΩ	5%	0,16W
3893	4822 116 52249	1,8kΩ	5%	0,16W
3895	4822 116 52271	33kΩ	5%	0,16W
3896	4822 116 83876	270Ω	5%	0,16W
3897	4822 116 52213	180Ω	5%	0,5W

## COILS

5804	4822 157 53302	1μH
5810	4822 157 11517	10μH
5860	4822 242 10566	CRYSTAL 8.4672MHz

## DIODES

6888	4822 130 80655	BZX79-F2V4
------	----------------	------------

## TRANSISTORS

7822	4822 130 41344	BC337-40
7877	4822 130 40959	BC547B
7878	4822 130 44503	BC547C

## INTEGRATED CIRCUITS

7802©	4822 209 12636	TDA1302T/N1	HF PRE AMPLIFIER
7819©	5322 209 11517	PC74HCU04T	HF AMPLIFIER
7821	4822 209 16143	LC89170M	CD TEXT
7851	4822 209 32852	TDA7073A/N2	SERVO DRIVER
7852	4822 209 32852	TDA7073A/N2	MOTOR DRIVER
7855©	4822 209 31519	TDA7072A	TRAY MOTOR DRIVER
7860©	4822 209 12752	SAA7378GP	SIGNAL PROCESSOR

ELECTRICAL PARTSLIST HEADPHONE BOARD

## MISCELLANEOUS

1600	4822 267 31453	HEADPHONE SOCKET 6,3mm
------	----------------	------------------------

## CAPACITORS

2603	4822 126 11585	22nF	20%	50V
2604	4822 122 33197	1nF	10%	50V
2605	4822 122 33197	1nF	10%	50V
2610	4822 126 12882	100nF	20%	50V

## RESISTORS

3600	4822 101 21199	POTMETER	2x10KΩ	
3603	4822 116 52244	15kΩ	5%	0,5W
3604	4822 116 52206	120Ω	5%	0,5W
3605	4822 116 83864	10kΩ	5%	0,5W
3606	4822 116 83864	10kΩ	5%	0,5W
3607	4822 116 52244	15kΩ	5%	0,5W
3608	4822 116 52206	120Ω	5%	0,5W
3609	4822 052 10109	10Ω	5%	NFR
3611▲	4822 052 10109	10Ω	5%	NFR

## INTEGRATED CIRCUITS

7670	4822 209 83274	NJM4560D
------	----------------	----------

ELECTRICAL PARTSLIST SET

## MISCELLANEOUS

5001▲	4822 146 11031	TRANSFORMER MAINS not for /01
5001▲	4822 146 11032	TRANSFORMER MAINS for /01 only
	4822 219 10538	RC07105/01 (Remote Control)
	4822 321 22832	CINCH-CABLE



ELECTRICAL PARTSLIST FRONT BOARD

## MISCELLANEOUS

1800	4822 135 00234	DISPLAY
1810	4822 265 11183	CON. FLEX FOIL 4PIN SIDE ENTRY
1820	4822 276 13114	TACT SWITCH
1821	4822 276 13114	TACT SWITCH
1822	4822 276 13114	TACT SWITCH
1823	4822 276 13114	TACT SWITCH
1824	4822 276 13114	TACT SWITCH
1825	4822 276 13114	TACT SWITCH
1826	4822 276 13114	TACT SWITCH
1827	4822 276 13114	TACT SWITCH
1828	4822 276 13114	TACT SWITCH
1829	4822 276 13114	TACT SWITCH
1830	4822 276 13114	TACT SWITCH
1831	4822 276 13114	TACT SWITCH
1832	4822 276 13114	TACT SWITCH
1840	4822 276 13114	TACT SWITCH
7810	4822 130 10165	GP1U28XP, IR EYE
8002	4822 320 12385	FLEX FOIL 4P 100mm (CD Text)

## CAPACITORS

2800	4822 124 22726	4,7µF	20%	35V
2801	4822 124 22726	4,7µF	20%	35V
2803	4822 126 11585	22nF	20%	50V
2807	4822 124 81029	100µF	20%	25V
2808	4822 126 11585	22nF	20%	50V
2810	4822 121 51387	10nF	20%	16V
2811	4822 121 51387	10nF	20%	16V
2812	4822 126 12882	100nF	20%	50V
2813	4822 126 12882	100nF	20%	50V
2814	4822 124 40433	47µF	20%	25V
2815	4822 121 42408	220nF	5%	63V

## RESISTORS

3804	4822 050 11002	1kΩ	5%	0,2W
3805	4822 050 11002	1kΩ	5%	0,2W
3806	4822 050 11002	1kΩ	5%	0,2W
3807	4822 050 11002	1kΩ	5%	0,2W
3808	4822 116 52195	47Ω	5%	0,5W
3809	4822 116 52234	100kΩ	5%	0,5W
3810	4822 050 11002	1kΩ	5%	0,2W
3811	4822 050 11002	1kΩ	5%	0,2W
3812	4822 050 11002	1kΩ	5%	0,2W
3813	4822 050 11002	1kΩ	5%	0,2W
3814	4822 050 11002	1kΩ	5%	0,2W
3815	4822 050 11002	1kΩ	5%	0,2W
3816	4822 050 11002	1kΩ	5%	0,2W
3817	4822 116 52257	22kΩ	5%	0,5W
3818	4822 116 52257	22kΩ	5%	0,5W
3819	4822 116 52257	22kΩ	5%	0,5W
3820	4822 116 52257	22kΩ	5%	0,5W
3821	4822 050 11002	1kΩ	5%	0,2W
3822	4822 050 11002	1kΩ	5%	0,2W
3823	4822 050 11002	1kΩ	5%	0,2W
3829	4822 116 52257	22kΩ	5%	0,5W
3830	4822 116 52257	22kΩ	5%	0,5W
3832	4822 050 11002	1kΩ	5%	0,2W
3833	4822 050 11002	1kΩ	5%	0,2W
3834	4822 050 11002	1kΩ	5%	0,2W

## RESISTORS

3835	4822 050 11002	1kΩ	5%	0,2W
3836	4822 116 52257	22kΩ	5%	0,5W
3837	4822 116 83884	47kΩ	5%	0,16W
3838	4822 050 11002	1kΩ	5%	0,2W
3841	4822 050 11002	1kΩ	5%	0,2W
3842	4822 050 11002	1kΩ	5%	0,2W
3844	4822 050 11002	1kΩ	5%	0,2W
3845	4822 050 11002	1kΩ	5%	0,2W
3846	4822 050 11002	1kΩ	5%	0,2W
3847	4822 116 52175	100Ω	5%	0,5W
3848	4822 116 52176	10Ω	5%	0,5W
3849	4822 050 24708	4,7Ω	1%	0,6W

## COILS

1844	4822 242 72066	CERAMIC FILTER 8,0MHz
5801	4822 156 31058	FILTER DIGITAL OUT
5802	4822 156 21721	2,2µH

## DIODES

6801	4822 130 30621	1N4148
6802	4822 130 30621	1N4148
6820	4822 130 31878	1N4003G

## TRANSISTORS

7811	4822 130 40959	BC547B
------	----------------	--------

## INTEGRATED CIRCUITS

7800©	4822 209 16739	TMP87CP71-83780 MICROPROCESSOR
-------	----------------	--------------------------------