

SERVICE MANUAL

MIDEA AIRCONDITIONER
EUROPE MARKET
SPLIT WALL-MOUNTED TYPE

X ON-OFF SERIES



CONTENTS

| | |
|---|-----------|
| 1. Precaution | 1 |
| 1.1 Safety Precaution | 1 |
| 1.2 Warning | 1 |
| 2. Function..... | 6 |
| 3. Dimension..... | 9 |
| 3.1 Indoor Units | 9 |
| 3.2 Outdoor Units | 11 |
| 4. Refrigerant Cycle Diagram..... | 12 |
| 5. Wiring Diagram..... | 13 |
| 5.1 Indoor Units | 13 |
| 5.2 Outdoor Units | 15 |
| 6. Installation details | 19 |
| 6.1 Wrench torque sheet for installation | 19 |
| 6.2 Connecting the cables..... | 19 |
| 6.3 Pipe length and the elevation..... | 20 |
| 6.4 Installation for the first time | 22 |
| 6.5 Adding the refrigerant after running the system for many years..... | 25 |
| 6.6 Re-installation while the indoor unit need to be repaired..... | 26 |
| 6.7 Re-installation while the outdoor unit need to be repaired | 28 |
| 7. Operation characteristics | 31 |
| 8. Electronic function..... | 32 |
| 8.1 Abbreviation..... | 32 |
| 8.2 Display function | 32 |
| 8.3 Main Protection | 34 |
| 9. Troubleshooting | 47 |
| 9.1 Indoor unit error display | 47 |
| 9.2 Diagnosis and Solution | 48 |

1. Precaution

1.1 Safety Precaution

n To prevent injury to the user or other people and property damage, the following instructions must be followed.

n Incorrect operation due to ignoring instruction will cause harm or damage.

n Before service unit, be sure to read this service manual at first.

1.2 Warning

Ø Installation

n Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.

There is risk of fire or electric shock.

n For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized service center.

Do not disassemble or repair the product, there is risk of fire or electric shock.

n Always ground the product.

There is risk of fire or electric shock.

n Install the panel and the cover of control box securely.

There is risk of fire of electric shock.

n Always install a dedicated circuit and breaker.

Improper wiring or installation may cause fire or electric shock.

n Use the correctly rated breaker or fuse.

There is risk of fire or electric shock.

n Do not modify or extend the power cable.

There is risk of fire or electric shock.

n Do not install, remove, or reinstall the unit by yourself(customer).

There is risk of fire, electric shock, explosion, or injury.

n Be caution when unpacking and installing the product.

Sharp edges could cause injury, be especially careful of the case edges and the fins on the

condenser and evaporator.

n For installation, always contact the dealer or an Authorized service center.

There is risk of fire, electric shock, explosion, or injury.

n Do not install the product on a defective installation stand.

It may cause injury, accident, or damage to the product.

n Be sure the installation area does not deteriorate with age.

If the base collapses, the air conditioner could fall with it, causing property damage, product failure, and personal injury.

n Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open.

Moisture may condense and wet or damage furniture.

n Take care to ensure that power cable could not be pulled out or damaged during operation.

There is risk of fire or electric shock.

n Do not place anything on the power cable.

There is risk of fire or electric shock.

n Do not plug or unplug the power supply plug during operation.

There is risk of fire or electric shock.

n Do not touch (operation) the product with wet hands.

There is risk of fire or electric shock.

n Do not place a heater or other appliance near the power cable.

There is risk of fire and electric shock.

n Do not allow water to run into electric parts.

It may cause fire, failure of the product, or electric shock.

n Do not store or use flammable gas or combustible near the product.

There is risk of fire or failure of product.

n Do not use the product in a tightly closed space for a long time.

Oxygen deficiency could occur.

n When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on.

Do not use the telephone or turn switches on or off.

There is risk of explosion or fire.

n If strange sounds, or small or smoke comes from product. Turn the breaker off or disconnect the power supply cable.

There is risk of electric shock or fire.

n Stop operation and close the window in storm or hurricane. If possible, remove the product from the window before the hurricane arrives.

There is risk of property damage, failure of product, or electric shock.

n Do not open the inlet grill of the product during operation. (Do not touch the electrostatic filter, if the unit is so equipped.)

There is risk of physical injury, electric shock, or product failure.

n When the product is soaked (flooded or submerged), contact an Authorized service center.

There is risk of fire or electric shock.

n Be caution that water could not enter the product.

There is risk of fire, electric shock, or product damage.

n Ventilate the product from time to time when operating it together with a stove, etc.

There is risk of fire or electric shock.

n Turn the main power off when cleaning or maintaining the product.

There is risk of electric shock.

n When the product is not be used for a long time, disconnect the power supply plug or turn off the breaker.

There is risk of product damage or failure, or unintended operation.

n Take care to ensure that nobody could step on or fall onto the outdoor unit.

This could result in personal injury and product damage.

Ø CAUTION

n Always check for gas (refrigerant) leakage after installation or repair of product.

Low refrigerant levels may cause failure of product.

n Install the drain hose to ensure that water is drained away properly.

A bad connection may cause water leakage.

n Keep level even when installing the product.

It can avoid vibration of water leakage.

n Do not install the product where the noise or hot air from the outdoor unit could damage the neighborhoods.

It may cause a problem for your neighbors.

n Use two or more people to lift and transport the product.

Avoid personal injury.

n Do not install the product where it will be exposed to sea wind (salt spray) directly.

It may cause corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient operation.

Ø Operational

n Do not expose the skin directly to cool air for long periods of time. (Do not sit in the draft).

This could harm to your health.

n Do not use the product for special purposes, such as preserving foods, works of art, etc.
It is a consumer air conditioner, not a precision refrigerant system.

There is risk of damage or loss of property.

n Do not block the inlet or outlet of air flow.

It may cause product failure.

n Use a soft cloth to clean. Do not use harsh detergents, solvents, etc.

There is risk of fire, electric shock, or damage to the plastic parts of the product.

n Do not touch the metal parts of the product when removing the air filter. They are very sharp.

There is risk of personal injury.

n Do not step on or put anything on the product. (outdoor units)

There is risk of personal injury and failure of product.

n Always insert the filter securely. Clean the filter every two weeks or more often if necessary.

A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage.

n Do not insert hands or other object through air inlet or outlet while the product is

operated.

There are sharp and moving parts that could cause personal injury.

n Do not drink the water drained from the product.

It is not sanitary could cause serious health issues.

n Use a firm stool or ladder when cleaning or maintaining the product.

Be careful and avoid personal injury.

n Replace the all batteries in the remote control with new ones of the same type. Do not mix old and new batteries or different types of batteries.

There is risk of fire or explosion.

n Do not recharge or disassemble the batteries. Do not dispose of batteries in a fire.

They may burn or explode.


n If the liquid from the batteries gets onto your skin or clothes, wash it well with clean water. Do not use the remote if the batteries have leaked.


The chemical in batteries could cause burns or other health hazards

2. Function

Model Names of Indoor/Outdoor Units

| Series | Capacity | Indoor units | Outdoor units |
|--------|----------|-----------------|-----------------|
| On-Off | 7k | MSX-07HRN1-QC2 | MOA-07HN1-QC2 |
| | 9k | MSX-09HRN1-QC2 | MOA-09HN1-QC2 |
| | | MSX-09HRN1-QC2 | MOA1-09HN1-QC2 |
| | 12k | MSX-12HRN1-QC2 | MOB1-12HN1-QC2 |
| | | MSX-12HRN1-QC2 | MOB-12HN1-QC2 |
| | 18k | MSX-18HRN1-QC2 | MOF-18HN1-QC2 |
| | 21k | MSX-21HRN1-QB8W | MOF1-21HN1-QB8W |
| | 24k | MSX-24HRN1-QB8W | MOF3-24HN1-QB8W |

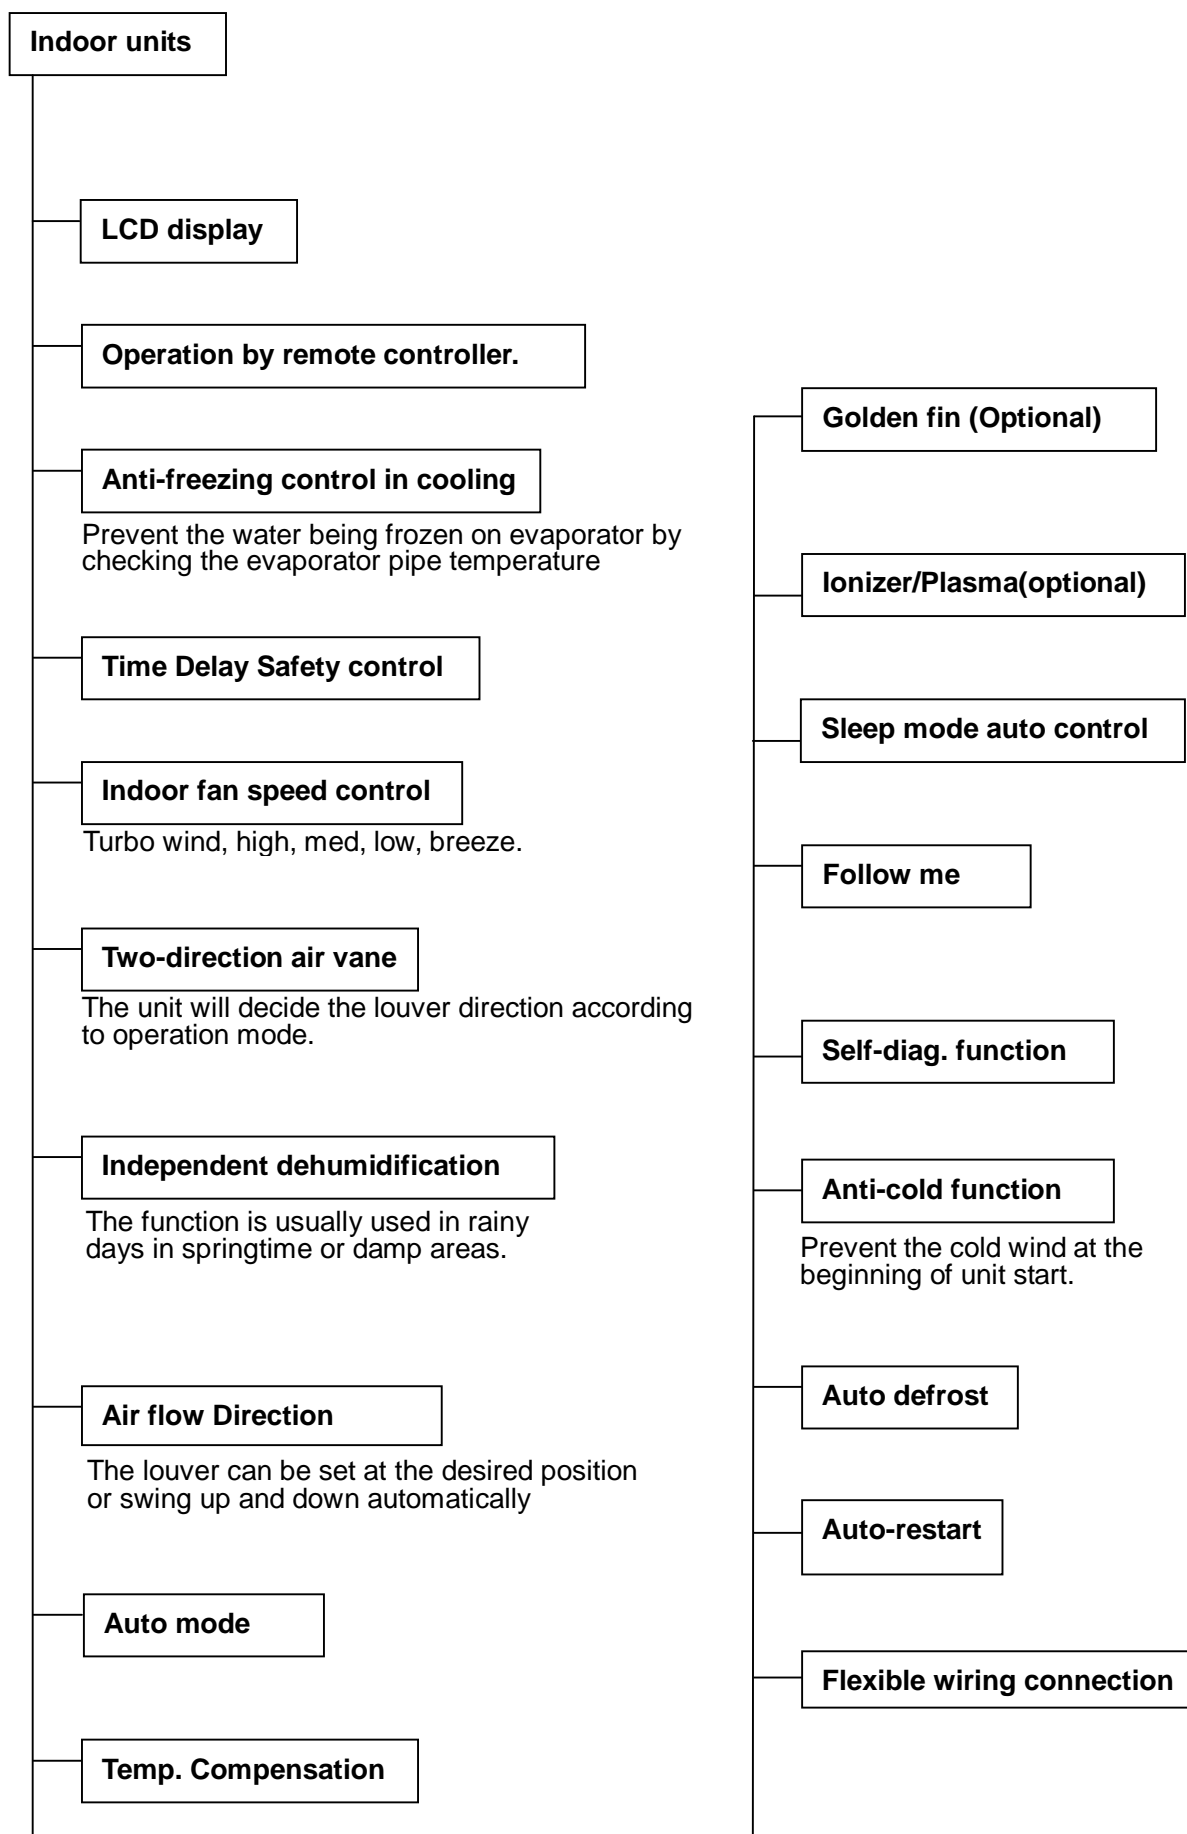

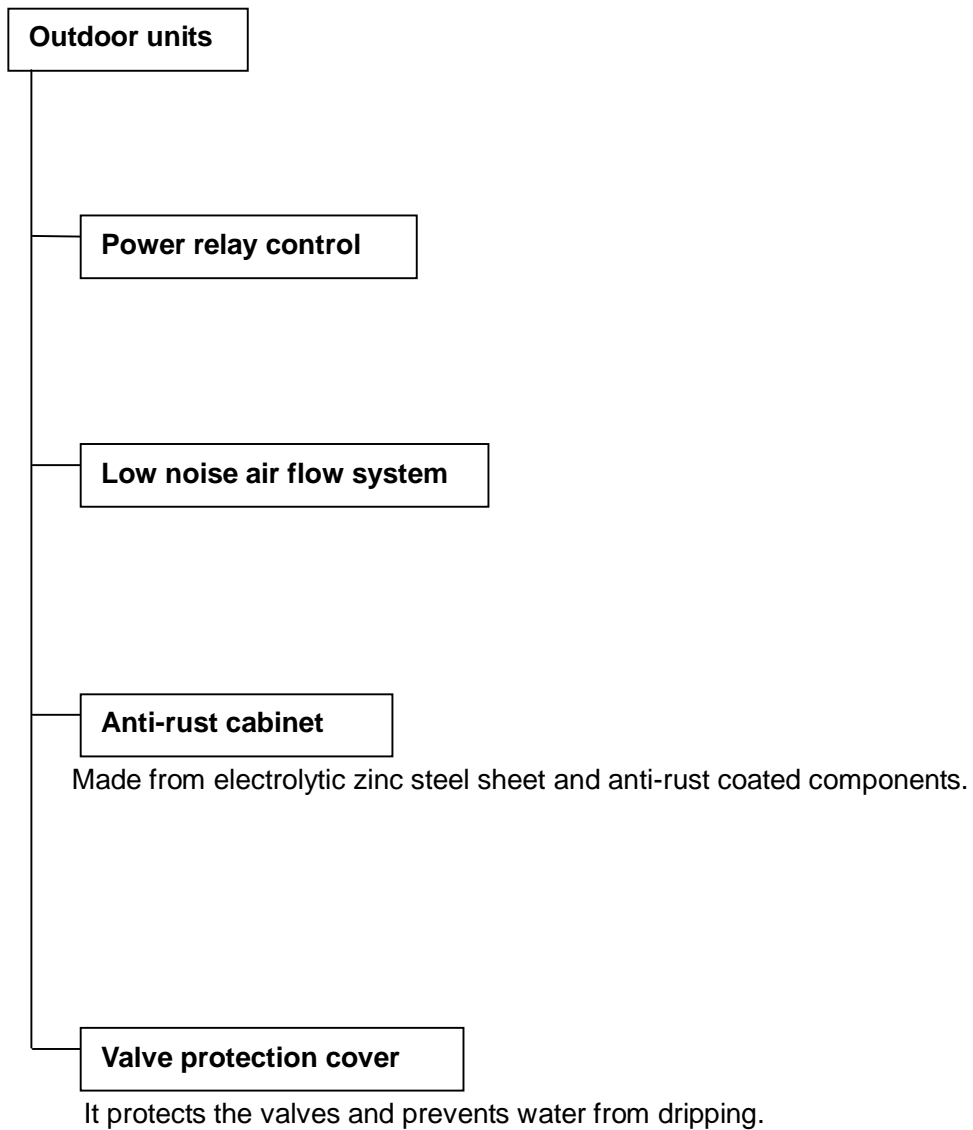

3. Dimension

3.1 Indoor Units

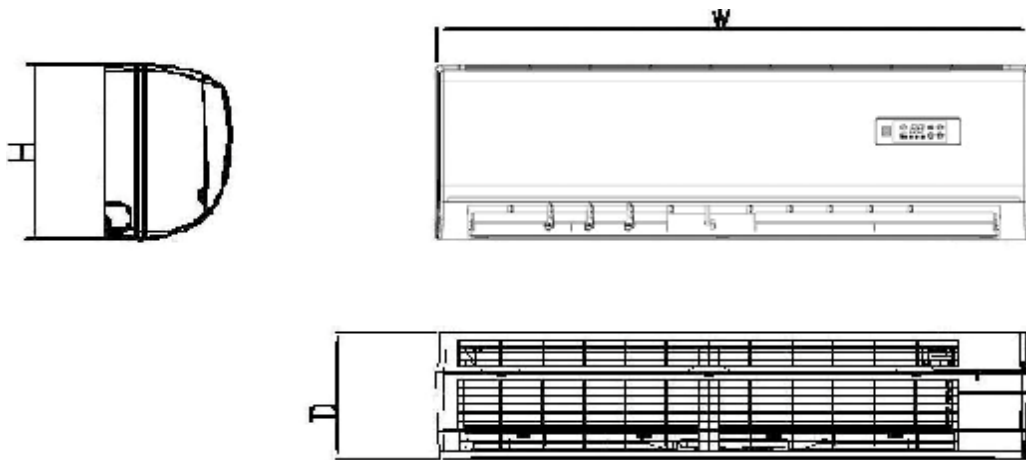


Figure 1:

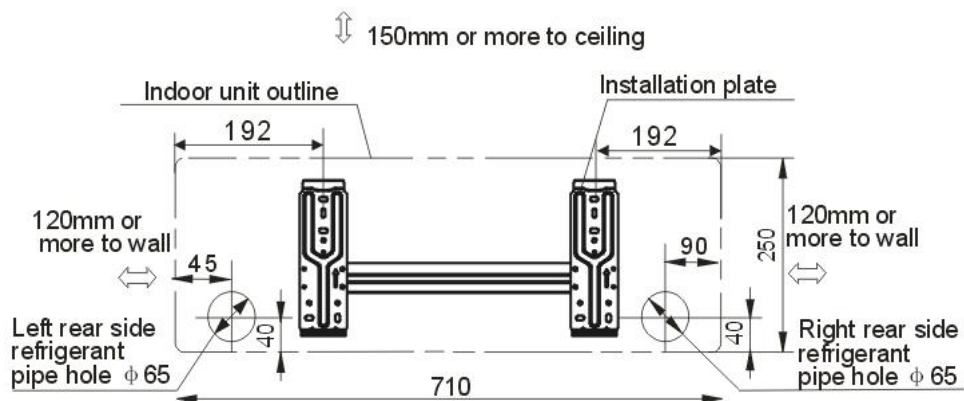


Figure 2:

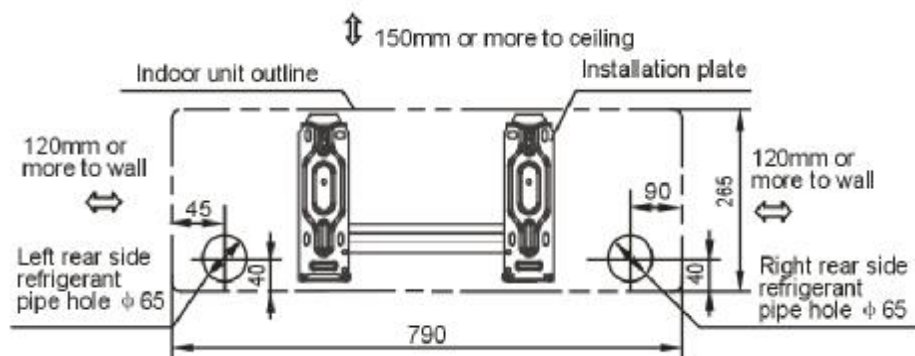


Figure 3:



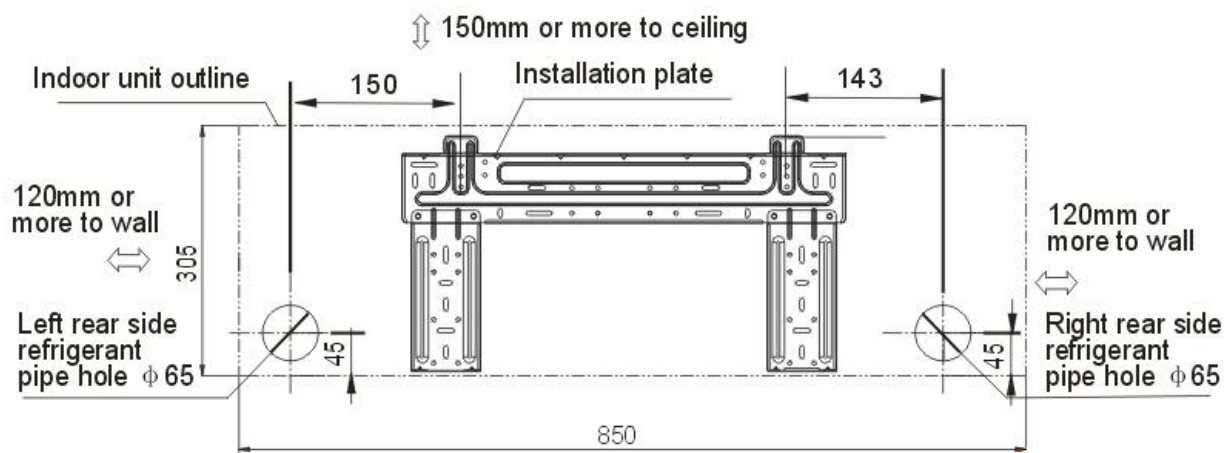


Figure 4:

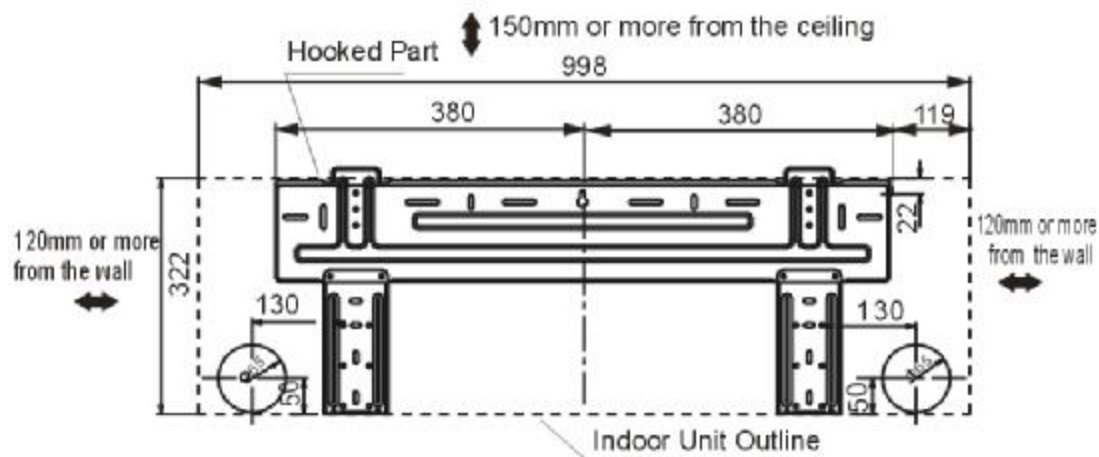

| Figure | Models | W | D | H |
|----------|-----------------|-----|-----|-----|
| Figure 1 | MSX-07HRN1-QC2 | 710 | 195 | 250 |
| | MSX-09HRN1-QC2 | | | |
| Figure 2 | MSX-12HRN1-QC2 | 790 | 195 | 265 |
| Figure 3 | MSX-18HRN1-QC2 | 850 | 225 | 305 |
| Figure 4 | MSX-21HRN1-QB8W | 998 | 235 | 322 |
| | MSX-24HRN1-QB8W | | | |


3.2 Outdoor Units

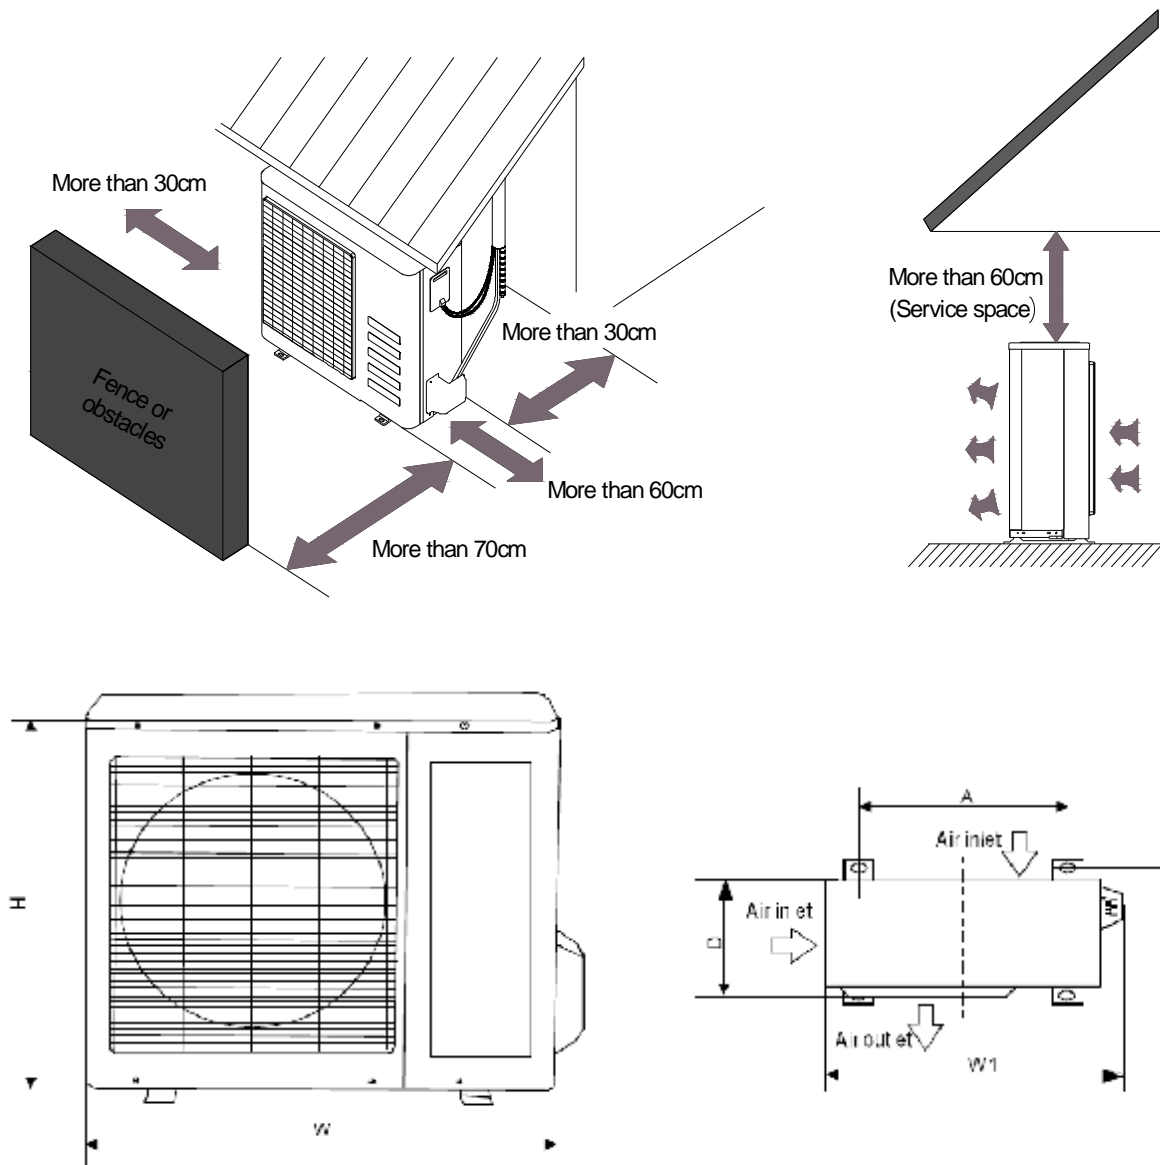

| Model | W | D | H | W1 | A | B |
|-----------------|-----|-----|-----|-----|-----|-----|
| MOA-07HN1-QC2 | 700 | 240 | 540 | 757 | 458 | 250 |
| MOA1-09HN1-QC2 | | | | | | |
| MOA-09HN1-QC2 | | | | | | |
| MOB1-12HN1-QC2 | 780 | 250 | 540 | 843 | 549 | 276 |
| MOB-12HN1-QC2 | | | | | | |
| MOF-18HN1-QC2 | 845 | 320 | 700 | 908 | 560 | 335 |
| MOF1-21HN1-QB8W | | | | | | |
| MOF3-24HN1-QB8W | | | | | | |

4. Refrigerant Cycle Diagram


For heat pump models:

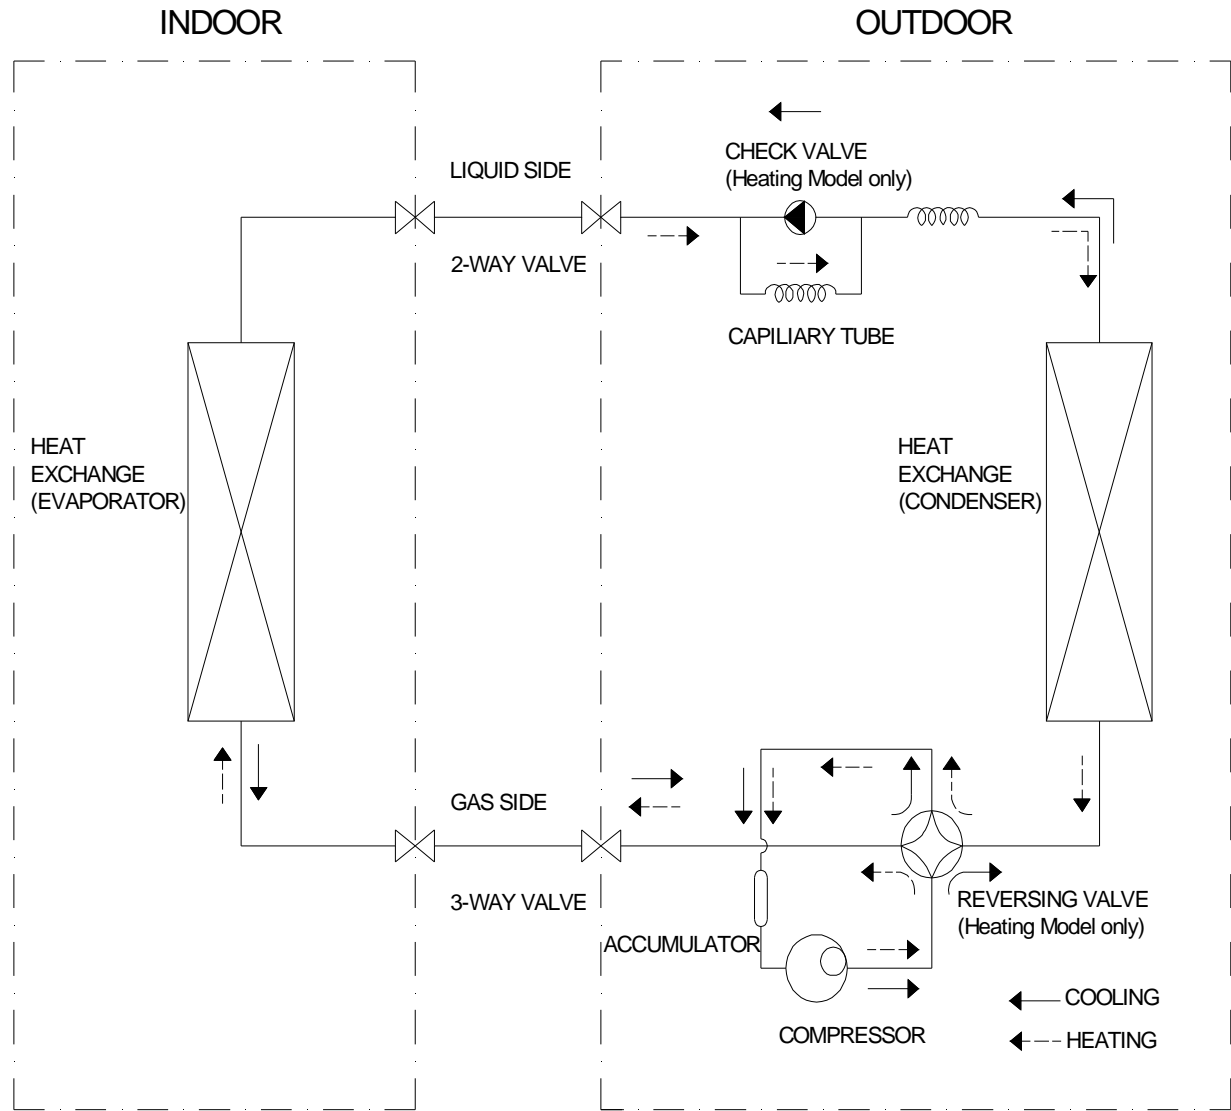

5. Wiring Diagram


5.1 Indoor Units

MSX-07HRN1-QC2 MSX-09HRN1-QC2 MSX-12HRN1-QC2 MSX-18HRN1-QC2

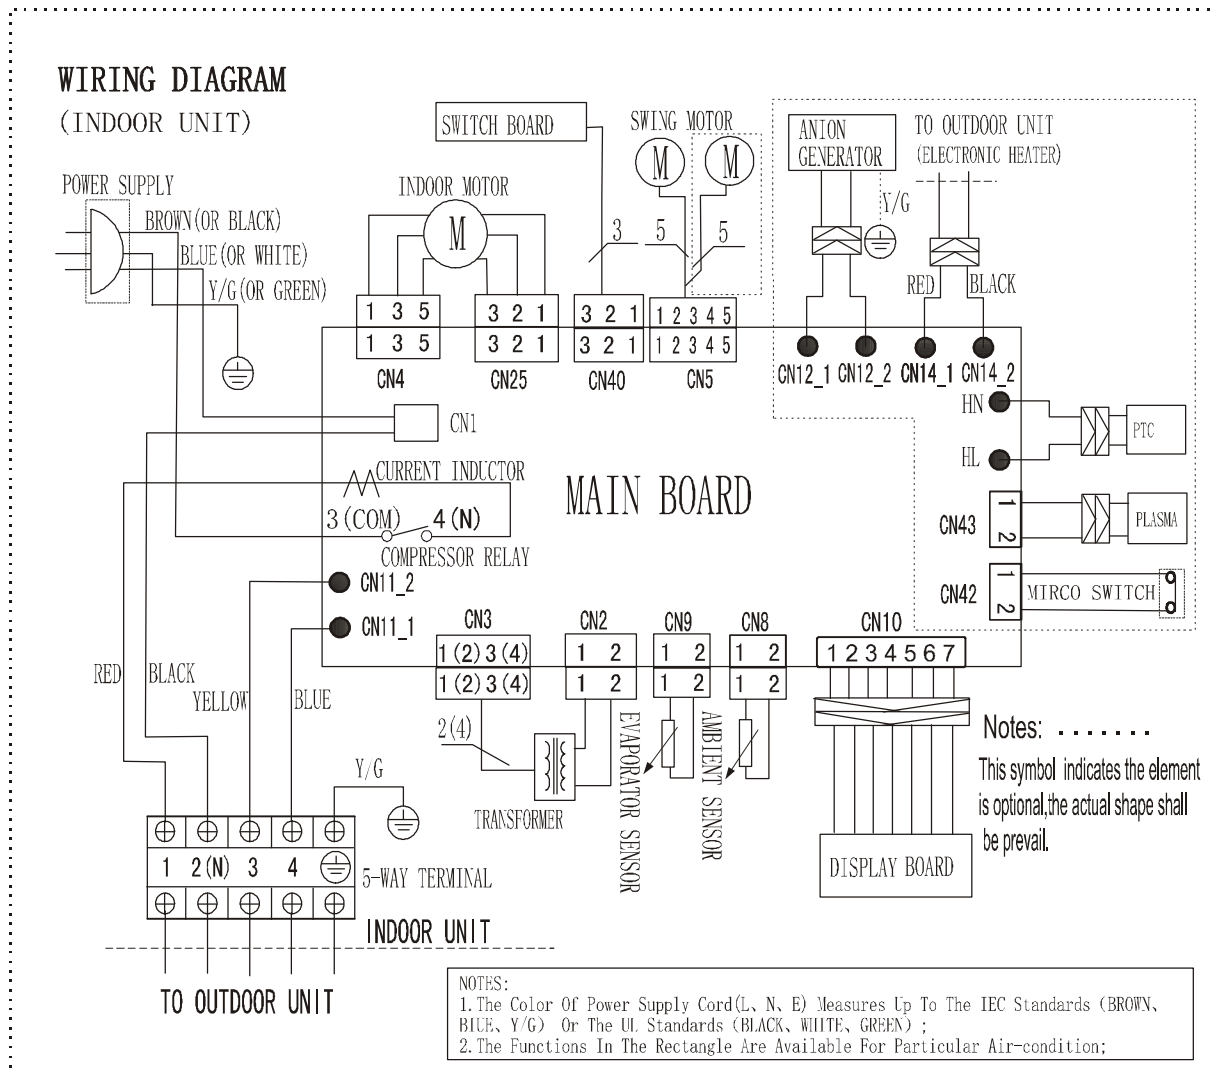


MSX-21HRN1-QB8W, MSX-24HRN1-QB8W


WIRING DIAGRAM (INDOOR UNIT)

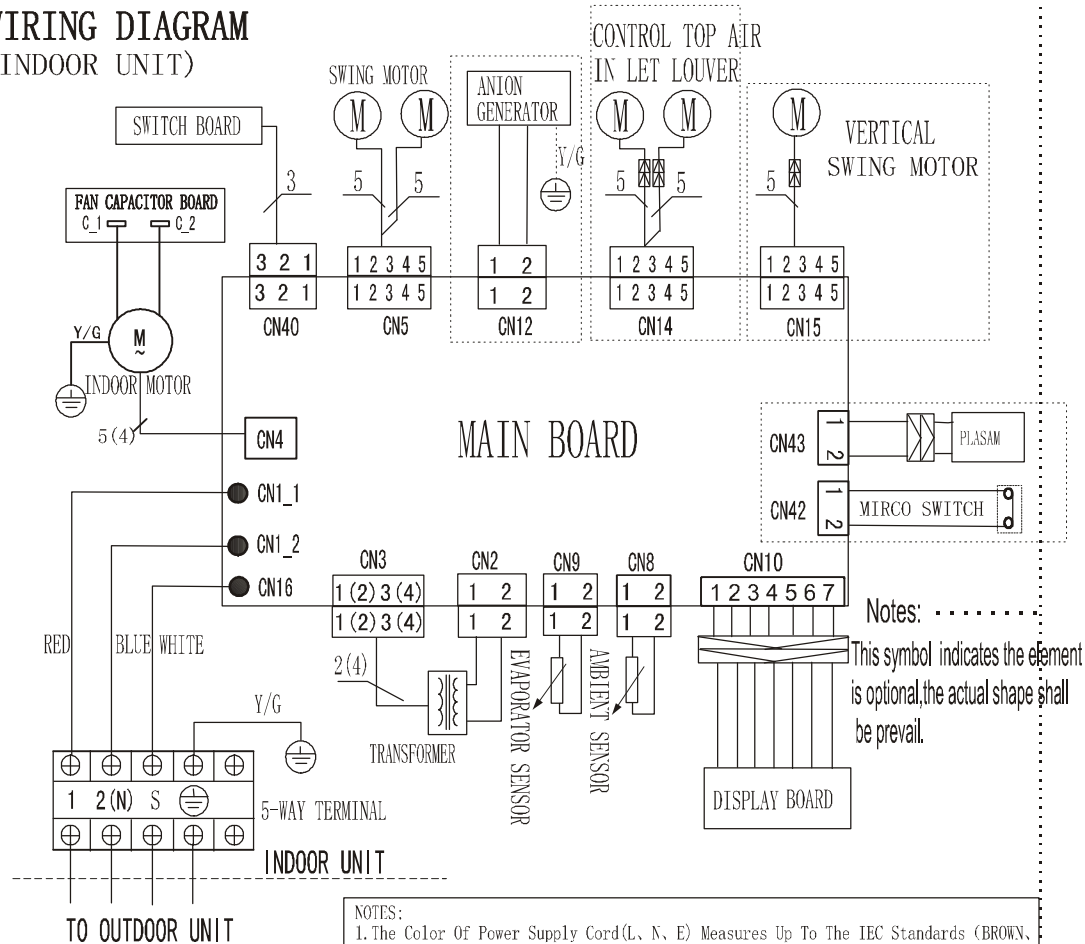


5.2 Outdoor Units


MOA-07HN1-QC2

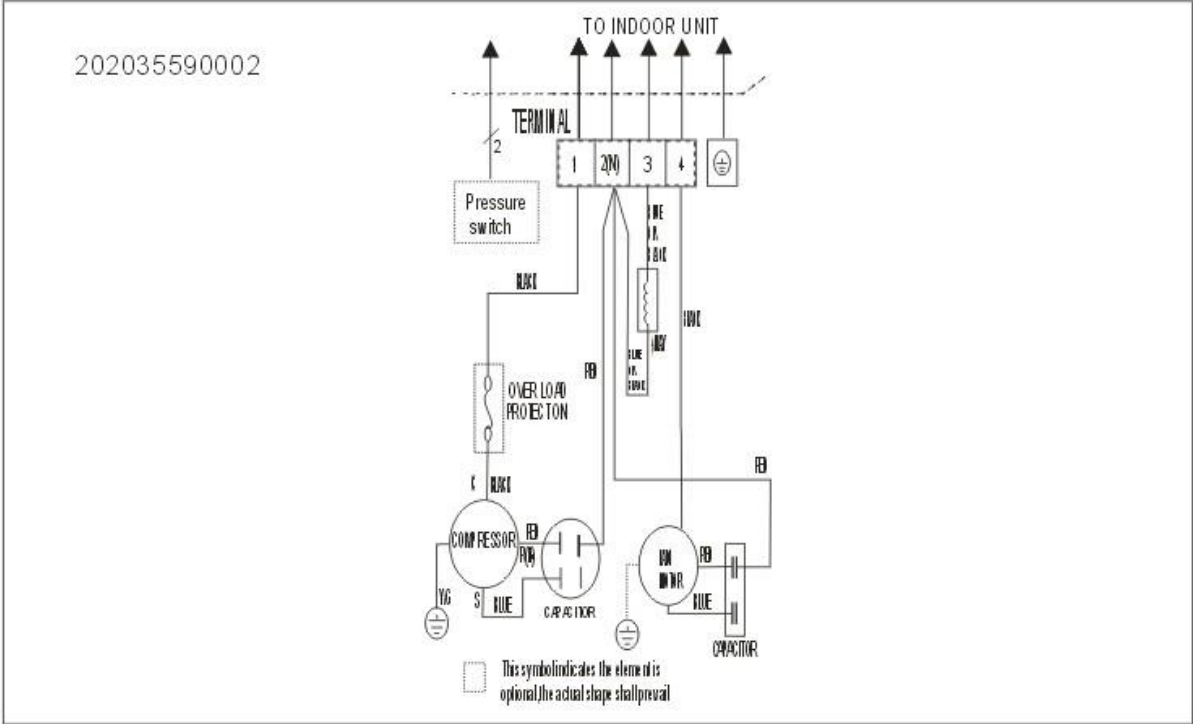

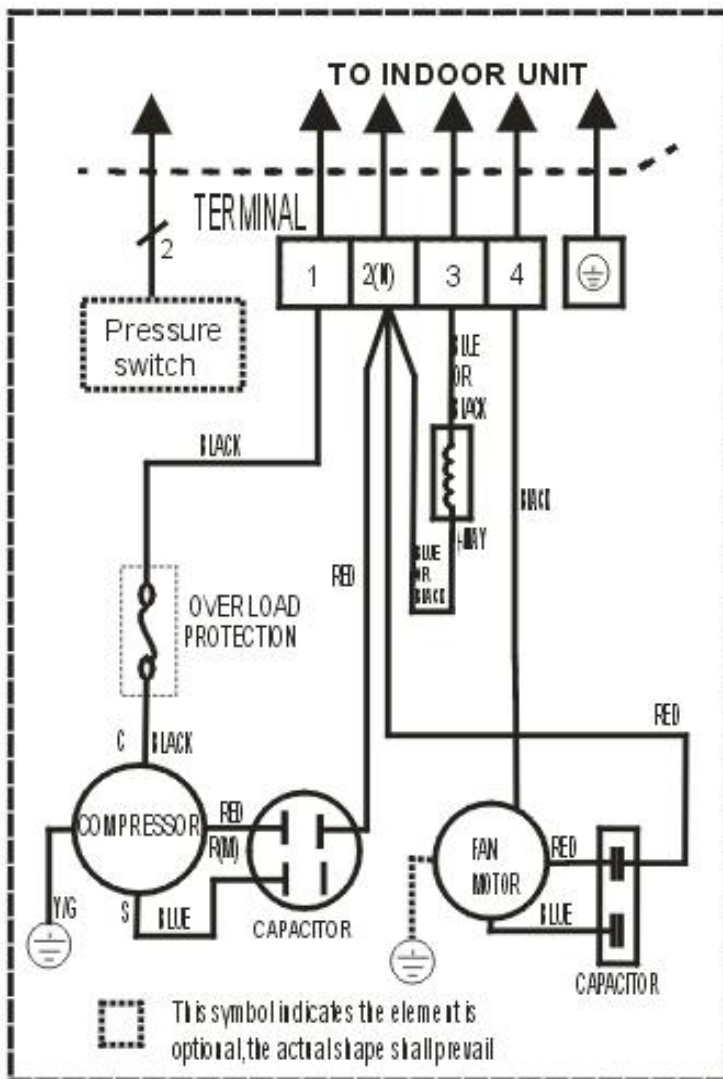


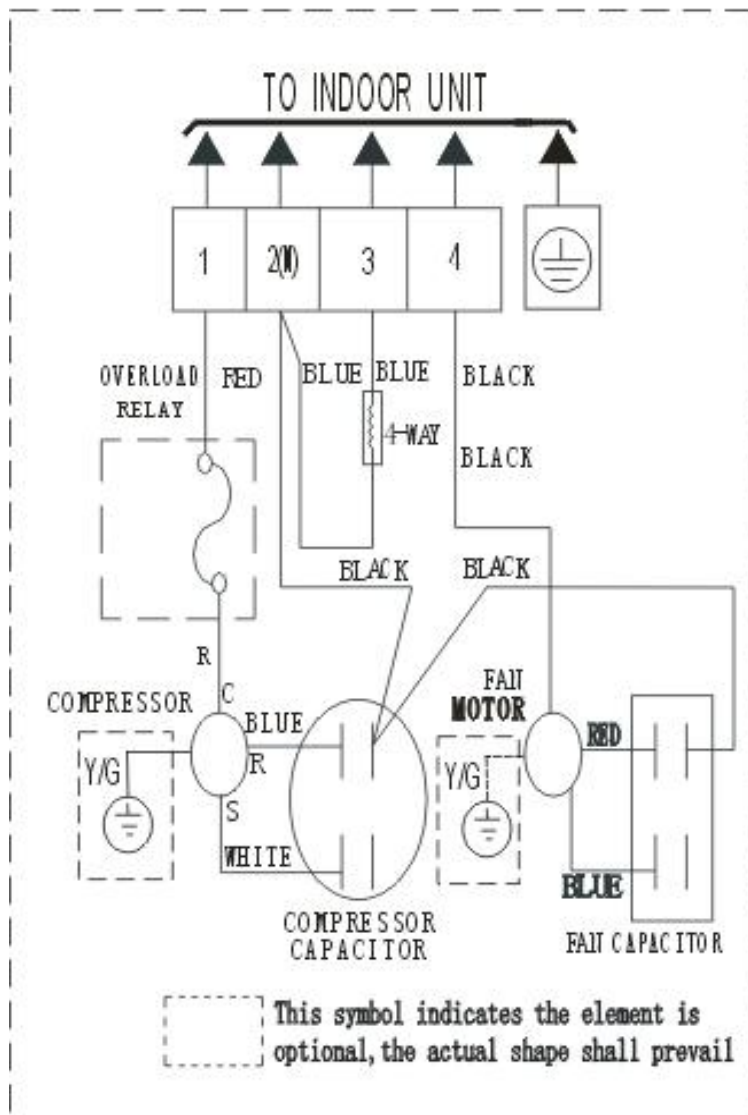

MOF1-21HN1-QB8W

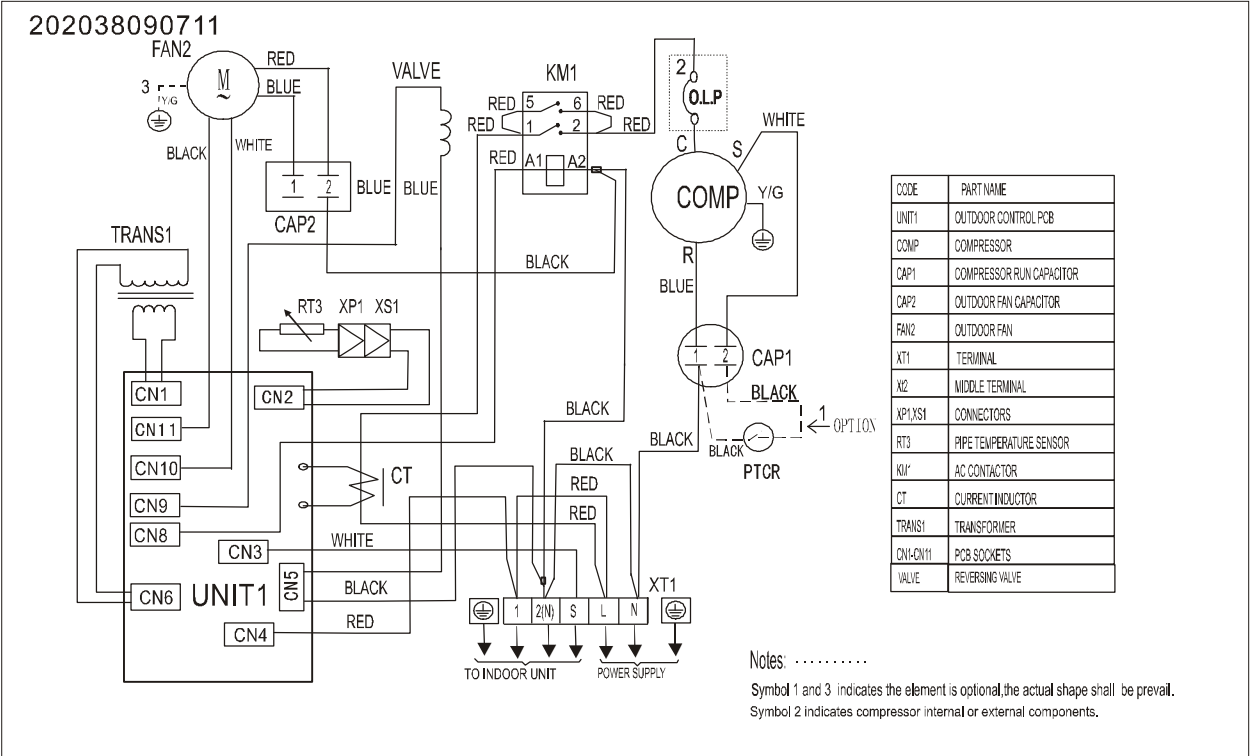

MOF3-24HN1-QB8W

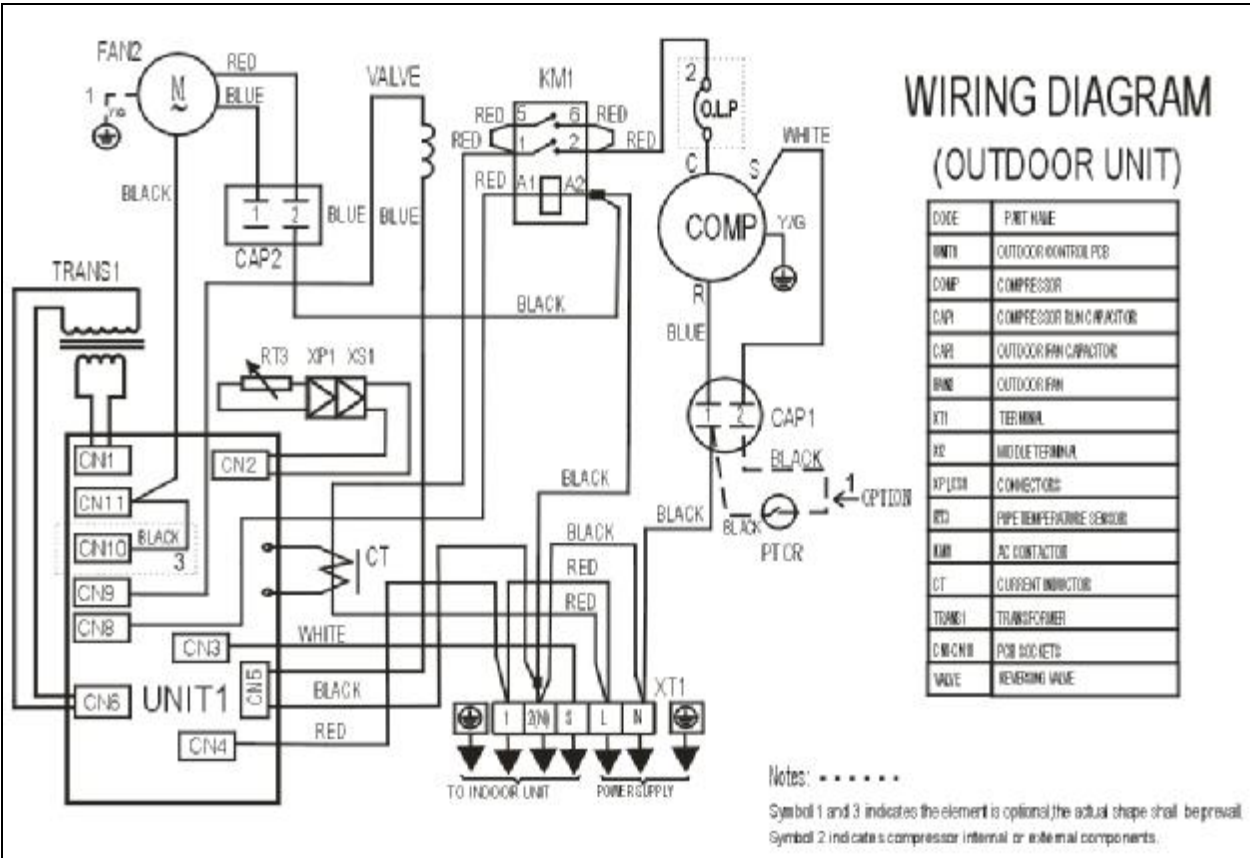

6. Installation details

6.1 Wrench torque sheet for installation

| Outside diameter | | Torque | Additional tightening torque |
|------------------|------|-----------------|------------------------------|
| mm | inch | N.cm | N.cm |
| Φ6.35 | 1/4 | 1500(153kgf.cm) | 1600(163kgf.cm) |
| Φ9.52 | 3/8 | 2500(255kgf.cm) | 2600(265kgf.cm) |
| Φ12.7 | 1/2 | 3500(357kgf.cm) | 3600(367kgf.cm) |
| Φ16 | 5/8 | 4500(459kgf.cm) | 4700(479kgf.cm) |
| Φ19 | 3/4 | 6500(663kgf.cm) | 6700(683kgf.cm) |

6.2 Connecting the cables

The power cord of connect should be selected according to the following specifications sheet.

| Rated current of appliance | Nominal cross-sectional area (mm ²) |
|----------------------------|---|
| >3 and ≤6 | 0.75 |
| >6 and ≤10 | 1.0 |
| >10 and ≤16 | 1.5 |
| >16 and ≤25 | 2.5 |



The cable size and the current of the fuse or switch are determined by the maximum current indicated on the nameplate which located on the side panel of the unit. Please refer to the nameplate before selecting the cable, fuse and switch.

6.3 Pipe length and the elevation

The pipe length and refrigerant amount:

| Model | Connective pipe length | Air purging | Additional amount of refrigerant |
|-----------------|------------------------|-----------------|----------------------------------|
| All | Less than 5m | Use vacuum pump | ----- |
| MSX-07HRN1-QC2 | More than 5m | Use vacuum pump | (Pipe length – 5) × 20g/m |
| MSX-09HRN1-QC2 | | | |
| MSX-12HRN1-QC2 | | | |
| MSX-18HRN1-QC2 | | | |
| MSX-21HRN1-QB8W | More than 5m | Use vacuum pump | (Pipe length – 5) × 40g/m |
| MSX-24HRN1-QB8W | | | |

| Model | Standard length (m) | Max. Elevation B (m) | Max. Length A (m) |
|-----------------|---------------------|----------------------|-------------------|
| MSX-07HRN1-QC2 | 5 | 8 | 20 |
| MSX-09HRN1-QC2 | | | |
| MSX-12HRN1-QC2 | | | |
| MSX-18HRN1-QC2 | 5 | 10 | 25 |
| MSX-21HRN1-QB8W | | | |
| MSX-24HRN1-QB8W | | | |

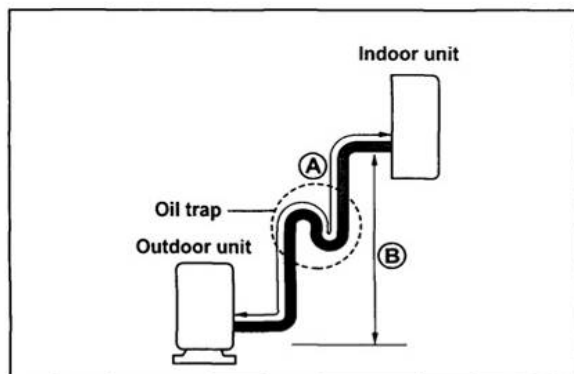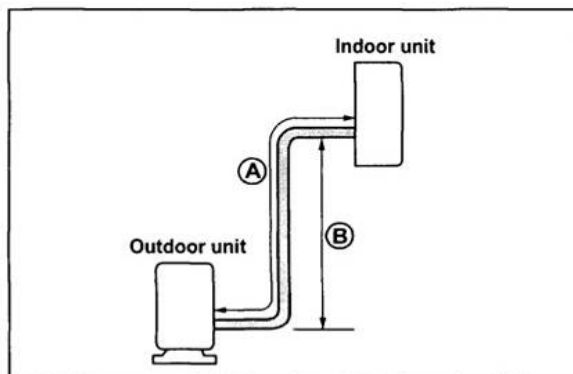

Caution:

The capacity test is based on the standard length and the maximum permissive length is based on the system reliability.

The oil trap should be installed per 5-7 meters.

6.4 Installation for the first time

Air and moisture in the refrigerant system have undesirable effects as below:


- Pressure in the system rises.
- Operating current rises.
- Cooling or heating efficiency drops.
- Moisture in the refrigerant circuit may freeze and block capillary tubing.
- Water may lead to corrosion of parts in the refrigerant system.

Therefore, the indoor units and the pipes between indoor and outdoor units must be leak tested and evacuated to remove gas and moisture from the system.

Gas leak check (Soap water method):

Apply soap water or a liquid neutral detergent on the indoor unit connections or outdoor unit connections by a soft brush to check for leakage of the connecting points of the piping. If bubbles come out, the pipes have leakage.

1. Air purging with vacuum pump

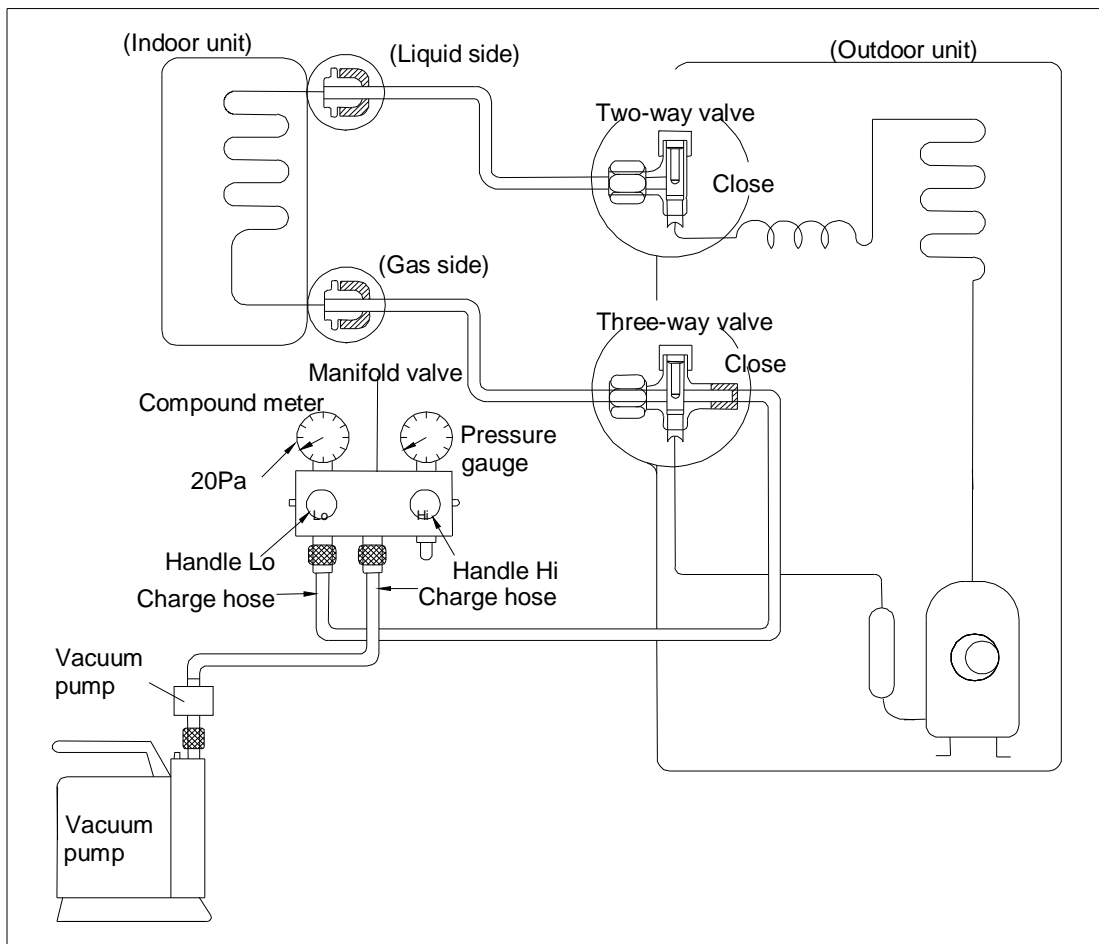

- 1) Completely tighten the flare nuts of the indoor and outdoor units, confirm that both the 2-way and 3-way valves are set to the closed position.
- 2) Connect the charge hose with the push pin of handle lo to the 3-way valves gas service port.
- 3) Connect the charge hose of handle hi connection to the vacuum pump.
- 4) Fully open the handle Lo of the manifold valve.
- 5) Operate the vacuum pump to evacuate.
- 6) Make evacuation for 30 minutes and check whether the compound meter indicates -0.1Mpa. If the meter does not indicate -0.1Mpa after pumping 30 minutes, it should be pumped 20 minutes more. If


the pressure can't achieve -0.1Mpa after pumping 50 minutes, please check if there are some leakage points.

Fully close the handle Lo valve of the manifold valve and stop the operation of the vacuum pump. Confirm that the gauge needle does not move (approximately 5 minutes after turning off the vacuum pump).

7) Turn the flare nut of the 3-way valves about 45° counterclockwise for 6 or 7 seconds after the gas coming out, then tighten the flare nut again. Make sure the pressure display in the pressure indicator is a little higher than the atmosphere pressure. Then remove the charge hose from the 3 way valve.

8) Fully open the 2 way valve and 3 way valve and securely tighten the cap of the 3 way valve.

2. Air purging by refrigerant

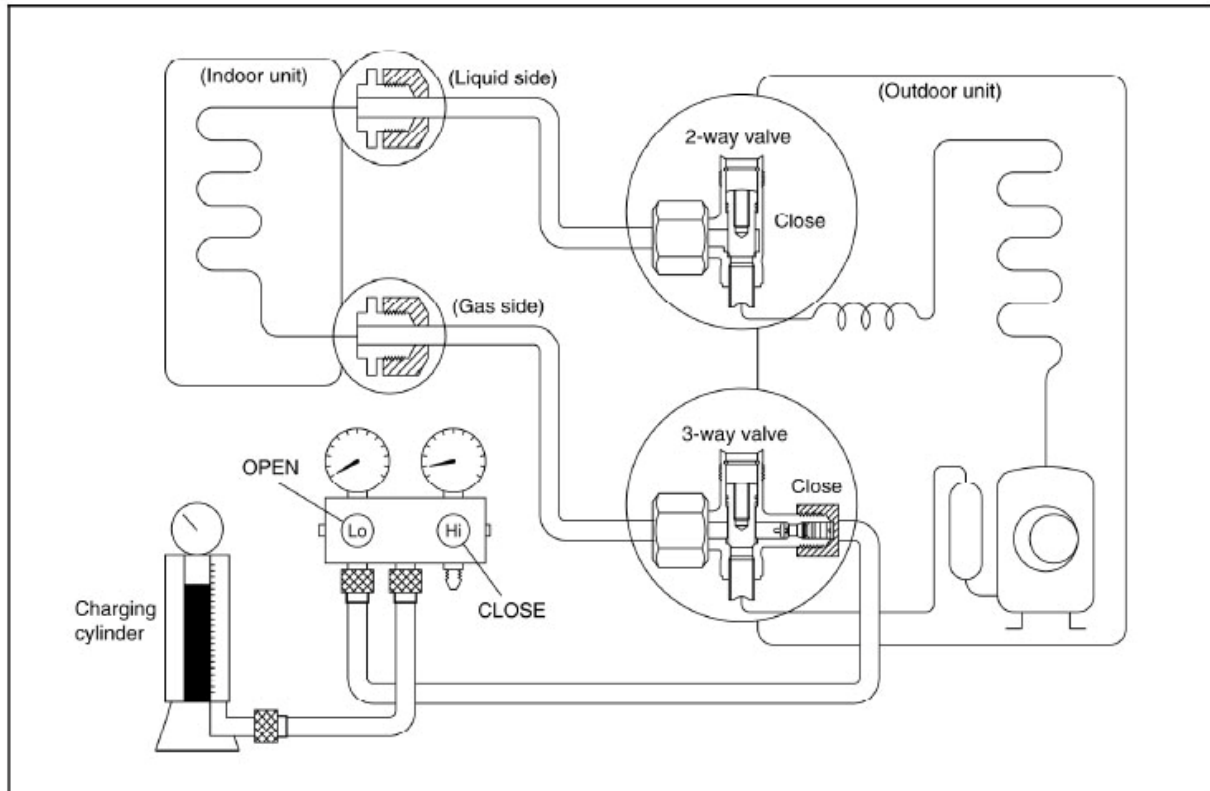

Procedure:

1). Confirm that both the 2-way and 3-way valves are set to the closed position.

2). Connect the charge set and a charging cylinder to the service port of the 3-way valve.

3). Air purging

Open the valves on the charging cylinder and the charge set. Purge the air by loosening the flare nut on the 2-way valve approximately 45° for 3 seconds then closing it for 1 minute; repeat 3 times.

After purging the air, use a torque wrench to tighten the flare nut on the 2-way valve.

4). Check the gas leakage

Check the flare connections for gas leakage.

5). Discharge the refrigerant

Close the valve on the charging cylinder and discharge the refrigerant by loosening the flare nut on the

2-way valve approximately 45' until the gauge indicates 0.3 to 0.5 Mpa.

6). Disconnect the charge set and the charging cylinder, and set the 2-way and 3-way valves to the open position.


Be sure to use a hexagonal wrench to operate the valve stems.

7). Mount the valve stems nuts and the service port cap

Be sure to use a torque wrench to tighten the service port cap to a torque 18N·m.

Be sure to check the gas leakage.

3. Adding the refrigerant if the pipe length >5m

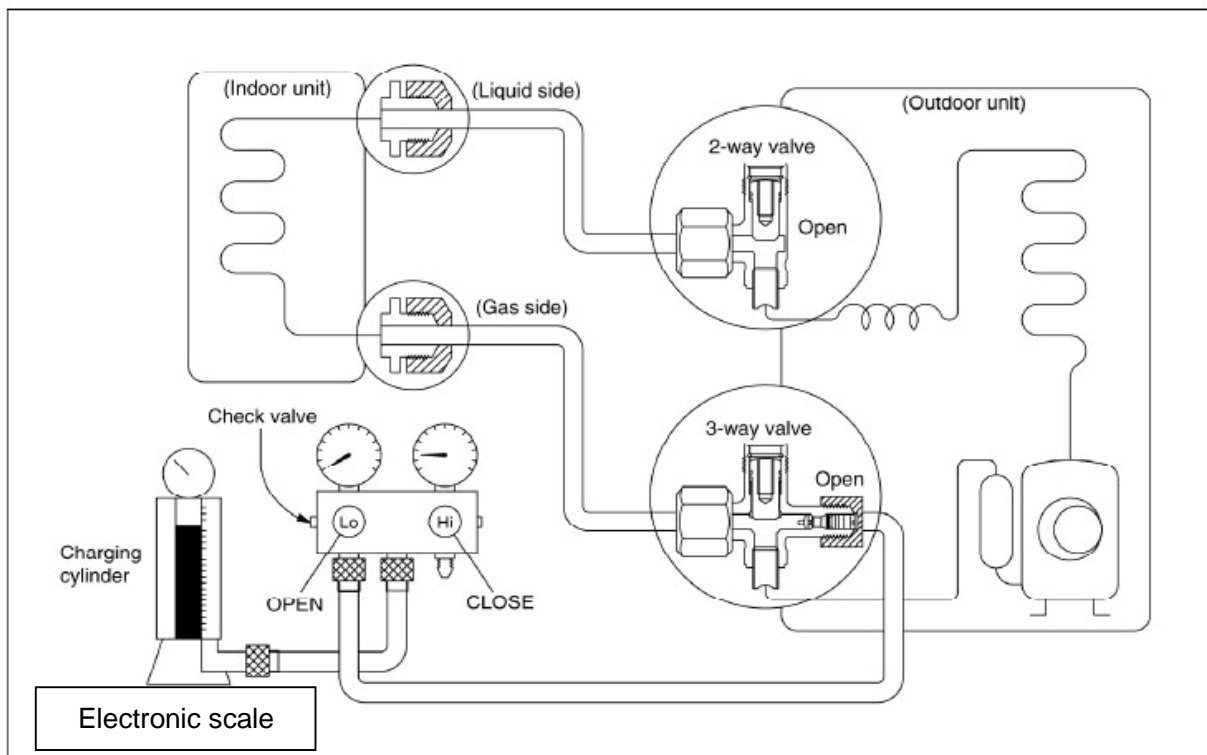

Procedure:

1). Connect the charge hose to the charging cylinder, open the 2-way valve and the 3-way valve.

Connect the charge hose which you disconnected from the vacuum pump to the valve at the bottom of the cylinder. If the refrigerant is R410A, make the cylinder bottom up to ensure the liquid charge.

2). Purge the air from the charge hose

Open the valve at the bottom of the cylinder and press the check valve on the charge set to purge the air (be careful of the liquid refrigerant).

3) Put the charging cylinder onto the electronic scale and record the weight.

4) Operate the air conditioner at the cooling mode.

5) Open the valves (Low side) on the charge set and charge the system with liquid refrigerant.

6). When the electronic scale displays the proper weight (refer to the table), disconnect the charge hose


from the 3-way valve's service port immediately and turn off the air conditioner before disconnecting the hose.

7). Mount the valve stem caps and the service port

Use torque wrench to tighten the service port cap to a torque of 18N.m.

Be sure to check for gas leakage.

6.5 Adding the refrigerant after running the system for many years

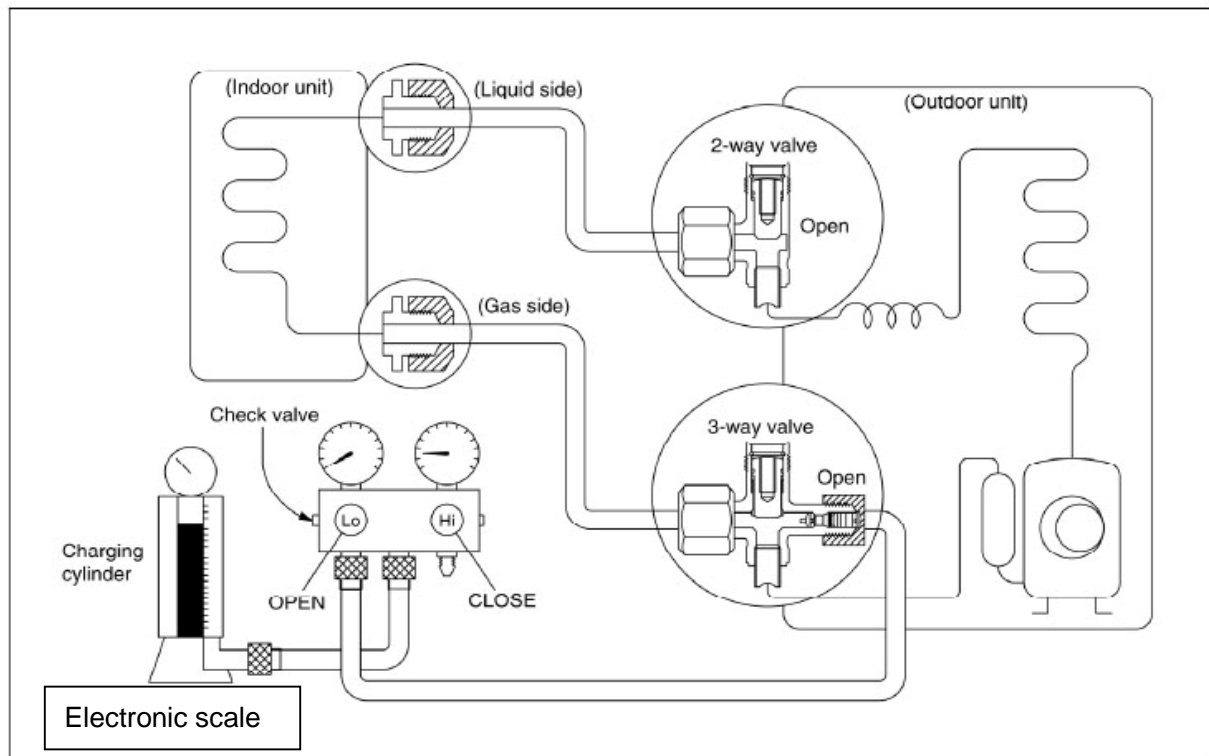

Procedure:

1). Connect the charge hose to the 3-way service port, open the 2-way valve and the 3-way valve.

Connect the charge hose to the valve at the bottom of the cylinder. If the refrigerant is R410A, make the cylinder bottom up to ensure liquid charge.

2). Purge the air from the charge hose

Open the valve at the bottom of the cylinder and press the check valve on the charge set to purge the air (be careful of the liquid refrigerant).

3) Put the charging cylinder onto the electronic scale and record the weight.

4) Operate the air conditioner at the cooling mode.

5) Open the valves (Low side) on the charge set and charge the system with liquid refrigerant.

6). When the electronic scale displays the proper weight (refer to the gauge and the pressure of the low

side), disconnect the charge hose from the 3-way valve's service port immediately and turn off the air conditioner before disconnecting the hose.


7). Mount the valve stem caps and the service port

Use torque wrench to tighten the service port cap to a torque of 18N.m.

Be sure to check for gas leakage.

6.6 Re-installation while the indoor unit need to be repaired

1. Collecting the refrigerant into the outdoor unit

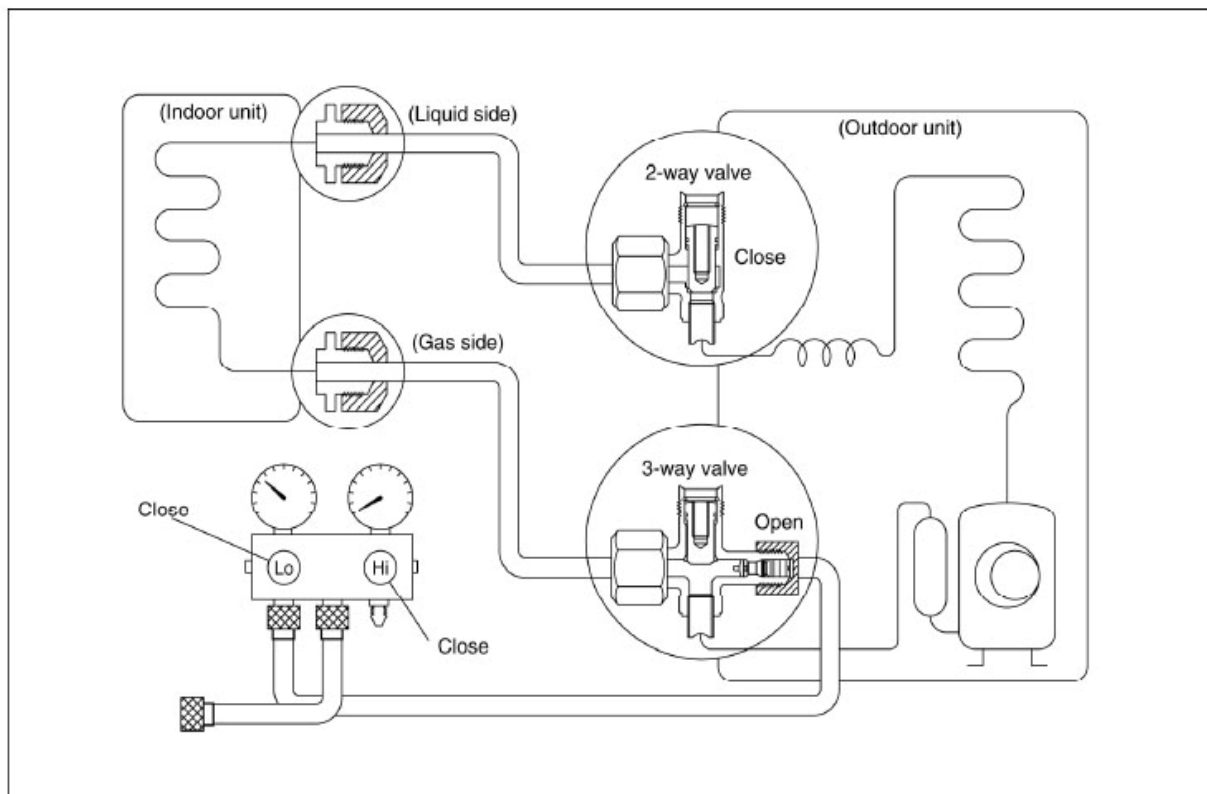

Procedure

1). Confirm that both the 2-way and 3-way valves are set to the opened position.

Remove the valve stem caps and confirm that the valve stems are in the opened position.

Be sure to use a hexagonal wrench to operate the valve stems.

2). Connect the charge hose with the push pin of handle Lo to the 3-way valves gas service port.

3). Air purging of the charge hose

Open the handle Lo valve of the manifold valve slightly to purge air from the charge hose for 5 seconds and then close it quickly.

4). Set the 2-way valve to the close position.

5). Operate the air conditioner at the cooling cycle and stop it when the gauge indicates 0.1MPa.

6). Set the 3-way valve to the closed position immediately.


Do this quickly so that the gauge ends up indicating 0.3 to 0.5Mpa.

Disconnect the charge set, and tighten the 2-way and 3-way valve's stem nuts.

Use a torque wrench to tighten the 3-way valves service port cap to a torque of 1.8 kgf.m.

Be sure to check for gas leakage.

2. Air purging by the refrigerant

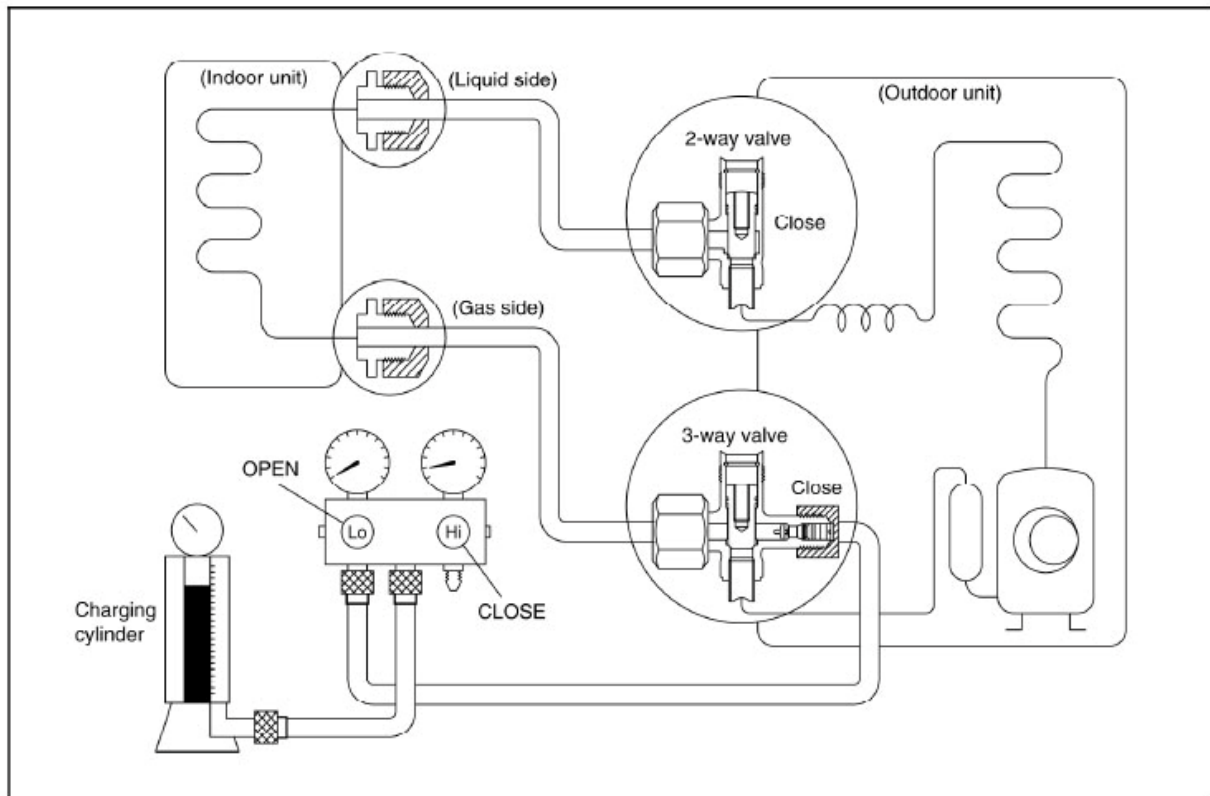

Procedure:

1). Confirm that both the 2-way and 3-way valves are set to the closed position.

2). Connect the charge set and a charging cylinder to the service port of the 3-way valve.

Leave the valve on the charging cylinder closed.

3). Air purging

Open the valves on the charging cylinder and the charge set. Purge the air by loosening the flare nut on the 2-way valve approximately 45° for 3 seconds then closing it for 1 minute; repeat 3 times.

After purging the air, use a torque wrench to tighten the flare nut on the 2-way valve.

4). Check the gas leakage

Check the flare connections for gas leakage.

5). Discharge the refrigerant

Close the valve on the charging cylinder and discharge the refrigerant by loosening the flare nut on the

2-way valve approximately 45' until the gauge indicates 0.3 to 0.5 Mpa.

6). Disconnect the charge set and the charging cylinder, and set the 2-way and 3-way valves to the open position.

Be sure to use a hexagonal wrench to operate the valve stems.


7). Mount the valve stems nuts and the service port cap.

Be sure to use a torque wrench to tighten the service port cap to a torque 18N.m.

Be sure to check the gas leakage.

6.7 Re-installation while the outdoor unit need to be repaired

1. Evacuation for the whole system

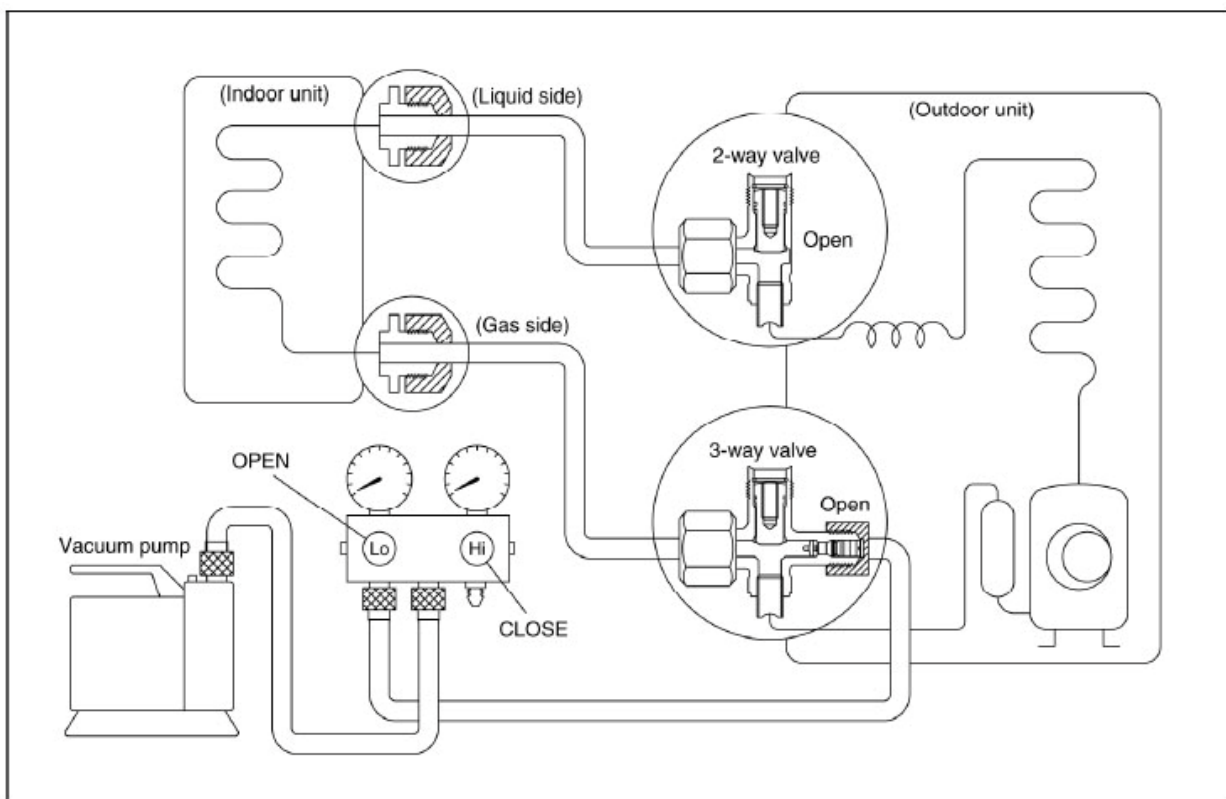

Procedure:

1). Confirm that both the 2-way and 3-way valves are set to the opened position.

2). Connect the vacuum pump to 3-way valve's service port.


3). Evacuation for approximately one hour

Confirm that the compound meter indicates -0.1Mpa.

4). Close the valve (Low side) on the charge set, turn off the vacuum pump, and confirm that the gauge needle does not move (approximately 5 minutes after turning off the vacuum pump).

5). Disconnect the charge hose from the vacuum pump.

2. Refrigerant charging

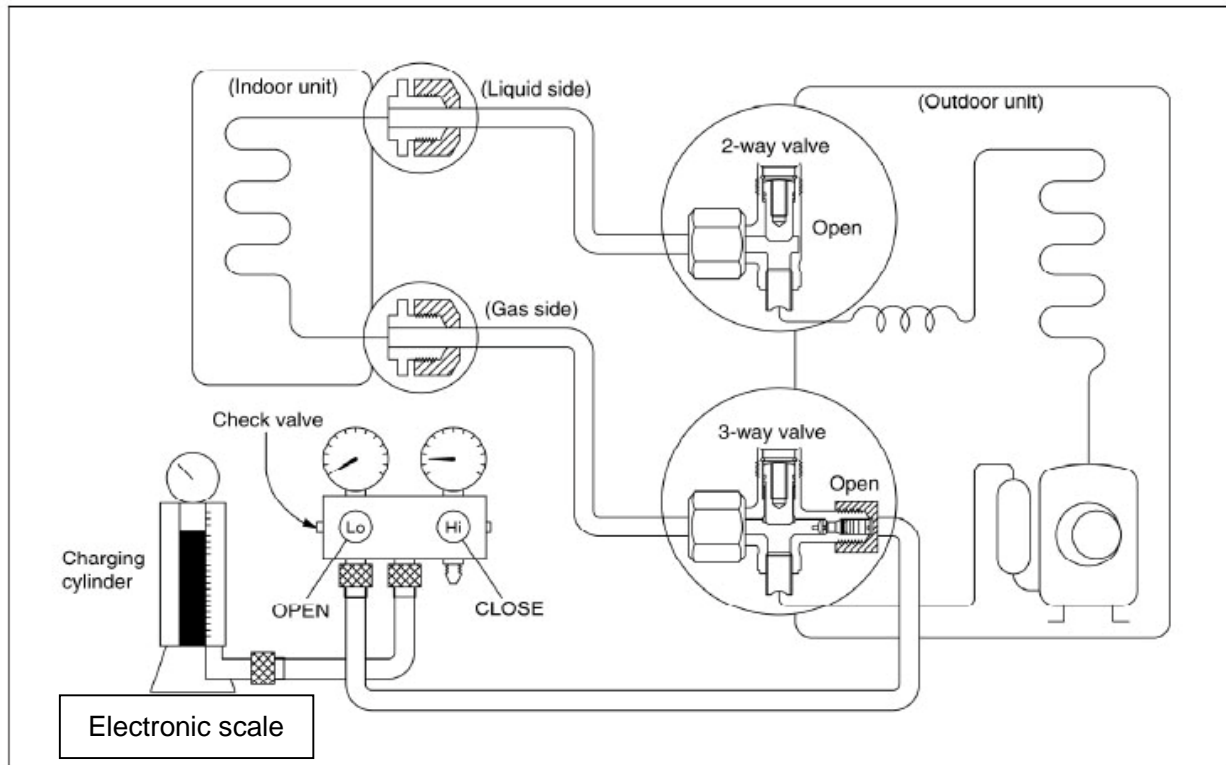

Procedure:

1). Connect the charge hose to the charging cylinder, open the 2-way valve and the 3-way valve.

Connect the charge hose which you disconnected from the vacuum pump to the valve at the bottom of the cylinder. If the refrigerant is R410A, make the cylinder bottom up to ensure liquid charge.

2). Purge the air from the charge hose

Open the valve at the bottom of the cylinder and press the check valve on the charge set to purge the air (be careful of the liquid refrigerant).

3) Put the charging cylinder onto the electronic scale and record the weight.

4). Open the valves (Low side) on the charge set and charge the system with liquid refrigerant.

If the system cannot be charge with the specified amount of refrigerant, or can be charged with a little at a time (approximately 150g each time) , operating the air conditioner in the cooling cycle; however, one time is not sufficient, wait approximately 1 minute and then repeat the procedure.

5).When the electronic scale displays the proper weight, disconnect the charge hose from the 3-way valve's service port immediately.

If the system has been charged with liquid refrigerant while operating the air conditioner, turn off the air conditioner before disconnecting the hose.

6). Mounted the valve stem caps and the service port

Use torque wrench to tighten the service port cap to a torque of 18N.m.

Be sure to check for gas leakage.

7. Operation characteristics

| Model Temperature | Cooling operation | Heating operation | Drying operation |
|----------------------|--|-------------------|---|
| Room temperature | 17°C ~ 32°C | 0°C ~ 30°C | 10°C ~ 32°C 17°C ~ 32°C |
| Outdoor temperature | 18°C ~ 43°C | -7°C ~ 24°C | 11°C ~ 43°C 18°C ~ 43°C |
| | (-7°C ~ 43°C : For the models with low temperature cooling system) | | 18°C ~ 52°C (For special tropical models) |
| | (18°C ~ 52°C : For special tropical models) | | |

CAUTION:

1. If air conditioner is used outside of the above conditions, certain safety protection features may come into operation and cause the unit to function abnormally.
2. Room relative humidity less than 80%. If the air conditioner operates in excess of this figure, the surface of the air conditioner may attract condensation. Please set the vertical air flow louver to its maximum angle (vertically to the floor), and set HIGH fan mode.
3. Optimum performance will be achieved within this operating temperature.

8. Electronic function

8.1 Abbreviation

T1: Indoor ambient temperature

T2: Coil temperature of indoor heat exchanger


T3: Coil temperature of outdoor heat exchanger

T4: Outdoor ambient temperature

T5: Compressor discharge temperature


8.2 Display function

Icon explanation on indoor display board.

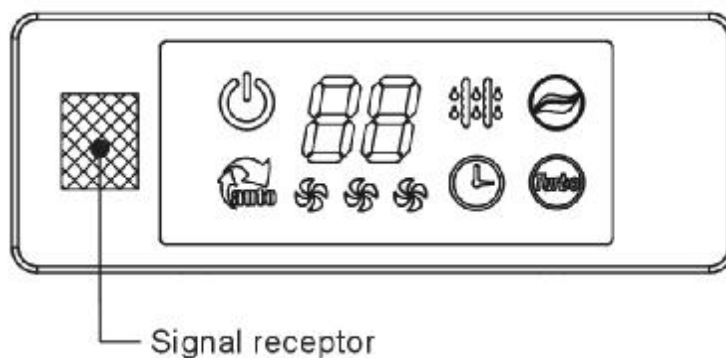

ON/OFF indicator

This indicator illuminates when the air conditioner is in operation.



PRE.-DEF. Indicator (For Cooling & Heating models only)

This indicator illuminates when the air conditioner starts defrosting automatically or when the warm air control feature is activated in heating mode.




Auto Mode

This indicator illuminates when the air conditioner is in Auto Mode.



Turbo indicator

This indicator illuminates when the air conditioner is in turbo operation.



TEMPERATURE indicator

Usually it displays the temperature settings.




TIMER indicator

This indicator illuminates when TIMER is set ON/OFF.



FAN SPEED indicator

This indicator illuminates when change the fan speed.



Ionizer (Plasma) function indicator

This indicator illuminates when Ionizer (Plasma) function is on.


8.3 Main Protection

8.3.1 Time Delay at restart for compressor.

8.3.2 Fan Speed is out of control. (only for MSX-07HRN1-QC2, MSX-09HRN1-QC2, MSX-12HRN1-QC2, MSX-18HRN1-QC2 models)

---When Indoor Fan Speed keeps too low or too high for certain time, the unit will stop and the LED will display the failure

8.3.3 Current protection

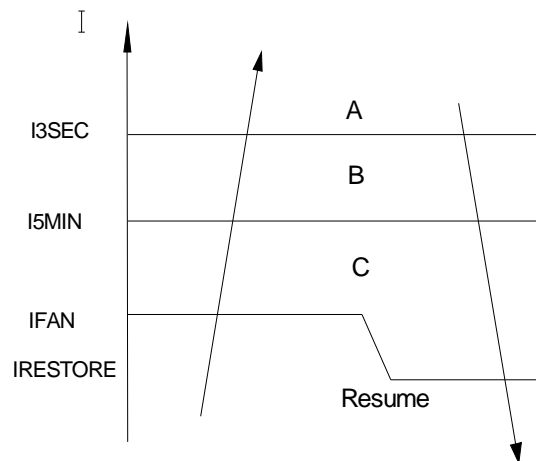

A zone : The current exceeds I_{3SEC} for 5 seconds, the compressor and outdoor fan will shut off.

B zone: The current exceeds I_{5min} for 5 minutes, the compressor and outdoor fan will shut off.

C zone: The current exceeds I_{FAN} , the outdoor fan will shut off if AC is in heating mode. If AC is in cooling mode, the indoor fan will run at low speed.

$I_{3SEC} = 7.0A$, $I_{5min} = 6.0A$, $I_{FAN} = 5.0A$, $I_{RESTORE} = 6.5A$ for MSX-07HRN1-QC2 model.

$I_{3SEC} = 10.0A$, $I_{5min} = 7.5A$, $I_{FAN} = 6.0A$, $I_{RESTORE} = 5.0A$ for MSX-09HRN1-QC2 model.

$I_{3SEC} = 12.0A$, $I_{5min} = 8.5A$, $I_{FAN} = 7.5A$, $I_{RESTORE} = 6.5A$ for MSX-12HRN1-QC2 model.

$I_{3SEC} = 19.5A$, $I_{5min} = 17.0A$, $I_{FAN} = 15.0A$, $I_{RESTORE} = 13.0A$ for MSX-18HRN1-QC2 model.

$I_{3SEC} = 22.0A$, $I_{5min} = 20.0A$, $I_{FAN} = 16.0A$, $I_{RESTORE} = 14.0A$ for MSX-21HRN1-QB8W model.

$I_{3SEC} = 26.0A$, $I_{5min} = 24.0A$, $I_{FAN} = 19.0A$, $I_{RESTORE} = 17.0A$ for MSX-24HRN1-QB8W model.

8.3.4 Zero crossing detection error protection (only for MSX-07HRN1-QC2, MSX-09HRN1-QC2, MSX-12HRN1-QC2, MSX-18HRN1-QC2 models)

If AC can not detect zero crossing signal for 4 minutes or the zero crossing signal time interval is not correct, the unit will stop and the LED will display the failure. The correct zero crossing signal time interval should be between 6-13ms.


8.3.5 Indoor / outdoor units communication protection(only for MSX-21HRN1-QB8W, MSX-24HRN1-QB8W model)

If the indoor units can not receive the feedback signal from the outdoor units for 2 minutes, the AC will stop and display the failure.

8.4 Operation Modes and Functions

8.4.1 Fan mode.

- (1) Outdoor fan and compressor stop.
- (2) Temperature setting function is disabled, and no setting temperature is displayed.
- (3) Indoor fan can be set to high/med/low/auto.
- (4) The louver operates same as in cooling mode.
- (5) Auto fan:

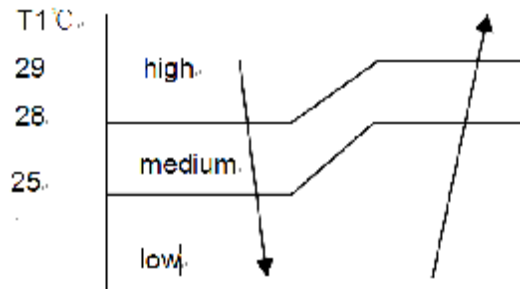


8.4.2 Cooling Mode

8.4.2.1 Compressor running rules:

Once the compressor starts up, it will follow the below rules:

When indoor room temp. T_1 is lower than T_n , the compressor and outdoor fan will shut off. When T_1 is higher than T_m , the compressor and outdoor fan will start up.

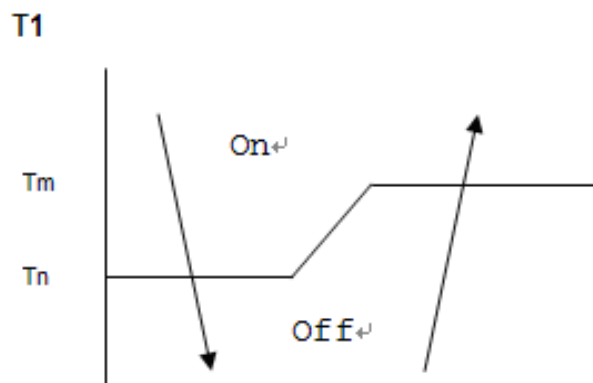

$T_m = T_s$, $T_n = T_s - 2$ for MSX-07HRN1-QC2, MSX-09HRN1-QC2, MSX-12HRN1-QC2, MSX-18HRN1-QC2 models.

$T_m = T_s + 1$, $T_n = T_s$ for MSX-21HRN1-QB8W, MSX-24HRN1-QB8W model.

8.4.2.2 Outdoor fan running rules:


The On-off outdoor units have single fan speed. The outdoor fan will run following the compressor except when AC is in evaporator high temp. protection in heating mode, condenser high temp.

protection in cooling mode, defrosting mode and the current protection.


8.4.2.3 Indoor fan running rules

In cooling mode, indoor fan runs all the time and the speed can be selected as high, medium, low and auto.

The auto fan:

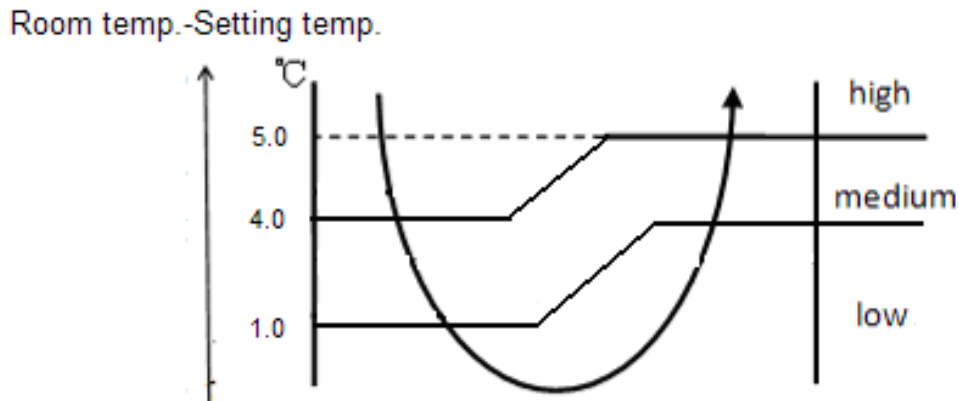

8.4.2.4 Evaporator low temperature T2 protection.

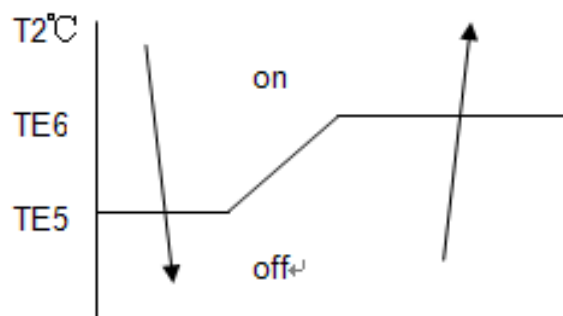

When the evaporator coil temp. T2 keeps lower than TE5 for 5 minutes, the compressor and outdoor fan will shut off.

When T2 is higher than TE6, the compressor and outdoor fan will restart up.

While TE5=4°C, TE6=10°C for MSX-07HRN1-QC2, MSX-09HRN1-QC2(2T0032300007


2T0032300007), MSX-12HRN1-QC2(2T0032500006),

TE5=2°C, TE6=7°C for MSX-09HRN1-QC2(2T0032300534), MSX-12HRN1-QC2(2T0032500185),

MSX-18HRN1-QC2 models;

TE5=2°C, TE6=12°C for MSX-21HRN1-QB8W, MSX-24HRN1-QB8W models.

8.4.2.5 Condenser high temperature T3 protection.(only for MSX-21HRN1-QB8W, MSX-24HRN1-QB8W model)

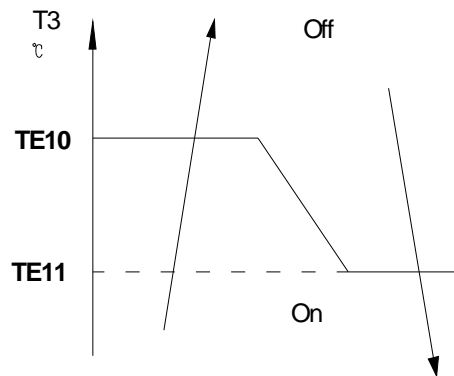

When $T3 \geq TE10$, the compressor will shut off. When $T3 < TE11$, the compressor will restart.


$TE10 = 65^{\circ}\text{C}$, $TE11 = 55^{\circ}\text{C}$.

8.4.3 Heating Mode

8.4.3.1 Compressor running rules:

Every time, the compressors start up, they will keep running for Δt minutes (protections are active) and then follow the below rules. (While $\Delta t = 7$.)

When indoor room temp. $T1$ is higher than Tj , the compressor and outdoor fan will shut off. When $T1$ is lower than Tk , the compressor and outdoor fan will start up.

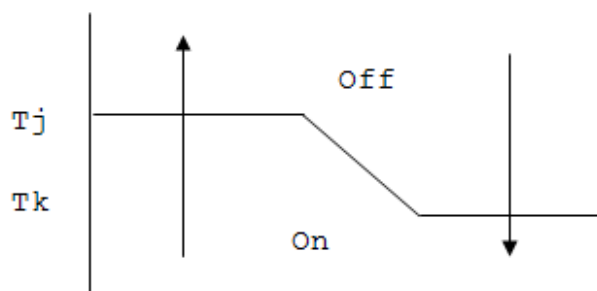

$$Tj = Ts + 6$$

$Tk = Ts + 4$. for MSX-07HRN1-QC2, MSX-09HRN1-QC2, MSX-12HRN1-QC2, MSX-18HRN1-QC2 models.

$$Tj = Ts + 3$$

$Tk = Ts + 2$. for MSX-21HRN1-QB8W, MSX-24HRN1-QB8W models.

8.4.3.2 Outdoor fan running rules:

The outdoor units have single fan speed. The outdoor fan will run following the compressor except when AC is in evaporator high temp. protection in heating mode, condenser high temp. protection in

cooling mode ,defrosting mode and the current protection.

8.4.3.3 Indoor fan running rules:

When the compressor is off because off the room temperature rising or the protection, the indoor fan will run at breeze.

When the compressor is on, the indoor fan can be set to high/med/low/auto. And the anti-cold wind function has the priority.

Anti-cold wind function:

When evaporator coil temp.T2 is getting higher,


$T2 > TE2$, the indoor fan will run at setting speed.

$TE1 < T2 < TE2$, the indoor fan will run at low speed.

When T2 is getting lower,

$TE4 < T2 < TE3$,the indoor fan will run at low speed.

$T2 < TE4$, the indoor fan will shut off.

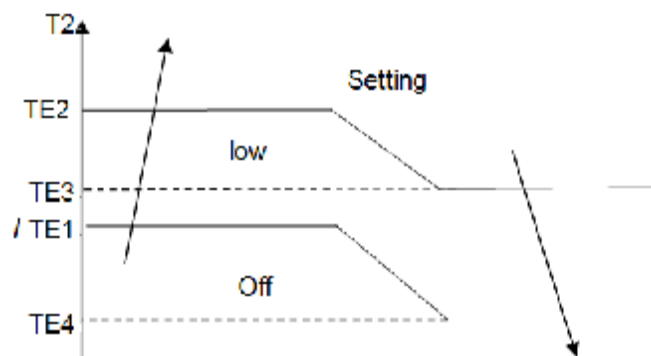

While $TE1=28^{\circ}\text{C}$, $TE2=38^{\circ}\text{C}$, $TE3=30^{\circ}\text{C}$, $TE4=20^{\circ}\text{C}$ for MSX-07HRN1-QC2, MSX-09HRN1-QC2 models.


$TE1=31^{\circ}\text{C}$, $TE2=36^{\circ}\text{C}$, $TE3=30^{\circ}\text{C}$, $TE4=20^{\circ}\text{C}$ for MSX-12HRN1-QC2 model(2T0032500185)

$TE1=31^{\circ}\text{C}$, $TE2=36^{\circ}\text{C}$, $TE3=30^{\circ}\text{C}$, $TE4=22^{\circ}\text{C}$ for MSX-12HRN1-QC2 model(2T0032500006)

$TE1=34^{\circ}\text{C}$, $TE2=37^{\circ}\text{C}$, $TE3=30^{\circ}\text{C}$, $TE4=20^{\circ}\text{C}$ for MSX-18HRN1-QC2 model.

$TE1=25^{\circ}\text{C}$, $TE2=32^{\circ}\text{C}$, $TE3=30^{\circ}\text{C}$, $TE4=20^{\circ}\text{C}$ for MSX-21HRN1-QB8W, MSX-24HRN1-QB8W models.

Auto fan action:

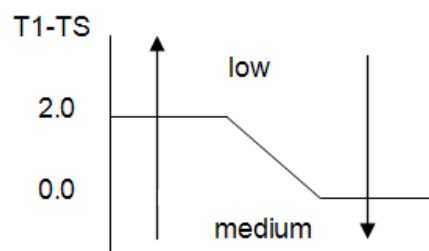

When $T_1 - T_s > 2^\circ\text{C}$, the indoor fan will run at low speed.

When $T_1 - T_s \leq 0^\circ\text{C}$, the indoor fan will run at medium speed.

8.4.3.4 Defrosting mode:

For MSX-07HRN1-QC2, MSX-09HRN1-QC2, MSX-12HRN1-QC2, MSX-18HRN1-QC2 models:

I Condition of defrosting:

AC will enter defrosting mode if any of the following items ①&② is satisfied:

① AC meets A+B1 or A+B2.

A: The cumulative compressor running time is over 42 minutes.

B1: The cumulative compressor running time is between 42~120 minutes. Meanwhile the $T_2 - T_1$ meet the below table.

| $^\circ\text{C}$ | $T_2 - T_1$ |
|------------------|--|
| High speed | $< TH_{\text{DEFROST}}$ |
| Medium speed | $< TM_{\text{DEFROST}}$ |
| Low speed | $< TL_{\text{DEFROST}}$ |
| Breeze/off | No need to compare the T_2 and T_1 |

B2: The cumulative compressor running time is over 120 minutes. Meanwhile the $T_2 - T_1$ meet the below table.

| $^\circ\text{C}$ | $T_2 - T_1$ |
|------------------|--|
| High speed | $< TH_{\text{DEFROST}} + 2$ |
| Medium speed | $< TM_{\text{DEFROST}} + 2$ |
| Low speed | $< TL_{\text{DEFROST}} + 2$ |
| Breeze/off | No need to compare the T_2 and T_1 |

② After the last defrosting, the time that the outdoor fan is off but the compressor is on in high T_2 protection cumulates up to 90 minutes.

While $TH_{\text{DEFROST}} = 14^\circ\text{C}$, $TM_{\text{DEFROST}} = 16^\circ\text{C}$, $TL_{\text{DEFROST}} = 17^\circ\text{C}$ for MSX-07HRN1-QC2 model.

$TH_{\text{DEFROST}} = 15^\circ\text{C}$, $TM_{\text{DEFROST}} = 17^\circ\text{C}$, $TL_{\text{DEFROST}} = 19^\circ\text{C}$ for MSX-09HRN1-QC2 model.

$TH_{\text{DEFROST}} = 14^\circ\text{C}$, $TM_{\text{DEFROST}} = 15^\circ\text{C}$, $TL_{\text{DEFROST}} = 16^\circ\text{C}$ for MSX-12HRN1-QC2 model.

$TH_{\text{DEFROST}} = 17^\circ\text{C}$, $TM_{\text{DEFROST}} = 18^\circ\text{C}$, $TL_{\text{DEFROST}} = 19^\circ\text{C}$ for MSX-18HRN1-QC2 model.

I Condition of ending defrosting:

If any one of the following items is satisfied, the defrosting will terminate and the machine will turn to normal heating mode.

- (1) The defrosting time is reached to the setting value.
- (2) The compressor current reaches or exceeds I_{DEFROST} for 7 seconds.

$I_{\text{DEFROST}}=3.5\text{A}$ for MSX-07HRN1-QC2 model, $I_{\text{DEFROST}}=4.5\text{A}$ for MSX-09HRN1-QC2 model, $I_{\text{DEFROST}}=5.0\text{A}$ for MSX-12HRN1-QC2 model. $I_{\text{DEFROST}}=8.5\text{A}$ for MSX-18HRN1-QC2 model.


About the setting defrosting time:

| | condition | runtime (minute) | Defrosting time (minute) |
|--------|-----------|---------------------------------|--------------------------|
| Case 1 | ①A、B1 | runtime ≤ 60 | DT1 |
| Case 2 | ①A、B1 | $60 < \text{runtime} \leq 80$ | DT1+1 |
| Case 3 | ①A、B1 | $80 < \text{runtime} \leq 95$ | DT1+2 |
| Case 4 | ①A、B1 | $95 < \text{runtime} \leq 110$ | DT1+3 |
| Case 5 | ①A、B1 | $110 < \text{runtime} \leq 120$ | DT1+4 |
| Case 6 | ①A、B2 | | DT1+5 |
| Case 7 | ② | | DT1+5 |

Note:

- ∅ From case1 to case 5, If case B happens before case A and lasts till case A happens, the setting defrosting time will be 10 minutes.
- ∅ If AC enter defrosting mode continuously three times from case 1 to case 5, the fourth defrosting time will be DT1 +5 minutes
- ∅ At the beginning 6.5 minutes of compressor running, AC will not enter the defrosting mode

I Defrosting action:

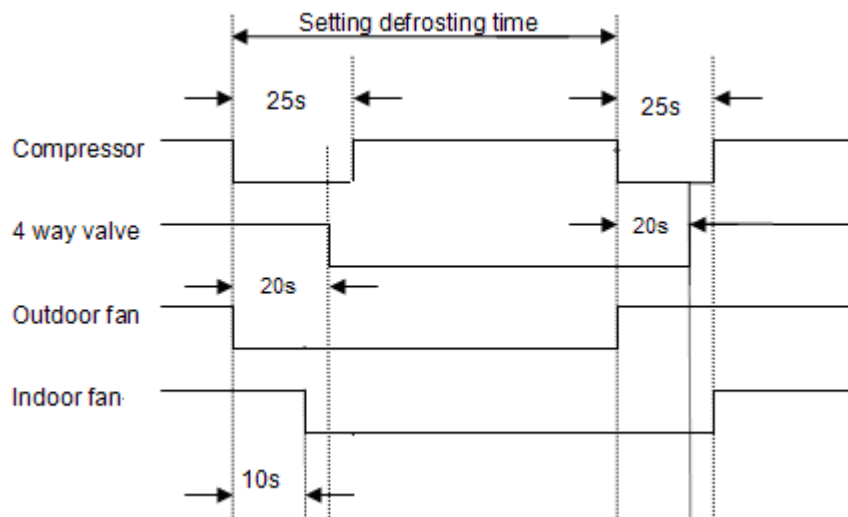

For MSX-21HRN1-QB8W,MSX-24HRN1-QB8W model:

I Condition of defrosting:

AC will enter defrosting mode if any of the following items is satisfied.

(1) When $T_3 < TC1^{\circ}\text{C}$, if the compressor keeps running over 45 minutes and $T_3 < TC3^{\circ}\text{C}$ for 3 minutes. While $TC1 = 0^{\circ}\text{C}$, $TC3 = -3^{\circ}\text{C}$.

(2) After the last defrosting, the time that the outdoor fan is off but the compressor is on in high T2 protection cumulates up to 90 minutes.


I Condition of ending defrosting:

If any one of the following items is satisfied, the defrosting will terminate and the machine will turn to normal heating mode.

(1) T_3 rises to be higher than $TC2$. $TC2 = 20^{\circ}\text{C}$.


(2) The machine has run for 10 minutes in defrosting.

I Defrosting action:

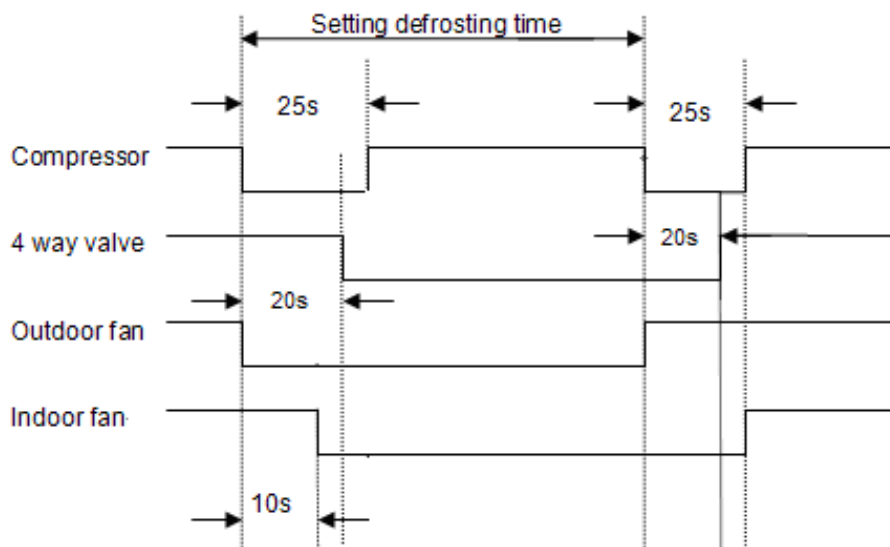

8.4.3.5 High evaporator coil temp.T2 protection:

For MSX-07HRN1-QC2 model, MSX-09HRN1-QC2, MSX-12HRN1-QC2, MSX-18HRN1-QC2 models:

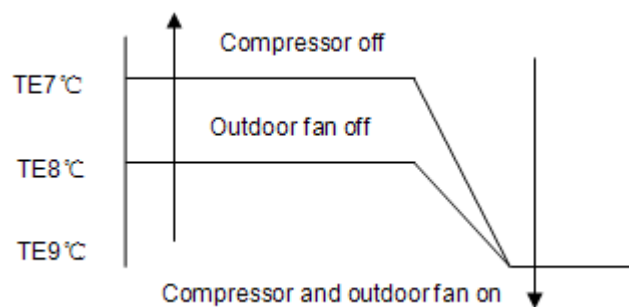


While $TE7 = 63^{\circ}\text{C}$, $TE8 = 53^{\circ}\text{C}$, $TE9 = 51^{\circ}\text{C}$ for MSX-07HRN1-QC2 model

TE7=63℃,TE8=56℃,TE9=52℃ for MSX-09HRN1-QC2 model,

TE7=63℃,TE8=53℃,TE9=52℃ for MSX-12HRN1-QC2 model.

TE7=63℃,TE8=53℃,TE9=50℃ for MSX-18HRN1-QC2 model.

For MSX-21HRN1-QB8W, MSX-24HRN1-QB8W models:

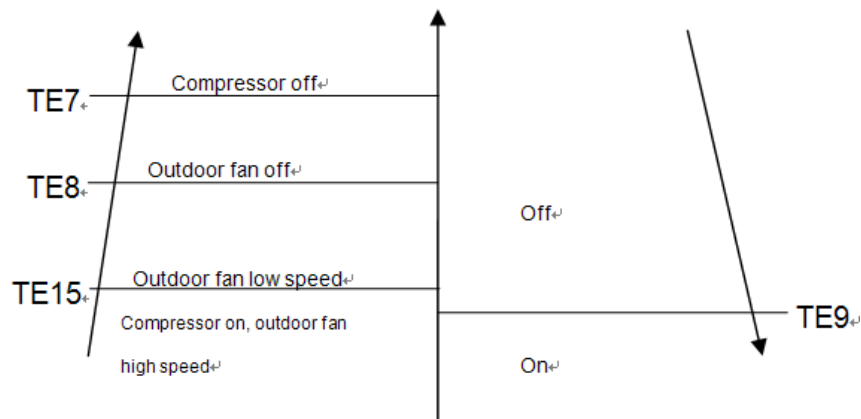

While TE7=63℃,TE8=54℃,TE9=50℃,TE15=53℃.

8.4.4 Auto-mode

The machine will choose cooling, heating or fan-only mode according to ΔT ($\Delta T = T1 - Ts$).

For MSX-07HRN1-QC2, MSX-09HRN1-QC2, MSX-12HRN1-QC2, MSX-18HRN1-QC2 models:

| | |
|---|--|
| $\Delta T = T1 - Ts$ | Running mode |
| $\Delta T > 2^{\circ}\text{C}$ | Cooling |
| $-3 \leq \Delta T \leq 2^{\circ}\text{C}$ | Fan-only |
| $\Delta T < -3^{\circ}\text{C}$ | Heating(for cooling only models, they will run at fan-only mode) |

For MSX-21HRN1-QB8W, MSX-24HRN1-QB8W models:

| | |
|--|--|
| $\Delta T = T1 - Ts$ | Running mode |
| $\Delta T > 2^{\circ}\text{C}$ | Cooling |
| $-1 < \Delta T \leq 2^{\circ}\text{C}$ | Fan-only |
| $\Delta T \leq -1^{\circ}\text{C}$ | Heating(for cooling only models ,they will run at fan-only mode) |

AC will run in auto mode in the below cases:

- (1) Press the forced auto button.
- (2) If AC is off, it will run in auto mode when timer on function is active.
- (3) After setting the mode, AC will run in auto mode if the compressor keeps not running for 20 (15 minutes for MSX-21HRN1-QB8W,MSX-24HRN1-QB8W models).

8.4.5 Drying mode

For MSX-07HRN1-QC2, MSX-09HRN1-QC2, MSX-12HRN1-QC2, MSX-18HRN1-QC2 models:

8.4.5.1 The indoor fan will run following the compressor. If the compressor is on ,the indoor fan will run at low speed. If the compressor is off, the indoor fan will run at breeze.

Running rules:

| No | Condition | Indoor fan | Compressor and outdoor fan |
|----|---------------------|---------------|-------------------------------|
| 1 | $T1 \geq TS+2$ | Low Breeze | ON 6 minutes OFF 4 minutes |
| 2 | $TS \leq T1 < TS+2$ | Low Breeze | ON 5 minutes OFF 5 minutes |
| 3 | $T1 < TS$ | Low Breeze | ON 4 minutes OFF 6 minutes |

8.4.5.2 In drying mode, if room temperature is lower than 10°C , the indoor fan will run at breeze while the compressor and outdoor fan will stop and not resume until room temperature exceeds 13°C .

8.4.5.3 System protection is active in this mode.


For MSX-21HRN1-QB8W, MSX-24HRN1-QB8W models:

8.4.5.4 The indoor fan will keep running at low speed.

8.4.5.5 The outdoor fan, compressor and all the protections are the same with cooling mode.

8.4.6 Forced operation function

Press the touch button continually, the AC will run as below sequence:

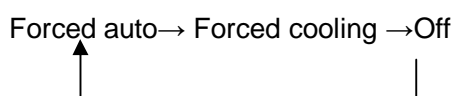

Forced cooling mode:

The compressor and outdoor fan keep running and the indoor fan runs at low speed. After running for 30 minutes, AC will turn to auto mode with 24°C setting temperature.

Forced auto mode:

The action of forced auto mode is the same as normal auto mode with 24°C setting temperature.

When AC receives signals, such as switch on, switch off, timer on, timer off, mode setting ,fan speed setting ,sleeping mode setting ,follow me setting, it will quit the forced operation.

- I The forced operation function can not be memorized if power off.

8.4.7 Timer function

8.4.7.1 Timing range is 24 hours.

8.4.7.2 Timer on. The machine will turn on automatically when reaching the setting time.

8.4.7.3 Timer off. The machine will turn off automatically when reaching the setting time.

8.4.7.4 Timer on/off. The machine will turn on automatically when reaching the setting "on" time, and then turn off automatically when reaching the setting "off" time.

8.4.7.5 Timer off/on. The machine will turn off automatically when reaching the setting "off" time, and then turn on automatically when reaching the setting "on" time.

8.4.7.6 The timer function will not change the AC current operation mode. Suppose users set the "timer off" function and AC is off now, the AC will keep the current running mode and then turn off when reaching the setting time.

8.4.7.7 The setting time is relative time.

8.4.8 Sleep function mode

8.4.8.1 Operation time in sleep mode is 7 hours. After 7 hours, the AC quits this mode and turns off.

8.4.8.2. Operation process in sleep mode is as follow:

After pressing ECONOMIC or SLEEP button on controller, the machine will turn into sleep mode.

When cooling, the setting temperature rises 1°C (be lower than 30°C) every one hour, 2 hours later the setting temperature stops rising and indoor fan is fixed as low speed.

When heating, the setting temperature decreases 1°C (be higher than 17°C) every one hour, 2 hours later the setting temperature stops rising and indoor fan is fixed as low speed. (Anti-cold wind function has the priority)

8.4.8.3 Timer setting is available.

8.4.8.4 When user uses timer off function in sleep mode (or sleep function in timer off mode), if the timing is less than 7 hours, sleep function will be cancelled when reaching the setting time. If the timing is more than 7 hours, the machine will not stop until reaches the setting time in sleep mode.

8.4.9 Auto-Restart function

The indoor unit is equipped with auto-restart function, which is carried out through an auto-restart module. In case of a sudden power failure, the module memorizes the setting conditions before the power failure. The unit will resume the previous operation setting (not including Swing function)

automatically after 3 minutes when power returns.

If the memorization condition is forced cooling mode, the unit will run in cooling mode for 30 minutes and then turn to auto mode as 24°C setting temp.

9. Troubleshooting

9.1 Indoor unit error display

For MSX-07HRN1-QC2, MSX-09HRN1-QC2, MSX-12HRN1-QC2, MSX-18HRN1-QC2 models:


| LED | Failure |
|-----|--|
| E1 | EEPROM error |
| E2 | Zero crossing detection error |
| E3 | Indoor fan speed has been out of control |
| E4 | Over current protection occurs 4 times. |
| E5 | The T1 sensor is open circuit or short circuit |
| E6 | The T2 sensor is open circuit or short circuit |

For MSX-21HRN1-QB8W, MSX-24HRN1-QB8W models:


| LED | Failure |
|-----|--|
| E1 | EEPROM error |
| E4 | Over current protection occurs 4 times. |
| E5 | The T1 sensor is open circuit or short circuit |
| E6 | The T2 sensor is open circuit or short circuit |
| E7 | The T3 sensor is open circuit or short circuit |
| E9 | Indoor / outdoor units communication error |

9.2 Diagnosis and Solution


9.2.1 Indoor fan speed out of control diagnosis and solution

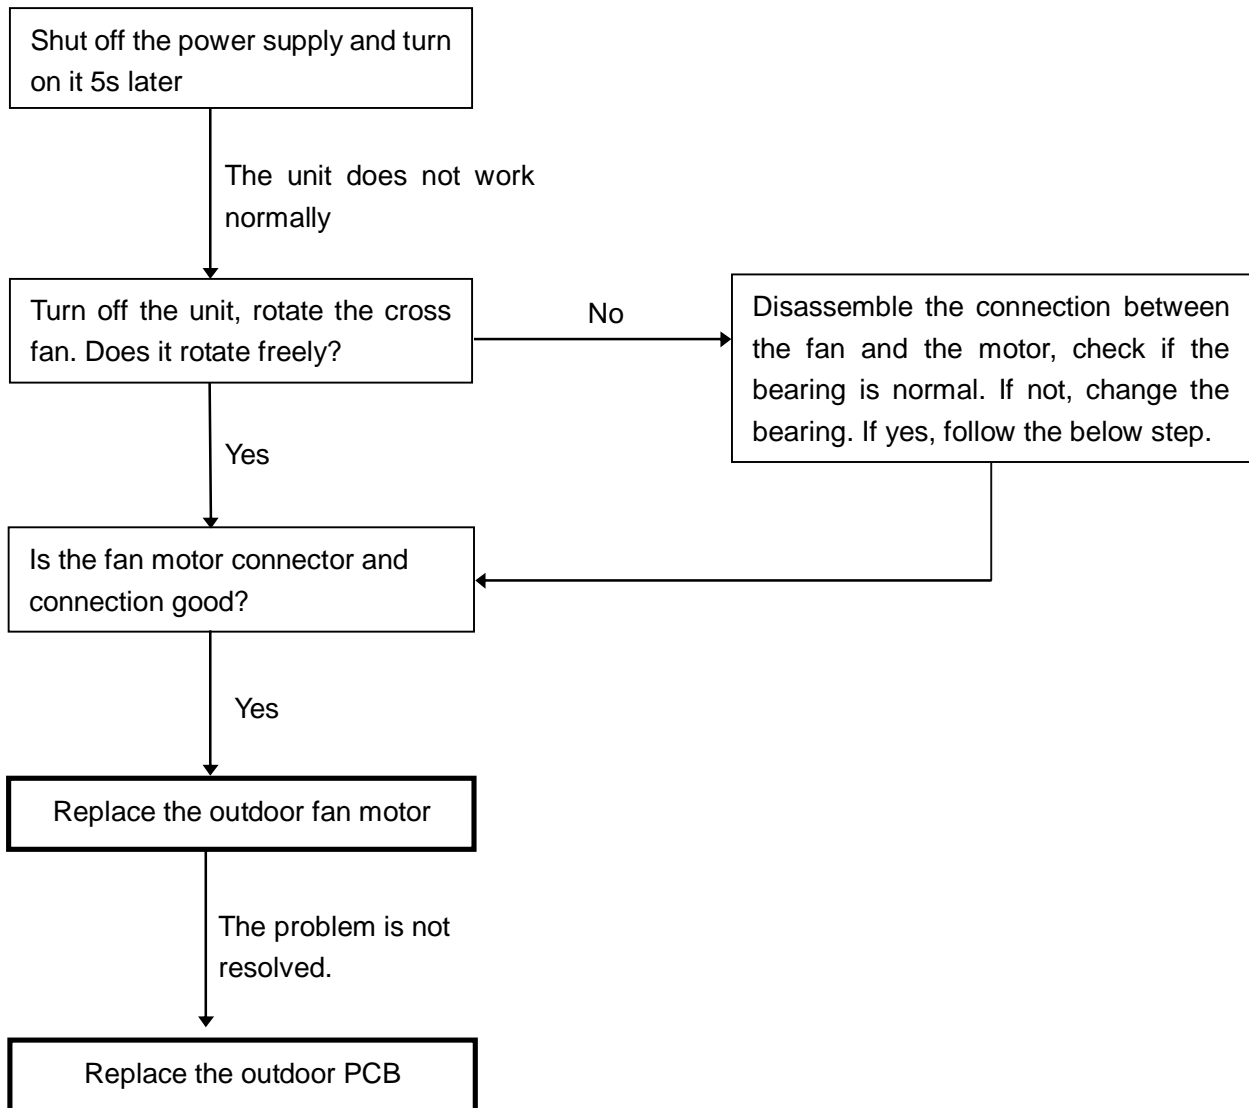


9.2.2 Open or short circuit of temperature sensor diagnosis and solution.

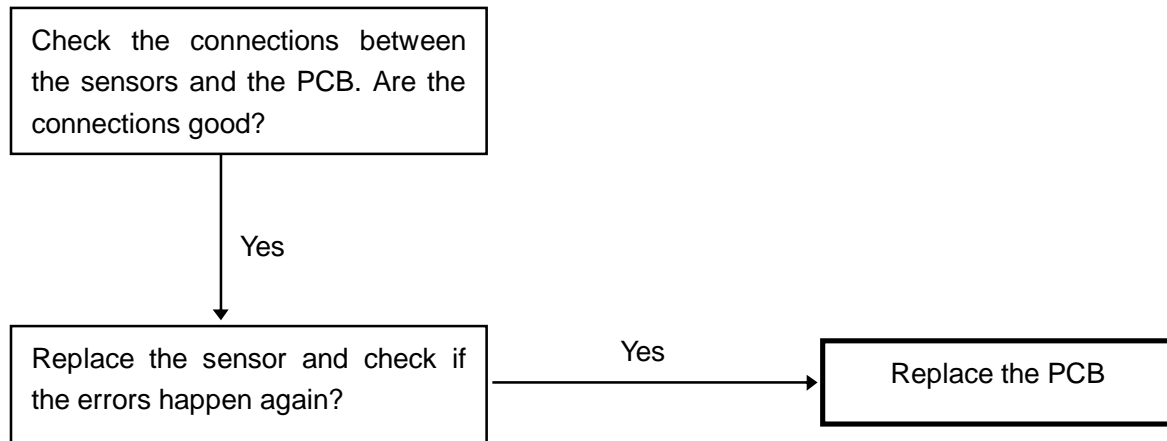

9.2.3 Over current protection occurs 4 times.

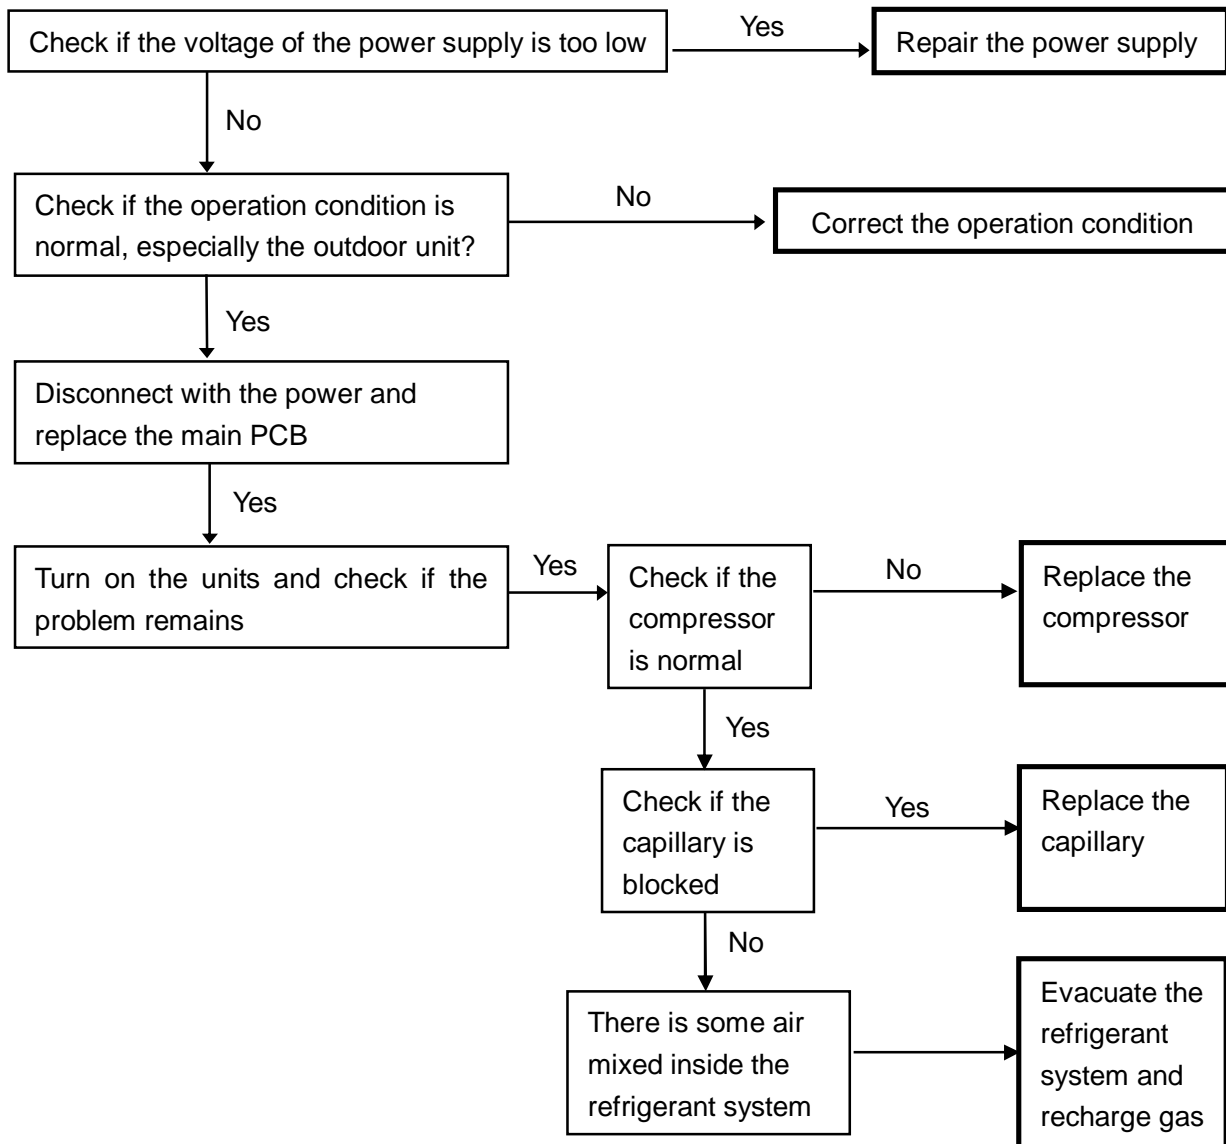

9.2.4 EEPROM parameter error diagnosis and solution

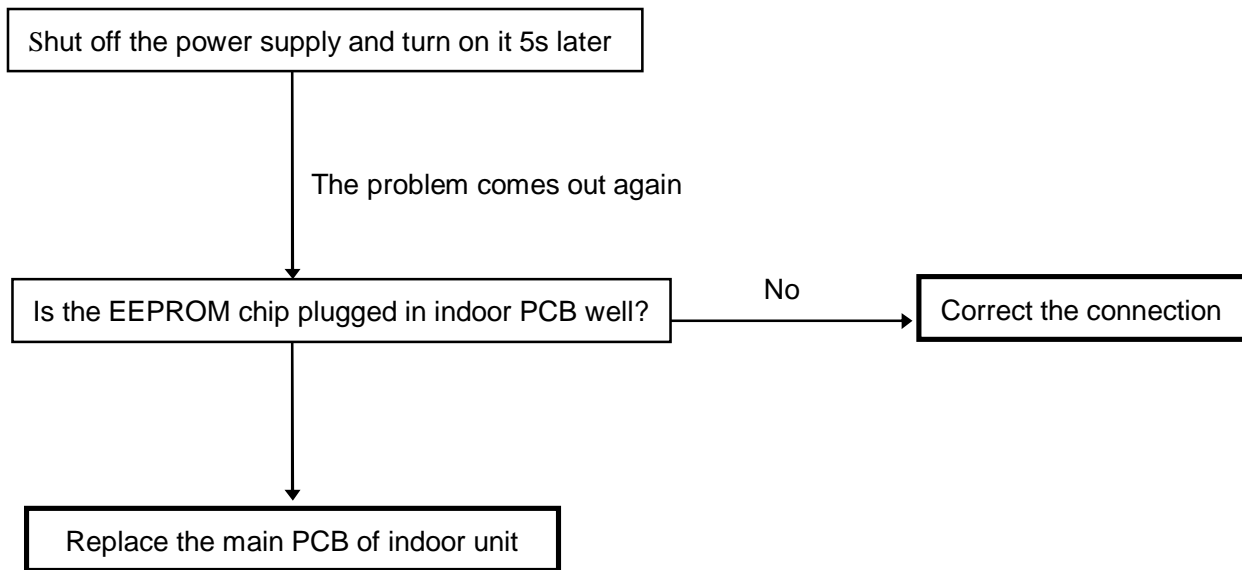

9.2.5 Zero crossing detection error

When such failure occurs, the main control board must have fault.

9.2.6 Indoor / outdoor units communication error diagnosis and solution

