

Extraflame

Stufe a Pellet



**Inseto
Comfort
Mini**

**Inseto
Comfort
P80**



User Manual

Read these instructions carefully before installation, use and maintenance.
The instruction booklet is an integral part of the product.

Congratulations! You are now the owner of an EXTRAFLAME stove!

The Extraflame pellet stove is an ideal heating solution. It utilises the most advanced technology and is manufactured to the highest standards with a contemporary design, allowing you to enjoy the ambience and warmth of a natural flame in complete safety.

This manual tells you how to use your stove correctly. Please read the entire manual carefully before using your stove.

IMPORTANT

Make sure that the dealer completes the following box with the details of the authorised specialist who will help you if you have any problems in using your new pellet stove.

AUTHORISED SPECIALIST

COMPANY _____
NAME _____
ADDRESS _____
POST CODE _____ TOWN/CITY _____
TEL. _____ FAX _____

All Extraflame products are manufactured according to the following directives:

- ❖ 89/106 CEE (Construction products)
- ❖ 89/366 CEE (EMC Directive)
- ❖ 2004/108 CE (EMC Directive)
- ❖ 2006/95 CE (Low Voltage Directive)

And the following standards:

- ❖ EN 14785
- ❖ EN 60335-1
- ❖ EN 60335-2-102
- ❖ EN 61000-3-2
- ❖ EN 61000-3-3
- ❖ EN 50366
- ❖ EN 55014-1
- ❖ EN 55014-2

Index

Chapter 1	
WARNINGS AND SAFETY	7
Chapter 2	
TECHNICAL SPECIFICATIONS	8
Chapter 3	
WHAT ARE PELLETS?	11
PELLET STORAGE	11
PELLET LOADING	11
Chapter 4	
SAFETY DEVICES	12
BREAKDOWN OF HOT AIR DISTRIBUTION FAN.....	12
FLUE GAS EXTRACTOR BREAKDOWN.....	12
PELLET LOAD MOTOR BREAKDOWN	12
FAILED IGNITION.....	12
TEMPORARY POWER CUT	12
ELECTRICAL SAFETY DEVICE	12
FLUE GAS EXHAUST SAFETY DEVICE	12
PELLET TEMPERATURE SAFETY DEVICE	12
Chapter 5	
ASSEMBLY AND INSTALLATION INSTRUCTIONS	13
GLOSSARY	13
INSTALLATION.....	14
ADMISSIBLE INSTALLATIONS	14
PROHIBITED INSTALLATIONS.....	14
CONNECTION TO THE FLUE GAS VENTING SYSTEM.....	15
EXHAUST PIPE OR FITTING	15
CHIMNEY OR SINGLE FLUE	16
CONNECTION TO THE FLUE AND COMBUSTION PRODUCT EXHAUST VENTING	18
CHIMNEY CAP	18
CONNECTION TO EXTERNAL AIR INLETS	19
INSULATION, TRIMS, FACINGS, AND SAFETY PRECAUTIONS.....	19
NATIONAL, REGIONAL, PROVINCIAL AND MUNICIPAL LAWS	19
Chapter 6	
COMFORT MINI/P80 INSTALLATION	20
FITTING WITH SLIDING BASE	20
INSTALLATION WITH PEDESTAL (OPTIONAL).....	21
INSTALLATION WITH PEDESTAL.....	21
EXTRACTING THE INSERT	22
FITTING THE FRAMES.....	22
AIR CIRCULATION DUCTS.....	23
Chapter 7	
REMOTE CONTROL OPERATION	26
GENERAL DESCRIPTION	26
CARATTERISTICHE GENERALI	27
KEYPAD	27

DISPLAY	27
Chapter 8	
PRODUCT FUNCTIONALITY	29
BASIC INSTRUCTIONS.....	29
IGNITION	29
NORMAL OPERATION	30
SHUTDOWN	30
Chapter 9	
USER MENUS	31
SET TEMPERATURE MENU.....	32
SET CLOCK MENU	32
SET TIMER MENU	32
DAY/NIGHT MENU.....	34
PELLET LOAD MENU.....	35
LANGUAGE MENU	36
Chapter 10	
ROOM THERMOSTAT	37
MECHANICAL THERMOSTAT (OPTIONAL)	37
INSTALLING A MECHANICAL THERMOSTAT (OPTIONAL).....	37
MECHANICAL THERMOSTAT OPERATION.....	37
MECHANICAL THERMOSTAT OPERATION IN STANDBY MODE (TO BE USED ALSO FOR REMOTE ACTUATOR)	37
Chapter 11	
CLEANING	38
CLEANING THE BRAZIER	38
USE OF SCRAPERS	38
CLEANING OF ASH COLLECTION COMPARTMENTS.....	38
CLEANING THE HEAT EXCHANGER (MONTHLY).....	38
DOOR, ASH DRAWER AND BRAZIER SEALS.....	39
CHIMNEY CONNECTION	39
BRAZIER PARTITION.....	40
Chapter 12	
WIRING DIAGRAMS.....	41
COMFORT MINI.....	41
COMFORT P80.....	43
Chapter 13	
TABLE OF DISPLAY MESSAGES	45
Chapter 14	
WARRANTY	48
Chapter 15	
QUALITY CONTROL.....	50

WARNINGS AND SAFETY

The stoves produced in our factory are built with maximum dedication to the individual components so as to protect both the user and the installer from accidents. Authorised personnel are therefore advised to pay special attention to the electrical connections, above all after any servicing operation on the product, especially with regard to the stripped part of the wires, which must not protrude in any way from the terminal block to prevent possible contact with the live parts of the wire.

Installation must be carried out by authorised personnel, who have to provide a declaration of conformity of the appliance for the purchaser, who will then be fully responsible for the permanent installation and consequent correct operation of the installed product. It is necessary to bear in mind all the national, regional, provincial and municipal laws and regulations present in the country in which the appliance is installed. Extraflame S.p.A. may not be held responsible in the event of failure to observe these precautions.

This instruction manual constitutes an integral part of the product. It must always accompany the appliance, also when it is transferred to another owner or user or moved to another location. If the manual gets damaged or lost, ask your local service centre for another copy.

This stove must only be used for the applications for which it was expressly designed. The manufacturer declines any responsibility, contractually or extra-contractually, for any damage caused to persons, animals or property by errors in installation, adjustment, and maintenance, or by improper use.

After removing the packaging, check to make sure that the contents are intact and complete. If this is not the case, contact the vendor from whom the appliance was purchased.

The electrical components of the stove, to guarantee correct operation, must only be replaced with original spare parts by an authorised service centre.

General stove maintenance must be carried out at least once a year, scheduled sufficiently in advance with the service centre.

The following safety precautions must be observed:

- ❖ Do not allow the stove to be used by children or unassisted disabled persons.
- ❖ Do not touch the stove if you are bare-footed or if parts of your body are wet or damp.
- ❖ Modifying the safety or adjustment devices without the manufacturer's approval or instructions is forbidden.
- ❖ Never pull, detach, or twist the electrical cables coming out of the stove, even if it is disconnected from the electrical power supply.
- ❖ Avoid blocking up or reducing the size of the air vents of the room in which the stove is installed. The air vents are critical for correct combustion.
- ❖ Keep the packaging materials out of the reach of children and unassisted disabled persons.
- ❖ During product operation the door of the furnace must always be closed.
- ❖ Avoid direct contact with parts of the appliance which tend to heat up during functioning.
- ❖ Check for the presence of any obstructions before switching the appliance on following a long standstill period.

The stove has been designed to function in any climatic conditions (even critical), in particularly adverse conditions (strong wind, ice) safety systems may intervene, which switch the stove off. If this happens, contact the after-sales service and under no circumstances disable the safety systems.

- ❖ If the flue should catch fire use suitable systems to suffocate the flames or request help from the fire brigade.

TECHNICAL SPECIFICATIONS

Features	U.M.	Insert Comfort Mini	Insert Comfort P80
Weight	kg	122	122
Height	mm	550	550
Width	mm	700	789
Depth	mm	445	585
Flue exhaust pipe diameter	mm	80	80
Air intake pipe diameter	mm	50	50
Max. global heat output	kW	7.8	7.8
Max. useful heat output	kW	6.2	6.2
- output power to the air	kW	-	-
- output power to the water	kW	8.0	8.0
Min. useful heat output	kW	3.0	3.0
- output power to the air	kW	3.0	3.0
- output power to the water	kW	-	-
Min. hourly fuel consumption	kg/h	0.7	0.7
Max. hourly fuel consumption	kg/h	1.6	1.6
Tank capacity	kg	~ 12	~ 20
Recommended flue draught	Pa	~ 10	~ 10
Chimney draught at max. useful heat output	Pa	12	12
Chimney draught at min. useful heat output	Pa	10	10
Nominal electric output	W	300	300
Nominal voltage	Vac	230	230
Nominal frequency	Hz	50	50
Water inlet/outlet pipe diameter	"	-	-
Automatic discharge pipe diameter	"	-	-
Pump head	m	-	-
Max. accepted working water pressure	bar	-	-

Tests carried out using wooden pellets as fuel, with calorific value of 4.9 kW/h/kg.

The data stated above is a reference and not binding. The manufacturer reserves the right to carry out any modifications in order to improve the performance of the product.

Inserto Comfort Mini

* The particular "adjustment pipe" has 3 holes $\varnothing 9$ with pitch: 90 - 100; for different adjustments make holes according to necessity.

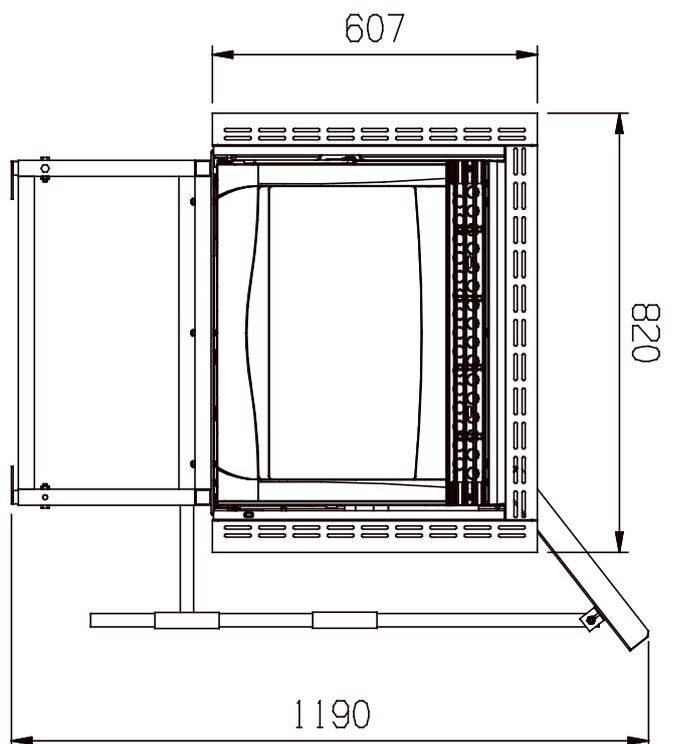
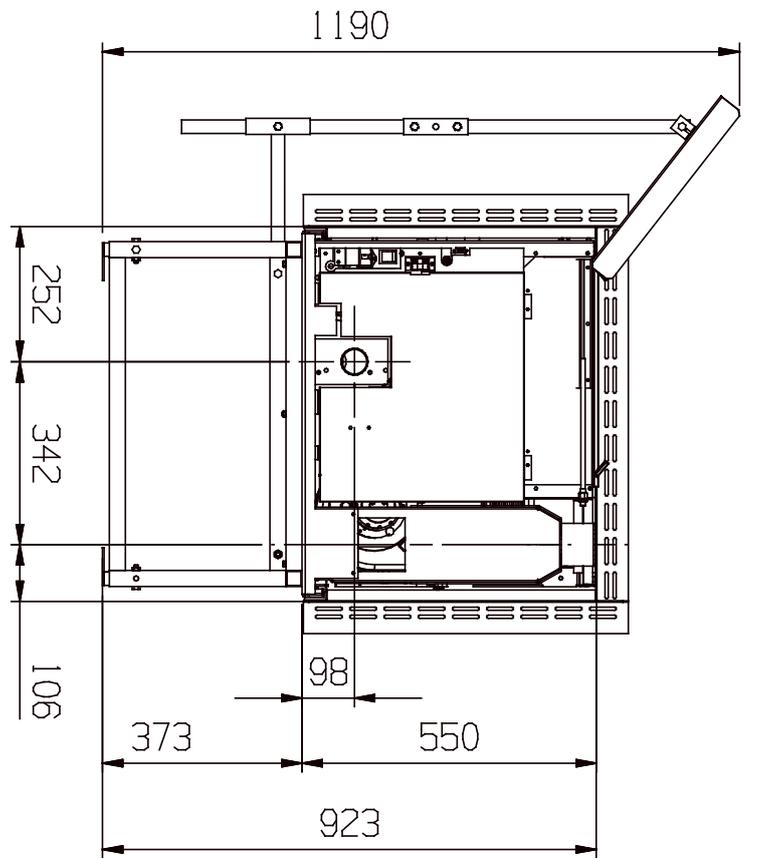
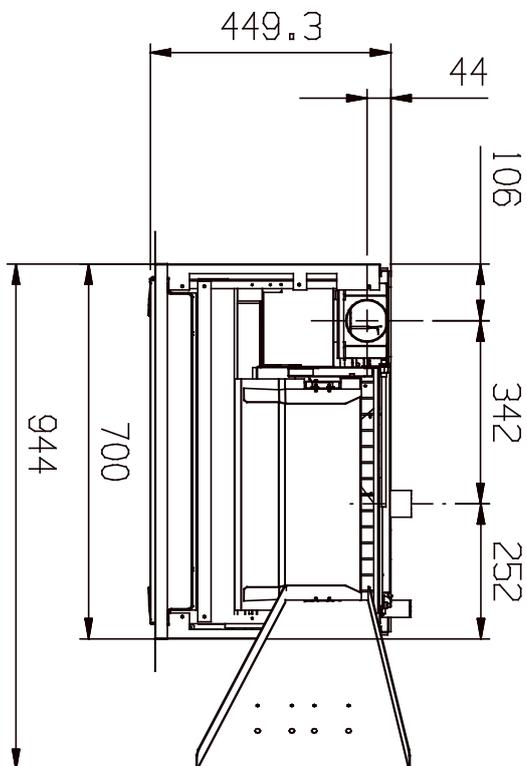


figure 1

Inserto Comfort P80

* The particular "adjustment pipe" has 3 holes $\varnothing 9$ with pitch: 90 - 100; for different adjustments make holes according to necessity.

A: FLUE EXHAUST PIPE $\varnothing 80$
 B: AIR INTAKE PIPE $\varnothing 50$

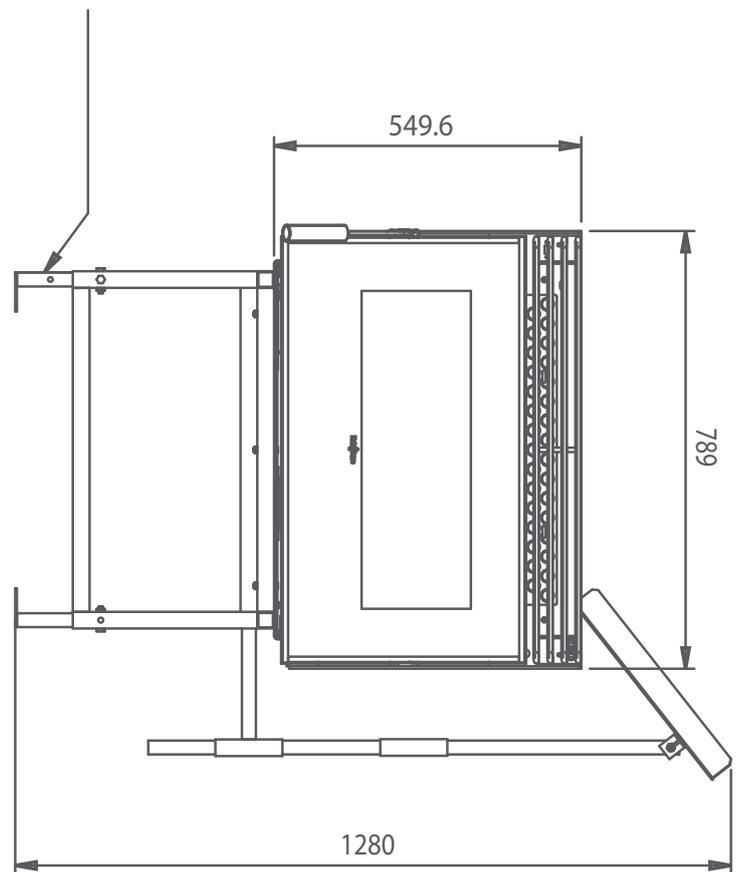
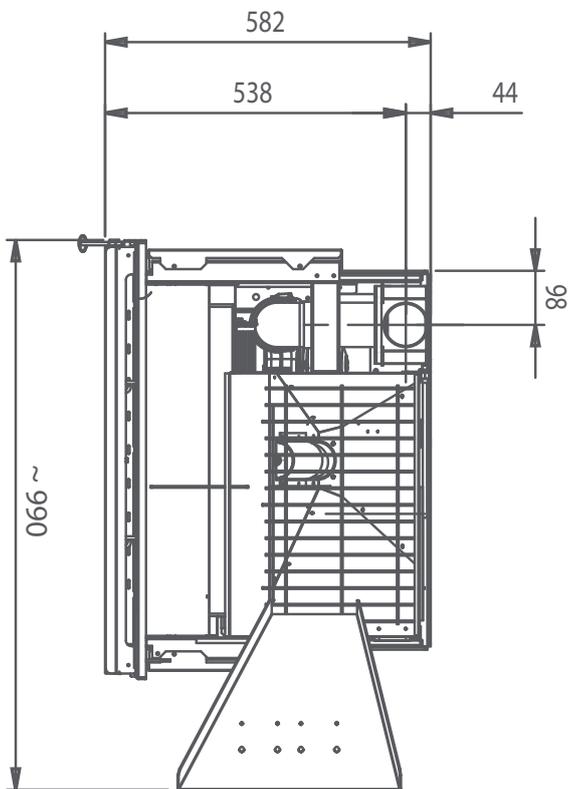
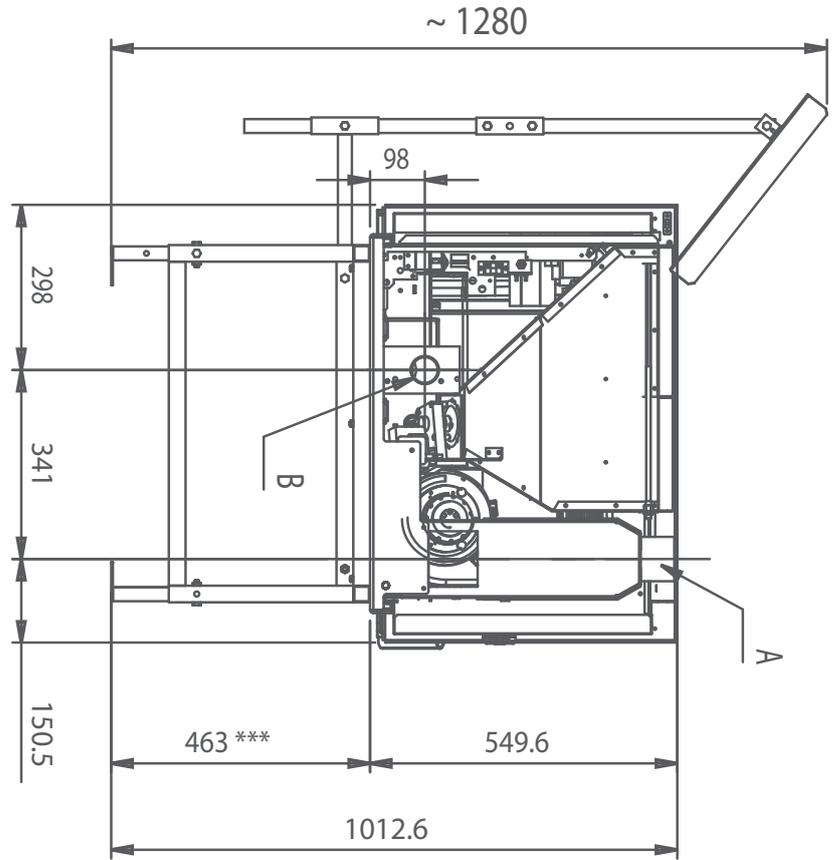


figure 2

WHAT ARE PELLETS?

Pellets are made by applying very high pressure to sawdust; i.e. the residue of raw timber (without paint) produced by sawmills, carpentry works and other activities involved in processing wood.

This type of fuel is completely environmentally friendly, as no binders of any kind are used to keep it compact. In fact, the compactness of the pellets over time is guaranteed by lignite, a natural substance found in the wood itself.

As well as being an environmentally friendly fuel, since wood residues are exploited to the maximum, pellets also have technical advantages.

While the heating power of wood is 4.4 kW/kg (with 15% humidity, after about 18 months seasoning), the power of pellets is 5.3 kW/kg.

The density of the pellet is 650kg/m³ and the water content is 8% of its weight. For this reason, pellets do not need to be seasoned to obtain a sufficient heating yield.

The pellet used must conform to the characteristics of the following regulations:

- ❖ Ö-Norm M 7135
- ❖ DIN plus 51731
- ❖ UNI CEN/TS 14961

Extraflame recommends always using 6 mm pellets for its products.

PELLET STORAGE

To guarantee problem-free combustion, the pellet must be stored in a dry place.

PELLET LOADING

Pellets can either be loaded from the front, by removing the insert, or from the side, by using the chute, if equipped with the support and loading kit.



WARNING!!!

THE USE OF POOR QUALITY PELLETS OR ANY OTHER MATERIAL MAY DAMAGE THE YOUR STOVE AND MAY LEAD TO THE INVALIDATION OF THE WARRANTY AND THE RELATED RESPONSIBILITIES OF THE MANUFACTURER.

SAFETY DEVICES

BREAKDOWN OF HOT AIR DISTRIBUTION FAN

If the blower stops for any reason, the stove automatically shuts down to prevent overheating.

FLUE GAS EXTRACTOR BREAKDOWN

If the extractor stops, the electronic unit immediately prevents pellet loading.

PELLET LOAD MOTOR BREAKDOWN

If the motor stops, the stove continues to operate until the minimum cooling level is reached.

FAILED IGNITION

If no flame develops during the ignition phase, the appliance automatically attempts a new ignition, this time, though, without loading pellets.

If, after this attempt, the stove still has no flame, the stove display shows “**NO FLAME**”. If you attempt to light the stove again, the display shows “**CLEANING WAIT**” which means “**WAIT**”.

This function reminds you that before lighting the stove, you must be sure that the brazier is free of dirt and debris.

TEMPORARY POWER CUT

The appliance will re-light automatically after a brief power failure. When the power goes off, the stove may emit a minute quantity of smoke inside the house for a period of 3 to 5 minutes.

THIS DOES NOT POSE ANY SAFETY RISK.

ELECTRICAL SAFETY DEVICE

The stove is protected against violent changes in power by a master fuse on the rear of the stove (2A 250V delayed).

FLUE GAS EXHAUST SAFETY DEVICE

If the exhaust system fails, an electronic pressure switch stops the stove and an alarm is signalled.

PELLET TEMPERATURE SAFETY DEVICE

In case of overheating inside the pellet tank, this safety device blocks stove operation; resetting is manual and must be performed by an authorised technician.

ASSEMBLY AND INSTALLATION INSTRUCTIONS

The installation must comply with:

- ❖ *UNI 10683 (2005) heat generators fed with wood and other solid fuels: installation.*

The chimneys must comply with:

- ❖ *UNI 9731 (1990) chimneys: classification according to thermal resistance.*
- ❖ *EN 13384-1 (2006) calculation method of the thermal and fluid-dynamic features of the chimney.*
- ❖ *UNI 7129 point 4.3.3 provisions, local rules and prescriptions of the fire brigade.*
- ❖ *UNI 1443 (2005) chimneys: general requirements.*
- ❖ *UNI 1457 (2004) chimneys: internal ducts in terracotta and ceramics*

GLOSSARY

CLOSED HEARTH DEVICE

Heat generator that can only be opened to load fuel during use.

BIOMASS

Material of organic origin, excluding the material incorporated in geological formations and fossilised.

BIOFUEL

Fuel produced directly or indirectly from biomass.

FLUE or CHIMNEY

Vertical pipe for collecting and expelling combustion products from a single appliance at a suitable height from the floor.

EXHAUST PIPE or FITTING

Pipe or connecting element between the heat generating device and the chimney for extracting the combustion products.

INSULATION

The series of measures taken and materials used to prevent heat transmission through a wall dividing rooms at different temperatures.

CHIMNEY CAP

Device located at the top of the chimney that facilitates dispersion of the combustion products in the atmosphere.

CONDENSATE

Liquid products that form when the temperature of the combustion gas is lower than or equal to the dew point of the water.

HEAT GENERATOR

Device that permits the production of thermal energy (heat) by the rapid transformation of the chemical energy of the fuel by means of combustion.

AIR LOCK

Mechanism for modifying the dynamic resistance of the combustion gases.

FLUE GAS VENTING SYSTEM

A system for flue gas exhaust venting that is independent from the appliance, composed of a pipe or channel, chimney or single flue, and chimney cap.

FORCED DRAUGHT

Air circulation by means of a fan driven by an electric motor.

NATURAL DRAUGHT

Draught resulting in a chimney/flue due to the difference in the volume mass existing between the (hot) fumes and the surrounding atmospheric air, without any mechanical suction aid installed inside or on top of it.

RADIANCE AREA

Area immediately adjacent to the hearth in which the heat produced by combustion is diffused; this area must not contain any objects made of combustible material.

REFLUX AREA

Area in which the combustion products come out from the appliance towards the room in which it is installed.

INSTALLATION

Before carrying out installation, it is necessary to check the positioning of the chimneys, flues or exhaust terminal ducts of the appliance, bearing in mind the following:

- ❖ Installation prohibitions
- ❖ Legal clearances
- ❖ Limitations set out by local administrative regulations or specific regulations of the authorities.
- ❖ Common limitations deriving from building regulations, and easement or contract regulations.

ADMISSIBLE INSTALLATIONS

In the room in which the heat generator is to be installed, any existing or installed appliances must be airtight to the room and must not cause depression in the room with respect to the external environment.

Appliances used for cooking foods and the related hoods without extractor can only be installed in rooms used as kitchens.

PROHIBITED INSTALLATIONS

The room in which the heat generator is to be installed must not contain any of the following devices, either pre-existing or installed:

- ❖ Hoods with or without extractor;
- ❖ Ventilation ducts of the collective type.

Should these devices be located in adjacent rooms communicating with the installation room, it is forbidden to use the heat generator simultaneously where there is the risk that one of the two rooms may be subject to depression with respect to the other.

CONNECTION TO THE FLUE GAS VENTING SYSTEM

EXHAUST PIPE OR FITTING

For the assembly of the exhaust pipes it is imperative to use non-flammable materials that are resistant to combustion products and any condensates.

It is forbidden to use flexible metal pipes and asbestos cement for connecting the stove to the flue, also for pre-existing exhaust channels.

There must be continuity between the exhaust pipe and the flue so that the flue does not lean on the stove. The exhaust pipes must not pass through rooms in which the installation of combustion devices is forbidden.

The assembly of the exhaust pipes must be carried out in such a way as to ensure that they are airtight for the operating conditions of the appliance, as well as to limit the formation of condensates and prevent them from being conveyed towards the appliance.

The assembly of horizontal sections must be avoided where possible.

Where roof or wall exhaust outlets have to be reached that are not coaxial in relation to the exhaust outlet from the appliance, the direction changes must be made using open elbows no greater than 45° (see figures below).

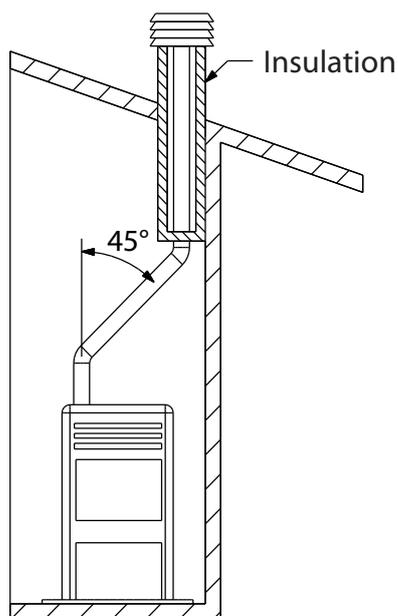


figure 3

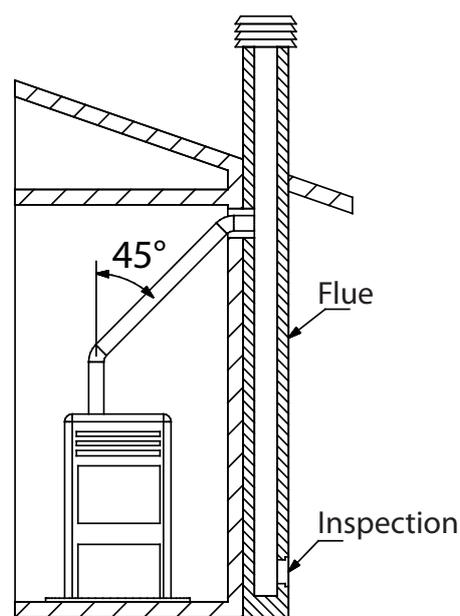


figure 4

For heat generating devices equipped with an electric exhaust fan, i.e. all products made by Extraflame, it is necessary to observe the following instructions:

- ❖ Horizontal sections must have a minimum slope of 3% upwards.
- ❖ The length of the horizontal section must be as short as possible, and in any case no greater than 3 metres.
- ❖ No more than four direction changes may be used, including the one resulting from the use of the "T"-element. (When four bends are used, use double wall piping with a 100 mm diameter.).

In any case, exhaust pipes must be sealed in relation to combustion products and condensates, as well as insulated, if they pass outside the installation room.

It is forbidden to use elements in counter-slope.

The exhaust channel must allow soot recovery and cleaning using a swab.

The exhaust channel must have a constant cross-section. Any changes in cross-section are allowed only at the flue connection.

It is forbidden to run other air feed channels or piping for utilities inside the exhaust channels, even if they are oversized. It is also forbidden to fit manual draught adjustment devices on the forced draught appliance.

CHIMNEY OR SINGLE FLUE

The chimney or flue must meet the following requirements:

- ❖ be sealed to combustion products, waterproof and properly insulated according to the usage conditions;
- ❖ be made of materials suitable to resist normal mechanical stress, as well as heat and the action of combustion products and any condensates;
- ❖ have a predominantly vertical layout with deviations from the axis no greater than 45°;
- ❖ be situated at a proper distance from combustible or flammable materials by means of an air gap or suitable insulation material;

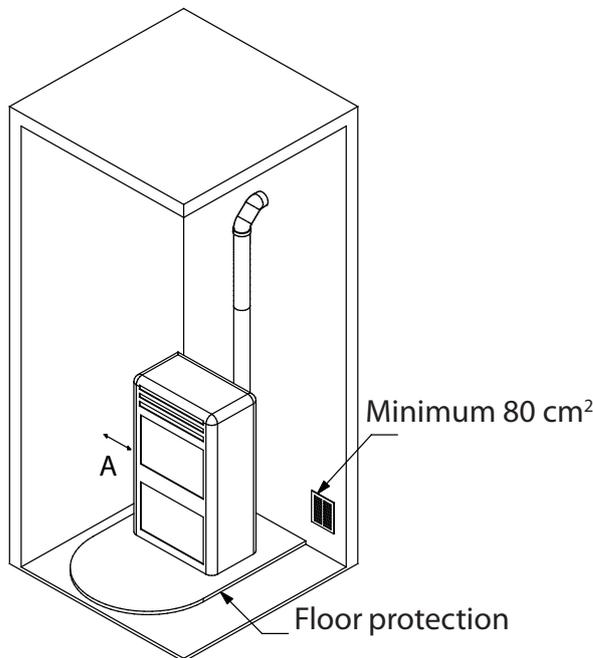


figure 5

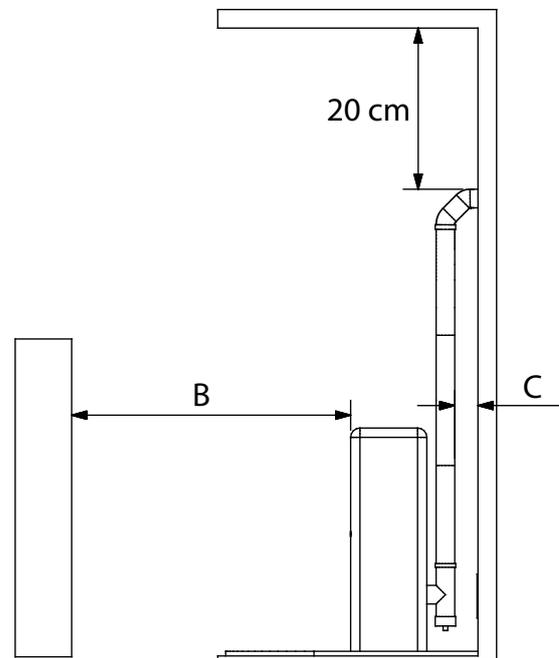


figure 6

REFERENCES	Flammable objects	Non-flammable objects
A	200	100
B	1500	750
C	200	100

- ❖ preferably have a round internal section: square or rectangular sections must have rounded edges with radius no less than 20 mm;
- ❖ have a constant, free and independent internal section;
- ❖ have rectangular sections with a maximum ratio between sides of 1.5.

The exhaust pipe should be equipped with a chamber for the collection of solid materials and any condensates located below the mouth of the exhaust pipe, so that it is easy to open and inspect from the airtight hatch.

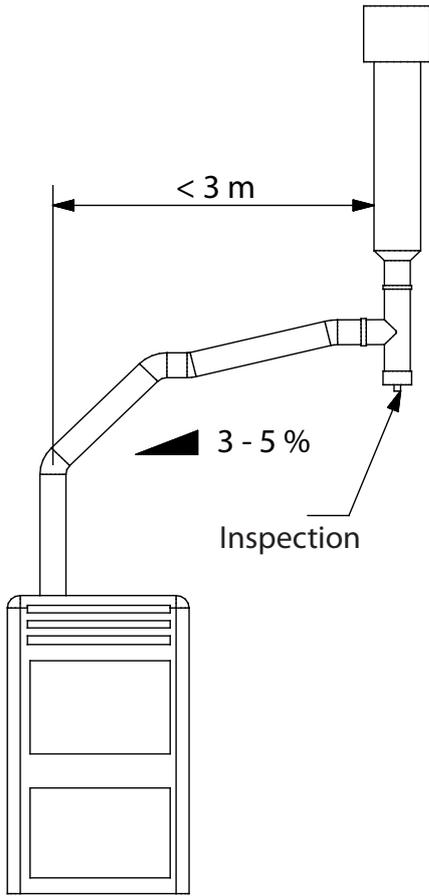


figure 7

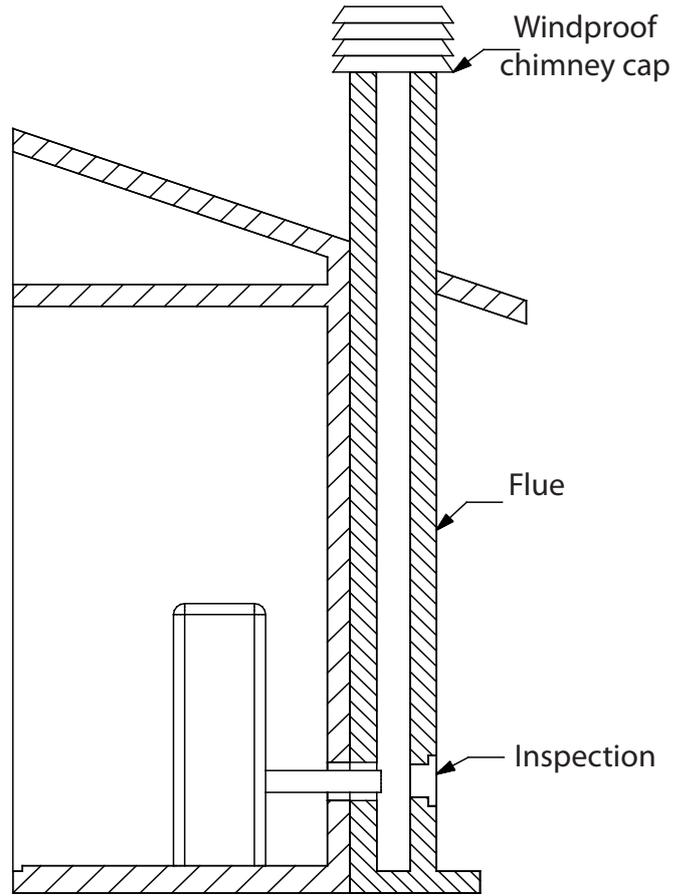


figure 8

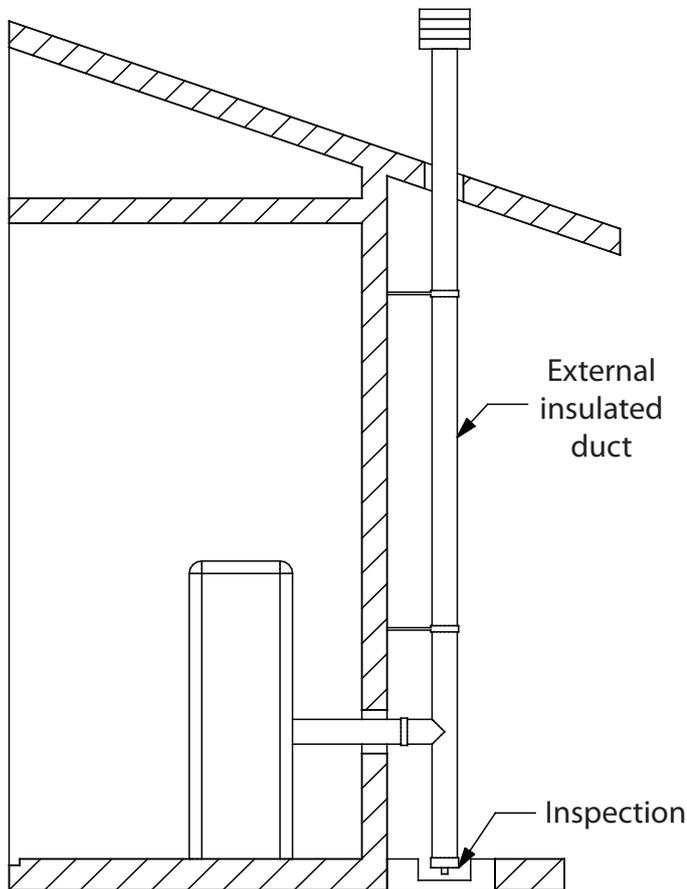


figure 9

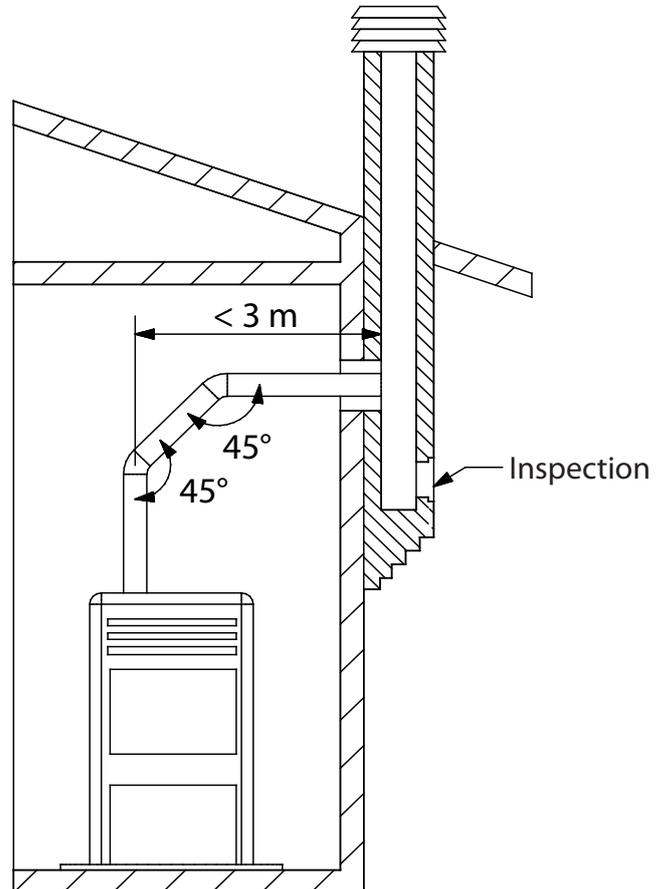


figure 10

CONNECTION TO THE FLUE AND COMBUSTION PRODUCT EXHAUST VENTING

The flue must receive exhaust from a single heat generator.

Direct discharge towards enclosed areas, even when roofless, is forbidden.

Direct discharge of combustion products must take place on the roof and the exhaust duct must have the features set forth in the section "Chimney or single flue".

CHIMNEY CAP

The chimney cap must meet the following requirements:

- have an internal section equivalent to that of the chimney;
- have a useful outlet section no less than twice the internal section of the chimney;
- be constructed in such a way as to prevent the penetration of rain, snow and foreign bodies into the chimney, as well as to assure the discharge of the combustion products also in the presence of winds coming from any direction and at any angle.
- be positioned in such a way as to assure proper dispersion and dilution of the combustion products and, in any case, outside the reflux area in which the formation of counter-pressure is most likely to occur. This area has different sizes and shapes depending on the slope of the roof; therefore, it is necessary to use the minimum heights indicated in the figures below.

The chimney cap must not have any mechanical suction devices.

FLAT ROOF

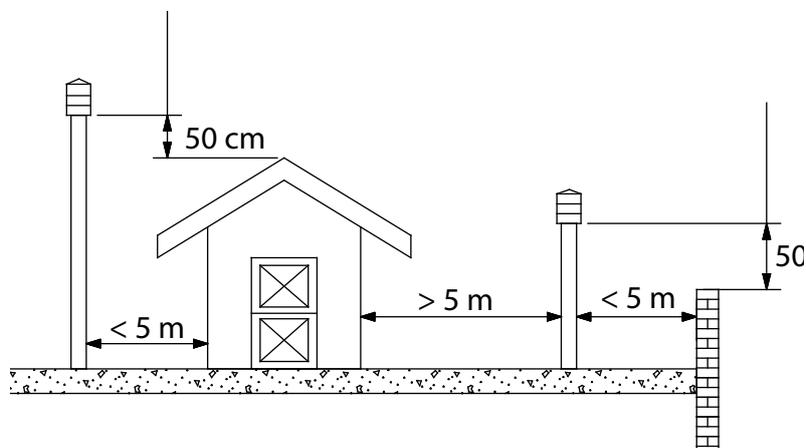


figure 11

SLOPED ROOF

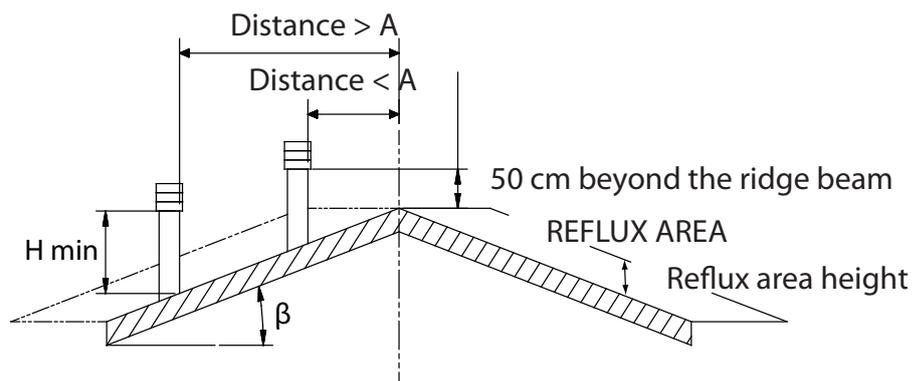


figure 12

CHIMNEYS, DISTANCES AND POSITIONING		
Roof pitch	Distance between the crown and the chimney	Minimum height of the chimney (measured from the outlet)
β	A (m)	H (m)
15°	< 1,85	0.50 m beyond the crown
	> 1,85	1.00 m from the roof
30°	< 1,50	0.50 m beyond the crown
	> 1,50	1.30 m from the roof
45°	< 1,30	0.50 m beyond the crown
	> 1,30	2.00 m from the roof
60°	< 1,20	0.50 m beyond the crown
	> 1,20	2.60 m from the roof

CONNECTION TO EXTERNAL AIR INLETS

To ensure correct operation, the appliance must have sufficient air available by means of external air inlets, which must meet the following requirements:

1. They must have a total free section of at least 80 cm².
2. They must be protected by a grate, metal mesh, or other suitable protection provided that it does not reduce the minimum section as per point a) and that it is positioned in such a way as to prevent the intakes from being obstructed.

If the combustion air is collected directly from the outside by means of a pipe, it is necessary to fit a downward bend or a wind hood on the outside. In addition, no grating or similar device should be positioned. (Extraflame S.p.A. suggests creating an air inlet directly communicating with the installation room, even if air is collected from outside by means of a pipe).

Air inflow can also be obtained from a room adjacent to the installation room, provided that the flow can occur freely through permanent openings communicating with the outside.

The adjacent room must not be subject to depression with respect to the outside as a result of the opposing draught caused by the presence of another utility device or suction device in this room.

In the adjacent room, the permanent openings must meet the requirements described above.

The adjacent room cannot be used as a garage, storage area for combustible material, or for activities involving fire hazards.

INSULATION, TRIMS, FACINGS, AND SAFETY PRECAUTIONS

The facings, no matter what type of material they are made of, must constitute a self-bearing structure with reference to the heating assembly and not in contact with it.

The beam and the trims in wood or combustible materials must be positioned outside of the radiant area of the hearth or be properly insulated.

If the space above the heat generator has coverings made of combustible or heat-sensitive material, a protective membrane made of non-combustible insulating material must be placed between it and the generator.

All elements made of combustible or flammable material, such as wooden furnishings, curtains, etc., which are directly exposed to the radiance of the hearth, must be placed at a safe distance.

The installation of the appliance must guarantee easy access for cleaning the appliance itself, of the exhaust gas pipes and the flue.

NATIONAL, REGIONAL, PROVINCIAL AND MUNICIPAL LAWS

All the national, regional, provincial and municipal laws of the country where the appliance has been installed must be taken into consideration.

COMFORT MINI/P80 INSTALLATION

The insert is supplied with a sliding base in iron, which allows it to be installed in a pre-existing chimney. The base allows you to slide out the insert easily for maintenance and cleaning at the end of the year. If you do not already have a fireplace, you can build one using the insert support pedestal (optional kit), which is designed to secure the insert to the floor.

Description of the components:

- ❖ Sliding base
- ❖ Guide rails
- ❖ Exhaust pipe
- ❖ Primary air inlet pipe
- ❖ Power outlet
- ❖ Adapter frame

FITTING WITH SLIDING BASE

Take the sliding base and place it in the existing fireplace.

Using chalk, mark the base fixing holes on the floor of the fireplace.

Drill the holes for 8 mm steel screw anchors.

Drill a 60 mm hole in correspondence with the air inlet.

 **The air inlet must be made outside the fireplace, because it must not draw in overheated air.**

Provide a power outlet on the rear of the insert, so that the plug can be reached easily once the installation is complete.

Fix the base using the attachment screws.

Make the connection to the exhaust outlet and air inlet, following the instructions previously described.

Then tilt the insert so that the wheels fit into the guide rails and slide it in until the exhaust auger coupling is completely inserted in the exhaust conveyor box.

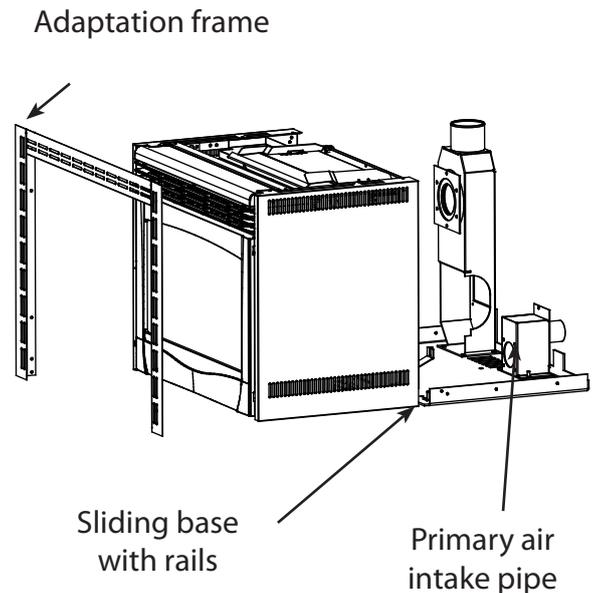


figure 13

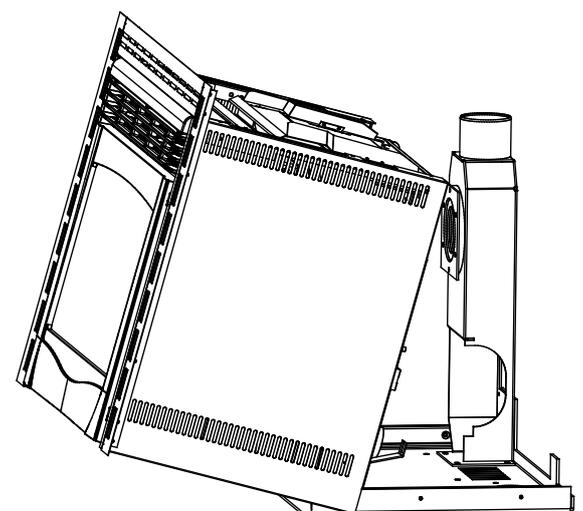


figure 14

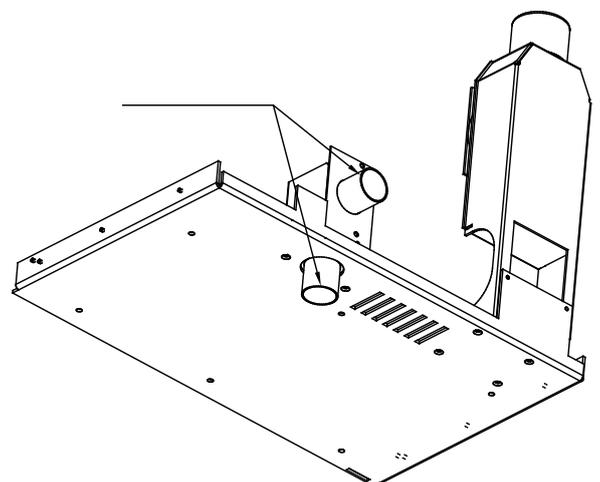


figure 15

Finally, open the fire door and use the socket wrench provided to turn the screw in the lower left-hand corner clockwise.

To check that the insert is correctly coupled with the base, connect the plug to the power outlet: the display should light up.

N.B. The insert must stand at least 1 cm above the marble fire top of the facing.

INSTALLATION WITH PEDESTAL (OPTIONAL)

Description of components:

- ❖ Comfort Mini/P80
- ❖ Pedestal adjustable in height
- ❖ Side feeding tank
- ❖ Adjustable tank support

INSTALLATION WITH PEDESTAL

Position the base in the desired point and adjust to the desired height using the feet (the bolts are located on the four outer edges of the pedestal at the bottom).

Provide a power outlet on the rear of the pedestal that will be easy to reach once the installation is complete.

Fix the pedestal to the floor using strong steel screw anchors with an 8 mm diameter.

Fix the sliding base to the frame using the bolts.

Connect the exhaust outlet and air inlet as described in the previous section.

Then tilt the insert so that the wheels fit into the guide rails, slide it until the exhaust auger coupling is completely inserted in the exhaust conveyor box.

Then use the socket wrench provided to turn the screw anticlockwise.

To check that the insert is correctly coupled with the base, connect the plug to the power outlet: the display should light up.

Fit the tank support as shown in Fig. 10.

Insert the support in the coupling provided.

N.B.: When using our pedestal, it is necessary to create an inspection window in the chimney that allows you to check the pellet level in the tank while filling it.

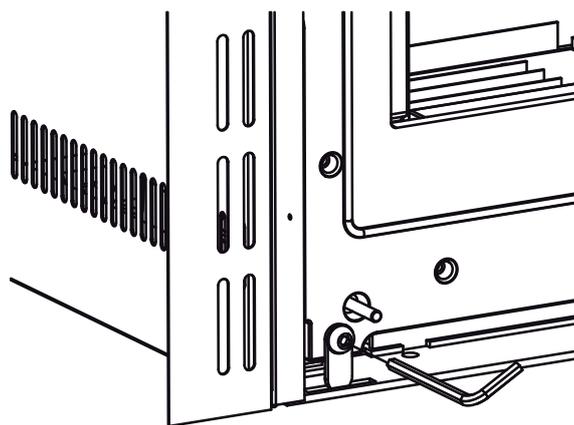


figure 16

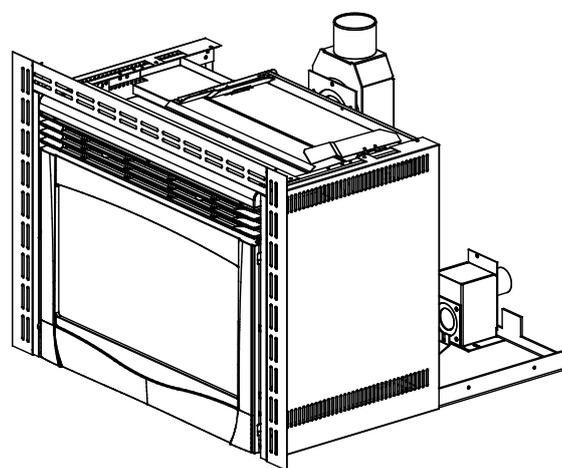


figure 17

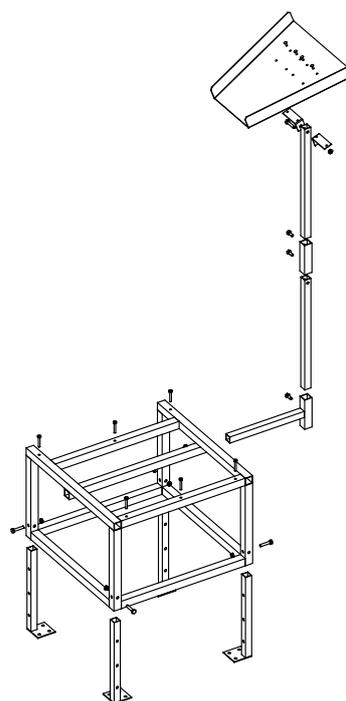


figure 18

N.B.: The tank support can only be fitted on the right-hand side of the insert.

Adjust the height and angle of the tank according to the fireplace to be built.

N.B.: The insert must stand at least 1 cm above the marble fire top of the facing.

EXTRACTING THE INSERT

Extraction of the insert allows to feed the pellets into the tank and to perform routine maintenance (cleaning the ash chute every year) or extraordinary maintenance (replacement of mechanical parts if the product should break).

N.B.: These operations must be carried out by an authorised technician, with the stove switched off and the plug disconnected.

To extract the insert, proceed as follows:

1. Open the fire door and use the socket wrench provided to turn the screw in the lower left-hand corner anticlockwise.
2. Using the pokers provided, pull the insert towards you until it blocks automatically.

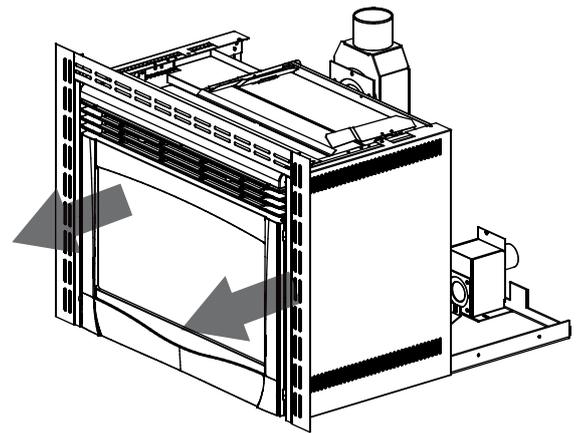


figure 19

FITTING THE FRAMES

- ❖ Front frame
- ❖ Side frames

Attach the front frame to the two side frames.
Fix the frames to the insert using self-tapping screws.

N.B. Any wooden beams situated above the insert must be protected using fireproofing material.
Frame assembly is important, as it allows correct air circulation in the insert and consequently the most efficient stove operation.


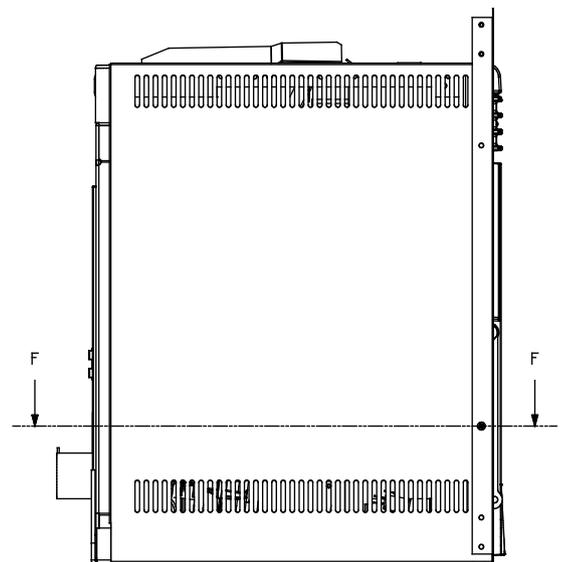


figure 20

The 2 side frames are fitted to the upper frame using 2 screws per side.

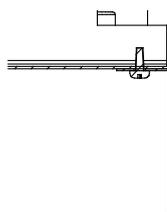

The remaining holes on the side frames are used for attaching the entire frame assembly to the sides of the insert using self-tapping screws.

SECTION F-F
figure 21

AIR CIRCULATION DUCTS

For correct function air circulation must be created inside the structure that covers the insert in order to prevent the appliance overheating.

The following measurements must be respected:

- ❖ Lower part (cold air inlet) \Rightarrow total minimum surface 550 cm^2 .
- ❖ Upper part (hot air outlet) \Rightarrow total minimum surface 500 cm^2 .



This ventilation system is completely independent from the combustion air inlet!!

To protect against overheating, the comfort P80 is supplied with a probe that analyses the temperature inside the structure and intervenes by reducing the functioning power.

Comfort Mini

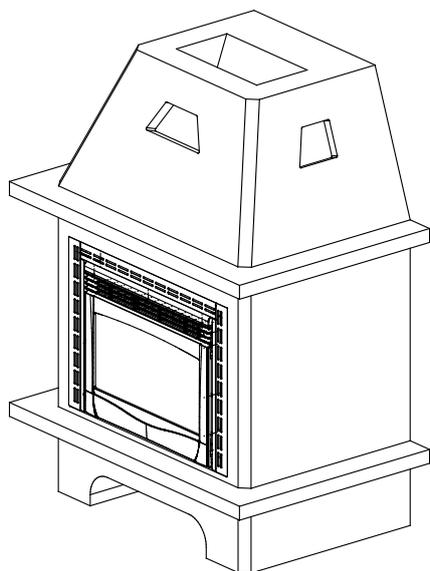


figure 22

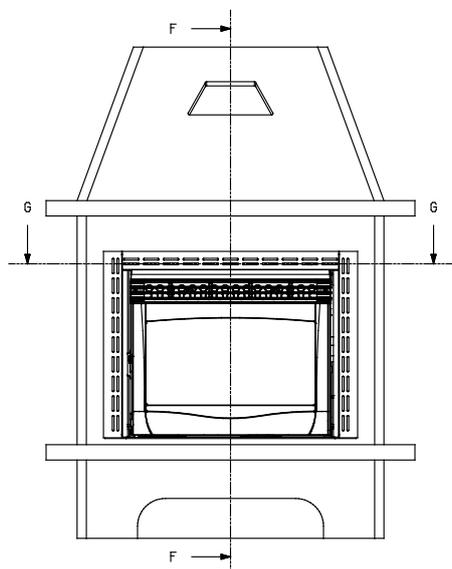


figure 24

Comfort P80

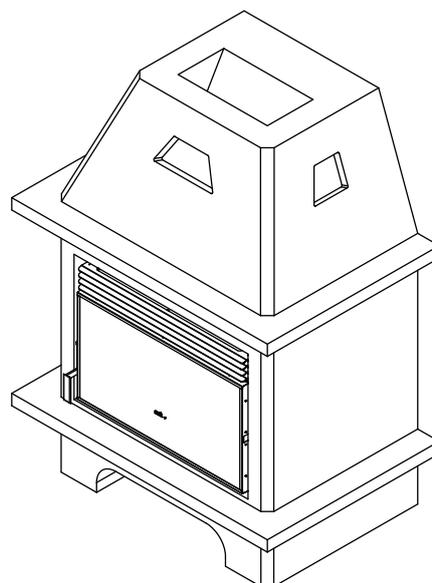


figure 23

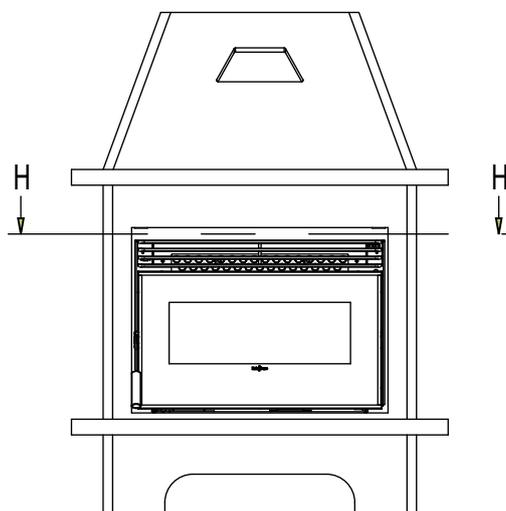


figure 25

Comfort Mini

Comfort P80

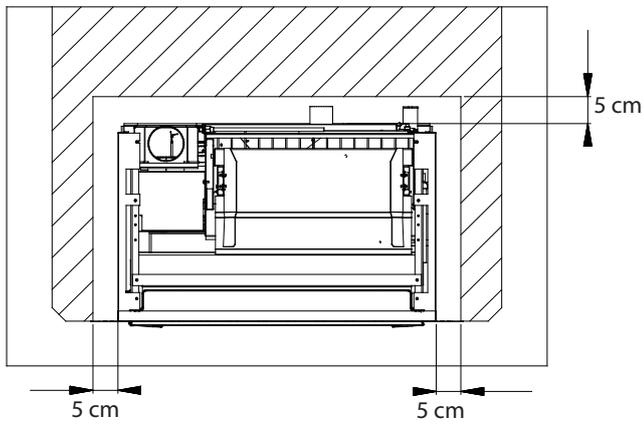


figure 26


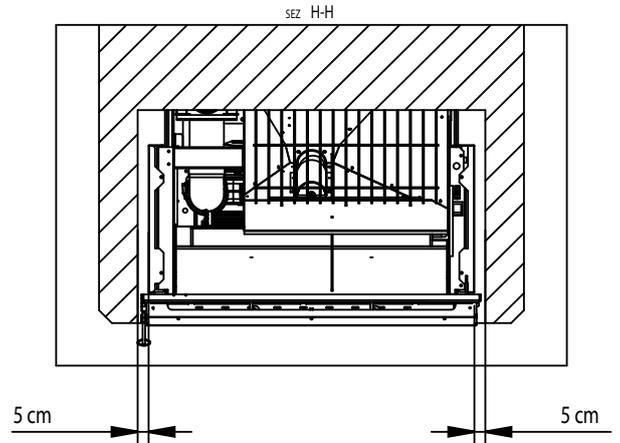


figure 27

It is also important to guarantee the minimum distance of 5 cm on both sides as illustrated in figures 26-27.

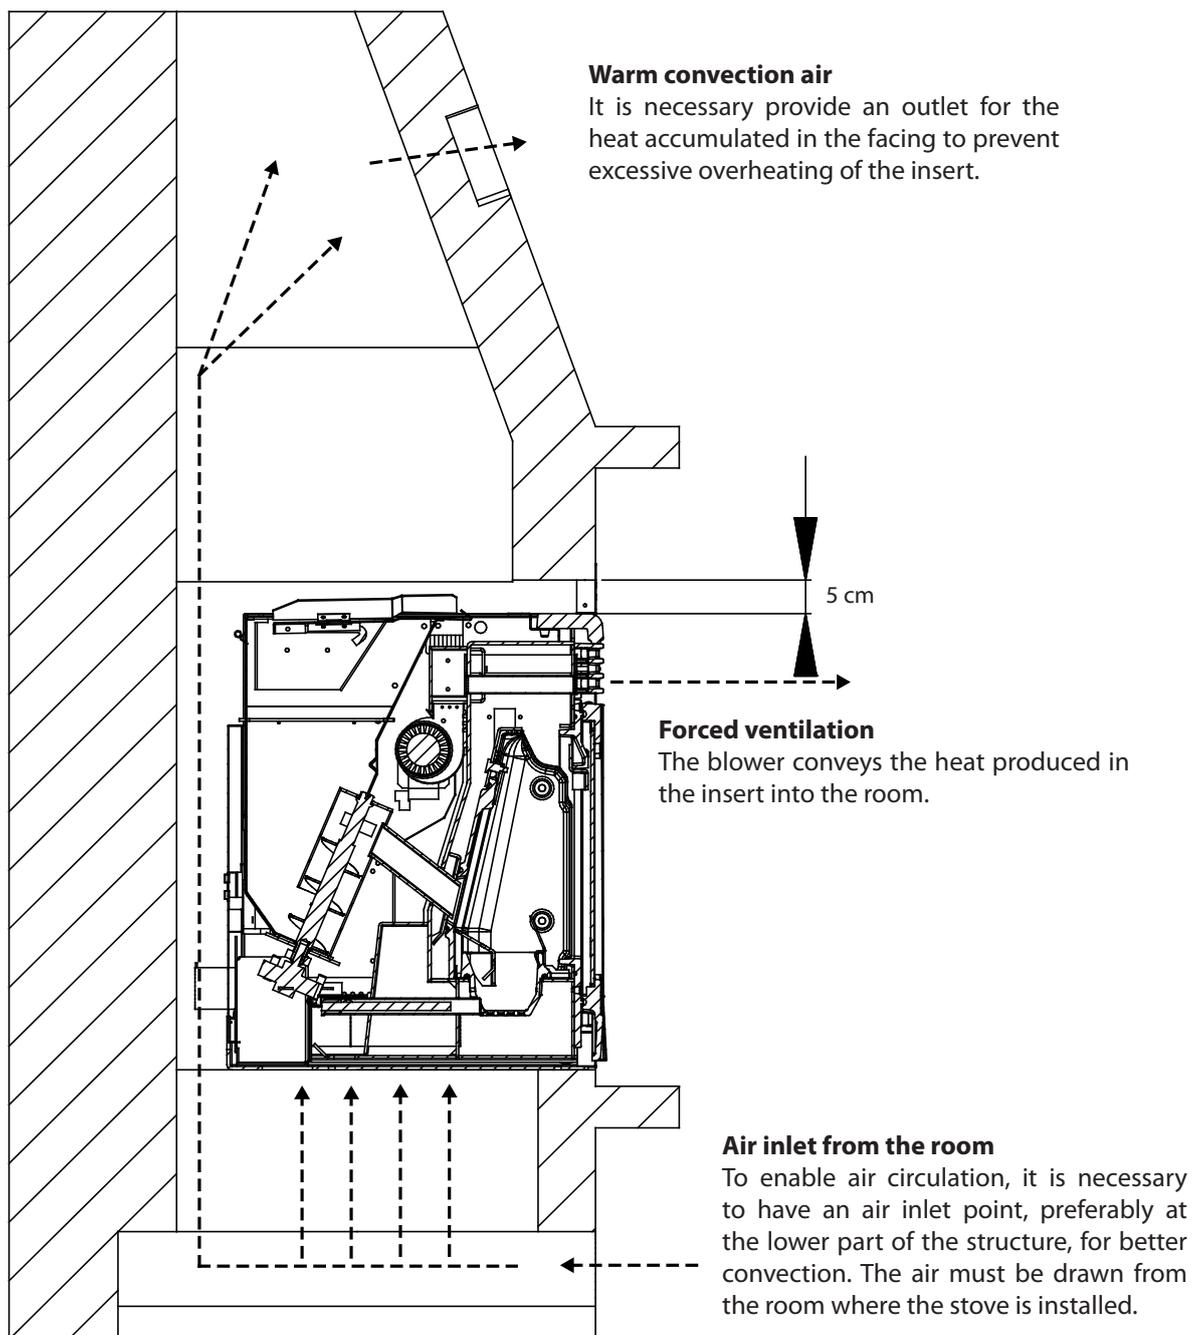

To ensure the correct and safe operation of the insert, when building the fireplace it is necessary to respect the clearances between the insert and the inner walls of the fireplace.

Considering the measurements given in the technical specifications, you need to account for at least 50 mm of air space in the upper part and on the two sides.

NB: The exhaust outlet pipe must always be at a minimum distance of 5 cm from flammable parts.

REMOTE CONTROL OPERATION

GENERAL DESCRIPTION

The radio-frequency remote control has two-way communication with the electronic board, sending commands and displaying the operating status of the stove.

N.B. Certain radio-frequency devices (e.g. mobile or cordless phones, etc.) can interrupt the communication between the remote control and the stove.

Selecting the operating frequency

During the first stove lighting, it is necessary to establish a communication frequency between the remote control and the stove.

With this procedure it is possible to select one of 4 possible coding methods: this also makes it possible to use more than one stove inside the same room without one interfering with the operation of the other. The coding procedure is as follows:

1. Disconnect the power supply from the stove.
2. Remove the batteries from the remote control.
3. Reposition the batteries in the remote control.
4. Press buttons 4 and 5 together for three seconds, until **"CHOOSE UNIT"** appears on the display.
5. Use button 4 or 5 to select the desired coding (from 0 to 3).
6. Power up the stove.
7. The stove will emit two acoustic signals: between the first and the second, press button 1 for 1 second. At this point, the display will show **"EXTRAFLAME"**

If communication between remote control and the chimney is very disturbed or inaccurate, the remote control can be directly connected to the device via cable, as illustrated below.

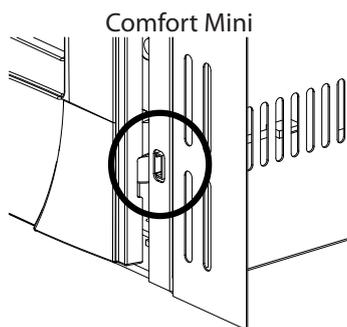


figure 29

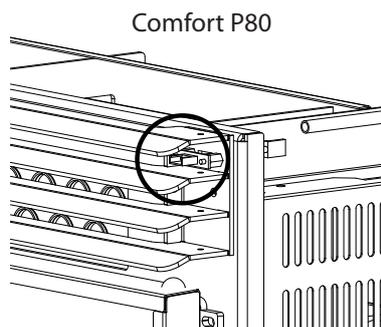


figure 30



figure 31



figure 32



figure 33

GENERAL FEATURES

- ❖ The visual interface is given on an LCD display with 24 characters on 4 lines plus 16 bars.
- ❖ Transmission and reception capacity: 4 metres in free air space.
- ❖ Display of the operating status of the product
- ❖ Direct controls for switch-on/off, power setting change
- ❖ Weekly programmer setting
- ❖ Battery power supply (two 1.5 V AA batteries)
- ❖ Dimensions: 61 x 150 x 120 (D x L x W) mm.

KEYPAD

Button 1 – ON/OFF unblock

Pressing this button for two seconds enables the manual switch-on/off of the stove.

If the stove is in alarm status, and therefore blocked, the button is used for unblocking and subsequent passage to OFF status.

During the programming of the user parameters, it is used to exit and return to the previous menu.

Buttons 4 and 5 – Parameter increase/decrease

On the main screen. These buttons are used for regulating the operating power of the stove from a minimum setting of 1 to a maximum of 5; this value is shown on the upper display. During modification of the user parameters, the buttons are used for increasing/decreasing the value of the parameter, which is shown on the first line of the display.

Menu 1 (3) and Menu 2 (2) buttons

These buttons are used for accessing and setting the user parameters.

DISPLAY

The display message changes in relation to the status of the stove, or the menu being display. In resting status, the display shows the following:

TIME: The current time is shown. The time is set within the weekly programmer (see SET CLOCK menu).

ROOM TEMPERATURE: Shows the current room temperature.

HEATING POWER: Indicates the operating power. It is set by the user during stove operation.

STOVE STATUS: Shows whether the stove is off or on.

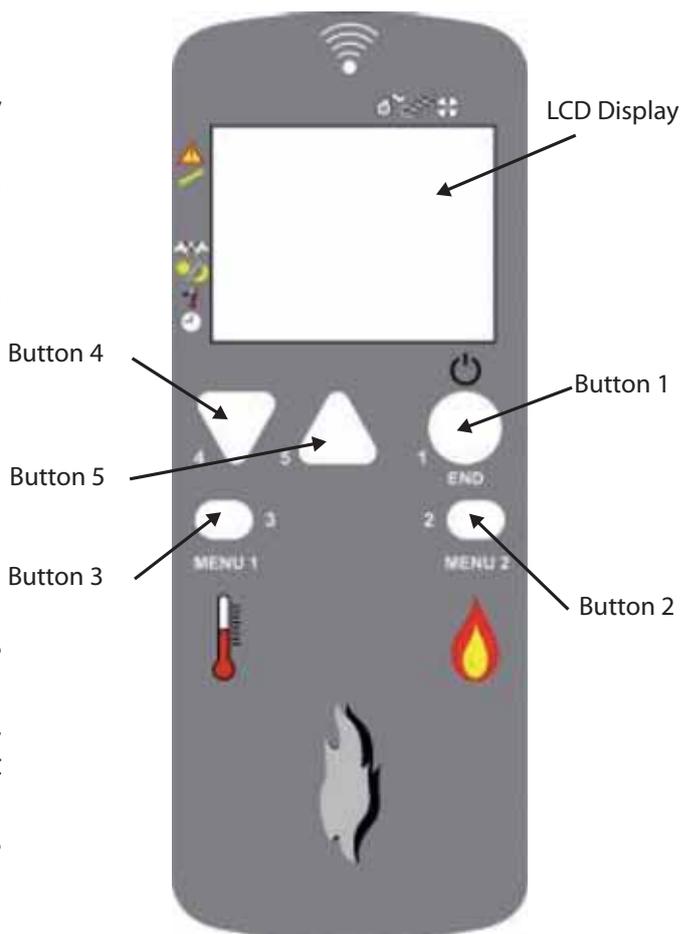


figure 34

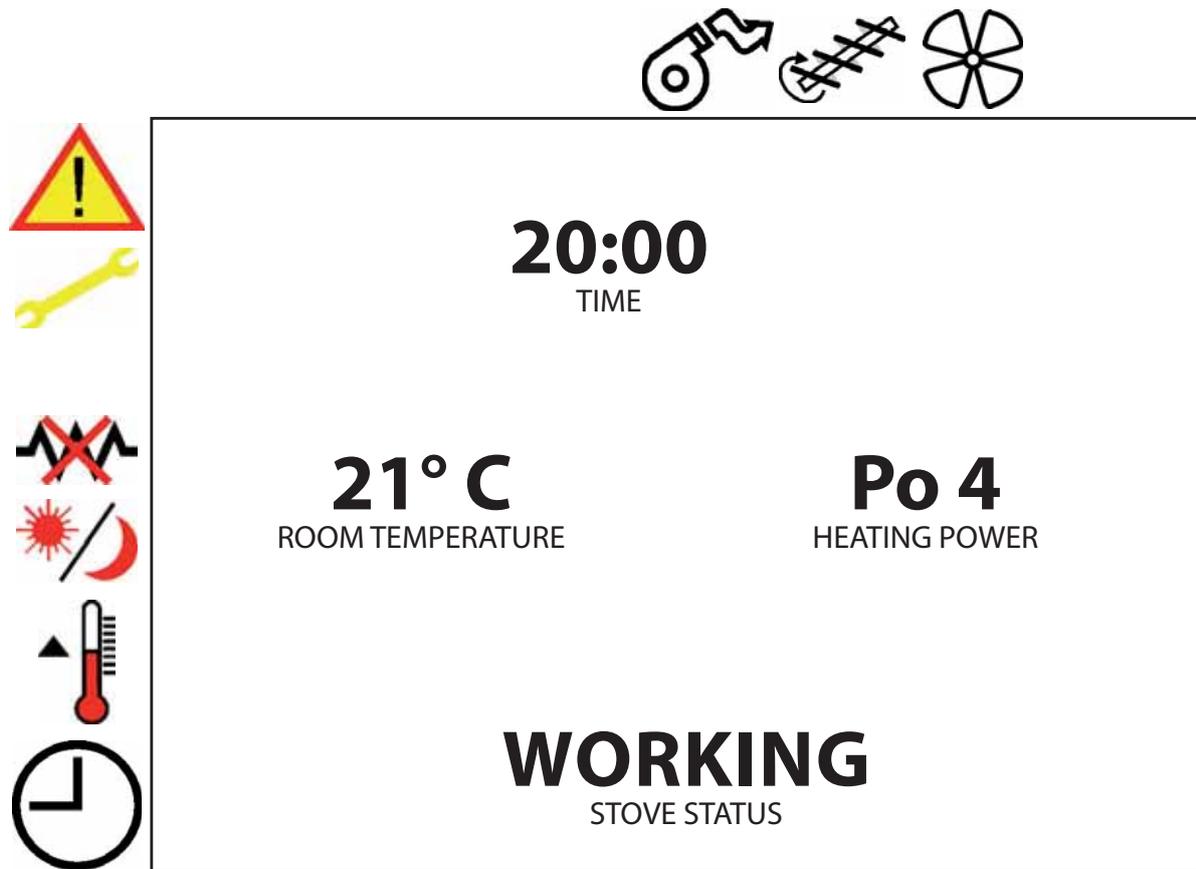


figure 35

PRODUCT FUNCTIONALITY

BASIC INSTRUCTIONS

The stove you have purchased uses pellets as fuel. This type of material is produced from natural waste from woodworking. By means of a special process, which does not require the use of any binders or additives, the shavings are compressed in industrial machines under high pressure and become solid wooden pellets. IT IS STRICTLY FORBIDDEN to burn any other material besides pellets in our stove. Failure to respect these instructions will void all warranties and may jeopardise the safety of the appliance.

The first two or three times the stove is lit, the following recommendations should be observed:

- ❖ No children should be present, as the vapours emitted can be harmful for health. Adults, too, should not stay in the vicinity for very long.
- ❖ Do not touch the surfaces, as they could still be unstable.
- ❖ Air the room thoroughly several times.
- ❖ The hardening of the surfaces is completed after several heating processes.
- ❖ This stove **must not** be used as a waste incinerator.

IGNITION

1. Before proceeding, check to make sure that:

- ❖ the tank is loaded with pellets
- ❖ the combustion chamber is clean
- ❖ the brazier is clean and free
- ❖ the fire door and the ash drawer are sealed
- ❖ the power cable is connected correctly
- ❖ the two-way switch on the back of the stove is in position 1

2. Press button 1 for three seconds; display D1 will show the message "**START**". During this stage, the stove carries out an automatic check on the efficiency of each single electrical component. When this cycle is completed, display D1 shows the message "**IGNITION 15**" (the number of minutes for which the stove attempts the lighting stage, decreasing by 1 every minute that passes). NOTE: The first time the stove is used, even if the tank is loaded with pellets, it is possible that the pellets are not distributed to the combustion chamber for the first 15 minutes because the worm screw for loading the pellets is empty. If the stove has not developed a flame after the fifteen minutes have elapsed, the display shows the message "**NO FLAME**". In this case, press button 1 for three seconds until D1 shows the message "**OFF**". Disconnect and reconnect the power supply using the rear master switch. Then repeat steps 1 and 2.

3. If points 1 and 2 are carried out correctly, the stove will enter the "**START UP 07**" stage.

4. After the lighting phase, the stove will enter the working phase and the display will show the room temperature, heating power and stove status.



1. NEVER USE FLAMMABLE LIQUIDS FOR LIGHTING
2. WHEN FILLING, DO NOT BRING THE SACK OF PELLETS INTO CONTACT WITH THE HOT STOVE

N.B. In case of continued ignition failures, contact an authorised technician.

NORMAL OPERATION

When the stove has been lit, the user can adjust the heating power using buttons 4 and 5. By pressing 4, the heating power and the pellet consumption will decrease, while by pressing 5 it will increase. In addition to the feed rate, the room temperature can be set directly from the control panel.

The stove adjusts itself automatically as far as warm air ventilation is concerned.

The contents of the tank should be monitored to prevent the stove going out because of a lack of fuel.

ATTENTION!

- ❖ The cover of the pellet container must be kept closed, except when loading fuel.
- ❖ The sacks of pellets, must be kept at least 1.5 metres away from the stove.
- ❖ The pellet tank should always be kept half full.
- ❖ The appliance should be switched off before filling with pellets.

SHUTDOWN

Press button 1 for three seconds.

When the three seconds have elapsed, the stove automatically starts the shutdown stage, cutting off the pellet load; the display will show "**FINAL CLEANING**".


Both the exhaust motor and warm air ventilation motor continue to run until the stove temperature has dropped sufficiently. When the exhaust motor stops, the display will show "**OFF**".

USER MENUS

The table below shows the various menus available to the user:

No.	Menu	Description
1	Set temperature	Menu for setting the temperature
2	Set clock	Menu for setting the current day and time
3	Set timer	Menu for setting the switch-on/off programmes
4	Day/Night	Menu for day/night temperature function
5	Pellet load	Menu for adjusting the pellet load %
6	Set Language	Menu for selecting the language

The diagram below shows how the various user menus are accessed:

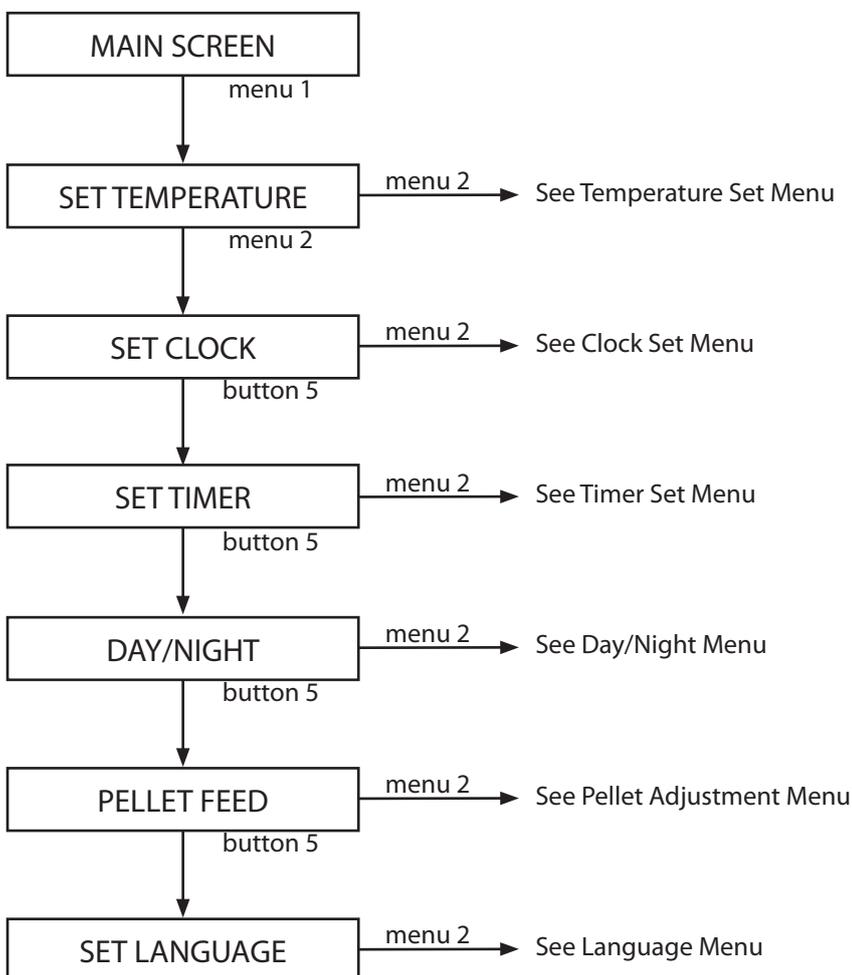

SET TEMPERATURE MENU

The temperature value can be changed at any time by the user. Press the **menu 1** button; the display shows "**ROOM TEMP SET**". Then use buttons 4 and 5 to select the desired temperature value: the buttons enable the increase/decrease of the room thermostat value from a minimum of 07°C (the display shows **MIN**) to a maximum of 40°C (the display shows **MAX**).

This value is shown on the first line of the display; the third and fourth lines show "**ROOM TEMP SET**". When you have set the desired value, confirm with button **1**.

SET CLOCK MENU

This procedure is used for activating/deactivating the weekly programmer and setting the current time. The procedure can be carried out with the stove on or off, as follows:

1. Press the **menu 1** button ⇒ the display will show "**ROOM TEMP SET**"
2. Press the **menu 1** button again ⇒ the display will show "**CLOCK SET MENU**"
3. Confirm with the **menu 2** button

When you have entered the programming function, the display will show the following parameters:

Parameter 1 → CLOCK DAY

Used for setting the following values: "**day1**"... "**day7**" ⇒ use buttons 4 and 5 to set the current day of the week.

When the current day has been set, the weekly programmer function is automatically enabled.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter 2 → CLOCK HOURS

Use buttons 4 and 5 to set the current hour.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter 3 → CLOCK MINUTES

Use buttons 4 and 5 to set the current minutes.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

If you make an error in programming, exit with button 1 and repeat the steps described above.

SET TIMER MENU

The weekly programmer enables you to set three heating periods over the course of the day, to be used for each day of the week. The timetables for switch-on/off must be consecutive within the same day, on a 24-hour basis (from 0 to 24), and not straddling more than one day:

e.g.:	Switch-on 07.00 / switch-off 18.00	OK
	Switch-on 22.00 / switch-off 05.00	ERROR

The programming procedure can be carried out with the stove on or off, and involves the following steps:

4. Press **menu 1** ⇒ the display will show "**ROOM TEMP SET**"
5. Press **menu 1** again ⇒ the display will show "**MENU SET CLOCK**"
6. Press button 5 ⇒ the display will show "**CRONO SET MENU**"
7. Press **menu 2** to confirm

Once you enter the programming area, the display will show the following:

Parameter ut 0 ⇒ CRONO ON-OFF

Use buttons 4 and 5 to enable/disable the weekly programmer.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter ut 1 ⇒ START PROGRAM 1

Use buttons 4 and 5 to adjust switch on time for the first time period 00:00 to 23:50, or to disable it by pressing **off**.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter ut 2 ⇒ STOP PROGRAM 1

Use buttons 4 and 5 to set the end of the first time period from 00:00 to 23:50 or to disable the function by setting it on **off**.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter ut 3 ⇒ DAYS ON 1

Used for setting which days of the week to enable/disable the time period set.

The procedure is as follows:

- a. button 5 ⇒ to scroll the days
- b. button 4 ⇒ to enable/disable (ON/OFF) the first time period for that day

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter ut 5 ⇒ START PROGRAM 2

Use buttons 4 and 5 to set the start of the second time period from **00:00** to **23:50** or to disable the function by setting it on **off**.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter ut 6 ⇒ STOP PROGRAM 2

Use buttons 4 and 5 to set the end of the second time period from **00:00** to **23:50** or to disable the function by setting it on **off**.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter ut 7 ⇒ DAYS ON 2

Used for setting which days of the week to enable/disable the time period set.

The procedure is as follows:

- a. button 5 ⇒ to scroll the days

b. button 4 ⇨ to enable/disable (ON/OFF) the first time period for that day
To confirm and continue with programming, press the **menu 2** button.
To return to the previous parameter, press the **menu 1** button.

Parameter ut 8 ⇨ START PROGRAM 3

Use buttons 4 and 5 to set the start of the third time period from 00:00 to 23:50 or to disable the function by setting it on off.
To confirm and continue with programming, press the menu 2 button.
To return to the previous parameter, press the menu 1 button.

Parameter ut 9 ⇨ STOP PROGRAM 3

Use buttons 4 and 5 to set the end of the third time period from 00:00 to 23:50 or to disable the function by setting it on off.
To confirm and continue with programming, press the menu 2 button.
To return to the previous parameter, press the menu 1 button.

Parameter ut A ⇨ DAYS ON 3

Used for setting which days of the week to enable/disable the time period set.
The procedure is as follows:

- a. button 5 ⇨ to scroll the days
- b. button 4 ⇨ to enable/disable (ON/OFF) the first time period for that day

To confirm and continue with programming, press the menu 2 button.
To return to the previous parameter, press the menu 1 button.

TO ENABLE/DISENABLE the weekly programmer, follow the procedure described at **parameter 1** of the *Set Clock Menu*.

Note: When the programmer is enabled, the corresponding LED lights up on the display (see *Table of Display Messages*).

Manual controls always have priority over the programming.

DAY/NIGHT MENU

The day/night temperature function makes it possible to switch the stove on/off automatically based on two selected temperatures.

This system enables you to select one temperature for daytime and one for night.

To access the parameters of the day/night temperature function, proceed as follows:

1. Press the **menù 1** button ⇨ the display will show "**ROOM TEMP SET**"
2. Press the **menù 1** button again ⇨ the display will show "**CLOCK SET MENU**"
3. Press button 5 twice ⇨ the display will show "**DAY NIGHT MENU**"
4. Confirm with the **menu 2** button.

When you have entered the programming function, the display will show the following parameters:

Parameter ut A ⇨ DAY NIGHT

Use buttons 4 and 5 to enabling/disabling the day/night temperature function.
To confirm and continue with programming, press the **menu 2** button.
To return to the previous parameter, press the **menu 1** button.

Parameter ut b ⇒ DAY START

Use buttons 4 and 5 to set the day start/night end.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter ut c ⇒ DAY END

Use buttons 4 and 5 to set the day end/night start.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter ut d ⇒ MAX DAY TEMPERATURE

Use buttons 4 and 5 to set maximum temperature for the day period.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

Parameter ut E ⇒ MAX NIGHT TEMPERATURE

Use buttons 4 and 5 to set maximum temperature for the night period.

To confirm and continue with programming, press the **menu 2** button.

To return to the previous parameter, press the **menu 1** button.

When the stove switches off because the maximum temperature has been reached, the display shows **"doff"**. The stove will switch on again automatically when the room temperature is 3°C lower than the maximum temperature set.

Ex. Stove status ⇒ **doff**

Max. temperature set ⇒ **25°C**

When the room temperature goes below 22°C ($25 - 3 = 22^\circ\text{C}$), the stove will automatically start again.

N.B. This only occurs when the stove is in "doff" status and not "OFF" status.

Manual controls always have priority over the programming.

PELLET LOAD MENU

If the stove has operating problems due to the quantity of pellets, you can adjust the pellet load directly from the remote control.

Problems related to the quantity of pellets fall into one of two categories:

1. LACK OF PELLETS :

b. At the lowest speed, the stove tends to almost burn out, causing the stove to go into **"NO PELLETS"** alarm status

c. When **"NO PELLETS"** is displayed, there may still be some unburned pellets in the brazier

2. EXCESS PELLETS :

- a. The stove develops a very high flame even at low speeds
- b. The flame tends to soil the stove window, darkening it almost completely
- c. The brazier tends to get incrustated, blocking the air inlet holes, due to the excessive pellet load that is only partially burned

N.B.: If this problem occurs just a few months after installation, check to make sure that the user is correctly carrying out the regular cleaning schedule described in the instruction manual.

The adjustment is made on a percentage basis, and therefore any change of this parameter leads to a proportional variation on all loading speeds of the stove.

To access the percentage adjustment of pellet loading, proceed as follows:

1. Press the **menu 1** button ⇒ the display will show "**ROOM TEMP SET**"
2. Press the **menu 1** button again ⇒ the display will show "**CLOCK SET MENU**"
3. Press button 5 **three** times ⇒ the display will show "**PELLET ADJUST MENU**"
4. Confirm with the **menu 2** button

When you have entered the programming function, the display will show the following parameters:

Parameter ist A ⇒ **PELLET LOAD**

Use buttons 4 and 5 to set the percentage increase/decrease at 5 point intervals (the parameter can be modified with a maximum scale from -50 to +50). When the adjustment has been made, press **menu 2** or **1** to confirm and exit.

Adjustment table

LACK OF PELLETS	Increase the percentage by 5 percent and try the stove with this new setting for at least half an hour. If the problem is reduced but not resolved, increase by a further 5 percent. Repeat this process until the problem is resolved. If the problem cannot be resolved, contact the service centre.
EXCESS PELLETS	Decrease the value by 5 percent and try the stove with this new setting for at least half an hour. If the problem is reduced but not resolved, decrease by a further 5 percent. Repeat this process until the problem is resolved. If the problem cannot be resolved, contact the service centre.

When the adjustment has been made, press button 1 to confirm and escape.

LANGUAGE MENU

You can choose from the following languages available:

- ❖ ITALIAN
- ❖ ENGLISH
- ❖ FRENCH
- ❖ GERMAN

To access this menu, proceeds as follows:

1. Press the **menu 1** button ⇒ the display will show "**ROOM TEMP SET**"
2. Press the **menu 1** button again ⇒ the display will show "**CLOCK SET MENU**"
3. Press button 5 four times ⇒ the display will show "**LANGUAGE**"
4. Confirm with the **menu 2** button

Use buttons 4 and 5 to select the desired language and confirm with the **menu 2** button.

ROOM THERMOSTAT

MECHANICAL THERMOSTAT (OPTIONAL)

N.B.: Installation must be carried out by an authorised technician.

A thermostat can be placed in a room adjacent to the one in which the stove is installed. Just connect a mechanical thermostat (like those used for boilers) following the procedure described below. (We recommend positioning the optional thermostat at a height of 1.50 m above floor level.)

INSTALLING A MECHANICAL THERMOSTAT (OPTIONAL)

N.B.: Installation must be carried out by an authorised technician.

1. Switch off the appliance using the master switch on the back of the stove.
2. Disconnect the plug from the socket.
3. Referring to the electrical wiring diagram, connect the two thermostat wires to the respective terminals on the back side of the stove, one red and one black.

MECHANICAL THERMOSTAT OPERATION

1. Light the stove using button 1.
2. Set the desired heating power using buttons 4 and 5.
3. Use the **menu 1** button to go to the menu "**ROOM TEMP SET**" and set on "**MIN**" using button 4.
4. Set the desired room temperature on the external thermostat (e.g. 21 °C).

At this point, the external thermostat will control stove operation as follows:

- ❖ Thermostat with closed contact ⇒ the stove switches on and operates at the power set, and the display shows "**T ON**".
- ❖ Thermostat with open contact ⇒ the stove goes to the minimum power even if the display shows the previously set value; the display will then show "**MIN**".

MECHANICAL THERMOSTAT OPERATION IN STANDBY MODE (TO BE USED ALSO FOR REMOTE ACTUATOR)

The Standby function is used to further reduce pellet consumption by switching off the stove when the desired temperature has been reached.

As the temperature drops, the stove will automatically switch on again.

1. Set the desired temperature using buttons 4 and 5.
2. Use the **menu 1** button to go to the menu "**ROOM TEMP SET**" and set on "**MIN**" using button 4.
3. Press button 1 for three seconds; the display will show "**STBY**".

At this point the thermostat will control the stove as described below:

- ❖ Thermostat with closed contact: ⇒ the stove switches on and operates at the power set. The display shows "**T ON**".
- ❖ Thermostat with open contact: ⇒ the stove switches off or stays off, and the display shows "**STBY**".

ATTENTION !!!



Using an external room thermostat in the various modes, the **day-night temperature function** is disabled in automatic mode.

CLEANING

CLEANING THE BRAZIER

The brazier must be cleaned daily.

- ❖ Remove the brazier from its container and clean the holes using the supplied relevant tool (see figure 36).
- ❖ Remove the ash from the brazier using a vacuum cleaner.
- ❖ Suck-up the ash deposited in the brazier compartment



figure 36

USE OF SCRAPERS

Cleaning the heat exchangers guarantees a constant heat yield over time. This type of maintenance must be carried out at least once a day. To do this just use the appropriate scrapers positioned in the upper part of the stove, performing the horizontal movement several times.



figure 37

CLEANING OF ASH COLLECTION COMPARTMENTS

The ash collection compartments (indicated in figure 38) should be emptied as needed using a vacuum cleaner.

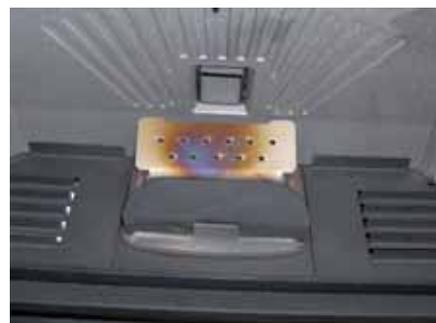


figure 38

CLEANING THE HEAT EXCHANGER (MONTHLY)

The heat exchanger chamber has to be cleaned once a month because the ash residue deposited on the back of the cast iron furnace wall obstructs the regular flue gas flow.

To be able to access the heat exchangers, it is necessary to remove the central part of the furnace wall as described below:

- ❖ Remove the brazier from its frame
- ❖ Rotate the door latch by 180° (figure 40).
- ❖ Take the pull-out cast iron and rotate it downwards.
- ❖ Remove it from the combustion chamber by pulling it towards you. Pay attention to the two lateral cast iron levers.



figure 39

Once the heat exchanger chamber is accessible, use the ash hook to remove the deposited residues and scrape off any encrustation. Finally use a vacuum cleaner to complete the cleaning (figure 42). After that, proceed in reverse order to reposition the pull-out cast iron. Once the furnace wall is in position, rotate the door latch by 180° to return it to its original position.



figure 40



figure 41

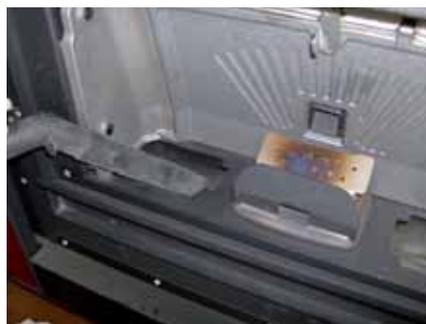


figure 42

DOOR, ASH DRAWER AND BRAZIER SEALS

The seals ensure that the stove is hermetically sealed and consequently that it operates correctly. The seals should be checked periodically and replaced immediately if worn or damaged. These operations must be carried out by an authorised technician.

N.B. To ensure correct operation, the stove should have general maintenance performed at least once a year by an authorised technician.

If the power cable is damaged, it must only be replaced by the service centre or by a qualified technician, in order to avoid any risks.

CHIMNEY CONNECTION

Once a year, or whenever needed, vacuum and clean the duct that leads to the chimney. If there are horizontal sections, remove any ash residues before they can obstruct passage of the smoke. **FAILURE TO CLEAN jeopardises safety.**

BRAZIER PARTITION

The insert is supplied with a divider fixed to the brazier by a screw, which allows to optimise stove combustion processes.

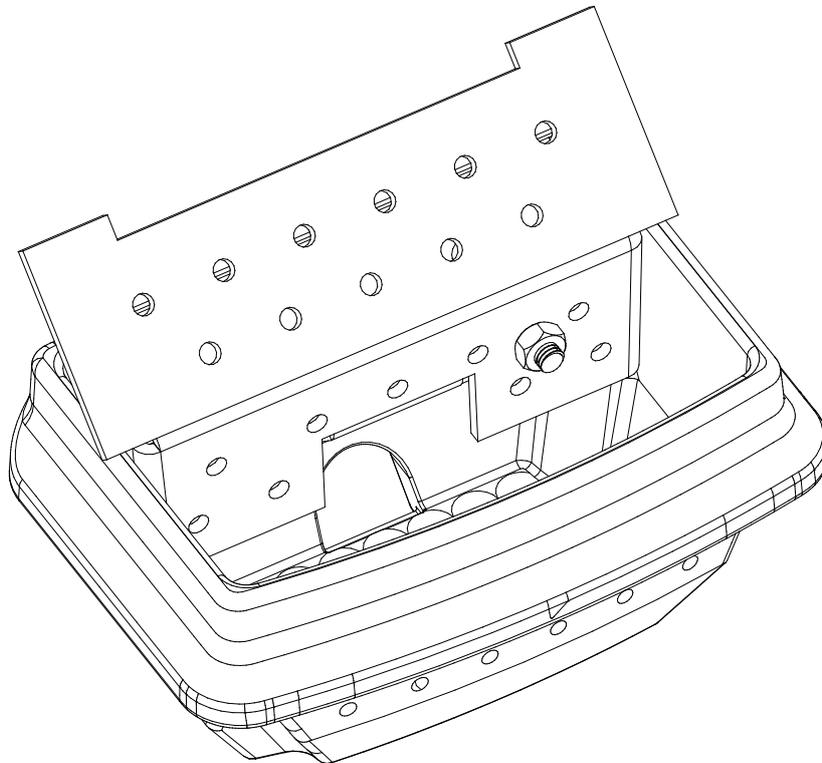


figure 43

 ATTENTION!!

The removal of the partition jeopardises product safety and leads to the immediate invalidation of the warranty period. In the event of wear or deterioration, request a replacement from the assistance service (the replacement does not come under the terms of the warranty as the part is particularly subject to wear and tear).

WIRING DIAGRAMS

COMFORT MINI

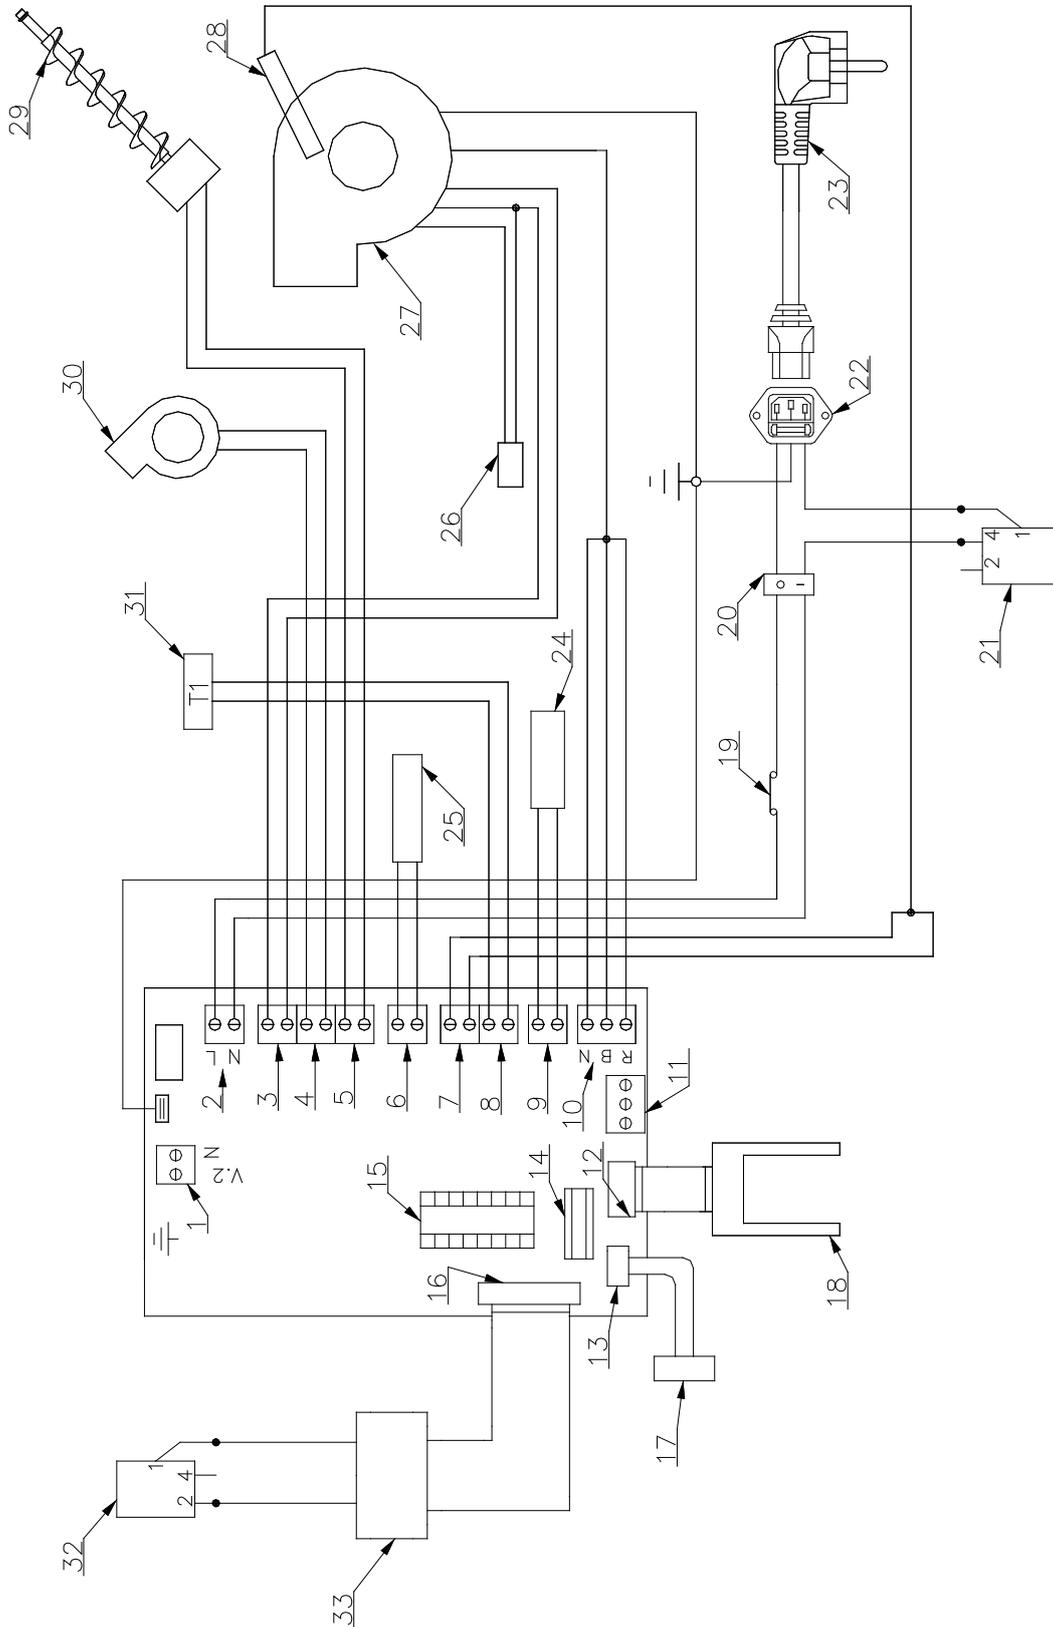


figure 44

Numbering	Description
1	Free terminal
2	Circuit board power supply terminal
3	Flue expulsion motor power supply terminal
4	Tangential fan power supply terminal
5	Pellet feed motor reducer power supply terminal
6	Ignition electrode power supply terminal
7	Flue probe input terminal
8	External thermostat input terminal
9	Room probe input terminal
10	Encoder input terminal
11	Free terminal
12	Depression sensor input terminal
13	Serial port terminal
14	Weekly programmer terminal
15	Microprocessor mount
16	Rx/tx circuit board connector
17	Serial port
18	Depression control circuit board
19	85°C safety thermostat with bulb
20	Bipolar switch
21	Power supply safety micro switch
22	Three-pole network plug
23	Power supply cable
24	Sonda termostato ambiente
25	Ignition electrodes
26	Flue expulsion motor condenser
27	Flue expulsion motor
28	Flue probe
29	Pellet feed motor reducer
30	Tangential fan
31	External thermostat (optional)
32	Door safety micro switch
33	Rx/tx circuit board

COMFORT P80

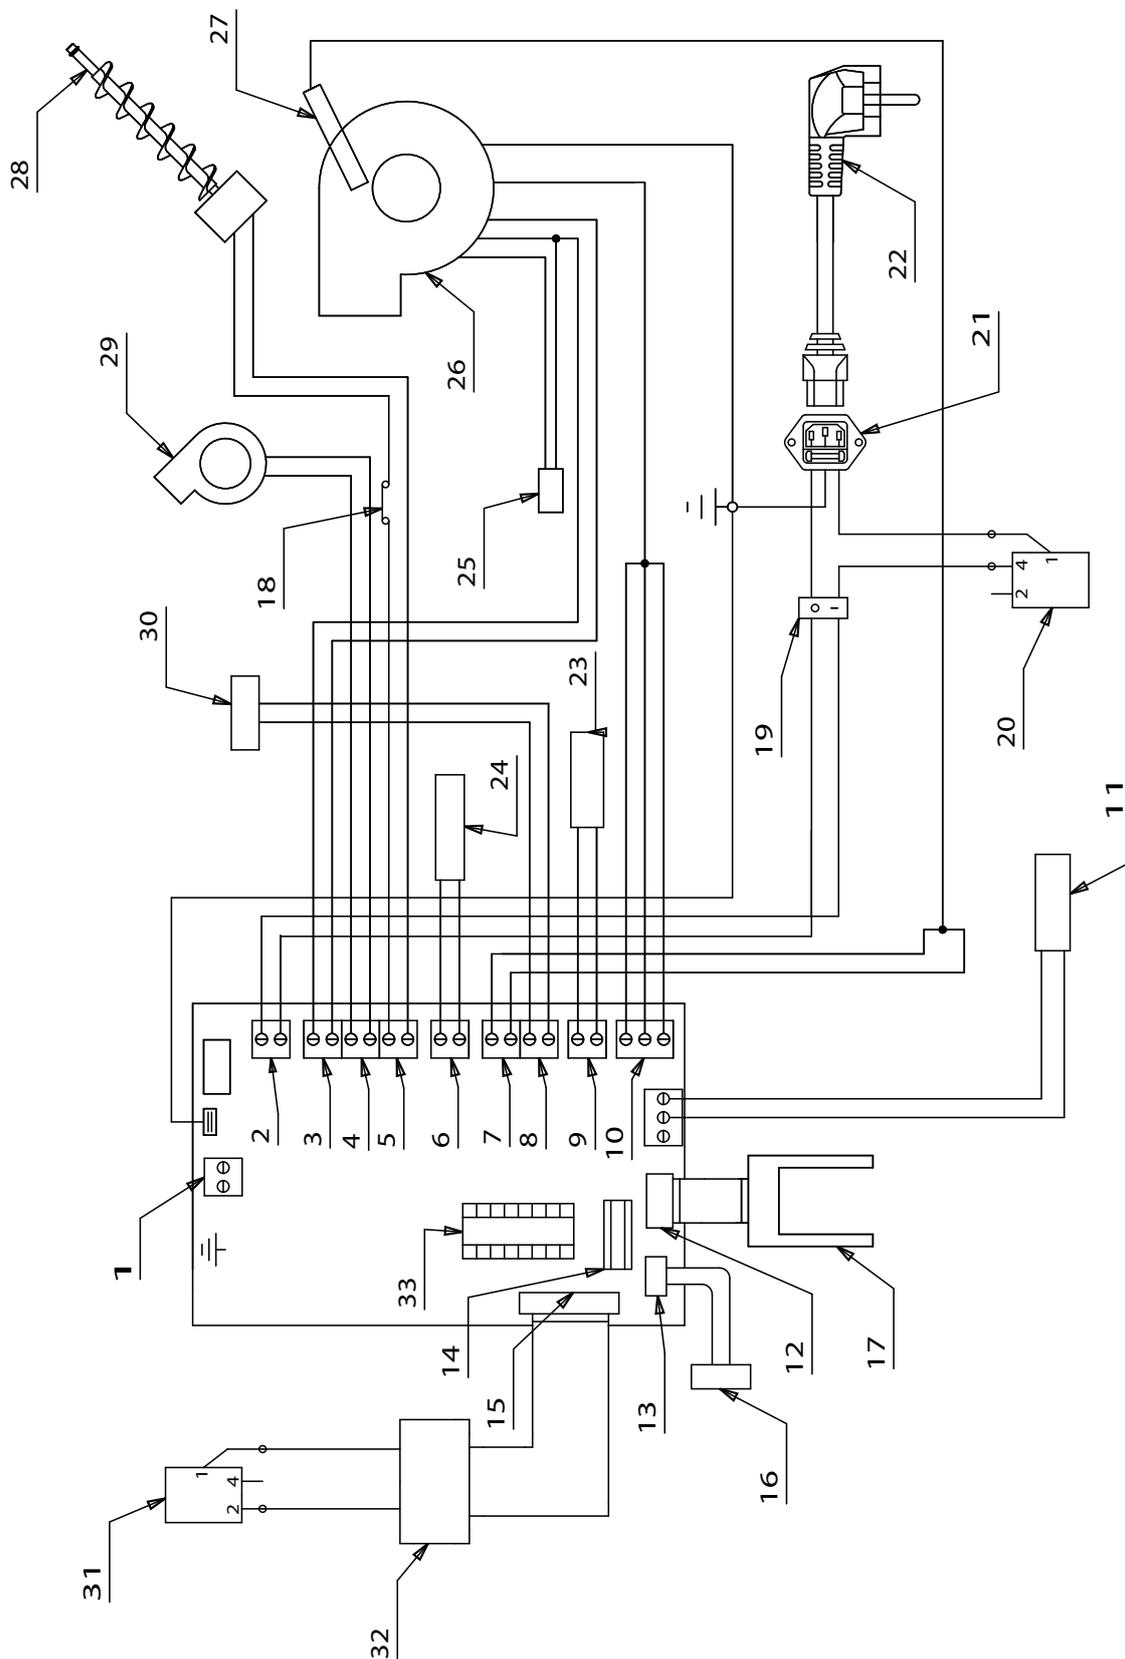



figure 45

Numbering	Description
1	Free terminal
2	Circuit board power supply terminal
3	Flue expulsion motor power supply terminal
4	Tangential fan power supply terminal
5	Pellet feed motor reducer power supply terminal
6	Ignition electrode power supply terminal
7	Flue probe input terminal
8	External thermostat input terminal
9	Room probe input terminal
10	Encoder input terminal
11	Tank temperature probe
12	Depression sensor input terminal
13	Serial port terminal
14	Weekly programmer terminal
15	Rx/tx electronic board connector
16	Serial port
17	Depression control circuit board
18	85°C safety thermostat with bulb
19	Bipolar switch
20	Power supply safety micro switch
21	Three-pole network plug
22	Power supply cable
23	Room thermostat probe
24	Ignition electrode
25	Flue expulsion motor condenser
26	Flue exhaust motor
27	Flue probe
28	Pellet feed motor reducer
29	Tangential fan
30	External thermostat (optional)
31	Door safety micro switch
32	Rx/tx circuit board
33	Microprocessor mount

TABLE OF DISPLAY MESSAGES

INDICATIONS		
Message Display	Cause	Solution
CLEANING WAIT	An attempt has been made to switch on a stove again when it has just been shut down (normal shutdown or caused by an alarm).	When the stove has just been shut down (normal shutdown or caused by an alarm situation), you have to wait until it is completely cold and then clean the brazier. It is possible to re-start the stove only after having carried out this operation.
MAX	Room Thermostat set at max. value.	In this mode, the stove no longer has a temperature level but works in manual mode with 5 powers. To exit this mode, press button 2 to lower the room temperature.
MIN	Room Thermostat set at min. value.	In this mode, the stove only works exclusively at the 1st power level, independently from the set power. To exit this Mode, press button 3 to increase the temperature.
T ON	An external thermostat has been connected. The room thermostat probe has disconnected from the board. The room thermostat probe is interrupted.	To exclude an external thermostat, simply disconnect it. Other resetting operations must be carried out by an authorised technician.
STBY	Stove is off and waiting to start again.	In this mode, the stove can be switched on/off by using an external thermostat (see "Mechanical thermostat with energy saving") To exclude this function, increase the room temperature by pressing button 3.
DOFF	Stove is off because of "Day/Night Temperature Function" and waiting to start again.	To stop the stove from starting once more, (because of the "Day/Night Temperature Function") press button 1 for three seconds, turning the stove OFF . To disable this function completely, hold down button 4 and press button 5 at the same time.
NO RANGE	Lack of communication between remote control and stove.	Check the power supply of the stove. Carry out the procedure "Selecting the operating frequency" described in the manual. Remote control energy saving: press button 4 or 5 to restore correct operation. N.B. Certain radio-frequency devices (e.g. mobile and cordless phones, etc.) may interrupt the communication between the remote control and the stove. Other resetting operations must be carried out by an authorised technician.
COOLING BLACK OUT	No current on the general power supply.	When the shutdown cycle is completed, the stove will light again automatically.
BRAZIER CLEANING	The automatic cleaning of the brazier is in progress.	The automatic cleaning of the brazier takes place at regular set intervals. The automatic cleaning does not start if the stove is at the first power level
DOOR OPEN	The fire door is open	Keep the door closed during normal operation.

ALARMS		
Message Display D1	Cause	Solution
	Indicates the presence of an alarm	This indicator lights up when one of the alarms described below is in progress and is accompanied by the corresponding indication on display D1. To reset the alarm, press button 1 and hold for three seconds when the stove is completely cold. If the light is flashing, it indicates that the depression sensor is deactivated. All resetting operations must be carried out by an authorised technician.
GAS FAN	The flue gas motor is blocked The speed control probe is faulty. No power supply to the flue gas motor.	All resetting operations must be carried out by an authorised technician
GAS PROBE	The exhaust flue gas probe is broken. The exhaust flue gas probe is disconnected from the board.	All resetting operations must be carried out by an authorised technician
HIGH GAS TEMP	The cross-flow fan is faulty. Excessive pellet feed. No power supply to the cross-flow fan.	Adjust the flow of pellets (see "Pellet Load Adjustment"). Other resetting operations must be carried out by an authorised technician.
DEPRESSION	The flue gas exhaust pipe is obstructed. The air inlet is blocked. The combustion chamber is dirty. The pressure sensor is faulty. The ash drawer is not closed properly. The door is not closed properly.	Check to make sure that the exhaust outlet and the combustion chamber are clean. Check that the air inlet is not blocked. Check to see if the drawer is sealed properly. Check to see if the door is sealed properly. Other resetting operations must be carried out by an authorised technician.
NO FLAME	The pellet tank is empty. The spark plug is faulty or out of position. Inadequate pellet load setting.	Check the level in the pellet tank. Check the procedures described in "Ignition". Other resetting operations must be carried out by an authorised technician.
NO FLAME BLACK OUT	No electricity during the lighting phase.	Press button 1 to switch off the stove and repeat the procedure described in "Ignition". Other resetting operations must be carried out by an authorised technician.
NO PELLETT	The pellet tank is empty. Pellet feeding is insufficient. The feed motor still has to settle in. The geared motor is not loading pellets.	Check the level in the pellet tank. Adjust the flow of pellets (see "Pellet Load Adjustment"). Other resetting operations must be carried out by an authorised technician.
CLEANING WAIT + alarm	Attempt to release alarm with stove still cooling	Every time the stove visualises one of the above-listed alarms it will automatically switch off. The stove will block any attempt to release the alarm during this phase visualising the alarm itself and COOLING WAIT alternately. Release of the alarm using button 1 is only possible when the appliance is switched off.
TEL -----	Display of the service centre telephone number.	When an alarm occurs, the type of alarm detected and the telephone number of the service centre flash on the display in alternation. If the number has not been entered, the display shows a series of dashes.

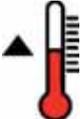INDICATOR LIGHTS		
LED indicator light	Meaning	Description
	<i>Weekly Programmer function</i>	This LED is on/off when Weekly programmer is on/ off. For all the settings regarding this function, see the section Weekly programmer.
	<i>Room Thermostat function</i>	This LED is on/off when the room temperature is lower/higher than the temperature set. To modify the temperature setting, use buttons 2 and 3 during normal operation.
	<i>Day-Night temperature function</i>	This LED is on/off when the Day-Night temperature function is on/off. To enable/disable the Day-Night temperature function, simply hold down button 4 and press button 5. For all settings concerning this function, see the Day-Night temperature function paragraph.
	Spark plug deactivation	<i>This LED is on/off when the spark plug is active/inactive.</i> To reactivate the spark plug, contact an authorised technician.
	Flue gas motor operation	<i>This LED is on/off when the flue motor is running/not running.</i>
	Pellet load motor operation	The LED is on/off when the pellet loading motor is active/deactivated. During normal operation, this LED flashes intermittently.
	Cross-flow fan operation	The LED is on/off when the cross-flow fan is on/off.
	Communication established between remote control and stove	Each time you press a button on the remote control, this LED should light up. If it stays on, it means that communication between the remote control and the stove is blocked. To reset remote control operation, contact an authorised technician.
	Not used	Not used

WARRANTY

EXTRAFLAME S.p.A. reminds you that the manufacturer possesses the rights stated on Italian Decree no. 24 from the 2nd February, 2002, and that the following warranty does not jeopardise these rights.

This warranty certificate by Extraflame S.p.A., with headquarters in Montecchio Precalcino (VI), Via dell'Artigianato, 10 (Italy), extends to all components of the stove supplied by Extraflame S.p.A., and includes free repair or replacement of any faulty part of the stove, on condition that:

- ❖ The defect is detected within 2 YEARS of the delivery date and is reported to an Extraflame S.p.A. Technical Assistance Centre no longer than 2 months after its detection;
- ❖ It is recognised as a defect by an Extraflame S.p.A. Technical Assistance Centre.

The client will not be charged for any costs or expenses related to interventions carried out by the Extraflame S.p.A. Technical Assistance Centre if these are covered by the warranty conditions.

WARRANTY CONDITIONS

The warranty is considered valid on condition that:

1. The stove is installed according to all related norms and to the information contained in the installation, use and maintenance manual, by qualified personnel.
2. The warranty certificate has been filled in and signed by the customer and convalidated by an Extraflame S.p.A. Technical Assistance Centre or by the vendor.
3. The document which proves the warranty, filled in and accompanied by the receipt, is duly conserved and shown to Extraflame S.p.A. personnel in the event of an intervention.

The warranty is not considered valid in the following cases:

1. Warranty conditions have not been respected.
2. Installation has not been carried out respecting all related norms or the information in this manual.
3. Whenever the client is judged to have been negligent due to incorrect or absent maintenance of the stove.
4. Presence of electrical and hydraulic systems not compliant with the current norms.
5. Damage caused by atmospheric, chemical or electrochemical agents, improper use of the product, modifications or tampering with the product, unsuitability of the flue/chimney, and/or any other causes not depending on the manufacture of the product.
6. Damage caused by normal corrosion phenomena or deposits typical of heating systems (condition valid for products using water).
7. Damage caused by the use of non original spare parts or due to service performed by technical personnel not authorised by Extraflame S.p.A.
8. Improper or negligent use of the stove.
9. Any damage caused by transport. We therefore recommend that you carefully inspect the goods on receipt, immediately notifying the vendor of any damage and making note of such on the shipping document and on the shipper's copy.

Extraflame S.p.A. is not liable for eventual damage which may be caused, either directly or indirectly, to people, things and pets as the result of not following the instructions indicated in this installation, use and maintenance manual or the current norms related to installation and maintenance of this product.

The warranty excludes:

- ❖ The gaskets, all ceramic or tempered glass, cast iron or Ironker facings or grills, painted, chromium-plated or gold-plated components, majolica, handles and electrical cables.
- ❖ Chromatic variations, cracks and slight variation in size of the majolica pieces do not constitute a reason for contestation, as they are natural characteristics of the materials themselves.
- ❖ Building works.
- ❖ Parts for the production of domestic hot water not supplied by Extraflame S.p.A. (only products using water).
- ❖ The heat exchanger is excluded from the warranty unless an anti-condensation circuit is installed (only products using water).
- ❖ The warranty excludes any calibrations or adjustments of the product relating to the type of fuel or type of installation.

Other clauses

Should any faulty or malfunctioning part be detected during normal use, these parts will be replaced free of charge by the vendor or by our local Technical Assistance Centre.

This clause applies also to other countries, with the exception of particular conditions agreed upon during the contract-writing phase with the distribution agent abroad.

Replacement of parts does not result in warranty extension.

No compensation will be given for the period in which the product is out of use.

This is the only valid warranty and no one is authorised to supply other warranties either in the name of or on behalf of EXTRAFLAME S.p.A.

Recommended inspection (extra charge)

Extraflame recommends having an operational inspection of the product by an Extraflame Authorised Technical Assistance Centre which will supply all the information regarding its correct use.

SERVICE UNDER WARRANTY

The service request must be forwarded to the vendor.

RESPONSIBILITY

EXTRAFLAME S.p.A. shall not be liable for any direct or indirect damage caused by or depending on the product.

COMPETENT COURT

For any controversy, the competent court shall be the court of Vicenza, Italy.

Extraflame

Stufe a Pellet

EXTRAFLAME S.p.A.

Via Dell'Artigianato, 10
36030 MONTECCHIO PRECALCINO
Vicenza - ITALY
Tel. 0445/865911
Fax 0445/865912

www.lanordica-extraflame.com

E-mail: info@extraflame.com

This document is at your disposal at www.extraflame.it/support