



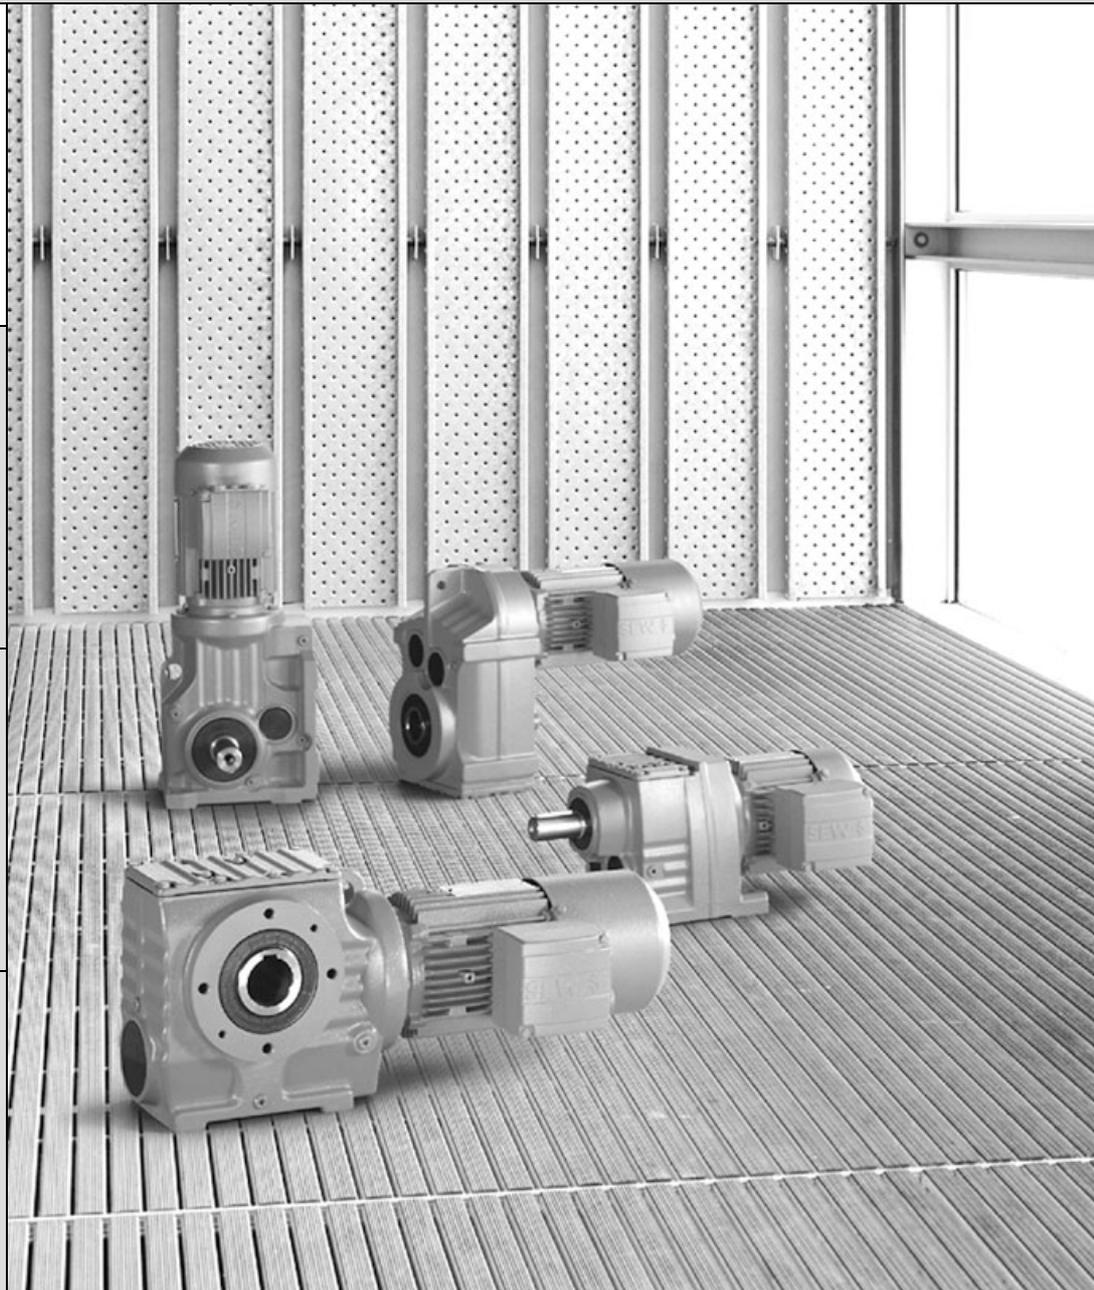

SEW
EURODRIVE

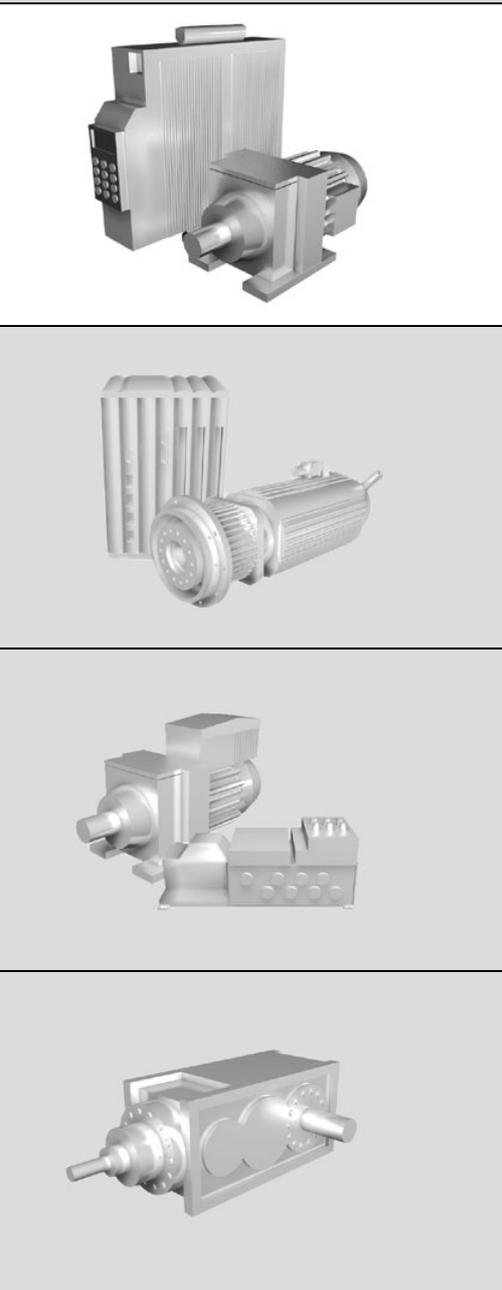


**Gear Units, R..7, F..7, K..7, S..7 Series,
SPIROPLAN® W**

A6.B01

Edition 05/2004

11226811 / EN

Operating Instructions

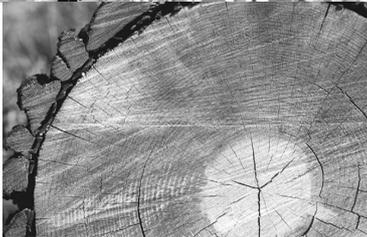



| | | |
|-----------|---|-----------|
| 1 | Important Notes | 4 |
| 2 | Safety Notes | 6 |
| 3 | Gear Unit Structure | 9 |
| 3.1 | Basic structure of helical gear units | 9 |
| 3.2 | Basic structure of parallel shaft helical gear units | 10 |
| 3.3 | Basic structure of helical-bevel gear units | 11 |
| 3.4 | Basic structure of helical-worm gear units | 12 |
| 3.5 | Basic structure of SPIROPLAN® gear units | 13 |
| 3.6 | Nameplate, unit designation | 14 |
| 4 | Mechanical Installation | 15 |
| 4.1 | Required tools / aids | 15 |
| 4.2 | Prerequisites for assembly..... | 15 |
| 4.3 | Installing the gear unit..... | 16 |
| 4.4 | Gear unit with solid shaft..... | 19 |
| 4.5 | Torque arms for mounted gear units..... | 21 |
| 4.6 | Mounted gear unit with keyway or splined hollow shaft | 23 |
| 4.7 | Mounted gear units with shrink disc..... | 27 |
| 4.8 | Mounted gear units with TorqLOC® | 30 |
| 4.9 | AM adapter coupling | 36 |
| 4.10 | AQ adapter coupling | 38 |
| 4.11 | AD input shaft assembly | 40 |
| 5 | Startup | 44 |
| 5.1 | Startup of helical-worm and SPIROPLAN® W gear units..... | 44 |
| 5.2 | Startup of helical, parallel shaft helical and helical-bevel gear units | 44 |
| 6 | Inspection and Maintenance | 45 |
| 6.1 | Inspection and maintenance intervals..... | 45 |
| 6.2 | Lubricant change intervals | 45 |
| 6.3 | Inspection and maintenance of the gear unit | 46 |
| 6.4 | Inspection / maintenance of AM / AQA adapters | 47 |
| 6.5 | Inspection / maintenance of AD adapters | 47 |
| 7 | Malfunctions | 48 |
| 7.1 | Gear unit malfunctions | 48 |
| 7.2 | AM / AQA / AL adapter malfunctions | 48 |
| 7.3 | AD input shaft assembly malfunctions | 49 |
| 8 | Mounting Positions | 50 |
| 8.1 | General information on mounting positions | 50 |
| 8.2 | Key to the mounting position sheets | 51 |
| 8.3 | Mounting positions for R helical gearmotors..... | 52 |
| 8.4 | Mounting positions of RX helical gearmotors..... | 55 |
| 8.5 | Mounting positions for parallel shaft helical gearmotors | 57 |
| 8.6 | Mounting positions for helical-bevel gearmotors..... | 60 |
| 8.7 | Mounting positions for helical-worm gearmotors | 65 |
| 8.8 | Mounting positions for SPIROPLAN® W gearmotors..... | 71 |
| 9 | Lubricants | 74 |
| 9.1 | Lubricant table | 74 |
| 9.2 | Lubricant fill quantities | 77 |
| 10 | Appendix | 82 |
| 10.1 | Index of changes..... | 82 |
| 11 | Index | 83 |



1 Important Notes

Safety and warning instructions

Always follow the safety and warning instructions in this publication!



Electrical hazard

Possible consequences: Severe or fatal injuries.



Hazard

Possible consequences: Severe or fatal injuries.



Hazardous situation

Possible consequences: Slight or minor injuries.



Harmful situation

Possible consequences: Damage to the drive and the environment.



Tips and useful information.



You must adhere to the operating instructions to ensure:

- Trouble-free operation
- Fulfillment of any rights to claim under guarantee

Consequently, read the operating instructions before you start working with the gear unit!

The operating instructions contain important information about servicing. Therefore, keep the operating instructions close to the gear unit.



- Adjust the lubricant fill volume and position of the breather valve accordingly in the event of a change of mounting position (see Sec. "Lubricants" and "Mounting Positions").
- Follow the instructions in Sec. "Mechanical installation" / "Installing the gear unit"!

**Waste disposal**

Please follow the latest instructions: Dispose of the following materials in accordance with the regulations in force:

- Steel scrap:
 - Housing parts
 - Gears
 - Shafts
 - Anti-friction bearing
 - Gray-cast iron (if there is no special collection)
- Parts of the worm gears are made of non-ferrous metals. Dispose of the worm gears as appropriate.
- Collect waste oil and dispose of it correctly.



2 Safety Notes

Preface

The following safety notes are primarily concerned with the use of gear units. If using **gearmotors**, please also refer to the safety notes for motors in the relevant operating instructions.

Please also consider the supplementary safety notes in the individual sections of these operating instructions.

General information

During and after operation, gearmotors, gear units and motors have:

- Live parts
- Moving parts
- Hot surfaces (may be the case)

Only qualified personnel may carry out the following work:

- Transportation
- Putting into storage
- Installation / assembly
- Connection
- Startup
- Maintenance
- Servicing

The following information and documents must be observed during these processes:

- Relevant operating instructions and wiring diagrams
- Warning and safety signs on the gear unit / gearmotor
- System-specific regulations and requirements
- National / regional regulations governing safety and the prevention of accidents

Serious injuries and property damage may result from:

- Improper use
- Incorrect installation or operation
- Unauthorized removal of necessary protection covers or the housing

Designated use

Gearmotors / gear units from SEW are intended for industrial systems. They correspond to the applicable standards and regulations.

Technical data and information about the permitted conditions can be found on the nameplate and in the documentation.

It is essential that you follow all the instructions!



Transportation

Inspect the shipment for any damage that may have occurred in transit as soon as you receive the delivery. Inform the shipping company immediately. It may be that you are not permitted to startup the drive due to the damage.

Tighten installed eyebolts. The eyebolts are only designed for the weight of the gearmotor / gear unit. Do not attach any additional loads.

The installed lifting eyebolts comply with DIN 580. The loads and regulations specified in this standard must always be observed. If two eyebolts are available, use both of them for transport. In this case, the tension force vector of the slings must not exceed a 45° angle in accordance with DIN 580.

Use suitable, sufficiently rated handling equipment if necessary. Remove any transportation fixtures prior to startup.

Extended storage of gear units

Gear units of the "extended storage" type have:

- An oil fill suitable for the mounting position so the unit is ready to run (mineral oil CLP and synthetic oil CLP HC). You should still check the oil level before startup (see Sec. "Inspection / Maintenance" / "Inspection and maintenance of the gear unit").
- A higher oil level in some cases (synthetic oil CLP PG / food grade oil). Correct the oil level before startup (see Sec. "Inspection / Maintenance" / "Inspection and maintenance of the gear unit").

Comply with the storage conditions specified in the following table for extended storage:

| Climate zone | Packaging ¹⁾ | Storage location | Storage time |
|---|---|--|---|
| Temperate (Europe, USA, Canada, China and Russia, excluding tropical zones) | Packed in containers, with desiccant and moisture indicator sealed in the plastic wrap. | With roof, protected against rain and snow, no shock loads. | Up to three years with regular checks on the packaging and moisture indicator (relative atmospheric humidity < 50 %). |
| | Open | With roof, enclosed at constant temperature and atmospheric humidity (5 °C < t < 60 °C, < 50 % relative atmospheric humidity). No sudden temperature fluctuations and controlled ventilation with filter (free from dirt and dust). No aggressive vapors and no shock loads. | Two years or more given regular inspections. Check for cleanliness and mechanical damage as part of the inspection. Check corrosion protection. |
| Tropical (Asia, Africa, Central and South America, Australia, New Zealand excluding temperate zones) | Packed in containers, with desiccant and moisture indicator sealed in the plastic wrap. Protected against insect damage and mildew by chemical treatment. | With roof, protected against rain, no shock loads. | Up to three years with regular checks on the packaging and moisture indicator (relative atmospheric humidity < 50 %). |
| | Open | With roof, enclosed at constant temperature and atmospheric humidity (5 °C < t < 60 °C, < 50 % relative atmospheric humidity). No sudden temperature fluctuations and controlled ventilation with filter (free from dirt and dust). No aggressive vapors and no shock loads. Protection against insect damage. | Two years or more given regular inspections. Check for cleanliness and mechanical damage as part of the inspection. Check corrosion protection. |

1) Packaging must be performed by an experienced company using the packaging materials that have been expressly specified for the particular application.

***Installation /
assembly***

Observe the instructions in the sections "Installation" and "Assembly/Removal"!

***Startup /
operation***

Check that the direction of rotation is correct in **decoupled** status. Listen out for unusual grinding noises as the shaft rotates.

Secure the shaft keys for test mode without drive components. Do not render monitoring and protection equipment inoperative even for test mode.

Switch off the gearmotor if in doubt whenever changes occur in relation to normal operation (e.g. increased temperature, noise, vibration). Determine the cause; contact SEW-EURODRIVE if necessary.

***Inspection /
maintenance***

Follow the instructions in the section "Inspection and Maintenance"!



3 Gear Unit Structure



The following figures are block diagrams. Their purpose is only to make it easier to assign components to the spare parts lists. Discrepancies may occur depending on the gear unit size and version!

3.1 Basic structure of helical gear units

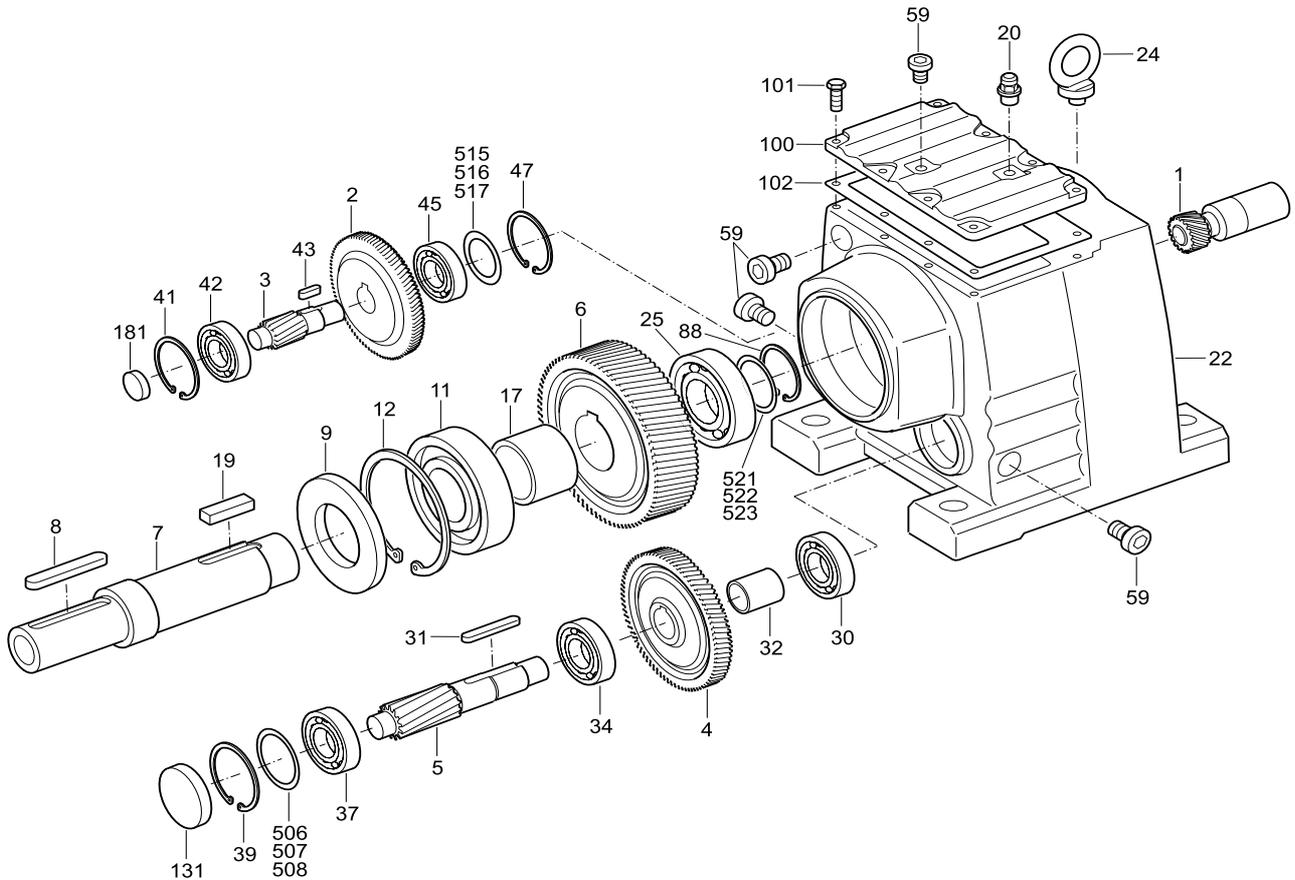


Figure 1: Basic structure of helical gear units

03438AXX

Key

| | | | |
|--------------------------|--------------------------|--------------------------|---------------|
| 1 Pinion | 19 Key | 42 Anti-friction bearing | 507 Shim ring |
| 2 Gear | 20 Breather valve | 43 Key | 508 Shim ring |
| 3 Pinion shaft | 22 Gearcase | 45 Anti-friction bearing | 515 Shim ring |
| 4 Gear | 24 Lifting eyebolt | 47 Circlip | 516 Shim ring |
| 5 Pinion shaft | 25 Anti-friction bearing | 59 Screw plug | 517 Shim ring |
| 6 Gear | 30 Anti-friction bearing | 88 Circlip | 521 Shim ring |
| 7 Output shaft | 31 Key | 100 Gearcase cover | 522 Shim ring |
| 8 Key | 32 Spacer | 101 Hex head bolt | 523 Shim ring |
| 9 Oil seal | 34 Anti-friction bearing | 102 Gasket | |
| 11 Anti-friction bearing | 37 Anti-friction bearing | 131 Closing cap | |
| 12 Circlip | 39 Circlip | 181 Closing cap | |
| 17 Spacer | 41 Circlip | 506 Shim ring | |



Gear Unit Structure

Basic structure of parallel shaft helical gear units

3.2 Basic structure of parallel shaft helical gear units

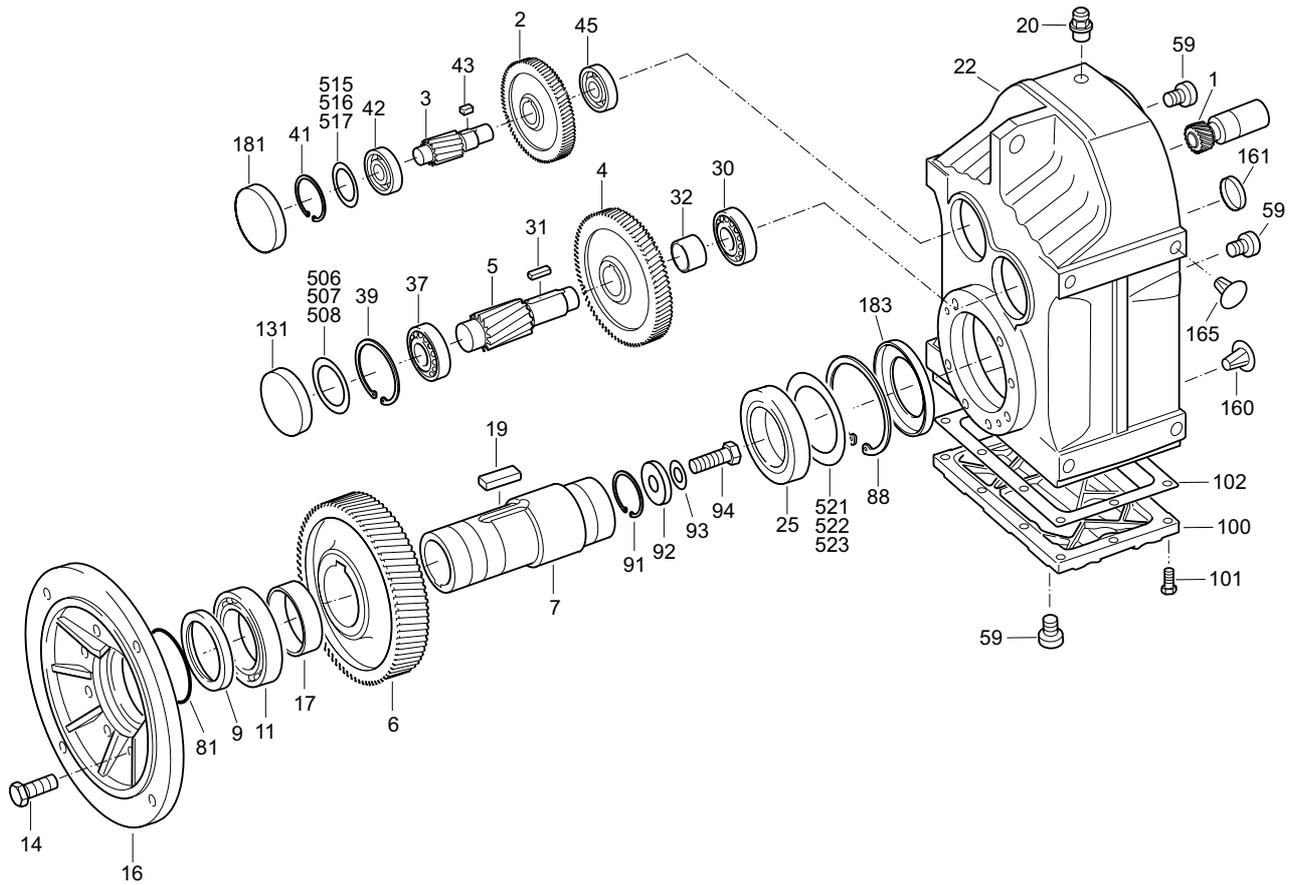


Figure 2: Basic structure of parallel shaft helical gear units


05676AXX

Key

| | | | | | | | |
|----|-----------------------|----|-----------------------|-----|----------------|-----|-----------|
| 1 | Pinion | 22 | Gearcase | 91 | Circlip | 506 | Shim ring |
| 2 | Gear | 25 | Anti-friction bearing | 92 | Washer | 507 | Shim ring |
| 3 | Pinion shaft | 30 | Anti-friction bearing | 93 | Lock washer | 508 | Shim ring |
| 4 | Gear | 31 | Key | 94 | Hex head bolt | 515 | Shim ring |
| 5 | Pinion shaft | 32 | Spacer | 100 | Gearcase cover | 516 | Shim ring |
| 6 | Gear | 37 | Anti-friction bearing | 101 | Hex head bolt | 517 | Shim ring |
| 7 | Hollow shaft | 39 | Circlip | 102 | Gasket | 521 | Shim ring |
| 9 | Oil seal | 41 | Circlip | 131 | Closing cap | 522 | Shim ring |
| 11 | Anti-friction bearing | 42 | Anti-friction bearing | 160 | Closing plug | 523 | Shim ring |
| 14 | Hex head bolt | 43 | Key | 161 | Closing cap | | |
| 16 | Output flange | 45 | Anti-friction bearing | 165 | Closing plug | | |
| 17 | Spacer | 59 | Screw plug | 181 | Closing cap | | |
| 19 | Key | 81 | O-ring | 183 | Oil seal | | |
| 20 | Breather valve | 88 | Circlip | | | | |



3.3 Basic structure of helical-bevel gear units

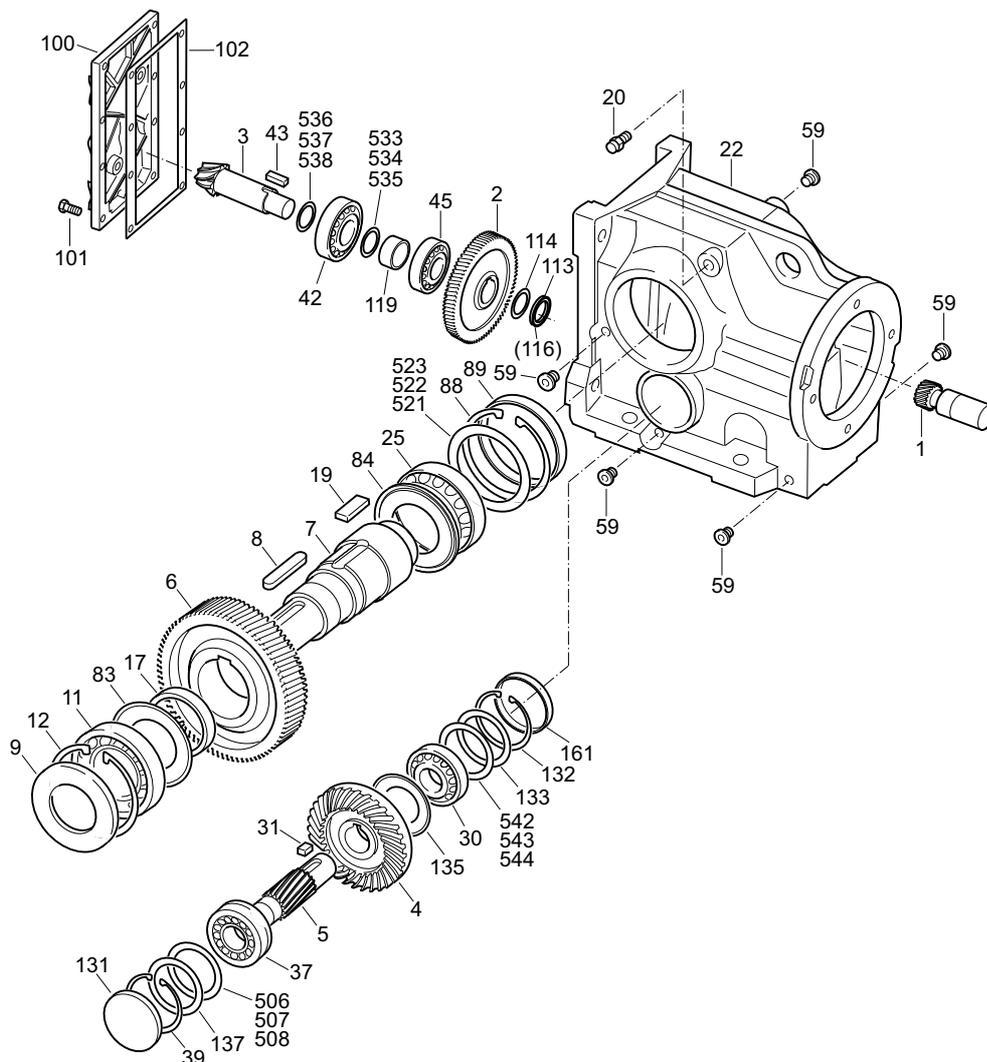

05675AXX

Figure 3: Basic structure of helical-bevel gear units

Key

| | | | |
|--------------------------|--------------------------|-----------------------------------|---------------|
| 1 Pinion | 25 Anti-friction bearing | 102 Adhesive and sealing compound | 522 Shim ring |
| 2 Gear | 30 Anti-friction bearing | 113 Slotted round nut | 523 Shim ring |
| 3 Pinion shaft | 31 Key | 114 Multi-tang washer | 533 Shim ring |
| 4 Gear | 37 Anti-friction bearing | 116 Thread lock | 534 Shim ring |
| 5 Pinion shaft | 39 Circlip | 119 Spacer | 535 Shim ring |
| 6 Gear | 42 Anti-friction bearing | 131 Closing cap | 536 Shim ring |
| 7 Output shaft | 43 Key | 132 Circlip | 537 Shim ring |
| 8 Key | 45 Anti-friction bearing | 133 Spacer | 538 Shim ring |
| 9 Oil seal | 59 Screw plug | 135 Nilos ring | 542 Shim ring |
| 11 Anti-friction bearing | 83 Nilos ring | 161 Closing cap | 543 Shim ring |
| 12 Circlip | 84 Nilos ring | 506 Shim ring | 544 Shim ring |
| 17 Spacer | 88 Circlip | 507 Shim ring | |
| 19 Key | 89 Closing cap | 508 Shim ring | |
| 20 Breather valve | 100 Gearcase cover | 521 Shim ring | |
| 22 Gearcase | 101 Hex head bolt | 521 Shim ring | |



Gear Unit Structure

Basic structure of helical-worm gear units

3.4 Basic structure of helical-worm gear units

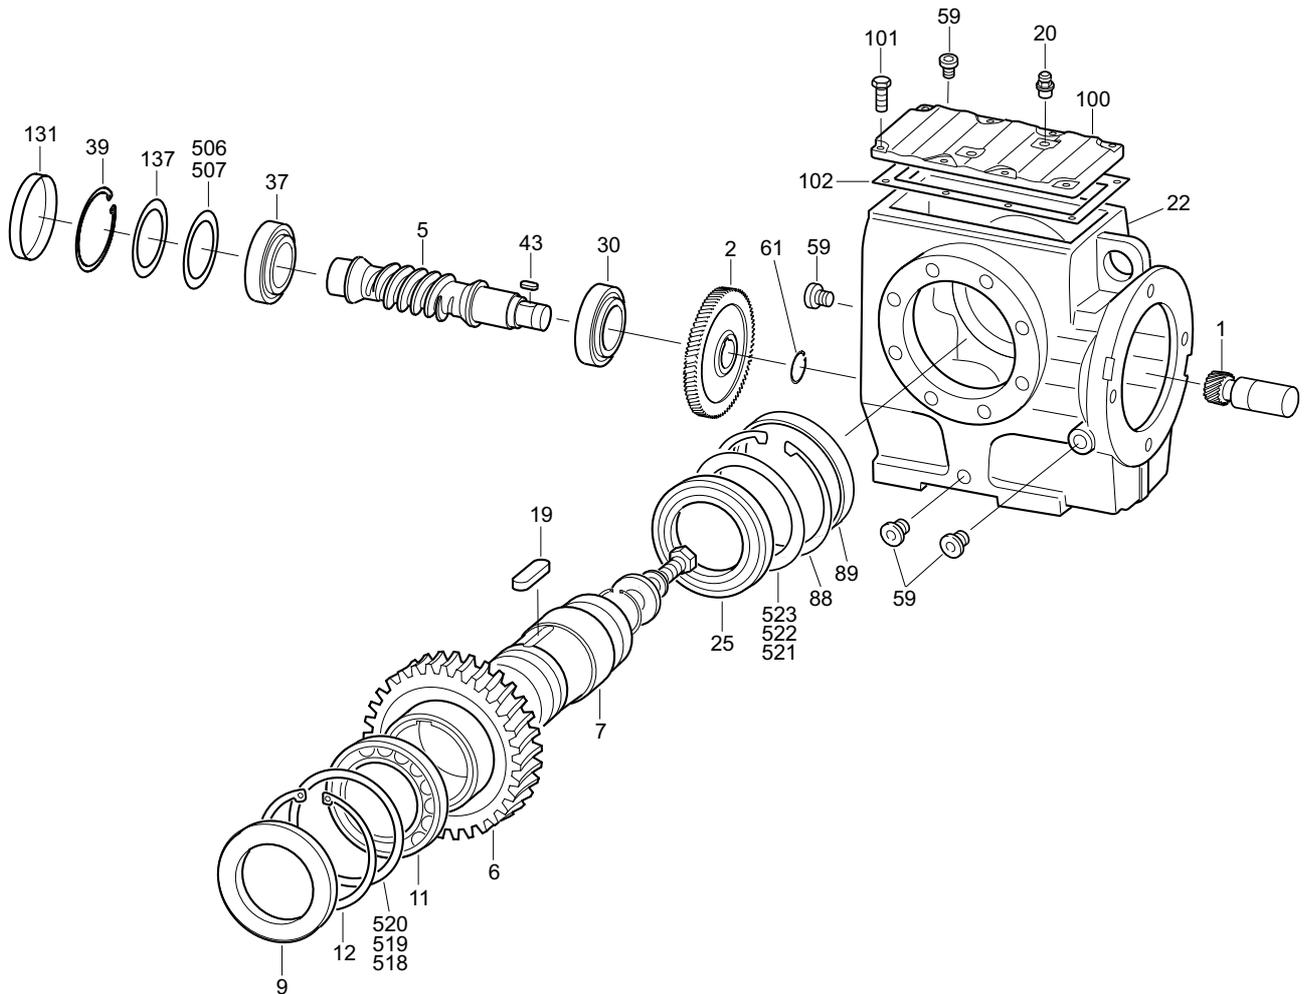


Figure 4: Basic structure of helical-worm gear units

50884AXX

Key

| | | | | | | | |
|----|-----------------------|----|-----------------------|-----|----------------|-----|-----------|
| 1 | Pinion | 20 | Breather valve | 88 | Circlip | 518 | Shim ring |
| 2 | Gear | 22 | Gearcase | 89 | Closing cap | 519 | Shim ring |
| 5 | Worm | 25 | Anti-friction bearing | 100 | Gearcase cover | 520 | Shim ring |
| 6 | Worm gear wheel | 30 | Anti-friction bearing | 101 | Hex head bolt | 521 | Shim ring |
| 7 | Output shaft | 37 | Anti-friction bearing | 102 | Rubber seal | 522 | Shim ring |
| 9 | Oil seal | 39 | Circlip | 131 | Closing cap | 523 | Shim ring |
| 11 | Anti-friction bearing | 43 | Key | 137 | Spacer | | |
| 12 | Circlip | 59 | Screw plug | 506 | Shim ring | | |
| 19 | Key | 61 | Circlip | 507 | Shim ring | | |



3.5 Basic structure of SPIROPLAN® gear units

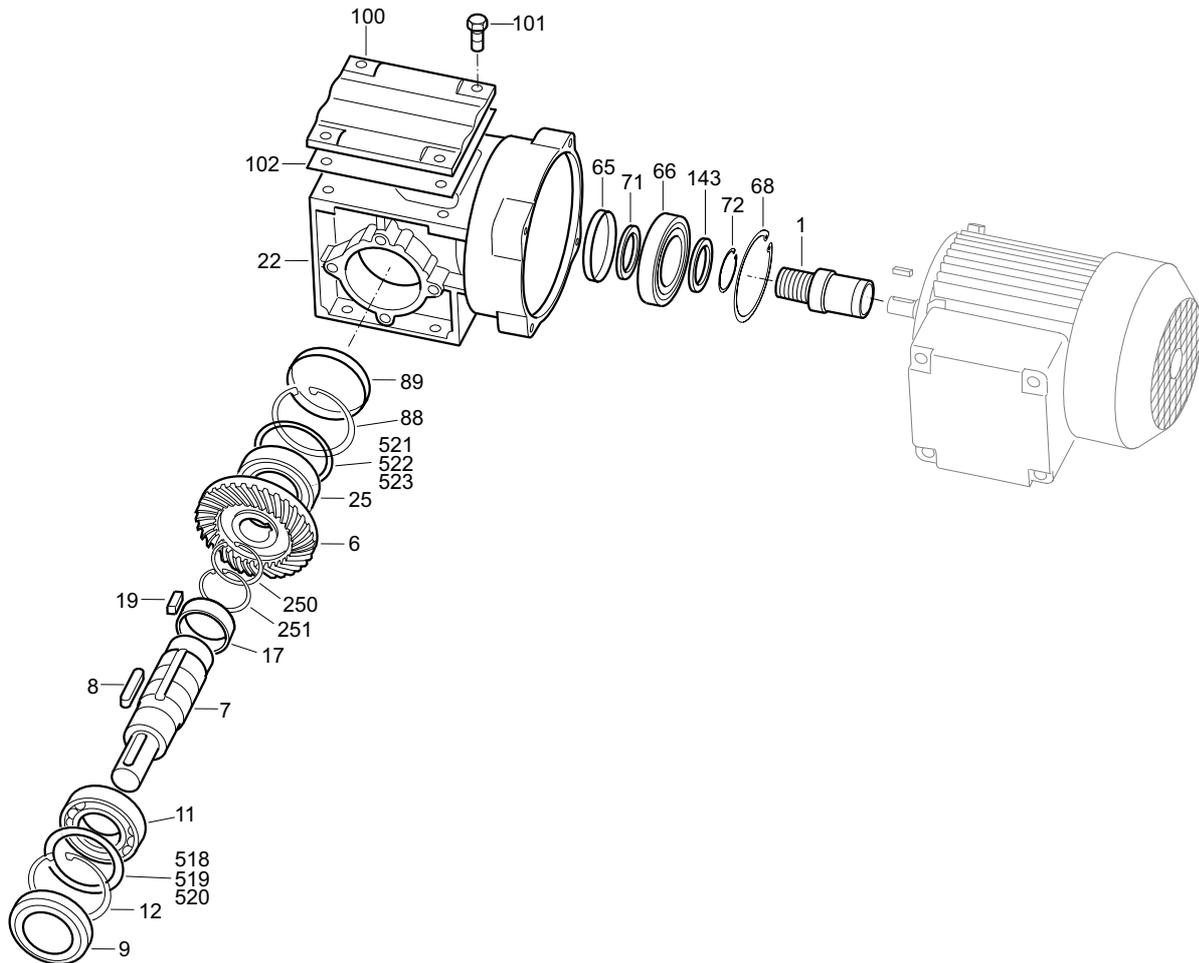


Figure 5: Basic structure of SPIROPLAN® gear units

05674AXX


Key

| | | | | | | | |
|----|-----------------------|-----|-----------------------|-----|----------------|-----|-----------|
| 1 | Pinion | 19 | Key | 88 | Circlip | 251 | Circlip |
| 6 | Gear | 22 | Gearcase | 89 | Closing cap | 518 | Shim ring |
| 7 | Output shaft | 25 | Anti-friction bearing | 100 | Gearcase cover | 519 | Shim ring |
| 8 | Key | 65 | Oil seal | 101 | Hex head bolt | 520 | Shim ring |
| 9 | Oil seal | 66 | Anti-friction bearing | 102 | Gasket | 521 | Shim ring |
| 11 | Anti-friction bearing | 71 | Spacer | 132 | Circlip | 522 | Shim ring |
| 12 | Circlip | 72 | Circlip | 183 | Oil seal | 523 | Shim ring |
| 17 | Spacer | 143 | Spacer | 250 | Circlip | | |



3.6 Nameplate, unit designation

Sample nameplate

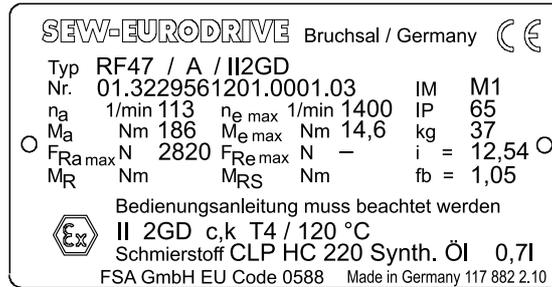


06687ADE

Figure 6: Sample nameplate


| | | |
|---------------|---------|--|
| f_b | | = Service factor |
| $F_{Ra \max}$ | [N] | = Maximum overhung load on the output side |
| $F_{Re \max}$ | [N] | = Maximum overhung load on the input side (with input shaft assembly AD) |
| i | | = Gear unit reduction ratio |
| IM | | = Mounting position |
| IP.. | | = Enclosure |
| $n_{e \max}$ | [1/min] | = Maximum input speed |
| n_a | [1/min] | = Output speed |
| $M_{e \max}$ | [Nm] | = Maximum input torque |
| M_a | [Nm] | = Output torque |
| M_R | [Nm] | = Overload torque when using an AR adapter |
| M_{RS} | [Nm] | = Locking torque of the backstop |

Unit designation

Example: Helical gear unit, category II2GD

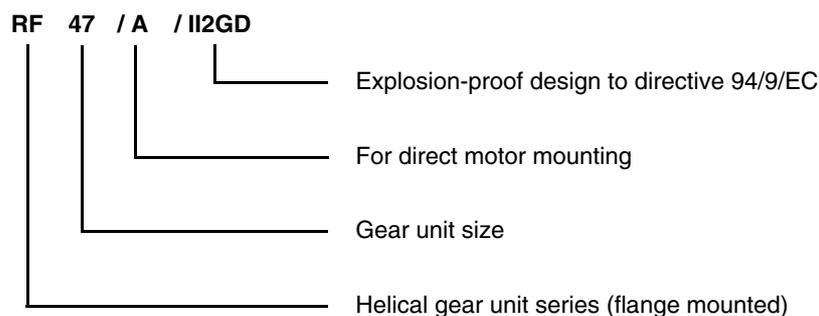

Example: Serial number

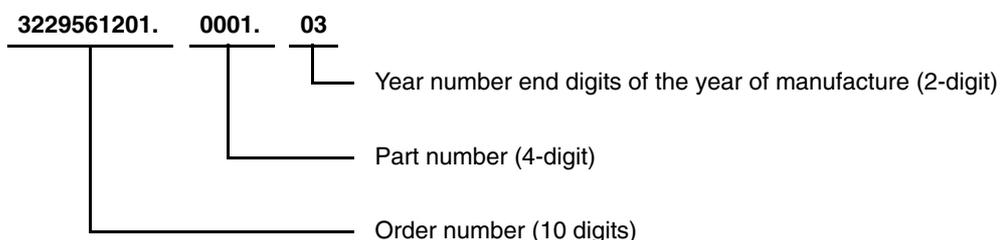



4 Mechanical Installation

4.1 Required tools / aids

- Set of spanners
- Torque wrench for:
 - Shrink discs
 - AQH motor adapter
 - Input shaft assembly with centering shoulder
- Mounting device
- Shims and distance rings if necessary
- Fixing devices for input and output elements
- Lubricant (e.g. NOCO® Fluid)
- Bolt adhesive (for input shaft assembly with centering shoulder), e.g. Loctite® 243
- Standard parts are not part of the delivery

Installation tolerances

| Shaft end | Flanges |
|--|--|
| Diameter tolerance in accordance with DIN 748 <ul style="list-style-type: none"> • ISO k6 for solid shafts with $\varnothing \leq 50$ mm • ISO m6 for solid shafts with $\varnothing > 50$ mm • ISO H7 for hollow shafts • Center bore in accordance with DIN 332, shape DR | Centering shoulder tolerance in accordance with DIN 42948 <ul style="list-style-type: none"> • ISO j6 with $b1 \leq 230$ mm • ISO h6 with $b1 > 230$ mm |

4.2 Prerequisites for assembly

Check that the following conditions have been met:

- The data on the nameplate of the gearmotor matches the voltage supply system.
- The drive has not been damaged during transportation or storage.
- Ensure that the following requirements have been met:
 - **For standard gear units:**
Ambient temperature according to the lubricant table in Sec. "Lubricants" (see standard).
The drive must not be assembled in the following ambient conditions:
 - Potentially explosive atmosphere
 - Oil
 - Acids
 - Gas
 - Vapors
 - Radiation
 - **For special versions:**
The drive configured in accordance with the ambient conditions.
 - **For helical-worm / SPIROPLAN® W gear units:**
No large external mass moments of inertia which could exert a retrodriving load on the gear unit.
[At η' (retrodriving) = $2 - 1/\eta < 0.5$ self-locking]



Mechanical Installation

Installing the gear unit

- You must clean the output shafts and flange surfaces thoroughly to ensure they are free of anti-corrosion agents, contamination or similar. Use a commercially available solvent. Do not let the solvent come into contact with the sealing lips of the oil seals – danger of damage to the material!
- When the drive is installed in abrasive ambient conditions, protect the output end oil seals against wear.

4.3 Installing the gear unit

The gear unit or gearmotor is only allowed to be installed in the specified mounting position. SPIROPLAN® gear units are not dependent on the mounting position.

The support structure must have the following characteristics:

- Level
- Vibration damping
- Torsionally rigid

Maximum permitted flatness error for foot and flange mounting (approximate values with reference to DIN ISO 1101):

- Gear unit size ≤ 67: max. 0.4 mm
- Gear unit size 77 ... 107: max. 0.5 mm
- Gear unit size 137 ... 147: max. 0.7 mm
- Gear unit size 157 ... 187: max. 0.8 mm

Do not tighten the housing legs and mounting flanges against one another and ensure that you comply with the permitted overhung and axial loads!

Secure the gearmotors with bolts of quality 8.8.

Secure the following gearmotors with bolts of quality 10.9:

- RF37, R37F with flange Ø 120 mm
- RF47, R47F with flange Ø 140 mm
- RF57, R57F with flange Ø 160 mm



The oil checking and drain screws and the breather valves must be freely accessible!

At the same time, also check that the oil fill is as specified for the mounting position (see Sec. "Lubricants" / "Lubricant fill quantities" or refer to the information on the nameplate). The gear units are filled with the required oil volume at the factory. There may be slight deviations at the oil level plug as a result of the mounting position, which are permitted within the manufacturing tolerances.



Adjust the lubricant fill volumes and the position of the breather valve accordingly in the event of a change of mounting position.

Please contact our SEW customer service if you change the mounting position of K gear units to M5 or M6 or between M5 and M6.

Please contact our SEW customer service if you change the mounting position of size S47 S97 S gear units to mounting position M2.

Use plastic inserts (2 ... 3 mm thick) if there is a risk of electrochemical corrosion between the gear unit and the driven machine. The material used must have an electrical bleeder resistor $< 10^9 \Omega$. Electrochemical corrosion can occur between various metals, for example, cast iron and high-grade steel. Also install the bolts with plastic washers! Ground the housing additionally – use the grounding bolts on the motor.

Installation in damp locations or in the open

Drives are supplied in corrosion-resistant versions for use in damp areas or in the open air. Repair any damage to the paint work (e.g. on the breather valve).

When mounting the motors onto AM, AQ, AR, AT adapters, seal the flange areas with a suitable sealing compound, e.g. Loctite® 574.



Mechanical Installation

Installing the gear unit

Gear unit venting

No breather plug is required for the following gear units:

- R07 in mounting positions M1, M2, M3, M5 and M6
- R17, R27 and F27 in mounting positions M1, M3, M5 and M6
- SPIROPLAN® W gear units

SEW-EURODRIVE supplies all other gear units with the breather valve installed and activated according to the particular mounting position.

Exceptions:

1. SEW supplies the following gear units with a screw plug on the vent hole provided:
 - Gear units for extended storage
 - Pivoted mounting positions, if possible
 - Gear units for mounting on a slant


The breather valve is located in the motor terminal box. Before startup, you must replace the highest screw plug with the breather valve supplied.

2. SEW supplies a breather valve in a plastic bag for **gear head units** requiring venting on the input end.
3. **Enclosed gear units** are supplied without a breather valve.

Activating the breather valve


As a rule, the breather valve is already activated at the factory. If the breather valve has not been activated, you must remove the transport fixture from the breather valve before starting up the gear unit!

1. Breather valve with transport fixture

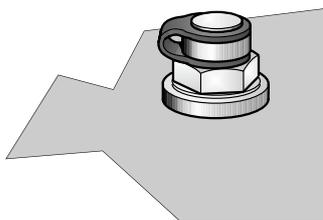


02053BXX

2. Remove the transport fixture

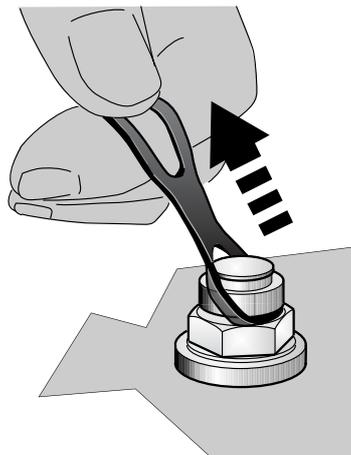

02054BXX

3. Breather valve activated

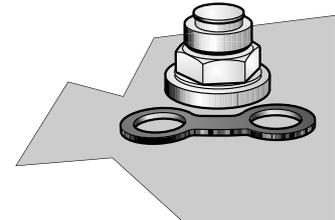

02055BXX

Painting the gear unit


If you paint or respray the drive, ensure that you cover the breather valve and oil seals carefully. Remove the strips of tape after completing the painting work.




4.4 Gear unit with solid shaft

Installing input and output elements

The following figure shows a mounting device for installing couplings or hubs on gear unit or motor shaft ends. It may be possible to dispense with the thrust bearing on the mounting device.

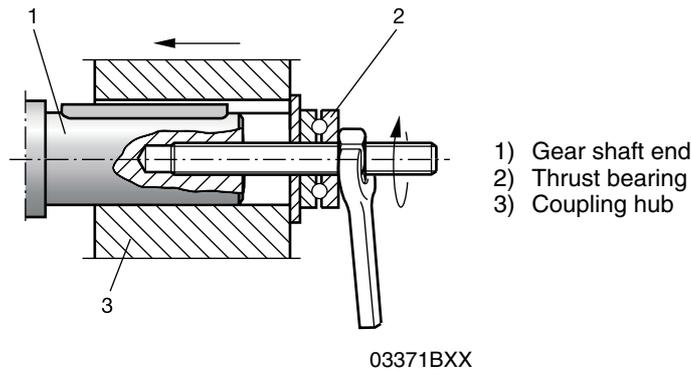

Avoid impermissibly high overhung loads: Install the gear or chain sprocket according to figure B.

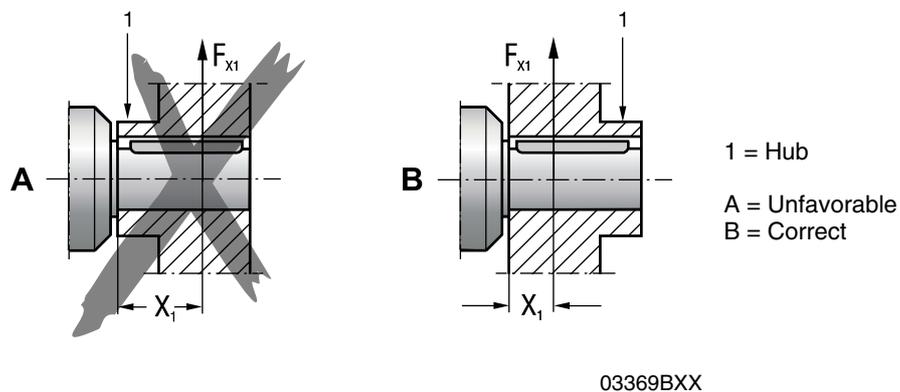

- Only use a mounting device for installing input and output elements. Use the center bore and the thread on the shaft end for positioning.
- **Never drive belt pulleys, couplings, pinions, etc. onto the shaft end by hitting them with a hammer. This will damage the bearings, housing and the shaft!**
- **In the case of belt pulleys, make sure the belt is tensioned correctly in accordance with the manufacturer's instructions.**
- Power transmission elements should be balanced after fitting and must not give rise to any impermissible radial or axial forces (see the "Gearmotor" or "Explosion-Proof Drives" catalogs for permitted values).



Note:

Assembly is easier if you first apply lubricant to the output element or heat it up briefly (to 80 ... 100 °C).



Mechanical Installation

Gear unit with solid shaft

Installing couplings

Couplings must be mounted and balanced according to the information provided by the coupling manufacturer:

- Maximum and minimum clearance
- Axial misalignment
- Angular misalignment

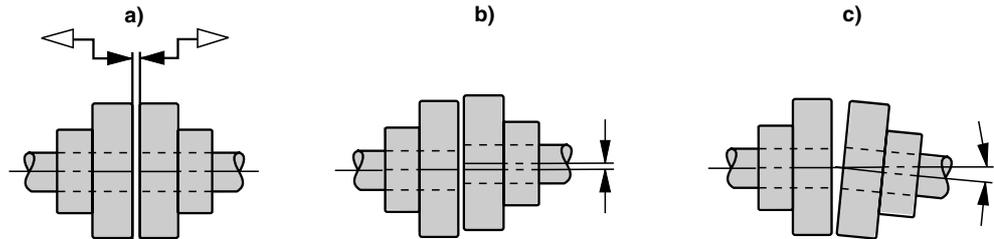


Figure 7: Clearance and misalignment for coupling installation

03356AXX




Input and output elements such as belt pulleys, couplings, etc. must be protected against contact!



4.5 Torque arms for mounted gear units

Do not place torque arms under strain during installation!

Parallel shaft helical gear units

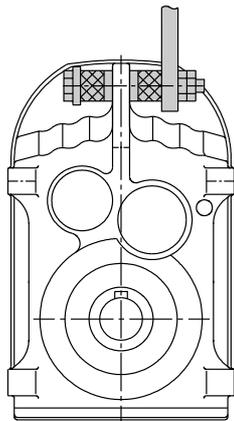


01029BXX

Figure 8: Torque arm for parallel shaft helical gear units

Helical-bevel gear units

- Bush with bearings on both ends → (1).
- Install connection end B as a mirror image of A.

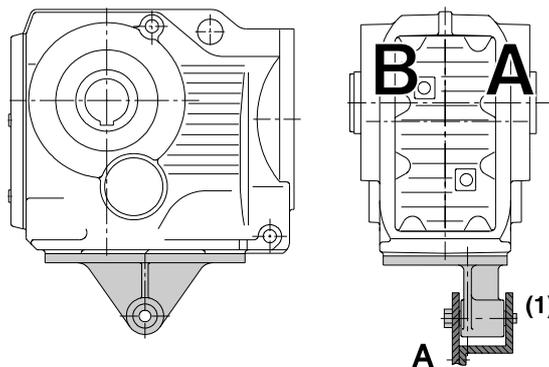

01030CXX

Figure 9: Torque arm for helical-bevel gear units

| Gear unit | Bolts | Tightening torque |
|-----------|---------------------|-------------------|
| KA37 | 4 × M10 × 25 – 8.8 | 48 Nm |
| KA47 | 4 × M10 × 30 – 8.8 | 48 Nm |
| KA67 | 4 × M12 × 35 – 8.8 | 86 Nm |
| KA77 | 4 × M16 × 40 – 8.8 | 210 Nm |
| KA87 | 4 × M16 × 45 – 8.8 | 210 Nm |
| KA97 | 4 × M20 × 50 – 8.8 | 410 Nm |
| KA107 | 4 × M24 × 60 – 8.8 | 710 Nm |
| KA127 | 4 × M36 × 130 – 8.8 | 2500 Nm |
| KA157 | 4 × M36 × 130 – 8.8 | 2500 Nm |




Mechanical Installation

Torque arms for mounted gear units

Helical-worm gear units

- Bush with bearings on both ends → (1).

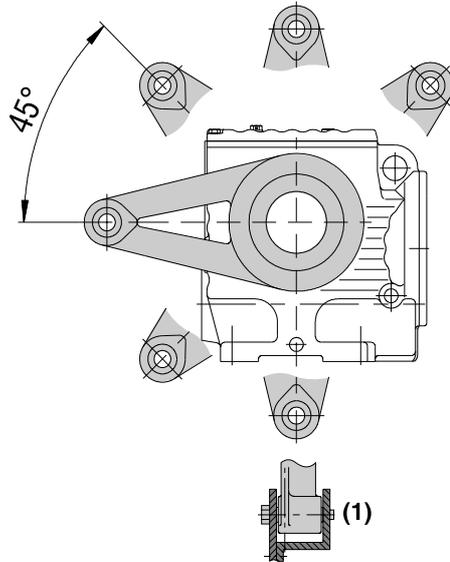


01031CXX

Figure 10: Torque arm for helical-worm gear units

| Gear unit | Bolts | Tightening torque |
|-----------|----------------|-------------------|
| SA37 | M6 × 16 – 8.8 | 11 Nm |
| SA47 | M8 × 20 – 8.8 | 25 Nm |
| SA57 | M8 × 20 – 8.8 | 25 Nm |
| SA67 | M12 × 25 – 8.8 | 86 Nm |
| SA77 | M12 × 35 – 8.8 | 86 Nm |
| SA87 | M16 × 35 – 8.8 | 210 Nm |
| SA97 | M16 × 35 – 8.8 | 210 Nm |

SPIROPLAN® W gear units

- Bush with bearings on both ends → (1)

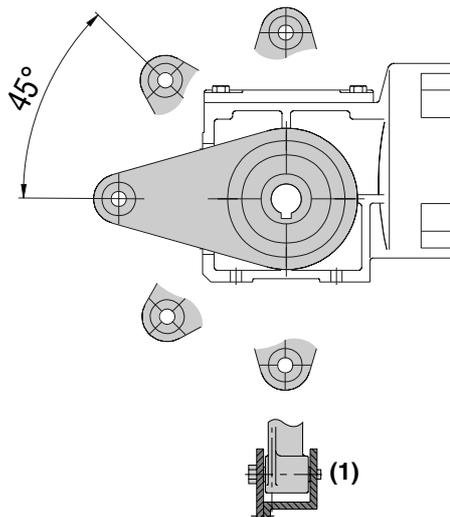

02050CXX

Figure 11: Torque arm for SPIROPLAN® W gear units

| Gear unit | Bolts | Tightening torque |
|-----------|---------|-------------------|
| WA10 | M6 × 16 | 11 Nm |
| WA20 | M6 × 16 | 11 Nm |
| WA30 | M6 × 16 | 11 Nm |




4.6 Mounted gear unit with keyway or splined hollow shaft



For the configuration of customer shafts, please also refer to the design notes in the Gearmotors catalog!


Installation notes

1. Apply NOCO® fluid.

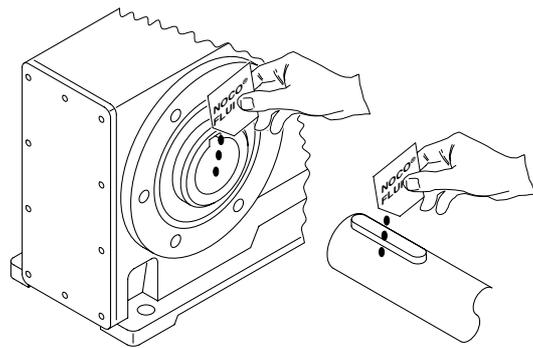

02042BXX


2. Distribute the NOCO® fluid carefully.

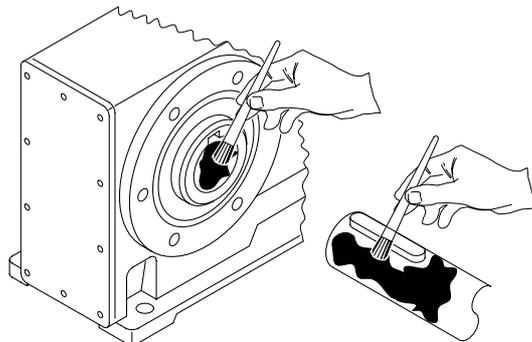

02043AXX

3. Install the shaft and secure it axially
 (mounting is facilitated by using a mounting device)

3A: Mounting with standard scope of delivery

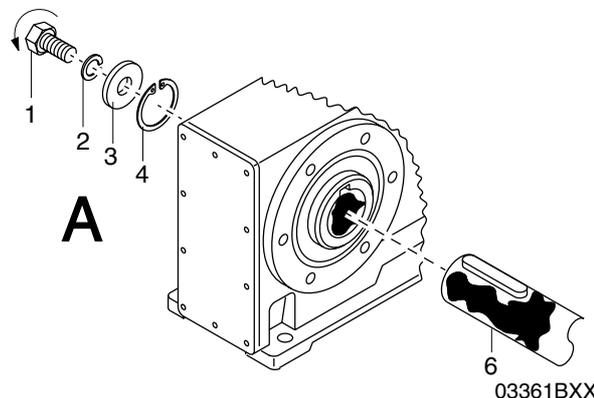

- 1 Short retaining bolt
(standard scope of delivery)
- 2 Lock washer
- 3 Washer
- 4 Circlip
- 6 Customer shaft

03361BXX




Mechanical Installation

Mounted gear unit with keyway or splined hollow shaft

3B: Assembly with SEW-EURODRIVE assembly/disassembly kit (→ page 26)


– Customer's shaft **with** contact shoulder

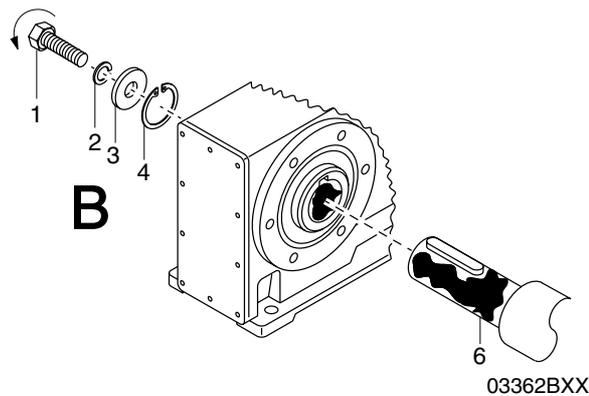

- 1 Retaining bolt
- 2 Lock washer
- 3 Washer
- 4 Circlip
- 6 Customer's shaft with contact shoulder


3C: Assembly with SEW-EURODRIVE assembly/disassembly kit (→ page 26)

– Customer's shaft **without** contact shoulder

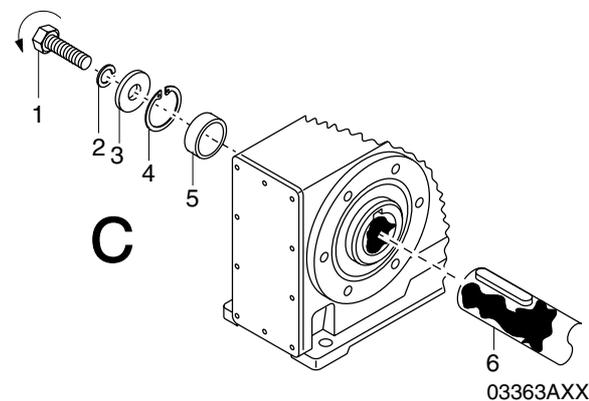

- 1 Retaining bolt
- 2 Lock washer
- 3 Washer
- 4 Circlip
- 5 Spacer
- 6 Customer's shaft without contact shoulder

4. Tighten the retaining bolt to the appropriate torque (see table).

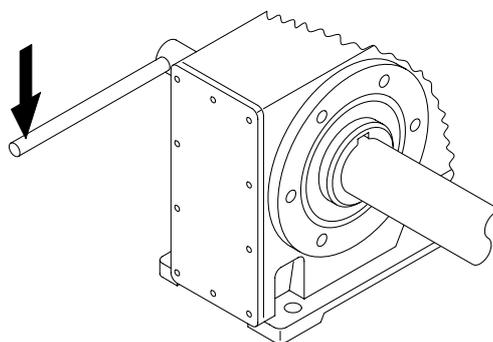

| Bolt | Tightening torque [Nm] |
|--------|------------------------|
| M5 | 5 |
| M6 | 8 |
| M10/12 | 20 |
| M16 | 40 |
| M20 | 80 |
| M24 | 200 |



Note:


To avoid contact corrosion, we recommend that the customer's shaft should additionally be recessed between the two contact surfaces!



Removal notes

This description is only applicable when the gear unit was assembled using the installation/removal kit from SEW-EURODRIVE(→ page 26) (see the previous description, point 3B or 3C).


1. Loosen the retaining bolt [1].
2. Remove parts 2 to 4 and, if fitted, spacer 5.

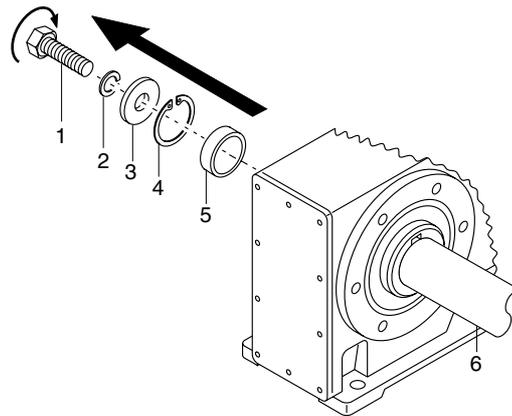

- 1 Retaining bolt
- 2 Lock washer
- 3 Washer
- 4 Circlip
- 5 Spacer
- 6 Customer shaft

03366AXX

3. Insert the forcing washer [8] and the fixed nut [7] from the SEW-EURODRIVE installation/removal kit between the customer's shaft [6] and the circlip [4].
4. Re-insert the circlip [4].
5. Screw the retaining bolt [1] back in. Now you can force the gear unit off the shaft by tightening the bolt.

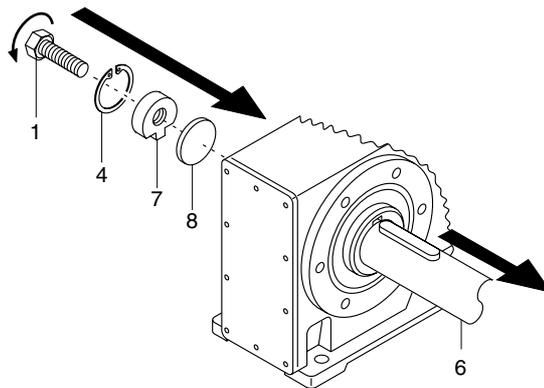

- 1 Retaining bolt
- 4 Circlip
- 6 Customer shaft
- 7 Fixed nut
- 8 Forcing washer

03367AXX



Mechanical Installation

Mounted gear unit with keyway or splined hollow shaft

SEW installation/removal kit

The SEW-EURODRIVE installation/removal kit can be ordered under the following part number.

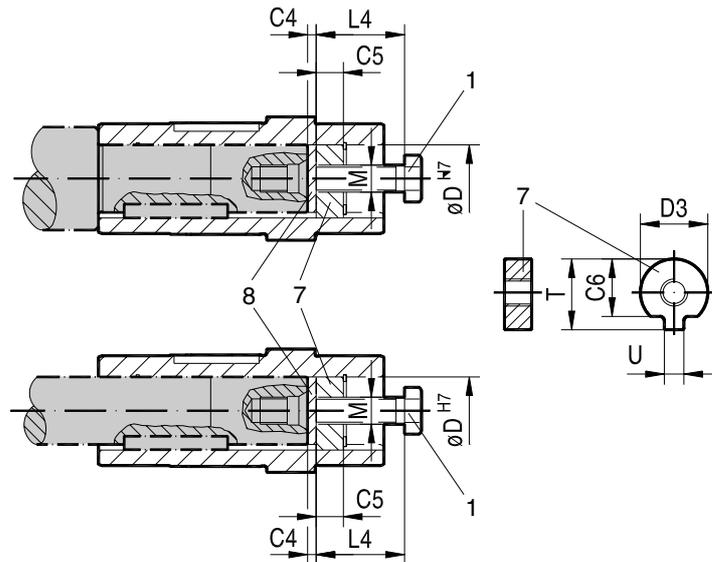


Figure 12: SEW-EURODRIVE installation/removal kit

03394AXX

- 1 Retaining bolt
- 7 Fixed nut for disassembly
- 8 Forcing washer

| Type | D_{H7} [mm] | $M^1)$ | $C4$ [mm] | $C5$ [mm] | $C6$ [mm] | $U^{-0.5}$ [mm] | $T^{-0.5}$ [mm] | $D3^{-0.5}$ [mm] | $L4$ [mm] | Part number of installa- tion/ removal kit |
|--|------------------|--------|--------------|--------------|--------------|--------------------|--------------------|---------------------|--------------|--|
| WA..10 | 16 | M5 | 5 | 5 | 12 | 4.5 | 18 | 15.7 | 50 | 643 712 5 |
| WA..20 | 18 | M6 | 5 | 6 | 13.5 | 5.5 | 20.5 | 17.7 | 25 | 643,682 X |
| WA..20, WA..30, SA..37 | 20 | M6 | 5 | 6 | 15.5 | 5.5 | 22.5 | 19.7 | 25 | 643 683 8 |
| FA..27, SA..47 | 25 | M10 | 5 | 10 | 20 | 7.5 | 28 | 24.7 | 35 | 643 684 6 |
| FA..37, KA..37, SA..47, SA..57 | 30 | M10 | 5 | 10 | 25 | 7.5 | 33 | 29.7 | 35 | 643 685 4 |
| FA..47, KA..47, SA..57 | 35 | M12 | 5 | 12 | 29 | 9.5 | 38 | 34.7 | 45 | 643 686 2 |
| FA..57, KA..57, FA..67, KA..67, SA..67 | 40 | M16 | 5 | 12 | 34 | 11.5 | 41.9 | 39.7 | 50 | 643 687 0 |
| SA..67 | 45 | M16 | 5 | 12 | 38.5 | 13.5 | 48.5 | 44.7 | 50 | 643 688 9 |
| FA..77, KA..77, SA..77 | 50 | M16 | 5 | 12 | 43.5 | 13.5 | 53.5 | 49.7 | 50 | 643 689 7 |
| FA..87, KA..87, SA..77, SA..87 | 60 | M20 | 5 | 16 | 56 | 17.5 | 64 | 59.7 | 60 | 643 690 0 |
| FA..97, KA..97, SA..87, SA..97 | 70 | M20 | 5 | 16 | 65.5 | 19.5 | 74.5 | 69.7 | 60 | 643 691 9 |
| FA..107, KA..107, SA..97 | 90 | M24 | 5 | 20 | 80 | 24.5 | 95 | 89.7 | 70 | 643 692 7 |
| FA..127, KA..127 | 100 | M24 | 5 | 20 | 89 | 27.5 | 106 | 99.7 | 70 | 643 693 5 |
| FA..157, KA..157 | 120 | M24 | 5 | 20 | 107 | 31 | 127 | 119.7 | 70 | 643 694 3 |

1) Retaining bolt

The SEW assembly kit for mounting the customer shaft is a recommendation from SEW-EURODRIVE. You must always check whether this design can compensate the axial loads. In particular applications (e.g. mounting mixer shafts), a different design may have to be used to secure the shaft axially. In these cases, customers can use their own devices. However, you must ensure that these designs do not cause potential sources of combustion according to DIN EN 13463 (for example, impact sparks).




4.7 Mounted gear units with shrink disc

Installation notes

- Do not tighten the locking bolts unless the shaft is installed - the hollow shaft could become deformed!


- Loosen the locking bolts by a few turns (do not unscrew them completely!).
- Carefully degrease the hollow shaft hole and the input shaft.

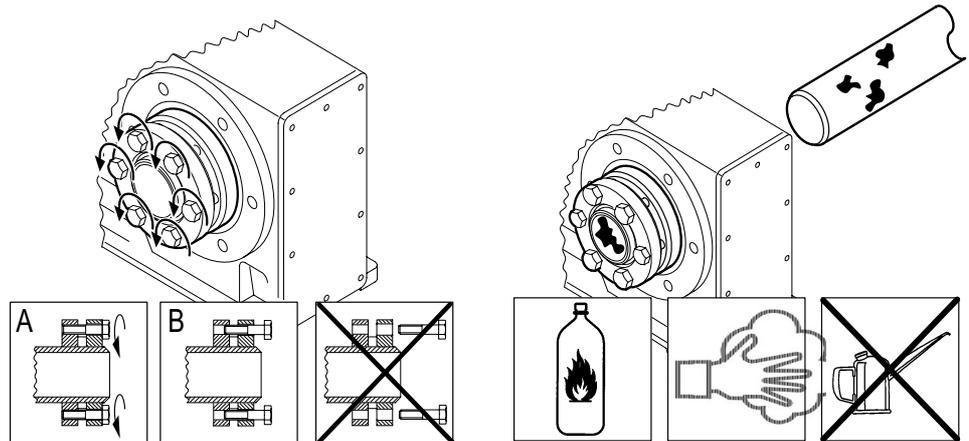

51092AXX

51093AXX

- Hollow shaft/input shaft after degreasing
- Apply NOCO® fluid to the input shaft¹⁾ in the area of the bushing.

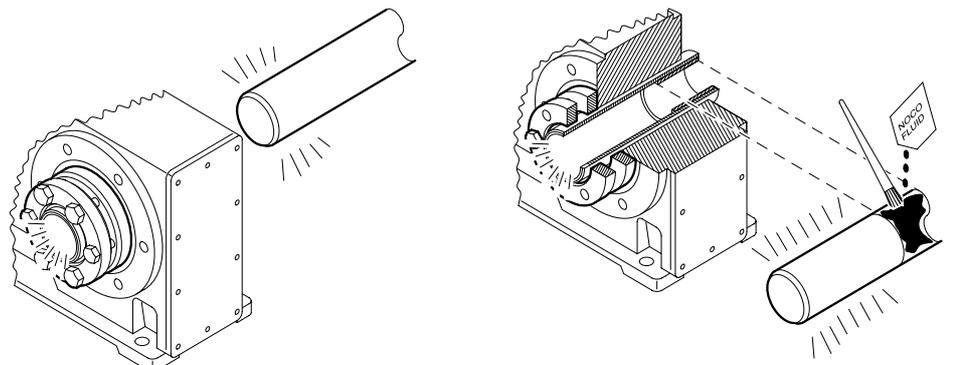

51094AXX

51095AXX




- It is essential to make sure that the clamping area of the shrink disc is free from grease!
For this reason, never apply NOCO® fluid directly to the bushing as the paste may be able to get into the clamping area of the shrink disc when the input shaft is put on.



Mechanical Installation

Mounted gear units with shrink disc

5. Install the input shaft, making sure that the locking collars of the shrink disc are installed in parallel to each other²⁾. For gear unit housing **with a shaft collar**, mount the **shrink disc to the stop on the shaft collar**. For gear unit housing **without a shaft collar**, mount the **shrink disc with a clearance of 1 to 2 mm from the gear unit housing**. Tighten the locking bolts with the torque wrench by working round several times from one bolt to the next (not in diametrically opposite sequence) until the bolts cannot be tightened any more. See the following table for tightening torques.

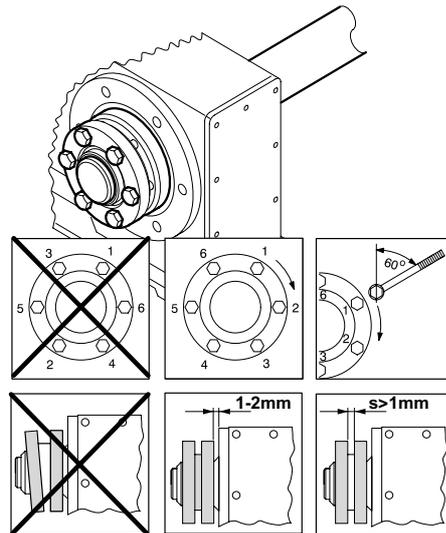

51096AXX



2) After installation

- There must be a gap $s > 1 \text{ mm}$ between the locking collars
- Grease the outside of the hollow shaft in the area of the shrink disc to prevent corrosion.

| Gear unit type | | | Bolt | Nm | $\angle \text{max.}^{1)}$ |
|----------------|-----------|-----------|------|-----|---------------------------|
| SH37 | | | M5 | 5 | 60° |
| KH37...77 | FH37...77 | SH47...77 | M6 | 12 | |
| KH87/97 | FH87/97 | SH87/97 | M8 | 30 | |
| KH107 | FH107 | | M10 | 59 | |
| KH127/157 | FH127 | | M12 | 100 | |
| KH167 | | | M16 | 250 | |
| KH187 | | | M20 | 470 | |

1) Maximum tightening angle per cycle



Notes on removing the shrink disc

1. Unscrew the locking bolts evenly one after the other. Each locking bolt may only be unscrewed by about one quarter turn in the initial cycle. This is in order to avoid tilting and jamming the locking collars. Do not fully unscrew the locking bolts!
2. Remove the shaft or pull the hub off the shaft. (You must first remove any rust that may have formed between the hub and the end of the shaft.)
3. Pull the shrink disc off the hub.



Caution!

Risk of injury if the shrink disc is not removed correctly!

Cleaning and lubricating the shrink disc

There is no need to strip down and re-grease disassembled shrink disks before they are screwed back on.

The shrink disc only needs to be cleaned and re-greased if it is contaminated.

Use one of the following solid lubricants for the tapered surfaces.

| Lubricant (Mo S2) | Sold as |
|-------------------------------------|----------------|
| Molykote 321 (lube coat) | Spray |
| Molykote spray (powder spray) | Spray |
| Molykote G Rapid | Spray or paste |
| Aemasol MO 19P | Spray or paste |
| Aemasol DIO-sétral 57 N (lube coat) | Spray |

Grease the locking bolts with a multipurpose grease such as Molykote BR 2 or similar.




Mechanical Installation

Mounted gear units with TorqLOC®


4.8 Mounted gear units with TorqLOC®

1. Clean the inside of the hollow shaft and the customer shaft. Ensure that all traces of grease or oil are removed.
2. Install the split ring and the bushing on the customer shaft.

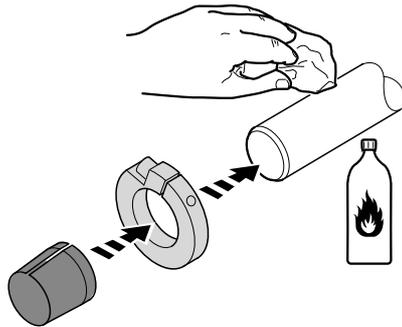


52089AXX

3. Apply NOCO® fluid to the bushing and distribute it carefully.

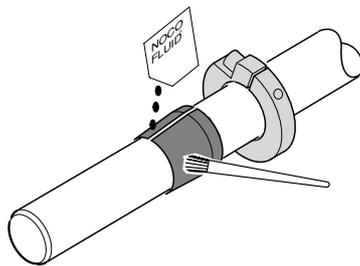

52090AXX


4. Push the gear unit onto the customer shaft.

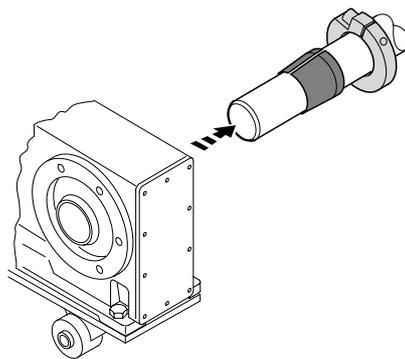

52091AXX




5. Preassemble the torque arm (do not tighten the bolts).

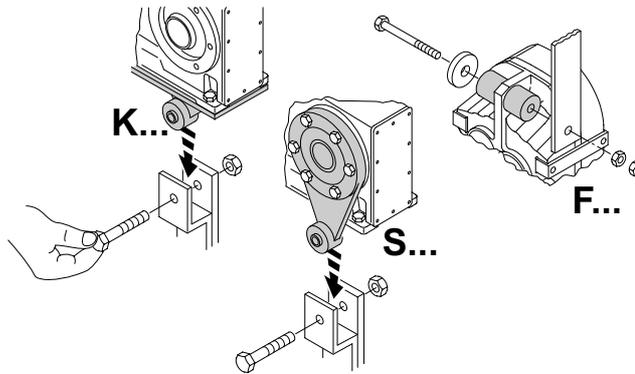


52092AXX

6. Push the busing onto the gear unit up to the stop.

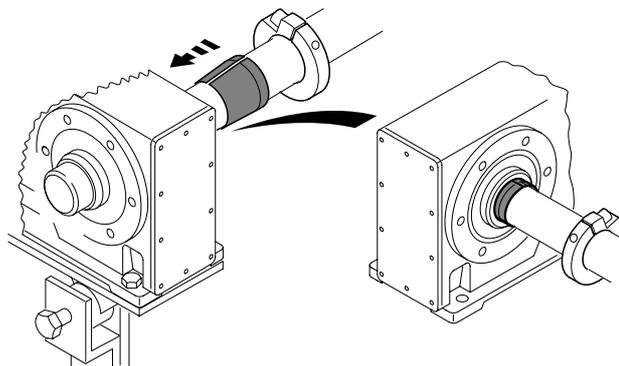

52093AXX

7. Tighten all the retaining bolts for the torque arm.

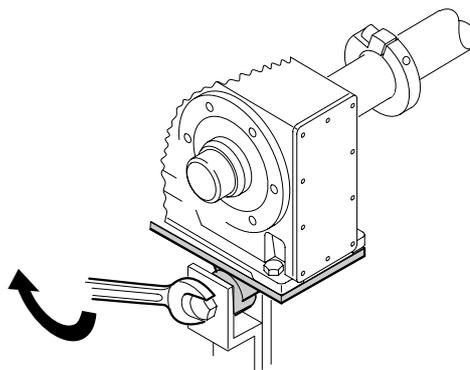


52094AXX



Mechanical Installation

Mounted gear units with TorqLOC®


8. Secure the bushing with the split ring. Tighten the split ring on the bushing using the appropriate torque as specified in the following table.

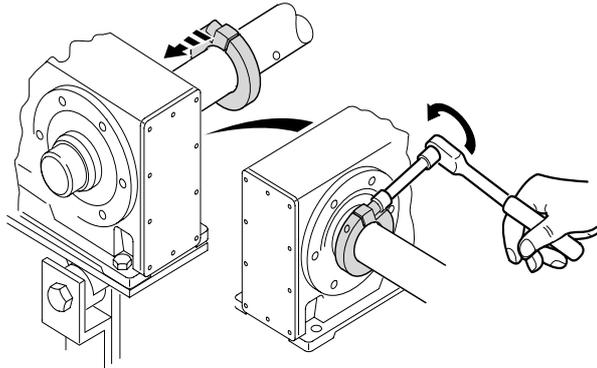

52095AXX

| Type | | Torque [Nm] | |
|--------|----|---------------|-----------------|
| KT/FT | ST | Nickel plated | Stainless steel |
| - | 37 | 18 | 7.5 |
| 37 | 47 | 18 | 7.5 |
| 47 | 57 | 18 | 7.5 |
| 57, 67 | 67 | 35 | 18 |
| 77 | 77 | 35 | 18 |
| 87 | 87 | 35 | 18 |
| 97 | 97 | 35 | 18 |


9. Slide the shrink disk onto the hollow shaft. Ensure that all bolts have been loosened.

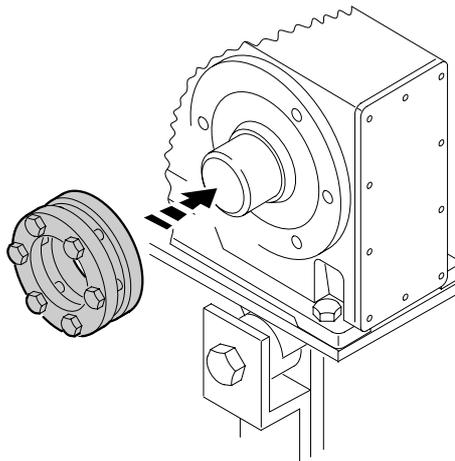

52096AXX




10. Push the counter bushing onto the customer shaft and into the hollow shaft or shrink disk right into the seat.

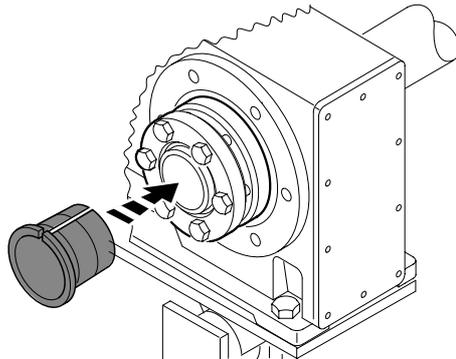


52097AXX

11. Tap lightly on the flange of the counter bushing to ensure that the socket is fitted securely in the hollow shaft.

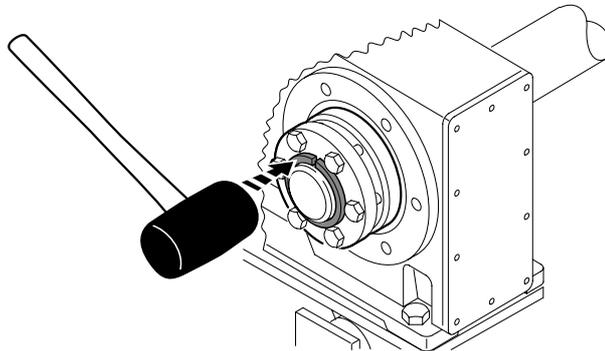

52098AXX

12. Ensure that the customer shaft is fitted in the counter bushing.

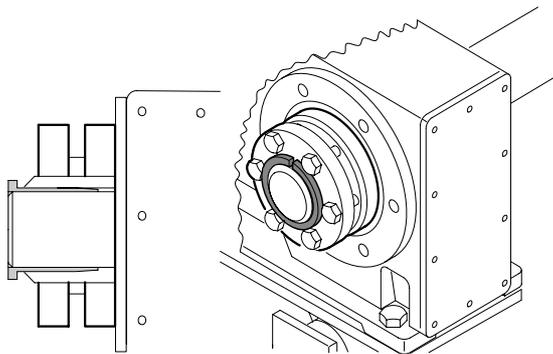


53478AXX



Mechanical Installation

Mounted gear units with TorqLOC®

13. Tighten the bolts of the shrink disk by hand and ensure that the end rings of the shrink disk are parallel.

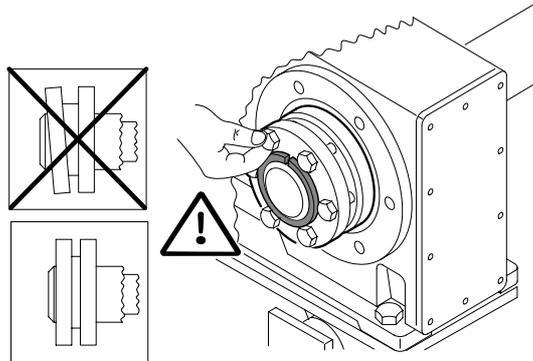


52100AXX

14. Tighten the locking bolts by working round several times from one bolt to the next (not in diametrically opposite sequence). See the table for tightening torques.



After installation, the remaining gap between the outer rings of the shrink discs must be > 0 mm.

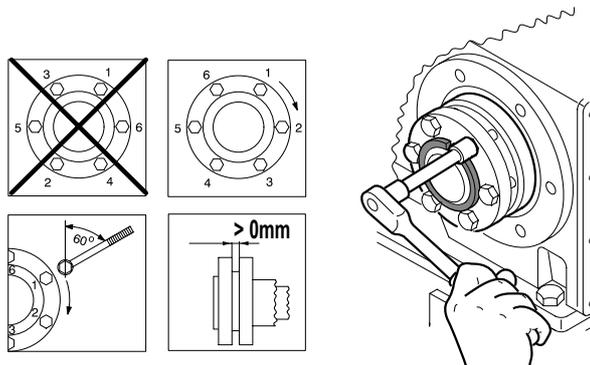


52101AXX

| Type | | Nickel plated | Stainless steel |
|--------|----|---------------|-----------------|
| KT/FT | ST | Torque [Nm] | |
| - | 37 | 4.1 | 6.8 |
| 37 | 47 | 10 | 6.8 |
| 47 | 57 | 12 | 6.8 |
| 57, 67 | 67 | 12 | 15 |
| 77 | 77 | 30 | 30 |
| 87 | 87 | 30 | 50 |
| 97 | 97 | 30 | 50 |



15. The distance between the counter bushing and the hollow shaft end and between the split ring and the clamping ring must not exceed the following values. The following table lists the maximum and minimum gap width.

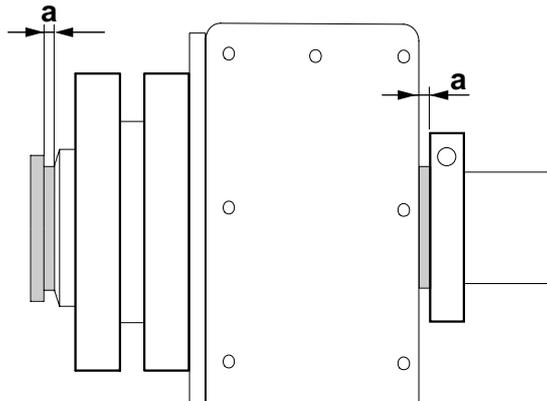

52102AXX


| Type | | Distance [mm] | |
|--------|----|---------------|--------|
| KT/FT | ST | a min. | a max. |
| - | 37 | 3.3 | 5.6 |
| 37 | 47 | 3.3 | 5.6 |
| 47 | 57 | 5.0 | 7.6 |
| 57, 67 | 67 | 5.0 | 7.6 |
| 77 | 77 | 5.0 | 7.6 |
| 87 | 87 | 5.8 | 8.6 |
| 97 | 97 | 5.8 | 8.6 |



4.9 AM adapter coupling

IEC adapter AM63
225 / NEMA
adapter AM56
365

04469CXX

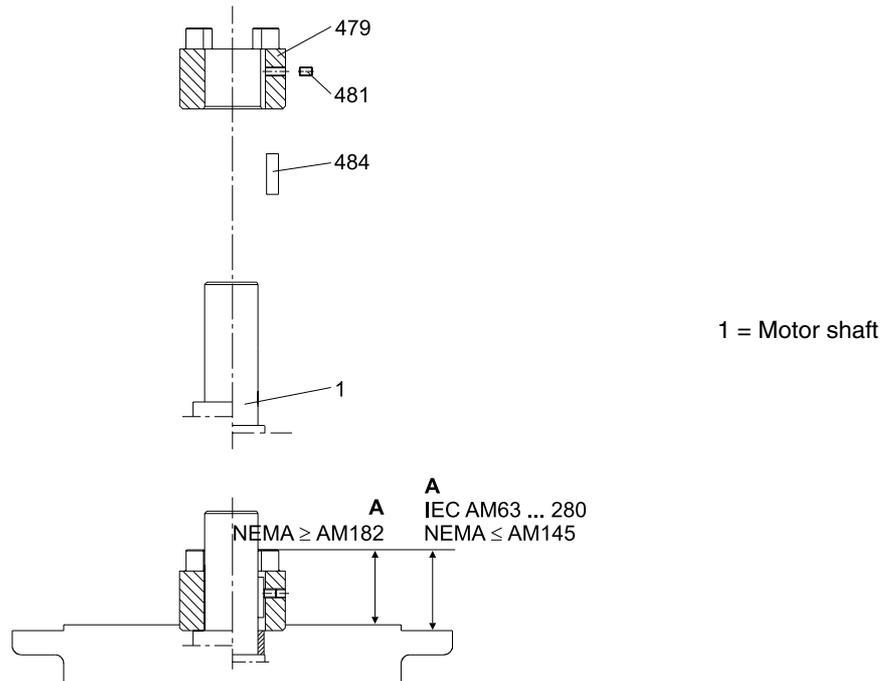

1 = Motor shaft

1. Clean the motor shaft and flange surfaces of the motor and adapter.
2. Remove the key from the motor shaft and replace it with the supplied key (484) (not AM63 and AM250).
3. Heat the coupling half (479) to approx. 80 – 100 °C, push the coupling half onto the motor shaft.
Until stop at motor shaft shoulder (position to point **A** except for AM25 / AM280 and NEMA).
4. Secure key and coupling half using grub screw (481) and tightening torque T_A on motor shaft according to the table.
5. Check point **A**.
6. Seal the contact surfaces between the adapter and motor using a suitable sealing compound.
7. Mount the motor on the adapter. When doing this, make sure the coupling dogs of the adapter shaft engage in the plastic spider.

| | | | | | | | | |
|----------------------|---------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| IEC AM | 63 / 71 | 80 / 90 | 100 / 112 | 132 | 160 / 180 | 200 | 225 | 250 / 280 |
| A | 24.5 | 31.5 | 41.5 | 54 | 76 | 78.5 | 93.5 | 139 |
| T_A | 1.5 | 1.5 | 4.8 | 4.8 | 10 | 17 | 17 | 17 |
| Thread | M4 | M4 | M6 | M6 | M8 | M10 | M10 | M10 |
| NEMA AM | 56 | 143 / 145 | 182 / 184 | 213 / 215 | 254 / 256 | 284 / 286 | 324 / 326 | 364 / 365 |
| A | 46 | 43 | 55 | 63.5 | 78.5 | 85.5 | 107 | 107 |
| T_A | 1.5 | 1.5 | 4.8 | 4.8 | 10 | 17 | 17 | 17 |
| Thread | M4 | M4 | M6 | M6 | M8 | M10 | M10 | M10 |



To avoid contact corrosion, we recommend applying NOCO® fluid to the motor shaft before mounting the coupling half.




When installing a motor onto the adapter, you must use an anaerobic fluid seal to ensure that moisture cannot penetrate the adapter.

Permitted loads



The load data specified in the following table must not be exceeded when a motor is mounted.

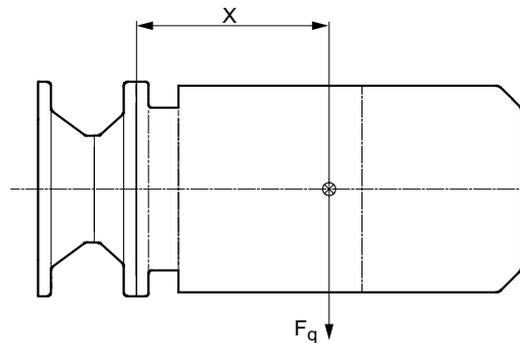

51102AXX

| Adapter type | | x ¹⁾ [mm] | F _q ¹⁾ [N] | |
|---------------------|-------------------------|----------------------|----------------------------------|--------------|
| IEC | NEMA | | IEC adapter | NEMA adapter |
| AM63/71 | AM56 | 77 | 530 | 410 |
| AM80/90 | AM143/145 | 113 | 420 | 380 |
| AM100/112 | AM182/184 | 144 | 2000 | 1760 |
| AM132 ²⁾ | AM213/215 ²⁾ | 186 | 1600 | 1250 |
| AM132.. | AM213/215 | | 4700 | 3690 |
| AM160/180 | AM254/286 | 251 | 4600 | 4340 |
| AM200/225 | AM324 - AM365 | 297 | 5600 | 5250 |
| AM250/280 | - | 390 | 11200 | - |

- 1) The maximum permitted weight of the attached motor $F_{q_{max}}$ must be reduced proportionally as the distance between the adapter flange and the middle of the motor (x) increases. When this distance is reduced, the maximum permitted weight $F_{q_{max}}$ cannot be increased.
- 2) Diameter of the adapter drive flange: 160 mm



Mechanical Installation

AQ adapter coupling

Adapter AM with
backstop AM../RS

Check the direction of rotation of the drive before installation and startup. Please inform the SEW-EURODRIVE customer service if the direction of rotation is incorrect.

The backstop is maintenance-free in operation, and does not require any further maintenance work.


The backstops have a minimum lift-off speed depending on the size (→ following table). If the minimum lift-off speeds are violated, the backstops are subject to wear, and the resulting friction causes the temperature to increase.

| Type | Maximum locking torque of backstop [Nm] | Minimum lift-off speed [1/min] |
|-------------------------------|---|--------------------------------|
| AM80/90/RS, AM143/145/RS | 90 | 640 |
| AM100/112/RS, AM182/184/RS | 340 | 600 |
| AM132/RS, AM213/215/RS | 700 | 550 |
| AM160/180/RS, AM254/286/RS | 1200 | 630 |
| AM200/225/RS, AM324-365/RS | 1450 | 430 |



In rated operation, the lift-off speeds must not drop below the minimum values. The lift-off speeds are only permitted to drop below the minimum values during start-up or braking.

4.10 AQ adapter coupling

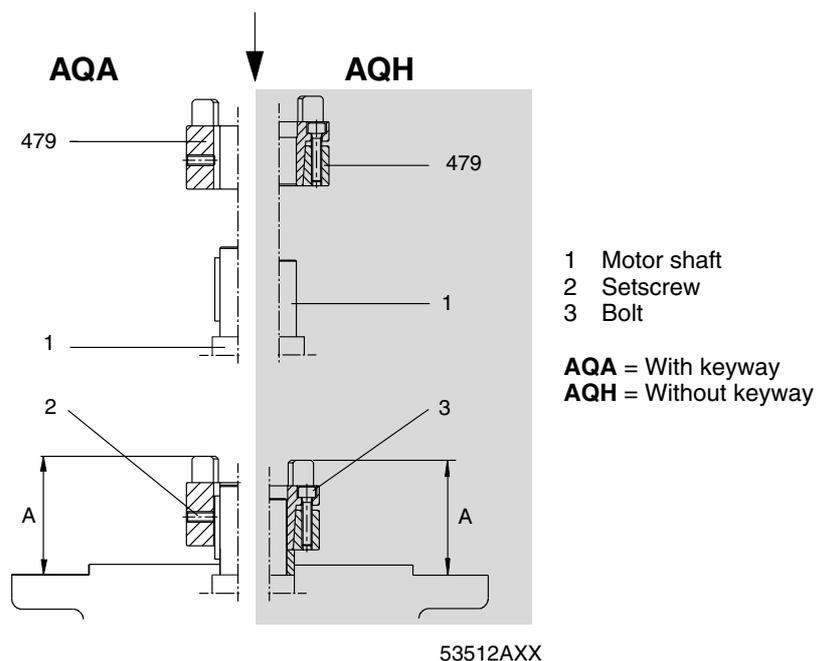

1. Clean the motor shaft and flange surfaces of the motor and adapter.
2. **Type AQH:** Unscrew the bolts of the coupling half (479) and loosen the conical connection.
3. Heat the coupling half (80 °C – 100 °C) and push it onto the motor shaft.
Type AQA / AQH: Up to clearance "A" (see table).
4. **Type AQH:** Tighten the bolts on the coupling half in diametrically opposite sequence



(work round several times tightening the bolts evenly one after the other) until all bolts reach the tightening torque T_A specified in the table.

Type AQA: Use a setscrew to secure the coupling half (see table).

5. Check the position of the coupling half (clearance "A", see table).

Install motor onto the adapter making sure that the dogs of the two coupling halves engage in each other. The force that must be applied when joining the two coupling halves is dissipated after final assembly, so there is no risk of any axial load being applied to adjacent bearings.



Only for AQA, not permitted for AQH: To avoid contact corrosion, we recommend applying NOCO[®] fluid to the motor shaft before mounting the coupling half.



When installing a motor onto the adapter, you must use an anaerobic fluid seal to ensure that moisture cannot penetrate the adapter.

Setting dimensions, tightening torques

| Type | Coupling size | Clearance "A" [mm] | Bolts DIN 912 | | Tightening torque T_A [Nm] | |
|--------------------|---------------|--------------------|---------------|-----|------------------------------|-----|
| | | | AQA | AQH | AQA | AQH |
| AQA /AQH 80 /1/2/3 | 19/24 | 44,5 | M5 | M4 | 2 | 3 |
| AQA /AQH 100 /1/2 | | 39 | | | | |
| AQA /AQH 100 /3/4 | | 53 | | | | |
| AQA /AQH 115 /1/2 | | 62 | | | | |
| AQA /AQH 115 /3 | 24/28 | 62 | M5 | M5 | 2 | 6 |
| AQA /AQH 140 /1/2 | | 62 | | | | |
| AQA /AQH 140 /3 | 28/38 | 74,5 | M8 | M5 | 10 | 6 |
| AQA /AQH 190 /1/2 | | 76,5 | | | | |
| AQA /AQH 190 /3 | 38/45 | 100 | M8 | M6 | 10 | 10 |




4.11 AD input shaft assembly

Please refer to Sec. "Installing input and output shafts" for information on mounting of input elements.

Cover with motor mounting platform AD../P

Mounting the motor and adjusting the motor mounting platform.

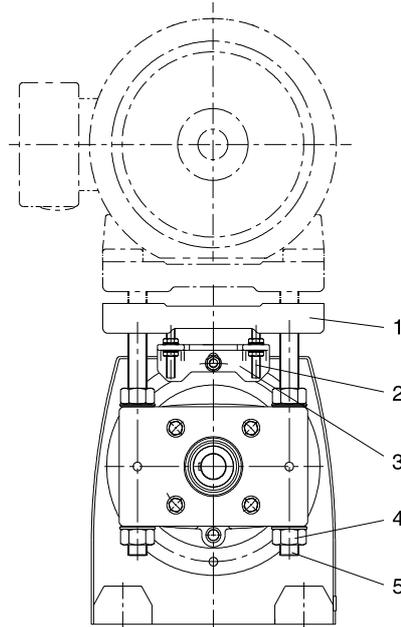

- 1 Motor mounting platform
- 2 Stud bolt (only AD6/P / AD7/P)
- 3 Support (only AD6/P / AD7/P)
- 4 Nut
- 5 Threaded column

03519BXX

1. Set the motor mounting platform to the required mounting position by evenly tightening the adjusting nuts. It may be necessary to remove the lifting eyebolt from helical gear units in order to achieve the lowest adjustment position. Touch up any damage to the paint work.
2. Align the motor on the motor mounting platform (shaft ends must be in alignment) and secure it.
3. Mount the input elements on the input shaft end and the motor shaft. Line them up with one another. Correct the motor position again if necessary.
4. Put on traction elements (V-belt, chain, etc.) and apply a preload by evenly adjusting the motor mounting platform. Do not stress the motor mounting platform and the columns against one another when doing this.
5. Tighten the threaded columns using the nuts which are not used for adjustment.

Only AD6/P and AD7/P:


Unscrew the nuts on the stud bolts before adjustment to allow the stud bolts to move axially in the support without restriction. Do not tighten the nuts until the final adjustment position has been achieved. Do not adjust the motor mounting platform using the support.



**Type with centering shoulder
AD../ZR**

Mounting applications on the input shaft assembly with centering shoulder.

1. Retaining bolts of a suitable length must be used to secure the application. The length l of the new bolts is calculated as follows:

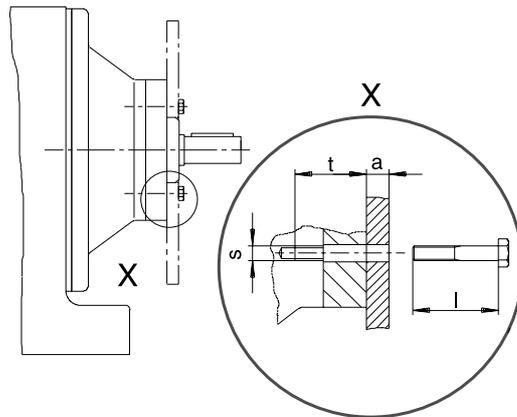

$l = t + a$
 t = Screw-in depth (see table)
 a = Thickness of the application
 s = Retaining thread (see table)

02725CXX

Round down the calculated bolt length to the next smaller standard length.

2. Remove the retaining bolts from the centering shoulder.
3. Clean the contact surface and the centering shoulder.
4. Clean the threads of the new bolts and apply a bolt locking compound (e.g. Loctite 243) to the first few threads.
5. Position the application against the centering shoulder and tighten the retaining bolts to the specified tightening torque T_A (see table).

| Type | Screw-in depth t [mm] | Retaining thread s | Tightening torque T_A for connection bolts in strength class 8.8 [Nm] |
|--------|----------------------------|-------------------------|---|
| AD2/ZR | 25,5 | M8 | 25 |
| AD3/ZR | 31,5 | M10 | 48 |
| AD4/ZR | 36 | M12 | 86 |
| AD5/ZR | 44 | M12 | 86 |
| AD6/ZR | 48,5 | M16 | 210 |
| AD7/ZR | 49 | M20 | 410 |
| AD8/ZR | 42 | M12 | 86 |




Mechanical Installation

AD input shaft assembly

Permitted loads



The load values specified in the following table must not be exceeded.

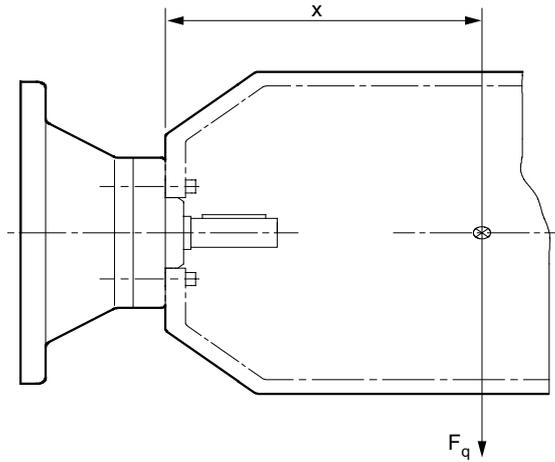

53513AXX

| Type | x ¹⁾ [mm] | F _q ¹⁾ [N] |
|----------------------|-------------------------|-------------------------------------|
| AD2/ZR | 193 | 330 |
| AD3/ZR | 274 | 1400 |
| AD4/ZR ²⁾ | 361 | 1120 |
| AD4/ZR | | 3300 |
| AD5/ZR | 487 | 3200 |
| AD6/ZR | 567 | 3900 |
| AD7/ZR | 663 | 10000 |
| AD8/ZR | 516 | 4300 |

1) Maximum load values for connection bolts in strength class 8.8. The maximum permitted weight of the attached motor F_{qmax} must be reduced proportionally as the distance between the adapter flange and the middle of the motor (x) increases. When this distance is reduced, the F_{qmax} cannot be increased.

2) Diameter of the adapter output flange: 160 mm



Cover with backstop AD../RS

Check the direction of rotation of the drive before installation and startup. Please inform the SEW-EURODRIVE customer service if the direction of rotation is incorrect.

The backstop is maintenance-free in operation, and does not require any further maintenance work.

The backstops have a minimum lift-off speed depending on the size (→ following table). If the minimum lift-off speeds are violated, the backstops are subject to wear, and the resulting friction causes the temperature to increase.

| Type | Maximum locking torque of backstop [Nm] | Minimum lift-off speed [1/min] |
|--------|---|--------------------------------|
| AD2/RS | 90 | 640 |
| AD3/RS | 340 | 600 |
| AD4/RS | 700 | 550 |
| AD5/RS | 1200 | 630 |
| AD6/RS | 1450 | 430 |
| AD7/RS | 1450 | 430 |
| AD8/RS | 2860 | 430 |



In rated operation, the lift-off speeds must not drop below the minimum values. The lift-off speeds are only permitted to drop below the minimum values during start-up or braking.



Startup

Startup of helical-worm and SPIROPLAN® W gear units

5 Startup



Prior to startup check that the oil level is as specified for the mounting position. The oil checking and drain screws and the breather valves must be freely accessible.

5.1 Startup of helical-worm and SPIROPLAN® W gear units



Note: The direction of rotation of the output shaft in series S..7 helical-worm gear units has been changed from CW to CCW; this is different from the S..2 series. Change direction of rotation: Swap over two motor feeder cables.

Run-in period

SPIROPLAN® and helical-worm gear units require a run-in period of at least 24 hours before reaching their maximum efficiency. A separate run-in period applies for each direction of rotation if the gear unit is operated in both directions of rotation. The table shows the average power reduction during the run-in period.

| No. of starts | Worm | | Spiroplan® | |
|---------------|-----------------|--------------|-----------------|-------------------|
| | Power reduction | i range | Power reduction | i range |
| 1 start | ca. 12 % | ca. 50...280 | ca. 15 % | approx. 40 ... 75 |
| 2 start | ca. 6 % | ca. 20...75 | ca. 10 % | ca. 20...30 |
| 3 start | ca. 3 % | ca. 20...90 | ca. 8 % | ca. 15 |
| 4 start | - | - | ca. 8 % | ca. 10 |
| 5 start | ca. 3 % | ca. 6...25 | ca. 5 % | ca. 8 |
| 6 start | ca. 2 % | ca. 7...25 | - | - |

5.2 Startup of helical, parallel shaft helical and helical-bevel gear units

No special startup instructions are required for helical, parallel shaft helical and helical-bevel gear units providing the gear units have been installed in accordance with Sec. "Mechanical Installation".




6 Inspection and Maintenance

6.1 Inspection and maintenance intervals

| Frequency | What to do? |
|--|--|
| <ul style="list-style-type: none"> Every 3000 machine hours, at least every 6 months. | <ul style="list-style-type: none"> Check oil and oil level. Check the seals visually for leakage. For gear units with a torque arm: Check the rubber buffer and change it, if necessary |
| <ul style="list-style-type: none"> Depending on the operating conditions (see chart below), every 3 years at the latest. According to oil temperature. | <ul style="list-style-type: none"> Change mineral oil. Replace anti-friction bearing grease (recommendation). Replace oil seal (do not install it in the same track). |
| <ul style="list-style-type: none"> Depending on the operating conditions (see chart below), every 5 years at the latest. According to oil temperature. | <ul style="list-style-type: none"> Change synthetic oil Replace anti-friction bearing grease (recommendation). Replace oil seal (do not install it in the same track). |
| <ul style="list-style-type: none"> Gear units R07, R17, R27, F27 and Spiroplan® are have lubrication for life and are therefore maintenance-free | |
| <ul style="list-style-type: none"> Varying (depending on external factors). | <ul style="list-style-type: none"> Touch up or renew the surface/anticorrosion coating. |

6.2 Lubricant change intervals

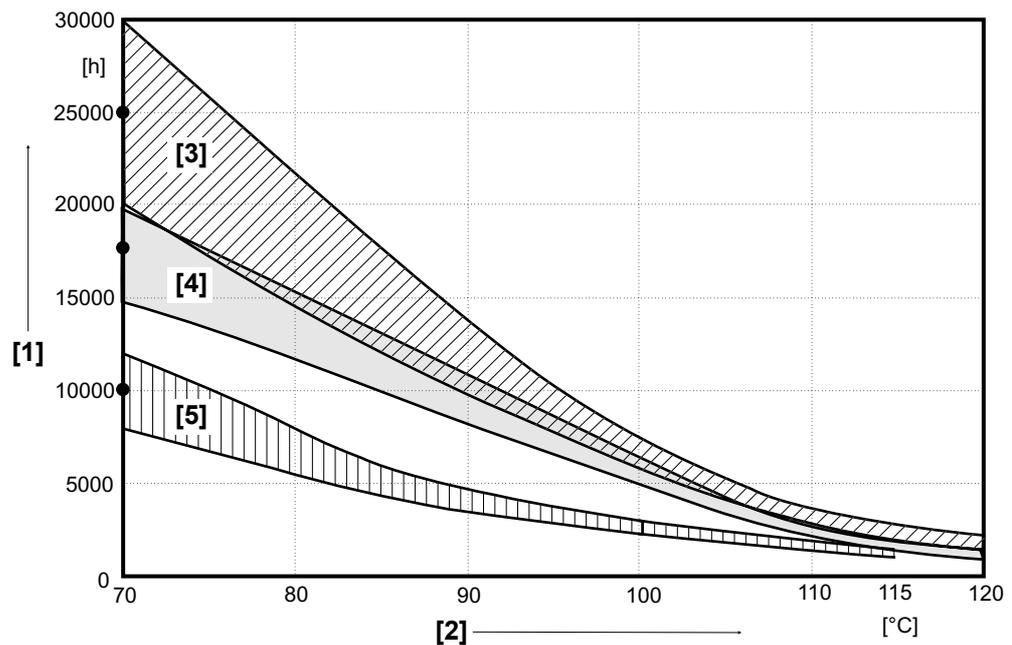

53232AXX

Figure 13: Oil change intervals for standard gear units under normal environmental conditions

[1] Operating hours

[2] Sustained oil bath temperature

- Average value per oil type at 70 °C

[3] CLP PG

[4] CLP HC / HCE 

[5] CLP / HLP / E 



6.3 Inspection and maintenance of the gear unit

Do not intermix synthetic lubricants and do not mix synthetic and mineral lubricants together!

The standard lubricant is mineral oil (except for Spiroplan® gear units).

The position of the oil level and oil drain plug and the breather valve depends on the mounting position. Refer to the diagrams of the mounting positions.

Checking the oil level



1. **De-energize the gearmotor and secure it to prevent it from being switched on inadvertently!**

Wait until the gear unit has cooled off – Danger of burns!

2. Refer to Sec. "Installing the gear unit" when changing the mounting position!
3. For gear units with an oil level plug: Remove the oil level plug, check the fill level and correct it if necessary. Screw the oil level plug back in.

Checking the oil



1. **De-energize the gearmotor and secure it to prevent it from being switched on inadvertently!**

Wait until the gear unit has cooled off – Danger of burns!

2. Remove a little oil from the oil drain plug.
3. Check the oil consistency.
 - Viscosity
 - If you can see that the oil is heavily contaminated, we recommend that you change the oil even if this is outside the service intervals specified in "Inspection and maintenance periods".
4. For gear units with an oil level plug: Remove the oil level plug, check the fill level and correct it if necessary. Screw the oil level plug back in.

Changing the oil



Only change the oil when the gear unit is at operating temperature.

De-energize the gearmotor and secure it to prevent it from being switched back on inadvertently!

Wait until the gear unit cools down - Danger of burns!

Note: The gear unit must still be warm otherwise the high viscosity of excessively cold oil will make it harder to drain the oil correctly.

With oil drain plug / oil level screw

1. Place a container underneath the oil drain plug
2. Remove the oil level plug, breather plug/breather valve and oil drain plug.
3. Drain all the oil.
4. Screw in the oil drain plug.
5. Pour in new oil of the same type through the vent hole (if changing the oil type, please first contact our customer service). Do not mix synthetic lubricants.
 - Pour in the volume of oil in accordance with the mounting position (see Sec. "Lubricant fill quantities") or as specified on the nameplate.
 - Check at the oil level plug.
6. Screw the oil level plug back in
7. Screw in the breather plug/breather valve.



Without oil drain plug / oil level plug

1. Remove cover plate.
2. Drain the oil through the cover plate opening.
3. Pour in new oil of the same type through the vent hole (if changing the oil type, please first contact our customer service). Do not mix synthetic lubricants.
 - Pour in the volume of oil in accordance with the mounting position (see Sec. "Lubricant fill quantities") or as specified on the nameplate.
4. Check the oil level (→ Sec. "Check oil level for gear units with oil level plug")
5. Attach cover plate (observe the tightening torque and series → Sec. "Check the oil level for gear units without an oil level plug")

Changing the oil seal



1. **De-energize the gearmotor and secure it to prevent it from being switched on inadvertently!**
Wait until the gear unit has cooled off – Danger of burns!
2. When changing the oil seal, ensure that there is a sufficient grease reservoir between the dust lip and protective lip, depending on the type of gear unit.
3. If you use double oil seals, the space has to be filled one-third with grease.

6.4 Inspection / maintenance of AM / AQA adapters

| Frequency | What to do? |
|---|--|
| <ul style="list-style-type: none"> • Every 3000 machine hours, at least every 6 months | <ul style="list-style-type: none"> • Check torsional play • Visually check the elastic annular gear • Check the adapter visually for leakage |
| <ul style="list-style-type: none"> • After 25000 - 30000 machine hours | <ul style="list-style-type: none"> • Renew the anti-friction bearing grease • Replace oil seal (do not install it in the same track) • Change the elastic annular gear. |

6.5 Inspection / maintenance of AD adapters

| Frequency | What to do? |
|---|---|
| <ul style="list-style-type: none"> • Every 3000 machine hours, at least every 6 months | <ul style="list-style-type: none"> • Check running noise for possible bearing damage • Check the adapter visually for leakage |
| <ul style="list-style-type: none"> • After 25000 - 30000 machine hours | <ul style="list-style-type: none"> • Renew the anti-friction bearing grease • Change the oil seal |



7 Malfunctions

Customer service

Please have the following information to hand if you require the assistance of our customer service:

- Data from the nameplate (complete)
- Nature and extent of the fault
- Time and peripheral circumstances of the fault
- Presumed cause

7.1 Gear unit malfunctions

| Problem | Possible cause | Remedy |
|--|---|--|
| Unusual, regular running noise | A Meshing/grinding noise: Bearing damage. B Knocking noise: Irregularity in the gearing | A Check the oil (see Sec. "Inspection and Maintenance"), change bearings B Contact customer service |
| Unusual, irregular running noise | Foreign bodies in the oil | <ul style="list-style-type: none"> • Check the oil (see Sec. "Inspection and Maintenance") • Stop the drive, contact customer service |
| Oil leaking ¹⁾ <ul style="list-style-type: none"> • From the gear cover plate • From the motor flange • From the motor oil seal • From the gear unit flange • From the output end oil seal | A Rubber seal on the gear cover plate leaking B Seal defective C Gear unit not vented | A Tighten the bolts on the gear cover plate and observe the gear unit. Oil still leaking: Contact customer service B Contact customer service C Vent the gear unit (see Sec. "Mounting Positions") |
| Oil leaking from breather valve | A Too much oil B Drive operated in incorrect mounting position C Frequent cold starts (oil foams) and/or high oil level | A Correct the oil level (see Sec. "Inspection and Maintenance") B Mount the breather valve correctly (see Sec. "Mounting Positions") and correct the oil level (see "Lubricants") |
| Output shaft does not turn although the motor is running or the input shaft is rotated | Connection between shaft and hub in gear unit interrupted | Send in the gear unit/gearmotor for repair |

1) Short-term oil/grease leakage at the oil seal is possible in the run-in phase (24 hours running time).

7.2 AM / AQA / AL adapter malfunctions

| Problem | Possible cause | Remedy |
|--|--|--|
| Unusual, regular running noise | Meshing/grinding noise: Bearing damage | Contact SEW-EURODRIVE customer service |
| Oil leaking | Seal defective | Contact SEW-EURODRIVE customer service |
| Output shaft does not turn although the motor is running or the input shaft is rotated | Connection between shaft and hub in gear unit interrupted | Send the gear unit to SEW-EURODRIVE for repair. |
| Change in running noise and / or vibrations occur | A Annular gear wear, short-term torque transfer through metal contact B Bolts to secure hub axially are loose. | A Change the annular gear B Tighten the bolts |
| Premature wear in annular gear | A Contact with aggressive fluids / oil; ozone influence; too high ambient temperatures etc, which can cause a change in the physical properties of the annular gear. B Impermissibly high ambient/contact temperature for the annular gear; maximum permitted temperature -20 °C to +80 °C. C Overload | Contact SEW-EURODRIVE customer service |



7.3 AD input shaft assembly malfunctions

| Problem | Possible cause | Remedy |
|---|--|---|
| Unusual, regular running noise | Meshing/grinding noise: Bearing damage. | Contact SEW-EURODRIVE customer service |
| Oil leaking | Seal defective | Contact SEW-EURODRIVE customer service |
| Output shaft does not turn although the input shaft is rotated. | Connection between shaft and hub in gear unit or cover interrupted | Send the gear unit to SEW-EURODRIVE for repair. |

8 Mounting Positions

8.1 General information on mounting positions

Mounting position designation

SEW differentiates between six mounting positions M1 ... M6 for gear units. The following figure shows the spatial orientation of the gearmotor in mounting positions M1 ... M6.

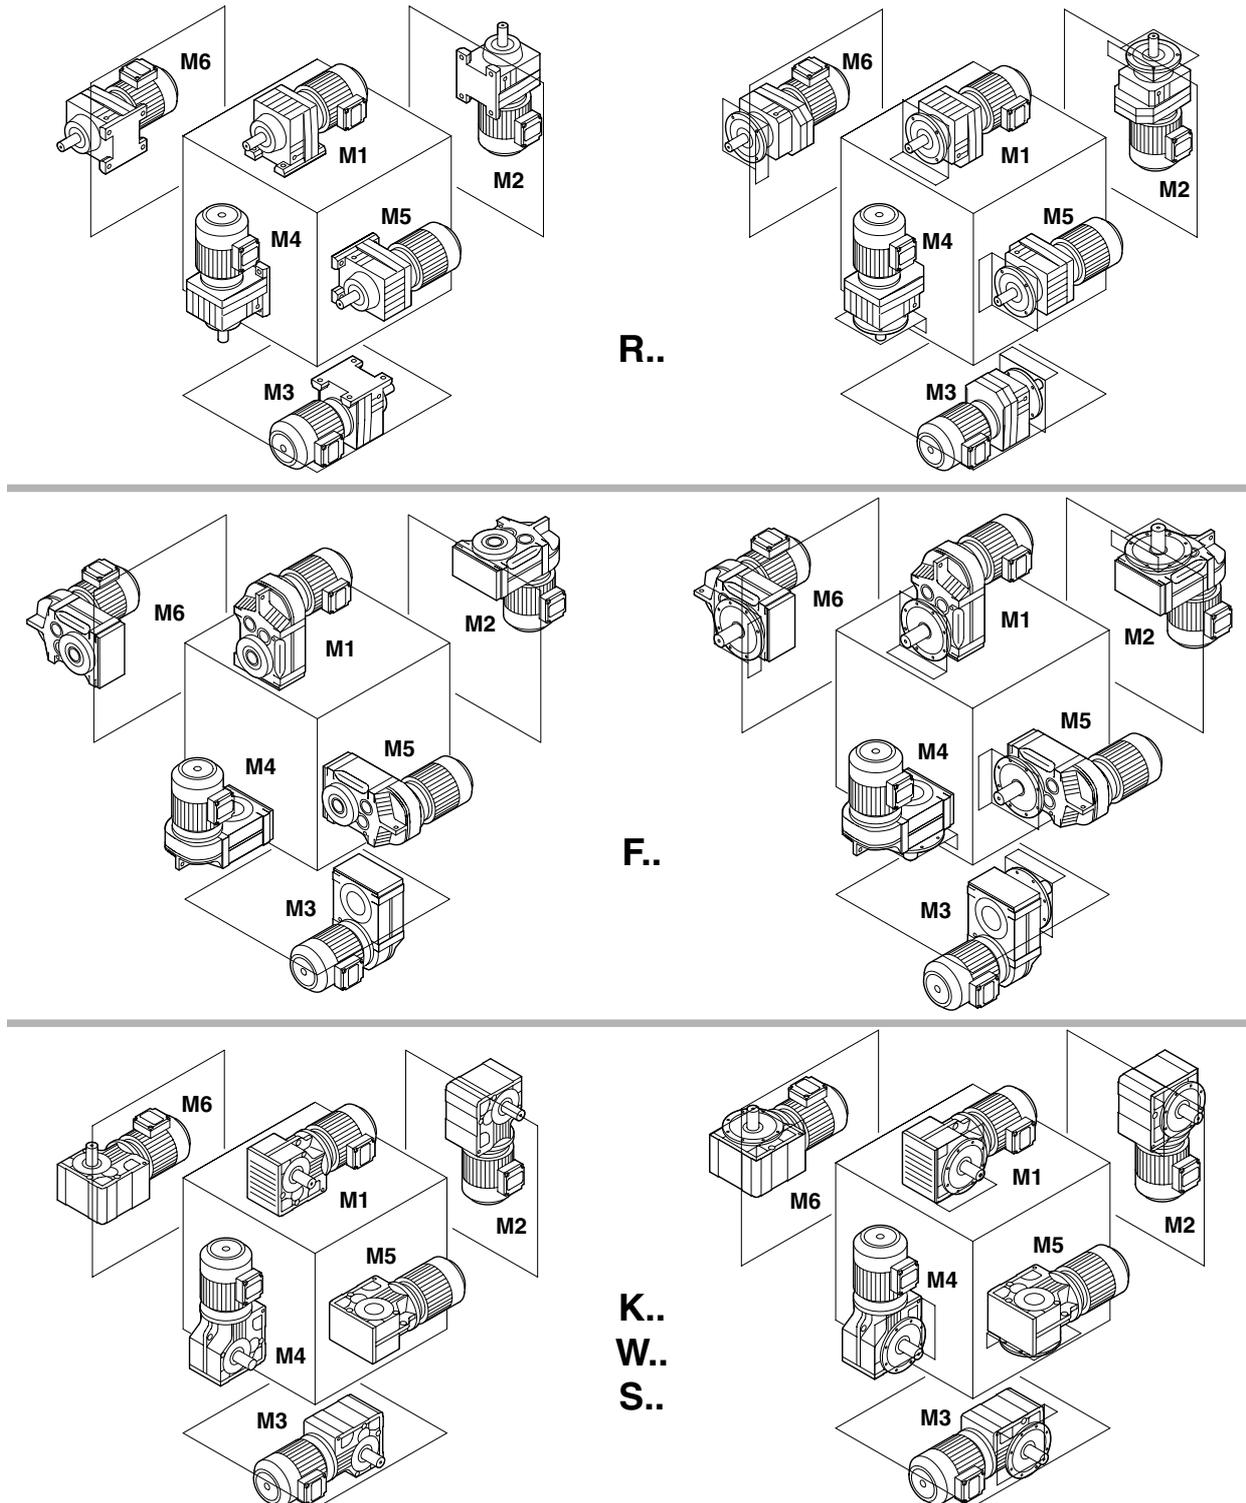


Figure 14: Depiction of mounting positions M1 ... M6

03203AXX

8.2 Key to the mounting position sheets



SPIROPLAN® gearmotors do not depend on any particular mounting position. However, mounting positions M1 to M6 are also shown for SPIROPLAN® gearmotors to assist you in working with this documentation.

Important: SPIROPLAN® gearmotors cannot be equipped with breather valves, oil level plugs or drain plugs.

Symbols used

The following table shows the symbols used in the mounting position sheets and what they mean:

| Symbol | Meaning |
|---|----------------|
|  | Breather valve |
|  | Oil level plug |
|  | Oil drain plug |

Churning losses






Increased churning losses may arise in some mounting positions. Contact SEW-EURODRIVE in case of the following combinations:

| Mounting position | Gear unit type | Gear unit size | Input speed [1/min] |
|--------------------|----------------|----------------|---------------------|
| M2, M4 | R | 97 ... 107 | > 2500 |
| | | > 107 | > 1500 |
| M2, M3, M4, M5, M6 | F | 97 ... 107 | > 2500 |
| | | > 107 | > 1500 |
| | K | 77 ... 107 | > 2500 |
| | | > 107 | > 1500 |
| | S | 77 ... 97 | > 2500 |

8.3 Mounting positions for R helical gearmotors

R07-R167

04 040 200




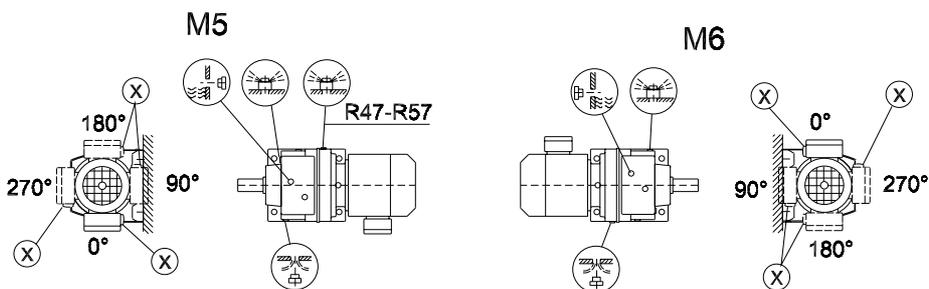
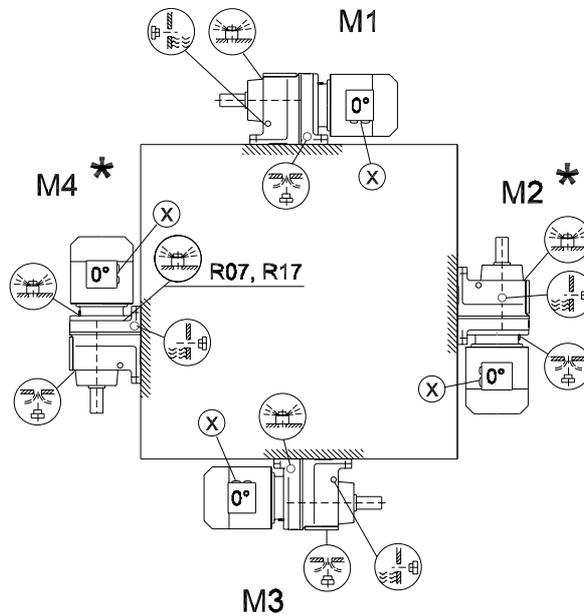
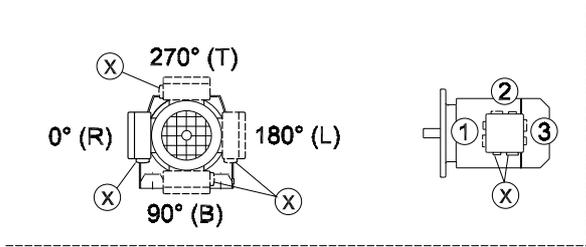


| | | |
|---------------|--|--------------------|
| R07 | | M1, M2, M3, M5, M6 |
| R17, R27 | | M1, M3, M5, M6 |
| R07, R17, R27 | | |
| R47, R57 | | M5 |

* → page 51

RF07-RF167

04 041 200

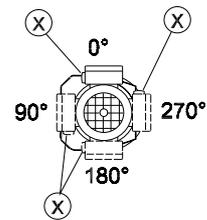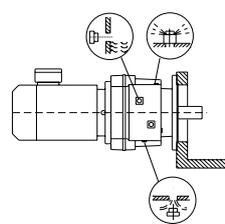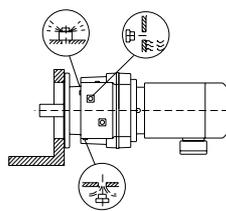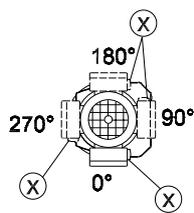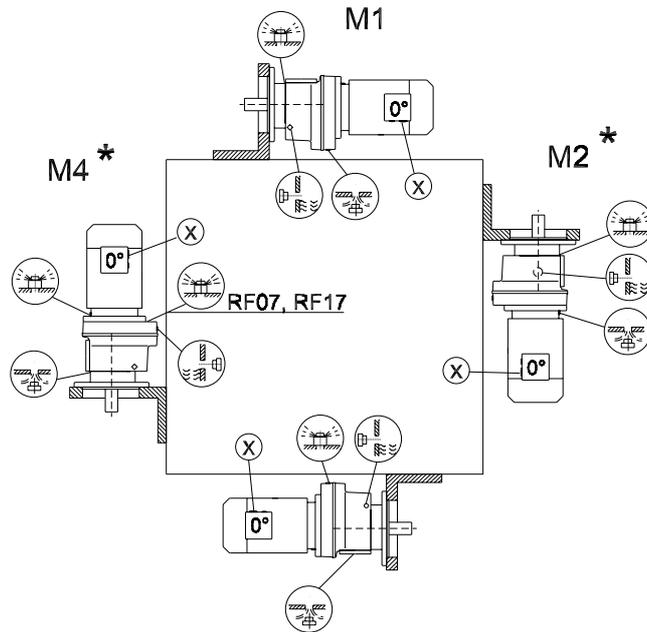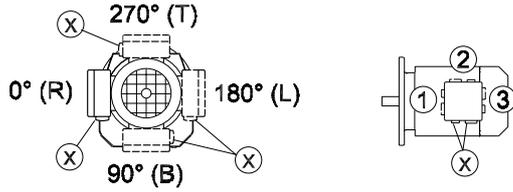

| | | |
|------------------|--|--------------------|
| RF07 | | M1, M2, M3, M5, M6 |
| RF17, RF27 | | M1, M3, M5, M6 |
| RF07, RF17, RF27 | | |
| RF47, RF57 | | M5 |




* → page 51

Mounting Positions

Mounting positions for R helical gearmotors

R07F-R87F

04 042 200

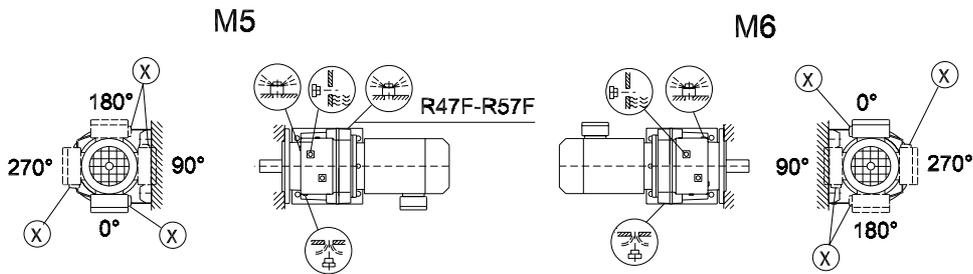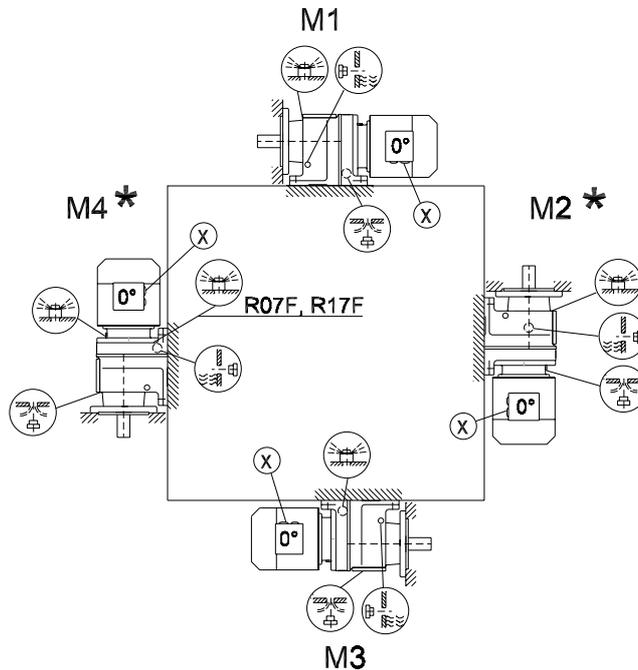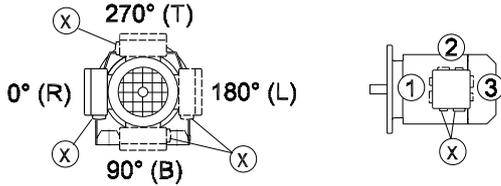

| | | |
|------------------|--|--------------------|
| R07F | | M1, M2, M3, M5, M6 |
| R17F, R27F | | M1, M3, M5, M6 |
| R07F, R17F, R27F | | |
| R47F, R57F | | M5 |



* → page 51

Important: See the information in the "Gearmotors" catalog, section "Project Planning for Gear Units/Overhung and axial loads."

8.4 Mounting positions of RX helical gearmotors

RX57-RX107

04 043 200

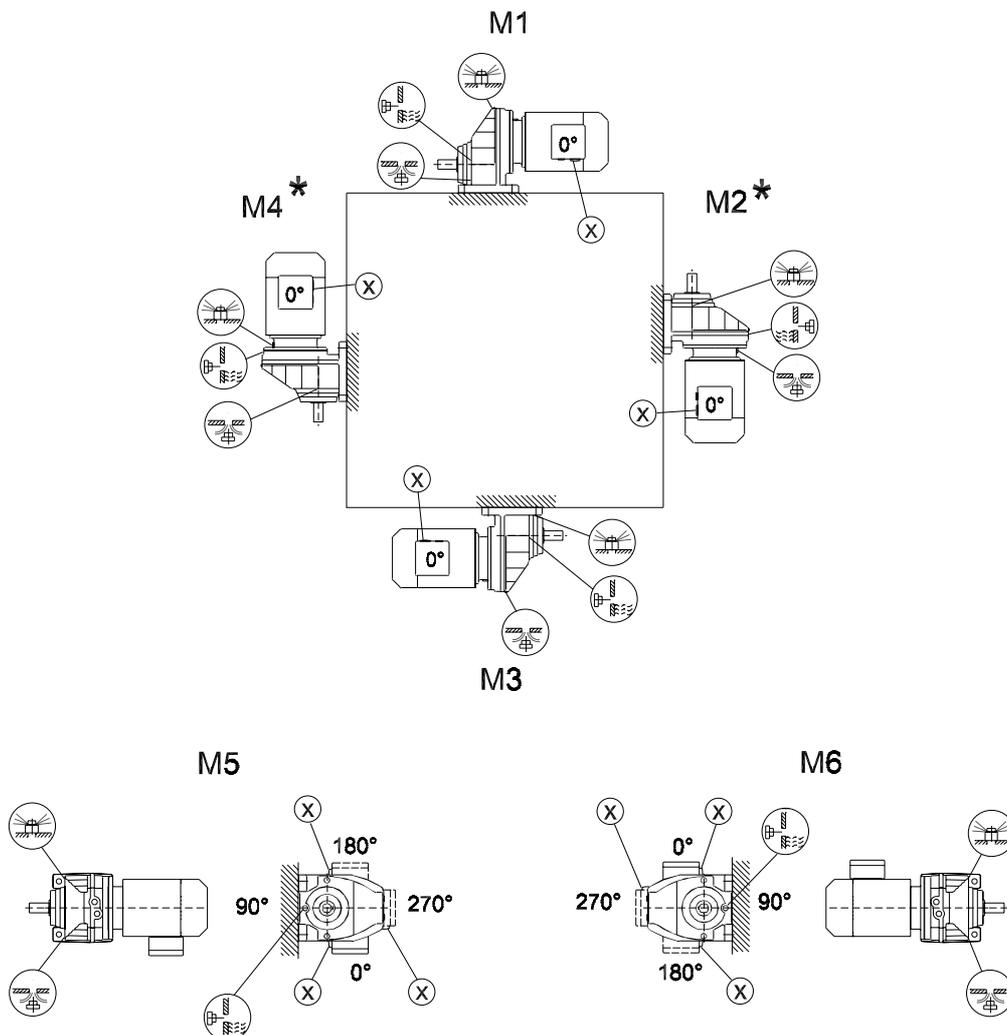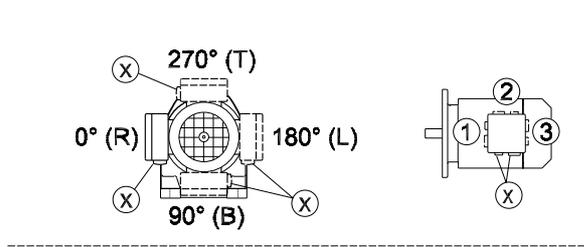



* → page 51

Mounting Positions

Mounting positions of RX helical gearmotors

RXF57 - RXF107

04 044 200

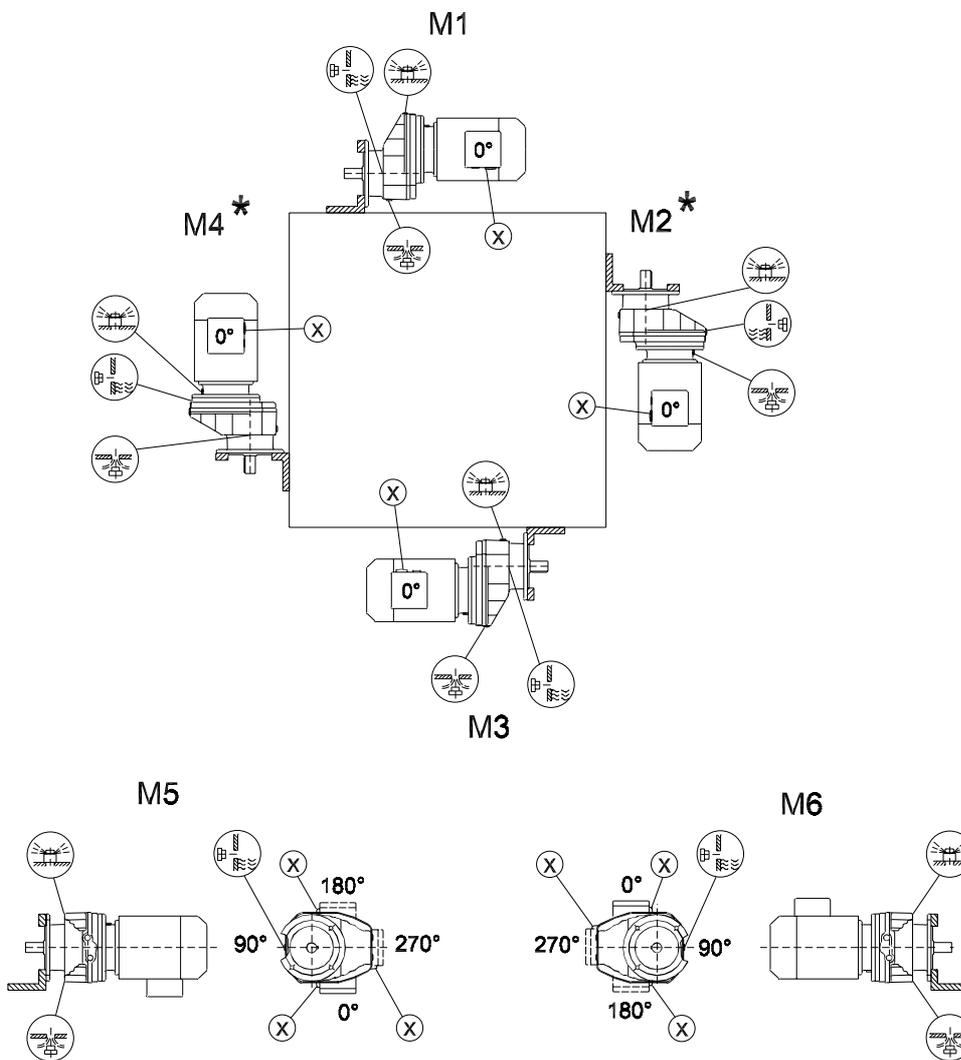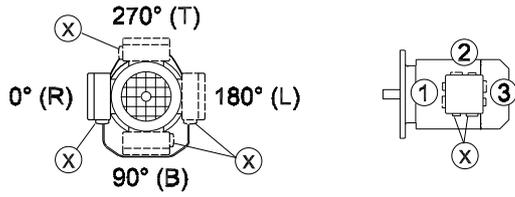


* → page 51

8.5 Mounting positions for parallel shaft helical gearmotors

F/FA..B/FH27B-157B, FV27B-107B

42 042 200

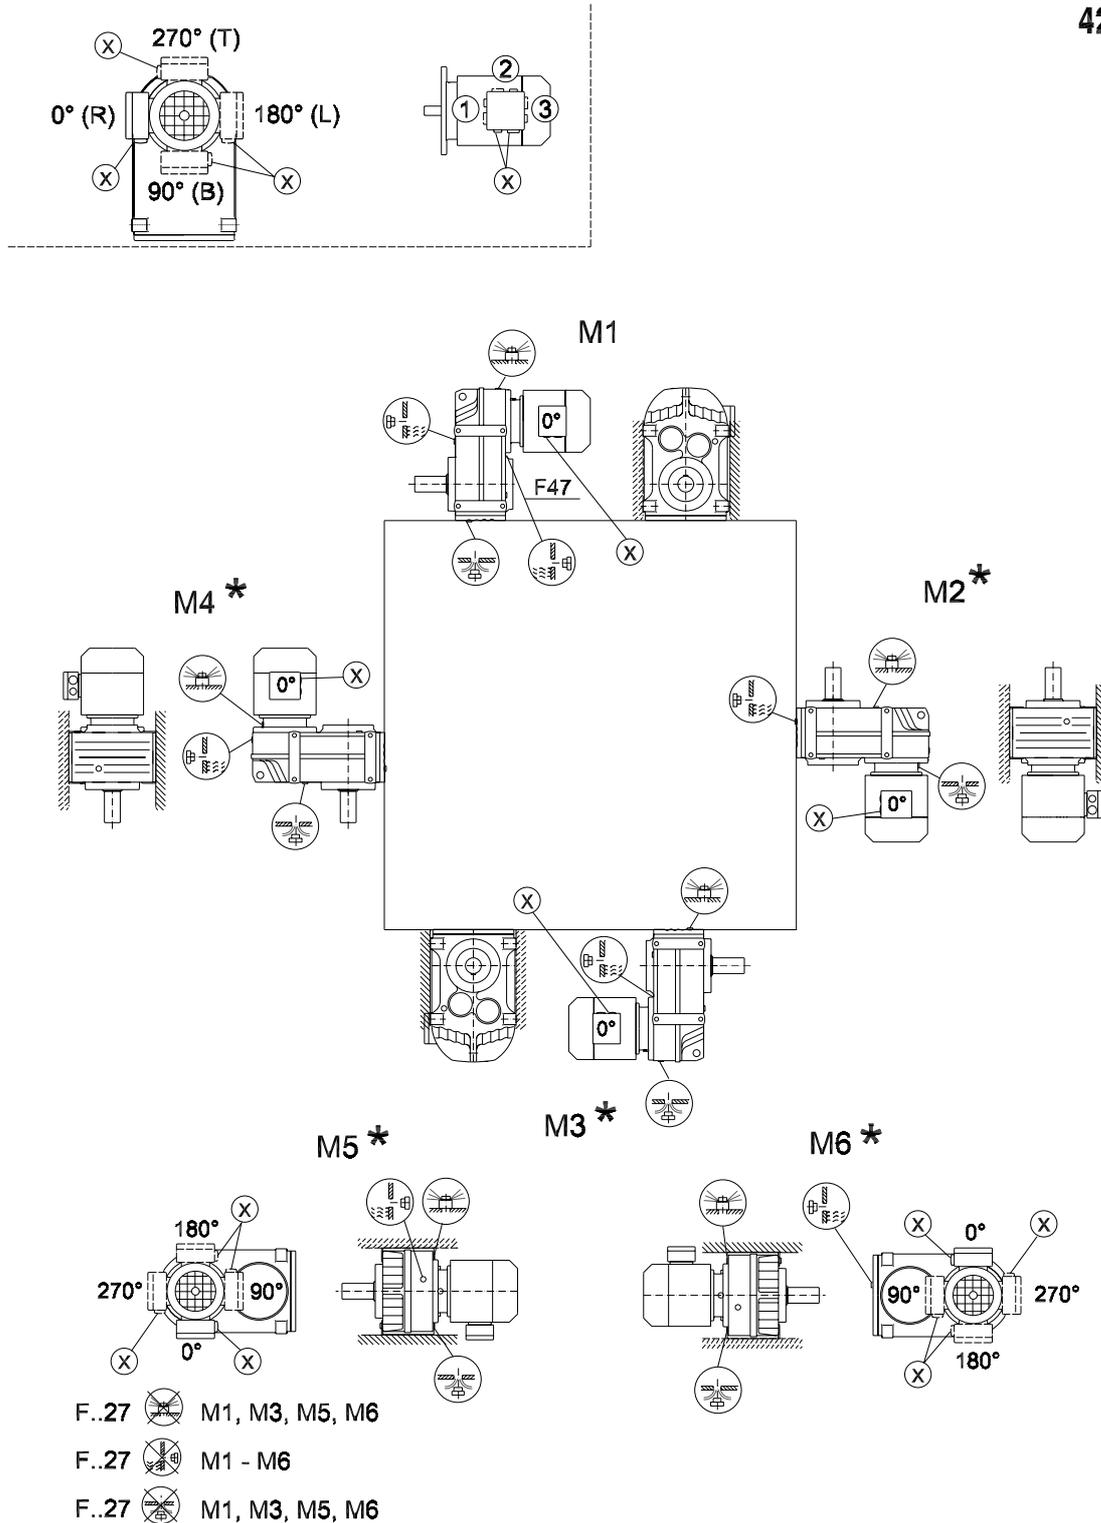



* → page 51

Mounting Positions

Mounting positions for parallel shaft helical gearmotors

FF/FAF/FHF/FAZ/FHZ27-157, FVF/FVZ27-107

42 043 200

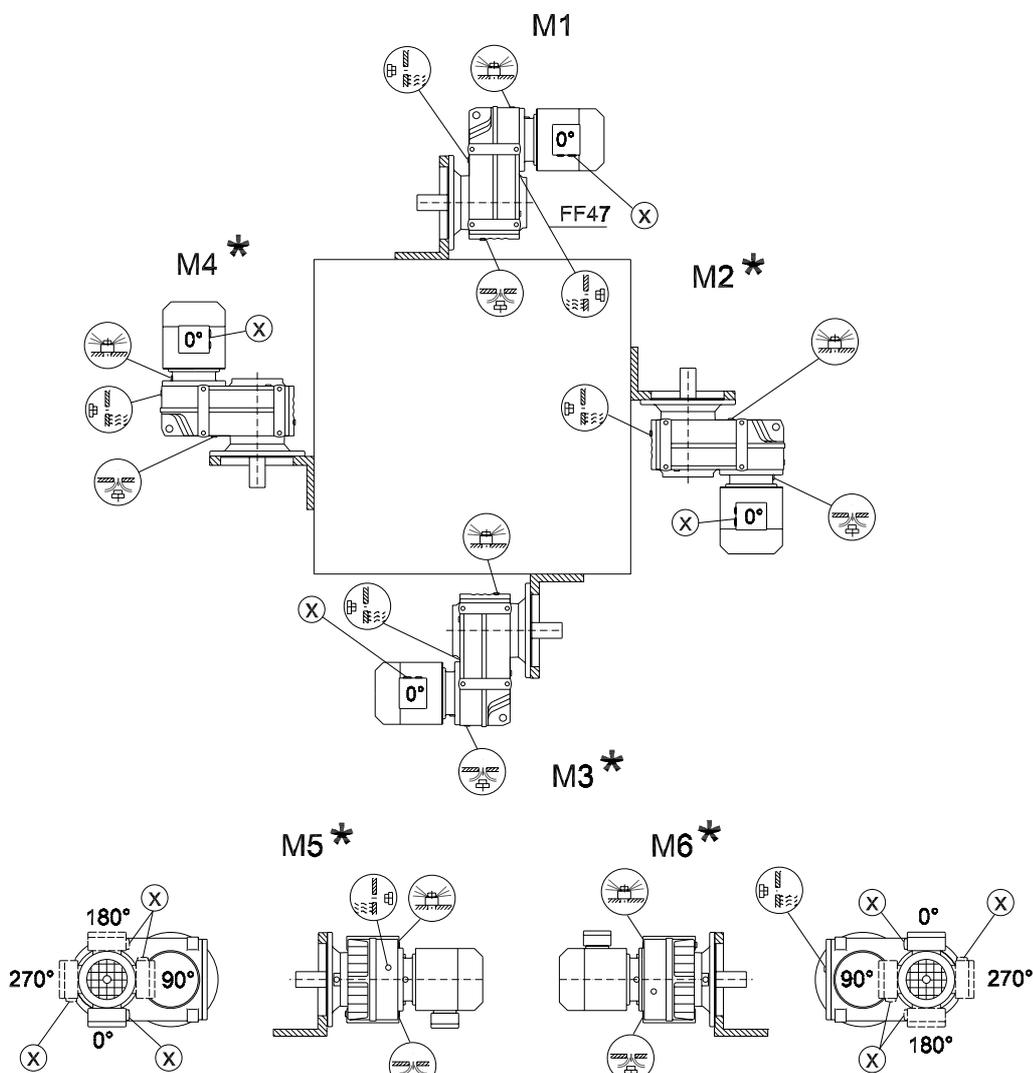
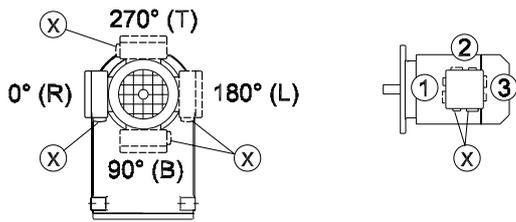


- F..27 M1, M3, M5, M6
- F..27 M1 - M6
- F..27 M1, M3, M5, M6

* → page 51

FA/FH27-157, FV27-107, FT37-97

42 044 200

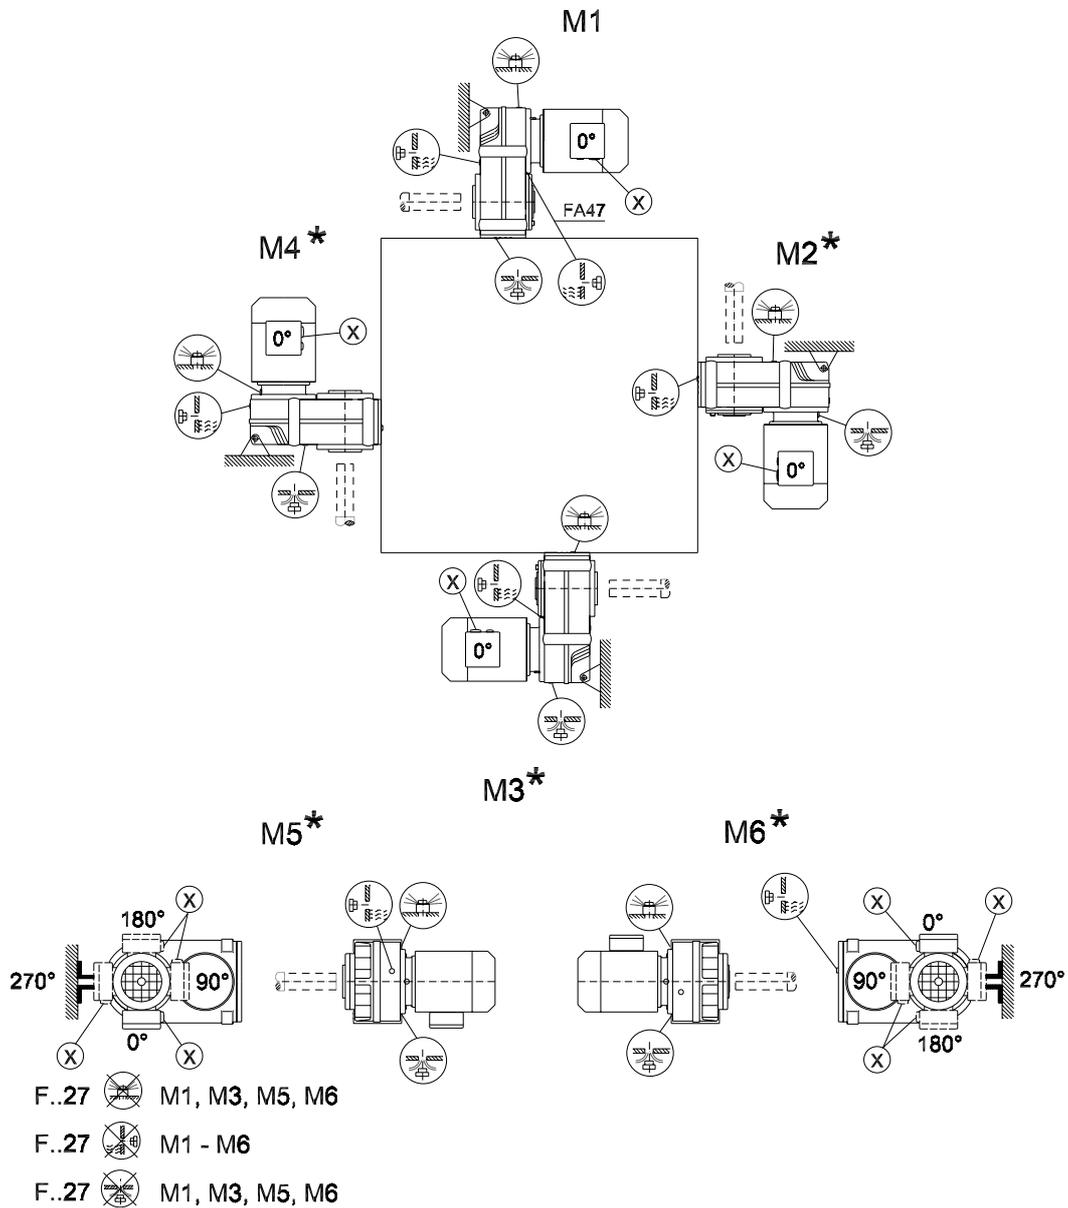
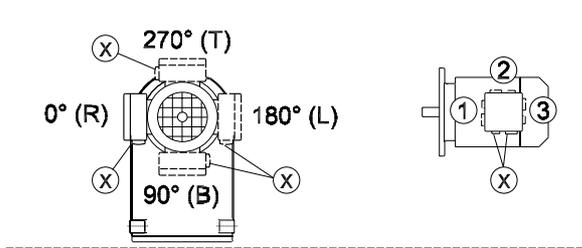


* → page 51

8.6 Mounting positions for helical-bevel gearmotors

K/KA..B/KH37B-157B, KV37B-107B

34 025 200

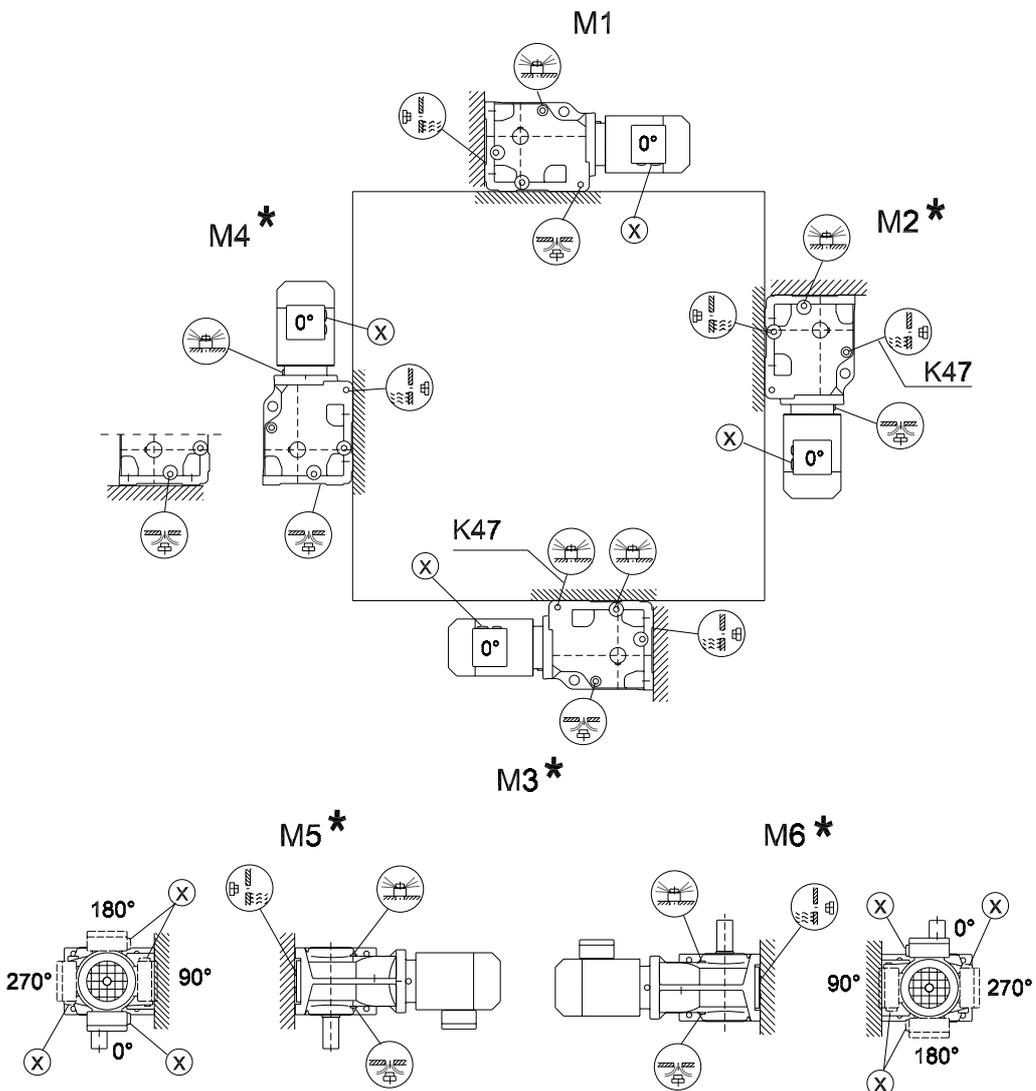
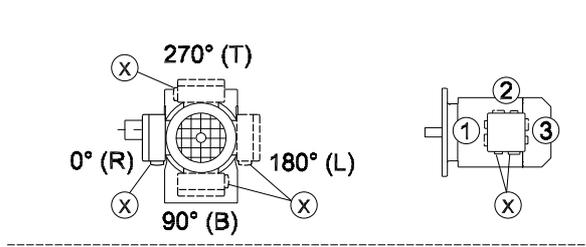


* → page 51

Important: See the  information in the "Gearmotors" catalog, section "Project Planning for Gear Units/Overhung and axial loads."

K167-187, KH167B-187B

34 026 200

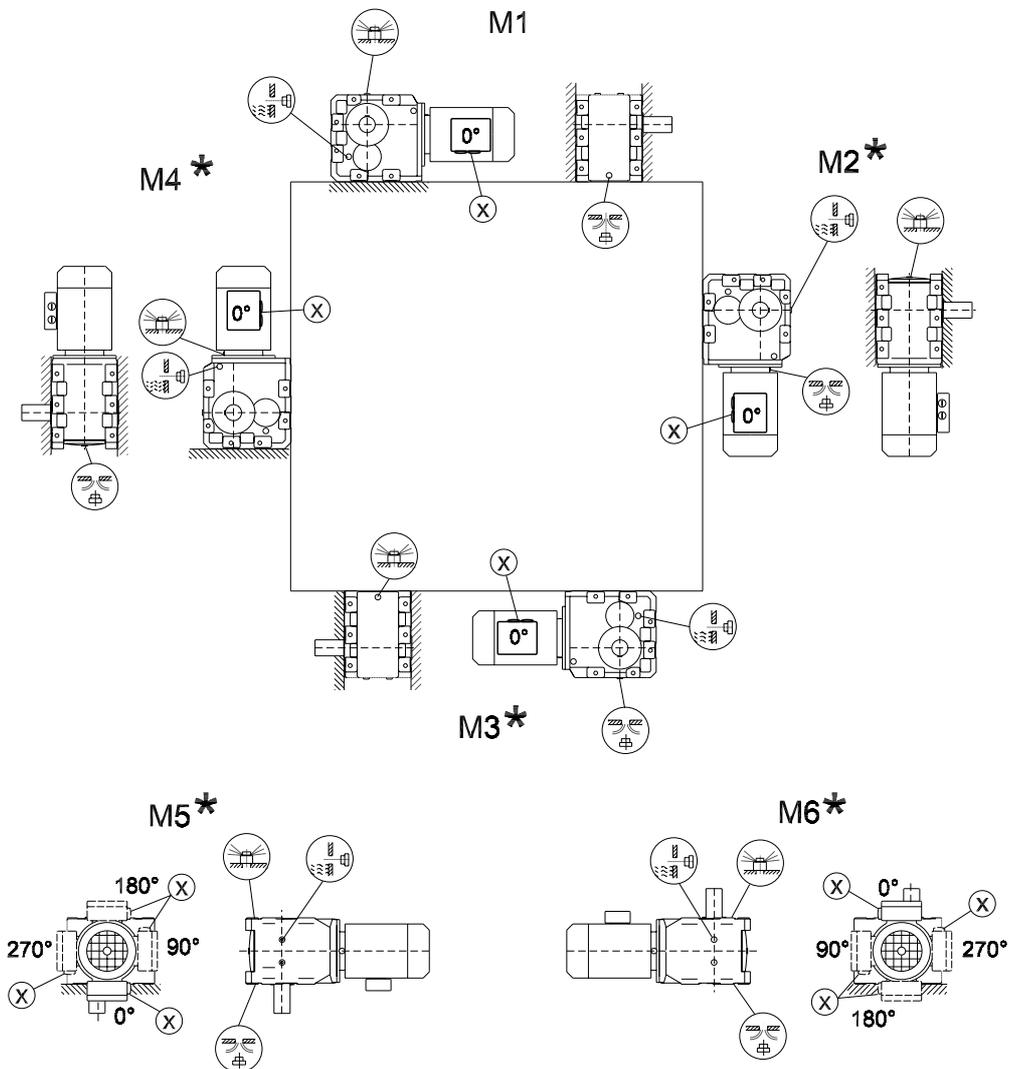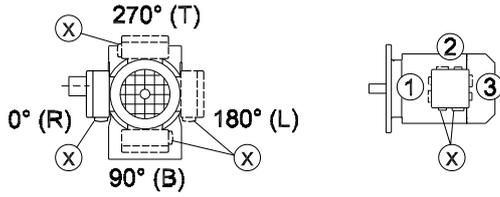

* → page 51



Important: See the **i** information in the "Gearmotors" catalog, section "Project Planning for Gear Units/Overhung and axial loads."

Mounting Positions

Mounting positions for helical-bevel gearmotors

KF/KAF/KHF/KAZ/KHZ37-157, KVF/KVZ37-107



34 027 200

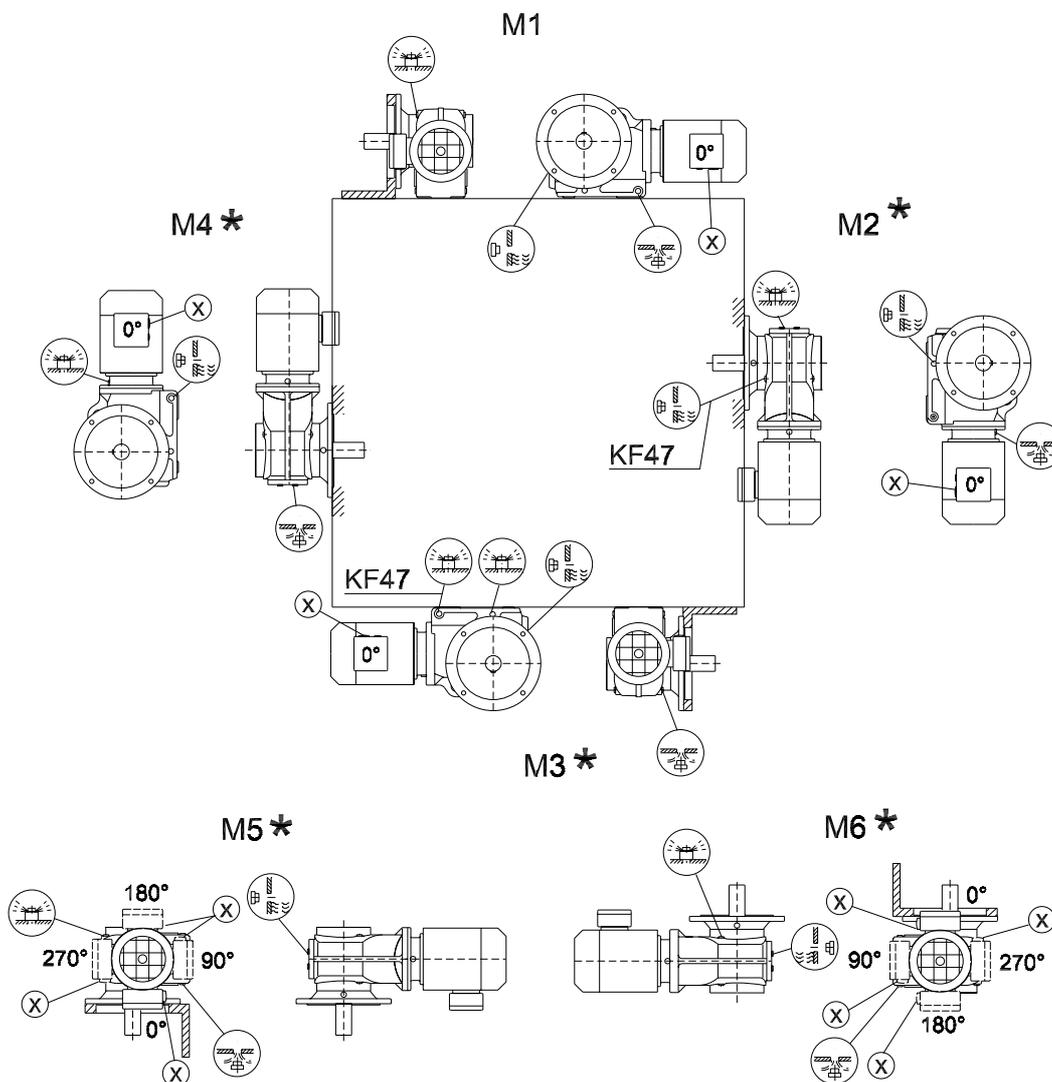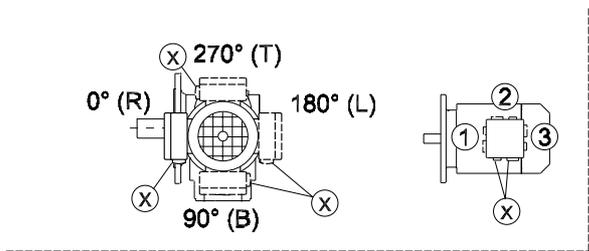

* → page 51

KA/KH37-157, KV37-107, KT37-97

39 025 200

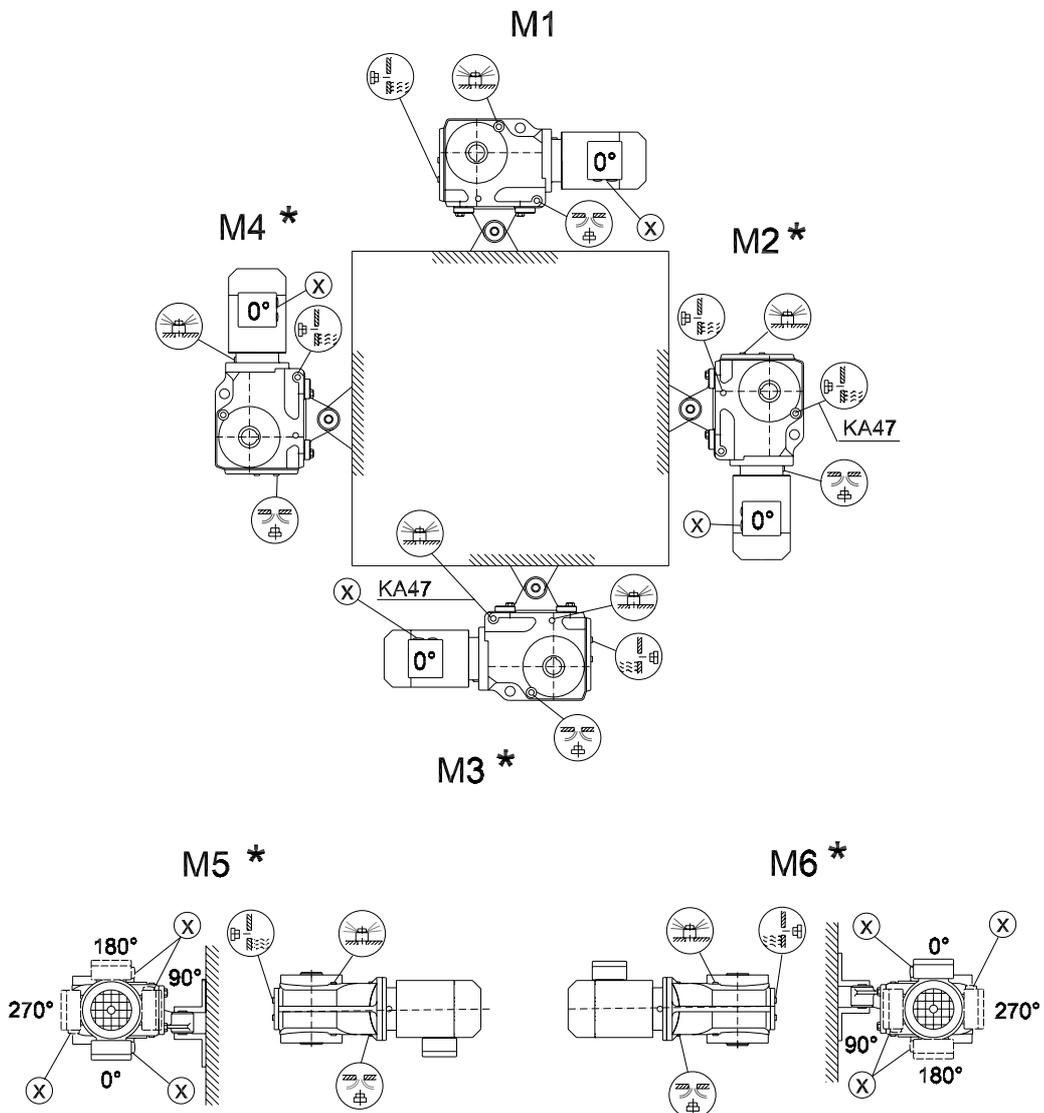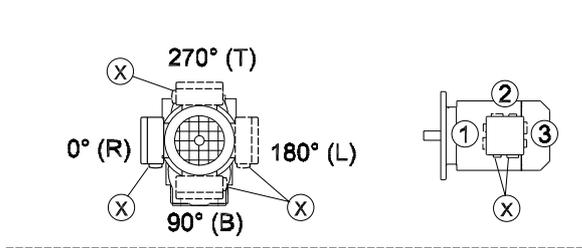



* → page 51

Mounting Positions

Mounting positions for helical-bevel gearmotors

KH167-187

39 026 200

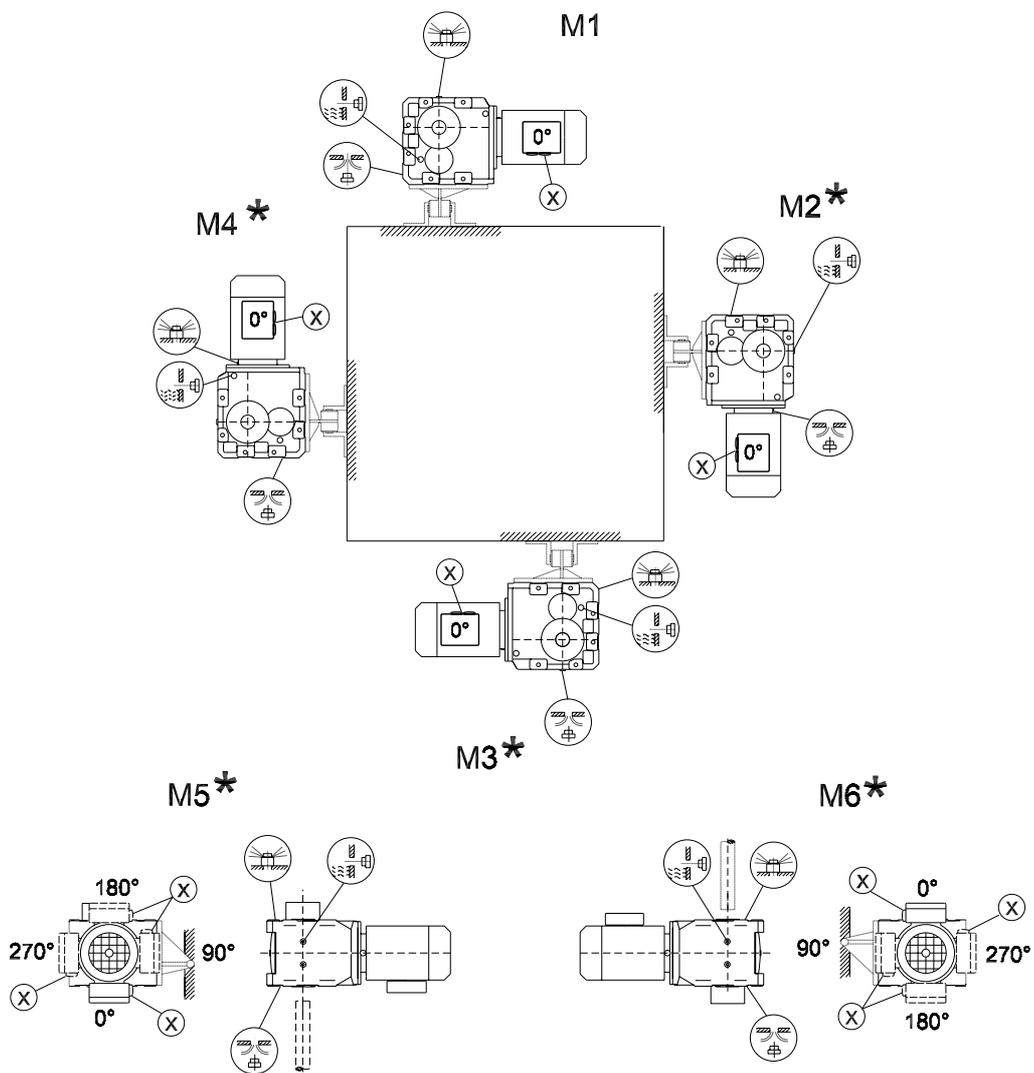
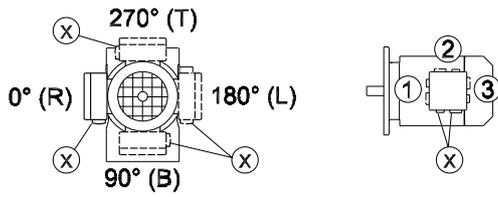


* → page 51

8.7 Mounting positions for helical-worm gearmotors

S37

05 025 200

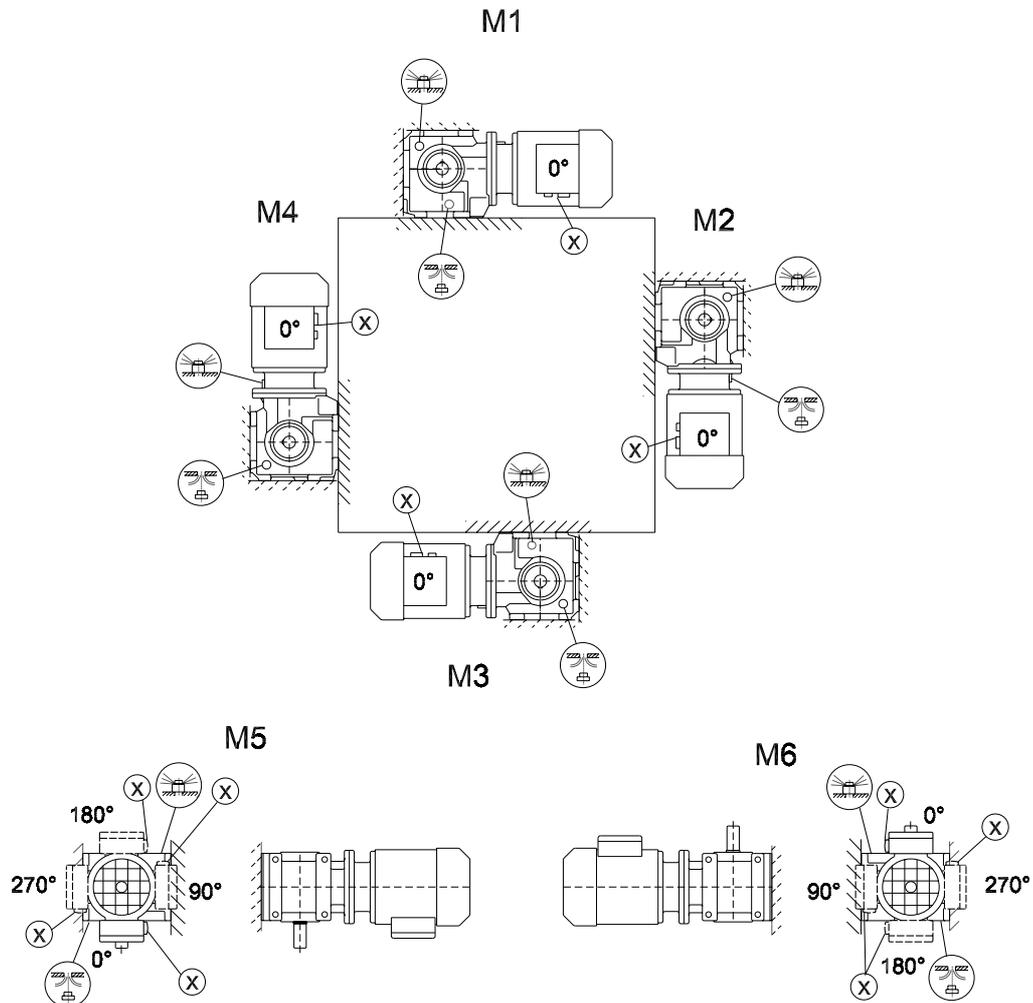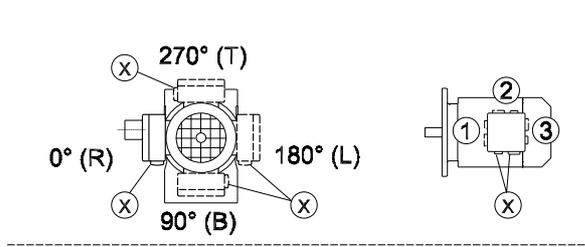



Important: See the  information in the "Gearmotors" catalog, section "Project Planning for Gear Units/Overhung and axial loads."

Mounting Positions

Mounting positions for helical-worm gearmotors

S47 - S97

05 026 200

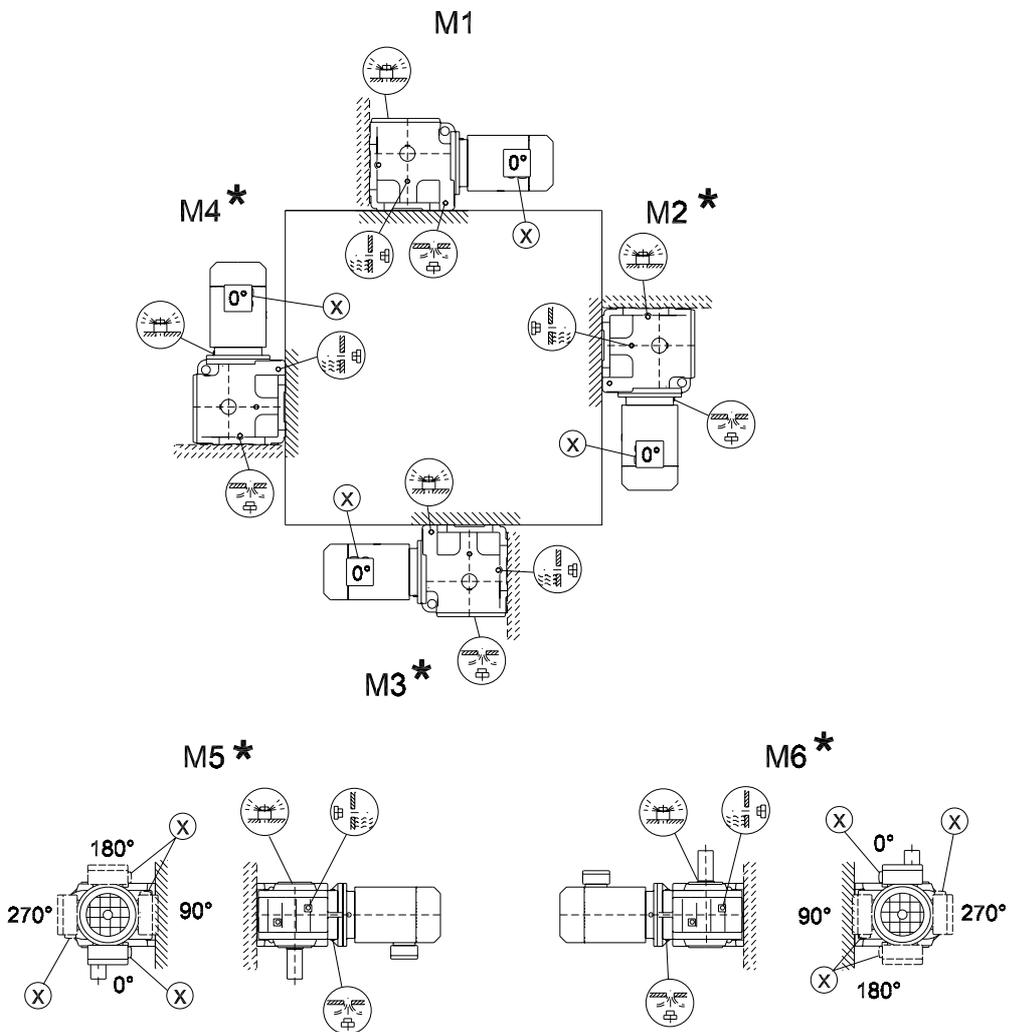
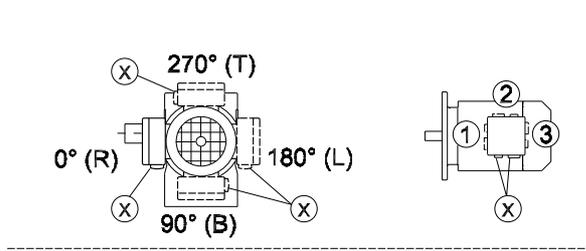


* → page 51

Important: See the **i** information in the "Gearmotors" catalog, section "Project Planning for Gear Units/Overhung and axial loads."

SF/SAF/SHF37

05 027 200

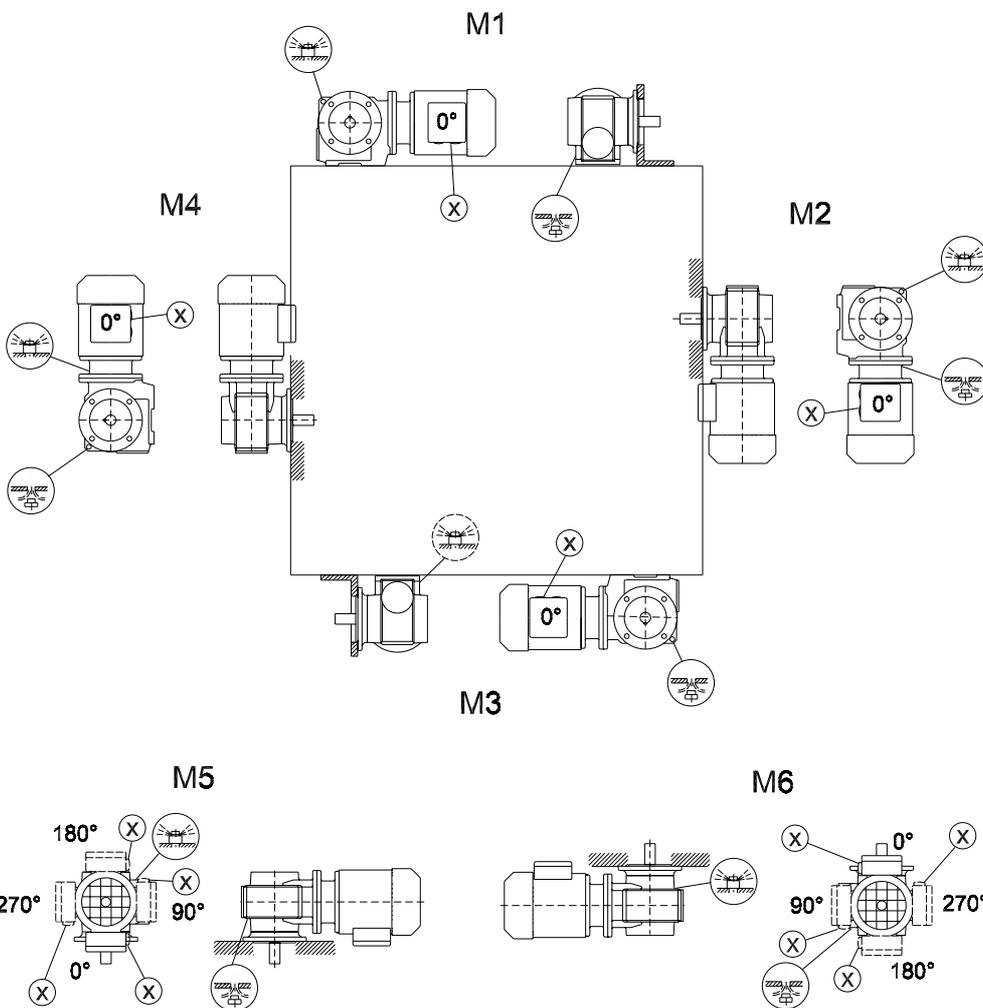
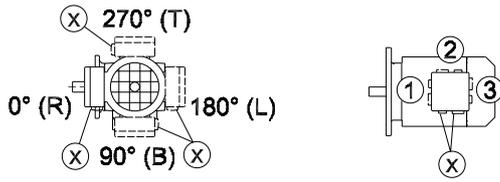


Mounting Positions

Mounting positions for helical-worm gearmotors

SF/SAF/SHF/SAZ/SHZ47-97



05 028 200

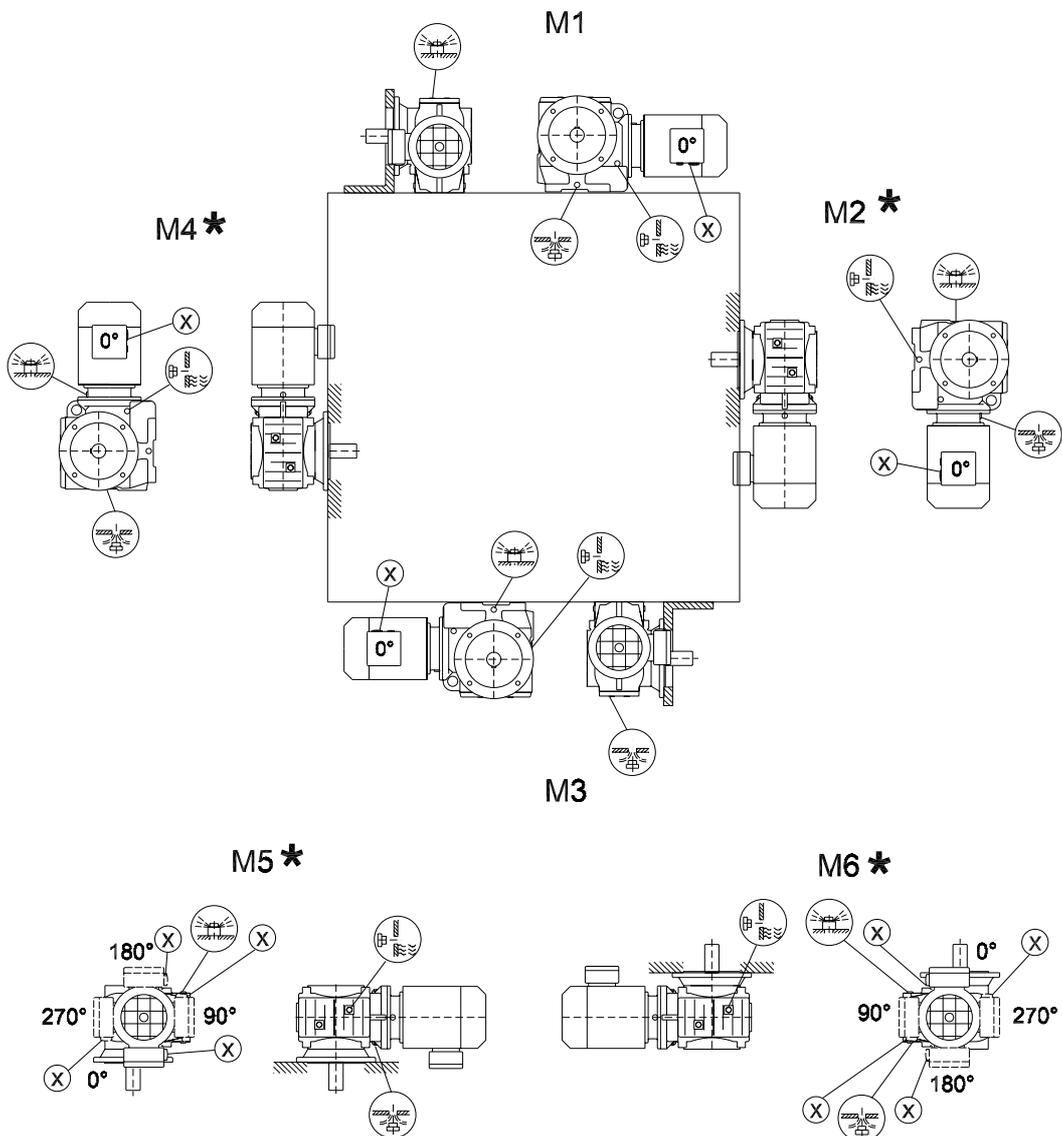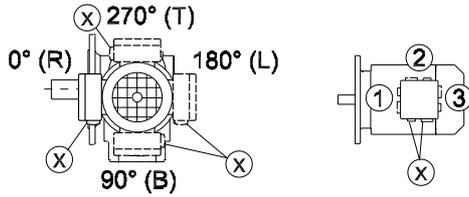

* → page 51

SA/SH/ST37

28 020 200

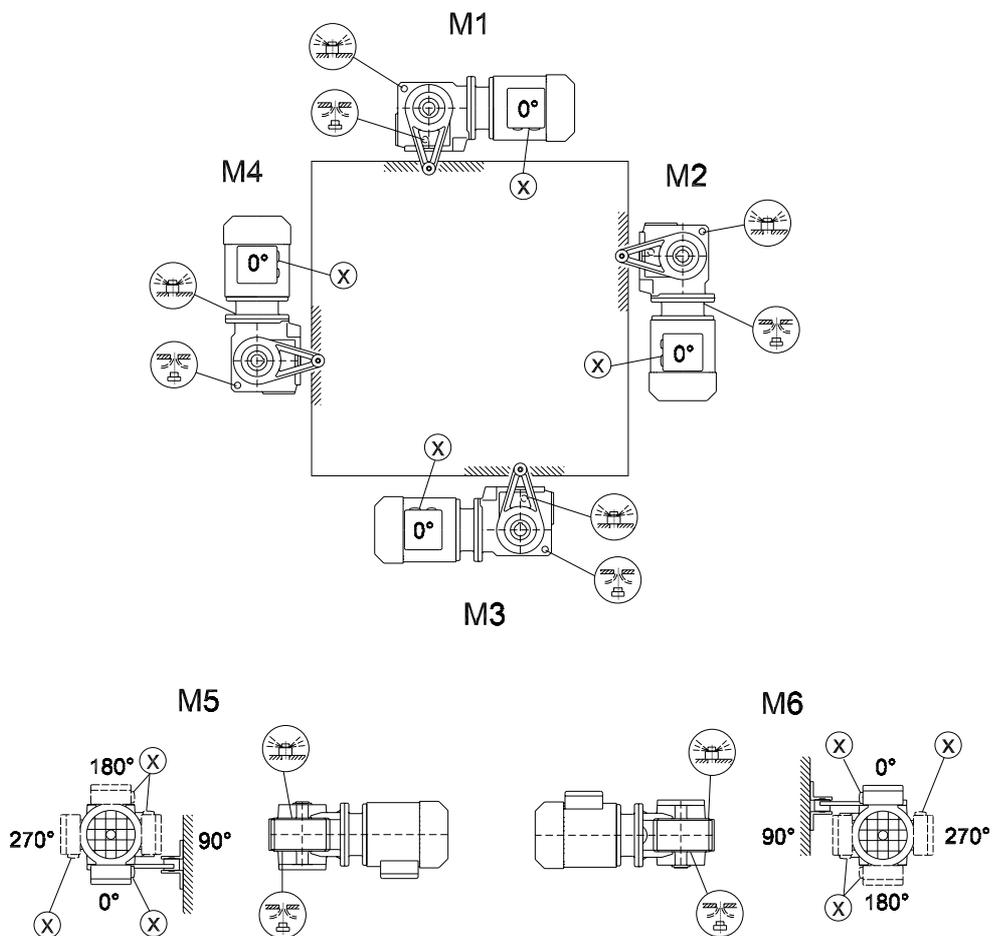
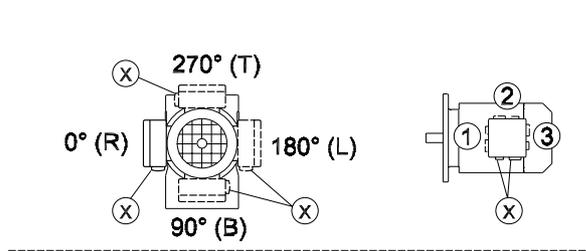


Mounting Positions

Mounting positions for helical-worm gearmotors

SA/SH/ST47-97

28 021 200


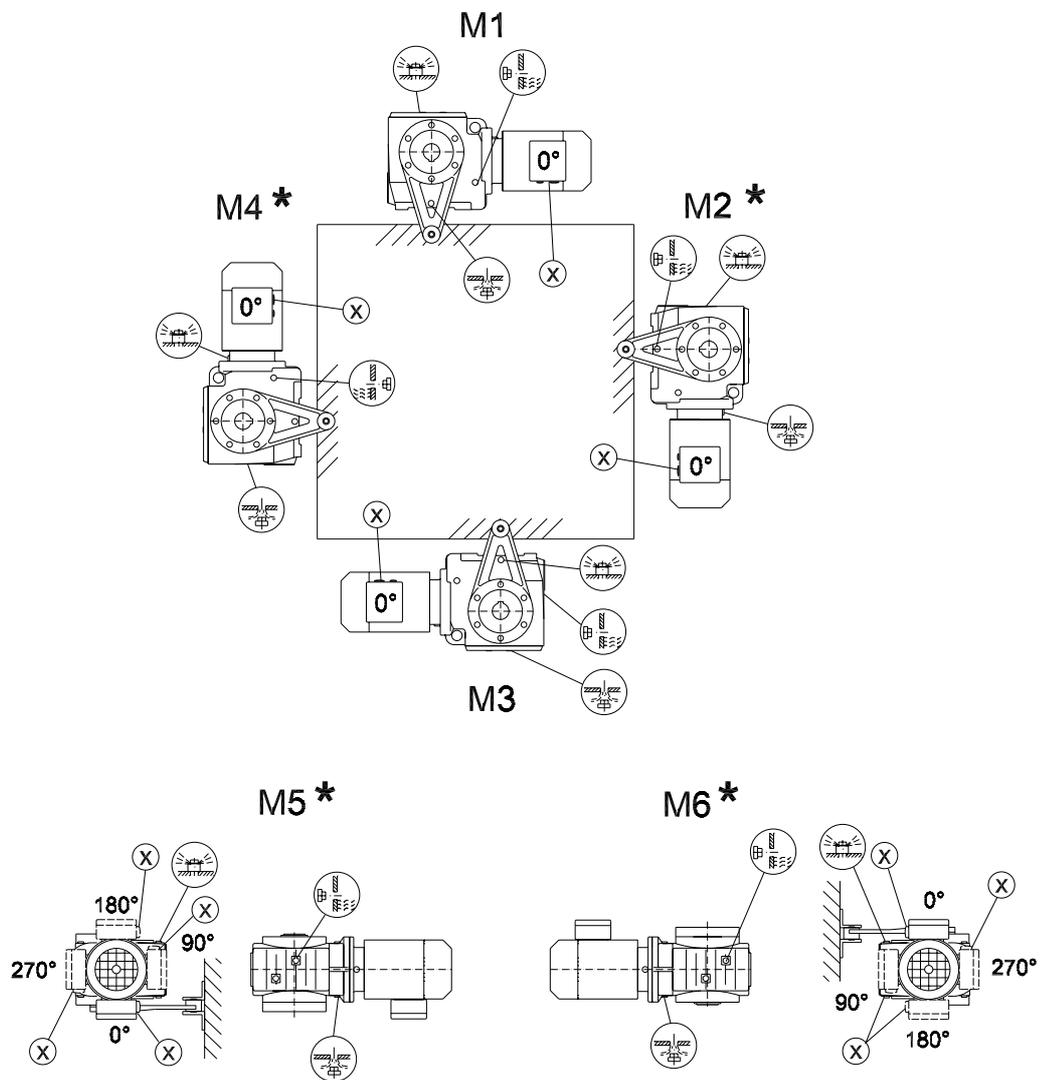
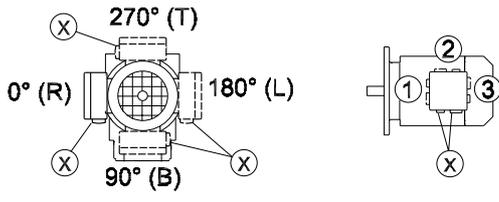


* → page 51

8.8 Mounting positions for SPIROPLAN® W gearmotors

W10-30

20 001 002

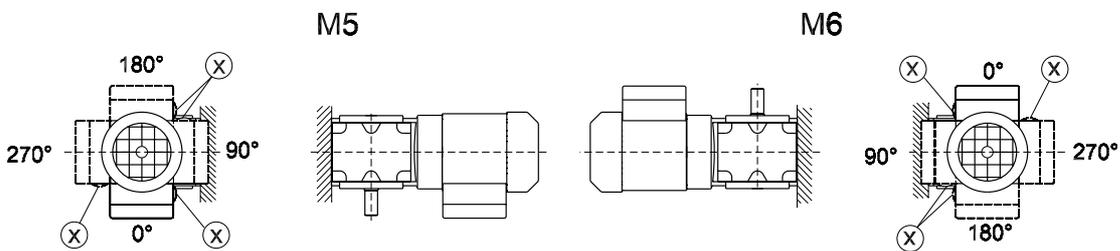
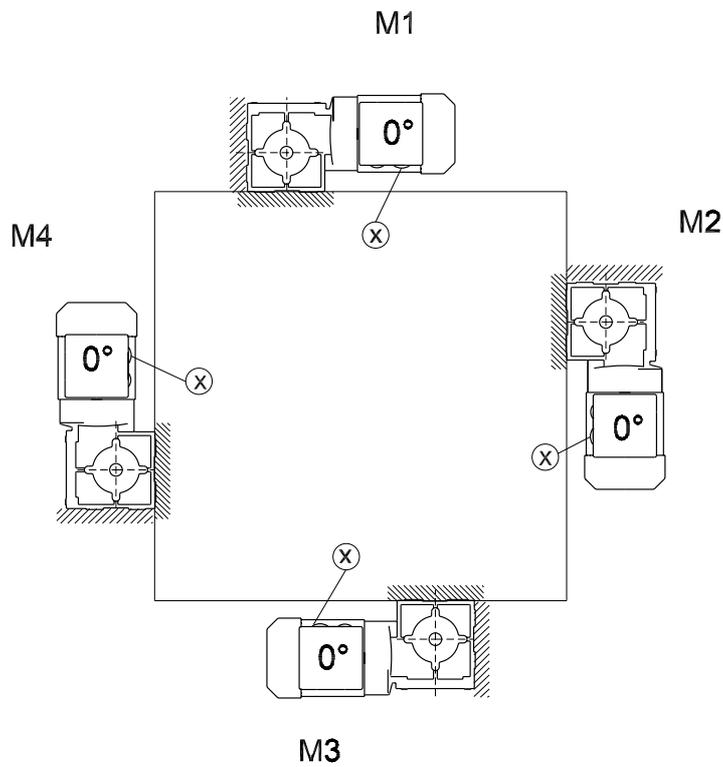
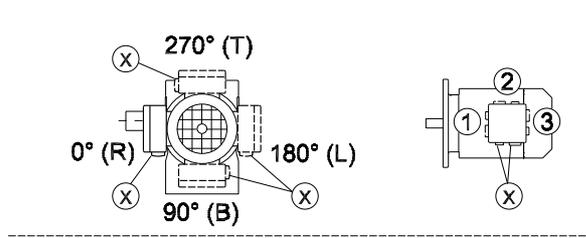


Mounting Positions

Mounting positions for SPIROPLAN® W gearmotors




WF/WAF10-30

20 002 002

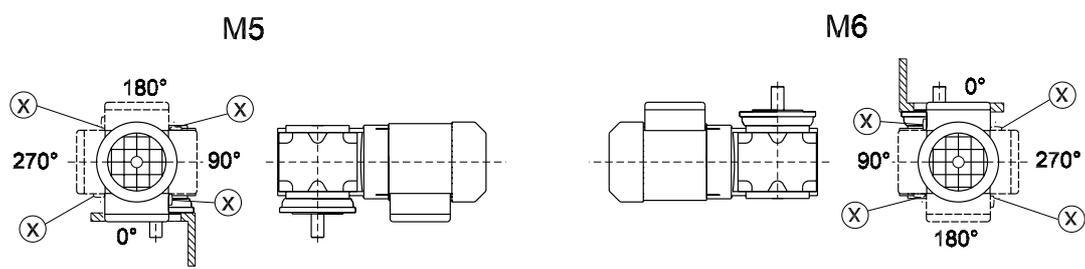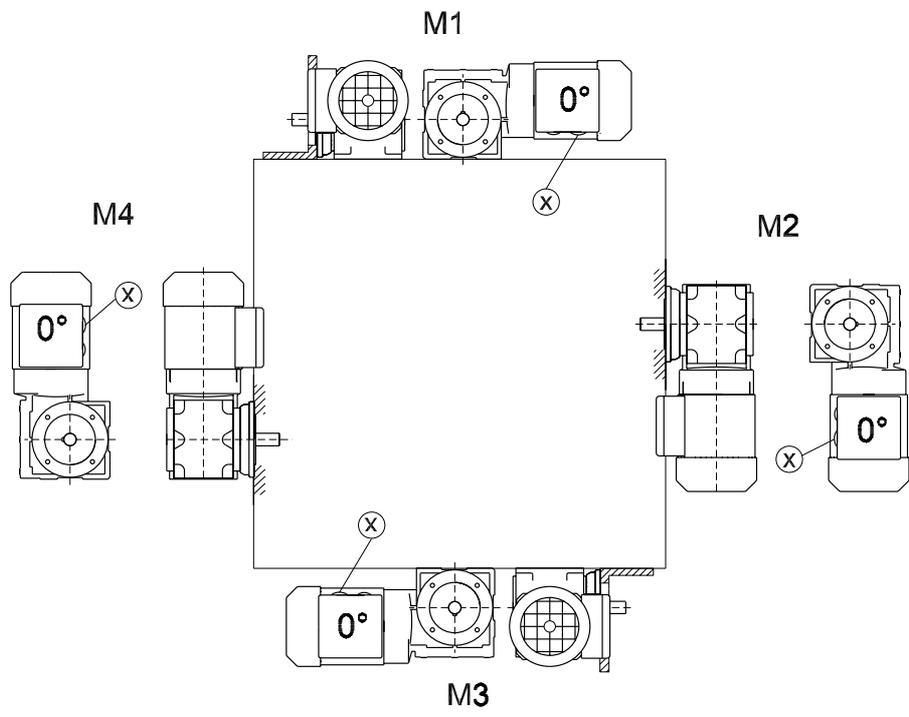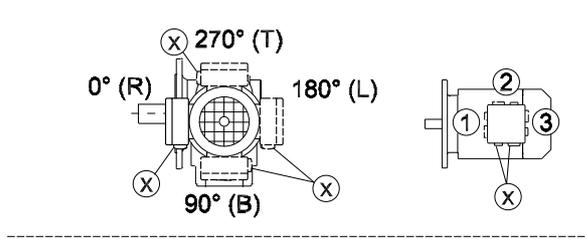

WA10-30

20 003 002

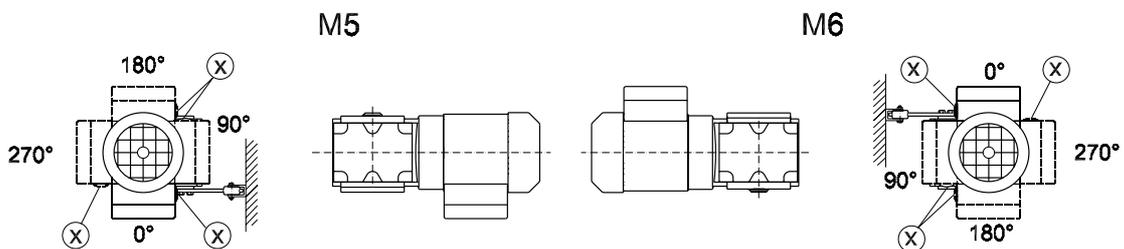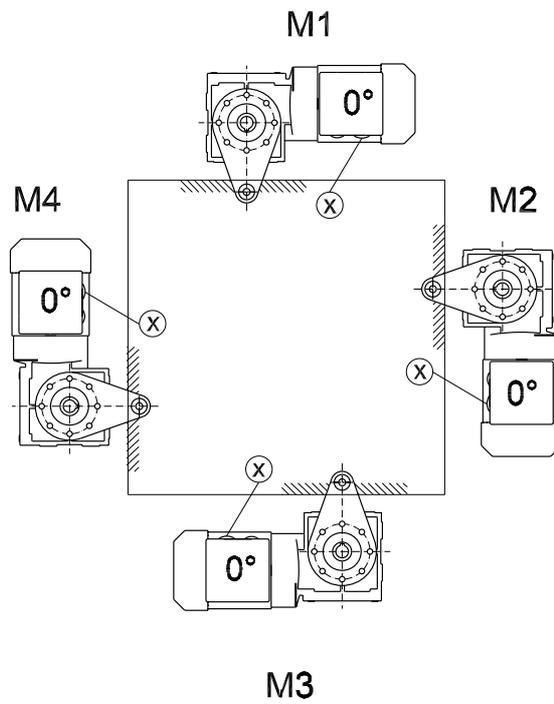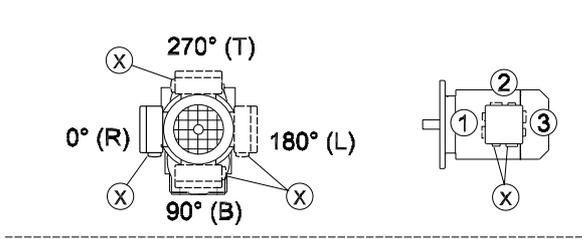



9 Lubricants

General information

Unless a special arrangement is made, SEW-EURODRIVE supplies the drives with a lubricant fill adapted for the specific gear unit and mounting position. The decisive factor is the mounting position (M1 ... M6, → Sec. "Mounting Positions and Important Order Information") specified when ordering the drive. You must adapt the lubricant fill to any subsequent changes made to the mounting position (→ Lubricant fill quantities).

9.1 Lubricant table

The lubricant table on the following page shows the permitted lubricants for SEW-EURODRIVE gear units. Please note the following key to the lubricant table.

Key to the lubricant table

Abbreviations used, meaning of shading and notes:

| | |
|---|--|
| CLP | = Mineral oil |
| CLP PG | = Polyglycol (W gear units, conforms to USDA-H1) |
| CLP HC | = Synthetic hydrocarbons |
| E | = Ester oil (water pollution danger category WGK 1) |
| HCE | = Synthetic hydrocarbons + ester oil (USDA-H1 certification) |
| HLP | = Hydraulic oil |
|  | = Synthetic lubricant (= synthetic anti-friction bearing grease) |
|  | = Mineral lubricant (= mineral-based anti-friction bearing grease) |
| 1) | Helical-worm gear units with PG oil: Please contact SEW |
| 2) | Special lubricant for Spiroplan® gear units only |
| 3) | Recommendation: Select SEW $f_B \geq 1.2$ |
| 4) | Pay attention to critical starting behavior at low temperatures! |
| 5) | Low-viscosity grease |
| 6) | Ambient temperature |
|  | Lubricant for the food industry (food grade oil) |
|  | Biodegradable oil (lubricant for use in agriculture, forestry and water resources) |



Anti-friction bearing greases

The anti-friction bearings in gear units and motors are given a factory-fill with the greases listed below. SEW-EURODRIVE recommends regreasing anti-friction bearings with a grease fill at the same time as changing the oil.

| | Ambient temperature | Manufacturer | Type |
|---|---------------------|--------------|----------------------|
| Anti-friction bearing in gear unit | -20 °C ... +60 °C | Mobil | Mobilux EP 2 |
| | -40 °C ... +80 °C | Mobil | Mobiltemp SHC 100 |
| Anti-friction bearing in motor | -20 °C ... +80 °C | Esso | Unirex EQ3 |
| | -20 °C ... +60 °C | Shell | Alvania RL3 |
| | +80 °C ... +100 °C | Klüber | Barrierta L55/2 |
| | -45 °C ... -25 °C | Shell | Aero Shell Grease 16 |
| Special greases for anti-friction bearings in gear units: | | | |
|  | -30 °C ... +40 °C | Aral | Eural Grease EP 2 |
|  | -20 °C ... +40 °C | Aral | Aralube BAB EP2 |



The following grease quantities are required:

- For fast-running bearings (motor and gear unit input end): Fill the cavities between the rolling elements one third full with grease.
- For slow-running bearings (in gear units and at gear unit output end): Fill the cavities between the rolling elements two thirds full with grease.



Lubricants
Lubricant table

Lubricant table

01 805 892

| | | | ISO, NLGI | Mobil® | | | | | | | | |
|---|----------|---------------|---------------------|------------------------|----------------------------|---------------------------|---------------------|----------------------|-----------------|---------------------|--------------------------|------------------------|
| R... | Standard | CLP(CC) | VG 220 | Mobilgear 630 | Shell Omala 220 | Klöberoil GEM 1-220 | Aral Degol BG 220 | BP Energol GR-XP 220 | Tribol 1100/220 | Meropa 220 | Optigear BM 220 | Renolin CLP 220 |
| | +40 | | | | | | | | | | | |
| | +80 | CLP PG | VG 220 | Mobil Glygoyle 30 | Shell Tivela S 220 | Klöbersynth GH 6-220 | Aral Degol GS 220 | BP Energol SG-XP 220 | Tribol 800/220 | Synlube CLP 220 | Optiflex A 220 | |
| | +80 | CLP HC | VG 220 | Mobil SHC 630 | Shell Omala HD 220 | Klöbersynth EG 4-220 | Aral Degol PAS 220 | | Tribol 1510/220 | Pinnacle EP 220 | Optigear Synthetic A 220 | Renolin Unisyn CLP 220 |
| K...(HK...) | | | VG 150 | Mobil SHC 629 | Shell Omala HD 150 | Klöbersynth EG 4-150 | | | | Pinnacle EP 150 | | |
| | +25 | CLP (CC) | VG 150 | Mobilgear 627 | Shell Omala 100 | Klöberoil GEM 1-150 | Aral Degol BG 100 | BP Energol GR-XP 100 | Tribol 1100/100 | Meropa 150 | Optigear BM 100 | Renolin CLP 150 |
| | +10 | HLP (HM) | VG 68-46 | Mobil D.T.E. 13M | Shell Tellus T 32 | Klöberoil GEM 1-68 | Aral Degol BG 46 | | Tribol 1100/68 | Rando EP Ashless 46 | Optigear 32 | Renolin B 46 HVI |
| | +10 | CLP HC | VG 32 | Mobil SHC 624 | | Klöber-Summit HySyn FG-32 | | | | Cetus PAO 46 | | |
| F... | | HLP (HM) | VG 22 | Mobil D.T.E. 11M | Shell Tellus T 15 | Isosflex MT 30 ROT | | BP Energol HLP-HM 15 | | Rando HDZ 15 | | |
| | -20 | | VG 15 | | | | | | | | | |
| | -20 | CLP (CC) | VG 680 | Mobilgear 636 | Shell Omala 680 | Klöberoil GEM 1-680 | Aral Degol BG 680 | BP Energol GR-XP 680 | Tribol 1100/680 | Meropa 680 | Optigear BM 680 | Renolin CLP 680 |
| | +40 | CLP PG | VG 680 1) | | Shell Tivela S 680 | Klöbersynth GH 6-680 | | BP Energol SG-XP 680 | Tribol 800/680 | Synlube CLP 680 | | |
| S...(HS...) | +80 | CLP HC | VG 460 | Mobil SHC 634 | Shell Omala HD 460 | Klöbersynth EG 4-460 | | | | Pinnacle EP 460 | | |
| | +10 | | VG 150 | Mobil SHC 629 | Shell Omala HD 150 | Klöbersynth EG 4-150 | | | | Pinnacle EP 150 | | |
| | +10 | CLP (CC) | VG 150 | Mobilgear 627 | Shell Omala 100 | Klöberoil GEM 1-150 | Aral Degol BG 100 | BP Energol GR-XP 100 | Tribol 1100/100 | Meropa 100 | Optigear BM 100 | Renolin CLP 150 |
| | +20 | CLP PG | VG 220 1) | Mobil Glygoyle 30 | Shell Tivela S 220 | Klöbersynth GH 6-220 | | | Tribol 800/220 | Synlube CLP 220 | Optiflex A 220 | |
| R..., K...(HK...), F..., S...(HS...) | 0 | CLP HC | VG 32 | Mobil SHC 624 | | Klöber-Summit HySyn FG-32 | | | | Cetus PAO 46 | | |
| | +40 | HCE | VG 460 | | Shell Cassida Fluid GL 460 | Klöberoil 4UH1-460 N | Aral Eural Gear 460 | | | | Optilieb GT 460 | |
| | +40 | E | VG 460 | | | Kläberbio CA2-460 | Aral Degol BAB 460 | | | | Optisynth BS 460 | |
| | +40 | SEW PG | VG 460 2) | | | Klöber SEW HT-460-5 | | | | | | |
| W...(HW...) | +10 | API GL5 | SAE 75W90 (-VG 100) | Mobilube SHC 75 W90-LS | | | | | | | | |
| | +40 | CLP PG | VG 460 3) | | | Klöbersynth UH1 6-460 | | | | | | |
| | +40 | | 00 | Glygoyle Grease 00 | Shell Tivela GL 00 | Klöbersynth GE 46-1200 | | | | | | |
| | +60 | DIN 51 818 5) | 000 - 0 | Mobilux EP 004 | Shell Alvania GL 00 | | Aralub MFL 00 | BP Energol LS-EP 00 | | | | Longtime PD 00 |
| R32 R302 | Standard | | | | | | | | | | | |
| | +40 | | | | | | | | | | | |
| | -15 | | | | | | | | | | | |



9.2 Lubricant fill quantities

The specified fill quantities are **recommended values**. The precise values vary depending on the number of stages and gear ratio. When filling, it is essential to check the **oil level plug since it indicates the precise oil capacity**.

The following tables show guide values for lubricant fill quantities in relation to the mounting position M1 ... M6.

Helical (R) gear units

| Gear unit type R..., R..F | Fill quantity in liters | | | | | |
|-------------------------------|-------------------------|------------------|------|------|------|------|
| | M1 ¹⁾ | M2 ¹⁾ | M3 | M4 | M5 | M6 |
| R07/R07F | 0.12 | 0.20 | 0.20 | 0.20 | 0.20 | 0.20 |
| R17/R17F | 0.25 | 0.55 | 0.35 | 0.55 | 0.35 | 0.35 |
| R27/R27F | 0.25/0.40 | 0.70 | 0.50 | 0.70 | 0.50 | 0.50 |
| R37/R37F | 0.30/0.95 | 0.85 | 0.95 | 1.05 | 0.75 | 0.95 |
| R47/R47F | 0.70/1.50 | 1.60 | 1.50 | 1.65 | 1.50 | 1.50 |
| R57/R57F | 0.80/1.70 | 1.90 | 1.70 | 2.10 | 1.70 | 1.70 |
| R67/R67F | 1.10/2.30 | 2.60/3.50 | 2.80 | 3.20 | 1.80 | 2.00 |
| R77/R77F | 1.20/3.00 | 3.80/4.10 | 3.60 | 4.10 | 2.50 | 3.40 |
| R87/R87F | 2.30/6.0 | 6.7/8.2 | 7.2 | 7.7 | 6.3 | 6.5 |
| R97 | 4.60/9.8 | 11.7/14.0 | 11.7 | 13.4 | 11.3 | 11.7 |
| R107 | 6.0/13.7 | 16.3 | 16.9 | 19.2 | 13.2 | 15.9 |
| R137 | 10.0/25.0 | 28.0 | 29.5 | 31.5 | 25.0 | 25.0 |
| R147 | 15.4/40.0 | 46.5 | 48.0 | 52.0 | 39.5 | 41.0 |
| R167 | 27.0/70.0 | 82.0 | 78.0 | 88.0 | 66.0 | 69.0 |
| Gear unit type RF.. / RM.. | Fill quantity in liters | | | | | |
| | M1 ¹⁾ | M2 ¹⁾ | M3 | M4 | M5 | M6 |
| RF07 | 0.12 | 0.20 | 0.20 | 0.20 | 0.20 | 0.20 |
| RF17 | 0.25 | 0.55 | 0.35 | 0.55 | 0.35 | 0.35 |
| RF27 | 0.25/0.40 | 0.70 | 0.50 | 0.70 | 0.50 | 0.50 |
| RF37 | 0.35/0.95 | 0.90 | 0.95 | 1.05 | 0.75 | 0.95 |
| RF47 | 0.65/1.50 | 1.60 | 1.50 | 1.65 | 1.50 | 1.50 |
| RF/RM57 | 0.80/1.70 | 1.80 | 1.70 | 2.00 | 1.70 | 1.70 |
| RF/RM67 | 1.20/2.50 | 2.70/3.60 | 2.70 | 2.60 | 1.90 | 2.10 |
| RF/RM77 | 1.20/2.60 | 3.80/4.10 | 3.30 | 4.10 | 2.40 | 3.00 |
| RF/RM87 | 2.40/6.0 | 6.8/7.9 | 7.1 | 7.7 | 6.3 | 6.4 |
| RF/RM97 | 5.1/10.2 | 11.9/14.0 | 11.2 | 14.0 | 11.2 | 11.8 |
| RF/RM107 | 6.3/14.9 | 15.9 | 17.0 | 19.2 | 13.1 | 15.9 |
| RF/RM137 | 9.5/25.0 | 27.0 | 29.0 | 32.5 | 25.0 | 25.0 |
| RF/RM147 | 16.4/42.0 | 47.0 | 48.0 | 52.0 | 42.0 | 42.0 |
| RF/RM167 | 26.0/70.0 | 82.0 | 78.0 | 88.0 | 65.0 | 71.0 |

1) The output end gear unit of multi-stage gear units must be filled with the larger oil volume.



Lubricants

Lubricant fill quantities

Helical (RX) gear units

| Gear unit type RX.. | Fill quantity in liters | | | | | |
|-------------------------|-------------------------|------|------|------|------|------|
| | M1 | M2 | M3 | M4 | M5 | M6 |
| RX57 | 0.60 | 0.80 | 1.30 | 1.30 | 0.90 | 0.90 |
| RX67 | 0.80 | 0.80 | 1.70 | 1.90 | 1.10 | 1.10 |
| RX77 | 1.10 | 1.50 | 2.60 | 2.70 | 1.60 | 1.60 |
| RX87 | 1.70 | 2.50 | 4.80 | 4.80 | 2.90 | 2.90 |
| RX97 | 2.10 | 3.40 | 7.4 | 7.0 | 4.80 | 4.80 |
| RX107 | 3.90 | 5.6 | 11.6 | 11.9 | 7.7 | 7.7 |
| Gear unit type RXF.. | Fill quantity in liters | | | | | |
| | M1 | M2 | M3 | M4 | M5 | M6 |
| RXF57 | 0.50 | 0.80 | 1.10 | 1.10 | 0.70 | 0.70 |
| RXF67 | 0.70 | 0.80 | 1.50 | 1.40 | 1.00 | 1.00 |
| RXF77 | 0.90 | 1.30 | 2.40 | 2.00 | 1.60 | 1.60 |
| RXF87 | 1.60 | 1.95 | 4.90 | 3.95 | 2.90 | 2.90 |
| RXF97 | 2.10 | 3.70 | 7.1 | 6.3 | 4.80 | 4.80 |
| RXF107 | 3.10 | 5.7 | 11.2 | 9.3 | 7.2 | 7.2 |

Parallel shaft helical (F) gear units

F.., FA..B, FH..B, FV..B:

| Gear unit type | Fill quantity in liters | | | | | |
|----------------|-------------------------|-------|------|-------|------|------|
| | M1 | M2 | M3 | M4 | M5 | M6 |
| F..27 | 0.60 | 0.80 | 0.65 | 0.70 | 0.60 | 0.60 |
| F..37 | 0.95 | 1.25 | 0.70 | 1.25 | 1.00 | 1.10 |
| F..47 | 1.50 | 1.80 | 1.10 | 1.90 | 1.50 | 1.70 |
| F..57 | 2.60 | 3.50 | 2.10 | 3.50 | 2.80 | 2.90 |
| F..67 | 2.70 | 3.80 | 1.90 | 3.80 | 2.90 | 3.20 |
| F..77 | 5.9 | 7.3 | 4.30 | 8.0 | 6.0 | 6.3 |
| F..87 | 10.8 | 13.0 | 7.7 | 13.8 | 10.8 | 11.0 |
| F..97 | 18.5 | 22.5 | 12.6 | 25.2 | 18.5 | 20.0 |
| F..107 | 24.5 | 32.0 | 19.5 | 37.5 | 27.0 | 27.0 |
| F..127 | 40.5 | 54.5 | 34.0 | 61.0 | 46.3 | 47.0 |
| F..157 | 69.0 | 104.0 | 63.0 | 105.0 | 86.0 | 78.0 |

FF..:

| Gear unit type | Fill quantity in liters | | | | | |
|----------------|-------------------------|-------|------|-------|------|------|
| | M1 | M2 | M3 | M4 | M5 | M6 |
| FF27 | 0.60 | 0.80 | 0.65 | 0.70 | 0.60 | 0.60 |
| FF37 | 1.00 | 1.25 | 0.70 | 1.30 | 1.00 | 1.10 |
| FF47 | 1.60 | 1.85 | 1.10 | 1.90 | 1.50 | 1.70 |
| FF57 | 2.80 | 3.50 | 2.10 | 3.70 | 2.90 | 3.00 |
| FF67 | 2.70 | 3.80 | 1.90 | 3.80 | 2.90 | 3.20 |
| FF77 | 5.9 | 7.3 | 4.30 | 8.1 | 6.0 | 6.3 |
| FF87 | 10.8 | 13.2 | 7.8 | 14.1 | 11.0 | 11.2 |
| FF97 | 19.0 | 22.5 | 12.6 | 25.6 | 18.9 | 20.5 |
| FF107 | 25.5 | 32.0 | 19.5 | 38.5 | 27.5 | 28.0 |
| FF127 | 41.5 | 55.5 | 34.0 | 63.0 | 46.3 | 49.0 |
| FF157 | 72.0 | 105.0 | 64.0 | 106.0 | 87.0 | 79.0 |



FA.., FH.., FV.., FAF.., FHF.., FVF.., FAZ.., FHZ.., FVZ..:

| Gear unit type | Fill quantity in liters | | | | | |
|----------------|-------------------------|-------|------|-------|------|------|
| | M1 | M2 | M3 | M4 | M5 | M6 |
| F..27 | 0.60 | 0.80 | 0.65 | 0.70 | 0.60 | 0.60 |
| F..37 | 0.95 | 1.25 | 0.70 | 1.25 | 1.00 | 1.10 |
| F..47 | 1.50 | 1.80 | 1.10 | 1.90 | 1.50 | 1.70 |
| F..57 | 2.70 | 3.50 | 2.10 | 3.40 | 2.90 | 3.00 |
| F..67 | 2.70 | 3.80 | 1.90 | 3.80 | 2.90 | 3.20 |
| F..77 | 5.9 | 7.3 | 4.30 | 8.0 | 6.0 | 6.3 |
| F..87 | 10.8 | 13.0 | 7.7 | 13.8 | 10.8 | 11.0 |
| F..97 | 18.5 | 22.5 | 12.6 | 25.2 | 18.5 | 20.0 |
| F..107 | 24.5 | 32.0 | 19.5 | 37.5 | 27.0 | 27.0 |
| F..127 | 39.0 | 54.5 | 34.0 | 61.0 | 45.0 | 46.5 |
| F..157 | 68.0 | 103.0 | 62.0 | 104.0 | 85.0 | 77.0 |

**Helical-bevel (K)
gear units**

K.., KA..B, KH..B, KV..B:

| Gear unit type | Fill quantity in liters | | | | | |
|----------------|-------------------------|-------|-------|-------|-------|-------|
| | M1 | M2 | M3 | M4 | M5 | M6 |
| K..37 | 0.50 | 1.00 | 1.00 | 1.25 | 0.95 | 0.95 |
| K..47 | 0.80 | 1.30 | 1.50 | 2.00 | 1.60 | 1.60 |
| K..57 | 1.20 | 2.30 | 2.50 | 2.80 | 2.60 | 2.40 |
| K..67 | 1.10 | 2.40 | 2.60 | 3.45 | 2.60 | 2.60 |
| K..77 | 2.20 | 4.10 | 4.40 | 5.8 | 4.20 | 4.40 |
| K..87 | 3.70 | 8.0 | 8.7 | 10.9 | 8.0 | 8.0 |
| K..97 | 7.0 | 14.0 | 15.7 | 20.0 | 15.7 | 15.5 |
| K..107 | 10.0 | 21.0 | 25.5 | 33.5 | 24.0 | 24.0 |
| K..127 | 21.0 | 41.5 | 44.0 | 54.0 | 40.0 | 41.0 |
| K..157 | 31.0 | 62.0 | 65.0 | 90.0 | 58.0 | 62.0 |
| K..167 | 33.0 | 95.0 | 105.0 | 123.0 | 85.0 | 84.0 |
| K..187 | 53.0 | 152.0 | 167.0 | 200 | 143.0 | 143.0 |

KF..:

| Gear unit type | Fill quantity in liters | | | | | |
|----------------|-------------------------|------|------|------|------|------|
| | M1 | M2 | M3 | M4 | M5 | M6 |
| KF37 | 0.50 | 1.10 | 1.10 | 1.50 | 1.00 | 1.00 |
| KF47 | 0.80 | 1.30 | 1.70 | 2.20 | 1.60 | 1.60 |
| KF57 | 1.30 | 2.30 | 2.70 | 3.15 | 2.90 | 2.70 |
| KF67 | 1.10 | 2.40 | 2.80 | 3.70 | 2.70 | 2.70 |
| KF77 | 2.10 | 4.10 | 4.40 | 5.9 | 4.50 | 4.50 |
| KF87 | 3.70 | 8.2 | 9.0 | 11.9 | 8.4 | 8.4 |
| KF97 | 7.0 | 14.7 | 17.3 | 21.5 | 15.7 | 16.5 |
| KF107 | 10.0 | 21.8 | 25.8 | 35.1 | 25.2 | 25.2 |
| KF127 | 21.0 | 41.5 | 46.0 | 55.0 | 41.0 | 41.0 |
| KF157 | 31.0 | 66.0 | 69.0 | 92.0 | 62.0 | 62.0 |



Lubricants

Lubricant fill quantities

KA.., KH.., KV.., KAF.., KHf.., KVf.., KAZ.., KHZ.., KVZ..:

| Gear unit type | Fill quantity in liters | | | | | |
|----------------|-------------------------|-------|-------|-------|-------|-------|
| | M1 | M2 | M3 | M4 | M5 | M6 |
| K..37 | 0.50 | 1.00 | 1.00 | 1.40 | 1.00 | 1.00 |
| K..47 | 0.80 | 1.30 | 1.60 | 2.15 | 1.60 | 1.60 |
| K..57 | 1.30 | 2.30 | 2.70 | 3.15 | 2.90 | 2.70 |
| K..67 | 1.10 | 2.40 | 2.70 | 3.70 | 2.60 | 2.60 |
| K..77 | 2.10 | 4.10 | 4.60 | 5.9 | 4.40 | 4.40 |
| K..87 | 3.70 | 8.2 | 8.8 | 11.1 | 8.0 | 8.0 |
| K..97 | 7.0 | 14.7 | 15.7 | 20.0 | 15.7 | 15.7 |
| K..107 | 10.0 | 20.5 | 24.0 | 32.4 | 24.0 | 24.0 |
| K..127 | 21.0 | 41.5 | 43.0 | 52.0 | 40.0 | 40.0 |
| K..157 | 31.0 | 66.0 | 67.0 | 87.0 | 62.0 | 62.0 |
| KH167 | 33.0 | 95.0 | 105.0 | 123.0 | 85.0 | 84.0 |
| KH187 | 53.0 | 152.0 | 167.0 | 200 | 143.0 | 143.0 |

Spiroplan® (W) gear units

The fill quantity of Spiroplan® gear units does not vary, irrespective of their mounting position:

| Gear unit type | Fill quantity in liters, regardless of mounting position |
|----------------|--|
| W..10 | 0.16 |
| W..20 | 0.26 |
| W..30 | 0.50 |

Helical-worm (S) gear units

S..:

| Gear unit type | Fill quantity in liters | | | | | |
|----------------|-------------------------|------|------------------|------|------|------|
| | M1 | M2 | M3 ¹⁾ | M4 | M5 | M6 |
| S37 | 0.25 | 0.40 | 0.50 | 0.55 | 0.40 | 0.40 |
| S47 | 0.35 | 0.80 | 0.70/0.90 | 1.00 | 0.80 | 0.80 |
| S57 | .50 | 1.20 | 1.00/1.20 | 1.45 | 1.30 | 1.30 |
| S67 | 1.00 | 2.00 | 2.20/3.10 | 3.10 | 2.60 | 2.60 |
| S77 | 1.90 | 4.20 | 3.70/5.4 | 5.9 | 4.40 | 4.40 |
| S87 | 3.30 | 8.1 | 6.9/10.4 | 11.3 | 8.4 | 8.4 |
| S97 | 6.8 | 15.0 | 13.4/18.0 | 21.8 | 17.0 | 17.0 |

1) The larger gear unit of multi-stage gear units must be filled with the larger oil volume.

SF..:

| Gear unit type | Fill quantity in liters | | | | | |
|----------------|-------------------------|------|------------------|------|------|------|
| | M1 | M2 | M3 ¹⁾ | M4 | M5 | M6 |
| SF37 | 0.25 | 0.40 | 0.50 | 0.55 | 0.40 | 0.40 |
| SF47 | 0.40 | 0.90 | 0.90/1.05 | 1.05 | 1.00 | 1.00 |
| SF57 | 0.50 | 1.20 | 1.00/1.50 | 1.55 | 1.40 | 1.40 |
| SF67 | 1.00 | 2.20 | 2.30/3.00 | 3.20 | 2.70 | 2.70 |
| SF77 | 1.90 | 4.10 | 3.90/5.8 | 6.5 | 4.90 | 4.90 |
| SF87 | 3.80 | 8.0 | 7.1/10.1 | 12.0 | 9.1 | 9.1 |
| SF97 | 7.4 | 15.0 | 13.8/18.8 | 22.6 | 18.0 | 18.0 |

1) The larger gear unit of multi-stage gear units must be filled with the larger oil volume.



SA..., SH..., SAF..., SHF..., SAZ..., SHZ...:

| Gear unit type | Fill quantity in liters | | | | | |
|----------------|-------------------------|------|------------------|------|------|------|
| | M1 | M2 | M3 ¹⁾ | M4 | M5 | M6 |
| S..37 | 0.25 | 0.40 | 0.50 | 0.50 | 0.40 | 0.40 |
| S..47 | 0.40 | 0.80 | 0.70/0.90 | 1.00 | 0.80 | 0.80 |
| S..57 | 0.50 | 1.10 | 1.00/1.50 | 1.50 | 1.20 | 1.20 |
| S..67 | 1.00 | 2.00 | 1.80/2.60 | 2.90 | 2.50 | 2.50 |
| S..77 | 1.80 | 3.90 | 3.60/5.0 | 5.8 | 4.50 | 4.50 |
| S..87 | 3.80 | 7.4 | 6.0/8.7 | 10.8 | 8.0 | 8.0 |
| S..97 | 7.0 | 14.0 | 11.4/16.0 | 20.5 | 15.7 | 15.7 |

1) The larger gear unit of multi-stage gear units must be filled with the larger oil volume.



10 Appendix

10.1 Index of changes

The following additions and changes have been made compared to the previous edition of the "Explosion-Proof Gear Units R..7, F..7, K..7, S..7, SPIROPLAN® W" (publication number: 1055520x, edition 11/2002) operating instructions:

General additions and corrections.

Mechanical installation

- Installing the gear unit: Data on flatness error
- Installing torque arms for mounted gear units: Data on retaining bolts
- Mounted gear units with shrink disks: Information on assembly / removal has been added
- Mounted gear units with TorqLOC®
- AM adapter coupling: Point A

Inspection and maintenance

- Lubricant change intervals

11 Index

A

AD inspection / maintenance 47
 AD, mounting on the input shaft assembly 40
 Adapter coupling 36
 Adjusting the mounting position 17
 AM with backstop 38
 Anti-friction bearing greases 75
 AQ, installing the coupling adapter 38
 AQA, maintenance / inspection 47

B

Backstop RS 38
 Breather valve 18

C

Centering shoulder AD../ZR 41
 Change the oil seal 47
 Check oil 46
 Check oil level 46
 Churning losses 51
 Couplings, installation 20
 Cover with backstop AD../RS 43
 Cover with motor mounting platform AD../P 40
 Customer service 48

D

Damp locations 17
 Designated use 6

E

Extended storage 7

F

F gear units, lubricant fill quantities 78
 Flatness error 16

G

Gear unit inspection 46
 Gear unit maintenance 46
 Gear unit structure 9
 Gear unit venting 18

H

Helical gear units, lubricant fill quantities 77, 78
 helical gear units, structure 9
 Helical-bevel gear units, lubricant fill quantities 79
 Helical-bevel gear units, structure 11
 Helical-worm gear unit, structure 12
 Helical-worm gear units, lubricant fill quantities 80

I

IEC adapter 36

Input and output elements, installation 19
 Inspection intervals 45
 Inspection of AD adapter 47
 Inspection of AM / AQA adapters 47
 Installation tolerances 15
 Installing couplings 20
 Installing input and output elements 19
 Installing the AM coupling adapter 36
 Installing the AQ coupling adapter 38
 Installing the gear unit 16

K

K gear units, lubricant fill quantities 79
 Keyway 23

L

Lubricant change intervals 45
 Lubricant fill quantities 77
 Lubricant fill quantities for helical gear units 77, 78
 Lubricant fill quantities for helical-bevel gear units 79
 Lubricant fill quantities for helical-worm gear units 80
 Lubricant fill quantities for parallel shaft helical gear units 78
 Lubricant fill quantities for Spiroplan® gear units 80
 Lubricant table 74, 76
 Lubricants 74

M

Maintenance / inspection 47
 Maintenance intervals 45
 Maintenance of AD adapter 47
 Maintenance of AM / AQA adapters 47
 Malfunctions 48
 AD input shaft assembly 49
 AM / AQA / AL adapters 48
 Gear units 48
 Mechanical installation 15
 Motor mounting platform 40
 Mounted gear units 23, 27, 30
 Mounting on the input shaft assembly AD 40
 Mounting position designation 50
 Mounting positions
 Helical gear units 52, 55
 Helical-bevel gear units 60
 Helical-worm gear units 65
 Parallel shaft helical gear units 57
 Spiroplan® gear units 71
 Mounting torque arms 21

N

Nameplate 14
 NEMA adapter 36

**O**

Oil change 46

Open air 17

P

Painting gear units 18

Parallel shaft helical gear unit, structure 10

Parallel shaft helical gear units, lubricant fill quantities 78

R

R gear units, lubricant fill quantities 77

RS backstop 43

RX gear units, lubricant fill quantities 78

S

S gear units, lubricant fill quantities 80

Safety notes 6

Serial number 14

Shrink disk 27

Solid shaft 19

Spiroplan® gear units, lubricant fill quantities 80

Spiroplan® W gear units, structure 13

Splined hollow shaft 23

Startup 44

*Helical, parallel shaft helical and helical-bevel gear units 44**Helical-worm and Spiroplan® W gear units 44*

Structure

*Helical gear units 9**Helical-bevel gear units 11**Helical-worm gear unit 12**Parallel shaft helical gear unit 10**Spiroplan® gear units 13***T**

TorqLOC® 30

Torque arm for helical-bevel gear units 21

Torque arm for helical-worm gear units 22

Torque arm for Spiroplan® W gear units 22

Torque arms for parallel shaft helical gear units 21

Torque arms, mounting 21

Transportation 7

U

Unit designation 14

W

W gear units, lubricant fill quantities 80

Waste disposal 5



Address List

| Germany | | | |
|--|--|---|---|
| Headquarters Production Sales | Bruchsal | SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 42 D-76646 Bruchsal P.O. Box Postfach 3023 · D-76642 Bruchsal | Tel. +49 7251 75-0 Fax +49 7251 75-1970 http://www.sew-eurodrive.de sew@sew-eurodrive.de |
| Service Competence Center | Central Gear units / Motors | SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 1 D-76676 Graben-Neudorf | Tel. +49 7251 75-1710 Fax +49 7251 75-1711 sc-mitte-gm@sew-eurodrive.de |
| | Central Electronics | SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 42 D-76646 Bruchsal | Tel. +49 7251 75-1780 Fax +49 7251 75-1769 sc-mitte-e@sew-eurodrive.de |
| | North | SEW-EURODRIVE GmbH & Co KG Alte Ricklinger Straße 40-42 D-30823 Garbsen (near Hannover) | Tel. +49 5137 8798-30 Fax +49 5137 8798-55 sc-nord@sew-eurodrive.de |
| | East | SEW-EURODRIVE GmbH & Co KG Dänkritzer Weg 1 D-08393 Meerane (near Zwickau) | Tel. +49 3764 7606-0 Fax +49 3764 7606-30 sc-ost@sew-eurodrive.de |
| | South | SEW-EURODRIVE GmbH & Co KG Domagkstraße 5 D-85551 Kirchheim (near München) | Tel. +49 89 909552-10 Fax +49 89 909552-50 sc-sued@sew-eurodrive.de |
| | West | SEW-EURODRIVE GmbH & Co KG Siemensstraße 1 D-40764 Langenfeld (near Düsseldorf) | Tel. +49 2173 8507-30 Fax +49 2173 8507-55 sc-west@sew-eurodrive.de |
| | Drive Service Hotline / 24 Hour Service | | |
| Additional addresses for service in Germany provided on request! | | | |
| France | | | |
| Production Sales Service | Hagenau | SEW-USOCOME 48-54, route de Soufflenheim B. P. 20185 F-67506 Hagenau Cedex | Tel. +33 3 88 73 67 00 Fax +33 3 88 73 66 00 http://www.usocome.com sew@usocome.com |
| Assembly Sales Service | Bordeaux | SEW-USOCOME Parc d'activités de Magellan 62, avenue de Magellan - B. P. 182 F-33607 Pessac Cedex | Tel. +33 5 57 26 39 00 Fax +33 5 57 26 39 09 |
| | Lyon | SEW-USOCOME Parc d'Affaires Roosevelt Rue Jacques Tati F-69120 Vaulx en Velin | Tel. +33 4 72 15 37 00 Fax +33 4 72 15 37 15 |
| | Paris | SEW-USOCOME Zone industrielle 2, rue Denis Papin F-77390 Vermeuil l'Etang | Tel. +33 1 64 42 40 80 Fax +33 1 64 42 40 88 |
| Additional addresses for service in France provided on request! | | | |
| Algeria | | | |
| Sales | Alger | Réducom 16, rue des Frères Zagnoun Bellevue El-Harrach 16200 Alger | Tel. +213 21 8222-84 Fax +213 21 8222-84 |
| Argentina | | | |
| Assembly Sales Service | Buenos Aires | SEW EURODRIVE ARGENTINA S.A. Centro Industrial Garin, Lote 35 Ruta Panamericana Km 37,5 1619 Garin | Tel. +54 3327 4572-84 Fax +54 3327 4572-21 sewar@sew-eurodrive.com.ar |



Address List

| Australia | | | |
|---|-------------------|--|---|
| Assembly Sales Service | Melbourne | SEW-EURODRIVE PTY. LTD. 27 Beverage Drive Tullamarine, Victoria 3043 | Tel. +61 3 9933-1000 Fax +61 3 9933-1003 http://www.sew-eurodrive.com.au enquires@sew-eurodrive.com.au |
| | Sydney | SEW-EURODRIVE PTY. LTD. 9, Sleigh Place, Wetherill Park New South Wales, 2164 | Tel. +61 2 9725-9900 Fax +61 2 9725-9905 enquires@sew-eurodrive.com.au |
| Austria | | | |
| Assembly Sales Service | Wien | SEW-EURODRIVE Ges.m.b.H. Richard-Strauss-Strasse 24 A-1230 Wien | Tel. +43 1 617 55 00-0 Fax +43 1 617 55 00-30 http://sew-eurodrive.at sew@sew-eurodrive.at |
| Belgium | | | |
| Assembly Sales Service | Brüssel | CARON-VECTOR S.A. Avenue Eiffel 5 B-1300 Wavre | Tel. +32 10 231-311 Fax +32 10 231-336 http://www.caron-vector.be info@caron-vector.be |
| Brazil | | | |
| Production Sales Service | Sao Paulo | SEW-EURODRIVE Brasil Ltda. Avenida Amâncio Gaiolli, 50 Caixa Postal: 201-07111-970 Guarulhos/SP - Cep.: 07251-250 | Tel. +55 11 6489-9133 Fax +55 11 6480-3328 http://www.sew.com.br sew@sew.com.br |
| Additional addresses for service in Brazil provided on request! | | | |
| Bulgaria | | | |
| Sales | Sofia | BEVER-DRIVE GMBH Bogdanovetz Str.1 BG-1606 Sofia | Tel. +359 2 9532565 Fax +359 2 9549345 bever@mbox.infotel.bg |
| Cameroon | | | |
| Sales | Douala | Electro-Services Rue Drouot Akwa B.P. 2024 Douala | Tel. +237 4322-99 Fax +237 4277-03 |
| Canada | | | |
| Assembly Sales Service | Toronto | SEW-EURODRIVE CO. OF CANADA LTD. 210 Walker Drive Bramalea, Ontario L6T3W1 | Tel. +1 905 791-1553 Fax +1 905 791-2999 http://www.sew-eurodrive.ca l.reynolds@sew-eurodrive.ca |
| | Vancouver | SEW-EURODRIVE CO. OF CANADA LTD. 7188 Honeyman Street Delta. B.C. V4G 1 E2 | Tel. +1 604 946-5535 Fax +1 604 946-2513 b.wake@sew-eurodrive.ca |
| | Montreal | SEW-EURODRIVE CO. OF CANADA LTD. 2555 Rue Leger Street LaSalle, Quebec H8N 2V9 | Tel. +1 514 367-1124 Fax +1 514 367-3677 a.peluso@sew-eurodrive.ca |
| Additional addresses for service in Canada provided on request! | | | |
| Chile | | | |
| Assembly Sales Service | Santiago de Chile | SEW-EURODRIVE CHILE LTDA. Las Encinas 1295 Parque Industrial Valle Grande LAMP RCH-Santiago de Chile P.O. Box Casilla 23 Correo Quilicura - Santiago - Chile | Tel. +56 2 75770-00 Fax +56 2 75770-01 sewsales@entelchile.net |
| China | | | |
| Production Assembly Sales Service | Tianjin | SEW-EURODRIVE (Tianjin) Co., Ltd. No. 46, 7th Avenue, TEDA Tianjin 300457 | Tel. +86 22 25322612 Fax +86 22 25322611 victor.zhang@sew-eurodrive.cn http://www.sew.com.cn |



| China | | | |
|---------------------------------------|-------------------|--|--|
| Assembly Sales Service | Suzhou | SEW-EURODRIVE (Suzhou) Co., Ltd. 333, Suhong Middle Road Suzhou Industrial Park Jiangsu Province, 215021 P. R. China | Tel. +86 512 62581781 Fax +86 512 62581783 suzhou@sew.com.cn |
| Colombia | | | |
| Assembly Sales Service | Bogotá | SEW-EURODRIVE COLOMBIA LTDA. Calle 22 No. 132-60 Bodega 6, Manzana B Santafé de Bogotá | Tel. +57 1 54750-50 Fax +57 1 54750-44 sewcol@andinet.com |
| Croatia | | | |
| Sales Service | Zagreb | KOMPEKS d. o. o. PIT Erdödy 4 II HR 10 000 Zagreb | Tel. +385 1 4613-158 Fax +385 1 4613-158 kompeks@net.hr |
| Czech Republic | | | |
| Sales | Praha | SEW-EURODRIVE CZ S.R.O. Business Centrum Praha Luná 591 CZ-16000 Praha 6 - Vokovice | Tel. +420 220121234 + 220121236 Fax +420 220121237 http://www.sew-eurodrive.cz sew@sew-eurodrive.cz |
| Denmark | | | |
| Assembly Sales Service | Kopenhagen | SEW-EURODRIVEA/S Geminivej 28-30, P.O. Box 100 DK-2670 Greve | Tel. +45 43 9585-00 Fax +45 43 9585-09 http://www.sew-eurodrive.dk sew@sew-eurodrive.dk |
| Estonia | | | |
| Sales | Tallin | ALAS-KUUL AS Paldiski mnt.125 EE 0006 Tallin | Tel. +372 6593230 Fax +372 6593231 veiko.soots@alas-kuul.ee |
| Finland | | | |
| Assembly Sales Service | Lahti | SEW-EURODRIVE OY Vesimäentie 4 FIN-15860 Hollola 2 | Tel. +358 3 589-300 Fax +358 3 7806-211 http://www.sew-eurodrive.fi sew@sew-eurodrive.fi |
| Gabon | | | |
| Sales | Libreville | Electro-Services B.P. 1889 Libreville | Tel. +241 7340-11 Fax +241 7340-12 |
| Great Britain | | | |
| Assembly Sales Service | Normanton | SEW-EURODRIVE Ltd. Beckbridge Industrial Estate P.O. Box No.1 GB-Normanton, West- Yorkshire WF6 1QR | Tel. +44 1924 893-855 Fax +44 1924 893-702 http://www.sew-eurodrive.co.uk info@sew-eurodrive.co.uk |
| Greece | | | |
| Sales Service | Athen | Christ. Boznos & Son S.A. 12, Mavromichali Street P.O. Box 80136, GR-18545 Piraeus | Tel. +30 2 1042 251-34 Fax +30 2 1042 251-59 http://www.boznos.gr info@boznos.gr |
| Hong Kong | | | |
| Assembly Sales Service | Hong Kong | SEW-EURODRIVE LTD. Unit No. 801-806, 8th Floor Hong Leong Industrial Complex No. 4, Wang Kwong Road Kowloon, Hong Kong | Tel. +852 2 7960477 + 79604654 Fax +852 2 7959129 sew@sewhk.com |



Address List

| Hungary | | | |
|-------------------------------|-------------------|---|---|
| Sales Service | Budapest | SEW-EURODRIVE Kft. H-1037 Budapest Kunigunda u. 18 | Tel. +36 1 437 06-58 Fax +36 1 437 06-50 office@sew-eurodrive.hu |
| India | | | |
| Assembly Sales Service | Baroda | SEW-EURODRIVE India Pvt. Ltd. Plot No. 4, Gidc Por Ramangamdi · Baroda - 391 243 Gujarat | Tel. +91 265 2831021 Fax +91 265 2831087 mdoffice@seweurodriveindia.com |
| Technical Offices | Bangalore | SEW-EURODRIVE India Private Limited 308, Prestige Centre Point 7, Edward Road Bangalore | Tel. +91 80 22266565 Fax +91 80 22266569 sewbangalore@sify.com |
| | Mumbai | SEW-EURODRIVE India Private Limited 312 A, 3rd Floor, Acme Plaza Andheri Kurla Road, Andheri (E) Mumbai | Tel. +91 22 28348440 Fax +91 22 28217858 sewmumbai@vsnl.net |
| Ireland | | | |
| Sales Service | Dublin | Alperton Engineering Ltd. 48 Moyle Road Dublin Industrial Estate Glasnevin, Dublin 11 | Tel. +353 1 830-6277 Fax +353 1 830-6458 |
| Israel | | | |
| Sales | Tel-Aviv | Liraz Handasa Ltd. Ahofer Str 34B / 228 58858 Holon | Tel. +972 3 5599511 Fax +972 3 5599512 lirazhandasa@barak-online.net |
| Italy | | | |
| Assembly Sales Service | Milano | SEW-EURODRIVE di R. Blicke & Co.s.a.s. Via Bernini,14 I-20020 Solaro (Milano) | Tel. +39 2 96 9801 Fax +39 2 96 799781 sewit@sew-eurodrive.it |
| Ivory Coast | | | |
| Sales | Abidjan | SICA Ste industrielle et commerciale pour l'Afrique 165, Bld de Marseille B.P. 2323, Abidjan 08 | Tel. +225 2579-44 Fax +225 2584-36 |
| Japan | | | |
| Assembly Sales Service | Toyoda-cho | SEW-EURODRIVE JAPAN CO., LTD 250-1, Shimoman-no, Toyoda-cho, Iwata gun Shizuoka prefecture, 438-0818 | Tel. +81 538 373811 Fax +81 538 373814 sewjapan@sew-eurodrive.co.jp |
| Korea | | | |
| Assembly Sales Service | Ansan-City | SEW-EURODRIVE KOREA CO., LTD. B 601-4, Banweol Industrial Estate Unit 1048-4, Shingil-Dong Ansan 425-120 | Tel. +82 31 492-8051 Fax +82 31 492-8056 master@sew-korea.co.kr |
| Latvia | | | |
| Sales | Riga | SIA Alas-Kuul Katlakalna 11C LV-1073 Riga | Tel. +371 7139386 Fax +371 7139386 info@alas-kuul.ee |
| Lebanon | | | |
| Sales | Beirut | Gabriel Acar & Fils sarl B. P. 80484 Bourj Hammoud, Beirut | Tel. +961 1 4947-86 +961 1 4982-72 +961 3 2745-39 Fax +961 1 4949-71 gacar@beirut.com |



| Lithuania | | | |
|---------------------------------------|---------------------|---|--|
| Sales | Alytus | UAB Irseva Merkines g. 2A LT-4580 Alytus | Tel. +370 315 79204 Fax +370 315 79688 irmantas.irseva@one.lt |
| Luxembourg | | | |
| Assembly Sales Service | Brüssel | CARON-VECTOR S.A. Avenue Eiffel 5 B-1300 Wavre | Tel. +32 10 231-311 Fax +32 10 231-336 http://www.caron-vector.be info@caron-vector.be |
| Malaysia | | | |
| Assembly Sales Service | Johore | SEW-EURODRIVE SDN BHD No. 95, Jalan Seroja 39, Taman Johor Jaya 81000 Johor Bahru, Johor West Malaysia | Tel. +60 7 3549409 Fax +60 7 3541404 kchtan@pd.jaring.my |
| Morocco | | | |
| Sales | Casablanca | S. R. M. Société de Réalisations Mécaniques 5, rue Emir Abdelkader 05 Casablanca | Tel. +212 2 6186-69 + 6186-70 + 6186-71 Fax +212 2 6215-88 srm@marocnet.net.ma |
| Netherlands | | | |
| Assembly Sales Service | Rotterdam | VECTOR Aandrijftechniek B.V. Industrieweg 175 NL-3044 AS Rotterdam Postbus 10085 NL-3004 AB Rotterdam | Tel. +31 10 4463-700 Fax +31 10 4155-552 http://www.vector.nu info@vector.nu |
| New Zealand | | | |
| Assembly Sales Service | Auckland | SEW-EURODRIVE NEW ZEALAND LTD. P.O. Box 58-428 82 Greenmount drive East Tamaki Auckland | Tel. +64 9 2745627 Fax +64 9 2740165 sales@sew-eurodrive.co.nz |
| | Christchurch | SEW-EURODRIVE NEW ZEALAND LTD. 10 Settlers Crescent, Ferrymead Christchurch | Tel. +64 3 384-6251 Fax +64 3 384-6455 sales@sew-eurodrive.co.nz |
| Norway | | | |
| Assembly Sales Service | Moss | SEW-EURODRIVE A/S Solgaard skog 71 N-1599 Moss | Tel. +47 69 241-020 Fax +47 69 241-040 sew@sew-eurodrive.no |
| Peru | | | |
| Assembly Sales Service | Lima | SEW DEL PERU MOTORES REDUCTORES S.A.C. Los Calderos, 120-124 Urbanizacion Industrial Vulcano, ATE, Lima | Tel. +51 1 3495280 Fax +51 1 3493002 sewperu@sew-eurodrive.com.pe |
| Poland | | | |
| Assembly Sales Service | Lodz | SEW-EURODRIVE Polska Sp.z.o.o. ul. Techniczna 5 PL-92-518 Lodz | Tel. +48 42 67710-90 Fax +48 42 67710-99 http://www.sew-eurodrive.pl sew@sew-eurodrive.pl |
| Portugal | | | |
| Assembly Sales Service | Coimbra | SEW-EURODRIVE, LDA. Apartado 15 P-3050-901 Mealhada | Tel. +351 231 20 9670 Fax +351 231 20 3685 http://www.sew-eurodrive.pt infosew@sew-eurodrive.pt |
| Romania | | | |
| Sales Service | Bucuresti | Sialco Trading SRL str. Madrid nr.4 011785 Bucuresti | Tel. +40 21 230-1328 Fax +40 21 230-7170 sialco@sialco.ro |



Address List

| Russia | | | |
|---------------------------------------|-----------------------|---|---|
| Sales | St. Petersburg | ZAO SEW-EURODRIVE P.O. Box 263 RUS-195220 St. Petersburg | Tel. +7 812 5357142 +812 5350430 Fax +7 812 5352287 http://www.sew-eurodrive.ru sew@sew-eurodrive.ru |
| Senegal | | | |
| Sales | Dakar | SENEMECA Mécanique Générale Km 8, Route de Rufisque B.P. 3251, Dakar | Tel. +221 849 47-70 Fax +221 849 47-71 senemeca@sentoo.sn |
| Serbia and Montenegro | | | |
| Sales | Beograd | DIPAR d.o.o. Kajmakalanska 54 SCG-11000 Beograd | Tel. +381 11 3046677 Fax +381 11 3809380 dipar@yubc.net |
| Singapore | | | |
| Assembly Sales Service | Singapore | SEW-EURODRIVE PTE. LTD. No 9, Tuas Drive 2 Jurong Industrial Estate Singapore 638644 | Tel. +65 68621701 ... 1705 Fax +65 68612827 sales@sew-eurodrive.com.sg |
| Slovakia | | | |
| Sales | Sered | SEW-Eurodrive SK s.r.o. Trnavska 920 SK-926 01 Sered | Tel. +421 31 7891311 Fax +421 31 7891312 sew@sew-eurodrive.sk |
| Slovenia | | | |
| Sales Service | Celje | Pakman - Pogonska Tehnika d.o.o. Ul. XIV. divizije 14 SLO – 3000 Celje | Tel. +386 3 490 83-20 Fax +386 3 490 83-21 pakman@siol.net |
| South Africa | | | |
| Assembly Sales Service | Johannesburg | SEW-EURODRIVE (PROPRIETARY) LIMITED Eurodrive House Cnr. Adcock Ingram and Aerodrome Roads Aeroton Ext. 2 Johannesburg 2013 P.O.Box 90004 Bertsham 2013 | Tel. +27 11 248-7000 Fax +27 11 494-3104 dross@sew.co.za |
| | Capetown | SEW-EURODRIVE (PROPRIETARY) LIMITED Rainbow Park Cnr. Racecourse & Omuramba Road Montague Gardens Cape Town P.O.Box 36556 Chempet 7442 Cape Town | Tel. +27 21 552-9820 Fax +27 21 552-9830 Telex 576 062 dswanepoel@sew.co.za |
| | Durban | SEW-EURODRIVE (PROPRIETARY) LIMITED 2 Monaceo Place Pinetown Durban P.O. Box 10433, Ashwood 3605 | Tel. +27 31 700-3451 Fax +27 31 700-3847 dtait@sew.co.za |
| Spain | | | |
| Assembly Sales Service | Bilbao | SEW-EURODRIVE ESPAÑA, S.L. Parque Tecnológico, Edificio, 302 E-48170 Zamudio (Vizcaya) | Tel. +34 9 4431 84-70 Fax +34 9 4431 84-71 sew.spain@sew-eurodrive.es |
| Sweden | | | |
| Assembly Sales Service | Jönköping | SEW-EURODRIVE AB Gnejsvägen 6-8 S-55303 Jönköping Box 3100 S-55003 Jönköping | Tel. +46 36 3442-00 Fax +46 36 3442-80 http://www.sew-eurodrive.se info@sew-eurodrive.se |



| Switzerland | | | |
|--|------------------------|--|---|
| Assembly Sales Service | Basel | Alfred Imhof A.G. Jurastrasse 10 CH-4142 Münchenstein bei Basel | Tel. +41 61 41717-17 Fax +41 61 41717-00 http://www.imhof-sew.ch info@imhof-sew.ch |
| Thailand | | | |
| Assembly Sales Service | Chon Buri | SEW-EURODRIVE (Thailand) Ltd. Bangpakong Industrial Park 2 700/456, Moo.7, Tambol Donhuaroh Muang District Chon Buri 20000 | Tel. +66 38 454281 Fax +66 38 454288 sewthailand@sew-eurodrive.co.th |
| Tunisia | | | |
| Sales | Tunis | T. M.S. Technic Marketing Service 7, rue Ibn El Heithem Z.I. SMMT 2014 Mégrine Erriadh | Tel. +216 1 4340-64 + 1 4320-29 Fax +216 1 4329-76 |
| Turkey | | | |
| Assembly Sales Service | Istanbul | SEW-EURODRIVE Hareket Sistemleri Sirketi Bagdat Cad. Koruma Cikmazi No. 3 TR-34846 Maltepe ISTANBUL | Tel. +90 216 4419163 + 216 4419164 + 216 3838014 Fax +90 216 3055867 sew@sew-eurodrive.com.tr |
| USA | | | |
| Production Assembly Sales Service | Greenville | SEW-EURODRIVE INC. 1295 Old Spartanburg Highway P.O. Box 518 Lyman, S.C. 29365 | Tel. +1 864 439-7537 Fax Sales +1 864 439-7830 Fax Manuf. +1 864 439-9948 Fax Ass. +1 864 439-0566 Telex 805 550 http://www.seweurodrive.com cslyman@seweurodrive.com |
| Assembly Sales Service | San Francisco | SEW-EURODRIVE INC. 30599 San Antonio St. Hayward, California 94544-7101 | Tel. +1 510 487-3560 Fax +1 510 487-6381 cshayward@seweurodrive.com |
| | Philadelphia/PA | SEW-EURODRIVE INC. Pureland Ind. Complex 2107 High Hill Road, P.O. Box 481 Bridgeport, New Jersey 08014 | Tel. +1 856 467-2277 Fax +1 856 845-3179 csbridgeport@seweurodrive.com |
| | Dayton | SEW-EURODRIVE INC. 2001 West Main Street Troy, Ohio 45373 | Tel. +1 937 335-0036 Fax +1 937 440-3799 cstroy@seweurodrive.com |
| | Dallas | SEW-EURODRIVE INC. 3950 Platinum Way Dallas, Texas 75237 | Tel. +1 214 330-4824 Fax +1 214 330-4724 csdallas@seweurodrive.com |
| Additional addresses for service in the USA provided on request! | | | |
| Venezuela | | | |
| Assembly Sales Service | Valencia | SEW-EURODRIVE Venezuela S.A. Av. Norte Sur No. 3, Galpon 84-319 Zona Industrial Municipal Norte Valencia, Estado Carabobo | Tel. +58 241 832-9804 Fax +58 241 838-6275 sewventas@cantv.net sewfinanzas@cantv.net |

How we're driving the world

With people who think fast and develop the future with you.



With a global presence that offers responsive and reliable solutions. Anywhere.

With a worldwide service network that is always close at hand.

With drives and controls that automatically improve your productivity.



With innovative technology that solves tomorrow's problems today.


With comprehensive knowledge in virtually every branch of industry today.



With online information and software updates, via the Internet, available around the clock.

With uncompromising quality that reduces the cost and complexity of daily operations.

SEW-EURODRIVE
Driving the world

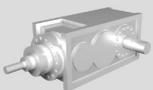

SEW
EURODRIVE

SEW-EURODRIVE GmbH & Co KG
P.O. Box 3023 · D-76642 Bruchsal / Germany
Phone +49 7251 75-0 · Fax +49 7251 75-1970
sew@sew-eurodrive.com

→ www.sew-eurodrive.com