

HOTWIRE

IN SCREED HEATING

Hotwire In Screed Heating Installation Manual January 2014

Please read this instruction manual. It includes important information that will assist you and save you time and money such as,

*To calculate the wire spacing start with the M2 of the area to be heated.
Multiply this by 1000. Then divide this answer by the length of the element.
The answer will be the space at which the element should be laid.*

Contents

Step 1 Read This Manual	Page 3
Step 2 Pre wire or “Rough In”	Page 3
Step 3 Floor Preparation	Page 3
Step 4 Cable Spacing	Page 3
Step 5 Plan the installation	Page 4
Step 6 Check the element.....	Page 4
Step 7 Fixing the Element	Page 5
Step 8 Half Way	Page 6
Step 9 More Tape.....	Page 6
Step 11 Install the Floor Probe	Page 6
Step 12 Pull Cables to Power Supply Contents	Page 6
Step 13 Connect Continuity Alarm	Page 7
Step 14 Take a picture.....	Page 9
Step 15 Finished	Page 7
Step 16 Notice to Tilers	Page 7

Step 1 Read This Manual

Please read this manual. It includes everything you need to know to successfully install Hotwire.

Incorrect installation of Hotwire may lead to any warranty claim being denied.

In some States and Territories of Australia the installation of Hotwire Under Tile Heating must be performed in its entirety by a licensed electrical contractor. Whist in others a licensed contractor is only required for the connections to the thermostat. Please check with your local electrical authority or Electrical Contractor to verify the requirements applicable to your State or Territory.

The Hotwire element cannot be cut, shortened or lengthened in any way.

Note: Water Proofing

It does not affect Hotwire whether the water proofing is installed under the screed or on top of the screed. Please check with the manufacturer of the water proofing as to their specifications.

Step 2 Pre wire or "Rough In"

Three things are required before Hotwire can be installed. Please see the diagram.

1: Power supply. You will need power capable of running the Hotwire element you are installing. Eg 800 watts

2: Flush Box. A vertically flush box will need to be installed. This is a standard light switch / power point plate.


3: Draw Wire. You will need a draw wire through the wall cavity or chased into wall (if brick) and run through conduit.

Mount Flush Box Vertically.

Provide power suitable for load of element to flush box. E.g. 800 watts

Insert draw wire from flush box to floor. This will enable you to pull the coldtails to the thermostat.

NSW: (Optional in other states)
Install conduit 100 mm out onto floor and 100mm into wall cavity. Run draw wire through conduit

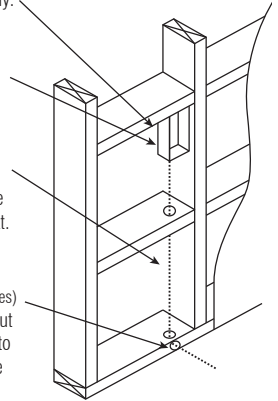

Step 3 Floor Preparation

The floor needs to be completely clean. Sand, lumps of gyprock glue etc will affect your Hotwire installation. So make sure you clean the floor well. Sweep up all the dust, a once over with the vacuum is also a good idea if you have one handy.

Step 4 Cable Spacing

This is really important to an excellent Hotwire installation, so please read this

carefully.

Calculate the EXACT m² of the area to be heated and multiply it by 1000 (this is to bring the measurement to square millimeters). Then divide that answer by the length of the element. This is printed on the side of the spool. The answer will be the cable spacing and should be between 75 and 120 mm. If your answer is outside this check your measurements again as you have made a mistake or have the wrong element. If this is the case do not proceed with the installation.

$$\text{Cable Spacing} = \frac{\text{M2 of floor} \times 1000}{\text{Length of Cable}}$$

The above formula is a good guide but does not take into account the loops at the end of the cable runs so take 5% off your answer. So for example if your answer was 90 mm start installing the cable at 85mm apart.

It is a good idea to cut a jig to the size you need it rather than use a tape measure the whole time. A off cut of wood is fine, in the picture we used an off cut of electrical cable.




Step 5 Plan the installation

This is a step where you can come undone if you don't plan properly.


The Hotwire element CANNOT be cut or shortened in any way. So have a look at the room and work out what is the most logical and simple way to run the cable around that room. You want to be doing as many long runs as possible.

Try and leave the longest wall to last. That way if you have a little too much or too little cable left you can make an easy adjustment by coming a bit further away or going right up close to the wall. Neither option will affect the heating of the room in any way.

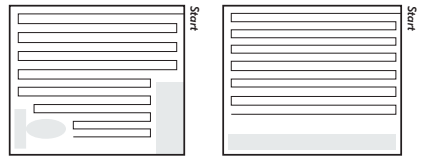

Bathroom

Living Area

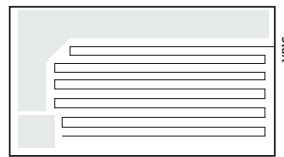

Kitchen

Step 6 Check the element

Before installing the element it is always a good idea to ensure it has not been damaged during transit. We check every element before it leaves our warehouse but there is the possibility that it may get damaged by a

courier.

If you have a multimeter then you can check the cable against the following table.

If you don't have a multimeter don't panic we have you covered too.

Watt	m2/130	Length	Ohm/m	Amps
300	2	17.65	9.99	1.30
450	3	26.47	4.44	1.95
600	5	35.29	2.50	2.61
750	6	44.12	1.60	3.26
900	7	52.94	1.11	3.91
1050	8	61.76	0.82	4.56
1200	9	70.59	0.62	5.22
1350	10	79.41	0.49	5.87
1500	12	88.24	0.40	6.25
1800	14	105.88	0.28	7.82
2100	16	123.53	0.20	9.13
2400	18	141.18	0.16	10.43
3000	23	176.47	0.10	13.04
3600	28	211.76	0.07	15.65

In the Hotwire Box is a continuity alarm. It is a small black box with 3 cables coming off the end.

- 1: Remove small white sticker over "On / Off" Switch
- 2: Fix the Black clip to the Brown wire of the element.
- 3: Fix the Red clip to the Blue wire of the element.

- 4: Fix the Green clip to the remaining wire.
- 5: Switch the tester on.
- 6: A Red Light then shows that the tester is on and working.
- 7: If you have a fault the tester will start "Beeping"

If the alarm does not beep you are good to keep installing. There is also another use for the alarm so keep it handy, more about that after the element is down.

Step 7 Fixing the Element

You will need lots of bits of the cloth tape that it is included in the box. Rip off pieces about 60 mm long. A good rule of thumb is when you think you have enough rip off twice as much again and you should be good to go. Just stick the pieces up a door frame or window sill.




Step 8 Roll out Element

You are now ready to start rolling out the element and sticking it down.

There is 3 meters of "Cold Tail" at the end of

the element, you will notice a join between the cold tail and the thinner element wire. No part of the element or cold tail join can be in the wall cavity. This is dangerous and will void warranty.

Start spreading the element around the floor using the jig you cut earlier

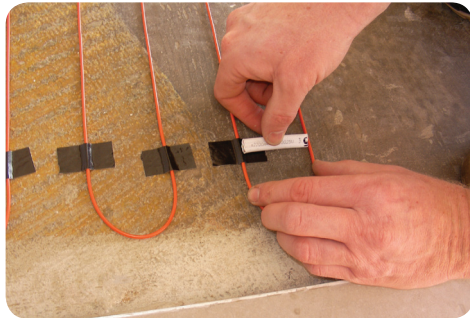

Step 9 Half Way

You will notice a half way marker. It is little piece of tape around the element. When you see this stop and look at where you are up to. If you are not sure if you are half way through the floor check your measurements. Measure the remaining m2 and use 50% of the cable length to check if you are on target. If you are a little more or under half way you can spread the cable runs out or close them up a bit.



Step 10 More Tape

Stick any proud bits of element down. Some of the loops may have popped up a bit. You will also need to run a strip of cable right across the whole floor to ensure the cable does not get moved or damaged by other trades. It is a good idea to run right across the floor every meter.

Step 11 Install the Floor Probe

If using the Hotwire fully programmable thermostat you will now need to install the floor probe. If you are not sure check the small white box in the Hotwire box your product came in. The floor probe is a white cable that will be coiled in the bottom of that box.

Stick the probe to the floor. Make sure you don't stick any tape over the end of the probe. It is also critical to ensure that the probe is exactly half way between two cable runs. I.e. If your measurement was 100 mm. Ensure the end of the probe is 50 mm from one run of element and 50 mm from another.

Step 12 Pull Cables to Power Supply

Tape the ends both cables (cold tail and the floor probe) to the draw wire and gently pull the cable up the wall cavity or through the conduit to the position of the power supply.

No part of the element can be run inside the wall. The entire cold tail join must be buried under the floor.

Step 13 Connect Continuity Alarm

Connect the continuity alarm again. This will ensure you have not damaged the cable during installation. It will also monitor the cable while you are laying of the screed.

- 1: Remove small white sticker over "On / Off" Switch (if you haven't already)
- 2: Fix the Black clip to the Brown wire of the element.
- 3: Fix the Red clip to the Blue wire of the element.
- 4: Fix the green clip to the remaining wire.
- 5: Switch the tester on.
- 6: A Red Light then shows that the tester is on and working.
- 7: If you have a fault the tester will start "Beeping" If there is no "Beep" you can continue with the installation
- 8: If the beep sounds at any time, before or during installation STOP IMMEDIATELY as this means that damage has occurred to the element and you will need to repair it before continuing.
- 9: Once you have finished the installation and before you start tiling reconnect the tester as above & turn on.
- 10: Keep the tester on until your tiling is complete.
- 11: If the tester light turns off you will need to replace the batteries.

It is a good idea to tape the alarm up with the tails so that it is not in your way while you finish the installation.



Step 14 Take a picture

Take a picture of the element layout. If there is ever a problem it will be handy to know how the element has been installed across the floor.

Step 15 Finished

Admire your work. You have just installed Hotwire.

Step 16 Notice to Tilers

Inside this manual is a yellow flier pointing out to tilers that Hotwire has been installed. Stick it to the wall in a prominent place. The flier also has a place to write your name and number for them to call with any questions.

Materials Check List

Provided from Hotwire:

Hotwire Element:
Thermostat: (including a floor sensing probe)
Cloth Tape
Continuity Alarm
This Manual
Relay if required

You will also need,

Broom
Tape Measure

Electrical Connection of the Thermostat

All circuit wiring supply and thermostat connection must be undertaken in accordance with the current electrical standards and regulations. The heating units must be separated from other heating sources. The maximum thermal resistance between the heating element and the room = 0.4 m sq K/wAll electrical supply circuits must be RCD (Residual Current Device) protected with a rated residual operation current not exceeding 30 mA.

Operation

Wait 7 days for the tile adhesive to dry before you turn your heating on. Once the heating is commissioned the initial heat up time will vary depending on the sub floor type, (concrete or timber) insulation, thermal characteristics and ambient temperature. Performance will improve with use.

Do's and Don'ts

DO's

Carefully read the installation instructions prior to commencing your installation.

Check the element is working before you start.

Ensure the surface is clean and clear of obstructions.

Pre plan your element layout and stay with the recommended element spacing.

Maintain even element spacing.

Protect the heating element from damage at all times.

Plan required pre work and drilling before you lay the element.

Take care when tiling to make sure that you do not damage the element.

Ensure that enough tile adhesive is used so not to leave gaps or voids under the tiles.

DON'Ts

Don't cut or shorten the heating element.

Don't commence installation on concrete floors that are not fully cured.


Don't allow the heating elements to cross or touch.
Don't allow traffic over the heating element until the flooring has been laid.

Don't remove the heating element off the spool except during installation.

Don't store tiles sharp or heavy objects on the elements while tiling.

Don't switch on the heating until the tile adhesive has fully cured. Don't install the element over uneven floor surfaces.

In Screed Heating Technical Information

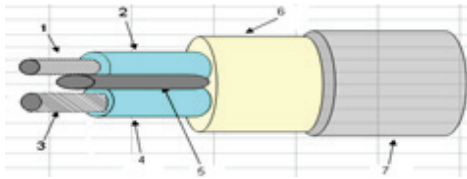

General:

- 1 Multi Stranded Heating Conductor (0.25mm -0.68)
- 2 Conductor Insulation 0.5mm RTI XPLE (natural)
- 3 Return Conductor AWG 20/7/28 TPC (0.5mm²) : AWG 19/10/28 TPC (0.75mm²).
- 4 Return Conductor Insulation 0.5mm RTI XPLE (natural)
- 5 Earth Conductor 1.0mm TPC (0.9mm²).
- 6 Aluminised Mylar Tape 15mm Width & 65 Micron Thickness.
- 7 Outer Insulation 1.5mm RTI High Temp PVC.
Working Temperature 105 Deg C.
Working Voltage 230V AC, 50Hz.
Cable Dia 6.0mm.
Cold Tail 3.5m

Insulation:

A resistance R factor of 1.7m² / OC / w for heated floors.

High density polystyrene or fiber glass

insulation materials should be used. (NZ 4218P, BRANZ 292, 344)

Perimeter 1m width insulation should be fitted.

Footnotes

The lowest ambient temperature that the heating element can be installed equals -80C

The minimum radius for bending the heating element equals 40 mm. The thickness of covering materials should be at least 5mm.

Contact the manufacturer for advice if materials other than those recommended are used. The appliance is not intended for use by young children, or infirm persons, without supervision.

Young children should be supervised to ensure they do not play with the appliance. Laws in different states and territories of Australia differ. Please check with your local electrical authority if someone other than a licensed Electrician is able to lay the cable in your state or territory. In all states and territories all electrical connections including the thermostat must be carried out by a registered electrician.

All circuit wiring supply and thermostat connection must be undertaken in accordance with the current electrical standards and national wiring regulations.

The heating units must be separated from other heat sources.

Customer Warranty for Hotwire Products

1) General

- a) These terms and conditions (**Terms and Conditions**) apply to each contract for the supply of goods (**Goods**) by or on behalf of Turnkey International Pty Ltd ABN [36 086 830 766] trading as Hotwire Heating to any customer (**Customer**) by purchase through an authorised distributor of Hotwire or otherwise.

2) Terms and Conditions

- a) A contract for the supply and purchase of Goods (**Contract**) will be formed, on these Terms and Conditions, immediately when the Customer purchases the Goods from Hotwire (or an authorised distributor of Hotwire) or where the Customer otherwise requests that Goods be supplied by Hotwire to the Customer.
- b) No additional terms and conditions, whether contained in or deemed to be incorporated by any other order or quotation (if any) of the Customer, will apply in substitution of these Terms and Conditions nor will they in any way override or amend these Terms and Conditions.
- c) A Customer must not cancel any order for Goods or terminate a Contract without the prior written consent of Hotwire. The Customer must indemnify Hotwire for all costs, expenses and losses incurred as a result of that cancellation or termination.

3) Installation Manual

- a) The Hotwire installation manual (**Installation Manual**) is provided for the benefit of the Customer only and is not a complete guide as to proper installation of the Goods. The Goods and installation of the Goods ordinarily requires the technical skills of a qualified installer. Do not take any steps to install the Goods without a copy of the Installation Manual.

4) Risk and ownership of Goods

- a) Risk of loss, or damage, to the Goods passes to the Customer on delivery which will occur on the earliest of the following events:
 - i) The Customer taking possession of the Goods from Hotwire premises or the premises of an authorised distributor;
 - ii) Completion of the loading of the Goods onto a transportation vehicle provided by the Customer; or
 - iii) Delivery by Hotwire to any location nominated by the Customer,

(Delivery).

- b) Ownership of, and title to, the Goods passes to the Customer only upon payment in full by the Customer of the purchase price for the Goods and any other amounts due by the Customer to Hotwire.
- c) Until payment of the purchase price for the Goods (in full):
 - i) Hotwire retains full legal title to the Goods;
 - ii) If the Goods are in the Customer's possession, the Customer will hold

the Goods as bailee for Hotwire and must store the Goods so that they are clearly identifiable as the property of Hotwire;

- iii) Hotwire may call for, and recover possession of, the Goods at any time; and
- iv) the Customer must at its own cost, deliver the Goods to Hotwire if requested to do so by Hotwire.

5) Damaged or missing Goods

- a) Any claim in respect of a shortage of Goods or damaged Goods (**Claim**) must be lodged with Hotwire within five (5) business days of the Delivery of some or all of the goods the subject of the Contract.
- b) Failure by the Customer to give notice of a Claim within five (5) business days of the Delivery of some or all of the Goods the subject of the Contract to Hotwire will be deemed an absolute and unconditional waiver of such Claim.

6) Installation

- a) Hotwire recommends that the Goods be installed by a registered Hotwire Installer (**Authorised Installer**).
- b) Any installation by a person who is not an Authorised Installer must be carried out strictly in accordance with the Installation Manual taking into account the individual circumstances of the place of installation and a failure to do so may void or exclude your ability to claim under the Warranty.

7) Warranty

- a) Subject to clause 7(b), Hotwire undertakes to repair or at its sole discretion replace any

part of the Goods specifically manufactured by Hotwire which is found to have a manufacturing defect for a period of ten (10) years from the date of Delivery.

- b) The period of the Warranty described in clause 7(a) does not apply to the part of the Goods comprising (or being) the thermostat and the controller. The Warranty period in relation to those parts of the Goods is limited to two (2) years.

(Warranty)

8) Exclusion and Limitation of Liability

- a) Except for:

- i) Any implied condition or warranty the exclusion of which would contravene any statute or cause any part of this clause to be void; and

- ii) The Warranty,

Hotwire excludes all other conditions and warranties implied by custom, the general law or statute.

- b) The Warranty does not apply if:

- i) Unauthorised repairs or alterations are made to the Goods;

- ii) The Customer fails to comply with all instructions of Hotwire (whether written or verbal) in relation to the fitting, installation and use of the Goods;

- iii) The Goods are subjected to improper voltage or power surges, misused, damaged by accident, force of nature or any other acts beyond Hotwire's reasonable control; and/or

- iv) The Goods are improperly installed or installed other than strictly in accordance with the Installation Manual (other than where such improper or other installation is carried out by an Authorised Installer).
 - c) The Warranty does include calls to replace batteries, programme or re-programme thermostats and/or controllers, replace fuses or reset residual current devices or circuit breakers.
 - d) The total maximum liability of Hotwire under the Warranty is limited to replacing the Goods, repairing the Goods or payment of the replacement cost of the Goods.
- We may at our sole discretion offer a refund for the purchase cost of the goods excluding installation. This will be the extent of our liability.
- e) Hotwire will not be liable for any personal injury, incidental damages, consequential losses, loss of profit, costs of business interruption, loss of opportunities or any like claims whatsoever arising from any use of, or incidental to, the Goods or their failure to operate, or arising out of Hotwire's negligence or breach of the Contract.
 - f) If any component part of the Goods is manufactured by a third party or supplied to Hotwire by a third party, any warranty offered by Hotwire in relation to the Goods or a component part of the Goods will be limited to Hotwire's right of redress (if any) against the manufacturer or supplier of the component part of the Goods.
 - g) The Customer must keep Hotwire indemnified against:
 - i) All claims, expenses and liabilities of whatever nature including but not limited to loss of profit, which may be made against or which Hotwire may sustain, pay or incur arising out of the manufacture or sale of the Goods to the Customer, except in so far as the same arises from Hotwire's negligence or breach of the Contract; and
 - ii) Hotwire's costs in attending to a Warranty call by a Customer which is without merit, excluded by this clause or where no Warranty is otherwise available to the Customer together with its costs of defending any such claim by a Customer against Hotwire (including legal costs incurred by Hotwire).
 - h) This clause does not exclude or limit the application of any statutory provision where to do so would contravene that statute or cause any part of this clause to be void.

Notes

13-16

Hotwire (Australia Head Office)
Po Box 543,
Mount Evelyn Vic 3796

Phone 1300 797 060
Fax +61 (03) 8678 1337
www.hotwireheating.com.au

HOTWIRE
IN SCREED HEATING

Notes

14-16

Hotwire (Australia Head Office)
Po Box 543,
Mount Evelyn Vic 3796

Phone 1300 797 060
Fax +61 (03) 8678 1337
www.hotwireheating.com.au

HOTWIRE
IN SCREED HEATING

15-16

Hotwire (Australia Head Office)
Po Box 543,
Mount Evelyn Vic 3796

Phone 1300 797 060
Fax +61 (03) 8678 1337
www.hotwireheating.com.au

HOTWIRE
IN SCREED HEATING

1300 797 060
hotwireheating.com.au

16-16

Hotwire (Australia Head Office)
Po Box 543,
Mount Evelyn Vic 3796

Phone 1300 797 060
Fax +61 (03) 8678 1337
www.hotwireheating.com.au

HOTWIRE
IN SCREED HEATING