

# SDM630 DC

*Din Rail Smart Energy Meter for Single and Three Phase Electrical Systems*



**USER MANUAL**  
**2013 V1.1**

Important Safety Information is contained in the Maintenance section. Familiarize yourself with this information before attempting installation or other procedures.

Symbols used in this document:



Risk of Danger: These instructions contain important safety information:  
Read them before starting installation or servicing of the equipment



Caution: Risk of Electric Shock

## 1 Introduction

This document provides operating, maintenance and installation instructions. The unit measures and displays the characteristics of single phase two wires(1p2w), three phase three wires(3p3w,) and three phase four wires(3p4w) supplies, including voltage, frequency, current, power, active and reactive energy, imported or exported. Energy is measured in terms of kWh, kWh. Maximum demand current can be measured over preset periods of up to 60 minutes. In order to measure energy, the unit requires voltage and current inputs in addition to the supply required to power the product.

SDM630 DC supports max. 100A direct connection, saves the cost and avoid the trouble to connect external CTs, giving the unit a cost-effective and easy operation. Built-in interfaces provides pulse and RS485 Modbus RTU outputs. Configuration is password protected.

### 1.1 Unit Characteristics

The Unit can measure and display:

- Line voltage and THD% (total harmonic distortion) of all phases
- Line Frequency
- Currents, Current demands and current THD% of all phases
- Power, maximum power demand and power factor
- Active energy imported and exported
- Reactive energy imported and exported

The unit has password-protected set-up screens for:

- Changing password
- Supply system selection 1p2w, 3p3w, 3p4w
- Demand Interval Time(DIT)
- Reset for demand measurements
- Pulse output duration

Two pulse output indicates real-time energy measurement. An RS485 output allows remote monitoring from another display or a computer.

### 1.2 RS485 Serial – Modbus RTU




This uses an RS485 serial port with Modbus RTU protocol to provide a means of remotely monitoring and controlling the Unit

Set-up screens are provided for setting up the RS485 port. Refers to section 4.8

### 1.3 Pulse output

This provides two pulse outputs that clock up measured active and reactive energy. The constant of SDM630 DC type for active energy is 1000imp/kWh. The pulse width for active energy can be set from the set-up menu.



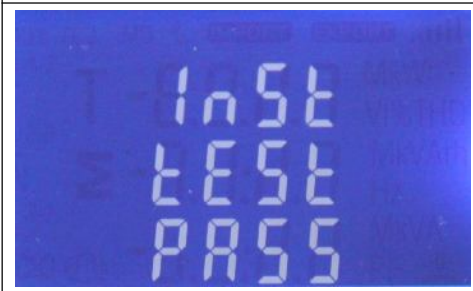

## 2. Start-up Screens

	<p>The first screen lights up all display segments and can be used as a display check</p>
	<p>The second screen indicates the firmware installed in the unit and its build number.</p>
	<p>The interface performs a self-test and indicates the result if the test passes.</p>

After a short delay, the screen will display active energy measurements.

## 3. Measurements

The buttons operate as follows:

	<p>Selects the Voltage and Current display screens In Set-up Mode, this is the “Left” or “Back” button.</p>
	<p>Select the Frequency and Power factor display screens In Set-up Mode, this is the “Up” button</p>
	<p>Select the Power display screens In Set-up Mode, this is the “Down” button</p>
	<p>Select the Energy display screens In Set-up mode, this is the “Enter” or “Right” button</p>

### 3.1 Voltage and Current





Each successive pressing of the  button selects a new range:

JIAXING EASTRON ELECTRONIC INSTRUMENTS CO.,LTD.

TEL:0086-573-83698881/83698882 FAX: 0086-573-83698883

Web: [www.eastrongroup.com](http://www.eastrongroup.com) Email: [sales@eastrongroup.com](mailto:sales@eastrongroup.com)

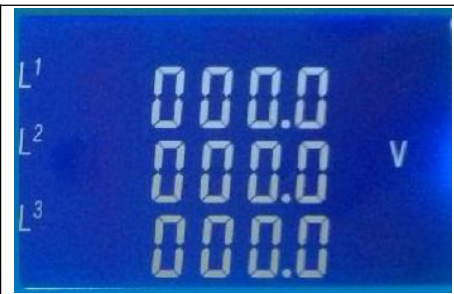
Add: No.1369. Chengnan Road, Nanhu District, Jiaxing City, Zhejiang, China 314001.

	Phase to neutral voltages
	Current on each phase
	Phase to neutral voltage THD%
	Current THD% for each phase

### 3.2 Frequency and Power factor and Demand



Each successive pressing of the button selects a new range:




	Frequency and Power Factor (total)
---	------------------------------------

JIAXING EASTRON ELECTRONIC INSTRUMENTS CO.,LTD.

TEL:0086-573-83698881/83698882 FAX: 0086-573-83698883

Web: [www.eastrongroup.com](http://www.eastrongroup.com) Email: [sales@eastrongroup.com](mailto:sales@eastrongroup.com)



Add: No.1369. Chengnan Road, Nanhu District, Jiaxing City, Zhejiang, China 314001.

	Power Factor of each phase
	Maximum Power Demand
	Maximum Current Demand

### 3.3 Power



Each successive pressing of the  button select a new range:



	Instantaneous Active Power in kW
	Instantaneous Reactive Power in kVAr

JIAXING EASTRON ELECTRONIC INSTRUMENTS CO.,LTD.

TEL:0086-573-83698881/83698882 FAX: 0086-573-83698883

Web: [www.eastrongroup.com](http://www.eastrongroup.com) Email: [sales@eastrongroup.com](mailto:sales@eastrongroup.com)



Add: No.1369. Chengnan Road, Nanhu District, Jiaxing City, Zhejiang, China 314001.

	Instantaneous Volt-amps in KVA
	Total kW, kVArh, kVA

### 3.4 Energy Measurements



Each successive pressing of the  button selects a new range:




	Imported active energy in kWh
	Exported active energy in kWh
	Imported reactive energy in kVArh

JIAXING EASTRON ELECTRONIC INSTRUMENTS CO.,LTD.


TEL:0086-573-83698881/83698882 FAX: 0086-573-83698883

Web: [www.eastrongroup.com](http://www.eastrongroup.com) Email: [sales@eastrongroup.com](mailto:sales@eastrongroup.com)

Add: No.1369. Chengnan Road, Nanhu District, Jiaxing City, Zhejiang, China 314001.

	Exported reactive energy in kVArh
	Total active energy in kWh
	Total reactive energy in kVAh

#### 4. Set-up

To enter set-up mode, pressing the  button for 3 seconds, until the password screen appears.



Setting up is password-protected so you must enter the correct password (default '1000') before processing. If an incorrect password is entered, the display will show: Err








To exit setting-up mode, press  repeatedly until the measurement screen is restored.



#### 4.1 Set-up Entry Methods


Some menu items, such as password, require a four-digit number entry while others, such as supply system, require selection from a number of menu options.




##### 4.1.1 Menu Option Selection

① Use the  and  buttons to select the required item from the menu shown in section 4.1. selection does not roll over between bottom and top of list

② Press  to confirm your selection

③ If an item flashes, then it can be adjusted by the  and  buttons. If not, there maybe a further layer.



④ Having selected an option from the current layer, press  to confirm your selection. The SET indicator will appear.


⑤ Having completed a parameter setting, press  to return to a higher menu level. The SET indicator will be removed and you will be able to use the  and  buttons for further menu selection.


⑥ On completion of all set-up, press  repeatedly until the measurement screen is restored.

##### 4.1.2 Number Entry Procedure






When setting up the unit, some screens require the entering of a number. In particular, on entry to the setting up section, a password must be entered. Digits are set individually, from left to right. The procedure is as follows:

① the current digit to be set flashes and is set using the  and  buttons

② Press  to confirm each digit setting. The SET indicator appears after the last digit has been set.

③ After setting the last digit, press  to exit the number setting routine. The SET indicator will be removed.

#### 4.2 Change password

1		Use the  and  to choose the change password option
2		Press the  to enter the change password routine. The new password screen will appear with the first digit flashing
3		Use  and  to set the first digit and press  to confirm your selection. The next digit will flash.
4		Repeat the procedure for the remaining three digits
5		After setting the last digit, SET will show.
6	Press  to exit the number setting routine and return to the Set-up menu. SET will be removed	

#### 4.3 DIT Demand Integration Time












This sets the period in minutes over which the current and power readings are integrated for JIAXING EASTRON ELECTRONIC INSTRUMENTS CO.,LTD.

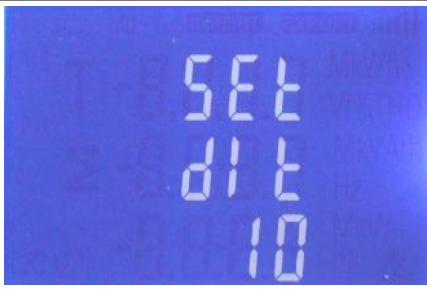TEL:0086-573-83698881/83698882 FAX: 0086-573-83698883

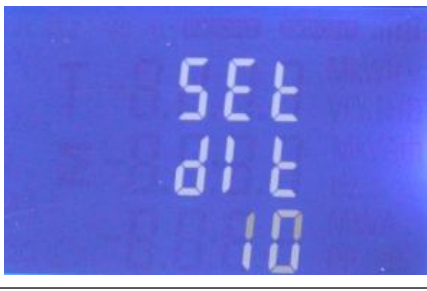Web: [www.eastrongroup.com](http://www.eastrongroup.com) Email: [sales@eastrongroup.com](mailto:sales@eastrongroup.com)




Add: No.1369. Chengnan Road, Nanhu District, Jiaxing City, Zhejiang, China 314001.









maximum demand measurement. The options are: off, 5, 10,15 30,60 minutes

1		<p>From the set-up menu, use  and  buttons to select the DIT option. The screen will show the currently selected integration time.</p>
2		<p>Press  to enter the selection routine. The current time interval will flash</p>
3		<p>Use  and  buttons to select the time required.</p>
4		<p>Press  to confirm the selection. SET indicator will appear.</p>
5	<p>Press  to exit the DIT selection routine and return to the menu.</p>	

#### 4.4 Supply System

Use this section to set the type of power supply being monitored.




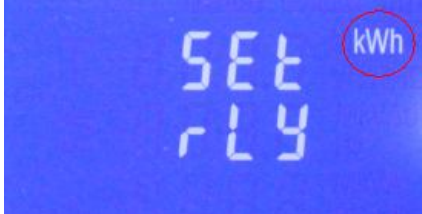

1		<p>From the Set-up menu, use  and  buttons to select the System option. The screen will show the currently selected power supply .</p>
---	---	--






2		Press  to enter the selection routine. The current selection will flash
3		Use  and  buttons to select the required system option: 1P2(W),3P3(W) ,3P4(W)
4		Press  to confirm the selection. SET indicator will appear.
5	Press  to exit the system selection routine and return to the menu. SET will disappear and you will be returned to the main Set-up Menu	

#### 4.5 Pulse output

This option allows you to configure the pulse output. The output can be set to provide a pulse for a defined amount of energy active or reactive.

Use this section to set up the relay pulse output—Units: kWh , kVArh

1		From the Set-up menu, use  and  buttons to select the Pulse output option.
2		Press  to enter the selection routine. The unit symbol will flash.










3		Use  and  buttons to choose kWh or kVArh.
4	On Completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.	

#### 4.5.1 Pulse rate

Use this to set the energy represented by each pulse. Rate can be set to 1 pulse per 0.01kWh/0.1kWh/1kWh/10kWh/100kWh.



(It shows 1 impulse = 10kWh/kVArh)




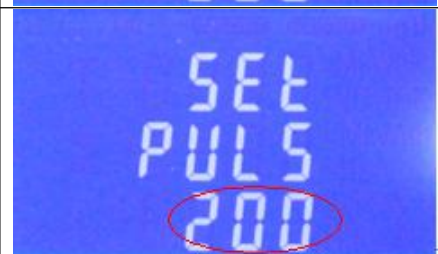





1		From the Set-up menu, use  and  buttons to select the Pulse Rate option.
2		Press  to enter the selection routine. The current setting will flash. 0.01/0.1/1/10/100kWh/kVArh per pulse
3	Use  and  buttons to choose pulse rate. On Completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.	

#### 4.5.2 Pulse Duration

The energy monitored can be active or reactive and the pulse width can be selected as 200, 100 or 60ms.



(It shows pulse width of 200ms)

1		<p>From the Set-up menu, use  and  buttons to select the Pulse width option.</p>
2		<p>Press  to enter the selection routine. The current setting will flash.</p>
3	<p>Use  and  buttons to choose pulse width. On Completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.</p>	

#### 4.6 Communication











There is a RS485 port can be used for communication using Modbus RTU protocol. For Modbus RTU, parameters are selected from Front panel.

##### 4.6.1 RS485 Address











(The range is from 0 to 247)

#### 4.6.2 Baud Rate

1		<p>From the Set-up menu, use  and  buttons to select the Baud Rate option.</p>
2		<p>Press  to enter the selection routine. The current setting will flash.</p>
3		<p>Use  and  buttons to choose Baud rate 2.4k, 4.8k, 9.6k, 19.2k, 38.4k</p>
4	<p>On Completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.</p>	

#### 4.6.3 Parity



1		<p>From the Set-up menu, use  and  buttons to select the Parity option.</p>
2		<p>Press  to enter the selection routine. The current setting will flash.</p>
3		<p>Use  and  buttons to choose Parity (EVEN / ODD / NONE)</p>

JIAXING EASTRON ELECTRONIC INSTRUMENTS CO.,LTD.











TEL:0086-573-83698881/83698882 FAX: 0086-573-83698883

Web: [www.eastrongroup.com](http://www.eastrongroup.com) Email: [sales@eastrongroup.com](mailto:sales@eastrongroup.com)

Add: No.1369, Chengnan Road, Nanhu District, Jiaxing City, Zhejiang, China 314001.






4	<p>On Completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.</p>
---	--

#### 4.6.4 Stop bits



1		<p>From the Set-up menu, use  and  buttons to select the Stop Bit option.</p>
2		<p>Press  to enter the selection routine. The current setting will flash.</p>
3		<p>Use  and  buttons to choose Stop Bit (2 or 1)</p>
4	<p>On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.</p>	



#### 4.7 CLR

The meter provides a function to reset the maximum demand value of current and power.

1		<p>From the Set-up menu, use  and  buttons to select the reset option.</p>
2		<p>Press  to enter the selection routine. The dlt will flash.</p>



3		
---	---	---

Press  to confirm the setting and press  to return to the main set up menu.

## 5 Specifications

### 5.1 Measured Parameters

The unit can monitor and display the following parameters of a single phase two wire(1p2w), three phase three wire(3p3w) or four phase four wire(3p4w) supply.

#### 5.1.1 Voltage and Current

Phase to neutral voltages 100 to 289V a.c. (not for 3p3w supplies)

Voltages between phases 173 to 500V a.c. (3p supplies only)

Percentage total voltage harmonic distortion (THD%) for each phase to N ( not for 3p3w supplies)

Percentage voltage THD% between phases (three phase supplies only)

Current THD% for each phase

#### 5.1.2 Power factor and Frequency and Max. Demand

Frequency in Hz

Instantaneous power:

Power 0 to 3600 MW

Reactive Power 0 to 3600 MVA

Volt-amps 0 to 3600 MVA

Maximum demanded power since last Demand reset Power factor

Maximum neutral demand current, since the last Demand reset (for three phase supplies only)

#### 5.1.3 Energy Measurements

Imported active energy 0 to 9999999.9 kWh

Exported active energy 0 to 9999999.9 kWh

Imported reactive energy 0 to 9999999.9 kVAh

Exported reactive energy 0 to 9999999.9 kVAh

Total active energy 0 to 9999999.9 kWh

Total reactive energy 0 to 9999999.9 kVAh

### 5.2 Measured Inputs

Voltage inputs through 4-way fixed connector with 2.5mm<sup>2</sup> stranded wire capacity. single phase two wire(1p2w), three phase three wire(3p3w) or four phase four wire(3p4w) unbalanced. Line frequency measured from L1 voltage or L3 voltage.

Three current inputs (six physical terminals) with 2.5mm<sup>2</sup> stranded wire capacity for connection of external CTs. Nominal rated input current 5A or 1A a.c. Rms.

### 5.3 Accuracy

Voltage 0.5% of range maximum

Current 0.5% of nominal

JIAXING EASTRON ELECTRONIC INSTRUMENTS CO.,LTD.

TEL:0086-573-83698881/83698882 FAX: 0086-573-83698883

Web: [www.eastrongroup.com](http://www.eastrongroup.com) Email: [sales@eastrongroup.com](mailto:sales@eastrongroup.com)

Add: No.1369. Chengnan Road, Nanhu District, Jiaxing City, Zhejiang, China 314001.

Frequency	0.2% of mid-frequency
Power factor	1% of unity (0.01)
Active power (W)	±1% of range maximum
Reactive power (VAr)	±2% of range maximum
Apparent power (VA)	±1% of range maximum
Active energy (Wh)	Class 1 IEC 62053-21
Reactive energy (VARh)	±2% of range maximum
Total harmonic distortion	1% up to 31st harmonic
Temperature co-efficient	Voltage and current = 0.013%/°C typical Active energy = 0.018%/°C, typical
Response time to step input	1s, typical, to >99% of final reading, at 50 Hz.

#### 5.4 Interfaces for External Monitoring

Three interfaces are provided:

- an RS-485 communication channel that can be programmed for Modbus RTU protocol
- an relay output indicating real-time measured energy.(configurable)
- An pulse output 1000Imp/kWh

The Modbus configuration (Baud rate etc.) and the pulse relay output assignments (kW/kVArh, import/export etc.) are configured through the Set-up screens.

##### 5.4.1 Pulse Relay Output

The pulse relay output can be set to generate pulses to represent kWh or kVArh.

**Rate** can be set to generate 1 pulse per:

0.01 = 10 Wh/VArh

0.1 = 100 Wh/VArh

1 = 1 kWh/kVArh

10 = 10 kWh/kVArh

100 = 100 kWh/kVArh

**Pulse width** 200/100/60 ms.

**Relay Rating** 240V ac 50mA

##### 5.4.2 RS485 Output for Modbus RTU

For Modbus RTU, the following RS485 communication parameters can be configured from the Set-up menu:

**Baud rate** 2400, 4800, ,9600, ,19200, 38400

**Parity** none/odd/even

**Stop bits** 1 or 2

**RS485 network address** *nnn* – 3-digit number, 1 to 247

**Modbus™ Word order** Hi/Lo byte order is set automatically to normal or reverse. It cannot be configured from the set-up menu.

### 5.5 Reference Conditions of Influence Quantities

Influence Quantities are variables that affect measurement errors to a minor degree. Accuracy is verified under nominal value (within the specified tolerance) of these conditions.

Ambient temperature	23°C ±1°C
Input waveform	50 or 60Hz ±2%
Input waveform	Sinusoidal (distortion factor < 0.005)
Auxiliary supply voltage	Nominal ±1%
Auxiliary supply frequency	Nominal ±1%
Auxiliary supply waveform (if AC)	Sinusoidal (distortion factor < 0.05)
Magnetic field of external origin	Terrestrial flux

### 5.6 Environment


Operating temperature	-25°C to +55°C*
Storage temperature	-40°C to +70°C*
Relative humidity	0 to 90%, non-condensing
Altitude	Up to 2000m
Warm up time	1 minute
Vibration	10Hz to 50Hz, IEC 60068-2-6, 2g
Shock	30g in 3 planes

\*Maximum operating and storage temperatures are in the context of typical daily and seasonal variation.

### 5.7 Mechanics

DIN rail dimensions	72 x 94.5 mm (WxH) per DIN 43880 (SDM630CT) 76 x 100 mm (WxH) per DIN 43880 (SDM630DC)
Mounting	DIN rail (DIN 43880)
Sealing	IP20 (minimum)
Material	Self-extinguishing UL 94 V-0

### 6 Dimensions

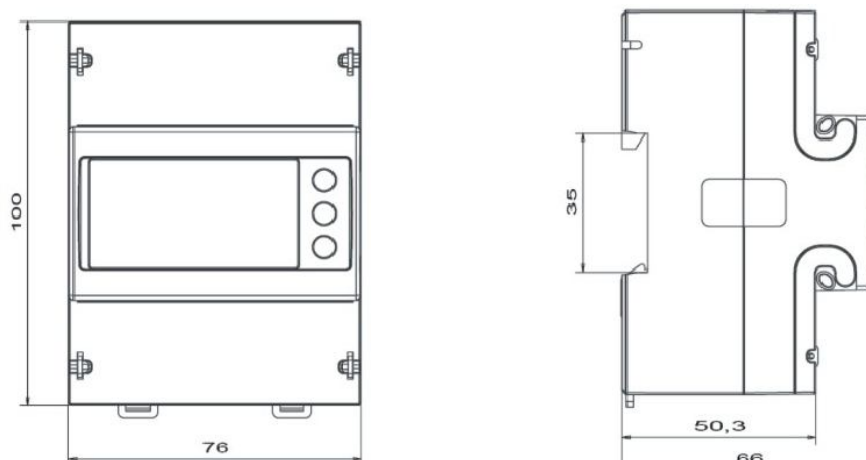

JIAXING EASTRON ELECTRONIC INSTRUMENTS CO.,LTD.


TEL:0086-573-83698881/83698882 FAX: 0086-573-83698883

Web: [www.eastrongroup.com](http://www.eastrongroup.com) Email: [sales@eastrongroup.com](mailto:sales@eastrongroup.com)


Add: No.1369, Chengnan Road, Nanhu District, Jiaxing City, Zhejiang, China 314001.

## 7. Installation


three phase four wires

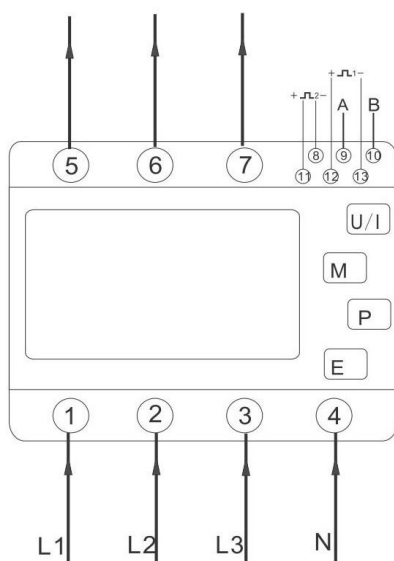

three phase three wires

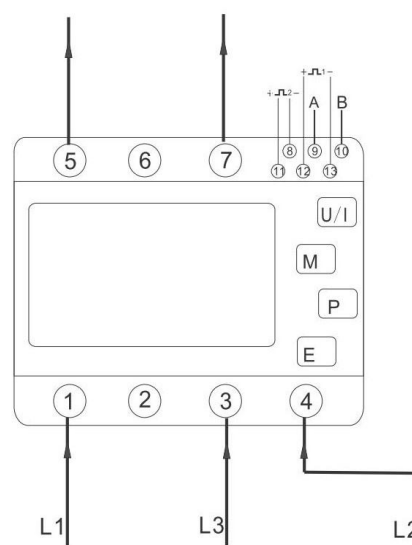

single phase two wires

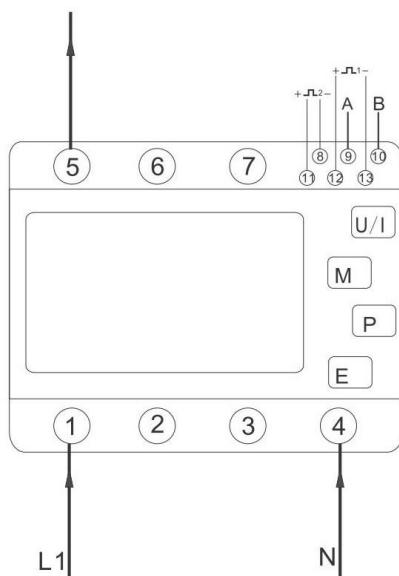

JIAXING EASTRON ELECTRONIC INSTRUMENTS CO.,LTD.

TEL:0086-573-83698881/83698882 FAX: 0086-573-83698883

Web: [www.eastrongroup.com](http://www.eastrongroup.com) Email: [sales@eastrongroup.com](mailto:sales@eastrongroup.com)

Add: No.1369. Chengnan Road, Nanhu District, Jiaxing City, Zhejiang, China 314001.