

# **OPERATION AND PARTS MANUAL**



## **DA7000 SERIES**

**60Hz AC Generators**

### **MODELS**

**DA7000SSA DA7000SS**

**DA7000SSW DA7000SSWGH**

**(KUBOTA DIESEL ENGINE)**

Revision #4 (08/07/09)

**THIS MANUAL MUST ACCOMPANY  
THE EQUIPMENT AT ALL TIMES.**



# WARNING



## **CALIFORNIA — Proposition 65 Warning**

Engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

## DA7000 SERIES GENERATORS — NOTE PAGE

[illegible]

# DA7000 SERIES GENERATORS — TABLE OF CONTENTS

## Multiquip DA7000 Series — 60Hz AC Generators

Proposition 65 Warning .....	2
Table Of Contents .....	3
Parts Ordering Procedures .....	5
Safety Message Alert Symbols .....	6-7
Rules For Safe Operation .....	8-12
Specifications .....	13
Dimensions .....	14
General Information .....	15
Load Application .....	16
Engine Components .....	17
Controls and Indicators .....	18-19
Generator Refueling .....	20
Installation .....	21
Installation (Grounding) .....	22
Inspection .....	23
Setup .....	24-26
Operating Instructions .....	27
Maintenance (Engine) .....	28-29
Preparation For Long Term Storage .....	29
Trailer Maintenance .....	30-31
Trailer Safety Guidelines .....	32-42
Tire Safety .....	42-46
Trailer Lights Wiring Diagram .....	47
Generator Wiring Diagram .....	48
Engine Wiring Diagram .....	49
Troubleshooting (Engine and Generator) .....	50-51
Troubleshooting (Engine) .....	52-53
Explanation Of Codes In Remarks Column .....	54
Suggested Spare Parts .....	55
Nameplate and Decals .....	56-57
Generator Assembly .....	58-59
Control Panel Assembly .....	60-61
Electric Parts Assembly .....	62-63
Engine and Radiator Assembly .....	64-67
Battery Assembly .....	68-69
Muffler Assembly .....	70-71
Fuel Tank Assembly .....	72-73
Oil Filter Retrofit Assembly .....	74-75
Enclosure Assembly .....	76-79
Rubber Seals Assembly .....	80-81

## Kubota Z482 Series Engines

Crankcase Assembly .....	82-83
Oil Pump Assembly .....	84-85
Oil Pan Assembly .....	86-87
Cylinder Head Assembly .....	88-89
Gear Case Assembly .....	90-91
Head Cover Assembly (DA7000SS) .....	92-93
Head Cover Assembly (DA7000SSW) .....	94-95
Oil Filter Assembly .....	96-97
Dipstick and Guide Assembly .....	98-99
Main Bearing Case Assembly .....	100-101
Camshaft and Idle Gear Shaft Assembly .....	102-103
Piston and Crankshaft Assembly .....	104-105
Flywheel Assembly .....	106-107
Fuel Camshaft and Governor Shaft Assy. ....	108-109
Engine Stop Lever Assembly .....	110-111
Stop Solenoid Assembly .....	112-113
Injection Pump Assembly .....	114-115
Injection Pump Components Assembly .....	116-117
Speed Control Plate Assembly .....	118-119
Nozzle Holder and Glow Plug Assembly .....	120-121
Nozzle Holder Assembly .....	122-123
Fork Lever Assembly .....	124-125
Fuel Filter Assembly .....	126-127
Fuel Pump Assembly .....	128-129
Dynamo and Pulley Assembly .....	130-131
Dynamo Assembly .....	132-133
Starter Assembly .....	134-135
Starter Components Assembly .....	136-137
Oil Switch Assembly .....	138-139
Water Flange and Thermostat Assembly .....	140-141
Water Pump Assembly .....	142-143
Water Pipe Assembly .....	144-145
Fan Assembly .....	146-147
Valve and Rocker Arm Assembly .....	148-149
Inlet Manifold Assembly .....	150-151
Exhaust Manifold Assembly .....	152-153
Glow Plug/Glow Lamp and Timer Assembly ..	154-155
Starter Switch Assembly .....	156-157
Air Cleaner Assembly .....	158-159
Accessories .....	160-161
Piston Kit (Option) .....	162-163
Terms and Conditions Of Sale — Parts .....	164

www.multiquip.com

**Ordering parts has never been easier!  
Choose from three easy options:**



**Order via Internet (Dealers Only):**

Order parts on-line using Multiquip's SmartEquip website!

- View Parts Diagrams
- Order Parts
- Print Specification Information



If you have an MQ Account, to obtain a Username and Password, E-mail us at: **parts@multiquip.com**.

To obtain an MQ Account, contact your District Sales Manager for more information.

Goto [www.multiquip.com](http://www.multiquip.com) and click on

**Order Parts** to log in and save!

Use the **internet** and qualify for a **5% Discount** on *Standard orders* for all orders which include complete part numbers.\*

Note: Discounts Are Subject To Change



**Order via Fax (Dealers Only):**

All customers are welcome to order parts via Fax.

**Domestic (US) Customers dial:**

1-800-6-PARTS-7 (800-672-7877)

**Fax** your order in and qualify for a **2% Discount** on *Standard orders* for all orders which include complete part numbers.\*

Note: Discounts Are Subject To Change



**Order via Phone: Domestic (US) Dealers Call:**  
1-800-427-1244

**Non-Dealer Customers:**

Contact your local Multiquip Dealer for parts or call 800-427-1244 for help in locating a dealer near you.




**International Customers** should contact their local Multiquip Representatives for Parts Ordering information.

**When ordering parts, please supply:**

- ☐ Dealer Account Number
- ☐ Dealer Name and Address
- ☐ Shipping Address (if different than billing address)
- ☐ Return Fax Number
- ☐ Applicable Model Number
- ☐ Quantity, Part Number and Description of Each Part

☐ **Specify Preferred Method of Shipment:**

- |  |       |
|--|-------|
| <input checked="" type="checkbox"/> UPS/Fed Ex | DHL   |
| Priority One                                   | Truck |
| Ground   |       |
| Next Day                                       |       |
| Second/Third Day                               |       |

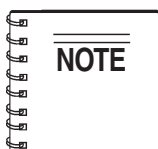

All orders are treated as *Standard Orders* and will ship the same day if received prior to 3PM PST.


**WE ACCEPT ALL MAJOR CREDIT CARDS!**



# DA7000 SERIES GENERATORS — SAFETY MESSAGE ALERT SYMBOLS

## FOR YOUR SAFETY AND THE SAFETY OF OTHERS!

Safety precautions should be followed at all times when operating this equipment. Failure to read and understand the Safety Messages and Operating Instructions could result in injury to yourself and others.

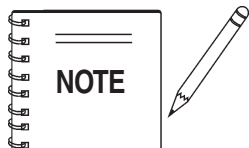

This Owner's Manual has been developed to provide complete instructions for the safe and efficient operation of the **MQ Model DA7000 Series Generators**. Refer to the engine manufacturers instructions for data relative to its safe operation.

**Before using these generators, ensure that the operating individual has read and understands all instructions in this manual.**

## SAFETY MESSAGE ALERT SYMBOLS

The three (3) Safety Messages shown below will inform you about potential hazards that could injure you or others. The Safety Messages specifically address the level of exposure to the operator, and are preceded by one of three words: **DANGER**, **WARNING**, or **CAUTION**.

### DANGER

You **WILL** be **KILLED** or **SERIOUSLY** injured if you do not follow directions.

### WARNING

You **COULD** be **KILLED** or **SERIOUSLY** injured if you do not follow directions.

### CAUTION

You **CAN** be injured if you do not follow directions

## HAZARD SYMBOLS

Potential hazards associated with the operation of this equipment will be referenced with "**Hazard Symbols**" which appear throughout this manual, and will be referenced in conjunction with Safety "**Message Alert Symbols**".

### WARNING - LETHAL EXHAUST GASES



Engine fuel exhaust gases contain poisonous carbon monoxide. This gas is colorless and odorless, and can cause **DEATH** if inhaled. **NEVER** operate this equipment in a confined area or enclosed structure that does not provide ample free flow air.

### WARNING - EXPLOSIVE FUEL



**Diesel fuel** is extremely flammable, and its vapors can cause an explosion if ignited. **DO NOT** start the engine near spilled fuel or combustible fluids. **DO NOT** fill the fuel tank while the engine is running or hot.

**DO NOT** overfill tank, since spilled fuel could ignite if it comes into contact with hot engine parts or sparks from the ignition system. Store fuel in approved containers, in well-ventilated areas and away from sparks and flames. **NEVER** use fuel as a cleaning agent.

### WARNING - BURN HAZARDS



Engine components can generate extreme heat. To prevent burns, **DO NOT** touch these areas while the engine is running or immediately after operations. **NEVER** operate the engine with heat shields or heat guards removed.

### DANGER - ELECTROCUTION HAZARDS

During operation of this generator, there exists the possibility of **electrocution, electrical shock or burn**, which can cause **severe bodily harm** or even **DEATH!**



## DA7000 SERIES GENERATORS — SAFETY MESSAGE ALERT SYMBOLS

### WARNING - ROTATING PARTS



**NEVER** operate equipment with covers, or guards removed. Keep **fingers, hands, hair** and clothing away from all moving parts to prevent injury.

### CAUTION - RESPIRATORY HAZARDS



**ALWAYS** wear approved **respiratory** protection.

### CAUTION - ACCIDENTAL STARTING



**ALWAYS** place the **IGNITION** switch key in the **OFF** position when the generator is not in use, and remove key.

### CAUTION - SIGHT AND HEARING HAZARDS



**ALWAYS** wear approved **eye** and **hearing** protection.


### CAUTION - OVER-SPEED CONDITIONS



**NEVER** tamper with the factory settings of the engine governor or settings. Personal injury and damage to the engine or equipment can result if operating in speed ranges above maximum allowable.

### CAUTION - EQUIPMENT DAMAGE MESSAGES

Other important messages are provided throughout this manual to help prevent damage to your generator, other property, or the surrounding environment.

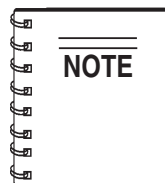

This generator, other property, or the surrounding environment could be damaged if you do not follow instructions.

### CAUTION - ENGINE LOAD (WET-STACKING)

Wet-Stacking is a common problem with diesel engines which are operated for extended periods with light or no load applied. When a diesel engine operates without sufficient load (less than 40% of the rated output) it will not operate at its optimum temperature. This will allow unburned fuel to accumulate in the exhaust system, which can foul the fuel injectors, engine valves and exhaust system, including turbocharges, and reduce the operating performance.

In order for a diesel engine to operate at peak efficiency it must be able to provide fuel and air in the proper ratio and at a high enough engine temperature for the engine to completely burn all of the fuel.

Wet stacking does usually cause any permanent damage and can be alleviated if additional load is applied to relieve the condition. It can reduce the system performance and increase maintenance. Applying an increasing load over a period of time until the excess fuel is burned off and the system capacity is reached usually can repair the condition. This can take several hours to burn off the accumulated unburned fuel.



# DA7000 SERIES GENERATORS — RULES FOR SAFE OPERATION

## CAUTION - READ MANUAL

Failure to follow instructions in this manual may lead to serious injury or even death! This equipment is to be operated by trained and qualified personnel only! This equipment is for industrial use only.

The following safety guidelines should always be used when operating the DA7000 series generators:

### General Safety

- **DO NOT** operate or service this equipment before reading this entire manual.



- This equipment should not be operated by persons under 18 years of age.
- **NEVER** operate this equipment without proper protective clothing, shatterproof glasses, steel-toed boots and other protective devices required by the job.



**NEVER** operate this equipment when not feeling well due to fatigue, illness or taking medicine.



- **NEVER** operate this equipment under the influence of **drugs** or **alcohol**.



- **ALWAYS** wear proper respiratory (mask), hearing and eye protection equipment when operating the generator.




Whenever necessary, replace nameplate, operation and safety decals when they become difficult read.

Manufacturer does not assume responsibility for any accident due to equipment modifications.

**NEVER** use accessories or attachments, which are not recommended by Multiquip for this equipment. Damage to the equipment and/or injury to user may result.

- **NEVER** touch the hot exhaust manifold, muffler or cylinder. Allow these parts to cool before servicing engine or generators.

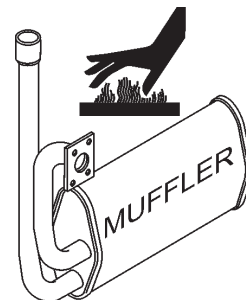

- The engine section of this generators requires an adequate free flow of cooling air. **NEVER** operate the generators in any enclosed or narrow area where free flow of the air is restricted. If the air flow is restricted it will cause serious damage to the generators or engine and may cause injury to people. Remember the generator's engine gives off **DEADLY** carbon monoxide gas.




**ALWAYS** refuel in a well-ventilated area, away from sparks and open flames.

**ALWAYS** use extreme caution when working with **flammable** liquids. When refueling, **stop the engine** and allow it to cool. **DO NOT smoke** around or near the machine. Fire or explosion could result from fuel vapors, or if fuel is spilled on a hot engine.



**NEVER** operate the generators in an explosive atmosphere or near combustible materials. An explosion or fire could result causing severe **bodily harm or even death**.

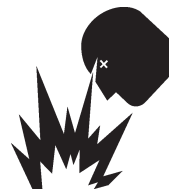

- **NEVER** disconnect any "**emergency or safety devices**". These devices are intended for operator safety. Disconnection of these devices can cause severe injury, bodily harm or even death! Disconnection of any of these devices will void all warranties.



# DA7000 SERIES GENERATORS — RULES FOR SAFE OPERATION

■ **ALWAYS** be sure the operator is familiar with proper safety precautions and operation techniques before using generators.

**NEVER** leave the generators unattended, turn off engine when unattended.

Unauthorized equipment modifications will void all warranties.

**ALWAYS** ensure generator is on level ground before use.

**DO NOT** place hands or fingers inside generators engine compartment when engine is running.

**NEVER** run engine without air cleaner. Severe engine damage may occur.

**NEVER** change or adjust the engine speed which has been set at the factory prior to shipping.

## Power Cord Safety

**NEVER** let power cables or cords *lay in water*.

**NEVER stand in water** while AC power from the generators is being transfer to a load.

**NEVER** use a defective or frayed power cable. Check the cable for cuts in the insulation.

**NEVER** use a extension cord that is frayed or damaged where the insulation has been cut.

**ALWAYS** make certain that proper power or extension cord has been selected for the job See Table 4.

## Grounding Safety

**ALWAYS** make sure that electrical circuits are properly **grounded** per the **National Electrical Code** (NEC) and local codes before operating generator. Severe **injury** or **death!** by electrocution can result from operating an ungrounded generator.

**ALWAYS** make sure the generators are properly grounded to a suitable earth ground (**GROUND ROD**). See installation in this manual.

**NEVER** use **gas piping** as an electrical ground.

## Maintenance Safety

**NEVER** lubricate components or attempt service on a running machine.

**High Temperatures** – Always stop engine and allow the engine to cool before adding fuel, oil or performing service and maintenance functions. Contact with **hot!** components can cause serious burns.



Keep the machinery in proper running condition.

Fix damage to the machine immediately and replace any broken parts immediately.

**ALWAYS** replace any worn or damaged warning decals.

**ALWAYS** store equipment properly when it is not being used. Equipment should be stored in a clean, dry location out of the reach of children and un-authorized personnel.

The electrical voltage required to operate the generators can cause severe injury or even death through physical contact with live circuits. Turn all circuit breakers **OFF** before performing maintenance on the generator.

Dispose of hazardous waste properly. Examples of potentially hazardous waste are used motor oil, fuel and fuel filters.

**DO NOT** use food or plastic containers to dispose of hazardous waste.

**DO NOT** pour waste, oil or fuel directly onto the ground, down a drain or into any water source.

**ALWAYS** allow the machine a proper amount of time to cool before servicing.

**ALWAYS** service air cleaner frequently to prevent engine malfunction.

**ALWAYS** disconnect the **NEGATIVE battery terminal** before performing service on the generator.

Follow all battery safety guidelines listed in this manual when handling or servicing the generator.

# DA7000 SERIES GENERATORS — RULES FOR SAFE OPERATION

## WARNING - BURN HAZARDS

To prevent burns, **DO NOT** touch or open any of the below mentioned components while the engine is running or immediately after operations. Always allow sufficient time for the engine and generator to cool before performing maintenance.



**Radiator Cap** - Removing the radiator cap while the engine is hot will result in high pressurized, boiling water to gush out of the radiator, causing severe scalding to any persons in the general area of the generator.

**Coolant Drain Plug** - Removing the coolant drain plug while the engine is hot will result in hot coolant gushing out of the coolant drain plug, therefore causing severe scalding to any persons in the general area of the generator.



**Engine Oil Drain Plug** - Removing the engine oil drain plug while the engine is hot will result in hot oil gushing out of the oil drain plug, therefore causing severe scalding to any persons in the general area of the generator.

## Battery Safety

Use the following guidelines when handling the battery:

The battery contains acids that can cause injury to the eyes and skin. To avoid eye irritation, **always** wear safety glasses.



Use well insulated gloves when picking up the battery.

## DANGER - EXPLOSION HAZARDS

The risk of an explosion exists when performing service on the battery. To avoid **severe injury** or **DEATH**:

**DO NOT** drop the battery. There is the possibility of risk that the battery may explode.

**DO NOT** expose the battery to open flames, sparks, cigarettes etc. The battery contains combustible gases and liquids. If these gases and liquids come in contact with a flame or spark, an explosion could occur.



- **ALWAYS** keep the battery charged. If the battery is not charged a buildup of combustible gas will occur.

**ALWAYS** keep battery charging and cables in good working condition. Repair or replace all worn cables.

**ALWAYS** recharge the battery in an vented air environment, to avoid risk of a dangerous concentration of combustible gases.

In case the battery liquid (dilute sulfuric acid) comes in contact with **clothing or skin**, rinse skin or clothing immediately with plenty of water.

In case the battery liquid (dilute sulfuric acid) comes in contact with your **EYES**, rinse eyes immediately with plenty of water and contact the nearest doctor or hospital to seek medical attention.

# DA7000 SERIES GENERATORS — RULES FOR SAFE OPERATION


## **DANGER-Electrocution Hazards**

During operation of this generation, there exists the possibility of **electrocution, electrical shock or burn**, which can cause **severe bodily harm** or even **DEATH!**


To avoid these hazards:

**NEVER** use **damaged** or **worn** cables when connecting equipment to the generator. Make sure power connecting cables are securely connected to the generator's output receptacles, incorrect connections may cause damage to the generators and electrical shock.


**NEVER** grab or touch a live power cord with wet hands, the possibility exist of electrical shock, electrocution, and even **death!**

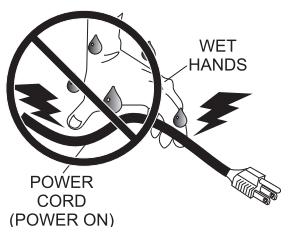

**NEVER** insert any objects into the output receptacles during operation. This is extremely dangerous. **ALWAYS** turn-off the generators and place all circuit breakers in the "OFF" position when contact with the output receptacles is required. There exist the possibility of **electrocution, electrical shock or burn, which can cause severe bodily harm or even death!**

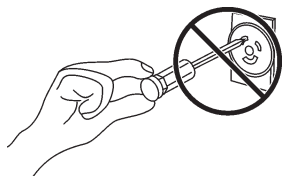


Backfeed to a utility system can cause **electrocution** and or property damage. **NEVER** connect the generators to a building's electrical system without a transfer switch or other approved device. All installations should be performed by a **licensed electrician** in accordance with all applicable laws and electrical codes. Failure to do so could result in electrical shock or burn causing serious injury or even death!

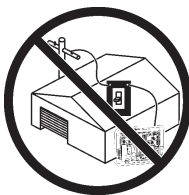

## **DANGER-Lethal Exhaust Gas Hazards**



Engine exhaust gases contain poisonous carbon monoxide. This gas is colorless and odorless, and can cause death if inhaled. **NEVER** operate this equipment in a confined area or enclosed structure that does not provide ample free flow air.



 **DANGER**

Using a generator indoors **CAN KILL YOU IN MINUTES.**

Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell

 <b>NEVER</b> use inside a home or garage, even if doors and windows are open	 Only use <b>OUTSIDE</b> and far away from windows, doors, and vents.
--	---

Avoid other generator hazards.  
**READ MANUAL BEFORE USE.**

## Emergencies

**ALWAYS** know the location of the nearest **fire extinguisher**.



**ALWAYS** know the location of the nearest **first aid kit**.



In emergencies **always** know the location of the nearest phone or **keep a phone on the job site**. Also know the phone numbers of the nearest **ambulance, doctor** and **fire department**. This information will be invaluable in the case of an emergency.



# DA7000 SERIES GENERATORS — RULES FOR SAFE OPERATION



If your generator is trailer mounted, please read the towing and safety requirements listed below.

## Towing and Transporting Safety

To reduce the possibility of an accident while transporting the generator on public roads, always make sure the trailer that supports the generator and the towing vehicle are in good operating condition and both units are mechanically sound.

The following list of safety precautions should be followed when towing your generator:

### CAUTION - FOLLOW TOWING REGULATIONS

Check with your local county or state safety towing regulations, in addition to meeting **Department of Transportation (DOT) Safety Towing Regulations**, before towing your generator.

**ALWAYS** shutdown engine before transporting.

Drain fuel from generator fuel tank before towing.

If generator is mounted on a trailer, make sure trailer complies with all local and state safety transportation laws. Follow the listed **Towing & Transporting Safety** guidelines for basic towing techniques.

Make sure the hitch and coupling of the towing vehicle are rated equal to, or greater than the trailer "gross vehicle weight rating."

**ALWAYS** inspect the hitch and coupling for wear. **NEVER** tow a trailer with defective hitches, couplings, chains etc.

Check the tire air pressure on both towing vehicle and trailer. **Trailer tires should be inflated to 50 psi cold.** Also check the tire tread wear on both vehicles.

**ALWAYS** make sure the trailer is equipped with a "Safety Chain".

**ALWAYS** attach trailer's safety chains to towing vehicle properly.

**ALWAYS** make sure the vehicle and trailer directional, backup, brake, and trailer lights are connected and working properly.

DOT Requirements include the following:

- Connect and test electric brake operation.
- Secure portable power cables in cable tray with tie wraps.

The maximum speed for highway towing is **55 MPH** unless posted otherwise. Recommended off-road towing is not to exceed **15 MPH** or less depending on type of terrain.

Place **chock blocks** underneath wheel to prevent **rolling**, while parked.

Use the trailer's swivel jack to adjust the trailer height to a level position while parked.

Avoid sudden stops and starts. This can cause skidding, or jack-knifing. Smooth, gradual starts and stops will improve towing.

Avoid sharp turns.

Trailer should be adjusted to a level position at all times when towing.

Raise and lock trailer wheel stand in up position when transporting.

The maximum speed for highway towing is **55 MPH** unless posted otherwise. Recommended off-road towing is not to exceed **15 MPH** or less depending on type of terrain.

Place **support blocks** underneath the trailer's bumper to prevent **tipping**, while parked.

Avoid sharp turns to prevent rolling.

**DO NOT** transport generator with fuel in tank.



For more safety tips, see the trailer safety guidelines section in this manual.

# DA7000 SERIES GENERATORS — SPECIFICATIONS

**Table 1. Specifications (Generator)**

<b>AC Generator</b>	Model	DA7000SS/SSW/SSA
	Type	2-Pole Brushless Revolving Field Type
	Excitation	Solid State, Statically Excited System
	Speed	3,600 RPM
	Cooling System	Self-Ventilation
<b>60 Cycle AC Power Source</b>	Standby Output	7 KW
	Prime Output (Continuous)	6 KW
	Rated Voltage	120/240V
	Phase	Single Phase (3 wire)
	Frequency	60 Hz
	Power Factor	1.0
<b>Dimensions (L x W x H)</b>	44.9 x 25.6 X 31.3 in. (1,140 X 650 X 795 mm)	
<b>Dry Net Weight</b>	526 lbs. (239 kg.)	

**Table 2. Specifications (Engine)**

<b>Engine</b>	<b>Model</b>	KUBOTA Z-482-EB/ Z-482-E2B-DGDE-2 Z-482-E3B-DGDE-2
	Type	Vertical, water-cooled, 4-cycle diesel engine
	Bore X Stroke	2.64 in. X 2.68 in. (67 mm x 68 mm.)
	Displacement	29.23 cu.-in. (479 cm <sup>3</sup> )
	Number of Cylinders	2
	Max Output	12.5 H.P./3600 R.P.M.
	Fuel	#2 Diesel Fuel
	Fuel Tank Capacity	6.6 gal./25 liters
	Fuel Consumption	.7 gals. (2.63 liters)/hr.
	Lube Oil Capacity	2.64 quarts (2.5 liters)
	Coolant Capacity	2.95 quarts (2.8 liters)
	Battery	12V-35Ah
	Starting Method	Electric Start

The maximum output of the engine listed above is applicable to supplying electrical power for continuous service at ambient conditions in accordance with SAE Test cord J607. The above ambient conditions are at standard sea level, with a barometric reading of 29.92 inches and a temperature of 60 degrees Fahrenheit.

Generally, the engine output power will decrease 3 1/2% for each 1000 feet of altitude above sea level, and 1% for each 10° F Fahrenheit above the standard temperature of 60° F .

# DA7000 SERIES GENERATORS — DIMENSIONS


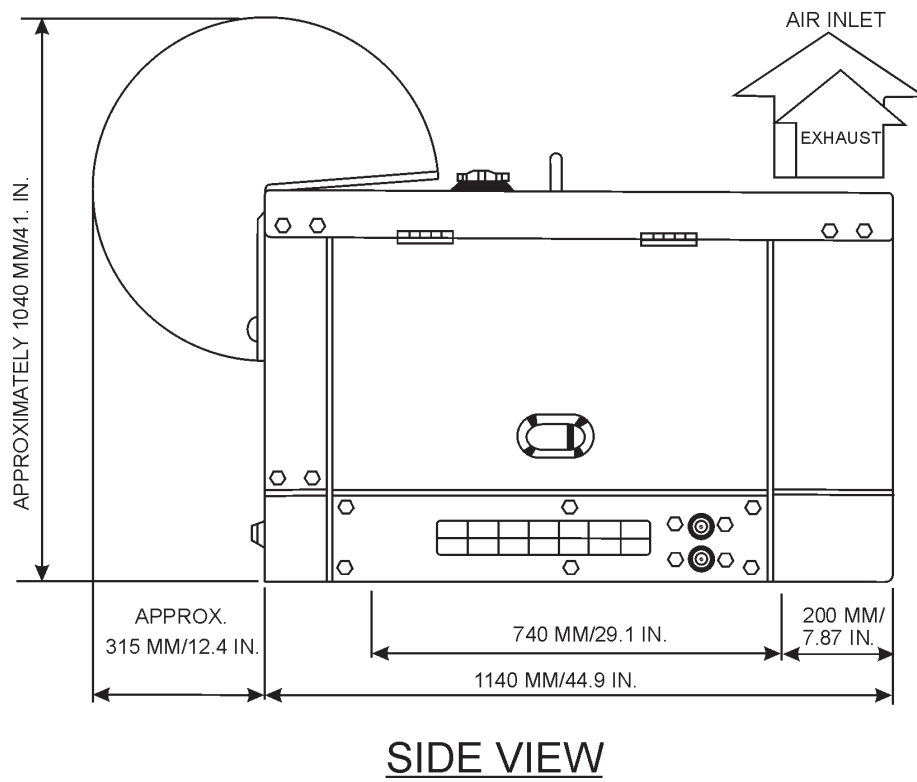


Figure 1. DA7000SS/SSW Dimensions

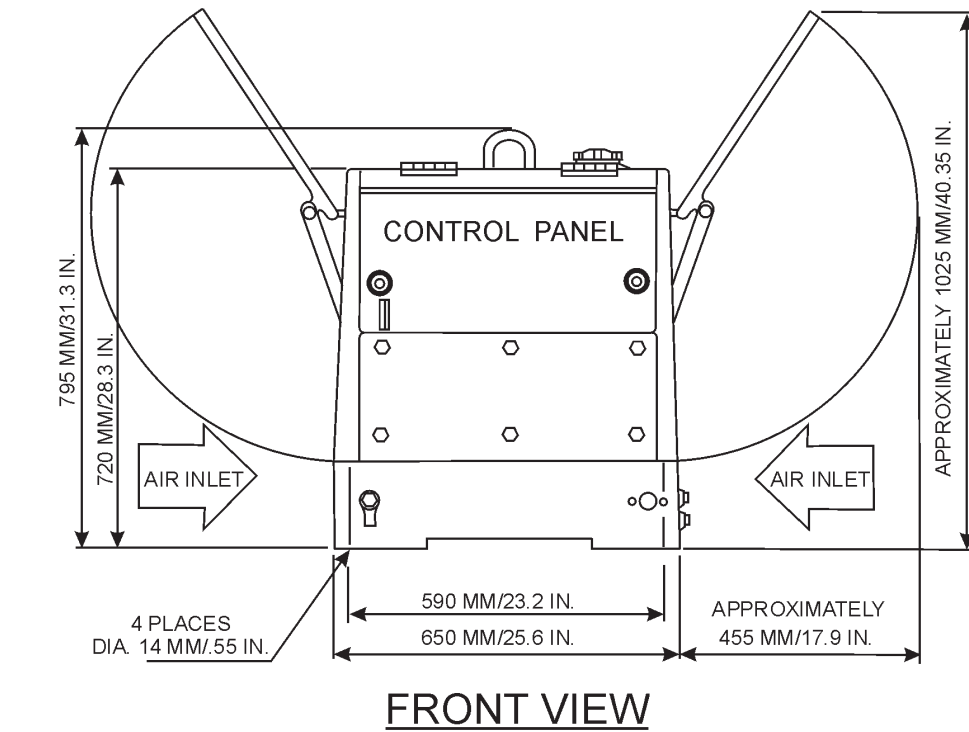

# DA7000 SERIES GENERATORS — GENERAL INFORMATION

## DA7000 Series Familiarization

### Generator

The MQ, Model DA7000 series generators are 6.0 kW (continuous output), 7.0 kW (max output) A.C. generators. Reference Table 1, generator specifications.

### Control Panel

The **control panel** is provided with the following:

- One GFCI 120 volt receptacle, 20 amp (single-phase)
- One 125 volt receptacle, 30 amp (single-phase)
- One 125/250 volt receptacle, 50 amp (single-phase)
- One 125/250 volt receptacle, 30 amp (single-phase)
- AC Voltmeter
- Main Circuit Breaker 265V @25 Amps
- Circuit Protector Breaker (GFCI) 120V @20 Amps
- Idle Control Switch
- Starter Switch
- Warning Lamp Unit
- Hour Meter
- Ground Terminal

### Engine Protection System

Engine protection fail safe features are provided in the event of low oil pressure, high coolant temperature and failure of the battery to charge. If any of the above conditions occur while operating the generator it will cause a complete unit shut down.

### Battery Charge Alarm

This unit is equipped with a protective device that signals an alarm and automatically stops the engine when the battery cannot be charged by the alternator

### Water Temperature Alarm

This unit is equipped with an apparatus that signals an alarm and automatically stops the engine when the cooling water temperature becomes abnormally high. This apparatus will not function properly if the machine is operated with less than the proper amount of coolant.

### Oil Pressure Warning Alarm

This unit is equipped with a protective device that detects low oil pressure. If the lubricating oil pressure of this unit should become abnormally low, the protective device will automatically stop the engine. If this condition should occur, please refer to the engine troubleshooting table in this manual.

### Idle Control Switch

The DA7000 series generators are provided with an automatic idle (engine) control capability for noise suppression and fuel cost reduction. The automatic idle control feature automatically engages under a no-load condition.

When the Idle Control Switch is placed in the "ON" position, the engine revolutions will be approximately 2200 rpm (low-speed operation). When a load is connected to one of the output receptacles, the engine speed will automatically increase to about 3600 rpm (high-speed operation). Conversely, when the load is removed, the engine speed will automatically drop back down to 2200 rpm within 10 seconds.

With AC loads of more than 150W (such as lighting equipment, motor-powered tools, submersible water pumps, etc.), the engine runs at high speed. When a no load condition is produced, the engine automatically slows down.

Turn the idle control switch to the "ON" (up) position when AC loads of more than 150W are connected. Turn the idle control switch to the "OFF" (down) position when AC loads of less than 100W or when a magnetic switch is used.

### Excitation System

The DA7000 series generators use a brushless exciter to create rated output electricity. This system will use the mechanical energy generated by the 3600 RPM engine to spin the rotor (or armature) inside the generator (or alternator end).

Excitation current is sourced from the battery to the excitation winding in the stator. Current applied to this coil creates a magnetic field. The rotating armature is induced with AC current.

### Engine

The DA7000 series generators are powered by a water-cooled, 4-cycle KUBOTA **diesel** engine. This engine is designed to meet every performance requirement of the generator. Reference Table 2, engine specifications.

In keeping with Multiquip's policy of constantly improving its products, the specifications quoted herein are subject to change without prior notice.

Figures 3 and 4 show the basic controls and indicators for the DA7000 series generators.




# DA7000 SERIES GENERATORS — LOAD APPLICATION

## Single Phase Load — 60 Hz

Always be sure to check the nameplate on the generators and equipment to insure the wattage, amperage and frequency requirements are satisfactorily supplied by the generators for operating the equipment.

Generally, the wattage listed on the nameplate of the equipment is its rated output. Equipment may require 130—150% more wattage than the rating on the nameplate, as the wattage is influenced by the efficiency, power factor and starting system of the equipment.

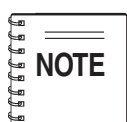


If wattage is not given on the equipment's name plate, approximate wattage may be determined by multiplying nameplate voltage by the nameplate amperage.

$$\text{WATTS} = \text{VOLTAGE} \times \text{AMPERAGE}$$


The power factor of this generators is 1.0 See Table 3 below when connecting loads.

Table 3. Power Factor By Load

Type Of Load	Power Factor
Single-phase induction motors	0.4 - 0.75
Electric heaters, incandescent lamps	1.0
Fluorescent lamps, mercury lamps	0.4 - 0.9
Electronic devices, communication equipment	1.0
Common power tools	0.8

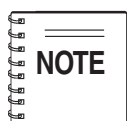

When using a combination of dual receptacles, total load **should not exceed** the rated capacity of the generator.

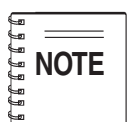

When connecting power tools or equipment pay close attention to the required starting current capacity.



## DANGER - ELECTRICAL SYSTEM HAZARDS

Before connecting this generator to any building's electrical system, a **licensed electrician** must install an **isolation (transfer) switch**. Serious damage to the building's electrical system may occur without this transfer switch.

To determine the running wattage for your load, multiply the running wattage as indicated by steps 1, 2, and 3 below:

- INCANDESCENT LOADS**  
Lights, heaters and similar appliances.  
Total the running wattage and multiply by 1.  
Example:  
29 light bulbs @ 100W each = 2.9 KW  
use a 3 KW generator.
- SMALL MOTORS**  
Drills and other small power tools.  
Total the running wattage and multiply by 2.  
Example:  
A 1 inch drill runs at 1 KW  
use a 2 KW generator.
- LARGE MOTORS**  
Submersible pumps, table saws etc.  
Total the running wattage and multiply by 3.  
Example:  
A conveyor belt runs at 8 KW  
use a 24 KW generator.




## CAUTION - EXTENSION CABLE SIZE

Motors and motor-driven equipment draw much greater current for starting than during operation. **Always** use an adequate size **extension cable** which can carry the required load.


## Extension Cables

When electric power is to be provided to various tools or loads at some **distance** from the generator, extension cords are normally used. **Cables should be sized to allow for distance in length and amperage so that the voltage drop between the generators and point of use (load) is held to a minimum.** Use the cable selection chart (Table 4) as a guide for selecting proper cable size.

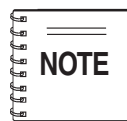

The idle control device is operated at a minimum load capacity of 100W. If the load capacity is less than 100W, place the idle control switch in the **OFF** position.

# DA7000 SERIES GENERATORS — ENGINE COMPONENTS

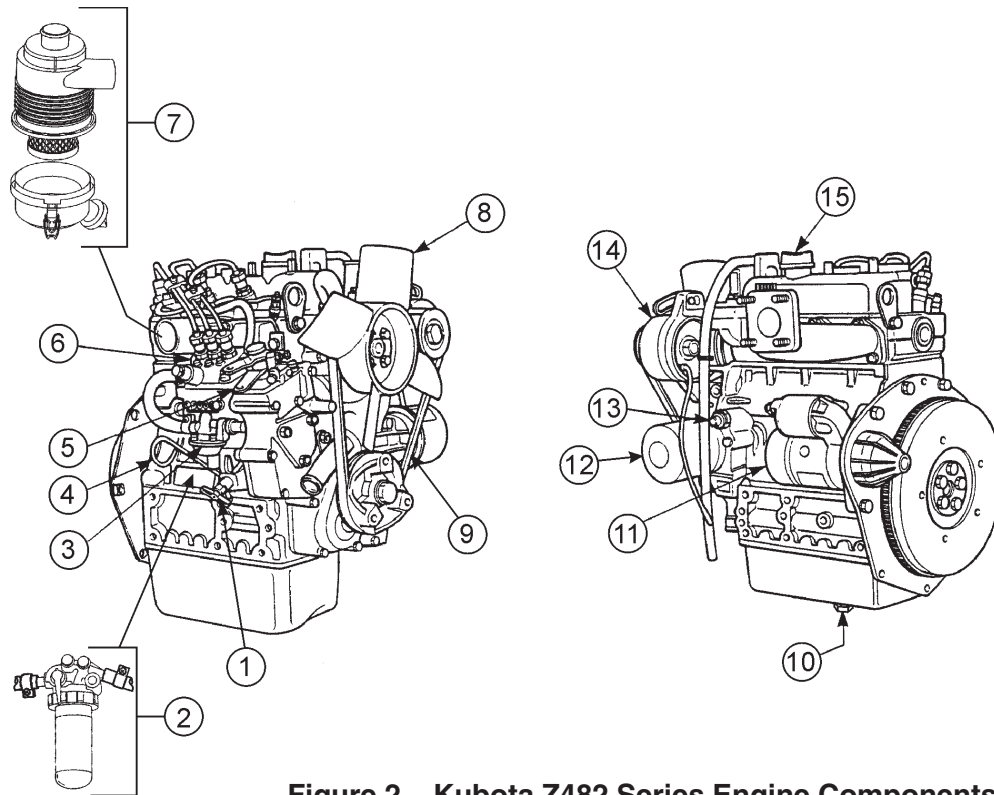

**Figure 2. Kubota Z482 Series Engine Components**

## INITIAL SERVICING

The engine (Figure 2) must be checked for proper lubrication and filled with fuel prior to operation. Refer to the manufacturer's engine manual for instructions and details of operation and servicing.

1. **Water Drain Cock** – Open this cock to drain water
2. **Fuel Filter** – Prevents dirt and other debris from entering the fuel system. Replace filter as recommended in the maintenance section of this manual.
3. **Fuel Feed Pump** – Pumps fuel to the injection system.
4. **Oil Dip Stick /Gauge**– Remove to check amount and condition of oil in crankcase. Refill or replace with recommended type oil as listed in Table 5.
5. **Speed Control Lever** – Controls engine speed. This lever is factory set. **DO NOT** adjust this lever.
6. **Injector Pump**– Provides fuel under pressure to the injector nozzles.
7. **Air Filter** – Prevents dirt and other debris from entering the fuel system. Loosen clips on side of air filter canister to gain access to filter element. Replace with only manufacturer's recommended type air cleaner.
8. **Cooling Fan Blades** – Make sure cooling fan blades are not **bent or broken**. A damaged fan blade can cause the engine to run hot and overheat.
9. **Fan V-Belt** – **ALWAYS** make sure V-belt is properly tensioned. A loose or defective V-belt can adversely affect the performance of the generator.
10. **Oil Drain Plug/Crankcase** – Remove to drain crankcase oil. Fill with recommended type oil as listed in Table 4. Crankcase holds a maximum of 2.64 quarts (2.5 liters) of motor oil.
11. **Starter** – Starts engine when ignition key is rotated to the "ON" position
12. **Oil Filter** – Spin-on type, filters oil contaminants. Replace filter as recommended in the maintenance section of this manual.
13. **Oil Pressure Switch** – Monitors engine oil pressure. In the event of low oil pressure engine will shutdown.
14. **Alternator** – Provides power to the +12VDC electrical system. Replace with only manufacturer's recommended type alternator.
15. **Oil Filler Cap** – Fill with recommended type oil as listed in Table 5.

# DA7000 SERIES GENERATORS — CONTROLS AND INDICATORS

Figures 3 and 4 show the location of the controls and indicators. The functions of each control or indicator is described below and on the preceding page.

1. **Fuel Gauge** – Indicates the amount of fuel in the fuel tank.
2. **Air Outlet Exhaust** – Allows engine exhaust to exit the generator into the open air. **NEVER** block this opening.
3. **Fuel Cap** – Remove this cap to add fuel. Add only #2 Diesel Fuel. Always keep an adequate amount of fuel in the tank. **DO NOT** top off. Wipe up any spilled fuel immediately.
4. **Lifting Hook** – Use this hook to lift the generator.
5. **Engine Air Cleaner** – Prevents dirt and other debris from entering the fuel system. Lift locking latch on air filter canister to gain access to filter element.
6. **Overflow Bottle** – Supplies coolant to the radiator when radiator coolant level is low. Fill to indicated level as shown on bottle.
7. **Engine Oil Filler Port** – Remove this cap to add engine oil. Use only recommended type oil. See Table 5.
8. **Coolant Drain Plug** – Remove this plug to drain coolant from the radiator.
9. **Oil Drain Plug** – Remove this plug to drain oil from the engine.
10. **Automatic Speed Control Solenoid** – Automatically regulates engine speed.
11. **Battery Terminals** – Connect these terminals to the battery. Always pay close attention to the polarity of the terminals when connecting to the battery, RED (positive), and BLACK (negative).
12. **Fuel Filter** – Prevents dirt and other debris from entering the fuel system. Change fuel filter as recommended in the maintenance section of this manual.
13. **Air Inlet Vent** – Allows outside air to enter the generator. **NEVER** block this opening.
14. **Battery** – Provides +12 VDC power for the generator. When replacing battery (12V 35 AH) use only recommended type battery.
15. **G.F.C.I Ground Terminal** – Use this terminal to connect external equipment grounds so that the GFCI receptacle will have a ground path.
16. **Fuel Tank** – Holds 6.6 gallons (25 liters) of diesel fuel.

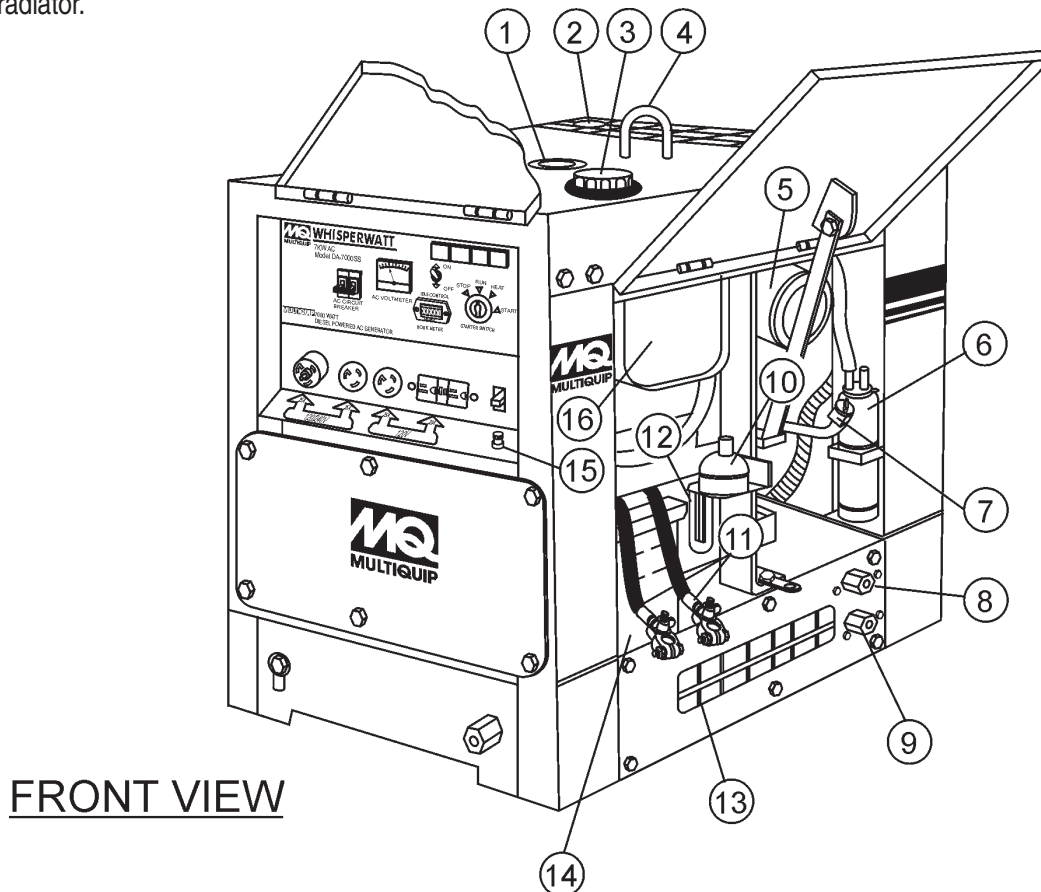


Figure 3. DA7000SS/SSW Components

## DA7000 SERIES GENERATORS — CONTROLS AND INDICATORS

17. **Fuel drain Plug** – Remove this plug to drain fuel from the fuel tank.
18. **Frame Ground Lug** – Connect a ground strap between this lug and a ground rod. Make sure that the ground rod is inserted deep into the ground to provide a good earth ground. Consult with local Electrical and Safety Codes for proper connection.
19. **Receptacle** – Provides 120/240 volts output at 50 amps.
20. **Receptacle** – Provides 120/240 volts output at 30 amps.
21. **Receptacle** – Provides 120 volts output at 30 amps.
22. **Receptacle G.F.C.I.** – This receptacle provides 120 volts output at 20 amps.
23. **Circuit Protector Circuit Breaker** – This single pole circuit breaker provides circuit protection (250V @25 amps) for the G.F.C.I receptacle.
24. **Main Circuit Breaker** – This 2-pole circuit breaker provides circuit protection (265V @25 amps) for the Electric Parts Assembly.
25. **AC Voltmeter** – Indicates the rated 60 Hz, single phase output voltage.
26. **Hour Meter** – Indicates number of hours machine has been in use or hours engine was run.
27. **Idle Control Switch** – Regulates the engine speed when the generator is under load.
28. **Warning Lamp Display** – Lights red when the following conditions occur:
  - 28A. **Oil Pressure Lamp** – If the oil pressure drops suddenly, the oil pressure lamp will go on, and the generator will shut down.
  - 28B. **Charge Lamp** – The charge lamp will go on when the battery fails to charge, and the generator will shut down.
  - 28C. **Water Temperature Lamp** – The water temperature lamp will go on if the temperature rises to an abnormally high level, and the generator will shut down.
29. **Starter Switch** – With key inserted turn clockwise to start engine.
30. **Oil Filter** – Provides oil filtering for the engine

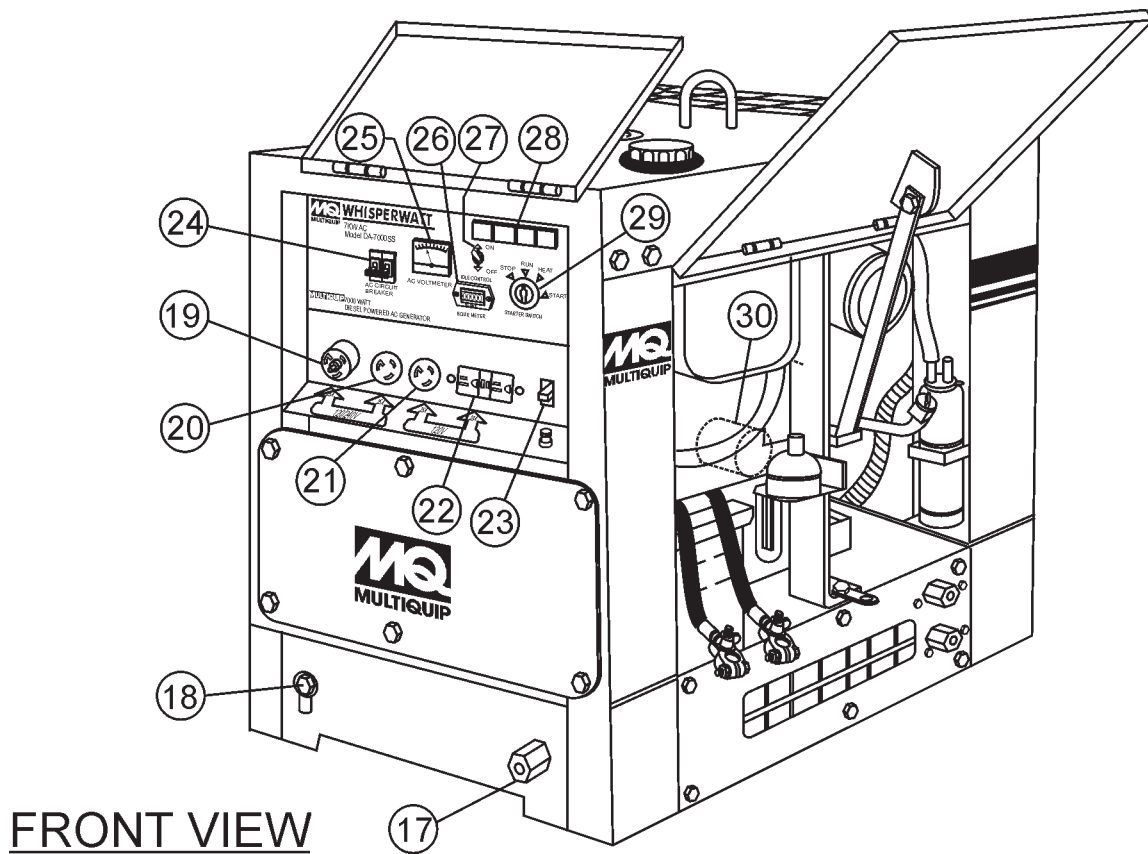


Figure 4. DA7000SS/SSW Components (continued)

## DA7000 SERIES GENERATORS — GENERATOR REFUELING

### DANGER - REFUELING HAZARDS

Adding fuel to the tank should be done only when the engine is stopped and has had an opportunity to cool down. In the event of a fuel spill, **DO NOT** attempt to start the engine until the fuel residue has been completely wiped up, and the area surrounding the engine is dry. If generator is placed in a truck bed with a plastic liner, **REMOVE** generator from truck bed and place on ground (Figure 5) to refuel. This possibility exist of **fire** or **explosion** due to static electricity.

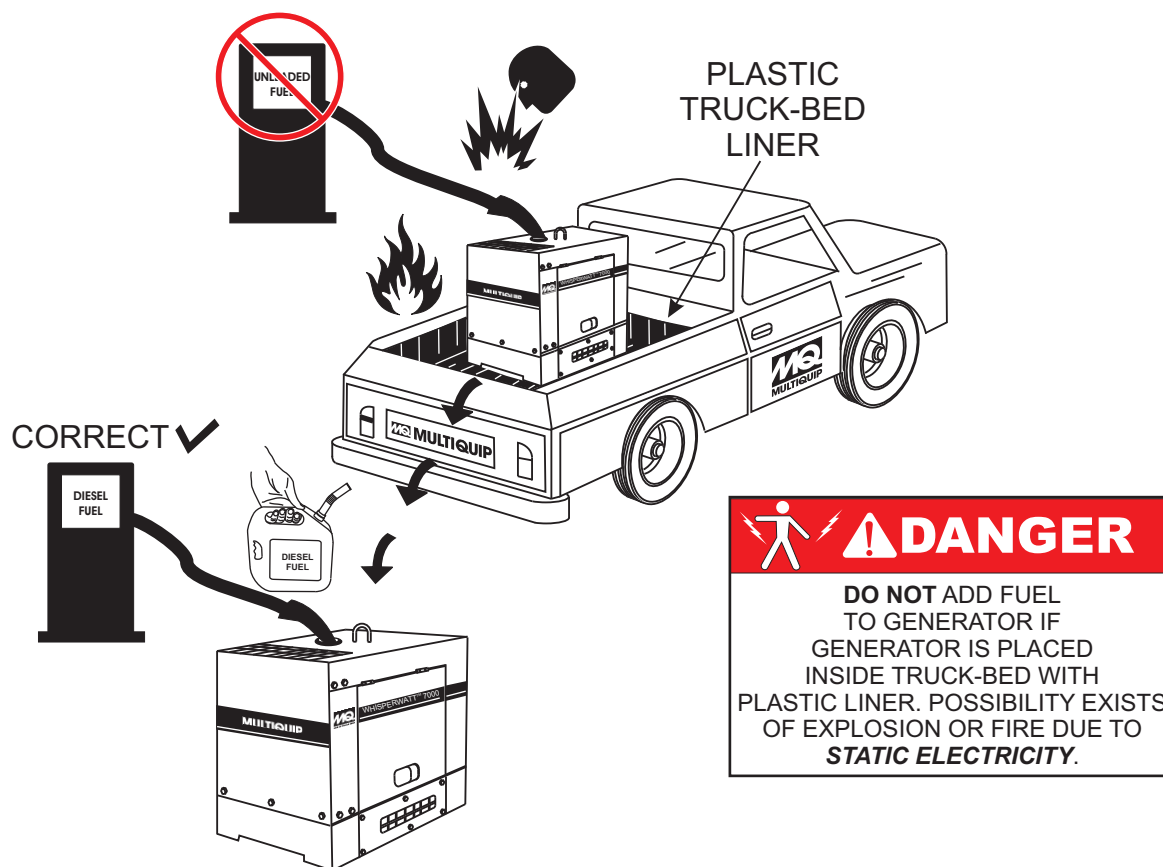


Figure 5. Generator Refueling




# DA7000 SERIES GENERATORS — INSTALLATION

## Outdoor Installation


Install the generator/welder in a area that is free of **debris**, **bystanders**, and **overhead obstructions**. Make sure the generators is on secure level ground so that it cannot slide or shift around. Also install the generators in a manner so that the exhaust will not be discharged in the direction of nearby homes.

The installation site must be relatively free from moisture and dust. All electrical equipment should be protected from excessive moisture. Failure to do will result in deterioration of the insulation and will result in short circuits and grounding.

Foreign materials such as dust, sand, lint and abrasive materials have a tendency to cause excessive wear to engine and alternator parts.


**DANGER - EXHAUST HAZARD**

Pay close attention to ventilation when operating the generator inside tunnels and caves. The engine exhaust contains noxious elements. Engine exhaust must be routed to a ventilated area.




## Mounting

The generators should always be mounted on a flat level surface to isolate vibration of the generators when it is running. **DO NOT** place the generators on slopes, the possibility exists that the generators could slide.

**DANGER - ELECTRICAL SHOCK HAZARD**

An electric shock is apt to happen when vibrators are used. Pay close attention to handling when operating vibrators and always use rubber boots and gloves to insulate the body from a short circuit.



## Indoor Installation

Exhaust gases from gasoline engines are extremely poisonous. Whenever an engine is installed indoors the exhaust fumes must be vented to the outside. The engine should be installed at least two feet from any outside wall. Using an exhaust pipe which is too long or too small can cause excessive back pressure which will cause the engine to heat excessively and possibly burn the valves.

Eliminate the danger of deadly carbon monoxide gas. Remember that exhaust fumes from any gasoline engine are very poisonous if discharged in a closed room, but harmless if allowed to mix with the outside air. If the generators is installed indoors, you must make provisions for venting the engine exhaust to the outside of the building.

## Generators Grounding

To guard against electrical shock and possible damage to the equipment, it is important to provide a good **EARTH** ground. Always use the ground terminal on the generators to ground the generator. Ground the generators from its ground connector so that the resistance to ground is 500 ohms or less.

Article 250 (Grounding) of the National Electrical Code (NEC) provides guide lines for proper grounding and specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

NEC articles 250-64(b) and 250-66 set the following grounding requirements:

1. Use one of the following wire types to connect the generators to earth ground.
  - a. Copper - 10 AWG (5.3 mm<sup>2</sup>) or larger.
  - b. Aluminum - 8 AWG (8.4 mm<sup>2</sup>) or larger.
2. When grounding the generators (Figure 3) connect the ground cable between the lock washer and the nut on the generators and tighten the nut fully. Connect the other end of the ground cable to earth ground.
3. NEC article 250-52(c) specifies that the earth ground rod should be buried a minimum of 8 ft. into the ground.

# DA7000 SERIES GENERATORS — INSTALLATION (GROUNDING)

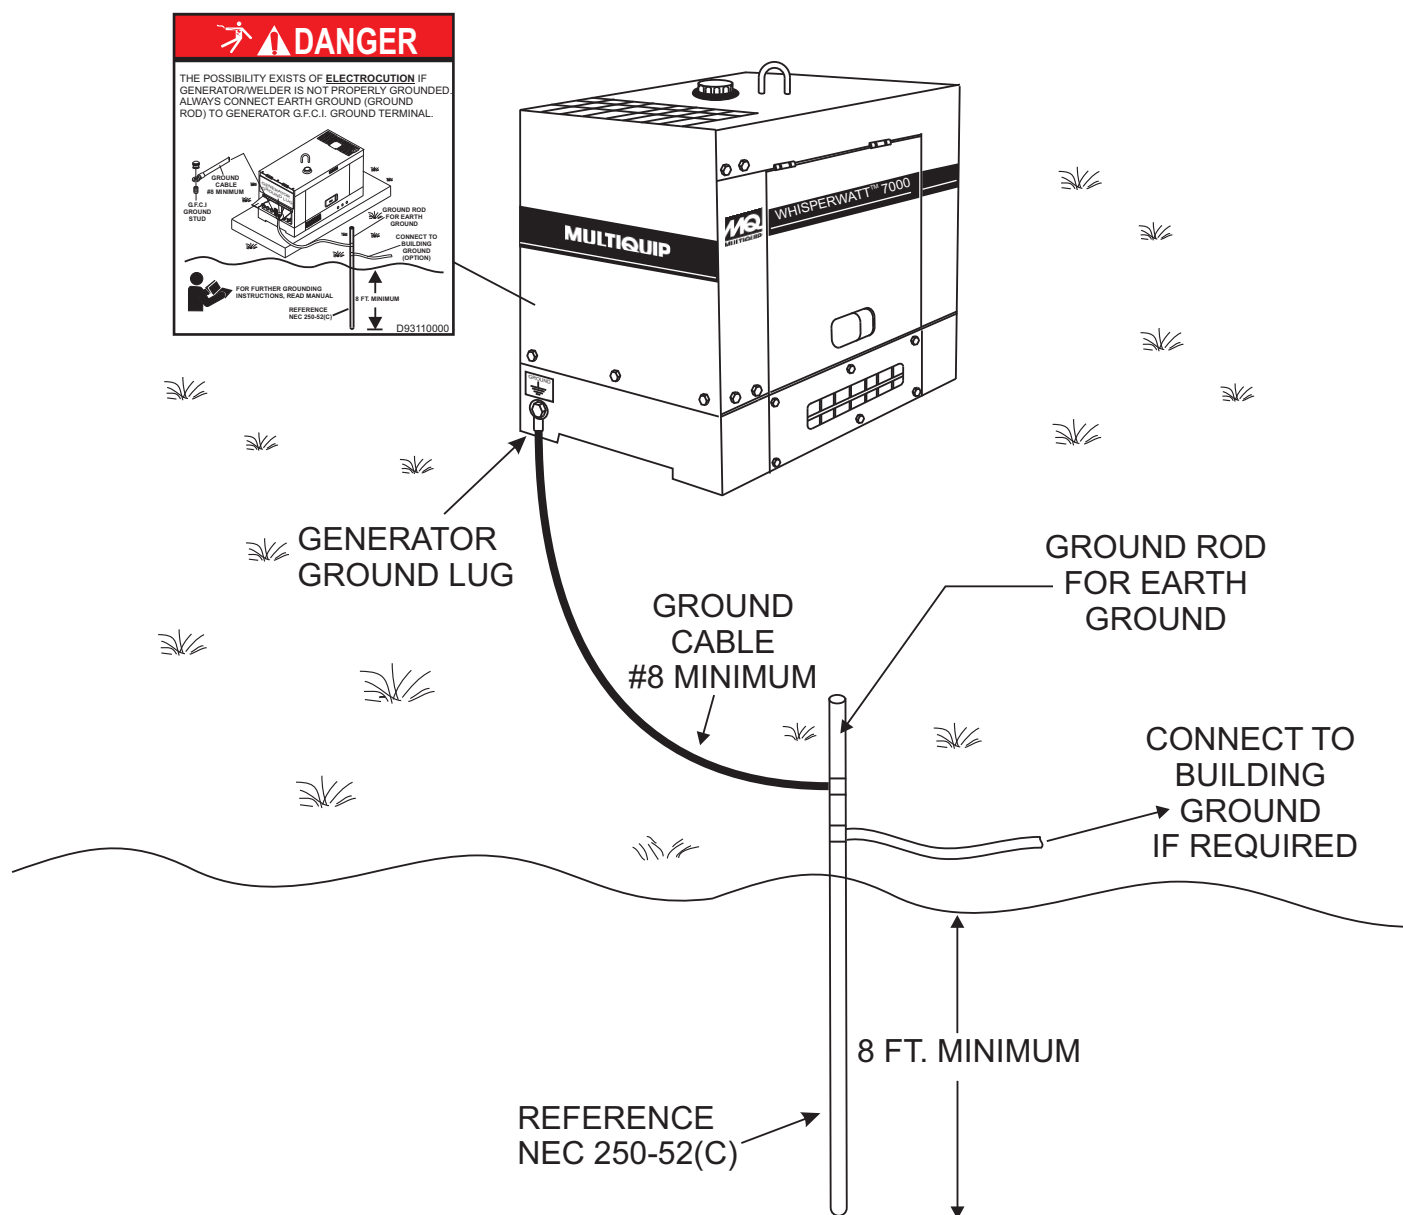


Figure 6. Generator Grounding



# DA7000 SERIES GENERATORS — INSPECTION

## General Inspection Prior to Operation

The DA7000 series generators have been thoroughly inspected and accepted prior to shipment from the factory. However, be sure to check for damaged parts or components, or loose nuts and bolts, which could have occurred in transit.

## Ground Power Tools

When using power tools or electrical equipment requiring AC power from the generator, make sure connecting (power tool) cable has a ground as shown in Figure 7.


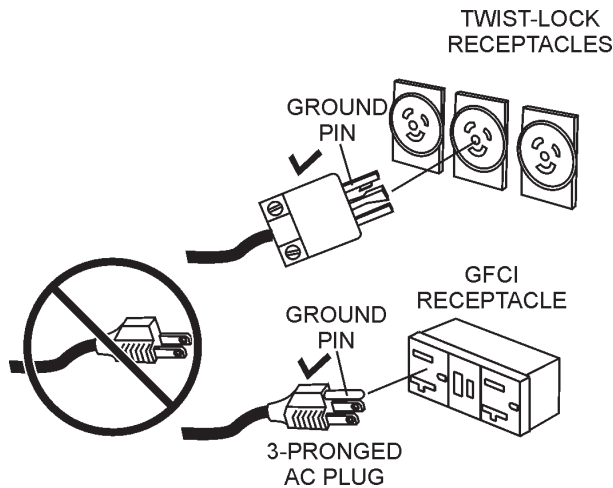


Figure 7. Ground Cables/Plugs

## Extension Cable

When electric power is to be provided to various tools or loads at some distance from the generator, extension cords are normally used. Cables should be sized to allow for distance in length and amperage so that the voltage drop between the generators and point of use (load) is held to a minimum. Use the cable selection chart (Table 4) as a guide for selecting proper cable size.

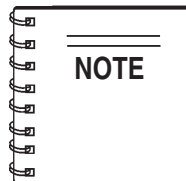

**Never!** use power tools or equipment that do not have a ground capability, the possibility exists **of electrocution, electrical shock or burn**, which can cause **severe bodily harm** or even **DEATH!**

## Main Circuit Breaker

To protect the generator from an overload always place the main and auxiliary circuit breakers in the "OFF" position prior to starting the engine.

## GFCI Receptacle

Before connecting a load to the generator's GFCI receptacle, **push** the "Test Button" on the front of receptacle before connecting the load, to confirm that the receptacle is functioning correctly.

Table 4. Cable Selection (60 Hz, Single Phase Operation)

Current In Amperes	Load In Watts		Maximum Allowable Cable Length			
	120 Volts	240 Volts	#10 Wire	#12 Wire	#14 Wire	#16 Wire
2.5	300	600	1000 ft.	600 ft.	375 ft.	250 ft.
5	600	1200	500 ft.	300 ft.	200 ft.	125 ft.
7.5	900	1800	350 ft.	200 ft.	125 ft.	100 ft.
10	1200	2400	250 ft.	150 ft.	100 ft.	
15	1800	3600	150 ft.	100 ft.	65 ft.	
20	2400	4800	125 ft.	75 ft.	50 ft.	

**CAUTION:** Equipment damage can result from low voltage.

# DA7000 SERIES GENERATORS—SETUP

## Before Starting

1. Read safety instructions at the beginning of manual.
2. Clean the generator, removing dirt and dust, particularly the engine cooling air inlet, and air filter.
3. Check fastening nuts and bolts for tightness.



## Engine Oil Check

1. To check the engine oil level, place the generator on secure level ground with the engine stopped.
2. Remove the dipstick (Figure 8) and wipe clean.

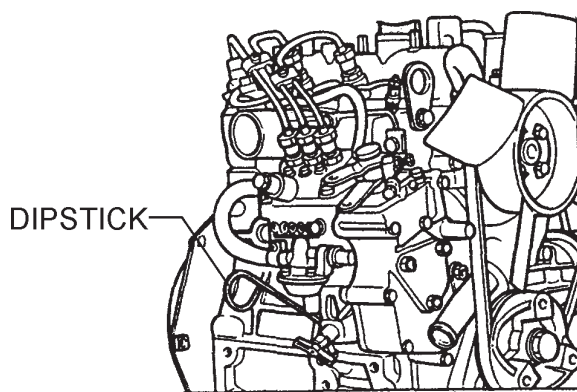


Figure 8. Engine Oil Dipstick (Removal)

3. Insert and remove the dipstick, check the oil level shown on the dipstick (Figure 9).

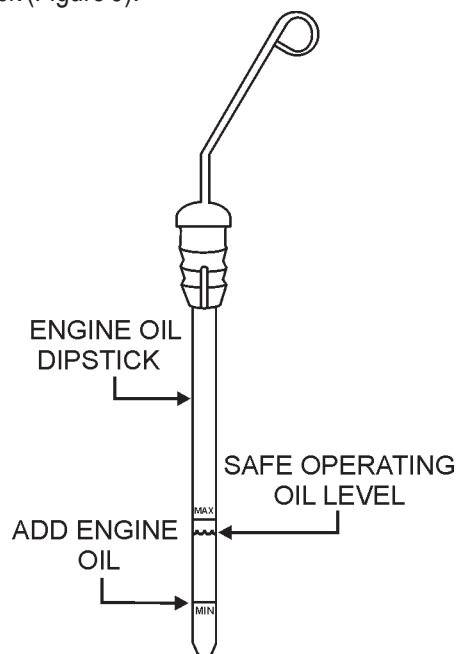


Figure 9. Engine Oil Dipstick

4. If the oil level is low (Figure 10), remove the oil filler cap and add new oil. Fill to the prescribe level with recommended oil type (Table 5). Maximum oil capacity is 2.64 quarts (2.5 liters)



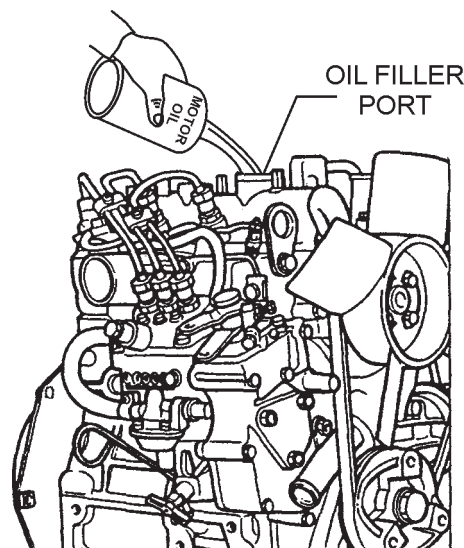


Figure 10. Adding Engine Oil

Table 5. Oil Type

Season	Temperature	Oil Type
Summer	25°C or Higher	SAE 10W-30
Spring/Fall	25°C~10°C	SAE 10W-30/20
Winter	0°C or Lower	SAE 10W-10

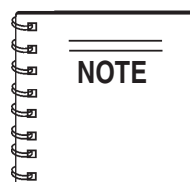

When adding engine oil **DO NOT** overfill.

# DA7000 SERIES GENERATORS—SETUP

## Fuel Check

Fill the fuel tank with #2 diesel fuel. **DO NOT** fill the tank beyond capacity.

Pay attention to the fuel tank capacity when replenishing fuel. Refer to the fuel tank capacity listed in Table 2.

The fuel tank cap must be closed tightly after filling. Handle fuel in a safety container. If the container does not have a spout, use a funnel.

1. Read the fuel gauge located on top of the generator (Figure 11) to determine if the fuel level is low.

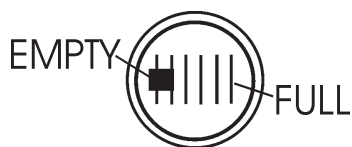


Figure 11. Fuel Gauge

2. If fuel is low, remove the fuel cap located on top of the generator and replenish with **clean #2 diesel fuel**.

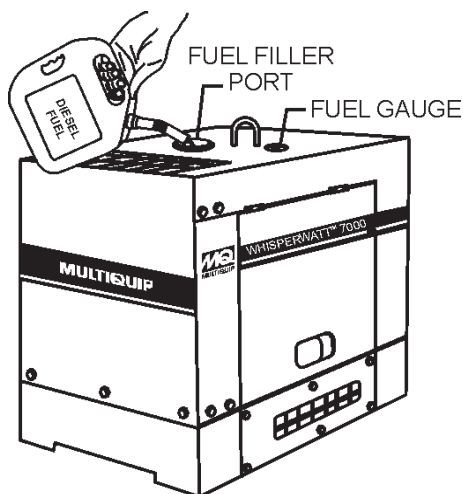


Figure 12. Adding Fuel



## DANGER - EXPLOSIVE FUEL

Motor fuels are highly flammable and can be dangerous if mishandled. **DO NOT** smoke while refueling. **DO NOT** attempt to refuel the generator if the engine is **hot!**, **running or in the dark**.



### NOTE

When refueling, be sure to use a strainer for filtration. **DO NOT** top-off fuel. **DO NOT** fill the tank beyond capacity. Wipe up any spilled fuel **immediately!**

## Coolant (Antifreeze)

Kubota recommends Antifreeze/Summer Coolant for use in their engines, which can be purchased in concentrate (and mixed with 50% demineralized water) or pre-diluted. See the **Kubota Engine Owner's Manual** for further details



## WARNING - BURN HAZARDS

If adding coolant/antifreeze mix to the radiator, **DO NOT** remove the radiator cap until the unit has completely cooled. The possibility of **hot!** coolant exists which can cause severe burns.



Day-to-day addition of coolant is done from the recovery tank. When adding coolant to the radiator, **DO NOT** remove the radiator cap until the unit has completely cooled. See Table 6 for engine, radiator, and recovery tank coolant capacities. Make sure the coolant level in the recovery tank is always between the "H" and the "L" markings.

Table 6. Coolant Capacity

Engine and Radiator	.74 gal. (2.8 liters)
Reserve Tank (Full)	.23 gal (.87 liters)

## Operation Freezing Weather

When operating in freezing weather, be certain the proper amount of antifreeze (Table 7) has been added.

Table 7. Anti-Freeze Operating Temperatures

Vol % Anti-Freeze	Freezing Point	
	°C	°F
50	-37	-34

### NOTE

When the antifreeze is mixed with water, the antifreeze mixing ratio **must be** less than 50%.

## Fan Belt Tension

A slack fan belt may contribute to overheating, or to insufficient charging of the battery. Inspect the fan belt for damage and wear and adjust it in accordance with the **Kubota Engine Owner's Manual**.

The fan belt tension is proper if the fan belt bends 10 to 15 mm (Figure 13) when depressed with the thumb as shown below.

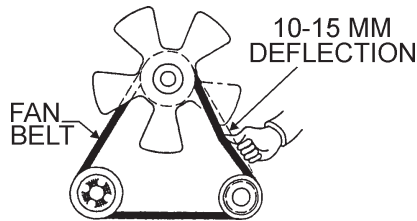


Figure 13. Fan Belt Tension

## CAUTION - ROTATING PARTS



**NEVER** place hands near the belts or fan while the generator set is running.



## Air Cleaner

Inspect the air cleaner element for dirt and excessive wear. If the air cleaner is dirty or badly worn, replace immediately. **DO NOT** run the engine with a defective air cleaner, severe engine damage could occur.

For additional information regarding the air cleaner, reference the maintenance section of this manual.

## Battery

This unit is of negative ground **DO NOT** connect in reverse. Always maintain battery fluid level between the specified marks. Battery life will be shortened, if the fluid level are not properly maintained. Add only distilled water when replenishment is necessary.

**DO NOT** over fill. Check to see whether the battery cables are loose. Poor contact may result in poor starting or malfunctions. **Always** keep the terminals firmly tightened. Coating the terminals with an approved battery terminal treatment compound. Replace battery with only recommended type battery.

The battery is sufficiently charged if the specific gravity of the battery fluid is 1.28 (at 68° F). If the specific gravity should fall to 1.245 or lower, it indicates that the battery is dead and needs to be recharged or replaced.

Before charging the battery with an external electric source, be sure to disconnect the battery cables.

## Battery Cable Installation

**ALWAYS** be sure the battery cables (Figure 14) are properly connected to the battery terminals as shown below. The **Red Cable** is connected to the positive terminal of the battery, and the **Black Cable** is connected to the negative terminal of the battery.

## CAUTION - BATTERY SERVICING SAFETY

**ALWAYS** disconnect the negative terminal **FIRST** and reconnect negative terminal **LAST**.

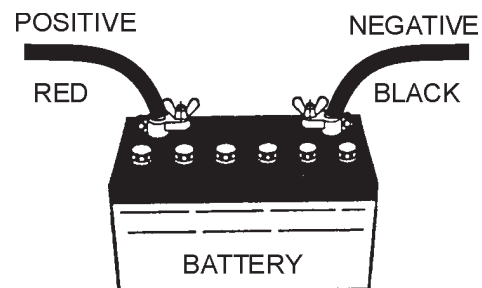


Figure 14. Battery Connections


## CAUTION - BATTERY SERVICING SAFETY

Inadequate battery connections may cause poor starting of the generator, and create other malfunctions.

# DA7000 SERIES GENERATORS—OPERATING INSTRUCTIONS


## Starting

1. Open the cabinet door and turn the fuel cock lever (Figure 15) to the "ON" position.

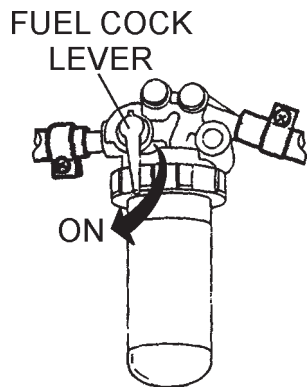


**Figure 15. Fuel Cock Lever (ON)**

2. Always operate the generator with the doors closed (Figure 16). Operation with the doors open may cause insufficient cooling of the unit, and engine damage may result.

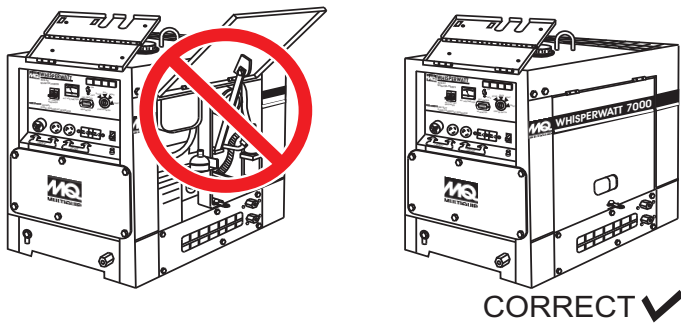

**Figure 16. Generator Doors**

3. Insert the key into the starter switch (Figure 17) and turn it to the "RUN" position. Check to see that the oil pressure and charge Lights on the "Warning Lamp Unit Display" are lit. If either light is not lit, check the system and wiring (refer to the Engine Operation Manual).

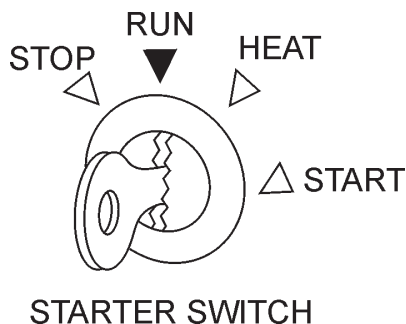

**Figure 17. Starter Switch**

4. Turn the ignition key to the **HEAT** position. When the preheat light goes off, turn the key to the "**START**" position to start the engine. As soon as the engine starts, release the key. The key will automatically return to the "**RUN**" position.
5. During winter or when the surrounding air temperature is cold, in situations where a load start is required, turn the key to the "**HEAT**" position, you must wait until the preheat light goes off.
6. If the engine does not start within 10 seconds after the key is turned to the "**START**" position, wait for about 30 seconds and repeat the procedure as described in step 4. above.
7. When the engine starts, the oil pressure light and charge light should go out. If these lights stay on, immediately stop the engine and check the system and wiring (refer to the Engine Operation Manual).
8. Let the engine idle for five minutes with the Automatic Idle Control switch in the "ON" position.
9. Check the engine for abnormal vibrations, noises and oil leakage.
10. Check the generator's output voltage by referring to the AC voltmeter on the control panel. If the meter indicates 120 volts, then 120 VAC can be obtained from the 120 V and 240V receptacles at the same time.
11. Turn the **Automatic Idle Control Switch** to either "OFF" or "ON" for full engine operation.

## Normal Shutdown

1. Remove the load from the generator, then place both the main and GFCI circuit breakers to the **OFF** position.
2. Listen for the engine speed to drop. Run at low speed for 3-5 minutes.
3. Place the starter switch key in "**STOP**" position and remove the key. Place fuel cock lever in the "**OFF**" position.

## Emergency Shutdown

1. Place starter switch key in "**STOP**" position. Remove key. Place fuel cock lever in the "**OFF**" position.



# DA7000 SERIES GENERATORS — MAINTENANCE (ENGINE)

## General Inspection

At least daily or prior to each use, the generator should be cleaned and inspected for deficiencies. Check for loose, missing or damaged nuts, bolts or other fasteners. Also check for fuel or oil leaks.

## Engine Side:

For a more detail engine maintenance schedule refer to the KUBOTA Engine Shop and Operator's Manuals.

## Air Cleaner

**Every 50 hours:** The air cleaner employed on the KUBOTA Z482 series engines is a dry type, **NEVER** apply oil to it. If generator is used in severe dusty areas service air cleaner element more frequently.

1. Release the air cleaner retaining clamps (Figure 18) and remove the air cleaner element.
2. Wipe the inside of the air cleaner with a damp cloth and remove all dust and debris that may have accumulated inside air cleaner body.
3. Tap the edge of element lightly to allow heavy dust build-up to fall off.
4. Use compressed air to clean air filter element. Blow compressed air from the inside while turning the element.
5. Replace element once a year or every six cleanings.


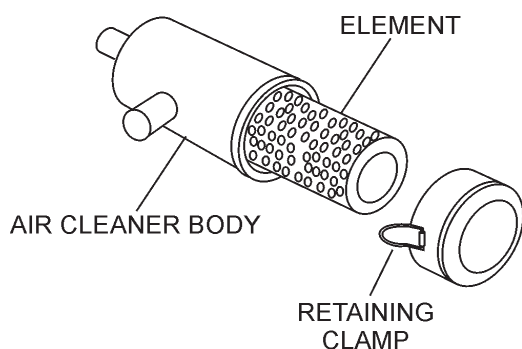


Figure 18. Air Cleaner

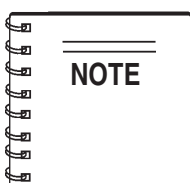

When using compressed air to clean air filter element, **DO NOT** exceed 99 psi (686kPa).

## Oil Change

**Every 100 hours:** Change engine oil after the first 50 hours of operation and 100 hours thereafter. Always check the crankcase oil level prior to each use, or when the fuel tank is filled. Insufficient oil may cause severe engine damage. Make sure generator is level when checking oil level. The oil level must be between the two notches on the dipstick as shown in Figure 9.

Remove engine oil drain plug (Figure 19) and drain oil from crankcase. For best results drain oil while engine is warm. Reinstall oil drain plug, and add engine oil as specified in Table 2. Crankcase oil capacity is .66 gal (2.5 liters).

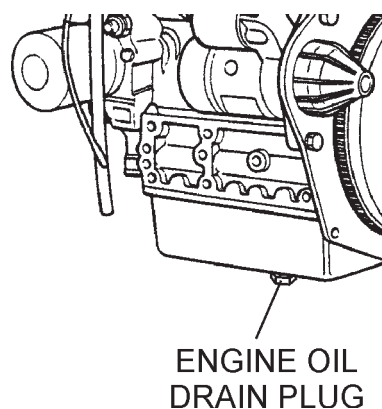


Figure 19. Engine Oil Drain Plug

## Oil Filter Cartridge

**Every 200 hours:** Replace the engine oil filter cartridge (Figure 20) after every 200 hours of operation.


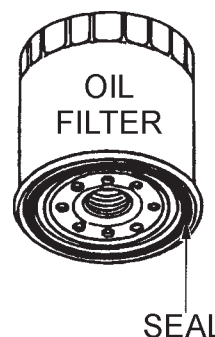


Figure 20. Oil Filter Cartridge

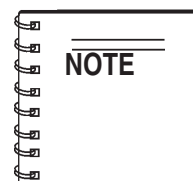


When installing the oil filter, coat rubber seal with a small amount of lubricant (motor oil). **DO NOT** over-tighten cartridge. Hand tighten only.

# DA7000SS— MAINTENANCE/PREPARATION FOR LONG -TERM STORAGE

## Cleaning the Fuel Filter


**Every 100 hours:** Clean fuel filter (Figure 21) every 100 hours of operation or once a month to remove dust or water.

1. Place fuel cock lever in the close position.
2. Disconnect fuel lines from fuel filter.

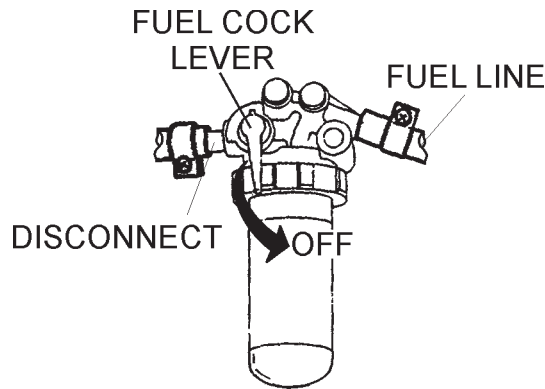

**Figure 21. Fuel Cock Lever (OFF)**

3. Remove the top cap (Figure 22) from the fuel filter and rinse cap and filter bowl with diesel fuel.
4. Remove element, and rise with diesel fuel.
5. Reinstall fuel filter and connect fuel lines.

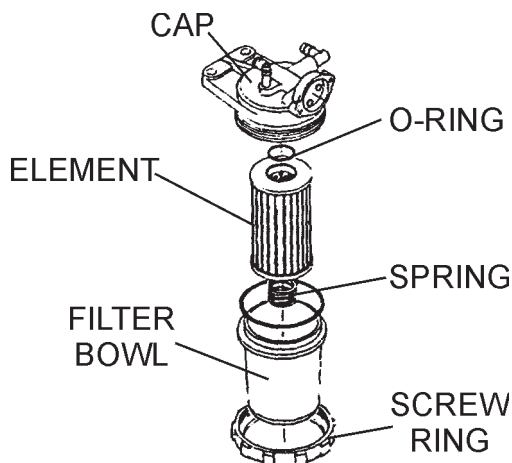


**Figure 22. Fuel Filter Disassembly**

6. Inspect all fuel lines every 50 hours.

## Radiator

**Check Daily:** Always check the level of the coolant in the radiator before starting the engine. Remove the radiator cap and verify that the coolant reaches top of radiator coils.

1. **DO NOT** remove the radiator cap while the coolant is hot. The possibility exists of severe burns or scalding from the coolant gushing out. Let the coolant cool before removing radiator cap.
2. Check coolant in the reserve tank daily (Figure 23). Make sure the level is between the **FULL (H)** and **LOW (L)** markings. Fill reserve tank with a mixture of 50/50 antifreeze/water.

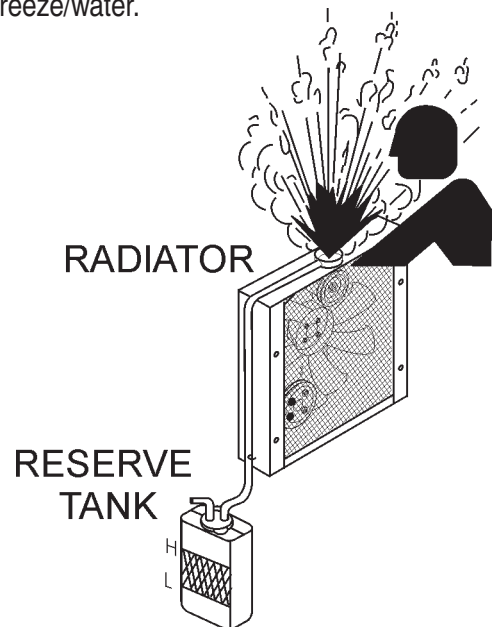

**Figure 23. Radiator/Reserve Tank**

## Generator Storage

For storage of the generator for over 30 days, the following is required:


- Drain the fuel tank completely.
- Run the engine until **all** the fuel is completely consumed.
- Completely drain the oil from the crankcase and refill with fresh oil.
- Disconnect the **negative** battery cable from the battery.
- Clean all external parts of the generator with a cloth.
- Cover the generating set and store in a clean, dry place.



# DA7000 SERIES GENERATORS— MAINTENANCE (TRAILER)

## Adjustable Channel

Your MQ trailer is equipped with an adjustable channel (Figure 24) that allows the coupler to be raised or lowered to a desired height. Periodically check the channel bolts for damage or loosening.

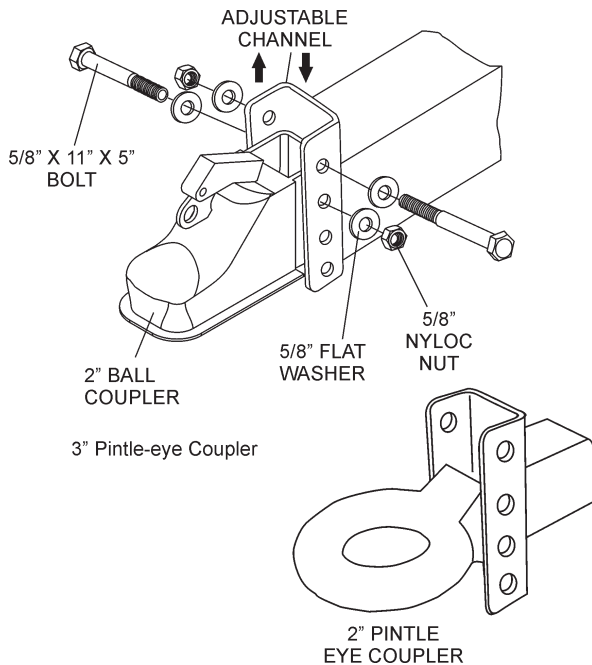

**Figure 24. Ball-Pintle Coupler Adjustable Channel**

## Wheel Bearings (Hubs)

Wheel bearings (Figure 25) must be inspected and lubricated once a year or 12,000 miles to ensure safe operation of your trailer.

If a trailer wheel bearing is immersed in water, it must be replaced.

If the generator/trailer has not been used for an extended amount of time, have the bearings inspected and packed more frequently, at least every six months and prior to use. Follow the steps below to disassemble and service the wheel bearings.


- After removing the dust cap, cotter pin, spindle nut and spindle washer, remove the hub and drum to inspect the bearings for wear and damage.
- Replace bearings that have flat spots on rollers, broken roller cages, rust or pitting. Always replace bearings and cups in sets. The inner and outer bearings are to be replaced at the same time.

## **! DANGER - Wheel Bearings**

If trailer wheels are under water for a long period of time, wheel bearings may fail. If this is the case, service wheel bearings immediately.

The possibility exists of the wheels falling off, causing equipment damage and severe bodily harm even death!

- Replace seals that have nicks, tears or wear.
- Lubricate the bearings with a high quality EP-2 automotive wheel bearing grease.

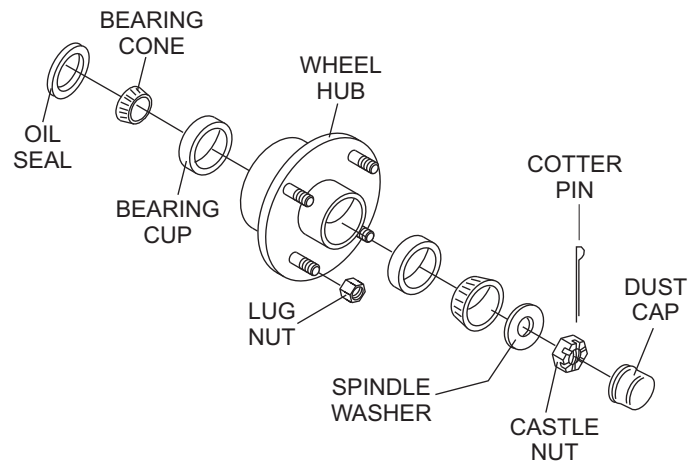

**Figure 25. Wheel Hub Components**

## Wheel Hub Adjustment

Every time the wheel hub is removed and the bearings are reassembled, follow the steps below to check the wheel bearings for free running and adjust.

- Turn the hub slowly, by hand, while tightening the spindle nut, until you can no longer turn the hub by hand.
- Loosen the spindle nut just until you are able to turn it (the spindle nut) by hand. Do not turn the hub while the spindle nut is loose.
- Install a new cotter pin through the spindle nut and axle.
- Check the adjustments. Both the hub and the spindle nut should be able to move freely (the spindle nut motion will be limited by the cotter pin).

# DA7000 SERIES GENERATORS — TRAILER MAINTENANCE

## Danger - Trailer Hazards

**NEVER!** crawl under the trailer unless it is on firm and level ground and resting on properly placed and secured jack stands and wheels are chocked.

The possibility exists of the trailer falling thus causing equipment damage and severe bodily harm even **death!**

## DANGER - Trailer Inspection

When performing trailer inspection and maintenance activities, you must jack up the trailer using jacks and jack stands.

When jacking and using jack stands, place them so as to clear wiring, brake lines, and suspension parts (i.e., springs, torsion bars). Place jacks and jack stands inside of the perimeter strip on the supporting structure to which the axles are attached.

## WARNING - Trailer Impact

If the trailer is involved in an accident have it inspected immediately by qualified personnel prior to moving again. In addition, the trailer should be inspected annually for signs of wear or deformations.

## WARNING - Cracked or Broken Welds

Improper weld repair will lead to early failure of the trailer structure and can cause serious injury or death.

All welding must be performed by a *certified welder*. perform the repair. Inspect all of the welds for cracks or failure at least twice a year.

## Suspension

The leaf suspension springs and associated components (Figure 26) should be visually inspected every 6,000 miles for signs of excessive wear, elongation of bolt holes, and loosening of fasteners. Replace all damaged parts (suspension) immediately. Torqued suspension components as detailed in Table 8.

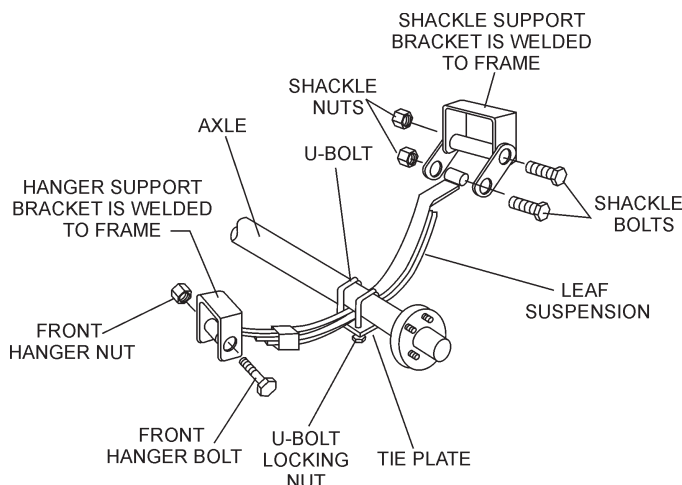


Figure 26. Leaf Suspension

Table 8. Suspension Torque Requirements

Item	Torque (Ft.-Lbs.)
3/8" U-BOLT	MIN-30 MAX-35
7/16" U-BOLT	MIN-45 MAX-60
1/2" U-BOLT	MIN-45 MAX-50
SHACKLE BOLT SPRING EYE BOLT	SNUG FIT ONLY. PARTS MUST ROTATE FREELY. LOCKING NUTS OR COTTER PINS ARE PROVIDED TO RETAIN NUT-BOLT ASSEMBLY.
SHOULDER TYPE SHACKLE BOLT	MIN-30 MAX-50

## Danger - Worn or Defective Suspension

Worn or broken suspension parts can cause loss of control, damage to equipment and severe bodily injury even **death!**

Check and repair suspension regularly.

# DA7000 SERIES GENERATORS — TRAILER SAFETY GUIDELINES

## TRAILER SAFETY INFORMATION

Safety precautions should be followed at all times when operating this equipment. Failure to read, understand and follow the Operating Instructions could result in injury to yourself and others. Loss of control of the trailer or tow vehicle can result in death or serious injury.

### Common Causes for Loss of Trailer

- Driving too fast for the conditions (maximum speed when towing a trailer is 60 m.p.h.).
- Overloading the trailer or loading the trailer unevenly
- Trailer improperly coupled to the hitch
- No braking on trailer
- Not maintaining proper tire pressure
- Not keeping lug nuts tight
- Not properly maintaining the trailer structure.

### Trailer Towing Guidelines

- Recheck the load tiedowns to make sure the load will not shift during towing.
- Before towing, check coupling, safety chain, safety brake, tires, wheels and lights.
- Check the lug nuts or bolts for tightness.
- Check coupler tightness after towing 50 miles.
- Adjust the brake controller to engage the trailer brakes before the tow vehicle brakes. Your dealer can assist you by making this adjustment.
- Use your mirrors to verify that you have room to change lanes or pull into traffic.
- Use your turn signals well in advance. Allow plenty of stopping space for your trailer and tow vehicle.
- Allow plenty of stopping space for your trailer and tow vehicle.
- DO NOT** drive so fast that the trailer begins to sway due to speed.
- Allow plenty of room for passing. A rule of thumb is that the passing distance with a trailer is 4 times the passing distance without the trailer.
- Shift your automatic transmission into a lower gear for city driving.

**ALWAYS** use lower gears for climbing and descending grades.

**DO NOT** ride the brakes while descending grades, they may get so hot that they stop working. Then you will potentially have a runaway tow vehicle and trailer.

To conserve fuel, don't use full throttle to climb a hill. Instead, build speed on the approach.

Slow down for bumps in the road. Take your foot off the brake when crossing the bump.

**DO NOT** brake while in a curve unless absolutely necessary. Instead, slow down before you enter the curve and power through the curve. This way, the towing vehicle remains in charge.

**DO NOT** apply the brakes to correct extreme trailer swaying. Continued pulling of the trailer, and even slight acceleration, will provide a stabilizing force.

Anticipate the trailer "swaying." Swaying is the trailer reaction to the air pressure wave caused by passing trucks and busses. Continued pulling of the trailer provides a stabilizing force to correct swaying. **DO NOT** apply the brakes to correct trailer swaying.

Use lower gear when driving down steep or long grades. Use the engine and transmission as a brake. Do not ride the brakes, as they can overheat and become ineffective.

Be aware of your trailer height, especially when approaching roofed areas and around trees.

Make regular stops, about once each hour. Confirm that:

- A. Coupler is secure to the hitch and is locked.
- B. Electrical connectors are made.
- C. There is appropriate slack in the safety chains.
- D. Tires are not visibly low on pressure



### WARNING - Drive Safely

Driving too fast for severe road conditions can result in loss of control and cause death or serious injury.

Decrease your speed as road, weather and lighting conditions deteriorate.

**ALWAYS** check for local trailer-tow speed limits in your area.

# DA7000 SERIES GENERATORS — TRAILER SAFETY GUIDELINES

## CAUTION - Local Towing Regulations

Check your county or state safety towing regulations before towing your **generator**.

## Driving Conditions

When towing a trailer, you will have decreased acceleration, increased stopping distance, and increased turning radius (which means you must make wider turns to keep from hitting curbs, vehicles, and anything else that is on the inside corner). In addition, you will need a longer distance to pass, due to slower acceleration and increased length.

Be alert for slippery conditions. You are more likely to be affected by slippery road surfaces when driving a tow vehicle with a trailer, than driving a tow vehicle without a trailer.

Check rearview mirrors frequently to observe the trailer and traffic.

**NEVER** drive faster than what is safe.

## WARNING - Transporting Personnel

**DO NOT** transport people on the trailer. The transport of people puts their lives at risk and may be illegal.

## Coupling to the Tow Vehicle

Follow all of the safety precautions and instructions in this manual to ensure safety of persons, equipment, and satisfactory life of the trailer. Always use an adequate tow vehicle and hitch. If the vehicle or hitch is not properly selected and matched to the Gross Vehicle Weight Rating (GVWR) of your trailer, you can cause an accident that could lead to death or serious injury.

If you already have a tow vehicle, know your vehicle tow rating and make certain the trailer's rated capacity is less than or equal to the tow vehicle's rated towing capacity. If you already have (or plan to buy) a trailer, make certain that the tow rating of the tow vehicle is equal to or greater than that of the trailer.

The trailer VIN tag contains the critical safety information for the use of your trailer. Again, be sure your hitch and tow vehicle are rated for the Gross Vehicle Weight Rating of your trailer.

## WARNING - Coupler Selection/Condition

Proper selection and condition of the coupler and hitch are essential to safely towing your trailer. A loss of coupling may result in death or serious injury.

- Be sure the hitch load rating is equal to or greater than the load rating of the coupler
- Be sure the hitch size matches the coupler size
- Observe the hitch for wear, corrosion and cracks before coupling. Replace worn, corroded or cracked hitch components before coupling the trailer to the tow vehicle

Be sure the hitch components are tight before coupling the trailer to the tow vehicle.

## WARNING - Coupler Connection

An improperly coupled trailer can result in death or serious injury.

**DO NOT** move the trailer until:

- The coupler is secured and locked to hitch
- The safety chains are secured to the tow vehicle
- The trailer jack(s) are fully retracted

**DO NOT** tow the trailer on the road until:

- Tires and wheels are checked
- The trailer brakes are checked
- The breakaway switch is connected to the tow vehicle
- The load is secured to the trailer
- The trailer lights are connected and checked

## DANGER - Hitch/Tow Vehicle Load Rating

Use of a hitch with a load rating less than the load rating of the trailer can result in loss of control and may lead to death or serious injury.

Use of a tow vehicle with a towing capacity less than the load rating of the trailer can result in loss of control, and may lead to death or serious injury.

Be sure your hitch and tow vehicle are rated for the Gross Vehicle Weight Rating of your trailer.

# DA7000 SERIES GENERATORS — TRAILER SAFETY GUIDELINES

## Reporting Safety Defects

If you believe that your vehicle has a defect that could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying us.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or us.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-800-424-9393 (or 366-0123 in the Washington D.C. area) or write to: NHTSA, U.S. Department of Transportation, Washington, DC 20590. You can also obtain other information about motor vehicle safety from the Hotline.

## Inoperable Brakes, Lights or Mirrors

Be sure that the brakes and all of the lights on your trailer are functioning properly before towing your trailer. Check the trailer taillights by turning on your tow vehicle headlights. Check the trailer brake lights by having someone step on the tow vehicle brake pedal while you look at trailer lights. Do the same thing to check the turn signal lights. (See Trailer Wiring Diagram section in this manual.)

Standard mirrors usually do not provide adequate visibility for viewing traffic to the sides and rear a towed trailer. You must provide mirrors that allow you to safely observe approaching traffic

### **WARNING - Checking Taillights/Brakelights**

Improper electrical connections between the tow vehicle and the trailer will result in inoperable lights which can lead to a collision.

Before each tow:

- Check that the taillights, brake lights and turn signals work correctly.

## Trailer Towing Tips

Driving a vehicle with a trailer in tow is vastly different from driving the same vehicle without a trailer in tow. Acceleration, maneuverability and braking are all diminished with a trailer in tow.

It takes longer to get up to speed, you need more room to turn and pass, and more distance to stop when towing a trailer. You will need to spend time adjusting to the different feel and maneuverability of the tow vehicle with a loaded trailer.

Because of the significant differences in all aspects of maneuverability when towing a trailer, the hazards and risks of injury are also much greater than when driving without a trailer. You are responsible for keeping your vehicle and trailer in control, and for all the damage that is caused if you lose control of your vehicle and trailer.

As you did when learning to drive an automobile, find an open area with little or no traffic for your first practice trailering. Of course, before you start towing the trailer, you must follow all of the instructions for inspection, testing, loading and coupling. Also, before you start towing, adjust the mirrors so you can see the trailer as well as the area to the rear of it.

Drive slowly at first, 5 m.p.h. or so, and turn the wheel to get the feel of how the tow vehicle and trailer combination responds. Next, make some right and left hand turns. Watch in your side mirrors to see how the trailer follows the tow vehicle. Turning with a trailer attached requires more room.

Stop the rig a few times from speeds no greater than 10 m.p.h. If your trailer is equipped with brakes, try using different combinations of trailer/electric brake and tow vehicle brake. Note the effect that the trailer brakes have when they are the only brakes used. When properly adjusted, the trailer brakes will come on just before the tow vehicle brakes.

It will take practice to learn how to back up a tow vehicle with a trailer attached. Take it slow. Before backing up, get out of the tow vehicle and look behind the trailer to make sure that there are no obstacles.



## DA7000 SERIES GENERATORS — TRAILER SAFETY GUIDELINES

Some drivers place their hands at the bottom of the steering wheel, and while the tow vehicle is in reverse, “think” of the hands as being on the top of the wheel. When the hands move to the right (counter-clockwise, as you would do to turn the tow vehicle to the left when moving forward), the rear of the trailer moves to the right. Conversely, rotating the steering wheel clockwise with your hands at the bottom of the wheel will move the rear of the trailer to the left while backing up.

If you are towing a bumper hitch rig, be careful not to allow the trailer to turn too much, because it will hit the rear of the tow vehicle. To straighten the rig, either pull forward or turn the steering wheel in the opposite direction.

### Trailer VIN Tag

Figure 27 below is a sample of the Vehicle Identification Number (VIN) Tag which is located on the left front of the trailer. See Figure 28.

MANUFACTURED BY / FABRIQUE PAR:		DATE	
GVWR / PNBV	KG (LB)		
GAWR (EACH AXLE) / PNBE (CHAQUE ESSIEU)		KG (LB)	TIRES / PNEU <sup>2</sup>
RIMS / JANTS			
COLD INFL. PRESS. / PRESS. DE GONFL. A FROID		KPA (	PSI / LPO <sup>3</sup> <input type="checkbox"/> SINGLE <input type="checkbox"/> DUAL
<small>THIS VEHICLE CONFORMS TO ALL APPLICABLE U.S. FEDERAL MOTOR VEHICLE SAFETY STANDARDS IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE. THIS VEHICLE CONFORMS TO ALL APPLICABLE STANDARDS PRESCRIBED UNDER THE CANADIAN MOTOR VEHICLE SAFETY REGULATIONS IN EFFECT ON THE DATE OF MANUFACTURE. - CE VEHICULE EST CONFORME A TOUTES LES NORMES QUI LUI SONT APPLICABLES EN VERTU DU REGLEMENT SUR LA SECURITE DES VEHICULES AUTOMOBILES DU CANADA EN VIGUEUR A LA DATE DE SA FABRICATION.</small>			
V.I.N. / N.I.V.:		TYPE / TYPE: TRAILER TRA / REM	
		FD-306 REV A	

Figure 27. Vehicle VIN Tag

The trailer **VIN Tag** contains the following critical safety information for the use of your trailer.

**GAWR:** The maximum gross weight that an axle can support. It is the lowest of axle, wheel, or tire rating. Usually, the tire or wheel rating is lower than the axle rating, and determines GAWR.

**GVWR:** The maximum allowable gross weight of the trailer and its contents. The gross weight of the trailer includes the weight of the trailer and all of the items within it (such as the pump with water, engine, and other ITEMS). GVWR is sometimes referred to as GTWR (Gross Trailer Weight Rating), or MGTW (Maximum Gross Trailer Weight). GVWR, GTWR and MGTW are all the same rating.

The sum total of the GAWR for all trailer axles may be less than the GVWR for the trailer, because some of the trailer load is to be carried by the tow vehicle, rather than by the trailer axle(s). The total weight of the cargo and trailer must not exceed the GVWR, and the load on an axle must not exceed its GAWR.

**PSIC:** The tire pressure (Pounds per Square Inch) measured when Cold.

**VIN:** The Vehicle Identification Number.

**EMPTY WEIGHT:** Some information that comes with the trailer (such as the Manufacturer's Statement of Origin) is not a reliable source for “empty” or “net” weight. The shipping documents list average or standard weights and your trailer may be equipped with options.

To determine the “empty” or “net” weight of your trailer, weigh it on an axle scale. To find the weight of the trailer using an axle scale, you must know the axle weights of your tow vehicle **without** the trailer coupled. Some of the trailer weight will be transferred from the trailer to the tow vehicle axles, and an axle scale weighs all axles, including the tow vehicle axles.

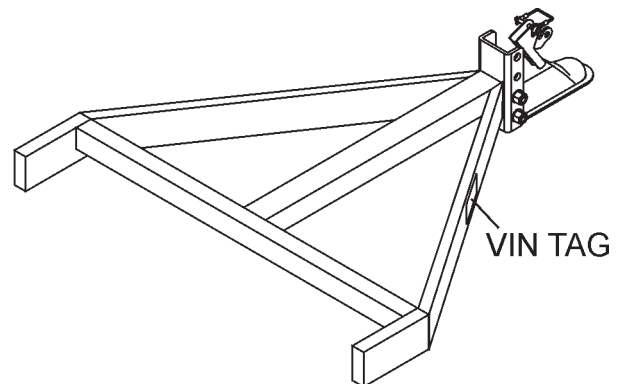


Figure 28. VIN Tag Location

# DA7000 SERIES GENERATORS —TRAILER SAFETY GUIDELINES

## Tow Vehicle

The towing hitch attached to your tow vehicle must have a capacity equal to or greater than the load rating of the trailer you intend to tow. The hitch capacity must also be matched to the tow vehicle capacity. Your vehicle dealer can provide and install the proper hitch on your tow vehicle.

## Suspension System

Sway bars, shock absorbers, heavy duty springs, heavy duty tires and other suspension components may be required to sufficiently tow the InstaPrime trailer and pump.

## Side View Mirrors

The size of the trailer that is being towed and your state law regulations determine the size of the mirrors. However, some states prohibit extended mirrors on a tow vehicle, except while a trailer is actually being towed. In this situation, detachable extended mirrors are necessary. Check with your dealer or the appropriate state agency for mirror requirements.

## Heavy Duty Flasher

A Heavy Duty Flasher is an electrical component that may be required when your trailer turn signal lights are attached to the tow vehicle flasher circuit.

## Electrical Connector

An Electrical Connector connects the light and brake systems on the trailer to the light and brake controls on the towing vehicle.

## Emergency Flares and Emergency Triangle Reflectors

It is wise to carry these warning devices even if you are not towing a trailer. It is particularly important to have these when towing a trailer because the hazard flashers of your towing vehicle will not operate for as long a period of time when the battery is running both the trailer lights and tow vehicle lights.

## Safety Chains

If the coupler connection comes loose, the safety chains can keep the trailer attached to the tow vehicle. With properly rigged safety chains, it is possible to keep the tongue of the trailer from digging into the road pavement, even if the coupler-to-hitch connection comes apart.

## Trailer Lighting (and Braking) Connector.

A device that connects electrical power from the tow vehicle to the trailer. Electricity is used to turn on brake lights, running lights, and turn signals as required. In addition, if your trailer has a separate braking system, the electrical connector will also supply power to the brakes from the tow vehicle.

## Jackstand

A device on the trailer that is used to raise and lower the coupler. The jack is sometimes called the “landing gear” or the “tongue jack”.



## WARNING

An improperly coupled trailer can result in death or serious injury.

**DO NOT** move the trailer until:

- The coupler is secured and locked to hitch;
- The safety chains are secured to the tow vehicle
- The trailer jack(s) are fully retracted.

**DO NOT** tow the trailer on the road until:

- Tires and wheels are checked;
- The load is secured to the trailer
- The trailer lights are connected and checked.



# DA7000 SERIES GENERATORS — TRAILER SAFETY GUIDELINES

## Coupler Types


The DA7000SS/SSW generators may be shipped from the factory mounted on a trailer with either a 2-inch ball coupler or a 2-inch pintle eye coupler. Both types of couplers will be discussed in this manual.

- Ball Hitch Coupler
- Pintle Eye Coupler

## Ball Hitch Coupler

A ball hitch coupler (Figure 29) connects to a ball that is located on or under the rear bumper of tow vehicle. This system of coupling a trailer to a tow vehicle is sometimes referred to as “bumper pull.”

A ball hitch trailer may be fitted with a tongue jack that can raise and lower the coupler. The tongue jack is mounted to the A-frame (front, or tongue) part of the trailer. By rotating the jack handle clockwise, the jack will extend and raise the tongue of the trailer.

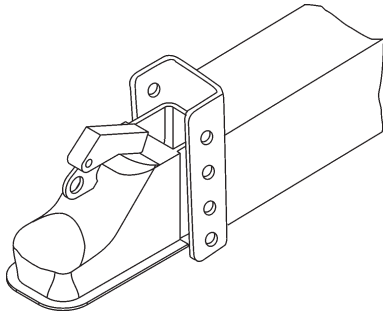

**Figure 29. Ball Hitch Coupler**

Before each tow, coat the ball with a thin layer of automotive bearing grease to reduce wear and ensure proper operation; and check the locking device that secures the coupler to the ball for proper operation.

If you see or feel evidence of wear, such as flat spots, deformations, pitting or corrosion, on the ball or coupler, immediately have your dealer inspect them to determine the proper action to prevent possible failure of the ball and coupler system. All bent or broken coupler parts must be replaced before towing the trailer.


The coupler handle lever must be able to rotate freely and automatically snap into the latched position. Oil the pivot points, sliding surfaces, and spring ends with SAE 30W motor oil. Keep the ball socket and latch mechanism clean. Dirt or contamination can prevent proper operation of the latching mechanism.

The load rating of the coupler and the necessary ball size are listed on the trailer tongue. You must provide a hitch and ball for your tow vehicle where the load rating of the hitch and ball is equal to or greater than that of your trailer.


Also, the ball size must be the same as the coupler size. If the hitch ball is too small, too large, is underrated, is loose or is worn, the trailer can come loose from the tow vehicle and may cause death or serious injury.

**THE TOW VEHICLE, HITCH AND BALL MUST HAVE A RATED TOWING CAPACITY EQUAL TO OR GREATER THAN THE TRAILER Gross Vehicle Weight Rating (GVWR). IT IS ESSENTIAL THAT THE HITCH BALL BE OF THE SAME SIZE AS THE COUPLER.**

The ball size and load rating (capacity) are marked on the ball; hitch capacity is marked on the hitch.

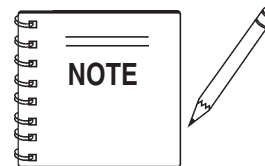

When replacing a ball, the load rating must match or exceed the GVWR of the trailer.

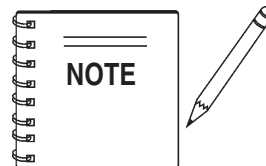

Before coupling the tow vehicle to the trailer, be sure the size and rating of hitch ball match the size and rating of the coupler. Hitch balls and couplers are marked with their size and rating.

## **! WARNING - Hitch Ball Load Rating**

Coupler-to-hitch mismatch can result in uncoupling, leading to death or serious injury.

Be sure the **LOAD RATING** of the hitch ball is equal or greater than the load rating of the coupler.

Be sure the **SIZE** of the hitch ball matches the size of the ball coupler.

# DA7000 SERIES GENERATORS — TRAILER SAFETY GUIDELINES



## WARNING - Defective Hitch Ball

A worn, cracked or corroded hitch ball can fail while towing, and may result in death or serious injury.

Before coupling trailer, inspect the hitch ball for wear, corrosion and cracks.

Replace worn or damaged hitch ball.



## WARNING - Uncoupled Hitch Ball


A loose hitchball nut can result in uncoupling, leading to death or serious injury.

Be sure the hitch ball is tight to the hitch before coupling the trailer.

- Rock the ball to make sure it is tighten to the hitch, and visually check that the hitch ball nut is solid against the lock washer and hitch frame.
- Wipe the inside and outside of the coupler, clean and inspect it visually for cracks and deformations; feel the inside of the coupler for worn spots and pits.
- Be sure the coupler is secured tightly to the tongue of the trailer. All coupler fasteners must be visibly solid against the trailer frame.
- The bottom surface of the coupler to be above the top of the hitch ball. Use the tongue jackstand to support the trailer tongue. Wood or concrete blocks may also be used.


## Coupling the Trailer to the Tow Vehicle (Ball Coupler)

- Lubricate the hitch ball and the inside of the coupler with a thin layer of automotive bearing grease.
- Slowly back up the tow vehicle so that the hitch ball is near or aligned under the coupler.
- Using the jackstand at the front of trailer (tongue), turn the jackstand crank handle to raise the trailer. If the ball coupler does not line up with the hitch ball, adjust the position of the tow vehicle.
- Open the coupler locking mechanism. Ball couplers have a locking mechanism with an internal moving piece and an outside handle. In the open position, the coupler is able to drop fully onto the hitch ball.

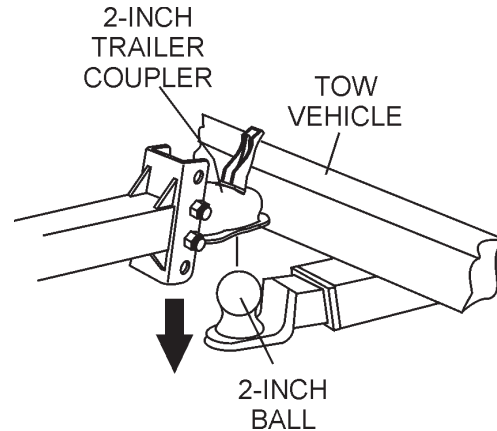

**Figure 30. Ball Hitch Coupling Mechanism**

- Lower the trailer (Figure 30) until the coupler fully engages the hitch ball.
- Engage the coupler locking mechanism. In the engaged position, the locking mechanism securely holds the coupler to the hitch ball.
- Insert a pin or lock through the hole in the locking mechanism.
- Be sure the coupler is all the way on the hitch ball and the locking mechanism is engaged. A properly engaged locking mechanism will allow the coupler to raise the rear of the tow vehicle. Using the trailer jackstand, verify that you can raise the rear of the tow vehicle by 1-inch after the coupler is locked to the hitch.
- Lower the trailer so that its entire tongue weight is held by the hitch.
- Raise the jackstand to a height where it will not interfere with the road.

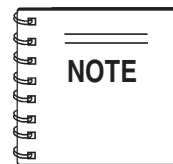

Overloading can damage the tongue jack. **DO NOT** use the tongue jack to raise the tow vehicle more than 1 inch.

**If the coupler cannot be secured to the hitch ball, do not tow the trailer.** Call your dealer for assistance. Lower the trailer so that its entire tongue weight is held by the hitch, and continue retracting the jack to its fully retracted position.

## DA7000 SERIES GENERATORS — TRAILER SAFETY GUIDELINES

### Pintle Hitch Coupler

A pintle eye coupler (Figure 31) connects to a pintle-hook hitch that is located on or under the rear bumper of the tow vehicle. This system of coupling a trailer to a tow vehicle is sometimes referred to as a “lunette eye, tow ring or G.I. hitch.”

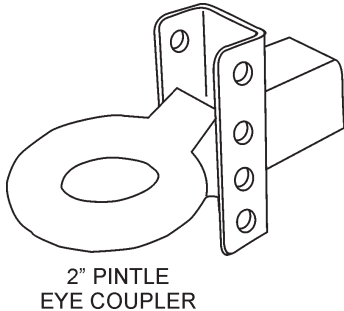


Figure 31. Pintle Hitch Coupler

A pintle hitch trailer may be fitted with a tongue jackstand that can raise and lower the coupler. The tongue jack is mounted to the A-frame (front, or tongue) part of the trailer. By rotating the jack handle clockwise, the jack will extend and raise the tongue of the trailer.

The load rating of the coupler and the necessary pintle hitch size are listed on the trailer tongue. You must provide a pintle hitch and pintle coupler for your tow vehicle, where the load rating of the pintle hitch and pintle coupler is equal to or greater than that of your trailer.

Also, the pintle hitch size must be the same as the pintle coupler size. If the hitch is too small, too large, is under-rated, is loose or is worn, the trailer can come loose from the tow vehicle, and may cause death or serious injury.

### Pintle Coupler and Pintle Hook

Before each tow, check the locking device that secures the coupler to the pintle hook assembly.


The pintle hook lever must be able to operate freely and automatically snap into place into the latched position. Lightly oil the pivot points and sliding surfaces with SAE30W motor oil to prevent rust and help ensure proper operation of the latching mechanism.

If you see or feel evidence of wear, such as flat spots, deformations, pitting or corrosion, on the pintle hook or coupler, immediately have your dealer inspect them to determine the proper action to prevent possible failure of the ball and coupler system. All bent or broken coupler parts must be replaced before towing the trailer.

**THE TOW VEHICLE, PINTLE HITCH AND PINTLE COUPLER MUST HAVE A RATED TOWING CAPACITY EQUAL TO OR GREATER THAN THE TRAILER Gross Vehicle Weight Rating (GVWR).**

**IT IS ESSENTIAL THAT THE PINTLE HITCH BE OF THE SAME SIZE AS THE PINTLE COUPLER.**

The coupler size and load rating (capacity) are marked on the coupler; hitch capacity is marked on the hitch.

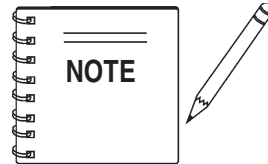

Before coupling the tow vehicle to the trailer, be sure the size and rating of the pintle-hook hitch match the size and rating of the pintle eye coupler. Pintle-hook hitches and couplers are marked with their size and rating.

### WARNING - Pintle Hitch Hook Load Rating

Coupler-to-hitch mismatch can result in uncoupling, leading to death or serious injury.

Be sure the **LOAD RATING** of the pintle hitch hook is equal or greater than the load rating of the pintle eye coupler.

Be sure the **SIZE** of the pintle hitch hook matches the size of the pintle eye coupler.

### WARNING - Defective Pintle Hitch Hook

A worn, cracked or corroded pintle hitch hook can fail while towing, and may result in death or serious injury.

Before coupling trailer, inspect the pintle hitch hook for wear, corrosion and cracks.

Replace worn or damaged pintle hitch hook.

- Rock the pintle eye coupler to make sure it is secured tightly to the hitch.
- Wipe the inside and outside of the pintle coupler, clean and inspect it visually for cracks and deformations; feel the inside of the coupler for worn spots and pits.
- Be sure the coupler is secured tightly to the tongue of the trailer. All coupler fasteners must be visibly solid against the trailer frame.
- Raise the bottom surface of the coupler to be above the top of the pintle hitch hook. Use the tongue jackstand to support the trailer tongue. Wood or concrete blocks may also be used.

# DA7000 SERIES GENERATORS — TRAILER SAFETY



## WARNING - Uncoupled Pintle Hitch Hook

A defective pintle hitch not properly fastened can result in uncoupling, leading to death or serious injury.

Be sure the pintle hook is securely tightened to the tow vehicle before coupling the trailer.

## Coupling the Trailer to the Tow Vehicle (Pintle Coupler)

- Slowly back up the tow vehicle so that the pintle hitch hook is near or aligned under the pintle eye ring coupler.
- Using the jackstand at the front of trailer (tongue), turn the jackstand crank handle to raise the trailer. If the pintle eye coupler does not line up with the pintle hitch hook, adjust the position of the tow vehicle.
- **OPEN** the pintle hook locking mechanism (Figure 32). Place the hook inside the eye coupler. **CLOSE** the pintle hook mechanism.

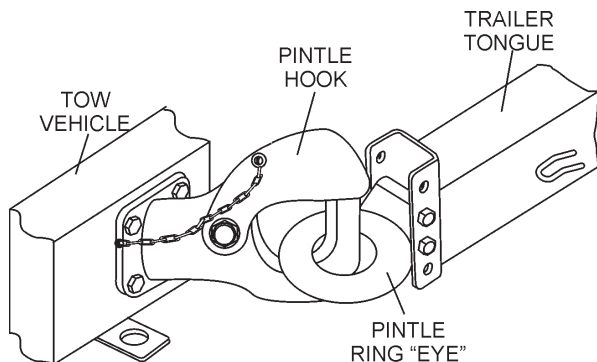


Figure 32. Bumper Pull Trailer (Pintle Hitch)

- Insert a pin or lock through the hole in the locking mechanism.
- Be sure the pintle hook is inserted completely through the eye ring and the locking mechanism is engaged. A properly engaged locking mechanism will allow the coupler to raise the rear of the tow vehicle. Using the trailer jack, test to see that you can raise the rear of the tow vehicle by 1-inch after the coupler is locked to the hitch.
- Lower the trailer so that its entire tongue weight is held by the hitch.
- Raise the jackstand to a height where it will not interfere with the road.

## Connecting the Safety Chains

Connect the safety chains as shown in Figure 33. When attaching the safety chains from the trailer to the tow vehicle, be sure to cross the chains.

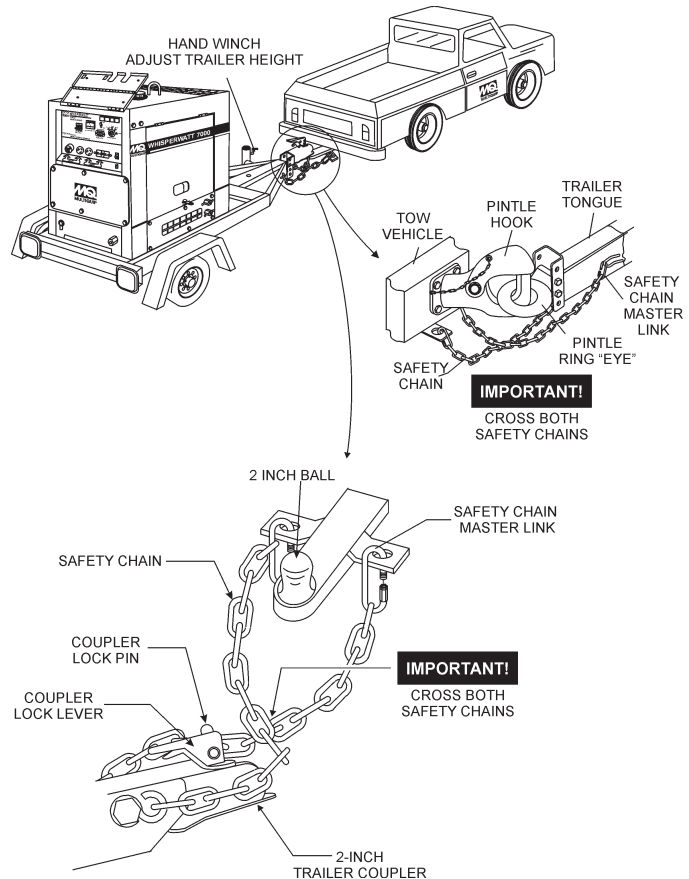


Figure 33. Safety Chain Arrangement

# DA7000 SERIES GENERATORS — TRAILER SAFETY

## TIRE SAFETY

### Unsafe Tires, Lug Nuts or Wheels

Trailer tires and wheels are more likely to fail than car tires and wheels because they carry a heavier load. Therefore, it is essential to inspect the trailer tires before each tow.

If a tire has a bald spot, bulge, cuts, is showing any cords, or is cracked, replace the tire before towing. If a tire has uneven tread wear, take the trailer to a dealer service center for diagnosis.

Uneven tread wear can be caused by tire imbalance, axle misalignment or incorrect inflation.

Tires with too little tread will not provide adequate tracking on wet roadways and can result in loss of control, leading to death or serious injury.

Improper tire pressure causes an unstable trailer and can result in a tire blowout and loss of control. Therefore, before each tow you must also check the tire pressure. Tire pressure must be checked when tires are cold.

Allow 3 hours cool-down after driving as much as 1 mile at 40 m.p.h. before checking tire pressure. NOTE: Trailer tires will be inflated to higher pressures than passenger vehicle tires.

Since trailer wheels and lug nuts (or bolts) are subjected to greater side loads than automobile wheels, they are more prone to loosen. Before each tow, check to make sure they are tight.

The proper tightness (torque) for lug nuts is listed in the lug nut tightening section of this manual. Use a torque wrench to tighten the lug nuts. If you do not have a torque wrench, use a lug wrench (from your tow vehicle) and tighten the nuts as much as you can. Then have a service garage or trailer dealer tighten the lug nuts to the proper torque.



### WARNING - Lug Nut Tightening

Metal creep between the wheel rim and lug nuts will cause rim to loosen and could result in a wheel coming off, leading to death or serious injury.

Tighten lug nuts before each tow.

Lug nuts are also prone to loosen after first being assembled. When driving a new trailer (or after wheels have been remounted), check to make sure they are tight after the **first** 10, 25 and 50 miles of driving and before each tow thereafter.

Failure to perform this check can result in a wheel parting from the trailer and a crash, leading to death or serious injury.



### WARNING - Lug Nut Loosening

Lug nuts are prone to loosen after initial installation, which can lead to death or serious injury.

Check lug nuts for tightness on a new trailer or when wheel(s) have been remounted after the first 10, 25 and 50 miles of driving.



### WARNING - Improper Lug Nut Torque

Improper lug nut torque can cause a wheel parting from the trailer, leading to death or serious injury.

Be sure lug nuts are tight before each tow.



### WARNING - Tire Pressure

Improper tire pressure can result in a blowout and loss of control, which can lead to death or serious injury.

Be sure tires are inflated to pressure indicated on side wall before towing trailer.



## Determining Load Limit of Trailer

Determining the load limits of a trailer includes more than understanding the load limits of the tires alone. On all trailers there is a Federal certification/VIN label that is located on the forward half of the left (road) side of the unit. This certification/VIN label will indicate the trailer's Gross Vehicle Weight Rating (GVWR). This is the most weight the fully loaded trailer can weigh. It will also provide the Gross Axle Weight Rating (GAWR). This is the most a the axle can weigh.

There is a vehicle placard (Figure 34) located in the same location as the certification label described above. This placard provides tire and loading information. In addition, this placard will show a statement regarding maximum cargo capacity.

**TIRE AND LOADING INFORMATION**

The weight of cargo should never exceed XXX kg. Or XXX lbs.

TIRE	SIZE	COLD TIRE PRESSURE
FRONT		
REAR		
SPARE		

**SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION**

**Figure 33. Tire and Loading Information Placard**

If additional work items (hoses, tools, clamps etc.) are going to be added to the trailer, be sure they are distributed evenly to prevent overloading front to back and side to side. Heavy items should be placed low and as close to the axle positions as reasonable. Too many items on one side may overload a tire.

Excessive loads and/or underinflation cause tire overloading and, as a result, abnormal tire flexing occurs. This situation can generate an excessive amount of heat within the tire. Excessive heat may lead to tire failure. It is the air pressure that enables a tire to support the load, so proper inflation is critical. The proper air pressure may be found on the certification/VIN label and/or on the Tire and Loading Information placard. This value should never exceed the maximum cold inflation pressure stamped on the tire.

### Step 1.

Locate the statement, "The weight of cargo should never exceed XXX kg or XXX lbs.," on your vehicle's Tire and Loading Information placard(Figure XX). This figure equals the available amount of equipment load capacity.

### Step 2.

Determine the weight of the equipment being loaded on the tow vehicle. That weight may not safely exceed the available equipment load capacity. The trailer's Tire Information Placard is attached adjacent to or near the trailer's VIN (Certification) label at the left front of the trailer (See Figure 33).

## Determining Load Limit of Tow Vehicle

### Step 1.

Locate the statement, "The combined weight of occupants and cargo should never exceed XXX lbs.," on your vehicle's placard.

### Step 2.

Determine the combined weight of the driver and passengers who will be riding in your vehicle.

### Step 3.

Subtract the combined weight of the driver and passengers from XXX kilograms or XXX pounds.

### Step 4.

The resulting figure equals the available amount of cargo and luggage capacity. For example, if the "XXX" amount equals 1400 lbs. and there will be five 150 lb. passengers in your vehicle, the amount of available cargo and luggage capacity is 650 lbs. (1400-750 (5 x 150) = 650 lbs.).

### Step 5.

Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage capacity calculated in Step 4.

If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult the tow vehicle's manual to determine how this weight transfer reduces the available cargo and luggage capacity of your vehicle.



## DA7000 SERIES GENERATORS — TIRE SAFETY


Studies of tire safety show that maintaining proper tire pressure, observing tire and vehicle load limits (not carrying more weight in your vehicle than your tires or vehicle can safely handle), avoiding road hazards and inspecting tires for cuts, slashes and other irregularities are the most important things you can do to avoid tire failure, such as tread separation or blowout and flat tires. These actions, along with other care and maintenance activities, can also:

- Improve vehicle handling
- Help protect you and others from avoidable breakdowns and accidents.
- Improve fuel economy
- Increase the tire life

Use the information contained in this section to make tire safety a regular part of your vehicle maintenance routine. Recognize that the time you spend is minimal compared with the inconvenience and safety consequences of a flat tire or other tire failure.

### Tire Fundamentals

Federal law requires tire manufacturers to place standardized information on the sidewall of all tires (Figure 35). This information identifies and describes the fundamental characteristics of the tire and also provides a tire identification number for safety standard certification and in case of a recall.

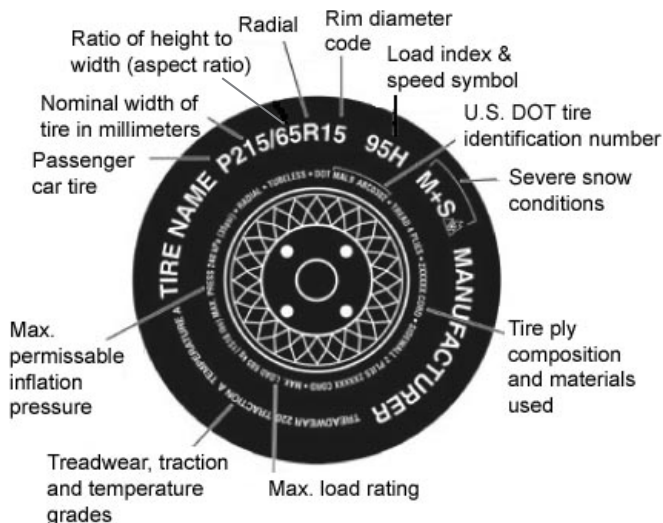

**Figure 35. Standard Tire Sidewall Information**

**P:** The “P” indicates the tire is for passenger vehicles.

**Next number:** This three-digit number gives the width in millimeters of the tire from sidewall edge to sidewall edge. In general, the larger the number, the wider the tire.

**Next number:** This two-digit number, known as the aspect ratio, gives the tire’s ratio of height to width. Numbers of 70 or lower indicate a short sidewall for improved steering response and better overall handling on dry pavement.

**P:** The “R” stands for radial. Radial ply construction of tires has been the industry standard for the past 20 years.

**Next number:** This two-digit number is the wheel or rim diameter in inches. If you change your wheel size, you will have to purchase new tires to match the new wheel diameter.

**Next number:** This two- or three-digit number is the tire’s load index. It is a measurement of how much weight each tire can support. You may find this information in your owner’s manual. If not, contact a local tire dealer. Note: You may not find this information on all tires because it is not required by law.

**M+S:** The “M+S” or “M/S” indicates that the tire has some mud and snow capability. Most radial tires have these markings; hence, they have some mud and snow capability.

**Speed Rating:** The speed rating denotes the speed at which a tire is designed to be driven for extended periods of time. The ratings range from 99 miles per hour (mph) to 186 mph. These ratings are listed in Table 9. Note: You may not find this information on all tires because it is not required by law.

Table 9. Speed Rating	
Letter Rating	Speed Rating
Q	99 mph
R	106 mph
S	112 mph
T	118 mph
U	124 mph
H	130 mph
V	149 mph
W	168* mph
Y	186* mph

## DA7000 SERIES GENERATORS — TIRE SAFETY

**U.S. DOT Tire Identification Number:** This begins with the letters “DOT” and indicates that the tire meets all federal standards. The next two numbers or letters are the plant code where it was manufactured, and the last four numbers represent the week and year the tire was built. For example, the numbers 3197 means the 31st week of 1997. The other numbers are marketing codes used at the manufacturer’s discretion. This information is used to contact consumers if a tire defect requires a recall.

**Tire Ply Composition and Materials Used:** The number of plies indicates the number of layers of rubber-coated fabric in the tire. In general, the greater the number of plies, the more weight a tire can support. Tire manufacturers also must indicate the materials in the tire, which include steel, nylon, polyester, and others.

**Maximum Load Rating:** This number indicates the maximum load in kilograms and pounds that can be carried by the tire.

**Maximum Permissible Inflation Pressure:** This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.


### Uniform Tire Quality Grading Standards (UTQGS)

**Treadwear Number:** This number indicates the tire’s wear rate. The higher the treadwear number is, the longer it should take for the tread to wear down. For example, a tire graded 400 should last twice as long as a tire graded 200.

**Traction Letter:** This letter indicates a tire’s ability to stop on wet pavement. A higher graded tire should allow you to stop your car on wet roads in a shorter distance than a tire with a lower grade. Traction is graded from highest to lowest as “AA,” “A,” “B,” and “C”.

**Temperature Letter:** This letter indicates a tire’s resistance to heat. The temperature grade is for a tire that is inflated properly and not overloaded. Excessive speed, underinflation or excessive loading, either separately or in combination, can cause heat build-up and possible tire failure. From highest to lowest, a tire’s resistance to heat is graded as “A,” “B,” or “C”.

Reference Figure 36 for additional tire information for light trucks.

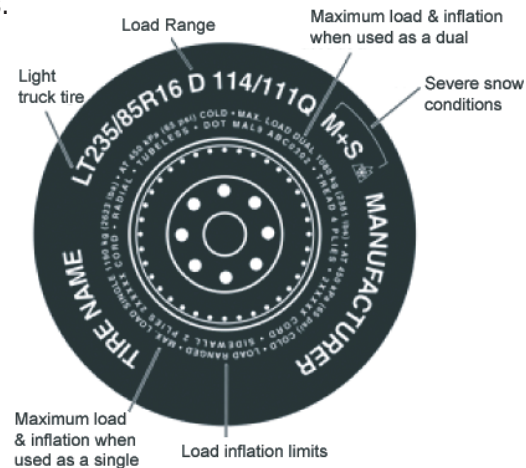

**Figure 36. UTQGS Tire Information**

Tires for light trucks have other markings besides those found on the sidewalls of passenger tires.

**LT:** The “LT” indicates the tire is for light trucks or trailers.

**ST:** An “ST” is an indication the tire is for trailer use only.

**Max. Load Dual kg (lbs) at kPa (psi) Cold:** This information indicates the maximum load and tire pressure when the tire is used as a dual, that is, when four tires are put on each rear axle (a total of six or more tires on the vehicle).

**Max. Load Single kg (lbs) at kPa (psi) Cold**

This information indicates the maximum load and tire pressure when the tire is used as a single.

### Load Range

This information identifies the tire’s load-carrying capabilities and its inflation limits.

### Tire Safety Tips

- Slow down if you have to go over a pothole or other object in the road.
- **DO NOT** run over curbs or other foreign objects in the roadway, and try not to strike the curb when parking.
- Check tire inflation pressure weekly during use to insure the maximum tire life and tread wear.
- **DO NOT** bleed air from tires when they are hot.
- Inspect tires for uneven wear patterns on the tread, cracks, foreign objects, or other signs of wear or trauma.
- Remove bits of glass and foreign objects wedged in the tread.

# DA7000 SERIES GENERATORS — TIRE SAFETY

- Make sure your tire valves have valve caps.
- **ALWAYS** check tire pressure on tow vehicle and trailer before towing. Check tire pressure at least once a month.
- **DO NOT** overload tow vehicle. Check the tire information and loading placard for safe allowable tire loading conditions.

## Tire Repair







The proper repair of a punctured tire requires a plug for the hole and a patch for the area inside the tire that surrounds the puncture hole. Punctures through the tread can be repaired if they are not too large, but punctures to the sidewall **should not be repaired**. Tires must be removed from the rim to be properly inspected before being plugged and patched.

## Replacing Worn or Damaged Tires

Replace the tire before towing the trailer if the tire treads have less than 1/16 inch depth or the telltale bands are visible. Check inflation pressure weekly during use to insure the maximum tire life and tread wear. A bubble, cut or bulge in a side wall can result in a tire blowout. Inspect both side walls of each tire for any bubble, cut or bulge; and replace a damaged tire before towing the trailer.

Table 10 below will help pinpoint the causes and solutions of tire wear problems.


TABLE 10. TIRE WEAR TROUBLESHOOTING

WEAR PATTERN	CAUSE	SOLUTION
 Center Wear	Over Inflation.	Adjust pressure to particular load per tire manufacturer.
 Edge Wear	Under Inflation.	Adjust pressure to particular load per tire manufacturer.
 Side Wear	Loss of camber or overloading.	Make sure load does not exceed axle rating. Align wheels.
 Toe Wear	Incorrect toe-in.	Align wheels.
 Cupping	Out-of-balance.	Check bearing adjustment and balance tires.
 Flat Spots	Wheel lockup & tire skidding.	Avoid sudden stops when possible and adjust brakes.



## WARNING - Flying Objects

**ALWAYS** wear safety glasses when removing or installing force fitted parts **DO NOT** attempt to repair or modify a wheel. **DO NOT** install an inner-tube to correct a leak through the rim. If the rim is cracked, the air pressure in the inner tube may cause pieces of the rim to explode (break off) with great force and cause serious eye or bodily injury.

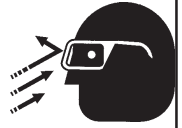



## Wheel Rims

If the trailer has been struck, or impacted, on or near the wheels, or if the trailer has struck a curb, inspect the rims for damage (i.e. being out of round); and replace any damaged wheel. Inspect the wheels for damage every year, even if no obvious impact has occurred.

## Wheels, Bearings and Lug Nuts

A loose, worn or damaged wheel bearing is the most common cause of brakes that grab.

To check wheel bearings, jack trailer and check wheels for side-to-side looseness. If the wheels are loose, or spin with a wobble, the bearings must be serviced or replaced. Check inflation pressure weekly during use to insure the maximum tire life and tread wear. Most trailer axles are built with sealed bearings that are not serviceable. Sealed bearings must be replaced as complete units.

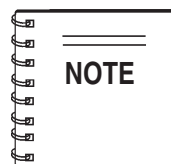

**NEVER!** use an pneumatic air gun to tighten wheel lug nuts.



## WARNING - Lug Nut Tightening

Over-tightening lug nuts will result in breaking the studs or permanently deforming the mounting stud holes in the wheels.



## WARNING - Lug Nut Inspection

Lug nuts are prone to loosen after initial installation, which can lead to death or serious injury. Check all wheel lug nuts periodically.

# DA7000 SERIES GENERATORS — TIRE SAFETY


## Lug Nut Torque Requirements

It is extremely important to apply and maintain proper wheel mounting torque on the trailer. Be sure to use only the fasteners matched to the cone angle of the wheel. Proper procedure for attachment of the wheels is as follows:

1. Start all wheel lug nuts by hand.
2. Torque all lug nuts in sequence. See Figure 37. **DO NOT** torque the wheel lug nuts all the way down. Tighten each lug nut in 3 separate passes as defined by Table 11.
3. Check to see if the lug nuts are tight after the first 10, 25 and 50 miles of driving and before each tow thereafter.


**Table 11. Tire Torque Requirements**

Wheel Size	First Pass FT-LBS	Second Pass FT-LBS	Third Pass FT-LBS
12"	20-25	35-40	50-65
13"	20-25	35-40	50-65
14"	20-25	50-60	90-120
15"	20-25	50-60	90-120
16"	20-25	50-60	90-120

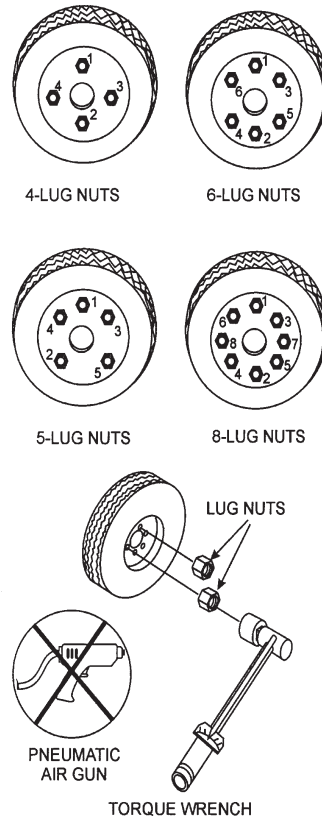

**Figure 37. Wheel Lug Nuts Tightening Sequence**

# DA7000 SERIES GENERATORS — WIRING DIAGRAM TRAILER LIGHTS

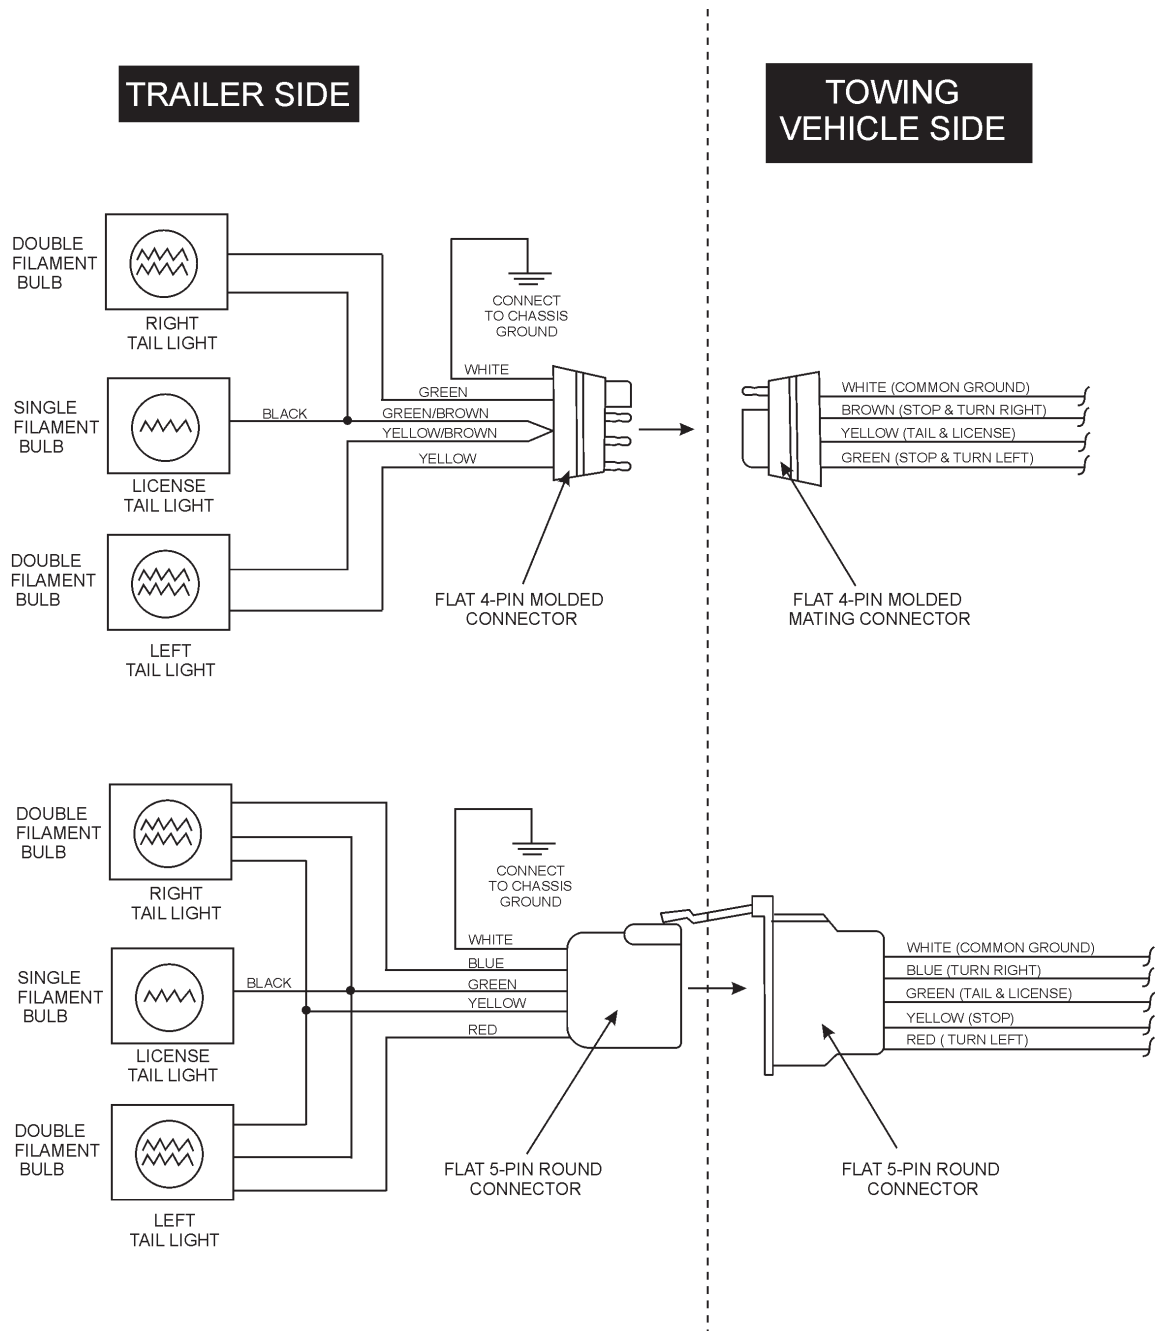

NOTE:  
LIGHTS ARE ORIENTED FROM THE DRIVER'S SEAT

Figure 38. Trailer Lights Wiring Diagram

## Lights and Signals

Before each tow, check the trailer taillights, stoplights, turn signals and any clearance lights for proper operation. Replace any broken or burned-out lamps as necessary. Check the wire harness for cuts, fraying or other damage. If it needs replacing, contact your dealer.




### WARNING - Trailer Lights


Improper operating taillights, stoplights and turn signals can cause collisions.

Check all lights before each tow.

# DA7000 SERIES GENERATORS — WIRING DIAGRAM GENERATOR

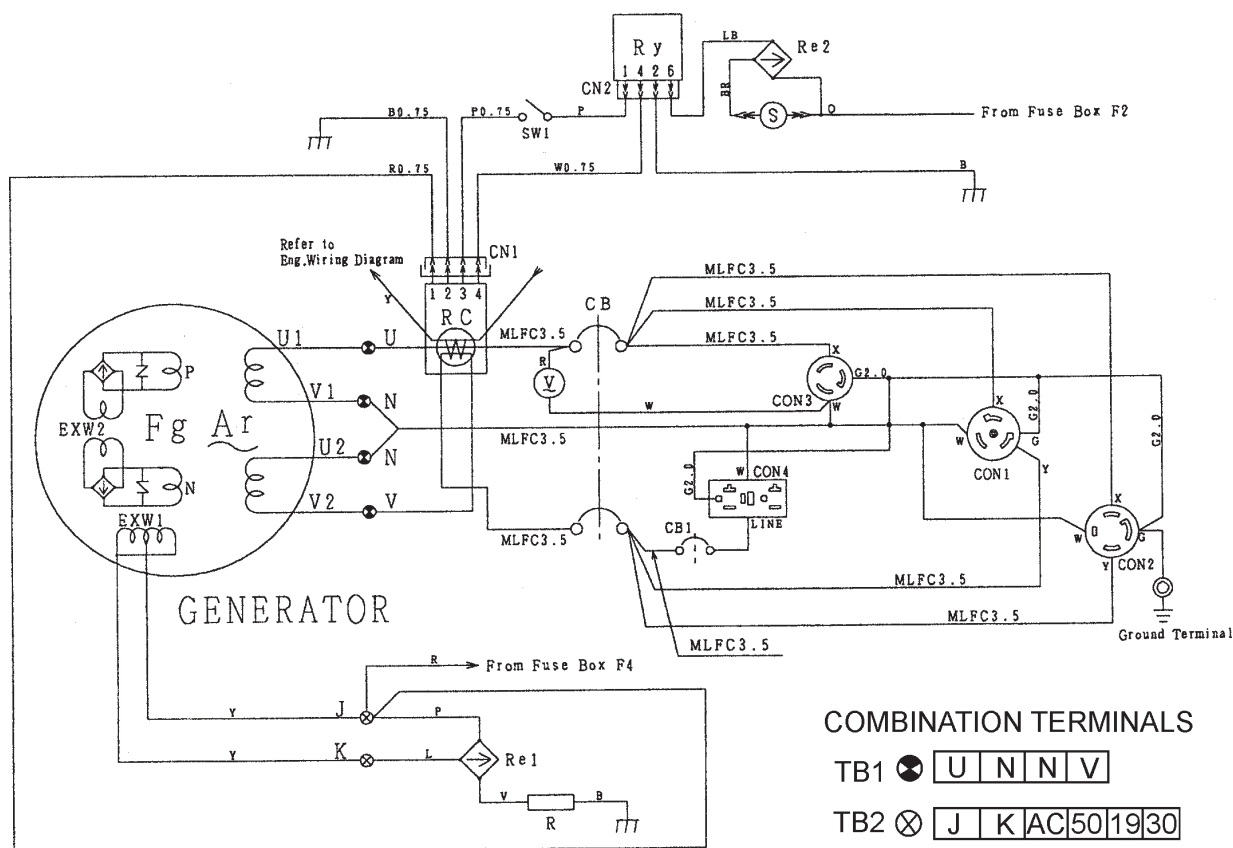

WIRING COLOR CODE	
SYMBOL	COLOR
B	BLACK
L	BLUE
BR	BROWN
G	GREEN
GR	GRAY
V	VIOLET
P	PINK
R	RED
W	WHITE
Y	YELLOW
LB	LIGHT BLUE
LG	LIGHT GREEN
O	ORANGE

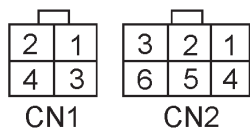


CONNECTOR  
VIEWED AT  
WINDING  
SIDE

SYMBOL	PARTS NAME
AR	ARMATURE WINDING
Eg	FIELD WINDING
EXW1~2	EXCITATION WINDING
V	AC VOLTMETER
RE1~2	RECTIFIER
CON1	RECEPTACLE (120/240V, 50 AMP)
CON2	RECEPTACLE (120/240V, 30 AMP)
CON3	RECEPTACLE (120V, 30 AMP)
CON4	RECEPTACLE (120V, 20 AMP-GFCI)
CB	MAIN CIRCUIT BREAKER (265V, 25 AMP)
CB	GFCI CIRCUIT BREAKER (250V, 20 AMP)
SW1	IDLE CONTROL SWITCH
RC	IDLE CONTROL DEVICE
S	SOLENOID
Ry	RELAY
R	RESISTOR

Figure 39. Generator Wiring Diagram



# DA7000 SERIES GENERATORS — WIRING DIAGRAM ENGINE

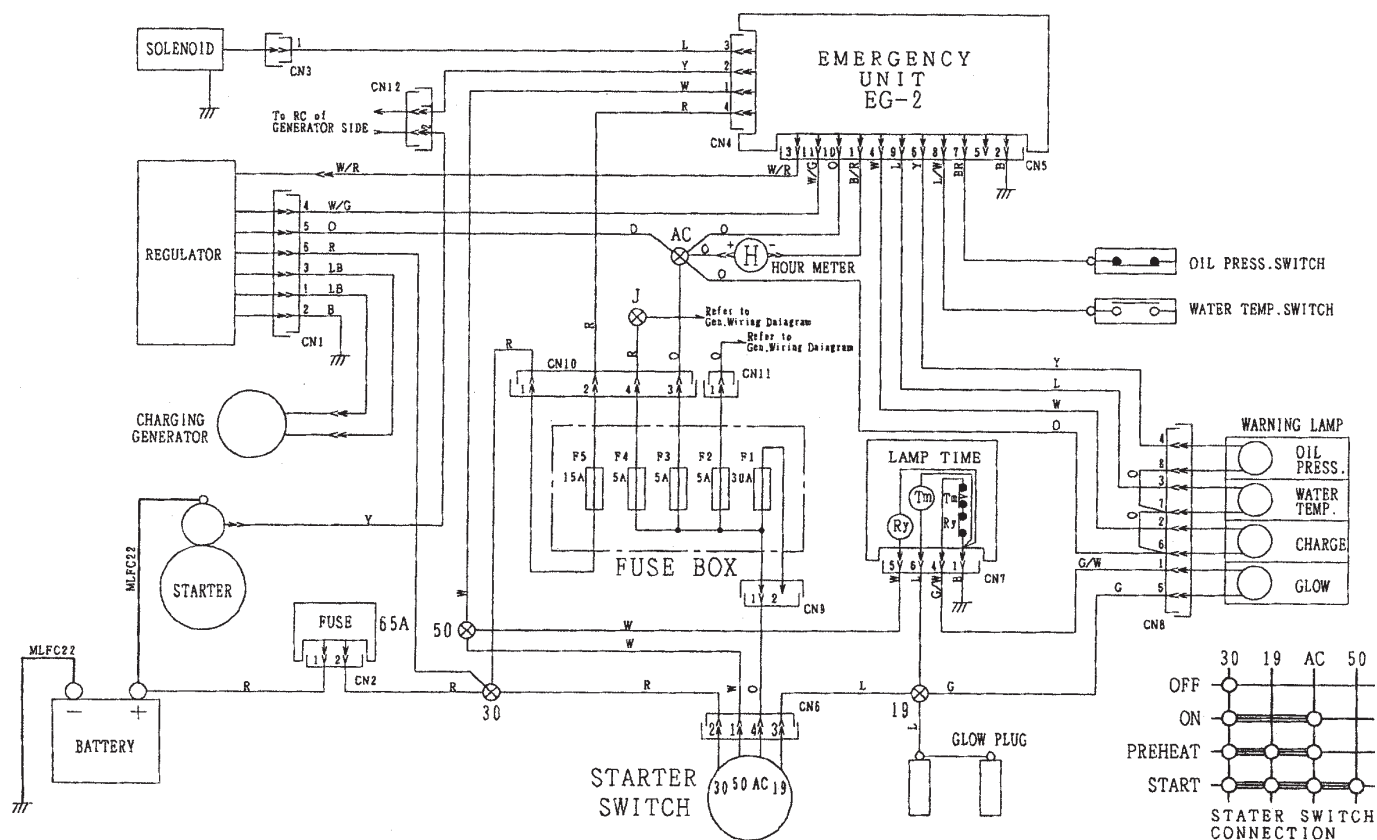

WIRING COLOR CODE	
SYMBOL	COLOR
B	BLACK
L	BLUE
BR	BROWN
G	GREEN
GR	GRAY
V	VIOLET
P	PINK
R	RED
W	WHITE
Y	YELLOW
LB	LIGHT BLUE
LG	LIGHT GREEN
O	ORANGE

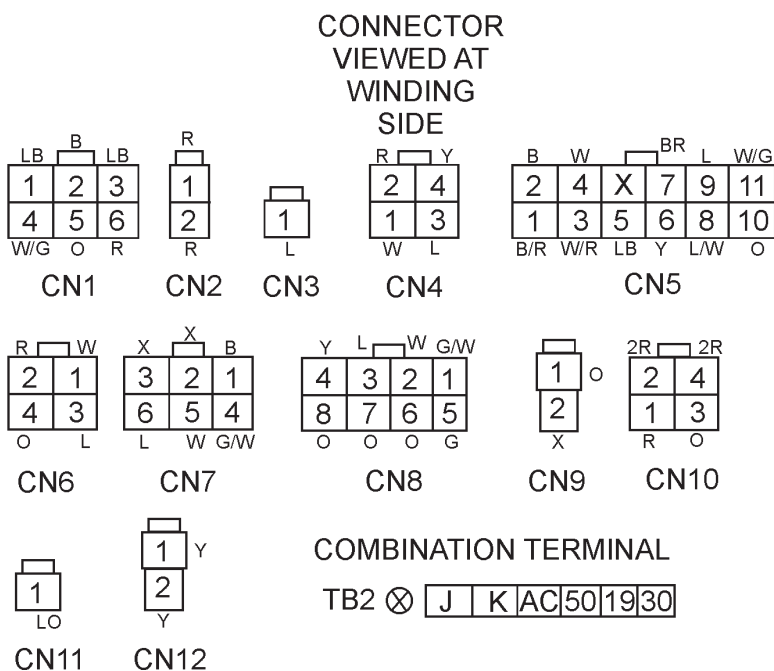


Figure 40. Engine Wiring Diagram

# DA7000 SERIES GENERATORS —TROUBLESHOOTING (ENG./GEN.)

**TABLE 12. ENGINE AND GENERATOR TROUBLESHOOTING**

SYMPTOM	POSSIBLE PROBLEM	SOLUTION
Engine fails to start and starter does not rotate.	Dead Battery?	Replace Battery.
	Defective Starter Switch?	Replace Switch.
	Defective Starter?	Replace Starter.
	Fuse F5 Burned Out?	Replace Fuse.
Engine fails to start and starter rotates.	Broken Pre-Heat Circuit?	Check Pre-Heat Circuit.
	No Fuel?	Add Fuel.
	Defective Wiring?	Check Wiring.
Engine starts "Idle Control Switch" is in OFF position and engine remains at low speed.	Defective Idle Control Switch?	Replace Switch.
	Idle Control Switch is in ON position?	Set Switch to OFF Position.
	Clogged Fuel Strainer?	Clean or Replace.
	Clogged Air Cleaner?	Clean or Replace.
	Defective Idle Control Device?	Replace.
	Disconnected Wiring?	Check and Repair Wiring.
Engine starts and "Idle Control Switch" is in OFF position. Engine speed rises and no voltage is present in AC power source.	No Voltage Present in AC Power source	Replace Rectifier (RE1).
	Defective Rotor?	Replace Rotor.
	Defective Voltmeter?	Replace Voltmeter.
	Disconnected Wiring?	Check and Repair Wiring.
	Layer Short-Circuit in armature winding?	Replace Armature.
Engine starts and "Idle Control Switch" is in OFF position. Engine speed rises and AC power voltage is too low or cannot be used.	Defective Circuit Breaker (Protector)?	Replace Circuit Breaker (Protector).
	Layer Short-Circuit, Broken Wires In Armature Winding?	Repair or Replace Armature.
Engine starts and "Idle Control Switch" is in OFF position. Engine speed rises and battery discharges too soon.	Defective Engine Regulator?	Replace Regulator.
	Defective Wiring?	Repair or Replace Wiring.
Engine starts and "Idle Control Switch" is in OFF position. Engine speed rises and engine seems overloaded.	Defective Alternator?	Repair or Replace Alternator.
	Damaged Alternator Bearing?	Replace Alternator Bearings.

# DA7000 SERIES GENERATORS — TROUBLESHOOTING (ENG./GEN.)

**TABLE 12. ENGINE AND GENERATOR TROUBLESHOOTING (CONTINUED)**

SYMPTOM	POSSIBLE PROBLEM	SOLUTION
Engine starts and "Idle Control Switch" is in OFF position. Engine speed rises and engine has large vibrations. overload.	Bad Engine Installation?	Repeat Installation of of Engine.
Engine starts and "Idle Control Switch" is in OFF position. Engine speed rises and engine has abnormal noise.	Loose Engine Parts?	Check All Engine Parts For Tightnes.
	Defective Alternator?	Check Alternator for Damaged Bearing or Loose Clamping Bolts.
	Defective Enclosure?	Check Enclosure Bolts for Tightness.
Engine starts and "Idle Control Switch" is in OFF position. Engine speed rises and remains at high speed when Idle Control switch is placed in the ON position.	Defective Idle Control Device?	Repair or Replace Idle Control Device.
	Defective Idle Control Switch?	Replace Idle Control Switch.
	Defective Solenoid?	Replace Solenoid.
	Defective Relay?	Replace Relay.

# DA7000 SERIES GENERATORS —TROUBLESHOOTING (ENGINE)

**TABLE 13. ENGINE TROUBLESHOOTING**

SYMPTOM	POSSIBLE PROBLEM	SOLUTION
Engine does not start.	No fuel?	Replenish fuel.
	Air in the fuel system?	Bleed system.
	Water in the fuel system?	Remove water from fuel tank.
	Fuel pipe clogged?	Clean fuel pipe.
	Fuel filter clogged?	Clean or change fuel filter.
	Excessively high viscosity of fuel or engine oil at low temperature?	Use the specified fuel or engine oil.
	Fuel with low cetane number?	Use the specified fuel.
	Fuel leak due to loose injection pipe retaining nut?	Tighten nut.
	Incorrect injection timing?	Adjust.
	Fuel cam shaft worn?	Replace.
	Injection nozzle clogged?	Clean injection nozzle.
	Injection pump malfunctioning?	Repair or replace.
	Seizure of crankshaft, camshaft, piston, cylinder liner or bearing?	Repair or replace.
	Compression leak from cylinder?	Replace head gasket, tighten cylinder head bolt, glow plug and nozzle holder.
	Improper valve timing?	Correct or replace timing gear.
	Piston ring and liner worn?	Replace.
	Excessive valve clearance?	Adjust.
Starter does not run.	Battery discharged?	Charge battery.
	Starter malfunctioning?	Repair or replace.
	Key switch malfunctioning?	Repair or replace.
	Wiring disconnected?	Connect wiring.

# DA7000 SERIES GENERATORS — TROUBLESHOOTING (ENGINE)

**TABLE 13. ENGINE TROUBLESHOOTING (CONTINUED)**

SYMPTOM	POSSIBLE PROBLEM	SOLUTION
Engine revolution is not smooth.	Fuel filter clogged or dirty?	Clean or change.
	Air cleaner clogged?	Clean or change.
	Fuel leak due to loose injection pipe retaining nut?	Tighten nut.
	Injection pump malfunctioning?	Repair or replace.
	Incorrect nozzle opening pressure?	Adjust.
	Injection nozzle stuck or clogged?	Repair or replace.
	Fuel over flow pipe clogged?	Clean.
	Governor malfunctioning?	Repair.
Either white or blue exhaust gas is observed.	Excessive engine oil?	Reduce to the specified level.
	Piston ring and liner worn or stuck?	Repair or replace.
	Incorrect injection timing?	Adjust.
	Deficient compression?	Adjust top clearance.
Either black or dark gray exhaust gas is observed.	Overload?	Lessen the load.
	Low grade fuel used?	Use the specified fuel.
	Fuel filter clogged?	Clean or change.
	Air cleaner clogged?	Clean or change.
	Deficient nozzle injection?	Repair or replace the nozzle.
Deficient output.	Incorrect injection timing?	Adjust.
	Engine's moving parts seem to be seizing?	Repair or replace.
	Uneven fuel injection?	Repair or replace the injection pump.
	Deficient nozzle injection?	Repair or replace the nozzle.
	Compression leak?	Replace head gasket, tighten cylinder head bolt, glow plug and nozzle holder.

# DA7000 SERIES GENERATORS — EXPLANATION OF CODE IN REMARKS

The following section explains the different symbols and remarks used in the Parts section of this manual. Use the help numbers found on the back page of the manual if there are any questions.

The contents and part numbers listed in the parts section are subject to change **without notice**. Multiquip does not guarantee the availability of the parts listed.



Sample Parts List:

NO.	PART NO.	PART NAME	QTY.	REMARKS
1	12345	BOLT .....	1 ....	INCLUDES ITEMS W/*
2*		WASHER, 1/4 IN. ....		NOT SOLD SEPARATELY
2*	12347	WASHER, 3/8 IN. ....	1 ....	MQ-45T ONLY
3	12348	HOSE .....	A/R ..	MAKE LOCALLY
4	12349	BEARING .....	1 ....	S/N 2345B AND ABOVE

## NO. Column

**Unique Symbols** - All items with same unique symbol (\*, #, +, %, or >) in the number column belong to the same assembly or kit, which is indicated by a note in the "Remarks" column.

**Duplicate Item Numbers** - Duplicate numbers indicate multiple part numbers are in effect for the same general item, such as different size saw blade guards in use or a part that has been updated on newer versions of the same machine.

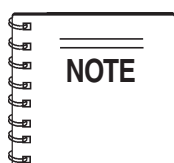

When ordering a part that has more than one item number listed, check the remarks column for help in determining the proper part to order.

## PART NO. Column

**Numbers Used** - Part numbers can be indicated by a number, a blank entry, or TBD.

TBD (To Be Determined) is generally used to show a part that has not been assigned a formal part number at time of publication.

A blank entry generally indicates that the item is not sold separately or is not sold by Multiquip. Other entries will be clarified in the "Remarks" Column.

## QTY. Column

**Numbers Used** - Item quantity can be indicated by a number, a blank entry, or A/R.

A/R (As Required) is generally used for hoses or other parts that are sold in bulk and cut to length.

A blank entry generally indicates that the item is not sold separately. Other entries will be clarified in the "Remarks" Column.

## REMARKS Column

Some of the most common notes found in the "Remarks" Column are listed below. Other additional notes needed to describe the item can also be shown.

**Assembly/Kit** - All items on the parts list with the same unique symbol will be included when this item is purchased.

Indicated by:

"INCLUDES ITEMS W/(unique symbol)"

**Serial Number Break** - Used to list an effective serial number range where a particular part is used.

Indicated by:

"S/N XXXXX AND BELOW"

"S/N XXXX AND ABOVE"

"S/N XXXX TO S/N XXX"

**Specific Model Number Use** - Indicates that the part is used only with the specific model number or model number variant listed. It can also be used to show a part is NOT used on a specific model or model number variant.


Indicated by:

"XXXXX ONLY"

"NOT USED ON XXXX"

**"Make/Obtain Locally"** - Indicates that the part can be purchased at any hardware shop or made out of available items. Examples include battery cables, shims, and certain washers and nuts.

**"Not Sold Separately"** - Indicates that an item cannot be purchased as a separate item and is either part of an assembly/kit that can be purchased, or is not available for sale through Multiquip.

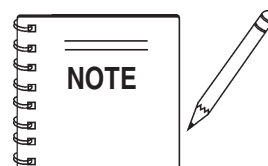

Specification and part number are subject to change without notice.




## DA7000 SERIES GENERATORS — SUGGESTED SPARE PARTS

### **DA7000 SERIES GENERATORS W/KUBOTA Z482-EB/Z482-E2B AND EB/Z482-E3B DIESEL ENGINES 1 TO 3 UNITS**

Qty.	P/N	Description
5 .....	1556211010 .....	AIR FILTER
5 .....	7000011221 .....	AIR FILTER, ELEMENT
5 .....	1523143560 .....	FUEL FILTER
5 .....	7000015241 .....	OIL FILTER CARTRIDGE, ORANGE/WHITE UNITS TIER I AND TIER II
5 .....	1585332435 .....	OIL FILTER, CARTRIDGE, WHITE UNITS TIER IV
2 .....	1980572531 .....	FAN BELT
1 .....	3741059110 .....	STARTER SWITCH
5 .....	3741055150 .....	IGNITION KEY
1 .....	1584139010 .....	OIL SENDING UNIT, ORANGE UNITS TIER I
1 .....	1584139013 .....	OIL SENDING UNIT, WHITE UNITS TIER II AND TIER IV
1 .....	D2312500103 .....	RADIATOR HOSE (UPPER)
1 .....	D2312500003 .....	RADIATOR HOSE (LOWER)
1 .....	0810105800 .....	FUEL CAP
1 .....	0601842463 .....	RESISTOR
1 .....	0602201378 .....	REGULATOR
1 .....	0601807456 .....	CIRCUIT BREAKER
1 .....	0601827350 .....	CONTROL UNIT
2 .....	0601810830 .....	BULB, INDICATOR ASSY.
3 .....	0601806640 .....	FUSE, 65 AMP
4 .....	1685165510 .....	GLOW PLUG, ORANGE UNITS TIER I
4 .....	1685165512 .....	GLOW PLUG, WHITE UNITS TIER II AND TIER IV
2 .....	1554383040 .....	SWITCH, WATER TEMP., ORANGE UNITS TIER I
2 .....	1753883040 .....	SWITCH, WATER TEMP., WHITE UNITS TIER II AND TIER IV

# DA7000 SERIES GENERATORS—NAMEPLATE AND DECALS

## NAMEPLATE AND DECALS

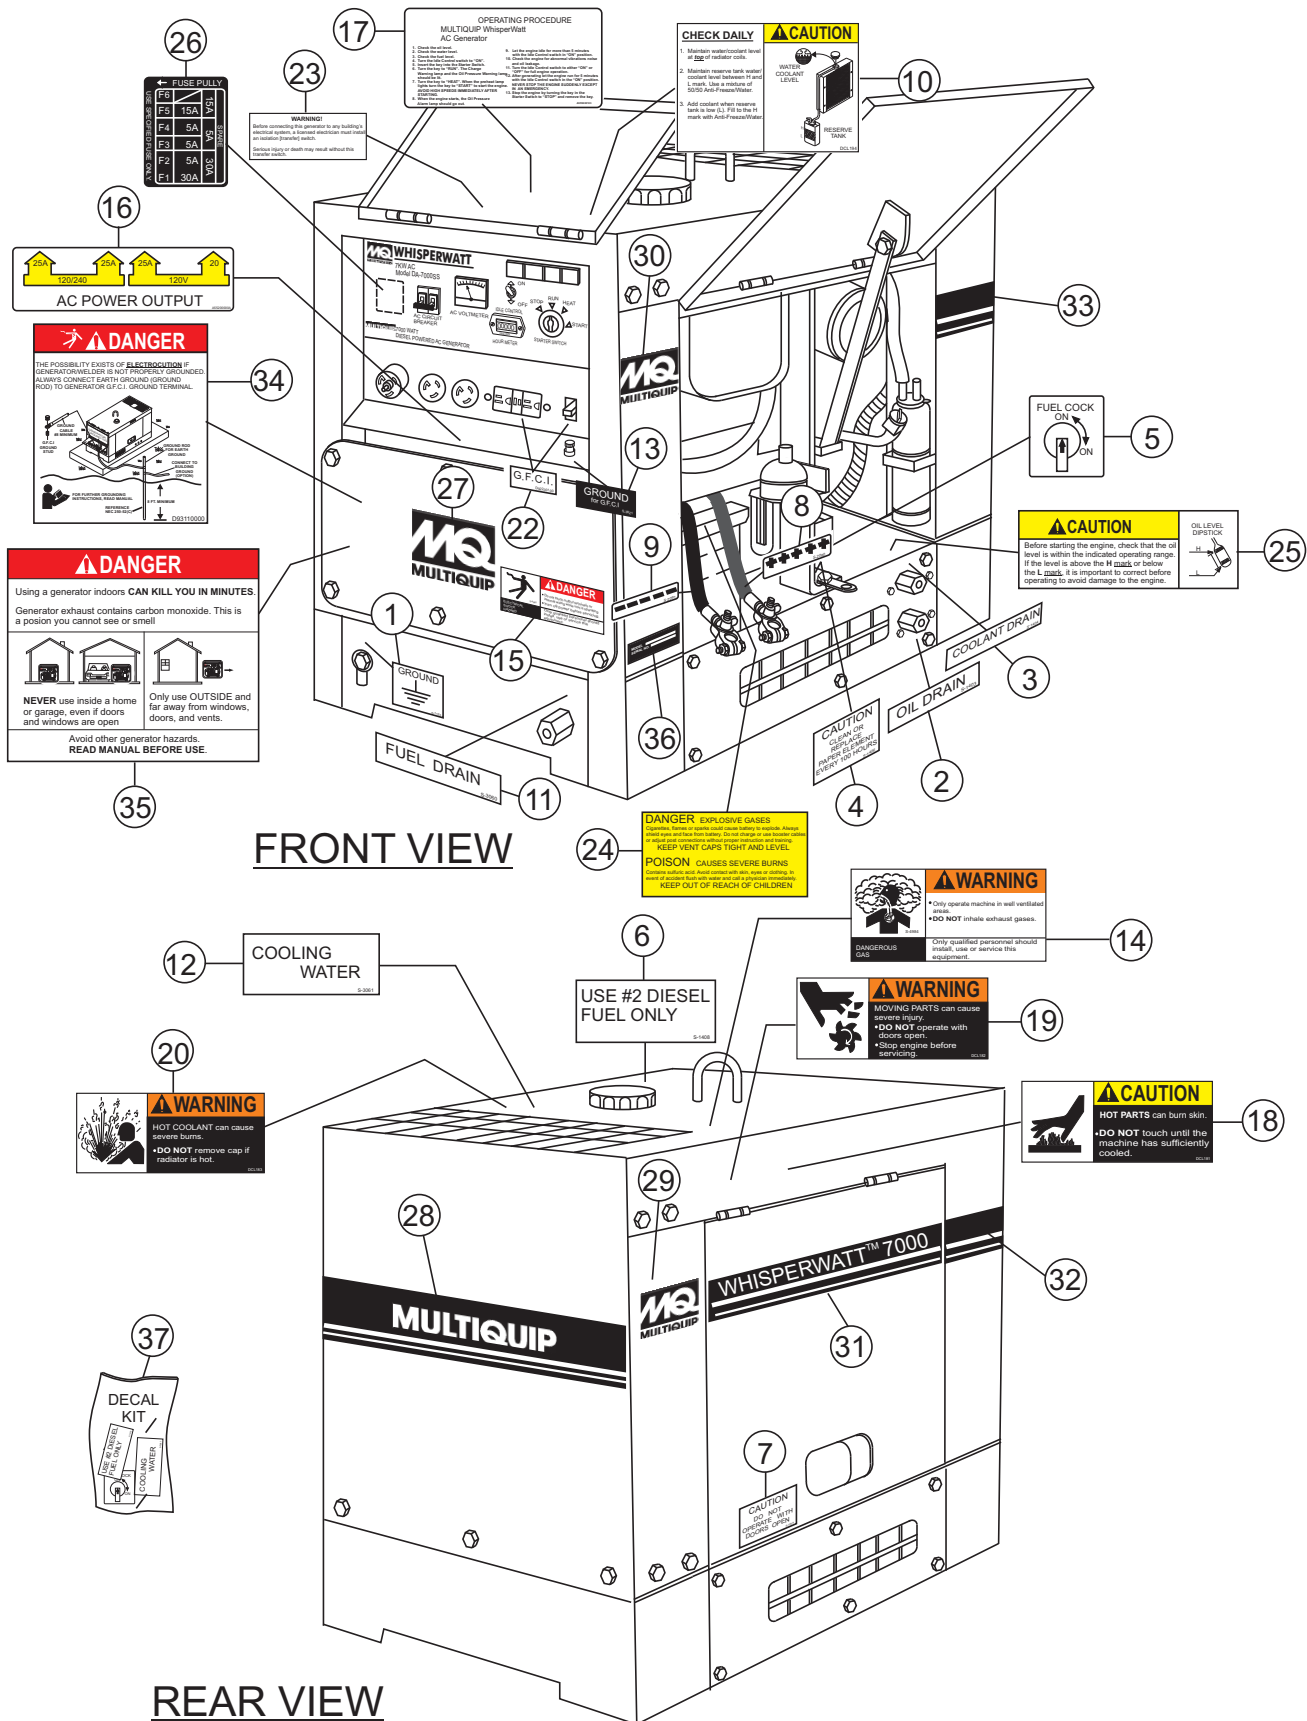


# DA7000 SERIES GENERATORS — NAMEPLATE AND DECALS

## NAMEPLATE AND DECALS

<b>NO</b>	<b>PART NO</b>	<b>PART NAME</b>	<b>QTY.</b>	<b>REMARKS</b>
1	0800628504	DECAL: GROUND .....	1 .....	S1123
2#	1630645004	DECAL: OIL DRAIN .....	1 .....	S1403
3#	1630647004	DECAL: COOLANT DRAIN .....	1 .....	S1404
4#	1630610404	DECAL: CAUTION (PAPER ELEMENT) .....	1 .....	S1406
5#	1630680104	DECAL: FUEL COCK .....	1 .....	S1407
6#	1630680004	DECAL: USE 2 DIESEL FUEL ONLY .....	1 .....	S1408
6#	B9504501204	DECAL: DIESEL FUEL .....	1 .....	B90450120 — DA7000SSA
7#	1630610504	DECAL: CAUTION (DOORS OPEN) .....	2 .....	S1409
8#	0600689404	DECAL: BATTERY POSITIVE .....	1 .....	S2090
9#	0800689504	DECAL: BATTERY NEGATIVE .....	1 .....	S2091
10#	6390671104	DECAL: IMPORTANT CHECK DAILY .....	1 .....	S2377
11#	7810680104	DECAL: FUEL DRAIN .....	1 .....	S3060
12#	7810680204	DECAL: COOLING WATER .....	1 .....	S3061
13#	8700611603	DECAL: GROUND FOR G. F. C. I. ....	1 .....	S3821 REPLACES P/N 7670624004
14#	8700611804	DECAL: WARNING DANGEROUS GAS .....	1 .....	S4984
15#	8700611904	DECAL: DANGER ELECT. SHOCK HAZ. ....	1 .....	S4985
16#	A5552000003	DECAL: AC POWER OUTPUT .....	1 .....	A55200000
16#	A5552000013	DECAL: AC POWER OUTPUT .....	1 .....	A55200001 — DA7000SSA
17#	A5552000103	DECAL: OPERATING PROCEDURE .....	1 .....	A55200010
17#	A5552000113	DECAL: OPERATING PROCEDURE .....	1 .....	A55200011 — DA7000SSA
18#	B9504000304	DECAL: CAUTION HOT PARTS .....	1 .....	B90400030
19#	B9504000404	DECAL: WARNING MOVING PARTS .....	2 .....	B90400040
20#	B9504100104	DECAL: WARNING HOT COOLANT .....	1 .....	B90410010
21#	B9504500004	DECAL: WARNING DIESEL FUEL .....	1 .....	B90450000
22#	7670624004	DECAL: G. F. C. I. ....	2 .....	D92200100
22#	D9522001004	DECAL: G. F. C. I. ....	2 .....	D92200100 — DA7000SSA
23#	0820610404	DECAL: WARNING (TRANSFER SWITCH) ..	1 .....	
24#	0820650604	DECAL: DANGER EXPLO GASES (BATT.) ..	1 .....	
25#	8700611524	DECAL: CAUTION OIL LEVEL GAUGE .....	1 .....	
25#	B9505000304	DECAL: CAUTION OIL LEVEL GAUGE .....	1 .....	B90500030 — DA7000SSA
26#	8700625504	DECAL: FUSE BOX .....	1 .....	
27#	A556200004	DECAL: MQ .....	1 .....	A56200000
28#	A5562100003	DECAL: STRIPE MULTQUIP .....	1 .....	A56210000
29#	A5562100104	DECAL: STRIPE MQ .....	1 .....	A56210010
30#	A5562100204	DECAL: STRIPE MQ .....	1 .....	A56210020
31#	A5562100303	DECAL: STRIPE WHISPERWATT .....	2 .....	A56210030
32#	A5562100404	DECAL: STRIPE .....	1 .....	A56210040
33#	A5562100504	DECAL: STRIPE .....	1 .....	A56210050
34	D9531100004	DECAL: DANGER GROUNDING .....	1 .....	D93110000
35	A9504000014	DECAL: DANGER HAZARDOUS FUMES .....	1 .....	A90400001
36		PLATE, SERIAL NO. ....	1 .....	CONTACT MQ PARTS DEPT. WITH MODEL AND S/N
37	DCLDA7000SS	KIT, DECAL .....	1 .....	INCLUDES ITEMS W/#

## DA7000 SERIES GENERATORS — GENERATOR ASSY.

GENERATOR ASSY.

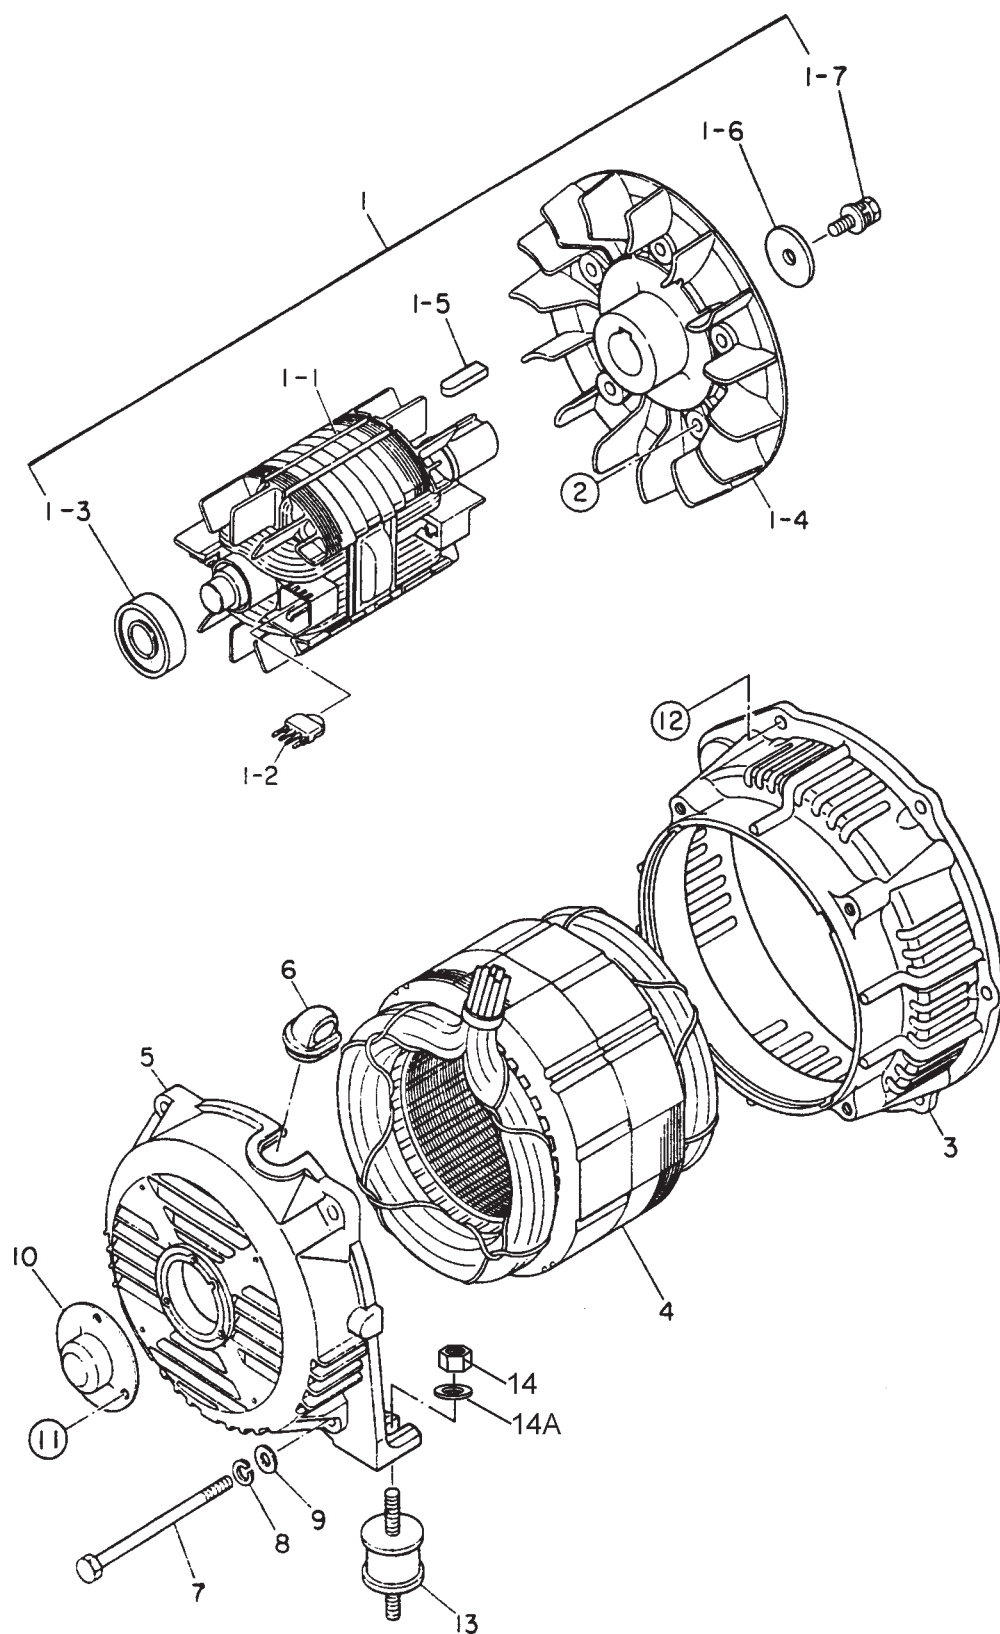


## DA7000 SERIES GENERATORS — GENERATOR ASSY.

### GENERATOR ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	A5110100003	ROTOR ASSY. ....	1	INCLUDES ITEMS W/#
1-1#	A5116000103	FIELD ASSY.	1	
1-2#	7871025004	RECTIFIER ASSY.	2	
1-3#	042006304	BEARING 6304 DOU	1	REPLACES P/N 0071206304
1-4#	A5113100002	FAN	1	
1-5#	0171707033	KEY	1	
1-6#	1991072004	SET WASHER FAN	1	
1-7#	0012308020	HEX HEAD BOLT	1	
2	011208025	HEX HEAD BOLT .....	5	REPLACES P/N 0012308025
3	A515510002	END BRACKET	1	
4	A5136000103	ARMATURE ASSY.	1	
5	A6155000002C	END BRACKET .....	1	REPLACES P/N A6155000002
6	7871329514	GROMMET	1	
7	7901316004	SET BOLT	4	
8	0040008000	WASHER, LOCK	4	
9	031108160	WASHER, FLAT .....	4	REPLACES P/N 0041206000
10	A6155400104C	COVER .....	1	REPLACES P/N A6155400104
11	0027106012	MACHINE SCREW	3	
11	0027105012	MACHINE SCREW .....	3	DA7000SSA
12	0012308020	HEX HEAD BOLT	6	
13	0805084704	RUBBER SUSPENSION	2	
14	020108060	HEX NUT .....	2	REPLACES P/N 0207006000
14A	0801086104	WASHER, FLAT	2	

## DA7000 SERIES GENERATORS — CONTROL PANEL ASSY.

### CONTROL PANEL ASSY.

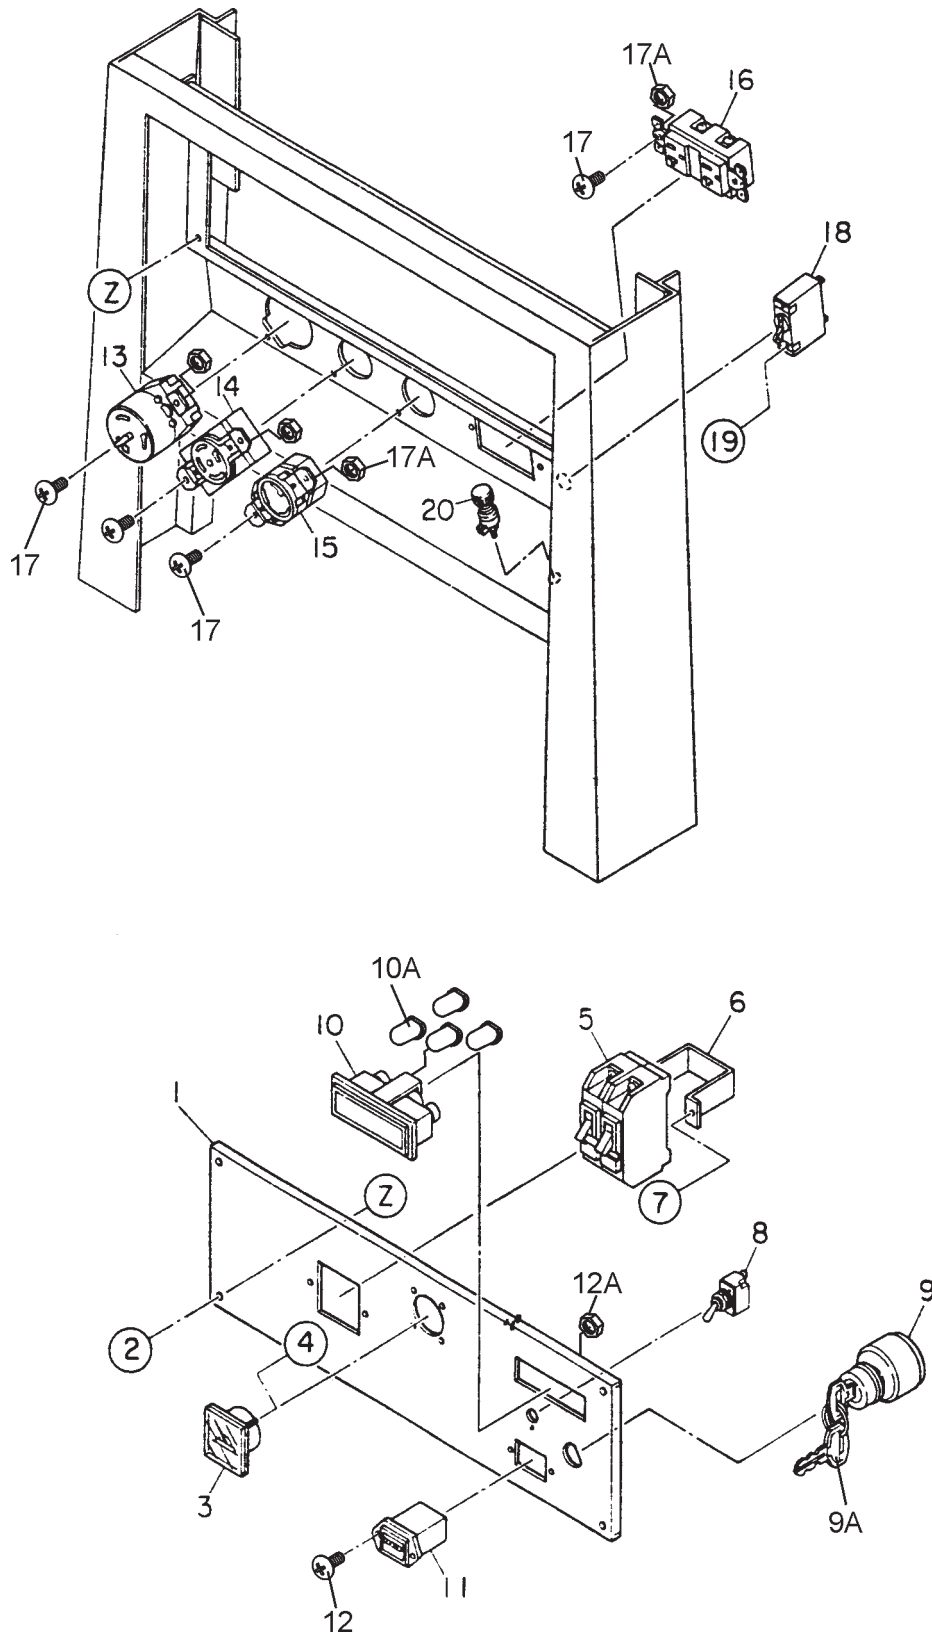




## DA7000 SERIES GENERATORS — CONTROL PANEL ASSY.

### CONTROL PANEL ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	A5225000303	CONTROL PANEL	1	
1	A5511302402	CONTROL PANEL .....	1	DA7000SSA
2	0021805020	MACHINE SCREW	4	
3	0601800258	AC VOLTMETER, 120/240	1	
4	0207003000	HEX NUT	2	
5	0601807456	CIRCUIT BREAKER, KM52 265V 25A	1	
6	4341817004	BRACKET CIRCUIT BREAKER	1	
7	0021004016	MACHINE SCREW	2	
8	0601830771	IDLE CONTROL SWITCH	1	
9	3741059110	STARTER SWITCH .....	1	REPLACES P/N 0602100077
9A	3741055150	IGNITION, KEY		
10	0601810523	INDICATOR ASSY.	1	
10A	0601810830	BULB	4	
11	0601800682	HOUR METER 820114	1	
12	0027403512	MACHINE SCREW	2	
12A	0030003500	HEX NUT	2	
13	0601811034	RECEPTACLE CS6369 125 250V 50A .....	1	REPLACES P/N 0601812565
14	0601812529	RECEPTACLE, L14-30R 125V 30A	1	
15	0601811031	RECEPTACLE, L5-30R 125V 30A .....	1	REPLACES P/N 0601811035
16	0601812597	RECEPTACLE, 5-20R 120V 20A .....	1	REPLACES P/N 0601812598
17	0021004010	MACHINE SCREW	8	
17A	0030004000	HEX NUT .....	8	REPLACES P/N 0207004000
18	0601806420	CIRCUIT PROTECTOR, AC 250V 20A	1	
19	0027103005	MACHINE SCREW	2	
20	0601815109	GROUND TERMINAL	1	

## DA7000 SERIES GENERATORS — ELECTRIC PARTS ASSY.

### ELECTRIC PARTS ASSY.

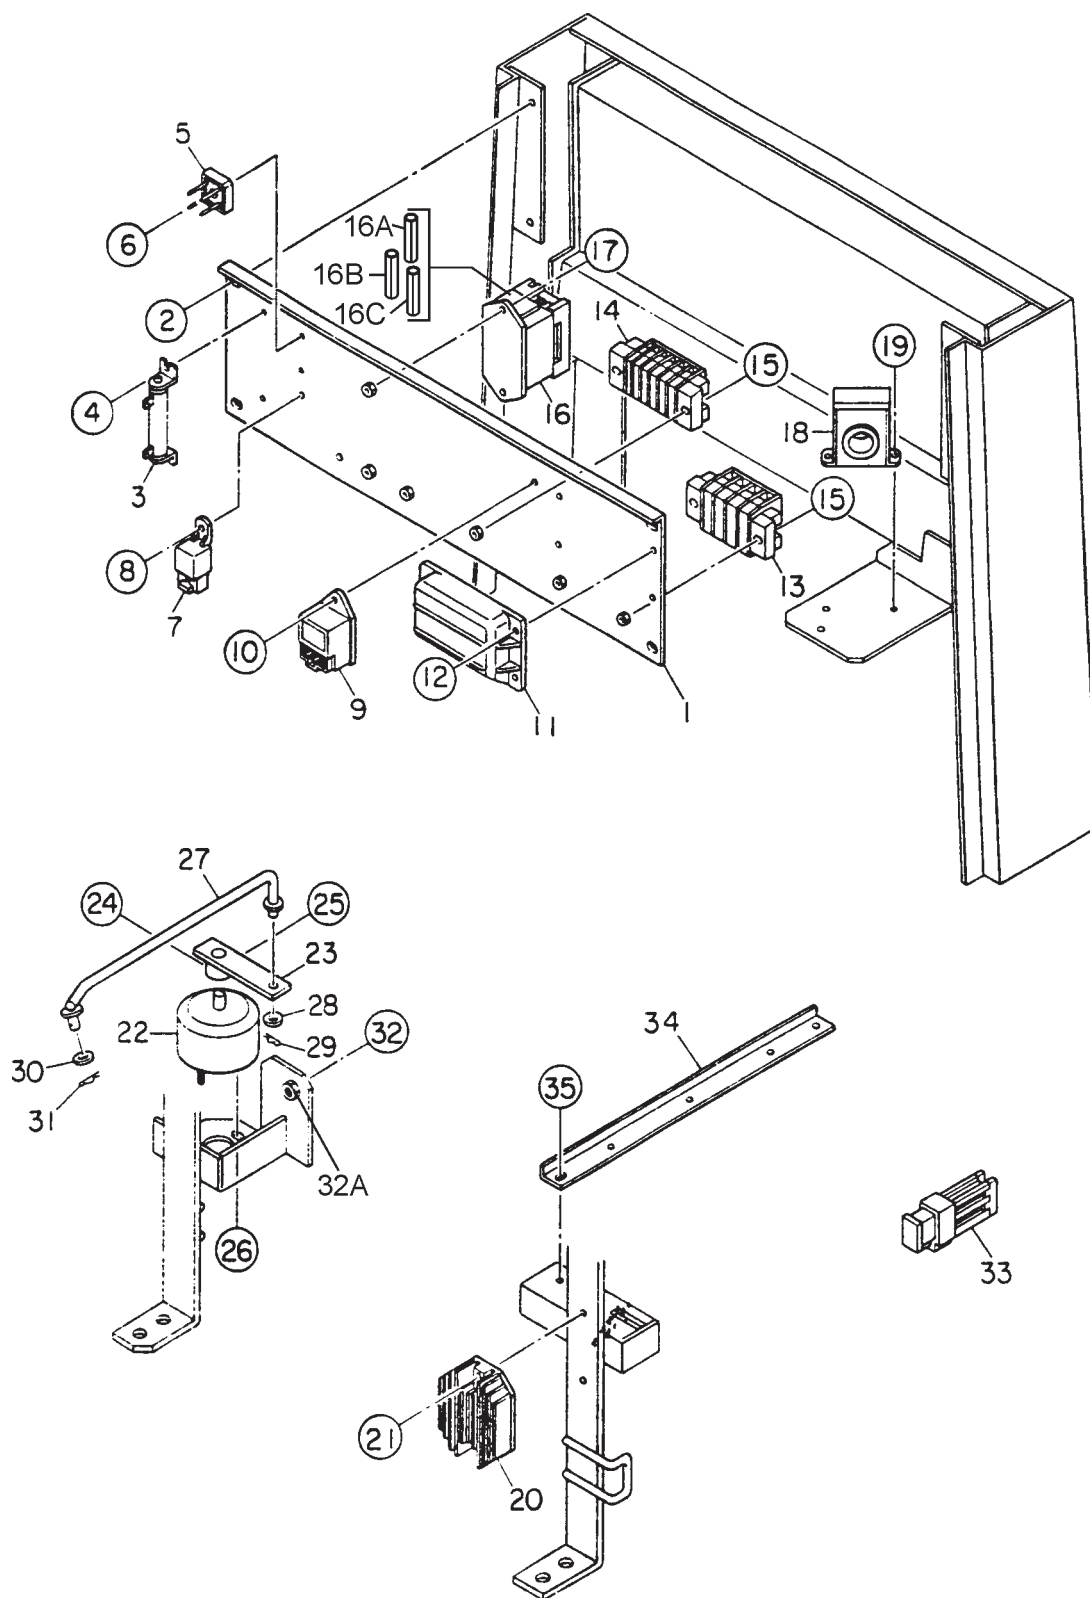


# DA7000 SERIES GENERATORS — ELECTRIC PARTS ASSY.

## ELECTRIC PARTS ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	A5262500203	BRACKET ELECTRIC PARTS	1	
2	0016906016	HEX HEAD BOLT	4	
3	0601842463	RESISTOR, 30W 10 OHM	1	
4	0027104012	MACHINE SCREW	2	
5	0601823204	RECTIFIER, S5VB60	2	
6	0027103020	MACHINE SCREW	2	
7	0601823754	RELAY	1	
8	0027105016	MACHINE SCREW	1	
9	1569465990	LAMP TIMER .....	1	REPLACES P/N 0602201273
10	0017105016	HEX HEAD BOLT	1	
11	1747260600	EMERGENCY UNIT .....	1	REPLACES P/N 0602200475
12	0017105025	HEX HEAD BOLT	4	
13	0601815731	TERMINAL BOARD	1	
14	0601815759	TERMINAL BOARD	1	
15	0027105020	MACHINE SCREW	4	
16	8701899004	FUSE BOX	1	
16A	0601806642	FUSE, 5A	4	
16B	0601806643	FUSE, 15A	2	
16C	0601806644	FUSE, 30A	2	
17	0027105020	MACHINE SCREW	2	
18	0601827350	CONTROL UNIT	1	
19	0027104010	MACHINE SCREW	2	
20	0602201378	REGULATOR .....	1	REPLACES P/N 1584464601
21	0017105025	HEX HEAD BOLT	2	
22	16226361032	ROTARY SOLENOID .....	1	REPLACES P/N 1620150404
23	1992636004	ARM SOLENOID	1	
24	0050403020	SPRING PIN	1	
25	16226361032	HEX HEAD BOLT .....	1	REPLACES P/N 0010106025
25A	0030006000	HEX NUT .....	1	REPLACES P/N 0030006000
26	0207206000	HEX NUT	2	
27	D235630004	GOVERNOR ROD	1	
28	031108160	WASHER, FLAT .....	1	REPLACES P/N 0041608000
29	0605010503	SNAP PIN	1	
30	0042806000	WASHER, FLAT	1	
31	505015300	SNAP PIN .....	1	REPLACES P/N 0605010502
32	0010108050	HEX HEAD BOLT	1	
33A	020108060	HEX NUT .....	1	REPLACES P/N 0207008000
33	0601806640	FUSE, 65A	1	
34	A5485500004	GUIDE	1	
35	0016906016	HEX HEAD BOLT	2	

# DA7000 SERIES GENERATORS — ENGINE AND RADIATOR ASSY.



ENGINE AND RADIATOR ASSY.

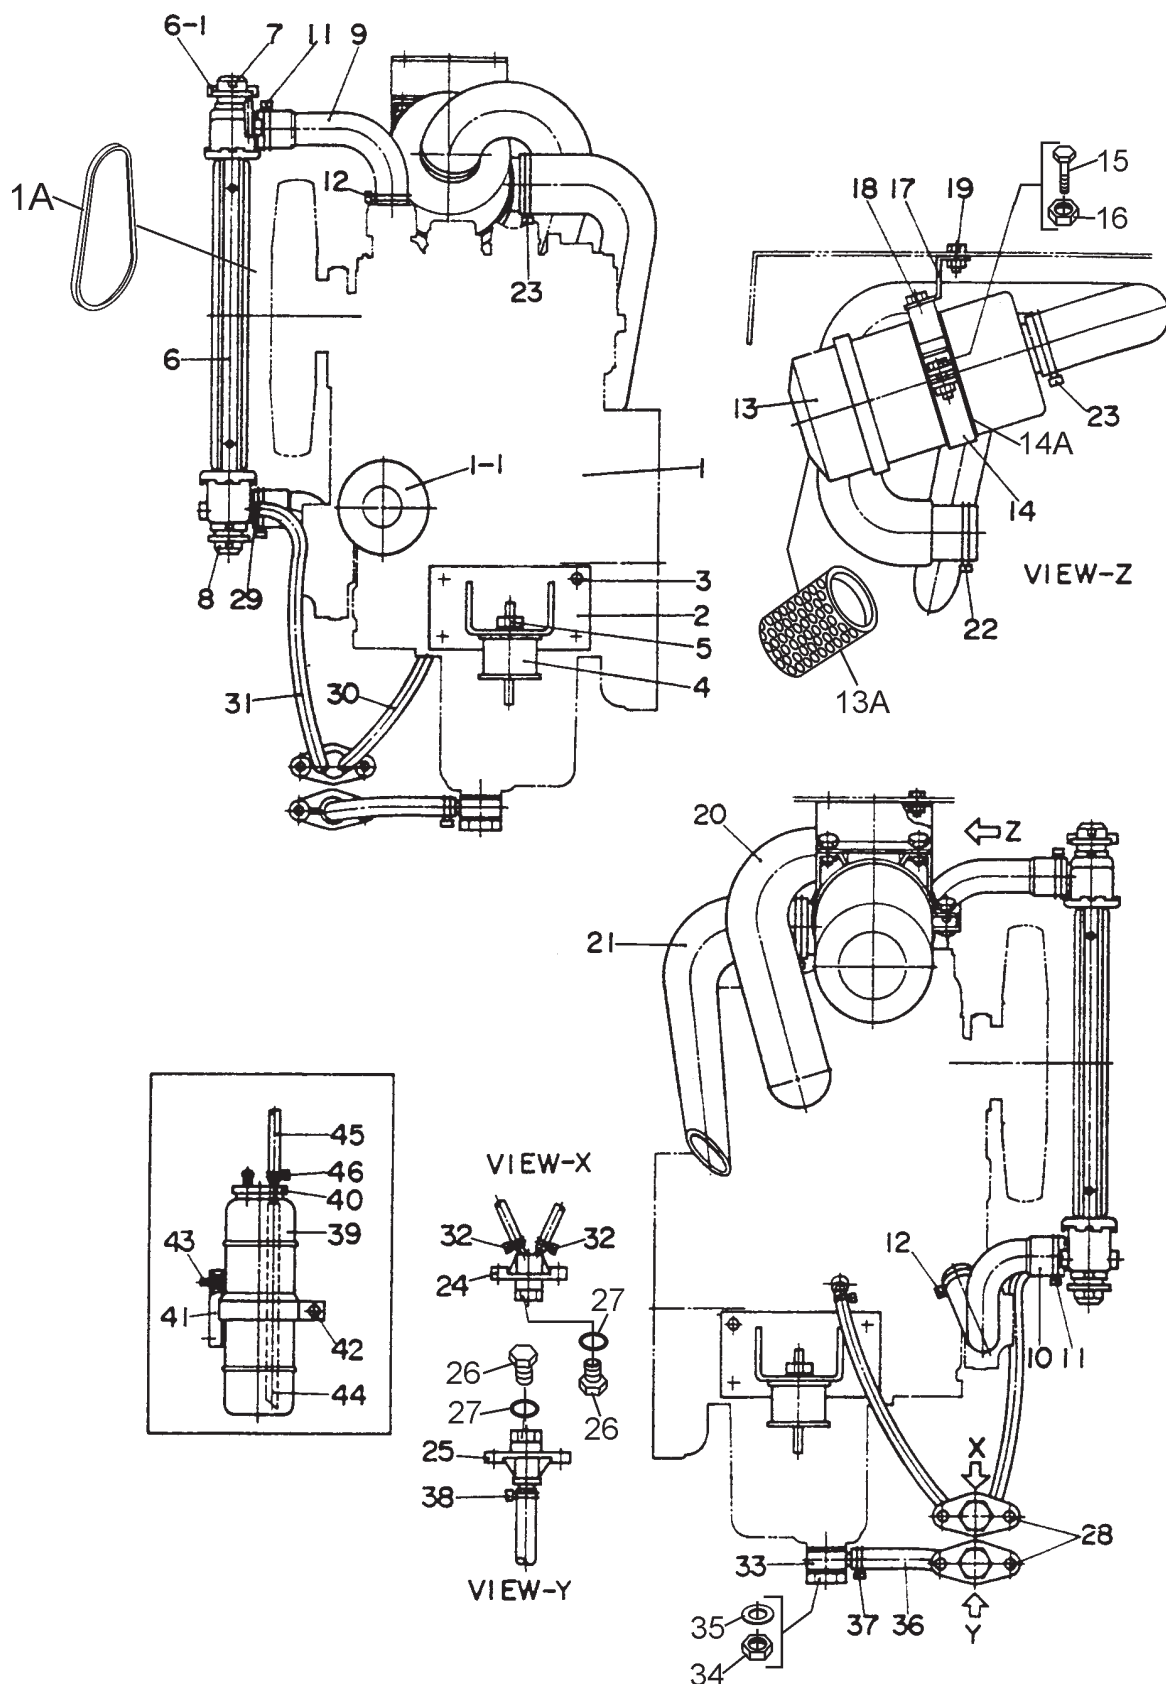

# DA7000 SERIES GENERATORS — ENGINE AND RADIATOR ASSY.


## ENGINE AND RADIATOR ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	A5925200004	ENGINE, Z482EB	1	DA7000SS — TIER I
1	A5924200004	ENGINE, Z482E2BDGDE2	1	DA7000SS — TIER II
1	A5924200094	ENGINE, Z482E3BDGDE2	1	DA7000SSA — TIER IV
1A	1980572531	FAN BELT .....	1	REPLACES P/N 0602011477
1-1	7000015241	CARTRIDGE OIL FILTER .....	1	REPLACES P/N's 1584132430 AND 0602041271
1-1	1585332435	CARTRIDGE OIL FILTER .....	1	TIER IV ONLY
2	8745112003	ENGINE FOOT	2	
3	0012410020	HEX HEAD BOLT	8	
4	7085419004	RUBBER SUSPENSION	2	
5	0207010000	HEX NUT	2	
6	0602012750	RADIATOR .....	1	INCLUDES ITEM W/#
6	0602012795	RADIATOR .....	1	INCLUDES ITEM W/% DA7000SSA
6-1#	0602011074	CAP RADIATOR	1	
6-1%	0602011079	CAP RADIATOR .....	1	DA7000SSA
7	8702014004	INSULATOR .....	2	DA7000SS-DA7000SSW ONLY
8	0605000460	RUBBER MOUNT	2	
9	D2312500103	RADIATOR HOSE	1	
10	D2312500003	RADIATOR HOSE	1	
11	0605515111	HOSE BAND, Ø34	2	
11	0605515134	HOSE BAND HS-16 .....	2	DA7000SSA
12	0605515003	HOSE BAND, Ø30	2	
13	1556211010	FILTER AIR CLEANER ASSY..	1	REPLACES P/N's 0602046265, 1556211010
13A	7000011221	ELEMENT AIR CLEANER .....	1	REPLACES P/N's 0602046374, 1556211081
14	3415013960	BAND	1	
14A	0222600340	RUBBER CUSHION	1	
15	0016908030	HEX HEAD BOLT	1	
16	0207008000	HEX NUT	1	
17	8742031004	BRACKET AIR CLEANER	1	
18	0016908020	HEX HEAD BOLT	2	
19	0016906016	HEX HEAD BOLT	2	
20	8742032003	HOSE AIR CLEANER	1	
21	1612036203	HOSE AIR CLEANER	1	
22	0605515006	HOSE BAND, Ø50	1	
23	0605515021	HOSE BAND, Ø55	2	
24	1622014103	DRAIN JOINT WATER	1	
25	1502025103	DRAIN JOINT OIL	1	

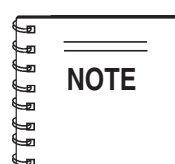

FOR MORE DETAILED INFORMATION REGARDING AIR CLEANER, SEE KUBOTA ENGINE SECTION IN THIS MANUAL.

# DA7000 SERIES GENERATORS — ENGINE AND RADIATOR ASSY. (CONT.)

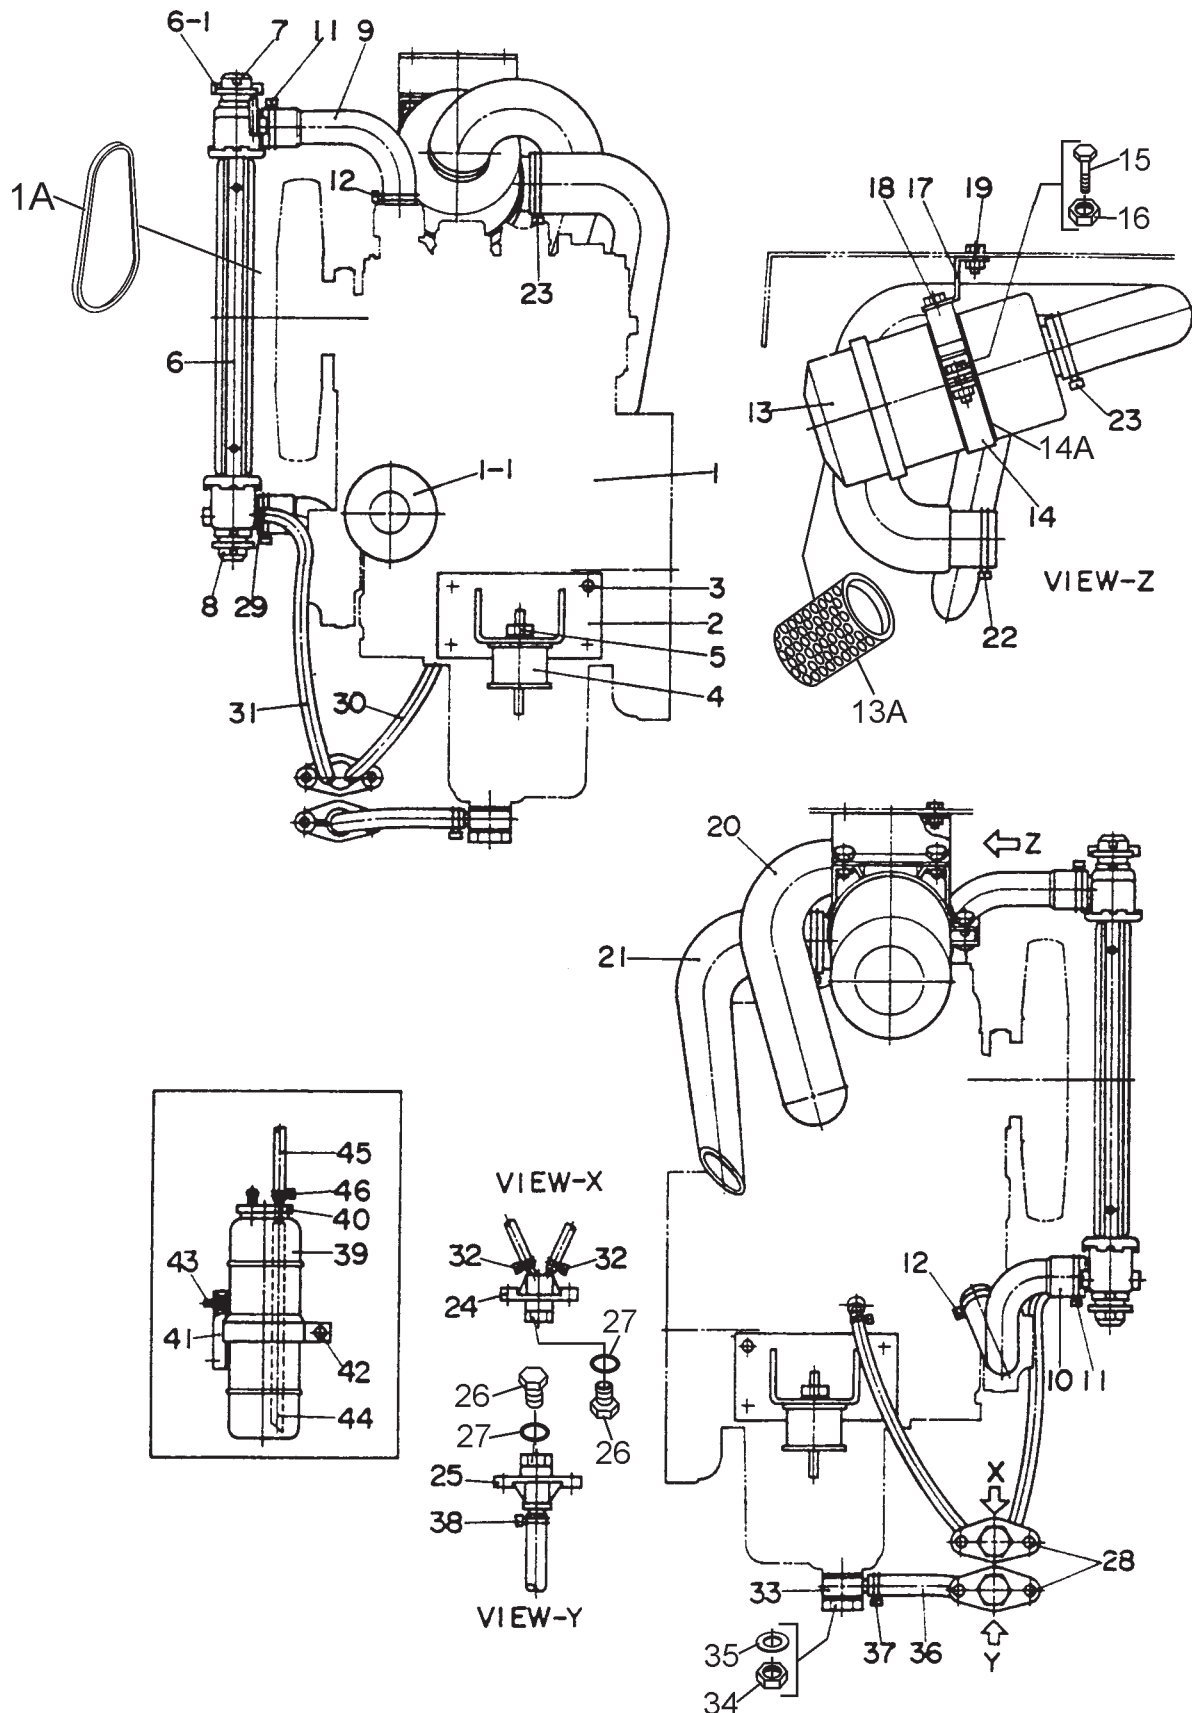




## DA7000 SERIES GENERATORS — ENGINE AND RADIATOR ASSY. (CONT.)

### ENGINE AND RADIATOR ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
26	0802011104	PLUG	2	
27	0150000018	O-RING A P18	2	
28	0016906016	HEX HEAD BOLT	4	
29	D2322400004	HOSE JOINT	1	
30	0199900550	DRAIN HOSE	1	
31	0199900700	DRAIN HOSE	1	
31	0199900500	DRAIN HOSE .....	1	DA7000SSA
32	0605515094	HOSE BAND, Ø12	4	
33	0805010004	DRAIN JOINT	1	
34	1552053004	JOINT BOLT	1	
35	0602021190	PACKING SW22	2	
36	0192200400	DRAIN HOSE	1	
37	0605515081	HOSE BAND	1	
38	0605515003	HOSE BAND, Ø27	1	
38	0605515159	HOSE BAND, Ø32 .....	1	DA7000SSA
39	0802081403	RESERVE TANK	1	
40	0602081104	CAP RESERVE TANK	1	
41	1622082104	BRACKET RESERVE TANK	1	
42	0016906025	HEX HEAD BOLT	1	
43	0016906016	HEX HEAD BOLT	2	
44	7222016304	HOSE	1	
45	0199900650	HOSE	1	
45	0199900650	HOSE .....	1	DA7000SSA
46	0605515094	HOSE BAND, Ø12	2	

## DA7000 SERIES GENERATORS — BATTERY ASSY.

BATTERY ASSY.

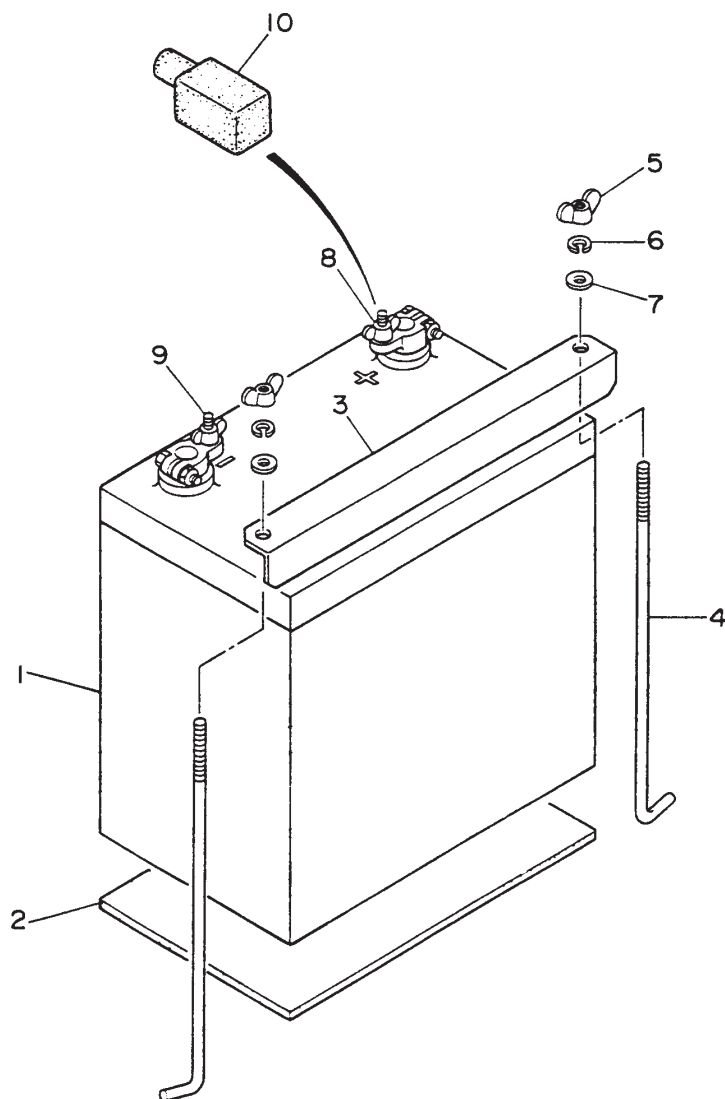


## DA7000 SERIES GENERATORS — BATTERY ASSY.

### BATTERY ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	0167103820	BATTERY	1	
2	1702202104	BATTERY SHEET	1	
3	D2345200004	BATTERY BAND	1	
4	0805082704	BATTERY BOLT	2	
5	0037806000	WING NUT	2	
6	0040006000	WASHER, LOCK	2	
7	0041206000	WASHER, FLAT	2	
8	0602220310	TERMINAL ASSY. (POSITIVE)	1	
9	0602220311	TERMINAL ASSY. (NEGATIVE)	1	
10	0602220600	TERMINAL CAP	1	

## DA7000 SERIES GENERATORS — MUFFLER ASSY.

MUFFLER ASSY.

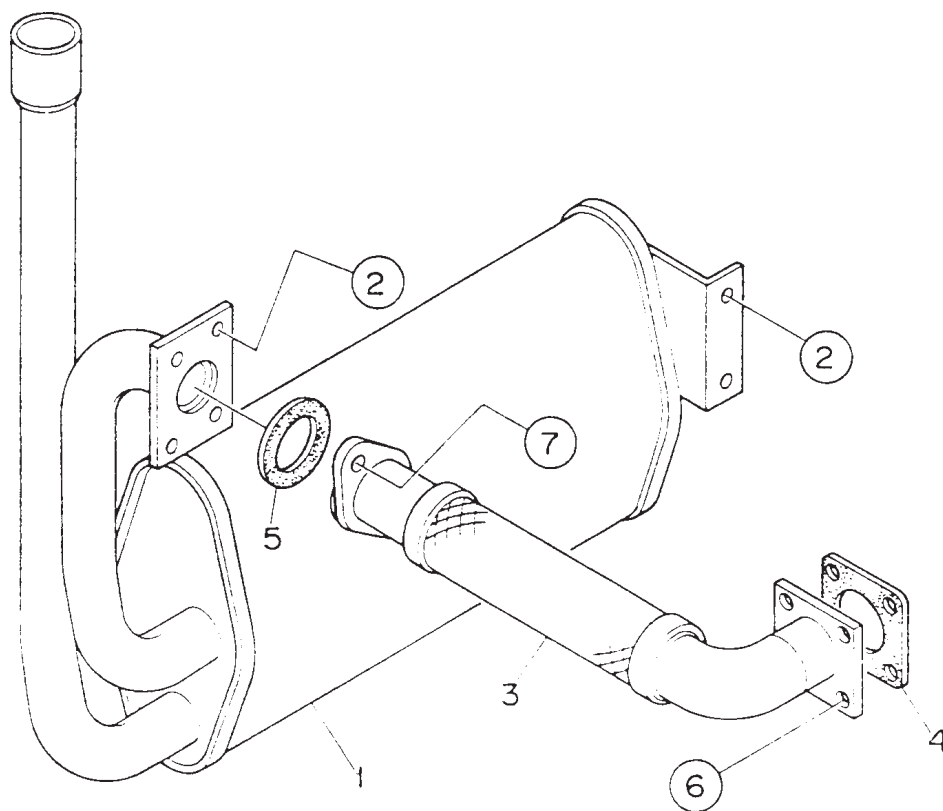


## DA7000 SERIES GENERATORS — MUFFLER ASSY.

### MUFFLER ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	D2332100003	MUFFLER	1	
2	0016908020	HEX. HEAD BOLT	4	
3	D2335000003	EXHAUST PIPE	1	
4	1526312371	GASKET .....	1	..... REPLACES P/N 0602320153
5	1502336004	GASKET	1	
6	0207008000	HEX. NUT	4	
7	0016908035	HEX. HEAD BOLT	2	

## DA7000 SERIES GENERATORS — FUEL TANK ASSY.

FUEL TANK ASSY.

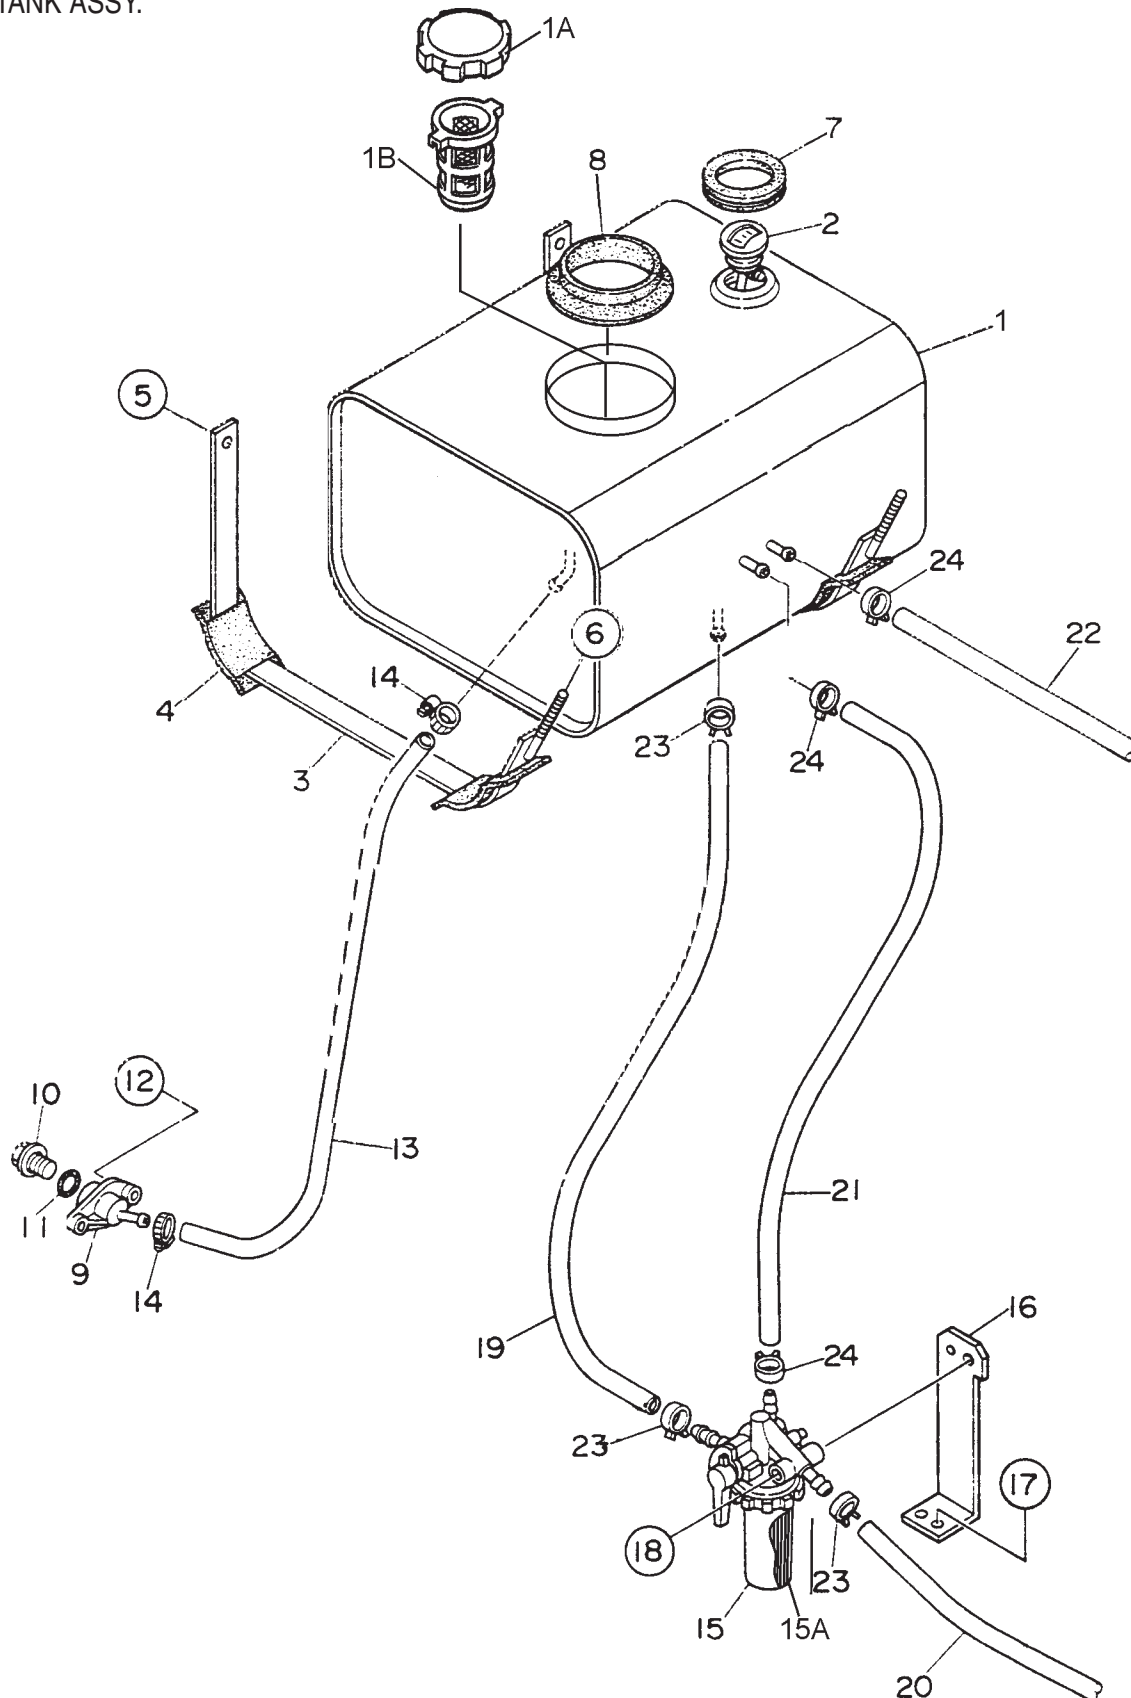




# DA7000 SERIES GENERATORS — FUEL TANK ASSY.

## FUEL TANK ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	D2365000013	FUEL TANK	1	
1A	0810105800	CAP, FUEL TANK	1	
1B	0810105900	FUEL FILTER	1	
2	0602125033	FUEL GAUGE	1	
3	D2365200004	TANK BAND	2	
4	0805003414	PAD, TANK BANK	4	
5	0016906016	HEX. HEAD BOLT	2	
6	0207308000	HEX. NUT	2	
7	D1490600104	RUBBER SEAL	1	
8	1615511204	RUBBER SEAL	1	
8	B9312400004A	RUBBER SEAL .....	1	DA7000SSA
9	7812014003	DRAIN JOINT	1	
10	0802011104	PLUG	1	
11	0150000018	O-RING A P18	1	
12	0016906016	HEX. HEAD BOLT	2	
13	0199900670	DRAIN HOSE	1	
14	0605515094	HOSE BAND, Ø12	2	
15	1553143010	FUEL FILTER ASSY. ....	1	REPLACES P/N's 0602042460, 1553143012
15A	1523143560	ELEMENT, FUEL FILTER .....	1	REPLACES P/N's 0602042171, 1523143563
16	D2368700004	BRACKET, FUEL FILTER	1	
17	0016906016	HEX. HEAD BOLT	2	
18	0016908065	HEX. HEAD BOLT	1	
19	0966180240	SUCTION HOSE .....	1	REPLACES P/N 0605513158
20	0966180400	SUCTION HOSE .....	1	REPLACES P/N 0605513101
21	0966140320	RETURN HOSE .....	1	REPLACES P/N 0605514101
22	0966140240	RETURN HOSE .....	1	REPLACES P/N 0605514102
23	1491142750	HOSE BAND .....	4	REPLACES P/N 0605515070
24	1024442320	HOSE BAND .....	4	REPLACES P/N 0605515072

# DA7000 SERIES GENERATORS — OIL FILTER RETROFIT ASSY.

OIL FILTER RETRO-FIT ASSY.

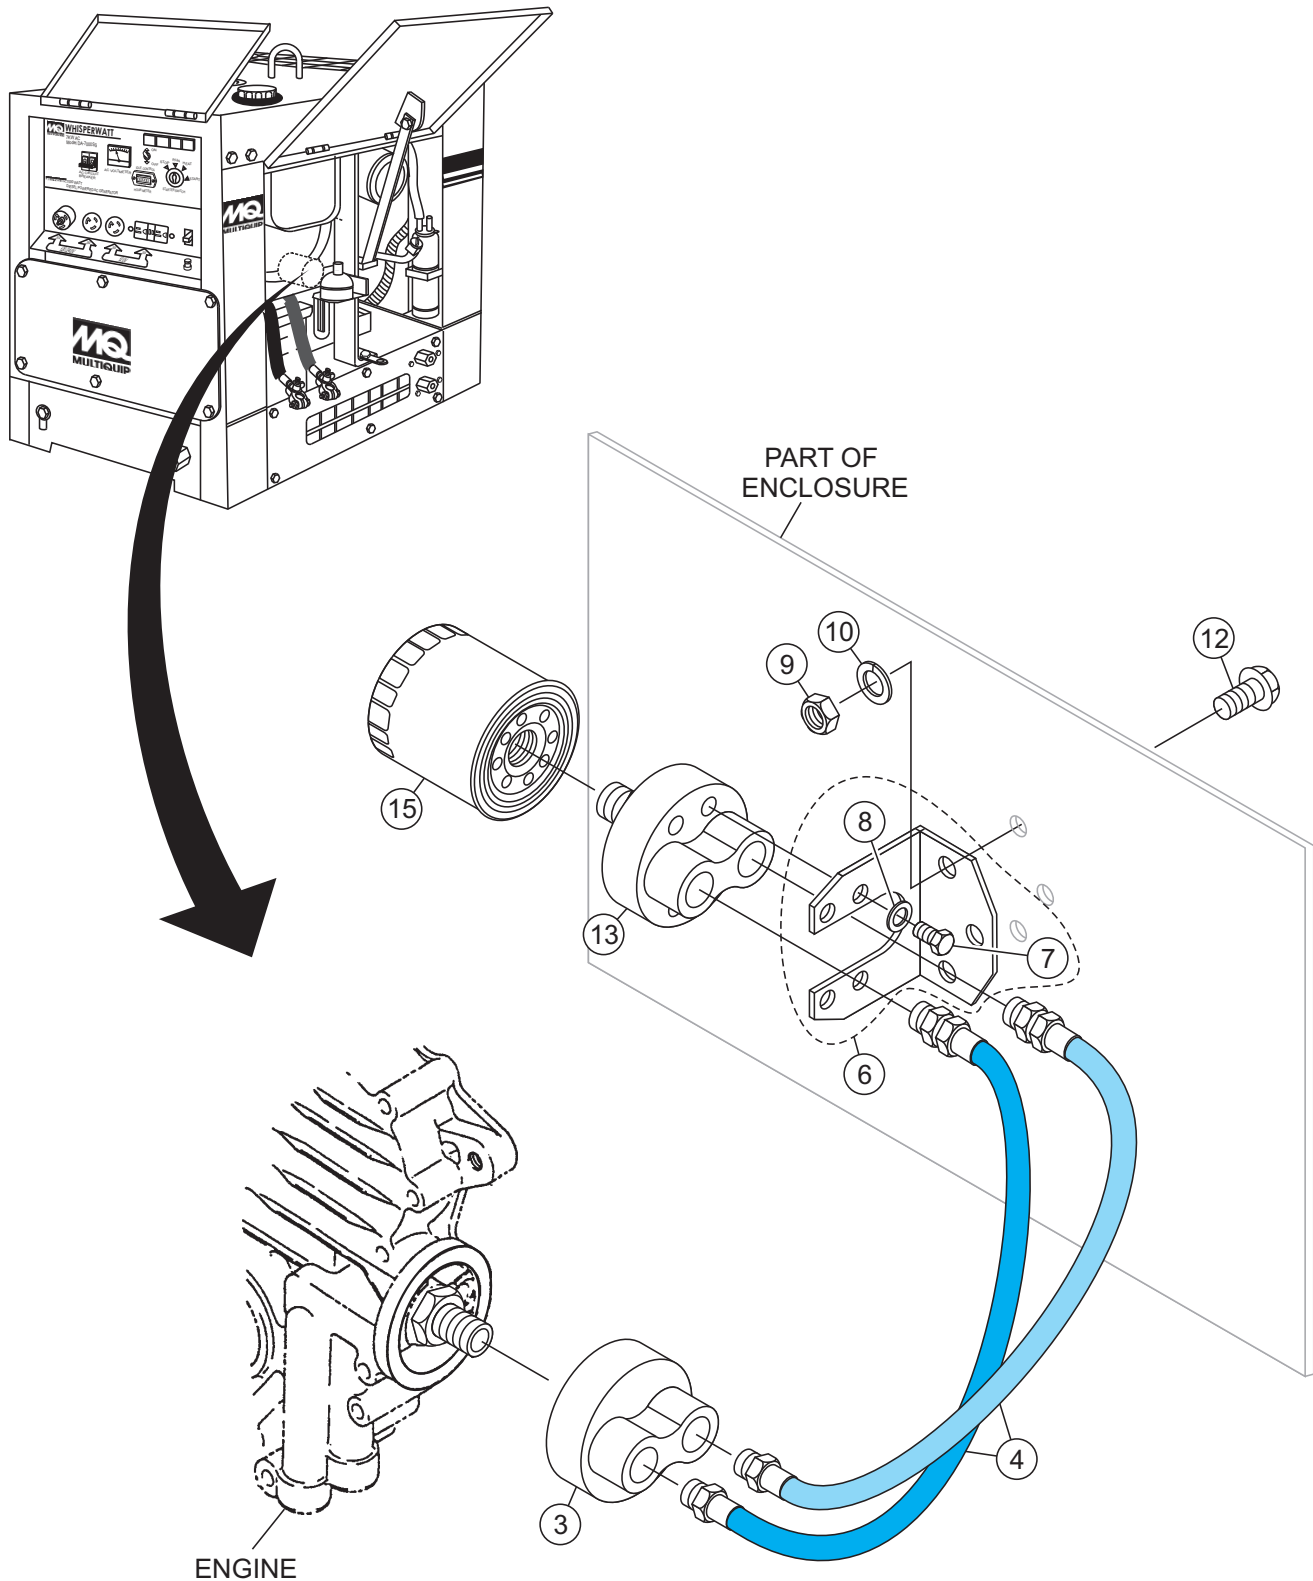


## DA7000 SERIES GENERATORS — OIL FILTER RETROFIT ASSY.

### OIL FILTER RETRO-FIT ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
3	148002003	ADAPTER FILTER	1	
4	010601000	HOSE KIT	1	
6	149149001	BRACKET .....	1 .....	INCLUDES ITEMS W/#
7#		BOLT .....	4 .....	NOT SOLD SEPARATELY
8#		LOCKWASHER .....	4 .....	NOT SOLD SEPARATELY
9	DA7000NUT	NUT	3	
10	DA7000LOCKWASHER	LOCKWASHER	3	
12	DA7000BOLT	BOLT	3	
13	149002000	FILTERHEAD	1	
15	7000015241	SPIN-ON OIL FILTER	1	

# DA7000 SERIES GENERATORS — ENCLOSURE ASSY.

## ENCLOSURE ASSY

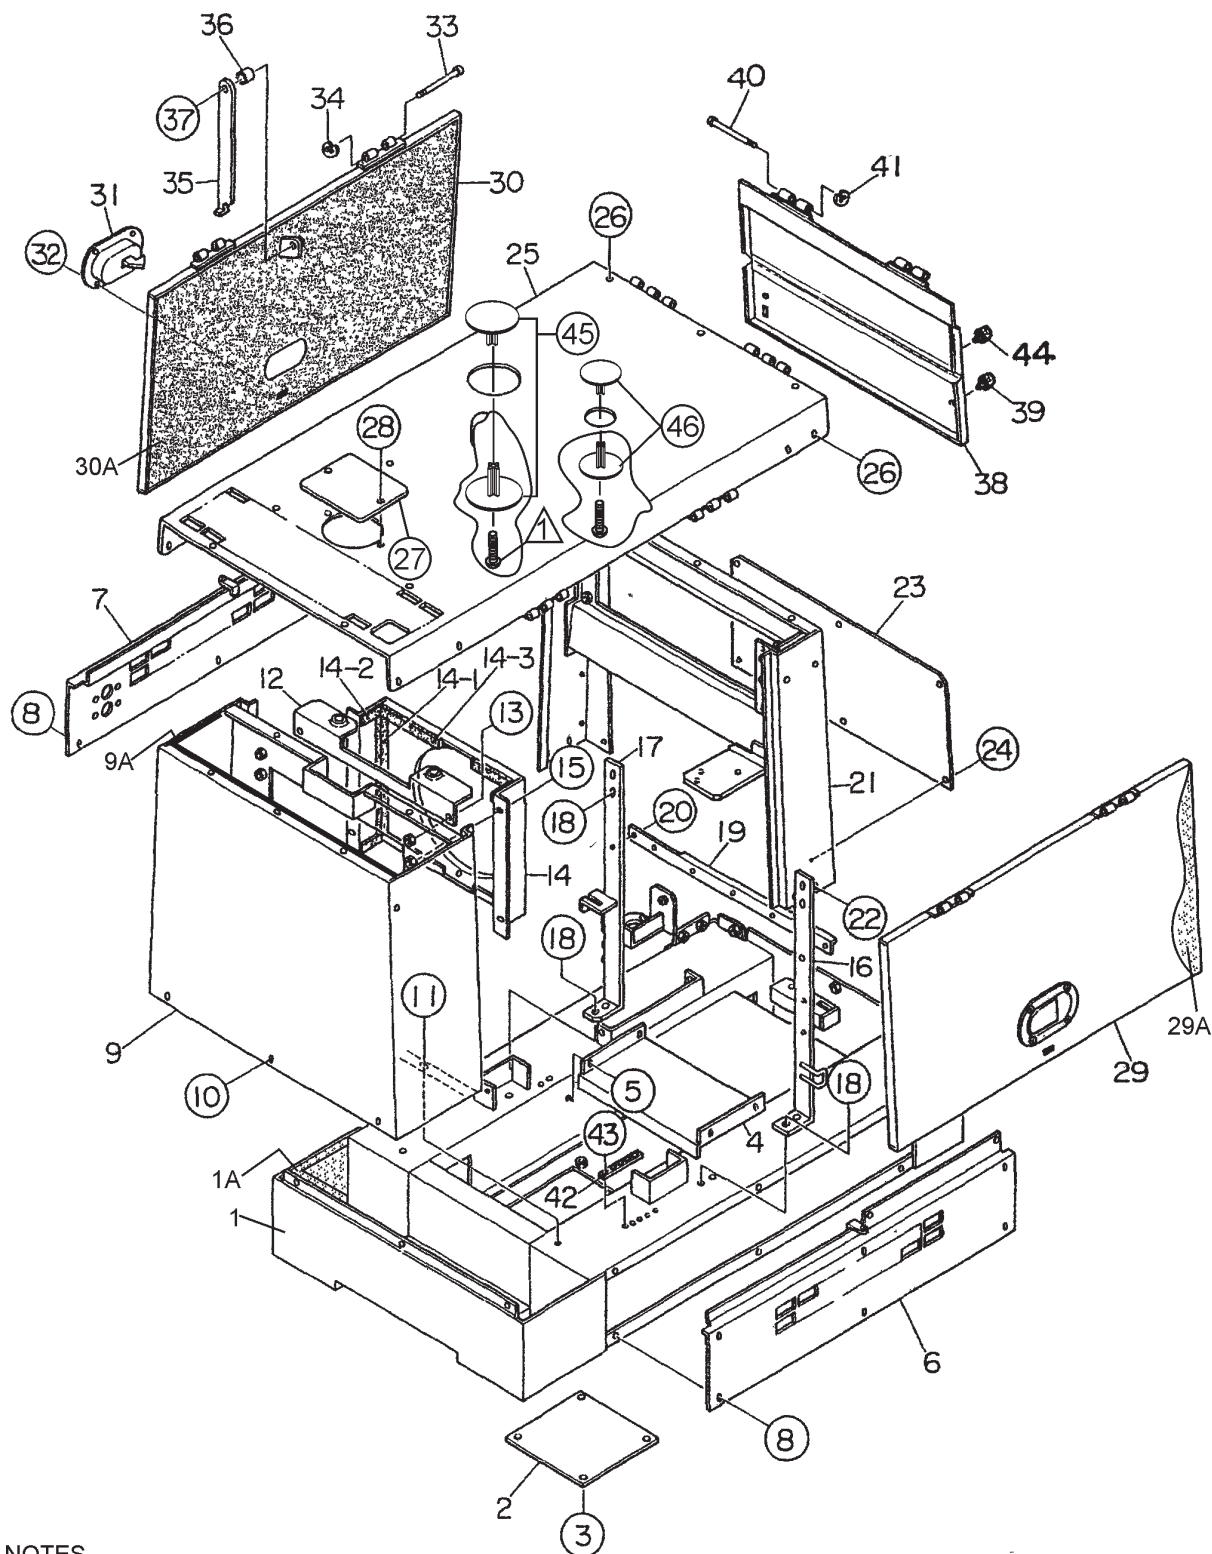

### NOTES

- △ PURCHASE SHEET METAL SCREW  
 1 LOCALLY DA-7000SSGH WHITE UNITS ONLY.

# DA7000 SERIES GENERATORS — ENCLOSURE ASSY.

## ENCLOSURE ASSY

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	A5415000202	BASE .....	1 .....	SEE ORDER CODE CHART BELOW
1A	D2492100004	LINING	1	
2	D2415100004	FLOOR PANEL .....	1 .....	SEE ORDER CODE CHART BELOW
3	0016906016	HEX HEAD BOLT	4	
4	A5415600104	DUCT .....	1 .....	SEE ORDER CODE CHART BELOW
5	0016906016	HEX HEAD BOLT	4	
6	D2455200113	SPLASHER PANEL .....	1 .....	SEE ORDER CODE CHART BELOW
7	D2455200003A	SPLASHER PANEL .....	1 .....	REPLACES P/N D2455200003 SEE ORDER CODE CHART BELOW
8	0016906016	HEX HEAD BOLT	12	
9	D2425000012B	FRONT FRAME, (ORANGE UNITS) .....	1 .....	REPLACES P/N D2425000012 S/N 3757609 AND BELOW
9	D2425000022	FRONT FRAME, (WHITE UNITS) .....	1 .....	S/N 3757610 AND ABOVE
9A	0220900340	RUBBER SEAL	2	
10	0016906016	HEX HEAD BOLT	3	
11	0016908020	HEX HEAD BOLT	2	
12	D2312100004	BRACKET RADIATOR	1	
13	0016906016	HEX HEAD BOLT	2	
14	D2312300013	FAN SHROUD	1	
14-1	D2492200004	LINING	1	
14-2	0221700050	LINING	4	
14-3	0221900165	LINING	4	
15	0016906016	HEX HEAD BOLT	4	
16	A5435300203	HANGER .....	1 .....	SEE ORDER CODE CHART BELOW
17	A5435300403	HANGER .....	1 .....	SEE ORDER CODE CHART BELOW
18	0012310025	HEX HEAD BOLT	8	
19	D2485500014	HARNESS GUIDE	1	
20	0016906016	HEX HEAD BOLT	2	
21	A5445000102	REAR FRAME, (ORANGE UNITS)	1	
21	A5445000112	REAR FRAME, (WHITE UNITS)	1	
22	0016906016	HEX HEAD BOLT	4	
23	D2445300004	COVER REAR FRAME .....	1 .....	SEE ORDER CODE CHART BELOW
24	0016906016	HEX HEAD BOLT	6	

### ORDER CODE CHART


THE PART NUMBER ABOVE INDICATES DEFAULT  
COLOR OF ORANGE. TO ORDER WITH DIFFERENT  
COLOR, PLEASE ADD THE FOLLOWING LETTERS WITH  
THE PART NUMBER:

MQW-WHITE

Unit serial number may be required

# DA7000SS/SSW — ENCLOSURE ASSY.(CONT.)

## ENCLOSURE ASSY.(CONT.)

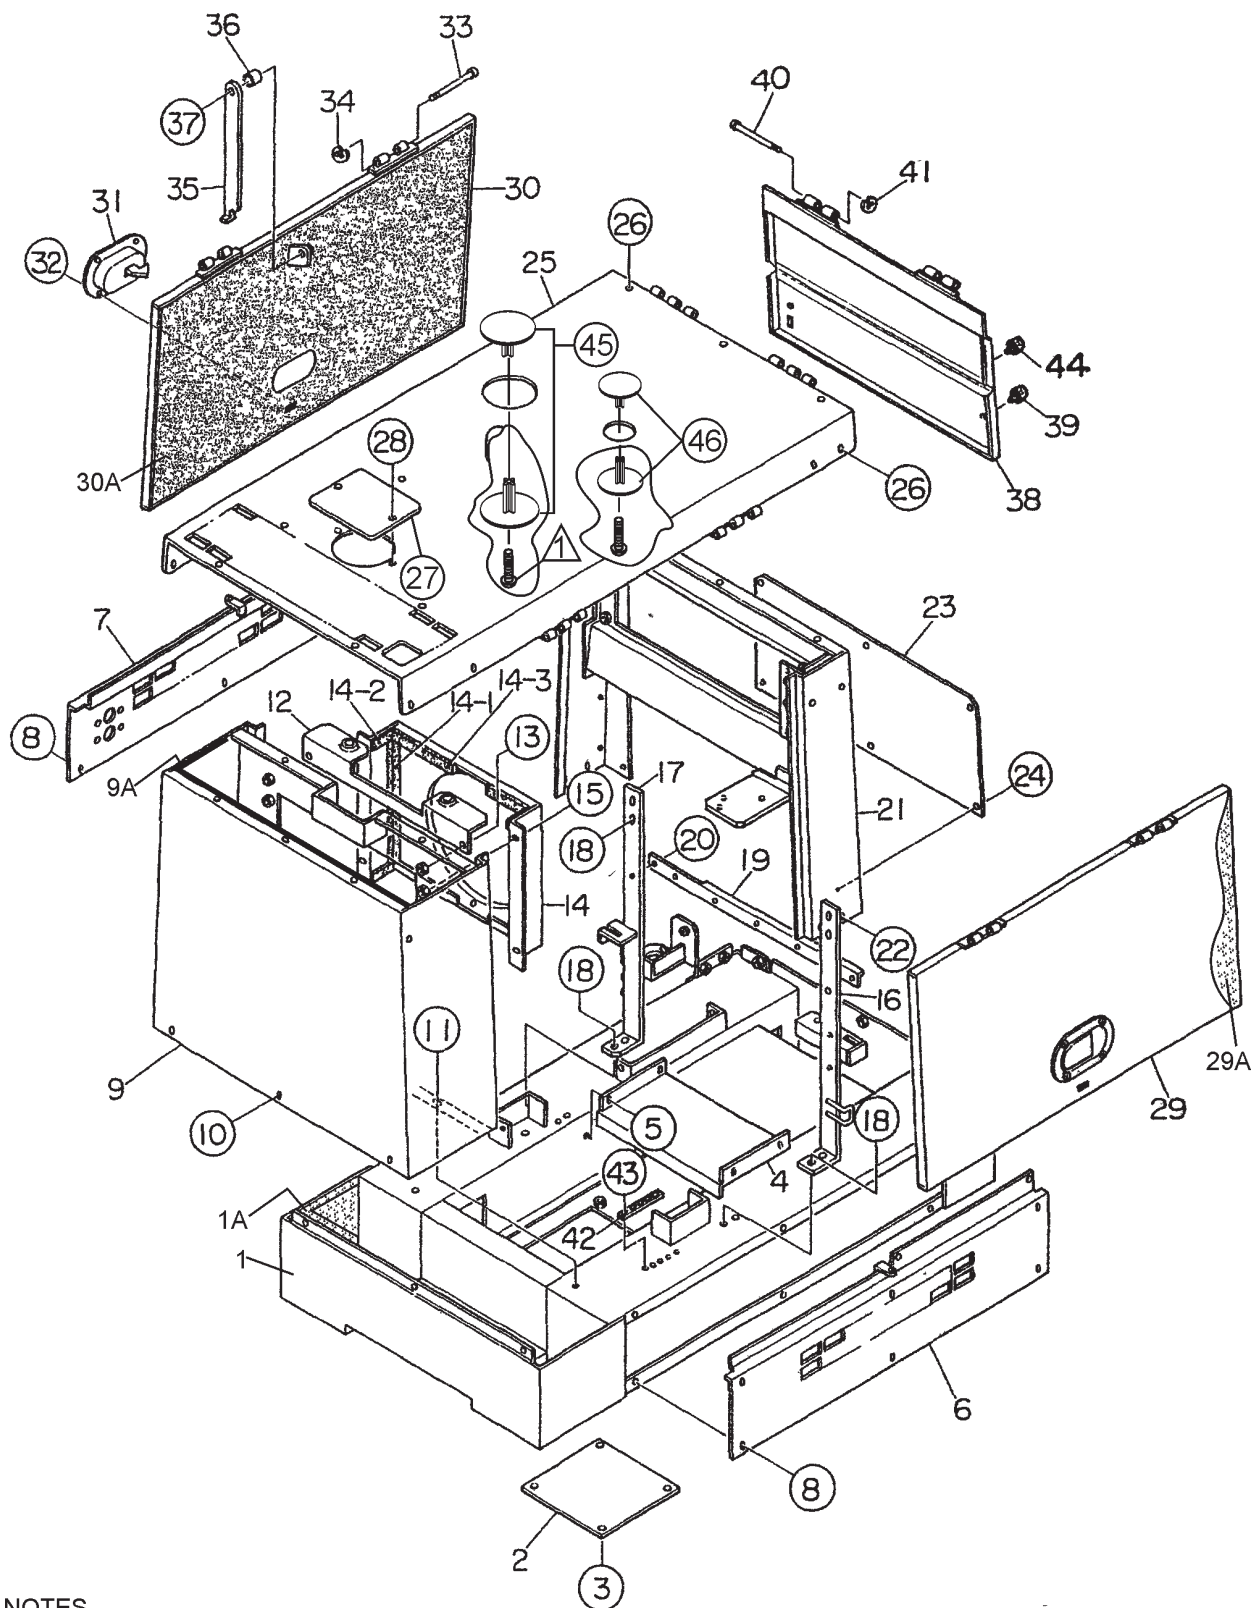

### NOTES

- 1 PURCHASE SHEET METAL SCREW  
LOCALLY DA-7000SSGH WHITE UNITS ONLY.



## DA7000SS/SSW — ENCLOSURE ASSY.(CONT.)

### ENCLOSURE ASSY.(CONT.)

NO	PART NO	PART NAME	QTY.	REMARKS
25	A5465000102	ROOF PANEL, (ORANGE UNITS)	1	
25	A5465000112	ROOF PANEL, (WHITE UNITS)	1	
26	0016906016	HEX HEAD BOLT	15	
27	8432081004	COVER RADIATOR CAP .....	1	SEE ORDER CODE CHART BELOW
28	0016906016	HEX HEAD BOLT	2	
29	D245500113	SIDE DOOR	1	
29A	A5495400704	LINING	1	
30	D2455000013	SIDE DOOR .....	1	SEE ORDER CODE CHART BELOW
30A	A5495400704	LINING, (ORANGE UNITS)	1	
30A	A5495400604	LINING, (WHITE UNITS)	1	
31	0605010215	DOOR HANDLE	2	
32	0021805016	MACHINE SCREW	8	
33	0810014704	PIN	4	
34	0080200004	SNAP RING	4	
35	D2455700004	DOOR STAY	2	
36	7835088004	COLLAR	2	
37	0016908020	HEX HEAD BOLT	2	
38	A5445200003	REAR DOOR, (ORANGE UNITS)	1	
38	A5445200013	REAR DOOR, (WHITE UNITS)	1	
39	0601851613	STOPPER	2	
40	0810014704	PIN	2	
41	0080200004	SNAP RING	2	
42	8511864604	TERMINAL PLATE	1	
43	0016906016	HEX HEAD BOLT	5	
44	0601851660	STOPPER	2	
45	97535K25	CAP, 4-INCH FUEL FILL .....	1	OPTION
46	97535K21	CAP, 3-INCH FUEL GAUGE .....	1	OPTION

### ORDER CODE CHART




THE PART NUMBER ABOVE INDICATES DEFAULT  
COLOR OF ORANGE. TO ORDER WITH DIFFERENT  
COLOR, PLEASE ADD THE FOLLOWING LETTERS WITH  
THE PART NUMBER:

MQW-WHITE

Unit serial number may be required

## DA7000SS/SSW — RUBBER SEALS ASSY.

RUBBER SEALS ASSY.

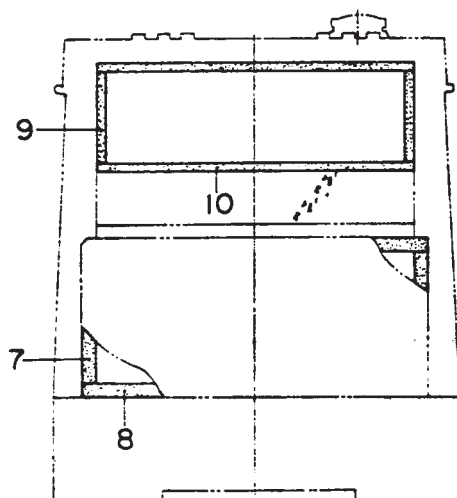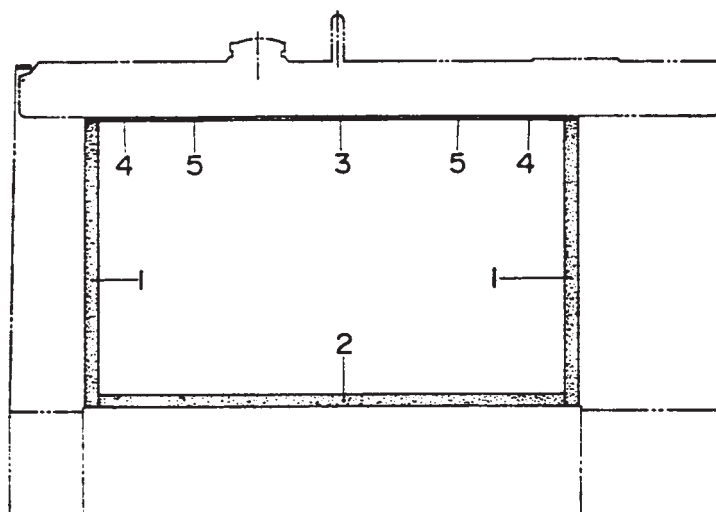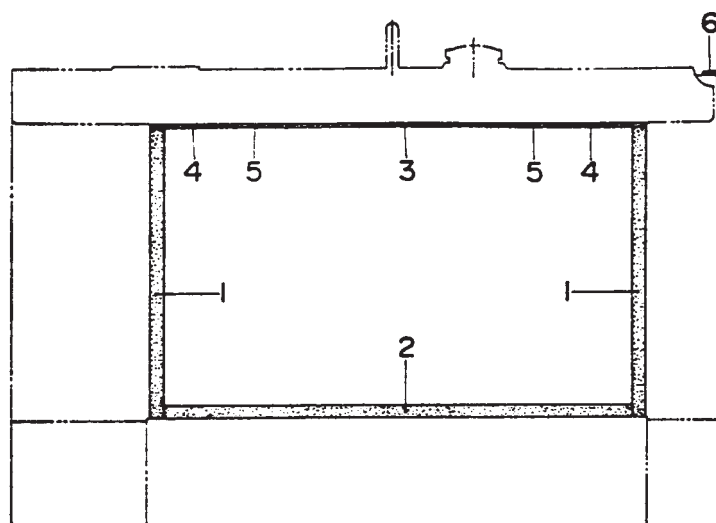


## DA7000SS/SSW — RUBBER SEALS ASSY.

### RUBBER SEALS ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	0229400470	RUBBER SEAL	4	
2	0229400760	RUBBER SEAL	2	
3	0222900325	RUBBER SEAL	2	
4	0222900125	RUBBER SEAL	4	
5	0222600100	RUBBER SEAL	4	
6	0228300600	RUBBER SEAL	1	
7	0228300200	RUBBER SEAL	2	
8	0228300550	RUBBER SEAL	2	
9	0227600130	RUBBER SEAL	2	
10	0227600500	RUBBER SEAL	2	

## KUBOTA Z482-EB/E2B/E3B ENGINE — CRANKCASE ASSY.

CRANKCASE ASSY.

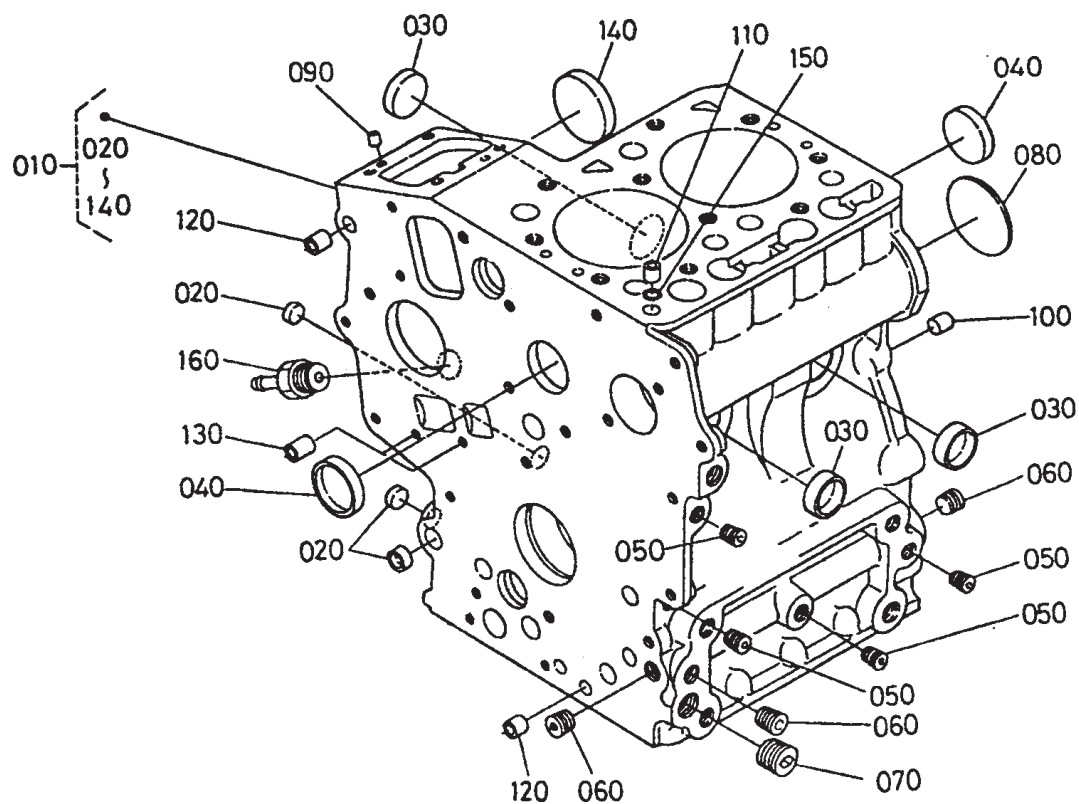


# KUBOTA Z482-EB/E2B/E3B ENGINE — CRANKCASE ASSY.

## CRANKCASE ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1685301017	COMP. CRANKCASE .....	1 .....	INCLUDES ITEMS W/#
010	1685301019	COMP. CRANKCASE .....	1 .....	INCLUDES ITEMS W/%
020#%	1685196260	CAP, SEALING	3	
030#%	1685196270	CAP, SEALING	3	
040#%	1545196270	CAP, SEALING	2	
050#%	1526196010	PLUG	4	
060#%	1552196020	PLUG	1	
070#%	1552196030	PLUG	1	
080#%	1526196160	PLUG, EXPANSION	1	
090#%	0501200508	PIN, STRAIGHT	2	
100#%	0501200814	PIN, STRAIGHT	2	
110#%	1522133650	PIN, PIPE	1	
120#%	1523133960	PIN, PIPE	2	
130#%	1733159190	PIN, PIPE	2	
140#%	1685116212	COVER, FUEL CAMSHAFT	1	
150#	1522133700	O-RING .....	1 .....	DA7000SS ONLY
160#%	1584773130	JOINT, DRAIN PIPE	1	

## KUBOTA Z482-EB/E2B/E3B ENGINE — OIL PUMP ASSY.

OIL PUMP ASSY.

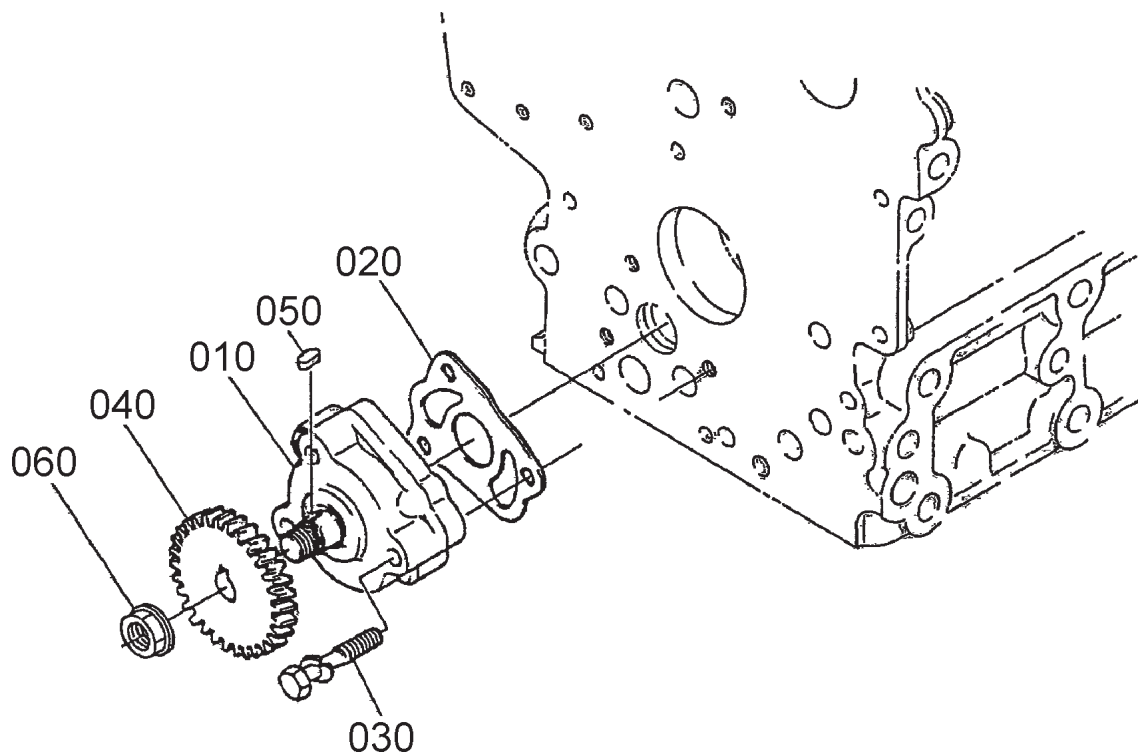




## KUBOTA Z482-EB/E2B/E3B ENGINE — OIL PUMP ASSY.

### OIL PUMP ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1685135010	OIL PUMP ASSY. ....	1	TIER I ORANGE UNITS
010	1685135012	OIL PUMP ASSY. ....	1	TIER II AND TIER IV WHITE UNITS
020	1685135152	GASKET, OIL PUMP NA	1	
030	1584191050	BOLT	3	
040	1584135660	GEAR, OIL PUMP DRIVE	1	
050	0571200408	KEY, FEATHER	1	
060	0278350100	NUT, FLANGE	1	

## KUBOTA Z482-EB/E2B/E3B ENGINE — OIL PAN ASSY.

OIL PAN ASSY.

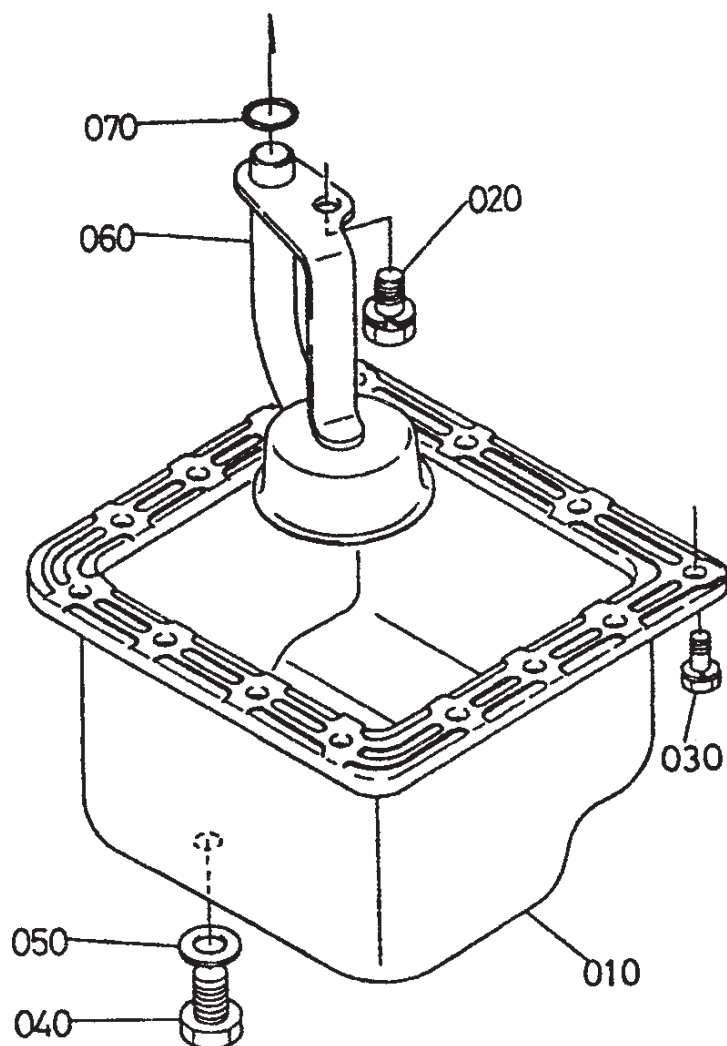


## KUBOTA Z482-EB/E2B/E3B ENGINE — OIL PAN ASSY.

OIL PAN ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1756101505	COMP. OIL PAN	1	
020	0112360814	BOLT	1	
030	0102350612	BOLT	14	
030	0102350614	BOLT .....	14	TIER IV (WHITE UNITS)
040	1654133750	PLUG, DRAIN	1	
050	1545196670	GASKET	1	
060	1685132110	FILTER, OIL	1	
070	0481400160	O-RING	1	

## KUBOTA Z482-EB/E2B/E3B ENGINE— CYLINDER HEAD ASSY.

CYLINDER HEAD ASSY.

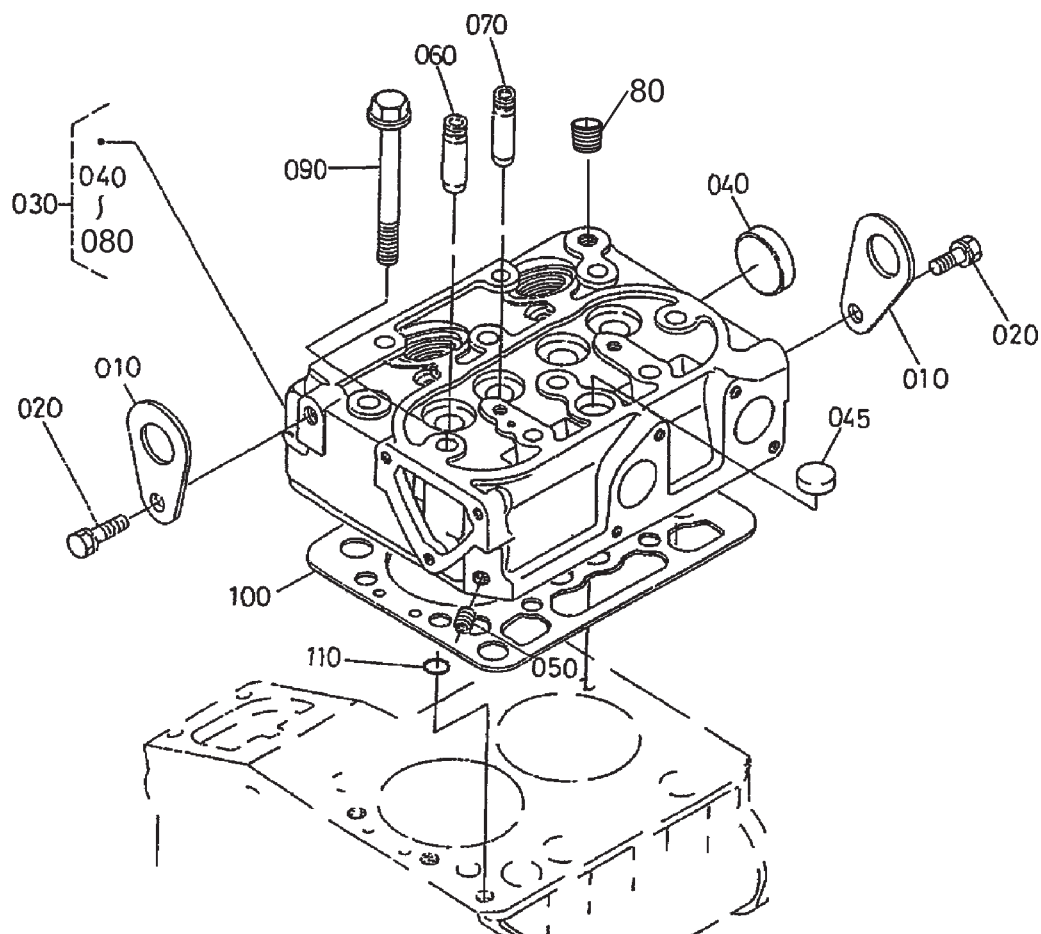


# KUBOTA Z482-EB/E2B/E3B ENGINE— CYLINDER HEAD ASSY.

## CYLINDER HEAD ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1522101750	HOOK, ENGINE	2	
020	0112360816	BOLT .....	2 .....	TIER I (ORANGE UNITS)
020	0112350816	BOLT .....	2 .....	TIER II AND TIER IV (WHITE UNITS)
030	1685503042	COMP. CYLINDER HEAD .....	1 .....	INCLUDES ITEMS W/# TIER I (ORANGE UNITS)
030	1G95703023	COMP. CYLINDER HEAD .....	1 .....	INCLUDES ITEMS W/% TIER II (WHITE UNITS)
030	1G68903040	COMP. CYLINDER HEAD .....	1 .....	INCLUDES ITEMS W/\$ TIER IV (WHITE UNITS)
040#%\$	1532196260	CAP, SEALING	1	
045#%\$	1526103370	CAP, SEALING .....	1 .....	TIER II (WHITE UNITS)
050#%\$	1526196010	PLUG	1	
060#%\$	1584113540	GUIDE, INLET VALVE	2	
070#%\$	1584113560	GUIDE, EXHAUST VALVE	2	
080#	1584196020	PLUG .....	1 .....	TIER I (ORANGE UNITS)
090	1460103450	BOLT, CYLINDER HEAD	10	
100	1685103310	GASKET, CYLINDER HEAD	1	
100	1685103312	GASKET, CYLINDER HEAD .....	1 .....	TIER IV
110	1522133700	O-RING .....	1 .....	TIER I AND TIER II ONLY

**KUBOTA Z482-EB/E2B/E3B ENGINE—GEAR CASE ASSY.**

GEAR CASE ASSY.

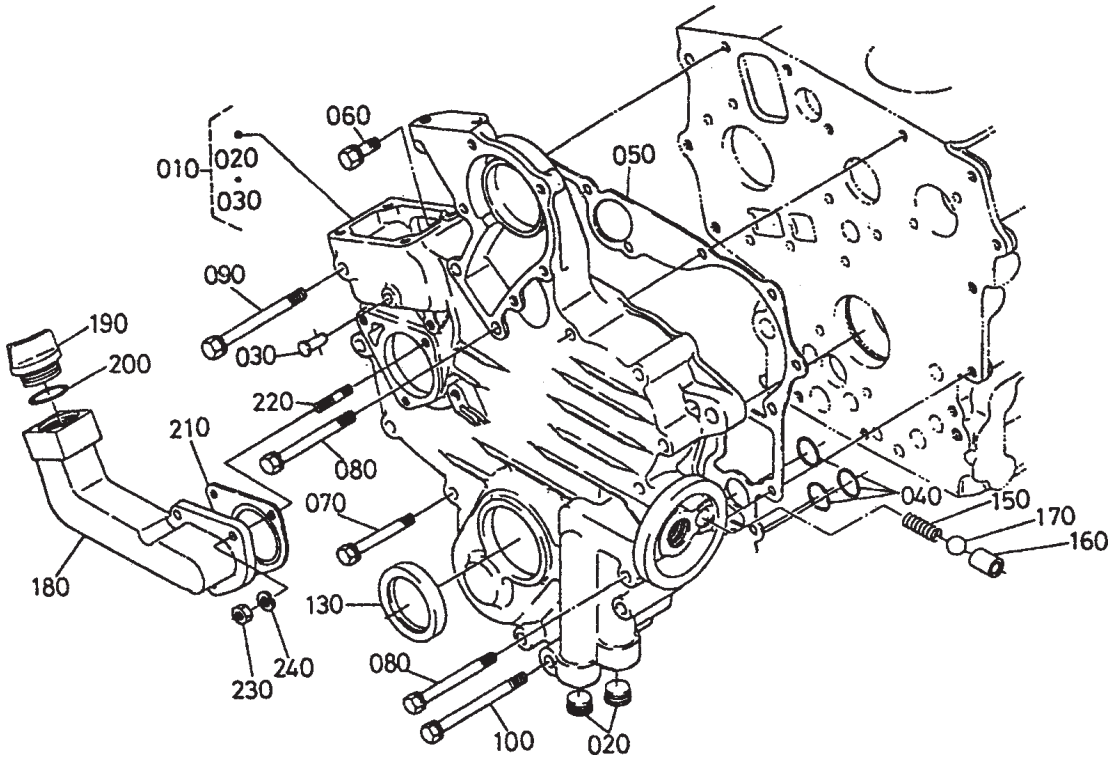




# KUBOTA Z482-EB/E2B/E3B ENGINE— GEAR CASE ASSY.

## GEAR CASE ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1687504024	COMP. CASE, GEAR .....	1 .....	INCLUDES ITEMS W/# (TIER I AND TIER II)
010	1E05104024	COMP. CASE, GEAR .....	1 .....	INCLUDES ITEMS W/% (TIER IV)
020#%	1685196010	PLUG .....	2 .....	TIER I (ORANGE UNITS)
020#%	1552196030	PLUG .....	2 .....	TIER II AND TIER IV (WHITE UNITS)
030#%	1584156280	PIN, START SPRING	1	
040	0481406130	O-RING .....	3 .....	TIER I AND TIER II ONLY
050	1586204132	GASKET, GEAR CASE	1	
050	1586204130	GASKET, GEAR CASE .....	1 .....	TIER IV ONLY
060	0102350618	BOLT	1	
070	0102360650	BOLT	8	
080	1584191010	BOLT	5	
090	0102350670	BOLT .....	1 .....	TIER I (ORANGE UNITS)
090	0102360670	BOLT .....	1 .....	TIER II AND TIER IV (WHITE UNITS)
100	0102350675	BOLT	1	
130	1587704140	SEAL, OIL	1	
150	1685136950	SPRING	1	
160	1584136930	SEAT, VALVE	1	
170	0771503211	BALL	1	
180	1584633110	FLANGE, OIL FILLER	1	
190	1381133140	PLUG, OIL FILLER	1	
200	0481106230	O-RING	1	
210	1946188132	GASKET, H/M GEAR CASE	1	
220	1522188210	STUD	3	
230	0205650060	NUT	3	
240	0451260060	WASHER, SPRING	3	

# KUBOTA Z482-EB/E2B/E3B ENGINE— HEAD COVER ASSY.

HEAD COVER ASSY. (DA7000SS ORANGE UNITS)

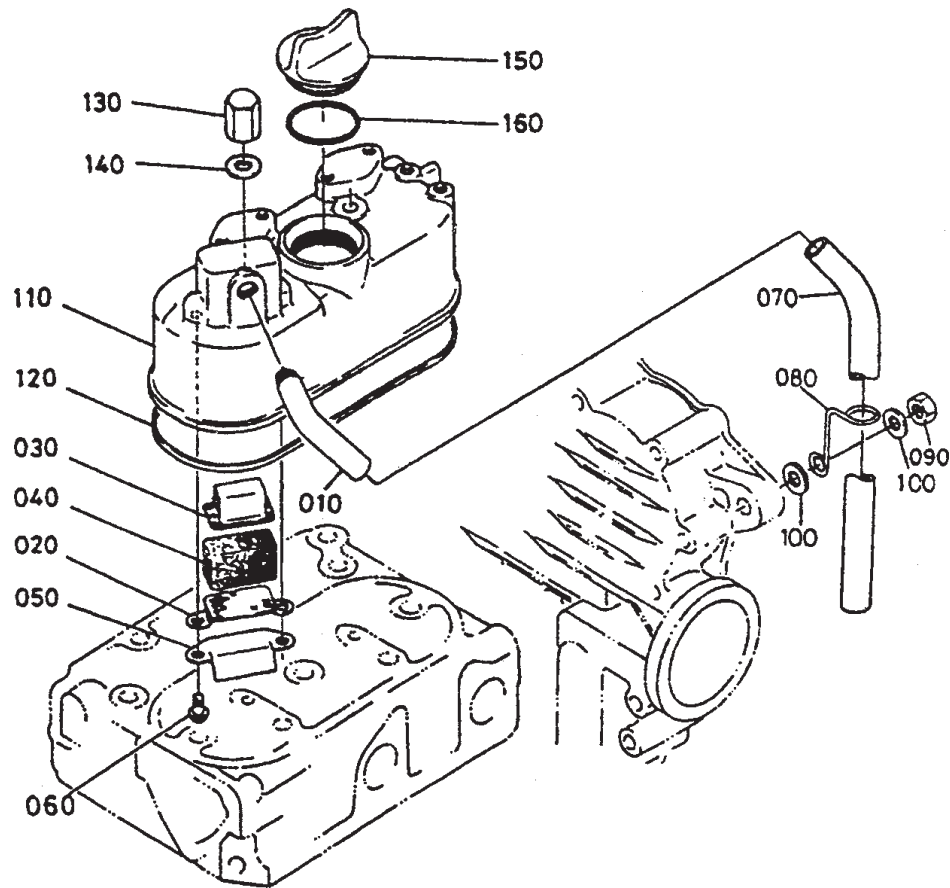


## KUBOTA Z482-EB/E2B/E3B ENGINE— HEAD COVER ASSY.

HEAD COVER ASSY. (DA7000SS ORANGE UNITS)

<b><u>NO</u></b>	<b><u>PART NO</u></b>	<b><u>PART NAME</u></b>	<b><u>QTY.</u></b>	<b><u>REMARKS</u></b>
010	1588105550	JOINT, BREATHER PIPE	1	
020	1584105140	PLATE, BREATHER ELEMENT	1	
030	1584105150	PLATE, BREATHER ELEMENT	1	
040	1584105670	ELEMENT, BREATHER	1	
050	1584105370	OIL SHIELD, BREATHER	1	
060	1686193310	SCREW	2	
070	1584705512	PIPE, BREATHER	1	
080	1584105590	CLAMP, PIPE	1	
090	0211450080	NUT	1	
100	0401360080	WASHER, PLAIN	2	
110	1685114512	COVER, CYLINDER HEAD	1	
120	1685114522	GASKET, HEAD COVER	1	
130	1584114620	NUT, CAP	2	
140	1560196650	GASKET	2	
150	1585233140	PLUG, OIL FILLER	1	
160	0481150300	O-RING	1	

## KUBOTA Z482-EB/E2B/E3B ENGINE— HEAD COVER ASSY.

HEAD COVER ASSY. (DA7000SSW AND DA7000SSA WHITE UNITS)

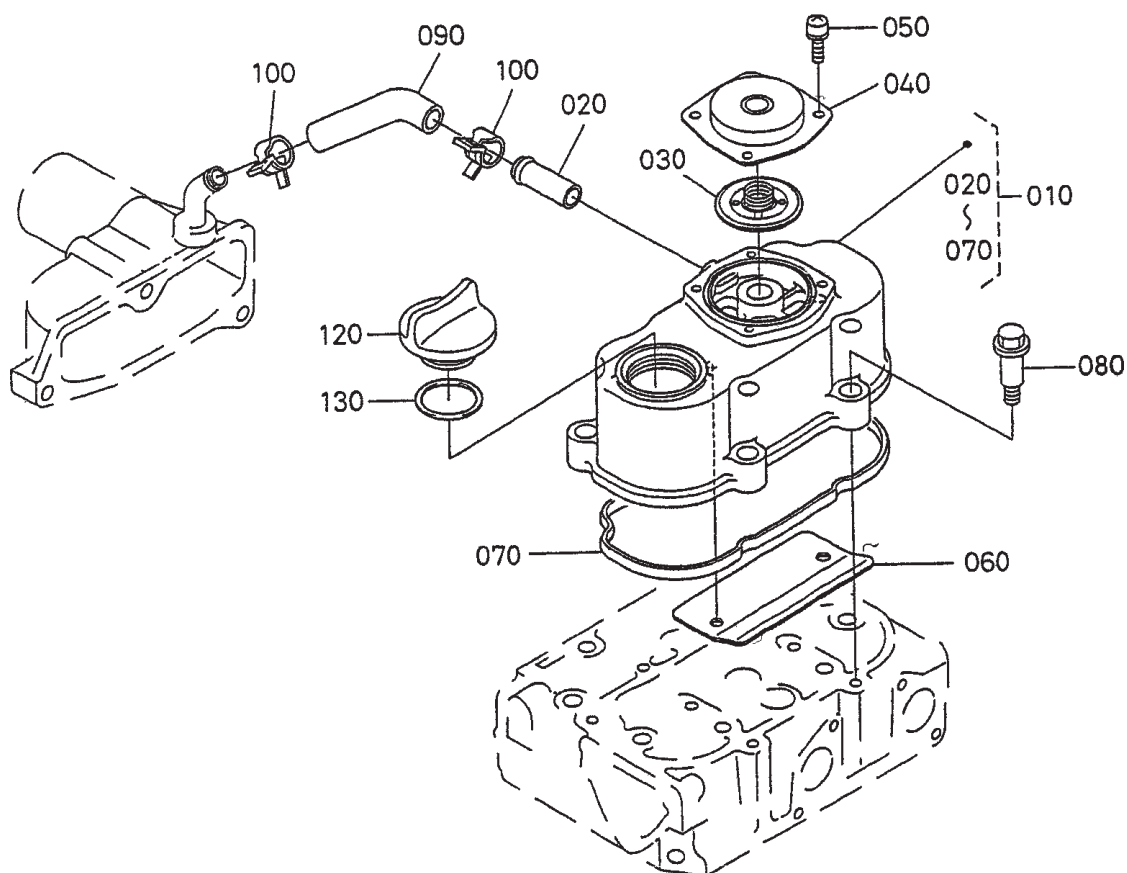


# KUBOTA Z482-EB/E2B/E3B ENGINE— HEAD COVER ASSY.

HEAD COVER ASSY. (DA7000SSW AND DA7000SSA WHITE UNITS)

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1G95714503	COVER CYLINDER HEAD .....	1 .....	INCLUDES ITEMS W/#
010	1G95714504	COVER CYLINDER HEAD .....	1 .....	INCLUDES ITEMS W/%
020#	1624173370	PIPE, WATER RETURN	1	
030#	1G91105203	COMP. VALVE BREATHER	1	
040#	1G80105120	COVER, BREATHER	1	
050#	0302450510	SCREW WITH WASHER	4	
060#	1G95805370	SHIELD, BREATHER .....	1 .....	TIER II ONLY
070#	1G95714520	GASKET, HEAD COVER	1	
080	1G91191022	BOLT	4	
090	1G96005512	TUBE, BREATHER	1	
100	0931888125	CLAMP, HOSE	2	
120	E915133140	PLUG, OIL FILTER	1	
130	0481450300	O-RING	1	

## KUBOTA Z482-EB/E2B/E3B ENGINE— OIL FILTER ASSY.

OIL FILTER ASSY.

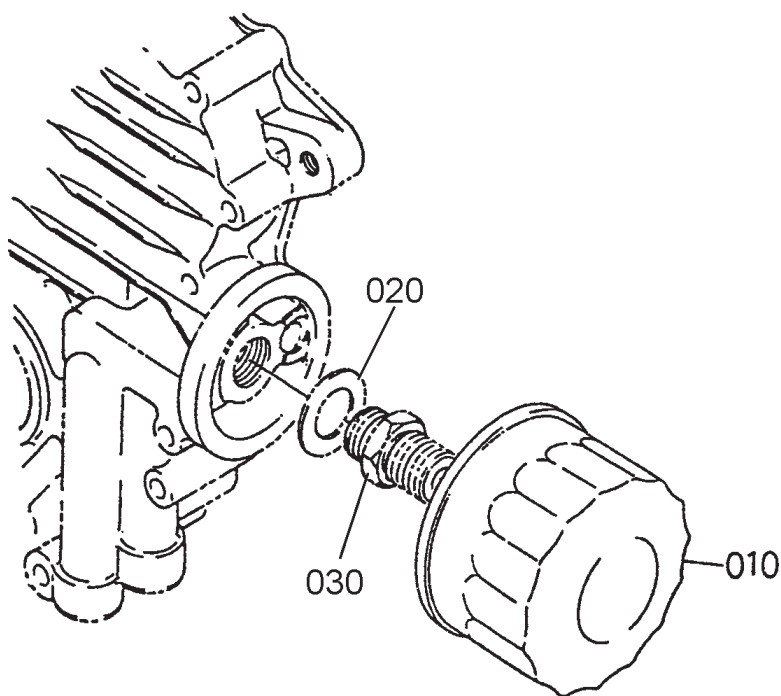




# KUBOTA Z482-EB/E2B/E3B ENGINE— OIL FILTER ASSY.

OIL FILTER ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	7000015241	CARTRIDGE, OIL FILTER .....	1 .....	REPLACES 1585399170
		.....		TIER I (ORANGE UNITS)
010	1585332430	CARTRIDGE, OIL FILTER .....	1 .....	TIER II AND TIER IV (WHITE UNITS)
020	1584194010	WASHER, PLAIN	1	
030	1524132290	JOINT, PIPE	1	

## KUBOTA Z482-EB/E2B/E3B ENGINE— DIPSTICK AND GUIDE

DIPSTICK AND GUIDE ASSY.

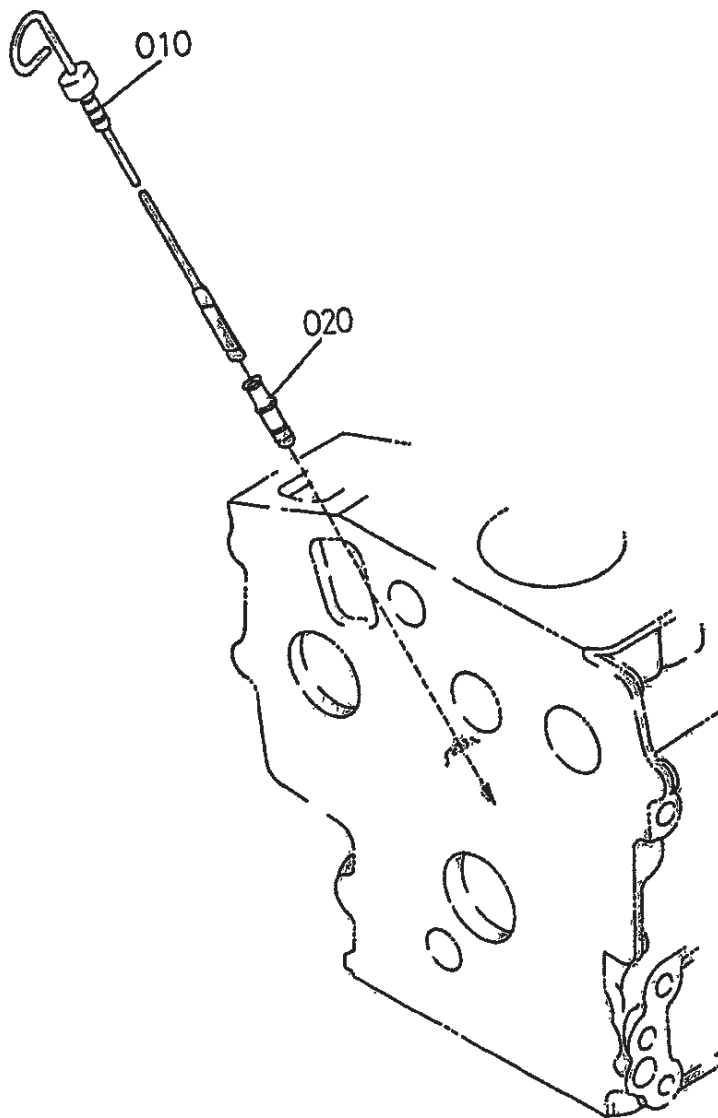


## KUBOTA Z482-EB/E2B/E3B ENGINE— DIPSTICK AND GUIDE ASSY.

DIPSTICK AND GUIDE ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1685136410	GAUGE, OIL .....	1 .....	TIER I (ORANGE UNITS)
010	1G30436410	GAUGE, OIL .....	1 .....	TIER II AND TIER IV (WHITE UNITS)
020	1745636420	GUIDE, OIL GAUGE .....	1 .....	TIER II AND TIER IV (WHITE UNITS)

## KUBOTA Z482-EB/E2B/E3B ENGINE— MAIN BEARING CASE ASSY.

MAIN BEARING CASE ASSY.

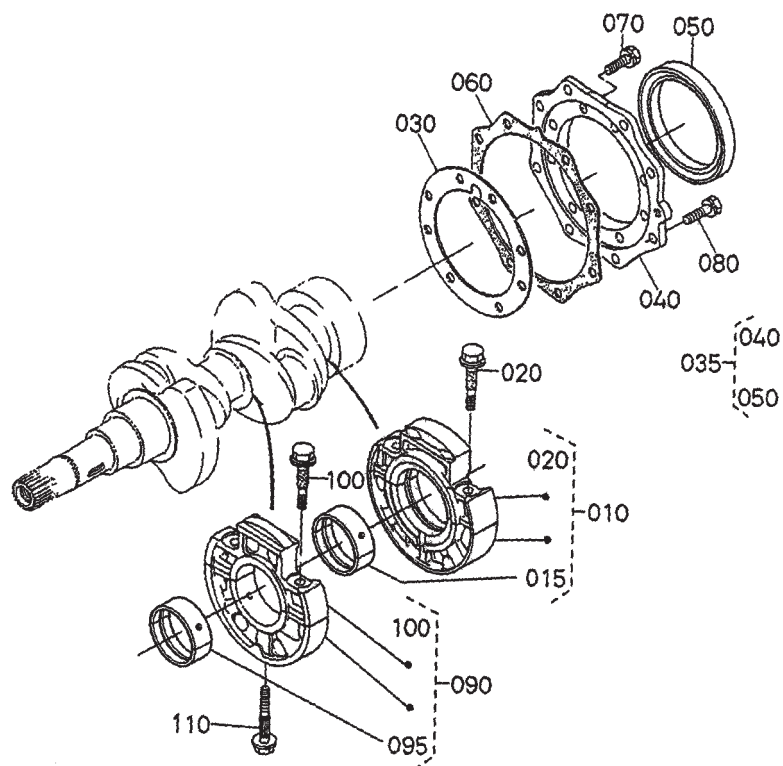


# KUBOTA Z482-EB/E2B/E3B ENGINE— MAIN BEARING CASE ASSY.

## MAIN BEARING CASE ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1685104092	ASSY. CASE, MAIN BEARING	1	
010	1685107090	ASSY. CASE, MAIN BEARING ..	1 .....	INCLUDES ITEMS W/\$ TIER IV ONLY
015\$	1686123480	METAL, CRANKSHAFT M	1	
020\$	1584104540	BOLT, BEARING CASE	2	
030	1585204360	GASKET, BEARING CASE	1	
035	1584104800	COVER ASSY., BRG CASE	1	INCLUDES ITEMS W/# TIER I (ORANGE UNITS)
035	1584104803	COVER ASSY., BRG CASE	1	INCLUDES ITEMS W/% TIER II AND TIER IV
040#	1584104810	COVER, BEARING CASE	1	TIER I (ORANGE UNITS)
040%	1584104815	COVER, BEARING CASE	1	TIER II AND TIER IV (WHITE UNITS)
050#%	1921599160	SEAL, OIL	1	
060	1584104822	GASKET, CASE COVER	1	
060	1584104823	GASKET, CASE COVER .....	1 .....	TIER IV ONLY
070	0102350620	BOLT	8	
080	0102350622	BOLT	8	
090	1685104040	ASSY. CASE, MAIN BEARING	1	
090	1685107040	ASSY. CASE, MAIN BEARING ..	1 .....	TIER IV ONLY
100	1584104540	BOLT, BEARING CASE	2	
110	1584104562	BOLT, BEARING CASE	1	

# KUBOTA Z482-EB/E2B/E3B ENGINE— CAMSHAFT AND IDLE GEAR ASSY.

CAMSHAFT AND IDLE GEAR SHAFT ASSY.

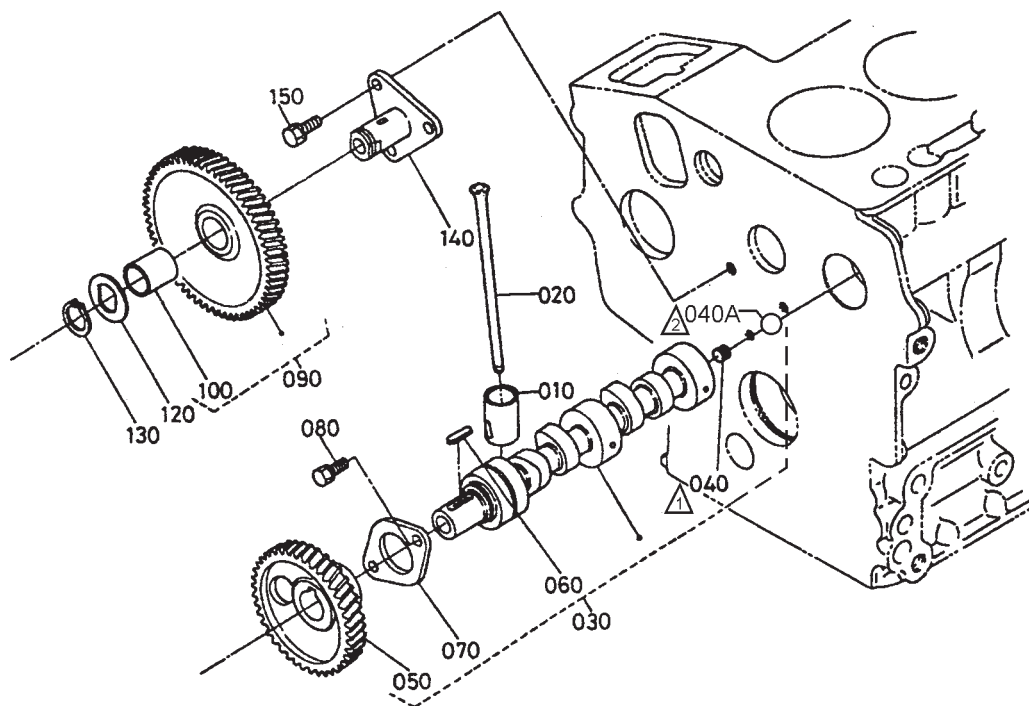

## NOTES

- 1 ITEM 40, SET SCREW IS USED ON DA-7000SS ORANGE UNITS ONLY.
- 2 ITEM 40A, BALL IS USED ON DA-7000SW/DA-7000SSA WHITE UNITS ONLY.




# KUBOTA Z482-EB/E2B/E3B ENGINE— CAMSHAFT AND IDLE GEAR ASSY.

## CAMSHAFT AND IDLE GEAR SHAFT ASSY.

<b>NO</b>	<b>PART NO</b>	<b>PART NAME</b>	<b>QTY.</b>	<b>REMARKS</b>
010	1685115550	TAPPET .....	4 .....	TIER I (ORANGE UNITS)
010	1685115552	TAPPET .....	4 .....	TIER II AND TIER IV (WHITE UNITS)
020	1685115110	PUSH ROD	4	
030	1584116015	CAMSHAFT ASSY. ....	1 .....	INCLUDES ITEMS W/%
030	1584116019	CAMSHAFT ASSY. ....	1 .....	INCLUDES ITEMS W/\$
040\$	1552193610	SCREW, SET .....	1 .....	TIER I (ORANGE UNITS)
040A%	0771500401	BALL .....	1 .....	TIER II (WHITE UNITS)
050%\$	1686416510	GEAR, CAM	1	
060%\$	0571200518	KEY, FEATHER	1	
070%\$	1584116270	STOPPER, CAMSHAFT	1	
080	0102350612	BOLT	2	
090	1587524013	COMP. GEAR, IDLE .....	1 .....	INCLUDES ITEMS W/#
100#	1587524282	BUSH	1	
120	1587524370	COLLAR, IDLE GEAR	1	
130	1587524320	RING, SNAP	1	
140	1587524250	SHAFT, IDLE GEAR	1	
150	0102350614	BOLT	3	

## KUBOTA Z482-EB/E2B/E3B ENGINE— PISTON AND CRANKSHAFT ASSY.

PISTON AND CRANKSHAFT ASSY.

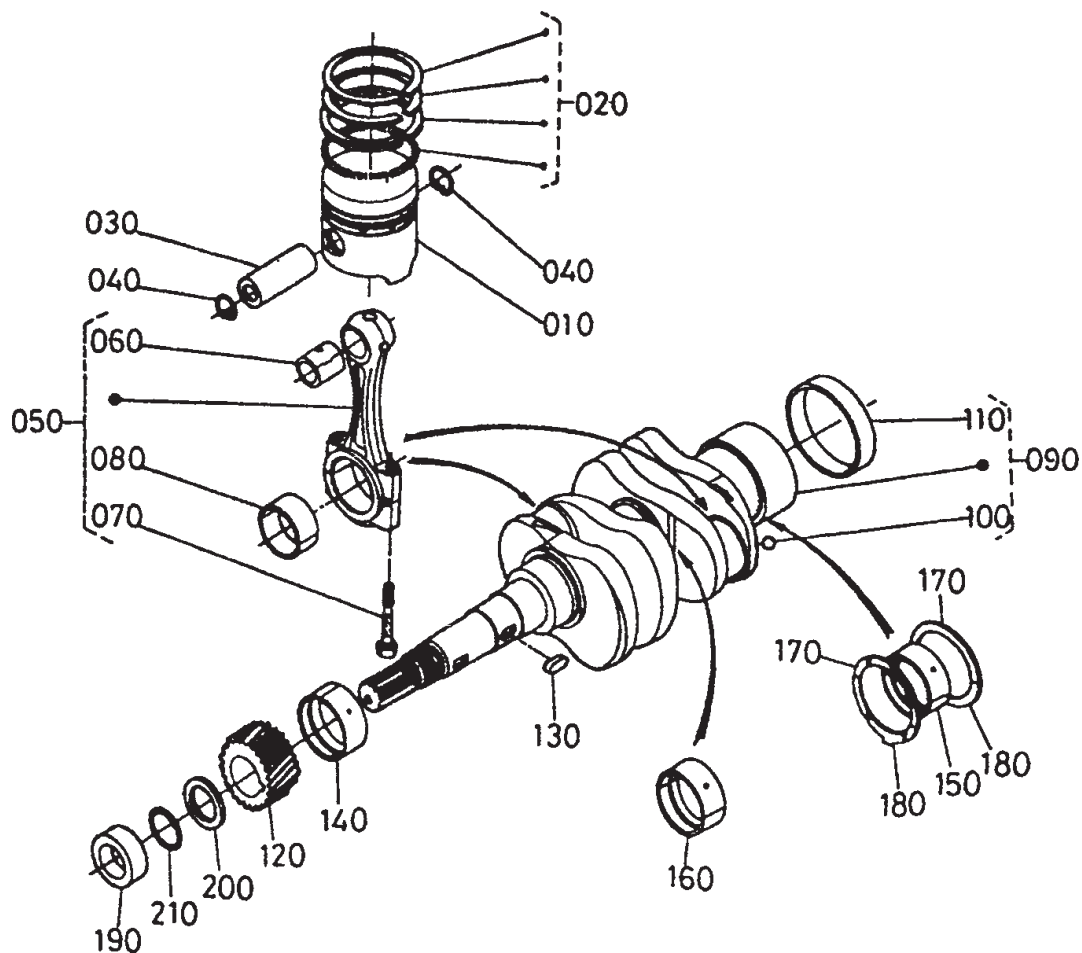


# KUBOTA Z482-EB/E2B/E3B ENGINE— PISTON AND CRANKSHAFT ASSY.

## PISTON AND CRANKSHAFT ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1685121112	PISTON STD	2	
010	1685121114	PISTON STD .....	2	TIER IV ONLY
010	1685121900	PISTON +0.25MM	2	
010	1685121903	PISTON +0.25MM .....	2	TIER IV ONLY
020	1685321050	ASSY. PISTON RING STD	2	
020	1685321090	ASSY. PISTON RING +0.25MM	2	
030	1685121310	PIN, PISTON	2	
040	1526121330	AIR CLIP, PISTON PIN	4	
050	1685122010	CONNECTING ROD ASSY. ....	2	INCLUDES ITEMS W/% TIER I ORANGE
050	1685122015	CONNECTING ROD ASSY. ....	2	INCLUDES ITEMS W/#+ TIER II/TIER IV
060%	1685121980	BUSH, PISTON PIN .....	2	TIER I (ORANGE UNIT)
060+	1685121982	BUSH, PISTON PIN .....	2	TIER II AND TIER IV
070%+	1685122140	BOLT, CONNECTING ROD	4	
080%+	1685122320	METAL, CRANKPIN M STD SET	2	
080	1586122970	METAL, CRANKPIN -0.20MM SET	2	
080	1586122980	METAL, CRANKPIN -0.40MM SET	2	
090	1685323030	CRANKSHAFT ASSY. ....	1	INCLUDES ITEMS W/#
100#	0771503207	BALL	2	
110#	1921523280	SLEEVE, CRANKSHAFT	1	
120	1584124110	GEAR, CRANK	1	
130	0571200515	KEY, FEATHER	1	
140	1586123470	METAL, CRANKSHAFT STD	1	
140	1586123910	METAL, CRANKSHAFT -0.20MM	1	
140	1586123920	METAL, CRANKSHAFT -0.40MM	1	
150	1686123480	METAL, CRANKSHAFT M STD SET	1	
150	1569423930	METAL, CRANKSHAFT -0.20MMSET	1	
150	1569423940	METAL, CRANKSHAFT -0.40MMSET	1	
160	1686123490	METAL, CRANKSHAFT STD SET	1	
160	1586123860	METAL, CRANKSHAFT -0.20MM SET	1	
160	1586123870	METAL, CRANKSHAFT -0.40MM SET	1	
170	1526123530	METAL, SIDE STD	2	
170	1526123950	METAL, SIDE +0.20MM	2	
170	1526123960	METAL, SIDE +0.40MM	2	
180	1526123540	METAL, SIDE STD	2	
180	1526123970	METAL, SIDE +0.20MM	2	
180	1526123980	METAL, SIDE +0.40MM	2	
190	1584123250	COLLAR, CRANKSHAFT	1	
200	1588123310	SLINGER, OIL	1	
210	0481416220	O-RING	1	

## KUBOTA Z482-EB/E2B/E3B ENGINE— FLYWHEEL ASSY.

FLYWHEEL ASSY.

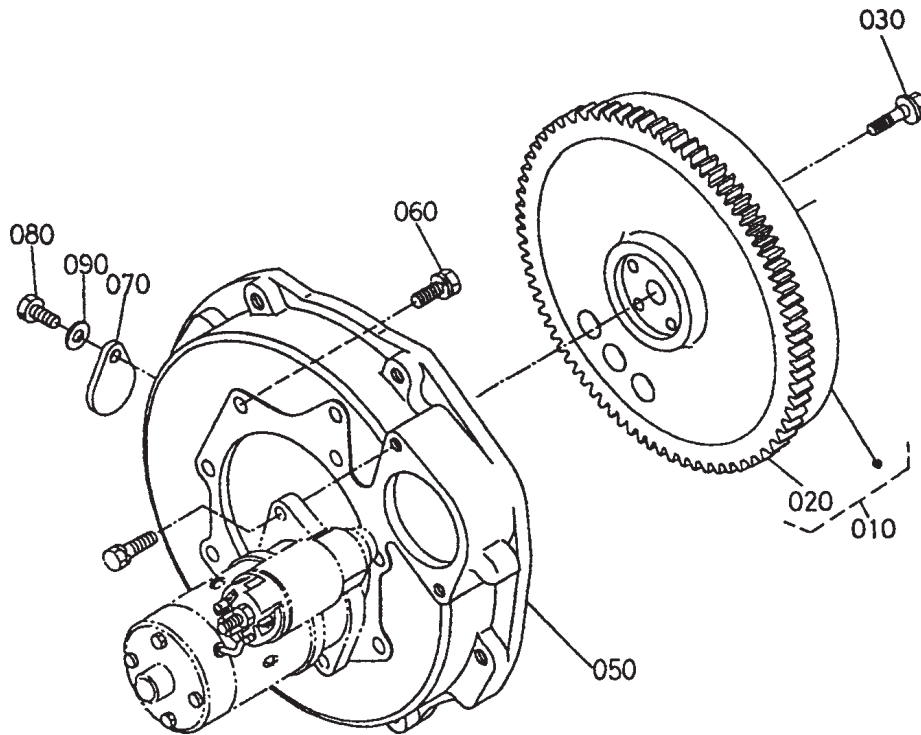


# KUBOTA Z482-EB/E2B/E3B ENGINE— FLYWHEEL ASSY.

## FLYWHEEL ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1685125010	COMP. FLYWHEEL .....	1 .....	INCLUDES ITEMS W/# TIER I (ORANGE UNITS)
010	1685125015	COMP. FLYWHEEL .....	1 .....	INCLUDES ITEMS W/% TIER II AND TIER IV
020#	1685163820	GEAR, RING .....	1 .....	TIER I (ORANGE UNITS)
020%	1685163822	GEAR, RING .....	1 .....	TIER II AND TIER IV (WHITE UNITS)
030	1585225160	BOLT, FLYWHEEL	5	
050	1584704612	HOUSING, FLYWHEEL	1	
060	0112350820	BOLT	10	
070	3122014170	COVER	1	
080	0112360814	BOLT	1	
090	0401360080	WASHER, PLAIN	1	

## KUBOTA Z482-EB/E2B/E3B ENGINE— FUEL CAMSHAFT & GOV. SHAFT

FUEL CAMSHAFT AND GOVERNOR SHAFT ASSY.

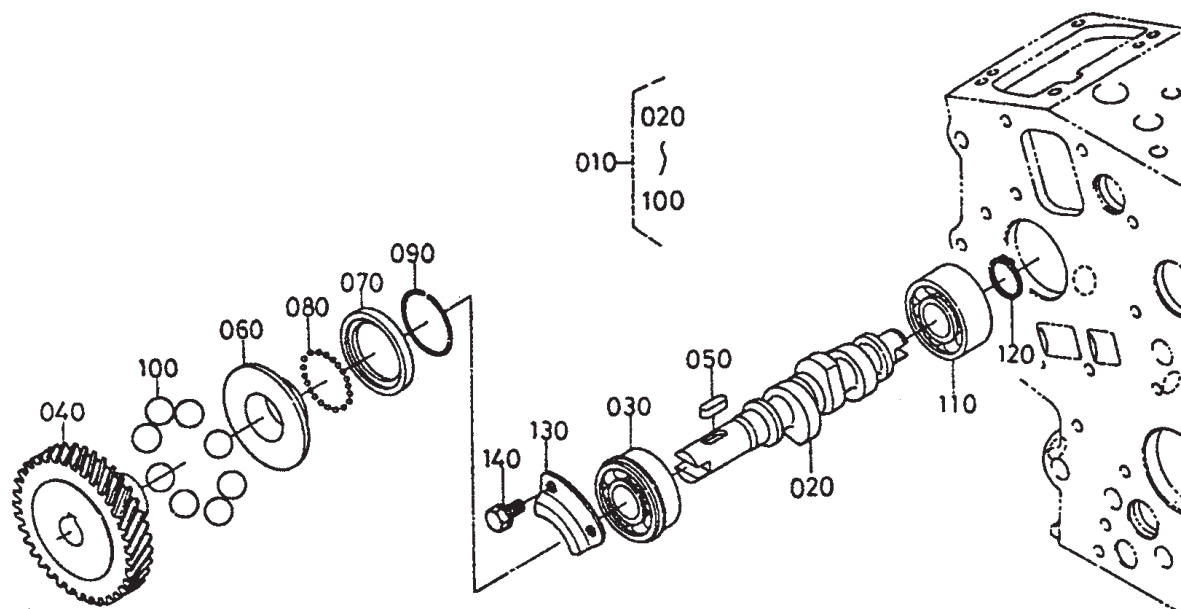

# KUBOTA Z482-EB/E2B/E3B ENGINE— FUEL CAMSHAFT & GOV. SHAFT


## FUEL CAMSHAFT AND GOVERNOR SHAFT ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1685116020	CAMSHAFT ASSY., FUEL .....	1 .....	INCLUDES ITEMS W/#
010	1685116023	CAMSHAFT ASSY., FUEL .....	1 .....	INCLUDES ITEMS W/\$
020#	1584116172	CAMSHAFT, FUEL	1	
030#	0815306203	BEARING, BALL	1	
040#	1685151150	GEAR, INJECTION PUMP	1	
050#	0571200515	KEY, FEATHER	1	
060#	1584155450	SLEEVE, GOVERNOR	1	
060#	1584155452	SLEEVE, GOVERNOR .....	1 .....	TIER IV ONLY
070#	1584155690	CASE, GOVERNOR BALL	1	
080#	0771500801	BALL	32	
090#	1526155470	CIR-CLIP, GOVERNOR SLEEVE	1	
100#	0771503217	BALL	8	
110	0810306203	BEARING, BALL .....	1 .....	TIER I (ORANGE UNITS)
110	1687197300	BEARING, BALL .....	1 .....	TIER II AND TIER IV
120	0461200170	CIR CLIP, EXTERNAL	1	
130	1584116320	STOPPER, FUEL. CAMSHAFT	1	
140	0102350612	BOLT	2	



# KUBOTA Z482-EB/E2B/E3B ENGINE— ENGINE STOP LEVER ASSY.

ENGINE STOP LEVER ASSY.

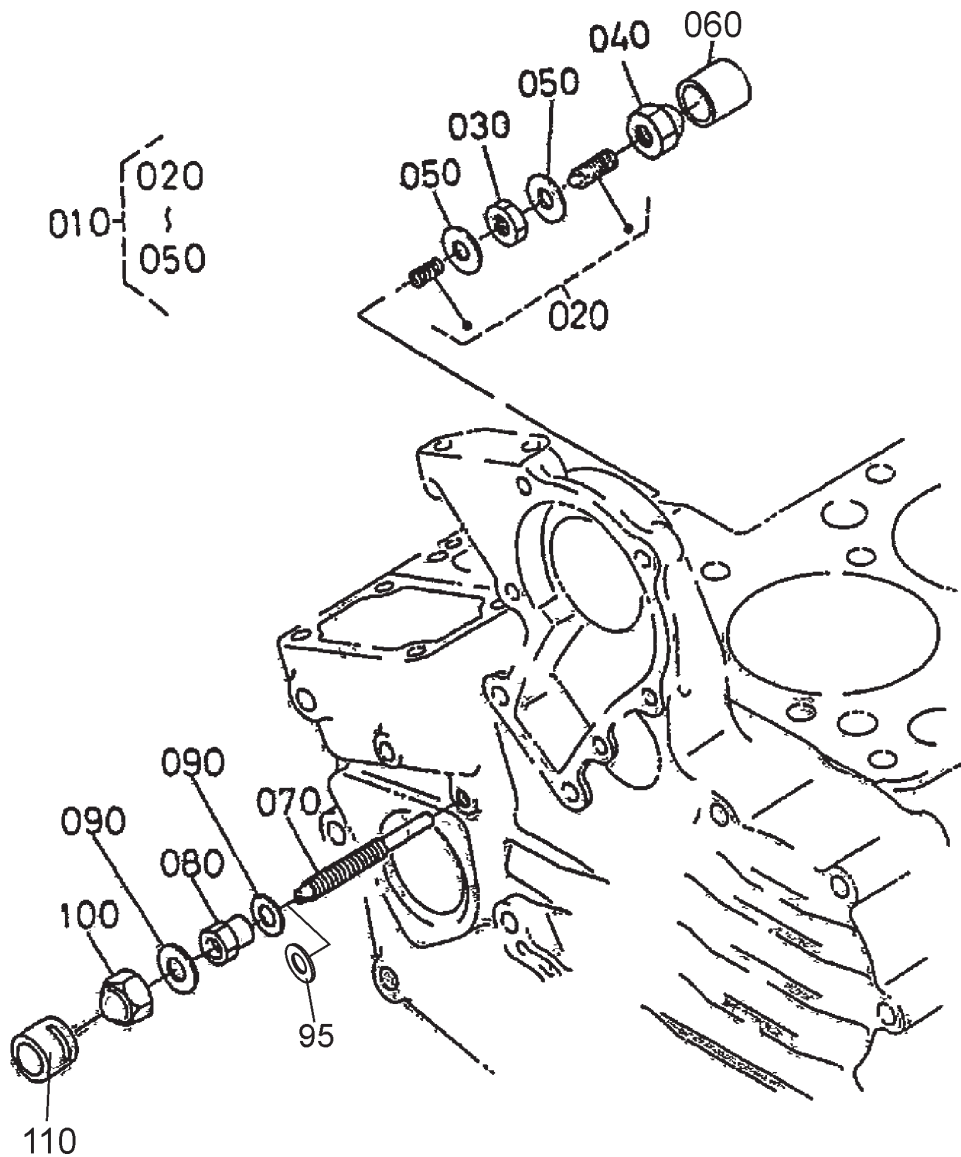


# KUBOTA Z482-EB/E2B/E3B ENGINE— ENGINE STOP LEVER ASSY.

## ENGINE STOP LEVER ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1584154092	ASSY. APPARATUS, IDLE .....	1 .....	INCLUDES ITEMS W/#
020#	1584154100	ASSY. BOLT, ADJUSTING	1	
030#	1526192020	NUT	1	
040#	1584154220	NUT, CAP	1	
050#	1502133660	GASKET	2	
060	1584154270	CAP	1	
070	1584154122	BOLT, ADJUSTING .....	1 .....	TIER I (ORANGE UNITS)
070	1584154123	BOLT, ADJUSTING .....	1 .....	TIER II AND TIER IV (WHITE UNITS)
080	1G03154210	NUT, LOCK	1	
090	1560196650	GASKET	2	
090	1560196650	GASKET .....	1 .....	TIER IV ONLY
095	1G02196650	GASKET .....	1 .....	TIER IV ONLY
100	1584192330	NUT, CAP	1	
110	1G02154290	PIPE, LOCK .....	1 .....	TIER II (WHITE UNITS)

## KUBOTA Z482-EB/E2B/E3B ENGINE— STOP SOLENOID ASSY.

STOP SOLENOID ASSY.

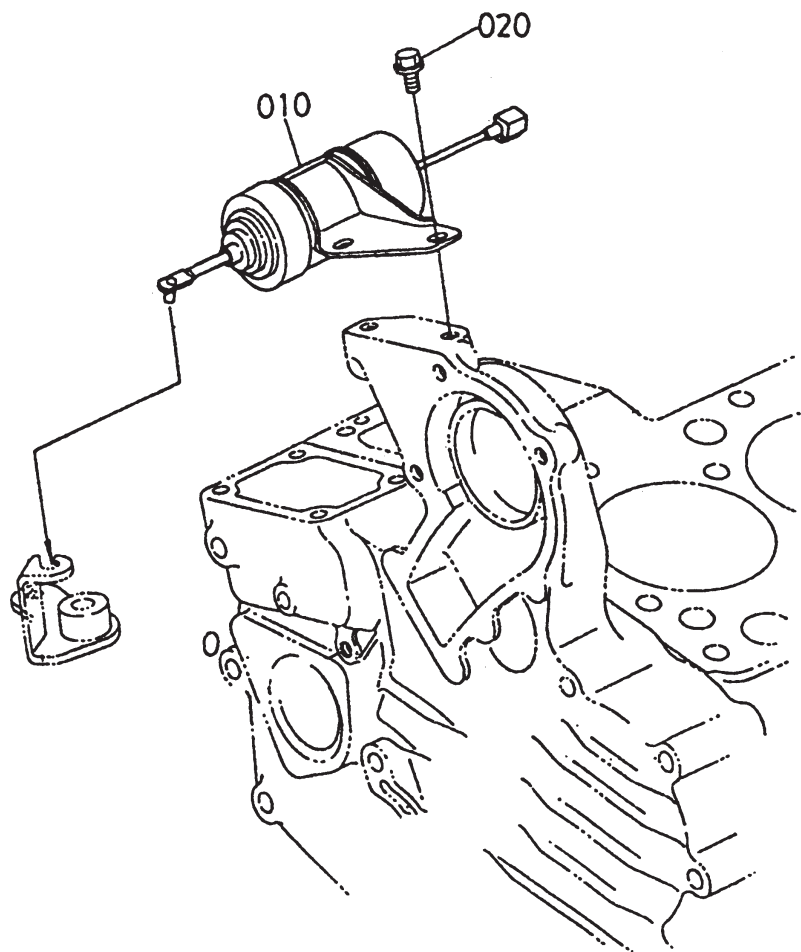


## KUBOTA Z482-EB/E2B/E3B ENGINE— STOP SOLENOID ASSY.

STOP SOLENOID ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1685160010	SOLENOID, STOP .....	1 .....	TIER I (ORANGE UNITS)
010	1685160013	SOLENOID, STOP .....	1 .....	TIER II (WHITE UNITS)
010	1685160014	SOLENOID, STOP .....	1 .....	TIER IV (WHITE UNITS)
020	0175450612	BOLT, FLANGE	2	

## KUBOTA Z482-EB/E2B/E3B ENGINE— INJECTION PUMP ASSY.

INJECTION PUMP ASSY.

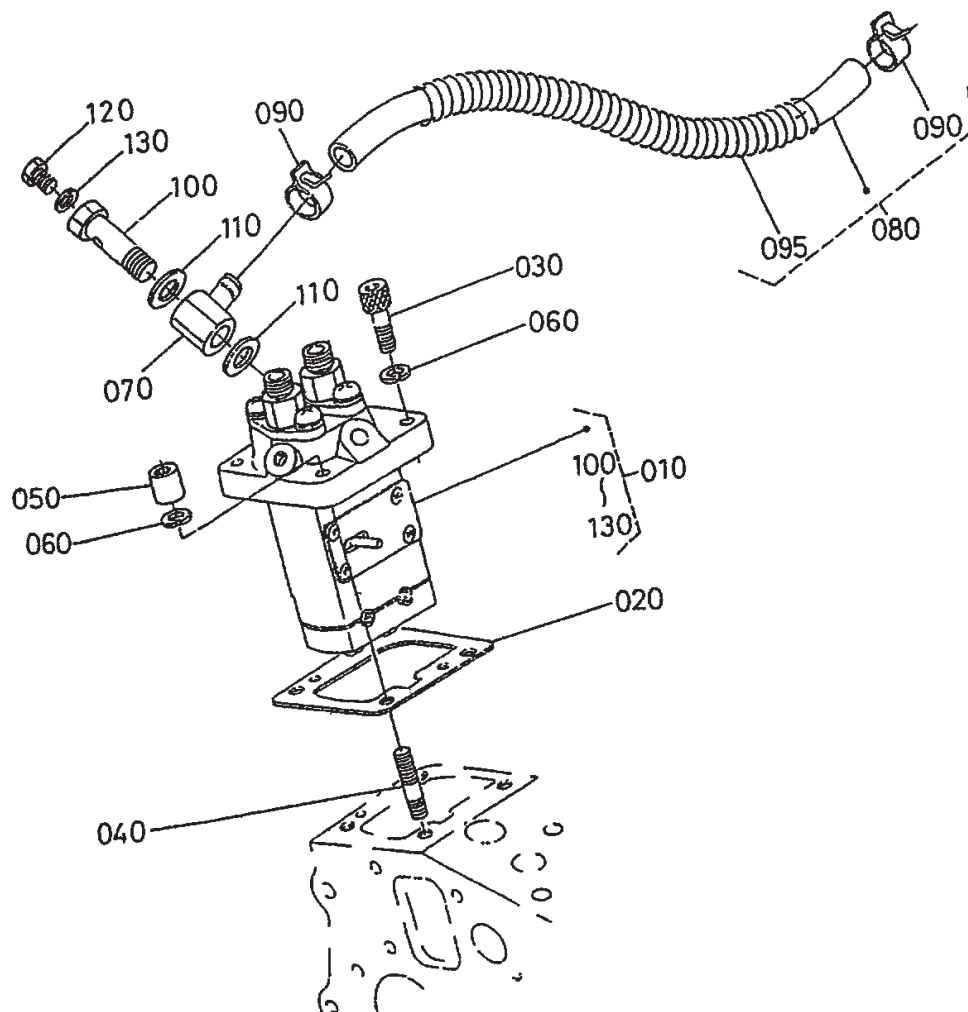


# KUBOTA Z482-EB/E2B/E3B ENGINE— INJECTION PUMP ASSY.

## INJECTION PUMP ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1600151010	PUMP ASSY., INJECTION	1	
020	1600152090	SHIM, INJECTION PUMP, 20 MM	1	
020	1600152110	SHIM, INJECTION PUMP, 25 MM	1	
020	1600152120	SHIM, INJECTION PUMP, 30 MM	1	
020	1G68952160	SHIM, INJECTION PUMP, 35 MM .....	1 .....	TIER IV ONLY
020	1G68952200	SHIM, INJECTION PUMP, 175 MM .....	1 .....	TIER IV ONLY
030	0131110620	BOLT, HEX-SOC-HD	3	
040	1584191500	STUD	1	
050	1584192320	NUT, CAP	1	
060	0451260060	WASHER, SPRING	4	
070	1584195680	JOINT, EYE	1	
080	1526342010	ASSY. PIPE, FUEL .....	1 .....	INCLUDES ITEMS W/#
090#	1491142750	CLIP, PIPE	2	
095#	6659154250	SPRING, PIPE PROTECT	1	
100	1584151320	SCREW HOLLOW .....	1 .....	TIER II AND TIER IV WHITE UNITS
110	1584196650	GASKET .....	2 .....	TIER II AND TIER IV WHITE UNITS
120	1584151350	SCREW .....	1 .....	TIER II AND TIER IV WHITE UNITS
130	1584196660	GASKET .....	1 .....	TIER II AND TIER IV WHITE UNITS

# KUBOTA Z 482-EB ENGINE—INJECTION PUMP COMPONENTS ASSY.

INJECTION PUMP COMPONENTS ASSY.

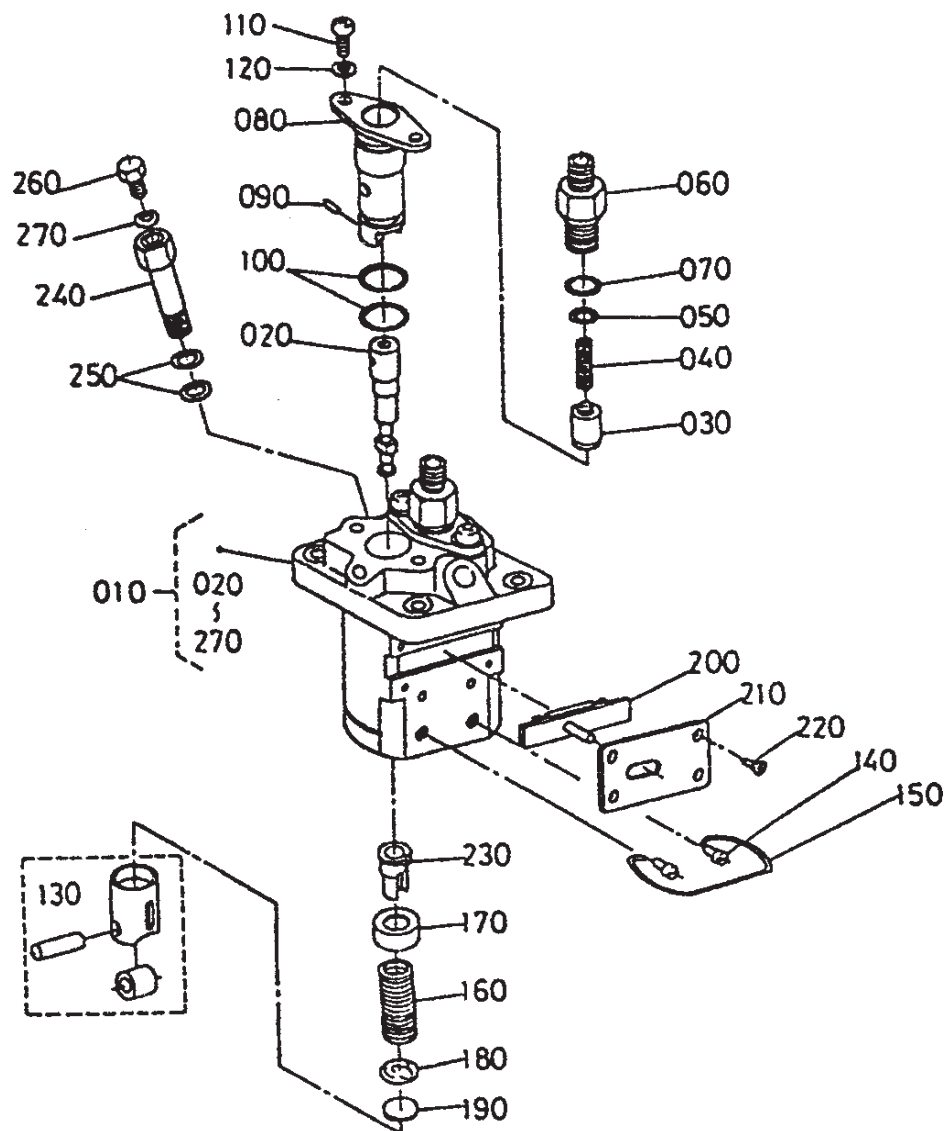

# KUBOTA Z 482-EB ENGINE—INJECTION PUMP COMPONENTS ASSY.


## INJECTION PUMP COMPONENTS ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1600151010	INJECTION PUMP ASSY. ....	1	INCLUDES ITEMS W/# TIER I (ORANGE UNITS)
010	1754851010	INJECTION PUMP ASSY. ....	1	INCLUDES ITEMS W/% TIER II (WHITE UNITS)
020#	1685151050	PLUNGER, PUMP .....	2	TIER I (ORANGE UNITS)
020%	1754851050	PLUNGER, PUMP .....	2	TIER II (WHITE UNITS)
030#	1584151030	VALVE, DELIVERY	2	
040#	1584151230	SPRING, DELIV. VALVE	2	
050#	1584151240	GASKET, DELIV. VALVE	2	
060#	1685151220	HOLDER, DELIV. VALVE	2	
070#	1584196760	O-RING	2	
080#	1584151560	FLANGE, SLEEVE	2	
090#	1584194570	PIN, JOINT	2	
100#	1584151200	O-RING	4	
110#	1586291430	SCREW	4	
120#	1585251470	WASHER	4	
130#	1584151070	ASSY. TAPPET	2	
140#	1584151250	PIN, TAPPET GUIDE	2	
150#	1584151430	PIN, CLAMP	1	
160#	1584151280	SPRING, PLUNGER	2	
170#	1584151270	SEAT, SPRING UPPER	2	
180#	1584151290	SEAT, SPRING LOWER	2	
190#	1584151490	SHIM	1	
200#	1584151060	SHIM	1	
210#	1584151540	PLATE	1	
220#	1584193110	SCREW, CSK-HD	4	
230#	1584151380	SLEEVE, CONTROL	2	
240#	1584151320	SCREW, FOLLOW	1	
250#	1584196650	GASKET	2	
260#	1584151350	SCREW	1	
270#	1584196660	GASKET	1	



## KUBOTA Z482-EB/E2B/E3B ENGINE— SPEED CONTROL PLATE ASSY.

SPEED CONTROL PLATE ASSY.

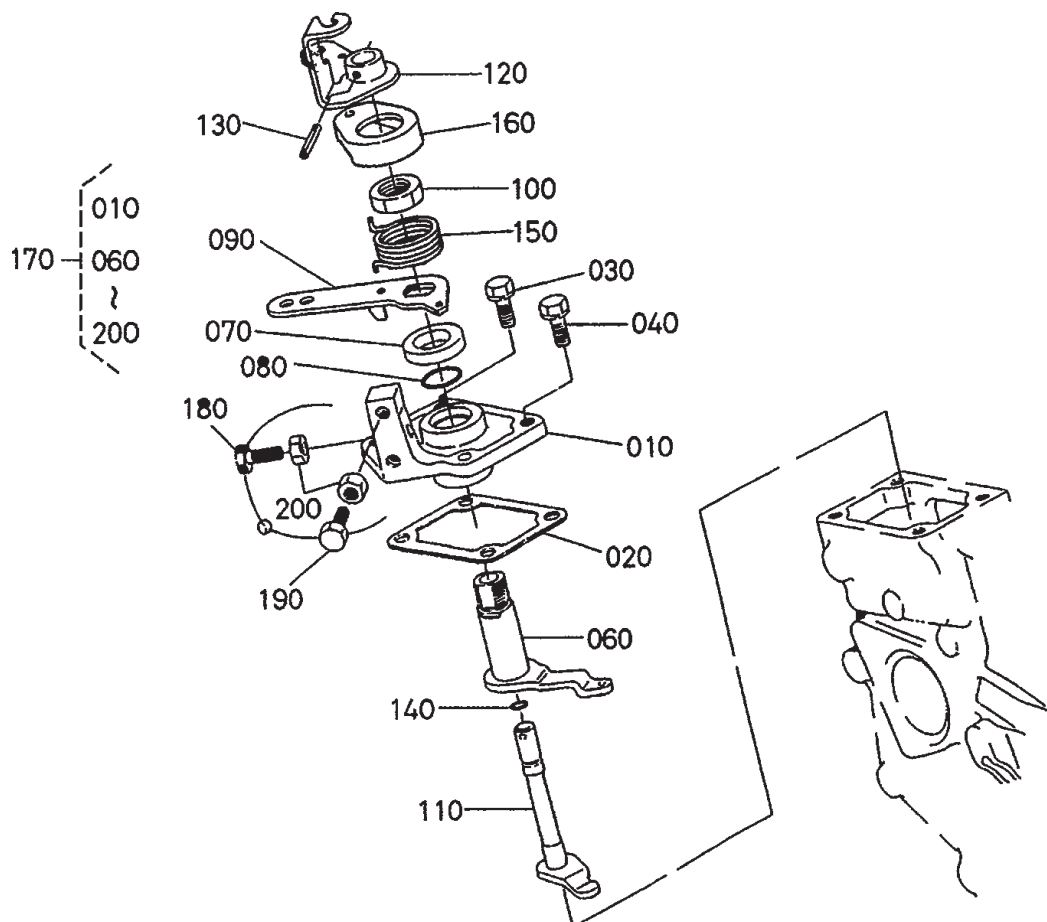


# KUBOTA Z482-EB/E2B/E3B ENGINE— SPEED CONTROL PLATE ASSY.

## SPEED CONTROL PLATE ASSY.

<b>NO</b>	<b>PART NO</b>	<b>PART NAME</b>	<b>QTY.</b>	<b>REMARKS</b>
010	1584157110	PLATE, SPEED CONTROL .....	1 .....	TIER I (ORANGE UNIT)
010%	1584157112	PLATE, SPEED CONTROL	1	TIER II AND TIER IV (WHITE UNIT)
020	1584157212	GASKET, CONTROL PLATE	1	
030	0102350618	BOLT	2	
040	0105350618	BOLT	2	
040	1687191050	BOLT .....	2 .....	TIER IV ONLY
050	1560196650	GASKET .....	2 .....	TIER I AND TIER II ONLY
060	1584156110	LEVER, GOVERNOR .....	1 .....	TIER I (ORANGE UNIT)
060%	1584156112	LEVER, GOVERNOR .....	1 .....	TIER II AND TIER IV (WHITE UNIT)
070	1584157240	COLLAR .....	1 .....	TIER I (ORANGE UNIT)
070	1928057240	COLLAR .....	1 .....	TIER II AND TIER IV (WHITE UNIT)
080%	0481410160	O-RING	1	
090%	1666757150	LEVER, SPEED CONTROL	1	
100	1584192010	NUT, SPEED CONTROL .....	2 .....	TIER I (ORANGE UNIT)
100%	1686692010	NUT, SPEED CONTROL .....	2 .....	TIER II AND TIER IV (WHITE UNIT)
110	1687857740	SHAFT, LEVER .....	1 .....	TIER I (ORANGE UNIT)
110%	1687857742	SHAFT, LEVER .....	1 .....	TIER II AND TIER IV (WHITE UNIT)
120	1685157720	LEVER, ENGINE STOP .....	1 .....	TIER I (ORANGE UNIT)
120%	1685157724	LEVER, ENGINE STOP .....	1 .....	TIER II AND TIER IV (WHITE UNIT)
130	0541100318	PIN, SPRING .....	1 .....	TIER I (ORANGE UNIT)
130%	0541100314	PIN, SPRING .....	1 .....	TIER II AND TIER IV (WHITE UNIT)
140%	0481410070	O-RING	1	
150%	1687857920	SPRING, RETURN	1	
160	1686657300	CAP .....	1 .....	TIER I (ORANGE UNIT)
160%	1686657302	CAP .....	1 .....	TIER II (WHITE UNIT)
170%	1756157013	COMP. PLATE, SPEED CO. ....	1 .....	TIER IV ONLY INCLUDES ITEMS W%
180%	1920291010	BOLT .....	2 .....	TIER IV ONLY
190%	1920291010	BOLT .....	3 .....	TIER IV ONLY
200%	0205650060	NUT .....	3 .....	TIER IV ONLY

## NOZZLE HOLDER AND GLOW PLUG ASSY.

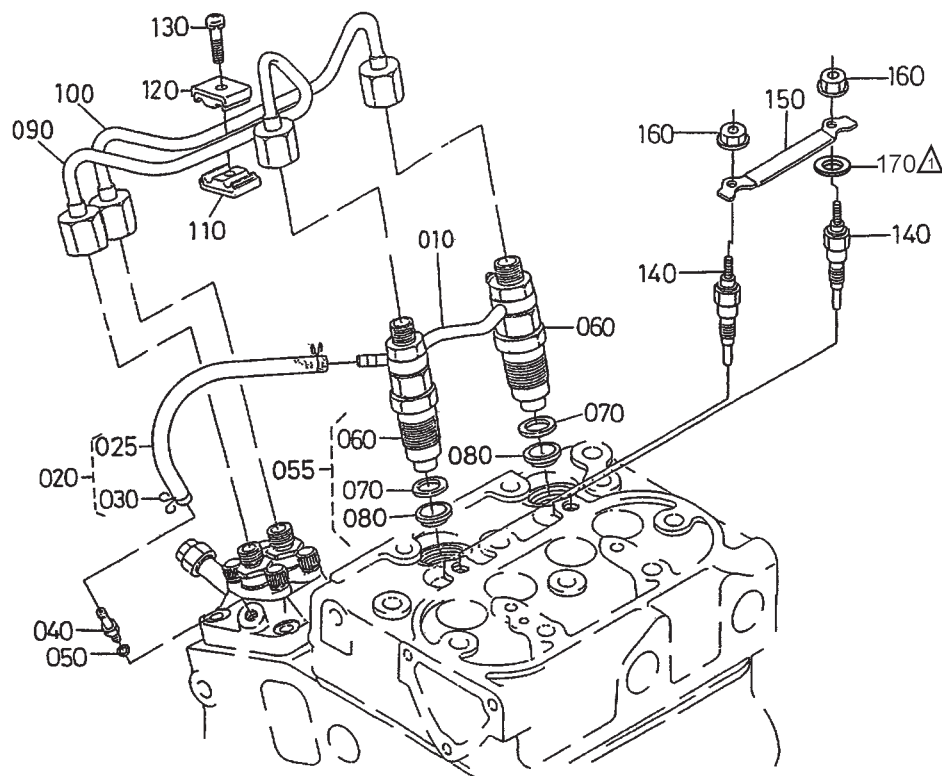

1

PAGE 120 —DA7000 SERIES A.C. GENERATORS— OPERATION AND PARTS MANUAL — REV. #4 (08/07/09)


# KUBOTA Z482-EB/E2B/E3B ENGINE— NOZZLE HOLDER AND GLOW

## NOZZLE HOLDER AND GLOW PLUG ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1585242502	PIPE ASSY., OVER FLOW	1	
020	1584142500	PIPE ASSY., OVER FLOW .....	1 .....	INCLUDES ITEMS W/#
025#	1584142520	PIPE, FUEL OVER FLOW	1	
030#	1497142750	CLIP, PIPE	2	
040	1584151360	SCREW, AIR BREATHER	1	
050	1560196650	GASKET	1	
055	1600153900	KIT, HOLDER NOZZLE	2	
060	1600153000	HOLDER ASSY., NOZZLE	2	
070	1584153622	GASKET	2	
075	1907753650	SEAL, HEAT	2	
090	1685153712	PIPE, INJECTION .....	1 .....	TIER I (ORANGE UNIT)
090	1685153713	PIPE, INJECTION .....	1 .....	TIER II (WHITE UNIT)
090	1G68653710	PIPE, INJECTION .....	1 .....	TIER IV (WHITE UNIT)
100	1685153722	PIPE, INJECTION .....	1 .....	TIER I (ORANGE UNIT)
100	1685153723	PIPE, INJECTION .....	1 .....	TIER II (WHITE UNIT)
100	1G68653720	PIPE, INJECTION .....	1 .....	TIER IV (WHITE UNIT)
110	1584153850	CLAMP, PIPE	1	
120	1584153860	CLAMP, PIPE	1	
130	0302450520	SCREW, WITH WASHER	1	
140	1685165510	GLOW PLUG .....	2 .....	TIER I (ORANGE UNIT)
140	1685165512	GLOW PLUG .....	2 .....	TIER II AND TIER IV (WHITE UNIT)
150	1685165560	CORD, GLOW PLUG	1	
160	0276150040	NUT, FLANGE	2	
170	0401360040	WASHER, FLAT .....	2 .....	TIER I (ORANGE UNIT)

## KUBOTA Z482-EB/E2B/E3B ENGINE— NOZZLE HOLDER ASSY.

NOZZLE HOLDER ASSY.

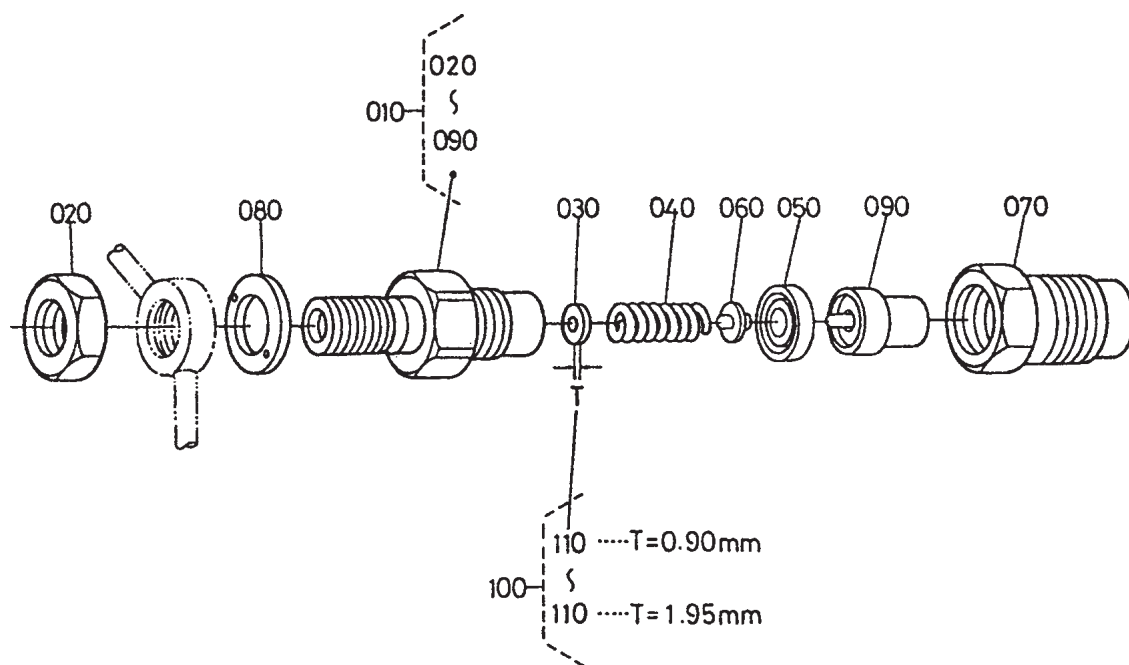


# KUBOTA Z482-EB/E2B/E3B ENGINE— NOZZLE HOLDER ASSY.

## NOZZLE HOLDER ASSY.

NO	PART NO	PART NAME	QTY.	REMARKS
10	1600153000	ASSY. HOLDER, NOZZLE .....	2 .....	INCLUDES ITEMS W/ %
20%	1584192030	NUT	2	
30%	1584153230	WASHER, ADJUSTING	2	
40%	1584153170	SPRING, NOZZLE	2	
50%	1584153350	PIECE, DISTANCE	2	
60%	1584153160	PUSH ROD	2	
70%	1647553280	NUT, NOZZLE	2	
80%	1584194040	WASHER	2	
90%	1685153610	PIECE NOZZLE	2	
100	1584198100	ASSY. WASHER, ADJUST .....	2 .....	INCLUDES ITEMS W/#OPTION
110#	1584153230	WASHER, ADJUSTING .....	2 .....	0.900MM
110#	1584198510	WASHER, ADJUSTING .....	2 .....	0.925MM
110#	1584198520	WASHER, ADJUSTING .....	2 .....	0.950MM
110#	1584198530	WASHER, ADJUSTING .....	2 .....	0.975MM
110#	1584198540	WASHER, ADJUSTING .....	2 .....	1.000MM
110#	1584198550	WASHER, ADJUSTING .....	2 .....	1.025MM
110#	1584198560	WASHER, ADJUSTING .....	2 .....	1.050MM
110#	1584198570	WASHER, ADJUSTING .....	2 .....	1.075MM
110#	1584198580	WASHER, ADJUSTING .....	2 .....	1.100MM
110#	1584198590	WASHER, ADJUSTING .....	2 .....	1.125MM
110#	1584198600	WASHER, ADJUSTING .....	2 .....	1.150MM
110#	1584198610	WASHER, ADJUSTING .....	2 .....	1.175MM
110#	1584198620	WASHER, ADJUSTING .....	2 .....	1.200MM
110#	1584198630	WASHER, ADJUSTING .....	2 .....	1.225MM
110#	1584198640	WASHER, ADJUSTING .....	2 .....	1.250MM
110#	1584198650	WASHER, ADJUSTING .....	2 .....	1.275MM
110#	1584198660	WASHER, ADJUSTING .....	2 .....	1.300MM
110#	1584198670	WASHER, ADJUSTING .....	2 .....	1.325MM
110#	1584198680	WASHER, ADJUSTING .....	2 .....	1.350MM
110#	1584198690	WASHER, ADJUSTING .....	2 .....	1.375MM
110#	1584198700	WASHER, ADJUSTING .....	2 .....	1.400MM
110#	1584198710	WASHER, ADJUSTING .....	2 .....	1.425MM
110#	1584198720	WASHER, ADJUSTING .....	2 .....	1.450MM
110#	1584198730	WASHER, ADJUSTING .....	2 .....	1.475MM
110#	1584198740	WASHER, ADJUSTING .....	2 .....	1.500MM
110#	1584198750	WASHER, ADJUSTING .....	2 .....	1.525MM
110#	1584198760	WASHER, ADJUSTING .....	2 .....	1.550MM
110#	1584198770	WASHER, ADJUSTING .....	2 .....	1.575MM
110#	1584198780	WASHER, ADJUSTING .....	2 .....	1.600MM
110#	1584198790	WASHER, ADJUSTING .....	2 .....	1.625MM
110#	1584198800	WASHER, ADJUSTING .....	2 .....	1.650MM
110#	1584198810	WASHER, ADJUSTING .....	2 .....	1.675MM
110#	1584198820	WASHER, ADJUSTING .....	2 .....	1.700MM
110#	1584198830	WASHER, ADJUSTING .....	2 .....	1.725MM
110#	1584198840	WASHER, ADJUSTING .....	2 .....	1.750MM
110#	1584198850	WASHER, ADJUSTING .....	2 .....	1.775MM
110#	1584198860	WASHER, ADJUSTING .....	2 .....	1.800MM
110#	1584198870	WASHER, ADJUSTING .....	2 .....	1.825MM
110#	1584198880	WASHER, ADJUSTING .....	2 .....	1.850MM
110#	1584198890	WASHER, ADJUSTING .....	2 .....	1.875MM
110#	1584198900	WASHER, ADJUSTING .....	2 .....	1.900MM
110#	1584198910	WASHER, ADJUSTING .....	2 .....	1.925MM
110#	1584198920	WASHER, ADJUSTING .....	2 .....	1.950MM

## KUBOTA Z482-EB/E2B/E3B ENGINE—FORK LEVER ASSY.

### FORK LEVER ASSY

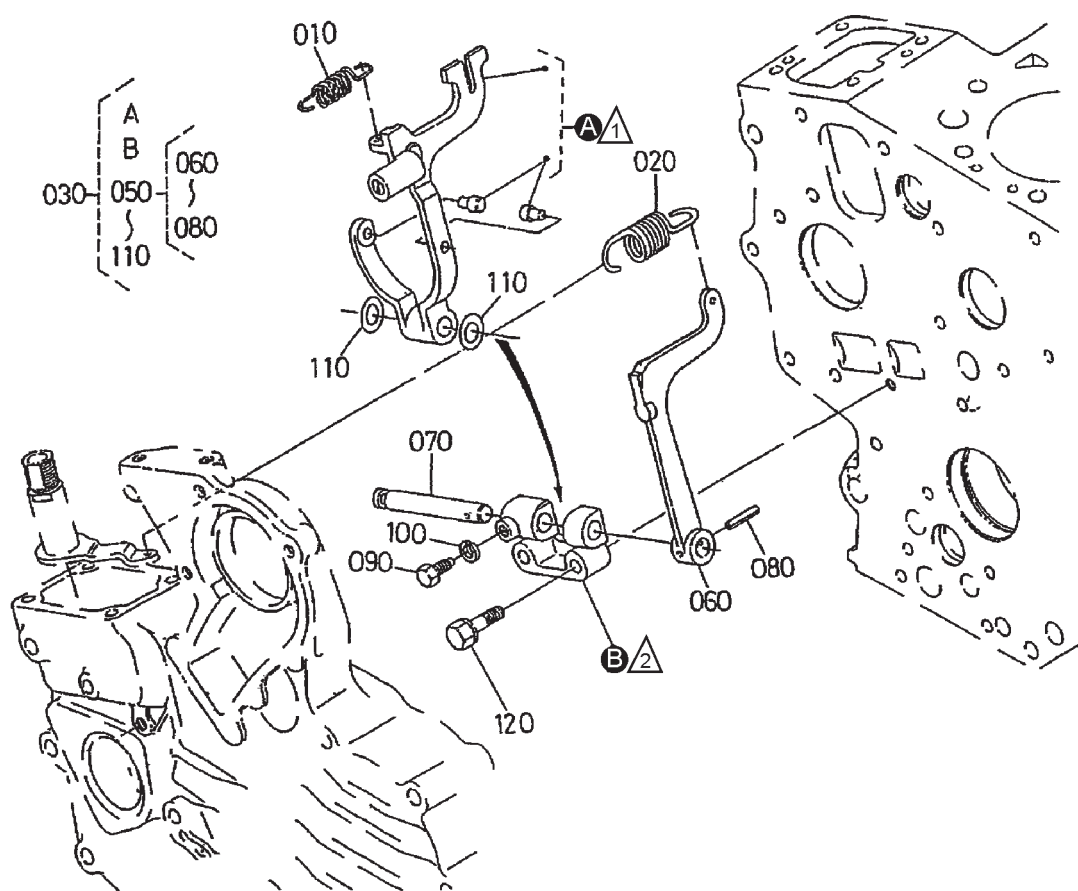

#### NOTES

- △1 FORK LEVER ITEM A NOT SOLD SEPARATELY.
- △2 HOLDER, FORK LEVER ITEM B NOT SOLD SEPARATELY.

# KUBOTA Z482-EB/E2B/E3B ENGINE— FORK LEVER ASSY.


## FORK LEVER ASSY

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1685156480	SPRING, START	1	
020	1946156410	SPRING, GOVERNOR	1	
030	1754856054	LEVER, FORK ASSY. ....	1	INCLUDES ITEMS/#
A#		LEVER, FORK COMP .....	1	NOT SOLD SEPARATELY
B#		HOLDER, FORK LEVER .....	1	NOT SOLD SEPARATELY
050#	1584156060	LEVER, FORK ASSY. ....	1	INCLUDES ITEMS W/%
060#	1584156130	LEVER, FORK	1	
070#	1584156150	SHAFT, FORK LEVER	1	
080#	0541100318	PIN, SPRING	1	
090#	1526166410	BOLT	1	
100#	0451260050	WASHER, SPRING	1	
110#	1666255620	WASHER, FLAT .....	2	TIER II (WHITE UNITS)
120	0102350635	BOLT	2	



# KUBOTA Z482-EB/E2B/E3B ENGINE— FUEL FILTER ASSY.

## FUEL FILTER ASSY.

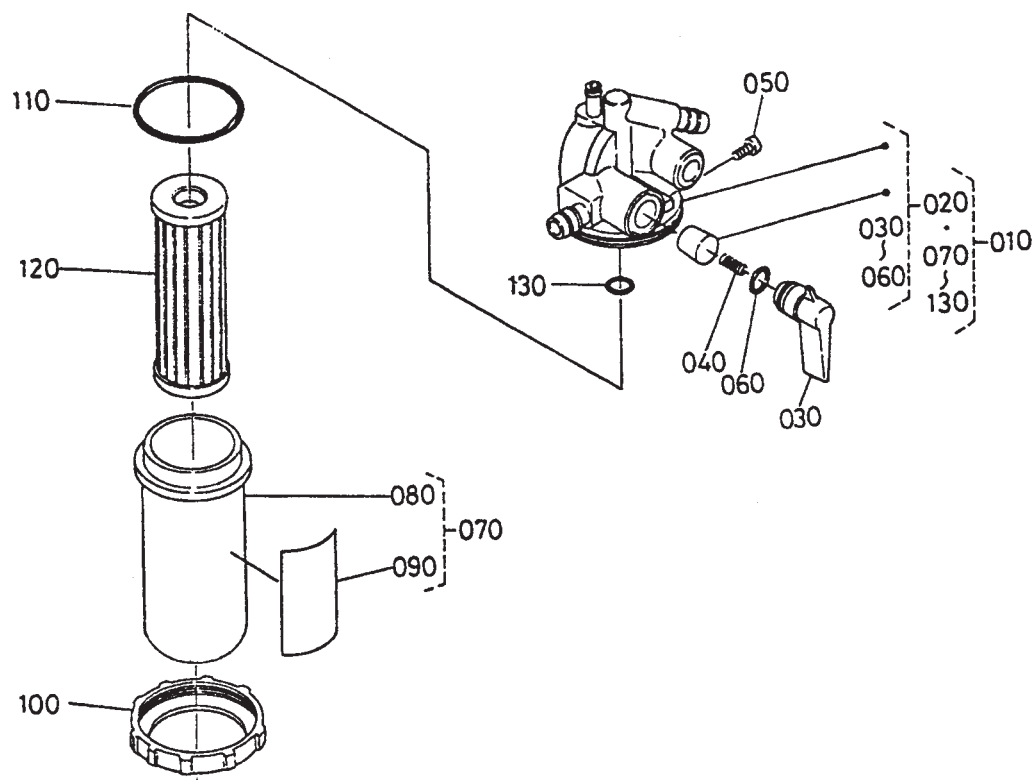


# KUBOTA Z482-EB/E2B/E3B ENGINE— FUEL FILTER ASSY.

## FUEL FILTER ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1553143010	FILTER, FUEL ASSY. ....	1	INCLUDES ITEMS W/* REPLACES 1553143012
020*	1553143110	COMP. BODY, COCK .....	1	INCLUDES ITEMS W/# TIER I AND TIER II
030*#	1430143522	LEVER, COCK	1	
040*#	1430143820	SPRING, VALVE	1	
050*#	1430143830	SCREW, SET	1	
060*#	1430143840	O-RING, LEVER	1	
070*	1539343100	CUP ASSY., FILTER .....	1	INCLUDES ITEMS W/%
080*%	1539343580	CUP, FILTER	1	
090*%	1687388430	LABEL, FUEL	1	
100*	1430143590	RING, RETAINING	1	
110*	1430143650	O-RING, FILTER CUP	1	
110*	0481600390	O-RING, FILTER CUP .....	1	TIER IV ONLY
120*	1523143560	ELEMENT, FUEL FILTER .....	1	REPLACES 1523143563
120*	1T02143560	ELEMENT, FUEL FILTER .....	1	TIER IV ONLY
130*	1430143570	O-RING, FILTER	1	

## KUBOTA Z482-EB/E2B ENGINE—FUEL PUMP ASSY.

FUEL PUMP ASSY.

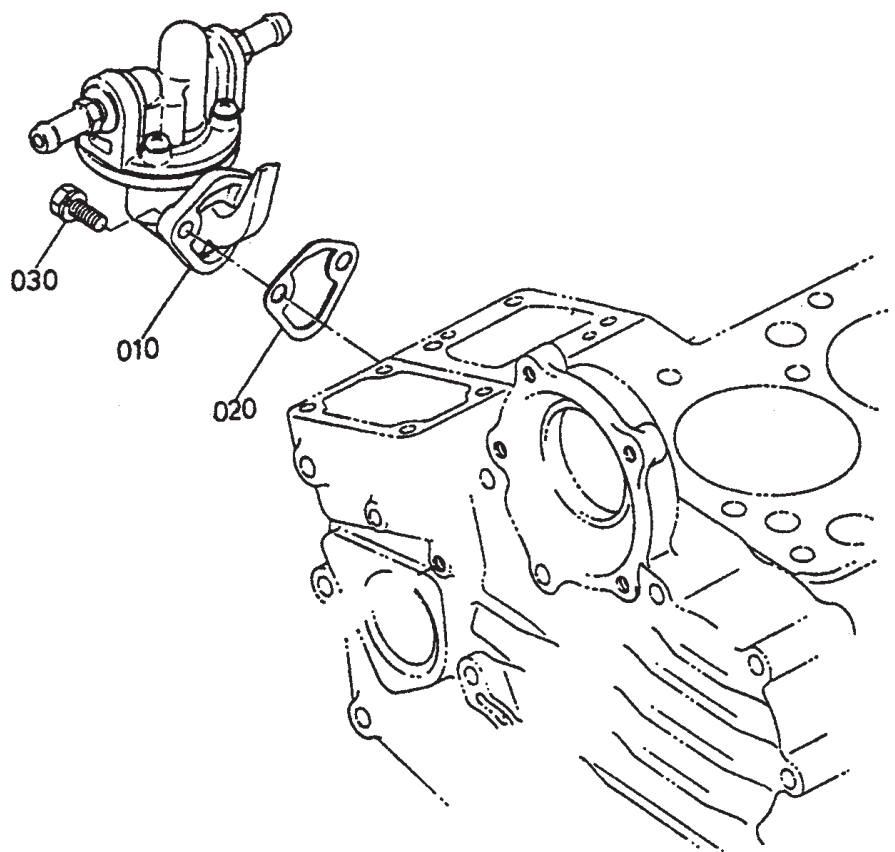


## KUBOTA Z482-EB/E2B/E3B ENGINE— FUEL PUMP ASSY.

FUEL PUMP ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1582152030	FUEL PUMP ASSY.	1	
020	1626452140	GASKET, FUEL PUMP	1	
030	0102350616	BOLT	2	

# KUBOTA Z482-EB/E2B/E3B ENGINE— DYNAMO AND PULLEY ASSY.

## DYNAMO AND PULLEY ASSY.

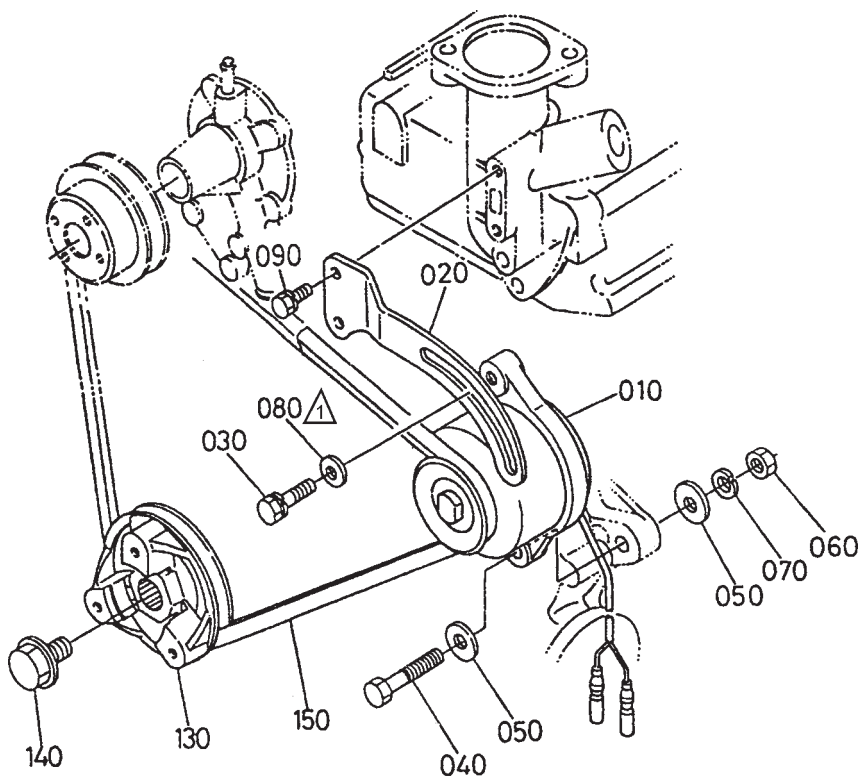

### NOTES

- 1 ITEM 080, FLAT WASHER IS USED ON DA-7000SS ORANGE UNITS ONLY.


# KUBOTA Z482-EB/E2B/E3B ENGINE— DYNAMO AND PULLEY ASSY.

## DYNAMO AND PULLEY ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1753164010	DYNAMO ASSY. ....	1 .....	TIER I (ORANGE UNITS)
010	1753164012	DYNAMO ASSY. ....	1 .....	TIER II AND TIER IV (WHITE UNITS)
020	1259964420	STAY, DYNAMO	1	
030	0112350830	BOLT .....	1 .....	TIER I (ORANGE UNITS)
030	1687191030	BOLT .....	1 .....	TIER II AND TIER IV (WHITE UNITS)
040	0115350855	BOLT	1	
050	0401360080	WASHER, FLAT	2	
060	0211450080	NUT	1	
070	0451260080	WASHER, LOCK	1	
080	0401560080	WASHER, FLAT .....	1 .....	TIER I (ORANGE UNITS)
090	0102350616	BOLT	2	
130	1685174280	PULLEY, FAN DRIVE	1	
140	1588191030	BOLT	1	
150	1980572530	BELT, FAN (34.5 IN)	1	

## KUBOTA Z482-EB/E2B/E3B ENGINE — DYNAMO ASSY.

DYNAMO ASSY.

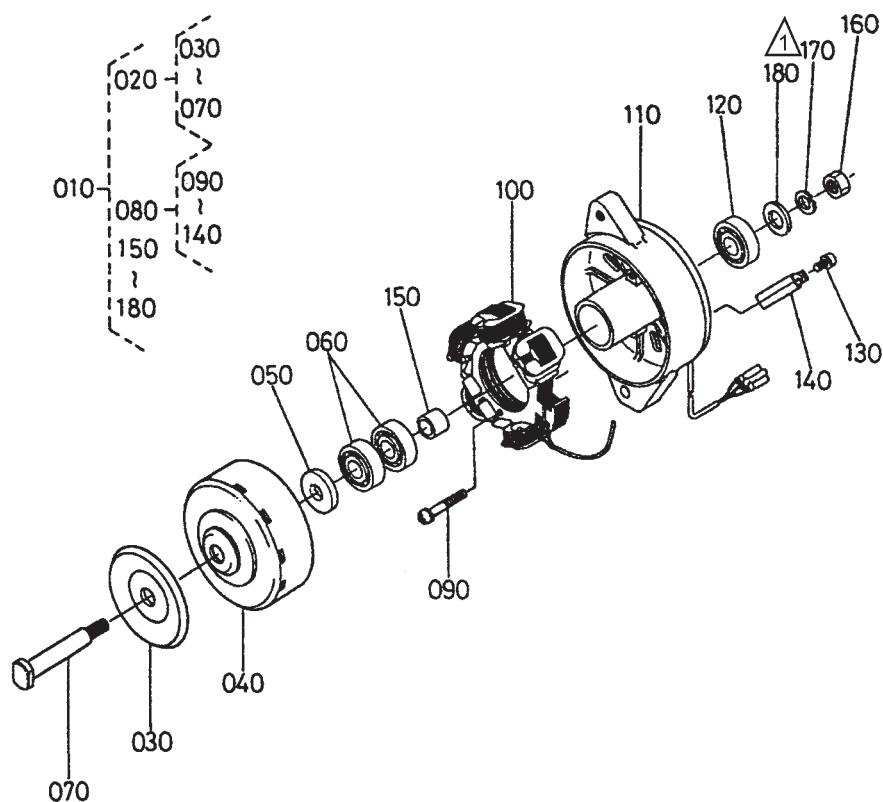

### NOTES

- △ 1 ITEMS 170 AND 180, LOCK WASHER AND FLAT WASHER ARE USED ON DA-7000SS ORANGE UNITS ONLY.

# KUBOTA Z482-EB/E2B/E3B ENGINE — DYNAMO ASSY.


## DYNAMO ASSY.

<b>NO</b>	<b>PART NO</b>	<b>PART NAME</b>	<b>QTY.</b>	<b>REMARKS</b>
010	1753164010	DYNAMO ASSY. ....	1	INCLUDES ITEMS W/% TIER I (ORANGE UNITS)
010	1753164012	DYNAMO ASSY. ....	1	INCLUDES ITEMS W/# TIER II/IV (WHITE UNITS)
020	1553164122	COMP. FLYWHEEL .....	1	INCLUDES ITEMS W/+ TIER I (ORANGE UNITS)
020	1553264120	COMP. FLYWHEEL .....	1	INCLUDES ITEMS W/* TIER II/IV (WHITE UNITS)
030%#++*	1553164110	PULLEY	1	
040%+	1553164040	FLYWHEEL .....	1	TIER I (ORANGE UNITS)
040#*	1553264040	FLYWHEEL .....	1	TIER II AND TIER IV (WHITE UNITS)
050%+	6C04082860	COLLAR .....	1	TIER I (ORANGE UNITS)
050#++*	1553164140	COLLAR .....	1	TIER II AND TIER IV (WHITE UNITS)
060%#++*	1553174180	BEARING, BALL	2	
070%+	1553174140	SHAFT, FAN .....	1	TIER I (ORANGE UNITS)
070#*	1553274140	SHAFT, FAN .....	1	TIER II AND TIER IV (WHITE UNITS)
080%	1553164363	COMP. STATOR .....	1	INCLUDES ITEMS W/> TIER I (ORANGE UNITS)
080#	1553264360	COMP. STATOR .....	1	INCLUDES ITEMS W/\$ TIER II/IV (WHITE UNITS)
090%#>\$	1526193010	SCREW, ROUND HD.	2	
100%#>\$	1553164292	STATOR	1	
110%>	1553164072	PLATE .....	1	TIER I (ORANGE UNITS)
110#\$	1553264070	PLATE .....	1	TIER II AND TIER IV (WHITE UNITS)
120%#>\$	1553174180	BEARING, BALL	1	
130%#>\$	1553193010	SCREW, ROUND HD.	1	
140%#>\$	1553164190	CLAMP, CORD	1	
150%#	1526164150	COLLAR	1	
160%	1526192030	NUT .....	1	TIER I AND TIER IV (ORANGE/WHITE UNITS)
160#	0277160100	NUT, FLANGE .....	1	TIER II (WHITE UNITS)
170%	1526194070	WASHER, LOCK .....	1	TIER I AND TIER IV (ORANGE/WHITE UNITS)
180%	1526194020	WASHER, FLAT .....	1	TIER I AND TIER IV (ORANGE/WHITE UNITS)



## KUBOTA Z482-EB/E2B/E3B ENGINE—STARTER ASSY.

STARTER ASSY.

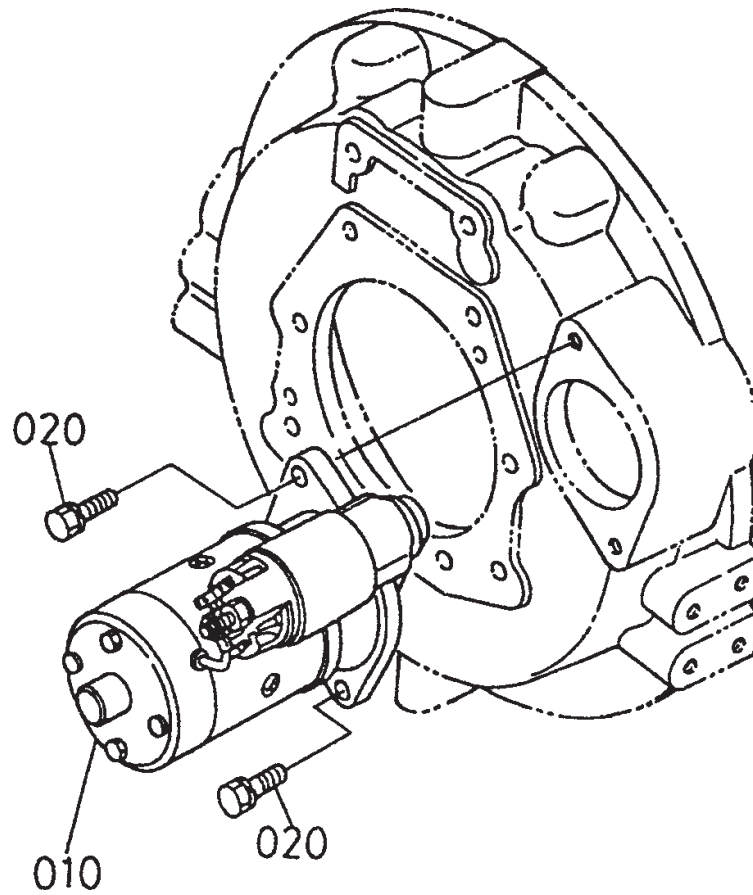


## KUBOTA Z482-EB/E2B/E3B ENGINE— STARTER ASSY.

STARTER ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1983763010	STARTER ASSY. 12V, 0.8KW	1	
020	0112350825	BOLT	2	

## KUBOTA Z482-EB/E2B/E3B ENGINE— STARTER COMPONENTS ASSY.

STARTER COMPONENTS ASSY.

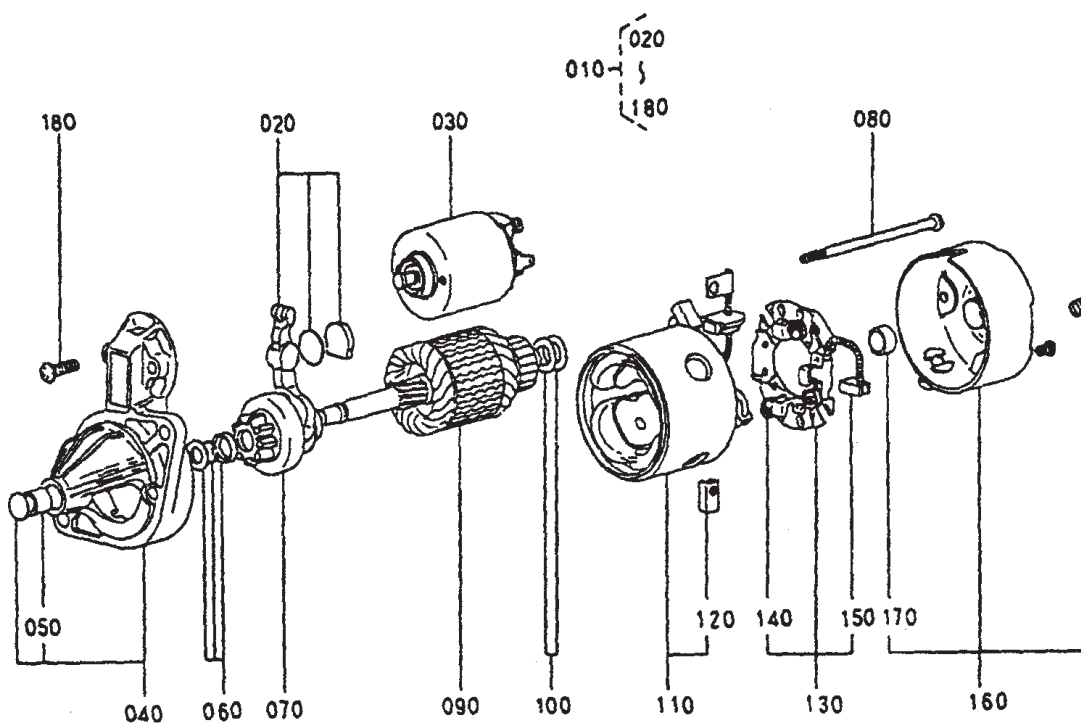


# KUBOTA Z482-EB/E2B/E3B ENGINE— STARTER COMPONENTS ASSY.

## STARTER COMPONENTS ASSY.


<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1983763010	STARTER ASSY. ....	1	INCLUDES ITEMS W/*
020*	1983763050	LEVER, DRIVE	1	
030*	1585263020	SWITCH, MAGNETIC	1	
040*	1983763030	FRAME, DRIVE END .....	1	INCLUDES ITEMS W/#
050*#	1585263240	BUSH	1	
060*	1983763150	STOPPER	1	
070*	1983763040	CLUTCH, OVER RUNNING	1	
080*	1983763320	BOLT	2	
090*	1983763070	ARMATURE	1	
100*	1585263410	WASHER, ADJUSTING	1	
110*	1983763080	YOKE ASSY. ....	1	INCLUDES ITEMS W/%
120*%	1585263360	BRUSH	2	
130*	1585263380	HOLDER, BRUSH ASSY. ....	1	INCLUDES ITEMS W/+
140*+	1585263390	SPRING, BRUSH	3	
150*+	1585263370	BRUSH	1	
160*	1983763200	FRAME, END .....	1	INCLUDES ITEM W/\$
170*\$	1585263250	BUSH	1	
180*	1585293310	SCREW, PAN-HEAD	1	

## KUBOTA Z 482-EB ENGINE — OIL SWITCH ASSY.

OIL SWITCH ASSY.

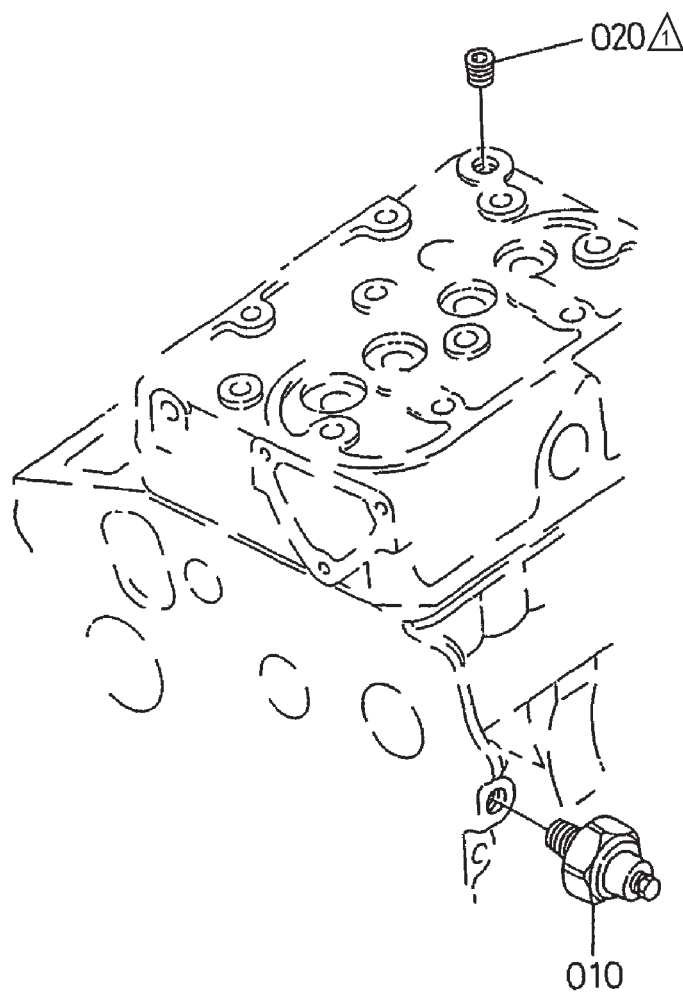

### NOTES

 ITEM 020, PLUG IS USED ON  
DA-7000SS/SW WHITE UNITS ONLY.


## KUBOTA Z 482-EB ENGINE — OIL SWITCH ASSY.

OIL SWITCH ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1584139010	SWITCH, OIL .....	1 .....	TIER I (ORANGE UNITS)
010	1584139013	SWITCH, OIL .....	1 .....	TIER II AND TIER IV (WHITE UNITS)
020	1584196020	PLUG .....	1 .....	TIER II AND TIER IV (WHITE UNITS)

## BOTA Z482-EB/E2B/E3B ENGINE— WATER FLANGE & THERMOSTAT ASSY.

WATER FLANGE AND THERMOSTAT ASSY.

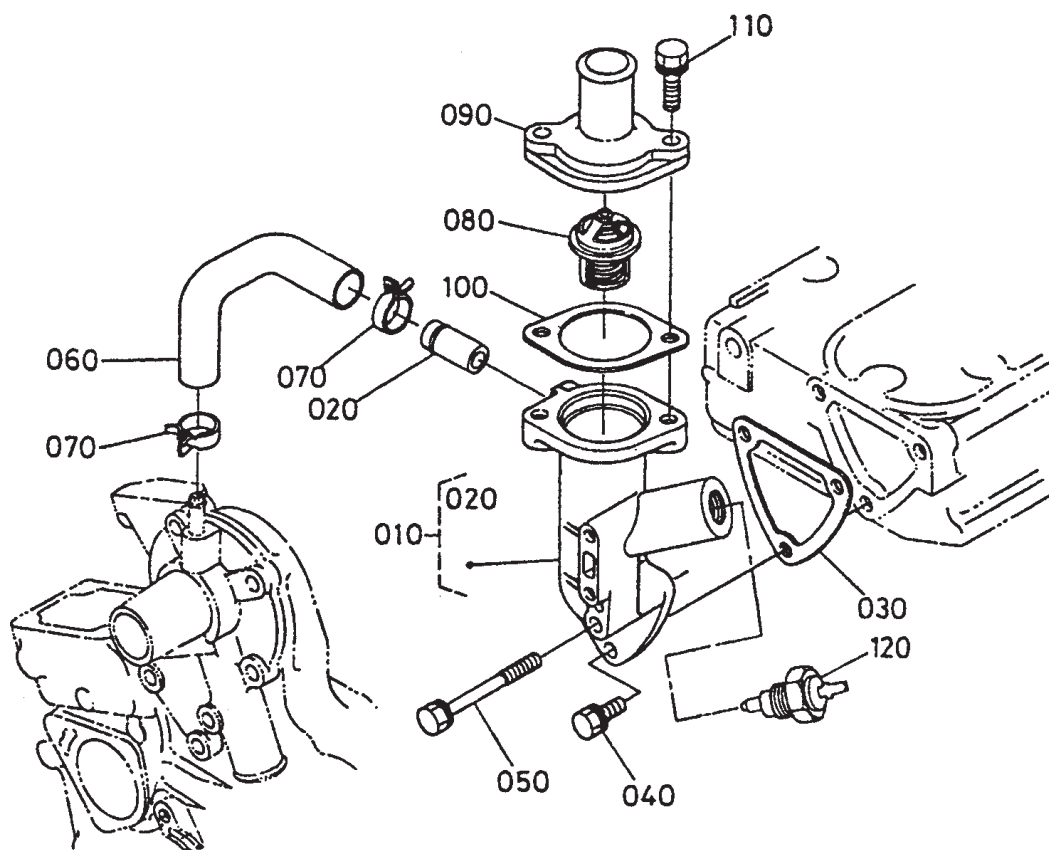

# KUBOTA Z482-EB/E2B/E3B ENGINE— WATER FLANGE & THERMOSTAT


WATER FLANGE AND THERMOSTAT ASSY.

<b>NO</b>	<b>PART NO</b>	<b>PART NAME</b>	<b>QTY.</b>	<b>REMARKS</b>
010	1687572700	COMP. FLANGE, WATER .....	1 .....	INCLUDES ITEMS W/* TIER I (ORANGE UNITS)
010	1687572704	COMP. FLANGE, WATER .....	1 .....	INCLUDES ITEMS W/# TIER II (WHITE UNITS)
020*#	1624173370	PIPE, WATER RETURN .....	1 .....	
030	1584172922	GASKET, WATER FLANGE .....	1 .....	TIER I (ORANGE UNITS)
030	1584172923	GASKET, WATER FLANGE .....	1 .....	TIER II AND TIER IV (WHITE UNITS)
040	0102350616	BOLT	2	
050	0102360650	BOLT	4	
060	1685173350	PIPE, WATER RETURN	1	
070	1624173360	BAND, PIPE	2	
080	1553173010	THERMOSTAT ASSY.	1	
090	1584173260	COVER, THERMOSTAT	1	
100	1685173270	GASKET, THERMOSTAT	1	
110	0102350622	BOLT	2	
120	1554383040	SWITCH, THERMOMETER .....	1 .....	TIER I (ORANGE UNITS)
120	1753883040	SWITCH, THERMOMETER .....	1 .....	TIER II AND TIER IV (WHITE UNITS)



## KUBOTA Z482-EB/E2B/E3B ENGINE—WATER PUMP ASSY.

WATER PUMP ASSY.

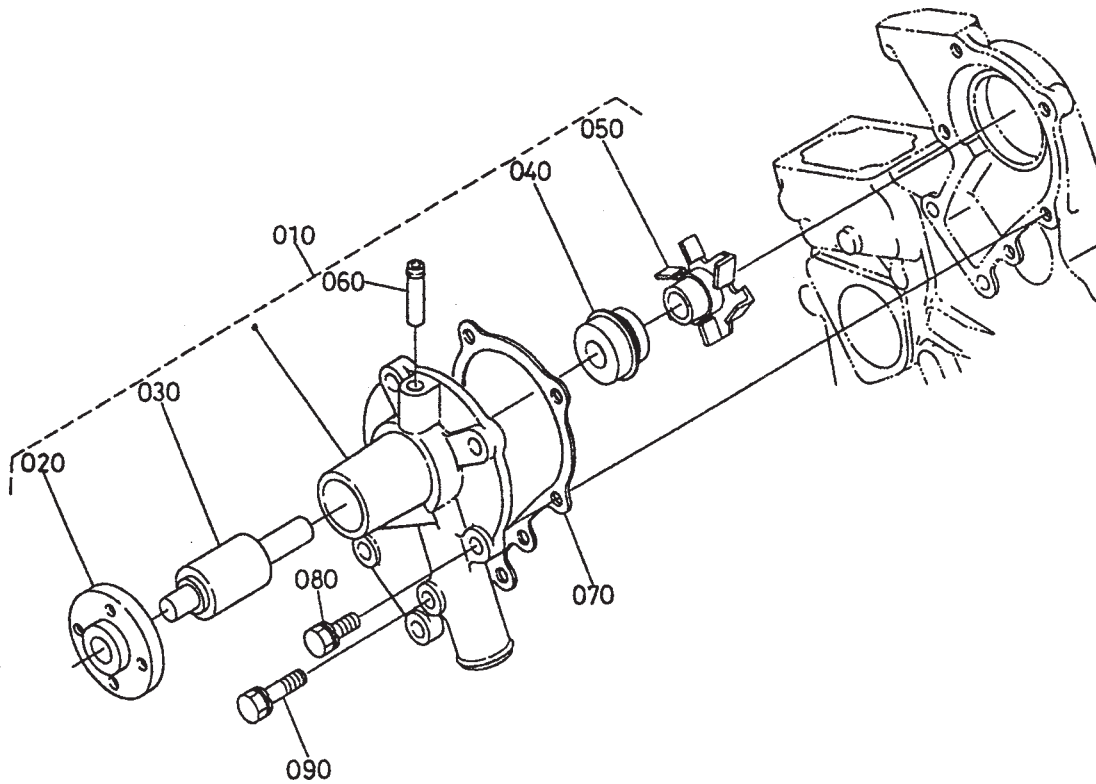


# KUBOTA Z482-EB/E2B/E3B ENGINE—WATER PUMP ASSY.

## WATER PUMP ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1988373030	WATER PUMP ASSY. ....	1	INCLUDES ITEMS W/*
020*	1585273520	FLANGE, WATER PUMP	1	
030*	1585273550	BEARING	1	
040*	1548173050	SEAL ASSY., MECHANICAL	1	
050*	1988373510	IMPELLER, WATER PUMP .....	1	TIER I AND TIER II ONLY
060*	1585273340	PIPE, WATER RETURN	1	
070	1588173432	GASKET, WATER PUMP NA	1	
070	1687173430	GASKET, WATER PUMP NA .....	1	TIER IV ONLY
080	0102350622	BOLT	4	
090	0102350638	BOLT	1	

## KUBOTA Z482-EB/E2B/E3B ENGINE—WATER PIPE ASSY.

WATER PIPE ASSY.

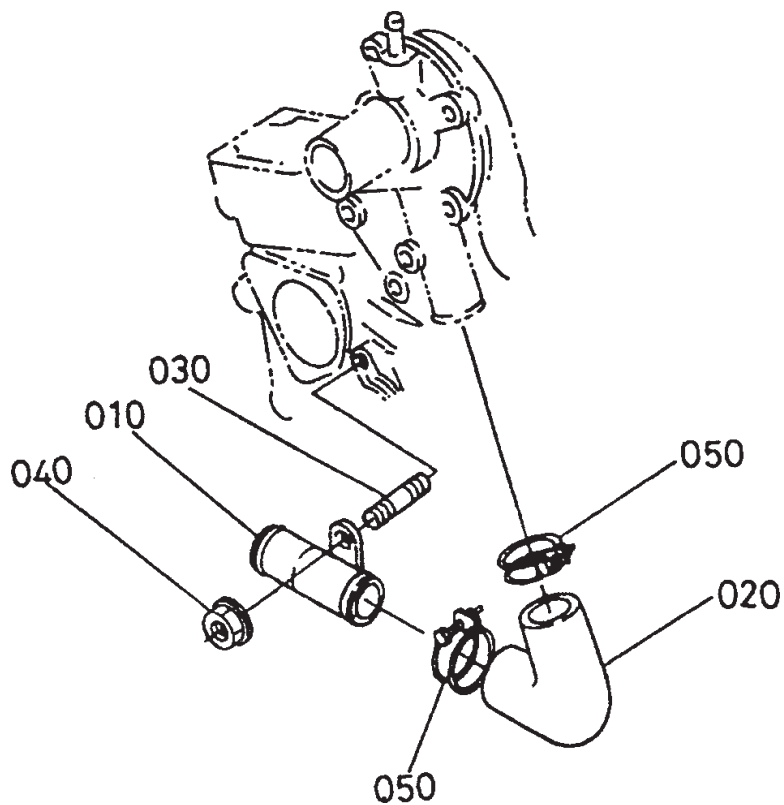


## KUBOTA Z482-EB/E2B/E3B ENGINE— WATER PIPE ASSY.

WATER PIPE ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1584172860	PIPE, WATER	1	
020	1588172870	PIPE, WATER	1	
030	1584191510	STUD	1	
040	0275150060	NUT, FLANGE	1	
050	0931889030	CLAMP, HOSE .....	2 .....	TIER I (ORANGE UNITS)
050	1584172960	BAND, PIPE .....	2 .....	TIER II AND TIER IV (WHITE UNITS)

## KUBOTA Z482-EB/E2B/E3B ENGINE— FAN ASSY.

FAN ASSY.

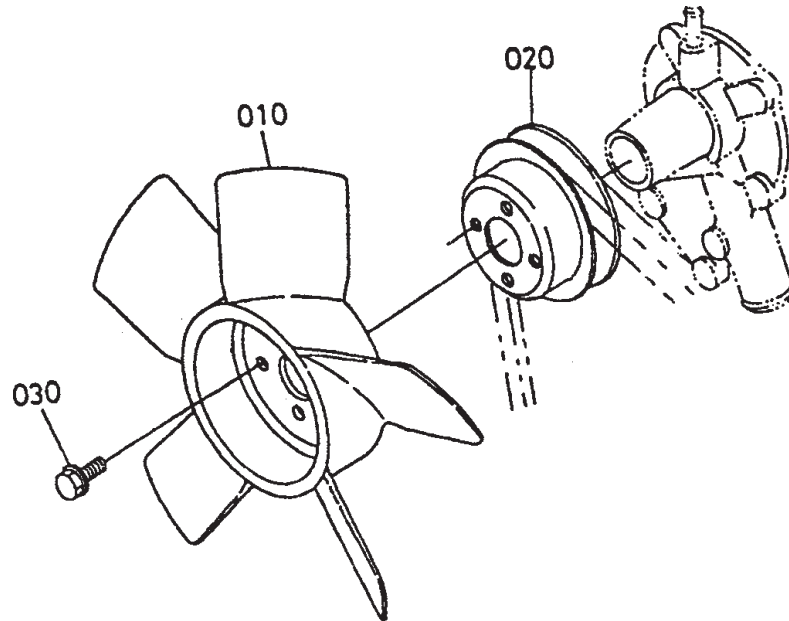


## KUBOTA Z482-EB/E2B/E3B ENGINE— FAN ASSY.

FAN ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1586774112	FAN	1	
020	1584174250	PULLEY, FAN	1	
030	0175450610	BOLT, FLANGE	4	

# KUBOTA Z482-EB/E2B/E3B ENGINE—VALVE AND ROCKER ARM ASSY.

## VALVE AND ROCKER ARM ASSY.

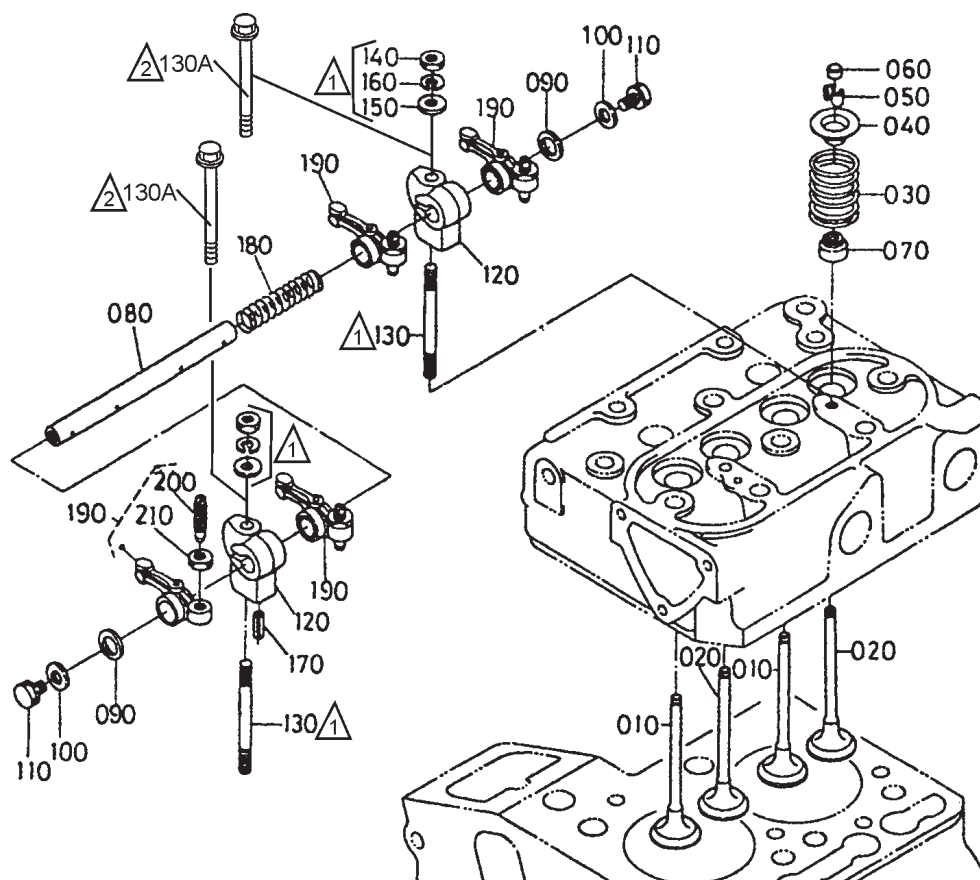

### NOTES

**1** ITEMS 130, 140 160 AND 150, (STUD, NUT, FLAT WASHER AND LOCK WASHER ARE USED ON DA-7000SS ORANGE UNITS ONLY.

**2** ITEM 130A IS USED ON DA-7000SS/SW WHITE UNITS ONLY.

# KUBOTA Z482-EB/E2B/E3B ENGINE— VALVE AND ROCKER ARM ASSY.



## VALVE AND ROCKER ARM ASSY.

<b>NO</b>	<b>PART NO</b>	<b>PART NAME</b>	<b>QTY.</b>	<b>REMARKS</b>
010	1460113110	VALVE, INLET	2	
020	1460113120	VALVE, EXHAUST	2	
030	1460113240	SPRING, VALVE	4	
040	1460113330	RETAINER, SPRING	4	
050	1460113360	COLLET, VALVE SPRING SET	4	
060	1685113280	CAP, VALVE	4	
070	1584113150	SEAL, VALVE STEM	4	
080	1584114263	SHAFT, ROCKER ARM .....	1 .....	TIER I AND TIER II
080	1584114264	SHAFT, ROCKER ARM .....	1 .....	TIER IV ONLY
090	1687114430	WASHER	2	
100	1584194022	WASHER, PLAIN	2	
110	0102350610	BOLT	2	
120	1584114350	BRACKET, ROCKER ARM .....	2 .....	TIER I (ORANGE UNITS)
120	1G95814350	BRACKET, ROCKER ARM .....	2 .....	TIER II AND TIER IV (WHITE UNITS)
130	1460114410	STUD .....	2 .....	TIER I (ORANGE UNITS)
130A	0175450640	BOLT FLANGE .....	2 .....	TIER II TIER IV (WHITE UNITS)
140	0205650060	NUT .....	2 .....	TIER I (ORANGE UNITS)
150	0401250060	WASHER, PLAIN	2	TIER I (ORANGE UNITS)
160	0451260060	WASHER, SPRING	2	TIER I (ORANGE UNITS)
170	0541100420	PIN, SPRING	1	
180	1460114310	SPRING, ROCKER ARM	1	
180	1460114312	SPRING, ROCKER ARM .....	1 .....	TIER IV ONLY
190	1584114030	ROCKER ARM ASSY. ....	4 .....	INCLUDES ITEMS W/#
200#	1584114230	SCREW, ADJUSTING	4	
210#	1460114240	NUT	4	



# KUBOTA Z482-EB/E2B/E3B ENGINE— INLET MANIFOLD ASSY.

## INLET MANIFOLD ASSY.

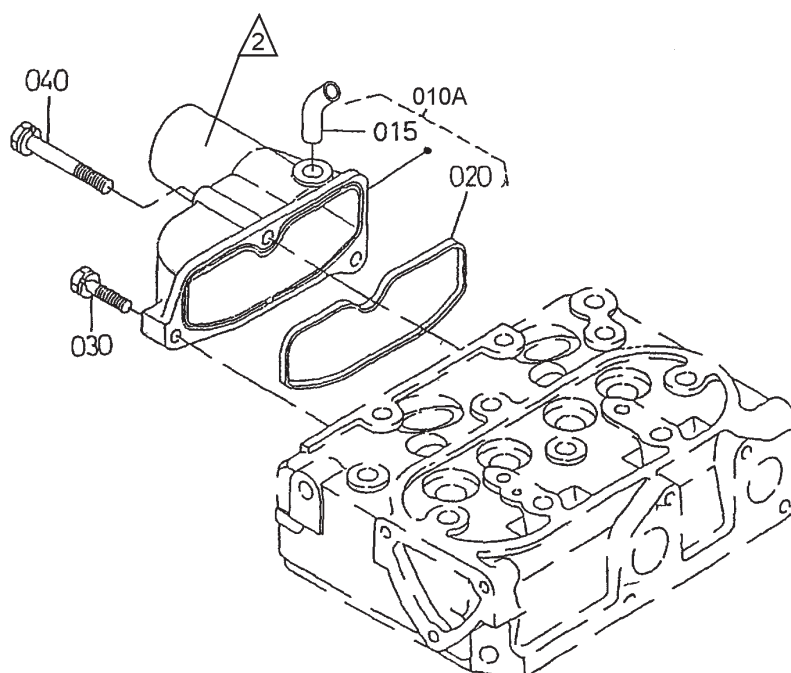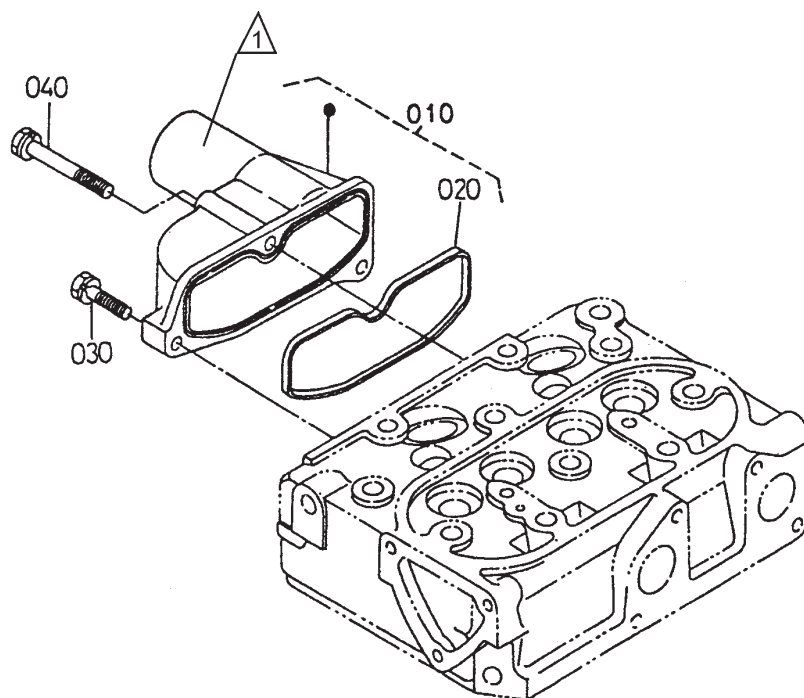

### NOTES

**1** ITEM 010 IS USED ON DA-7000SS ORANGE UNITS ONLY.

**2** ITEM 010A IS USED ON DA-7000SS/SSW WHITE UNITS ONLY.


## KUBOTA Z482-EB/E2B/E3B ENGINE— INLET MANIFOLD ASSY.

INLET MANIFOLD ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1584111770	MANIFOLD, INLET ASSY. ....	1 .....	INCLUDES ITEMS W/* TIER I (ORANGE UNITS)
010A	1G95711771	MANIFOLD, INLET ASSY. ....	1 .....	INCLUDES ITEMS W/# TIER II/IV (WHITE UNITS)
015#	1G96005550	PIPE BREATHER.....	1 .....	TIER II AND TIER IV (WHITE UNITS)
020*#	1584111820	GASKET, IN-MANIFOLD	1	
030	0102350618	BOLT	2	
040	0102350645	BOLT	1	

## KUBOTA Z482-EB/E2B/E3B ENGINE— EXHAUST MANIFOLD ASSY.

EXHAUST MANIFOLD ASSY.

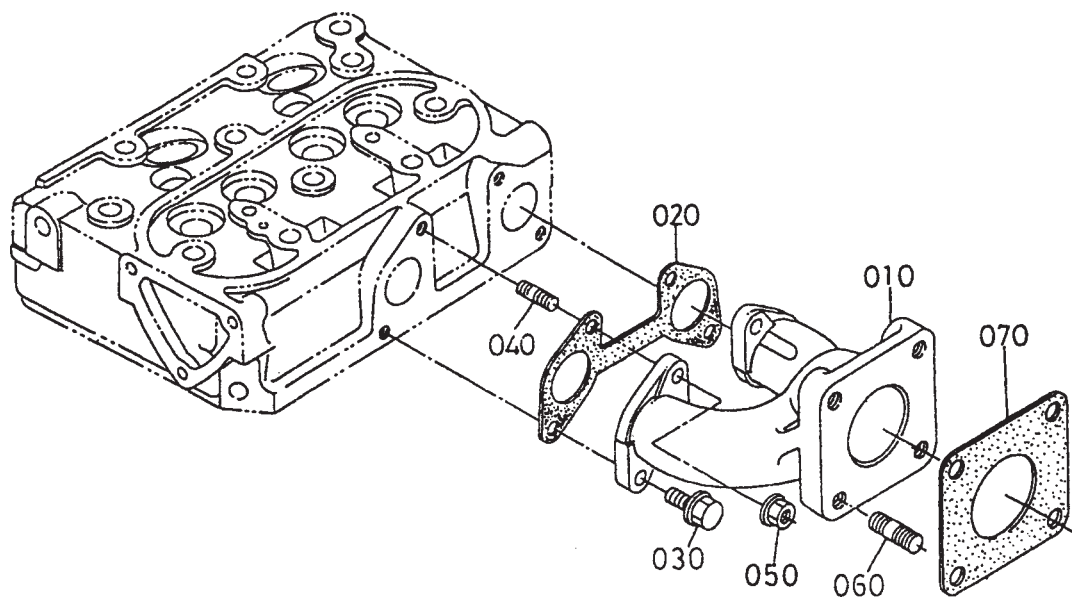


## KUBOTA Z482-EB/E2B/E3B ENGINE— EXHAUST MANIFOLD ASSY.

EXHAUST MANIFOLD ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1584112313	MANIFOLD, EXHAUST	1	
020	1584112360	GASKET	1	
030	0175950616	BOLT, UBS	2	
040	0151350618	STUD	2	
050	0275650060	NUT, UBS	2	
060	0151350822	STUD	4	
070	1526312370	GASKET, MUFFLER	1	

## KUBOTA Z482-EB/E2B/E3B ENGINE— GLOW PLUG/LAMP & TIMER ASSY.

GLOW PLUG/LAMP AND TIMER ASSY.

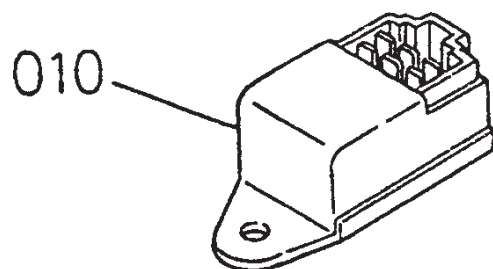


## KUBOTA Z482-EB/E2B/E3B ENGINE— GLOW PLUG/LAMP & TIMER ASSY.

GLOW PLUG/LAMP AND TIMER ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1569465990	TIMER, GLOW LAMP	1	

## KUBOTA Z482-EB/E2B/E3B ENGINE— STARTER SWITCH ASSY.

STARTER SWITCH ASSY.

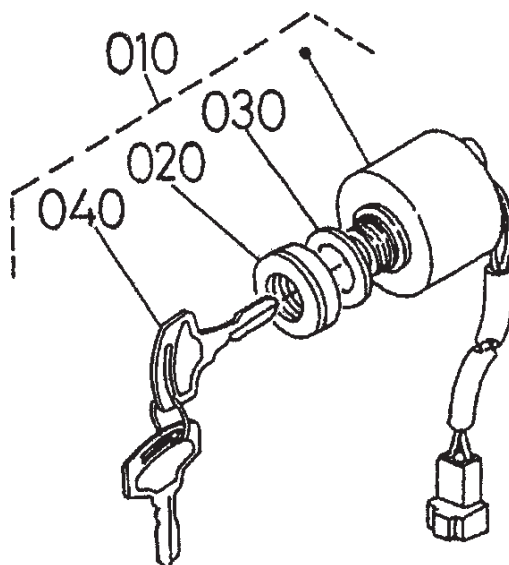

## KUBOTA Z482-EB/E2B/E3B ENGINE— STARTER SWITCH ASSY.


### STARTER SWITCH ASSY.

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	3741059110	STARTER SWITCH ASSY. ....	1	INCLUDES ITEMS W/%
020%	3741055180	CAP, STARTER SWITCH	1	
030%	6641655170	WASHER	1	
040%	3741055150	KEY, STARTER	1	



# KUBOTA Z482-EB/E2B/E3B ENGINE— AIR CLEANER ASSY.

AIR CLEANER ASSY. (DA7000SSW/DA7000SSA WHITE ONLY— TIER II AND TIER IV)

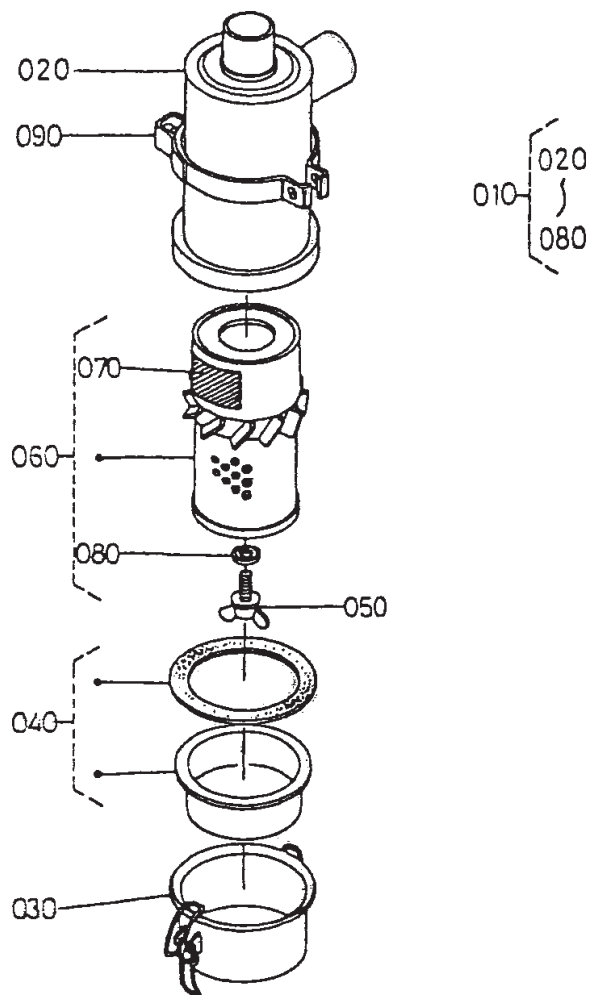


## KUBOTA Z482-EB/E2B/E3B ENGINE— AIR CLEANER ASSY.

AIR CLEANER ASSY. (DA7000SSW/DA7000SSA WHITE ONLY— TIER II AND TIER IV)

<b><u>NO</u></b>	<b><u>PART NO</u></b>	<b><u>PART NAME</u></b>	<b><u>QTY.</u></b>	<b><u>REMARKS</u></b>
010	1556211010	AIR CLEANER ASSY. ....	1	INCLUDES ITEMS W/*
020*	1554511150	BODY, AIR CLEANER	1	
030*	1558911160	COVER, AIR CLEANER	1	
040*	1522111410	COVER, BAFFLE	1	
050*	1522192620	BOLT, WING	1	
060*	1556211080	ELEMENT, AIR CLEANER ASSY. ....	1	INCLUDES ITEMS W/#
070*#	1522787480	LABEL, ELEMENT A/C	1	
080*#	1522194430	WASHER, WITH RUBBER	1	
090	3415013960	BAND, AIR CLEANER	1	

## ACCESORIES

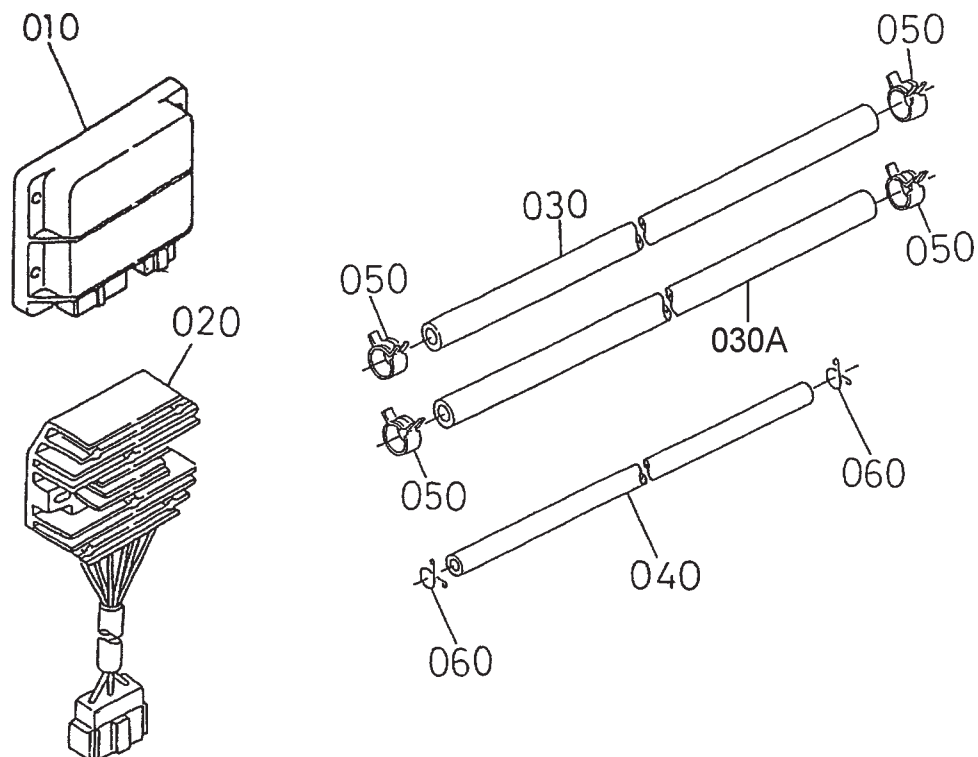


# KUBOTA Z482-EB/E2B/E3B ENGINE— ACCESSORIES

## ACCESSORIES

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1747260604	EMERGENCY UNIT	1	
020	1584464600	COMP. REGULATOR .....	1 .....	TIER I (ORANGE UNITS) REPLACES 1518164602
020	1584464600	COMP. REGULATOR .....	1 .....	TIER II AND TIER IV (WHITE UNITS)
030	0966180400	TUBE FUEL. 8X13X400L	1	
030A	0966180240	TUBE FUEL. 8X13X240L	1	
040	0966140320	TUBE FUEL. 4X8X320L	1	
050	1491142750	CLIP, PIPE	4	
060	1497142750	CLIP, PIPE	6	

## KUBOTA Z482-EB/E2B/E3B ENGINE— PISTON KIT (OPTION)

### PISTON KIT (OPTION)

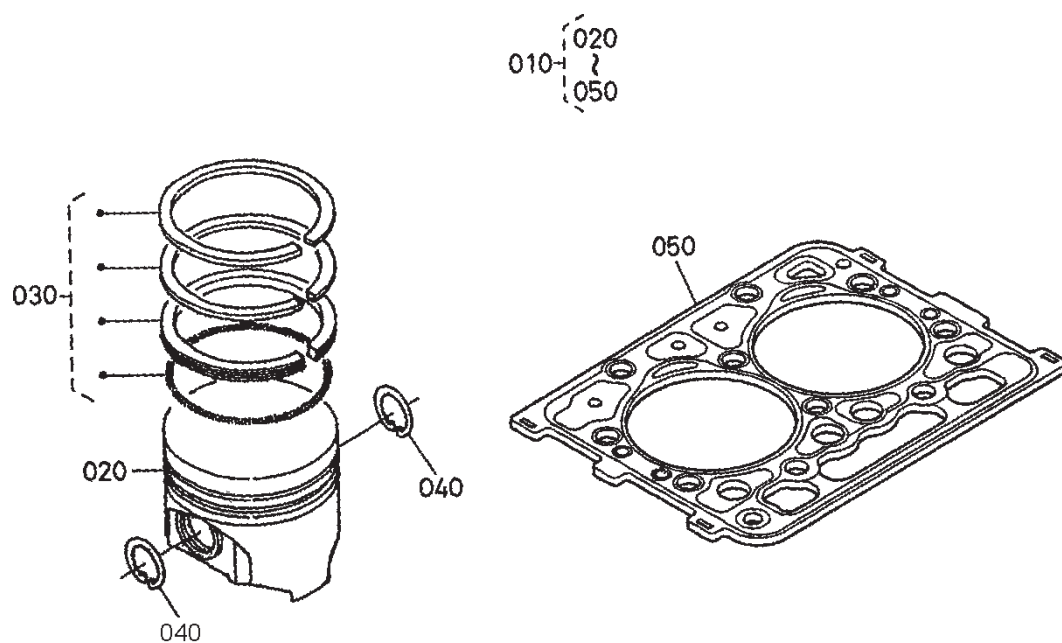

## KUBOTA Z482-EB/E2B/E3B ENGINE— PISTON KIT (OPTION)

### PISTON KIT (OPTION)

<u>NO</u>	<u>PART NO</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
010	1685321002	KIT, PISTON	1	INCLUDES ITEMS W/% (TIER II/IV ONLY)
020%	1685121114	PISTON	1	
030%	1685321050	ASSY. PISTON RING	1	
040%	1526121330	CIRCULAR CLIP PISTON PIN	1	
050%	1685103312	GASKET, CYLINDER HEAD	1	

**PAYMENT TERMS**

Terms of payment for parts are net 30 days.

**FREIGHT POLICY**

All parts orders will be shipped collect or prepaid with the charges added to the invoice. All shipments are F.O.B. point of origin. Multiquip's responsibility ceases when a signed manifest has been obtained from the carrier, and any claim for shortage or damage must be settled between the consignee and the carrier.

**MINIMUM ORDER**

The minimum charge for orders from Multiquip is \$15.00 net. Customers will be asked for instructions regarding handling of orders not meeting this requirement.

**RETURNED GOODS POLICY**

Return shipments will be accepted and credit will be allowed, subject to the following provisions:

1. A Returned Material Authorization must be approved by Multiquip prior to shipment.
2. To obtain a Return Material Authorization, a list must be provided to Multiquip Parts Sales that defines item numbers, quantities, and descriptions of the items to be returned.
  - a. The parts numbers and descriptions must match the current parts price list.
  - b. The list must be typed or computer generated.
  - c. The list must state the reason(s) for the return.
  - d. The list must reference the sales order(s) or invoice(s) under which the items were originally purchased.
  - e. The list must include the name and phone number of the person requesting the RMA.
3. A copy of the Return Material Authorization must accompany the return shipment.
4. Freight is at the sender's expense. All parts must be returned freight prepaid to Multiquip's designated receiving point.

5. Parts must be in new and resalable condition, in the original Multiquip package (if any), and with Multiquip part numbers clearly marked.
6. The following items are not returnable:
  - a. Obsolete parts. (If an item is in the price book and shows as being replaced by another item, it is obsolete.)
  - b. Any parts with a limited shelf life (such as gaskets, seals, "O" rings, and other rubber parts) that were purchased more than six months prior to the return date.
  - c. Any line item with an extended dealer net price of less than \$5.00.
  - d. Special order items.
  - e. Electrical components.
  - f. Paint, chemicals, and lubricants.
  - g. Decals and paper products.
  - h. Items purchased in kits.
7. The sender will be notified of any material received that is not acceptable.
8. Such material will be held for five working days from notification, pending instructions. If a reply is not received within five days, the material will be returned to the sender at his expense.
9. Credit on returned parts will be issued at dealer net price at time of the original purchase, less a 15% restocking charge.
10. In cases where an item is accepted, for which the original purchase document can not be determined, the price will be based on the list price that was effective twelve months prior to the RMA date.
11. Credit issued will be applied to future purchases only.

**PRICING AND REBATES**

Prices are subject to change without prior notice. Price changes are effective on a specific date and all orders received on or after that date will be billed at the revised price. Rebates for price declines and added charges for price increases will not be made for stock on hand at the time of any price change.

Multiquip reserves the right to quote and sell direct to Government agencies, and to Original Equipment Manufacturer accounts who use our products as integral parts of their own products.

**SPECIAL EXPEDITING SERVICE**

A \$35.00 surcharge will be added to the invoice for special handling including bus shipments, insured parcel post or in cases where Multiquip must personally deliver the parts to the carrier.

**LIMITATIONS OF SELLER'S LIABILITY**

Multiquip shall not be liable hereunder for damages in excess of the purchase price of the item with respect to which damages are claimed, and in no event shall Multiquip be liable for loss of profit or good will or for any other special, consequential or incidental damages.

**LIMITATION OF WARRANTIES**

No warranties, express or implied, are made in connection with the sale of parts or trade accessories nor as to any engine not manufactured by Multiquip. Such warranties made in connection with the sale of new, complete units are made exclusively by a statement of warranty packaged with such units, and Multiquip neither assumes nor authorizes any person to assume for it any other obligation or liability whatever in connection with the sale of its products. Apart from such written statement of warranty, there are no warranties, express, implied or statutory, which extend beyond the description of the products on the face hereof.

[illegible]



# OPERATION AND PARTS MANUAL

## HERE'S HOW TO GET HELP

PLEASE HAVE THE MODEL AND SERIAL  
NUMBER *ON-HAND* WHEN CALLING

### **UNITED STATES**

#### ***Multiquip Corporate Office***

18910 Wilmington Ave. Tel. (800) 421-1244  
Carson, CA 90746 Fax (800) 537-3927  
Contact: mq@multiquip.com

#### ***Mayco Parts***

800-306-2926 Fax: 800-672-7877  
310-537-3700 Fax: 310-637-3284

#### ***Service Department***

800-421-1244 Fax: 310-537-4259  
310-537-3700

#### ***MQ Parts Department***

800-427-1244 Fax: 800-672-7877  
310-537-3700 Fax: 310-637-3284

#### ***Warranty Department***

800-421-1244, Ext. 279 Fax: 310-537-1173  
310-537-3700, Ext. 279

#### ***Technical Assistance***

800-478-1244 Fax: 310-631-5032

### **MEXICO**

#### ***MQ Cipsa***

Carr. Fed. Mexico-Puebla KM 126.5 Tel: (52) 222-225-9900  
Momoxpan, Cholula, Puebla 72760 Mexico Fax: (52) 222-285-0420  
Contact: pmastretta@cipsa.com.mx

### **CANADA**

#### ***Multiquip***

4110 Industriel Boul. Tel: (450) 625-2244  
Laval, Quebec, Canada H7L 6V3 Fax: (450) 625-8664  
Contact: jmartin@multiquip.com

### **UNITED KINGDOM**

#### ***Multiquip (UK) Limited Head Office***

Hanover Mill, Fitzroy Street, Tel: 0161 339 2223  
Ashton-under-Lyne, Fax: 0161 339 3226  
Lancashire OL7 0TL  
Contact: sales@multiquip.co.uk

### **BRAZIL**

#### ***Multiquip***

Av. Evandro Lins e Silva, 840 - grupo 505 Tel: 011-55-21-3433-9055  
Barra de Tijuca - Rio de Janeiro Fax: 011-55-21-3433-9055  
Contact: cnavarro@multiquip.com.br, srentes@multiquip.com.br

© COPYRIGHT 2009, MULTQUIP INC.

Multiquip Inc, the MQ logo are registered trademarks of Multiquip Inc. and may not be used, reproduced, or altered without written permission. All other trademarks are the property of their respective owners and used with permission.

This manual MUST accompany the equipment at all times. This manual is considered a permanent part of the equipment and should remain with the unit if resold.

The information and specifications included in this publication were in effect at the time of approval for printing. Illustrations are based on the *DA7000 Series Whisperwatt™ Generators*. Illustrations, descriptions, references and technical data contained in this manual are for guidance only and may not be considered as binding. Multiquip Inc. reserves the right to discontinue or change specifications, design or the information published in this publication at any time without notice and without incurring any obligations.

Your Local Dealer is:

