



GLEN DIMPLEX
AUSTRALIA PTY LTD

**BELLING GOURMET 900 DF
SERVICE MANUAL**



INDEX

<u>PRODUCT IDENTIFICATION</u>	PAGE
APPLIANCE RATING PLATE	3
<u>USER GUIDE AND INSTALLATION HANDBOOK</u>	
USER GUIDE.....	4-28
INSTALLATION INSTRUCTIONS.....	29-34
TECHNICAL DATA.....	35-36
CONTACT DETAILS	37-38
WIRING DIAGRAM.....	39-39
PARTS LIST GOURMET 900 DF.....	40-46
<u>REPAIR AND MAINTAINANCE</u>	
DISASSEMBLY PROCEDURES.....	47-53
COMPONANT REMOVAL.....	54-61
TECHNICAL SPECIFICATIONS.....	62-62
FAULTFINDING GUIDES.....	63-76

THIS MANUAL COVERS THE FOLLOWING MODELS :-

BELLING GOURMET 900 DF

PRODUCT IDENTIFICATION

Appliance rating plate location

The appliance rating plate is located on the right-hand side of the front frame and also on the rear service panel

9	10	1	8	4	3	2	8
---	----	---	---	---	---	---	---



YEAR

MONTH

NUMBER OF PRODUCTION
FOR THE MONTH

4	4	4	4	4	0	0	2	8
---	---	---	---	---	---	---	---	---

PRODUCT IDENTIFICATION CODE

It is important that during all service calls the model and serial numbers are recorded on all paper work.



Whatever the occasion

bellin[®]

think of everything

Our Warranty

Should you need it

Inside the paperwork which has come with this appliance, there is a leaflet and card explaining the terms of our extended warranty and guarantee.

In order to apply for our five year guarantee, simply fill in the details on the card and post it off, this will register your appliance.

Should you wish to take out extended warranty, please fill in the details on the leaflet and post this off to:

Glen Dimplex Australia,
Unit 2, 205 Abbotts Road
Dandenong South
Victoria 3175
Australia

If your appliance is covered by the warranty and guarantee, you will not be billed for work undertaken should your appliance be faulty, terms and conditions do apply, so please read through the literature carefully.

Please ensure that you have available your appliances model number and serial number, there is a space at the back of this book for recording that information.

IMPORTANT NOTICE

Please note the cooling fan fitted to this appliance is an integral part of its safety and functionality.

When the appliance is installed care must be taken that the cooling fans performance is not impeded by any objects coming into contact with it. (Installation pipes, leads etc) Care must also be taken that there is sufficient air flow at the rear of the appliance for the cooling fan to run at its optimum efficiency. (Particularly Built In appliances) See clearance dimensions in the installation section of the booklet.

During use the Appliance must never be disconnected from the Mains supply as this will seriously affect the safety and performance of the appliance, particularly in relation to surface temperatures becoming hot and gas operated parts not working efficiently.

The cooling fan is designed to run on after the control knob has been switched off to keep the front of the appliance and the controls cool until the appliance has naturally cooled itself.

Contents

User's Section	
Hob and cooker safety	4
Chip pan fires	5
Using the programmer / clock	6
Using your gas hob	
Using your gas hob	9
Using your ovens / grill	
Using your Multifunction oven	10
Using your fan oven (if fitted)	11
Oven and grill functions	12
Using your Multifunction oven grill	13
Cooking guides	14
Cooling and defrosting function	19
Cleaning and maintaining your appliance	
Cleaning your gas hob	20
Cleaning your cavities	21
Telescopic shelving system	22
Cleaning your appliance	23
Before you call	24
Changing light bulbs	25
Installation Instructions	26
Technical Data	32
Customer Care	Back cover

Hob & Cooker Safety

- ✓ Always ensure that pan bases are dry, and flat before using them on the hob.
- ✓ Always position pans over the centre of the burner, and turn the handles to a safe position so they cannot be knocked or grabbed.
- ✓ Always use pans which are no smaller than 100mm (4"), or larger than 250mm (10").
- ✓ Always take care when removing food from the oven as the area around the cavity may be hot.
- ✓ Always use oven gloves when handling any utensils which have been in the oven as they will be hot.
- ✓ Always make sure that the oven shelves are resting in the correct position in between two runners. Do not place the oven shelves on top of the highest runner, this will lead to spillage and injury if the baking tray, or dish falls.
- ✗ Never use double pans, rimbased pans, old or misshapen pans, or any pan which is not stable on a flat surface.
- ✗ Never leave cooking fat, or oil, unattended.
- ✗ Never use commercial simmering aids, or heat diffusers, as they create excessive heat and can damage the surface of the hob.
- ✗ Never use the hob for any other purpose than cooking food.
- ✗ Plastic cooking utensils can melt if they come into contact with a warm hob. Never leave them close to, or on top of, the hob.
- ✗ Never leave the burner alight without a pan covering it. This causes a fire hazard.
- ✗ Do not place items of the door while it is open.
- ✗ Do not wrap foil around the oven shelves, or allow it to block the flue.
- ✗ Do not drape tea towels near the oven while it is on, this will cause a fire hazard.
- ✗ Do not pull heavy items, such as turkeys, or large joints of meat, out from the oven on the shelf, as they may overbalance and fall.
- ✗ Do not use this appliance to heat anything other than food items, and do not use it for heating the room.



WARNING: Parts of the appliance may become hot while in use, always make sure that children are supervised when they are near to the appliance.

Always make sure that the burner caps, rings and pansupports are correctly placed. This will prevent pans becoming unstable while in use, and ensure an uninterrupted gas flow.



Call Customer Care for a service engineers visit if:

- You find over a period of time that the gas oven becomes hotter at a particular temperature - the thermostat may need replacing.
- The cooling fan fails to work.

Children should be supervised to ensure that they do not play with the appliance.

This appliance is not intended for use by persons (including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge), unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

WARNING: Servicing should be carried out only by authorised personnel.

Chip Pan Fires

What causes a chip pan fire?

- Chip pan fires start when oil of fat overheats and catches fire, or when oil or fat spills on to the cooker because the pan has been filled too high.
- They can also start when wet chips are put into hot oil, making it bubble up and over flow.

Preventing a chip pan fire

- Never fill the pan more than a third full with oil of fat.
- Never leave the pan alone with the heat on - even for a few seconds.
- Dry chips before putting them in the pan.
- Never put chips in the pan if the oil has started smoking. Turn off the heat and leave the oil to cool down, or else it could catch fire.

In the event of a chip pan fire

- If your chip pan does catch fire - don't panic, and don't move the pan. Serious burns are often caused by picking up the pan and running outside with it.
- If it is safe to do so, and you don't have to reach across the pan, turn off the heat.
- Never throw water, or use a fire extinguisher.
- If you can, drape a damp cloth or towel over the pan to smother the flames.
- Leave the pan to cool down for at least half an hour.
- If you can't control the fire yourself, close the door, get out and tell everybody else to get out.
- Call the fire brigade. Don't go back inside whatever the reason.

Do not spray aerosols in the vicinity of this appliance while it is in operation.

Do not store or use flammable liquids or items in the vicinity of this appliance.







Do not modify this appliance.

Using The Programmer/Clock

Through your programmer you will be able to set the time of day, set the minute minder, and use the semi and fully automatic cooking functions. The programmer is vital to the working of your appliance, and reading this section will make sure that you get the most out of your ovens.

The programmer buttons

There are three buttons on this type of timer. The table below shows you what their symbols look like, depending on the model type, and what they do.

Symbol	Symbol	What is it?
		Down / Minus Used to decrease cook / end time, remove minutes from the minute minder and adjust the time of day. Also for listening to and setting the alarm tone.
		Up / Plus Used to increase cook / end time, add minutes to the minute minder and adjust the time of day.
		Function button Used to select the functions available on this timer. Press once for: Minute Minder. Press twice for: Cook time Press three times for: End time. How to use these functions is explained later on in this section.

Setting the time of day


- ◆ Press the Plus and Minus buttons together for a few seconds and release.
- ◆ Set the time of day using the Plus and Minus buttons. Press once for single digit increase, press and hold for rapid increase..
- ◆ Once the time of day has been set wait approx 10 seconds until the '●' stops flashing.
- ◆ Use the appliance as normal.

Setting an alarm tone


There are three tones to choose from.

- Press and release the minus button.
- Once the minus button is released, the tone is selected.

What your timer symbols mean.

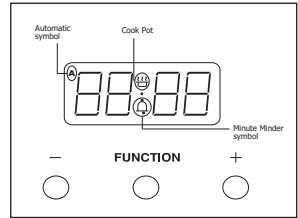


i This is a 24 hour clock. Before you do anything with your appliance - you must set the correct time of day.

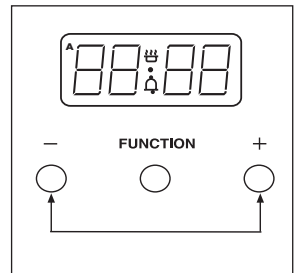

Using The Programmer/Clock

Setting the minute minder

- To set the Minute Minder, press the Function button once. The bell symbol will appear and start flashing. The flashing only lasts for 5 seconds so the time must be set within this time frame.
- Use the Plus and Minus button to set the length of time required. Once this has been done, the Minute Minder is set.
- When the desired length of time has counted down the alarm will sound. To cancel the tone, press any of the buttons.
- To cancel the Minute Minder at any time, press the Plus and Minus buttons together.


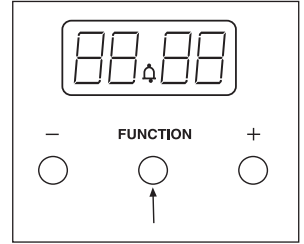


Semi - Automatic Cooking

The Duration method

Switch off after a set time period




- Press the Function button twice, which will skip past the Minute Minder.
- The display will flash the word 'dur', and the 'A' will flash on the left hand side of the display.
- Use the Plus and Minus buttons to set the length of time you want to cook for. This must be done within 5 seconds or the time of day will show again.
- Once this is done the oven will automatically switch off once the time has elapsed, and the alarm will sound. To switch off the alarm, press any button.
- To view any remaining time press the function button twice.

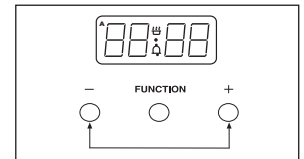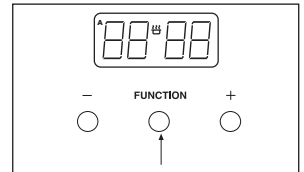

The End Time method

Switch off at a set end time

- Press the Function button three times, which will skip past the Minute Minder and the Duration programmer.
- The display will flash the word 'End' and the 'A' will flash on the left hand side of the display.
- Use the Plus and Minus buttons to select the time the oven is required to turn off.
- Once this is done the oven will turn itself off at the time you have selected. To switch off the alarm, press any button.

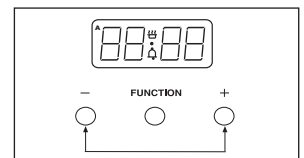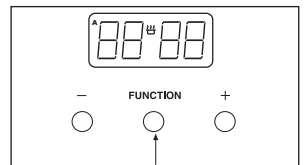

Setting the Programmer

Fully Automatic Cooking

Switch on and off automatically

This requires both the duration and the end time to be entered. The timer will work out the start time and begin cooking.

- Press the Function button twice, which will skip past the Minute Minder.
- The display will flash the word 'dur', and the 'A' will flash on the left hand side of the display.
- Use the Plus and Minus buttons to set the length of time you want to cook for. This must be done within 5 seconds or the time of day will show again.
- Press the Function button three times, which will skip past the Minute Minder and the Duration programmer.
- The display will flash the word 'End' and the 'A' will flash on the left hand side of the display.
- Use the Plus and Minus buttons to select the time the oven is required to turn off.
- Once this is done the oven will turn itself off at the time you have selected. To switch off the alarm, press any button.
- **Set the temperature of the oven and place the food inside.**
- The timer will calculate the appropriate start time.






When using the Programmer:

✓ Do:

- Familiarise yourself with the use of the programmer.
- Select foods which are as fresh and as cold as possible preferably straight from the refrigerator.
- Choose foods which are suitable for cooking from a cold start, as some dishes will be affected by being left uncooked, at room temperature.
- Make sure that meat, poultry and uncooked food are thoroughly thawed before placing them in the oven.
- Cover dishes with lids or foil.
- Try to keep the end time as close to your return as possible.

✗ Do not:

- Place warm food in the oven for delayed cooking foods must be thoroughly cooled before placing in the oven, the oven must also be cool before you start.
- Cook dishes containing left over cooked meat or poultry, or pastry dishes with wet fillings, they are not suitable!
- Over-fill dishes containing liquids.

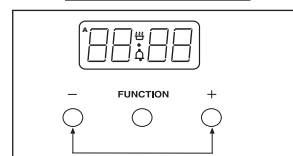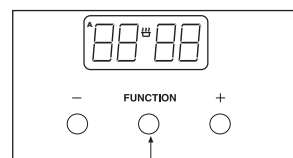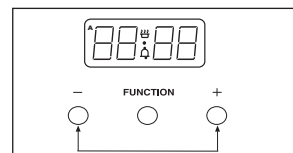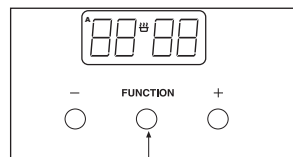

i The automatic cooking symbol will appear to show that the oven is no longer in manual mode but in automatic mode.

i Important: Once the oven has switched itself off please make sure you turn to oven controls to the 'off' position and set the oven to manual by pressing the Cook Time and Ready Time buttons together.

i Important: Remove food as soon as it is cooked.

Using Your Gas Hob

Hob Ignition

- To turn on, place your pan onto the pan supports above the burner you wish to use.
- Push in and turn the selected control knob anticlockwise, to the full on symbol.
- Your hob has an ignition button on the fascia panel, press it in until your burner lights.
- Hold the control knob in for 15 seconds. Do not hold the control knob in for any longer than 15 seconds. If the burner fails to light within this time, release the control knob and wait one minute before attempting to re-ignite.
- To simmer, turn the control knob to the small flame symbol. This will ensure that the flame is just large enough to gently heat the contents of the pan.
- To turn off, turn the control knob clockwise to the 'off' position.
- Always make sure that your pans are placed correctly on the burners as shown, and do not allow the flame to extend over the base of the pan.

Energy Saving


- Position pans centrally over the burners.
- Only heat the amount of liquid you need.
- Once liquids have been brought to the boil, reduce the heat setting to a simmer.
- Consider using a pressure cooker if possible.
- Vegetables in small pieces will cook quicker.
- Use a pan which is a close match to your burner size.
- Smaller burners are ideal for simmering and stewing in smaller pans, while the larger burners are ideal for frying and boiling.

Abnormal Operation

Any of the following are considered to be abnormal operation and may require servicing.

- Yellow tipping of the hob burner flame
- Sooting up of the cooking utensils
- Burners not igniting properly
- Burners failing to remain alight
- Burners extinguished by cupboard doors
- Gas valves which are difficult to turn



In case the appliance fails to operate correctly, contact the authorised service provider in your area.

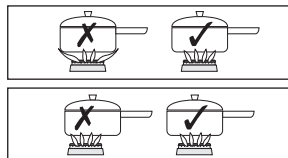

How can I tell if my hob has thermocouples?

Picture A below: shows a burner without thermocouples.

Picture B below: shows a burner with thermocouples.

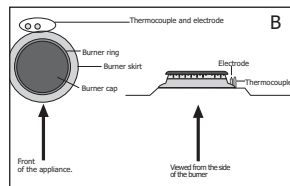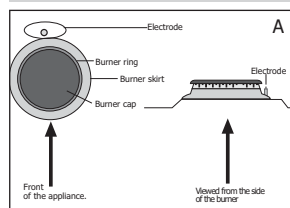

In the event of a power failure, or the ignition not working: Push in and turn the control knob to start the gas, then hold a lighted match or taper to the burner until it lights.



Use flat based pans which are the correct size for your burners and suitable for your hob type.

We recommend the following sizes:

100mm or 4" min.

250mm or 10" max.

Smaller or larger pan sizes may lead to slower cooking times.

Using Your Multifunction Oven

The multifunction oven may be controlled by the programmer (see The Programmer/Clock for details).

The programmer, if fitted must be set to manual before it can be used, or programmed.



Important: Never place food, or dishes on the base of the main oven, the element is here and it will cause over heating.

Switching on the multifunction oven

- Use the function control knob to select the function you wish to use - see the functions table for details.

Note: You can change function during cooking if you wish, as long as the oven is in manual mode.

- Turn the temperature control knob to the temperature you wish to use.
- The thermostat indicator will come on to show that the oven is heating, and once the temperature is achieved, it will go out.
- To switch off the oven, simply turn the control knob back to the '●' position.
- The cooling fan may come on during use, and may continue to run for some time afterwards.

Using Your Fanned Oven (if fitted)









Switching on the fanned oven

- Use the fanned oven control to turn your oven on, and select your temperature.
- The thermostat indicator will come on to show that the oven is heating, and once the temperature is achieved, it will go out.
- To switch off the oven, simply turn the control knob back to the '●' position.
- The cooling fan may come on during use, and may continue to run for some time afterwards.



Important: Never place food, or dishes on the base of the main oven, the element is here and it will cause over heating.

Oven & Grill Functions

Main Oven Function		Recommended Uses
	Base Heat Only	Used to finish off the bases of food following cooking using the conventional or fanned modes. The base heat can be used to provide additional browning for pizzas, pies and quiche. Use this function towards the end of cooking.
	Top Heat Only	The heat is ideal from browning off the tops of food as it is not as fierce as the grill following conventional or fanned cooking. Provides additional browning for dishes like Lasagna or Cauliflower cheese. Use this function towards the end of cooking.
	Conventional Oven	This function is ideal for traditional roasting. The meat is placed in the middle of the oven, roast potatoes towards the top.
	Intensive Bake	Suitable for food with a high moisture content, such as quiche, bread and cheesecake. It also eliminates the need for baking pastry blind.
	Fanned Oven	The even temperature in the oven makes this function suitable for batch baking, or batch cooking foods.
	Defrost	To defrost foods, such as cream cakes/gateaux, use with the oven door closed. For cooling dishes prior to refrigeration, leave the door open.
	Dual Grill	This function cooks food from the top and is ideal for a range of food from toast to steaks. As the whole grill is working, you can cook larger quantities of food.
	Base Heat with Fan	Used to cook open pies (such as mince pies) the base element ensures that the base is cooked while the fan allows the air to circulate around the filling - without being too intensive.
	Fanned Grill	The fan allows the heat to circulate around the food. Ideal for thinner foods such as bacon, fish and gammon steaks. Foods do not require turning. Use with the oven door closed.

Using Your Multifunction Oven Grill

Before you start grilling. . . .

Before you use the grill, make sure you have placed the grill shelf in the position you need as once the grill is on you may injure yourself if you try to move the shelf.

- This grill function can be used with the door open, or closed.
- Turn the selector control knob to the grill setting.
- Turn the grill control knob to either the dual or single grill setting. Then select the heat setting.
- To switch off, return the control knobs to the 'off' position.
- The cooling fan will come on during use, and may continue to run for some time afterwards.
- To adjust your results, you can turn the trivet over, or remove it altogether.

If your grill is a dual grill:

- The dual grill uses all of the top element and is ideal for grilling large quantities of food.
- The single grill uses part of the element only, and is better suited to grill smaller amounts of food.

The grill neon

When grilling with the door closed, the neon will cycle on and off as the temperature is maintained inside the cavity. If the door is open, it will not cycle on and off.

i **Warning:** Accessible parts may become hot when the grill is in use. Children should be kept away.

i Types of grill

Fixed rate grill: has a full 'on' setting and 'off'.

Variable rate grill: has adjustable heat settings 1 (low) to 8 (high) or 5 (high) - depending on the model.

Single grill: has one grill element.

Dual grill: has two grill elements which can be used together, or as a single grill.

i For best results: Pre-heat the grill for about 3 minutes.

Fanned Oven Guide

- Some adjustment will have to be made to conventional cooking temperatures.
- The table below shows conventional cooking temperatures, fanned temperatures and gas marks.
For optimum results using the fanned oven setting, conventional temperatures need to be converted to the fanned oven temperatures.
- For example an item which would cook at 180°C will now cook at the fanned oven temperature of 160°C.
- This is a high efficiency oven, you may notice an emission of steam when the door is opened.
- When cooking chilled or frozen foods, use the recommended cooking times and temperature on the packaging. **Always** make sure the food is piping hot throughout before serving.
- There are no zones of heat, and no flavour transfer when using a fanned oven - allowing you to cook a greater variety of foods together.
- If you are cooking on more than one shelf, you may need to slightly increase the cooking time.
- Always make sure that there is enough space between dishes, to allow food to rise, and to air to circulate.

Conventional temp (°C)	'A' Efficiency oven (°C)	Gas mark
100	100	1/4
110	110	1/4
130	120	1/2
140	130	1
150	140	2
160	150	3
180 - 190	160	4 - 5
200	170	6
220	180	7
230	190	8
250	200	9

Cooking Guide

Pre-heating

To get the best results from your oven, we recommend pre-heating for around 5 to 15 minutes before placing your dishes in. This is especially important for items which are chilled, frozen, batter based, yeast based or whisked sponges.




If you are using a fanned function, you should still pre-heat but for a shorter time.

The items in the cooking guide below are based on a pre-heated oven, but can be adjusted to take into account personal taste.

Oven and bakeware

Always use high quality trays and tins for cooking. Poor quality tins and trays can warp in the oven producing uneven results.

Never use dishes which are cracked, damaged or not oven proof as heating may lead to shattering inside the oven.

Food Type	Temp. Setting °C			Time Approx.	Shelf Position
	Conv 	Fanned 	Intensive 		
Cakes					
Small cakes	190	160	-	15 - 25	7 & 13
Victoria sandwich	180	160	-	20 - 30	7
Semi rich fruit cake	150	125	-	2 1/2 - 3hrs	5
Christmas cake	150	125	-	2 1/2 - 3hrs	3
Puddings					
Bread & butter pudding	170	150	-	45 - 1hr	9
Fruit crumble	200	175	-	40 - 1hr	9
Miscellaneous					
Yorkshire pudding: large	220	200	200	40 - 45	11
small	220	200	200	15 - 20	12
Shortcrust pastry	200	180	180	depends on filling	top - middle

Roasting Guide

- Roasting times depend on the weight, shape and texture of the meat and personal preference. In order to calculate the roasting time, weigh the meat or poultry, **including the stuffing**, and follow the times given below.

Meat joints (including chicken) should be roasted at **180 - 200°C Conventional/ 160 - 180°C Fanned** for 20 - 30 mins per 450g/1lb, plus 20 minutes on shelf position 2.

- Frozen meat must be **thoroughly** thawed before cooking. For large joints, it is advisable to thaw overnight.
- Frozen poultry must be **thoroughly** thawed before cooking. The time required depends on the size of the bird - eg: a large turkey may take up to 48 hours to thaw.
- When cooking stuffed meat or poultry, calculate the cooking time from the **total** weight of the meat **plus** the stuffing.
- Cooking joints in foil, covered roasters, lidded casseroles, or roasting bags will help to reduce meat shrinkage, give a more moist result and may reduce fat splashing. However, a slightly longer cooking times will be required, **add** 5 - 10 minutes per 450g (1lb) to the calculated cooking time. When using roasting bags do not exceed the temperatures recommended by the manufacturer, and do not allow the roasting bag to touch the sides or top of the oven.
- Use of a trivet with the roasting tin will reduce fat splashing during open roasting, and will help to keep the oven interior clean.
- The use of a roasting tin larger than that supplied is not advised, as this may impair performance and lead to extended cooking times.

Roasting Guide

Roast turkey

- Roasting turkey perfectly involves cooking two different types of meat - the delicate light breast meat, which must not be allowed to dry out, and the darker leg meat, which takes longer to cook.
- The turkey must be roasted long enough for the legs to cook, so frequent basting is necessary. The breast meat can be covered once browned.
- Turkey should be roasted at **180 - 190°C Conventional/ 160°C Fanned** for 20 mins per 1lb, plus 20 minutes.
- The turkey can be open roasted, breast side down, for half of the cook time, and then turned over for the remainder of the cooking time.
- If the turkey is stuffed, **add** 5 minutes per 1lb to the cooking time.
- If roasting turkey covered with foil, **add** 5 minutes per 1lb to the cooking time.
- To test if the turkey is cooked, push a fine skewer into the thickest part of the thigh. If the juices run clear, the turkey is cooked. If the juices are still pink, the turkey will need longer cooking. Always make sure that the turkey is cooked properly before serving.

Turkey Roasting times.

Most Turkeys are measured by the kilogram. Timing should be calculated in either of these ways:

40 minutes per 1kg plus 10 minutes per 1/4 kg.

or

20 minutes per 1lb, plus 20 minutes.

The maximum size Turkey for this appliance is: 20lbs approximately 9kgs.

Please do not attempt to roast a Turkey larger than this, as the results cannot be guaranteed.

General Baking Guide

Trouble-shooting - Fruit Cakes

PROBLEM	POSSIBLE CAUSE
Fruit sinking to the bottom	Low oven temperature which may cause the cake to take longer to set, allowing the fruit to sink. Or, too much liquid, or raising agent. The fruit may not have been properly washed and dried.
Cake sinking / dipping in the centre	Too much raising agent in the mixture. Too hot, or too cool an oven. Or, not enough liquid or insufficient creaming.
Surface cracks	Too small a tin, or too much mixture in the tin. Too much raising agent in the mix, plus not enough liquid or insufficient creaming. The oven may be too hot.
Hard outer crust with a damp patch inside	Oven too hot, therefore the cake baked too quickly. Too much sugar, or insufficient liquid.
Burnt outside	Oven temperature too high. Oven too small for the size of cake. Insufficient protection around the tin. Cake baked on too high a shelf.
Texture with pronounced holes.	Too much raising agent. Flour unevenly mixed.
Texture too close and cake insufficiently risen.	Not enough raising agent. Not enough liquid. Too cool an oven. Insufficient creaming.
Cake crumbles when cut	Not enough liquid. Baked for too long. Not enough sugar. Too much baking agent.
Too dry	Over baking. Insufficient egg or liquid. Too much raising agent.

Trouble-shooting - Sponge Cakes

Domed top	Insufficient creaming of mixture. Cake baked on too high a shelf position, or at too high a temperature. Paper liners can cause the outer edge not to rise and the centre to peak.
Hollowed / sunken top	Too much raising agent. Oven temperature too low, or incorrect shelf position. Cake removed from oven before it's cooked. Use of soft tub margarine.
Very pale, but cooked	Oven temperature too low. Baked too low in the oven
Overflowing tin	Tin too small for the amount of mixture

'Cooling & Defrosting' Function

- To **cool** foods quickly straight after cooking, but before refrigerating or freezing, turn the oven control to the defrost position, and **open** the door.
- To **defrost** frozen foods, turn the oven control to the defrost position, place the food in the centre of the oven and **close** the door.

Defrosting times

- Small or thin pieces of frozen fish or meat - eg; fish fillets, prawns, and mince will take approximately 1 - 2 hours. Placing the food in a single layer will reduce the thawing time.
- A medium sized casserole or stew will take around 3 - 4 hours.
- A 1¹/₂kg / 3lb oven ready chicken will take around 5 hours, remove the giblets as soon as possible.
- Always check foods are thoroughly defrosted before cooking.

Be safe

- Do not defrost stuffed poultry using this method.
- Do not defrost larger joints of meat and poultry over 2kg / 4lb using this method.
- Never place uncooked food for defrosting next to cooked food which is to be cooled, as this can lead to cross contamination.
- Defrosting meat, poultry and fish speeded up using this method, but make sure they are completely thawed before cooking thoroughly.
- Place meat and poultry on a trivet in a meat tin, to catch the juices from the defrosting process.

Cleaning your Gas Hob

Sometimes when a hob is not working well, it is because it needs cleaning.

Enamel parts

- Use a mild cream cleaner for example 'Cif'. Stubborn marks can be removed with a soap filled pad.

Stainless steel surfaces

- Only use a clean cloth wrung out with warm, soapy water and dried off with a soft cloth. For stubborn marks use a specialist stainless steel cleaner.
- **Do not** use steam cleaners.
- Sharp implements and objects can mark the surface of stainless steel, however they do become less noticeable in time.

Cast iron parts

- Ensure the parts have fully cooled and scrape off any stubborn marks, and bits of food with a plastic, or wooden cooking implement. Rinse in warm soapy water and dry with a tea towel.
- **Do not** clean in a dishwasher.
- If you notice any rusting on your griddle, or pansupports, simply clean in warm soapy water, then re-season.

Burner caps and heads

The slots in the burner head where the flames burn should be cleared of deposits.

- Clean with a nylon brush, rinse and then dry thoroughly. There may be brownish coloured markings on your burners, these are carbon deposits or fat stains and can be removed using a soap filled pad.
- **Do not** put burners in the dishwasher or soak them. Using dishwasher powders, washing up liquids and caustic pastes can damage the burners.
- Burner caps and heads must be repositioned correctly so that they sit squarely on to the hob as shown on the left.
- This is particularly important with stainless steel models as failure to reposition the caps correctly may result in discolouration of the stainless steel around the burners.

Painted & Plastic parts

- Only use a clean cloth wrung out in hot soapy water.



Always allow your appliance to cool down, and switch off the electricity before you clean any part of it.



Baby oil can be used to restore stainless steel finishes - but only use a few drops. Don't use cooking oils as they can contain salts which will damage the metal.




Don't use: undiluted bleaches, products containing chlorides, wire wool or abrasive cleaners on aluminium, stainless steel, or plastic/painted parts they can damage the appliance. Nylon pads can also be unsuitable



Seasoning the griddle:

Pour a drop of unsalted cooking oil onto the cooking side of the griddle, use kitchen roll to cover the griddle evenly. *Olive oil is not suitable for seasoning.* Regular seasoning prevents rust.

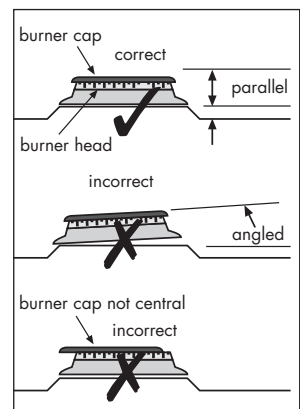

Cleaning your Cavities

Cleaning the oven cavities

- Some foods can cause fat to spit, especially if you have open roasted, this leaves the inside of the cavity greasy.
- It is important to clean the oven cavity as a build up of fat can damage the appliance and may invalidate your guarantee.

Chrome plated parts.

- Use a moist soap filled pad, shelves can be placed in a dishwasher.
- Shelf runners can be removed to enable you to clean them thoroughly. Make sure they are cool to touch and then grasp the runners and slide out of their hanging holes.

Pristine enamel surfaces


- The enamel can be cleaned by wiping the surfaces with a clean cloth which has been wrung out in hot, soapy water.
- If larger splashes of fat do not readily disappear, you can use a mild cream cleaner to remove them. More stubborn marks can be removed using a soap filled pad.
- Rinse well, and allow to dry before use.

Vitreous enamel surfaces

- The enamel can be cleaned by wiping the surfaces with a clean cloth which has been wrung out in hot, soapy water.
- Stubborn marks can be cleaned using a moistened soap filled pad, or a mild cream cleaner.
- Rinse well, and allow to dry before use.



Always allow your appliance to cool down, and switch off the electricity before you clean any part of it.

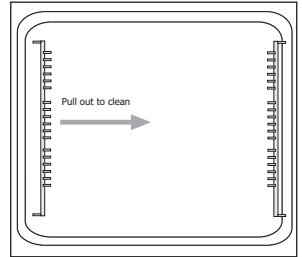


Don't use: Caustic or abrasive cleaners, bleaches, coarse wire wool or hard implements, these will damage your appliance.



Using a trivet while roasting meat may help to reduce fat splashes.

Telescopic Shelving System (if fitted)

- In addition to the traditional shelving fitted into your appliance, the telescopic shelving system is fitted in the most commonly used location in your cavity.
- The shelves with the telescopic system are easier to pull out than traditional shelving, which means the oven door stays open for a shorter period of time. The smooth action also reduces the likelihood of fat, or food, spillage, and gives you extra security.
- You do not have to use the telescopic shelves all of the time, you can place the shelves in the traditional positions if you would like more choice.
- The telescopic shelves remove easily from the runner for re-positioning or cleaning, but we recommend that you reposition your shelving before cooking, and remove the shelving for cleaning when the shelves are cold to prevent burning yourself.

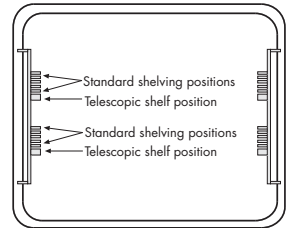


To remove the telescopic shelves

- Make sure the shelf is cool enough to touch.
- Push the oven shelf back into the cavity, until it hits the stop position.
- Grasp the shelf bars in the centre, and lift the back of the shelf clear of the stop position.
- You can then lift the front of the shelf clear of the retaining tabs.

To replace the telescopic shelves

- Make sure the oven runners are pushed all the way back into the cavity.
- Tilt the shelf and make sure the front of the shelf is against the stop position.
- Carefully place the shelf back onto the runner and snap in place firmly.
- Make sure the back of the self is inside the retaining tabs and slide it in and out of the oven to make sure it works correctly.

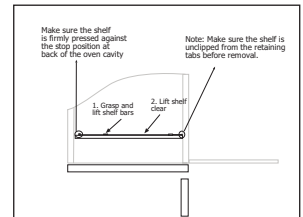

Standard shelves

- Standard shelves are removed by pulling them straight out towards you and are replaced by sliding them straight into the oven to the back of the cavity.
- These shelves can be cleaned in the dishwasher.

Cleaning your Appliance

Painted & Plastic parts

- Only use a clean cloth wrung out in hot soapy water.
- **Do not** use abrasive cleaners, such as "Cif", wire or nylon cleaning pads on these parts.

Stainless steel & Aluminium surfaces

- Only use a clean cloth wrung out in hot soapy water, and dry with a soft cloth.
- Stubborn marks can be removed using a stainless steel cleaner. Supplies can be purchased from the Customer Care Centre.
- Sharp objects can mark the surface of stainless steel, but will become less noticeable with time.
- Wipe any spillage immediately, taking care to avoid burning your hands.
- Some foods are corrosive eg; vinegar, fruit juices and especially salt - they can mark or damage the metal if they are left on the surface.

Enamel surfaces & parts

- Clean with warm, soapy water and a clean cloth.
- Dry with a soft clean towel or cloth.
- Do not use steam cleaners.

Glass parts

- Only use a clean cloth wrung out in hot soapy water, or a specialist glass cleaner.
- Rinse away any excess cleaner and dry with a soft cloth.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- The inner door glass panel can be removed for cleaning but it must be replaced the right way up. If there is any writing on the glass, you must be able to read it clearly when the cavity doors are open.
- Always make sure that the glass is pushed fully into the **Stop** position.
- To remove the glass panel, open the door wide, hold the top and bottom edges and slide out.
- Warning: **Do not** operate the appliance without the glass panel correctly fitted.



Always allow your appliance to cool down, and switch off the electricity before you clean any part of it.



Take extra care when cleaning over symbols on fascia panels, excessive cleaning can lead to the symbols fading.



Baby oil can be used to restore stainless steel finishes - but only use a few drops. Don't use cooking oils as they can contain salts which will damage the metal.



Don't use: undiluted bleaches, products containing chlorides or abrasive cleaners on aluminium or stainless steel, they can damage the appliance.

Glass door panels

For your safety, glass door panels are made of toughened glass. This ensures that, in the unlikely event that a panel breaks, it does so into small fragments to minimise the risk of injury.

Please take care when handling, using or cleaning all glass panels, as any damage to the surfaces or edges may result in the glass breaking without warning or apparent cause at a later date.

Should any glass panel be damaged, we strongly recommend that it is replaced immediately.

Before you call. .

Problem?	Advice
The ignition won't work. (Gas and dual fuel models)	<ul style="list-style-type: none">● Check there is a spark when the ignition button is depressed. If there is no spark, check the electricity supply is switched on at the socket.● Check that the gas supply is switched on.● Try another appliance in the socket, if that works replace the 3 amp fuse in the cooker plug.
There's condensation on the doors.	<p>Condensation is caused by hot, moist air meeting a cooler surface (i.e. the oven door). You cannot always prevent it, but you can minimise it when it happens by doing the following:</p> <ul style="list-style-type: none">● Pre-heat the oven at a high temperature before putting food in the oven, and cover the food you are cooking wherever possible.● Whenever you can, cook wet foods at higher temperatures.● Don't leave food in the oven to cool down. <p>Automatic cooking will normally produce condensation when the oven is cooling down with food inside.</p>
There's been a power failure and the oven won't work. (models with clocks and automatic programmers)	<ul style="list-style-type: none">● Switch off the electricity supply.● When the power returns - re-set the programmer/Clock to the correct time of day. <p>This will allow you to use your appliance.</p>

Changing Light Bulbs

Warning: There is a risk of electric shock, so always make sure you have turned off and / or unplugged your appliance, prior to changing the light bulb.

Not all appliances have the same number and type of bulbs. Before replacing your bulb, open the top/main oven door and see which type you have. Then use the table to help you change your bulb correctly.

Please remember that bulbs are not covered by your warranty.

Bulbs can be purchased from hardware stores (always take the old bulb with you).

No. of lamps	Bulb Location	Oven type	Instruction for changing the bulb
1 (@25W)	rear	Fanned / Multifunction	Wait until the oven is cool, then remove the shelves. The oven light is at the rear of the oven cavity. Remove the loose oven back - unscrew the 4 securing screws (one at each corner). Unscrew the lens cover (turn anticlockwise). Unscrew the bulb and replace. Replace lens cover and replace oven back.

Installing Your Cooker

Always make sure that your appliance is fitted correctly, by a competent installer. This is a Class 1 appliance regarding installation requirements.

Warning

This appliance is unsuitable for use in a marine environment

Before you start

Always make sure that you have carefully read through the installation pages of this book - careful planning at the beginning will ensure a quick and easy installation.

- Take care when moving this appliance, it may be heavier than it looks! If you need to lift the appliance, make sure you use an appropriate lifting method.
- Soft, or uneven flooring may be damaged unless the appliance is moved with care.

If the range is placed on a base, measures have to be taken to prevent the appliance slipping from the base.

- Do not attempt to move the cooker by pulling on the handles or doors, we recommend that you open the door and grasp the frame of the cooker. Please wear protective gloves for this, and make sure the door cannot trap your fingers.


Please make sure that you have enough space for your appliance. Clearances and more installation details are given on page 27

Installing Your Cooker

Clearances

This cooker may be fitted flush to the base units of your kitchen.

- No shelf, overhang, cupboard, or cooker hood should be less than 650mm above the hob top, but please check this with the hood manufacturers instructions.
- If your appliance has a side opening door, we recommend a side clearance of 60mm to allow the oven door to fully open.
- The cooker must have a side clearance above hob level of 90mm up to a height of 400mm.
- The important dimensions are those around the appliance.

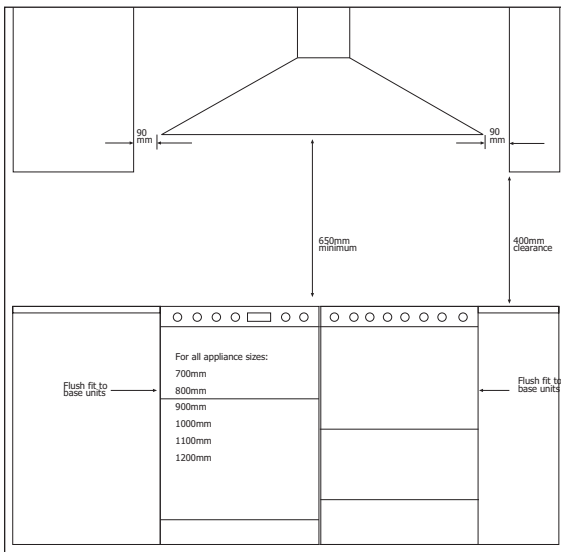

Installing Your Cooker

The information below is crucial to installing this appliance correctly and safely.

Gas Safety (Installation & Use) Regulations


This appliance must be installed by an authorised person in accordance with the manufacturers installation instructions, local gas fitting regulations, the AGA Gas Installation, the Australian Gas Installation Code AS5601 and any other relevant statutory regulations.

Particular attention should be given to relevant requirements regarding ventilation.

Failure to install appliances correctly is dangerous and could lead to prosecution.

Fitting the plinth (if applicable)

- Make sure the appliance is raised to a height of 915mm or above before beginning. If the appliance is below 915mm - you can only fit the plinth cover labelled Y. You can adjust the height using the feet (1) of the appliance. If your appliance has a storage drawer at the bottom, you access the required holes through the base of the drawer after lifting the mat.
- Open the appliance doors, and loosen screw A located on bracket (2). Do not remove this screw entirely.
- Insert screw B, through slot (3) and screw into the small hole at the bottom of bracket (2). Make sure that the plinth cover is flush to the appliance, but not over tightened.

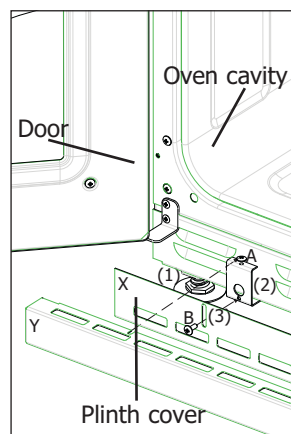


Installing Your Cooker

Stabilising and Securing

Your cooker is supplied with 2 stability chains. These will prevent the cooker from moving and causing damage to the flexible hose at the rear of the cooker.

Your cooker must be secured to a wall or a solid partition behind the cooker.

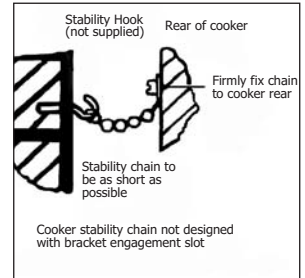

Levelling

Once your cooker is secure:

Place a spirit level onto a baking tray, on an oven shelf. These cookers are fitted with adjustable feet which will allow you to adjust the height of the appliance until it is level. The adjustable feet are at the front and rear of the cooker.



Installing Your Cooker

We recommend that this appliance is connected by a competent person, who is a member of a recognised "Competent Persons Scheme" and who will comply with local regulations.

The appliance must be installed using a multi-pole control unit of 13 Ampere minimum capacity with 3mm minimum contact separation at all poles, which must remain accessible after installation.


Ensure that you route all mains electrical cables well clear of any adjacent heat source, such as an oven or grill.

- Where a fixed connection is used, a device allowing the appliance to be isolated on all poles from the mains supply with a contact opening width of at least 3mm must be provided.
- After connection to the electricity please check that all electrical parts are working.
- The maximum power rating is specified in the Technical Data section of this handbook, and also on the Data Badge on the appliance.

Connecting the electricity supply

Warning: This appliance must be earthed!

- Access to the mains terminal is gained by removing the terminal block cover at the rear of the appliance - use a pozi N° 2 screw driver for this.
- Connection should be made with a minimum 1.5mm² twin and earth cable.
- First strip the wires. Then push the cable through the cable clamping the terminal block cover.
- Connect the cable to the terminal block and tighten the cable clamp screw - see diagram.
- Replace the cover.
- Sufficient cable should be used to allow the cooker to be pulled out, but must hang clear of the floor so it does not become twisted or trapped when the cooker is pushed back.

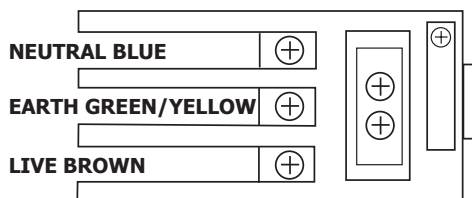

Installing Your Cooker


Connecting to the gas supply

Means of isolation shall be provided at the shut off point by either an approved quick connect device or a Type 1 manual shut off valve. The outlet of the quick connect device shall be at, or below, the horizontal position.

Connection to the gas supply should be made using the Aquaknect AS/NZS 1869 class B hose assembly with an internal diameter of not less than 10mm and regulator (regulator for use with natural gas)

NOTE: Maximum length of hose 900mm.

The temperature rise of the areas at the rear of the cooker that are likely to come into contact with the flexible hose do not exceed 70 °C.

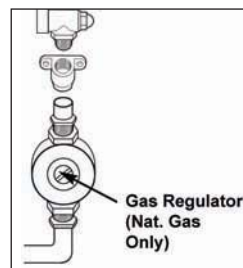

Ventilation requirements

Ventilation must be as specified by AS5601 Installation code. The room containing the appliance should have an air supply.

An appliance should be installed in a location for complete combustion of gas, proper flueing and to maintain ambient temperature of the immediate surrounding at safe limits, under normal conditions.

LP Gas only - Do not install this appliance in a room below ground level. This does not preclude installation into rooms which are basements with respect to one side of the building, but open to ground level on the opposite side.

Failure to install appliances correctly is dangerous and could lead to prosecution.

After installation make sure all connections are gas sound.

Commissioning

Pressure settings:

Natural Gas - 1.0 kPa Propane - 2.75 kPa

Before leaving - check all connections for gas leaks using soap and water. DO NOT use a naked flame for detecting leaks. Ignite all burners individually and concurrently to ensure correct operation of gas valves, burners and ignition. Turn gas taps to LOW flame position and observe stability of the flame for each burner both individually and concurrently. When satisfied with the hotplate please instruct the user on the correct method of operation. In case the appliance fails to operate correctly after all checks have been carried out, refer to the authorised service provider in your area.

Technical Data - Notes

Type of gas:

Please see data badge your for specified gas type.

Never attempt to convert an appliance - unless the data badge states that you can.

Burner Aeration: Fixed

Pressure setting: Natural Gas - 1.0 kPa
Propane - 2.75 kPa

Electrical supply: 220 - 240V ~ 50Hz

Countries of destination: **AUS**

Injectors used (hotplate)

Size	Natural Gas	LP gas
Small	82	50
Medium	118	70
Large	142	87
Wok	138 & 72	87 & 35

To convert the hotplate burners

- Remove the pan supports
- Remove the burner caps and burner heads
- Unscrew the existing injectors from the hotplate burner bowls
- Replace with the injectors supplied in the conversion kit as detailed in the table.

Note: when converting the wok burner, it is necessary to replace the two injectors, the inner and outer. The outer injector is visible on removal of the cover plate.

To convert the gas tap bypass screws

- Remove the hotplate control knobs springs and bezels
- Using a small flat bladed screwdriver, each bypass screw can be accessed via the hole in the inner fascia panel
- NG to LP - Turn each bypass screw fully clockwise until it stops.
Do not over tighten
- Refit the control bezels, springs and control knobs.
- Add the label stating "ONLY FOR USE WITH PROPANE GAS" next to the gas inlet.

Technical Data - Notes

Fuel Type	Hotplate Burner / Element	Nominal Rate Q_n
Natural Gas	Hob - small Hob - medium x 2 Hob - Large Hob - wok Total heat input ●5 burners	3.2MJ/h 6.5MJ/h 9.5MJ/h 10.9MJ/h 36.6MJ/h
LP Gas	Hob - small Hob - medium x 2 Hob - Large Hob - wok Total heat input ●5 burners	3.2MJ/h 6.5MJ/h 9.5MJ/h 10.9MJ/h 36.6MJ/h

Fuel Type	Multifunction oven	Fanned oven	Dual Variable grill	Oven lamps
Electric @ 230V	2.3kW	2.3kW	2.6kW	25W each
Appliance size		900		
Maximum load		2740W (Gourmet)		

Contact Us

Calling for a service

If you should experience any problems with your cooker please contact your retailer or place of purchase.

Important note:

Service work is to be conducted by authorised persons only. It is also advisable that your cooker is checked regularly and maintained in good condition. An annual maintenance is recommended.

Always check the instruction book before calling a service agent to make sure you have not missed anything.

Glen Dimplex Australia Pty Ltd Customer Care:

Tel: 1-300-556-816

Before you contact a service agent, make sure that you have the following information to hand:

Model Number

Serial Number

Date of Purchase

Postcode



Glen Dimplex Australia Pty Ltd, Unit 2, 205 Abbotts Road, Dandenong,
South Victoria 3175, Australia

e-mail: sales@glendimplex.com.au


web: www.glendimplex.com.au

08 27414 02 © 05.2009

Dual Fuel Range

Model Names: Belling Gourmet 900DF-AU

Wiring colour code: Bk - Black, Bn - Brown, Bu - Blue, Gn - Green, Or - Orange, R - Red, W - White, Y - Yellow.

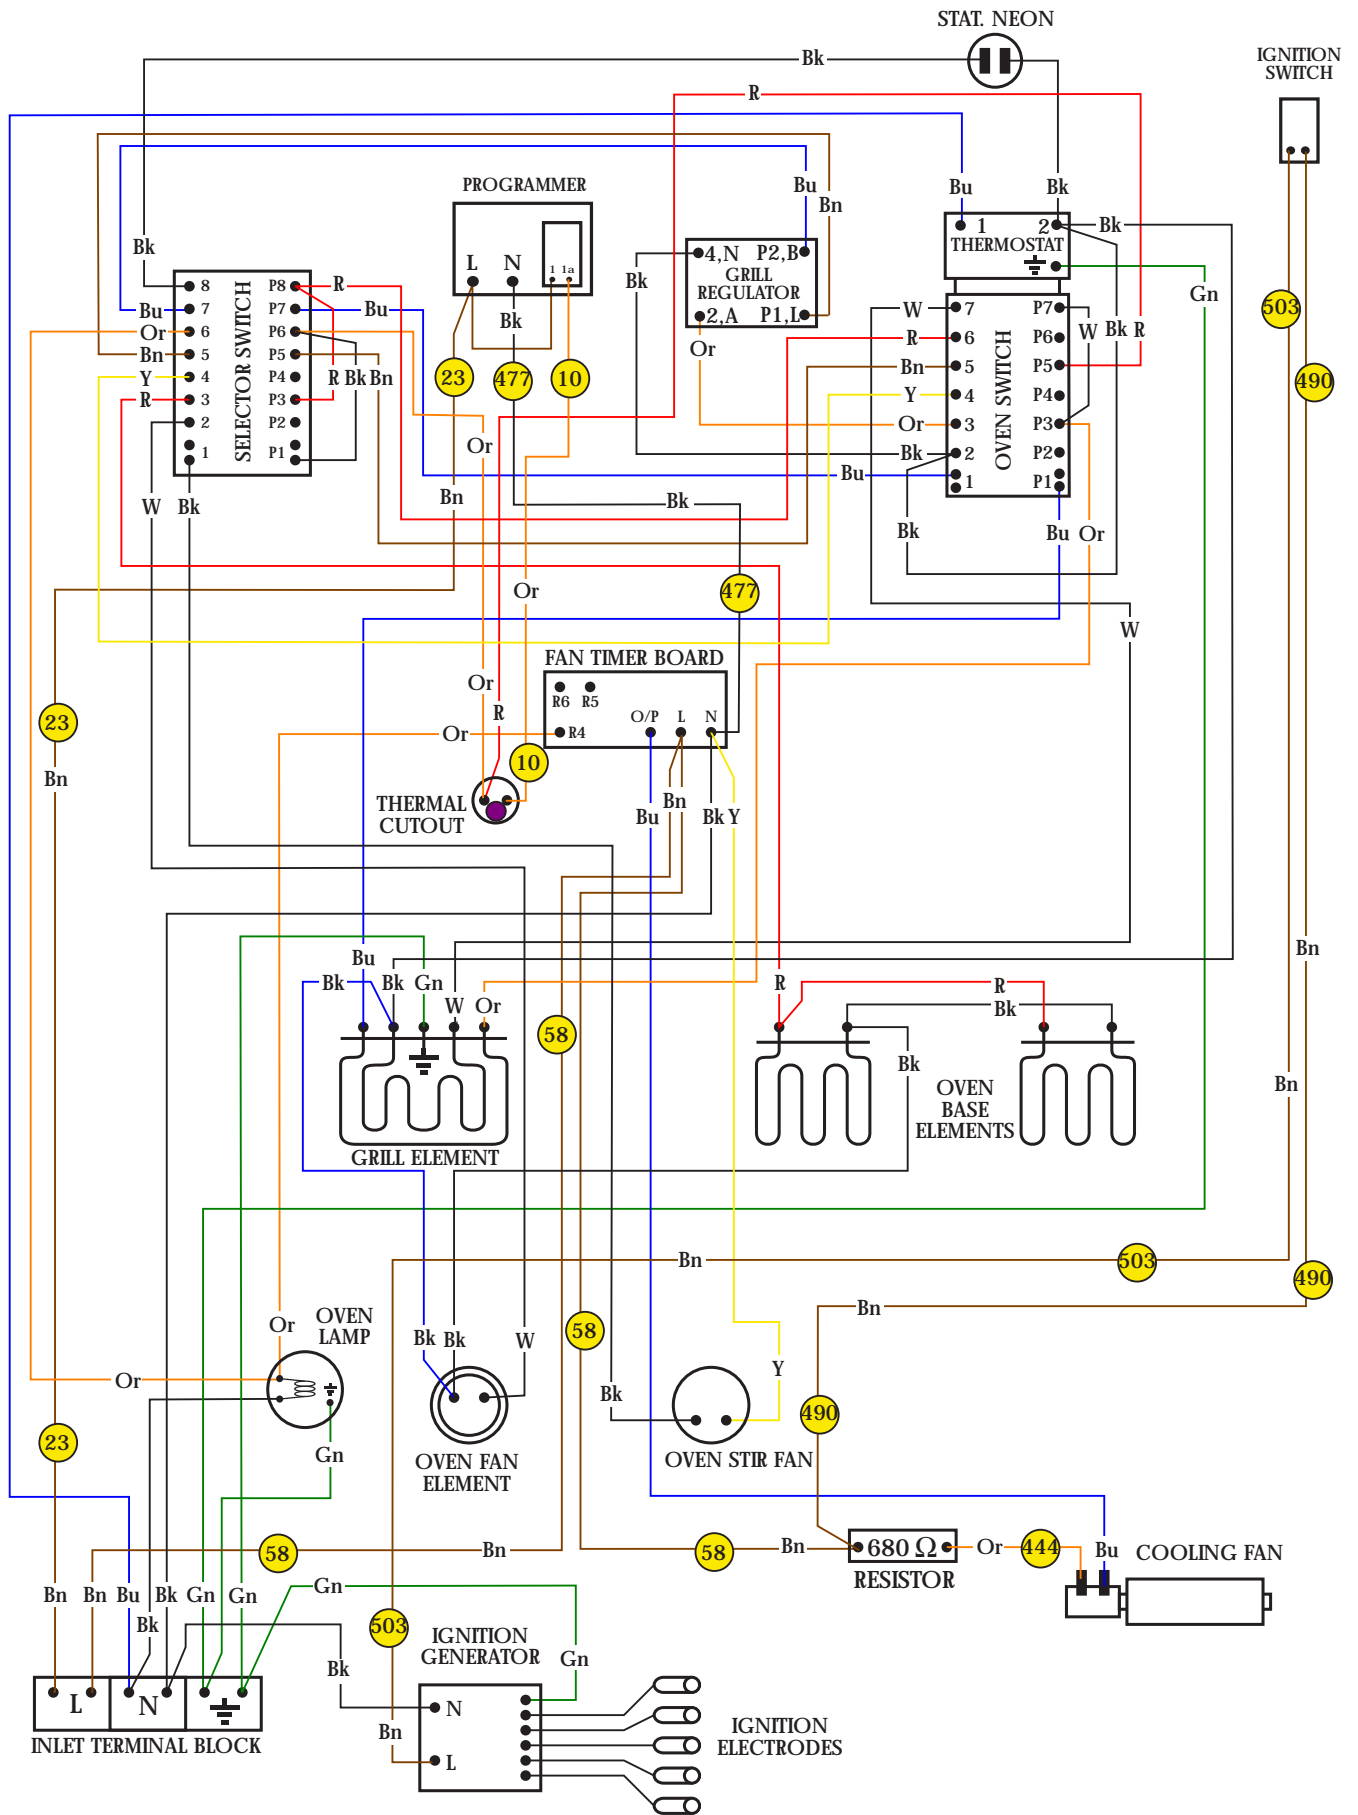

● - LINK WIRES

PRODUCT: BELLING Gourmet 900DF AU Sta
 COLOUR: Stainless Steel
 CODE: 444449413
 ISSUE:
 DATE:

Range



Key	Product	Product Description	TCO	Replace	Date	Qty
	073107664	LABELS be rg 90df-au				1
0424	082741402	HANDBOOK Belling DF-AU				1
0522	012860208	KIT conversion rg lpg aus gour				1
	073107502	SIDE PANELS gourmet sta				1
	502209904	OUTERSIDE rh				1
0585	502209905	OUTERSIDE lh				1
	073107019	WIRING rg 90 df gour au				1
	081798800	Terminal block				1
0478	081150200	GENERATOR ignition DG111 KB				1
	073106542	FACIA AES rg st 90df gour sta				1
0032	082566100	BEZEL switch Blk				1
0113	081718473	BUTTON timer lt satin nickel				3
0114	081811301	BUTTON switch				1
0114	082813000	BUTTON switch Sta				1
0319	012984500	FACIA be gour 90df sta				1
0524	082585803	KNOB elec mf selector Sta				1
0527	082585800	KNOB hotplate Sta				5
0530	082585804	KNOB elec grill Sta				1
0532	082585802	KNOB elec thermostat Sta				1
	073105523	MAIN DOOR AES rg 90 be sta				1
0247	013110000	DOOR assy 90 main be sta				1
0428	012816303	HANDLE assy 55 st sta				1
0522	013010102	KIT top door assy fs				1
0728	080215652	SCREW m4x20 csk				2
0790	082557600	SPACER bush door handle				2
	073105010	HOB AES 90 g gour sta				1
0307	082248300	ENDCAP front h/p 900range KB				2
0308	082248301	ENDCAP rear h/p 900range KB				2
0472	502245104	HOTPLATE 90 gas fsd sta				1
0472A	502204502	HOTPLATE SIDE 90 sta				2
0614	082244600	PANSUPPORT cast gour				2
0615	082244601	PANSUPPORT cast gour wok				1
0728	080180676	SCREW m6x30 pp mc				4
	073104816	FACIA MECH rg 90 df prog				1
0545	082964901	LENS neon				1
0574	082964900	NEON lamp assembly				1
0878	081811101	SWITCH ignition E2009				1
0917	082595701	TIMER programmer LED143/001				1
	073104405	FURNITURE MAIN 90 pan stop				1
0182	082101600	CLIP tubular				2
0411	602517700	GRILLPAN std mot				1
0420	082917304	GUIDE shelf large lh 1978				1
0421	082917305	GUIDE shelf large rh 1979				1
0427	082283705	HANDLE grill pan 1041				1
0749	082917404	SHELF oven 900 wide				2
0967	082518800	WIRE TRIVET grill pan 1130				1
	073104019	MAIN DOOR MECH rg 90				1
0398	082871511	GLASS inner rg 90 gou				1
0455	083053800	HINGE drop down door				2
0835	082572200	HINGE COUNTER SUPPORT				2
	073104007	MAIN DOOR MECH rg 90 clad	25/03/10			1
0398	082871511	GLASS inner rg 90 gou			99/99/99	1
0455	082560803	HINGE door 750			99/99/99	2
0835	082572200	HINGE COUNTER SUPPORT			99/99/99	2

PRODUCT: BELLING Gourmet 900DF AU Sta
 COLOUR: Stainless Steel
 CODE: 444449413
 ISSUE:
 DATE:

Range



Key	Product	Product Description	TCO	Replace	Date	Qty
	073103814	HOB MECH 90 g gour au				1
0083	082519304	BURNERBOWL aux (injector 0.82)				1
0084	082519406	BURNERBOWL s/rapid (inj 1.18)				2
0085	082519506	BURNERBOWL rapid (inj 1.42)				1
0086	012546709	BURNER wok assy ng aus				1
0086	082546709	BURNERBOWL wok 1.38				1
0090	082957803	BURNERCAP aux(serie3) blk matt				1
0091	082957804	BURNERCAP semi(serie3)blk matt				2
0092	082957805	BURNERCAP rap (serie3)blk matt				1
0094	082546901	BURNERCAP wok inner-matt				1
0096	082547001	BURNERCAP wok outer-matt				1
0102	082957700	BURNERSKIRT aux (serie 3)				1
0103	082957701	BURNERSKIRT semi (serie 3)				2
0104	082957702	BURNERSKIRT rapid (serie 3)				1
0105	082546801	BURNERSKIRT wok				1
0178	082520000	CLIP spring Defendi				5
0279	082547100	ELECTRODE wok 900mm long lead				1
0281	082532601	ELECTRODE 900mm DEL702				4
0580	082938800	NUT flanged locking				4
0736	081423974	SEAL tap 4mm COPRECI F3862-04				5
0887	082964504	TAP rapid 0.45 bp lh set 65-70				1
0889	082964505	TAP aux 0.32 bp lh set 52-54A				1
0890	082964605	TAP wok 0.80 bp rh set 116-127				1
0894	082964604	TAP semi 0.39 bp rh set 52-54A				2
0906	082965800	thermocouple wok				1
0909	082938701	Thermocouple 500mm long				2
0910	082938700	Thermocouple 300mm short				2
	073109900	LOWER PANEL AES rg 90 sta				1
0601	012985600	PANEL lower assy rg 90 sta				1
	073103416	MAIN OVEN rg 90 df fan light				1
0108	081586001	BUSH cavity support				2
0210	602598705	FANCOVER 60 flue mot				1
0210	602598701	FANCOVER 60 mot				1
0287	082971202	Element grill 20.35735.000				1
0293	082971600	Element oven bott 20.35725.000				2
0293	082128702	ELEMENT oven bottom KB				2
0294	082971300	Element oven fan 20.35718.000				1
0315	081581800	FAN oven circulation				1
0448	602129303	COVER grill element 90 mot				1
0467	082852401	HOLDER phial				1
0544	926016900	LAMP assy oven				1
0706	082590900	REGULATOR energy MPA-V02SV				1
0728	080180676	SCREW m6x30 pp mc				2
0734	081797200	SEAL main ov 550HL KB				1.8
0876	082558100	SWITCH t/ov 42.03000.017				1
0878	082348400	SWITCH selector 42.00000.024				1
0912	082558001	THERMOSTAT EGO 55.17069.090				1
	073103217	CHASSIS rg 90 df gour				1
00783	082360801	SLEEVE silicone (black)				1
0267	502194203	DUCT air 90				1
0314	082203600	FAN Tangential				1
0349	081830501	FOOT levelling long				4
0557	082044000	LOCKNUT foot				4
0622	082814400	PCB fan control DM 00200				1
0697	562044135	PLINTH 90 gourmet blk				1
0710	082456200	RESISTOR HTR CL15B 680RJ				1
0880	082808901	SWITCH thermal L100c				1
0941	503063500	TRAY spillage gourmet 90df				1
0941	502275600	TRAY spillage 90				1

PRODUCT: BELLING Gourmet 900DF AU Sta
 COLOUR: Stainless Steel
 CODE: 444449413
 ISSUE:
 DATE:

Range



Key	Product	Product Description	TCO	Replace	Date	Qty
032	082566100	BEZEL switch Blk	28/09/09			1
083	082519304	BURNERBOWL aux (injector 0.82)	28/09/09			1
084	082519406	BURNERBOWL s/rapid (inj 1.18)	28/09/09			2
085	082519506	BURNERBOWL rapid (inj 1.42)	28/09/09			1
086	012546709	BURNER wok assy ng aus	28/09/09			1
0086	082546707	BURNERBOWL wok ng(63/121) tc	99/99/99			1
0496	082525618	INJECTOR-138(NG)	99/99/99			1
0496	082525617	INJECTOR-72(NG)	99/99/99			1
090	082957803	BURNERCAP aux(serie3) blk matt	28/09/09			1
091	082957804	BURNERCAP semi(serie3)blk matt	28/09/09			2
092	082957805	BURNERCAP rap (serie3)blk matt	28/09/09			1
094	082546901	BURNERCAP wok inner-matt	28/09/09			1
096	082547001	BURNERCAP wok outer-matt	28/09/09			1
102	082957700	BURNERSKIRT aux (serie 3)	28/09/09			1
103	082957701	BURNERSKIRT semi (serie 3)	28/09/09			2
104	082957702	BURNERSKIRT rapid (serie 3)	28/09/09			1
105	082546801	BURNERSKIRT wok	28/09/09			1
108	081586001	BUSH cavity support	28/09/09			2
113	081718473	BUTTON timer lt satin nickel	28/09/09			3
114	081811301	BUTTON switch	28/09/09			1
178	082520000	CLIP spring Defendi	28/09/09			5
182	082101600	CLIP tubular	28/09/09			4
210	602598701	FANCOVER 60 mot	28/09/09			1
247	012988800	DOOR assy 90 main be sta	28/09/09			1
267	502194203	DUCT air 90	28/09/09			1
279	082547100	ELECTRODE wok 900mm long lead	28/09/09			1
281	082532601	ELECTRODE 900mm DEL702	28/09/09			4
287	082971202	Element grill 20.35735.000	28/09/09			1
287	081561404	ELEMENT grill dual 2.9kw	19/01/09			1
293	082128702	ELEMENT oven bottom KB	28/09/09			2
294	082971300	Element oven fan 20.35718.000	28/09/09			1
307	082248300	ENDCAP front h/p 900range KB	28/09/09			2
308	082248301	ENDCAP rear h/p 900range KB	28/09/09			2
314	082203600	FAN Tangential	28/09/09			1
315	081581800	FAN oven circulation	28/09/09			1
319	702984500	FACIA be gour 90df sta	28/09/09			1
349	081830501	FOOT levelling long	28/09/09			4
398	082871511	GLASS inner rg 90 gou	28/09/09			1
411	602517700	GRILLPAN std mot	28/09/09			1
411	082517700	GRILL PAN (vit enamel) Blk	23/03/09			1
420	082917304	GUIDE shelf large lh 1978	28/09/09			1
421	082917305	GUIDE shelf large rh 1979	28/09/09			1
424	082741402	HANDBOOK Belling DF-AU	28/09/09			1
427	082283705	HANDLE grill pan 1041	28/09/09			1
428	012816303	HANDLE assy 55 st sta	28/09/09			1
0428	082586005	HANDLE tube 458crs Sta	99/99/99			1
0432	082586000	HANDLE endcasting Sta	99/99/99			2
448	602129303	COVER grill element 90 mot	28/09/09			1
0448	502129303	COVER grill element 90	99/99/99			1
455	082560803	HINGE door 750	28/09/09			2
467	082852401	HOLDER phial	28/09/09			1
472	502245104	HOTPLATE 90 gas fsd sta	28/09/09			1
472A	502204502	HOTPLATE SIDE 90 sta	28/09/09			2
478	081150200	GENERATOR ignition DG111 KB	28/09/09			1

PRODUCT: BELLING Gourmet 900DF AU Sta
 COLOUR: Stainless Steel
 CODE: 444449413
 ISSUE:
 DATE:


Range



Key	Product	Product Description	TCO	Replace	Date	Qty
5044	082606772	BELLING BADGE BBELLING013	28/09/09			1
522	012860208	KIT conversion rg lpg aus gour	28/09/09			1
0493	082525613	INJECTOR 0.35 (98-011-4969)	99/99/99			1
0494	082525612	INJECTOR 0.87 (96-011-3020)	99/99/99			2
0495	082525610	INJECTOR 0.70	99/99/99			3
0496	082525608	INJECTOR 0.50 (94-011-1907)	99/99/99			2
524	082585803	KNOB elec mf selector Sta	28/09/09			1
527	082585800	KNOB hotplate Sta	28/09/09			5
530	082585804	KNOB elec grill Sta	28/09/09			1
532	082585802	KNOB elec thermostat Sta	28/09/09			1
544	926016900	LAMP assy oven	28/09/09			1
545	082964901	LENS neon	28/09/09			1
574	082930600	NEON SL332250010T	28/09/09			2
574	082964900	NEON lamp assembly	28/09/09			1
580	082938800	NUT flanged locking	28/09/09			4
585	502209905	OUTERSIDE lh	28/09/09			1
601	502985600	PANEL lower sta	28/09/09			1
614	082244600	PANSUPPORT cast gour	28/09/09			2
615	082244601	PANSUPPORT cast gour wok	28/09/09			1
622	082814400	PCB fan control DM 00200	28/09/09			1
697	562044135	PLINTH 90 gourmet blk	28/09/09			1
706	082590900	REGULATOR energy MPA-V02SV	28/09/09			1
710	082456200	RESISTOR HTR CL15B 680RJ	28/09/09			1
713	082571202	RETAINER inner glass top	28/09/09			2
713	082571201	RETAINER inner glass rh bottom	28/09/09			1
713	082571200	RETAINER inner glass lh bottom	28/09/09			1
728	080180676	SCREW m6x30 pp mc	28/09/09			4
728	080180676	SCREW m6x30 pp mc	28/09/09			2
734	081797200	SEAL main ov 550HL KB	28/09/09			1.8
736	081423974	SEAL tap 4mm COPRECI F3862-04	28/09/09			5
749	082917404	SHELF oven 900 wide	28/09/09			2
790	082828803	SPACER handle 4.9mm long	28/09/09			2
835	082572200	HINGE COUNTER SUPPORT	28/09/09			2
876	082558100	SWITCH t/ov 42.03000.017	28/09/09			1
878	081811101	SWITCH ignition E2009	28/09/09			1
878	082348400	SWITCH selector 42.00000.024	28/09/09			1
880	082808901	SWITCH thermal L100c	28/09/09			1
887	082964504	TAP rapid 0.45 bp lh set 65-70	28/09/09			1
889	082964505	TAP aux 0.32 bp lh set 52-54A	28/09/09			1
890	082964605	TAP wok 0.80 bp rh set 116-127	28/09/09			1
894	082964604	TAP semi 0.39 bp rh set 52-54A	28/09/09			2
906	082965800	thermocouple wok	28/09/09			1
909	082938701	Thermocouple 500mm long	28/09/09			2
910	082938700	Thermocouple 300mm short	28/09/09			2
912	082558001	THERMOSTAT EGO 55.17069.090	28/09/09			1
917	082595701	TIMER programmer LED143/001	28/09/09			1
941	502275600	TRAY spillage 90	28/09/09			1
967	082518800	WIRE TRIVET grill pan 1130	28/09/09			1


BELLING GOURMET 90DF-AU ISSUE DATE -15-01-09

DUAL FUEL RANGE HOTPLATE ASSEMBLY.

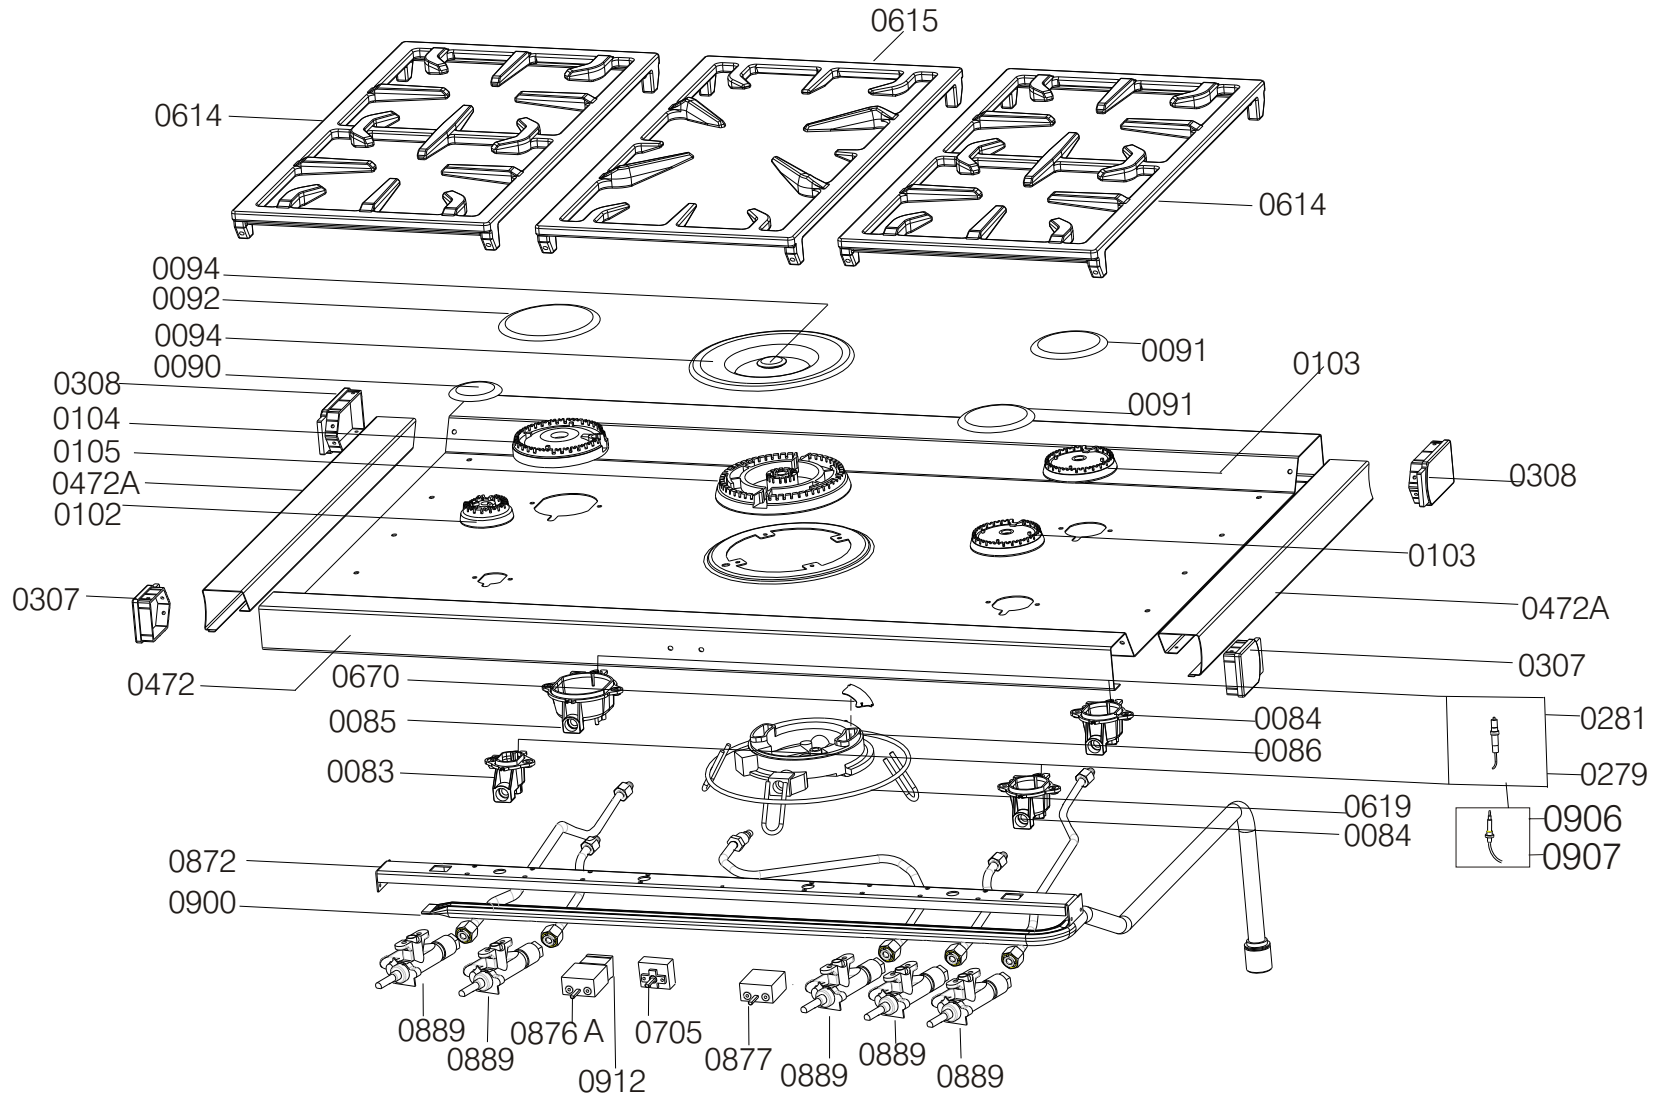


BELLING GOURMET 90DF - AU

FASCIA - DOORS - KNOBS

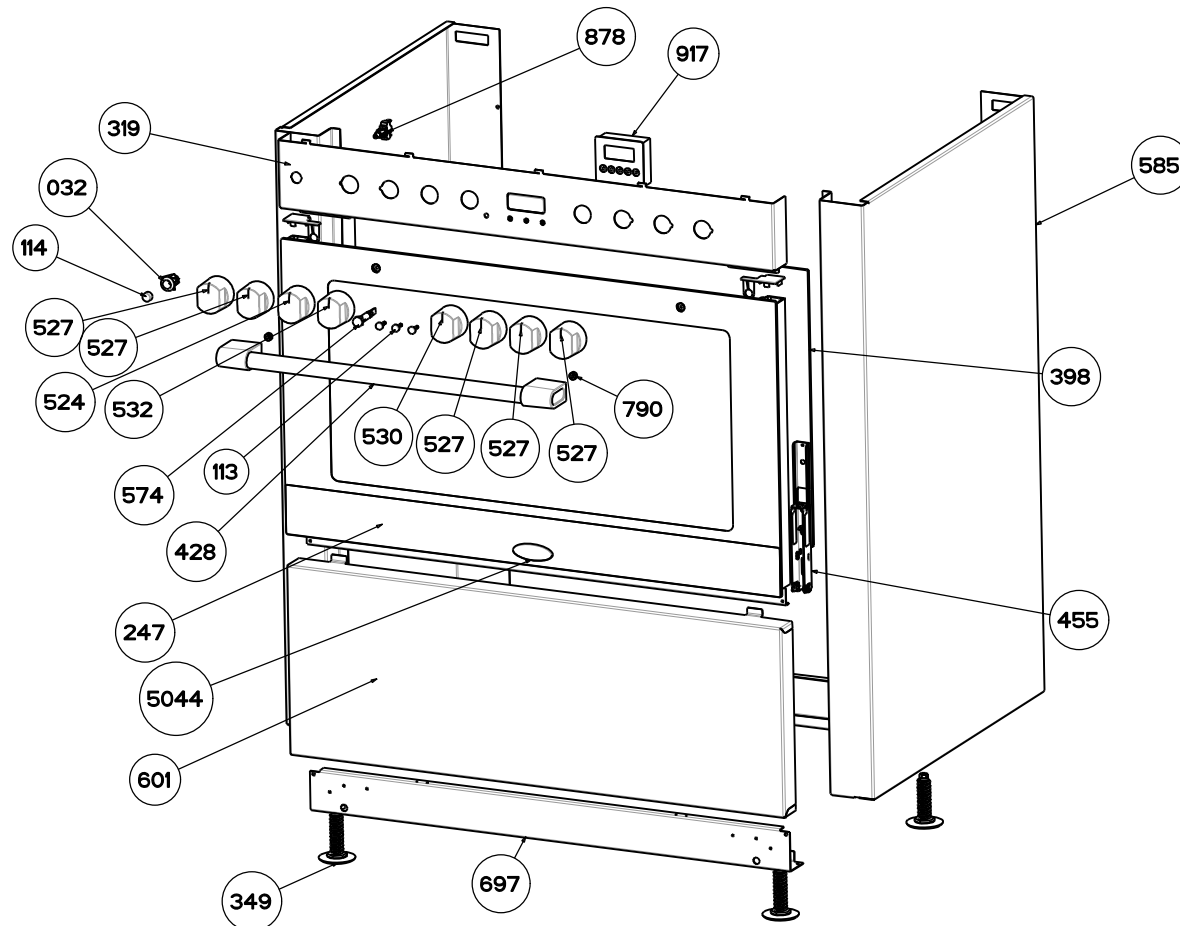

DUAL FUEL RANGE CAVITY ASSEMBLY

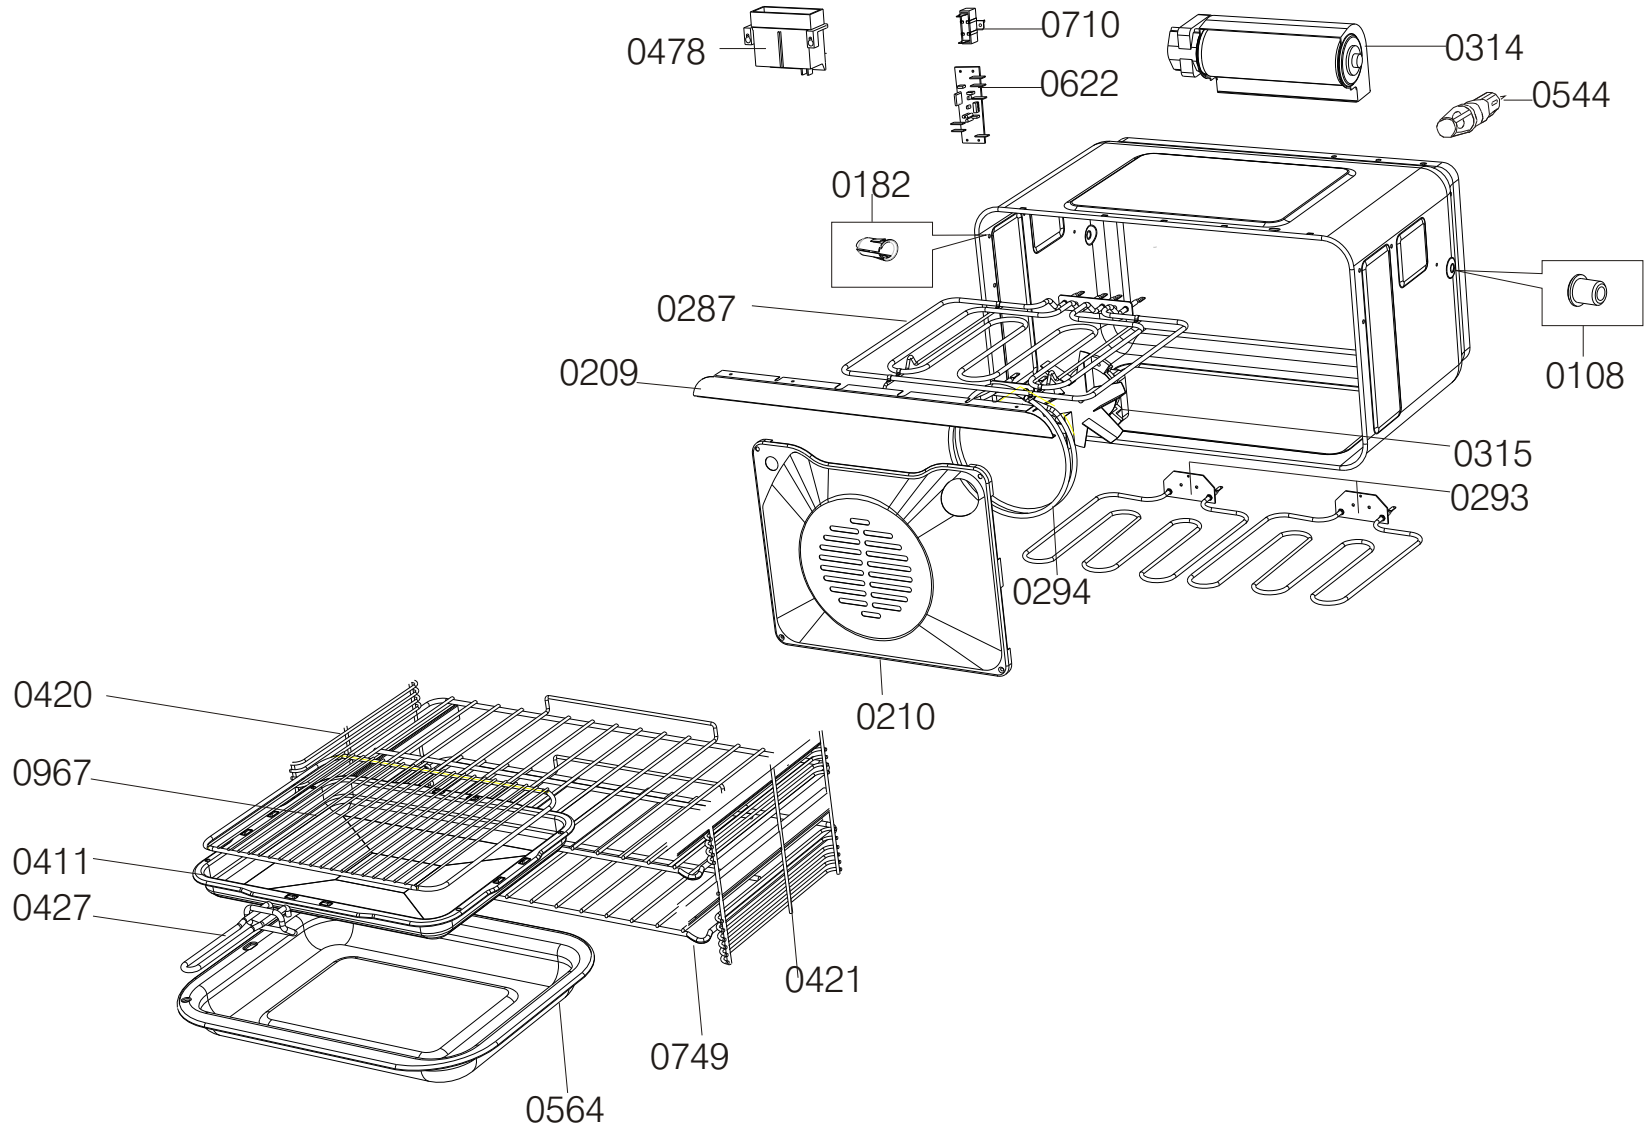



**GLEN DIMPLEX
AUSTRALIA PTY LTD**

BELLING

GOURMET 900 DF

**REPAIR
AND
MAINTAINANCE**


PROCEDURES



IMPORTANT

**BEFORE CARRYING
OUT ANY SERVICING
WORK ALWAYS
DISCONNECT FROM
THE ELECTRICAL
SUPPLY**

1) REMOVING THE MAIN OVEN DOOR

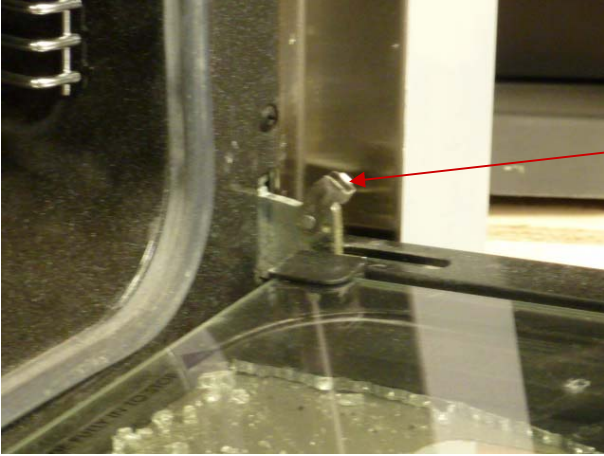

OPEN THE DOOR FULLY
RELEASE THE 2 CLIPS AND
PUSH FULLY BACK INTO
POSITION SHOWN
CLOSE DOOR TO REST
POSITION
AND LIFT TO REMOVE THE
DOOR AND HINGE
WHEN REPLACING ENSURE
THAT HINGES ARE FULLY
ENGAGED IN THE HINGE BUSH

2) REMOVING THE FACIA PANEL




REMOVE ALL CONTROL KNOBS
REMOVE 4X SCREWS BELOW
THE FACIA PANEL



PULL THE FACIA PANEL AWAY FROM THE BOTTOM AND SLIDE TO THE RIGHT TO DISENGAGE THE UPPER BRACKETS THAT LOCATE IN SLOTS ON THE UNDERSIDE OF THE HOTPLATE


3) REMOVAL OF THE HOTPLATE

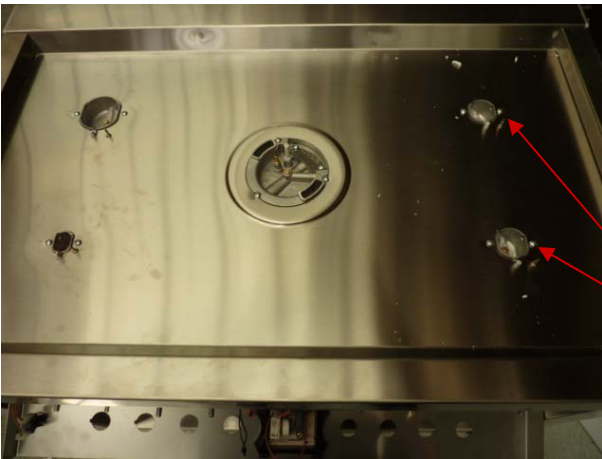

REMOVE ALL PAN SUPPORTS AND HOB BURNERS


FOLLOW STEP 2 AND REMOVE THE FACIA PANEL

REMOVE 11 X SCREWS SECURING THE BURNERS TO THE HOB TOP

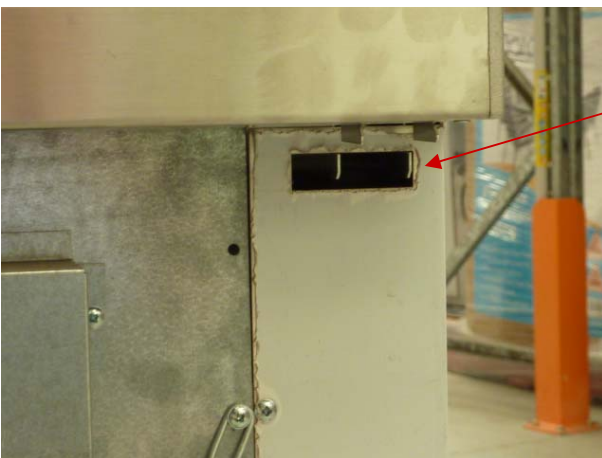

LIFT THE HOTPLATE FROM THE FRONT AND DISENGAGE FROM THE BRACKET AT THE REAR OF THE APPLIANCE


HOTPLATE REMOVED

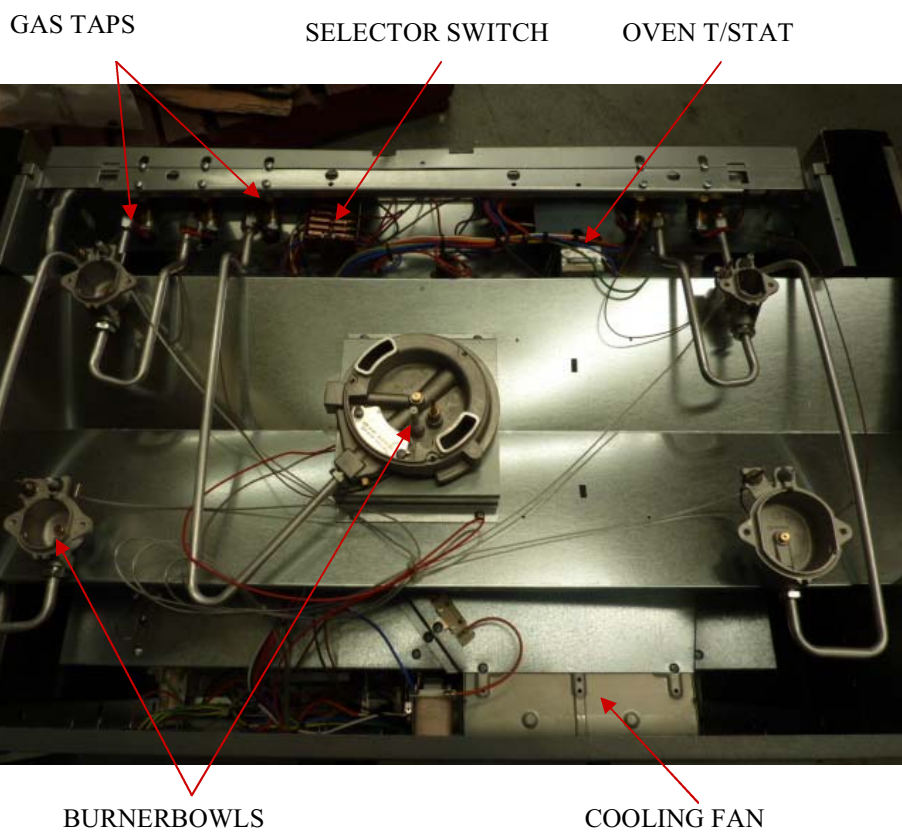

4) REMOVAL OF SIDE PANELS




REMOVE 2X SCREWS AT FRONT OF APPLIANCE AS SHOWN

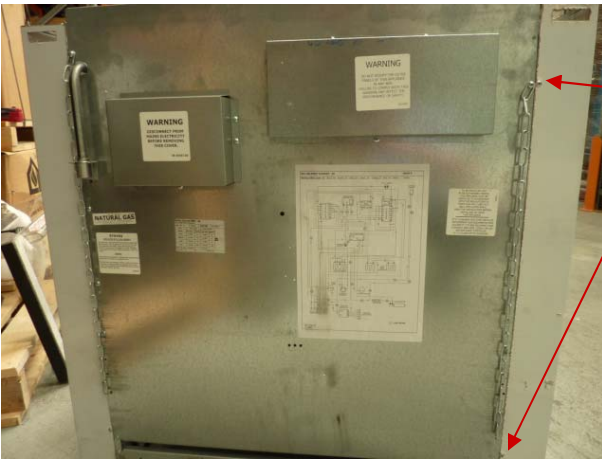

REMOVE 2X SCREWS FROM REAR OF APPLIANCE

REMOVE SIDE PANEL


5) REAR SERVICE PANEL

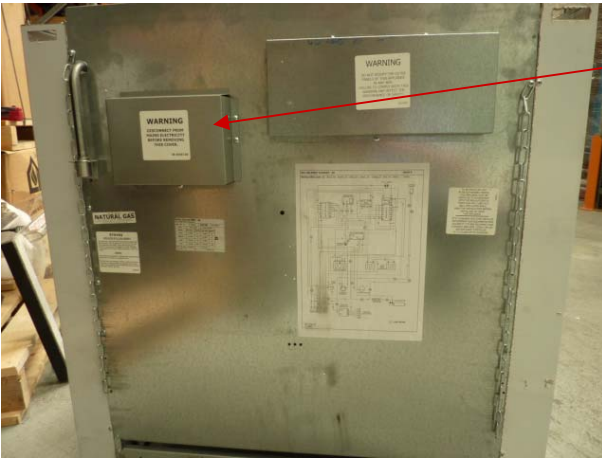

REMOVE THE IGNITION /
TERMINAL BOX COVER

REMOVE ALL SECURING
SCREWS
TO REMOVE COMPLETELY
DISCONNECT ALL WIRING FROM
THE IGNITION GENERATOR AND
TERMINAL BLOCK

REAR SERVICE PANEL REMOVED

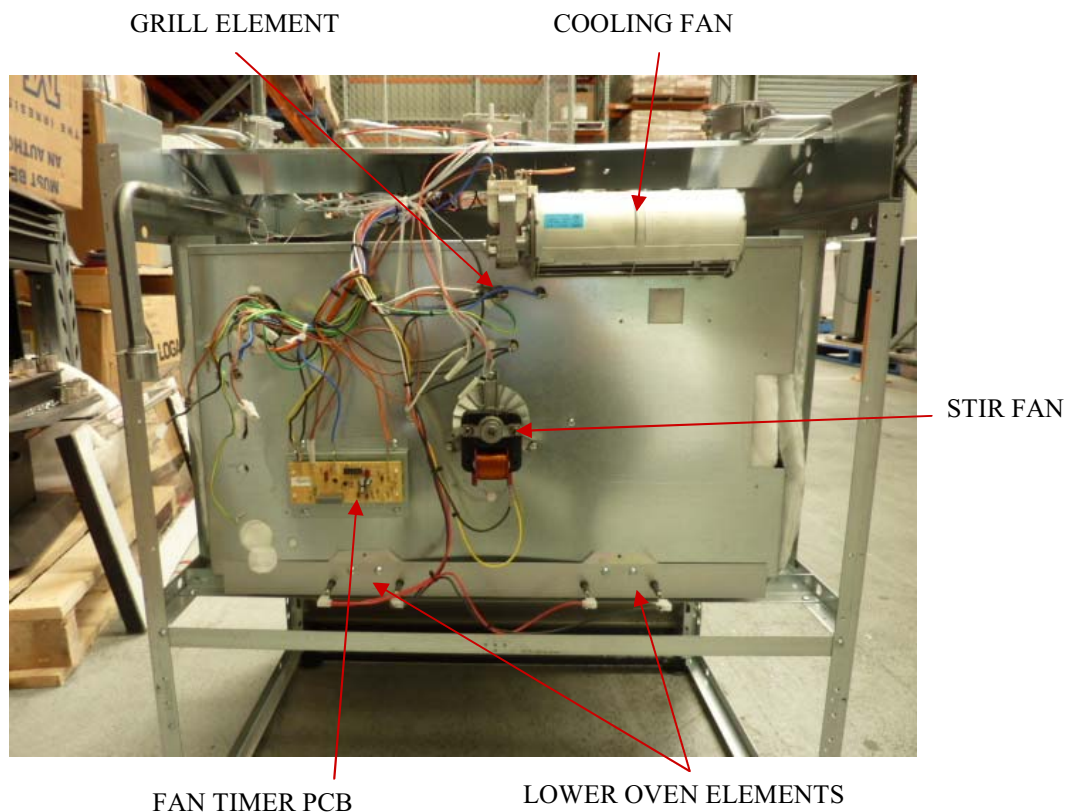

GRILL ELEMENT

COOLING FAN

STIR FAN

FAN TIMER PCB

LOWER OVEN ELEMENTS


REPLACEMENT OF COMPONENTS

A) ELECTRODES



FOLLOW STEP 2 AND 3 AND REMOVE THE HOTPLATE AND FACIA PANEL
 REMOVE ELCTRODE CLIP BY SQUEEZING TOGETHER AND PULLING TO REMOVE
 REMOVE ELECTRODE FROM BURNER BOWL AND IGNITION LEAD FROM IGNITIION GENERATOR
 ON REPLACING ALWAYS ENSURE THAT THE RUBBER WASHER IS REFITTED


B) HOB THERMOCOUPLES

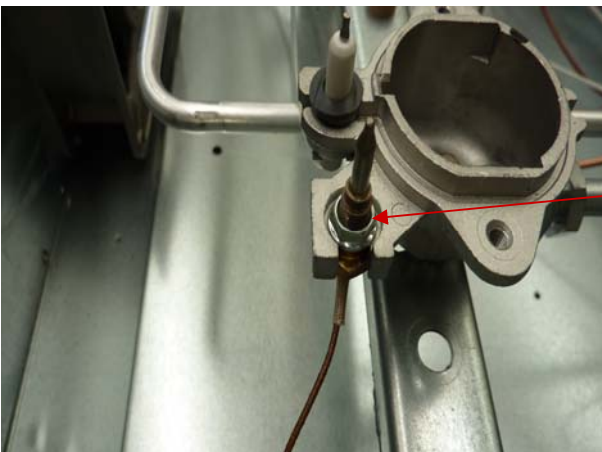

FOLLOW STEP 2 AND 3 AND REMOVE THE HOTPLATE AND FACIA PANEL
 REMOVE UPPER NUT USING A 7mm SPANNER
 REMOVE THE THERMOCOUPLE FROM THE BURNERBOWL AND GAS TAP

ON REPLACING ALWAYS ENSURE THAT THE RUBBER WASHER IS REPLACED TO REDUCE DISTURBANCE TO THE FLAME DUE TO THE COOLING FAN

C) GAS TAPS

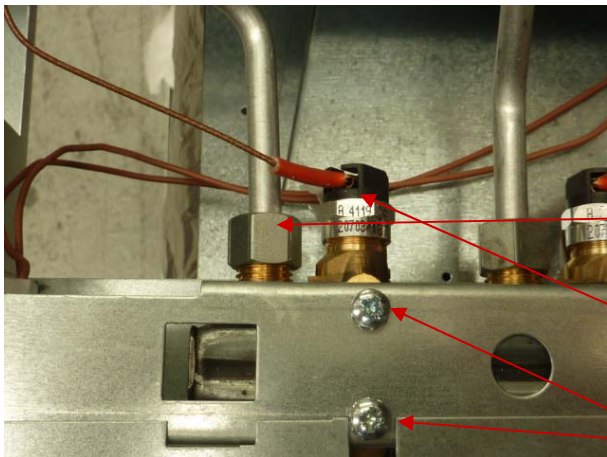

FOLLOW STEPS 2 AND 3 AND REMOVE THE FACIA PANEL AND HOTPLATE


UNDO BUNDY TUBE CONNECTION AND REMOVE

DISCONNECT THERMOCOUPLE

REMOVE 2 GAS TAP SECURING SCREWS AND REMOVE THE TAP

WHEN REPLACING TAP ALWAYS ENSURE THAT A NEW TAP WASHER IS FITTED (part number 081423974)

D) COOLING FAN

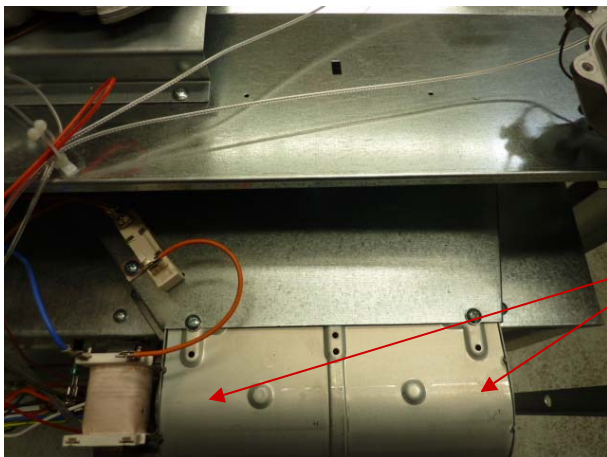


REMOVE THE FACIA/HOTPLATE AND REAR SERVICE PANEL

REMOVE THE 2X SCREWS AS SHOWN

PULL THE COOLING FAN FROM THE DUCTING AND DISCONNECT THE WIRING


ACCESS TO THE COOLING FAN FOR DIAGNOSTIC PURPOSES CAN BE GAINED BY REMOVING THE COVER PLATE ON THE REAR SERVICE PANEL

E) MAIN OVEN THERMOSTAT

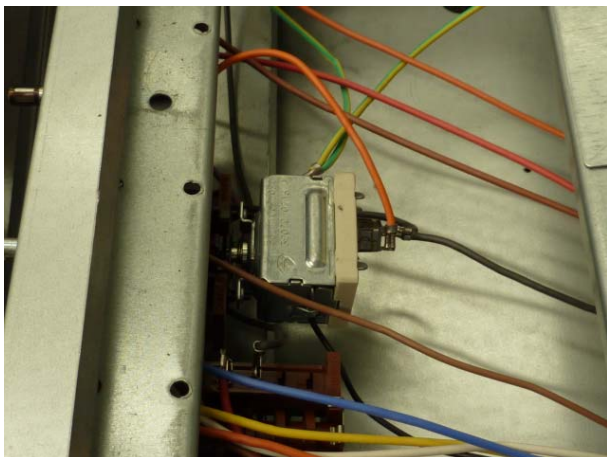


FOLLOW STEP 2 AND 3 AND REMOVE THE HOTPLATE AND FACIA PANEL

PULL THE THERMOSTAT FROM THE BACK OF THE SWITCHPACK AND REMOVE THE PHIAL FROM THE OVEN CAVITY AND PULL THROUGH

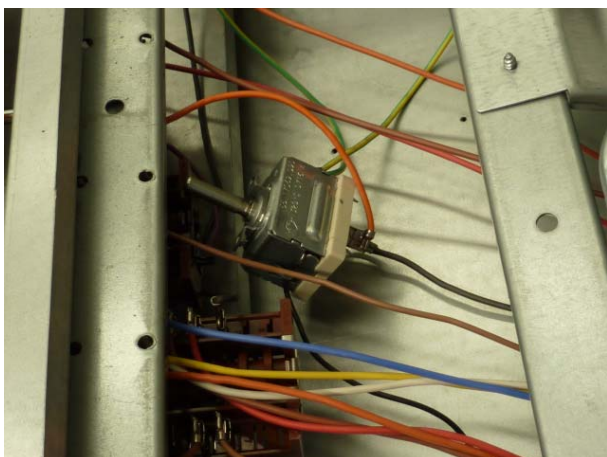


THERMOSTAT REMOVED

F) TIMER

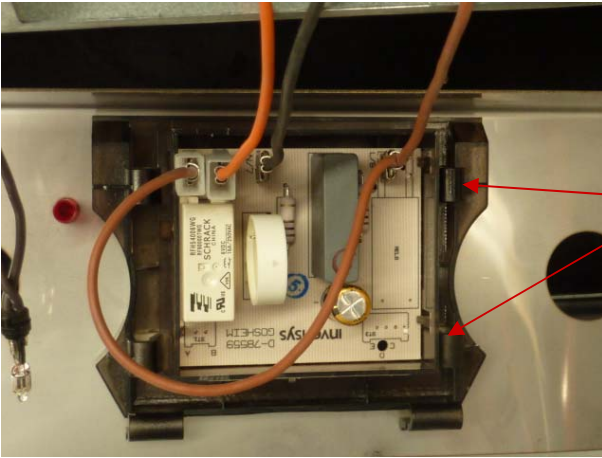


FOLLOW STEP 2 REMOVE FACIA PANEL

RELEASE TIMER FROM HOLDING CLIPS BY GENTLY PUSHING IN CLIPS WITH A SCREWDRIVER

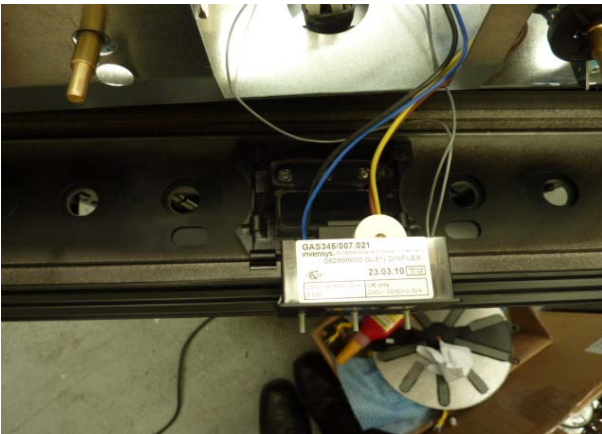


G) SELECTOR SWITCHES /REGULATORS

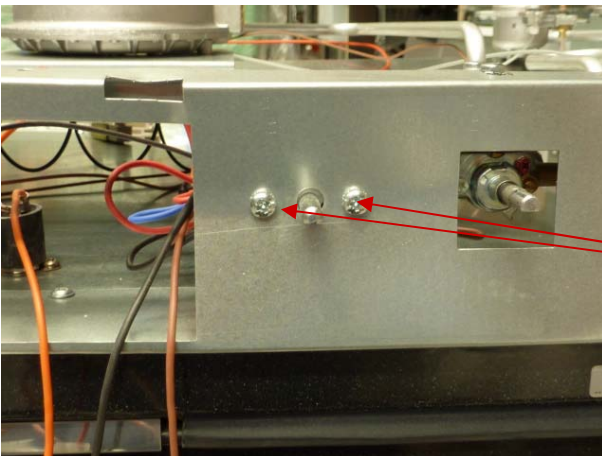


FOLLOW STEP 2/3 AND REMOVE THE HOTPLATE AND FACIA PANEL

REMOVE THE 2 SECURING SCREWS AND PULL THE SELECTOR SWITCH FROM THE APPLIANCE

H) IGNITION GENERATOR

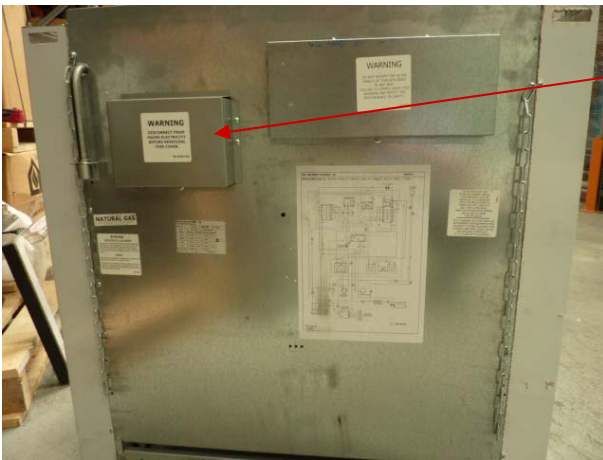


REMOVE THE IGNITION
GENERATOR/TERMINAL BOX
COVER

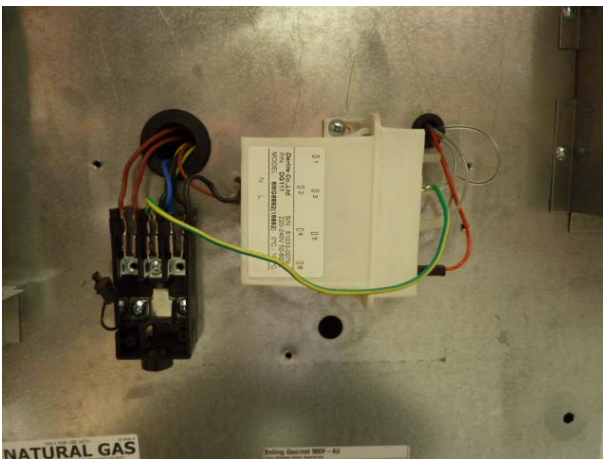

REMOVE THE 2 X SECURING
SCREWS

DISCONNECT THE WIRING AND
IGNITION LEADS


I) GRILL ELEMENT

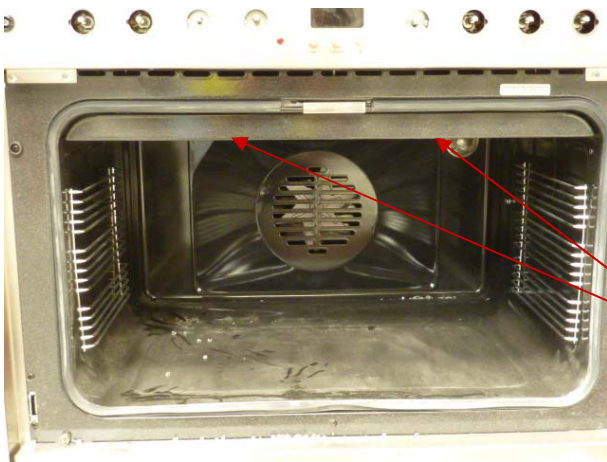

FOLLOW STEP 5 AND REMOVE THE REAR SERVICE PANEL

DISCONNECT WIRES

REMOVE GRILL ELEMENT GUARD BY LOOSENING 2 HIDDEN SCREWS (POSITIONS INDICATED) AND SLIDING OFF

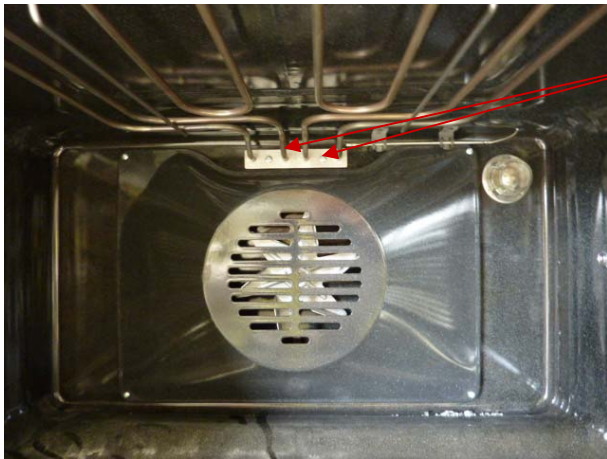

REMOVE THE 2 SCREWS SECURING THE ELEMENT BRACKET TO THE CAVITY AND PULL THE ELEMENT FORWARD TO REMOVE


J) OVEN FAN ELEMENT



FOLLOW STEP 5 AND REMOVE THE REAR SERVICE PANEL


REMOVE 4 X REAR FAN COVER SECURING SCREWS AND REMOVE THE FAN COVER

DISCONNECT WIRING

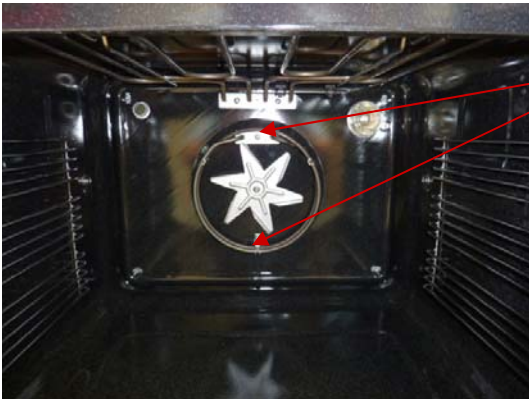

REMOVE THE 2 ELEMENT SECURING SCREWS AND PULL THE ELEMENT FORWARD INTO THE CAVITY


K) OVEN LOWER ELEMENT

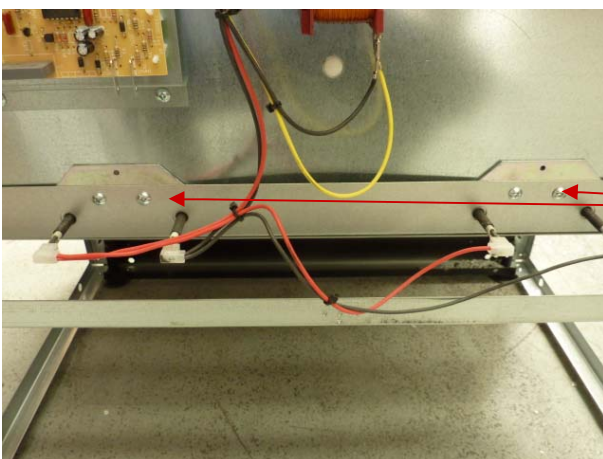

FOLLOW STEP 5 AND REMOVE THE REAR SERVICE PANEL

REMOVE THE 4 X SCREWS FOR THE ELEMENT RETAINING BRACKET AND WITHDRAW THE ELEMENTS


L) OVEN STIR FAN

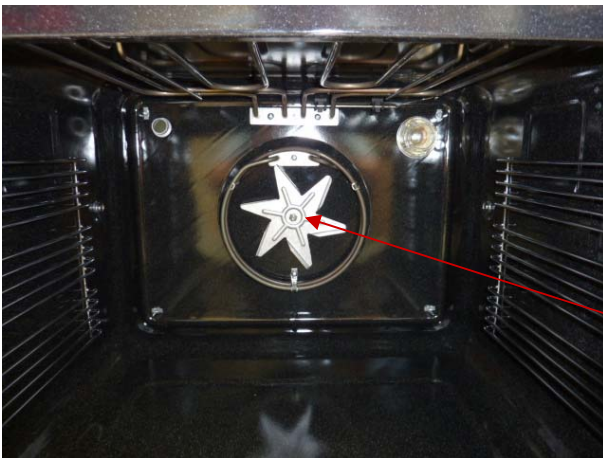

FOLLOW STEP 5 AND REMOVE THE REAR SERVICE PANEL

REMOVE THE REAR FAN COVER AS ON PREVIOUS PAGE


REMOVE THE FAN IMPELLOR N.B L/H THREAD NEEDS TO TURNED CLOCKWISE TO REMOVE

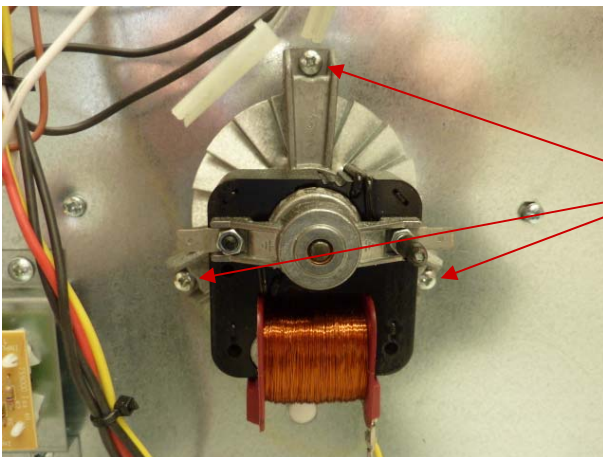

DISCONNECT WIRING FROM FAN

REMOVE 3 X STIR FAN SECURING SCREWS AND REMOVE FAN FROM THE REAR OF THE APPLIANCE

M) MAIN OVEN LIGHT FITTING

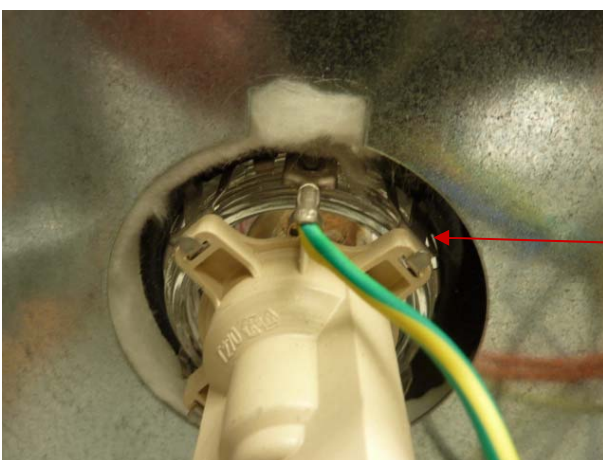

FOLLOW STEP 5 REMOVING REAR SERVICE PANEL
REMOVE GLASS LAMP COVER BY UNSCREWING
REMOVE THE EARTH LEAD
RELEASE 4 XCLIPS HOLDING LIGHT FITTING IN PLACE
REMOVE BY PULLING LIGHT FITTING FORWARD INTO CAVITY

TECHNICAL SPECIFICATIONS

NOMINAL RESISTANCES AT 20oC

GRILL ELEMENT INNER	31.3 Ω	2900W
OUTER.....	55.6 Ω	
 OVEN LOWER ELEMENT.....	 73.1 Ω	 700W
 OVEN FAN ELEMENT.....	 22.8 Ω	 2500W
 MAIN OVEN STIR FAN.....	 63.5 Ω	
 COOLING FAN.....	 1.81k Ω	

THERMAL CUT-OUTS

TOP.....	L100°C
REAR.....	L150°C

NOTE

ON THIS MODEL THE COOLING FAN WILL CONTINUE TO RUN FOR 10 MINUTES AFTER THE APPLIANCE HAS BEEN TURNED OFF



**GLEN DIMPLEX
AUSTRALIA PTY LTD**

BELLING


GOURMET

900DF


**FAULTFINDING
GUIDES**




Built-in Gas double oven Main oven not working

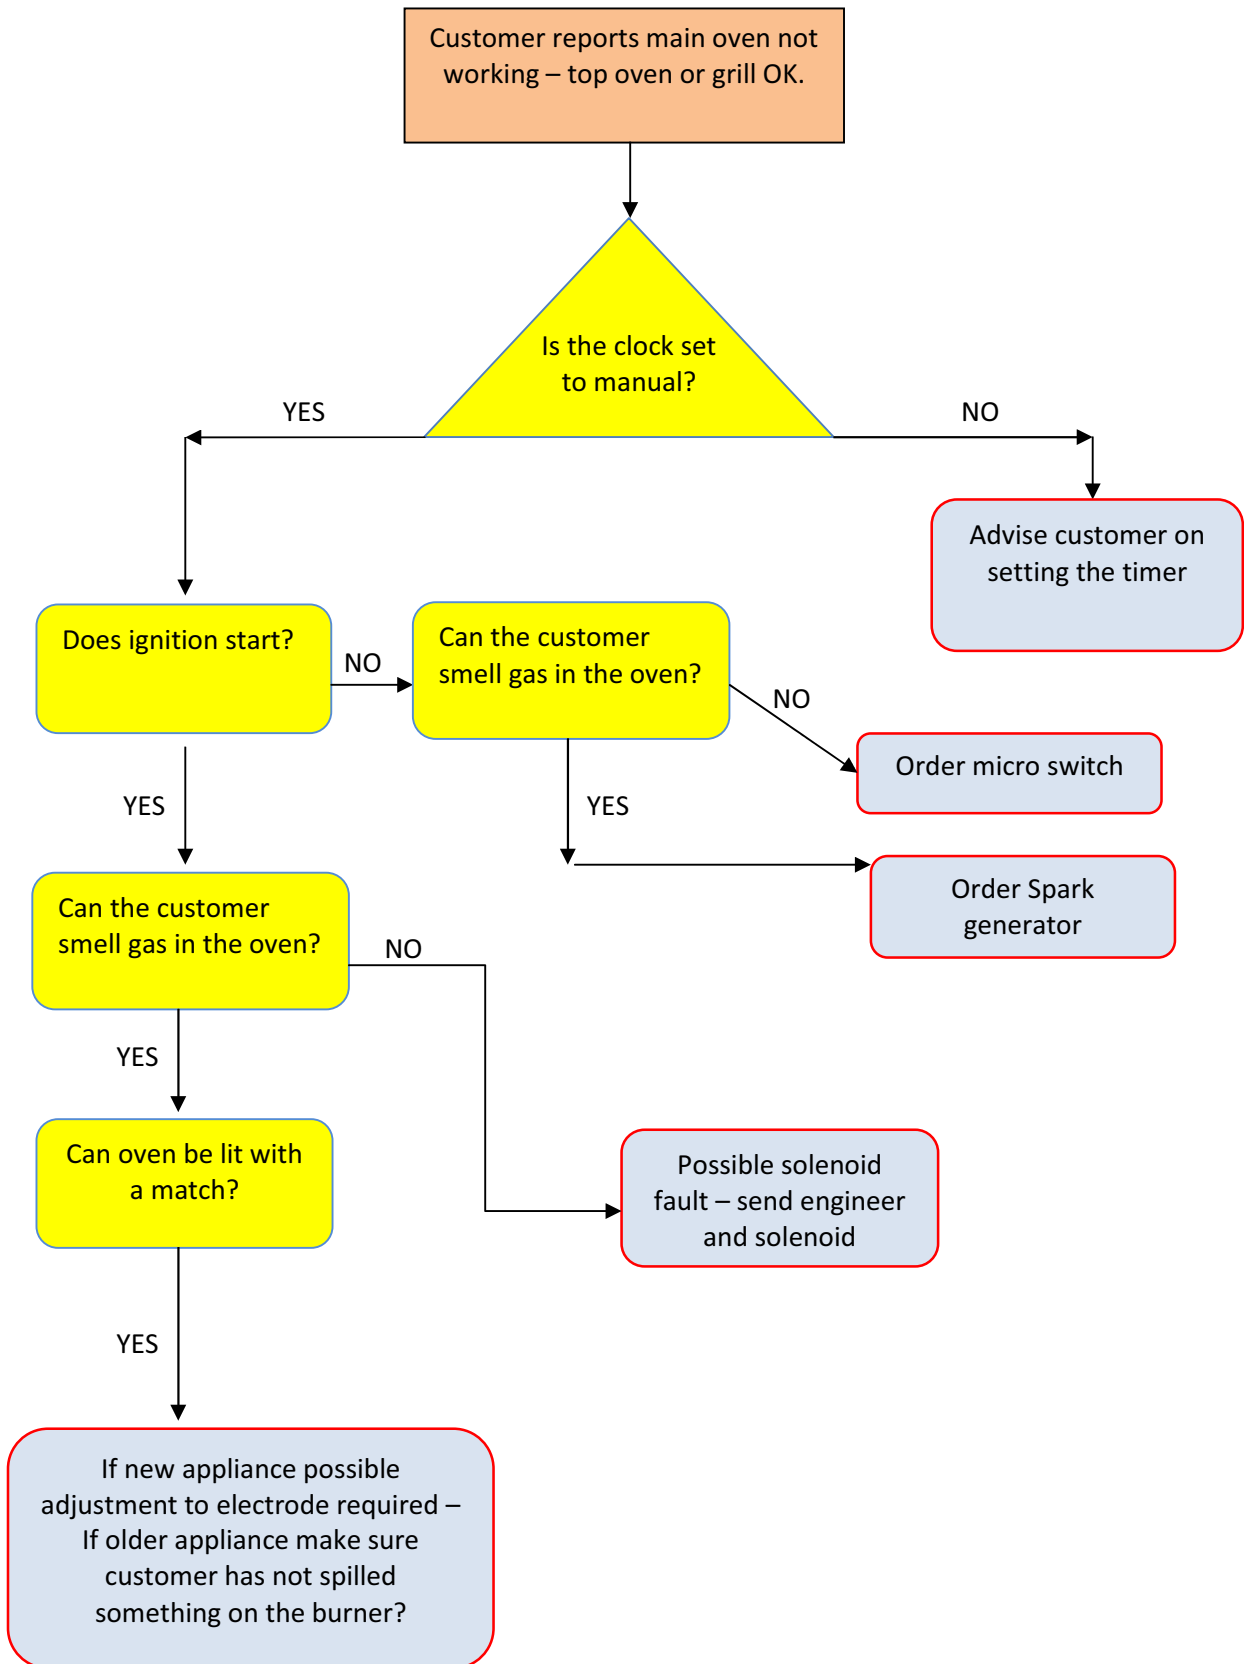


Top oven not working

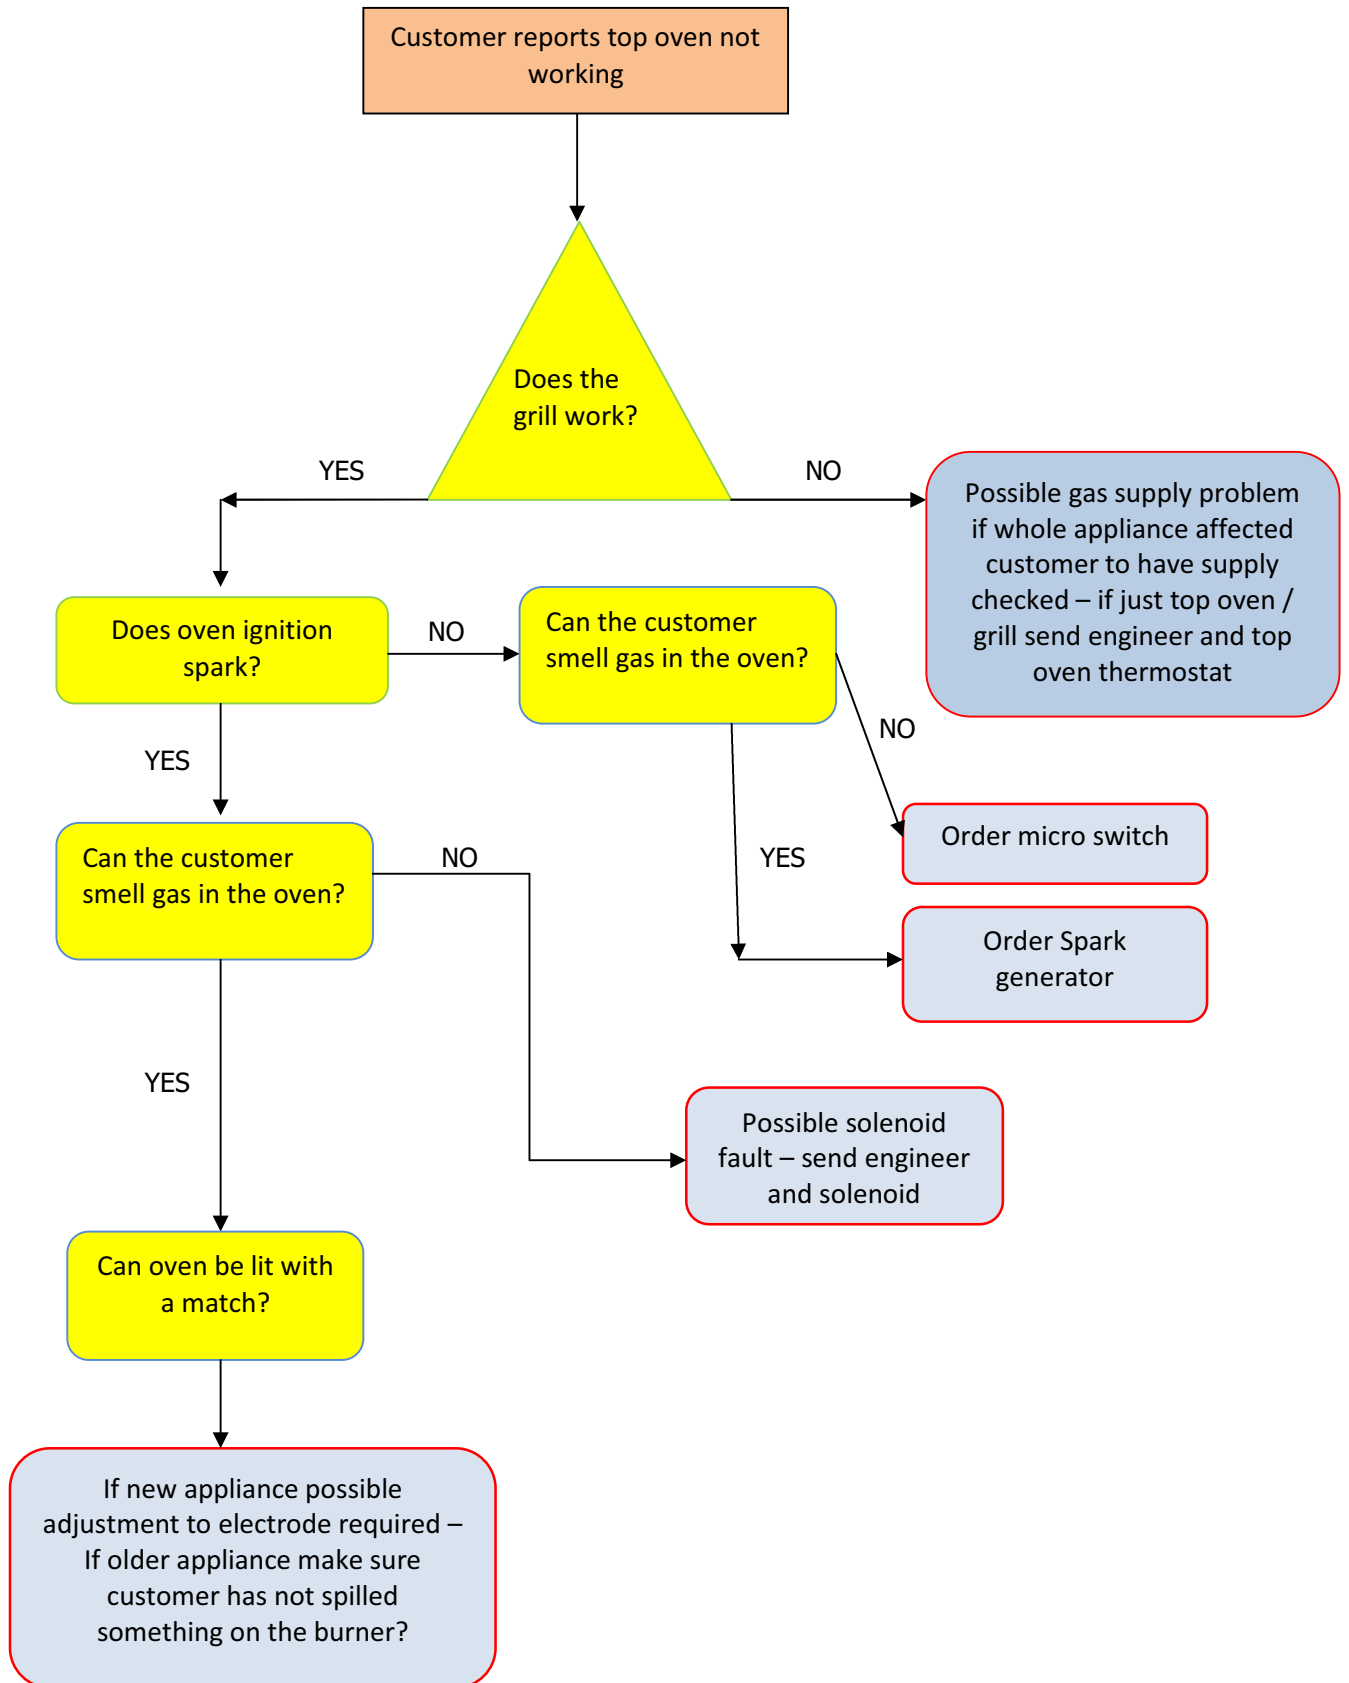


Single Electric Cooker Main Fan oven not working

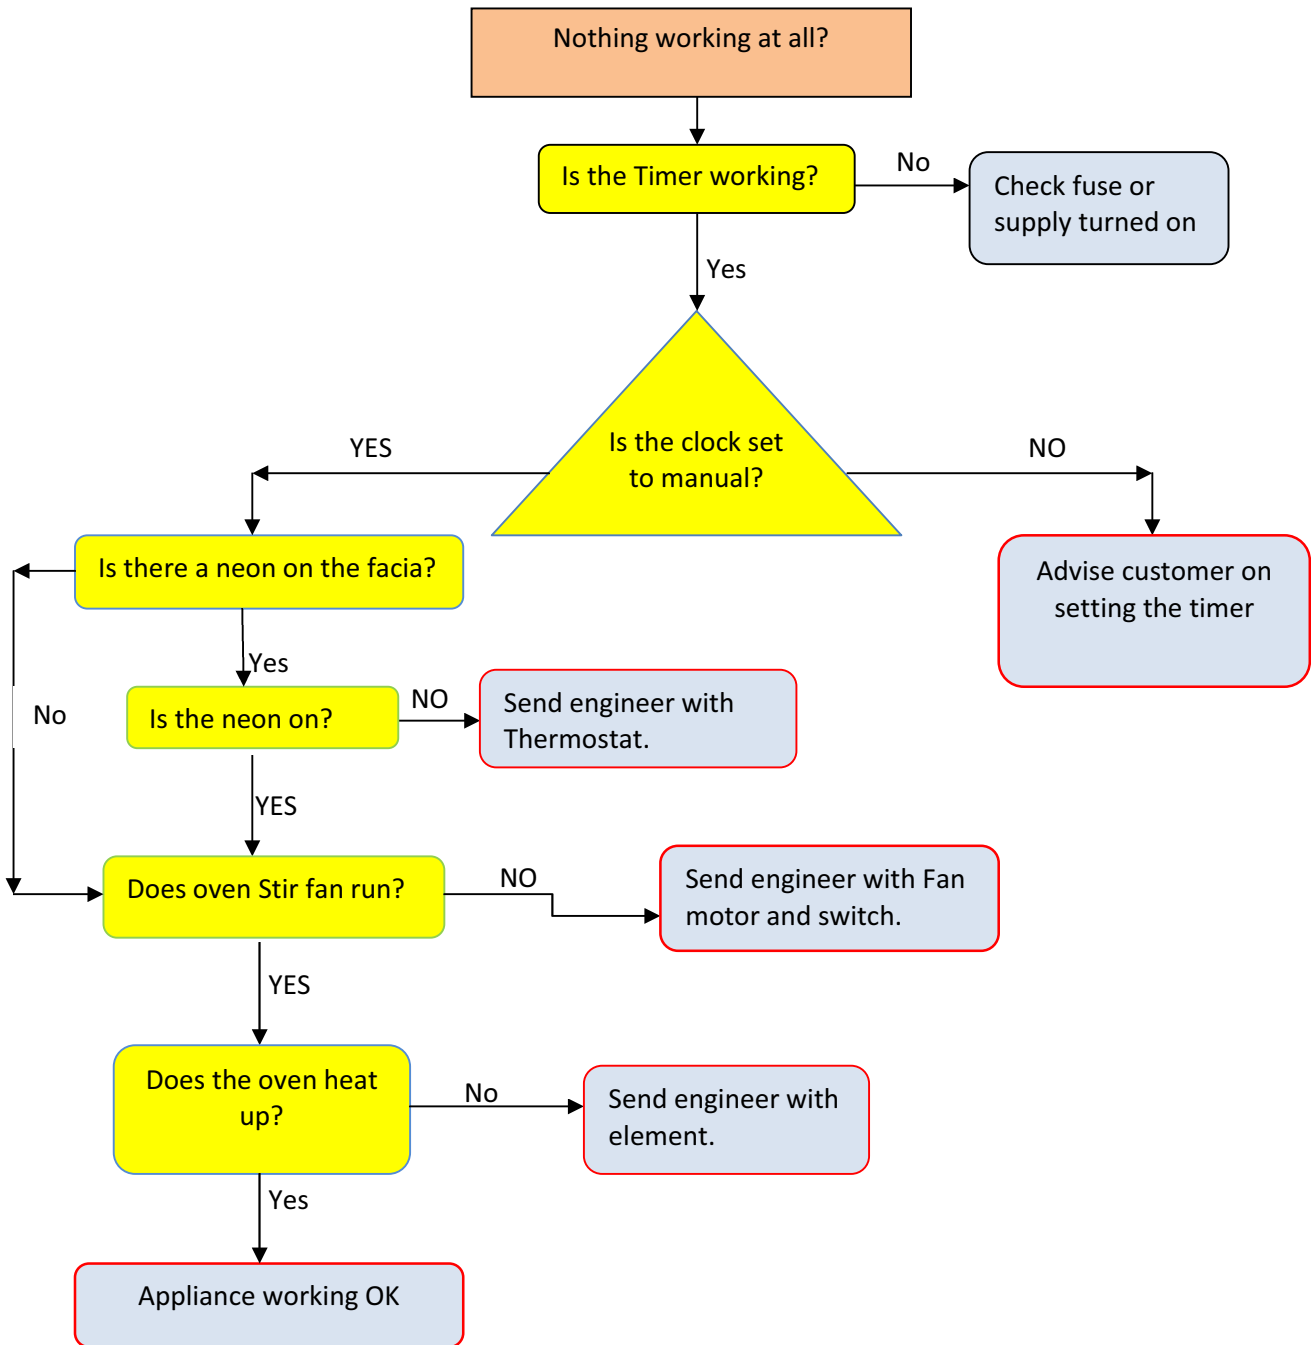


Electric Multi function oven Main oven not working

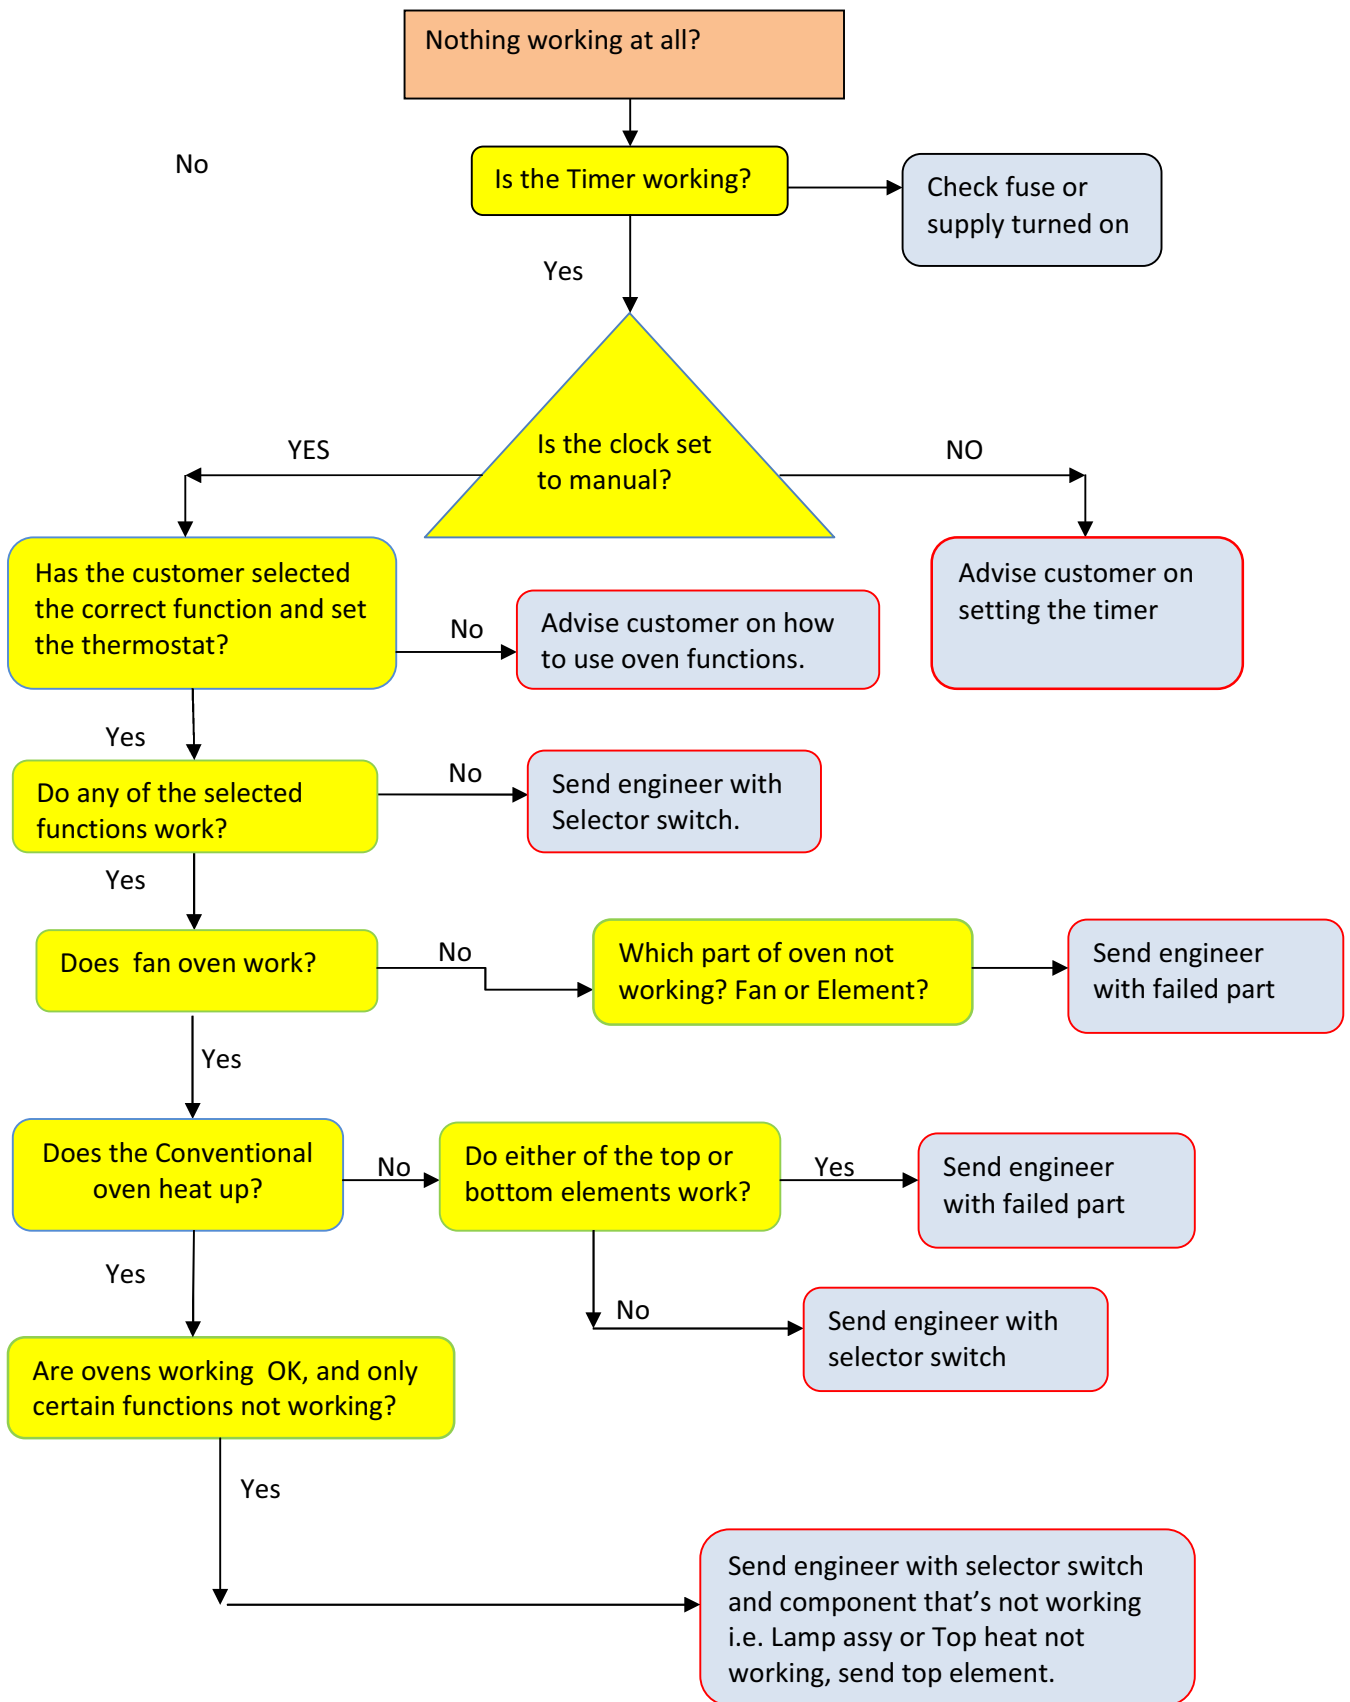


Faulty hood

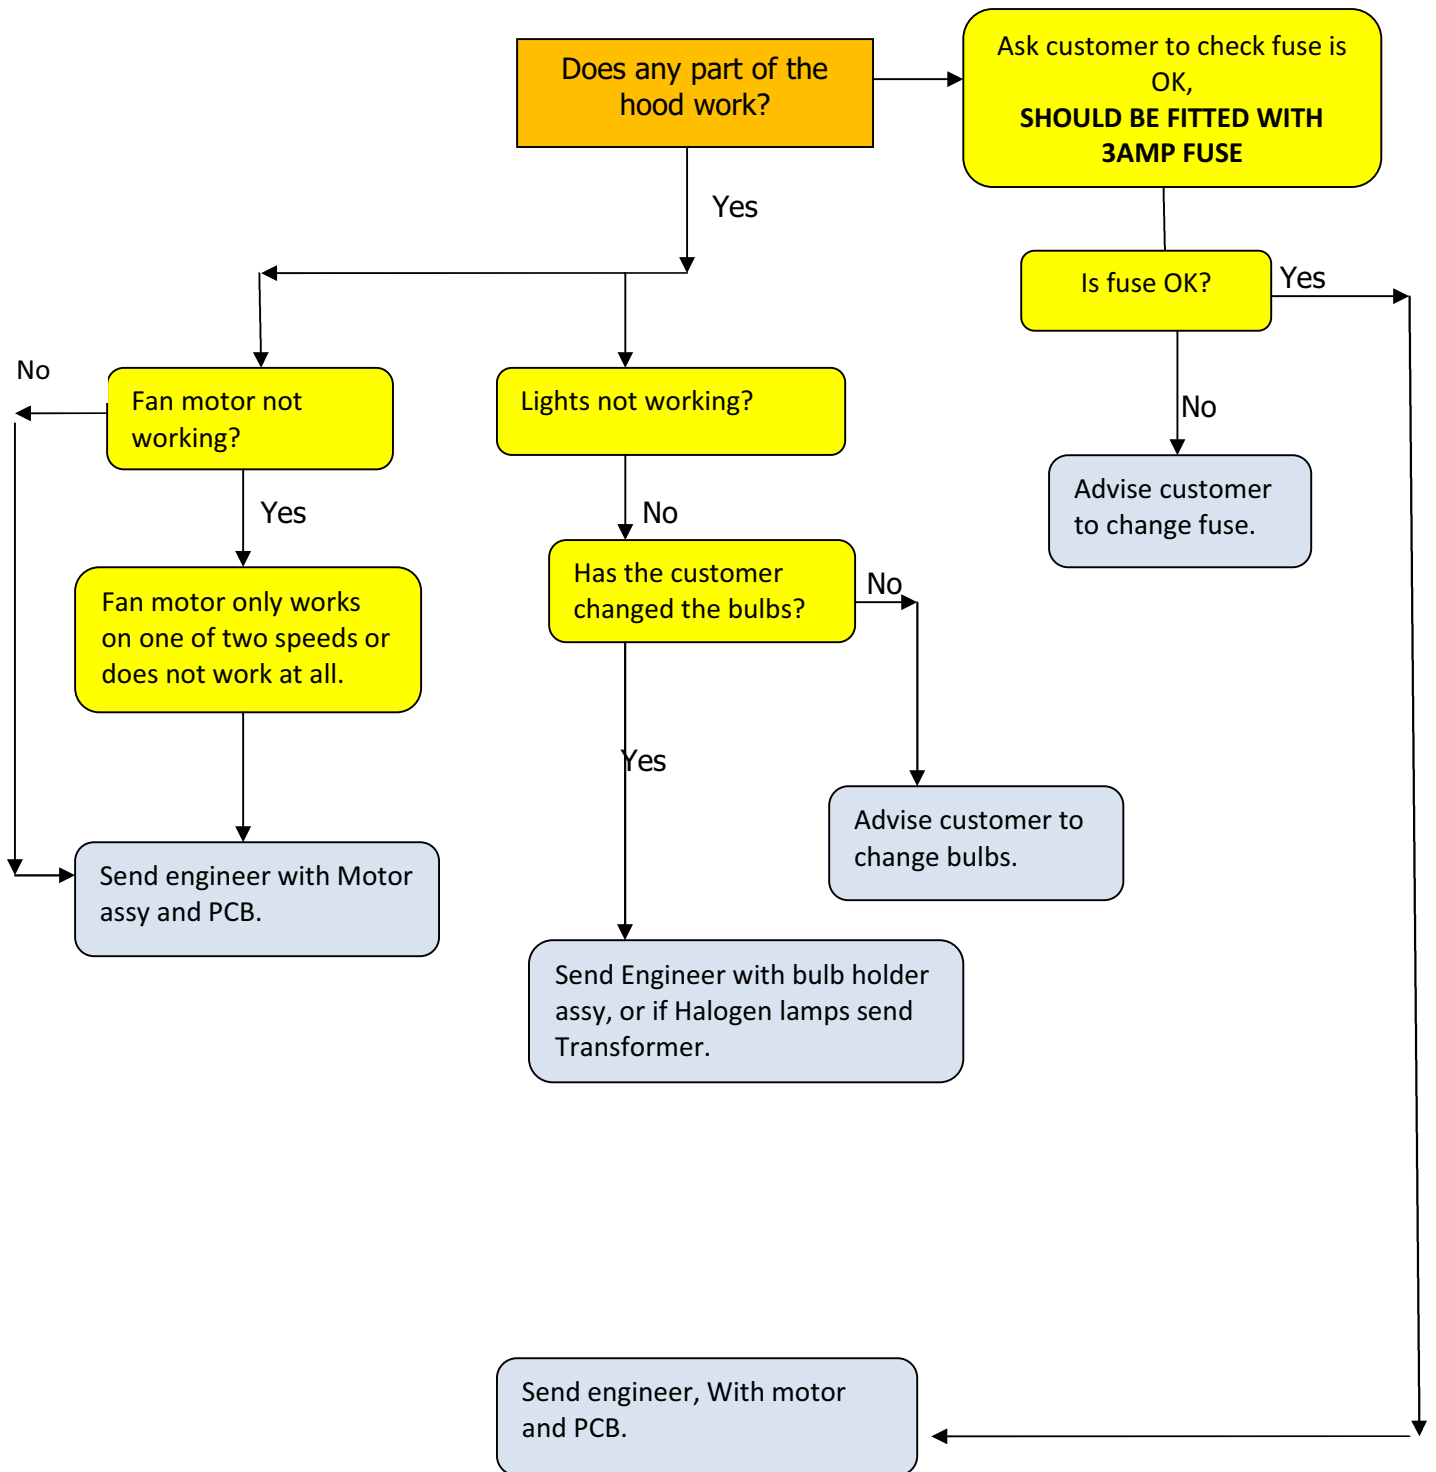


Gas freestanding Main oven not working

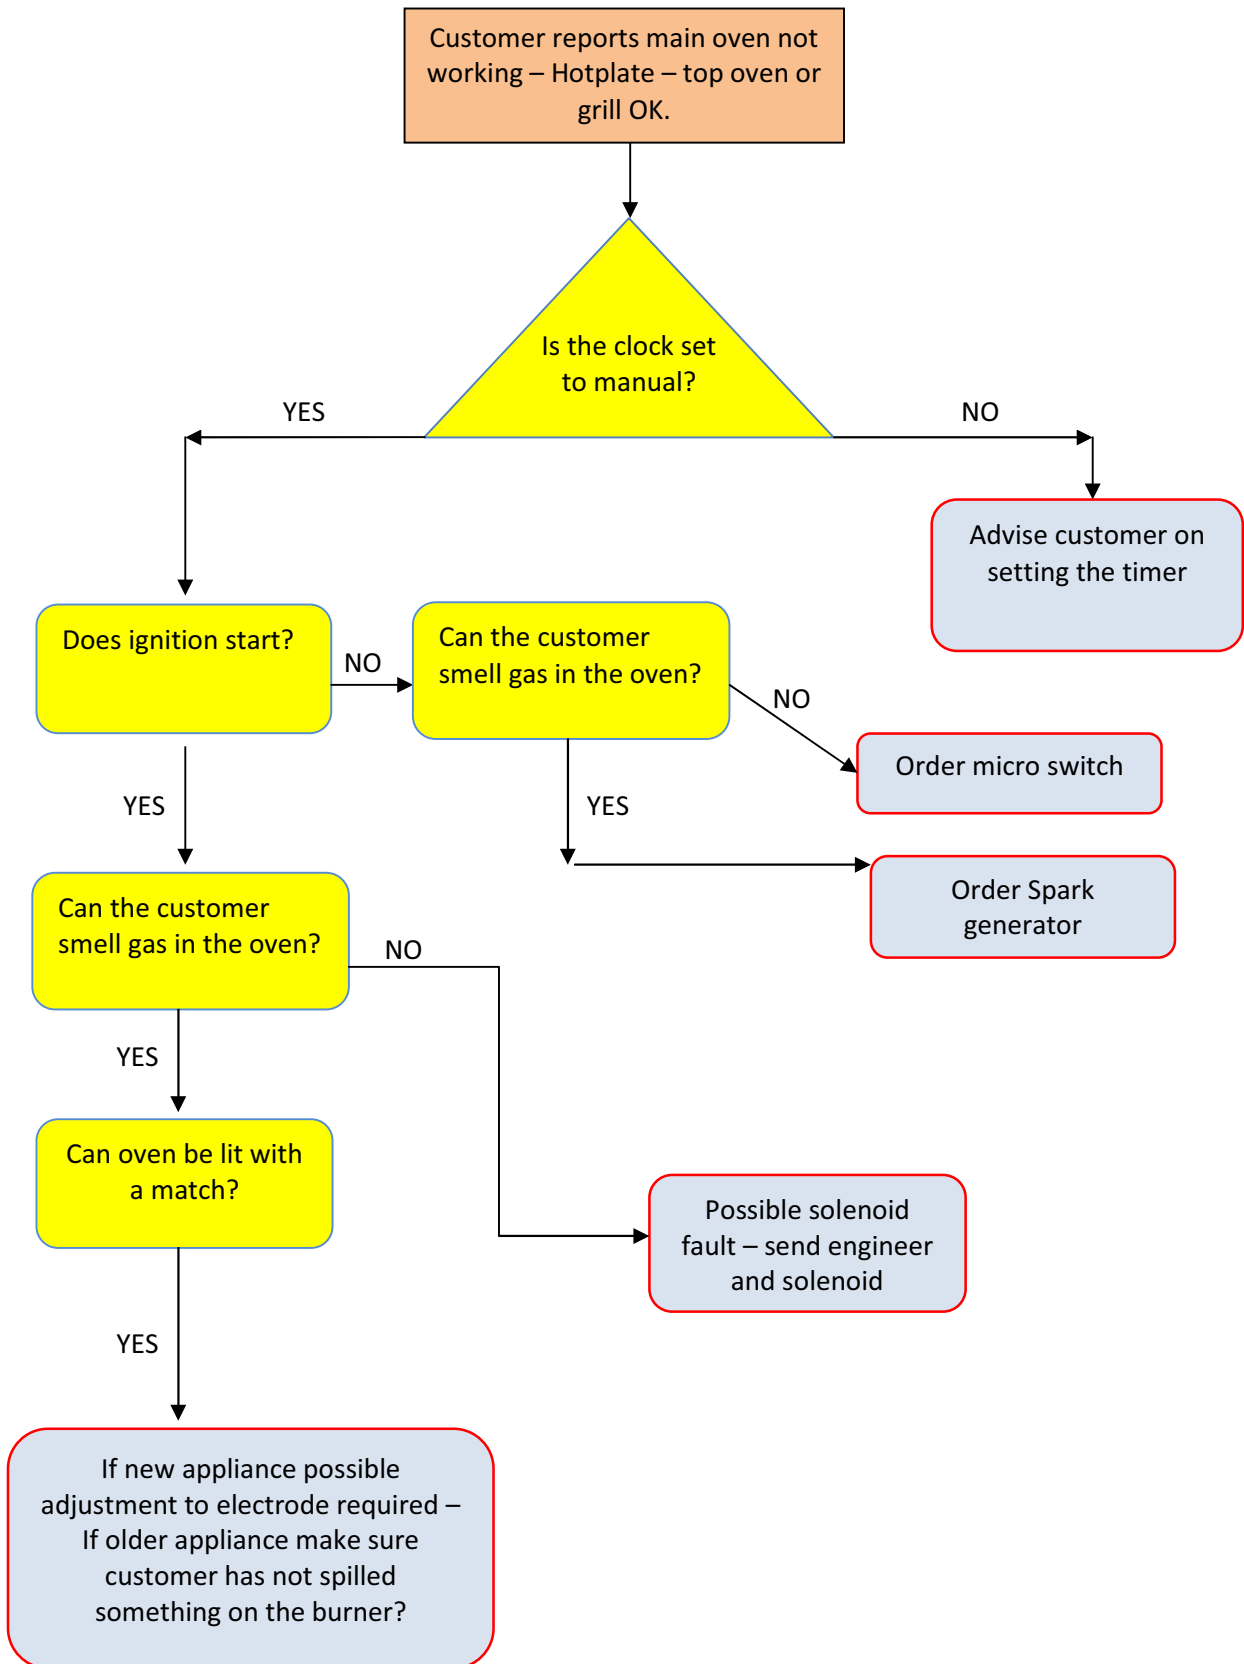


Top oven not working

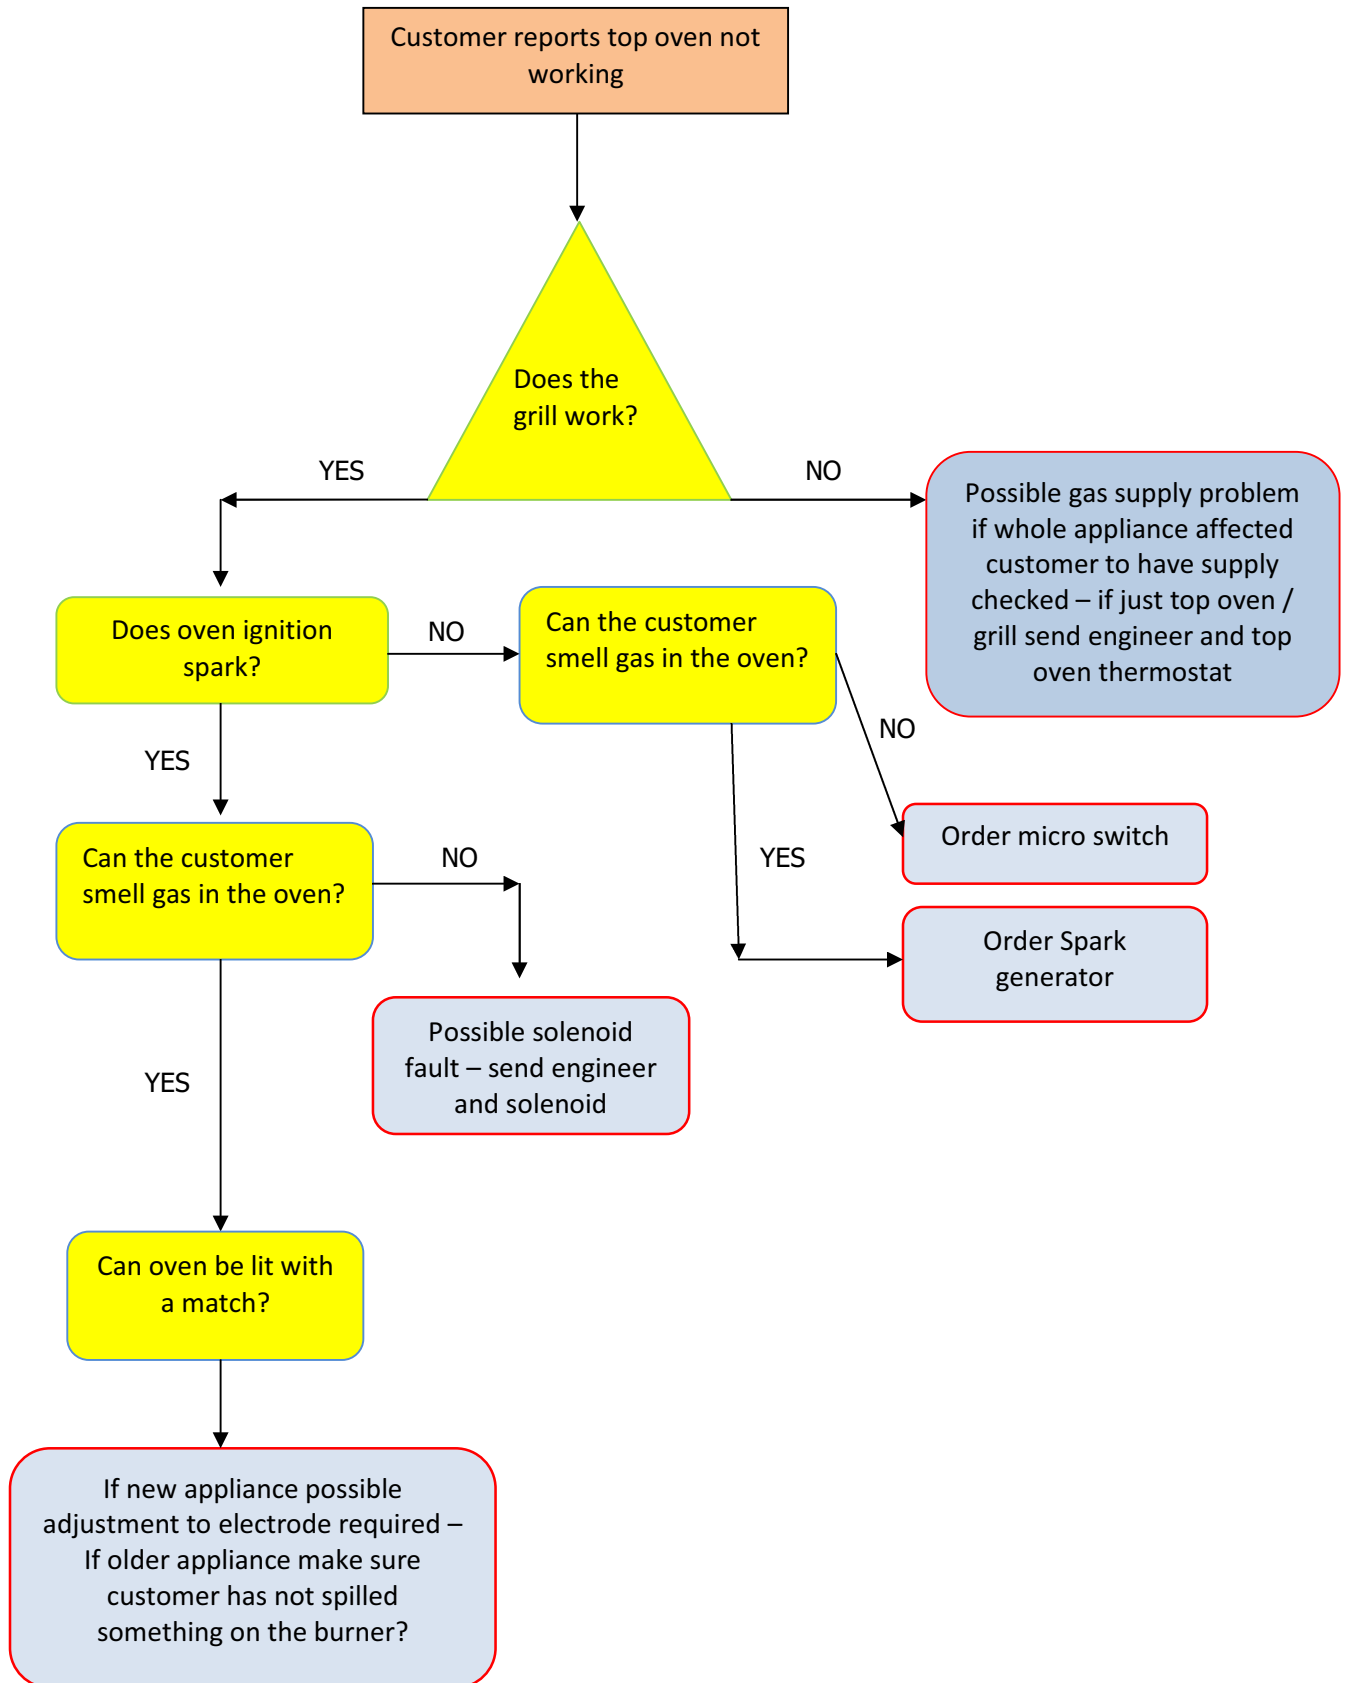


Oven with FSD won't maintain temperature

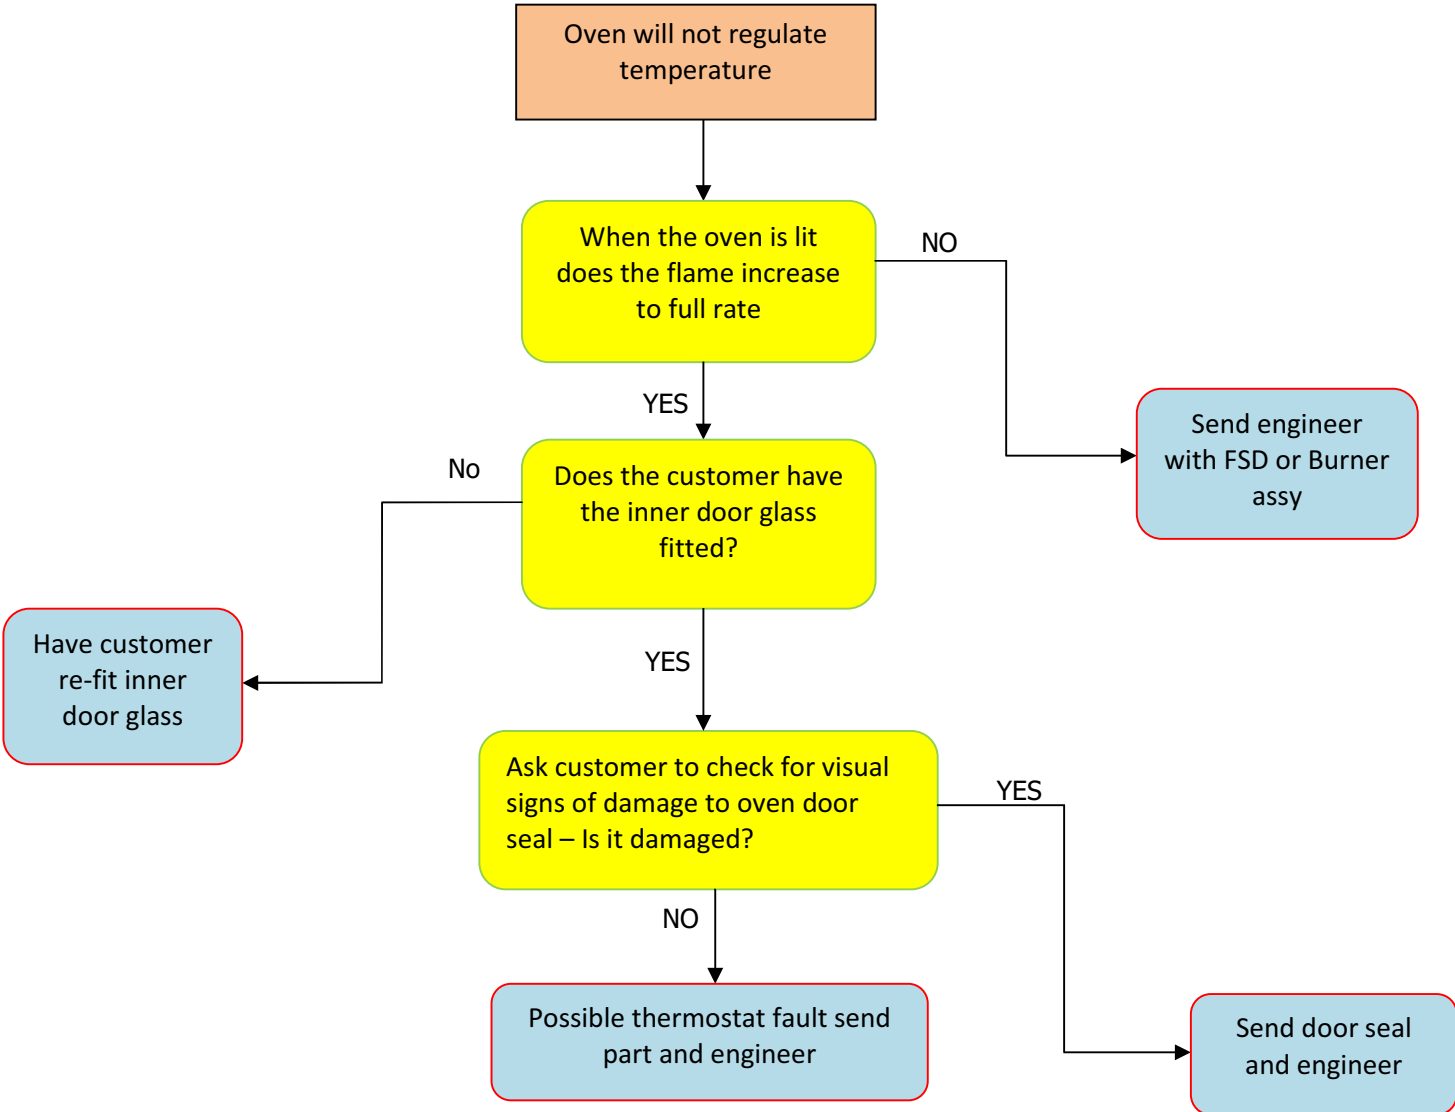

Gas Hob
Faulty ignition (Automatic ignition)
Customer states no ignition to burner/s

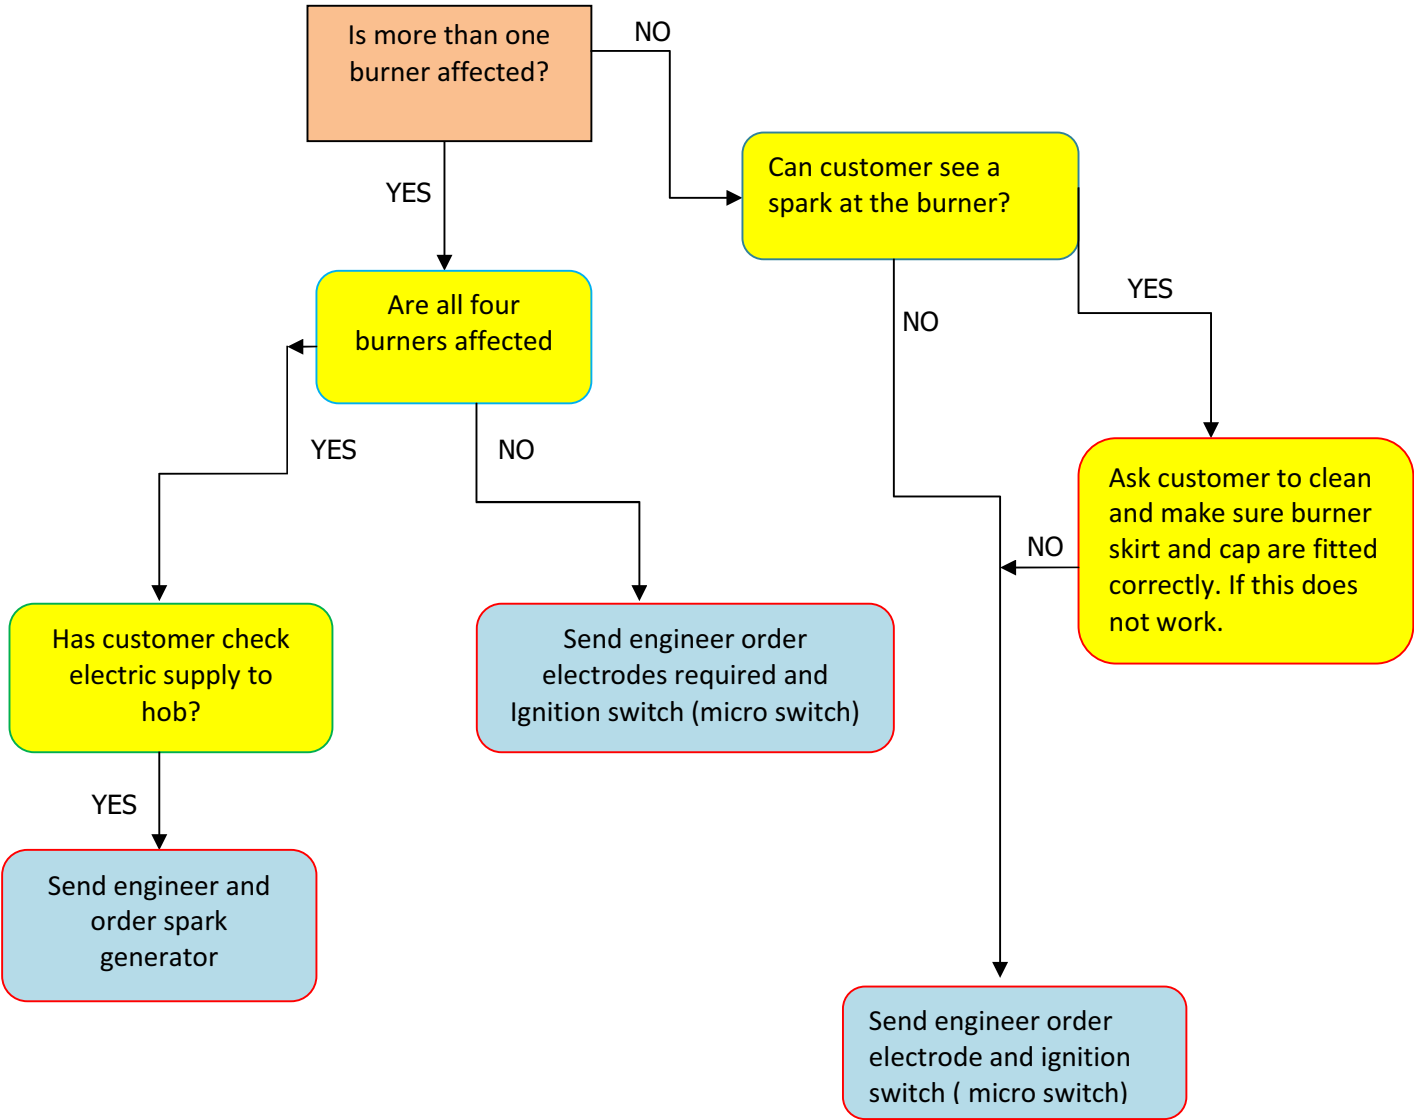


Gas Hob
Faulty ignition (Push button ignition)
Customer states no ignition to burner/s

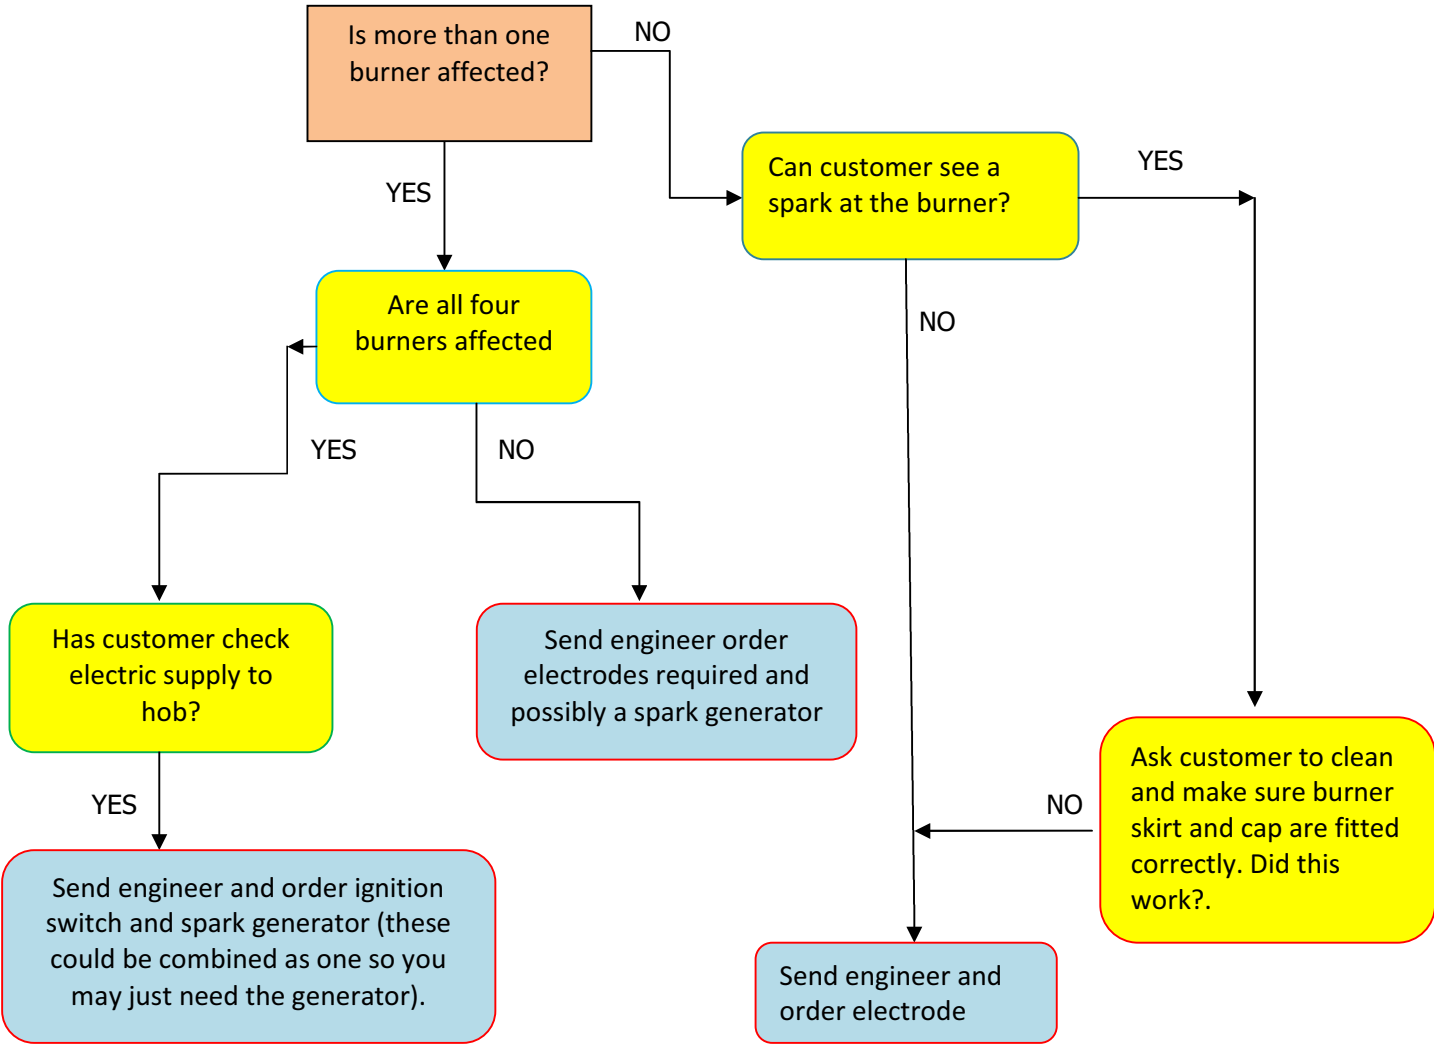


Gas hob with thermocouples

Hob burner will not stay lit

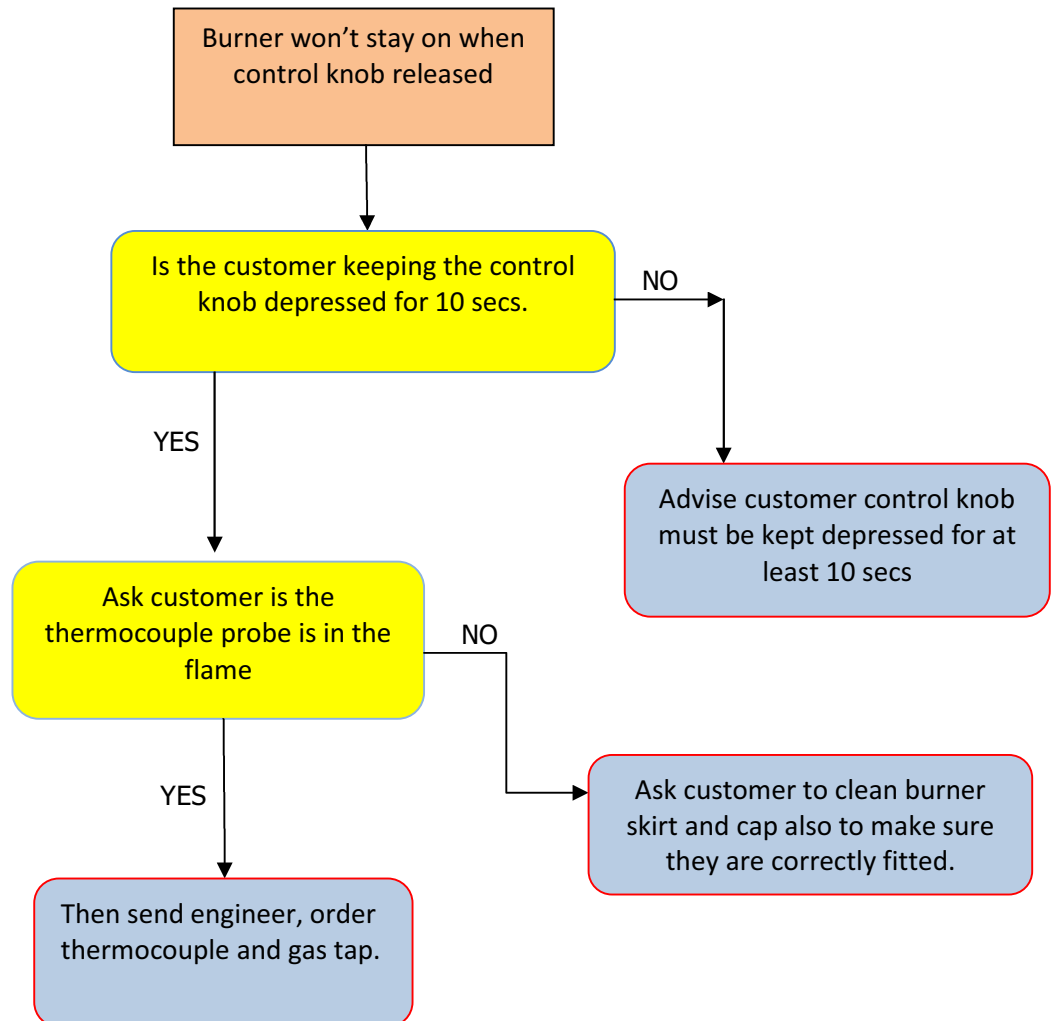

Faulty ignition (Push button ignition)
Customer states no ignition to burner/s

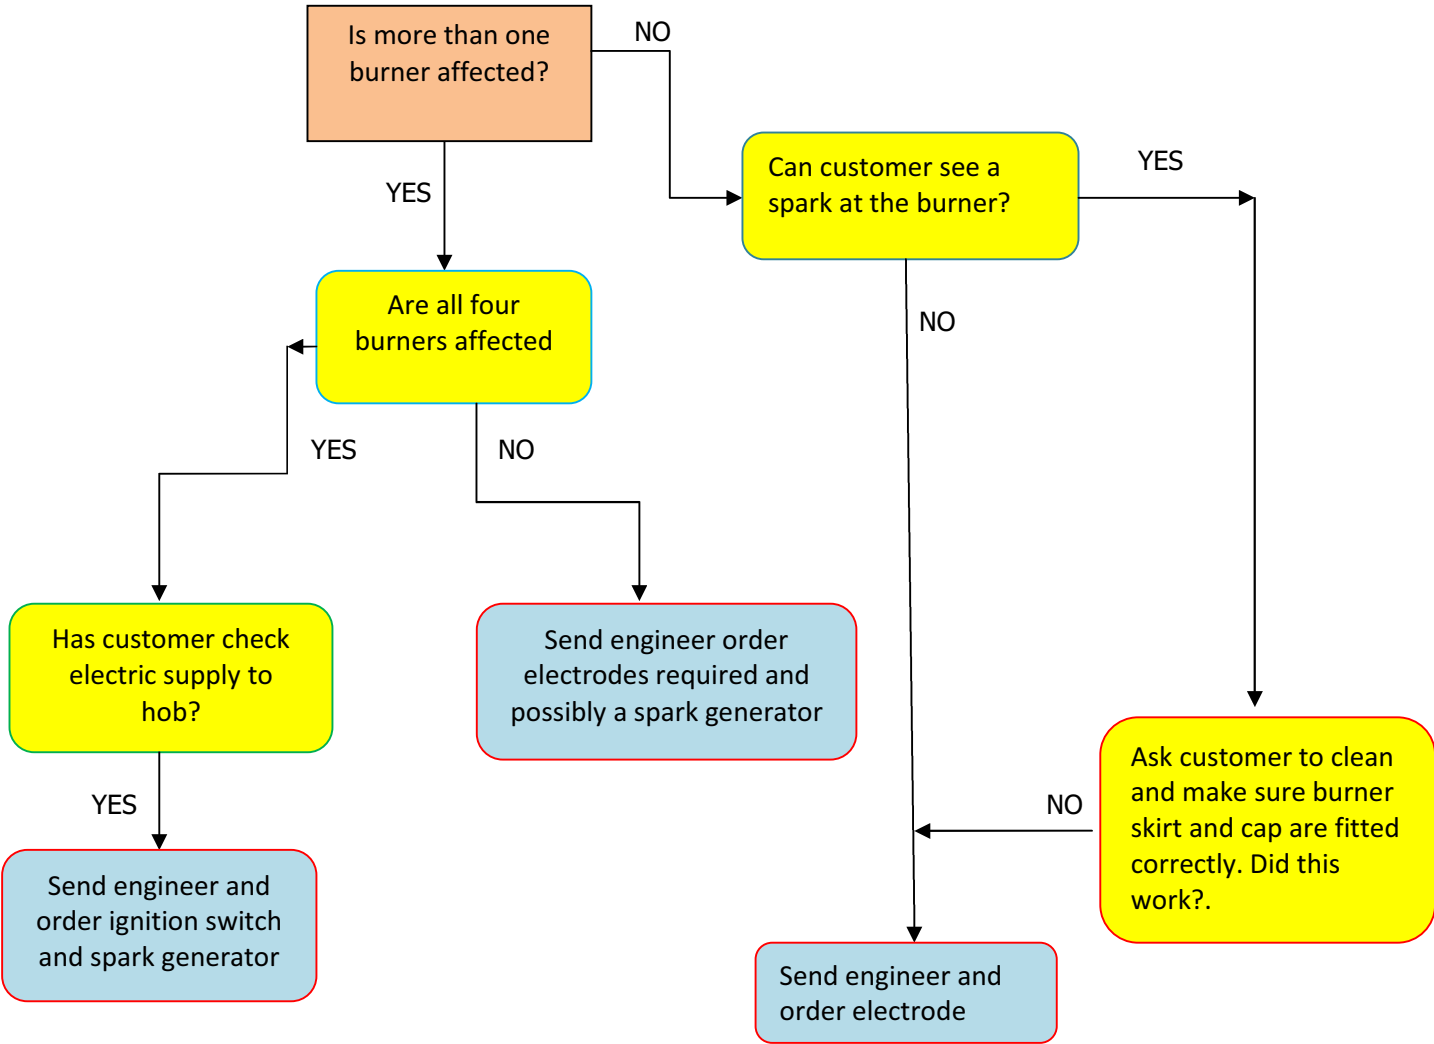

Faulty ignition (Automatic ignition)
Customer states no ignition to burner/s

