



www.wellsecurityalarm.com



GSM LCD Alarm System

WL1014

User Manual

Date Issued: 2011-01-08

Thank you for purchasing this alarm system. For proper use and your safety, please read these instructions thoroughly and carefully before you put the system in use. Keep this manual carefully for your reference in the future.



Warning

Do not remove the front or back cover of the unit and keep it intact. There is no part that can be repaired by user. If repair is needed, please send it to seller or authorized service point.

The information contained in this manual is prepared for the alarm system only. It adopts a sustainable development strategy. Therefore, the company retains the right to modify or make improvement to any product described herein without giving prior notice. All rights reserved. The name of other companies or products referred to herein may be the brand or product name of their respective owners.

Precautions

Please read and follow the brief instructions below, otherwise physical danger or system damage may be incurred. This manual contains more detailed information about safety issues concerning the system in other parts hereof.



Proper use

Read this manual carefully before you put the system in use. Operate in accordance with the instructions herein.



Water-proofness

The alarm system is not waterproof. Please keep it dry.



Qualified maintenance service

Only those qualified maintenance professionals may repair the alarm system.



Backup

Be sure to back up all important information stored in the system.



Original parts and batteries

Only original parts and batteries approved by manufacturer may be used, otherwise the warranty term may be breached and danger may occur.

**Addition of other equipment**

Before adding other equipment, please read the user manual for detailed safety instructions. Be sure not to connect incompatible products to the system.

**Switch on safety**

Do not switch the Device on when wireless phone use is prohibited or when it may cause interference or danger.

**Interference**

All wireless devices may be susceptible to interference, which could affect performance.

**Switch off in restricted areas**

Follow any restrictions. Switch the device off in aircraft, near medical equipment, fuel, chemicals, or blasting areas.

Table of contents

1.	Brief introduction -----	6
2.	Standard Packing list -----	6
3.	Function Introduction -----	6
4.	Alarm Host Diagram -----	7
5.	Installation -----	9
	5.1 Insert SIM into Control Unit-----	9
	5.2 Install the Magnetic door/window sensors-----	10
	5.3 Install the wireless PIR Motion Sensor-----	11
	5.4 Install other sensors-----	12
	5.5 Install the Control Unit-----	12
	5.6 Siren and wireless outdoor siren-----	12
6.	Setting-----	13
	6.1 Enter Settings-----	13
	6.2 Exit Settings-----	14
	6.3 Factory Reset-----	14
	6.4 Remote controller-----	14
	6.5 Defense zone-----	15
	6.6 Change pass ward-----	16
	6.7 Clock Setting-----	17
	6.8 Timing Settings-----	18
	6.9 Call alert target phone number-----	19
	6.10 SMS Alert Target cell phone number-----	20
	6.11 Defense Zone Programming-----	21
	6.12 Home Arm Defense Zone Setting-----	22
	6.13 Voice Recording-----	22
	6.14 Siren Setting-----	23
	6.15 Siren Setting in “Emergency Help” mode-----	23
7.	Operation Instructions -----	23
	7.1 Remote Controller Operation-----	24
	7.2 Answer Alarm Call-----	26
	7.3 Remote Control-----	26

	7.4 System Dialing Function-----	27
8.	Technical Parameters-----	28
9.	Care-----	30
10.	Add/Cancel wireless sensors to the Control Unit-----	31
11.	Technical specifications of Control Unit-----	32
12.	Important information-----	32
13.	Maintenance -----	33
14.	Warranty-----	33

1. Brief introduction

The WL1014 is an innovative safety solution for home, office and industry. It integrates GSM network, SMS Control, voice, wireless communication and proprietary technologies. It is suitable for a wide range of applications.

2. Contents

Standard Packing List:

Control Unit

Magnetic Door Sensor

Two Wireless Remote Controls

PIR Motion Sensor

Mini Siren

Regulated 12vDC Power Supply

User Manual

Optional Accessories:

Combined Light and Siren

PIR Motion Sensor

Glass Break Sensor

Magnetic Window Sensor

Magnetic Steel Scrolling Door Sensor

Temperature Sensor

Oil Pressure electronic Sensor

Infrared Beam Fence

3. Function Instruction


- 1) 7 wired and 99 wireless defense zones;
- 2) LCD screen with time clock display;
- 3) Voice prompt for all operations;
- 4) 3 groups of timely arm and disarm;
- 5) Can store 6 phone numbers: when alarming, system will make alarm call to these numbers automatically;
- 6) Can store 3 SMS numbers: when alarming, system will send alarming SMS automatically;

- 7) 10-second automatic message recording;
- 8) Built-in artificial intelligent digital voice announcer;
- 9) Built-in artificial intelligent English message;
- 10) Users can make calls by using keypad on alarm panel, just like a telephone;
- 11) One-key-control function: Out Arm, Home Arm, Remote Arm;
- 12) SOS, fire, gas, door, hall, window, balcony, and boundary places alarm;
- 13) Real-time, delay, 24 hours, bypass defense zones programming function;
- 14) Wireless coding: easy to add additional wireless accessories;
- 15) Remote control Arm, Disarm, Monitor, and Intercom by phone;
- 16) SMS alert for power failure or recovery;
- 17) Built-in AAA NI-HI rechargeable battery: make alarm when power off.


4. Alarm Host Diagram

In order to make the main unit get the wireless signal well for all wireless accessories, please put the alarm host at the central place of your defense area. Make sure it's away from large metal objects and household appliances which may cause high frequency interference, as well as barriers such as reinforced concrete wall or fire door, etc.


Alarm Panel front schematic diagram:

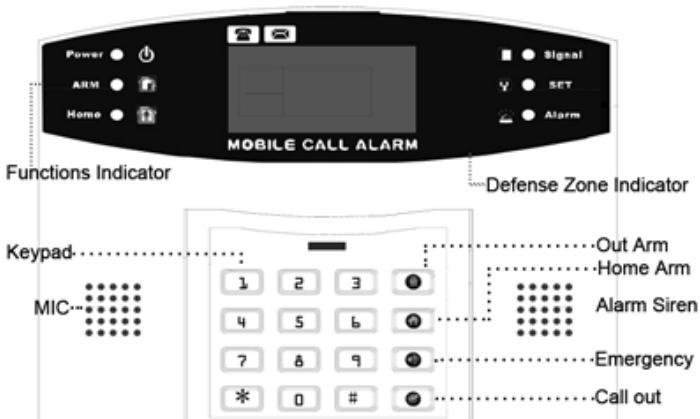

Alarm Panel back schematic diagram:

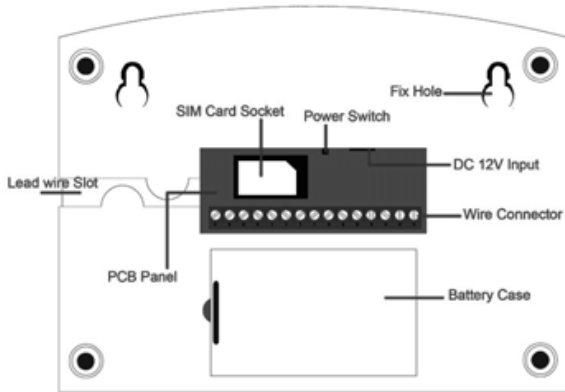


Wired terminal block:

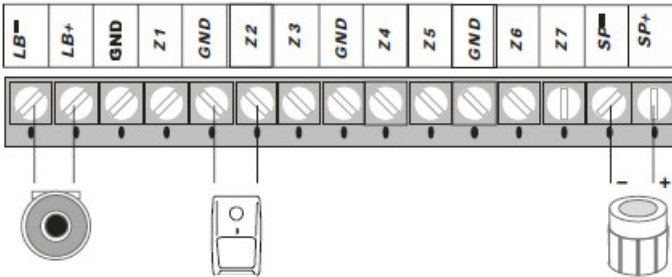

Speaker

Siren

LCD display:

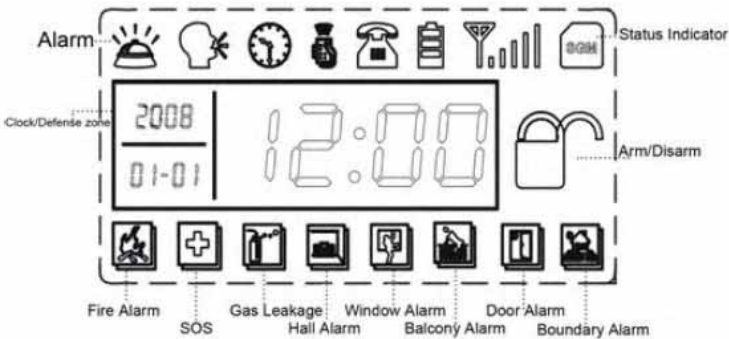

5. Installation

5.1 Insert SIM into Control Unit

Please see the below photos:



Please insert SIM card and plug in power adaptor, and then power on the system, all the LED lights will be on for 2 seconds and you will hear a long

beep; the system comes into initialization. After the time clock displays on the LCD screen, the [SGM] starts flashing and the main unit starts to detect the GSM network until a long beep. Then the [SGM] indicator goes out indicating the system comes into disarm status. Finally, turn on the backup battery switch.

5.2 Install the Magnetic door/window sensors

Magnetic door/window sensors signal the Control Unit when the two parts separate by more than between **1.5 to 3.0cm**.



In some circumstances an Infrared beam fence is more appropriate than magnetic sensors. i.e. veranda, picture window balcony, boundary wall e.t.c.




Wired or wireless glass break sensor can also be used (see below)



For a Scrolling Steel Door, a special Wireless Scroll Steel Door magnetic sensor, must be used due to interference of the wireless signal caused by the steel door.



Installation: attach the larger half to the floor and attach (rivet or glue) the smaller half to the scroll steel door. An alarm is triggered when the halves are separated by more than three to 5.00 cm.

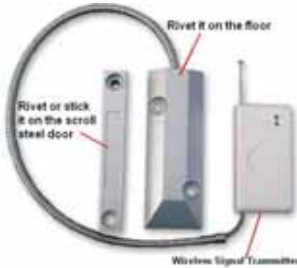


Scroll Steel Door

5.3 Install the wireless PIR Motion Sensor

The PIR sensor will detect a person since human temperature is different to ambient temperature. When triggered, the PIR will signal the Control Unit. Apply the detection area illustration below when installing.

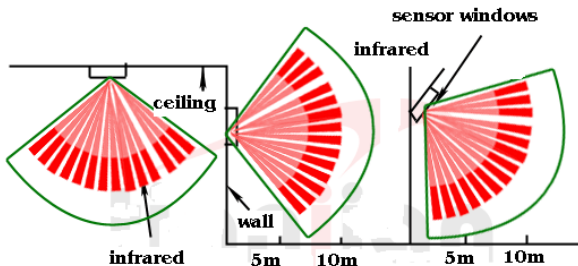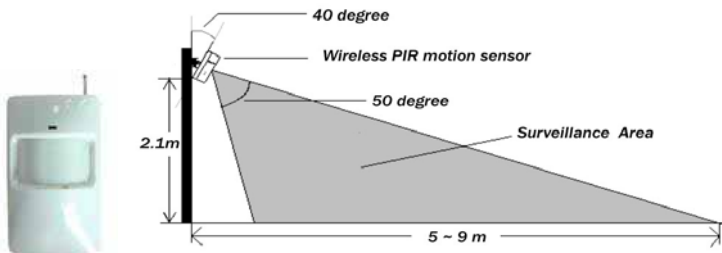

Wireless curtain sensor, detection area illustration below:

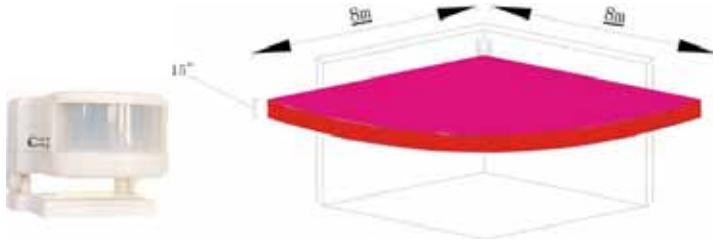

5.4 Install other sensors

For smoke, you can use wireless smoke sensor, for gas leakage detection, you can install gas leakage sensor below



For temperature, you can install the temperature sensor below:



5.5 Install the Control Unit

In order to avoid destruction of the Control Unit by intruders, please install it in a concealed location, convenient to the operator.

If applicable, ensure that an uninterruptible AC power outlet is available near the Control Unit. First connect accessories to the Control Unit then the AC adapter.


5.6 Siren and wireless outdoor siren

Connect the Siren and the intercom to the Control Unit and fix them in appropriate locations .



1)Mini Siren

- 2) Wired strobe siren
- 3) wireless outdoor siren

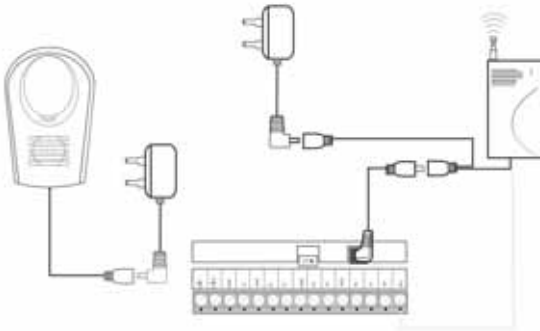

Wiring Diagram of Outdoor siren for WL1014

6. Settings

6.1 Enter Settings

In the state of disarm, input 4-digit password by the keypad on the main unit and press [#] button to confirm. You will hear a voice prompt: please enter instruction. At the same time, [SET] indicator is on without flashing and [0000] displays on the screen, indicating the system enters setting status. You can perform different settings repeatedly as long as the system keeps in setting status. The system will exit setting mode and return to disarm status if you don't press any keypad button for 40 seconds.




Note: In setting status, press  can delete the numbers input.

The system default password is [8888].

Operating method: [XXXX] ⇒ [#]

X indicates the new 4-digit password.

LCD display:

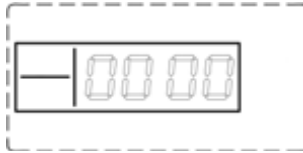

6.2 Exit Settings

Press [*] and [#] buttons, the main unit emits a long beep and exits settings. The [SET] indicator goes out and the system returns to disarm state.

Operating method: [*] ⇨ [#]

6.3 Factory Reset

In disarm status, use keypad to input [95175308246] and press [#] to confirm, all the LED indicators will be on for 2 seconds and you will hear a long beep. The main unit gets all its settings cleared and restores to its factory settings successfully.

Operating method: [95175308246] + [#]

6.4 Remote controller

6.4.1 Coding of Remote Controller

The remote controller has to be code to the alarm host in order to perform normally.

In setup state, use keypad to input [20], input the remote controller number [1~8], and then press [#] to confirm. The main unit emits a long beep and you will hear “remote control coding”. The [🔑] indicator is on without flashing; press any button on the wireless remote controller, the main unit makes a long beep and you will hear “coding completed”, [🔑] indicator goes out, indicating the remote controller succeeds in coding.

Operating method: [20] ⇨ [A] ⇨ [#]

A indicates: 1~8 remote controllers number. You can add maximum 8

remote controllers.

LCD display:



6.4.2 Delete Remote Controller

The remote controller can't control the main unit after it's deleted.

In setup state, use keypad to input [21], then input the remote controller number [1-8], and then press [#] to confirm. The main unit emits a long beep and the [Signal] indicator flickers once. You will hear a voice prompt "delete completed".

Operating method: [21]⇒[A]⇒[#]


A indicates: 1~8 remote controllers number.

6.5 Defense zone

6.5.1 Coding of defense zone

Wireless detectors have to be coded to the main unit in order to trigger it alarms.


In setup state, use keypad to input [23], input the defense zone number you want to code [01~99], and then input [#] to confirm. The main unit emits a long beep and the corresponding defense zone is displayed on the screen. You will hear a voice prompt "detector coding". Then trigger a wireless detector to emit a wireless signal; after receiving the signal, the main unit

makes a long beep, and you will hear "coding completed", the [] indicator goes out at the same time.

Operating method: [23]⇒[XX]⇒[#]

XX indicates: 01 ~99 defense zones number

LCD display:

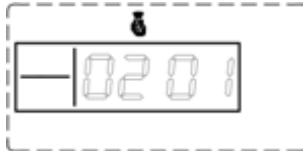

6.5.2 Delete Defense Zone

The wireless detector can't control the main unit after it's deleted.

In setup state, use keypad to input [24], then input the defense zone number you want to delete [01~99], and then input [#] to confirm. The main unit emits a long beep and the defense zone indicator flickers once. You will hear a voice prompt "delete completed".

Operating method: [24]⇒[XX]⇒[#]

XX indicates: 01 ~99 defense zones number

6.6 Change password

6.6.1 Change Operation Password

Operation password is the password used to disarm or remote control.

In setup status, use keypad to input [30], then input the 4-digit new password, and then press [#] to confirm. The main unit will make a long beep and you will hear a voice prompt "setting completed".


Operating method: [30]⇒[XXXX]⇒[#]

XXXX indicates: the new 4-digit password

For example: change the system password to 1012

Operating method: [30]⇒[1012]⇒[#]

LCD display:

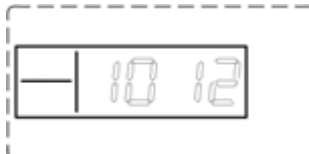

6.6.1 Change Program Password

Program password is the password you should input in order to setup the system.

In setup status, use keypad to input [31], then input the 4-digit new password, and then press [#] to confirm. The main unit will make a long beep and you will hear a voice prompt “setting completed”.


Operating method: [31]⇒[XXXX]⇒[#]

XXXX indicates: the new 4-digit password

For example: change the system password to 2846

Operating method: [31]⇒[2846]⇒[#]

LCD display:

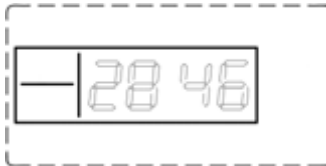

Note : *the operation password and the programming password can not be set as the same number.*

6.7 Clock Setting

In setup status, use keypad to input [32], then input the last 2 digits [AA] of the present year, the two digits [BB] of the month, the two digits [CC] of the date, the two digits [DD] of the hour (24-hour system), the two digits [EE] of the minute, the two digits [FF] of the second, and finally enter [#] to confirm. You will hear a long beep and a voice prompt “setting completed”.

Operating method: [32]⇒[AA]⇒[BB]⇒[CC]⇒[DD]⇒[EE]⇒[FF]⇒[#]

AA indicates: the last 2 digits of the present year

BB indicates: the 2 digits of the present month

CC indicates: the 2 digits of the present date

DD indicates: the 2 digits of the present hour

EE indicates: the 2 digits of the present minute

FF indicates: the 2 digits of the present second

For example: set the time as 15:35:40, Oct. 1st, 2009

Operating method: [32]⇒[09]⇒[10]⇒[01]⇒[15]⇒[35]⇒[40]⇒[#]

6.8 Timing Settings

6.8.1 Timely Arm

In setup status, use keypad to input [33~35], then input the hour [AA] and minute [BB] of the time you want to set to arm, and finally input [#] to confirm. You will hear a long beep and a voice prompt “setting completed”.

Operating method: [XX]⇒[AA]⇒[BB]⇒[#]

XX indicates: the address code 33, 34, 35 of the timely arming

AA indicates: the hour of the setting time

BB indicates: the minute of the setting time

For example: set the arm time as 45' 10pm

Operating method: [33]⇒[22]⇒[45]⇒[#]

LCD display:



6.8.2 Timely Disarm

In setup status, use keypad to input [36~38], then input the hour [AA] and minute [BB] of the time you want to set to disarm, and finally input [#] to confirm. You will hear a long beep and a voice prompt “setting completed”.

Operating method: [XX]⇒[AA]⇒[BB]⇒[#]

XX indicates: the address code 36, 37, 38 of the timely disarming


AA indicates: the hour of the setting time

BB indicates: the minute of the setting time

For example: set the arm time as 55' 7am

Operating method: [33]⇒[22]⇒[45]⇒[#]

LCD display:

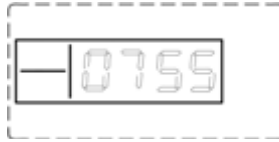

6.8.3 Timing Control

In setup status, use keypad to input [39], then input the number indicating turning on timely arm/ disarm [1/0], and then input [#] to confirm. You will hear a long beep and a voice prompt “setting completed”. The factory default is off.

Operating method: [39]⇒[0/1]⇒[#]

0: turn off the function of timely arm/ disarm

1: turn on the function of timely arm/ disarm

For example: turn on the function of timely arm/ disarm

Operating method: [39]⇒[1]⇒[#]

6.9 Call alert target phone number

6.9.1 Set alert target phone number

In setup state, input [51] ~ [56], then input the voice alarm-receiving number (mobile number or telephone number), and then press [#] to confirm. The main unit will make a long beep, the [Signal] indicator will flicker once, and you will hear “setting completed”, which indicate voice alarm-receiving number is set successfully.

Operating method: [XX]⇒[YY...YY]⇒[#]

XX indicates: the 1- 6 alarming user number [51] ~ [56]

YY...YY indicates: voice alarm-receiving phone number

For example: set 13811111111 as the first voice call number

Operating method: [51]⇒[13811111111]⇒[#]

LCD display:



6.9.2 Delete alert target phone number

In setup state, input [51] ~ [56], and then press [#] to confirm, the main unit will make a long beep and the [Signal] indicator will flicker once and you will hear “delete completed”, which indicate the alarming user number is deleted successfully.

Operating method: [XX]⇒[#]

XX indicates: the 1- 6 alarming user number [51] ~ [56]

For example: Delete the third alarming user number from the system.

Operating method: [53]⇒[#]

LCD display:



6.10 SMS Alert Target cell phone number

6.10.1 To set SMS Alert Target cell phone number

SMS Receiving number means when system is alarming, it will only send SMS to this mobile number. You can set maximum 3 SMS numbers. In setup state, input [57] ~ [59], then input the SMS receiving number, and then press [#] button to confirm. The main unit will make a beep, the [Signal] indicator will flicker once and you will hear “setting completed”, which indicate setup successfully.

Operating method: [XX]⇒[YY...YY]⇒[#]

XX indicates: address codes of message-receiving numbers from the first group to the third group [57] ~ [59]

YY...YY indicates: the SMS receiving number

For example: setup 1382222222 as the first SMS receiving number

Operating method: [57]⇒[138222222]⇒[#]

6.10.1 Delete SMS Alert Target cell phone number

In setup state, use keypad to input [57] ~ [59], and then press [#] button to confirm. The main unit will make a beep, the [Signal] indicator will flicker once and you will hear “delete completed”, which indicate SMS number is deleted successfully.

Operating method: [XX]⇒[#]

XX indicates: address codes of message-receiving numbers from the first group to the third group [57] ~ [59]

For example: delete the first SMS user number from the system

Operating method: [57]⇒[#]

6.11 Defense Zone Programming

If you want to change the alarm attribute of defense zone, such as turn off the siren when system alarms, you can do it by defense zone programming. In setup state, first input [60], then the defense zone number [01~99], then input defense zone type [1~4], then input defense zone location number [1~8], and then select siren on/off [0/1], at last press [#] to confirm. You will hear the main unit emit a long beep and a voice prompt “setting completed”.

Operating method: [60]⇒[AA]⇒[B]⇒[C]⇒[D]⇒[#]

AA: defense zone number [01~99] means zone 1 to zone 99;

B: defense zone type

[1]: real-time defense zone [2]: 40 seconds delay defense zone

[3]: 24 hours defense zone [4]: bypass defense zone

C: defense zone location

[1] SOS Alarm [2] Fire Alarm [3] Gas Leak Alarm

[4] Door Alarm [5] Hall Alarm [6] Window Alarm

[7] Balcony Alarm [8] Boundary Alarm

D: siren ON/OFF: [0] OFF, [1] ON

For example: set defense zone 12 to be 24-hour, fire alarm and siren on

Operating method: [60]⇒[12]⇒[3]⇒[2]⇒[1]⇒[#]

6.12 Home Arm Defense Zone Setting

If you want some detectors work and some do not, you can use [**Home Arm**] function.

In setup state, use keypad to input [61], then choose the corresponding defense zone number [01~99], then choose [**Home Arm**], and then choose whether alarm [0/1] button, and finally press [#] to confirm. The main unit will make a long beep and a voice prompt “setting completed”.

Operating method: [61]⇒[XX]⇒[A]⇒[#]

XX indicates: [01~99] is defense zone 1 to defense zone 99

A indicates: [0] Home arm but not alarm

[1] Home arm and alarm

For example: set defense zone 11 to be Home arm and alarm

Operating method: [61]⇒[11]⇒[1]⇒[#]

For example: set defense zone 12 as Home arm but not alarm

Operating method: [61]⇒[12]⇒[0]⇒[#]

6.13 Voice Recording


In setup state, use keypad to input [701], and then press [#] to confirm. The

main unit will emit a beep and the [] indicator is on, and after 10

seconds countdown, recording starts: record at 30cm away from the main unit with moderate tone; 10 seconds later, the main unit will make a beep indicating the recording stops and the recorded voice will replay.

Operating method: [701]⇒[#]

LCD display:

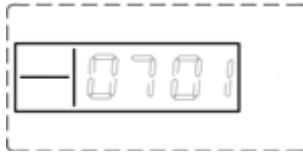

6.14 Siren Setting


In setup state, use keypad to input [75]; in the operation of arm/ disarm by remote control, select if the siren sounds or not by [0/1] button, and then press [#] to confirm. The main unit will emit a long beep and a voice prompt “setting completed”.

Operating method: [75]⇒[A]⇒[#]

A indicates: [0] Siren off; [1] Siren on; System default: [0] Siren off
For example: set siren on when arm/ disarm

Operating method: [75]⇒[1]⇒[#]

LCD display:

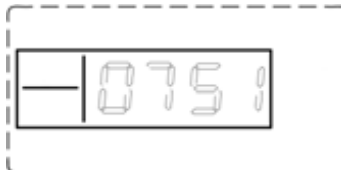

6.15 Siren Setting in “Emergency Help” mode

In setup state, use keypad to input [76], and then [1/0], finally press [#] to confirm. The main unit will make a long beep and a voice prompt “setting completed”.

Operating method: [76]⇒[A]⇒[#]

A indicates: [0]: siren off in “Emergency Help” mode

[1]: siren on in “Emergency Help” mode

System default: [0] siren off





7. Operation Instructions

System status. There are 4 status as following:

- 1) Arm: defense zone 1~99 will alarm when detectors are triggered
- 2) Home Arm: in arm status, the defense zone which is set as [Home Arm] will alarm when detectors are triggered.
- 3) Disarm: defense zone 1~99 will not alarm when detector triggered (except 24 hours defense zone)
- 4) System setup status: In this status, all defense zones will not alarm when detectors are triggered.

7.1 Remote Controller Operation


Users can use remote controller to set system as Out Arm, Home Arm, Emergency Alarm, Real-time Disarm and etc.


- 1) Out Arm: Press  button
- 2) Disarm: Press  button
- 3) Home Arm: Press  button
- 4) Emergency Alarm: Press  button, system will alarm at once.

Operation:

7.1.1 Out Arm

It means to guard all around your house while everyone is going out; all the detectors of the host are always working; when the detector is triggered by detecting source (anti-theft, fire prevention, gas leak, etc.), the alarm system will sound the alarm.

Press [**Out Home** ] button on keypad, system will make a beep per second and totally 100 beeps. The [**OUT ARM**] indicator will be on without flashing. It means Out Arm is set successfully.

Arm Operation: Press [**Out Home** ] button, the system will enter arm status 100 seconds later.

LCD display:



7.1.2 Disarm

It means to stop the alarm when the main unit sounds the alarm or make the alarm system in the state of non-warning. After disarming, even if you trigger the detector, the main unit would not sound alarm (excluding 24-hour defense areas).

Use keypad to input system password, then press [#] button. [Out Home] or [At Home] lights will be off. It means disarm setting successful.

Remote Control Operation: Press [] button on remote controller

Main Unit Operation: input system password + [#]

LCD display:



7.1.3 Home Arm

It means, for the safety, while somebody is at home, you need to enable the peripheral door, window, balcony and boundary detectors of the alarm system while prevent from triggering the indoor detectors, which may cause improper warning; then, you shall select Arm at Home, let just part of the detectors work and disable the other parts.



Main Unit Operation: Press [At Home ] button on keypad

Remote Control Operation: Press [] button on remote controller

LCD display:



7.1.4 Emergency Help

Press [Emergency ] button on keypad, or [] button on remote controller or wireless panic button, the main unit will alarm and make call to the preset user numbers.

7.2 Answer Alarm Call

When the main unit sounds alarm, it will dial the preset numbers. If no one answers the call, the system will call the next user number automatically. The system will call each preset numbers for 3 times in order.

If you answer the call, you will hear the pre-record voice. You can set system via your telephone or mobile phone keypad.

If you hang-up directly without answering the call, the system will call each preset number for 3 times circularly.

Press [*]: Read the alarm information.

Press [1]: Main unit stops alarming and Arm; it stops calling users.

Press [2]: Main unit stops alarming and Disarm; it stops calling users.

Press [3]: Siren off and monitors the scene for 30 seconds; for continued monitoring, press [3] again to monitor for another 30 seconds.

Press [4]: Main unit starts a 30-second two-way intercom. It cannot be controlled by the mobile during the time of intercom.

7.3 Remote Control

Dial the number associated to the alarm main unit by phone (mobile phone), and after one ringing cycle, you can hear a voice prompt "Please enter password". If the password is right, you will here "Press 1 to arm, Press 2 to disarm, Press 3 to Monitor, Press 4 to Intercom". If the password is wrong, you will hear a prompt voice "wrong password, please re-enter".


Press [1]: arm, if finished successfully, you will hear a voice prompt "System armed".


Press [2]: disarm, if finished successfully, you will hear a voice prompt "System disarmed".

Press [3]: monitoring for 30 seconds, to continue monitoring, press [3] again to monitor for another 30 seconds.

Press [4]: two-way intercom for 30 seconds. You can't operate the main unit during this time.

7.4 System Dialing Function

In disarm status, you can use the main unit to make any call just like a land-line telephone. Dial telephone number on keypad, press [] button, the main unit will make a beep and the [**Signal**] indicator will be flashing.

After the call, press [] button again, the main unit will be in disarm status.


Alarming Record Checking

In disarm state, input [*0#], then the main unit will make a long beep and enters the state of alarm record checking. After displaying the alarm and defense zone number indicator, the LCD screen will display the exact alarming time of this defense zone. Press 2, you can upturn to check the previous alarming record; press 8, downturn to check; and press [*#] to exit checking.

For example: the 51st defense zone; the 7th alarming; alarming time: 12:10, August 1st, 2008. LCD display for one second, and then display the alarming time:



and then display the alarming time:

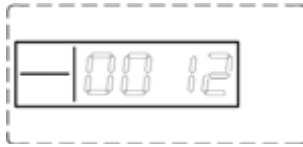


GSM Signal Checking

Before installing the main unit, you should check the signal of the installing place in order to ensure the unit can perform well. In setup state, input [81]

⇒#, the main unit will make a long beep and display 00+XX (XX indicates the intensity of the signal). And the intensity should be within the range of 07-31; if it's less than 07, you should change place.

For example: if the signal intensity is 12, it will display as:

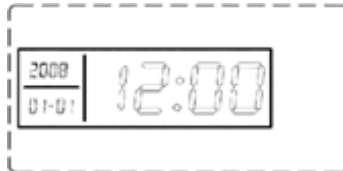

Note:

Only under Out Arm status, the system has the function of sending SMS alert for power failure/ power recovery. While in Disarm or Home Arm status, it does not.

The SMS content:

Power failure: Power changer off

Power recovery: Power changer on

8. Technical Parameters

List 1:

Input Voltage	DC12V/1A
Standby Current	<55mA
Alarming Current	<450mA
Wireless Frequency	315/433MHz, PT2262/EV1527, 4.7MΩ

GSM Frequency		900/ 1800/ 1900MHz
Back-up Battery		NI-HI AAA*6 DC7.2V
Siren Volume		110dB

List 2:

Defense Zone	Arm	Home Arm	Type	Alarm Information	Siren
Zone 1	effective	invalid	real-time	Door alarm	yes
Zone 2	effective	invalid	real-time	Hall alarm	yes
Zone 3	effective	effective	real-time	Window alarm	yes
Zone 4	effective	effective	real-time	Balcony alarm	yes
Zone 5	effective	effective	24 hours	Fire alarm	yes
Zone 6	effective	effective	24 hours	Gas alarm	yes
Emergency button	effective	effective	24 hours	Emergency alarm	no
Zone 7-99	effective	invalid	real-time	Emergency alarm	yes
Wired defense zone (96-99)	effective	invalid	real-time	Emergency alarm	yes
Operation Password	8888		Remote control	On	
Remote control Password	1234		Siren	Off	
Siren sound time	180 sec.		Home Appliance	Optional	

9. Care

The alarm system has excellent design and uses advanced technologies. It shall be used with care. The following suggestions are required to maintain your obligations under the warranty terms, and for prolonging the service life of the system.

- 1) Place the control panel and all parts and accessories out of children's reach.
- 2) Keep the alarm system dry. Rain, humidity and various fluids or moisture all will corrupt the electronic circuit.
- 3) Do not use or place the alarm system in dirty locations, otherwise the electronic elements will be damaged.
- 4) Do not place the system in excessively hot locations. High temperature will shorten the service life of electronic equipment, damage batteries, deform or even melt some plastic parts.
- 5) Do not place the system in excessively cold locations. Otherwise condensation may occur and damage the circuit board of the alarm system.
- 6) It is recommended that you check and test the alarm system periodically:

Check the main unit every three months:

- 1) Whether it can arm/disarm normally;
- 2) Whether it can dial the number for alarm normally;
- 3) Whether it can receive wireless detectors' signal normally;
- 4) Whether the back-up battery can work normally.

Check the wireless detectors once a month:

- 1) Trigger wireless detectors to see if system can alarm normally;
- 2) Check all detectors' batteries to see if it's in low voltage;
- 3) Check whether wireless detectors can send signal to the main unit normally.

Check the SIM card:

- 1) Check the use of SIM card, such as network signal, balance, etc.

- 2) Make sure the PIN code verification of the SIM card is closed.
- 3) Please keep the password and SIM card number safe, in case that other people remote control the system illegally.
 - a. Since the alarm system is continuously in operation or standby mode, the supply adaptor of the control panel shall be connected to a safe and reliable socket.
 - b. Do not place the system near your bedroom or office table, because the siren will make high-loudness sound in the case of alarm, which may adversely affect your rest or work.
 - c. If the alarm system will not be used for a long time, please disconnect the system from the power supply.
 - d. Please do not disassemble, repair or alter the products without permission, or it may cause accidents and faults.
 - e. Do not drop this product on the ground or on hard objects, as it may lead to massive impact to cause faults and damages.
 - f. Without approval and consent of relevant authorities, please do not set “110”, “119” or the alarm phone number of police station for this main unit.

Please read the suggestions above carefully and follow the instructions herein. If any of the equipment does not work properly, please send it to the dealer or authorized service point for repair. We will try our best to solve the problem for you as soon as possible.

10. Add/Cancel wireless sensors to the Control Unit

Wireless sensors are pre-coded prior to shipping. Add additional wireless sensors as below:

- 1) Open the back cover of the Wireless sensor carefully;
- 2) Locate the IC boards black jumpers, labelled A0-A7 and D0-D3.
- 3) The A0-A7 , 3X8 PIN connectors, are the **Wireless Address bits** code area, and the D0-D3 are 3X4 PIN connectors, are **Wireless data bits** code area;
- 4) Also, you can see the H, N, and L letters besides the 3X8 PIN and 3X4 PIN connectors, like below;

- 5) Connect L and N is means 0, and connect H and N is means 1, connect neither L and N nor H and N is means 2 ;
- 6) According to below table, select the Zone and set the 3X4 PIN Wireless data bits code area according to selected zone.
- 7) Make sure the jumpers are correct. Then install the cover carefully.
- 8) Turn off the sensors' power before setting .
- 9) Trigger the wireless sensor and test the setting result. If the wireless sensors do not work, please check the jumpers again.
- 10) You can set many sensors in the same zone.

Example: If the Control Unit ID is 02102101 at the label (that is to say, the A0-A7 is 10120120), and you want to set all wireless PIR sensor in the zone 3(the D0-D3 is 0101), then you can set the jumper like below:



11. Technical specifications of Control Unit

Power requirements: DC 12V

Operating temperature: -20°C to 60°C

Humidity: 20 % to 95%

Dimension: 180 x 130 x 32 mm

GSM network frequency: 900/1800/1900 MHz

Work Frequency: $315\text{MHz} \pm 0.5\text{MHz}$ or $433 \pm 0.5\text{MHz}$

12. Important information

12.1 Please read the User Manual carefully before you install the Control Unit and set the Control Unit.

12.2 Do not install the system in close vicinity with objects that generate strong interference, such as TV set and computer.

- 12.3 Install the system in a hidden place.
- 12.4 Avoid getting water into the Control Unit.
- 12.5 Have a secure connection to the main power supply and provide good ventilation..
- 12.6 This product was designed for the indoor use.
- 12.7 Opening the control unit cover will void the warranty.

13. Maintenance

- 13.1 In case of failure, please contact the distributor or manufacturer.
- 13.2 If the Control Unit works, while the remote controllers and other sensors fail, please check and change the battery.
- 13.3 If the remote controller works, but the ,Control Unit fails to telephone or send SMS texts, switch the power of Control Unit off and switch it on after one minute . Test this system after another minute, or check the settings are correct and the GSM Signals are strong enough.
- 13.4 If the Control Unit can run and sensors work, but cannot send SMS texts or dial telephones, please change SIM Card to check it.
- 13.5 If the problem cannot be solved, please contact the distributor or manufacturer.

14. Warranty

- 14.1 This system is warranted to be free of defects in material and workmanship for one year from the date of purchase.
- 14.2 This warranty does not extend to any defect, malfunction or failure caused by abuse or misuse by the Operating Instructions. In no event shall the manufacturer be liable for any alarm system altered by purchasers.

The End!

Thanks for you use our GSM Alarm System

Any questions please contact us feel free!

Warranty Card

Model _____ Product ID _____

Date of Purchase _____

Date of Production _____

Maintenance Record

Dealer _____