

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

! — Important


💡 — Hint

📄 — Note

Thank you for purchasing a RadioShack Amplified Indoor TV Antenna. Your antenna provides excellent reception of VHF and UHF broadcast TV channels and FM radio stations in most listening locations. You can connect the antenna's 75-ohm connector directly to your TV or FM receiver.

39-inch, Telescoping, black chrome-plated, VHF/FM antenna elements — fully adjustable to give you the best possible reception.

Gold plated 75-ohm Coaxial Connector and Cable (supplied) — for use with cable-ready televisions.

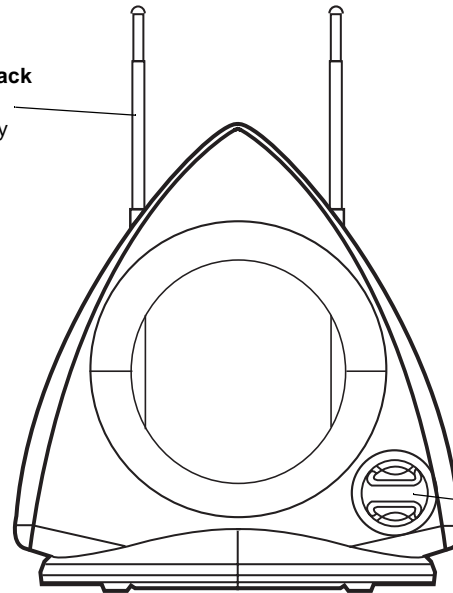

12 Position Phase Control — lets you improve picture quality as needed.

CHOOSING A MOUNTING LOCATION

To get the best performance from your antenna, select a mounting location indoors, on a flat surface, as high as possible, such as on top of your TV. Make sure the front of the antenna faces the general direction of the nearest television or radio station's broadcasting antenna.

For the best results, make sure the antenna is located away from obstructions such as metal cabinets or bookshelves. Do not place the antenna near any metal surface such as a refrigerator, a metal door or wall, or a water pipe hidden behind a wall. This greatly reduces the antenna's ability to receive signals. 📄

📄 NOTE 📄

Higher frequencies are noticeably affected by obstructions.

💡 HINT 💡

In weak-signal areas you might get slightly better reception by doing the following:

- For Channels 7-13 and FM radio, shorten the telescoping elements slightly.
- For all other VHF channels, adjust the angle of the telescoping elements.

CONNECTING AND TUNING THE ANTENNA

1. Connect the 75-ohm coaxial cable to your TV's antenna input terminal or your radio's FM antenna input terminal.

If your TV has screw terminals for VHF/UHF connection, connect an optional 75-to-300 ohm transformer between the coaxial cable and the VHF/UHF terminals.

If your TV has a 75-ohm VHF connector and a 300-ohm UHF connector, connect an optional signal splitter between the coaxial cable and the TV's VHF/UHF connector.

2. Fully extend the telescoping antenna elements.
3. *For VHF TV Channels 2-13 and FM radio stations, adjust the rotary knob until you get the best picture and sound.*

For UHF TV channels 14-69, rotate the base of the antenna until you get the best picture and sound. 💡



RadioShack®

www.radioshack.com™

SPECIFICATIONS

Reception	FM, VHF, and UHF
Operating Bands	88–108 MHz, 54–890MHz
Output Impedance	75 Ohms
Dimensions (HWD)	9 ¹ / ₂ × 9 ¹ / ₈ × 4 ¹ / ₂ inches (24.1 × 23.2 × 11.4 cm)
Weight	1.5 lb. (0.68 kg)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99