

Uniden®

**QUICK
EASY
STEPS**

for setting
up your
phone!

SEE YOUR
QUICK REFERENCE
GUIDE SECTION

BUY
ADDITIONAL
HANDSET
FOR TRU 5885
(see back
for details)

TRU 5885/5885-2 SERIES



OWNER'S MANUAL

www.uniden.com

Contents

WELCOME/FEATURES	3	Editing or Erasing a Stored Name, Phone Number	32
QUICK REFERENCE GUIDE	5	Distinctive Ring, and Speed Dial	32
CONTROLS AND FUNCTIONS	6	RocketDial (One Touch Dialing)	33
GETTING STARTED	8	Chain Dialing	34
Read this First	8	Memory Dialing (base only)	34
Checking the Package Contents	9	CALLER ID	35
Setting up the Phone	10	Viewing the Caller ID List	36
Terminology	14	Deleting Information from the Caller ID List	37
Setting Caller ID Options	15	Using the Caller ID Message List	38
Selecting a Language	17	Call Waiting Deluxe Features	39
BASICS	18	THE INTEGRATED ANSWERING DEVICE	40
Making and Receiving Calls	18	Turning the Answering System On/Off	40
Redialing a Call	19	Setting up your Answering System	41
Ringer Volume Setup	20	Using your Answering System	47
Ringer Tone Setting	20	Remote Operation	50
Distinctive Ringer Setup	21	EXPANDING YOUR PHONE	53
Adjusting the Earpiece and Handset Speaker Volume	21	How to Distinguish the Original Handset	
Mute Microphone	22	and the Second Handset	53
Tone Dialing Switch-over	22	Registering the Second Handset	53
Traveling Out-of-Range	22	Call Transfer Feature	54
Selecting a Different Channel	23	Second Handset Operation	55
Find Handset	23	ADDITIONAL INFORMATION	57
3-Way Conferencing	23	Changing the Digital Security Code	57
Transferring a Call	24	Installing the Beltclip	58
Flash and Call Waiting	25	Headset Installation	58
New Message LED	25	Note on Power Sources	59
PHONEBOOK	26	Maintenance	59
Storing Phone Numbers, Names,		General Information	60
Distinctive Rings, and Speed Dial	26	TROUBLESHOOTING	61
Steps for Entering Names and Special Characters	28	PRECAUTIONS & WARRANTY	63
Viewing the Phonebook	30	I.C. NOTICE	65
Making Calls Using the Phonebook	31	INDEX	66
Speed Dialing	31	REMOTE OPERATION CARD	67

Welcome

Congratulations on your purchase of the Uniden cordless telephone. This phone is designed and engineered to exacting standards for reliability, long life and outstanding performance. To enjoy the best performance from this phone's features, please read this manual carefully and save it for future reference.

Note: Some illustrations in this manual may differ from the actual unit for explanation purposes.



As an Energy Star® Partner, Uniden has determined that this product or product models meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark.

Note: Energy Star® applies to TRU5885 only.

Features

- 5.8 GHz Spread Spectrum Technology
- Integrated Answering Device (Trilingual Announcement Option)
- Two Handset Expandability
- Hands Free Speakerphone in the Handset
- Caller ID and Call Waiting Caller ID
- Dynamic Memory Location for Caller ID Messages and Phonebook Locations (up to 100 numbers in total)
- Trilingual Language Option (Handset)
- 4 Hour Talk Time
- 8 Day Standby Battery Life
- 3-Line, 16 Character Backlit Handset Display
- One Touch Dialing
- Call Transfer
- 32 Digit Redial / 3 Last Number Redial Locations (handset only)
- 10 Distinctive Ring Options (6 ringers and 4 melodies)
- Mute Feature
- Flash and Pause
- Find Handset
- Hearing Aid Compatible
- Tone/Pulse Dialing
- Handset Earpiece, Handset Speaker and Ringer Volume Control
- 10 Number Memory on the Base
- Base Speakerphone with Keypad
- Base Speaker Volume
- 3-way Conference Operation
- Handset Remote Operation
- Call Timer

The TRU5885 series features include ***AutoTalk™*** and ***AutoStandby™***. AutoTalk allows you to answer a call by just removing the handset from the base so you don't have to waste time pushing buttons. AutoStandby allows you to hang up by simply returning the handset to the base.

To protect you against mis-billed calls, which might result from your phone being activated by other equipment, the TRU5885 series has ***Random Code™*** digital security, which automatically selects one of over 65,000 digital security codes for the handset and base.

RocketDial™ is a one touch speed dial key that automatically dials your most important or frequently called number. The number dialed, is a preset number stored by the user.

Digital Spread Spectrum Technology utilizes a "wider frequency band" vs. a "single narrow band" used in standard digital transmissions. The result is a more secure conversation with the clarity of digital sound, extended range, and minimal interference from other cordless phones.

Be sure to visit our web site: www.uniden.com

Uniden® is a registered trademark of Uniden America Corporation.

AutoTalk, AutoStandby, Random Code, and RocketDial are trademarks of Uniden America Corporation.

Step 1 Charging the Battery


INSTALL THE HANDSET BATTERY

- 1 Remove the cover.
- 2 Connect the battery pack connector with the correct polarity.
- 3 Replace the cover.

Step 2 Connecting

CONNECT TO A PHONE LINE


When the handset battery pack is fully charged, plug the telephone cord into the base unit and then into a telephone wall jack.

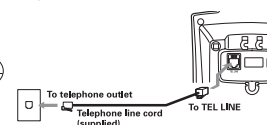

Your phone is set for tone dialing. If your local network requires pulse dialing, please see "Setting up the phone, Choose the dialing mode" in your owner's manual.

PLUG INTO AC POWER

- 1 Plug the AC adapter cord into the base unit and then to a 120V AC outlet.

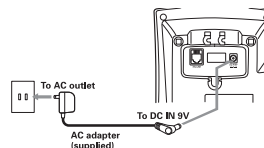

- 2 Place the handset in the base.

Note: You must charge the battery pack continuously for 15-20 hours before using the phone.

Step 3 Setting up the Caller ID Options/Language



Note: Three Caller ID options are available: Auto Talk, Caller ID on Call Waiting (CIDCW) and Area Code.


TO SELECT CALLER ID OPTIONS

- 1 Press **menu/mute**.
- 2 Press **+ or -** to move the pointer to "Caller ID Setup", then press **select/ch**.
- 3 Press **+ or -** to move the pointer to an option, then press **select/ch**.
- 4 Press **+ or -** to change the option setting.
- 5 Press **select/ch** and return the handset to the base.

TO CHOOSE THE LANGUAGE

- 1 Press **menu/mute**.
- 2 Press **+ or -** to move the pointer to "Language", then press **select/ch**.
- 3 Press **+ or -** to change the option setting.
- 4 Press **select/ch** and return the handset to the base.

Step 4 Setting up Answering System

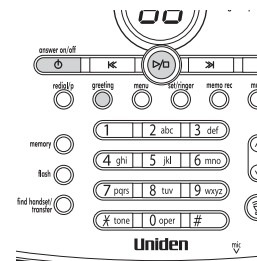


TO TURN THE ANSWERING SYSTEM ON/OFF


Press **answer on/off** to turn On the system. To turn Off the system, press **answer on/off** again.

TO SET GREETING MESSAGE

- 1 Press and hold **greeting**.
- 2 Start recording your message. Position yourself as near to the base as possible.
- 3 When finished, press **greeting** or **>/□**.

Controls and Functions

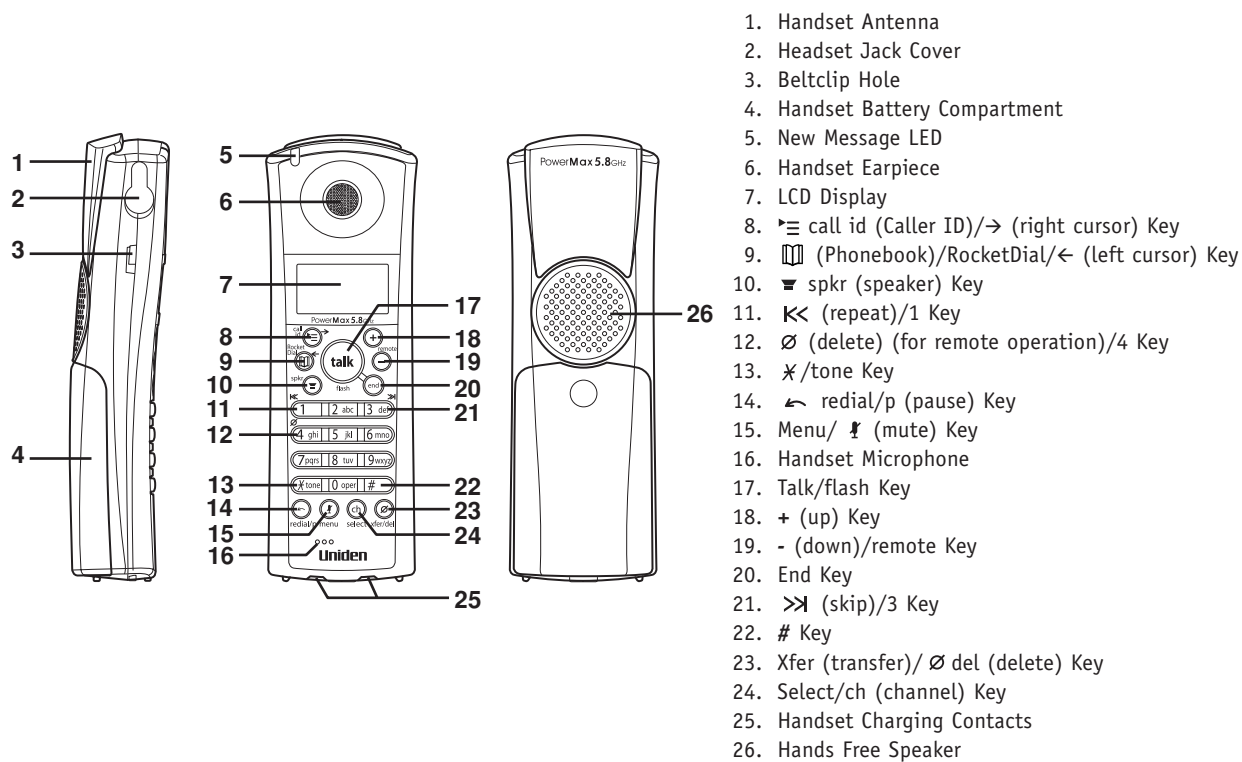

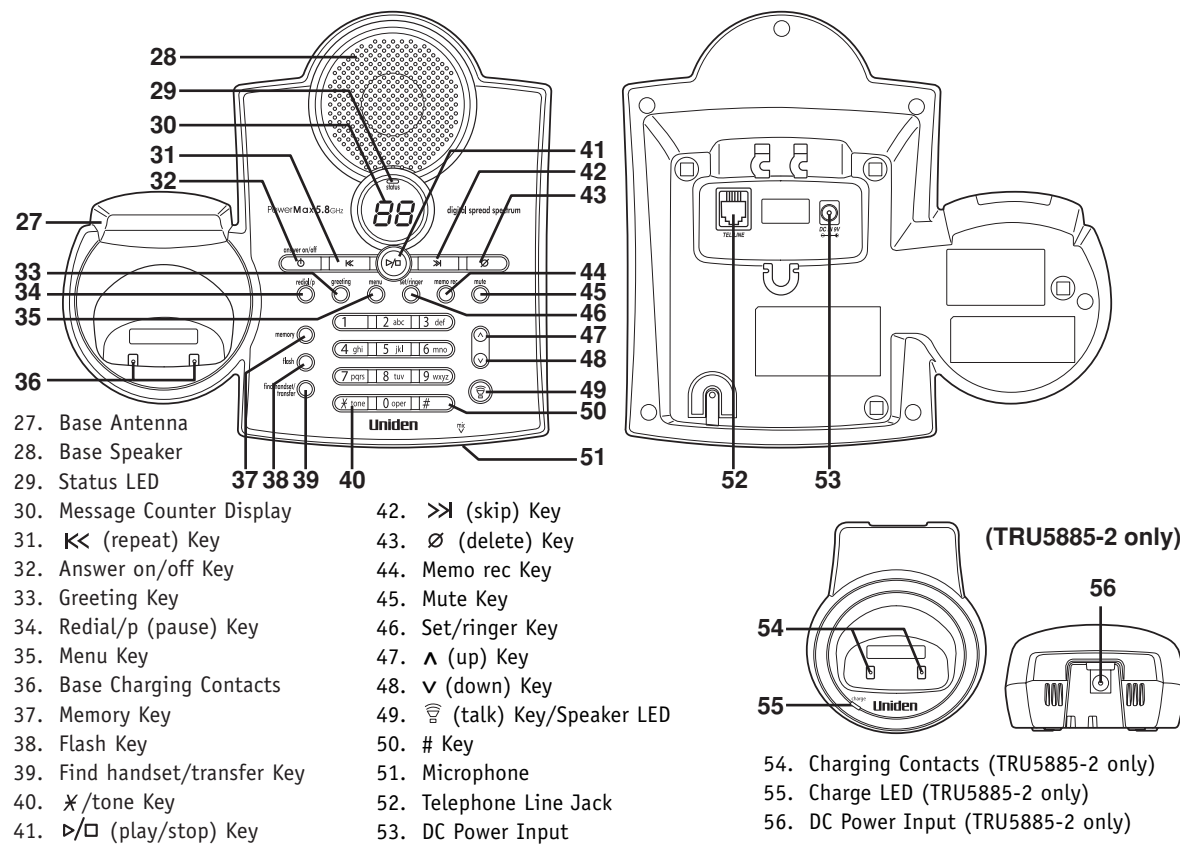

Read this First

This cordless telephone must be set up before use. Follow these steps:

Step 1 (page 9)

Unpack the telephone and accessories.

Step 2 (page 10)

Next, choose the best location to set up the base unit.

Step 3 (page 11 to 14)

Then, insert the battery pack into the handset. Connect the base unit. You must charge the battery pack **for 15-20 hours before plugging into the phone line and using the phone.**

Step 4 (page 15 to 17)

Finally, set the Caller ID options, and store your area code in the memory to use the Caller ID service. Choose the language of your display.

Note: Skip the area code setting if your calling area requires 10-digit dialing.

About the digital security code

This cordless telephone uses a digital security code to prevent unauthorized access to your base unit. This security code prevents other cordless handsets from making calls through your base unit. If you want to change the security code, see page 57.

Checking the Package Contents

Make sure you have received the following items in the package. If any of these items are missing or damaged, contact the Uniden Parts Department.

- Base unit (1)
- Handset [TRU5885 (1) / TRU5885-2 (2)*]
- AC adapter [TRU5885 (1) / TRU5885-2 (2)]
- Rechargeable battery [TRU5885 (1) / TRU5885-2 (2)]
- Telephone cord (1)
- Beltclip [TRU5885 (1) / TRU5885-2 (2)]
- Charger (1) [TRU5885-2 only]

Also included:

- This Owner's Manual
- Other Printed Material

* For operations and restrictions on the second handset, read "Expanding Your Phone" on page 53.

Uniden Parts Department
(800) 554-3988
Hours: M-F 7:00 a.m. to 5:00 p.m. CST.
We can also be reached on the web at www.uniden.com.


Setting up the Phone

Do the following steps:

- A. Choose the best location
- C. Connect the base unit
- B. Install the battery pack
- D. Choose the dialing mode

A. Choose the best location

Before choosing a location for your new phone, read “Installation Considerations” on page 64. Here are some important guidelines you should consider:

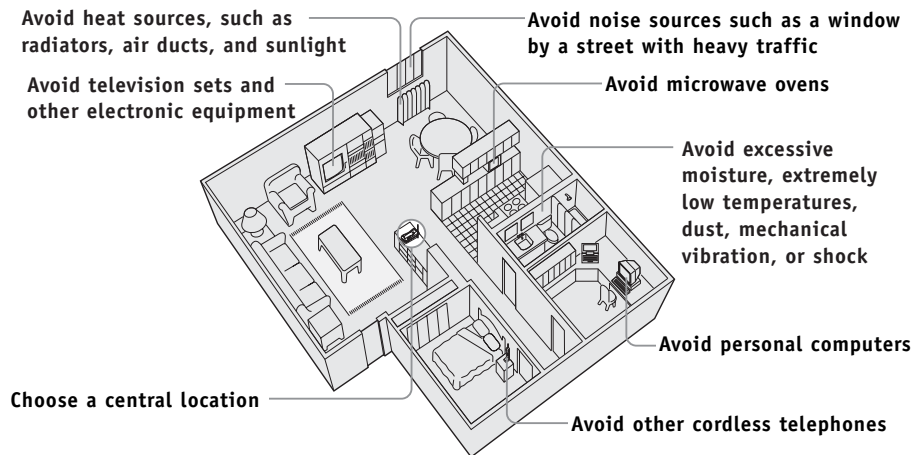


B. Install the battery pack

Charge the battery pack for at least 15-20 hours before plugging the phone line into your base unit.

- 1) Press down on the battery cover release and slide the cover down until it comes off.
- 2) Connect the battery pack connector observing the correct polarity (black and red wires) to the jack inside the battery compartment.

Do not exert any force on this connection. It could cause damage to the battery or to the handset. The plastic connectors will fit together in only one way. Once you are certain that you have made a good connection, then insert the battery pack into the battery compartment. Do not pinch the wires.
- 3) Securely close the battery compartment cover by sliding it up until it snaps into place.
- 4) Place the handset in the charging cradle with the keypad facing forward.

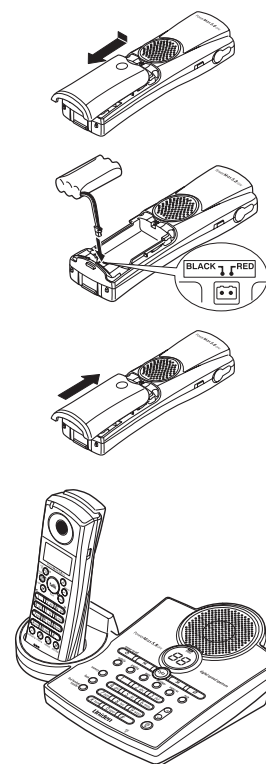

- Use only the Uniden battery (BT-446) supplied with your phone. Replacement batteries are also available through the Uniden Parts Department. (See page 9.)
- Recharge your phone on a regular basis by returning the handset to the base after each phone call.


Battery use time (per charge)

Fully charged

- 4 hours continuous use
- 8 days when the handset is in the standby mode




When you charge the handset, Caller ID summary screen and the name of the handset, **HS1** appears. For TRU5885-2, if **HS2** appears, you are charging the handset No. 2.



Low battery alert

When the battery pack is very low and needs to be charged, the phone is programmed to eliminate functions in order to save power. If the phone is in the standby mode, "Low Battery" appears on the LCD and none of the keys will operate. If the phone is in use, "Low Battery" appears and the handset beeps. Complete your conversation as quickly as possible and return the handset to the base unit for charging.




The last number dialed in the redial memory is retained for up to 2 minutes while you replace the battery pack.

Cleaning the battery charging contacts

To maintain a good charge, it is important to clean the battery contacts on the handset and base unit with a dry cloth or a pencil eraser about once a month.

Do not use any liquids or solvents.

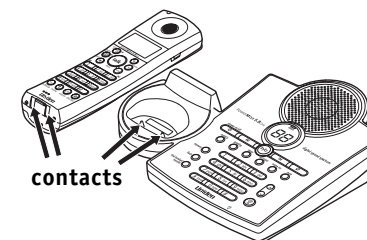

C. Connect the base unit

- 1) Connect the AC adapter to the **DC IN 9V** jack and to a standard 120V AC wall outlet.
“88” appears on the base, and it will change to “0” after a few seconds. “0” indicates that there are no messages in your answering system.

- 2) Set the base and charger (for TRU5885-2 only) on a desk or tabletop, and place the handset in the base unit as shown.

- 3) Make sure the **status** LED illuminates. If the LED does not illuminate, check to see that the AC adapter is plugged in and that the handset makes good contact with the base charging contacts.






- **Use only the supplied AD-313 AC adapter.**
Do not use any other AC adapter.
- Connect the AC adapter to a continuous power supply.
- Place the base unit close to the AC outlet so that you can unplug the AC adapter easily.

- After installing the battery pack in the handset, charge your handset at least **15-20 hours before plugging into the phone line.** Once the handset battery pack is fully charged, connect the telephone line cord to the base and telephone wall outlet.

- 4) Connect the telephone line cord to the **TEL LINE** jack and to a telephone outlet once the handset is fully charged.



If your telephone outlet isn't modular type, contact your telephone company for assistance.

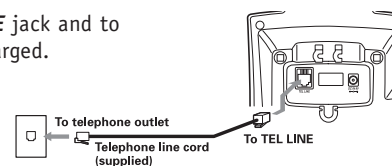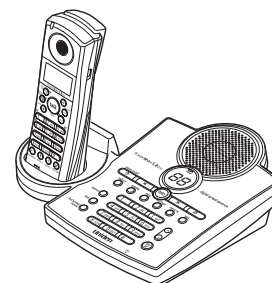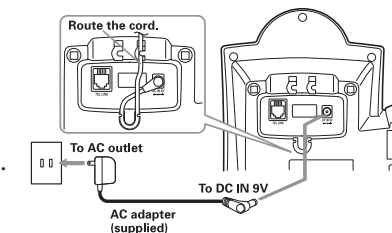

Place the power cord so that it does not create a trip hazard or where it could become chafed and create a fire or electrical hazard.



- If you are not sure of your dialing system, set the unit to tone dialing. Make a trial call. If the call connects, leave the setting as is, otherwise set the unit to pulse dialing.
- If your phone system requires pulse dialing and you need to send DTMF tones in certain situations during a call, you may “switch-over” to tone dialing. (Refer to “Tone Dialing Switch-over” on page 22.)

D. Choose the dialing mode

Most phone systems use tone dialing, which sends DTMF tones through the phone lines. However some phone systems still use pulse dialing such as in rural areas. The default setting is tone dialing. Depending on your dialing system, set the mode as follows:

- 1) When the phone is in the standby mode, press **menu/mute**.

```
Ringer Volume
Ringer Tones
Distinct. Ring
```

- 2) Press **+** or **-** to move the pointer to “Dial Mode”.

```
Distinct. Ring
Caller ID Setup
▶ Dial Mode
```

- 3) Press **select/ch** and the display will show the current setting.
(The initial setting is Tone.)

```
▶ Tone Dialing
Pulse Dialing
```

- 4) Press **+** or **-** to change the selection.

- 5) Press **select/ch**, and you will hear a confirmation tone.

- 6) Press **end** to exit.

Terminology

Throughout this manual, terms such as Standby and Talk Mode are used. Below is the terminology explanation.

Standby Mode - The handset is not in use, is off the base, and **talk/flash** or **spkr** have not been pressed. A dial tone is not present.

Talk Mode - The handset is not in the base and **talk/flash** or **spkr** has been pressed enabling a dial tone. “Talk” appears on the display.

Setting Caller ID Options

There are three Caller ID setup options available: AutoTalk, CIDCW (Caller ID on Call Waiting), and Area Code. See page 16 for Area Code setup instructions.

AutoTalk allows you to answer the phone without pressing *talk/flash* or *spkr*. If the phone rings when AutoTalk is On, simply remove the handset from the base and the phone automatically answers the call. Or if the handset is not in the base, press any number key, *X/tone*, or *#* to answer the call. If you set AutoTalk to Off, you must press *talk/flash* or *spkr* to answer the call.

Caller ID on Call Waiting (CIDCW) performs the same as regular Caller ID on a call waiting number. CW Deluxe allows you to handle call waiting calls in seven different ways. (See page 39.)

You must subscribe to CIDCW from your phone company in order to use this feature.

The CW Deluxe is a separate service available through your phone company.

To change your Caller ID options:

1) When the phone is in the standby mode, press *menu/mute*.

```

Ringer Volume
Ringer Tones
Distinct. Ring
  
```

2) Press *+* or *-* to move the pointer to "Caller ID Setup", then press *select/ch*.

```

Ringer Tones
Distinct. Ring
Ringer ID Setup
  
```

3) Press *+* or *-* to choose "Auto Talk" or "CIDCW", then press *select/ch*.

```

Auto Talk
CIDCW
Area Code
  
```

4) Press *+* or *-* to change the selection.

AutoTalk: "Auto Talk On" or "Auto Talk Off"

```

Auto Talk On
Auto Talk Off
  
```

CIDCW: "CIDCW On", "CW Deluxe On" or "CIDCW Off"

```

CIDCW On
CW Deluxe On
CIDCW Off
  
```

5) Press *select/ch*, and you will hear a confirmation tone.

6) Press *end* to exit.



- If your calling area requires 10-digit dialing, do not program this option.
- When the area code has already been stored in memory, the stored area code will be displayed. To change it, press **xfer/del** three times. Then enter the new area code. Or you can use **⏏/RocketDial/←** or **call id/→** to move the cursor and edit area code.

Entering Your Area Code

If you enter a 3-digit area code number in the “Area Code” option, your local area code does not appear in Caller ID messages. For calls received from outside your local area code, you will see a full 10-digit number.

1) When the phone is in the standby mode, press **menu/mute**.

Ringer Volume
Ringer Tones
Distinct. Ring

2) Press **+** or **-** to move the pointer to “Caller ID Setup”, then press **select/ch**.

Ringer Tones
Distinct. Ring
Caller ID Setup

3) Press **+** or **-** to move the pointer to “Area Code”, then press **select/ch**.

Auto Talk
CIDCW
Area Code

4) Use the number keypad (**0** to **9**) to enter a 3-digit area code.

Area Code


5) Press **select/ch**, and you will hear a confirmation tone.

6) Press **end** to exit.

Selecting a Language


Language option can be used to choose the language of your display. You can select English, French, or Spanish.

- 1) When the phone is in the standby mode, press **menu/mute**.




Ringer Volume
Ringer Tones
Distinct. Ring

- 2) Press **+** or **-** to move the pointer to "Language", then press **select/ch**.



Caller ID Setup
Dial Mode
Language

- 3) Press **+** or **-** to choose English, French (Français), or Spanish (Español).



English
Français
Español

- 4) Press **select/ch**, and you will hear a confirmation tone.

- 5) Press **end** to exit.



- Refer to page 15 “Setting Caller ID Options” to turn the AutoTalk feature On if desired. Any key answer can be used only when AutoTalk is set to On.
- The handset microphone is located on the bottom of the handset (see “Controls and Functions” on page 6). Position yourself as near to the handset as possible and speak clearly.
- The base microphone is located under the base. Position yourself as near to the base as possible and speak clearly.

Making and Receiving Calls

On the handset, you may also use the speakerphone while talking on your phone. Using the handset speakerphone is called “hands-free conversation”. This feature allows you to easily communicate while performing other tasks, such as cooking.  appears during hands-free conversation.

You can easily switch a call from normal conversation to “hands-free conversation”. To switch a call, press **spkr** during the call.

	From the Handset		From the base
	Normal conversation	Hands-free conversation	
To answer a call	Handset on the Base Pick up the handset (AutoTalk) or pick up the handset and press talk/flash . Handset off the Base Press any number key, */tone , or # (Any Key Answer), or press talk/flash .	Handset off the Base Press spkr .	Press  (talk).
To make a call	Handset off the Base 1) Press talk/flash . 2) Listen for the dial tone. 3) Dial the number. OR Dial the number, then press talk/flash . Note: If a call is not established, you will hear a beep and “Unavailable” will appear in the display.	Handset off the Base 1) Press spkr . 2) Listen for the dial tone. 3) Dial the number. OR Dial the number, then press spkr .	1) Press  (talk). 2) Listen for the dial tone. 3) Dial the number.
To hang up	Press end , or return the handset to the base (AutoStandby).		Press  (talk).
To enter a pause within the dialing sequence	When you dial the number, press redial/p . “P” appears in the display, which represents a pause.		Pressing  (talk). When you dial the number, press redial/p .

Redialing a Call

The last three phone numbers dialed can be quickly redialed.

Redialing from Standby Mode

- 1) Press **redial/p**. The phone number that was last dialed appears on the display.
- 2) Press **redial/p** again. Each press of **redial/p** will display one of the last three numbers dialed.
- 3) Press **talk/flash** or **spkr**. The selected number is dialed.
- 4) To hang up, press **end**.



- If you have not pressed any key for 30 seconds, the phone returns to standby mode.
- If you press **end**, the operation is canceled and the phone will return to the standby mode.

Redialing from Talk Mode


- 1) Press **talk/flash** or **spkr**.
- 2) Press **redial/p**. The last number dialed will be displayed and redialed.
- 3) To hang up, press **end**.



- When using the redial feature in talk mode, only the last number dialed will be displayed.

Redialing from the Base

- 1) To call the last number dialed from the base, press **☎** (talk).
- 2) Press **redial** on the base. The last number dialed from the base is redialed.
- 3) To hang up, press **☎** (talk).

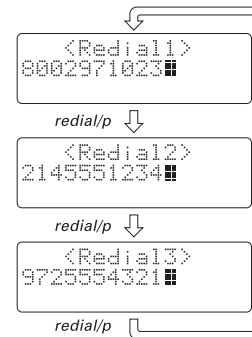

- If the number exceeds 32 digits, only the first 32 digits are retained in redial memory.
- If the redial memory is empty, you will hear a beep.



- If you select “Ringer Off”, “<Ringer Off>” appears on the display when you make or receive calls, or charge the handset.

- If you set the ringer to Off, the ringer tone will not sound.

Ringer Volume Setup

- 1) When the phone is in the standby mode, press **menu/mute**.
- 2) Press + or - to move the pointer to “Ringer Volume”.
- 3) Press **select/ch**.
- 4) Press + or - to move the pointer through the ringer settings (Ringer Off, Ringer Low, or Ringer High).
You will hear a ringer or melody at the selected volume.
- 5) Press **select/ch**, you will hear a confirmation tone.
- 6) Press **end** to exit.

▸ Ringer Volume
Ringer Tones
Distinct. Ring

Ringer Off
Ringer Low
▸ Ringer High

Ringer Mute (temporarily)

You can temporarily mute the ringer tone. When the handset is off the base and the phone is ringing, press **end**. The ringer tone will return to the previous setting starting with the next incoming call.

Ringer Tone Setting

- 1) When the phone is in the standby mode, press **menu/mute**.
- 2) Press + or - to move the pointer to “Ringer Tones”, then press **select/ch**.
You can choose from 6 ringers or 4 melodies:
 - Ringers [Flicker, Clatter, Leap Frog, Ping Ball, Reminder, Soft Alert]
 - Melodies [Beethoven9, For Elise (Elise), Merry Christmas (Merry-Xmas), Home Sweet Home (Hm Swt Hm)]
- 3) Press + or - to move the pointer. You will hear the ringer or the melody as you scroll through the options.
- 4) Press **select/ch** and you will hear a confirmation tone.
- 5) Press **end** to exit.

▸ Ringer Volume
Ringer Tones
Distinct. Ring

Ringer Volume
▸ Ringer Tones
Distinct. Ring

▸ Flicker
Clatter
Leap Frog

Distinctive Ringer Setup

“Distinctive Ringer” allows you to preset memory locations with a designated ring tone. When an incoming call is received and the Caller ID information matches the information in one of the memory locations, the Distinctive Ring that has been stored for that particular caller will sound.

If you have set multiple memory locations with distinctive rings, switching the setting to “Distinctive Off” will result in no distinctive ringing. All incoming calls will have a normal ring tone. Switching to “Distinctive On” will activate all programmed distinctive ring memory locations.

- 1) When the phone is in the standby mode, press **menu/mute**.
- 2) Press **+** or **-** to move the pointer to “Distinct. Ring”, then press **select/ch**.
- 3) Press **+** or **-** to choose “Distinctive On” or “Distinctive Off”.
- 4) Press **select/ch**, and you will hear a confirmation tone.
- 5) Press **end** to exit.

```

Ringer Volume
Ringer Tones
Distinct. Ring
  
```

```

Ringer Volume
Ringer Tones
Distinct. Ring
  
```

```

Distinctive On
Distinctive Off
  
```

Adjusting the Earpiece and Handset Speaker Volume

You can select different volume levels for the handset earpiece and the handset speaker (Volume Low, Volume Medium, Volume High, and Volume Maximum). The volume can only be adjusted during a call. Press **+** or **-** to select the volume settings. When you hang up, the phone keeps the last volume setting selected.

note If you press **+** in maximum volume level or **-** in lowest volume level, you will hear a beep.



See “Storing Phone Numbers, Names, Distinctive Rings, and Speed Dial” on page 26 for storing a Distinctive Rings in the Phonebook.



- If you press **end** to cancel muting, the call is disconnected and the phone will return to standby mode.
- If you press **xfer/del** on the handset or **find handset/transfer** or **flash** on the base while muting, the muting is canceled.
- The tone feature only applies when the dial mode is set to pulse.
- This special number can be stored in a memory location. This is referred to as Chain Dialing. (See page 34.)

Mute Microphone




You can temporarily turn Off the microphone so that the person you are talking with cannot hear you.

With the handset

During a telephone call press and hold **menu/mute** to turn Off the microphone, and “Mute” appears on the display. Press **menu/mute** again to cancel muting.

With the base

During a telephone call press **mute** on the base to turn Off the microphone. **Speaker** LED on the base flashes. Press **mute** again, or press **(talk)** to cancel muting.

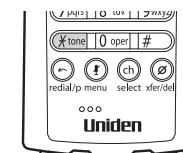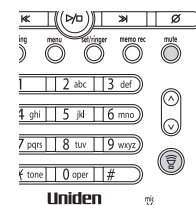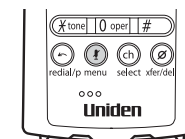

Tone Dialing Switch-over

Some telephone companies use equipment that requires pulse dialing (sometimes referred to as rotary dialing). If you need to enter tone dialing digits, you can switch-over to tone dialing during the call. For example, entering your bank account number after you have called your bank.

Initially make your call with the pulse dialing mode. Once your call connects, press ***/tone**. Enter the desired number. These digits will be sent as tone dialing. Once the call ends, the tone mode is canceled and pulse dialing mode resumes.

Traveling Out-of-Range

During a call, as you begin to move your handset too far from your base unit, noise increases. If you pass the range limits of the base unit, your call will terminate within 30 seconds.

Selecting a Different Channel


If you encounter interference while using your phone, you can manually change the phone's channel for clear operation. This function works only when the phone is in use.

Press **select/ch**. "Scanning" appears on the display, indicating the phone is changing to another channel. For more information on interference, refer to "Radio Interference" on page 64.

Find Handset

To locate the handset, press **find handset/transfer** on the base when the base is in the standby mode. The handset beeps for 60 seconds, and "Paging" appears on the handset display.

Paging is canceled when pressing any key on the handset or **find handset/transfer** on the base. Additionally, if you receive an incoming call, page is canceled.

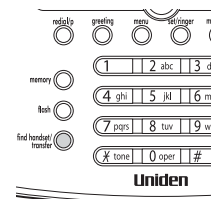

3-Way Conferencing

The phone permits 3-way conversations between the handset, base, and an outside line.


When speaking on the handset

- 1) Press **(talk)** on the base to initiate the 3-way conversation.
- 2) To hang up, press **(talk)** on the base. The handset will still be connected to the call.



When speaking on the base

- 1) Press **talk/flash** on the handset to initiate the 3-way conversation.
- 2) To hang up, return the handset to the base, or press **end** on the handset. The base will still be connected to the call.



- If the handset battery is completely drained, the handset will not beep when paging.
- If you press **xfer/del** on the handset during the 3-way conversation, error tone sounds.
- During the 3-way conversation, all the base keys except **(talk)**, volume **▲ ▼**, and **mute** are disabled.
- If the base and handset do not connect in 30 seconds, the operation is canceled.
- 3-way conferencing is not permitted between the handset speakerphone, base speakerphone and an outside call. If you press **(talk)** on the base when using the handset speakerphone, you will hear a beep, and vice versa.



- While transferring a call, keys on the handset except ***talk/flash*** and ***spkr*** are disabled.

- While transferring a call, keys on the base except  (talk) and ***find handset/transfer*** are disabled.

Transferring a Call



- If you transfer a call and it is not picked up after 5 minutes, the call will be disconnected. The handset returns to the standby mode.
- Returning the handset to the base will not cancel the transfer.
- When the handset is Off the base, and if you place the handset On the base while the transfer tone sounds, you can receive a transferred call by picking up the handset (When the AutoTalk is On).
- If you press ***xfer/del*** (or ***find handset/transfer***) while muting, the muting is canceled.

To transfer from the handset to the base

- 1) Press ***xfer/del*** on the handset during a call. The call will automatically be placed on hold and the transfer tone sounds on the handset and the base.
- 2) Press  (talk) on the base to receive a transferred call. The handset will return to the standby mode. To cancel the transfer, press ***talk/flash*** or ***spkr***.

Hold
Transfer Call

To transfer from the base to the handset

With the ***find handset/transfer*** key

- 1) Press ***find handset/transfer*** on the base during a call. The call will automatically be placed on hold and the transfer tone sounds on the handset and the base.
- 2) Press ***talk/flash*** or ***spkr*** on the handset. (Pick up the handset from the base, or press the number keypad, ***X/tone***, or ***#*** (when the AutoTalk is On)). The transfer tone stops. To cancel the transfer, press ***find handset/transfer*** or  (talk) on the base.

Transfer Call

With the Speakerphone feature

When the Speakerphone is in use and the handset is on the base, a call will be transferred to the handset when you pick up the handset from the base.

For the call transfer between the second handset and the handset or the base, see “Call Transfer Feature” on page 54.



Flash and Call Waiting

If you have Call Waiting service and a call waiting tone sounds while you are on a call, press **talk/flash** (or **flash** on the base) to accept the waiting call. There is a short pause, then you will hear the new caller. To return to the original caller, press **talk/flash** (or **flash** on the base) again.

New Message LED

The **New Message** LED on the handset is designed to work with your answering system. The LED flashes when you have new messages in your answering system.

The LED stops flashing when all new messages are played back (see “Using your Answering System” on page 47).

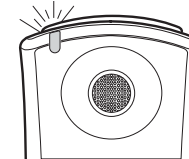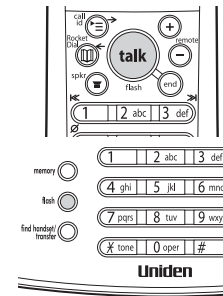

You must subscribe through your local telephone company to receive Call Waiting Service.

Phonebook

Phonebook allows you to dial a number using just a few key presses.

Your phone stores names/numbers in the phonebook memory location, and you can search names in alphabetical order. You have a total of 100 locations that can be used for the phonebook (including the Speed dials) and Caller ID messages.



- If any of the following occurs during a phonebook operation, the operation will be canceled.
 - Press **end**. The phone will return to the standby mode (or the call will be disconnected).
 - Press **talk/flash** or **spkr**.
 - Charge the handset.
 - Receive an incoming call, page, or transferring call (from the standby mode only).
 - Receive a CIDCW (Caller ID on Call Waiting) (during a call only).
- The idle time is 30 seconds. If the handset remains idle for 30 seconds, the phone will return to the standby mode (or back to the call).

Storing Phone Numbers, Names, Distinctive Rings, and Speed Dial

- 1) When the phone is in the standby mode, press **☎/RocketDial/←**.
The handset displays the number of the phonebook locations used, and information on searching and storing phonebook locations.
(1st line) The number of the phonebook locations used
(2nd line) How to search (press the number keypad, + or -)
(3rd line) How to enter the storing operation (press **select/ch**)

```
Phonebook : 85
Search [A-Z/↑/↓]
Store  [select]
```

2) Press **select/ch**, "Store/Edit Name" appears.

Store/Edit Name
■

3) Store the name (up to 16 characters) by using the number keypad.

- See the "Steps for entering names and special characters" (see page 28).
- Use **call id/→** and **■/RocketDial/←** to move the cursor to the desired location.
- Use **xfer/del** to delete characters as needed.
- Press and hold **xfer/del** to delete all the characters.

If a name is not required, go to step 4.

4) Press **select/ch** to store the name,
"Store/Edit No." appears.

Store/Edit No.
■

5) Press the number keypad to enter the phone number (up to 20 digits),
press **select/ch** to store the number.

6) "Distinctive Ring" appears. Press + or - to move
the pointer to one of the Distinctive Ring options, then
press **select/ch**.

Distinctive Ring
▶ No Selectn
Flicker

note If you choose not to store a "Distinctive Ring", simply select
the "No Selectn" option.

7) "Speed Dial" appears. Press + or - to move the pointer to
select the Speed dial location (10 locations: SPD1-SPD0).

Speed Dial
▶ No Selectn
SPD1:Uniden Cor

note If you choose not to store the name/number as a Speed Dial, simply
select the "No Selectn" option.

8) Press **select/ch**. You will hear a confirmation tone and
"Done!" appears on the display.



- When the memory is full, you will hear a beep and "Memory Full" appears. You cannot store names and numbers.
- The pause key counts as one digit. Pressing **redial/p** more than once increases the length of pause between numbers.

- If you select a Speed dial location a number is already stored, the new number will replace the old number, and the old number will be stored as a phonebook location.

Steps for Entering Names and Special Characters

Refer to the letters on the number keys to select the desired characters. With each press of a number key (0-9), the displayed character appears in the following order: Upper case letters first, lower case letters next and finally the number corresponding to the key.

	Number of times key is pressed								
keys	1	2	3	4	5	6	7	8	9
1	1								
2abc	A	B	C	a	b	c	2		
3def	D	E	F	d	e	f	3		
4ghi	G	H	I	g	h	i	4		
5jkl	J	K	L	j	k	l	5		
6mno	M	N	O	m	n	o	6		
7pqrs	P	Q	R	S	p	q	r	s	7
8tuv	T	U	V	t	u	v	8		
9wxyz	W	X	Y	Z	w	x	y	z	9
0oper	*	#	-	&	(	)	(blank)	0	

If you make a mistake while entering a name

Use /RocketDial/← or call id/→ to move the cursor to the incorrect character. Press *xfer/del* to erase the wrong character, then enter the correct character. To delete all characters, press and hold *xfer/del*.

For example, to enter **Uniden**:

- 1) When the phone is in the standby mode, press **☰/RocketDial/←**.
The handset displays the number of phonebook locations you have stored, and how to search and store the phonebook locations.
- 2) Press **select/ch**, "Store/Edit Name" appears.
- 3) Press **8** twice.
- 4) Press **6** five times.
- 5) Press **4** six times.
- 6) Press **3** four times, then press **call id/→** to move the cursor to the right.



If the next character uses the same number key, you must press **call id/→** to move the cursor over. Otherwise the next time you press the number key, it changes the character that was previously set.

- 7) Press **3** five times.
- 8) Press **6** five times.
- 9) When finished, press **select/ch**.

To continue to store the telephone number, proceed to step 5 on page 27.



"/SD" appears on the display when you review the RocketDial, and
"/SPDn" appears when you review a Speed dial.

Viewing the Phonebook

Your phone stores names/numbers in the phonebook memory locations, and you can search names in alphabetical order. You can view the phonebook during a call as well as when the phone is in the standby mode.

- 1) Press /RocketDial/←.

If you press /RocketDial/← during a call, the following screen appears.

Phonebook : 85
Search [A-Z/↑/↓]
Store [select]

Phonebook : 85
Search [A-Z/↑/↓]

- 2) Press + or -, or the number keypad to view the phonebook locations.

a) Alphabetical order

Ascending order: Press - to view locations. The location in the RocketDial appears first in the display. Each time - is pressed, phonebook locations appear in ascending order.

Descending order: Press + to view locations. A name starting with a number or a mark, or <No Name> appears first. Each time + is pressed, phonebook locations appear in descending order.

b) From a number key

Refer to the letters on the number keys to select the first letter of the desired name. Press a number key until any name with the same initial is displayed (See the table in "Steps for Entering Names and Special Characters" on page 28).

For example, to search for "Uniden", press 8 two times. Press - or + until the name is displayed. If you press + while the first name in "U" is displayed, a name starting with "T" will appear, or if you press - while the last name in "U" is displayed, a name starting with "V" will appear.

- 3) Press /RocketDial/← (if you view the phonebook during a call) or **end**.

Making Calls Using the Phonebook

From Standby Mode

- 1) When the phone is in the standby mode, press /RocketDial/←.
- 2) Press + or - to view the phonebook locations (see “Viewing the Phonebook” on page 30).
- 3) Press *talk/flash* or *spkr*. The displayed number is dialed.
- 4) To hang up press *end*.

Phonebook : 85
Search [A-Z/↑/↓]
Store [select]

From Talk Mode

- 1) Press *talk/flash* or *spkr*.
- 2) Press /RocketDial/←.
- 3) Press + or - to view the phonebook locations (see “Viewing the Phonebook” on page 30).
- 4) Press *select/ch*. The number in the displayed phonebook location is dialed.
- 5) To hang up press *end*.

Phonebook : 85
Search [A-Z/↑/↓]

Speed Dialing

If you select a speed dial memory location (10 locations: SPD1 - SPD0) when storing a phone number in the phonebook dial location, you can use the speed dialing feature. When the phone is in the standby mode, press and hold a number key (**0-9**) associated with the speed dial. The number stored in the speed dial appears, then press *talk/flash* or *spkr*. The phone number in the speed dial (SPD1 - SPD0) is dialed.

Editing or Erasing a Stored Name, Phone Number, Distinctive Ring, and Speed Dial


- 1) When the phone is in the standby mode, press **☎/RocketDial/←**.
- 2) Press **+** or **-**, or the number keypad to view the phonebook locations (see “Viewing the Phonebook” on page 30).

A screen showing the phonebook menu with three options: "Phonebook : 85", "Search [A-Z/↑/↓]", and "Store [select]".

```
Phonebook : 85
Search [A-Z/↑/↓]
Store [select]
```

a. Editing the Stored Data


- 1) When the phonebook location to be edited appears, press **select/ch**. “Store/Edit Name” appears.
- 2) Follow the steps 3 to 7 under “Storing Phone Numbers, Names, Distinctive Rings, and Speed Dial” on page 27 to complete the editing operation.
- 3) Press **select/ch**. You will hear a confirmation tone and “Done!” appears on the display.

A screen showing the "Store/Edit Name" menu with the text "Store/Edit Name" and "Uniden Corp" followed by a cursor and a small icon.


```
Store/Edit Name
Uniden Corp
```

b. Deleting the Stored Data


- 1) When the phonebook location to be deleted appears, press **xfer/del**. “Delete Memory?” appears.
- 2) Press **+** to move the pointer to “Yes”.
- 3) Press **select/ch** or **xfer/del**. You hear a confirmation tone. “Deleted!” appears in the display.

A screen showing the "Delete Memory?" menu with "Yes" and "No" options. A cursor is positioned next to "No".

```
Delete Memory?
Yes
No
```

A screen showing the "Delete Memory?" menu with "Yes" and "No" options. A cursor is positioned next to "Yes".

```
Delete Memory?
Yes
No
```

A screen showing the text "Deleted!".

```
Deleted!
```

RocketDial (One Touch Dialing)

You can store a number you dial often in the RocketDial. The rocket dialing allows you to dial a number with one key press.

Storing the RocketDial


- 1) When the phone is in the standby mode, press **[RocketDial]/<**.
- 2) Press **-** once to display the RocketDial menu, then press **select/ch**. Store the name, phone number, and distinctive ring by following the steps 3 to 6 under "Storing Phone Numbers, Names, Distinctive Rings and Speed Dial" on page 27.
- 3) Press **select/ch**. You will hear a confirmation tone and "Done!" appears in the display.

Making calls with the RocketDial

When the phone is in the standby mode, press and hold **[RocketDial]/<**. The number in the rocket location is dialed.

Deleting the RocketDial

- 1) When the phone is in the standby mode, press **[RocketDial]/<**.
- 2) Press **-** once to display the RocketDial menu.
- 3) Press **xfer/del**.
- 4) Press **+** to move the pointer to "Yes".
- 5) Press **select/ch** or **xfer/del**. You will hear a confirmation tone. "Deleted!" appears in the display.

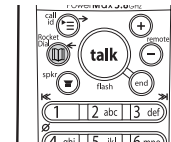

Phonebook : 85
Search [A-Z/↑/↓]
Store [select]

<Empty> /SD

-Connecting-
8175551212

MOM AND DAD
817-555-1212
Flicker /SD

Delete Memory?
Yes
No

Delete Memory?
Yes
No



- Memory location for the RocketDial is independent from the memory location for the phonebook.

- If the RocketDial is empty, you will hear a beep.



- If you have not pressed any key for 30 seconds, the phone returns to the standby mode.
- If you get an incoming call, the operation is canceled.
- If you select a memory location that does not have a stored number, the base will beep rapidly and the phone will not dial.

Chain Dialing

The memory locations in the handset are not limited to phone numbers. You can also store a group of numbers (up to 20 digits), that you need to enter once your call connects. This is referred to as Chain Dialing.

An example of this is a bank account number. Store the special number in the Phonebook location (refer to “Storing Phone Numbers, Names, Distinctive Rings and Speed Dial” on page 26). Once you have called your bank, and when you are prompted to enter the account number, press /RocketDial/← and use + or - to select the number in the Phonebook location, then press **select/ch**.

Memory Dialing (base only)

You can store 10 phone numbers in the base, and make calls with memory dialing from the base.

Storing Phone Numbers

- 1) Press **memory** in the standby mode.
- 2) Enter the number you wish to store. (The number cannot exceed 20 digits.)
- 3) Press **memory**. Enter the memory location number (**0-9**) on the keypad.

You will hear a confirmation tone.



- The 10 memory locations in the base are independent from the handset.
- The pause key counts as one digit. Pressing **redial/p** more than once increases the length of pause between numbers.

Making Calls with Memory Dialing

- 1) Press  (talk) in the standby mode.
- 2) Press **memory**. Enter the memory location number (**0-9**) to dial the number.

Deleting the Stored Data

- 1) Press **memory** in the standby mode.
- 2) Press **memory** again.
- 3) Enter the memory location number (**0-9**) you wish to delete. You will hear a confirmation tone.

Caller ID

You must subscribe to Caller ID service to use this feature.

When the telephone rings, the Caller ID feature allows you to view the caller's name and phone number on the display before you answer the phone. Additionally, you can dial the displayed number and store the information for memory dialing.

Make sure you have turned on the Caller ID/Call Waiting feature. (See page 15.)

Important:

Memory locations for Caller ID messages and Phonebook locations (including Speed Dials) are common, you can store up to 100 in total. A Caller ID message is not stored when you have stored 100 of the phonebook locations. The earliest Caller ID message is overwritten when you have stored 100 of the phonebook locations and Caller ID messages in total.

- If any of the following occurs during Caller ID operation, the operation will be canceled.
 - Press **end**. The phone will return to the standby mode (or the call will be disconnected).
 - Press **talk/flash** or **spkr**.
 - Charge the handset.
- Receive an incoming call, page, or transferring call (from the standby mode only).
- Receive a CIDCW (Caller ID on Call Waiting) (during a call only).
- The idle time is 30 seconds. If the handset remains idle for 30 seconds, the phone will return to the standby mode (or back to the call).

- 1) When the Caller ID message is received, the display shows the caller's phone number along with the date and time. The incoming call information is stored in the Caller ID record. If the Caller ID service includes the caller's name, the name will appear on the display. (up to 15 characters.)

The date and time received	12/12 12:30PM
Caller's name	Uniden Corp
Caller's phone number	800-297-1023

You may receive any one of the following messages:

When invalid data is received	"Incomplete Data"
When a private name is received	"Private Name"
When a private number is received	"Private Number"
When an unknown name is received	"Unknown Name"
When an unknown number is received	"Unknown Number"

- 2) When you pick up the phone, the display changes to "Talk". (AutoTalk feature is set to On.)

note

- If you answer a call before the Caller ID message is received (Example: before the second ring), the Caller ID message will not appear.
- When the call is received via a telephone company that does not offer Caller ID service, the caller's phone number and name do not appear. (This includes some international calls.)
- When the call is via a private branch exchange (PBX), the caller's phone number and name may not appear.



The number of calls from the same Caller ID appears next to the received time. Once you have reviewed the new message, the number will be cleared and disappears.

Viewing the Caller ID List

The Caller ID list stores information for incoming calls – even unanswered calls. You can store 100 of the Caller ID messages and Phonebook locations (including Speed Dials) in total. You can view the Caller ID list during a call or when the phone is in the standby mode.

- 1) Press **call id**/→.

The summary screen appears. The screen shows the number of new messages and the total number of messages.

Caller ID
New : 1
Total: 2

- 2) View the Caller ID messages by following these procedures.

From new to oldest:

- a. Press - to display the latest Caller ID message.
- b. Press - to see the previous message.

From oldest to new:

- a. Press + to display the earliest Caller ID message.
- b. Press + to see the next message.

In alphabetic order:

Press the number keypad (**2-9** and **0**) to display the Caller ID messages in alphabetical order. Refer to the letters on the number keys to select the desired letter.



Once you view the Caller ID list in alphabetical order, you cannot switch to the Caller ID display in historical order (from new to old or from old to new) unless you exit the operation.

- 3) Press **call id**/→ (if you view the Caller ID list during a call) or **end**.

Deleting Information from the Caller ID List

Deleting a Caller ID message

- 1) When the phone is in the standby mode, and while the incoming Caller ID information is displayed, press **xfer/del**. "Delete Message?" appears.
- 2) Press + or - to choose "Yes" or "No".
- 3) Press **select/ch** or **xfer/del**.

```

Delete Message?
  Yes
  No
  
```

When the pointer is at "Yes": You will hear a confirmation tone, and the Caller ID message is deleted. The next or previous Caller ID message is then displayed.

When the pointer is at "No": The display returns to the Caller ID message.

Deleting all Caller ID names/numbers

- 1) When the phone is in the standby mode, press **call id/→**.
- 2) Press **xfer/del**.
- 3) Press + or - to choose "Yes" or "No".
- 4) Press **select/ch** or **xfer/del**.

```

Caller ID
New : 1
Total: 2
  
```

```

Delete All?
  Yes
  No
  
```

When the pointer is at "Yes": You will hear a confirmation tone, and all stored Caller ID messages are deleted.

When the pointer is at "No": The display returns to the summary screen.



Once the Caller ID data has been deleted, the information cannot be retrieved.



- You cannot make a call from the Caller ID list if your phone is connected to a private branch exchange (PBX).
- When a long distance call has been set, "1" appears in the display.
- If a call comes in via a telephone system that does not offer Caller ID service, no information is stored.

Using the Caller ID Message List

Calling a party from the Caller ID list

From Standby mode

- 1) Press **call id/→**. The summary screen appears. The screen shows the number of new messages and the total number of messages.
- 2) Use the number keypad (**2-9** and **0**), **+**, or **-** to view the Caller ID message list.
- 3) Press **talk/flash** or **spkr**. The displayed phone number dials automatically.

```
Caller ID
New : 1
Total: 2
```

```
-Connecting-
8002971023
```

From Talk mode

- 1) Press **talk/flash**.
- 2) Press **call id/→**. The summary screen appears.
- 3) View the Caller ID message you want to dial.
- 4) Press **select/ch**. The displayed phone number will be dialed.

Long Distance calls and Area Code Setting/Cancellation

While the present Caller ID information is displayed, pressing **X/tone** will place or remove the prefix "1" in the display to set the call for a long distance call, or pressing **#** will set or cancel an area code. (See page 16.)

Storing Caller ID messages in the Phonebook/RocketDial

Messages shown in the Caller ID list can be stored in the phonebook. Using the incoming call information (i.e., Caller ID list), the phone number and name of the party on the Caller ID list can be stored in memory.

- 1) When the phone is in the standby mode, while the incoming Caller ID information is displayed, press **☐/RocketDial/←**.
- 2) Press **+** or **-** to choose "Store in PB?" (Phonebook locations) or "Store in SD?" (RocketDial location). To cancel Storing, select "Cancel".

```
12/12 12:30PM
Uniden Corp
800-297-1023
```

```
Store in PB?
Store in SD?
Cancel
```


3) Press **select/ch**. You will hear a confirmation tone.

- You cannot store a Caller ID message in the phonebook if a phone number does not appear in the message.
- You cannot set the distinctive ring or speed dial in this step. If you would like to set these options, edit the stored data.
- Even if the memory locations are full, the message will be stored in the Phonebook, however, the message will be erased from the Caller ID List.
- If data is already stored in the RocketDial, the old data will be overwritten by the new data.



Call Waiting Deluxe Features

Your phone gives you new options for call waiting. At the touch of a button, you can place the caller on hold, send them to your voice mail service, or conference them into your current call. You may be required to subscribe to Call Waiting and Call Waiting Deluxe to use these features. Not all features are available in all areas. Check with your local telephone company for details.

1) When you receive a Call Waiting call, press **menu/mute** for a list of options.

2) Press **+** or **-**, or the number keypad (**1-7**) to select an option. For example:

1 Ask to Hold
2 Tell Busy
3 Forward Call

press
-
4 times

3 Forward Call
4 Answer/Drop 1
5 Conference

press
-
2 times

5 Conference
6 Drop First
7 Drop Last

3) Press **select/ch**. A confirmation screen will appear.

Your phone is pre-programmed with seven call waiting options. You may select to ask the calling party to hold, send them a busy message, forward them to your voice mail, or answer and drop the first caller. You may also select to conference them into the current call or, at any time, choose to drop the first or drop the last caller. Check with your local telephone company for a full list of options.



- To activate features, select "CW Deluxe On" in the Caller ID setup. See page 15.
- You can also answer a waiting call immediately by pressing **talk/flash**, the first caller will be placed on hold. To return to the original caller, press **talk/flash** again.



When the answering system is full, “FL” appears on the base. You should delete some messages so that the system can record new messages. (Refer to “Deleting a message” on page 48.)

The Integrated Answering Device


The phone has a built-in answering system that answers and records incoming calls. You can also use your answering system to record a conversation, leave a voice memo message, or to announce a special outgoing message to callers when you’re away from your phone.

Features

- Digital Tapeless Recording
- Call Screening
- Voice Prompts for Menu Setup Guidance
- Remote Message Retrieval
- Conversation Recording
- Trilingual Language Option
- Remote Operation by the Handset
- Approx. 10 Minutes of Recording Time
- Selectable Outgoing Messages
- Time and Day Announcement
- Toll Saver
- Voice Memo
- Message Alert

Digital Tapeless Recording allows you to quickly review, save, or delete the messages you choose. You will never have to worry about a tape wearing out, jamming, or resetting improperly.

The Integrated Answering System is easy and convenient to use, but **please read** through all of the instructions carefully.

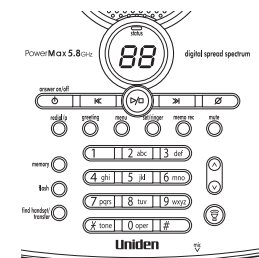

Turning the Answering System On/Off

- 1) To turn the answering system On, press **answer on/off** in the standby mode. The current greeting message will be played and you will hear a confirmation tone. The message counter displays the number of messages stored in memory. If the display flashes, then there are new messages waiting for you.
- 2) To turn the answering system Off, press **answer on/off**. After the announcement “Answer off”, the message counter display will no longer be illuminated.

Screen Incoming Calls

You can screen calls when the answering system is On.

- 1) After the answering system answers, the base speaker will let you hear the calls as the machine records the message.
- 2) To answer the call, press  (talk) or pick up the handset from the base (when AutoTalk is set to On). If the handset is away from the base, press **talk/flash**, **spkr** or any number key, ***/tone**, or **#** (when AutoTalk is set to On). The answering system will disconnect automatically.

Setting up your Answering System

Setting your outgoing message (Greeting)

When you receive a call, the answering system automatically plays either the pre-recorded message or your own greeting.

Pre-recorded message

The following message is pre-recorded:

"Hello, no one is available to take your call. Please leave a message after the tone."

Recording a personal outgoing message (Greeting)

You can record a greeting up to 30 seconds long (more than 2 seconds).

- 1) When the phone is in the standby mode, press and hold **greeting**.
- 2) Start your recording after the announcement "Record greeting". The message counter displays "--", then begins to count down.
- 3) When you have finished recording your greeting, press **greeting** or . You will hear a confirmation tone and your recorded greeting plays back for you.



- If the speaker volume is set to "0", you cannot use the call-screening feature.
- You can adjust the base speaker volume by pressing volume **▲** or **▼** while screening a call.
- If you set the answering system to Off and the system doesn't answer after ten rings, you cannot screen a call.
- Position yourself as near to the base as possible and speak clearly when recording your outgoing message.



If you receive an incoming call or press **talk/flash** or **spkr** on the handset, or  (talk) or  on the base the operation will be canceled.

Choosing between the two outgoing messages

When the phone is in the standby mode, press **greeting**. Press **greeting** again when the outgoing message is played. Each time **greeting** is pressed, the outgoing message is switched between the pre-recorded and the personal outgoing message.

Deleting an outgoing message

To delete the personal outgoing message, press **Ø** while the message is playing. The system announces "greeting has been deleted".

Setting the base ringer volume

You have three ringer options. One allows you to turn the base ringer off. The other two are volume levels.

- 1) When the phone is in the standby mode, press **set/ringer**. You hear the ringer at the current volume level ("**H**," High, "**L**" Low, or "**OFF**" Off) (if you set the base ringer volume to off "off" is announced), and it appears on the base.
- 2) Press **set/ringer** until the desired ringer volume appears. The system returns to the standby mode.

You can also set the base ringer volume while the phone is ringing, press **set/ringer** repeatedly to select the desired ringer volume.

Adjusting the speaker volume level

When the base speaker is in use or in the standby mode, press **▲** or **▼** on the base to adjust the volume. Press volume **▲** for louder or **▼** for softer.

The numbers 0-9 appear on the base indicating the volume levels. 0 being the softest and 9 being the loudest.

Using the Menu Mode

The Menu mode allows you to set the following Answering System functions.

- To scroll through the menu options, repeatedly press **menu** on the base in the standby mode. The system returns to standby after the last menu option. A confirmation tone sounds to indicate the standby mode.
- If you press **talk/flash** or **spkr** on the handset, or **☎** (talk) or **▷/□** on the base during the menu setup, the operation will be canceled.
- The idle time default setting is 30 seconds. If the system remains idle for 30 seconds, you will hear a beep and the system returns to standby.
- You can use **▲** or **▼** to adjust the announcement volume level during a voice prompt/guidance.
- If there is an incoming call, the operation is canceled.
- When you have completed the setting, press **▷/□** to exit the menu mode, or **menu** to move to the next menu option.

note

For your convenience, voice prompts will guide you through the menu setup mode.



- If you press **▲** in the maximum volume level (9) or **▼** in lowest volume level (0), you will hear a beep.
- Press and hold **▲** or **▼** on the base to scroll quickly through the volume levels.



- Normally the idle time for the menu mode is 30 seconds before the system returns to standby. However, for setting the time, the idle time is extended to two minutes.
- Press and hold >> or << to quickly scroll through the numbers on the display.

Setting the Time

The clock on the answering system starts when power is supplied to the base. Follow these steps to set the clock to the correct time.

- 1) Press **menu**.
The system announces the current time. The message counter displays the day of the week (from "1" Sunday to "7" Saturday).
- 2) Press >> or << until the correct day is announced and the corresponding number appears.
- 3) Press **set/ringer** to select the day.
- 4) Press >> or << until you hear the correct hour setting.
The numbers "1" through "12" appear on the base as each hour is announced.
- 5) Press **set/ringer** to select the hour.
- 6) Press >> or << until you hear the correct minute setting.
The numbers "00" through "59" appear on the base as each minute is announced.
- 7) Press **set/ringer** to select the minute.
- 8) Press >> or << until you hear the correct AM or PM setting.
The message counter displays "A" or "P".
- 9) Press **set/ringer** to select the AM/PM setting.
A confirmation tone sounds, the system announces "Time" and, the day and time are announced for your review.

Setting a Personal Security Code

To play your messages from a remote location, you will need to enter a two-digit Personal Identification Number (PIN) code (00-99). To select a PIN, perform the following steps:

- 1) Press **menu** twice. The current PIN code is announced as it appears on the base.
- 2) Press >> or << until the desired number appears.
- 3) Press **set/ringer** to select the PIN code.
A confirmation tone sounds, the system announces "Security code" and the new PIN code.

Setting the Ring Time

The ring time setting allows you to set the number of rings the caller hears before your answering system plays the outgoing message. You can set the ring time to answer after two, four, or six rings. Setting "TS" (Toll Saver), the answering system picks up after two rings if you have new messages, and after four rings if there are none. This way, if you make a long distance call to check your messages, you can hang up after the second ring to avoid billing charges.

- 1) Press **menu** three times.

The current ring time setting is announced ("2" 2, "4" 4, "6" 6, "TS" Toll saver), and it appears on the base.

- 2) Press **>>** or **<<** until the desired ring time appears.
- 3) Press **set/ringer** to select the new ring time.

A confirmation tone sounds, the system announces "Ring time" and the new ring time.

Selecting the message record time

You have three record time options. The options "1 minute" or "4 minutes" set the duration for recording the incoming messages. "Announce only" answers the call with the preset greeting or your personal greeting but prevents the caller from leaving a message.

- 1) Press **menu** four times.

You hear the current recording time ("1" 1 minute, "4" 4 minutes, "R" Announce only), and it appears on the base.

- 2) Press **>>** or **<<** until the desired message record time appears.
- 3) Press **set/ringer** to select the new recording time.

A confirmation tone sounds, the system announces "Record time" and the new record time.

Announce only feature

The Announce only feature plays a pre-recorded outgoing message or your own personal outgoing message, but it will not allow the caller to leave a message. To set "Announce only", follow the steps above. To choose between the pre-recorded message or your own personal greeting, press **greeting**, when the outgoing message is played. Press **greeting** to select the greeting of your choice.



When using the Announce only feature, you may want to change your outgoing message, if the message prompts the caller to leave a message. The pre-recorded message changes automatically.

A confirmation tone sounds. If you want to use your own greeting, you may want to change your greeting to omit the prompt to leave a message. Refer to “Recording a personal outgoing message (Greeting)” on page 41.

The following message is pre-recorded:

“Hello, no one is available to take your call. Please call again.”

Setting the Message Alert

Message Alert feature lets you know when you have a new incoming message by sounding a short alert tone.

If you set the Message Alert On, and when a new message is received, the Alert Tone will sound every 15 seconds. Set the Message Alert to On or Off by using the **menu** key.

- 1) Press **menu** five times. The current setting (On or Off) is announced, and it appears on the base.
- 2) Press **>>** or **<<** to choose “**On**” or “**Off**”.
- 3) Press **set/ringer**.

A confirmation tone sounds, the system announces “Message Alert” and the current setting you have selected. When the first new message is received, the alert tone will begin to sound.

Turning the Message Alert tone Off by pressing any key

To quickly turn Message Alert Off, press any key on the base unit and the tone will automatically deactivate. To reset, go back into the menu setup mode (steps 1 - 3 above).

Turning the Message Alert tone Off when you are away from your phone

When all new messages are played back using the remote playback feature (see page 50) the Message Alert will automatically deactivate. The tone will not deactivate until all messages are played back.

Selecting the Language

You can select the Language of your answering system announcements to English, French, or Spanish.

- 1) Press **menu** six times.

The current setting (“**E**” English, “**F**” French, or “**S**” Spanish) appears on the base, and it is announced (“Hello” English, “Bonjour” French, or “Hola” Spanish).

- 2) Press **>>** or **<<** to select the language.
- 3) Press **set/ringer**.

A confirmation tone sounds, the system announces the new setting in the selected language.

Using your Answering System

The message counter displays the number of messages stored in memory. If the display flashes, then there are new messages waiting for you. The answering system is designed to play your new messages first. After you play all your new messages, you can then play your old messages.

Playing your messages

- 1) When the phone is in the standby mode, press ▸/□.
The system announces the number of new and old messages while the message counter displays only the number of new messages. The time and day that each message was received is announced after the message is played. The message counter will then display the number of current stored messages.
- 2) When all new messages have been played, you hear a beep and the system announces "End of message". The system returns to standby. After you have reviewed your new messages, you can play your old messages by again pressing ▸/□. Once you have listened to a new message, it then becomes an old message. The old messages will be played in the order in which they were received.

Repeating a message

- 1) Press ▸/□ to review your messages. The number of stored messages is announced.
- 2) To repeat the current message, press K< after a few seconds of beginning the message. To quickly scroll backwards through a message, press and hold K<. To repeat the previous message, press K< within a few seconds (about 4 seconds during remote operation) after a message begins playing. If you have several messages, press K< repeatedly until you return to the message you want to replay. If the current message is the first new message, the system plays back from the beginning of the current message (it does not go back into the old message group).
- 3) Press ▸/□ at any time to stop reviewing messages and return to standby. The message counter shows the number of messages stored in memory.



- To stop playing your messages, press ▸/□ again at any time.
- When the answering system is full, "FL" appears on the base. You should delete some messages so that the system can record new messages. (Refer to "Deleting a message" on page 48.)

Skipping a message

- 1) Press ▸/□ to review your messages. The number of stored messages is announced.
- 2) Press >>⏏ at anytime to skip to the next message.
Each time >>⏏ is pressed, the system scans forward one message. If you have several messages, press >>⏏ repeatedly to find the message you want to play. To quickly scroll through a message, press and hold >>⏏. The system advances through the playback at double speed.
- 3) Press ▸/□ at anytime to stop reviewing your messages and return to standby. The message counter shows the number of messages stored in memory.

Deleting a message

To maintain maximum record time, delete the old messages.

- 1) Press ▸/□ to review your messages.
- 2) Press ∅ at anytime during the message to delete the message.
You hear a confirmation tone and the message is deleted.
- 3) To delete all messages, press ∅ in the standby mode. Press ∅ again after the announcement "to delete all message, press delete again."

When you try to delete all messages without first listening to your new messages, you hear several short beeps followed by an announcement "Please playback all messages". This protects you from accidentally erasing messages you have not yet reviewed.

Important:

When you press ∅, you are permanently deleting the message. Once deleted, the message cannot be replayed or retrieved.

Voice memo

The voice memo function allows the user to record messages (more than 2 seconds and within 10 minutes).

- 1) Press and hold **memo rec**. You hear a beep.
- 2) Start your recording after the announcement "Record memo message" and a confirmation tone. The message counter displays "--".
- 3) When you have finished, press **memo rec** or **▷/□** to stop recording. The system returns to standby.



- The voice memo messages are recorded as incoming messages.
- When the answering system is full, "FL" appears on the display and recording is terminated.
- If there is an incoming call, or if you press **talk/flash** or **spkr** on the handset or **ⓘ** (talk) on the base, the operation will be canceled.

Recording a conversation

You can record a conversation while you are using your phone (more than 2 seconds and within 10 minutes).

- 1) During a conversation from the handset, press and hold **memo rec** on the base. The unit begins recording and "--" flashes on the message counter. A beep, that can be heard by both parties, sounds during recording.
- 2) To stop recording, press **▷/□** or **memo rec**. You hear a confirmation tone.



- A recorded conversation is treated as a typical message and will be added to the stored messages.
- You cannot record a 3-way conversation, a conversation using the speakerphone or HandsFree conversation.
- When the answering system is full, "FL" appears on the display and recording is terminated.
- If you press **end** or **xfer/del** on the handset, the operation will be canceled.



Every state has different regulations governing the recording of conversations over the telephone. Make sure to check your local, state and federal laws before using this product to record any telephone conversation in order to determine that your use is in compliance with such laws or guidelines.



For your convenience a remote operation card is provided for you to use while away from home (refer to page 67).

Remote Operation

You can operate your answering system from a remote location using any touch-tone telephone or the handset.

Remote access away from home

You can check, play, or delete messages, even record a new greeting message when you are away from home. Additionally, you can turn On or Off your answering system from a remote location.



- You must enter a command within 15 seconds of entering command waiting mode or the answering system automatically hangs up and returns to standby.
- The system will only playback messages for four minutes and then it returns to command waiting mode. To continue playing your messages, press # then 2 again within 15 seconds.
- If you enter an incorrect PIN code three times, you will hear a beep and the system will return to standby.
- During the remote operation, “*L*” appears on the base.

- 1) Call your telephone number.
- 2) During the greeting message, press # and enter your PIN code within 2 seconds.
(See “Setting a Personal Security Code”, page 44).
- 3) The answering system announces the current time and the number of messages stored in memory. You hear “To play incoming messages, press pound two. For help, press pound zero”. You will hear intermittent beeps.
- 4) You may select a command from the following chart:

Command	Function	Command	Function
# then 1	Repeat a Message	# then 6	Answering System On
# then 2	Playing incoming Messages	# then 7	Memo Record/Stop *
# then 3	Skipping a Message	# then 8	Greeting Message Record/Stop *
# then 4	Deleting a Message	# then 9	Answer System Off
# then 5	Stop Operation	# then 0	Help Guidance

*For Memo Record and Greeting Message Record function, the first time you enter the corresponding command, it starts the Recording function. If you want to stop the recording, press # then 7 or 8.

- 5) After the command has finished, you hear intermittent beeps indicating that the system is in the command waiting mode. You may enter another command at this time from the chart above.
- 6) When you are finished, hang up to exit the system. The answering system automatically returns to standby.

Turn on the answering system remotely


If you have forgotten to turn On your answering system, you can turn it On remotely from any touch-tone telephone.

- 1) Call your telephone number.
- 2) Wait ten rings until the system answers. You hear a beep.
- 3) Press # and then enter your PIN code within 2 seconds. The answering system announces the day and time, and the number of messages stored in memory. You hear "To play incoming messages, press pound two. For help, press pound zero".
- 4) Press # then 6 to turn the answering system On.
- 5) Hang up the phone and subsequent calls will be answered by the system.

Remote access with the handset

You can check your new incoming messages, skip, repeat, or delete your incoming messages with the handset. For example, you can install the answering system in the living room, and check your incoming message from a bedroom with the handset.

You can also use speakerphone on the handset for remote operation (see "Making and receiving calls" on 18).

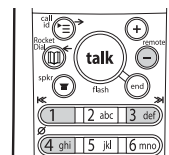

- If you press **end** before the answering system answers, the phone will return to standby.
- When the answering system does not answer within 7 seconds, you hear a beep and the phone will return to standby.
- The base's keypad is disabled during remote operation.
- When you receive a call, the remote operation is canceled.
- You can change the handset volume and channel during a remote operation.
- During the remote operation "r" appears on the base.



- If you have new messages and old messages, only the new messages will be played. After you have reviewed your new messages, you can play your old messages by again pressing **-/remote**. Once you have listened to a new message, it then becomes an old message.

- If you have new messages and old messages, only the new messages will be repeated.
- If you press **K</1** while the earliest message is played, you can repeat only the current message.

Playing incoming messages

- 1) When the phone is in the standby mode, press **-/remote** on the handset.
“Remote Playback” appears on the handset display. The answering system announces the current time and the number of messages stored in the memory. Messages will be played in the order in which they were received. The time and day that each message was received is announced after the message is played.
- 2) When the last message has been played, the system announces “End of message.” And the system returns to standby.

Repeating a message

After a message begins playing, press **K</1** within about four seconds to repeat the previous message, or press **K</1** after about four seconds to repeat the current message.

Skipping a message

While the message is playing, press **>>/3** on the handset. Each time **>>/3** is pressed, the system scans forward one message.

Deleting a message

While the message is playing, Press **Ø/4** on the handset. The message playing is deleted.

Expanding Your Phone

Your phone supports up to 2 handsets (the original handset and the second handset). You can now place a fully featured cordless handset anywhere AC power is available to connect the handset charger. Additionally, you can transfer an outside call to another handset.



- We refer to the TXC580 handset and the TRU5885-2 handset No.2 as the second handset, and TRU5885 handset and TRU5885-2 handset No.1 as the original handset in this section.
- Before use, you need to charge the battery pack for at least 15-20 hours, and for the TXC580 handset, register the handset to the original base.

How to Distinguish the Original Handset and the Second Handset

The original handset and the second handset are identical in appearance. To distinguish the original and the second handset, place the handset in the base charger. If you charge the second handset, **HS2** appears, otherwise **HS1** appears. There are some restrictions on the second handset, see “Second Handset Operation” on page 55.

Registering the Second Handset

You need to register the second handset before using (for TXC580 only). To register the second handset, simply place the second handset on the original base for at least 5 seconds. The **status** LED on the original base will flash indicating that registration is occurring. After 5 seconds, the second handset will be registered.



You cannot register the handset when the original phone is in use.

Call Transfer Feature

You can transfer an outside call to the additional handset, or receive a transferred call from the additional handset.



- If you transfer a call and it is not picked up after 5 minutes, the call will be disconnected.
- For information on transferring a call between the original handset and base, see “Transferring a Call” on page 24.

To transfer a call (to the second handset)

- 1) Press ***xfer/del*** on the handset (or ***find handset/transfer*** on the base) during a call. The call will automatically be placed on hold and the transfer tone will sound.
- 2) When the other handset receives the call, the transfer tone stops. To cancel the transfer, press ***talk/flash*** or ***spkr*** on the handset (or ***find handset/transfer*** or  (talk) on the base).

Hold
Transfer Call

To receive a transferred call (from the second handset)

Pick up the original handset (when AutoTalk is set to On), or press ***talk/flash*** or ***spkr*** to answer the transferred call.

Additionally, you can answer the transferred call by pressing any number key, ****/tone***, or ***#*** (when AutoTalk is set to On).

To receive a transferred call with the base, press  (talk) on the base.

Transfer Call

Second Handset Operation

Setting up

Charging

- Charge the second handset for 15-20 hours before using.
- When you charge the second handset, the display shows the name of the handset, HS2.

Dialing mode

Dialing mode is a universal setting. When the mode is changed on the original handset, the setting for the second handset is changed as well.

CIDCW

- CIDCW setting is a universal setting. When the setting is changed on the original handset, the CIDCW setting for the second handset is changed as well.
- CW Deluxe setting is independent from the original handset. To set the CW Deluxe setting on the second handset, do the following.
 - 1) When the phone is in the standby mode, press **menu/mute**.
 - 2) Press + or - to move the pointer to "Caller ID Setup", then press **select/ch**.
 - 3) Press + or - to select "CW Deluxe", then press **select/ch**.
 - 4) Press + or - to select "CW Deluxe On" to active CW Deluxe features, then press **select/ch**.

Registration

For the TRU5885-2 handset No.2, you can use it with the TRU5885-2 base without registering the handset. However, you need to register the TRU5885-2 handset No.2 each time you change the digital security code of the original base. Follow the instructions under "Registering the Second Handset" on page 53.



Only one handset can establish a call.

Operation

Making and receiving calls

- If you press *talk/flash* or *spkr* on the handset while the other handset is in use, you will hear a beep and “Unavailable” will appear. The handset will return to the standby mode.
- If you charge the second handset and pick it up at the same time when you pick the original handset from the base, the call will be transferred to the second handset.

Security code

You can change the digital security code, only from the original handset.

Memory locations (Redial memory/Dynamic memory locations)

Memory locations in the original handset and the second handset are independent.

Page

If you press any key on a handset while paging, the paging sound from the other handset will stop as well.

3-way conversation

You can initiate the 3-way conversation with the second handset. However, a 3-way conversation cannot be conducted between the second handset, original handset, and an outside call.

Caller ID

- When you receive a CIDCW during a call, the Caller ID information will not be displayed or stored in the other handset. Each handset works independently when in this mode.
- To display CIDCW on the second handset, you must turn On the CIDCW or CW Deluxe on the original unit.

TAD

Signs for the remote handset features (*remote*, *K<*, *>K*, and *Ø*) are not printed on the TXC580.

Others

- You can't use or purchase the second handset as an alternative of the original handset.
- Save this owner's manual. The TXC580 owner's manual describes only the instructions specific to the second handset. For detailed operation, refer to this owner's manual (for TRU5885).

Changing the Digital Security Code

The digital security code is an identification code used to connect the handset and the base unit. Normally, setting the code is not necessary. The first time you charge your handset, the security code is automatically set. (See "About the digital security code", page 8.) In the rare situation that you suspect another cordless telephone is using the same security code, you can change the code. To change the digital security code, de-register the code, then register a different code.

De-register the Digital Security Code

- 1) Remove the handset from the base. In the standby mode, press and hold **xfer/del** and **end** for 10 seconds. You will hear a confirmation tone. "De-Register?" appears.
- 2) Press **+** to select "Yes", then **select/ch**. You will hear a confirmation tone, and "Deregistration Complete" appears.



- If you have not pressed any key for 30 seconds while in the de-registering operation, the phone returns to the standby mode.
- While in the de-registering operation, if you receive an incoming call, page, or transferring call, or charge the handset, or press **talk/flash**, **spkr** or **end**, the operation is canceled.
- While in the de-registering operation, if you receive CIDCW when the speakerphone is used, the operation is canceled.



You will need to re-register the second handset each time you change the digital security code of the original unit.

Register the Security Code

- 1) Unplug the AC adapter.
- 2) Press and hold **find handset/transfer** on the base, while you plug in the AC Adapter, hold **find handset/transfer** until the **status** LED on the base flashes.
- 3) Press **talk/flash**. "Handset Registering" appears.

When the operation is finished "Registration Complete" appears and the **status** LED is no longer illuminated. You will hear a confirmation tone and the phone returns to the standby mode.



- You must complete the registration operation within 30 seconds, or the phone returns to the standby mode.
- During the registration operation, you cannot receive an incoming call, page, or make a call.


Installing the Beltclip

To attach the beltclip

Insert the beltclip into the holes on each side of the handset. Press down until it clicks.


To remove the beltclip

Pull both sides of the beltclip to release the tabs from the holes.

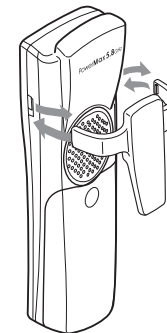

Headset Installation

Your phone may be used with an optional headset, the Uniden HS910. To use this feature, insert the headset plug into the headset jack. Your phone is ready for hands-free conversations. (Headset may be purchased by calling the Uniden Parts Department or visiting the web site. See page 9.)



Note on Power Sources

Battery replacement and handling

When the operating time becomes short, even after a battery is recharged, please replace the battery.

With normal usage, your battery should last about one year.

Please contact your place of purchase or the Uniden Parts Department for a replacement battery. (See page 9)

Warning

To avoid the risk of personal injury or property damage from fire or electrical shock, only use the Uniden battery model and Uniden adapter model specifically designated for this product.

Power Failure

During the period that the power is off, you will not be able to make or receive calls with the telephone.

Caution

- Use the specified Uniden battery pack (BT-446).
- Do not remove the battery from the handset to charge it.
- Never throw the battery into a fire, disassemble it, or heat it.
- Do not remove or damage the battery casing.

Maintenance

When slightly dirty

Wipe with a soft, dry cloth.

When very dirty

Wipe with a soft cloth that has been dampened with diluted, neutral detergent. Dry with a dry cloth.

When the charging terminals become dirty

Wipe with a dry cloth or a pencil eraser, if necessary.

Caution

Do not use paint thinner, benzene, alcohol, or other chemical products.

Doing so may discolor the surface of the telephone and damage the finish.

General Information

The phone complies with FCC Parts 15 and 68. Operating temperature: 0 °C to +50 °C (+32 °F to +122 °F)

AC Adapter Information

AC Adapter part number:	AD-313 for the base	AD-446 for the charger (TRU5885-2 only)
Input Voltage:	120V AC 60Hz	120V AC 60Hz
Output Voltage:	9V DC 400 mA	9V DC 210 mA (TRU5885-2 only)

Battery Information

Battery part number:	BT-446
Capacity:	800 mAh, 3.6V
Battery use time (per charge) From fully charged	
Talk mode duration:	4 hours
Standby mode duration:	8 days

 If the handset is left off of the base, the actual Talk mode duration will be reduced respective to the amount of time the handset is off the base.

Recharge your phone on a regular basis by returning the handset to the base after each phone call. When the operating time becomes short, even after the battery is recharged, please replace the battery. With normal usage, the battery should last about one year.

A replacement Uniden adapter and battery may be purchase Uniden accessories at your local Uniden dealer or by contacting the Uniden Parts Department (800) 554-3988. Hours are from 7:00 a.m. to 5:00 p.m. CST, Monday through Friday. We can also be reached on the web at www.uniden.com.

Specifications, features, and availability of optional accessories are all subject to change without prior notice.

Troubleshooting

If your phone is not performing to your expectations, please try these simple steps first.

Symptom	Suggestion
The status LED won't illuminate when the handset is placed in the base.	• Make sure the AC adapter is plugged into the base and wall outlet. • Make sure the handset is properly seated in the base. • Make sure the charging contacts on the handset and base are clean.
The audio sounds weak and/or scratchy.	• Move the handset and/or base to a different location away from metal objects or appliances and try again. • Press select/ch to help eliminate background noise. • Make sure that you are not too far from the base.
Can't make or receive calls.	• Check both ends of the base telephone line cord. • Make sure the AC adapter is plugged into the base and wall outlet. • Disconnect the AC adapter for a few minutes, then reconnect it. • Change the digital security code (See page 57). • Make sure that you are not too far from the base.
The handset doesn't ring or receive a page.	• The battery pack may be weak. Charge the handset in the base unit for 15-20 hours. • The handset may be too far away from the base unit. • Place the base unit away from appliances or metal objects.
Severe noise interference.	• Keep the handset away from microwave ovens, computers, remote control toys, wireless microphones, alarm systems, intercoms, room monitors, fluorescent lights, and electrical appliances. • Move to another location or turn off the source of interference.

Symptom	Suggestion
The Caller ID does not display.	• The handset was picked up before the second ring. • The call was placed through a switchboard. • Call your local telephone company to verify your Caller ID service is current. • Charge the handset.
The handset doesn't communicate with the base or the other handset.	• Change the digital security code (See page 57). • Make sure that you have registered the second handset (TXC580 only).
"Unavailable" message is displayed on the LCD screen of the handset.	• Make sure the other handset is not already in use. Both handsets cannot be in talk mode at the same time. • Place the handset for at least 5 seconds to re-register to the main base. • Make sure the handset is not too far from the main base when trying to use.
The second handset can't join the conversation.	• Only one handset at a time can talk with an outside caller. To allow a different handset to talk to the caller, transfer the call to the other handset.
The answering system does not work.	• Make sure the base unit is plugged in. • Make sure that the answering system is turned on. • Make sure that the message record time is not set to Announce only (See page 45).
Messages are incomplete.	• The incoming messages may be too long. Remind callers to leave a brief message. • The memory may be full. Delete some or all of the saved messages.
After a power failure, the outgoing message is deleted.	• Record your greeting again. The default message should remain.
No sound on the base unit speaker during call monitoring or message playback.	• Adjust the speaker volume on the base unit.
Cannot access remote call-in features from another touch-tone phone.	• Make sure you are using the correct PIN number. • Make sure that the touch-tone phone you're using can transmit the tone for at least two seconds. If it cannot, you may have to use another phone to access your message
If you still have a problem.	• Call our customer hotline at 1-800-297-1023.

Precautions!

Before you read anything else, please observe the following:

Warning!

Uniden America Corporation DOES NOT represent this unit to be waterproof. To reduce the risk of fire, electrical shock, or damage to the unit, DO NOT expose this unit to rain or moisture.

Rechargeable Nickel-Metal-Hydride Battery Warning

- This equipment contains a rechargeable Nickel-Metal-Hydride battery.
- Nickel is a chemical known to state of California to cause cancer.
- The rechargeable Nickel-Metal-Hydride battery contained in this equipment may explode if disposed of in a fire.
- Do not short-circuit the battery.
- Do not charge the rechargeable Nickel-Metal-Hydride battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause the battery to explode.

Rechargeable Nickel-Metal-Hydride Batteries Must Be Recycled or Disposed of Properly



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions

When using your telephone equipment, these basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Use a dry cloth for cleaning without liquid or aerosol cleaners.
4. Do not use this product near water; for example, near a bathtub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The telephone may fall, causing serious damage to the unit.

6. Slots and openings in the cabinet and the back or bottom are provided for ventilation. To protect the product from overheating, these openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be damaged by persons walking on it.
9. Do not overload wall outlets and extension cords, as this can result in the risk of fire or electrical shock.
10. Never push objects of any kind into this product through cabinet slots, as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product. Take it to qualified service personnel when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally when following the operating instructions. (Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive repair work by a qualified technician.)
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
13. Do not use the telephone to report a gas leak in the vicinity of the leak.

Additional Battery Safety Precautions

Caution! To reduce the risk of fire or injury to persons by the battery, read and follow these instructions:

1. Use only the Uniden battery pack specified in the owner's manual.
2. Do not dispose of the battery pack in a fire. The cell may explode. Check the Nickel Metal Hydride battery disposal package insert for disposal instructions.
3. Do not open or mutilate the battery pack. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.

4. Exercise care in handling the battery in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
5. Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in the owner's manual provided for this product.
6. Observe proper polarity orientation between the battery pack and battery charger.

SAVE THESE INSTRUCTIONS!

Important Electrical Considerations

Unplug all electrical appliances when you know an electrical storm is approaching. Lightning can pass through your household wiring and damage any device connected to it. This phone is no exception.

Warning!

Please do not attempt to unplug any appliance during an electrical storm.

The FCC Wants You To Know

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product. The equipment cannot be used on public coin phone service provided by the telephone company. Connection to party line service is subject to state tariffs. (Contact the state public utility commission, public service commission or corporation commission for information.)

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage. This product has been tested and found to comply with the FCC exposure criteria. The base unit and the base antenna was designed to be installed so that it is not in contact with any person during operations.

Range

Your new phone is designed to achieve the maximum possible range by transmitting and receiving according to the highest specifications set forth by the FCC. We have rated this phone to operate at a maximum distance with the qualification that the range depends upon the environment in which the telephone is used. Many factors limit range, and it would be impossible to include all the variables in our rating. The Maximum Range rating of this phone is meant to be used as a means of comparison against other range claims.

Telephone Line Problems

The FCC has granted the telephone company the right to disconnect service in the event that your phone causes problems on the telephone line. Also, the telephone company may make changes in facilities and services which may affect the operation of your unit. However, your telephone company must give adequate notice in writing prior to such actions to allow you time for making necessary arrangements to continue uninterrupted service. If you are having trouble with your telephone service, you must first disconnect your phone to determine if it is the cause of your problem. If you determine that it is the cause, you must leave it disconnected until the trouble has been corrected.

Radio Interference

Radio interference may occasionally cause buzzing and humming in your cordless handset, or clicking noises in the base. This interference is caused by external sources such as TV, refrigerator, vacuum cleaner, fluorescent lighting, or electrical storm. Your unit is NOT DEFECTIVE. If these noises continue and are too distracting, please check around your home to see what appliances may be causing the problem. In addition, we recommend that the base not be plugged into a circuit that also powers a major appliance because of the potential for interference. Be certain that the antenna on the unit is fully extended when needed.

In the unlikely event that you consistently hear other voices or distracting transmissions on your phone, you may be receiving radio signals from another cordless telephone or other source of interference. If you cannot eliminate this type of interference, you need to change to a different channel.

Finally, it should be noted that some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

More than One Cordless Telephone

If you want to use more than one cordless telephone in your home, they must operate on different channels. Press the channel key to select a channel that provides the clearest communication.

Cordless Telephone Privacy

Cordless telephones are radio devices. Communications between the handset and base of your cordless telephone are accomplished by means of radio waves which are broadcast over the open airways. Because of the inherent physical properties of radio waves, your communications can be received by radio receiving devices other than your own cordless telephone unit. Consequently, any communications using your cordless telephone may not be private.

Installation Considerations

Selecting a Location

Before choosing a location for your new phone, there are some important guidelines you should consider:

- The location should be close to both a phone jack and continuous power outlet. (A continuous power outlet is an AC outlet which does not have a switch to interrupt its power.)
- Keep the base and handset away from sources of electrical noise such as motors or fluorescent lighting.
- The base can be placed on a desk or tabletop or mounted on a standard telephone wall plate.
- You should charge your new phone for 15-20 hours before completing the installation or using the handset.

Telephone Line Outlets

There are two types of phone outlets:

Modular Jack

Most phone equipment available now uses modular jacks. Phone cords are fitted with a molded plastic connector which plugs into this type of jack. If you do not have modular phone jacks, contact your local telephone company for information about their installation.

Hardwired Jack

Some equipment is wired directly to a phone jack, and these types of installations require a modular jack converter. This type of installation is not difficult; however, you should contact your Uniden telephone dealer or a telephone supply store for advice about the proper adapter or converter for your particular situation.

Connecting the Telephone Cords

Consider these safety guidelines before connecting the telephone cords:

Caution!

- *Never install telephone wiring during a lightning storm.*
- *Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected.*
- *Use caution when installing or modifying telephone lines.*

Applying Power to the Base

This phone requires an AC outlet, without a switch to interrupt power, and the included AC adapter. To relieve strain on the DC plug when the phone is placed on a desk or table, wrap the power cord around the strain relief notch on the bottom of the base.

NOTE: *Place the power cord so that it does not create a trip hazard, or where it could become chafed and create a fire or other electrical hazards.*

Plug the AC Adapter into a standard 120 VAC wall outlet.

Do not use an outlet controlled by a wall switch.



Use only the Uniden AC Adapter supplied with this phone.

One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Corporation
Parts and Service Division
4700 Amon Carter Blvd.
Fort Worth, TX 76155

(800) 297-1023, 8 a.m. to 5 p.m. CST, Monday through Friday

[64] PRECAUTIONS & WARRANTY

I.C. Notice

TERMINAL EQUIPMENT

NOTICE: This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

NOTICE: The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

RADIO EQUIPMENT

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone".

Index

0 - 9		
3-way Conferencing	23	
10 Ring Options.....	20	
A		
Announce Only Feature	45	
Answering System		
Deleting a Message	48	
Playing Your Messages	47	
Recording a Conversation	49	
Remote Access	50	
Repeating a Message	47	
Skipping a Message	48	
Turning On/off	40	
Area Code.....	16	
AutoTalk.....	15	
B		
Base Speaker Volume	43	
Battery Pack		
Preparing and Charging.....	11	
Replacement and Handling	59	
Beltclip	58	
C		
Caller ID.....	35	
Caller ID Service	35	
Calling	38	
Call Waiting.....	15, 39	
Deleting	37	
Setting	15	
Storing	38	
Using.....	38	
Viewing	36	
Call Transfer Feature.....	54	
Chain Dialing	34	
Channel	23	
Clock	44	
Conversation, Recording	49	
D		
Deluxe Call Waiting Features	39	
Dialing Mode.....	14	
Digital Security Code	8, 57	
Distinctive Ringer	21	
E, F, G, H		
Earpiece Volume	21	
General Information	60	
Greeting	41	
Hands Free	18	
Headset Installation.....	58	
I, J, K, L		
I.C. Notice	65	
Important Safety Instructions	63	
Language	17	
M, N, O		
Maintenance	59	
Making a Call	18	
Memory Dialing	31	
Mute	22	
New Message LED.....	25	
One Touch Dialing	33	
Outgoing Message	41	
P, Q		
Package Contents.....	9	
Phonebook	26	
Editing.....	32	
Erasing.....	32	
Making Calls	31	
Storing	26	
Viewing	30	
Precautions.....	63	
R		
Receiving a Call.....	18	
Redialing a Call	19	
Registering the Second Handset	53	
Remote Access		
Away from Home	50	
From your Handset.....	51	
Repeating a Message	47	
Ringer Volume	20	
RocketDial	33	
S		
Second Handset Operation.....	55	
Setting Up	10	
Base Unit	13	
Handset	11	
Skipping Message.....	48	
Speed Dialing	31	
T, U, V, W, X, Y, Z		
Transferring a Call	24	
Receive from the Second Handset.....	54	
Transfer to the Second Handset.....	54	
Troubleshooting.....	61	
Voice Memo	49	
Warranty.....	64	

Remote Operation Card

----- CUT -----

REMOTE OPERATION CARD

Uniden®

Remote access away from home 1. Call your phone number from a touch-tone phone. 2. During the outgoing message, press # and enter your PIN code. The answering system announces the number of messages stored in memory and the help guidance. 3. To quit, hang up the phone.	Turn on the answering system remotely 1. Call your phone and let it ring 10 times until you hear a beep. 2. Press # and then enter your PIN code. 3. Press # then 5 to stop the announcement. 4. Press # then 6 to turn the answering system on.
--	---

CUT

Task	Key
Repeat a Message	# 1
Playing incoming Messages	# 2 abc
Skipping a Message	# 3 def
Deleting a Message	# 4 ghi
Stop Operation	# 5 jkl
Answering System On	# 6 mno
Memo Record/Stop	# 7 pqrs
Greeting Message Record/Stop	# 8 tuv
Answer System Off	# 9 wxyz
Help Guidance	# 0 oper

At Uniden, we'll take care of you!

If you need any assistance with this product, please call our Customer Hotline at

1-800-297-1023

PLEASE DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

Our Uniden representatives will be happy to help you with any matters regarding the operation of this unit, available accessories, or any other related matters.

Thank you for purchasing a Uniden product.
Hours: M-F 8:00 AM to 5:00 PM CST.



For information on the accessibility features of this product, please call

1-800-874-9314 (V/TTY)

Uniden®

May be covered under one or more of the following U.S. patents:

4,511,761	4,523,058	4,595,795	4,797,916	5,381,460	5,426,690
5,434,905	5,491,745	5,533,010	5,543,605	5,574,727	5,581,598
5,650,790	5,660,269	5,661,780	5,663,981	5,671,248	5,696,471
5,717,312	5,732,355	5,754,407	5,758,289	5,768,345	5,787,356
5,794,152	5,801,466	5,825,161	5,838,721	5,864,619	5,893,034
5,912,968	5,915,227	5,929,598	5,930,720	5,960,358	5,987,330
6,044,281	6,070,082	6,125,277	6,253,088		

ADDITIONAL HANDSET & CHARGER

EXPAND YOUR SYSTEM!

TXC 580 HANDSET & CHARGER

Easily expand your cordless phone system by adding the TXC 580 Handset and Charger.* The TXC 580 gives you the mobility you need to stay connected with friends and family. Place this handset and charger in any convenient location, no need for an extra phone jack! Another innovation from Uniden, the company that brings you a world without wires.

*Operates with
Dual Handset
Cordless Systems:
TRU 5865 and
TRU 5885.



Uniden®

- Optional 5.8 GHz Cordless Handset and Charging Cradle
- For use with Dual Handset Cordless Systems: TRU 5865 and TRU 5885.
- Digital Spread Spectrum
- Call Transfer
- Caller ID/Call Waiting
- No Phone Jack Needed

MAXIMUM EXPANDABILITY:
2 Handsets Per System

©2002 Uniden America Corporation, Fort Worth, Texas. Contains additional foreign articles. Custom manufactured in China.

AVAILABLE AT PARTICIPATING RETAIL STORES

UCZZ01789BZ