



Slim Series



Slim8800 DECT Digital Cordless Telephone with Answering System



Slim8000 DECT Digital Cordless Telephone

USER GUIDE

Keep this user guide for future reference.

Contents

Getting started 4

Important	4
Location	5
Handset range	5
Signal strength	5
Installation and Charger	5
Select your Country	5
Battery low warning	6
Battery performance	6
Pack contents	7
Purchasing additional handsets	7
Base stand	7
Wall mounting	8

Getting to know your phone 9

Overview of the Handset	9
Handset display	10
Overview of the base	11
Navigating the menu	11
Menu map	12

Using the phone 13

To Make a call	13
To Make a call by Pre-dialling	13
To Make a call by speed dial (keypad 1 to 9)	13
Call from the phonebook	13
Call from the calls list	13
Answer a call	13
To adjust the volume	14
To mute the microphone	14
To end a call	14
To switch handset on/off	14
To call a second external number	14
Multi-handset Operation	15
To call another handset: intercom	15
To transfer an external call to another handset	15
To switch between an internal and external call	15
To make a three way conference call	16
Recall feature	16
Call waiting (Australia Only)	16
Take two different calls at the same time	16
Recall function when connected to a PBX	16

Phonebook 17

To view and dial phonebook entries	17
------------------------------------	----

To store an entry	17
Entering names	17
Character map	18
Enter a pause	18
To view an entry	18
To edit an entry	19
To delete an entry	19
To delete all entries	19
To copy the phonebook to another handset	19
To store a phonebook entry as a speed dial number	20
To delete a speed dial number	20

Caller ID 21

To view the calls list	21
To dial from the calls list	21
To save a number from the calls list to the phonebook	22
To delete a calls list entry	22
To delete entire calls list	22
To redial the last number	22
To view and dial a number in the redial list	23
To copy a redial number to the phonebook	23
To delete a redial list entry	23
To delete entire redial list	23

Clock & Alarm 24

To set date and time	24
To set alarm	24
To set alarm melody	24

Personal settings 25

To set the ring volume	25
To set the ring melody	25
To set a Group melody	25
To set the Key tones on/off	26
To change the handset name	26
To set auto pick up answer	26
To set auto hang up	26
To set babysit mode on	27
To set the backlight on/off	27
To lock the Keypad	27

Advanced settings 28

To set the Recall time	28
Call barring	28
To switch call barring on/off	28
To set a number to be barred	29
To set the PIN	29

To Reset your Phone	29
Auto prefix	29
To set Country	30
To turn intrusion on	30

Registration 31

Register new handsets on the Slim base	31
To register a handset	31
To unregister a handset	31

Using the Answering system (Slim8800 ONLY) 32

Outgoing messages	32
Answer & Record	32
Answer Only	32
To set answer mode	32
To record an outgoing message	33
To delete a personalised outgoing message	33
Ring delay	33
To switch the answering machine on/off	33
New Message	34

To play messages	34
To delete all messages	34
To record a memo	34
Remote access	35
To turn Remote Access on/off	35
Call screening	35
To interrupt at the handset:	35
Switch handset call screening on/off	35
To access the answering machine menu via the Calls list	36
Memory full	36
To set TAM Language	36

Appendix 37

Customer Support	37
Troubleshooting	38
Warranty Information (Australia)	41
Notes for operation in New Zealand	42

Important

- Avoid exposure of this telephone to moisture or liquid.
- To prevent electric shock, do not open the handset or base cabinet.
- Avoid metallic contact (e.g. metal clips, keys) between the battery contacts and charging conductors.
- There is a slight chance that the telephone could be damaged by an electrical storm. It is recommended that users unplug the phone from the mains supply and telephone socket during a storm.
- Do not use the handset in an explosive hazard area such as where there is gas leaking.
- Follow the local regulations regarding the disposal of your packing materials, exhausted batteries and used phone. Wherever possible, recycle those materials.
- This phone should not be used near intensive care medical equipment. Persons with pacemakers should consult their Doctor or cardiologist before using this phone.
- Clean with a dry, soft, lint-free cloth. Never use cleaning agents, particularly aggressive solvents.
- Because the phone works by sending radio signals between base station and handset, wearers of hearing aids may experience interference in the form of a humming noise.
- Your phone can interfere with electrical equipment such as answering machines, TV and radio sets, clock radios and computers if placed too close. It is recommended that you position the base unit at least one metre from such appliances.
- This telephone complies with applicable safety requirements for

exposure to radio waves (EMR). The mean power of this telephone does not exceed 20mW limit at which point testing is required.

- Privacy of communications may not be ensured when using this telephone.
- The earpiece of the handset may attract small metal objects such as staples and pins. Care should be taken when placing the handset near these items.
- This telephone is not designed for making emergency telephone calls when the mains power fails. Always have a corded phone available to be able to make and receive calls to emergency services if the mains power fails.
- Do not use your telephone during an electrical storm thunderstorm as it is possible to get an electric shock. Refer to information contained in White pages directory.
- This phone is designed for connection to a PSTN telephone line or an analogue extension port of a PBX system. If you connect this device to a digital extension of a PBX, damage may result to the PBX.

CAUTION

Use only the mains adaptors supplied with this product. Incorrect adaptor polarity or voltage can seriously damage the unit.

Adaptor for base unit and charger:

Base Unit power supply – Input: 230-240VAC 50Hz 0.2A MAX

Output: 7.5VDC 300mA

This adaptor has Clear plug with offset to connect it to the base unit.

Ext Charger power supply – Input 230-240VAC 50Hz 0.2A MAX

Output: 7.5VDC 200mA

This adaptor has Red colour plug with opposite offset to base PSU to connect it to charger base. Charger base Red colour socket.

Location



You need to place your Slim base within 2 metres of the mains power socket and telephone socket so that the cables will reach.

Make sure it is at least 1 metre away from other electrical appliances to avoid interference. Your unit works by sending radio signals between the handset and base. The strength of the signal depends on where you site the base. Putting it as high as possible ensures the best signal.

Handset range

The Slim has a range of 300 metres outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range. With the base indoors and handset either indoors or outdoors, the range will normally be up to 50 metres. Thick concrete walls can severely affect the range.

Signal strength

The  icon on your handset indicates when you are in range. When out of range of the base, the screen shows SEARCHING the 

flashes and the handset gives an out-of-range warning tone every minute. This tone is repeated until you move back into range.

Installation and Charger



1. Connect the mains adaptor (supplied) to the socket on the back of the base unit and to the wall mains supply.
2. Connect the telephone cord to the phone socket on the back of the base unit and into the wall phone socket.
3. Insert 2 rechargeable Ni-MH AAA batteries (included), observing the correct polarity, into the battery compartment on the handset. Slide the battery door firmly into place.
4. Place the handset on the charging cradle and charge the batteries for a full 14 hours before using it for the first time.

Select your Country

After the phone is fully charged you will need to select your country.

1. The phone will display Welcome.
2. Press [MENU].
3. Scroll [▲] or [▼] to select Australia or New Zealand.
4. Press [MENU].
5. Press [MENU] again to confirm.

Battery low warning

If the  icon flashes in the display, you will need to recharge the handset before you can use it again. During charging, the  icon in the display will scroll.

Battery performance

In ideal conditions, fully charged batteries should give about 10 hours talk time or 100 hours standby time on a single charge.

Note that new batteries do not reach full capacity until they have been in normal use for several days.

The charge capacity of rechargeable batteries will reduce with time as they wear out, giving the handset less talk/standby time. Eventually they will need to be replaced.

Batteries and handset may become warm during charging. This is normal.

Tip!

It is good practice to put the cordless handset on the charging cradle when it is not in use to ensure that the handset is always fully charged.

WARNING

DO NOT USE STANDARD/ALKALINE BATTERIES IN THIS PRODUCT, AS THERE IS A RISK OF EXPLOSION AND/OR INJURY. USE ONLY NI-MH RECHARGEABLE BATTERIES AS SPECIFIED IN THIS USER GUIDE. CONTACT ORICOM FOR REPLACEMENT BATTERIES.

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.

Never use non-rechargeable batteries. Use recommended type supplied with this product.

- *Never use alkaline or lithium batteries.*
- *Do not dispose of the batteries in a fire, as they can explode.*
- *Do not open or mutilate the battery. Released electrolyte is corrosive and can cause damage to the eyes or skin. It can be toxic if swallowed.*
- *Avoid contact with metal objects when handling the battery. These objects could short out the batteries or cause the conductor to overheat resulting in burns.*
- *Do not attempt to recharge the battery cell by heating it. Sudden release of battery electrolyte can cause burns or irritation to the eyes or skin.*
- *Observe the proper polarity, or direction, of any battery. Reverse insertion of the battery cell can result in leakage or explosion.*
- *Remove the batteries if you do not plan to use the product for several months at a time.*
- *Follow the local regulations regarding the disposal of your packing materials, exhausted batteries and used phone. Wherever possible, recycle those materials.*

Pack contents

Depending on the model you have purchased this pack should contain the following items:

If any of these are missing, please contact Oricom directly.

	Slim8000/ 8800-1	Slim8000/ 8800-2	Slim8000/ 8800-3
Base units	1	1	1
Cordless handsets	1	2	2
Charging cradle and power adaptor	0	1	1
Power adaptors	1	1	1
Line cord	1	1	1
User guide	1	1	1
Handset Rechargeable AAA Ni-MH Batteries (1.2V 550mAh)	2	4	6

Purchasing additional handsets

You may expand your Slim by adding more handsets (slim8050). These can be purchased separately from the retailer where you


purchased the product, or directly from Oricom (Australia). The Slim can accommodate a total of 5 cordless handsets.

Important: **DO YOU HAVE BROADBAND/ADSL?**

If you do, you must connect an in line filter (not supplied) between the telephone socket and your Slim base to ensure that your broadband and Slim will work properly. If you do not install the filter you will experience interference on the Slim and your Broadband may suffer dropouts. Please refer to the user guide of the in line filter for installation.

Base Stand

Insert the base stand into the base unit with the four tabs on the cradle towards to the holes on the base unit.

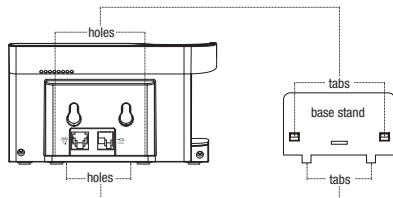

Push the base stand up towards the base unit until it locks in place.


Wall mounting

IMPORTANT

Before you wall-mount your Slim, check that you are not drilling into any hidden wiring. Before you drill, make sure the power and telephone line cables will reach the sockets.

Method A. To fit the wall bracket (supplied) to an existing telephone wall plate with modular connector simply;


1. Remove the base stand from the slim base unit if it was fitted.
2. Fit the wall bracket (supplied) over the existing wall plate, slide down until it locks in place.
3. Plug the AC adaptor cord into the base unit.
4. Plug the short telephone line cord (supplied) into the base unit and plug the other end into the telephone wall plate socket.
5. Tuck the small line cord in the space provided, then position the mounting holes on the base unit over the two protruding plastic lugs on the wall bracket.
6. Gently push the base unit against the wall bracket then slide the base downwards locking it into place.
7. Plug the AC adaptor into a power point.

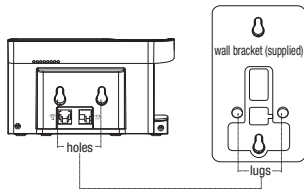





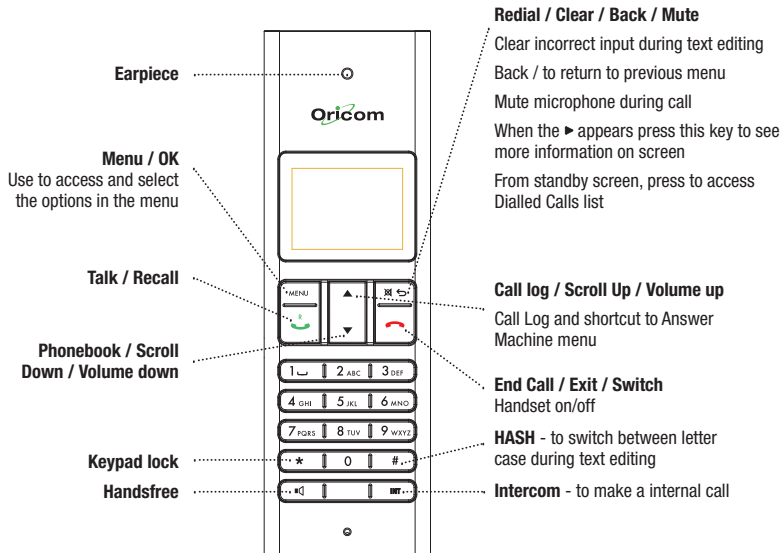


Method B. Attach the Wall bracket (supplied) directly to a wall





1. Choose a suitable position to wall mount the base ensuring the telephone line cord and the AC adaptor will reach the phone socket and power point.
2. Mark out and drill two holes vertically, one above the other 100mm apart (use the wall bracket as the template). Fix 2 screws (supplied) leave the screw heads protruding from the wall by 5mm.
3. Plug the telephone line cord (supplied) into the base unit and the other end into the telephone wall plate socket.
4. Plug the AC adaptor cord into the base unit.
5. Feed the line cord and the AC adaptor cable through the gap between the base unit and the wall bracket, then position the mounting holes on the base unit over the two protruding plastic lugs on the wall bracket.
6. Gently push the base unit against the wall bracket then slide the base downwards locking it into place.
7. Plug the AC adaptor into a power point and connect the line cord to the phone socket.
8. Place the handset in the base unit to charge.

Overview of the Handset




Handset display

	<p>Handset Battery Level Displays the current power levels of your handset battery.</p>
	<p>In Use Displayed when the line is in use and flashes when there is an incoming call.</p>
	<p>Missed Calls Displayed when you have missed calls and new number(s) in the Calls list.</p>
	<p>Phonebook Displayed when you are viewing the phonebook list.</p>
	<p>Alarm The alarm clock has been set.</p>
	<p>Handsfree Displayed when in handsfree mode.</p>
	<p>Silent Handset ringer is off: set to silent.</p>

	<p>Answering machine Displayed when the answering machine is on. Flashes slowly when you have new messages. Flashes quickly when the memory is full.</p>
	<p>Signal Steady when the handset is registered and within range of the base. Flashes when the handset is out of range or searching for base.</p>
<p>OK</p>	<p>OK Press the [MENU] key to select and confirm a setting or an option on screen.</p>
	<p>UP and Down Press [▲] or [▼] to scroll through the options in a menu, to open the phonebook or calls list when in standby.</p>
	<p>Back Press [⌫] to go back to the previous menu option, to cancel an action or to delete a character.</p>

11 GETTING TO KNOW YOUR PHONE

Overview of the base

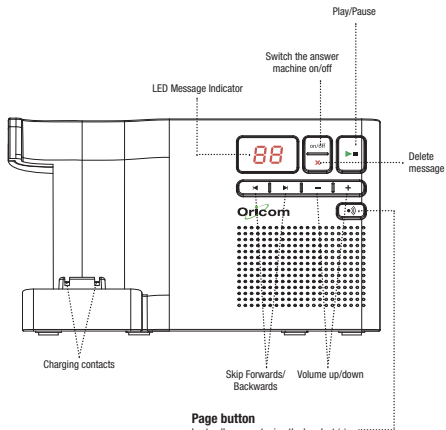

Page button

In standby, press to ring the handset (s).
Press and hold to enter registration mode when registering handsets.
Flashes if you have received a new answering machine message.

Navigating the menu

The basic steps of navigating through the menu and on-screen options.

1. From the standby screen, press [MENU]. The main menu is opened.
2. Use the [▲] or [▼] keys to scroll through the menu.
3. Soft key options **OK** and **↵** are displayed. Press [MENU] to select **OK** and open a sub-menu or validate an option.
4. Press [⌫ ↵] to select **↵** and go back to previous menu level, correct a character or cancel an action.
5. Press [↶] to return to standby.

If you do not press any button on the handset for 15 seconds the display will automatically return to standby. It will also return to standby when the handset is placed on the base or charger.



Menu map

PHONEBOOK

NEW ENTRY
LIST ENTRY
→ <NAME>
→ EDIT ENTRY
→ DELETE ENTRY
DELETE ALL
DIRECT MEM

CLOCK/ALARM

DATE & TIME
SET ALARM
→ OFF
→ ON ONCE
→ ON DAILY
ALARM TONE

PERSONAL SET

HANDSET TONE
→ RING VOLUME
→ RING MELODY
→ GROUP MELODY
→ KEY TONE
HANDSET NAME
AUTO PICK-UP
AUTO HANG-UP
BABYSIT MODE
BACKLIGHT

ADVANCED SET

RECALL TIME
CALL BARRING
REGISTRATION
→ SELECT BASE
→ REGIST. BASE
UNREGISTER
PIN
RESET UNIT
PREFIX
SEL. COUNTRY
INTRUSION

ANSW MACHINE

PLAY
DELETE ALL
RECORD MEMO
ANSWER MODE
→ ANSWER & REC
→ PREDEFINED
→ PLAY
→ PERSONALIZED
→ PLAY
→ RECORD MESS
→ DELETE
→ ANSWER ONLY
→ PREDEFINED
→ PLAY
→ PERSONALIZED
→ PLAY
→ RECORD MESS
→ DELETE
ANSW ON/OFF
ANSW SETTING
→ RING DELAY
→ REMOTE ACC
→ HS SCREENING
→ TAM LANGUAGE

13 USING THE PHONE

Using the phone

To Make a call

1. Press [📞].
2. Dial the telephone number.

To Make a call by Pre-dialling

1. Enter the phone number (maximum 24 digits). If you make a mistake press [✖ ↵].
2. Press [📞] to dial the phone number entered.

To Make a call by speed dial (keypad 1 to 9)

1. Press and hold a key from 1 to 9 until the number is displayed and dialled. If no number is stored, you hear a beep.

Call from the phonebook

1. Press [▼]. The first entry in the phonebook is displayed.
2. Scroll UP [▲] or [▼] to the entry you want.
3. Press [📞] to dial the number.

TIP

Instead of scrolling to browse the phonebook entries, press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing **2** will show the entries starting with A. Pressing **2** again will show the entries starting with B, etc...

Call from the calls list

Note: You need to subscribe to your network's Caller ID service to be able to see the caller's number in the calls list.

1. Press [▲] to enter **CALL LOG** menu. You have the options to access **CALL LIST** or **ANSWER MACHINE**. Press [MENU] to enter **CALL LIST**. The first entry in the call list is displayed.
2. Scroll [▲] or [▼] to select.
3. Press [📞] to dial the number.


Answer a call

1. When the phone rings and 📞 flashes in the display, press [📞] or press [📞] to answer the call via the loudspeaker. When answering the handset from the base with 'Auto Pick up mode' set to On, nothing needs to be pressed.

NOTE

If you have subscribed to your Network's Caller ID service and assigned a VIP Group to the caller's number, the caller's details are displayed before the phone starts ringing. You can set your phone to give the default ringtone as soon as the call is received then once the caller's identity is displayed, the assigned ringtone will start.

TIP

If Auto Pick up mode is on, simply lift up the handset from its base to answer the call. The default setting is On. If you have changed Auto Pick up mode to Off, you will need to press  to answer a call.

NOTE





An incoming call has priority over other events. Whenever there is an incoming call, other operations in progress such as phone settings, menu navigation, etc. will be ended.

To adjust the volume

1. During a call, press [] or [] to adjust the earpiece or loudspeaker volume. The level is shown in the handset display.

To mute the microphone

Mute the microphone so that you can talk to someone else in the room without your caller hearing you.

1. During a call, press [ ]. The microphone is muted.
2. Press [ ] again to turn the microphone back on.

To end a call



1. Press [].

After you hang up, the duration of your call is displayed for 5 seconds.

NOTE

If auto hang-up is on, replace the handset on the base to end the call. The default setting is ON.

To switch handset on/off


1. Press and hold [] until the handset switches off.
2. Press and hold [] again to switch the handset back on.

Note

if the handset is turned off, the phone will not ring.

To call a second external number

Put an external caller on hold to make a second external call. You can then switch between both callers or hold a 3-way conference call.

1. During your call, press [MENU]. Scroll [] to **INIT 2ND CALL**.
2. Press [MENU]. Display shows **CALLING R**.
3. Enter the second number.
4. When your second caller answers, press [MENU] to open the option menu:

CONFERENCE - press [MENU] to initiate a 3-way with an external caller and internal caller.

SWITCH CALLS - press [MENU] to switch between the two callers.

5. Press [] to hang up.

15 USING THE PHONE

Multi-handset Operation

Your Slim can have up to 5 handsets registered to the base unit. Each handset has its own number HS-1, HS-2, HS-3, HS-4 and HS-5 shown on the left-hand side of the display.

With 2 or more handsets you can:

- Make intercom calls while on an external call
- Switch between an external call and intercom call
- Transfer an external call from one handset to another
- Set a 3-way conference call between yourself, an external call and intercom call

NOTE

- A maximum of 1x external call and 2x intercom calls can take place at the same time.
- If you make an external call + another handset is on line = result is a busy tone.
- You can make an intercom call when the other handset is in progress.

To call another handset: intercom

This feature is only available when there are at least 2 registered handsets. It allows you to make internal calls, transfer external calls from one handset to another and use the conference option.

1. Press [INT].
- If you have two handsets, the other handset is called automatically.

- If more than two handsets are registered to the base, their numbers are displayed, e.g. 2345*. Enter the number of the handset you want to call or press [★] to ring all handsets.
2. Press [↩] to hang up.

NOTE

If the handset does not belong to the Slim range, this function may not be available.

To transfer an external call to another handset

1. During an external call, press [INT]. Your caller is put on hold.
2. Enter the number of the handset you want to call or press [★] to ring all handsets. If there are only two handsets, the other handset is called automatically.
3. When the other handset answers, announce the caller then press [↩] to transfer the call. If the other handset does not answer, press [INT] to talk to your caller again.

To switch between an internal and external call

1. During an external call, press [INT]. Your caller is put on hold.
2. Enter the number of the handset you want to call or press [★] to ring all handsets. If there are only two handsets, the other handset is called automatically.
3. When the other handset answers you can speak privately to your internal caller.

4. Press [INT] to switch between both callers.
5. Press [📞] to hang up.

To make a three way conference call

1. During an external call, press [INT]. Your caller is put on hold.
2. Enter the number of the handset you want to call or press [★] to ring all handsets. If there are only two handsets, the other handset is called automatically.
3. When the other handset answers, announce the call then press and hold [INT] to connect both calls. If the other handset does not answer, press [INT] to talk to your caller again.
4. Press [📞] to hang up.

Recall feature

Recall feature can be used when you are using some services provided by your network operators such as “call waiting”, etc. A subscription may apply for these services, contact your network operator for more information.

While you are talking on the phone, press [📞] key on the cordless handset to send a Recall.

Call waiting (Australia Only)

You can use the recall function to answer a second call while you are on the phone. However this service needs to be turned on. For example, to turn on Telstra’s Call Waiting service:

1. Press [📞] on the cordless handset to wait for dial tone then press [★] [4_{GHI}] [3_{DEF}] [#].
2. You will hear a service tone then press [📞] again.

Take two different calls at the same time

During a call, you will hear two loud beeps periodically to notify you of another incoming call. If you wish to answer this call,

1. Press [📞] key. You will hear a dial tone.
2. Press [2_{ABC}] to put the current call on hold and talk with the second caller.
3. Repeat steps 1-2 to swap between the two callers.

Recall function when connected to a PBX

If you have connected this telephone to an office PBX, you can use all the facilities such as call transfer, automatic recall, etc. The [📞] key provides access to these facilities. If you need to change the Recall setting for use on an office PBX system follow the instructions on page 30.

Phonebook

The Slim handset phonebook can store up to 100 names and numbers.

NOTE

Numbers can be up to 24 digits long and names up to 12 characters long. Entries are stored in alphabetical order.

To view and dial phonebook entries

1. Press [▼]. Display shows the first entry.
2. Scroll [▲] or [▼] to the entry you want. Or to search alphabetically, press [▼] then press the key with the first letter of the name, e.g. if the name begins with N, press 6 twice. The display shows the first entry beginning with N. If required, press [▲] or [▼] to scroll to the exact entry.
3. Press [☎] to dial the entry displayed.

To store an entry

1. Press [MENU]. **PHONEBOOK** is displayed.
2. Press [MENU]. **NEW ENTRY** is displayed.
3. Press [MENU]. **ENTER NAME** is displayed.
4. Enter a name and press [MENU].

5. Enter a number. Press [MENU] to save. Press [▲] or [▼] to select **NO GROUP, GROUP A, B** or **C** and press [MENU] to confirm.
6. Press [↩] to return to standby.

NOTE

You can assign individual contacts to specific groups of your choice. For example, Group A contains phone numbers of all your co-workers. You can also assign a specific ring melody to that group (see Group melody). You can benefit from this feature only if you have subscribed to Caller ID service from your network provider. If it is the case, every time someone from that group calls you, you will hear the designated ringtone for that group.

Cancel storing an entry by pressing [↩] at any time during the process.

Entering names

Use the alphanumeric keypad to enter names in the phonebook.

For instance to enter the name Paul

- P Press [7_{PQRS}] once
 - A Press [2_{ABC}] once
 - U Press [8_{TUV}] twice
 - L Press [5_{JKL}] three times
- To enter a space press 1

Press [✕↵] to delete a character or press and hold [✕↵] to delete all characters.

Character map

Key characters and symbols

1	Space	1	-	<	>	*
2	ABC	A	B	C	2	
3	DEF	D	E	F	3	
4	GHI	G	H	I	4	
5	JKL	J	K	L	5	
6	MNO	M	N	O	6	
7	PQRS	P	Q	R	S	7
8	TUV	T	U	V	8	?
9	WXYZ	W	X	Y	Z	9
0	0	-	/	\	#	+

Enter a pause

If your Slim is connected to a switchboard, you may need to enter a pause in a stored number. This gives the switchboard time to get an outside line. A Pause is normally stored after the switchboard access code (e.g. 0)

1. When storing a number, press and hold [#] until the display shows **P**. You can then continue storing the phone number.

To view an entry

In standby:

1. Press [▼].
2. Enter the first letter of the name to search alphabetically then scroll [▲] or [▼] to the exact entry. The name is displayed.
3. Press [⌂ ↵] to display the number. If there are more than 12 digits, press [⌂ ↵] again to see the rest of the number.
4. Press [⏪] to return to standby.

During a call:

1. Press [MENU] twice to open the phonebook menu.
2. Follow to the above 2~3 steps to operate.
3. Press [⏪] to cancel the phonebook display.
4. Press [⏪] again to end the call.

To edit an entry

1. Press [▼].
2. Scroll [▲] or [▼] to the entry you want to edit and press [MENU]. **EDIT ENTRY** is displayed. Press [MENU] again.
3. Edit the name and press [MENU] to confirm. Use [⌫] to delete characters.
4. Press [MENU] and edit the number.
5. Press [MENU] to confirm.
6. Scroll [▲] or [▼] to select **NO GROUP, GROUP A, B or C** and press [MENU] to confirm.
7. Press [↶] to return to standby.

To delete an entry

1. Press [▼].
2. Scroll to the entry you want to delete and press [MENU].
3. Scroll [▼] to **DELETE ENTRY** and press [MENU].
4. Display shows **CONFIRM?**. Press [MENU].
5. Press [↶] to return to standby.

To delete all entries

1. Press [MENU] twice.
2. Scroll [▲] or [▼] to **DELETE ALL** and press [MENU].
3. Display shows **CONFIRM?**. Press [MENU].
4. Press [↶] to return to standby.

To copy the phonebook to another handset


1. Press [MENU] twice.
2. Scroll [▲] or [▼] to **PB TRANSFER** and press [MENU].
3. Scroll [▲] or [▼] to the number of the handset you want the phonebook copied to. Press [MENU].
4. When the message "**TRANS. FROM HANDSET X**" appears on the destination handset, press [MENU] on the handset to start the copy process.
5. When "**DONE!**" appears on both handsets press [↶] to return to standby.

NOTE


If an entry with the same name and number is already stored in the receiving handset, it will not be copied across.

To store a phonebook entry as a speed dial number

The keys [1] to [9] enable one touch speed dialling of entries stored in the phonebook.

1. Press [MENU] twice.
2. Scroll [▲] or [▼] to **DIRECT MEM** and press [MENU].
3. Press [▲] or [▼] to select KEY 1 - 9 and press [MENU]. The current entry, if any, is displayed.
4. Press [MENU] again to open the options menu.
5. Press [MENU] to **ADD** an entry from the phonebook.
6. Scroll [▲] or [▼] to the entry you want. Press [MENU] to confirm or  to return to standby.

To delete a speed dial number

1. Press [MENU] twice then scroll [▲] or [▼] to **DIRECT MEM** and press [MENU].
2. Scroll [▲] or [▼] to select KEY 1- 9.
3. Press [MENU] to display the current entry. Press [MENU] again to open the options menu.
4. Scroll [▲] or [▼] to **DELETE** and press [MENU].
5. Display shows **CONFIRM?**. Press [MENU].
6. Press  to return to standby.

Caller ID

If you subscribe to your telephone operators service (charges may apply), numbers of the incoming calls will be displayed on the screen and stored in the call log (please consult your telephone service provider for details).

NOTE

If the caller's number is stored in your phonebook along with a name, the name will also be displayed.


If the telephone number is not available for incoming calls, the handset will display UNAVAILABLE. If the incoming callers number is blocked, the display will show WITHHELD.

Information about incoming calls will vary by country and network operator. Some operators may charge a subscription for their Caller ID service.

The received and missed calls log holds details of up to 50 calls. The calls list contains details of missed and received call. Details include the date and time of the call. Entries are displayed in chronological order with the most recent call at the top of the list.


When the calls list is full, a new call replaces the oldest in the list.

If you receive more than one call from the same number, only the most recent call is kept in the calls list.

When you have missed calls (incoming calls that you haven't answered) the  icon will be displayed in the display on all handsets registered to the base. If one handset is used to view the calls log, the icon on the other handsets continue to flash (Multipack user only).

To view the calls list

1. Press [▲] to enter **CALL LOG** option menu, then press [MENU] to enter **CALL LIST**.

The most recent number or name if stored in the phonebook is displayed. New calls are marked with  icon flashing.

2. Scroll [▲] or [▼] through the calls log. At the end of the log, you will hear a beep.


Press [ⓧ ⏪] to see the number. If the number has more than 12 digits, press [ⓧ ⏪] to see the rest of the number.

3. Press [↶] to return to standby.

NOTE

The  icon stops flashing once all new calls have been viewed.

To dial from the calls list

1. Press [▲] to enter the **CALL LOG** option menu, then press [MENU] to enter **CALL LIST**. The most recent call is displayed.
2. Scroll [▲] or [▼] to the entry you want.
3. Press [] or [ⓧ] to dial.

To save a number from the calls list to the phonebook

1. Scroll [▲] to enter the **CALL LOG** option menu, then press [MENU] to enter **CALL LIST**. The most recent call is displayed.
2. Scroll [▲] or [▼] to the number you want.
3. Press [MENU]. **SAVE NUMBER** is displayed.
4. Press [MENU]. **ENTER NAME** is displayed. Use the keypad to enter the name.
5. Press [MENU] then the number is displayed, the user can then edit the number if required and must press [MENU] to save the number (even if has not been edited).
6. Press [▲] or [▼] to select **NO GROUP, GROUP A, B or C** and press [MENU] to confirm.
7. Press [↩] to return to standby.

To delete a calls list entry

1. Scroll [▲] to enter the **CALL LOG** option menu, then press [MENU] to enter **CALL LIST**. The most recent call is displayed.
2. Scroll [▲] or [▼] to the number you want.
3. Press [MENU] then scroll [▲] or [▼] to **DELETE** and press [MENU].
4. Display shows **CONFIRM?**. Press [MENU] to confirm.
5. Press [↩] to return to standby.

To delete entire calls list

1. Scroll [▲] to enter the **CALL LOG** option menu, then press [MENU] to enter **CALL LIST**. The most recent call is displayed.
2. Scroll [▲] or [▼] to **DELETE ALL** and press [MENU].
3. Display shows **CONFIRM?**. Press [MENU] to confirm. Press [↩] to return to standby.

To redial the last number

The Slim lets you redial any of the last 10 numbers called. Numbers can be up to 24 digits long.

1. Press [☒ ↩]. The last number dialled is displayed.
If the number has more than 12 digits, the display shows ► and the cursor blinks. Press [☒ ↩] to display the rest. If the number is stored in the Phonebook, the name is displayed as well.
2. Press [☒] to dial.

To view and dial a number in the redial list

1. Press [⌫ ↵]. The last number dialled is displayed. If required, scroll [▲] or [▼] to display the number you want.
2. Press [📞] to dial the number.

To copy a redial number to the phonebook

1. Press [⌫ ↵] and scroll [▲] or [▼] to the entry you want.
2. Press [MENU].
3. Display shows **SAVE NUMBER**. Press [MENU].
4. Enter the name and press [MENU].
5. Edit the number if required and press [MENU].
6. Press [▲] or [▼] to select **NO GROUP, GROUP A, B or C** and press [MENU] to confirm.
7. Press [↩] to return to standby.

To delete a redial list entry

1. Press [⌫ ↵]. Scroll [▲] or [▼] to display the number you want.
2. Press [MENU] and scroll [▼] to **DELETE** then press [MENU].
3. Display shows **CONFIRM?**. Press [MENU] to confirm, then [↩] to return to standby.

To delete entire redial list

1. Press [⌫ ↵] then press [MENU].
2. Scroll [▲] or [▼] to **DELETE ALL** and press [MENU].
3. Display shows **CONFIRM?**. Press [MENU] to confirm. Press [↩] to return to standby.

Clock & Alarm

If you subscribe to your network's Caller ID service, the time on the unit may be set automatically each time you receive a call, depending on your network provider.

You can also set or adjust the time manually using the Clock & Alarm menu.

To set date and time

1. Press [MENU] and scroll [▲] or [▼] to **CLOCK/ALARM**. Press [MENU]. Display shows **DATE & TIME**, then press [MENU].
2. Enter the date using the format DD/MM e.g. 04/ 08 for 4th August.
3. Press [MENU] and enter the time using the 24 hour format HH:MM, e.g. 14:45 for 2.45pm.
4. Press [MENU] to confirm.
5. Press [↶] to return to standby.

NOTE

The date and time is retained during a power failure or when the batteries are discharged.

To set alarm

1. Press [MENU], scroll [▲] or [▼] to **CLOCK/ALARM** and press [MENU].
2. Scroll [▲] or [▼] to **SET ALARM** and press [MENU].
3. Scroll [▲] or [▼] to **OFF, ON ONCE** or **ON DAILY** and press [MENU].
4. If you select **ON ONCE** or **ON DAILY**, enter the time using the 24 hour format HH - MM e.g 14:45 for 2:45pm and press [MENU].
5. Press [↶] to return to standby. When the alarm goes off, press any key to stop the ring.

NOTE

*Once the alarm is set to on, the  icon is displayed. The alarm will ring at the medium level. **ALARM ON** and the  will flash on the display.*

To set alarm melody

There are three alarm ringtones.

1. Press [MENU] and scroll [▼] to **CLOCK/ALARM**. Press [MENU].
2. Scroll [▼] to **ALARM TONE** and press [MENU]. Melodies are played.
3. Scroll [▲] or [▼] and press [MENU].

Personal settings

To set the ring volume

1. Press [MENU], scroll [▲] or [▼] to **PERSONAL SET** and press [MENU].
2. **HANDSET TONE** is displayed. Press [MENU].
3. **RING VOLUME** is displayed. Press [MENU].
4. Scroll [▲] or [▼] to adjust the ringer volume level. Choose from: **RINGER OFF, LOW, MEDIUM, HIGH, BOOST** and **PROGRESSIVE** (increasing ring volume). The default setting is High.
5. Press [MENU] to save the settings.
6. Press [↩] to return to standby.

To set the ring melody

1. Press [MENU], scroll [▼] to **PERSONAL SET** and press [MENU].
2. **HANDSET TONE** is displayed. Press [MENU] and scroll [▲] or [▼] to **RING MELODY**. Press [MENU].
3. Press [▲] or [▼] to select the ringtone. Choose from 10 ringer melodies. A sample of the ringtone is played.
4. Press [MENU] to confirm.

5. Press [↩] to return to standby.

To set a Group melody

To benefit from this feature, you must subscribe to the Caller ID service. This menu enables you to select and set the melodies to be played when there is an external incoming call from a contact whose name is stored in your phonebook and is part of a group. You can associate 1 ring melody to each group. There are three phonebook groups (Group A, B, C) available for you to organize your contacts. Each group can be assigned a unique melody.

1. Press [MENU], scroll [▲] or [▼] to **PERSONAL SET** and press [MENU].
2. **HANDSET TONE** is displayed. Press [MENU] and scroll [▲] or [▼] to **GROUP MELODY**. Press [MENU].
3. Scroll [▲] or [▼] to select: **GROUP A, B or C**, then press [MENU].
4. Press [▲] or [▼] to select the ringtone you want for the group and press [MENU].
5. Press [↩] to return to standby.

To set the Key tones on/off

When you press a key on the handset you hear a beep. You can switch these beeps on or off.

1. Press [MENU], scroll [▲] or [▼] to **PERSONAL SET** and press [MENU].
2. **HANDSET TONE** is displayed. Press [MENU] and scroll [▲] or [▼] to **KEY TONE**. Press [MENU].
3. Scroll [▲] or [▼] to select **ON** or **OFF**.
4. Press [MENU] to confirm.
5. Press [↶] to return to standby.

To change the handset name

Personalise your handset, with a name or location for example Peter or Bedroom. Maximum 10 characters.

1. Press [MENU], scroll [▲] or [▼] to **PERSONAL SET** and press [MENU].
2. Scroll [▲] or [▼] to **HANDSET NAME** and press [MENU]. The current name is displayed.
3. Press [✕ ↵] to delete the current name.
4. Enter the name you want, maximum 10 characters and press [MENU] to save.
5. Press [↶] to return to standby.

To set auto pick up answer

With Auto pick up switched on, you can answer a call just by lifting the handset off the base or charger. If switched off, you will have to press [☺] to answer a call. The default setting is On.

1. Press [MENU], scroll [▲] or [▼] to **PERSONAL SET** and press [MENU].
2. Scroll [▲] or [▼] to **AUTO PICK UP**. Press [MENU].
3. Scroll [▲] or [▼] to select **ON** or **OFF**.
4. Press [MENU] to confirm.
5. Press [↶] to return to standby.

To set auto hang up

With Auto hang up switched on, you can end a call just by replacing the handset on the base or charger. If switched off, you have to press [↶] to hang up. The default setting is On.

1. Press [MENU], scroll [▲] or [▼] to **PERSONAL SET** and press [MENU].
2. Scroll [▲] or [▼] to **AUTO HANG UP**. Press [MENU].
3. Scroll [▲] or [▼] to select **ON** or **OFF**.
4. Press [MENU] to confirm.
5. Press [↶] to return to standby.

27 PERSONAL SETTINGS

To set babysit mode on

Leave one handset in a room and use another handset to hear sounds in that room.

1. Press [MENU], scroll [▲] or [▼] to **PERSONAL SET** and press [MENU].
2. Scroll [▲] or [▼] to **BABYSIT MODE**. Press [MENU].
3. Press [▲] or [▼] to select **ON** or **OFF**.
4. Press [MENU] to confirm.

When switched On, you can leave this handset in the room you wish to monitor. Only the microphone is on. Anyone in the room cannot hear you.

5. Place that handset in the room.
6. At a second handset, press [INT] and enter the number of the handset you are using as a room monitor. You can now hear sounds coming from the room.

To stop room monitoring at any time, press [↶].

To set the backlight on/off

1. Press [MENU], scroll [▲] or [▼] to **PERSONAL SET** and press [MENU].
2. Scroll [▲] or [▼] to **BACKLIGHT**. Press [MENU].
3. Press [▲] or [▼] to select ON or OFF.
4. Press [MENU] to confirm.

To lock the Keypad

Prevent accidental dialling while carrying the handset by locking the keypad.

1. Press and hold [★]. The display shows **KEYS LOCKED**.
2. To unlock the handset, press and hold [★] again.

NOTE

While the keypad is locked, you can answer incoming calls as normal.

Advanced settings

This setting is useful to access certain network and PBX/switchboard services.

To set the Recall time

You can use the Recall button on your telephone when using your network operator's services such as call waiting etc. A subscription may apply for these services contact your network operator for more information. If this function is not working correctly change the setting using the instruction below:

1. Press [MENU], scroll [▲] or [▼] to **ADVANCED SET** and press [MENU].
2. **RECALL TIME** is displayed. Press [MENU].
3. Press [▲] or [▼] to select the setting you want: **SHORT, MEDIUM, LONG.**
4. Press [MENU] to confirm.
5. Press [↩] to return to standby.

Note

Recall 1 (Short) has been set to 100ms and Recall 2 (medium) has been set to 250ms and Recall 3 (long) has been set to 600ms. Recall 1 = Australia (100ms), Recall 3 = New Zealand (600ms). The default is Recall 1.

The user has the option to adjust the time to short, medium or long (100, 250, or 600) if the unit is being used in a situation that differs from the network standard. The default recall time is suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

Call barring

Prevent certain numbers from being dialled from your Slim. Store up to four specific numbers, each up to 4 digits, for example, international or local prefixes.

NOTE

If you switch Call barring on, BARR MODE ON will be displayed on your screen in standby mode.

To switch call barring on/off

1. Press [MENU], scroll [▲] or [▼] to **ADVANCED SET** and press [MENU].
2. Scroll [▲] or [▼] to **CALL BARRING**. Press [MENU].
3. Enter the master PIN (default setting 0000) and press [MENU].
4. **MODE** is displayed. Press [MENU].
5. Press [▲] or [▼] to select **ON** or **OFF**. Press [MENU] to confirm.
6. Press [↩] to return to standby. You can now set the number (See below).

29 ADVANCED SETTINGS

To set a number to be barred

1. Follow the above procedures to enter the **CALL BARRING** menu.
2. Scroll [▲] or [▼] to **NUMBER**. Press [MENU].
3. If necessary, scroll [▲] or [▼] to the next available slot.
4. Press [MENU] and enter the number or prefix you want to bar. Press [MENU] to confirm.
5. Press [↩] to return to standby.

To set the PIN

The 4-digit master PIN is used when registering or unregistering a handset and when changing some settings on your Slim. The default setting is 0000. You can change this PIN for more security.

1. Press [MENU], scroll [▲] or [▼] to **ADVANCED SET** and press [MENU].
2. Scroll [▲] or [▼] to **PIN**. Press [MENU].
3. Enter the current 4 digit master PIN and press [MENU]. (Default setting 0000).
4. Enter the new PIN and press [MENU].

NOTE

Make a note of your PIN. If you forget your PIN you will need to reset your product.

To Reset your Phone

This will reset your Phone to its default settings.

1. Press [MENU], scroll [▲] or [▼] to **ADVANCED SET** and press [MENU].
2. Scroll [▲] or [▼] to **RESET UNIT**. Press [MENU].
3. **CONFIRM?** is displayed. Press [MENU].

NOTE

Entries stored in the phonebook and new answering machine messages are retained.

Auto prefix

You can set the Slim to detect a dialling number and replace it with another number. The number to be detected can be up to 5 digits long. It can be replaced with a number up to 10 digits.

1. Press [MENU], scroll [▲] or [▼] to **ADVANCED SET** and press [MENU].
2. Scroll [▲] or [▼] to **PREFIX**. Press [MENU].
3. **DETECT DIGIT** is displayed. Press [MENU].
4. Enter the number you want to be detected (up to 5 digits) and press [MENU].
5. Scroll to **PREFIX NUM.** and press [MENU].

6. Enter the number you (up to 10 digits) want it replaced with and press [MENU].
7. Press [↶] to return to standby.

NOTE

If you do not enter a number for "Detect Digit" then the "Prefix number" will be dialled prior to the number you call, (useful for access to "lo-cost" telephone service access). To disable the auto-prefix function, delete the contents in both "Detect digit" and "Prefix number" settings.

The auto-prefix function will not work if you Press TALK before dialling.

To set Country

1. Press [MENU], scroll [▲] or [▼] to **ADVANCED SET** and press [MENU].
2. Scroll [▲] or [▼] to **SEL. COUNTRY**. Press [MENU].
3. Enter the 4 digit master **PIN** and press [MENU].
4. Scroll [▲] or [▼] to select **Australia** or **New Zealand**.
5. Press [MENU] to confirm and [↶] to return to standby.

To turn intrusion on

When an external call is taking place, another handset registered to the base can join in, making the call a 3-way conference, just by pressing [☺]. To enable this, Intrusion must be switched On.

1. Press [MENU], scroll [▲] or [▼] to **ADVANCED SET** and press [MENU].
2. Scroll [▼] to **INTRUSION**. Press [MENU].
3. Scroll [▲] or [▼] to **ON** or **OFF**.
4. Press [MENU] to confirm.
5. Press [↶] to return to standby.

Registration

Register new handsets on the Slim base

The handsets which come in the same pack are already registered to the base. If you buy new handsets, you need to register them before use.

1. Charge the batteries (for 15 hours).
2. Register the handset (to the base unit).

Each base can register up to 5 handsets.

- The Master PIN is required before you can register or unregister handsets. The default PIN is 0000.

To register a handset

On the base:

1. Press and hold the [] button on the base station for at least 3 seconds. You have 90 seconds in which to register a handset.

On the handset:

2. Press [MENU] and scroll [▲] or [▼] to **ADVANCED SET** and press [MENU].
3. Scroll [▲] or [▼] to **REGISTRATION** and press [MENU].

4. If necessary, scroll [▲] or [▼] to display **REGIST. BASE** and press [MENU].
5. **BASE 1 2 3 4** is displayed and the registered base number is flashing.
6. Enter the number 1.
7. When the display shows **PIN----**, enter the base PIN.
8. When the handset registers with the base, it is assigned a handset number.

To unregister a handset

1. Press [MENU] and scroll [▲] or [▼] to **ADVANCED SET** and press [MENU].
2. Scroll [▲] or [▼] to **UNREGISTER** and press [MENU].
3. Enter the 4 digit master PIN and press [MENU]. Display shows the registered handset numbers.
4. Scroll [▲] or [▼] to select the handset you want to delete and press [MENU]. **UNREGISTERED** is displayed on the handset screen.

Using the Answering system (Slim8800 ONLY)

Your answering machine records unanswered calls when it is activated. It can store up to 59 messages within the maximum recording time of 12 minutes. Each message can be up to 3 minutes long. Your personal outgoing messages can be up to 1 minute long.

Outgoing messages

This is the message your callers hear on the answering machine. There are two pre-recorded outgoing messages, or you can record your own.

Answer & Record

The caller can leave a message. The pre-recorded message is 'Hello, your call cannot be taken at the moment, so please leave your message after the tone.'

Answer Only

The caller can listen to your announcement but cannot leave a message. The pre-recorded message is 'Hello, your call cannot be taken at the moment, and you cannot leave a message, so please call later'.

To set answer mode

Set your machine to Answer & Record or Answer Only.

1. Press [MENU] scroll [▲] or [▼] to **ANSW MACHINE** and press [MENU].
2. Scroll [▲] or [▼] to **ANSWER MODE** and press [MENU]. The current answer mode is displayed.
3. Scroll [▲] or [▼] to select **ANSWER & REC** or **ANSWER ONLY** and press [MENU].
4. Scroll [▲] or [▼] to display the message type you want: **PERSONALISED** to set your own recorded message or **PREDEFINED** for the pre-recorded message.
5. Press [MENU] to confirm.

If you select personalised you can record, play or delete your own outgoing message.

1. Press [MENU] scroll to **ANSW MACHINE** and press [MENU].
2. Scroll [▲] or [▼] to **ANSWER MODE** and press [MENU].
3. Scroll [▲] or [▼] to select **ANSWER & REC** or **ANSWER ONLY** and press [MENU]. Scroll [▲] or [▼] key to select **PERSONALISED** then press [MENU].
4. **PLAY** is displayed. Press [MENU]. Current message is played back.

33 USING THE ANSWERING SYSTEM (Slim8800 ONLY)

To record an outgoing message

1. Press [MENU] scroll to **ANSW MACHINE** and press [MENU].
2. Scroll [▲] or [▼] to **ANSWER MODE** and press [MENU].
3. Scroll [▲] or [▼] to select **ANSWER & REC** or **ANSWER ONLY** and press [MENU]. Scroll [▲] or [▼] key to select **PERSONALISED** then press [MENU].
4. **PLAY** is displayed. Scroll [▼] to **RECORD MESS.**

To delete a personalised outgoing message

1. Press [MENU] scroll to **ANSW MACHINE** and press [MENU].
2. Scroll [▲] or [▼] to **ANSWER MODE** and press [MENU].
3. Scroll [▲] or [▼] to select **ANSWER & REC** or **ANSWER ONLY** and press [MENU]. Scroll [▲] or [▼] key to select **PERSONALISED** then press [MENU].
4. **PLAY** is displayed. Scroll [▲] or [▼] to **DELETE.**

Ring delay

Select the duration of rings before your answering machine picks up the call. Choose from 2 rings to 9 rings or Toll Saver.

If Toll Saver is selected, then:

- If you have new messages your phone answers after 2 rings.
- If there are no new messages it will answer after 6 rings. So you have the option to hang up, saving the time and cost of a call.


- If the memory is full, it will answer after 14 rings in Answer Only mode.
1. Press [MENU] scroll [▲] or [▼] to **ANSW MACHINE** and press [MENU].
 2. Scroll [▼] to **ANSW SETTINGS** and press [MENU].
 3. **RING DELAY** is displayed. Press [MENU].
 4. Scroll [▲] or [▼] to select 2 rings to 9 rings or TOLL SAVER.
 5. Press [MENU] to confirm.

NOTE

When the answer machine is switched off it will still answer after 14 rings.

To switch the answering machine on/off


On the handset

1. Press [MENU] scroll [▲] or [▼] to **ANSW MACHINE** and press [MENU].
2. Scroll [▲] or [▼] to **ANSW ON / OFF** and press [MENU].
3. Scroll [▲] or [▼] to display **ON** or **OFF**.
4. Press [MENU] to confirm.
5. Press  to return to standby.

On the base

1. Press [on/off] button to turn on or off the answer machine.

New Message

When you have received a new message the  will flash on the handset screen and the amount of messages will be shown on the base unit's display.

To play messages

On the handset

1. Press [MENU] and scroll [▲] or [▼] to **ANSW MACHINE** and press [MENU]. **PLAY** is displayed.
2. Press [MENU] to play new messages. The display shows the number of new messages. If there are no new messages, all stored messages are played.
3. Press [ⓧ ↵] to display the callers identification. Press [ⓧ ↵] again to see the date and time of the call. (This only works if you subscribe to Caller ID service)
4. During playback press [MENU] to display a list of options. Use the [▲] and [▼] keys to change the options:

REPEAT press [MENU] to repeat current message

NEXT MESSAGE press [MENU] to play next message

PREV MESSAGE press [MENU] to play previous message

DELETE press [MENU] to delete the current message.

SAVE NUMBER press [MENU] to store the number, if available, in the phonebook.

5. Press [↶] to stop playback and return to standby.

On the base

1. Press [▶■] to play the message.
2. Press [▶■] again to stop playing.
3. Press [▶] to skip forward to the next message, press [◀] to skip backward to the previous message.

To delete all messages

On the handset

1. Press [MENU] scroll [▲] or [▼] to **ANSW MACHINE** and press [MENU].
2. Scroll [▲] to **DELETE ALL** and press [MENU].
3. Display shows **CONFIRM?**. Press [MENU] to confirm.

On the base

During message playing, press [X] to delete the message.

To record a memo

You can record a memo which is stored on your answering machine and played back like a normal message.

1. Press [MENU] scroll [▲] or [▼] to **ANSW MACHINE** and press [MENU].
2. Scroll [▲] or [▼] to **RECORD MEMO** and press [MENU]. Display shows **RECORDING**.

35 USING THE ANSWERING SYSTEM (Slim8800 ONLY)

3. Speak your message. Press [MENU] to end recording.

Remote access

Remote access allows you to operate your answering machine and listen to your messages by calling your phone from another phone.

The default setting is on.

1. Call your phone. When you hear your outgoing message, press [#].
2. Enter your 4 digit PIN. The default code is 0000. You hear a confirmation beep.

NOTE

You may change this default code for increased security, see 'PIN'.

3. After entering your PIN as stated above, use the keypad to operate your answering machine:

2	Play messages
1	Play previous message
3	Play next message
6	Delete message playing
7	Switch answer machine on
8	Stop playback
9	Switch answer machine off

NOTE

When the answer machine is switched off it will still answer after 14 rings.

To turn Remote Access on/off

1. Press [MENU], scroll [▲] or [▼] to **ANSW MACHINE** and press [MENU].
2. Scroll [▲] or [▼] to **ANSW SETTINGS** and press [MENU].
3. Scroll [▲] or [▼] to **REMOTE ACC** and press [MENU].
4. Scroll [▲] or [▼] to select **ACTIVATED** or **DEACTIVATED**.
5. Press [MENU] to confirm.

Call screening

Use your handset or base speaker to hear a caller leaving a message. You can then choose to ignore the caller or pick up the call.

The default settings are:

- Handset call screening: On

To interrupt at the handset:


1. If you want to interrupt and take the call press [☺] or [⏏].

Switch handset call screening on/off

1. Press [MENU], scroll [▲] or [▼] to **ANSW MACHINE** and press [MENU].
2. Scroll [▲] or [▼] to **ANSW SETTINGS** and press [MENU].
3. Scroll to **HS SCREENING** and press [MENU].

4. Scroll [▼] or [▼] to select **ON** or **OFF**.
5. Press [MENU] to confirm.

To access the answering machine menu via the Calls list

When the  is flashing to indicate new messages you can see caller details via [▲] or press [▼] again to go to **ANSW MACHINE** to play new messages.

1. Press [▲], **CALL LIST** is displayed.
2. Press [▼], **ANSW MACHINE** is displayed.
3. Press [MENU], **PLAY** is displayed.
4. Press [MENU], the handset will start the new message playback. Once all messages are played, the handset will return to standby.


NOTE

During message playback, press  anytime to return to standby.

Memory full

The memory is full if there is less than 15 seconds of recording time left or if the maximum total of 59 messages has been reached.

When the memory becomes full:

- The LED will flash quickly.
- The  flashes quickly on the handset display.
- The machine will automatically switch to Answer Only mode.

If the memory becomes full while a caller is leaving a message, they will hear a beep and the call is ended.

To set TAM Language

1. Press [MENU], scroll [▲] or [▼] to **ANSW MACHINE** and press [MENU].
2. Scroll [▲] or [▼] to **ANSW SETTINGS** and press [MENU].
3. Scroll [▲] or [▼] to **TAM LANGUAGE** and press [MENU].

Customer Support

If you feel this product is not working correctly please consult the user guide and ensure that you are using the product in accordance with the instructions. Remove all extra telephone equipment and connect only this telephone directly to the telephone socket. If the fault is still present, connect another telephone (if available) to the telephone socket. The results will show you whether the fault lies with this unit or with the telephone line.

If the product is working correctly the fault is on the telephone line. Please contact your network operator for assistance.

To order spare parts additional handsets, replacement batteries and in case of any technical issues you may have with this product please consult our website for further information or send us an email for a prompt response to your enquiry.


In the unlikely event of a fault developing, please contact us for assistance. If the product is then found to be faulty you will be asked to return it directly to us with a copy of the purchase receipt.

Troubleshooting

Problem	Possible cause(s)	Solution(s)
No dial tone on the cordless handset.	<ol style="list-style-type: none"> 1. The base unit is not properly connected. 2. Too far from the base unit. 3. Battery charge is low. 4. Incorrect battery polarity. 5. Re-register handset. 	<ol style="list-style-type: none"> 1. Check CONNECTION to power and telephone line. 2. Move handset CLOSER to base unit. 3. CHARGE battery. 4. RE-INSERT batteries and check + and -. 5. Handset not registered.
Antenna symbol is flashing.	<ol style="list-style-type: none"> 1. The handset is not registered. If the handset is unregistered, it displays UNREGISTERED. 2. The handset is out of range. 3. The product is not properly connected. 	<ol style="list-style-type: none"> 1. REGISTER the handset. 2. Move CLOSER to the base unit. 3. Check power CONNECTION to the base.
No tone when the cordless handset is placed on the charger.	<ol style="list-style-type: none"> 1. The handset is not placed properly on the charger. 2. Charging contacts are dirty. 3. No power connection to base unit. 4. The handset's power is turned off. 	<ol style="list-style-type: none"> 1. Lift handset off the charger carefully and REPOSITION correctly. 2. CLEAN charging contacts with a clean and dry cloth. 3. Check power CONNECTION to the base. 4. CHECK batteries.
Handset charged for 24 hours but Battery icon remains empty.	<ol style="list-style-type: none"> 1. Handset batteries are defective. 2. Handset is not placed properly on the charger. 3. Battery installed incorrectly. 4. The product is not properly connected. 	<ol style="list-style-type: none"> 1. REPLACE with new AAA rechargeable Ni-MH batteries. 2. CHECK to make sure the battery icon is scrolling. 3. RE-INSERT batteries and check + and -. 4. Check power CONNECTION to the base.
No symbol on the display.	<ol style="list-style-type: none"> 1. Batteries are empty. 2. The product is not properly connected. 	<ol style="list-style-type: none"> 1. CHARGE batteries. 2. Make sure your product is properly PLUGGED-IN.
Can't transfer a call.	<ol style="list-style-type: none"> 1. Handset is busy. 2. Handset is out of range. 3. Wrong handset number. 	<ol style="list-style-type: none"> 1. Check ALL handsets and END all calls. 2. Move handset CLOSER to base unit. 3. Check HANDSET NUMBER.

39 APPENDIX

Problem	Possible cause(s)	Solution(s)
Bad audio quality (crackles,echo, etc.).	<ol style="list-style-type: none"> 1. Interference from nearby electrical appliance. 2. Base unit is installed in a room with thick walls. 3. The handset is too far from the base unit. 4. If you have Broadband/ADSL you need an in line filter (not supplied) connected where this product connects to the phone socket. 5. Faulty telephone line. 	<ol style="list-style-type: none"> 1. Try a different connection point, one that is away from other electrical appliances. 2. Install the base unit in a DIFFERENT room OR use EXTENSION leads. 3. Move CLOSER to the base unit. 4. Ensure a in-line ADSL filter is installed on all phone sockets between wall plate and your phone. 5. Contact your network service provider to check your line.
Caller ID does not work.	<ol style="list-style-type: none"> 1. Service not activated with your Network service provider. 2. Caller ID service is activated but does not work or is intermittent. 	<ol style="list-style-type: none"> 1. Check your SUBSCRIPTION with the SERVICE provider. 2. Ask your service provider to re set your caller ID service.
Phone does not ring when a call comes in.	<ol style="list-style-type: none"> 1. The ringer is off. 2. Too many phones are sharing the same phone line. 3. Base unit not plugged in. 	<ol style="list-style-type: none"> 1. Turn ON the ringer. 2. Disconnect some of the phones from the phone line. 3. Check base unit CONNECTIONS.
Keypad does not work.	Keypad may be locked.	UNLOCK the keypad.
Busy tone + in use light on.	<ol style="list-style-type: none"> 1. Other handset may still be connected. 2. Check power supply connection. 	<ol style="list-style-type: none"> 1. Check ALL handsets and END all calls. 2. Check CONNECTIONS to wall and base.
Handset registration fails continuously.	The base memory may be fully charged.	Delete un-used handsets and try again.
Cannot make/answer a 2nd call.	2nd call service can be activated.	Check with your service provider. Check the recall selection is correct.

Problem	Possible cause(s)	Solution(s)
The battery icon  is not scrolling when the handset is placed on the base.	<ol style="list-style-type: none"> 1. Bad battery contact. 2. Dirty contact. 3. Battery is fully charged 	<ol style="list-style-type: none"> 1. Move the handset slightly. 2. Clean the battery contact with a dry cloth. 3. Its fine to leave on the base when fully charged.
A phonebook entry cannot be stored.	The phonebook is full.	Delete any unused entries to free memory.
Slim 8800 Answering System (ONLY)		
Answering machine does not record messages.	<ol style="list-style-type: none"> 1. The answer machine may be turned off. 2. The memory may be full. 3. Answer mode may be set to ANSWER ONLY. 	<ol style="list-style-type: none"> 1. Switch the answering machine on. 2. Delete some messages. 3. Change the mode to ANSWER & REC.
Cannot access messages remotely.	<ol style="list-style-type: none"> 1. Remote access may be switched off. 2. Wrong PIN is entered. 	<ol style="list-style-type: none"> 1. Switch Remote access on. 2. Enter the PIN once again.
Cannot record outgoing message.	<ol style="list-style-type: none"> 1. The memory may be full. 	<ol style="list-style-type: none"> 1. Delete messages.
Answering machine stops recording part way through a message.	<ol style="list-style-type: none"> 1. The memory may be full. 2. The maximum message length is more than 3 minutes. 	<ol style="list-style-type: none"> 1. Delete messages.

NOTE

If none of the above solutions help, reset your phone by disconnecting the mains power from the base and removing all batteries from handset/s. Reconnect after 15 minutes.

Alternatively please contact Customer Service on 1300 889 785.

Warranty Information (Australia)

(a) Warranty

Oricom warrants that the product is free from defects in materials and workmanship for a period of 12 months effective from the date of purchase. This warranty in no way affects your statutory warranty under the Trade Practices Act 1974 or any other similar legislation. It is important that you read the Warranty Card as it contains full and additional details of the warranty, limitation of warranty and conditions for receiving the warranty services during the warranty period. The Warranty Card is located in the package. If you cannot locate the Warranty Card, please contact our Customer Support Service on 1300 889 785.

(b) Exclusion and limitation of liability.

Oricom will not be in breach of a warranty or condition expressly stated in this User Guide or the Warranty Card or implied by the Trade Practices Act and excludes any liability arising under any statutory or common law for damages or any other remedy if the damage occurs as a result of:

- (i) failure by you to follow the instructions in the User Guide for the installation and proper functioning of the product;
- (ii) negligence on your part or misuse by you of the product;

- (iii) any un-controlled external cause to the phone not functioning including but not limited to electricity failure, lighting, over voltage;
- (iv) non adherence by you to the warnings in the User Guide and the User Guide generally;
- (v) modification to the product or services carried out to the product by anyone other than Oricom or on Oricom's behalf.

Oricom will not be liable for consequential losses including loss of profits arising from a cause of action in contract, tort or any other statutory or common law (except where a statute or any law prohibits this exclusion). The warranty does not extend to damage caused by misuse, negligence, excessive voltage, faults on the telephone line or lightning. This warranty in no way affects your statutory rights. Full details of the warranty are contained in the enclosed warranty card.

Notes for operation in New Zealand

The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with the minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services. This device may be subject to ringing or bell tinkle when certain other devices are connected to the same line. If this occurs, the problem should not be referred to the Telecom Faults service.

This equipment shall not be set to make automatic calls to the Telecom "111" Emergency Service.

This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

REN (RN for New Zealand)

The REN (Ringer Equivalence Number) or (RN) is of significance only if you wish to connect more than 1 telephone to your telephone line. A standard telephone line has a maximum REN capacity of 3 (RN of 5). It is possible to connect 3 (5) devices with a REN of 1 (RN of 1) with no degradation to the product's performance. Exceeding this limit may cause the volume of the ringer in any phone to decrease or not ring at all.

Caller ID

Customers using non Telecom toll services should not use the dial back feature for local calls as this will incur a charge only the 7 digit number should be dialled. Some of the CID services listed may not be available in New Zealand.

Australia

Oricom International Pty Ltd
Locked Bag 658
South Windsor, NSW 2756

Customer Support

Email: support@oricom.com.au
Web: www.oricom.com.au
Phone: 1300 889 785
Fax: (02) 4574 8898

New Zealand

Atlas Gentech (NZ) Limited
Private Bag 14927
Panmure, Auckland

Customer Support

Email: support@atlasgentech.co.nz
Web: www.atlasgentech.co.nz
Phone: 0900 50 025 (Toll Call)
Fax: (09) 574 2722

