

Service Manual

Color Television

TC-14A12P

TC-20B12

BR2L chassis



Specifications

| TELEVISION | TC-14A12P | TC-20B12 |
|----------------------------------|---|---|
| Power source | 110/220 V AC, 60 Hz automatic switch | 110/220 V AC, 60 Hz automatic switch |
| Consumption | 55 W | 69 W |
| Antenna input jack | 75 W - VHF/UHF/Cable | 75 W - VHF/UHF/Cable |
| Color systems | NTSC/PAL-N/AUTO/PAL-M | NTSC/PAL-N/AUTO/PAL-M |
| Tuning system | F.S.T. | F.S.T. |
| Channel capability | 2 to 13 (VHF) 14 to 69 (UHF) 1 to 125 (Cable) | 2 to 13 (VHF) 14 to 69 (UHF) 1 to 125 (Cable) |
| Picture tube (visual diagonal) | 33 cm | 48 cm |
| Audio system | 3 W max (RMS) | 3 W max (RMS) |
| Video input jack | 1 (back of unit) | 1 (back of unit) |
| Dimension (width, height, depth) | 370 x 349 x 374 mm | 502 x 455 x 471 mm |
| Weight | 9,6 kg | 17 kg |

Remote Control Transmitter:

| | |
|------------------------|--------------------------|
| Power Source | 3V (2 AA type batteries) |
| Infrared Length | 9500 A (Angstrom) |
| Number of Buttons | 29 keys |
| Dimensions (W x H x D) | (54 x 27 x 135) mm |

Supplied Accessories:

- 1 Remote Control Transmitter
- 1 300Ω/75Ω Aerial Adaptor
- 2 "AA" type batteries
- 1 Internal antenna (for TC-14A12P only)

Specifications are subject to change without notice. Weight and dimensions shown are approximate.

Panasonic®

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technician individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product deal with in this service information by anyone could result in serious injury or death.

Contents

| | |
|-------------------------------------|----|
| General Guidelines | 02 |
| Operation Guide | 03 |
| IC 601 - Pins and Functions | 15 |
| IC601 and IC451 Voltage Table | 17 |
| IC601 - Block Diagram | 18 |
| General Summary | 19 |

Service Adjustments and Calibrations

| | |
|---|----|
| Service Mode | 20 |
| How to operate the DAC controls | 20 |
| EQUIPMENT REQUIRED | 21 |
| AGC RF CALIBRATION | 21 |
| BUZZ (SOUND CIRCUIT) | 21 |
| ANODE AND HEATER VOLTAGE CONFIRMATION | 21 |
| PAL COLOR OUTPUT SIGNAL ADJUSTMENT | 21 |
| NTSC SUB-TINT CALIBRATION | 22 |
| PROTECTION CIRCUIT (SHUTDOWN) | 22 |
| CONFIRMATION OF OPERATION | 22 |
| WHITE QUALITY CALIBRATION | 22 |
| VERTICAL DEFLECTION | 22 |
| CALIBRATION AND CONFIRMATION | 22 |
| CRT CUT OFF CALIBRATION | 23 |
| WHITE BALANCE CALIBRATION | 23 |
| SUB-BRIGHTNESS CALIBRATION | 23 |
| FOCUS CALIBRATION | 23 |
| COLOR PURITY ADJUSTMENT | 24 |
| CONVERGENCE CALIBRATION | 24 |
| EEPROM - Memory Maps | 25 |
| Power Source Voltages | 25 |
| Main Board Schematic Diagram | 26 |
| CRT Board Schematic Diagram | 27 |
| Main Board Conductor view | 28 |
| Waveform | 32 |
| Parts Location | 35 |
| Packing and Accessories | 36 |
| Replacement Mechanical Parts List | 36 |
| Replacement Electrical Parts List | 37 |

General Guidelines

An Isolation Transformer should always be used during the servicing of a receiver whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks. It will also protect the Receiver from being damaged by accidental shorting that may occur during servicing. When servicing, observe the original lead dress, especially in the high voltage circuit. Replace all damaged parts (also parts that show signs of overheating.)

Always Replace Protective Devices, such as fishpaper, isolation resistors and capacitors, and shields after servicing the Receiver. Use only manufacturer's recommended rating for fuses, circuit breakers, etc.

High potentials are present when this Receiver is operating. Operation of the Receiver without the rear cover introduces danger from electrical shock. Servicing should not be performed by anyone who is not thoroughly familiar with the necessary precautions when servicing high-voltage equipment.


Extreme care should be practiced when Handling the Picture Tube. Rough handling may cause it to implode due to atmospheric pressure (14.7 lbs per sq. in). Do not sick or scratch the glass or subject it to any undue pressure. When handling, use safety goggles and heavy gloves for protection. Discharge the picture tube by shorting the anode to chassis ground (not to the cabinet or to other mounting hardware). When discharging, connect cold ground (i.e. dag ground lead) to the anode with a well insulated wire or use a grounding probe.

Avoid prolonged exposure at close range to unshielded areas of the picture tube to prevent exposure to X-ray radiation.


The Test Picture Tube used for servicing the chassis at the bench should incorporate safety glass and magnetic shielding. The safety glass provides shieldinf for the tube viewing area against X-ray radiation as well as implosion. The magnetic shield limits X-ray radiation around the bell of the picture tube in addition to restricting magnetic effects. When using a picture tube test jig for service, ensure that the jig is capable of handling 31kV without causing X-ray radiation.

Before returning a serviced receiver to the owner, the service technician must thoroughly test the unit to ensure that is completely safe to operator. Do not use a line isolation transformer when testing.


Location of Controls (TC-20B12)

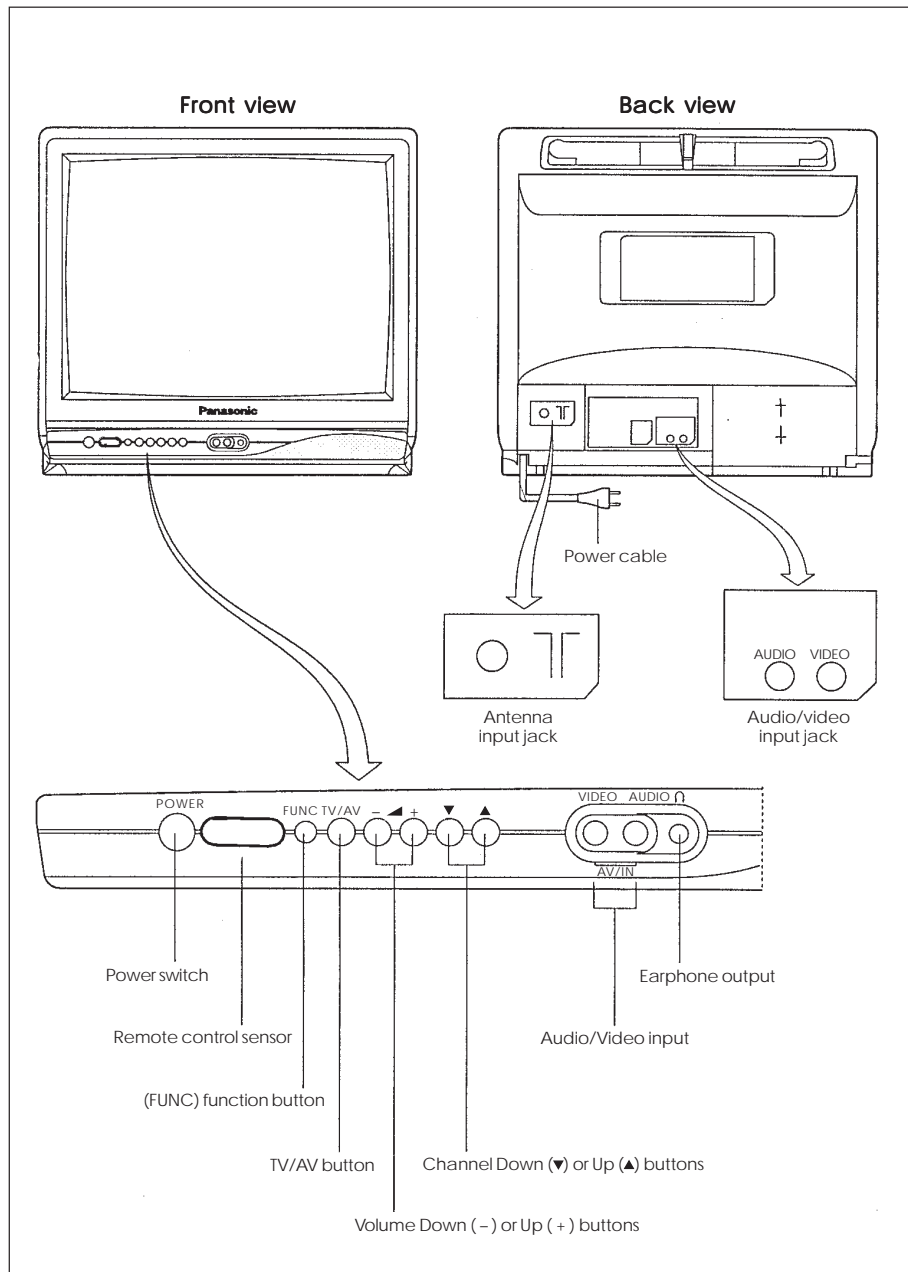

Location of Controls (TC-14A12P)

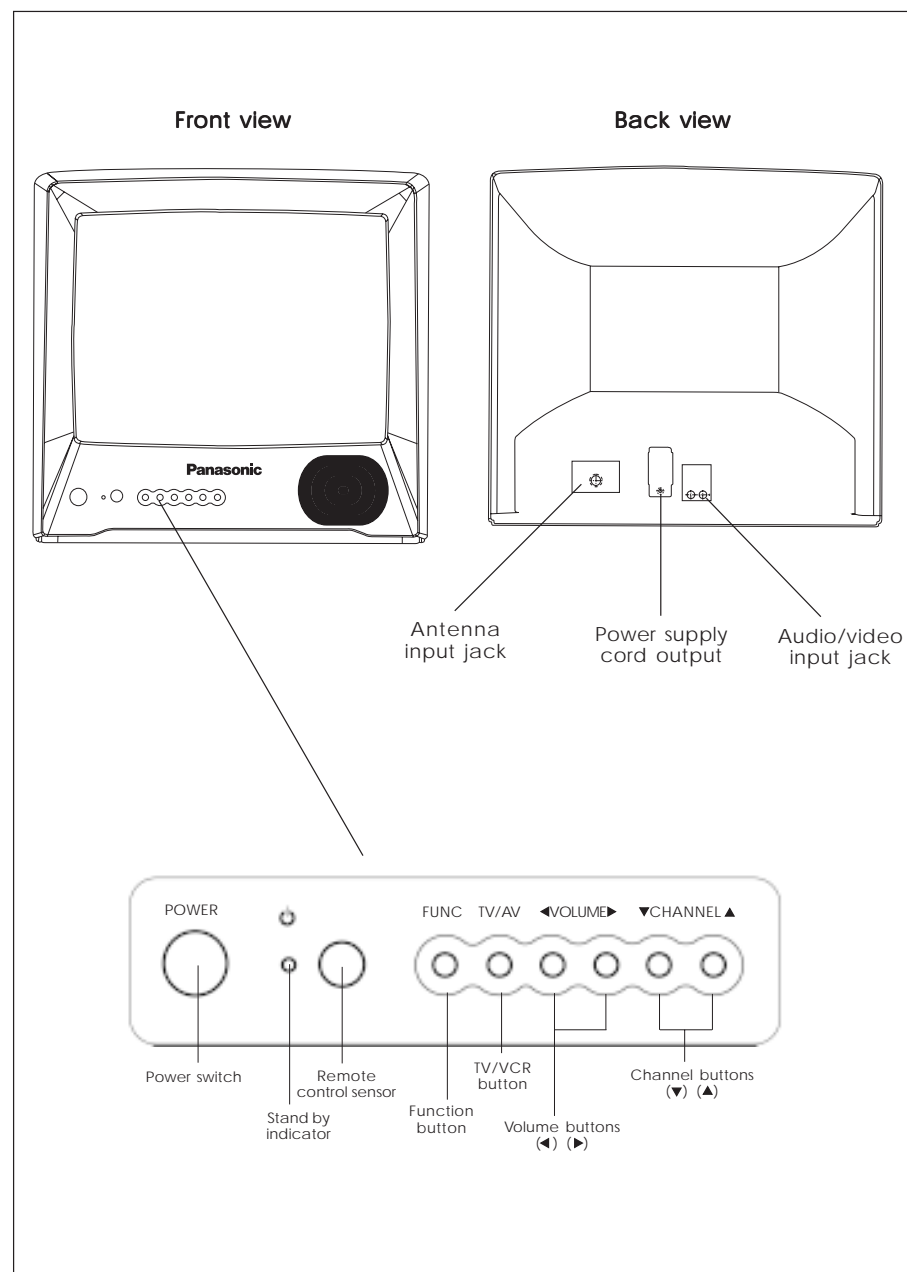

REMOTE CONTROL

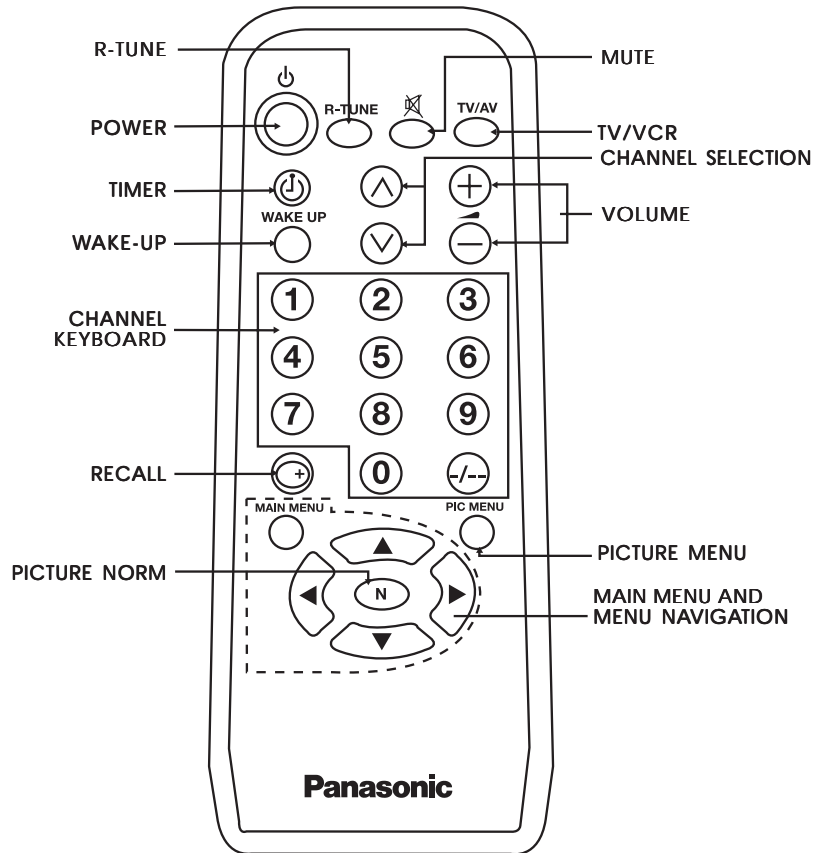

Remote Control

Installing the Batteries


1. Remove the battery compartment cover from the back of the remote control, by pressing the lock down and pulling the cover out.
2. Install the batteries in the compartment (polarities (+) and (-) must be correct).
3. To replace, fit both cover lugs into the compartment slots and press the lock to close.

1




2

Two "AA" batteries

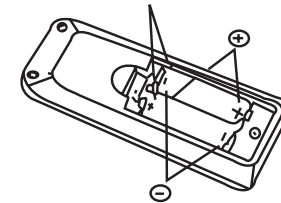

3

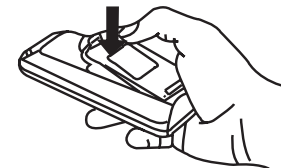

Battery replacement precautions

1. Batteries must be replaced as a pair.
2. Do not combine a used battery with a new one.
3. Do not mix battery types (example: "zinc carbon" with "alkaline").
4. Do not attempt to charge, short-circuit, disassemble, heat, or burn used batteries.
5. Remove the batteries if the remote control transmitter will not be used for a long period of time.

Note:

This remote control transmitter uses two "R6" (AA) batteries.



Dispose of the batteries in the domestic trash.


Installation

Outdoor Antenna Connection

For proper sound and picture reception, an outdoor antenna, a proper cable (75 ohms coaxial cable or 300 ohms twin cable) and an appropriate terminal (75 ohms) are required.

Your local service representative can help you obtain the adequate system and accessories for antennas.

Installation procedures different from those presented here or any modification of existing systems or required accessories, as well as all expenses involved in such actions, shall be considered as the owner's sole responsibility.

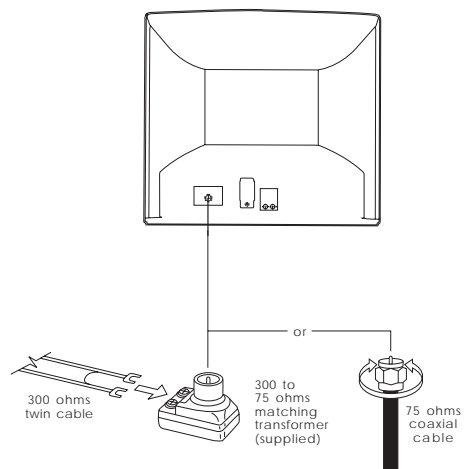


Connection

VCR

To connect a VCR, proceed as follows:

1. Connect the VCR audio and video output terminals to the audio and video input jacks, located on the back of the unit.
2. Press the TV/AV button to select the AV mode. Turn the VCR ON.
3. Press the button again to return to the TV mode.

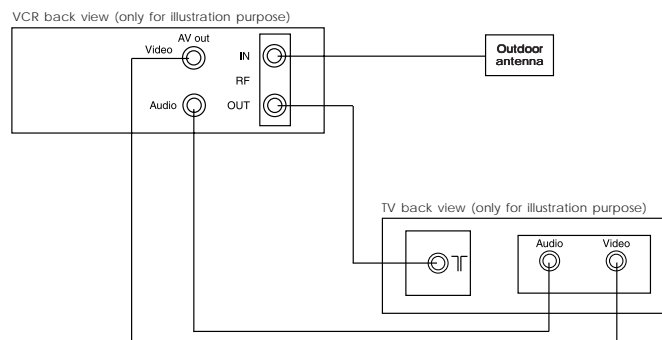


NOTE:

To use the video game, connect the video game audio and video output terminals to the audio and video input jacks on the TV.


Connection cables are not supplied.

Operation of TV Controls

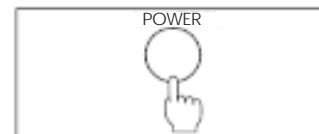

1. Power Switch


Press this switch to turn the unit ON. Press again to turn it OFF.

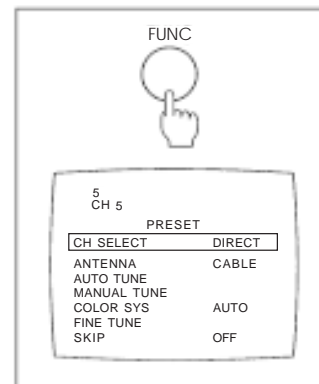

2. Function Button


Press this button to access the PRESET menu. Press it continuously to select a menu function, as shown in the illustration. To exit the PRESET menu, press the function button continuously.

(For more details, refer to PRESET menu.)

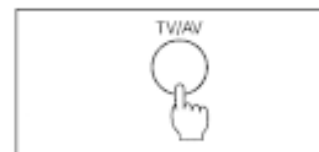


3. TV/AV Button

Press this button to select the desired input.

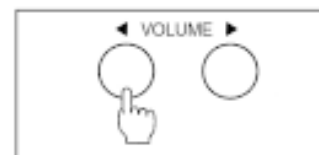

4. Volume Buttons


Press the left or right button for the desired listening level.

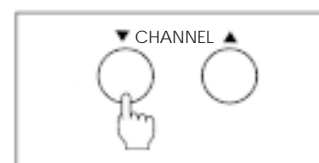

5. Channel Buttons

Press these buttons to select the desired channel.

General Operation

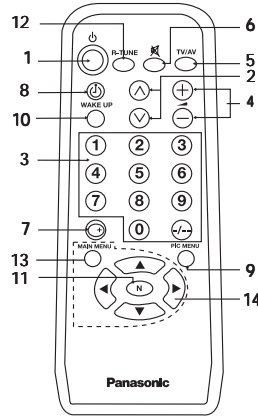


1. Power Button (⏻ stand by mode)

To turn the unit ON with this button, the power switch on the TV panel must be ON. To turn it OFF, press the button again (stand by mode). If the unit was turned OFF with the remote control (stand by mode), it is also possible to turn it ON by pressing either channel button.



Note:

- Leaving the unit in the stand by mode will not cause any damages and energy consumption is minimum.
- It is recommended to turn the unit OFF periodically by using the TV power switch. When the unit is turned ON again after 30 minutes, the demagnetization circuit of picture tube is activated.
- If the unit is to be left unused for a long period of time, turn it OFF by using the TV power switch, disconnect the antenna and unplug the AC power supply cord.

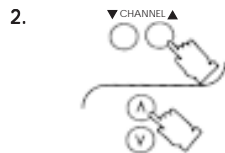

2. Channel Buttons

Press these buttons to select the programmed channels.

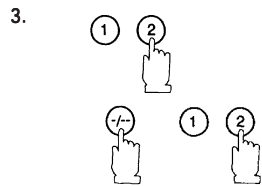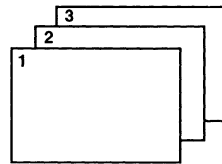

3. Channel Keyboard for Direct Selection (Memory Position)


Press these buttons to select the desired channel.

To select channels with two figures, press the \uparrow/\downarrow button and then press the buttons corresponding to the channel number.

Example: For channel 12, press \uparrow/\downarrow , ①, ②


To select channels with three figures, press the buttons corresponding to the channel number.

Note: For selecting channels with three figures, the **CH SELECT** function must be in **DIRECT** mode, and the **ANTENNA** mode in **CABLE** (Refer to Tuning Procedures - Channel Selection and Antenna Mode).

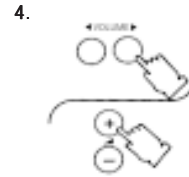


4. Volume Buttons (+, -)

Press these buttons to adjust the listening level.

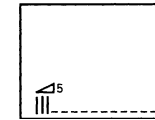


Note:

A numerical and graphic indication will be displayed. The numerical indication ranges from zero (no sound) to 63 (maximum level).

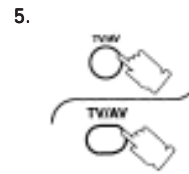

5. TV/AV Button



Press this button to select TV or video input.

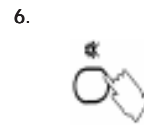

6. Mute Button (⊘)

Press this button to quickly reduce sound level. Press it again to restore sound.

The mute indicator (red) will be displayed.



7. Recall Button (□)



Press this button to review the selected system. Press it again to disable this function.




8. Timer Button (⌚)

This TV can be programmed to turn OFF after a certain period of time.

Press this button repeatedly for automatic turn OFF after 30, 60 or 90 minutes, as desired.

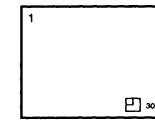

Time indication will flash to indicate the last three remaining minutes prior to turn OFF.

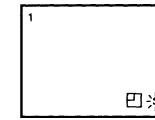

Note:

- When AUTO is selected, the unit will turn OFF automatically (stand by mode) 5 minutes after the TV station broadcast is finished.
- This function (AUTO) will not operate when the VCR (AV) mode is selected.

To cancel the **TIMER** (⌚), select "0" (zero) by pressing the **TIMER** button, or turn the unit OFF by using the power switch on the TV panel.

General Operation

9.

PIC MENU



PICTURE MENU Button

Press this button to select the picture menu sequentially, as shown below:

| On screen | Function |
|-----------|--|
| DYNAMIC | For bright places. This setting selects a higher level of brightness and contrast. |
| STANDARD | For places with normal levels of luminosity. This setting selects a normal level of brightness and contrast. |
| SOFT | For dark places. This setting selects a reduced level of brightness and contrast. |


10.

WAKE UP




WAKE-UP Button

1. Press the WAKE-UP button.
2. Press the menu navigation buttons (◀/▶) to set the WAKE-UP feature.
The time can be set in increments of 10 minutes.
3. Set the time and turn the unit OFF by using the remote control (stand by mode).




If the unit is turned OFF with the remote control (stand by mode) and the WAKE-UP feature set, the led on the TV panel will flash.
The unit will be turned ON automatically at the selected time.



Note:

- The WAKE-UP feature can be programmed up to 12 hours.
- When the unit is turned ON by the WAKE-UP feature, the TIMER will be set automatically to turn it OFF in 90 minutes. Press any button to cancel the TIMER.

4. To cancel the WAKE-UP feature:
 - 4.1 Turn the unit OFF by using the power switch on the TV panel.
 - 4.2 Press the menu navigation buttons (◀/▶) during the WAKE-UP indication until OFF is displayed.
 - 4.3 Press the N (Picture norm) button while the WAKE-UP mode is displayed.



11.



N (Picture norm) Button

Press this button to reset picture setting levels (color, brightness, contrast, etc.) or sound (tone, AVL*), back to the factory preset level.

Note:

- For this function to operate, picture and sound setting menu must be activated.

* Refer to page 22.


General Operation

12.



R-TUNE Button

Press this button to instantly switch between the last two channels selected.



13.

MAIN MENU



MAIN MENU Button

Press this button to access the icon menu on the screen.

14.



Menu navigation buttons

Main Menu List


When the MAIN MENU button is pressed, the icon menu is displayed. This gives access to picture, sound, function, language and setup icons.

| | | | | | |
|-----------------------------|---|--------------------|---|---|---|
| Press | | | | | |
| Select | | | | | |
| Icon | | | | | |
| Screen indication | PICTURE | SOUND | FEATURES | IDIOMA PORTUGUÉS ESPAÑOL ENGLISH | PRESET |
| Press | ▽ | ▽ | ▽ | ▽ | ▽ |
| Screen indication (example) | MENU DYNAMIC 32 COLOR 32 NTSC-TINT 32 BRIGHT 63 CONTRAST 32 SHARPNESS COLOR TEMP. STD | TONE LOW AVL ON | BLUEBACK ON CH COLOR SET STD CHILD LOCK OFF VCR/GAME OFF CC MODE OFF CC ON/MUTE NO | IDIOMA PORTUGUÉS ESPAÑOL ENGLISH | 5 CH 5 PRESET CH SELECT DIRECT ANTENNA TV AUTO TUNE MANUAL TUNE COLOR SYS AUTO FINE TUNE SKIP OFF |
| | MENU DYNAMIC 32 COLOR 32 NTSC-TINT 32 BRIGHT 63 CONTRAST 32 SHARPNESS COLOR TEMP. STD | TONE LOW AVL ON | BLUEBACK ON CH COLOR SET STD CHILD LOCK OFF VCR/GAME OFF CC MODE OFF CC ON/MUTE NO | LANGUAGE PORTUGUÉS ESPAÑOL ENGLISH | 5 CH 5 PRESET CH SELECT DIRECT ANTENNA TV AUTO TUNE MANUAL TUNE COLOR SYS AUTO FINE TUNE SKIP OFF |
| | MENU DYNAMIC 32 COLOR 32 NTSC-TINT 32 BRIGHT 63 CONTRAST 32 SHARPNESS COLOR TEMP. STD | | BLUEBACK ON CH COLOR SET STD CHILD LOCK OFF VCR/GAME OFF CC MODE OFF CC ON/MUTE NO | | 5 CH 5 PRESET CH SELECT DIRECT ANTENNA TV AUTO TUNE MANUAL TUNE COLOR SYS AUTO FINE TUNE SKIP OFF |
| | MENU DYNAMIC 32 COLOR 32 NTSC-TINT 32 BRIGHT 63 CONTRAST 32 SHARPNESS COLOR TEMP. STD | | BLUEBACK ON CH COLOR SET STD CHILD LOCK OFF VCR/GAME OFF CC MODE OFF CC ON/MUTE NO | | 5 CH 5 PRESET CH SELECT DIRECT ANTENNA TV AUTO TUNE MANUAL TUNE COLOR SYS AUTO FINE TUNE SKIP OFF |
| | MENU DYNAMIC 32 COLOR 32 NTSC-TINT 32 BRIGHT 63 CONTRAST 32 SHARPNESS COLOR TEMP. STD | | BLUEBACK ON CH COLOR SET STD CHILD LOCK OFF VCR/GAME OFF CC MODE OFF CC ON/MUTE NO | | 5 CH 5 PRESET CH SELECT DIRECT ANTENNA TV AUTO TUNE MANUAL TUNE COLOR SYS AUTO FINE TUNE SKIP OFF |
| | MENU DYNAMIC 32 COLOR 32 NTSC-TINT 32 BRIGHT 63 CONTRAST 32 SHARPNESS COLOR TEMP. STD | | BLUEBACK ON CH COLOR SET STD CHILD LOCK OFF VCR/GAME OFF CC MODE OFF CC ON/MUTE NO | | 5 CH 5 PRESET CH SELECT DIRECT ANTENNA TV AUTO TUNE MANUAL TUNE COLOR SYS AUTO FINE TUNE SKIP OFF |

Tuning Procedures

Channel Selection

Select the most familiar channel visualization pattern.

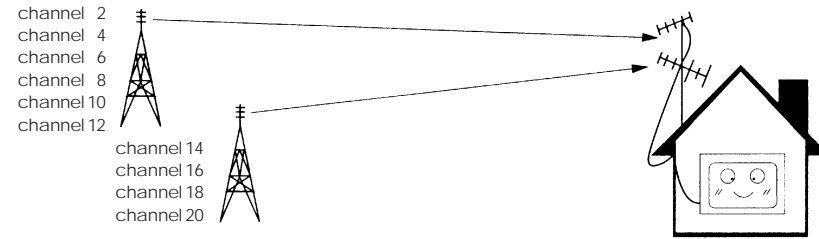

| Program number | Channel exhibition | Selected channel |
|----------------|--------------------|------------------|
| 1 | 2 | 2 |
| 2 | 4 | 4 |
| 3 | 6 | 6 |
| 4 | 8 | 8 |
| 5 | 10 | 10 |
| 6 | 12 | 12 |
| 7 | 14 | 14 |
| 8 | 16 | 16 |
| 9 | 18 | 18 |
| 10 | 20 | 20 |

Selection of channels by position


When the channel selection is in POSITION mode, the tuned channels in AUTO TUNE mode, will be memorized according to the program number.

| Program number | Channel exhibition | Selected channel |
|----------------|--------------------|------------------|
| 1 | - | - |
| 2 | 2 | 2 |
| 3 | - | - |
| 4 | 4 | 4 |
| 5 | - | - |
| 6 | 6 | 6 |
| 7 | - | - |
| 8 | 8 | 8 |
| 9 | - | - |
| 10 | 10 | 10 |

Direct Channel Selection

When the channel selection is in DIRECT mode, the tuned channels in AUTO TUNE mode, will be memorized according to the TV station number.

Tuning Procedures

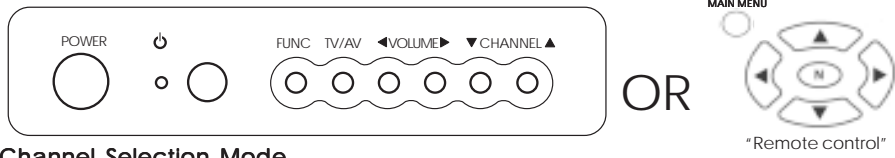

Channel Selection Mode

1. **FUNC** Press the FUNC (Function) button and select CH SELECT (Channel selection) in the PRESET menu.

| | | |
|-------------|----------|--------|
| 5 | CH 5 | PRESET |
| CH SELECT | POSITION | |
| ANTENNA | CABLE | |
| AUTO TUNE | | |
| MANUAL TUNE | | |
| COLOR SYS | AUTO | |
| FINE TUNE | | |
| SKP | OFF | |

CH SELECT (Channel selection) screen

MAIN MENU Press the MAIN MENU button and by pressing the navigation buttons, select PRESET and then CH SELECT (Channel selection).

2. **VOLUME** After selecting CH SELECT (Channel selection), press the VOLUME button to select POSITION or DIRECT.



| | | |
|-------------|----------|--------|
| 5 | CH 5 | PRESET |
| CH SELECT | POSITION | |
| ANTENNA | CABLE | |
| AUTO TUNE | | |
| MANUAL TUNE | | |
| COLOR SYS | AUTO | |
| FINE TUNE | | |
| SKP | OFF | |

Note:

- The POSITION mode allows you to memorize 100 positions (0 ~ 99).
- The DIRECT mode allows you to memorize 125 positions (1 ~ 125).

Press the navigation button (◀/▶) to select POSITION or DIRECT.



3. **FUNC** Press the FUNC (Function) button until the setup menu is no longer displayed.




To restore normal condition.

MAIN MENU Press the MAIN MENU button until the setup menu is no longer displayed.



Tuning Procedures

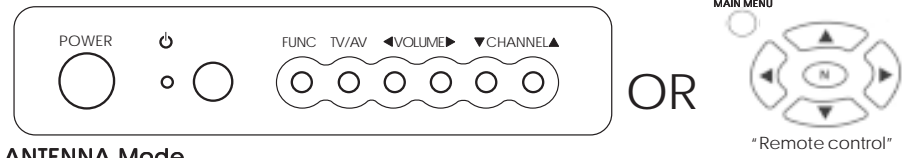

ANTENNA Mode

1. **FUNC** Press the FUNC (Function) button and select ANTENNA in the PRESET menu.


| | | |
|-------------|--------|--------|
| 5 | CH 5 | PRESET |
| CH SELECT | DIRECT | |
| ANTENNA | TV | |
| AUTO TUNE | | |
| MANUAL TUNE | | |
| COLOR SYS | AUTO | |
| FINE TUNE | | |
| SKP | OFF | |

ANTENNA screen

MAIN MENU Press the MAIN MENU button and by pressing the navigation buttons, select PRESET and then ANTENNA.



2. **VOLUME** Press the VOLUME button to select TV or CABLE.

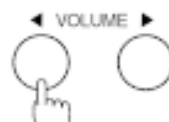

| | | |
|-------------|--------|--------|
| 5 | CH 5 | PRESET |
| CH SELECT | DIRECT | |
| ANTENNA | TV | |
| AUTO TUNE | | |
| MANUAL TUNE | | |
| COLOR SYS | AUTO | |
| FINE TUNE | | |
| SKP | OFF | |

The antenna mode indicator will change as shown.

TV
↑
↓
CABLE

Press the navigation button (◀/▶) to select TV or CABLE.



3. **FUNC** Press the FUNC (Function) button until the setup menu is no longer displayed.



To restore normal condition.

MAIN MENU Press the MAIN MENU button until the setup menu is no longer displayed.




Channel Capability

| ANTENNA MODE | CHANNEL CAPABILITY |
|--------------|---------------------------|
| TV | VHF: 2 ~ 13, UHF: 14 ~ 69 |
| CABLE | CABLE: 1 ~ 125 |

Tuning Procedures

Auto Tuning Mode

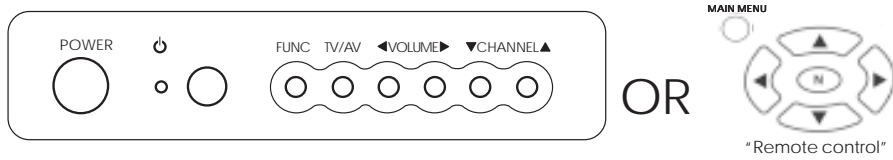

- FUNC**

Press the FUNC (Function) button and select **AUTO TUNE** in the PRESET menu.

| | | | |
|------------------|------|--------|----|
| 5 | CH 5 | PRESET | |
| CH SELECT | | DIRECT | TV |
| ANTENNA | | | |
| AUTO TUNE | | | |
| MANUAL TUNE | | AUTO | |
| COLOR SYS | | | |
| FINE TUNE | | | |
| SKP | | OFF | |

AUTO TUNE (Auto tuning) screen

MAIN MENU

Press the MAIN MENU button and by pressing the navigation buttons, select PRESET and then **AUTO TUNE** (Auto tuning).

- VOLUME**

Press the **VOLUME** button to start auto tuning.

Beginning of channel searching.

Press the navigation button (◀/▶) to start auto tuning.

Optimum tuning position is memorized automatically.

- FUNC**

Press the FUNC (Function) button until the setup menu is no longer displayed.


To restore normal condition.

MAIN MENU

Press the MAIN MENU button until the setup menu is no longer displayed.

Tuning Procedures

Manual Tuning Mode

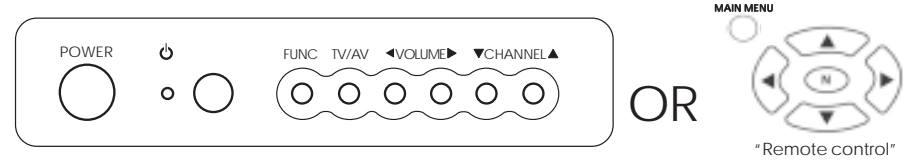

- FUNC**

Press the FUNC (Function) button and select **MANUAL TUNE** (Manual tuning) in the PRESET menu.

| | | | |
|--------------------|------|--------|----|
| 5 | CH 5 | PRESET | |
| CH SELECT | | DIRECT | TV |
| ANTENNA | | | |
| AUTO TUNE | | | |
| MANUAL TUNE | | | |
| COLOR SYS | | AUTO | |
| FINE TUNE | | | |
| SKP | | OFF | |

MANUAL TUNE (Manual tuning) screen

MAIN MENU

Press the MAIN MENU button and by pressing the navigation buttons, select PRESET and then **MANUAL TUNE** (Manual tuning).

- CHANNEL**

Press the **CHANNEL** button (▼/▲) to select the position you want to memorize.

| | | | |
|--------------------|------|--------|----|
| 5 | CH 5 | PRESET | |
| CH SELECT | | DIRECT | TV |
| ANTENNA | | | |
| AUTO TUNE | | | |
| MANUAL TUNE | | | |
| COLOR SYS | | AUTO | |
| FINE TUNE | | | |
| SKP | | OFF | |

Select the desired channel.

- VOLUME**

Press the **VOLUME** button to start manual tuning. Volume (▶) searches channels in increasing order. Volume (◀) searches channels in decreasing order.

Beginning of channel searching.

Press the right or left navigation button to start manual tuning. Button (▶) searches channels in increasing order. Button (◀) searches channels in decreasing order.

Optimum tuning position is memorized automatically.

- FUNC**

Press the FUNC (Function) button until the setup menu is no longer displayed.


To restore normal condition.

MAIN MENU


Press the MAIN MENU button until the setup menu is no longer displayed.

Tuning Procedures


Fine Tuning Mode

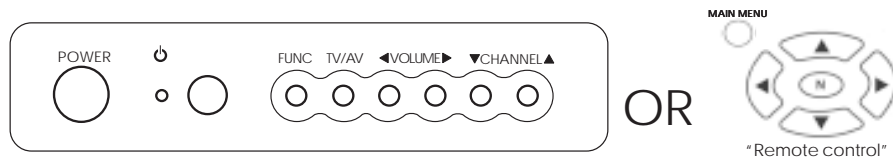


In normal reception conditions, this feature should not be used. However, in areas where reception is poor, or if constant interference occurs, it may improve picture and sound quality.


- 

Press the CHANNEL button to select a channel.

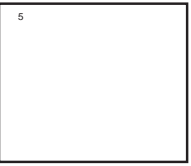



Select the desired channel.
- 

Press the FUNC (Function) button and select FINE TUNE (Fine tuning) in the PRESET menu.

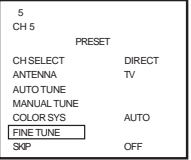


Press the MAIN MENU button and by pressing the navigation buttons, select PRESET and then FINE TUNE (Fine tuning).

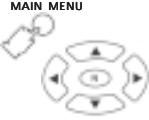

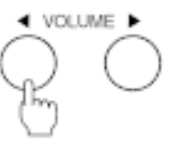
Press the MAIN MENU button and by pressing the navigation buttons, select PRESET and then FINE TUNE (Fine tuning).
- 


Press the VOLUME button and adjust to improve picture quality.

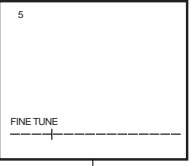


Beginning of fine tuning.




Press the navigation (◀/▶) button and adjust to improve picture quality.

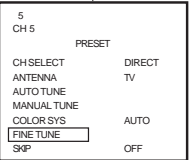

AFC feature is disabled. The "■" indicator is displayed on the left of channel number.
- 

Press the FUNC (Function) button until the setup menu is no longer displayed.




Press the MAIN MENU button until the setup menu is no longer displayed.


To restore normal condition.

Note:
To cancel fine tuning, perform manual tuning procedures for the desired channel.


Tuning Procedures

Channel Skip Mode

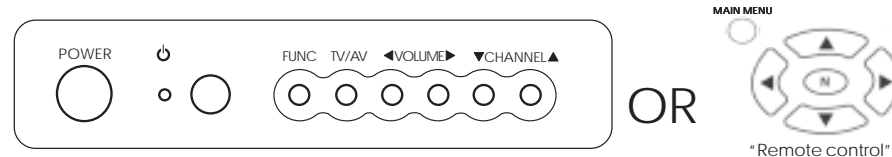



- 

Press the FUNC (Function) button and select SKIP in the PRESET menu.

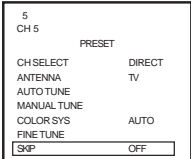



Press the MAIN MENU button and by pressing the navigation buttons, select PRESET and then SKIP.

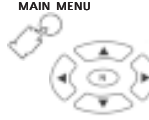


Press the MAIN MENU button and by pressing the navigation buttons, select PRESET and then SKIP.
- 


Press the CHANNEL button (▼/▲) to select the channel you want to skip.

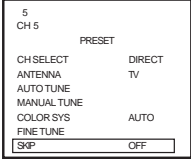

- 

Press the VOLUME button and select ON.

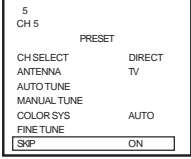


Press the navigation button (◀/▶) and select ON.



OFF will change to ON.
- 

Press the FUNC (Function) button until the setup menu is no longer displayed.




Press the MAIN MENU button until the setup menu is no longer displayed.


Note:
When SKIP is ON, the channel cannot be selected by using the channel buttons.

Tuning Procedures


Color System Mode

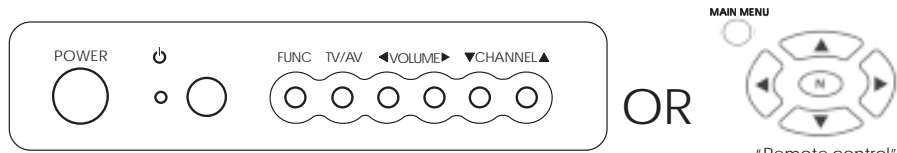


1. **FUNC** Press the FUNC (Function) button and select COLOR SYS in the PRESET menu. **COLOR SYS** screen

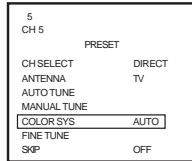


MAIN MENU Press the MAIN MENU button and by pressing the navigation buttons, select PRESET and then COLOR SYS.

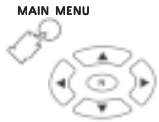

2. **VOLUME** Press the VOLUME button repeatedly to select the desired system. The color system will change as shown:

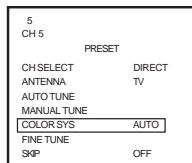

Press the navigation button (◀▶) repeatedly to select the desired system.




3. **FUNC** Press the FUNC (Function) button until the setup menu is no longer displayed. To restore normal condition.



Press the MAIN MENU button until the setup menu is no longer displayed.

Supplementary Remote Control Operations

Picture Menu

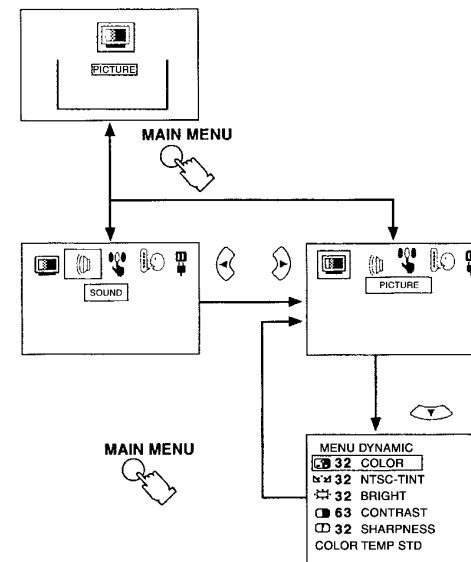

Picture menu

To select functions vertically or horizontally, press the navigation buttons.


| Press | Item | Effect | Indicator |
|--------|-----------------|-------------------|-----------|
| Select | COLOR | Decrease Increase | |
| Select | NTSC-TINT | Greenish Reddish | |
| Select | BRIGHT | Darker Brighter | |
| Select | CONTRAST | Decrease Increase | |
| Select | SHARPNESS | Decrease Increase | |
| Select | COLOR TEMP. STD | | |

Important Note

If picture menu is active and the N (Picture norm) button is pressed, picture settings will be reset to factory setup levels.

Supplementary Remote Control Operations

Sound Menu

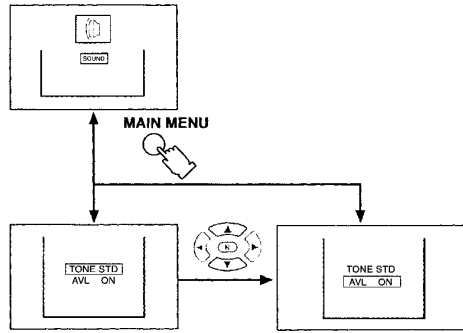

Sound Menu

To select functions vertically or horizontally, press the navigation buttons.

| Press | Item | Effect | Indicador |
|--------|----------|---------------------|------------------|
| Select | TONE STD | Decrease ↔ Increase | STD ↔ HIGH ↔ LOW |
| Select | AVL ON | ON ↔ OFF | AVL ON |

AVL (Automatic Volume Levelling)

This feature restricts sound volume to a preset level, when broadcast sound levels differ between programs and commercials.


Important Note

If sound menu is active and the N (Picture norm) button is pressed, sound settings will be reset to factory setup levels.

Supplementary Remote Control Operations

Features Menu

To select functions vertically or horizontally, press the navigation buttons.

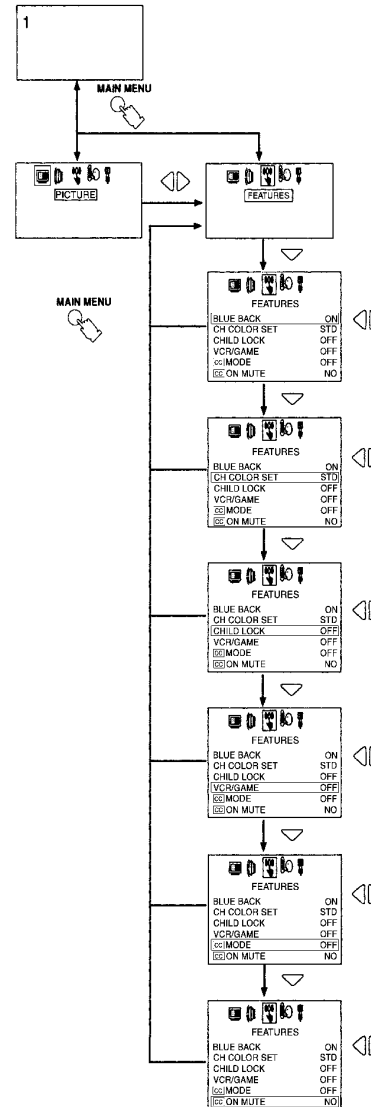

BLUE BACK (Blue screen)

When this feature is activated, the screen will turn blue if there is no input of a TV station signal, when the signal is weak, or when the picture is excessively snowy. To avoid excessive noise, sound level is reduced to zero.

Press the navigation button (◀/▶) to select ON ↔ OFF.

Note:

This feature should be disabled by selecting OFF in the following situations:

1. When the program signal is weak or when the picture is excessively snowy.
2. When reproducing a video tape in FF or REW mode.

CH COLOR SET (Individual color channel setting)

Color intensity may vary among TV stations. This feature allows you to individually adjust color settings for each station. Press the navigation button (◀/▶) to adjust as follows:



CHILD LOCK

Press the navigation button (◀/▶) to select ON ↔ OFF.

Note:

1. When the channel is locked, the screen turns blue and sound level is reduced to zero.
2. When the FUNC (Function) button is pressed, the indication CHILD LOCK ON will be displayed. No setting function can be accessed.
3. When the unit is turned ON while in a locked channel, the indication CHILD LOCK ON will be displayed to remind you that this feature is activated.


VCR/GAME

Press the navigation button (◀/▶) to select ON ↔ OFF.

When this feature is ON, brightness and contrast are set to optimum picture levels.

CC MODE (Mode/Closed Caption)

Press the navigation button (◀/▶) to select an option as shown below:




Supplementary Remote Control Operations

CC ON MUTE (Mute/Closed Caption)

This feature will function only when:


1. Mode/CC feature is OFF.
2. The MUTE button (M) is pressed on the remote control.

Press the navigation button (◀/▶) to select an option as shown below:



| FEATURES | | |
|--------------|--|-----|
| BLUE BACK | | ON |
| CH COLOR SET | | STD |
| CHILD LOCK | | OFF |
| VCR/GAME | | OFF |
| CC MODE | | OFF |
| CC ON MUTE | | NO |

Language

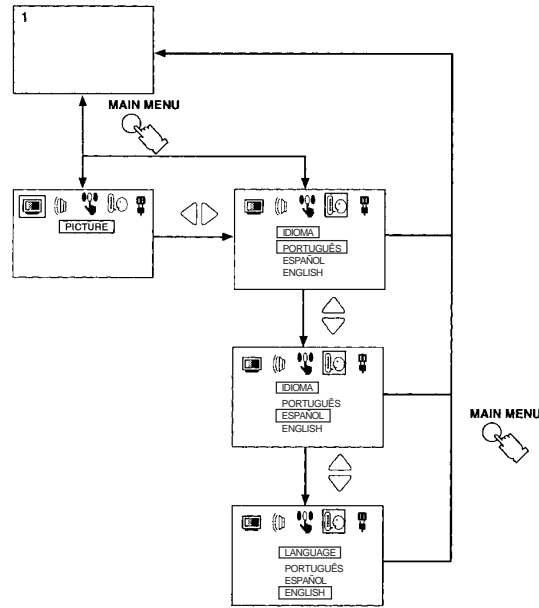

To select functions vertically or horizontally, press the navigation buttons.

Troubleshooting Chart

Before you call for service, determine the symptoms and make a few simple checks, as shown below.

| SIGNALS | | Check |
|------------------|--------------|---|
| Picture | Sound | |
| Snowy picture | Noisy sound | Antenna location and/or connection |
| Multiple image | Normal sound | Antenna location and/or connection |
| Interference | Noisy sound | Electrical appliances, lights, cars and motorcycles |
| Normal picture | No sound | Volume (check if mute control is activated on the remote control) |
| No picture | No sound | Check that the AC power cord is plugged into the AC outlet. Unit has not been turned ON. Brightness/contrast and audio control settings (Check by pressing the power switch.) |
| No color | Normal sound | Color control settings |
| No video | Low sound | Perform channel tuning procedure again. |
| Colored blotches | Normal sound | Unit was relocated while it was ON. |
| No color | Noisy sound | Improper color system |

Hotel Mode

This feature is very useful in hotels or when the owner does not want other people to change setting levels. When activated, only CHANNEL, VOLUME, PICTURE MENU, RECALL, MUTE, TV/AV buttons will operate.


To activate:

1. Adjust sound level.
2. Press the TIMER button on the remote control and set it to 30 minutes.
3. Press and hold the RECALL button.
4. Press the CHANNEL (▲) button on the TV panel.

To exit Hotel mode:

Press the VOLUME (◀) button on the TV panel and the TIMER button on the remote control simultaneously.

■ IC601 (TDA9381PS/N2/3) - Pins and Functions

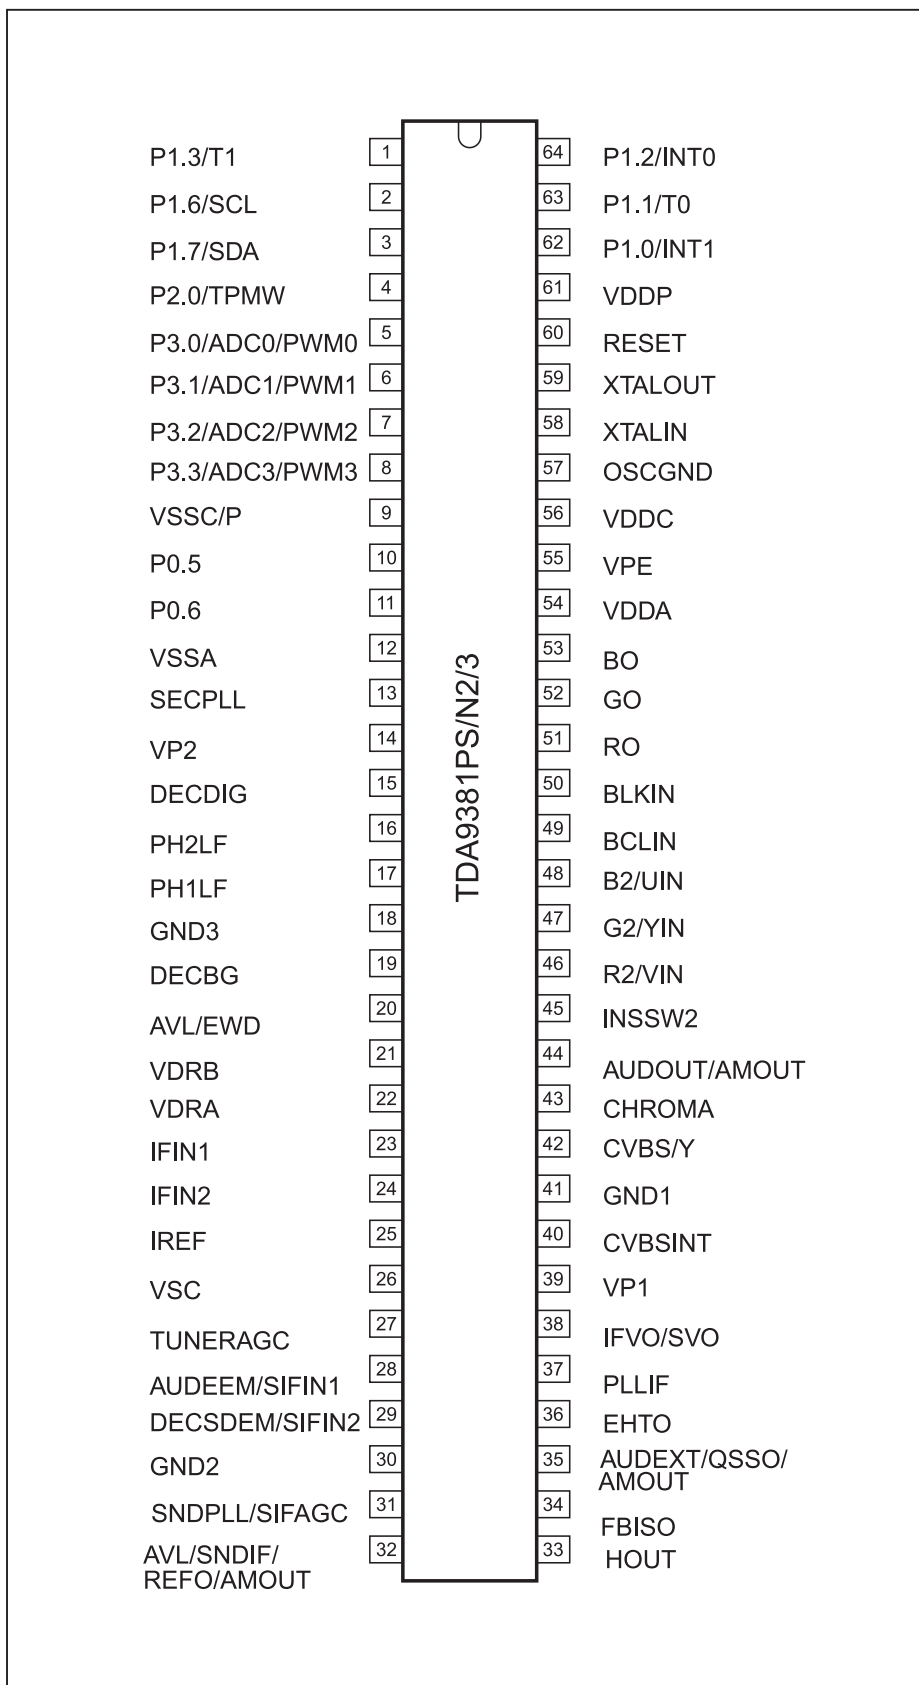

■ IC601 - Pins and Functions

| Nome | Nº | Descrição |
|------------------------------|----|---|
| P1.3/T1 | 1 | port 1.3 or Counter/Timer 1 input |
| P1.6/SCL | 2 | port 1.6 or I 2 C-bus clock line |
| P1.7/SDA | 3 | port 1.7 or I 2 C-bus data line |
| P2.0/TPWM | 4 | port 2.0 or Tuning PWM output |
| P3.0/ADC0/PWM0 | 5 | port 3.0 or ADC0 input or PWM0 output |
| P3.1/ADC1/PWM1 | 6 | port 3.1 or ADC1 input or PWM1 output |
| P3.2/ADC2/PWM2 | 7 | port 3.2 or ADC2 input or PWM2 output |
| P3.3/ADC3/PWM3 | 8 | port 3.3 or ADC3 input or PWM3 output |
| VSSC/P | 9 | digital ground for m-Controller core and periphery |
| P0.5 | 10 | port 0.5 (8 mA current sinking capability for direct drive of LEDs) |
| P0.6 | 11 | port 0.6 (8 mA current sinking capability for direct drive of LEDs) |
| VSSA | 12 | analog ground of Teletext decoder and digital ground of TV-processor |
| SECPLL | 13 | SECAM PLL decoupling |
| VP2 | 14 | 2 nd supply voltage TV-processor (+8V) |
| DECDIG | 15 | decoupling digital supply of TV-processor |
| PH2LF | 16 | phase-2 filter |
| PH1LF | 17 | phase-1 filter |
| GND3 | 18 | ground 3 for TV-processor |
| DECBG | 19 | bandgap decoupling |
| AVL/EWD (1) | 20 | Automatic Volume Levelling /East-West drive output |
| VDRB | 21 | vertical drive B output |
| VDRA | 22 | vertical drive A output |
| IFIN1 | 23 | IF input 1 |
| IFIN2 | 24 | IF input 2 |
| IREF | 25 | reference current input |
| VSC | 26 | vertical sawtooth capacitor |
| TUNERAGC | 27 | tuner AGC output |
| AUDEEM/SIFIN1 (1) | 28 | audio deemphasis or SIF input 1 |
| DECSDEM/SIFIN2 (1) | 29 | decoupling sound demodulator or SIF input 2 |
| GND2 | 30 | ground 2 for TV processor |
| SNDPLL/SIFAGC (1) | 31 | narrow band PLL filter /AGC sound IF |
| AVL/SNDIF/REF0/ AMOUT (1) | 32 | Automatic Volume Levelling / sound IF input / subcarrier reference output /AM output (non controlled) |
| HOUT | 33 | horizontal output |
| FBISO | 34 | flyback input/sandcastle output |
| AUDEXT/ QSSO/AMOUT (1) | 35 | external audio input /QSS intercarrier out /AM audio output (non controlled) |
| EHTO | 36 | EHT/overvoltage protection input |
| PLLIF | 37 | IF-PLL loop filter |
| IFVO/SVO | 38 | IF video output / selected CVBS output |
| VP1 | 39 | main supply voltage TV-processor (+8 V) |
| CVBSINT | 40 | internal CVBS input |
| GND1 | 41 | ground 1 for TV-processor |
| CVBS/Y | 42 | external CVBS/Y input |
| CHROMA | 43 | chrominance input (SVHS) |
| AUDOUT /AMOUT (1) | 44 | audio output /AM audio output (volume controlled) |
| INSSW2 | 45 | 2 nd RGB / YUV insertion input |
| R2/VIN | 46 | 2 nd R input / V (R-Y) input |
| G2/YIN | 47 | 2 nd G input / Y input |
| B2/UIN | 48 | 2 nd B input / U (B-Y) input |
| BCLIN | 49 | beam current limiter input / (V-guard input, note 2) |

■ IC601 - Pins and Functions


| Nome | Nº | Descrição |
|-----------|----|--|
| BLKIN | 50 | black current input / (V-guard input, note 2) |
| RO | 51 | Red output |
| GO | 52 | Green output |
| BO | 53 | Blue output |
| VDDA | 54 | analog supply of Teletext decoder and digital supply of TV-processor (3.3 V) |
| VPE | 55 | OTP Programming Voltage |
| VDDC | 56 | digital supply to core (3.3 V) |
| OSCGND | 57 | oscillator ground supply |
| XTALIN | 58 | crystal oscillator input |
| XTALOUT | 59 | crystal oscillator output |
| RESET | 60 | reset |
| VDDP | 61 | digital supply to periphery (+3.3 V) |
| P1.0/INT1 | 62 | port 1.0 or external interrupt 1 input |
| P1.1/T0 | 63 | port 1.1 or Counter/Timer 0 input |
| P1.2/INT0 | 64 | port 1.2 or external interrupt 0 input |

■ IC601 / IC451 - Voltage Table

| IC601 | | | | | | | |
|----------|---------|-----|---------|----------|---------|-----|---------|
| POWER ON | | | | STAND-BY | | | |
| Pin | Voltage | Pin | Voltage | Pin | Voltage | Pin | Voltage |
| 1 | 3,2V | 33 | 0,6V | 1 | 0V | 33 | 0,9V |
| 2 | NC | 34 | 0,8V | 2 | 4,8V | 34 | 0V |
| 3 | NC | 35 | 3,8V | 3 | 4,8V | 35 | 1,9V |
| 4 | 3,3V | 36 | 4,4V | 4 | 0V | 36 | 3,3V |
| 5 | 0V | 37 | 2,8V | 5 | 4,8V | 37 | 2,2V |
| 6 | 3,3V | 38 | 3,2V | 6 | 3,3V | 38 | 3,2V |
| 7 | 3,3V | 39 | 7,8V | 7 | 3,3V | 39 | 5V |
| 8 | 3,3V | 40 | 4,5V | 8 | 3,3V | 40 | 2,7V |
| 9 | 0V | 41 | 0V | 9 | 0V | 41 | 0V |
| 10 | 0V | 42 | 4,5V | 10 | 0V | 42 | 2,4V |
| 11 | 2,2V | 43 | 0V | 11 | 4,6V | 43 | 0V |
| 12 | 0V | 44 | 3,5V | 12 | 0V | 44 | 2,2V |
| 13 | 2,3V | 45 | 0V | 13 | 1,7V | 45 | 0V |
| 14 | 7,8V | 46 | 0V | 14 | 5,1V | 46 | 0V |
| 15 | 4,9V | 47 | 0V | 15 | 3,4V | 47 | 0V |
| 16 | 3,4V | 48 | 0V | 16 | 1,7V | 48 | 0V |
| 17 | 3,7V | 49 | 2,5V | 17 | 1,7V | 49 | 2V |
| 18 | 0V | 50 | 5,3V | 18 | 0V | 50 | 3,3V |
| 19 | 4V | 51 | 3,4V | 19 | 3,2V | 51 | 0,8V |
| 20 | 0V | 52 | 3,3V | 20 | 0,3V | 52 | 0,8V |
| 21 | 2,1V | 53 | 3,3V | 21 | 1,3V | 53 | 0,9V |
| 22 | 2,2V | 54 | 3,3V | 22 | 1,1V | 54 | 3,3V |
| 23 | 1,8V | 55 | 0V | 23 | 1,6V | 55 | 0V |
| 24 | 1,8V | 56 | 3,3V | 24 | 1,6V | 56 | 3,3V |
| 25 | 3,8V | 57 | 0V | 25 | 2,5V | 57 | 0V |
| 26 | 4,4V | 58 | nc | 26 | 2,2V | 58 | 1,6V |
| 27 | 4,1V | 59 | nc | 27 | 4V | 59 | 1,6V |
| 28 | 3,2V | 60 | nc | 28 | 1,8V | 60 | 0V |
| 29 | 2,3V | 61 | 3,3V | 29 | 0,9V | 61 | 3,3V |
| 30 | 0V | 62 | 0V | 30 | 0V | 62 | 0V |
| 31 | 2,3V | 63 | 1,6V | 31 | 1V | 63 | 0V |
| 32 | 2,5V | 64 | 4,6V | 32 | 1,1V | 64 | 4,8 |

| IC451 | |
|-------|---------|
| Pin | Voltage |
| 1 | 3,2V |
| 2 | NC |
| 3 | NC |
| 4 | 3,3V |
| 5 | 0V |
| 6 | 3,3V |
| 7 | 3,3V |

■ IC601 - Block Diagram

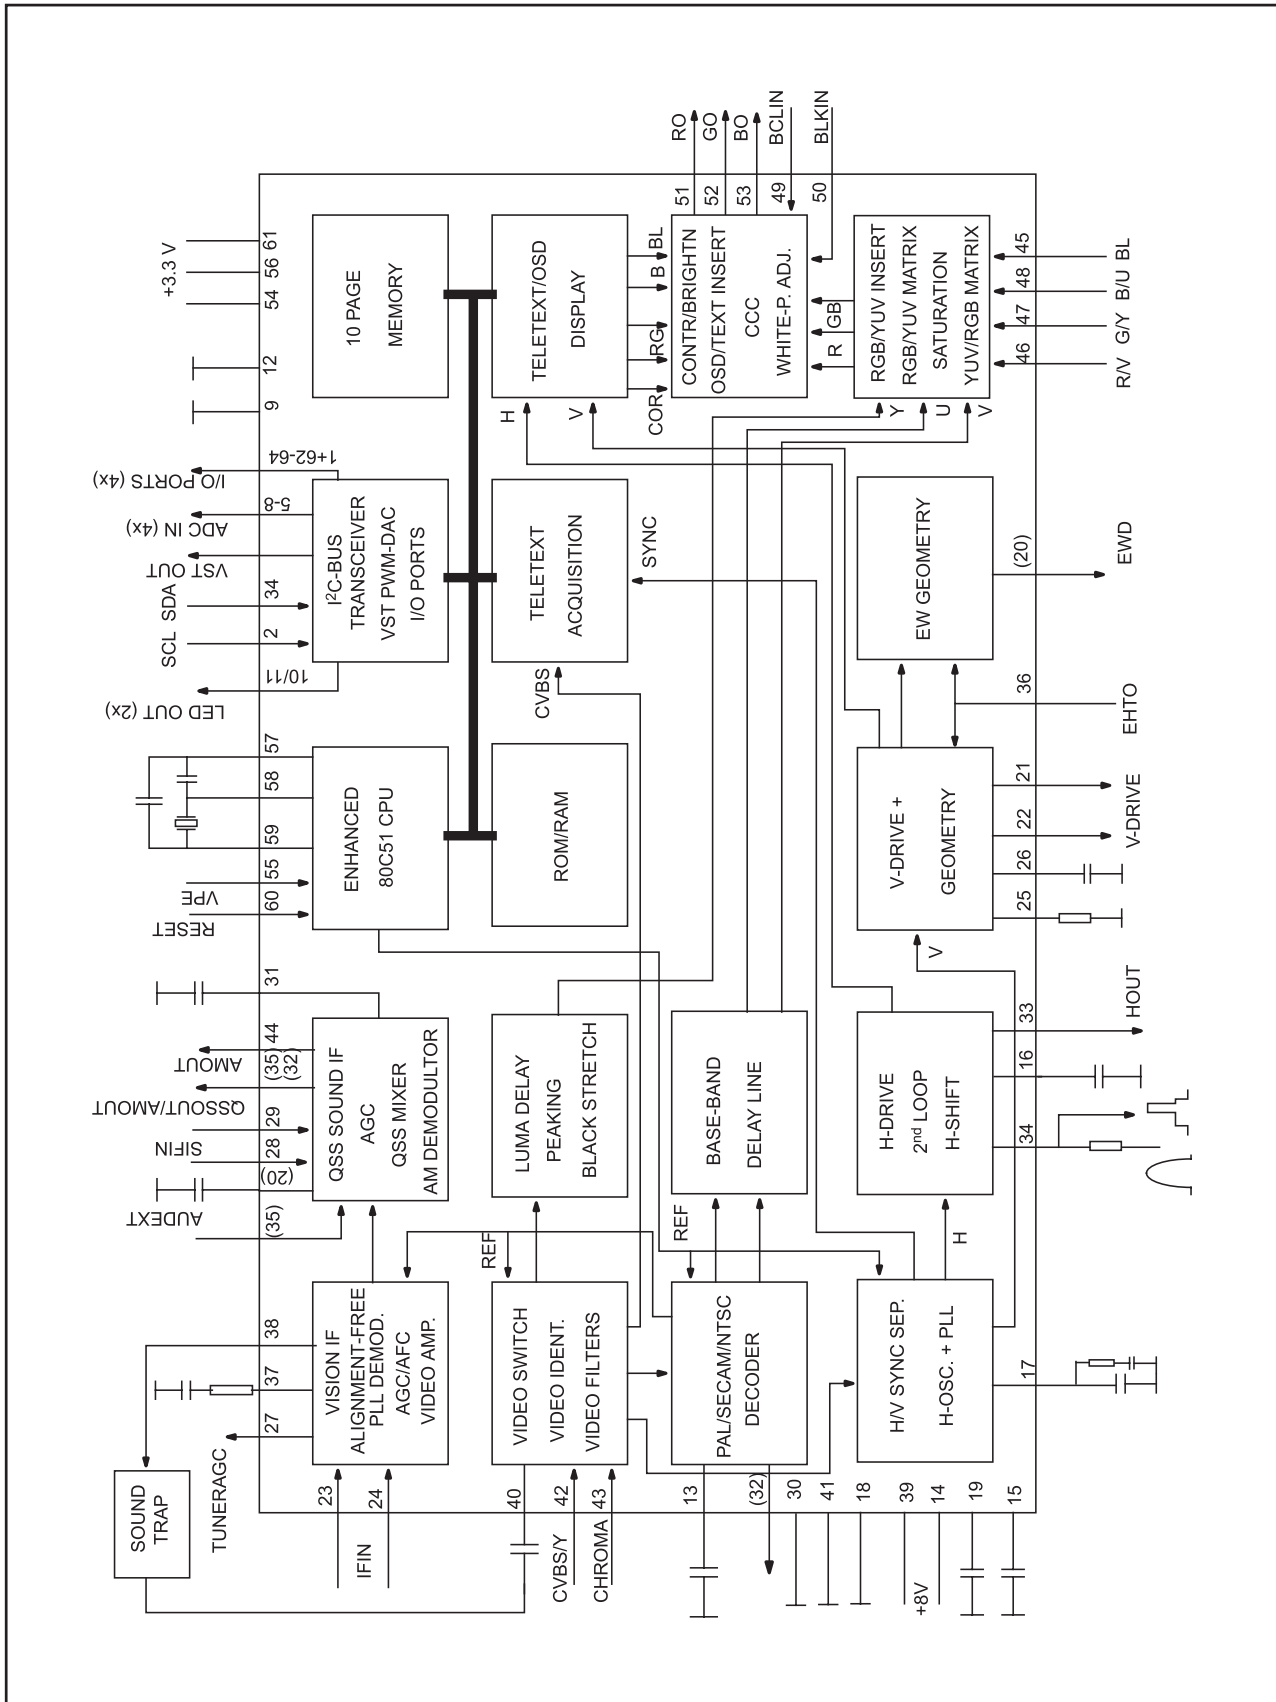

■ General Summary

| CONFIGURATION | |
|----------------------------|---|
| COLOUR SYSTEM | PAL-M / NTSC / PAL-N (PAL-M 50Hz) |
| POWER SOURCE | CA Automatic Voltage Selection 110 - 240V AC, 60Hz |
| MEMORY | 100 positions |
| TUNING RANGE | 181 channels |
| On Screen Display Language | English / Spanish / Portuguese |
| Áudio System | Mono |
| Vertical Magnetic Field | -0.1 ±0.03 (BRASIL) |
| Colour Temperature | TC-14A12P: (High Light) x= 0.260±0.01, y=0.265 ±0.01, Y=300 (nit) (Low Light) x= 0.243±0.01, y=0.255 ±0.01, Y=6.5 (nit) |
| | TC-20B12: (High Light) x= 0.270±0.01, y=0.275 ±0.01, Y=155 (nit) (Low Light) x= 0.245±0.01, y=0.235 ±0.01, Y=7.0 (nit) |

| Contents | Reference | Test Point | Adjustment Point | Specifications | |
|-------------------------|-----------|------------------|------------------|-------------------|-------------------|
| | | | | TC-14A12P | TC-20B12 |
| +B Voltage | 002 | TPA 12 | | 140.5 ± 1.5 (V) | 140.5 ± 1.5 (V) |
| | | TPA 11 | | 8 ± 1 (V) | 8 ± 1 (V) |
| | | TPA 10 | | 5± 1 (V) | 5± 1 (V) |
| | | TPA21 | | 215 ± 15 (V) | 215 ± 15 (V) |
| Buzz | 007 | A22-2 or PA41 | | 0.5 (Vp-p) | 0.5 (Vp-p) |
| PAL colour sign optput | 009 | TPL2 | D | 2.45 ± 0.1 (Vo-p) | 2.45 ± 0.1 (Vo-p) |
| | | TPL1 | C | 2.45 ± 0.5 (Vo-p) | 2.45 ± 0.5 (Vo-p) |
| NTSC colour sign output | 010 | TPL1 | C | 1.2 ± 0.5 (Vo-p) | 1.2 ± 0.5 (Vo-p) |
| Anode (EHT) voltage | 008 | CRT anode | | 24.5 +0.7 (Kv) | 26.5 +0.7 (Kv) |
| | | | | 24.5 – 1.5 (kV) | 26.5 – 1.5 (kV) |

■ Service Adjustments and Calibrations


TO ENTER IN THE SERVICE MODE:

1. Adjust the volume for the minimum.
2. Adjustment the “**OFF TIMER**” function for 30 minutes.
3. Simultaneously press the “**RECALL**” button of the remote control unit and the “**VOLUME DOWN**” button on the TV set. After some seconds, the TV enters the **SERVICE MODE** and the “**CHK1**” expression should appear on the screen.

TO EXIT SERVICE MODE AND RETURN TO THE NORMAL STATE:

Press the “**NORMAL**” key on the remote control unit or turn off the unit.

HOW TO OPERATE THE “DAC” CONTROLS IN THE BR3L CHASSIS

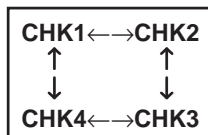

To change from “**CHK1**” to “**CHK2**” mode and following, press “**2**” to move forward and “**1**” to go back.

ADJUSTMENTS IN THE CHK1 MODE:

| CHK1 OPTIONS | |
|--------------|-----|
| OPTIONS | PAR |
| 1 | C 1 |
| 2 | 0 0 |
| 3 | 0 0 |
| 4 | 3 3 |
| 5 | 8 0 |
| 6 | 0 0 |
| 7 | 0 0 |
| 8 | 0 0 |

ADJUSTMENTS IN THE CHK2 MODE:

| CHK2 OPTIONS | |
|---------------|-----|
| OPTIONS | PAR |
| RF-AGC | 31 |
| CONTRAST | 63 |
| COLOUR | 32 |
| SUB-COLOUR | 32 |
| NTSC-TINT | 32 |
| SUB-NTSC-TINT | 30 |
| BRIGHT | 32 |

ADJUSTMENTS IN THE CHK3 MODE:

| CHK3 OPTIONS | |
|-----------------|-----|
| OPTIONS | PAR |
| V-SLOPE | 37 |
| V-SHIFT 50Hz | 2 |
| V-SHIFT 60Hz | 1 |
| V-AMP 50Hz | 16 |
| V-AMP 60Hz | 16 |
| H-SHIFT | 36 |
| S-CORR 50Hz | 18 |
| S-CORR 60Hz | 18 |
| V-ZOOM 50 Hz | 5 |
| V-ZOOM 60 Hz | 7 |
| OSD H-POS | 3 |
| OSD V-POS 50 Hz | 28 |
| OSD V-POS 60 Hz | 21 |

ADJUSTMENTS IN THE CHK4 MODE:

| CHK4 OPTIONS | |
|--------------|-----|
| OPTIONS | PAR |
| R-CUT | 31 |
| G-CUT | 32 |
| BRIGHT | 32 |
| SUB-BRIGHT | 31 |
| CONTRAST | 63 |
| SUB-CONTRAST | 21 |
| R-DR | 19 |
| G-DR | 31 |
| B-DR | 38 |
| RGB CONTRAST | 6 |

NOTE:

- To select the options, press “**4**” to move forward and “**3**” to go back.
- Select the option and make the adjustment pressing the “**VOL-**” or “**VOL+**” keys.
- To memorize the adjustment press “**0**” (**CHK1** mode only).

- To turn off AKB (blue OSD), press “**5**”. To turn on AKB (white OSD), press “**5**” of the remote control unit.
- After end of the adjustments, press the “**NORMAL**” key “ or turn of the unit to return to the normal mode of TV.
- To do data memory maintenance, simultaneously press “**MUTE**” on the remote control and “**VOL-**” on the TV set when it is in **SERVICE MODE** . To select the memory address, press “**4**” to move forward or “**3**” to go back.)

■ Service Adjustments and Calibrations

TEST EQUIPMENT

To do all of these electrical adjustments, the following equipment is required:

- Dual-Trace Oscilloscope
Voltage Range: 0.001 V to 50 V/Div.
Frequency Range: DC to 50 MHz
Probes: 10:1, 1:1
- NTSC Video Pattern Generator
- DVM (Digital Volt Meter)
- MTS/SAP Signal Generator
- (TV Multi-Channel Sound Modulator (U.S.A.))
- Plastic Tip Driver and Non-Metal Driver
- Isolation Transformer (Variable)
- Degaussing Coil
- White Pattern Generator
- Audio Generator

AGC RF CALIBRATION

1. PREPARATION:

- 1.1. Receive a color bar pattern and assure a RF input signal of 75Ω opened, channel 13 (211.25 MHz).
- 1.2. Connect the digital multimeter in TPA 15.

2. CALIBRATION:

- 2.1. Select the option "RF AGC" in the "CHK2" service mode.
- 2.2. Adjust RF AGC to 2.2±0.1V in TPA20.
- 2.3. Increase the input level by +2 dB and confirm that the voltage decrease.

| | | |
|-------|-------------|------------|
| Tuner | ENV56D75G3R | TEDH9-301A |
| Level | 69dB mV | 69dB mV |

VIF DETECTOR OUTPUT LEVEL CONFIRMATION

1. CALIBRATION:

- 1.1. Install the chassis in the VIF calibration JIG and receive a color bar pattern with 63 dBu (75Ω opened).
- 1.2. Connect the oscilloscope to TPA33.
- 1.3. Confirm that the video output signal is within a range of 1.05 ± 0.15 Vp-p in TPA33.

BUZZ (SOUND CIRCUIT)

1. PREPARATION:

- 1.1. Connect the oscilloscope with a 7kHz filter between TPA41 and ground or between the speaker's terminals
- 1.2. Adjust the sound volume to the maximum.
- 1.3. Set "TONE" to "NORMAL" and "AVL" turned off.

2. CONFIRMATION:

- 2.1. Receive a color bar pattern channel 2, with local frequency adjusted and the AFC turned on (Channel with sound bearer and without modulation).
- 2.2. Assure that the width in the buzzing waveform is smaller than 500 m Vp-p.

ANODE AND HEATER VOLTAGE CONFIRMATION

1. PREPARATION:

- 1.1. Receive a crosshatch pattern.
- 1.2. Adjust the bunch current in zero. (0 beam)
- 1.3. Adjust "SCREEN VR" and "CONTRAST" to minimum.

2. CONFIRMATION:

- 2.1. Connect a voltage meter between TPA12 and ground. Confirm that the voltage +B is within a range of 140.5V± 1.5V
- 2.2. Connect a high frequency voltage meter (VRMS.) among the heater, and confirm that the reads tension is within a range of 6.3 ± 0.24 (VRMS)
- 2.3. Connect the high voltage meter in the CRT anode pin, and confirm that the high voltage is within a range of [A]:
 - TC-14A12P [A]=24.5 +0.7kV -1.5kV
 - TC-20B12 [A]=26.5 +0.7kV -1.5kV

PAL COLOR OUTPUT SIGNAL ADJUSTMENT

1. PREPARATION:

- 1.1. Receive a color bar pattern and adjust the local frequency.
- 1.2. Adjust "IMAGE" to DYNAMIC NORMAL, "CONTRAST" to 63 and "SUB-CONTRAST" to 21.
- 1.3. Adjust the "COLOR FOR CHANNEL" level to NORMAL.
- 1.4. Set the CHK2 service mode option, press "5" on the remote control unit and confirm that OSD becomes blue (AKB turned off).
- 1.5. Connect a short circuit jumper between TPA10 and TPA20.
- 1.6. Adjust [A] for 2.3 ± 0.2V through the BRIGHT control variation in the test point TPL2.
- 1.7. Fix G-DRIVE GAIN, R-DRIVE GAIN and B-DRIVE GAIN data in 1FH or 31 DAC.

2. CALIBRATION:

- 2.1. Connect the oscilloscope in TPL2 (G-OUT) with a 10KΩ resistor and adjust "CONTRAST", so that the waveform in [B] it is of 2.6±0.1V according to fig. 1.
2. Adjust "SUB-COLOR" to obtain 2,45±0.1V in [D] according to fig. 1.
3. Connect the oscilloscope in TPL1 (R-OUT) a 10KΩ resistor in and confirm that the waveform in [C] it is of 2.45±0.1V according to fig. 2.
4. Remove the jumper between TPA10 and TPA20, press "5" and confirm that OSD becomes white (AKB turned on).

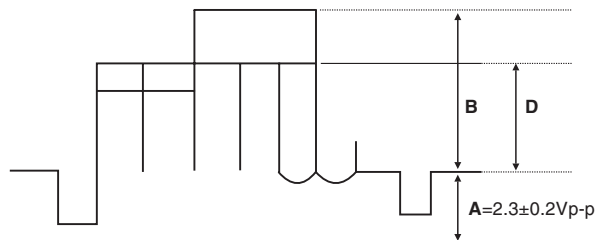


Fig. 1

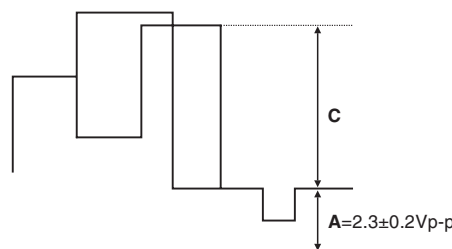


Fig. 2

Service Adjustments and Calibrations

NTSC SUB-TINT CALIBRATION

1. PREPARATION:

- 1.1. Connect the oscilloscope to TPL1 (R OUT) in serie with a 10KΩ resistor.
- 1.2. Receive a rainbow pattern through VIDEO IN.
- 1.3. Adjust "IMAGE" to DYNAMIC NORMAL.
- 1.4. Adjust "COLOR FOR CHANNEL" to NORMAL.
- 1.5. Set the CHK2 service mode option, press "5" on the remote control unit and confirm that OSD becomes blue (AKB turned off).
- 1.6. Connect a short circuit jumper between TPA10 and TPA20.

2. CALIBRATION:

- 2.1. Adjust [C] for 5.0±0.2V through the BRIGHT control variation according to fig. 1.
- 2.2. Adjust the NTSC SUB-TINT level according to fig. 1 positions 2, 3 and 4.
- 2.3. Remove the jumper, press "5" and confirm that OSD becomes white (AKB turned on).

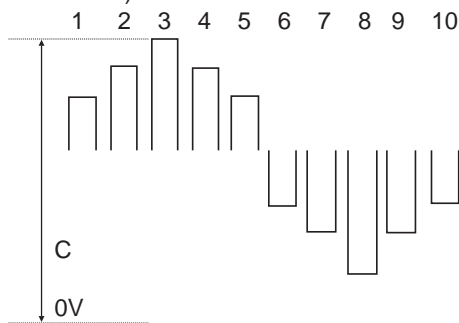


Fig. 1

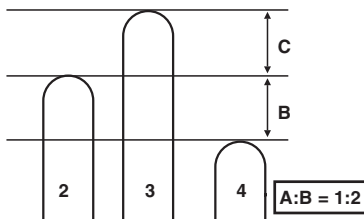


Fig. 2

PROTECTION CIRCUIT (SHUTDOWN) CONFIRMATION OF OPERATION

1. PREPARATION:

- 1.1. Receive a crosshatch pattern.
- 1.2. Adjust CONTRAST and BRIGHT controls to minimum.

2. CONFIRMATION:

- 2.1. Connect the voltmeter in TPA22 and confirm that the voltage is smaller than [A].
- 2.2. Connect a DC source in TPA22 and confirm that the protection circuit doesn't act when the voltage is [B].
- 2.3. Confirm that the protection circuit acts with smaller voltage than [C].

| Condition | 14 inches | 20 inches |
|-----------|-----------|-----------|
| A | 19,67V | 21,18V |
| B | 20,66V | 22,31V |
| C | 22,49V | 24,37V |

WHITE QUALITY CALIBRATION

1. PREPARATION:

- 1.1. Adjust the HELMHOLTZ device to local magnetic field. Horizontal: $0 \pm 0.003 \times 10^{-4}T$
- 1.2. Receive a white purity pattern.
- 1.3. Adjust CONTRAST and BRIGHT controls to maximum.
- 1.4. Previously adjust the CONVERGENCE.
- 1.5. Fully degauss the CRT by using an external degaussing coil.

2. CALIBRATION:

- 2.1. Adjust the magnetic field in $0.4 \times 10^{-4}T$ (400 mG), and check the white quality with the CRT turned to EAST and to WEST.
- 2.2. Receive a red pattern, adjust the COLOR control to maximum and confirm the purity adjustment.
- 2.3. If purity error is found at the CRT corners, to apply magnetic tapes to correct it, fully degauss the CRT again and repeat the steps 1 and 2. Don't use this magnetic tapes on the internal side of the yoke.
- 2.4. Receive a white purity pattern, adjust the COLOR control to maximum and confirm the purity adjustment.

VERTICAL DEFLECTION CALIBRATION AND CONFIRMATION

1. PREPARATION:

- 1.1. Adjust the HELMHOLTZ device to the local magnetic field
- 1.2. Adjust IMAGE to DYNAMIC NORMAL.

2. CONFIRMATION AND CALIBRATION S-CORR :

• CONFIRMATION IN 50HZ


- 2.1. Receive a PAL-N Philips pattern
- 2.2. Confirm that S-CORR 50Hz is in [18] DAC.

• CONFIRMATION IN 60HZ

- 2.3. Receive a monoscope pattern.
- 2.4. Confirm that S-CORR 60Hz is in [18] DAC.

• V-SLOPE CALIBRATION

- 2.5. Receive a monoscope pattern.
- 2.6. Adjust V_SLOPE so that the beginning of the black part of the image be aligned with the center of the CRT as below.

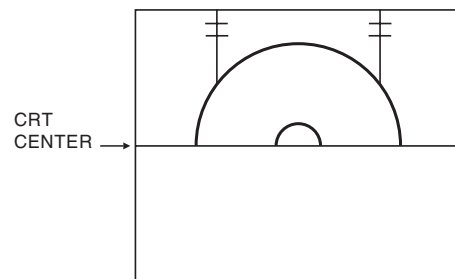

3. VERTICAL CENTRALIZATION 50 HZ CALIBRATION

- 3.1. Receive a PAL-N Philips pattern
- 3.2 Adjust V-SHIFT 50Hz so that Philips pattern's center it is in the CRT center.

4. VERTICAL CENTRALIZATION 60 HZ CALIBRATION

- 4.1. Receive a monoscope pattern.
- 4.2. Adjust V-SHIFT 60Hz so that the monoscope pattern's it is in the CRT center


■ Service Adjustments and Calibrations

5. VERTICAL HEIGHT (V-AMP 50HZ) CALIBRATION

- 5.1. Receive a PAL-N Philips pattern.
- 5.2. Adjust V-AMP-50Hz so that the Philips pattern's circle height be the same dimension of the width.

6. VERTICAL HEIGHT (V-AMP 60HZ) CALIBRATION


- 6.1. Receive a monoscope pattern.
- 6.2. Adjust V-AMP-60Hz so that:
 - [C] and [D] (see below) be 1.9~2.2 (typical 2.0) for 14 inches and 1.5~2.0 for 20 inches.
 - [A] and [B] be 1.5~2.3 (typical 2.0) for 14 inches and 1.5~1.6 for 20 inches.
- 6.3. Memorize in EEPROM.

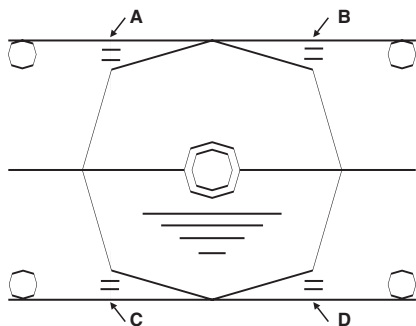

CRT CUT OFF CALIBRATION

1. PREPARATION:

- 1.1. Receive a monoscope pattern.
- 1.2. Position DACs with the data below:
 - BRT AND S-BRT = 32H.
 - RGB CONTRAST = 06H for 14 inches and 07H for 20 inches.
 - SUB-CONTRAST = 21H
 - R,G,B DRIVE = 31H
 - R,G CUT = 31H
- 1.3. Press "5" (AKB OFF) and confirm that OSD becomes blue.
- 1.4. Connect the oscilloscope in TPL7 and adjust BRT to obtain 130V in the figure below.
- 1.5 Adjust screen to minimum.

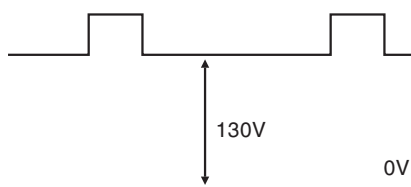

- 1.6. Press "5" (AKB ON) and confirm that OSD becomes white.

WHITE BALANCE CALIBRATION

1. PREPARATION:

- 1.1. This adjustment should be accomplished after 30 minutes of heating.
- 1.2. Receive a white balance. (This sign should contain burst sign).
- 1.3. Position DAC of MENU OF IMAGE for DYNAMIC NORMAL.
- 1.4. Fully degauss the CRT by using an external degaussing coil.
- 1.5. Position the color analyzer in contact with the face of CRT.

- Assure that the CUT OFF voltage calibration has been done.
- If the value in the color analyzer is below Y(H) date, adjust CONTRAST for 32 and connect a short circuit jumper between TPA10 and TPA20.

2. CALIBRATION:

[1] LOW LIGHT CALIBRATION

1. Adjust S-BRT, so that $Y = Y(L)$.
2. Adjust R-CUT OFF, so that $x = x(L)$.
3. Adjust G-CUT OFF, so that $y = y(L)$.

[2] HIGH LIGHT CALIBRATION

1. Adjust S-BRT, so that $Y = Y(H)$.
2. Adjust R-DRIVE, so that $x = x(H)$.
3. Adjust B-DRIVE, so that $y = y(H)$.

[3] Repeat the procedures [1] and [2].

SUB-BRIGHTNESS CALIBRATION

1. PREPARATION:

- 1.1. Receive a windows pattern.
- 1.2. Position MENU OF IMAGE in DYNAMIC NORMAL.

2. CALIBRATION:

- 2.1. Position the color analyzer in an low light image area of CRT.
- 2.2. Adjust S-BRT <CHK 5>, so that $Y=5.5 \pm 0.2$.

SUB-CONTRAST CALIBRATION

1. PREPARATION:

- 1.1. Receive a windows pattern.
- 1.2. Position MENU OF IMAGE in DYNAMIC NORMAL.

2. CALIBRATION:

- 2.1. Position the color analyzer in an hight light image area of CRT.
2. Adjust the SUB-CONTRAST <CHK 4>, so that $Y=300 \pm 10$ for 14 inches and $Y=160 \pm 10$ for 20 inches.
3. If it is impossible to obtain the adjustment above, adjust the SUB-CONTRAST <CHK 4> and confirm the SUB-BRIGHTNESS adjustment.

FOCUS CALIBRATION

1. PREPARATION:

- Assure that the SUB-BRIGHTNESS adjustment has been done.


- 1.1. Receive a Philips or monoscope pattern.
- 1.2. Position MENU OF IMAGE in DYNAMIC NORMAL.

2. CALIBRATION:

- 2.1. Adjust the FOCUS variable resistor.


Using the Philips pattern:

- Take as reference to 3rd vertical line.

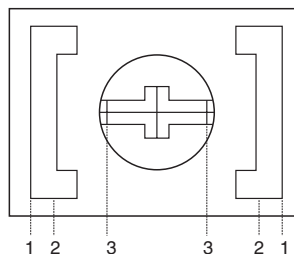

Using the monoscope pattern:



- In the number 4

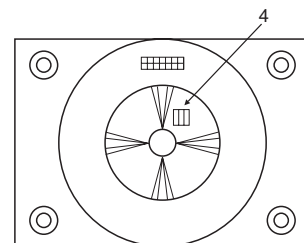

Service Adjustments and Calibrations

COLOR PURITY ADJUSTMENT


1. Position the CRT face turned to east or west.
2. Set Bright and Contrast controls to their maximum positions.
3. Leave the set heating up for 60 minutes at white screen.
4. Fully degauss the picture tube by using an external degauss coil.
5. Apply a red pattern.
6. Loosen a clamp screw for the deflection yoke and move it forward or backward until a uniform red screen is obtained.

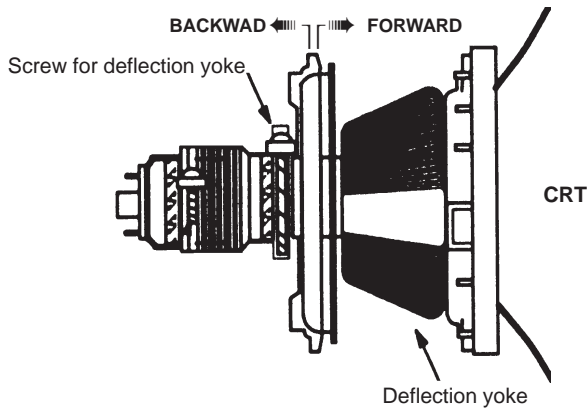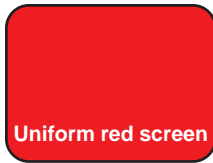


7. Adjust roughly the Low Light controls and make sure that a uniform white field is obtained.
8. Tighten the clamp screw.

CONVERGENCE CALIBRATION

1. Receive a crosshatch pattern and set Contrast control to the maximum position.
2. Adjust Bright control to obtain a clear pattern.
3. Remove the DY wedges and slightly tilt the deflection yoke to the vertically and horizontally to obtain the good overall convergence.

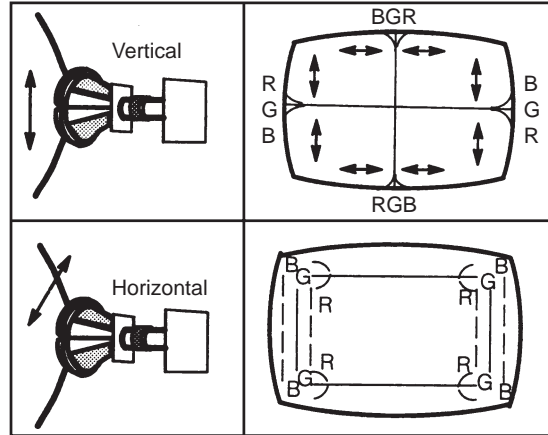

4. Fix the deflection yoke by reinserting the DY wedges as showed below.

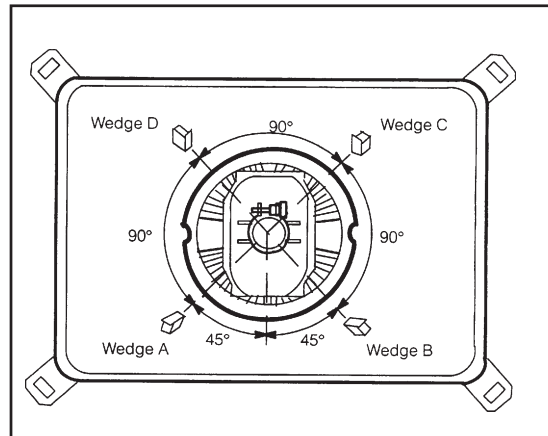

5. If purity error is found, repeat "Color Purity" adjustment

Notes:

- Wedge A showed above should be fixed within a range of 45° to the left of the vertical line shown.
- After inserting wedge A, insert wedges B, C and D. The wedges should be set 90° apart from each other.
- Be certain that the four wedges are firmly fixed and the Deflection Yoke is tightly clamped in place. Otherwise the Deflection Yoke may shift its position and cause a loss of convergence and purity.

EEPROM - Memory Maps

EEPROM X' A0' address (0XX)

| | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| | 00 | 01 | 02 | 03 | 04 | 05 | 06 | 07 | 08 | 09 | 0A | 0B | 0C | 0D | 0E | 0F |
| 00 | 02 | 00 | 06 | 01 | 00 | 06 | 02 | 00 | 06 | 03 | 00 | 06 | 04 | 00 | 06 | 05 |
| 10 | 00 | 06 | 06 | 00 | 06 | 07 | 00 | 06 | 08 | 00 | 06 | 09 | 00 | 06 | 0A | 00 |
| 20 | 06 | 0B | 00 | 06 | 0C | 00 | 06 | 0D | 00 | 06 | 0E | 00 | 06 | 0F | 00 | 06 |
| 30 | 10 | 00 | 06 | 11 | 00 | 06 | 12 | 00 | 06 | 13 | 00 | 06 | 14 | 00 | 06 | 15 |
| 40 | 00 | 06 | 16 | 00 | 06 | 17 | 00 | 06 | 18 | 00 | 06 | 19 | 00 | 06 | 1A | 00 |
| 50 | 06 | 1B | 00 | 06 | 1C | 00 | 06 | 1D | 00 | 06 | 1E | 00 | 06 | 1F | 00 | 06 |
| 60 | 20 | 00 | 06 | 21 | 00 | 06 | 22 | 00 | 06 | 23 | 00 | 06 | 24 | 00 | 06 | 25 |
| 70 | 00 | 06 | 26 | 00 | 06 | 27 | 00 | 06 | 28 | 00 | 06 | 29 | 00 | 06 | 2A | 00 |
| 80 | 06 | 2B | 00 | 06 | 2C | 00 | 06 | 2D | 00 | 06 | 2E | 00 | 06 | 2F | 00 | 06 |
| 90 | 30 | 00 | 06 | 31 | 00 | 06 | 32 | 00 | 06 | 33 | 00 | 06 | 34 | 00 | 06 | 35 |
| A0 | 00 | 06 | 36 | 00 | 06 | 37 | 00 | 06 | 38 | 00 | 06 | 39 | 00 | 06 | 3A | 00 |
| B0 | 06 | 3B | 00 | 06 | 3C | 00 | 06 | 3D | 00 | 06 | 3E | 00 | 06 | 3F | 00 | 06 |
| C0 | 40 | 00 | 06 | 41 | 00 | 06 | 42 | 00 | 06 | 43 | 00 | 06 | 44 | 00 | 06 | 45 |
| D0 | 00 | 06 | 46 | 00 | 06 | 47 | 00 | 06 | 48 | 00 | 06 | 49 | 00 | 06 | 4A | 00 |
| E0 | 06 | 4B | 00 | 06 | 4C | 00 | 06 | 4D | 00 | 06 | 4E | 00 | 06 | 4F | 00 | 06 |
| F0 | 50 | 00 | 06 | 51 | 00 | 06 | 52 | 00 | 06 | 53 | 00 | 06 | 54 | 00 | 06 | 55 |

EEPROM X' A4' address (2XX)

| | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| | 00 | 01 | 02 | 03 | 04 | 05 | 06 | 07 | 08 | 09 | 0A | 0B | 0C | 0D | 0E | 0F |
| 00 | 02 | 00 | A5 | 5A | 00 | 01 | 00 | 00 | 00 | 08 | 00 | 04 | 00 | 00 | 01 | 00 |
| 10 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 20 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| 20 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| 30 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| 40 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| 50 | 20 | 20 | 20 | 3F | 2D | 20 | 20 | 20 | 2D | 20 | 1E | 20 | 20 | 23 | 20 | 00 |
| 60 | 00 | 00 | 01 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| 70 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 90 | D0 |
| 80 | 20 | 20 | 20 | 3F | OP | 20 | 20 | 20 | 2D | 20 | 1E | 20 | 20 | 23 | 1E | 01 |
| 90 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| A0 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| B0 | 03 | 1C | 15 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| C0 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| D0 | 0C | 05 | 0C | 04 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| E0 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | C1 | 00 | 00 | 33 | 80 | 00 | 01 |
| F0 | 00 | 00 | 18 | 20 | 15 | 1A | 00 | 00 | 00 | 00 | 00 | 00 | 00 | A5 | 3F | A5 |



EEPROM X' A2' address (1XX)

| | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| | 00 | 01 | 02 | 03 | 04 | 05 | 06 | 07 | 08 | 09 | 0A | 0B | 0C | 0D | 0E | 0F |
| 00 | 00 | 06 | 56 | 00 | 06 | 57 | 00 | 06 | 58 | 00 | 06 | 59 | 00 | 06 | 5A | 00 |
| 10 | 06 | 5B | 00 | 06 | 5C | 00 | 06 | 5D | 00 | 06 | 5E | 00 | 06 | 5F | 00 | 06 |
| 20 | 60 | 00 | 06 | 61 | 00 | 06 | 62 | 00 | 06 | 63 | 00 | 06 | 64 | 00 | 06 | 65 |
| 30 | 00 | 06 | 66 | 00 | 06 | 67 | 00 | 06 | 68 | 00 | 06 | 69 | 00 | 06 | 6A | 00 |
| 40 | 06 | 6B | 00 | 06 | 6C | 00 | 06 | 6D | 00 | 06 | 6E | 00 | 06 | 6F | 00 | 06 |
| 50 | 70 | 00 | 06 | 71 | 00 | 06 | 72 | 00 | 06 | 73 | 00 | 06 | 74 | 00 | 06 | 75 |
| 60 | 00 | 06 | 76 | 00 | 06 | 77 | 00 | 06 | 78 | 00 | 06 | 79 | 00 | 06 | 7A | 00 |
| 70 | 06 | 7B | 00 | 06 | 7C | 00 | 06 | 7D | 00 | 06 | 00 | 00 | 00 | 00 | 00 | 00 |
| 80 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| 90 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| A0 | 06 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| B0 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| C0 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| D0 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| E0 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| F0 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |

EEPROM X' A6' address (3XX)


| | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| | 00 | 01 | 02 | 03 | 04 | 05 | 06 | 07 | 08 | 09 | 0A | 0B | 0C | 0D | 0E | 0F |
| 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| 10 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| 20 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| 30 | 1B | 20 | 00 | 22 | 17 | 1A | 0F | 0F | 2B | 24 | 1F | 12 | 20 | 19 | 1F | 1F |
| 40 | 1F | 1F | 1F | 00 | 06 | 00 | 00 | 00 | 10 | 29 | C0 | 00 | 2A | 00 | 34 | 2C |
| 50 | 30 | 21 | 02 | 4A | OP | 44 | 00 | 00 | 00 | 00 | 00 | FE | 00 | 00 | 00 | 00 |
| 60 | 02 | FF | 1C | 12 | 19 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| 70 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 10 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| 80 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 0E | 11 | 0D | 06 | 0C | 07 | 0C | 02 | 00 |
| 90 | 09 | 00 | OP | 00 | 00 | 00 | 0A | F8 | FD | 00 | 00 | 00 | 00 | 00 | 00 | 03 |
| A0 | 01 | 03 | 02 | 03 | 03 | 00 | 34 | 00 | 00 | 00 | 2C | 63 | 03 | 00 | 20 | 30 |
| B0 | CA | 49 | 4B | 00 | 33 | 00 | FF | FC | 04 | 05 | 05 | 03 | F8 | OP | F2 | 00 |
| C0 | 20 | 07 | 4F | 40 | 40 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| D0 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| E0 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 |
| F0 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 00 | 11 |

Power Source Voltages

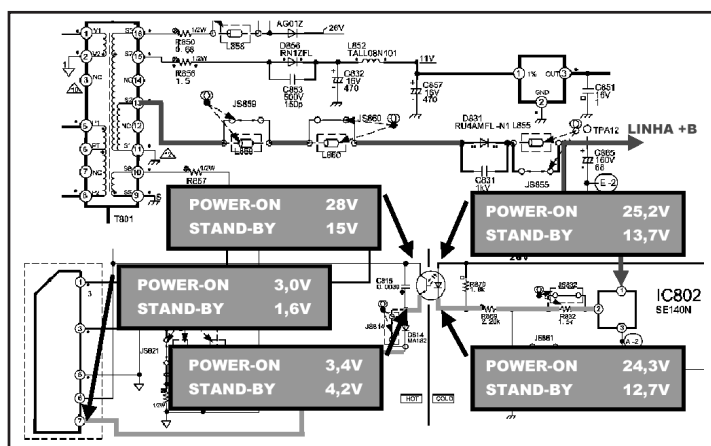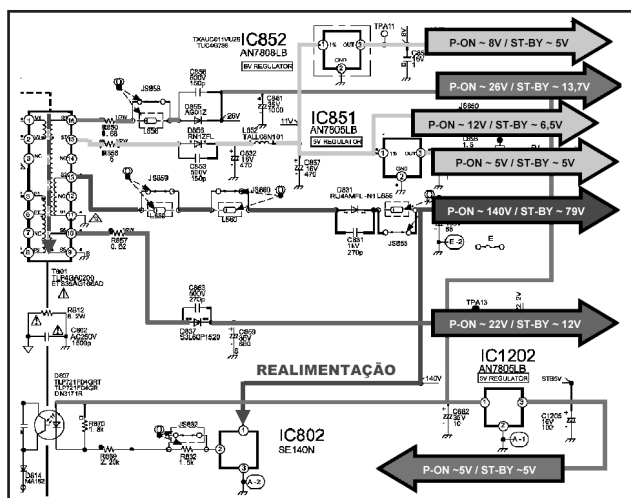


[Click here to play the Power Source Voltages presentation \(MS PowerPoint is necessary\)](#)


Main Board Schematic Diagram - TC-14A12P / TC-20B12

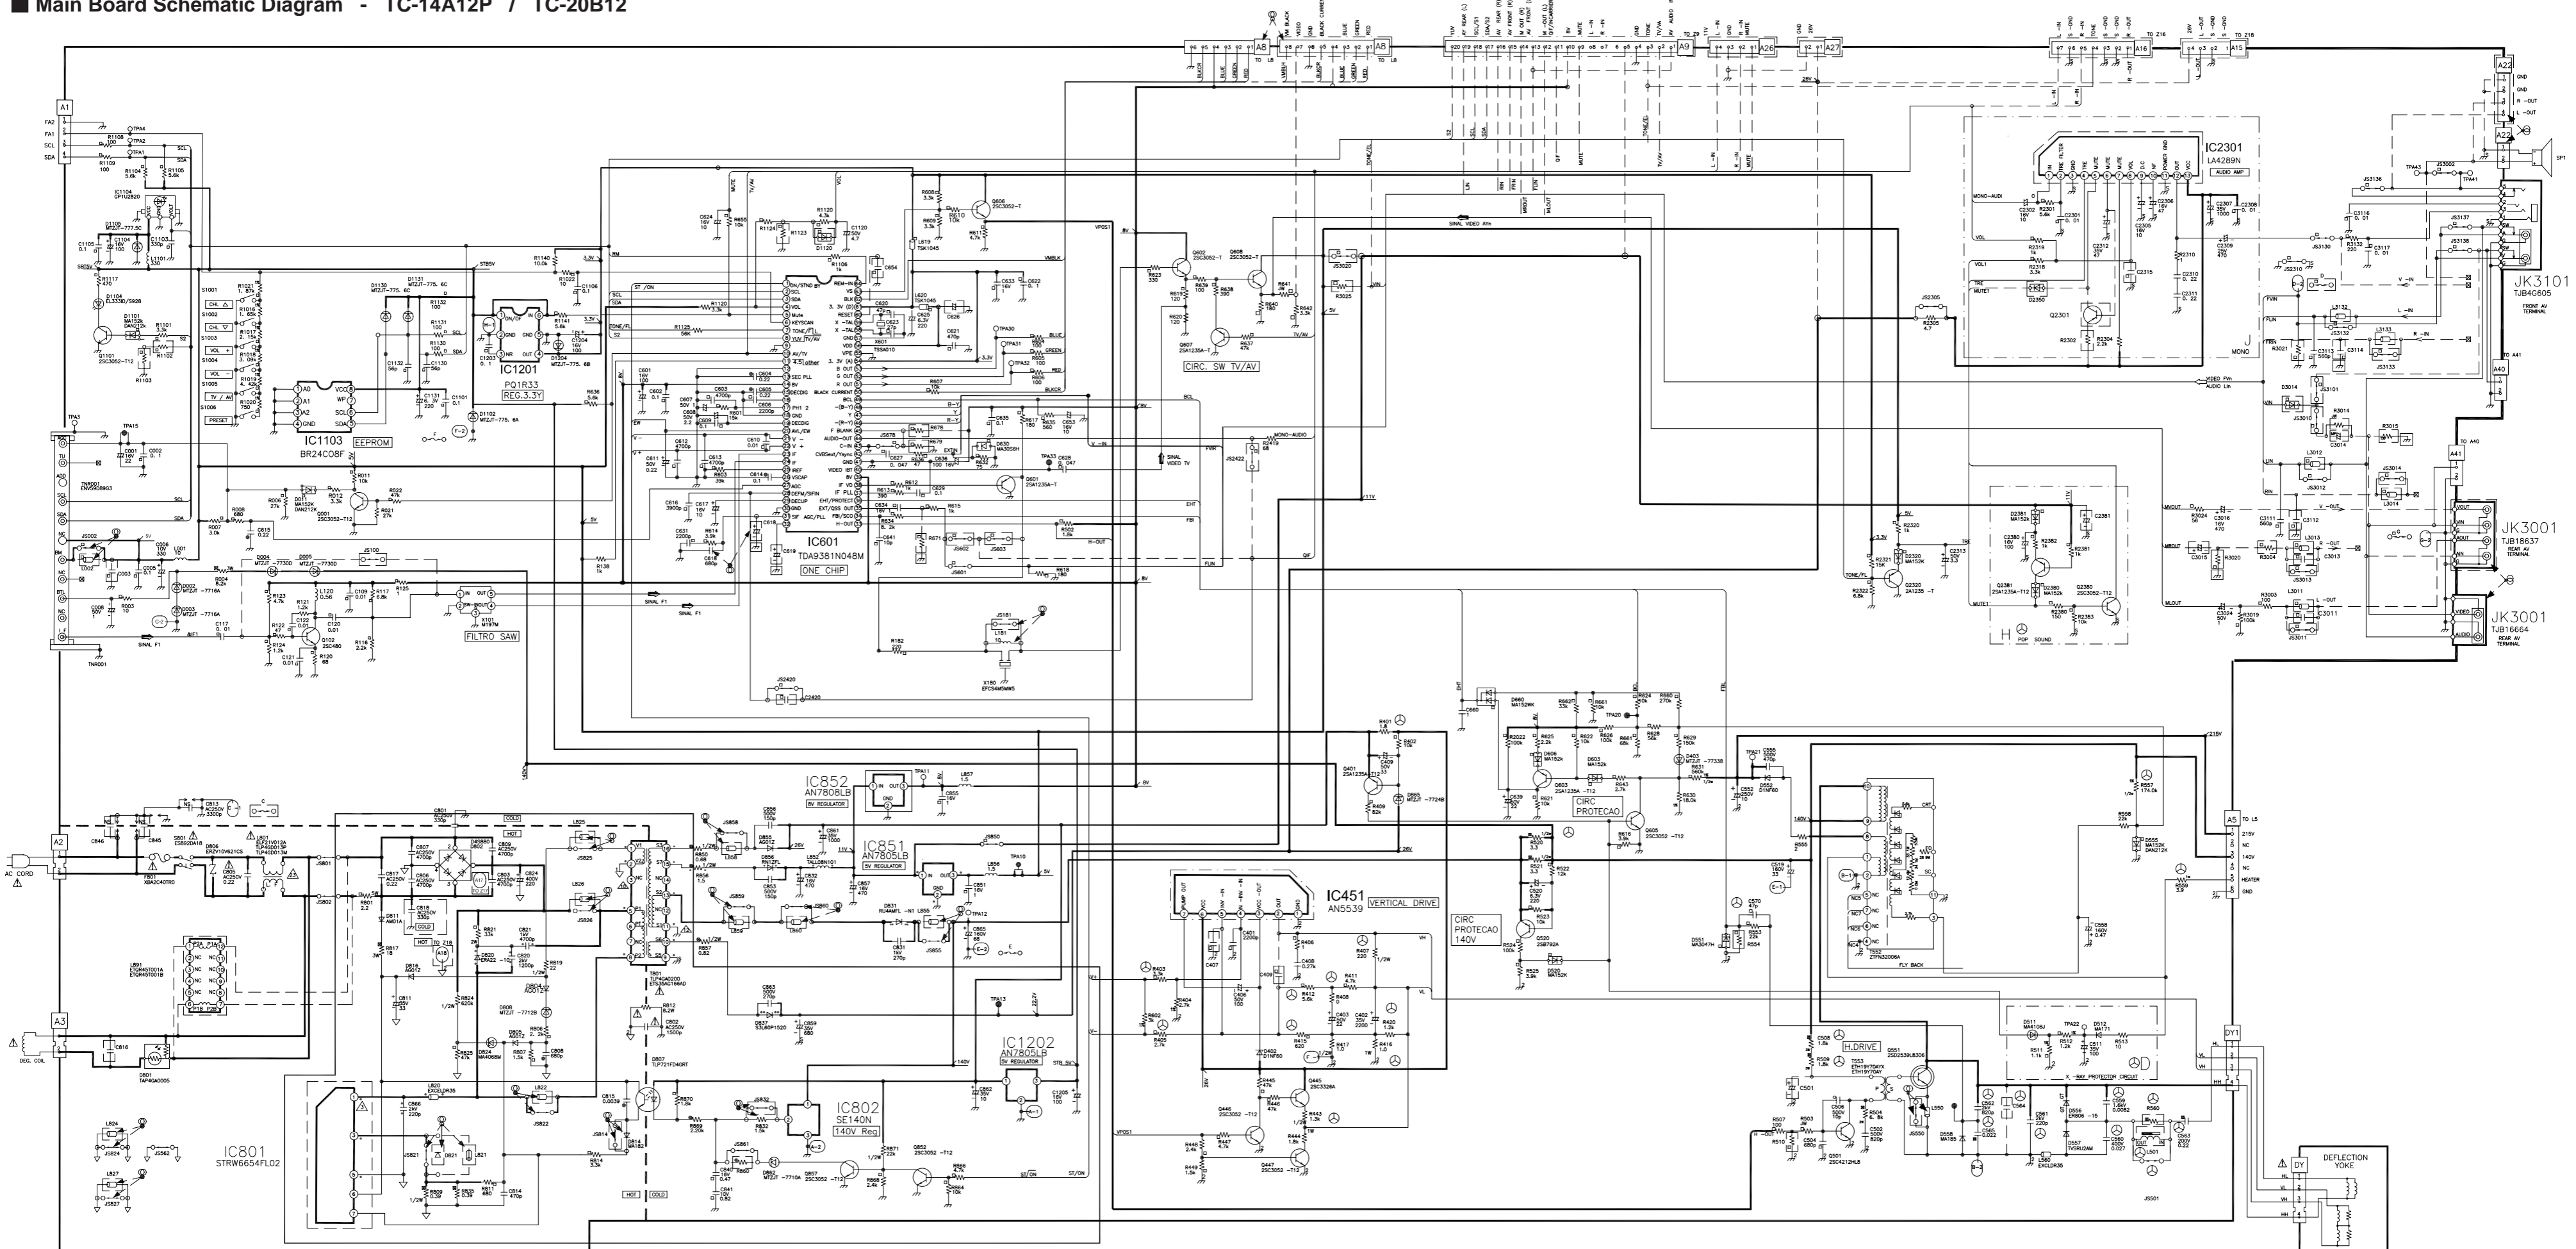


■ Main Board Conductor View (left / component side)

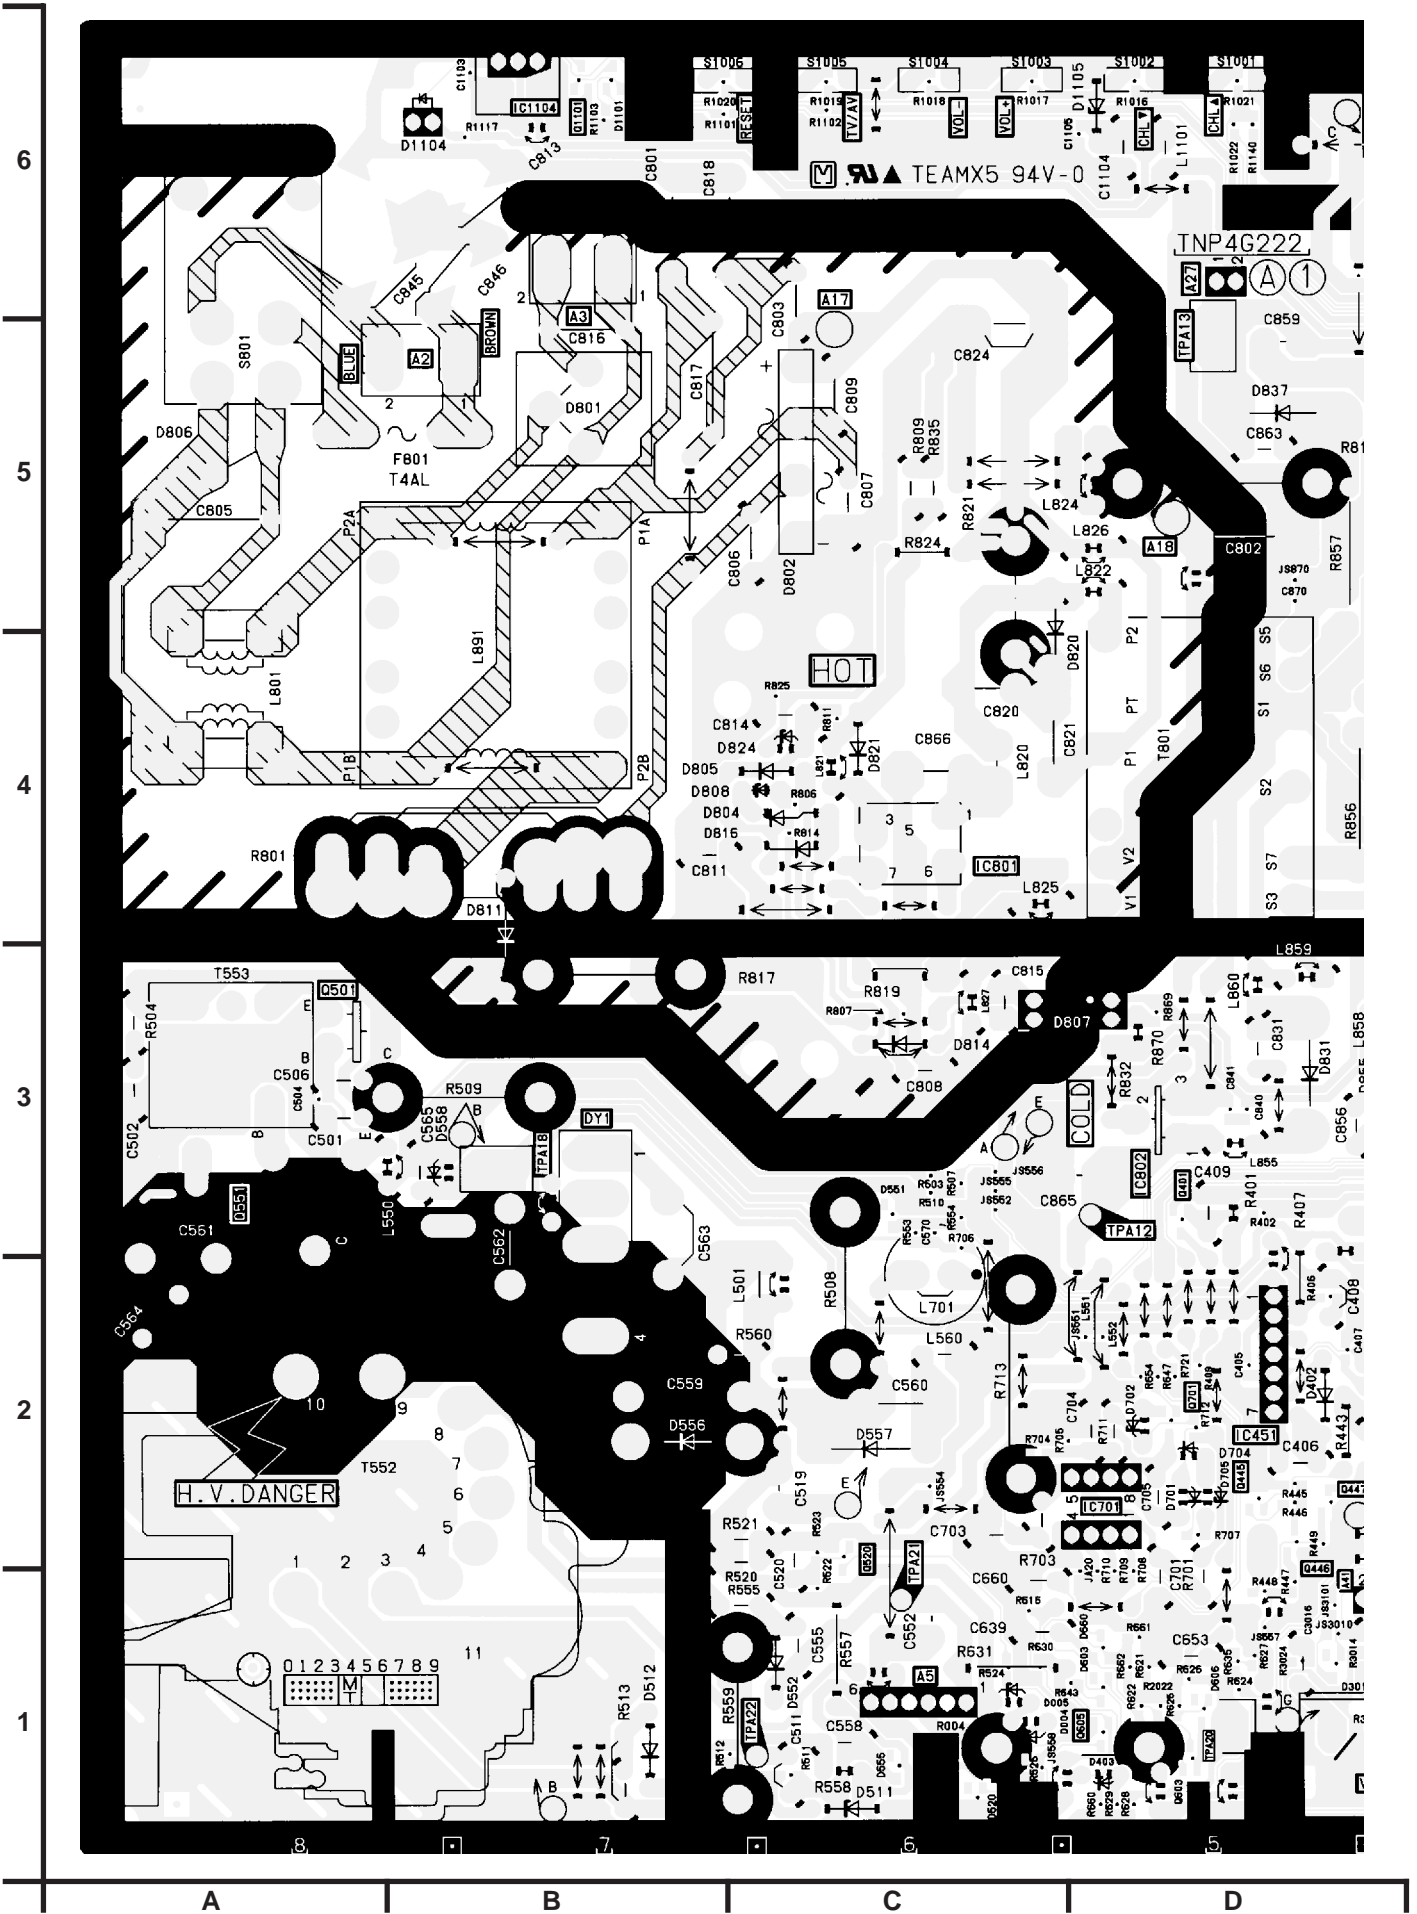


Main Board Conductor View (right / component side)

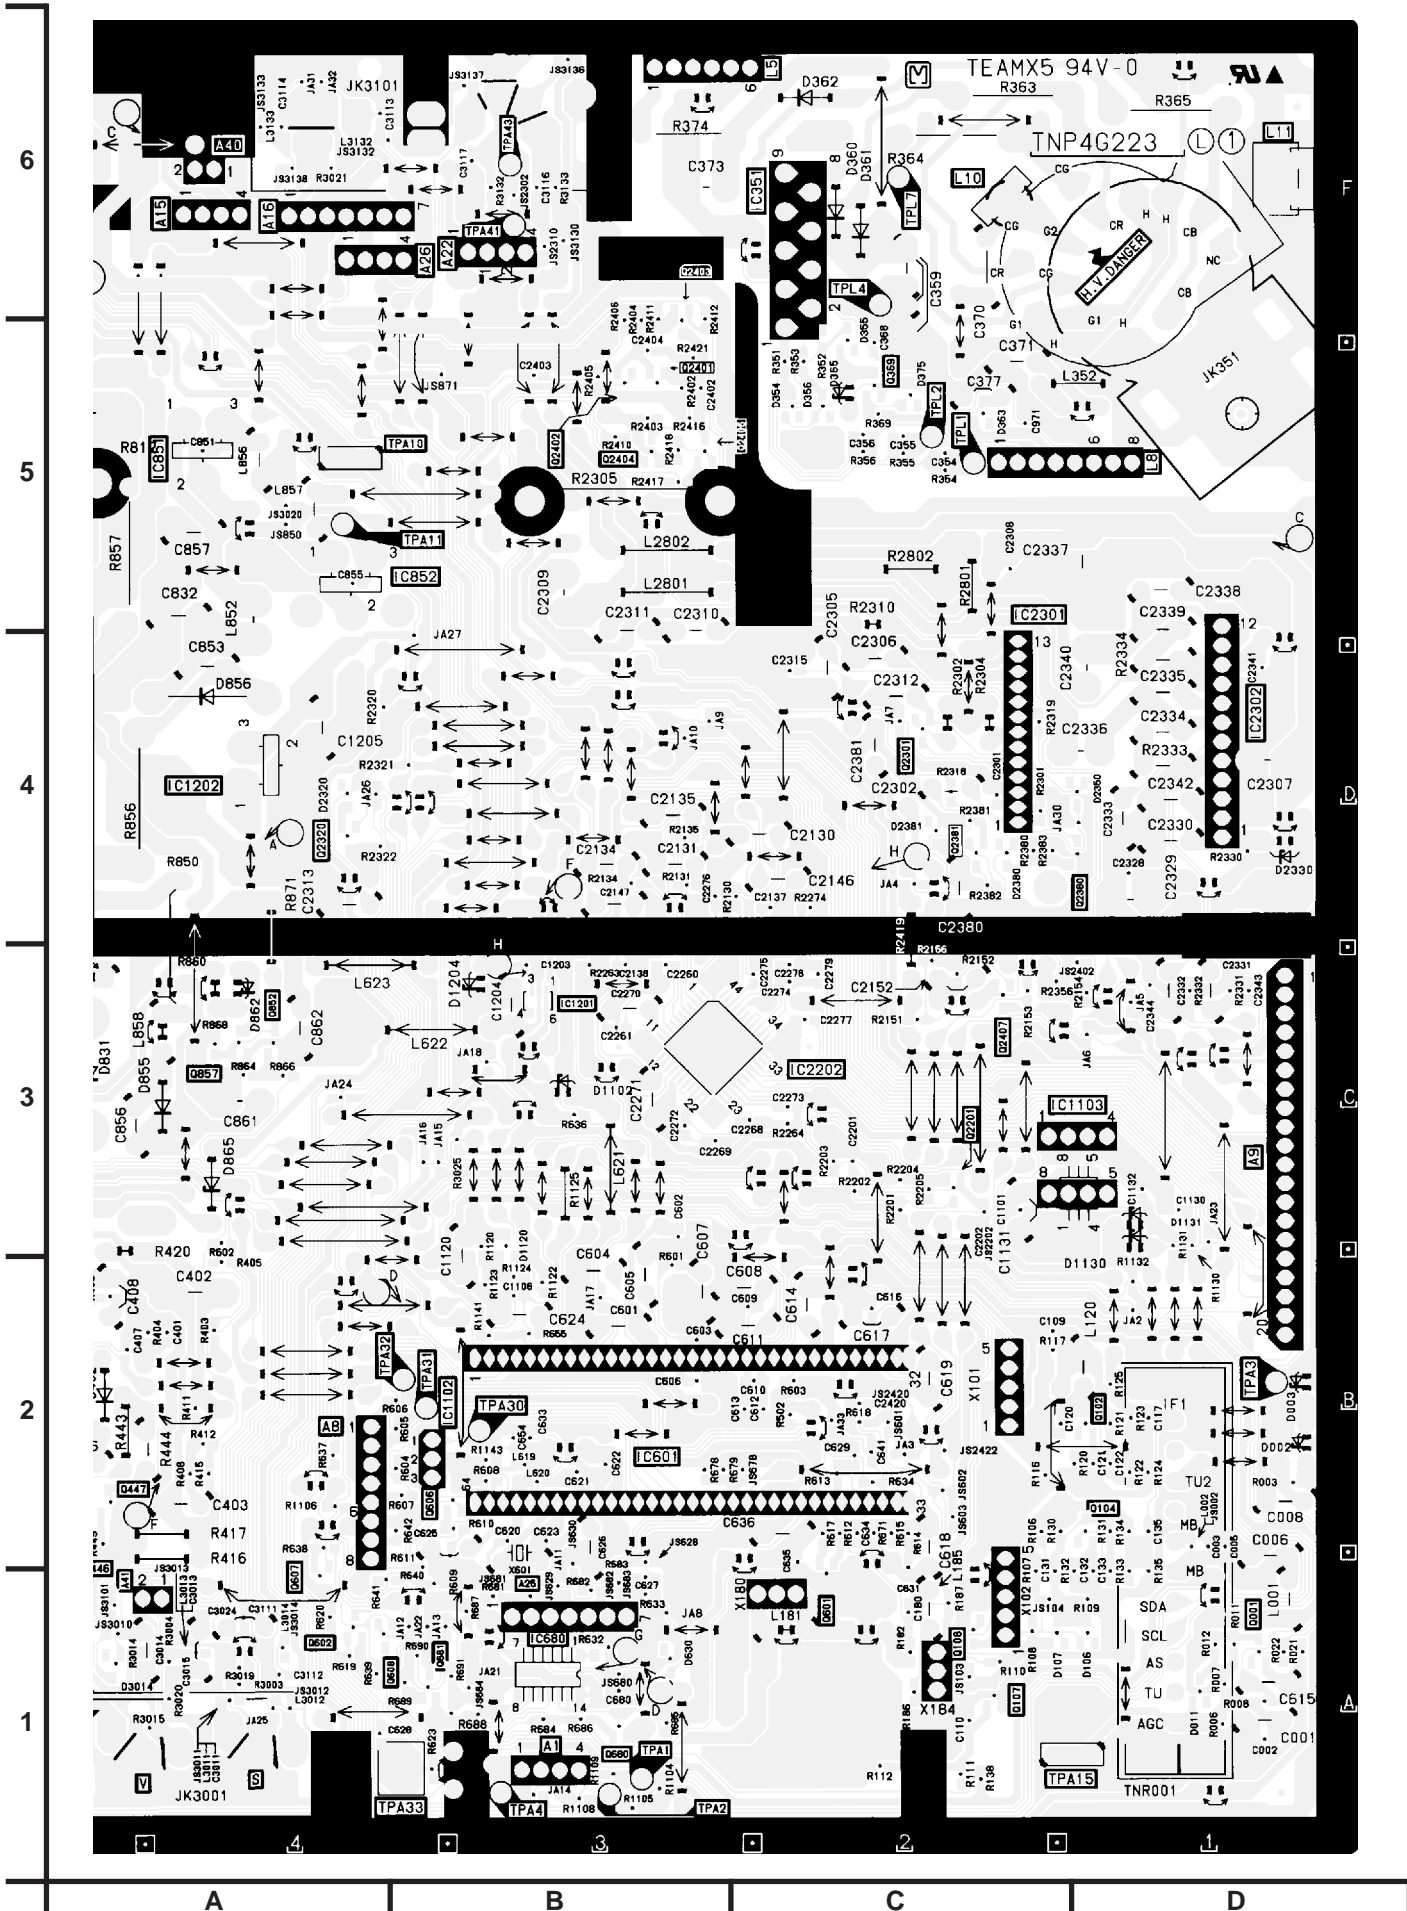

■ Main Board Conductor View (left / foil side)

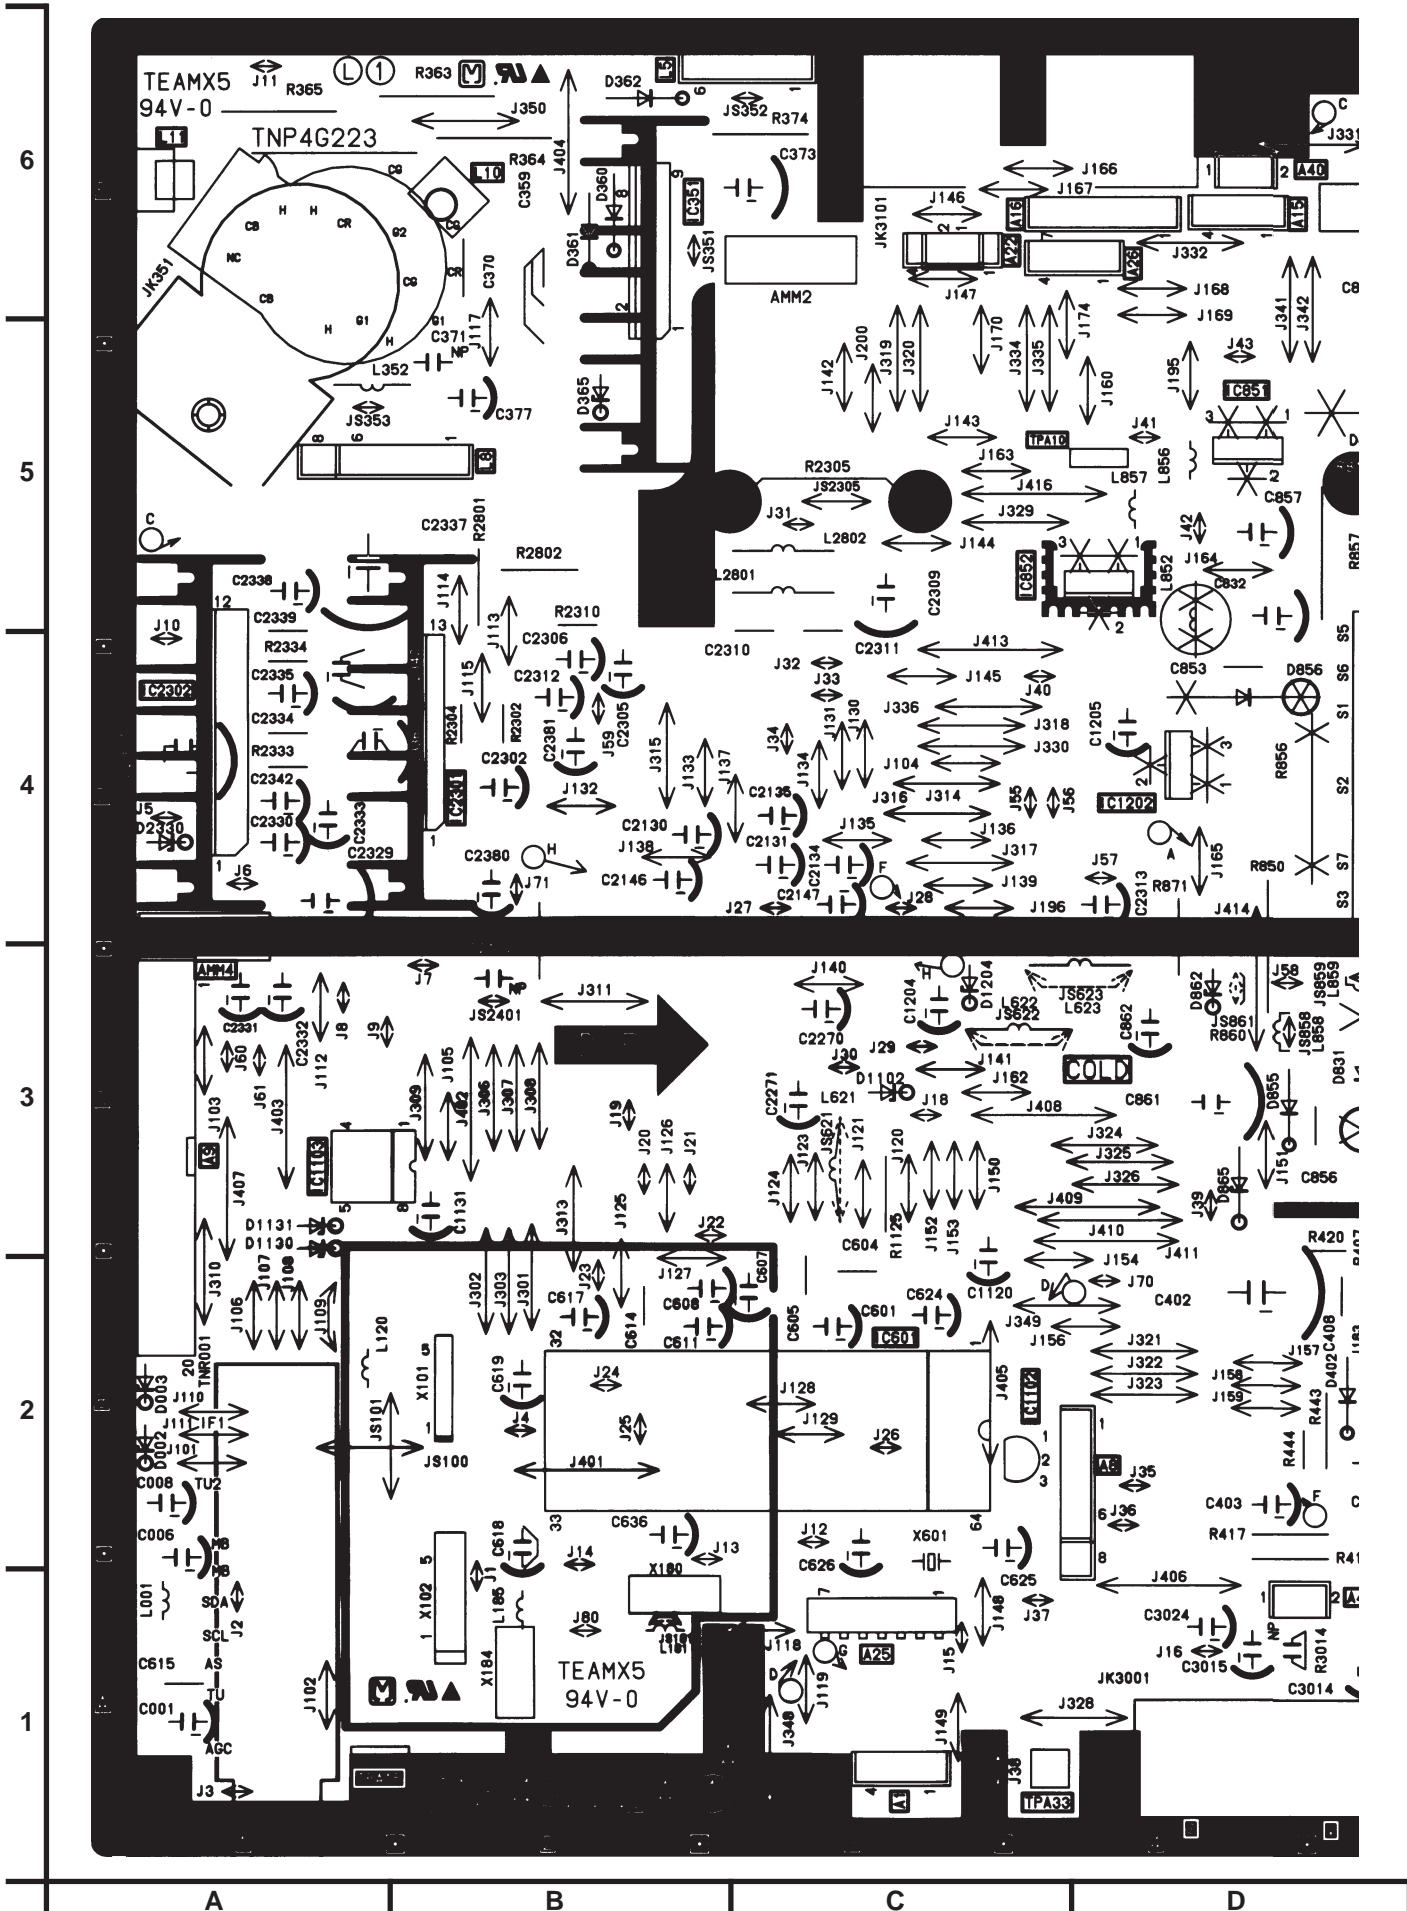






■ Main Board Conductor View (right / foil side)

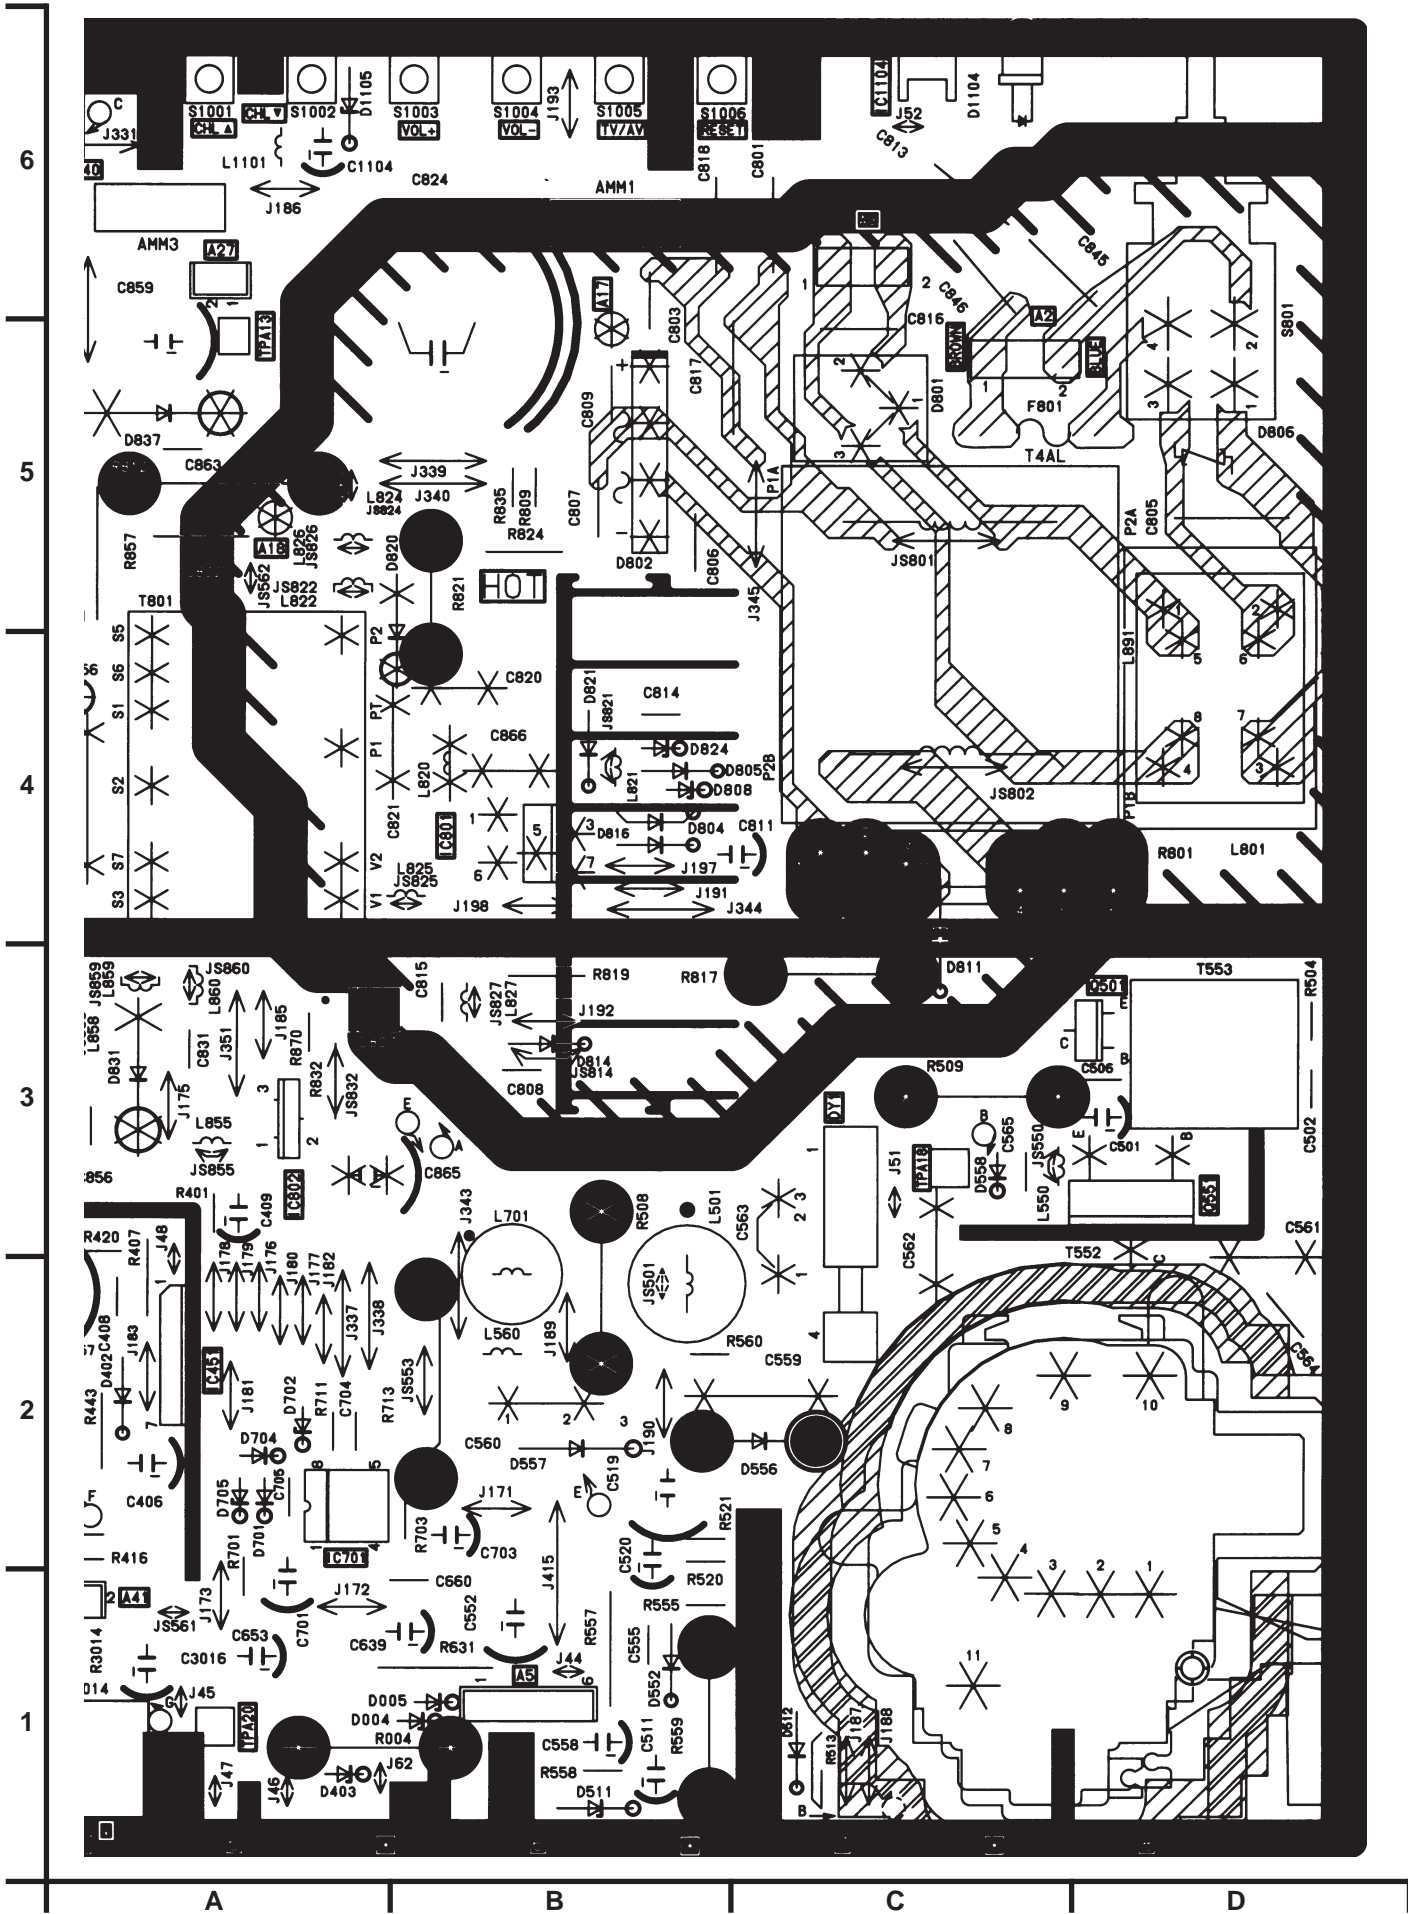





■ **Waveform**

• All the waveforms had read with 127V power source and receiving a colorbar pattern.



IC601

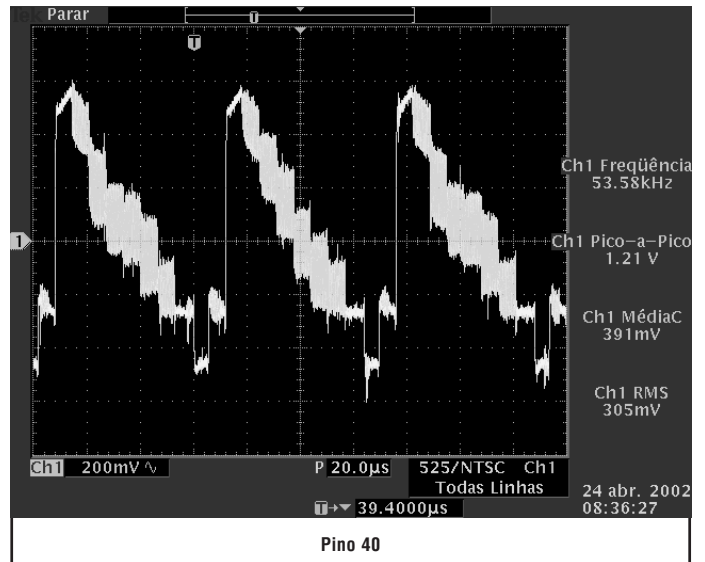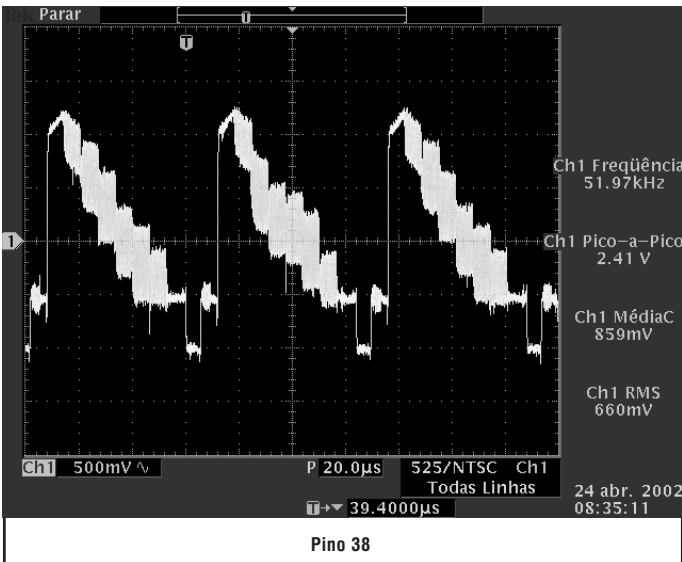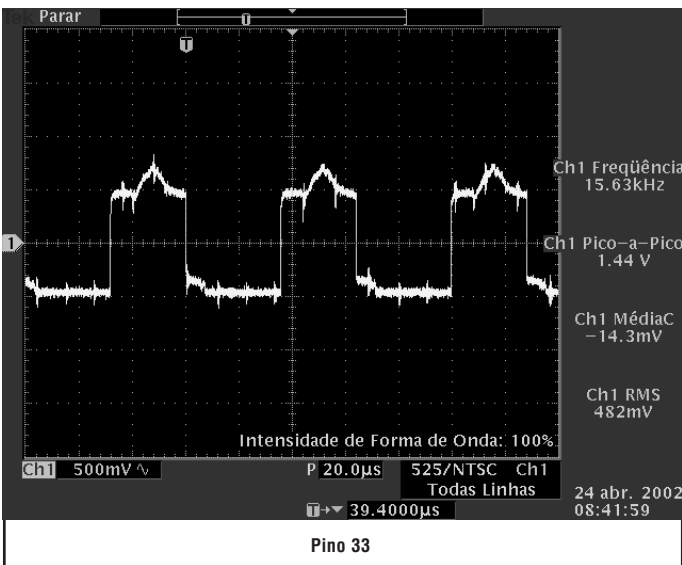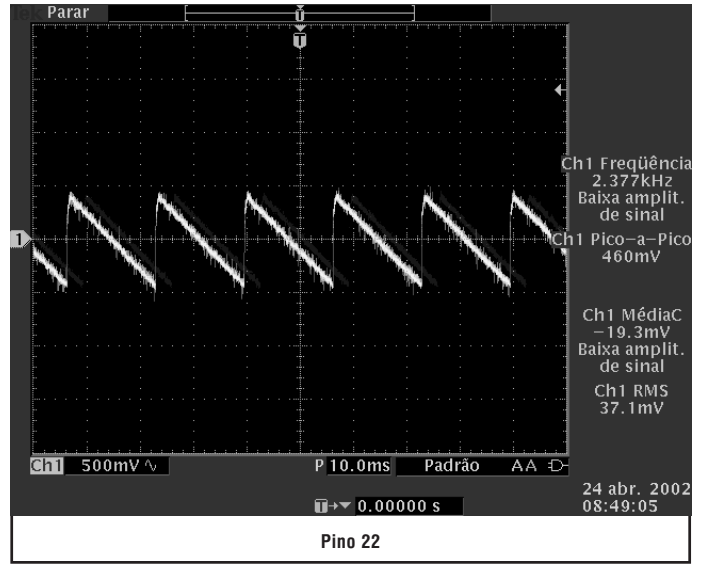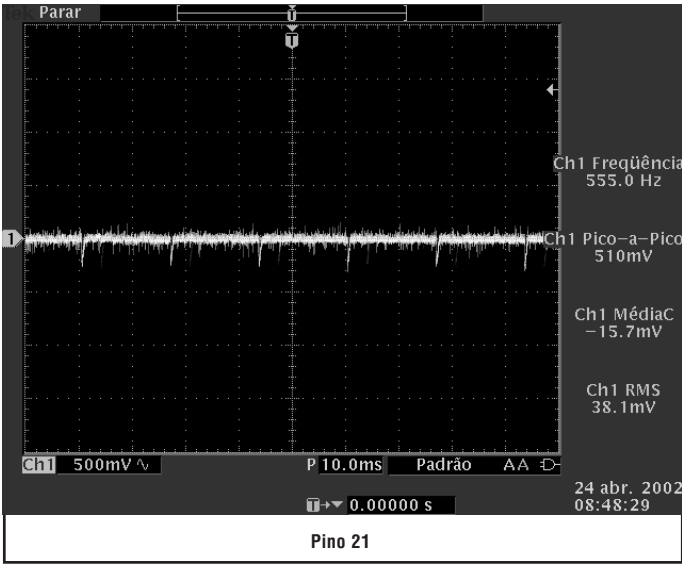



IC601

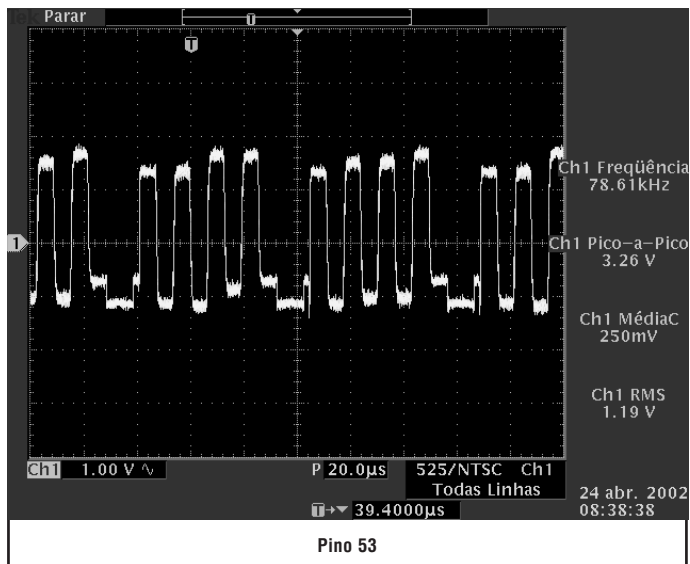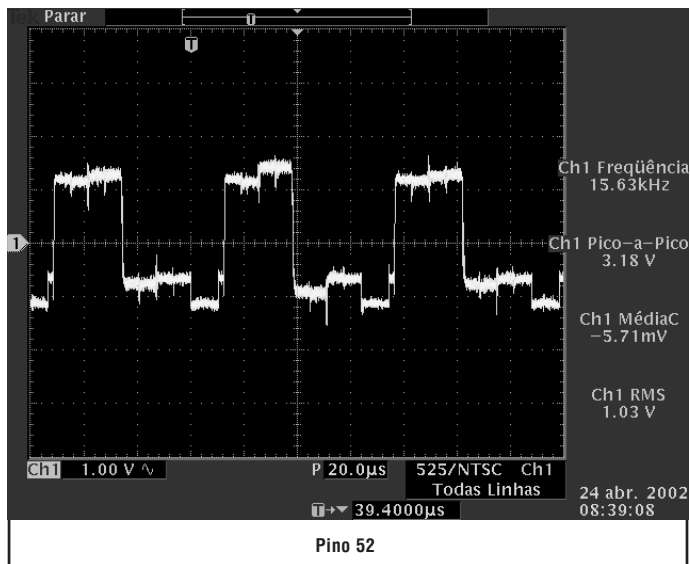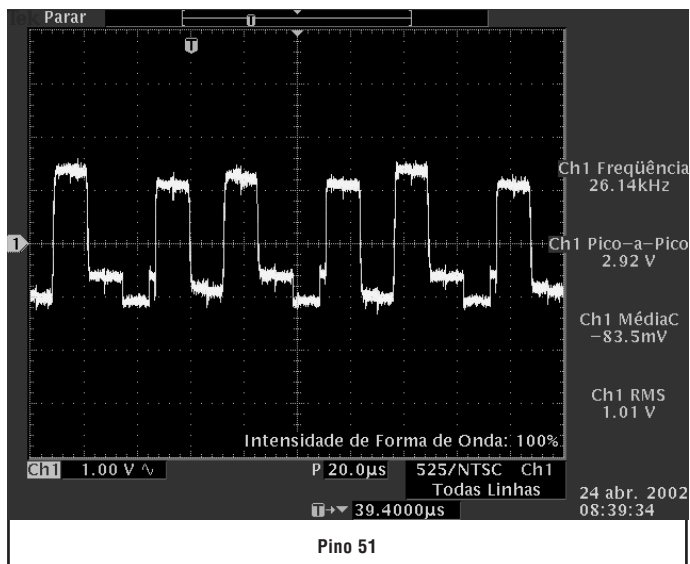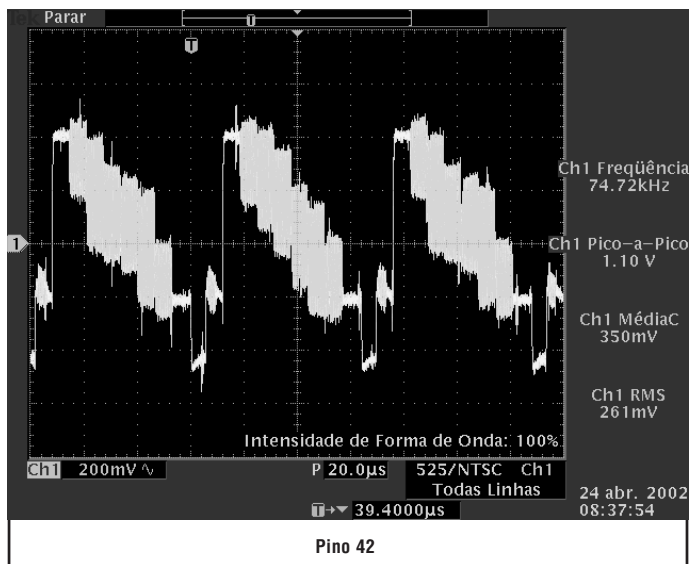


TNR001

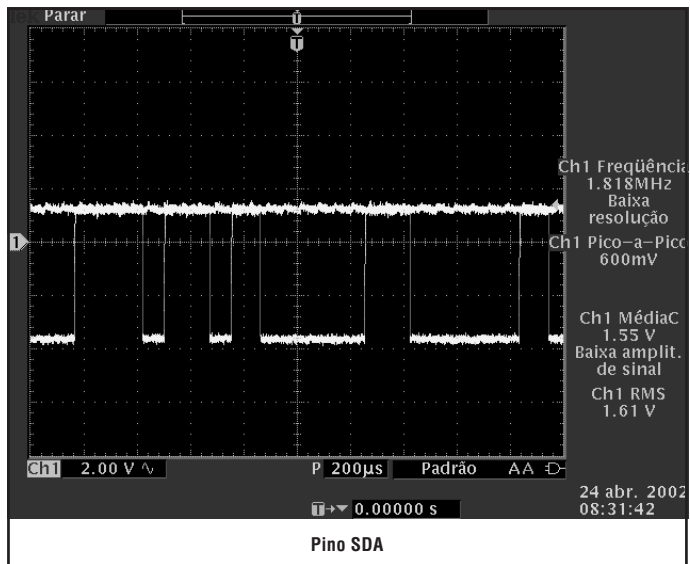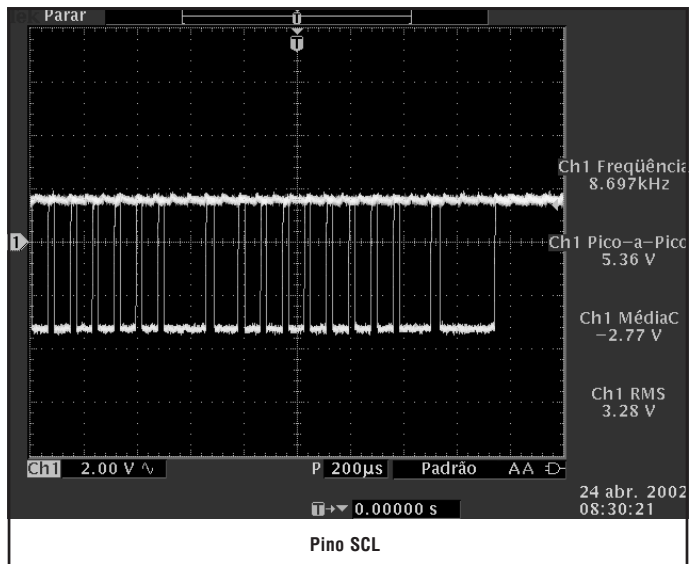


IC801

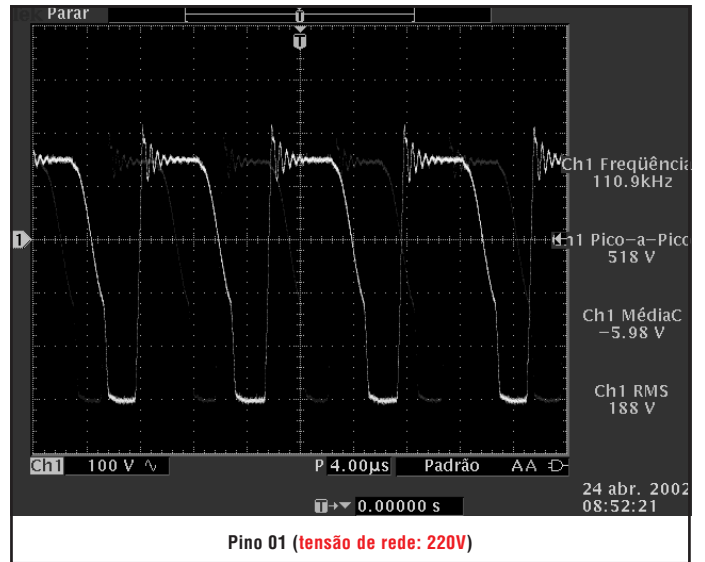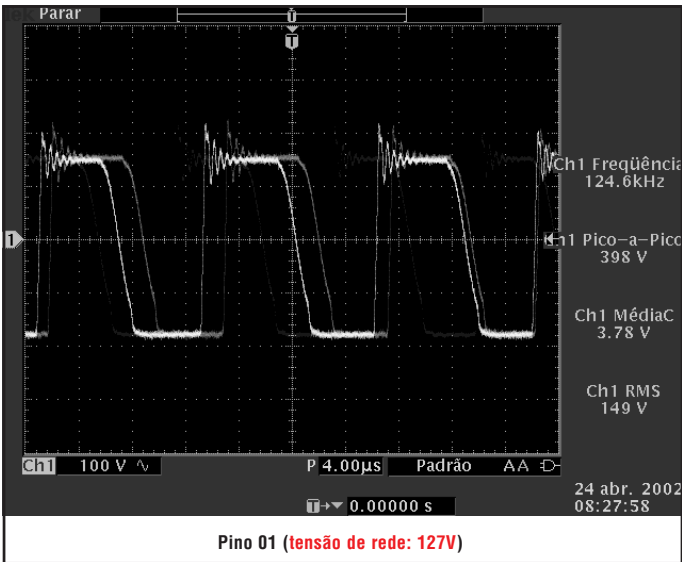


IC451

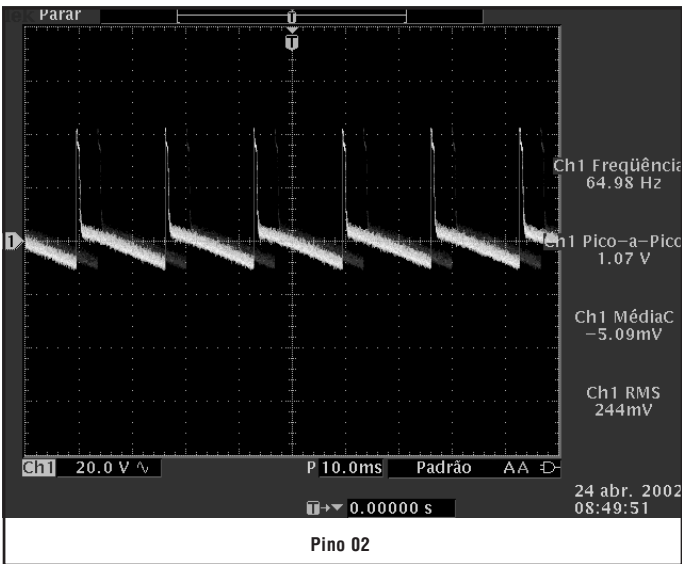


X101

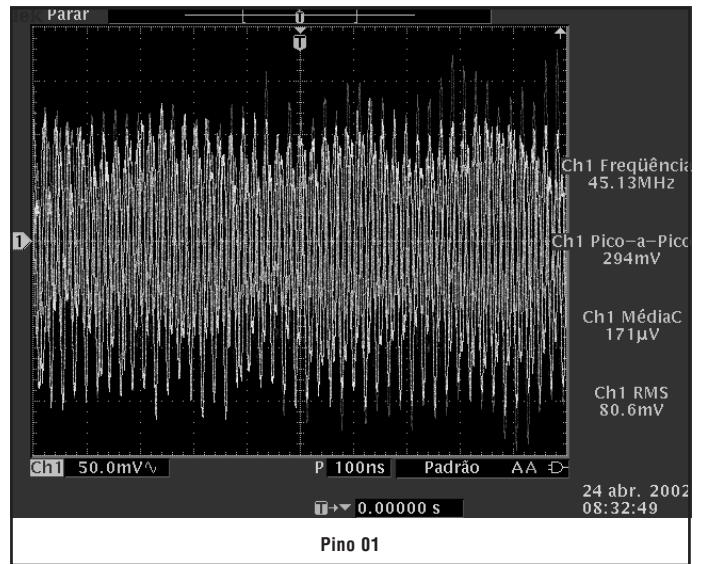


Q501

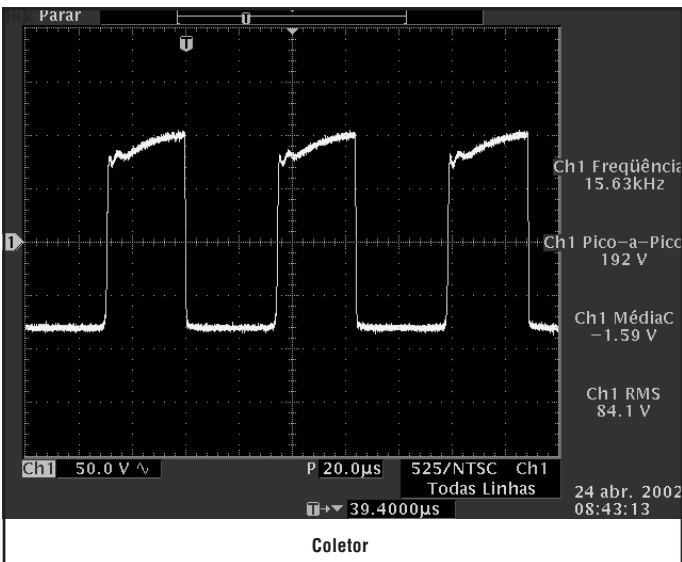


Q551

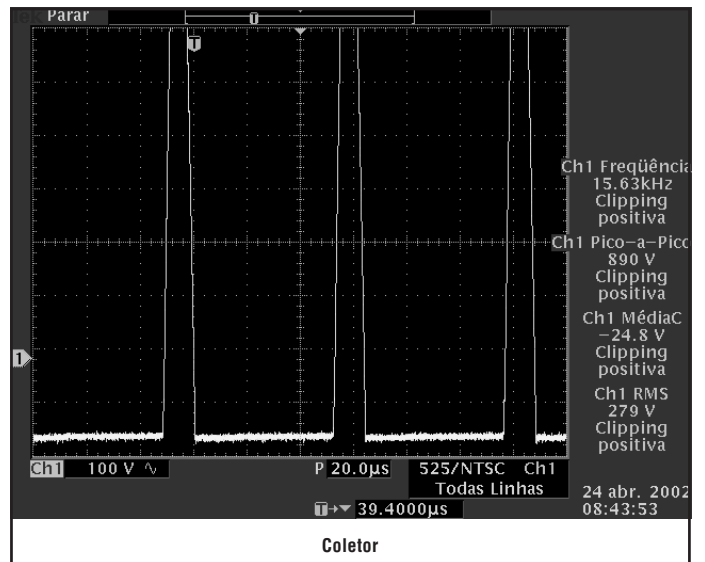

■ Parts Location

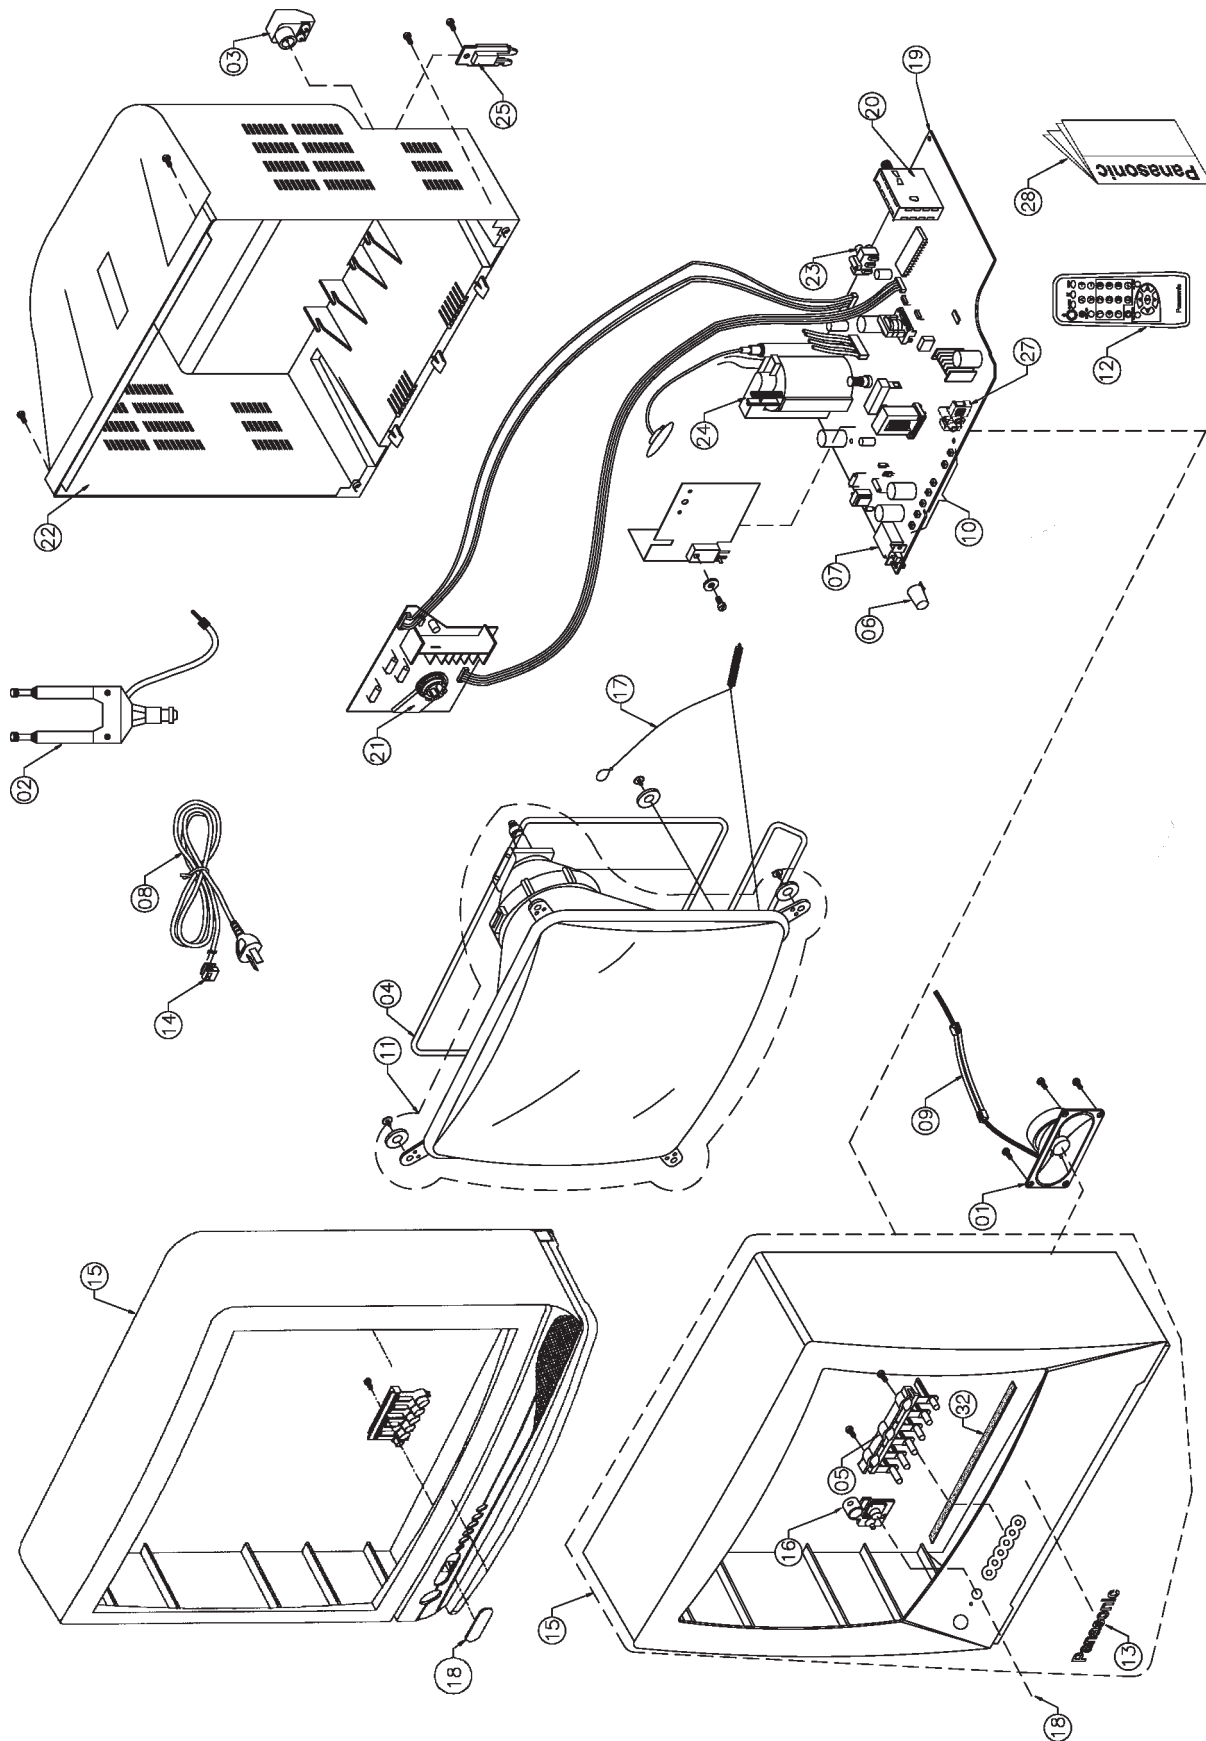

■ Packing and Accessories

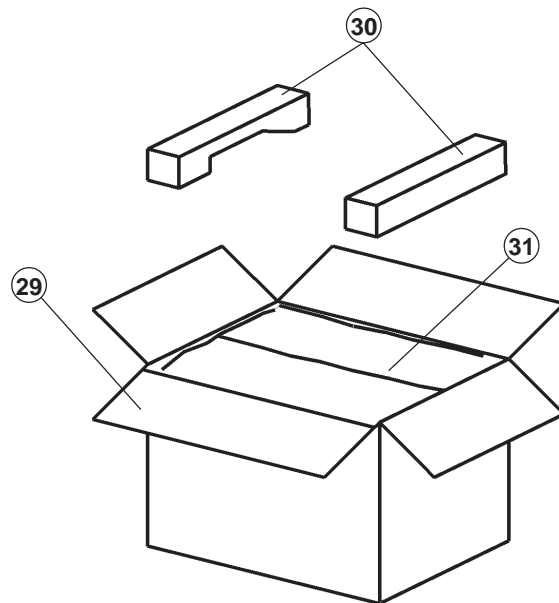

■ Replacement Mechanical Parts List

| Ref.No. | TC-20B12 | TC-14A12P | Description |
|---------|-----------------|-----------------|---------------------------|
| 01 | EASZ9D03A8 | EASZ9D03A8 | SPEAKER 16Ω, 3W |
| 02 | TSA8108-6K | TSA8108-6K | TELESCOPIC ANTENNA |
| 03 | S-U5012 | S-U5012 | 75Ω ADAPTOR |
| 04 | TLK2B20001A | TLK2B14001A | DEGAUSSING COIL |
| 05 | TBX2B864 | TBX2B861-1 | 6 POSITIONS BUTTON |
| 06 | TBX2B846-1 | TBX2B862-1 | POWER BUTTON |
| 07 | ESB92DA1B | ESB92DA1B | POWER SWITCH |
| 08 | TSX2B1421SB | TSX2B1421SB | AC CABLE |
| 09 | TXAJTA22CB20A12 | TXAJTA22CB14A12 | 2 WAY CONNECTOR (SPEAKER) |
| 10 | EVQ11G05R | EVQ11G05R | SWITCHES - S1001 ~ 1006 |
| 11 | A48EAK01X094R | A34EAK01X094R | PICTURE TUBE |
| 12 | TNQ2B2901 | TNQ2B2901 | REMOTE CONTROLLER |
| 13 | TBM4G3003 | TBM4G3008 | PANASONIC BADGE |
| 14 | TMM2B202-1 | TMM2B202-1 | AC CABLE HOLDER |
| 15 | TXFKY20B12 | TXFKY14A12P | ASSEMBLED CABINET |
| 16 | TKK2B0309 | TKK2B0307 | LED GUIDE |
| 17 | TXF3A20C7-1 | TXF3A14C7 | MALHA P/ ATERRAMENTO |
| 18 | TKP2B11191-2 | TKP2B11221 | LENS PANEL |
| 19 | TZGNPAL20B12 | TZGNPAL14A12P | ASSEMBLED PCB |
| 20 | TEDH9-301A | TEDH9-301A | TUNER |
| 21 | 330550044K2F | 330620065 | CRT SOCKET |
| 22 | TXITKU2B21403-5 | TXITKU2B22301-1 | REAR COVER |
| 23 | TJB16664 | TJB16664 | AV TERMINAL (JK3001) |
| 24 | KFT3AA428F | KFT2AA427F | FLY BACK |
| 25 | ----- 0 ----- | TKP2B11161-2 | AC CABLE HOLDER (CINZA) |
| 26 | TXPTKY2B1003-1 | TXPTKY2B1801-1 | CABINET |
| 27 | ----- 0 ----- | TJB4G605 | AV TERMINAL (JK3101) |
| 28 | TQB2B0128 | TQB2B0128 | OPERATING INSTRUCTIONS |
| 29 | TPC2B4960 | TPC2B1300 | PACKING CASE PAPER |
| 30 | TPD2B735-1 | TPD2B760 | FILLERS |
| 31 | TPE2B4016 | TPE2B4017 | POLY BAG |
| 32 | ----- 0 ----- | TMK2B720 | CUSHION |

Replacement Electrical Parts List

| Ref. No. | TC-20B12 | TC-20A12P | Description | Ref. No. | TC-20B12 | TC-20A12P | Description |
|-------------------|--------------|---------------|------------------------------------|----------|--------------|--------------|-----------------------------------|
| MAIN BOARD | | | | | | | |
| | TZGNPAL20B12 | TZGNPAL14A12P | ASSEMBLED PCB | | | | |
| CAPACITORS | | | | | | | |
| C001 | ECEA1CKA220B | ECEA1CKA220B | CAP. ELETROL. 22 µF 16,0 V | C627 | ECJ2YB1H473K | ECJ2YB1H473K | CAP. CER. SMD 47 nF 50,0 V |
| C002 | ECJ2VF1H104Z | ECJ2VF1H104Z | CAP. CER. SMD 100 nF 50,0 V | C628 | ECJ2YB1H473K | ECJ2YB1H473K | CAP. CER. SMD 47 nF 50,0 V |
| C005 | ECJ2VF1H104Z | ECJ2VF1H104Z | CAP. CER. SMD 100 nF 50,0 V | C629 | ECJ2YB1H104K | ECJ2YB1H104K | CAP. CER. SMD 100 nF 50,0 V |
| C006 | ECA1AM331B | ECA1AM331B | CAP. ELETROL. 330 µF 10,0 V | C631 | ECJ2VB1H222K | ECJ2VB1H222K | CAP. CER. SMD 2.200 PF 50,0 V |
| C008 | ECEA1HKA010B | ECEA1HKA010B | CAP. ELETROL. 1 µF 50,0 V | C633 | ECJ2VF1C105Z | ECJ2VF1C105Z | CAP. CER. SMD 1 µF 16,0 V |
| C117 | ECJ2VB1H103J | ECJ2VB1H103J | CAP. CER. SMD 10 nF 50,0 V | C634 | ECJ2VF1C105Z | ECJ2VF1C105Z | CAP. CER. SMD 1 µF 16,0 V |
| C354 | ECJ2VC1H330J | ECJ2VC1H330J | CAP. CER. SMD 33 PF 50,0 V | C635 | ECJ2VF1H104Z | ECJ2VF1H104Z | CAP. CER. SMD 100 nF 50,0 V |
| C355 | ECJ2VC1H330J | ECJ2VC1H330J | CAP. CER. SMD 33 PF 50,0 V | C636 | ECEA1CKA101B | ECEA1CKA101B | CAP. ELETROL. 100 µF 16,0 V |
| C356 | ECJ2VC1H330J | ECJ2VC1H330J | CAP. CER. SMD 33 PF 50,0 V | C639 | ECA1HM220B | ECA1HM220B | CAP. ELETROL. 22 µF 50,0 V |
| C359 | ECQM4104KZB | ECQM4104KZB | CAP. POLIÉSTER 100 nF 400,0 V | C641 | ECJ2VC1H100C | ECJ2VC1H100C | CAP. CER. SMD 10 PF 50,0 V |
| C368 | ECJ2VC1H561J | ECJ2VC1H561J | CAP. CER. SMD 560 PF 50,0 V | C653 | ECEA1CKA100B | ECEA1CKA100B | CAP. ELETROL. 10 µF 16,0 V |
| C370 | ECKW3D102KBP | ECKW3D102KBP | CAP. CER. 1 nF 2.000,0 V | C660 | ECQV1H105JM3 | ECQV1H105JM3 | CAP. POLIÉSTER 1 µF 50,0 V |
| C371 | ECEA1CN100UB | ECEA1CN100UB | CAP. ELETROL. BIPOLAR 10 µF 16,0 V | C801 | ECKCNA331MB7 | ECKCNA331MB7 | CAP. CER. 330 PF 4.000,0 V |
| C373 | ECA2EM100B | ECA2EM100B | CAP. ELETROL. 10 µF 250,0 V | C802 | ECKCNA152ME7 | ECKCNA152ME7 | CAP. CER. 1,50 nF 4.000,0 V |
| C377 | ECA1CM221B | ECA1CM221B | CAP. ELETROL. 220 µF 16,0 V | C803 | ECKWAE472ZE | ECKWAE472ZE | CAP. CER. 4,70 nF 250VAC |
| C401 | ECJ2VC1H222J | ECJ2VC1H222J | CAP. CER. SMD 2.200 PF 50,0 V | C805 | ECQU2A224BN9 | ECQU2A224BN9 | CAP. POLYPROPYLENE 220 nF 100,0 V |
| C402 | ECA1VM222E | ECA1VM222E | CAP. ELETROL. 2.200 µF 35,0 V | C806 | ECKWAE472ZE | ECKWAE472ZE | CAP. CER. 4,70 nF 250VAC |
| C403 | ECA1HM220B | ECA1HM220B | CAP. ELETROL. 22 µF 50,0 V | C807 | ECKWAE472ZE | ECKWAE472ZE | CAP. CER. 4,70 nF 250VAC |
| C406 | ECA1HM101B | ECA1HM101B | CAP. ELETROL. 100 µF 50,0 V | C808 | ECQB1H681JM3 | ECQB1H681JM3 | CAP. POLIÉSTER 680 PF 50,0 V |
| C408 | ECQV1H274JM3 | ECQV1H274JM3 | CAP. POLIÉSTER 270 nF 50,0 V | C809 | ECKWAE472ZE | ECKWAE472ZE | CAP. CER. 4,70 nF 250VAC |
| C409 | ECA1HM330B | ECA1HM330B | CAP. ELETROL. 33 µF 50,0 V | C811 | F2A1V330A085 | F2A1V330A085 | CAP. ELETROL. 33 µF 35,0 V |
| C502 | ECKR2H821KB5 | ECKR2H821KB5 | CAP. CER. 820 PF 500,0 V | C813 | ECKCNA332ME7 | ECKCNA332ME7 | CAP. CER. 3,30 nF 4.000,0 V |
| C504 | ECJ2VB1H681K | ECJ2VB1H681K | CAP. CER. SMD 680 PF 50,0 V | C814 | ECKR1H471KB5 | ECKR1H471KB5 | CAP. CER. 470 PF 50,0 V |
| C506 | ECCR2H100D5 | ECCR2H100D5 | CAP. CER. 10 PF 100,0 V | C815 | ECQB1H392JM3 | ECQB1H392JM3 | CAP. POLIÉSTER 3,90 nF 50,0 V |
| C511 | ECA1VM101B | ECA1VM101B | CAP. ELETROL. 100 µF 35,0 V | C817 | ECQU2A224BN9 | ECQU2A224BN9 | CAP. POLYPROPYLENE 220 nF 100,0 V |
| C519 | ECA160V33UE | ECA160V33UE | CAP. ELETROL. 33 µF 160,0 V | C818 | ECKCNA331MB7 | ECKCNA331MB7 | CAP. CER. 330 PF 4.000,0 V |
| C520 | ECA0JM221B | ECA0JM221B | CAP. ELETROL. 220 µF 6,3 V | C820 | ECKW3D122KBP | ECKW3D122KBP | CAP. CER. 1,20 nF 2.000,0 V |
| C552 | ECA2EM100B | ECA2EM100B | CAP. ELETROL. 10 µF 250,0 V | C821 | ECKD3A472KBP | ECKD3A472KBP | CAP. CER. 4,70 nF 1.000,0 V |
| C555 | ECKR2H471KB5 | ECKR2H471KB5 | CAP. CER. 470 PF 500,0 V | C824 | F2B2G221A012 | F2B2G221A012 | CAP. ELETROL. 220 µF 400,0 V |
| C558 | ECA2CMR47B | ECA2CMR47B | CAP. ELETROL. 0,47 µF 160,0 V | C831 | ECKR3A271KBP | ECKR3A271KBP | CAP. CER. 270 PF 1.000,0 V |
| C559 | ECWH16822JVB | ECWH16822JVB | CAP. POLYPROPYLENE 8,20 nF 1.600 V | C832 | F2A1C471A116 | F2A1C471A116 | CAP. ELETROL. 470 µF 16,0 V |
| C560 | ---- o ---- | ECQM4273JZW | CAP. POLIÉSTER 27 nF 400,0 V | C840 | ECJ2YB1C474K | ECJ2YB1C474K | CAP. CER. SMD 470 nF 16,0 V |
| C560 | ECQM4333JZ | ---- o ---- | CAP. POLIÉSTER 33 nF 400,0 V | C841 | ECJ2YB1A824K | ECJ2YB1A824K | CAP. CER. SMD 820 nF 10,0 V |
| C561 | ECKW3D821JBN | ---- o ---- | CAP. CER. 820 PF 2.000,0 V | C851 | ECJ2VF1C105Z | ECJ2VF1C105Z | CAP. CER. SMD 1 µF 16,0 V |
| C561 | ---- o ---- | ECKD3D221JBP | CAP. CER. 220 PF 2.000,0 V | C853 | ECKR2H151KB5 | ECKR2H151KB5 | CAP. CER. 150 PF 500,0 V |
| C562 | ECKW3D471JBN | ---- o ---- | CAP. CER. 470 PF 2.000,0 V | C855 | ECJ2VF1C105Z | ECJ2VF1C105Z | CAP. CER. SMD 1 µF 16,0 V |
| C562 | ---- o ---- | ECKW3D681JBN | CAP. CER. 680 PF 2.000,0 V | C856 | ECKR2H151KB5 | ECKR2H151KB5 | CAP. CER. 150 PF 500,0 V |
| C563 | ECWF2394JSR | ---- o ---- | CAP. POLYPROPYLENE 390 nF 250,0 V | C857 | ECA1CM471B | ECA1CM471B | CAP. ELETROL. 470 µF 16,0 V |
| C563 | ---- o ---- | ECWF2224JBB | CAP. POLYPROPYLENE 220 nF 250,0 V | C859 | F2A1V681A096 | F2A1V681A096 | CAP. ELETROL. 680 µF 35,0 V |
| C565 | ECQP1H183JZ3 | ---- o ---- | CAP. POLYPROPYLENE 18 nF 50,0 V | C861 | ECA1VM102E | ECA1VM102E | CAP. ELETROL. 1.000 µF 35,0 V |
| C565 | ---- o ---- | ECQP1H223JZ3 | CAP. POLYPROPYLENE 22 nF 50,0 V | C861 | ECA1VM102B | ECA1VM102B | CAP. ELETROL. 1.000 µF 35,0 V |
| C570 | ECJ2VC1H560J | ---- o ---- | CAP. CER. SMD 56 PF 50,0 V | C862 | ECEA1VKA100B | ECEA1VKA100B | CAP. ELETROL. 10 µF 35,0 V |
| C570 | ---- o ---- | ECJ2VC1H470J | CAP. CER. SMD 47 PF 50,0 V | C863 | ECKR2H271KB5 | ECKR2H271KB5 | CAP. CER. 270 PF 500,0 V |
| C601 | ECEA1CKA101B | ECEA1CKA101B | CAP. ELETROL. 100 µF 16,0 V | C865 | F2A2C680A021 | F2A2C680A021 | CAP. ELETROL. 68 µF 160,0 V |
| C602 | ECJ2YB1H104K | ECJ2YB1H104K | CAP. CER. SMD 100 nF 50,0 V | C866 | ECKW3D221JBP | ECKW3D221JBP | CAP. CER. 220 PF 2.000,0 V |
| C603 | ECJ2VB1H472K | ECJ2VB1H472K | CAP. CER. SMD 470 PF 50,0 V | C971 | ECJ2VF1H103Z | ECJ2VF1H103Z | CAP. CER. SMD 10 nF 50,0 V |
| C604 | ECQV1H224JM3 | ECQV1H224JM3 | CAP. POLIÉSTER 220 nF 50,0 V | C1101 | ECJ2VF1H104Z | ECJ2VF1H104Z | CAP. CER. SMD 100 nF 50,0 V |
| C605 | ECQV1H224JM3 | ECQV1H224JM3 | CAP. POLIÉSTER 220 nF 50,0 V | C1103 | ECJ2VC1H331J | ECJ2VC1H331J | CAP. CER. SMD 330 PF 50,0 V |
| C606 | ECJ2VC1H222J | ECJ2VC1H222J | CAP. CER. SMD 2.200 PF 50,0 V | C1104 | ECA1CM101B | ECA1CM101B | CAP. ELETROL. 100 µF 16,0 V |
| C607 | ECEA1HKA010B | ECEA1HKA010B | CAP. ELETROL. 1 µF 50,0 V | C1105 | ECJ2VF1H104Z | ECJ2VF1H104Z | CAP. CER. SMD 100 nF 50,0 V |
| C608 | ECEA1HKA2R2B | ECEA1HKA2R2B | CAP. ELETROL. 2,20 µF 50,0 V | C1106 | ECJ2VF1H104Z | ECJ2VF1H104Z | CAP. CER. SMD 100 nF 50,0 V |
| C609 | ECJ2YB1H104K | ECJ2YB1H104K | CAP. CER. SMD 100 nF 50,0 V | C1120 | ECA1HM4R7B | ECA1HM4R7B | CAP. ELETROL. 4,70 µF 50,0 V |
| C610 | ECJ2VB1H103J | ECJ2VB1H103J | CAP. CER. SMD 10 nF 50,0 V | C1130 | ECJ2VC1H560J | ECJ2VC1H560J | CAP. CER. SMD 56 PF 50,0 V |
| C611 | ECEA1HKAR22B | ECEA1HKAR22B | CAP. ELETROL. 0,22 µF 50,0 V | C1131 | ECA0JM221B | ECA0JM221B | CAP. ELETROL. 220 µF 6,3 V |
| C612 | ECJ2VB1H472K | ECJ2VB1H472K | CAP. CER. SMD 4.700 PF 50,0 V | C1132 | ECJ2VC1H560J | ECJ2VC1H560J | CAP. CER. SMD 56 PF 50,0 V |
| C613 | ECJ2VB1H472K | ECJ2VB1H472K | CAP. CER. SMD 4.700 PF 50,0 V | C1203 | ECJ2VF1H104Z | ECJ2VF1H104Z | CAP. CER. SMD 100 nF 50,0 V |
| C614 | ECQV1H104JM3 | ECQV1H104JM3 | CAP. POLIÉSTER 100 nF 50,0 V | C1204 | ECEA1CKA101B | ECEA1CKA101B | CAP. ELETROL. 100 µF 16,0 V |
| C615 | ECQV1H224JM3 | ECQV1H224JM3 | CAP. POLIÉSTER 220 nF 50,0 V | C1205 | ECA1CM101B | ECA1CM101B | CAP. ELETROL. 100 µF 16,0 V |
| C616 | ECJ2VB1H392K | ECJ2VB1H392K | CAP. CER. SMD 3.900 PF 50,0 V | C2301 | ECJ2VB1H103K | ECJ2VB1H103K | CAP. CER. SMD 10 nF 50,0 V |
| C617 | ECEA1CKA100B | ECEA1CKA100B | CAP. ELETROL. 10 µF 16,0 V | C2302 | ECA1CM100B | ECA1CM100B | CAP. ELETROL. 10 µF 16,0 V |
| C618 | ECKR1H681KB5 | ECKR1H681KB5 | CAP. CER. 680 PF 50,0 V | C2305 | ECA1CM100B | ECA1CM100B | CAP. ELETROL. 10 µF 16,0 V |
| C620 | ECJ2VC1H470J | ECJ2VC1H470J | CAP. CER. SMD 47 PF 50,0 V | C2306 | ECA1CM470B | ECA1CM470B | CAP. ELETROL. 47 µF 16,0 V |
| C621 | ECJ2VB1H471K | ECJ2VB1H471K | CAP. CER. SMD 470 PF 50,0 V | C2307 | ECA1VM102E | ECA1VM102E | CAP. ELETROL. 1.000 µF 35,0 V |
| C622 | ECJ2VF1H104Z | ECJ2VF1H104Z | CAP. CER. SMD 100 nF 50,0 V | C2307 | ECA1VM102B | ECA1VM102B | CAP. ELETROL. 1.000 µF 35,0 V |
| C623 | ECJ2VC1H270J | ECJ2VC1H270J | CAP. CER. SMD 27 PF 50,0 V | C2308 | ECJ2VF1H103Z | ECJ2VF1H103Z | CAP. CER. SMD 10 nF 50,0 V |
| C624 | ECEA1CKA100B | ECEA1CKA100B | CAP. ELETROL. 10 µF 16,0 V | C2309 | ECA1EM471B | ECA1EM471B | CAP. ELETROL. 470 µF 25,0 V |
| C625 | ECA0JM221B | ECA0JM221B | CAP. ELETROL. 220 µF 6,3 V | C2310 | ECQV1H224JM3 | ECQV1H224JM3 | CAP. POLIÉSTER 220 nF 50,0 V |
| | | | | C2311 | ECQV1H224JM3 | ECQV1H224JM3 | CAP. POLIÉSTER 220 nF 50,0 V |
| | | | | C2312 | ECA1VM470B | ECA1VM470B | CAP. ELETROL. 47 µF 35,0 V |
| | | | | C2313 | ECA1HM3R3B | ECA1HM3R3B | CAP. ELETROL. 3,30 µF 50,0 V |

| Ref. No. | TC-20B12 | TC-20A12P | Description |
|----------------------------|-----------------|-----------------|---------------------------------|
| C2380 | ECA1CM101B | ECA1CM101B | CAP. ELETROL. 100 µF 16,0 V |
| C3111 | ECJ2VC1H561K | ECJ2VC1H561K | CAP. CER. SMD 560 PF 50,0 V |
| C3113 | ECJ2VC1H561K | ECJ2VC1H561K | CAP. CER. SMD 560 PF 50,0 V |
| C3116 | ECJ2VB1H103J | | CAP. CER. SMD 10 nF 50,0 V |
| C3117 | ECJ2VB1H103J | | CAP. CER. SMD 10 nF 50,0 V |
| DIODES | | | |
| D002 | MTZJT-7716A | MTZJT-7716A | DIODO ZENER 16,0 V 1/2 W 5,0 mA |
| D003 | MTZJT-7716A | MTZJT-7716A | DIODO ZENER 16,0 V 1/2 W 5,0 mA |
| D004 | MTZJT-7730D | MTZJT-7730D | DIODO ZENER 30,0 V 0,5 W 5,0 mA |
| D005 | MTZJT-7730D | MTZJT-7730D | DIODO ZENER 30,0 V 0,5 W 5,0 mA |
| D354 | MA152KTX | MA152KTX | DIODO CHAVEAMENTO SMD |
| D355 | MA152KTX | MA152KTX | DIODO CHAVEAMENTO SMD |
| D356 | MA152KTX | MA152KTX | DIODO CHAVEAMENTO SMD |
| D360 | ERA2204V3 | ERA2204V3 | DIODO CHAVEAMENTO |
| D361 | ERA2204V3 | ERA2204V3 | DIODO CHAVEAMENTO |
| D362 | ERA2204V3 | ERA2204V3 | DIODO CHAVEAMENTO |
| D363 | MA152KTX | MA152KTX | DIODO CHAVEAMENTO SMD |
| D365 | MTZJT-7710C | MTZJT-7710C | DIODO ZENER 9,9 V 0,5 W 5,0 mA |
| D375 | MA152KTX | MA152KTX | DIODO CHAVEAMENTO SMD |
| D402 | D1NF60V70 | D1NF60V70 | DIODO RETIFICADOR |
| D403 | MTZJT-7733B | MTZJT-7733B | DIODO ZENER 33,0 V 1/2 W 5,0 mA |
| D511 | MA4108JTA | MA4108JTA | DIODO ZENER 10,8 V 0,37 W |
| D512 | MA171TA5 | MA171TA5 | DIODO CHAVEAMENTO |
| D520 | MA152KTX | MA152KTX | DIODO CHAVEAMENTO SMD |
| D551 | MA3047HTX | MA3047HTX | DIODO ZENER SMD 4,7 V 1/10 W |
| D552 | D1NF60V70 | D1NF60V70 | DIODO RETIFICADOR |
| D555 | MA152KTX | MA152KTX | DIODO CHAVEAMENTO SMD |
| D556 | ERB06-15V1 | ERB06-15V1 | DIODO RETIFICADOR |
| D557 | RU2AMV1 | RU2AMV1 | DIODO CHAVEAMENTO |
| D558 | MA185TA5 | MA185TA5 | DIODO CHAVEAMENTO |
| D603 | MA152KTX | MA152KTX | DIODO CHAVEAMENTO SMD |
| D606 | MA152KTX | MA152KTX | DIODO CHAVEAMENTO SMD |
| D630 | MA3056HTX | MA3056HTX | DIODO ZENER SMD 5,8 V 1/10 W |
| D660 | MA152WKTX | MA152WKTX | DIODO CHAVEAMENTO SMD |
| D801 | TAP2B0001 | TAP2B0001 | POSISTOR 7 Ω |
| D802 | D4SB80 | D4SB80 | DIODO RETIFICADOR |
| D804 | AG01ZV0 | AG01ZV0 | DIODO RETIFICADOR |
| D805 | AG01ZV0 | AG01ZV0 | DIODO RETIFICADOR |
| D806 | ERZV10V621CS | ERZV10V621CS | VARISTOR |
| D807 | TLP721FD4GR-BR | TLP721FD4GR-BR | PHOTO ACOPLADOR |
| D808 | MTZJT-7712B | MTZJT-7712B | DIODO ZENER 12,0 V 1/2 W |
| D811 | AM01AV1 | AM01AV1 | DIODO RETIFICADOR |
| D814 | MA182TA5 | MA182TA5 | DIODO CHAVEAMENTO |
| D816 | AG01ZV0 | AG01ZV0 | DIODO RETIFICADOR |
| D820 | ERA22-10G1 | ERA22-10G1 | DIODO CHAVEAMENTO |
| D824 | MA4068MTA | MA4068MTA | DIODO ZENER 6,8 V 1/4 W |
| D831 | RU4AMLF-M1 | RU4AMLF-M1 | DIODO CHAVEAMENTO |
| D837 | S3L60P1520 | S3L60P1520 | DIODO CHAVEAMENTO |
| D855 | AG01ZV0 | AG01ZV0 | DIODO RETIFICADOR |
| D856 | RN1ZLF-A1 | RN1ZLF-A1 | DIODO CHAVEAMENTO |
| D862 | MTZJT-7710A | MTZJT-7710A | DIODO ZENER 9,6 V 1/2 W 5,0 mA |
| D865 | MTZJT-7724B | MTZJT-7724B | DIODO ZENER 24,0 V 1/2 W 5,0 mA |
| D1101 | MA152KTX | MA152KTX | DIODO CHAVEAMENTO SMD |
| D1102 | MTZJT-775.6A | MTZJT-775.6A | DIODO ZENER 5,4 V 1/2 W 5,0 mA |
| D1104 | EL333ID/S928 | EL333ID/S928 | DIODO LED |
| D1104 | TMW2B210 | TMW2B210 | SUPORTE DO LED |
| D1105 | MTZJT-777.5C | MTZJT-777.5C | DIODO ZENER 7,5 V 1/2 W |
| D1130 | MTZJT-775.6C | MTZJT-775.6C | DIODO ZENER 5,7 V 0,5 W |
| D1131 | MTZJT-775.6C | MTZJT-775.6C | DIODO ZENER 5,7 V 0,5 W |
| D1204 | MTZJT-775.6B | MTZJT-775.6B | DIODO ZENER 5,6 V 0,5 W 5,0 mA |
| D2320 | MA152KTX | MA152KTX | DIODO CHAVEAMENTO SMD |
| D2380 | MA152KTX | MA152KTX | DIODO CHAVEAMENTO SMD |
| D2381 | MA152KTX | MA152KTX | DIODO CHAVEAMENTO SMD |
| FUSE | | | |
| F801 | XBA2C40TRO | XBA2C40TRO | FUSIVEL 4A 250V |
| INTEGRATED CIRCUITS | | | |
| IC351 | TDA6107Q/N2 | TDA6107Q/N2 | CIRCUITO INTEGRADO |
| IC451 | AN5539 | AN5539 | CIRCUITO INTEGRADO |
| IC601 | TDA9381PS/N2/3H | TDA9381PS/N2/3H | MICROCONTROLLER |
| IC801 | STRW6654LF02 | STRW6654LF02 | CI REGULADOR DE TENSÃO |
| IC802 | SE140N | SE140N | CI DETECTOR DE VOLTAGEM=10V |
| IC851 | AN7805LB | AN7805LB | IC REGULADOR DE VOLTAGEM 4 V |

| Ref. No. | TC-20B12 | TC-20A12P | Description |
|--------------------|--------------|--------------|-----------------------------------|
| IC852 | AN78M08LB | AN78M08LB | IC - REGULADOR DE VOLTAGEM |
| IC1103 | BR24C08F-E2 | BR24C08F-E2 | CI SMD MEMORIA EEPROM 8K |
| IC1104 | GP1U282Q | GP1U282Q | CI RECEPTOR CTRL REMOTO |
| IC1201 | PQ1R33 | PQ1R33 | CIRCUITO INTEGRADO SMD REG.3V |
| IC1202 | AN7805LB | AN7805LB | IC REGULADOR DE VOLTAGEM 4 V |
| IC2301 | LA4289N | LA4289N | CIRCUITO INTEGRADO SAÍDA DE AUDIO |
| JUMPERS | | | |
| JA2 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA3 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA4 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA5 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA7 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA8 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA9 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA10 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA11 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA12 | ERJ3GEY0R00V | ----- | RES. METALIC FILM SMD 0 Ω |
| JA14 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA15 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA16 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA17 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA18 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA20 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA25 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA27 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA30 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA31 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA32 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JA33 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS002 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS2302 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS2310 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS3012 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS3130 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS3132 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS3136 | ----- | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS3137 | ----- | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS551 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS554 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS557 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS558 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS601 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS628 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS629 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS630 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS678 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS680 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS850 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| JS871 | ERJ3GEY0R00V | ERJ3GEY0R00V | RES. METALIC FILM SMD 0 Ω |
| COILS | | | |
| L001 | TALV35VB100K | TALV35VB100K | BOBINA DE PICO 10 µH |
| L181 | TALV35VB6R8K | TALV35VB6R8K | BOBINA DE PICO 6,80 µH |
| L352 | EXCELSA24T | EXCELSA24T | FERRITE Z=20 Ω(100MHZ) |
| L501 | ELH5L4115 | ----- | BOBINA LINEARIDADE |
| L501 | ELH5LZ43Z | ----- | BOBINA DE LINEARIDADE 50,50 µH |
| L550 | TSKA125 | TSKA125 | BEAD CORE SMD |
| L560 | EXCELD3R35V | EXCELD3R35V | BOBINA DE PICO Z=80 Ω(100MHZ) |
| L619 | TSK1045 | TSK1045 | BEAD CORE SMD |
| L620 | TSK1045 | TSK1045 | BEAD CORE SMD |
| L621 | EXCELSA39V | EXCELSA39V | FERRITE Z=80 Ω(100MHZ) |
| L801 | ELF21V012A | ELF21V012A | FILTRO DE LINHA |
| L820 | EXCELD3R35C | EXCELD3R35C | BOBINA DE PICO Z= 80 Ω(100 MHZ) |
| L852 | TALL08N101KA | TALL08N101KA | BOBINA DE PICO 100 µH |
| L856 | TALV35VB1R5K | TALV35VB1R5K | BOBINA DE PICO 1,50 µH |
| L857 | TALV35VB1R5K | TALV35VB1R5K | BOBINA DE PICO 1,50 µH |
| L1101 | TALV35VB331K | TALV35VB331K | BOBINA DE PICO 330 µH |
| TRANSISTORS | | | |
| Q369 | 2SA1235A-T12 | 2SA1235A-T12 | TRANSISTOR SMD |
| Q401 | 2SA1235A-T12 | 2SA1235A-T12 | TRANSISTOR SMD |
| Q445 | 2SC3326ATX | 2SC3326ATX | TRANSISTOR SMD NPN 0,1 W |
| Q446 | 2SC3052-T12 | 2SC3052-T12 | TRANSISTOR SMD NPN 0,1 W |
| Q447 | 2SC3052-T12 | 2SC3052-T12 | TRANSISTOR SMD NPN 0,1 W |

| Ref. No. | TC-20B12 | TC-20A12P | Description |
|------------------|--------------|--------------|--------------------------------------|
| Q501 | 2SC4212HLB | 2SC4212HLB | TRANSISTOR DE POTÊNCIA NPN |
| Q520 | 2SB792ATX | 2SB792ATX | TRANSISTOR SMD PNP 0,2 W |
| Q551 | 2SD2539LB306 | 2SD2539LB306 | TRANSISTOR DE POTENCIA |
| Q601 | 2SA1235A-T12 | 2SA1235A-T12 | TRANSISTOR SMD |
| Q602 | 2SC3052-T12 | 2SC3052-T12 | TRANSISTOR SMD NPN 0,1 W |
| Q603 | 2SA1235A-T12 | 2SA1235A-T12 | TRANSISTOR SMD |
| Q605 | 2SC3052-T12 | 2SC3052-T12 | TRANSISTOR SMD NPN 0,1 W |
| Q606 | 2SC3052-T12 | 2SC3052-T12 | TRANSISTOR SMD NPN 0,1 W |
| Q852 | 2SC3052-T12 | 2SC3052-T12 | TRANSISTOR SMD NPN 0,1 W |
| Q857 | 2SC3052-T12 | 2SC3052-T12 | TRANSISTOR SMD NPN 0,1 W |
| Q1101 | 2SC3052-T12 | 2SC3052-T12 | TRANSISTOR SMD NPN 0,1 W |
| Q2320 | 2SA1235A-T12 | 2SA1235A-T12 | TRANSISTOR SMD |
| Q2380 | 2SC3052-T12 | 2SC3052-T12 | TRANSISTOR SMD NPN 0,1 W |
| Q2381 | 2SA1235A-T12 | 2SA1235A-T12 | TRANSISTOR SMD |
| RESISTORS | | | |
| R003 | ERJ3GEYJ100V | ERJ3GEYJ100V | RES. METALIC FILM SMD 10 Ω 1/10 W |
| R004 | ERG3FJ822H | ERG3FJ822H | RES. METALIC FILM 8,20 kΩ |
| R006 | ERJ3GEYJ273V | ERJ3GEYJ273V | RES. METALIC FILM SMD 27 kΩ 1/10 W |
| R007 | ERJ3GEYJ472V | ERJ3GEYJ472V | RES. METALIC FILM SMD 4,70 kΩ 1/10 W |
| R008 | ERJ3GEYJ681V | ERJ3GEYJ681V | RES. METALIC FILM SMD 680 Ω 1/10 W |
| R182 | ERJ3GEYJ221V | ERJ3GEYJ221V | RES. METALIC FILM SMD 220 Ω 1/10 W |
| R351 | ERJ3EKF1001V | ERJ3EKF1001V | RES. METALIC FILM SMD 1 kΩ 1/16 W |
| R352 | ERJ3EKF1001V | ERJ3EKF1001V | RES. METALIC FILM SMD 1 kΩ 1/16 W |
| R353 | ERJ3EKF1001V | ERJ3EKF1001V | RES. METALIC FILM SMD 1 kΩ 1/16 W |
| R354 | ERJ3EKF7870V | ERJ3EKF7870V | RES. METALIC FILM SMD 787 Ω 1/16 W |
| R355 | ERJ3EKF7870V | ERJ3EKF7870V | RES. METALIC FILM SMD 787 Ω 1/16 W |
| R356 | ERJ3EKF7870V | ERJ3EKF7870V | RES. METALIC FILM SMD 787 Ω 1/16 W |
| R363 | ERC12GK222V | ERC12GK222V | RES. CARBONO 2,20 kΩ 1/2 W |
| R364 | ERC12GK222V | ERC12GK222V | RES. CARBONO 2,20 kΩ 1/2 W |
| R365 | ERC12GK222V | ERC12GK222V | RES. CARBONO 2,20 kΩ 1/2 W |
| R369 | ERJ3GEYJ103V | ERJ3GEYJ103V | RES. METALIC FILM SMD 10 kΩ 1/10 W |
| R374 | ERQ12AJ181P | ERQ12AJ181P | FUSISTOR 180 Ω 1/2 W |
| R401 | ERDS2TJ1R5T | ---- o ---- | RES. CARBONO 1,50 Ω 1/4 W |
| R401 | ---- o ---- | ERDS2TJ1R8T | RES. CARBONO 1,80 Ω 1/4 W |
| R402 | ERJ3GEYJ103V | ERJ3GEYJ103V | RES. METALIC FILM SMD 10 kΩ 1/10 W |
| R403 | ERJ3GEYJ182V | ---- o ---- | RES. METALIC FILM SMD 1,80 kΩ 1/10 W |
| R403 | ---- o ---- | ERJ3GEYJ332V | RES. METALIC FILM SMD 3,30 kΩ 1/10 W |
| R404 | ERJ3EKF2701V | ERJ3EKF2701V | RES. METALIC FILM SMD 2,70 kΩ 1/16 W |
| R405 | ERJ3GEYJ222V | ---- o ---- | RES. METALIC FILM SMD 2,20 kΩ 1/10 W |
| R405 | ---- o ---- | ERJ3GEYJ272V | RES. METALIC FILM SMD 2,70 kΩ 1/10 W |
| R406 | ERJ3GEYJ1R0V | ERJ3GEYJ1R0V | RES. METALIC FILM SMD 1 Ω 1/10 W |
| R407 | ERDS1TJ331T | ---- o ---- | RES. CARBONO 330 Ω 0,5 1/2 W |
| R407 | ---- o ---- | ERDS1TJ221T | RES. CARBONO 220 Ω 1/2 W |
| R408 | ERJ3GEYOR00V | ERJ3GEYOR00V | RES. METALIC FILM SMD 0 Ω |
| R409 | ERJ3GEYJ823V | ERJ3GEYJ823V | RES. METALIC FILM SMD 82 kΩ 1/10 W |
| R411 | ERJ3GEYJ182V | ---- o ---- | RES. METALIC FILM SMD 1,80 kΩ 1/10 W |
| R411 | ---- o ---- | ERJ3GEYJ472V | RES. METALIC FILM SMD 4,70 kΩ 1/10 W |
| R412 | ERJ3GEYJ332V | ---- o ---- | RES. METALIC FILM SMD 3,30 kΩ 1/10 W |
| R412 | ---- o ---- | ERJ3GEYJ562V | RES. METALIC FILM SMD 5,60 kΩ 1/10 W |
| R415 | ERJ3GEYJ431V | ---- o ---- | RES. METALIC FILM SMD 430 Ω 1/10 W |
| R415 | ---- o ---- | ERJ3GEYJ621V | RES. METALIC FILM SMD 620 Ω 1/10 W |
| R416 | ERDS1TJ1R0T | ERDS1TJ1R0T | RES. CARBONO 1 Ω 1/2 W |
| R417 | ERDS1TJ1R0T | ---- o ---- | RES. CARBONO 1 Ω 1/2 W |
| R420 | ERDS2TJ562T | ERDS2TJ562T | RES. CARBONO 5,60 kΩ 1/4 W |
| R443 | ERDS1TJ152T | ---- o ---- | RES. CARBONO 1,50 kΩ 1/2 W |
| R443 | ---- o ---- | ERDS1TJ132T | RES. CARBONO 1,30 kΩ 1/2 W |
| R444 | ERG1SJ182E | ERG1SJ182E | RES. METALIC FILM 1,80 kΩ |
| R445 | ERJ3GEYJ473V | ERJ3GEYJ473V | RES. METALIC FILM SMD 47 kΩ 1/10 W |
| R446 | ERJ3GEYJ473V | ERJ3GEYJ473V | RES. METALIC FILM SMD 47 kΩ 1/10 W |
| R447 | ERJ3GEYJ472V | ERJ3GEYJ472V | RES. METALIC FILM SMD 4,70 kΩ 1/10 W |
| R448 | ERJ3GEYJ242V | ERJ3GEYJ242V | RES. METALIC FILM SMD 2,40 Ω 1/10 W |
| R449 | ERJ3GEYJ152V | ERJ3GEYJ152V | RES. METALIC FILM SMD 1,50 kΩ 1/10 W |
| R502 | ERJ3GEYJ182V | ERJ3GEYJ182V | RES. METALIC FILM SMD 1,80 kΩ 1/10 W |
| R503 | ERJ3GEYOR00V | ERJ3GEYOR00V | RES. METALIC FILM SMD 0 Ω |
| R504 | ERG2SJ682E | ERG2SJ682E | RES. METALIC FILM 6,80 kΩ |
| R507 | ERJ3GEYJ101V | ERJ3GEYJ101V | RES. METALIC FILM SMD 100 Ω 1/10 W |
| R508 | ERG3FJ102H | ---- o ---- | RES. METALIC FILM 1 kΩ 3 W |
| R508 | ---- o ---- | ERG3FJ182H | RES. METALIC FILM 1,80 kΩ 3 W |
| R509 | ---- o ---- | ERG3FJ182H | RES. METALIC FILM 1,80 kΩ 3 W |
| R509 | ERG3FJ122H | ---- o ---- | RES. METALIC FILM 1,20 kΩ 3 W |
| R511 | ERJ6ENF1801V | ---- o ---- | RES. METALIC FILM SMD 1,80 kΩ 1/10 W |
| R511 | ---- o ---- | ERJ6ENF1201V | RES. METALIC FILM SMD 1,20 kΩ 1/10 W |

| Ref. No. | TC-20B12 | TC-20A12P | Description |
|----------|--------------|--------------|--------------------------------------|
| R512 | ERJ6ENF1911V | ---- o ---- | RES. METALIC FILM SMD 1,91 kΩ 1/10 W |
| R512 | ---- o ---- | ERJ6ENF1101V | RES. METALIC FILM SMD 1,10 kΩ 1/10 W |
| R513 | ERQ14AJ100P | ERQ14AJ100P | FUSISTOR 10 Ω 1/4 W |
| R520 | ERX12SJ3R0E | ---- o ---- | RES. METALIC FILM 3 Ω 1/2 W |
| R520 | ---- o ---- | ERX12SJ3R3E | RES. METALIC FILM 3,30 Ω 1/2 W |
| R521 | ERX12SJ3R0E | ---- o ---- | RES. METALIC FILM 3 Ω 1/2 W |
| R521 | ---- o ---- | ERX12SJ3R3E | RES. METALIC FILM 3,30 Ω 1/2 W |
| R522 | ERJ3GEYJ123V | ERJ3GEYJ123V | RES. METALIC FILM SMD 12 kΩ 1/10 W |
| R523 | ERJ3GEYJ103V | ERJ3GEYJ103V | RES. METALIC FILM SMD 10 kΩ 1/10 W |
| R524 | ERJ3GEYJ104V | ERJ3GEYJ104V | RES. METALIC FILM SMD 100 kΩ 1/10 W |
| R525 | ERJ3GEYJ392V | ERJ3GEYJ392V | RES. METALIC FILM SMD 3,90 kΩ 1/10 W |
| R553 | ERJ3GEYJ223V | ERJ3GEYJ223V | RES. METALIC FILM SMD 22 kΩ 1/10 W |
| R555 | ERQ14AJ2R0E | ERQ14AJ2R0E | FUSISTOR 2 Ω 1/4 W |
| R557 | ER050PKF1473 | ---- o ---- | RES. METALIC FILM 147 kΩ 1/2 W |
| R557 | ---- o ---- | ER050PKF1743 | RES. METALIC FILM AXIAL 174 kΩ 1/2 W |
| R558 | ERDS2TJ223T | ERDS2TJ223T | RES. CARBONO 22 kΩ 1/4 W |
| R559 | ERQ1CJP2R7S | ---- o ---- | FUSISTOR 2,70 Ω 1 W |
| R559 | ---- o ---- | ERQ1CJP2R2S | FUSISTOR 2,20 Ω 1 W |
| R560 | ERG1SJ102E | ---- o ---- | RES. METALIC FILM 1 kΩ 1 W |
| R601 | ERJ3GEYJ153V | ERJ3GEYJ153V | RES. METALIC FILM SMD 15 kΩ 1/10 W |
| R602 | ERJ3EKF3001V | ERJ3EKF3001V | RES. METALIC FILM SMD 3 kΩ 1/16 W |
| R603 | ERJ3GEYJ393V | ERJ3GEYJ393V | RES. METALIC FILM SMD 39 kΩ 1/10 W |
| R604 | ERJ3GEYJ101V | ERJ3GEYJ101V | RES. METALIC FILM SMD 100 Ω 1/10 W |
| R605 | ERJ3GEYJ101V | ERJ3GEYJ101V | RES. METALIC FILM SMD 100 Ω 1/10 W |
| R606 | ERJ3GEYJ101V | ERJ3GEYJ101V | RES. METALIC FILM SMD 100 Ω 1/10 W |
| R607 | ERJ3GEYJ103V | ERJ3GEYJ103V | RES. METALIC FILM SMD 10 kΩ 1/10 W |
| R608 | ERJ3GEYJ332V | ERJ3GEYJ332V | RES. METALIC FILM SMD 3,30 kΩ 1/10 W |
| R609 | ERJ3GEYJ332V | ERJ3GEYJ332V | RES. METALIC FILM SMD 3,30 kΩ 1/10 W |
| R610 | ERJ3GEYJ103V | ERJ3GEYJ103V | RES. METALIC FILM SMD 10 kΩ 1/10 W |
| R611 | ERJ3GEYJ472V | ERJ3GEYJ472V | RES. METALIC FILM SMD 4,70 kΩ 1/10 W |
| R612 | ERJ3GEYJ102V | ERJ3GEYJ102V | RES. METALIC FILM SMD 1 kΩ 1/10 W |
| R613 | ERJ3GEYJ391V | ERJ3GEYJ391V | RES. METALIC FILM SMD 390 Ω 1/10 W |
| R614 | ERJ3GEYJ392V | ERJ3GEYJ392V | RES. METALIC FILM SMD 3,90 kΩ 1/10 W |
| R615 | ERJ3GEYJ102V | ERJ3GEYJ102V | RES. METALIC FILM SMD 1 kΩ 1/10 W |
| R616 | ERJ3GEYJ392V | ERJ3GEYJ392V | RES. METALIC FILM SMD 3,90 kΩ 1/10 W |
| R617 | ERJ6GEYJ181V | ERJ6GEYJ181V | RES. METALIC FILM SMD 180 Ω 1/8 W |
| R618 | ERJ3GEYJ184V | ERJ3GEYJ184V | RES. METALIC FILM SMD 180 kΩ 1/10 W |
| R619 | ERJ3GEYJ121V | ERJ3GEYJ121V | RES. METALIC FILM SMD 120 Ω 1/10 W |
| R620 | ERJ3GEYJ121V | ERJ3GEYJ121V | RES. METALIC FILM SMD 120 Ω 1/10 W |
| R621 | ERJ3GEYJ103V | ERJ3GEYJ103V | RES. METALIC FILM SMD 10 kΩ 1/10 W |
| R622 | ERJ3GEYJ103V | ERJ3GEYJ103V | RES. METALIC FILM SMD 10 kΩ 1/10 W |
| R623 | ERJ3GEYJ331V | ERJ3GEYJ331V | RES. METALIC FILM SMD 330 Ω 1/10 W |
| R624 | ERJ3GEYJ103V | ERJ3GEYJ103V | RES. METALIC FILM SMD 10 kΩ 1/10 W |
| R625 | ERJ3GEYJ222V | ERJ3GEYJ222V | RES. METALIC FILM SMD 2,20 kΩ 1/10 W |
| R626 | ERJ3GEYJ104V | ERJ3GEYJ104V | RES. METALIC FILM SMD 100 kΩ 1/10 W |
| R627 | ERJ3GEYJ683V | ERJ3GEYJ683V | RES. METALIC FILM SMD 68 kΩ 1/10 W |
| R628 | ERJ3GEYJ563V | ERJ3GEYJ563V | RES. METALIC FILM SMD 56 kΩ 1/10 W |
| R629 | ERJ3GEYJ154V | ERJ3GEYJ154V | RES. METALIC FILM SMD 150 kΩ 1/10 W |
| R630 | ERJ3EKF1802V | ERJ3EKF1802V | RES. METALIC FILM SMD 18 kΩ 1/16 W |
| R631 | ER050PKF5603 | ER050PKF5603 | RES. METALIC FILM 560 kΩ 1/2 W |
| R632 | ERJ3GEYJ750V | ERJ3GEYJ750V | RES. METALIC FILM SMD 75 Ω 1/10 W |
| R633 | ERJ3GEYJ470V | ERJ3GEYJ470V | RES. METALIC FILM SMD 47 Ω 1/10 W |
| R634 | ERJ3GEYJ822V | ERJ3GEYJ822V | RES. METALIC FILM SMD 8,20 kΩ 1/10 W |
| R635 | ERJ3GEYJ561V | ERJ3GEYJ561V | RES. METALIC FILM SMD 560 Ω 1/10 W |
| R636 | ERJ3GEYJ562V | ERJ3GEYJ562V | RES. METALIC FILM SMD 5,60 kΩ 1/10 W |
| R643 | ERJ3GEYJ272V | ERJ3GEYJ272V | RES. METALIC FILM SMD 2,70 kΩ 1/10 W |
| R655 | ERJ3GEYJ103V | ERJ3GEYJ103V | RES. METALIC FILM SMD 10 kΩ 1/10 W |
| R660 | ERJ3GEYJ274V | ERJ3GEYJ274V | RES. METALIC FILM SMD 270 kΩ 1/10 W |
| R661 | ERJ3GEYJ103V | ERJ3GEYJ103V | RES. METALIC FILM SMD 10 kΩ 1/10 W |
| R662 | ERJ3GEYJ333V | ERJ3GEYJ333V | RES. METALIC FILM SMD 33 kΩ 1/10 W |
| R801 | ERF5ZK2R2 | ERF5ZK2R2 | RESISTOR DE FIO CIMENTADO 2,20 Ω 5 W |
| R806 | ERJ3GEYJ222V | ERJ3GEYJ222V | RES. METALIC FILM SMD 2,20 kΩ 1/10 W |
| R807 | ERJ6GEYJ152V | ERJ6GEYJ152V | RES. METALIC FILM SMD 1,50 kΩ 1/8 W |
| R809 | ERX12SJR39E | ERX12SJR39E | RES. METALIC FILM 0,39 Ω 1/2 W |
| R811 | ERJ3GEYJ681V | ERJ3GEYJ681V | RES. METALIC FILM SMD 680 Ω 1/10 W |
| R812 | ERD75TAJ825 | ERD75TAJ825 | RES. CARBONO 8,20 MΩ 3/4 W |
| R814 | ERJ3GEYJ332V | ERJ3GEYJ332V | RES. METALIC FILM SMD 3,30 kΩ 1/10 W |
| R817 | ERG3FJ183H | ERG3FJ183H | RES. METALIC FILM 18 kΩ 3 W |
| R819 | ERDS1TJ220T | ERDS1TJ220T | RES. CARBONO 22 Ω 1/2 W |
| R821 | ERG2SJS333H | ERG2SJS333H | RES. METALIC FILM 33 kΩ 2W |
| R824 | ERDS1TJ624T | ERDS1TJ624T | RES. CARBONO 620 kΩ 1/2 W |
| R825 | ERJ3GEYJ473V | ERJ3GEYJ473V | RES. METALIC FILM SMD 47 kΩ 1/10 W |

| Ref. No. | TC-20B12 | TC-20A12P | Description |
|---------------------|--------------|--------------|--------------------------------------|
| R832 | ERDS1TJ152T | ERDS1TJ152T | RES. CARBONO 1,50 kΩ 1/2 W |
| R835 | ERX12SJR39E | ERX12SJR39E | RES. METALIC FILM 0,39 Ω 1/2 W |
| R850 | ERQ12HKR68P | ERQ12HKR68P | FUSISTOR 0,68 Ω 1/2 W |
| R856 | ERQ12HJ1R5P | ERQ12HJ1R5P | FUSISTOR 1,50 Ω 1/2 W |
| R857 | ERQ12HKR82P | ERQ12HKR82P | FUSISTOR 0,82 Ω 1/2 W |
| R864 | ERJ3GEYJ103V | ERJ3GEYJ103V | RES. METALIC FILM SMD 10 kΩ 1/10 W |
| R866 | ERJ3GEYJ472V | ERJ3GEYJ472V | RES. METALIC FILM SMD 4,70 kΩ 1/10 W |
| R868 | ERJ3GEYJ242V | ERJ3GEYJ242V | RES. METALIC FILM SMD 2,40 Ω 1/10 W |
| R870 | EROS2THF220I | EROS2THF220I | RES. CARBONO 2,20 kΩ 1/4 W |
| R871 | ERDS1TJ223T | ERDS1TJ223T | RES. CARBONO 22 kΩ 1/2 W |
| R1016 | ERJ3EKF1651V | ERJ3EKF1651V | RES. METALIC FILM SMD 1,65 kΩ 1/16 W |
| R1017 | ERJ3EKF2151V | ERJ3EKF2151V | RES. METALIC FILM SMD 2,15 kΩ 1/16 W |
| R1018 | ERJ3EKF3091V | ERJ3EKF3091V | RES. METALIC FILM SMD 3,09 kΩ 1/16 W |
| R1019 | ERJ3EKF4421V | ERJ3EKF4421V | RES. METALIC FILM SMD 4,42 kΩ 1/16 W |
| R1020 | ERJ3EKF7501V | ERJ3EKF7501V | RES. METALIC FILM SMD 7,50 kΩ 1/16 W |
| R1021 | ERJ3EKF1871V | ERJ3EKF1871V | RES. METALIC FILM SMD 1,87 kΩ 1/16 W |
| R1022 | ERJ3GEYJ100V | ERJ3GEYJ100V | RES. METALIC FILM SMD 10 Ω 1/10 W |
| R1101 | ERJ3GEYJ332V | ERJ3GEYJ332V | RES. METALIC FILM SMD 3,30 kΩ 1/10 W |
| R1104 | ERJ3GEYJ562V | ERJ3GEYJ562V | RES. METALIC FILM SMD 5,60 kΩ 1/10 W |
| R1105 | ERJ3GEYJ562V | ERJ3GEYJ562V | RES. METALIC FILM SMD 5,60 kΩ 1/10 W |
| R1106 | ERJ3GEYJ102V | ERJ3GEYJ102V | RES. METALIC FILM SMD 1 kΩ 1/10 W |
| R1108 | ERJ3GEYJ101V | ERJ3GEYJ101V | RES. METALIC FILM SMD 100 Ω 1/10 W |
| R1109 | ERJ3GEYJ101V | ERJ3GEYJ101V | RES. METALIC FILM SMD 100 Ω 1/10 W |
| R1117 | ERJ3GEYJ471V | ERJ3GEYJ471V | RES. METALIC FILM SMD 470 Ω 1/10 W |
| R1120 | ERJ3GEYJ432V | ERJ3GEYJ432V | RES. METALIC FILM SMD 4,30 kΩ 1/10 W |
| R1122 | ERJ3GEYJ332V | ERJ3GEYJ332V | RES. METALIC FILM SMD 3,30 kΩ 1/10 W |
| R1124 | ERJ3GEYOR00V | ERJ3GEYOR00V | RES. METALIC FILM SMD 0 Ω |
| R1125 | ERDS2TJ560T | ERDS2TJ560T | RES. CARBONO 56 Ω 1/4 W |
| R1130 | ERJ3GEYJ101V | ERJ3GEYJ101V | RES. METALIC FILM SMD 100 Ω 1/10 W |
| R1131 | ERJ3GEYJ101V | ERJ3GEYJ101V | RES. METALIC FILM SMD 100 Ω 1/10 W |
| R1132 | ERJ3GEYJ101V | ERJ3GEYJ101V | RES. METALIC FILM SMD 100 Ω 1/10 W |
| R1140 | ERJ3EKF1002V | ERJ3EKF1002V | RES. METALIC FILM SMD 10 kΩ 1/16 W |
| R1141 | ERJ3GEYJ562V | ERJ3GEYJ562V | RES. METALIC FILM SMD 5,60 kΩ 1/10 W |
| R2022 | ERJ3GEYJ104V | ERJ3GEYJ104V | RES. METALIC FILM SMD 100 kΩ 1/10 W |
| R2301 | ERJ3GEYJ562V | ERJ3GEYJ562V | RES. METALIC FILM SMD 5,60 kΩ 1/10 W |
| R2304 | ERDS2TJ222T | ERDS2TJ222T | RES. CARBONO 2,20 kΩ 1/4 W |
| R2305 | ERQ2CJP8R2S | ERQ2CJP8R2S | FUSISTOR 8,20 Ω 2 W |
| R2310 | ERDS2TJ1R0T | ERDS2TJ1R0T | RES. CARBONO 1 Ω 1/4 W |
| R2318 | ERJ3GEYJ332V | ERJ3GEYJ332V | RES. METALIC FILM SMD 3,30 kΩ 1/10 W |
| R2319 | ERJ3GEYJ102V | ERJ3GEYJ102V | RES. METALIC FILM SMD 1 kΩ 1/10 W |
| R2320 | ERJ3GEYJ102V | ERJ3GEYJ102V | RES. METALIC FILM SMD 1 kΩ 1/10 W |
| R2321 | ERJ3GEYJ682V | ERJ3GEYJ682V | RES. METALIC FILM SMD 6,80 kΩ 1/10 W |
| R2322 | ERJ3GEYJ153V | ERJ3GEYJ153V | RES. METALIC FILM SMD 15 kΩ 1/10 W |
| R2380 | ERJ3GEYJ151V | ERJ3GEYJ151V | RES. METALIC FILM SMD 150 Ω 1/10 W |
| R2381 | ERJ3GEYJ102V | ERJ3GEYJ102V | RES. METALIC FILM SMD 1 kΩ 1/10 W |
| R2382 | ERJ3GEYJ102V | ERJ3GEYJ102V | RES. METALIC FILM SMD 1 kΩ 1/10 W |
| R2383 | ERJ3GEYJ103V | ERJ3GEYJ103V | RES. METALIC FILM SMD 10 kΩ 1/10 W |
| R2419 | ERDS2TJ680T | ERDS2TJ680T | RES. CARBONO 68 Ω 1/4 W |
| R3132 | ERJ3GEYJ221V | | RES. METALIC FILM SMD 220 Ω 1/10 W |
| R3133 | ERJ3GEYJ221V | | RES. METALIC FILM SMD 220 Ω 1/10 W |
| SWITCHES | | | |
| S1001 | EVQ11G05R | EVQ11G05R | CHAVE DE TOQUE |
| S1002 | EVQ11G05R | EVQ11G05R | CHAVE DE TOQUE |
| S1003 | EVQ11G05R | EVQ11G05R | CHAVE DE TOQUE |
| S1004 | EVQ11G05R | EVQ11G05R | CHAVE DE TOQUE |
| S1005 | EVQ11G05R | EVQ11G05R | CHAVE DE TOQUE |
| S1006 | EVQ11G05R | EVQ11G05R | CHAVE DE TOQUE |
| S801 | ESB92DA1B | ESB92DA1B | CHAVE INTERRUPTORA |
| TRANSFORMERS | | | |
| T552 | KFT3AA428F | | FLY BACK |
| T552 | | KFT2AA427F | FLY BACK |
| T553 | ETH19Y70AY | ETH19Y70AY | TRANSFORMADOR DRIVER |
| T801 | TLP4GA020D | TLP4GA020D | TRANSFORMADOR CHOPER |
| TUNER | | | |
| TNR001 | TEDH9-301A | TEDH9-301A | SELETOR DE CANAIS |
| CRISTALS | | | |
| X101 | M1971M | M1971M | FILTRO SAW 45,75 MHZ |
| X180 | EFCT4R5MW5 | EFCT4R5MW5 | FILTRO TRAP CER. 4,50 MHZ |
| X601 | TSSA010 | TSSA010 | CRISTAL PIEZOELETRICO 12.000 MHZ |

| Ref. No. | TC-20B12 | TC-20A12P | Description |
|---------------|----------------|----------------|----------------------|
| OTHERS | | | |
| A22 | BJP11V02-AP | BJP11V02-AP | PORTA TERMINAL MACHO |
| A5-L5 | TXAJTA5CB14A12 | TXAJTA5CB14A12 | CONECTOR 3 VIAS |
| A8-L8 | TXAJTA8CB20A12 | TXAJTA8CB14A12 | CONECTOR 6 VIAS |
| F801-L | TP00351-51 | TP00351-51 | SUPORTE DE FUSÍVEL |
| F801-R | TP00351-51 | TP00351-51 | SUPORTE DE FUSÍVEL |
| JK3001 | TJB16664 | TJB16664 | AV TERMINAL |
| JK3101 | TJB4G605 | ----- 0 ----- | AV TERMINAL |
| JK351 | 330550044K2F | ----- 0 ----- | SOCKET (CRT 20") |
| JK351 | ----- 0 ----- | 330620065 | SOCKET (CRT 14") |

Panasonic do Brasil Ltda.

CS GROUP - TECHNICAL SUPPORT