

GPSlim236B

Wireless GPS Receiver



User's Guide

HOLUX Technology Inc.

1F, No. 30, R&D Rd. II, HsinChu City 300, Science-based Industrial Park, Taiwan

TEL: 03-6687000 FAX: 03-6687111

Website: www.holux.com

Rev.: A

All Right Reserved



Declaration of Conformity

The following products is herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the laws of the Member States relating to R&TTE Directive (1999/5/EC) that include the Electromagnetic Compatibility Directive (89/336/EEC) and Low Voltage Directive (73/23/EEC). The listed standard as below were applied:

The following Equipment:

Product : Bluetooth GPS Receiver
Trade name : **HOLUX**
Model Number : GPSlim236

This product is herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the laws of the Member States relating to R&TTE Directive (1999/5/EC) that include the Electromagnetic Compatibility Directive (89/336/EEC) and Low Voltage Directive (73/23/EEC), the following standards were applied:

1999/5/EC:

ETSI EN 300 328 :
ETSI EN 301 489-17 :
ETSI EN 301 489-1 :
:

73/23/EEC:

EN 60950-1 :
:

The following importer/manufacturer is responsible for this declaration:

Company Name : **HOLUX Technology, Inc**
Company Address : **1F, No.30, R&D Rd. II, Hsinchu City 300, Taiwan (R.O.C.)**
Telephone : **886-3-6687000** Facsimile : **886-3-6687111**

Person is responsible for marking this declaration:

Wen Cheng Chung
Name (Full Name)
June-08-2006
Date

President
Position/ Title
Wencheng
Legal Signature

Table of Contents

TABLE OF CONTENTS	2
1. OVERVIEW	3
2. PACKING LIST	4
3. MAIN FUNCTIONS	5
4. TECHNICAL SPECIFICATION	6
4.1. BASIC SPECIFICATION	6
4.2. ACQUISITION TIME (AVERAGED).....	6
4.3. RECEIVER ACCURACY	6
4.4. USE LIMITATION	6
4.5. POWER SUPPLY	6
4.6. OUTPUT AND INTERFACE	7
4.7. PHYSICAL	7
4.8. OTHER FUNCTIONS.....	7
5. GETTING STARTED.....	8
5.1. HARDWARE DESCRIPTION	9
5.2. SOFTWARE INSTALLATION.....	12
5.3. INSTALLATION OF TESTING PROGRAM	13
6. OPTIONAL ACCESSORIES.....	15
7. DRIVER INSTALLATION	16
7.1 SYSTEM REQUIREMENT.....	16
7.2 INSTALLATION.....	16
7.3 IMPORTANT	16
8. WARRANTY	16
9. TROUBLE SHOOTING.....	17

1. Overview



(Fig.1)

The **HOLUX GPSlim^{236B} Wireless GPS Receiver** (Fig. 1) is a total solution GPS receiver with Bluetooth, UART interface and built-in rechargeable battery for high sensitivity to tracking signal. **GPSlim^{236B}** design is based on SiRF Star III low power Architecture.

GPSlim^{236B} is a dual-function GPS receiver. Not only transmit satellite information through the PDA or Notebook with Bluetooth interfaces but also is a G-Mouse GPS receiver through a data cable to deliver satellite signal to the device without Bluetooth interface.

This positioning application meets strict needs such as car navigation, mapping, surveying, security, agriculture and so on. Only clear view of sky and certain power supply are necessary to the unit. **GPSlim^{236B}** contacts to other device through Bluetooth device, compatible interface of RS-232 or USB, and built-in recharge battery to save satellite information such as the status of satellite signal, the last location, date and time of last use.

With low power consumption, the **GPSlim^{236B}** tracks up to 20 satellites at a time, re-acquires satellite signals in 100 ms and updates position data every second. Trickle-Power allows the unit operates a fraction of the time and Push-to-Fix permits user to have a quick position fix even though the receiver usually stays off.

2. Packing List

Congratulations on your purchase of the **GPSlim236B** Wireless GPS Receiver. We hope it will be useful to you for a long time. Before you begin, make sure that your package includes the following items. If any of these items are missing, please contact your local HOLUX dealer or distributor.

- HOLUX **GPSlim236B** Wireless GPS receiver 1 Set
- Travel power supply / Cigarette adapter 1 Set
- Manual and Driver CD 1 Piece
- **GPSlim236B** Quick guide 1 Piece
- Warranty card 1 Piece

3. Main functions

GPSlim236B provides a series of functions. It is well suited to system integration and users who use PDA, Notebook PC with Bluetooth device.

- Built in SiRF Star III Low power consumption chipset.
- 20 parallel satellite-tracking channels for fast acquisition and reacquisition.
- High speed signal acquisition using 200,000 time/frequency search channels.
- Built-in WAAS/EGNOS Demodulator without additional any hardware. Or use the high-sensitive software to get the fast acquisition and reacquisition in the urban, canyon and foliage environments.
- Compatible with Bluetooth Serial Port Profile (SPP) completely.
- Low power consumption. Built-in rechargeable and changeable Lithium-ion battery without external power supply, and the working time lasts at least 10 hours.
- Provide Continue mode and Power saving mode for user's requirement.
- Provide expand terminal contact to other system without Bluetooth device.
- Built-in rechargeable battery for memory and RTC backup and for fast Time To First Fix (TTFF).
- Support NMEA0183 v2.2 data protocol and SiRF binary code.
- 4 colors LED to show the status of device.
- Active antenna connector for getting better satellites signal.
- FLASH based program memory. New software revisions upgradeable through serial interface.
- Small, sleek, and lightweight design easily fits in your hand.
- Over-Temperature protection
- Enhanced algorithms -SnapLock and SnapStart provide superior navigation, performance in urban, canyon and foliage environments.
- For Car navigation, Marine navigation, Fleet management, AVL, Personal navigation, Tracking System, and Mapping device application.

4. Technical Specification

4.1. Basic Specification

- Chipset : SiRF Star III chipset.
- Channels : 20 parallel satellite-tracking channels.
- Frequency : 1575.42 MHZ.
- Receiver : L1, C/A code.

4.2. Acquisition Time (averaged)

- Reacquisition : 0.1sec.
- Cold start : < 42 seconds.
- Warm start : < 38 seconds .
- Hot start : < 1 seconds

4.3. Receiver Accuracy

- Normal : 5-25 meters CEP without SA.
- Enable EGNOS or WAAS :
 - Position: < 2.2 meters, horizontal 95% of time
 - < 5 meters, Vertical 95% of time
- Velocity : within 0.1 meters / second
- Time : 1 microsecond synchronized GPS time

4.4. Use Limitation

- Altitude : < 18,000 meters (60,000 feet)
- Velocity: : < 736 meters/ second (1000Knots)
- Acceleration : 4 G.
- Jerk : 20 meters / second, max

4.5. Power Supply

- External Voltage: 5VDC +/- 10%
- Batteries :
 - Main Power: Built-in rechargeable Lithium-ion for system power.
 - Backup Power: Rechargeable Lithium-ion battery for memory & RTC backup.
- Working voltage: 75-85mA (Normal mode).
 - 30mA (Power Saving).
- Working period (In Battery full power status):
 - > 10 hours on Continue mode.
 - > 16 hours on Power Saving mode.
- Protection circuit on **GPSlim236B** should stop charging the cell when over-temperature condition --50℃ occurs.

4.6. Output and Interface

● Output

I. Output protocol

Baud Rate : 38400 bps

Data bit : 8

Parity : No

Stop bit : 1

II. Format. NMEA0183 V2.2 : GPGGA (1time/1 sec), GPGSA (1 time/5 sec.), GPGSV (1time /5 sec.), GPRMC (1time /1 sec.), GPVTG (1 time/1 sec), (GLL, or SiRF binary format for optional).

III. Datum : WGS84.

● Input/ Output Interface:

I. Compatible Bluetooth Serial Port Profile (SPP), Version1.1 and class 2(up to 10 meter range).

II. In/Out Port. GPS signal (Out)/Command(In) with CMOS/TTL Level ◦ Mini USB Type B Connector and Cable option :

(a) GR230-A1(RS232 data cable)

(b) GR230-A2 (USB data cable)

(c) GR230-A3 (Mini USB port to PS2 port).

● External Antenna interface:

3.0V input MMCX type active antenna connector

4.7. Physical

● Size : 41 × 63 × 17.1 mm

● Weight : < 56 g

● Operating Temperature : -10℃ to + 60℃(under the un-charging condition);
Charging Temperature 0℃to + 45℃

● Storage Temperature : -20℃ to + 85℃

● Operating humidity : 5% to 95% No condensing

4.8. Other Functions

● Bluetooth frequency: 2.4 ~2.48GHZ

● Bluetooth Input Sensitivity: -80dbm

● Low sensitivity of receiving satellite signal : -189 dBW

● External antenna interface: MMCX

● LED Functions : Indicate Bluetooth status, GPS status, Battery Status and
Battery charging status

5. Getting Started

STEP 1. Charge Battery

Please charge battery till LED off for the first time.

Power cable plug in Power cable connect to power socket




Charge Battery

Battery indicator light:

Power too low ----- red LED

Charging ----- green LED


Full or Not in charging -- LED off

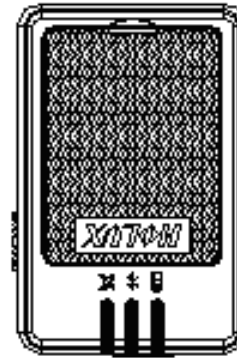

Mini USB power

STEP 2. Turn on Power


Bluetooth Status -

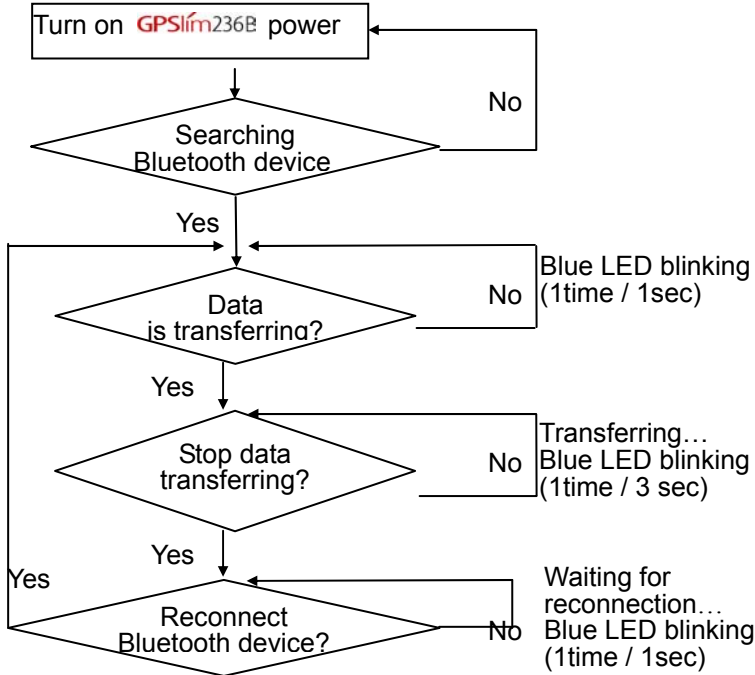

Note:
Some PDAs have to re-open Bluetooth manager for Bluetooth device re-connection.

GPS Status ---

Put **GPSlim236B** in clear view of the sky without any obstruction for better satellite acquiring.

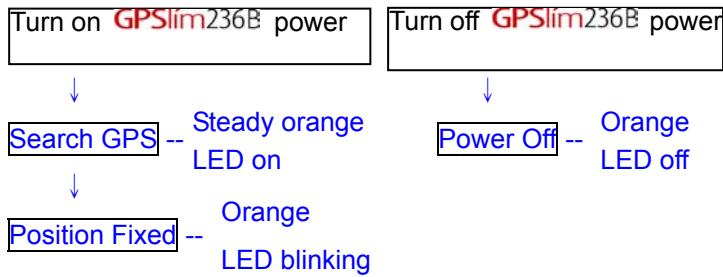




5.1. Hardware Description

1). **GPSlim236B** Body description see Fig. 2:



(Fig.2)


2). LED status :

SYMBOL	COLOR	STATUS		DESCRIPTION
 Bluetooth	Blue	Blinking	1 times / 1 sec	Search Bluetooth Device
			1 time / 1 sec	Standby Mode
			1 time / 3 sec	Transferring Data
 Battery	Red	Light on		Power too low
	Green	Light on		In charging
	N/A	Light off		Battery full or Not in charging
 GPS	Orange	Light on		Acquiring Satellites
		Blinking		Position Fixed

3). Power Switch :

- a. Power on, Orange light is on.
- b. Power off, Orange light is off.


- 4). External active antenna connector, see Fig.3
 Connector type: MMCX.
 Active power voltage: 3.0V

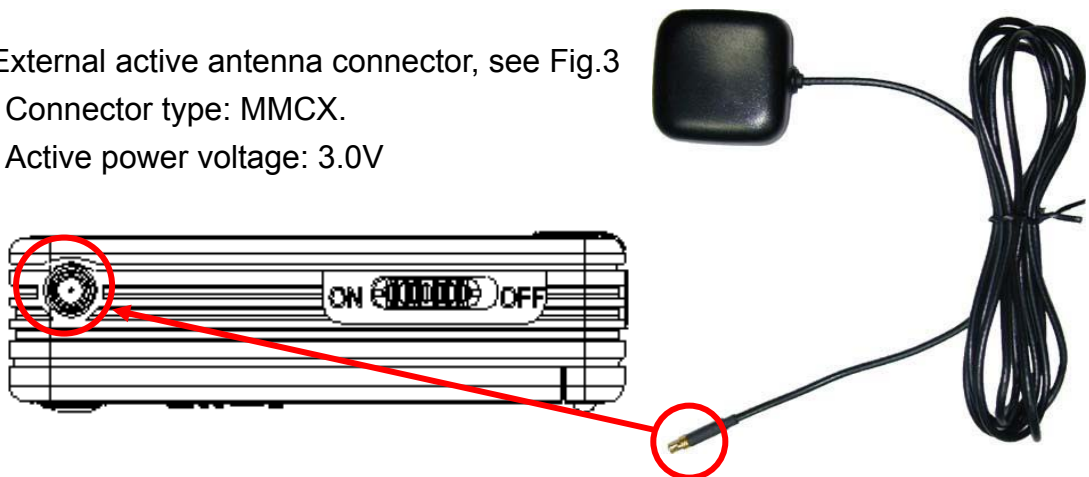

(Fig.3)

5). Power Jack & Data Port, see Fig.4

- Jack type: Mating face of 5 pin Mini USB Type B female.
- Pin definition see table 1.

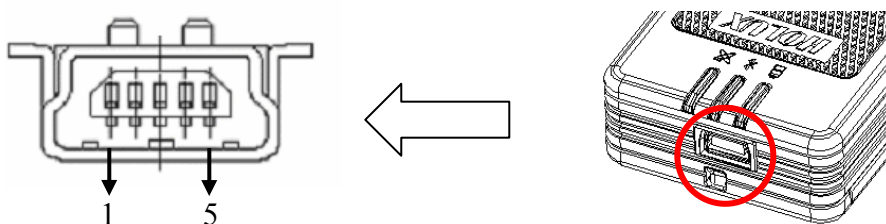


(Fig.4)

Table 1

Pin	Pin Name	Signal and description
1	GND	Signal ground, Battery charging ground.
2	VOOUT	Unregulated voltage out: 3.6 V max 100mA.
3	TXD	Transmit Data. From organizer to peripheral.(Voltage Level is 3.3V ~ 5.0V).
4	RXD	Receive Data. Form peripheral to organizer.(Voltage level is 3.3V ~ 5.0V).
5	VCHARG	Positive terminal of DC adaptor that powers the internal charging circuit of Li-Ion battery. The approved power supply is 5.0V +/- 5%@1A.

6). Optional accessories, and connector description, see Fig. 5.

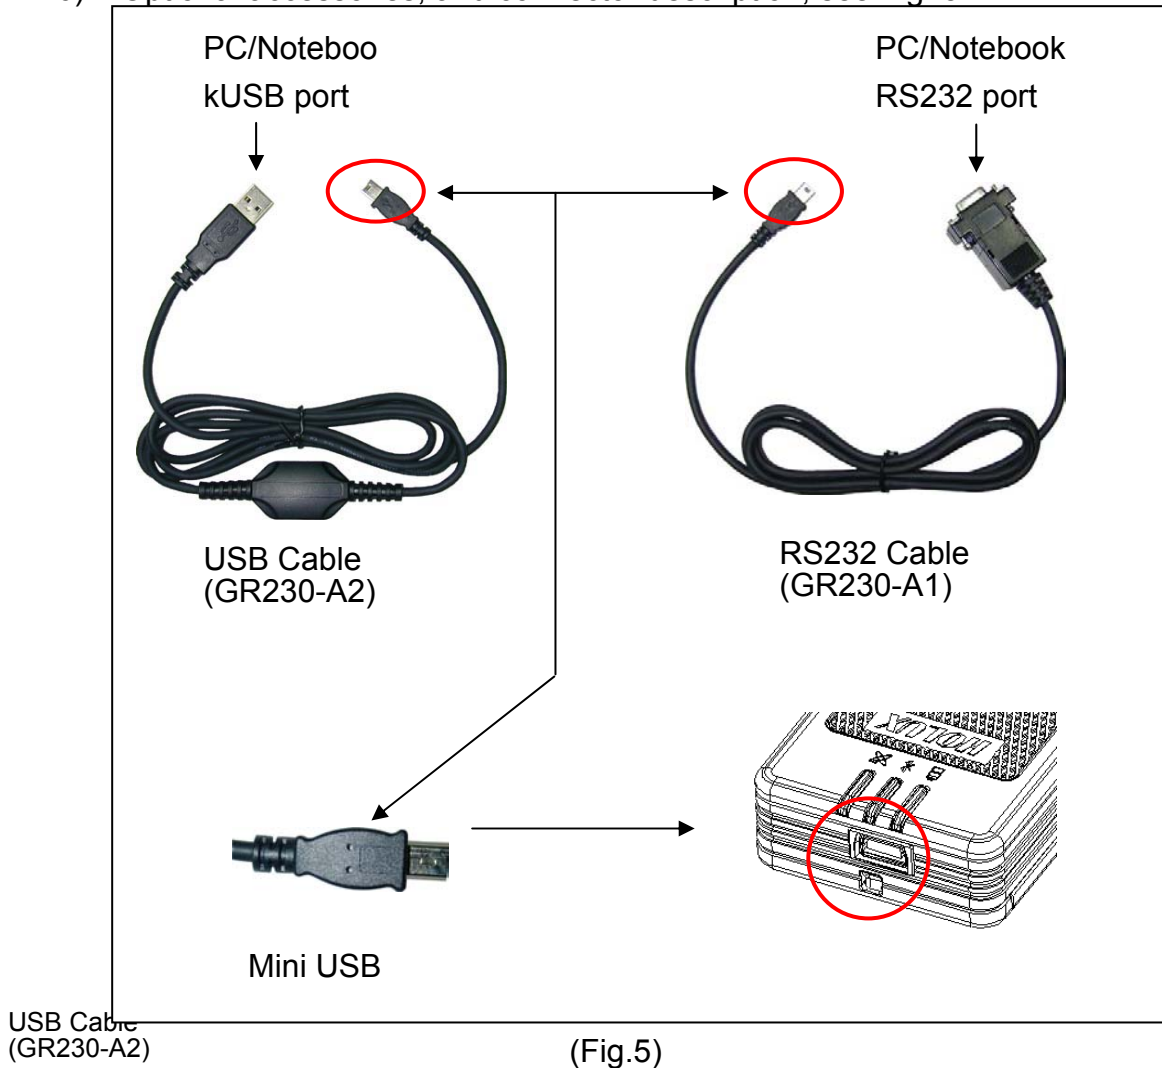


5.2. Software Installation


The following is the steps of software installation to setup on PDA, DELL AXIM with Bluetooth Manager. For other PDA, the steps may be a little different.

(Bluetooth Manger is one of popular program used for Bluetooth device)



1. Open “Bluetooth Manager” on pocket pc.

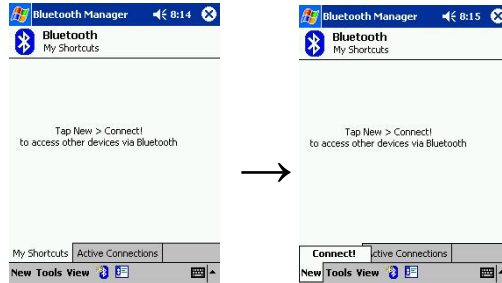



2. Search Bluetooth device “HOLUX GPSlim236B”

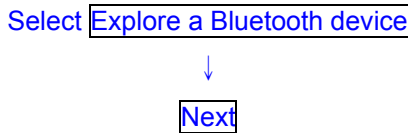



3. Find the Bluetooth device

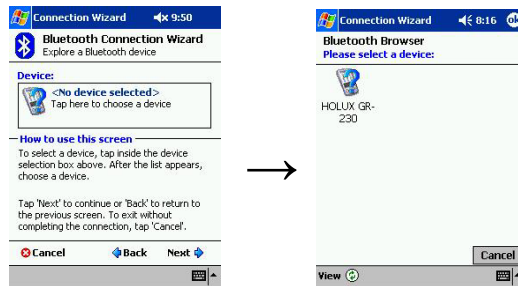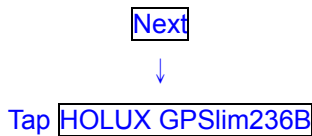

4. Connect to SPP Slave

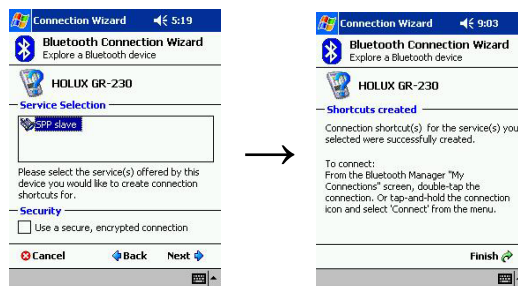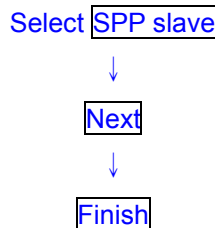

6. 5. Finish Bluetooth Manager Setup

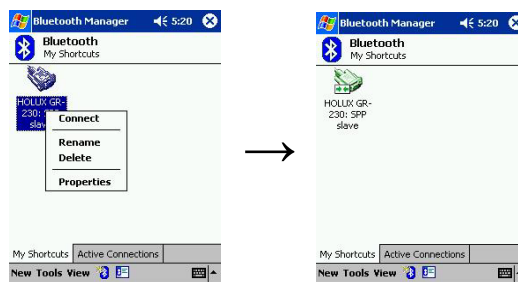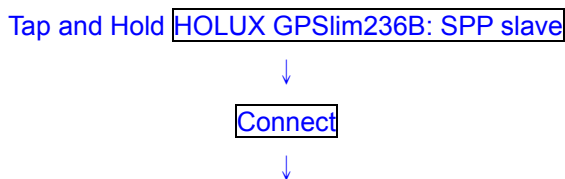

Finish Bluetooth setup (opposite arrow is displayed)

5.3. Installation of testing program

(GPSViewer.exe is compatible with Microsoft Pocket PC or other operation system alike.)


- 1). Install Microsoft ActiveSync to your PC, refer to your Pocket PC manual for installation procedure, as Fig. 5.
- 2). Setup your Pocket PC cradle to Desktop PC UART port. The Microsoft ActiveSync will detect your Pocket PC automatically.

Setup your Pocket PC cradle to Desktop PC UART port. The Microsoft ActiveSync will detect your Pocket PC automatically, as Fig. 7.




(Fig. 7)

- 3). Double click the GPSViewer.exe on your PC, then Holux GPSViewer.exe program will install automatically, as Fig. 8.

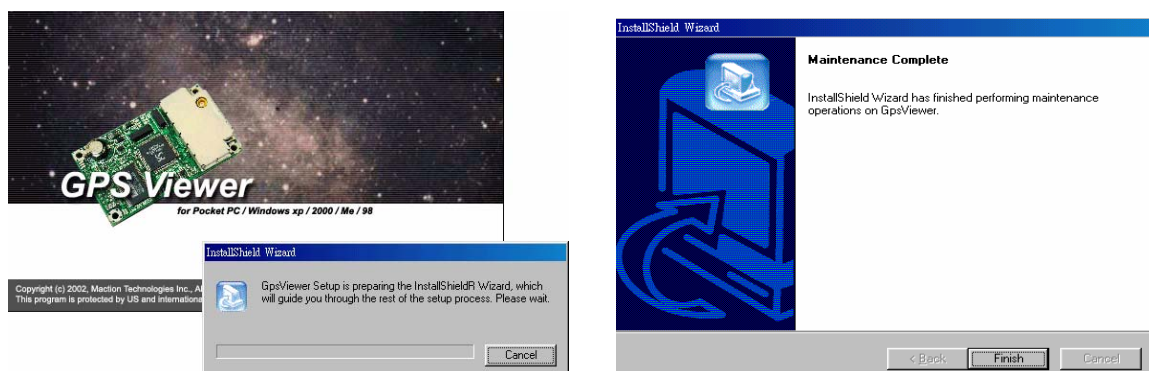

(Fig. 8)

4) Push “Start”→ “Programs”→ “GPSViewer” on PDA, as Fig. 9.

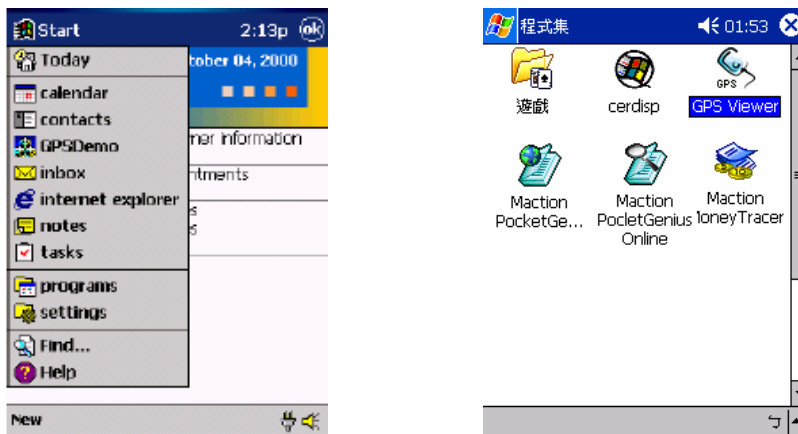


(Fig. 9)

5) The following window is show after executing GPSViewer, as Fig. 10.



(Fig. 10)

6) Setup Baud rate: 38400, then push “Scan” bottom to scan your COM Port (Example theIPAQ 3970 is the output port COM8). Select your COM Port (COM1 ~ COM10), then push “Open GPN” bottom, as Fig. 11, Fig. 12, and Fig. 13.

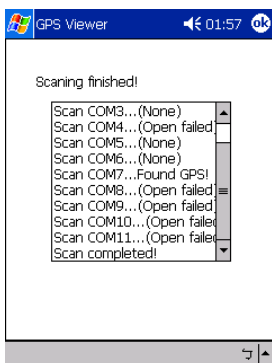

(Fig. 11)




(Fig. 12)



(Fig. 13)

7) Select “GPS Status” to show the satellite diagram like below, as Fig. 14.

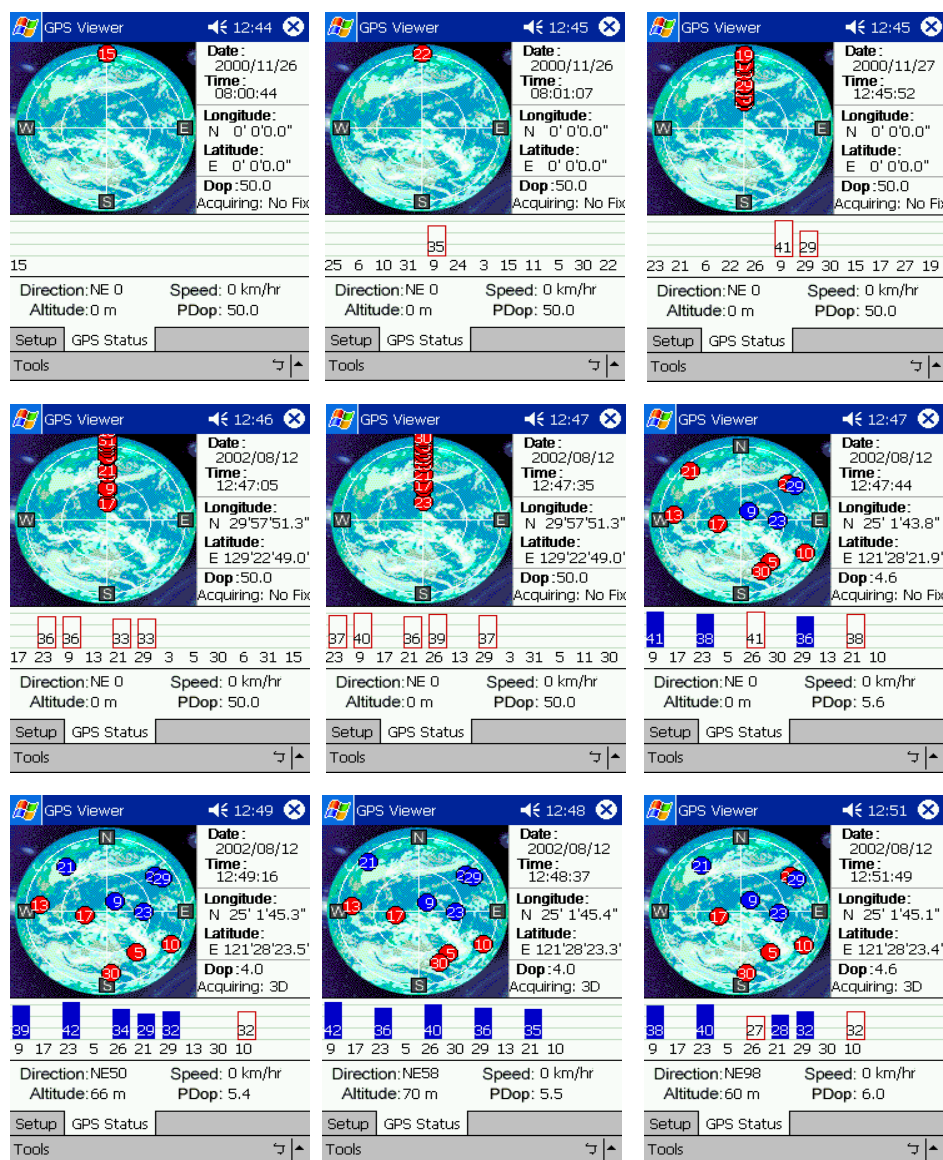

(Fig. 14)

6. Optional accessories

GPSlim236B has many accessories to satisfy customers' requirement see table 2. After using GPSlim236B with the following accessories, it can transmit message with PDA, Note Book easily.

Table 2

Item	Description	Note
GR230-A1	1.5M RS232 data cable	
GR230-A2	1.5M USB data cable	
GR230-A3	Output convert to GM-210's PDA Car charger adaptor	
GR230-B1	2M 28db MMCX connector active antenna	

7. Driver Installation

You can use any **GPSlim236B** accessories data cable without installing driver except GR230-A2 USB cable. The following is the steps of installation GR230-A2 USB cable.

7.1 System Requirement

CPU: IBM, Pentium, or other compatible PC.

Memory: above 16 MB

System: Windows 98/Me/2000/XP

7.2 Installation

- I. Copy entire **GPSlim236B** USB folder from CD to hard disk.
- II. Connect GR-230-A2 USB connector to computer without **GPSlim236B** GPS receiver. While the computer automatically starts the installation program, please direct the driver to the **GPSlim236B** USB folder.

7.3 Important

Verify the COM port to start using your own navigation software.

- I. Click **<Start>** menu, select → **<Setting>**, then enter→ **<Controller>**
- II. After entering **<Controller>**, and select **<System>**.
- III. Select **<Device Manager>**.
- IV. Find the **< Connector(COM & LPT)>** and check the Virtual COM Port, which was created by the USB driver.

Please note that the virtual COM port number might be different from every computer. Before using navigation software, please confirm the COM Port numbers created by your computer and provided by your navigation software. Otherwise, the navigating software won't receive the satellite signal, because of the un-match COM Port setting.

8. Warranty

The **GPSlim236B** is warranted to be free from defects in material and functions for a period of one year from the date of purchase. Any failure of this product within this period under normal conditions will be replaced at no charge to the customers.

- **GPSlim236B** has built Li-battery inside, please avoid closing high temperature environment or sun shine directly for a long time.

- User has to return **GPSlim236B** to **HOLUX** if the inner Li battery has to be replaced.

9. Trouble Shooting

Problems	Reasons	Methods
No position output but timer is counting	Weak or no GPS signal can be received at the place of GPSlim236	Connect an external antenna, which locate as a open space to your GPSlim236B and then run GPSViewer Cold start function.
	At outdoor space but GPS signal is blocked by building or car roof.	Go outdoor and run GPSViewer Cold start function to try again, or connect an external antenna to improve the poor GPS signal.
Execute fail	Bluetooth function unstable	Power On/Off GPSlim236B . Re-Start PDA or PC and reference sec 5.2 re-install software
Can not turn on the COM port	Install GPSlim236B incompletely or operate the device is being used with same COM port	Install GPSlim236B completely or stop other device that is being used.
Can not find out GPSlim236B	Poor connection	Re-Start PDA or PC and reference sec. 5.2 re-install software.
No Signal	No action for few minutes may cause Pocket PC entry power save mode. It will close the COM port at the same time.	Close the application and execute it again to reopen the COM port.
	Weak or no GPS signal when using GPSlim236B indoor	Connect an external antenna to your GPSlim236B .

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF exposure warning

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.