

KENWOOD

AUDIO VIDEO SURROUND RECEIVER

VR/KRF-V SERIES

VR-306 KRF-V6020

VR-305 KRF-V5020

VR-355

INSTRUCTION MANUAL

KENWOOD CORPORATION

This instruction manual is for some models.
Model availability and features (functions) may differ depending on the country and sales area.

About the supplied remote control (RC-R0608) . . .

Compared to standard remote controls, the remote control supplied with this receiver has several operation modes. These modes enable the remote control to control other audio/video components. In order to effectively use the remote control it is important to read the operating instructions and obtain a proper understanding of the remote control and how to switch its operation modes (etc.).

Using the remote control without completely understanding its design and how to switch the operation modes may result in incorrect operations.


Before applying the power

Units are designed for operation as follows.

U.S.A. and Canada AC 120 V only
 Australia AC 240 V only
 China AC 220 V only
 *Other countries AC 110-120 / 220-240 V switchable

* AC voltage selection

The AC voltage selector switch on the rear panel is set to the voltage that prevails in the area to which the unit is shipped. Before connecting the power cord to your AC outlet, make sure that the setting position of this switch matches your line voltage. If not, it must be set to your voltage in accordance with the following direction.

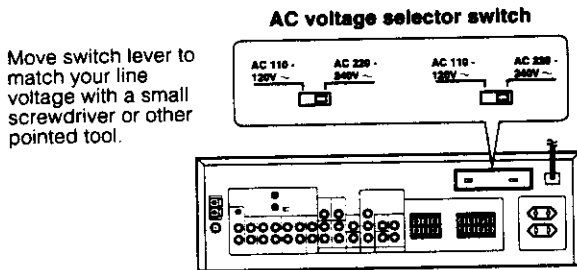

Note:
 Our warranty does not cover damage caused by excessive line voltage due to improper setting of the AC voltage selector switch.

Safety precautions

WARNING :

TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



CAUTION



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.

Unpacking

Unpack the unit carefully and make sure that all accessories are put aside so they will not be lost.

Examine the unit for any possibility of shipping damage. If your unit is damaged or fails to operate, notify your dealer immediately. If your unit was shipped to you directly, notify the shipping company without delay. Only the consignee (the person or company receiving the unit) can file a claim against the carrier for shipping damage.

We recommend that you retain the original carton and packing materials for use should you transport or ship the unit in the future.


Keep this manual handy for future reference.

Accessories


FM indoor antenna (1)



AM loop antenna (1)

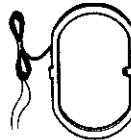

Loop antenna stand (1)



For VR-355

Remote control unit (1)
 RC-R0608




Batteries (R03/AAA) (4)



For VR-306, VR-305, KRF-V6020 and KRF-V5020

Remote control unit (1)
 RC-R0711



Batteries (R06/AA) (2)



*AC plug adaptor (1)



*Use to adapt the plug on the power cord to the shape of the wall outlet. (Accessory only for regions where use is necessary.)

Cleaning

Do not use volatile solvents such as alcohol, paint thinner, gasoline, or benzene, etc. to clean the cabinet. Use a clean dry cloth.

Do not use contact cleaners because it could cause a malfunction. Be specially careful against contact cleaners containing oil, for they may deform the plastic components.

For the U.S.A.**FCC WARNING**

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

For the U.S.A.**Note to CATV system installer:**

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.



As an ENERGY STAR® Partner, Kenwood Corporation has determined that this products meets the ENERGY STAR® guidelines for energy efficiency.

This product can save energy. Saving energy reduces air pollution and lowers utility bills.

Contents

Caution : Read the pages marked \triangle carefully to ensure safe operation.

Getting started 2

- \triangle Before applying the power 2
- \triangle Safety precautions 2
 - Unpacking 2
 - How to use this manual 4
 - Special features 4

Names and functions of parts 5**Setting up the system 8**

- Connecting audio components 8
- Connecting video components 9
- Connecting DVD 6-channel jack 9
- Connecting the antennas 9
- Connecting the system control 10
- Connecting the speakers 11
- Channel space switching 12
- Preparing the remote control (RC-R0608,) 12
- Preparing the remote control (RC-R0711) 13

Preparing for surround sound 13

- Speaker settings 13

Normal playback 14

- Preparing for playback 14
- Listening to a source component 15
- Adjusting the sound 15

Recording 16

- Recording audio 16
- Recording video 16

Listening to radio broadcasts 17

- Tuning radio stations 17
- Presetting radio stations manually 17
- Receiving preset stations 17
- Receiving preset stations in order (P.CALL) 18

Ambience effects 18

- Surround modes 18
- Surround play 19
- DVD 6-channel playback 20
- Convenient functions 20

In case of difficulty 22

- \triangle Specifications 23

Quick start guide 1**Getting the most****from your remote control 3****Setup code chart 7****In case of difficulty 13****Remote operation of other components 14**

How to use this manual

The manual covers the VR-306, VR-305, VR-355, KRF-V6020, and KRF-V5020. Items such as functions, number of jacks, and remote control details differ somewhat between these models. To confirm the functions available on the model you have purchased, refer to the table below.

Model name	Remote Control	Terminal		
		Speaker out	Preout	Front input
VR-306	RC-R0711	1 system	SUBWOOFER	Not equipped
VR-305	RC-R0711	1 system	SUBWOOFER	Not equipped
VR-355	RC-R0608	1 system	SUBWOOFER	Not equipped
KRF-V6020	RC-R0711	2 systems (A, B)	CENTER, SURROUND, SUBWOOFER	Not equipped
KRF-V5020	RC-R0711	1 system	SUBWOOFER	Not equipped

This manual is divided into four sections, Preparations, Operations, Other, and Remote Control.

Preparations

Shows you how to connect your audio and video components to the receiver and prepare the surround processor. We've tried to make setting up your system as easy as possible. However, since this receiver works with all of your audio and video components, connecting the system can be fairly complex.

Operations

Shows you how to operate the various functions available from the receiver.

Other

Shows you additional information such as "In case of difficulty" (trouble-shooting) and "Specifications".

Remote Control (Separate booklet) (RC-R0608 only)


Includes the "Quick Start Guide," which shows you how to operate other components using the remote control, as well as a detailed explanation of all remote control operations. Once you have registered your components with the proper setup codes, you'll be able to operate both this receiver and your other AV components (TV, VCR, LD player, CD player, etc.) using the remote control supplied with this receiver.

Special features

True home theater sound

This receiver incorporates a wide variety of surround modes to bring you maximum enjoyment from your video software. Select a surround mode according to your equipment or the software you are going to play and enjoy!

Dolby Pro Logic & Dolby 3 Stereo

This surround system reproduces theater-like surround sound from video software marked .

The PRO LOGIC mode uses the built-in adaptive matrix circuit to steer the Left, Center, Right and Surround channel audio signals.

The 3 STEREO mode will redirect the Surround signal to the front left and right speakers when only the front and center speakers are used.

New DSP surround modes

The DSP (Digital Signal Processor) used for this receiver incorporates a variety of high quality adjustable sound fields, like "LIVE" and "HALL". It is compatible with almost any kind of program source.

DVD 6-channel input


If you own a DVD player equipped with 6-channel output, this receiver allows you to obtain the full surround sound impact of DVD source material featuring multi-channel encoding. Since the source signals are digital and each channel is input independently, the resulting ambience is far superior to what can be achieved with conventional surround sound systems.

Universal IR (InfraRed) remote control (RC-R0608 only)

In addition to the basic receiver, the remote control supplied with this receiver can also operate almost all of your remote controllable audio and video components. Just follow the simple setup procedure to register the components you have connected.

MACRO play (RC-R0608 only)

The MACRO function lets you perform a series of operations automatically, like turning ON the power of the receiver and connected components, switching the input selectors, and starting playback. (Be sure to register your components before starting the macro set up procedure.)

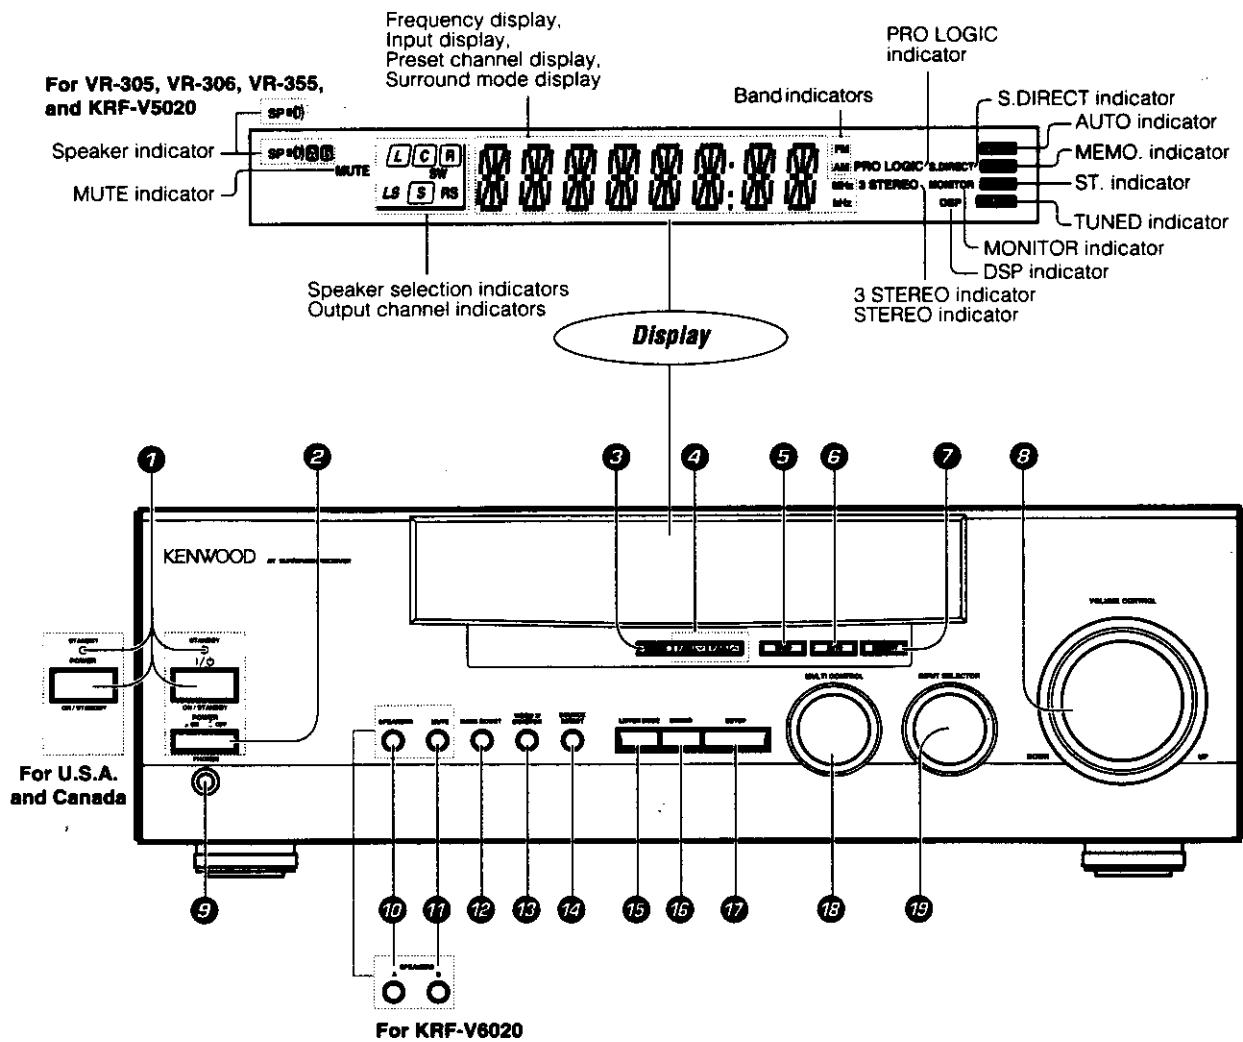


- | | | |
|---|--|--|
| <p>① POWER key (For U.S.A. and Canada) -14
Use to turn the power ON/OFF.
STANDBY indicator</p> <p>② ON/STANDBY (I/O) key -14
(Except for U.S.A. and Canada)
Use to switch the power ON/STANDBY when the POWER is turned ON.
STANDBY indicator</p> <p>③ POWER key -14
(Except for U.S.A. and Canada)</p> <p>④ DIMMER key -20
Use to adjust the brightness of the display.</p> <p>⑤ P.CALL keys -13
Use to call up previously registered radio stations.</p> <p>⑥ BAND key -17
Use to select the broadcast band.</p> <p>⑦ AUTO key -17
Use to select the auto tuning mode.</p> | <p>⑧ MEMORY key -17
Use to store radio stations in the preset memory.</p> <p>⑨ VOLUME CONTROL knob -16</p> <p>⑩ PHONES jack -16
Use for headphone listening.</p> <p>⑪ SPEAKERS A key (KRF-6020) -14
Use to turn speaker system A on and off.</p> <p>⑫ SPEAKERS key (VR-305, VR-306, VR-355, and KRF-V5020) -14
Use to turn the speakers on and off.</p> <p>⑬ SPEAKERS B key (KRF-6020) -14
Use to turn speaker system B on and off.</p> <p>⑭ MUTE key (VR-305, VR-306, VR-355, and KRF-V5020) -16
Use to temporarily mute the sound.</p> <p>⑮ BASS BOOST key -16
Use to select the maximum adjustment setting for the low frequency range.</p> | <p>⑯ VIDEO 2/MONITOR key -19</p> <p>⑰ SOURCE DIRECT key -19</p> <p>⑱ LISTEN MODE key -19
Use to select the listening mode.</p> <p>⑲ SOUND key -20
Use to adjust the sound quality and ambience effects.</p> <p>⑳ SETUP key -13
Use to select the surround sound settings.</p> <p>㉑ MULTI CONTROL knob
Used to make a variety of settings.</p> <p>㉒ INPUT SELECTOR knob -15
Use to select the input sources.</p> |
|---|--|--|

About the STANDBY indicator

This unit has a STANDBY indicator. When the STANDBY indicator is lit, the unit consumes a small amount of power to preserve the memory. This is called STANDBY mode. This mode also lets you turn the power ON using the remote control.

Remote control unit (RC-R0608)

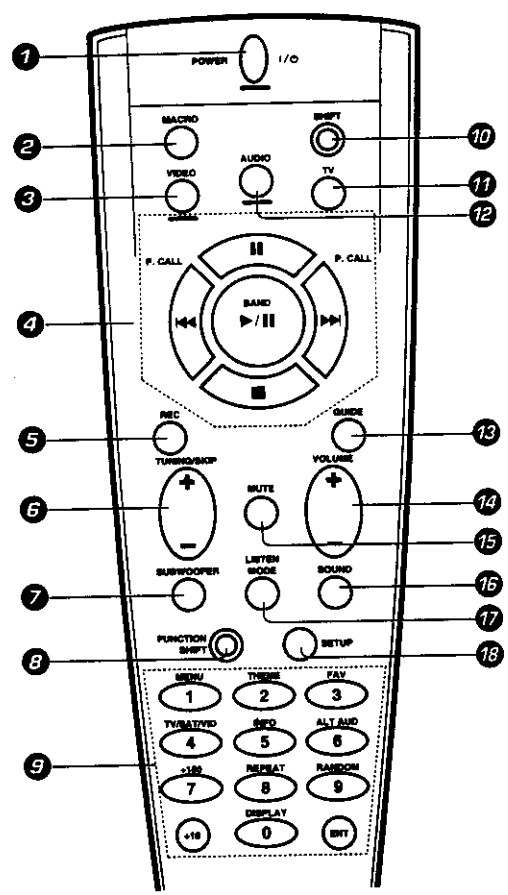

Page references such as "RC-10" indicate pages in the remote control operation manual (Separate booklet).


There are some cases in which keys (or knobs) that have the same function on the receiver and on the remote control have different names. In the instructions of this manual, if the names of corresponding keys (or knobs) on the receiver and remote control are different, the name of the remote control key is indicated in parentheses.

- 1 POWER key** RC-12
Use to turn the receiver on and off.
Use in combination with the input selector (AUDIO, VIDEO, or TV) keys and SHIFT key to turn various components on and off.
- 2 MACRO key** RC-13
Use in combination with the AUDIO, VIDEO, or TV keys to execute a series of commands automatically (MACRO PLAY).
- 3 VIDEO selector key**
Selects the video inputs and sets the remote control to operate the component registered at the respective input.
- 4 Multi control keys** RC-14
Use to operate the selected component.
- 5 REC key** RC-14
Use to operate the selected component.
- 6 TUNING/SKIP key**
Use during the setup procedure to specify various settings. Use to operate the tuner or selected component.
- 7 SUBWOOFER key** RC-21
Use in combination with the VOLUME +/- keys to adjust the volume of the subwoofer.

- 8 FUNCTION SHIFT key** RC-14
Use in combination with the numeric keys to execute alternate commands.
- 9 Numeric keys** RC-14
Provide functions identical to those of the original remote control supplied with the component you are controlling.
To access the functions printed above the keys, press within 3 seconds of pressing the FUNCTION SHIFT key. Function availability varies for each component.
- 10 SHIFT key** RC-15
Use in combination with the AUDIO and VIDEO keys to change the remote control mode without changing the input selector or in combination with the POWER key to turn on and off components programmed into the remote control.
- 11 TV selector key**
Sets the remote control to operate a TV or cable box. This key does not change the input selector on the receiver.

- 12 AUDIO selector key**
Selects the audio inputs and sets the remote control to operate the respective KENWOOD audio component.
If you connect audio components from KENWOOD and other makers to the MD/TAPE or CD jacks, you can set the remote control to operate these components by registering the appropriate setup code at the respective input.
- 13 GUIDE key** RC-18
Use to activate the OSD menu functions of registered components.
- 14 VOLUME key** RC-16
Use to adjust the receiver volume.
- 15 MUTE key** RC-16
Use to temporarily mute the sound.
- 16 SOUND key** RC-20
Use to adjust the sound quality and ambience effects.
- 17 LISTEN MODE key** RC-19
Use to select the listening mode.
- 18 SETUP key** RC-19
Use to select the surround sound settings.

Remote control unit (RC-R0711)

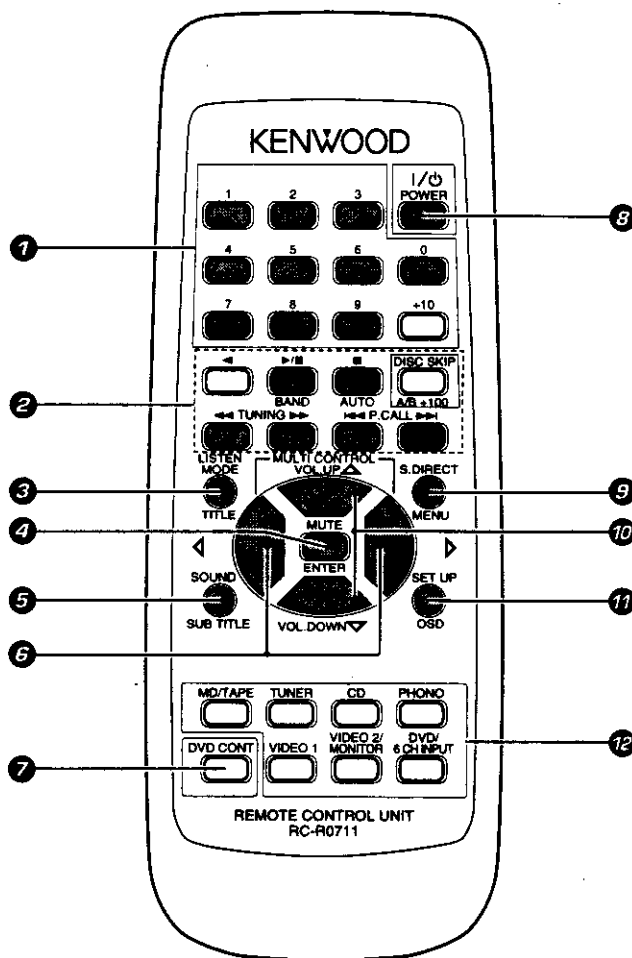

1 Numeric keys

If CD or MD is selected as the input source, these keys function as numeric keys. If tuner is selected as the input source, these keys are used to call up station presets.

2 Component operation keys

Use these keys to operate other components with system control connections to the receiver.

◀ key

If tape is selected as the input source, this key functions as the play key for side B of the cassette (the side facing away from the front of the deck).

BAND (▶/■) key

If tuner is selected as the input source, this key functions as the band selector key.

If CD is selected as the input source, this key functions as the play/pause key.

If MD is selected as the input source, this key functions as the play key.

DISC SKIP, A/B, +100 key

If CD is selected as the input source, this key functions as the multi-CD player disc skip key.

If TAPE is selected as the input source, this (A and B) of a double cassette deck.

AUTO (■) key

If tuner is selected as the input source, this key functions as the AUTO key.

If CD or MD is selected as the input source, this key functions as the stop key.

TUNING (◀◀ ▶▶) keys

If tuner is selected as the input source, these keys function as tuning keys.

If CD or MD is selected as the input source, these keys function as search keys.

P.CALL (◀◀ ▶▶) keys

If tuner is selected as the input source, these keys function as P.CALL keys.

If CD or MD is selected as the input source, these keys function as skip keys.

3 LISTEN MODE, TITLE key

Use to select the listening mode.

4 MUTE, ENTER key

Use to temporarily mute the sound.

5 SOUND key

Use to adjust the sound quality and ambience effects.

6 MULTI CONTROL key

Used to make a variety of settings.

7 DVD CONT keys

Used to operate DVD player.

While holding this key depressed, press any of the keys masked in gray in the above illustration to operate the corresponding function of a DVD player from KENWOOD.

Keys 8, 9, 10, 11 and 12 are given the following functions during the DVD player control operation.

8 : TITLE

9 : ENTER

10 : SUB TITLE

11 : MENU

12 : OSD

For details, refer to the instruction manual of your DVD player.

8 POWER key

Use to switch the power ON/STANDBY when the POWER is turned ON.

9 SOURCE DIRECT key

10 VOLUME CONTROL key

11 SETUP key

Use to select the surround sound settings.

12 Input selector keys

Use to select the receiver's input source.

Connecting audio components

Make connections as shown below.
When connecting the related system components, be sure to also refer to the instruction manuals supplied with the components you are connecting.
Do not connect the power cord to a wall outlet until all connections are completed.

Microcomputer malfunction
 If operation is not possible or an erroneous display appears, even though all connections have been made properly, reset the micro-computer referring to "In case of difficulty". -[22]


Caution regarding placement (Except for U.S.A. and Canada)
 To maintain proper ventilation, be sure to leave a space around the unit (from the largest outer dimensions, including projections) equal to, or greater than shown below:
 Left and right panels: 10 cm, Rear panel: 10 cm, Top panel: 50 cm

VIDEO 2/MONITOR jacks
 The receiver's VIDEO 2/MONITOR jacks can be used in two different ways. Make the appropriate setting for the component connected to the jack when the receiver is turned on.

Use as a VIDEO 2 jack
 You can connect a video deck or the like to these jacks and perform video playback and recording. The initial factory setting is "VIDEO 2."

Use as a MONITOR jack
 You can connect a cassette deck or the like to these jacks and make use of the deck's monitoring function during recording. Alternately, you can connect a graphic equalizer to these jacks to apply compensation to the music signal.

To use the VIDEO 2/MONITOR jacks as MONITOR jacks, hold down the VIDEO 2/MONITOR key of the main unit for more two seconds so that the indication shown below appears.

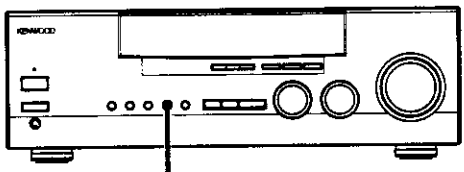

VIDEO 2/MONITOR






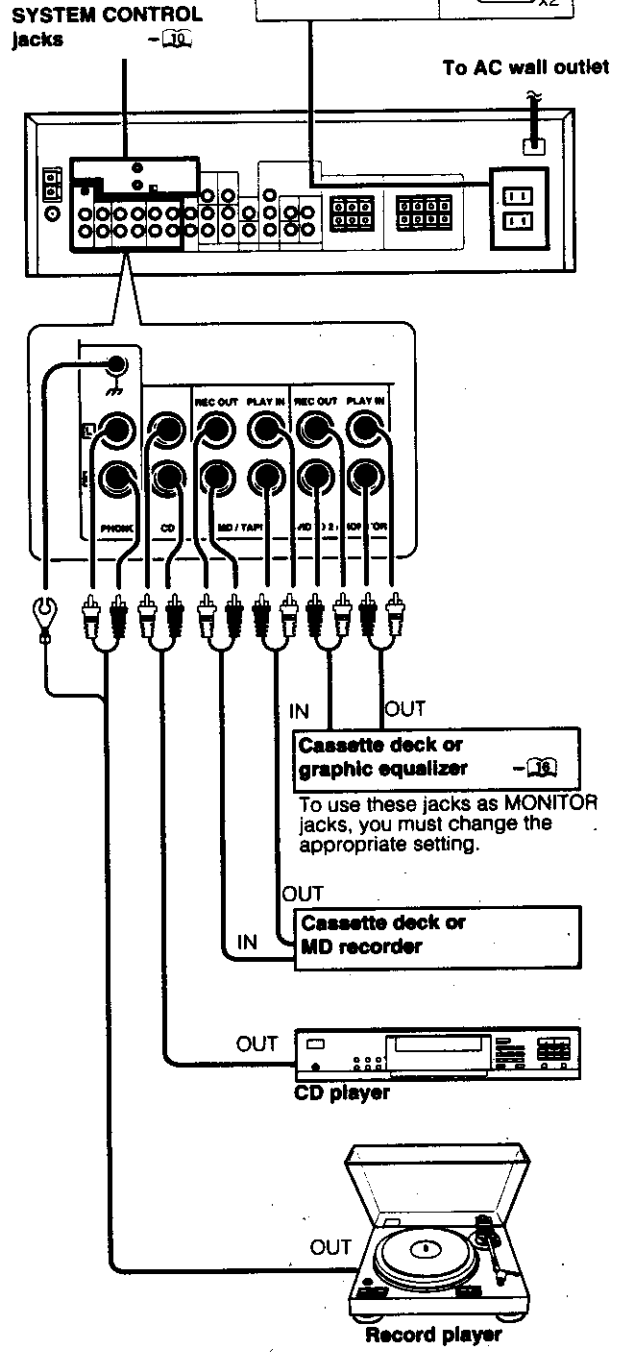
- At the same time the setting is switched to "MONITOR," the audio input source switches to tuner and the video input source switches to VIDEO 1.
- To switch the setting back to "VIDEO 2," once again hold down the VIDEO 2/MONITOR key for two seconds or more.
- If you decide to use the VIDEO 2/MONITOR jacks as MONITOR jacks, make sure to delete the "VIDEO 2 (VCR2)" input from the preset remote control (RC-R0608). RC-[3]

Notes

1. Be sure to insert all connection cords securely. If their connections are imperfect, the sound may not be produced or noise may interfere.
2. Be sure to remove the power cord from the AC outlet before plugging or unplugging any connection cords. Plugging / unplugging connection cords without disconnecting the power cord can cause malfunctions and may damage the unit.
3. Do not connect power cords from components whose power consumption is larger than what is indicated on the AC outlet at the rear of this unit.



Shape of AC outlets

U.S.A. and Canada	 x2
Australia	 x1
Other countries	 x2




To use the receiver for video recording, connect a video deck to the VIDEO 2/MONITOR jacks.

Connecting video components

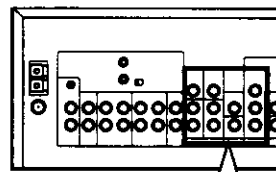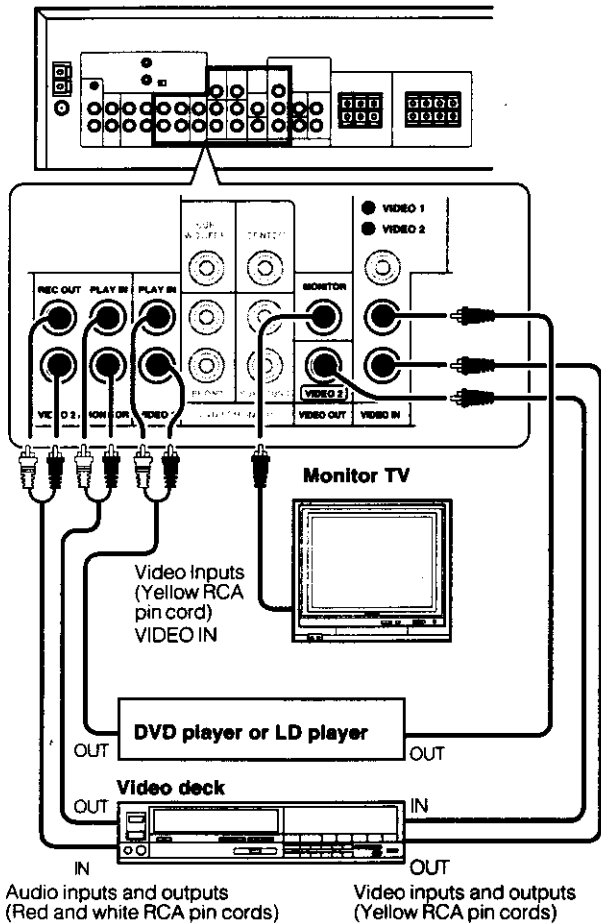

Even if your DVD player does not have the 6-channel output facility, you can enjoy the 6-channel audio by connecting a multi-channel surround processor to your DVD player.

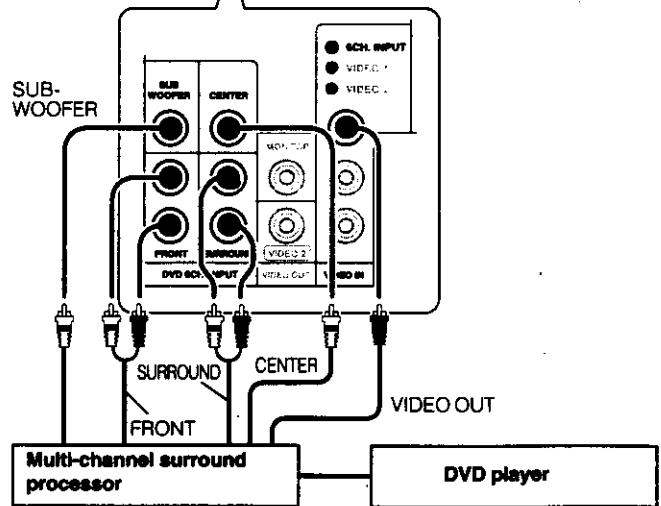


Connecting the antennas

Antenna terminal connections


① Push lever.

② Insert cord.

③ Return lever.



Connecting DVD 6-channel jack

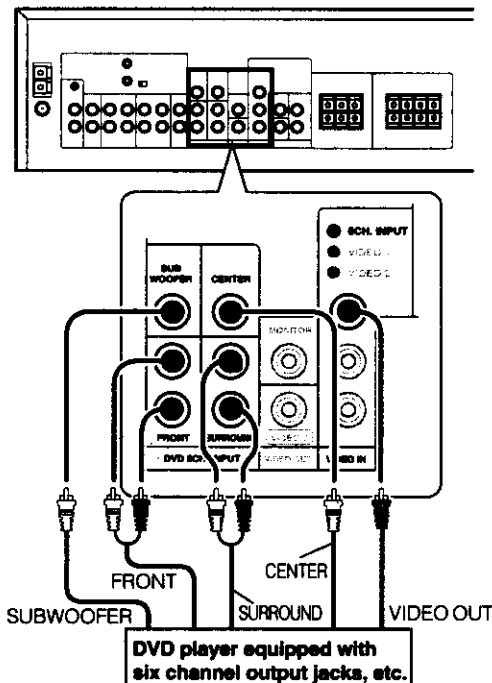

The sound input to DVD 6CH. INPUT is paired with the video signal input to 6CH. INPUT.

AM loop antenna


The supplied loop antenna is for use indoors. Place it as far as possible from the receiver, TV set, speaker cords and power cord, and adjust the direction for best reception.

FM indoor antenna

The supplied indoor antenna is for temporary use only. For stable signal reception we recommend using an outdoor antenna. Disconnect the indoor antenna when you connect one outdoors.

FM outdoor antenna

Lead the 75Ω coaxial cable connected to the FM outdoor antenna into the room and connect it to the **FM 75Ω** terminal.

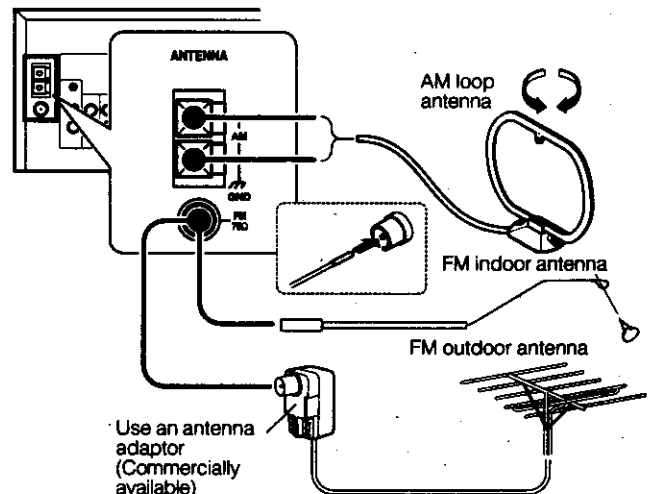


Connecting the system control

Connecting system control cords after connecting a KENWOOD audio component system lets you take advantage of convenient system control operations.

There are two KENWOOD system control modes. Make connections according to the groups of terminal symbols shown below.


- [XS8]** Mode : lets you combine **[XS]**, **[XS8]**, and **[XR]** terminals
[SL16] Mode : for **[SL16]** terminals only

This unit is compatible with both [XS8] and [SL16] modes. It comes from the factory set to the [SL16] mode. To switch to the [XS8] mode, follow the instructions in "SWITCHING FROM [SL16] TO [XS8]" below.

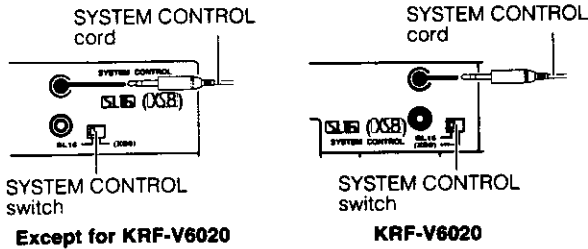


EXAMPLE: [XS8] mode connections

The underlined portion represents the setting of the system control mode.

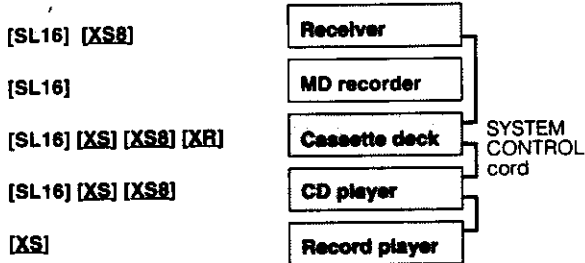

EXAMPLE: [SL16] mode connections

The underlined portion represents the setting of the system control mode.

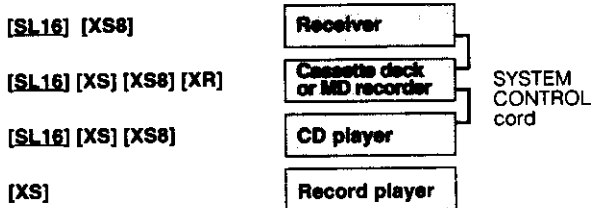

- In order to take advantage of the system control operations, the components must be connected to the correct jacks. To use a CD player it must be connected to the CD jacks. To use a cassette deck (or MD recorder) it must be connected to the MD/TAPE jacks. When using more than one CD player (etc.) only the one connected to the specified jacks may be connected for system control.
- Some CD players and cassette decks are not compatible with the [SL16] system control mode. Be sure to use the [XS8] system control mode when making system connections with equipment that is not [SL16] compatible.
- Some MD players are not system control compatible. You cannot make system control connections to this kind of equipment.

Notes

1. [SL16] equipment cannot be combined with [XR], [XS], and [XS8] equipment for system operations. If your equipment consists of this kind of combination, please do not connect any system control cords. Even without system control cords, normal operations can be carried out without effecting performance.
2. Do not connect system control cords to any components other than those specified by KENWOOD. It may cause a malfunction and damage your equipment.
3. Be sure the system control plugs are inserted all the way in to the system control terminals.

Do not connect a system control cord to a cassette deck connected to the MONITOR jacks.

SYSTEM CONTROL OPERATIONS

Remote Control

Lets you operate this unit with the system remote supplied with the receiver.

Automatic Operation (except [XR] equipment)


When you start playback from a source component, the input selector on this unit switches to that component automatically.

Synchronized Recording (except [XR] equipment)

Lets you synchronize recording with the start of playback when recording from CD, MD or analog discs.

SWITCHING FROM [SL16] TO [XS8]

You can easily change the system control mode by adjusting the position of the SYSTEM CONTROL switch on the rear panel. Do this operation after completing all connections.

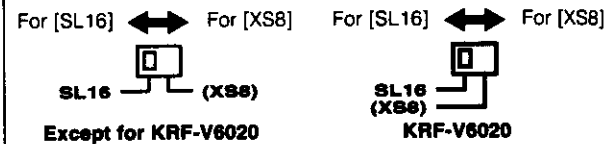

- This operation will not effect items stored in the memory.
- After switching the system control mode, turn the power off and unplug the power cord from the wall outlet, then plug it back.

Registering setup codes for KENWOOD audio components (RC-R0608 only)

- Once you finish making the system connections, be sure to register the appropriate setup code for each component. **RC-1**
- If you own remote controllable KENWOOD audio components that are not compatible with system control (or cannot be combined with your other system control components), registering the setup code enables you to control those components using the remote control supplied with this unit (without connecting system control cords). To register setup codes for your remote controllable KENWOOD audio components, see "Registering setup codes for other components". **RC-3**

Connecting the speakers


1 Strip coating.



2 Loosen.



3 Insert.




4 Secure.




1 Strip coating.




2 Push lever.




3 Insert cord.




4 Return lever.





Front Speakers A

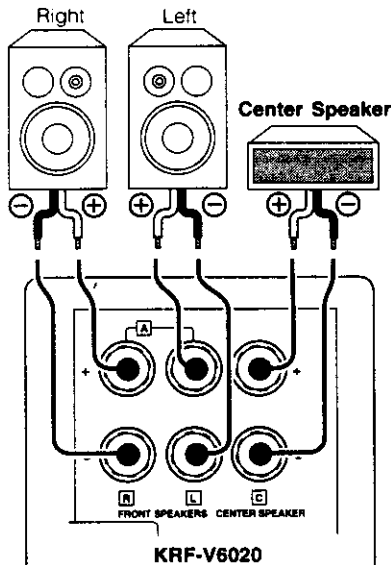

Except for The KRF-V6020 is equipped with one-touch speaker terminals. They are arranged in the same manner as the speaker terminals of the KRF-6020. Refer to the instructions on making connections to the KRF-6020 when making connections to the VR-306/VR-305/VR-355 and KRF-V5020.

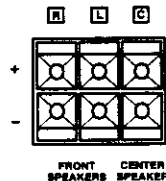


Except for KRF-V6020

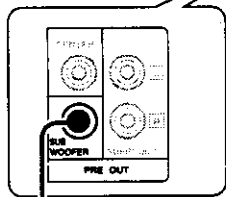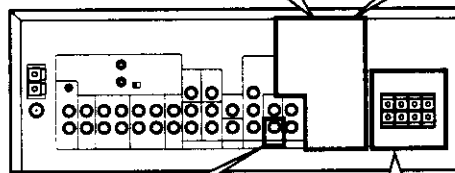

Use the **FRONT SPEAKERS B** terminals if you want to connect a second front speaker system. (VR-306, VR-305, VR-355 and KRF-V5020 are not equipped with **SPEAKERS B** terminal.)

Powered subwoofer

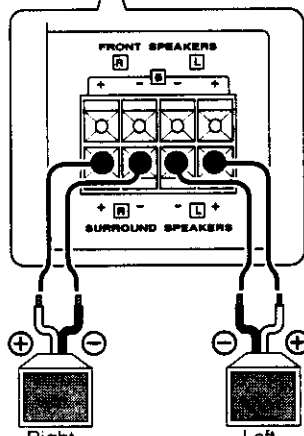

Surround Speakers
(Be sure to connect both surround speakers)

- Never short circuit the + and - speaker cords.
- If the left and right speakers are connected inversely or the speaker cords are connected with reversed polarity, the sound will be unnatural with ambiguous acoustic imaging. Be sure to connect the speakers correctly.


Speaker impedance

After confirming the speaker impedance indications printed on the rear panel of the receiver, connect speakers with matching impedance ratings. Using speakers with a rated impedance other than that indicated on the rear panel of the receiver could result in malfunctions or damage to the speakers or receiver.

FRONT SPEAKERS	8-16 Ω
CENTER SPEAKER	8-16 Ω
SURROUND SPEAKERS	8-16 Ω


PRE OUT connections

This receiver has additional preout jacks. These can be used for various purposes, but will need to be connected to an external power amplifier as shown in the example below.

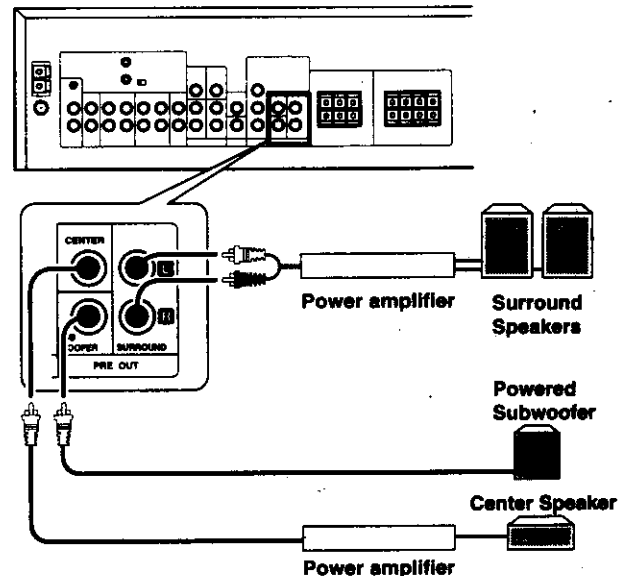

- The VR-305, VR-306, VR-355 and KRF-V5020 is equipped with a SUBWOOFER terminal only.
- Connecting a speaker cord directly to a PRE OUT jack will not produce any sound from the speaker.
- To use the PRE OUT jacks, press the **SPEAKERS A** key to the on position (the **SPEAKERS** key in the case of the VR-305, VR-306, VR-355 and KRF-V5020).

Speaker placement

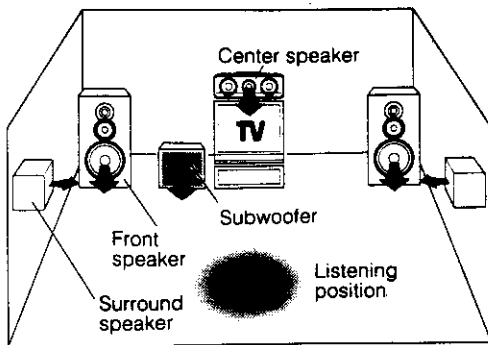

Front speakers : Place to the front left and right of the listening position. Front speakers are required for all surround modes.

Center speaker : Place front and center. This speaker stabilizes the sound image and helps recreate sound motion. Be sure to connect a center speaker when using the Dolby 3 Stereo mode.

Surround speakers : Place to the direct left and right, or slightly behind, the listening position at even heights, approximately 1 meter above the ears of the listeners. These speakers recreate sound motion and atmosphere. Required for surround playback.

Subwoofer : Reproduces powerful deep bass sounds.

- Although the ideal surround system consists of all the speakers listed above, if you don't have a center speaker or a subwoofer, you can divide those signals between the available speakers in the speaker settings steps to obtain the best possible surround reproduction from the speakers you have available.

- 33

Channel space switching (Except for the USA, Canada, UK, Europe and Australia)

The space between radio channels has been set to the one that prevails in the area to which the system is shipped. However, if the current channel space setting does not match the setting in the area where the system is to be used, for instance when you move from area 1 or area 2 shown in the following table or vice versa, proper reception of AM/FM broadcasts cannot be expected. In this case, change the channel space setting in accordance with your area by referring to the following table.

Area	CHANNEL Space Frequency
1 USA, Canada and South American countries	FM: 100 kHz AM: 10 kHz
2 Other countries	FM: 50 kHz AM: 9 kHz

- Turn power off.
- Hold down the **BAND** key of the main unit for more than 2 seconds.
Perform each of the following steps within 5 seconds.
- Select the mode by using the **MULTI CONTROL** knob of the main unit.
Each press switches the space frequency alternately.
 - ① "F50/A9" (FM 50 kHz, AM 9 kHz)
 - ② "F100/A10" (FM 100 kHz, AM 10 kHz)

Blinks.


F50/A9

- Establish the selection by pressing the **BAND** key.


Preparing the remote control (RC-R0608)

Loading the batteries


- Remove the cover.

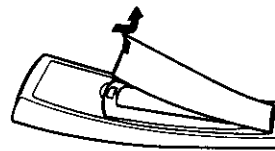

- Insert the batteries.



- Close the cover.

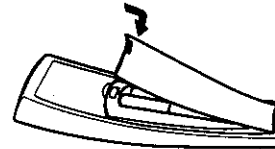


- Insert four AAA-size (LR03) batteries as indicated by the polarity markings.

Operation

When the **STANDBY** indicator is lit, the power turns ON when you press the **POWER** key on the remote control. When the power comes ON, press the key you want to operate.

Operating range (Approx.)

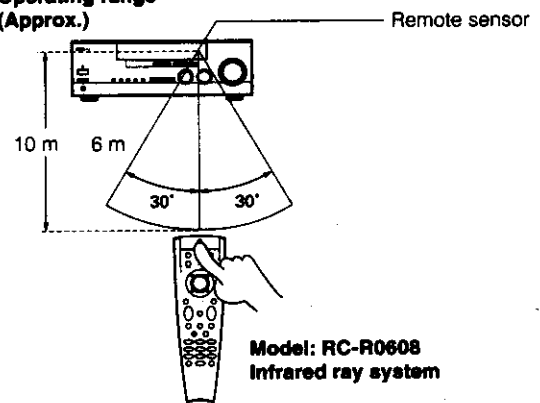

- When pressing more than one remote control key successively, press the keys securely by leaving an interval of 1 second or more between keys.


Notes

- The supplied batteries may have shorter lives than ordinary batteries due to use during operation checks.
- Replace all four batteries with new ones when you notice a shortening of the distance from which the remote control will operate or if the remote control blinks 5 times when you press a key. The remote control is designed to retain set up codes in memory while you change batteries.
- Placing the remote sensor in direct sunlight, or in direct light from a high frequency fluorescent lamp may cause a malfunction. In such a case, change the location of the system installation to prevent malfunction.


Preparing the remote control (RC-R0711)

Loading the batteries


❶ Remove the cover.

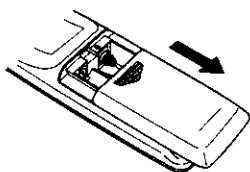

❷ Insert the batteries.

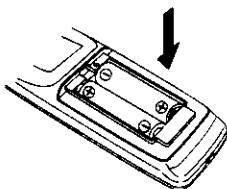

❸ Close the cover.

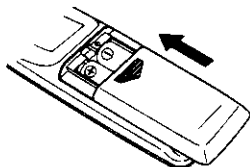


• Insert two AA-size (R6) batteries as indicated by the polarity markings.

Operation

When the **STANDBY** indicator is lit, the power turns ON when you press the **POWER** key on the remote control. When the power comes ON, press the key you want to operate.

Operating range
(Approx.)

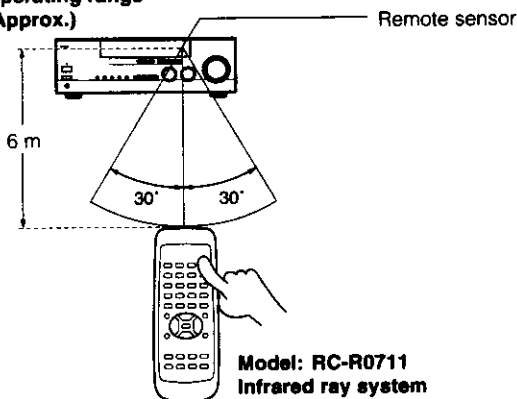


• When pressing more than one remote control key successively, press the keys securely by leaving an interval of 1 second or more between keys.

Notes

- The supplied batteries may have shorter lives than ordinary batteries due to use during operation checks.
- When the remote-controllable distance gets shorter than before, replace both batteries with new ones.
- Placing the remote sensor in direct sunlight, or in direct light from a high frequency fluorescent lamp may cause a malfunction. In such a case, change the location of the system installation to prevent malfunction.

Speaker settings

To enable you to obtain optimum enjoyment from the receiver's listening modes, make sure to complete the speaker settings as described below.

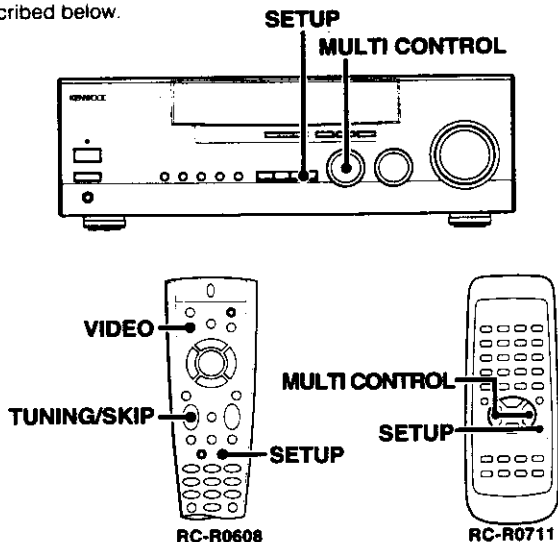

❶ Turn on the receiver.

- 14

❷ Select a speaker system.

❶ Press the **SETUP** key to make the subwoofer setting indication (**SUBW**) appear.




❷ Use the **MULTI CONTROL (TUNING/SKIP)** to select the appropriate subwoofer setting.

- ❶ **SUBW YES:** A subwoofer is connected to the receiver.
- ❷ **SUBW NO:** No subwoofer is connected to the receiver.

❸ Press the **SETUP** key to accept the setting.

• The center speaker setting indication (**CNTR**) appears.



❹ Use the **MULTI CONTROL (TUNING/SKIP)** to select the appropriate center speaker setting.

- ❶ **CNTR NML (normal):** An average size center speaker is connected to the receiver.
- ❷ **CNTR LRG (large):** A large center speaker is connected to the receiver.
- ❸ **CNTR NO:** No center speaker is connected to the receiver.

❺ Press the **SETUP** key to accept the setting.

• The surround speaker setting indication (**SURR**) appears.

❻ Use the **MULTI CONTROL (TUNING/SKIP)** to select the appropriate surround speaker setting.

- ❶ **SURR YES:** Surround speakers are connected to the receiver.
- ❷ **SURR NO:** No surround speakers are connected to the receiver.

❼ Press the **SETUP** key to accept the setting.

- The receiver enters the speaker volume level adjustment mode.
- In steps ❷ and ❸, indications appear only for the selected channels of the speakers that require adjusting.


Continued to next page

3 Adjust the volume levels for the speakers.

Sit in your normal listening position and listen to the test tone. Adjust the volume levels for the speakers until all speakers seem to be equally loud.

- Use the **MULTI CONTROL (TUNING/SKIP)** to adjust the volume when the test tone is being output from the speaker channel to be adjusted.

The channel indication blinks while the test tone is being output.



The test tone issues from the speakers for 2 seconds at a time in the following sequence:

Lch → Cch → Rch → Sch → Lch

- If you change the volume level settings for the speakers while listening to music, the settings referred to on this page are also changed.
- If the speaker setting selects are changed, the speaker level settings are reset.

- Press the **SETUP** key.

- The receiver enters the mode for inputting the distance to the speakers.

4 Input the distance to the speakers.


- Measure the distance from the listening position to each of the speakers.

Dot down the distance to each of the speakers.

Distance to front speakers: _____ feet (meters)
Distance to surround speakers: _____ feet (meters)

- Use the **MULTI CONTROL (TUNING/SKIP)** to select the distance to the front speakers.

The speaker indicator to be adjusted blinks.




Indication in feet Indication in meters

- The allowable setting range is 1 to 30 feet (0.3 to 9.0 m), adjustable in 1 foot (0.3 m) increments.

- Press the **SETUP** key.

- Repeat steps ② and ③ to input the distance for the surround speaker.

- Setup is complete when the input indication reappears.




Display when all speakers have been selected.

- The speakers you selected appear on the display. Confirm that all the speakers have been correctly selected.
- If you used the remote control (RC-R0608) to perform the settings, press the **VIDEO** key at this point to turn off the remote control's own adjustment mode. In this case, the input source is not switched.

Preparing for playback

Some preparatory steps are needed before starting playback.

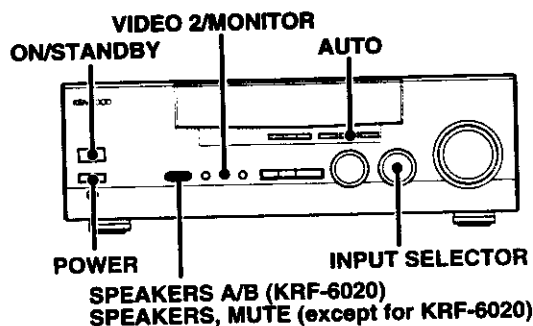

Turning on the receiver

- Turn on the power to the related components.
- Turn on the power to this receiver by pressing **POWER** (and **ON/STANDBY**) key(s).

Selecting TAPE/MD

Select the source name corresponding to the component connected to the MD/TAPE jacks. The initial factory setting is "TAPE". To change the source name associated with the MD/TAPE jacks to "MD," follow the steps below:

- Use the **INPUT SELECTOR** knob to select "TAPE".
- Hold down the **AUTO** key for more than 2 seconds.
 - The source indication changes to "MD".
 - To return to the original indication, repeat the above procedure.
 - You also will need to change the name input to the remote control (RC-R0608) to "MD".

Selecting the speaker system


Press the **SPEAKERS A** or **B** key to select the speaker system to be used.

- A ON** : Sound from the speakers connected to the **SPEAKERS A** terminals on the rear panel.
- B ON** : Sound from the speakers connected to the **SPEAKERS B** terminals on the rear panel.
- A+B ON** : Sound from both the speakers connected to the **SPEAKERS A** and **B** terminals on the rear panel.
- A+B OFF** : No sound from the speakers. Use this setting when listening with headphones for stereo sound in all playback modes.

- Activating a surround mode or selecting "DVD 6ch" as the input source causes speaker system A to be selected automatically.


On the **VR-305**, **VR-306**, **VR-355** and **KRF-V5020**, press the **SPEAKERS** key to switch the speakers on and off.

The indicator for the speakers you want to use should be lit.



Models other than VR-305, VR-306, VR-355, KRF-V5020

Speaker indicator lights.




VR-305, VR-306, VR-355 and KRF-V5020

Selecting VIDEO 2/MONITOR

Depending on the component connected to the **VIDEO 2/MONITOR** jacks, select either the "VIDEO 2" setting or the "MONITOR" setting.

Listening to a source component

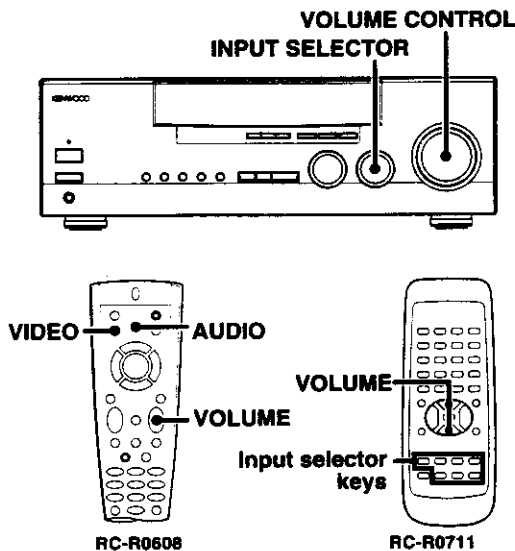

- 1** Use the input selector (**INPUT SELECTOR (AUDIO, VIDEO)**) to select the source you want to listen to.

The input sources change as shown below:

Selecting a source using the **INPUT SELECTOR** knob

- 1 TUNER
- 2 "CD" ("CD**")
- 3 "TAPE" or "MD" ("TAPE**")
- 4 "PHONO" ("PHONO**")
- 5 "VIDEO1" ("VCR1**")
- 6 "VIDEO2" ("VCR2**")
- 7 "DVD 6ch"

Selecting a source using the **AUDIO** key on the remote control (RC-R0608)

- 1 "CD" ("CD**")
- 2 "TAPE" or "MD" ("TAPE**")
- 3 TUNER
- 4 "PHONO" ("PHONO**")

Selecting a source using the **VIDEO** key on the remote control (RC-R0608)

- 1 "VIDEO1" ("VCR1**")
- 2 "VIDEO2" ("VCR2**")
- 3 "DVD 6ch"

- When selecting an input source by using the remote control (RC-R0711), press the desired input selector key.
- "VIDEO 2" can be selected as an input source only if the VIDEO 2/ MONITOR setting is "VIDEO 2".

* Once setup codes are registered in the remote control (RC-R0608), the input name display changes according to the name of the registered component.


Example: if you register a VCR at the VIDEO 1 jacks, "VCR" appears instead of "VIDEO 1".

- When using the remote control (RC-R0608) after initial setup, any inputs that have not been registered with a setup code are deleted from the cyclic list.
- The **INPUT SELECTOR** on the front panel of the receiver always cycles through all inputs.

- 2** Start playback from the selected source.

- 3** Use the **VOLUME CONTROL (VOLUME)** to adjust the volume.

Adjusting the sound

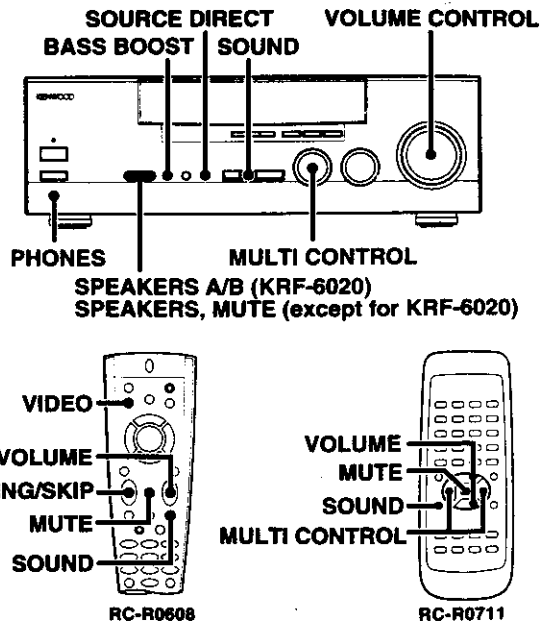


Adjusting the tone

The following adjustments are possible if the receiver is in the stereo mode.

- 1** Press the **SOUND** key to select the tone mode to be adjusted.

BASS: Select this to adjust the low frequency range.
(Press the **SOUND** key once.)

TREB: Select this to adjust the high frequency range.
(Press the **SOUND** key twice.)



- 2** Use the **MULTI CONTROL (TUNING/SKIP)** to adjust the sound quality.

- The bass and treble levels are adjustable from -10 to +10 in 2 step increments.
- The adjustment item is displayed for approximately 8 seconds.
- If you used the remote control (RC-R0608) to perform the above setting, press the **VIDEO** key at this point to turn off the remote control's own adjustment mode. In this case, the input source is not switched.

Once-touch low frequency emphasis (bass boost)

The following adjustments are possible if the receiver is in the stereo mode.

Press the **BASS BOOST** key.

- Press the key once to select the maximum (+10) low frequency emphasis setting.
- This key does not function when the receiver is in the sound quality or ambience effects adjustment mode.

Switching back to the previous setting

Press the **BASS BOOST** key again.

Muting the sound

MUTE lets you mute the sound of the speakers.

Press the MUTE key.



Blinks

- On the VR-306, VR-305, VR-355 and KRF-V5020, this selection can be made using the control on the receiver as well.

To cancel


Press the MUTE key again so that the "MUTE" indicator goes off.

- Muting can also be cancelled by adjusting the volume.

SOURCE DIRECT playback (analog sources only)

Use this function to pass the source material direct to the amplifier, bypassing any audio processing.

Press the SOURCE DIRECT key.



- Either press the LISTEN MODE, SOUND, and SETUP keys, or switch to another input source to cancel SOURCE DIRECT playback.

To cancel


Press again.

- If SOURCE DIRECT playback was activated when using a surround mode, cancelling it reactivates the previous surround mode.

Listening with headphones


- 1 Press the SPEAKERS A or B key (or the SPEAKERS key) so that the speaker indicator goes off.

Make sure the SPEAKERS indicators are turned off.



KRF-V6020

Make sure the SPEAKERS indicators are turned off.



VR-305, VR-306, VR-355
and KRF-V5020

- If you turn off all of the speakers when in the surround mode, the mode is cancelled as well, resulting in stereo playback.


- 2 Connect headphones to the PHONES jack.



- 3 Use the VOLUME CONTROL (VOLUME) to adjust the volume.

To adjust the balance

Recording audio

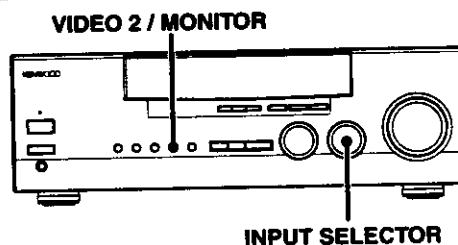

Recording a music source

When recording a music source, switch the VIDEO2/MONITOR setting to "MONITOR".


- 1 Use the input selector to select the source (other than "TAPE") you want to record.
- 2 Set the cassette deck to record.
- 3 Start playback, then start recording.

Copying tapes

When copying tapes, switch the VIDEO2/MONITOR setting to "MONITOR".

MONITOR → TAPE copying

- 1 Press the VIDEO2/MONITOR key.



- 2 Use the input selector to select a source other than "TAPE".
- 3 Start playback on the cassette deck connected to the VIDEO2/MONITOR jacks and start recording on the cassette deck connected to the MD/TAPE jacks.

TAPE → MONITOR copying

- 1 Use the input selector to select "TAPE".
 - 2 Start playback on the cassette deck connected to the MD/TAPE jacks and start recording on the cassette deck connected to the VIDEO2/MONITOR jacks.
- To copy tapes using a double cassette deck, refer to the instruction manual of the double cassette deck.

MONITOR function



You can connect a cassette deck or graphic equalizer to the VIDEO2/MONITOR jacks of the receiver. If a graphic equalizer is connected, the VIDEO2/MONITOR key should be left in the on position. Alternately, if a cassette deck equipped with a 3-head system is connected to the VIDEO2/MONITOR jacks, you will be able to monitor the just-recorded signal while making recordings on the cassette deck. By switching the VIDEO2/MONITOR key on and off, you can compare the sound of the source signal and the just-recorded signal. For more information, refer to the instruction manual of the connected component. To adjust the input level when the monitor function is turned on, use the SOUND key and the MULTI CONTROL key.

Recording video

When recording video, switch the VIDEO2/MONITOR setting to "VIDEO2".

- 1 Use the input selector to select the video source (other than "VIDEO2") you want to record.
- 2 Set the video deck connected to VIDEO2/MONITOR to record.
- 3 Start playback, then start recording.

Tuning radio stations

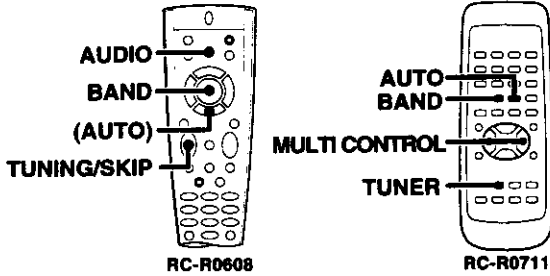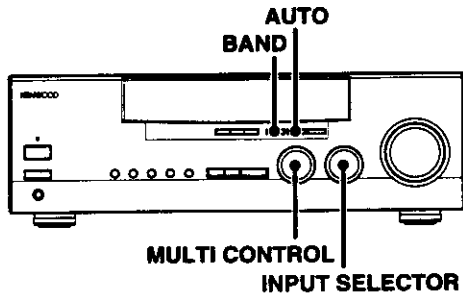


1 Use the input selector to select the tuner.

2 Use the BAND key to select the desired broadcast band.



'AM' or 'FM' indicator

Each press switches the band as follows:



3 Use the AUTO key to select the desired tuning method.


Each press switches the tuning method as follows:



- Normally, set to 'AUTO' (auto tuning). If the radio waves are weak and there is a lot of interference, switch to manual tuning. (With manual tuning, stereo broadcasts will be received in monaural.)

4 Use the MULTI CONTROL (TUNING/SKIP) to select the station.

Frequency display Lights when a broadcast is being received in stereo.




'TUNED' is displayed when a station is received

- Auto tuning** : The next station is tuned automatically.
- Manual tuning** : Turn the knob (press the key) to select the desired station.

- You can also use the TUNING key on the remote control (RC-R0711) to make the selection.

Presetting radio stations manually

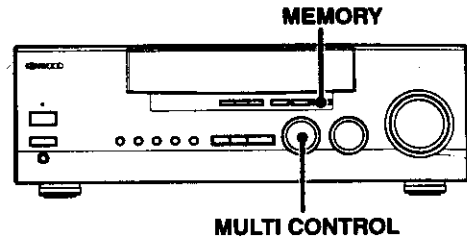


1 Tune to the station you want to store.

2 Press the MEMORY key while receiving the station.

Blinks for 5 seconds

Lights for 5 seconds




Proceed to step **3** within 5 seconds.
(If more than 5 seconds elapse, press the MEMORY key again.)

3 Use the MULTI CONTROL to select one of the station presets (1 - 40).

4 Press the MEMORY key to accept the setting.

- Repeat steps **1**, **2**, **3** and **4** to store as many stations as necessary.
- If you store a station at a previously used preset, the old station will be replaced by the new one.

Receiving preset stations

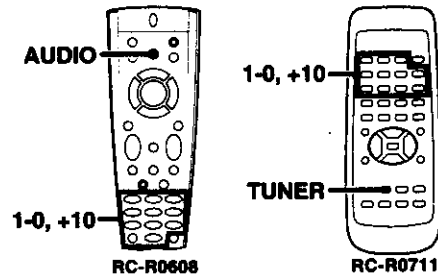

1 Use the remote control to select the tuner as the source.


- The remote control switches to the tuner operating mode.

2 Enter the number of the preset you want to receive (up to "40").



Press the numeric keys in the following order:

For "15", press **+10**, **5**
For "20", press **+10**, **+10**, **0**


- If you make a mistake entering a two digit number, press the +10 key several times to return to the original display and start again.



Receiving preset stations in order (P.CALL)

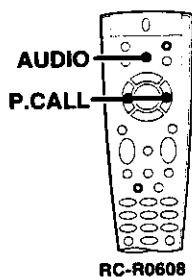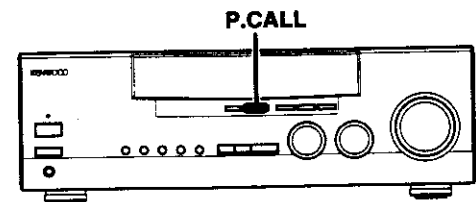

RC-R0608

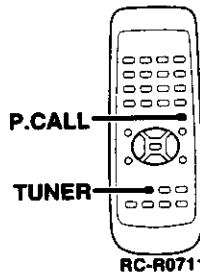

RC-R0711

1 Use the remote control to select the tuner as the source.

- The remote control switches to the tuner operating mode.

2 Use the P.CALL key to select the desired station.

- Each time you press the key, another preset station is received in order.

Pressing the P.CALL (Δ) key (\blacktriangleright) does the following:
01 \rightarrow 02 \rightarrow 03 \rightarrow 38 \rightarrow 39 \rightarrow 40 \rightarrow 01 \rightarrow 02 \rightarrow 03 \rightarrow


Pressing the P.CALL (∇) key (\blacktriangleleft) does the following:
01 \leftarrow 02 \leftarrow 03 \leftarrow 38 \leftarrow 39 \leftarrow 40 \leftarrow 01 \leftarrow 02 \leftarrow 03 \leftarrow

Holding down the key, lets you skip through the presets, receiving each for 0.5 seconds a piece.

This receiver is equipped with listening modes that allow you to enjoy an enhanced sonic ambience with a variety of video sources.


In order to obtain the optimum effect from the surround modes, make sure to input the proper speaker settings beforehand.


-13-

Manufactured under license from Dolby Laboratories Licensing Corporation. DOLBY, the double-D symbol  and "PRO LOGIC" are trademarks of Dolby Laboratories Licensing Corporation.

Surround modes


Dolby Pro Logic

Dolby Pro Logic is a specially encoded 2 channel surround format designed to provide theater-like surround sound from Dolby Surround encoded sources (such as video and Laserdisc software marked ). This receiver is equipped with a Dolby Pro Logic surround decoder to let you enjoy the wide variety of currently available Dolby Surround home video software.

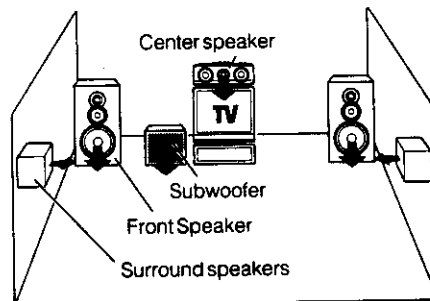


Dolby 3 Stereo

Dolby 3 Stereo is available for systems that do not have surround speakers. When in the Dolby 3 Stereo mode, the surround information is redirected to the front left and right speakers. This mode is designed for use with Dolby Surround program sources, but can also improve sound field unity for programs that are not Dolby Surround encoded. Dialog positioning and sound image definition, however, may not be as accurate when used with programs that are not Dolby Surround encoded.

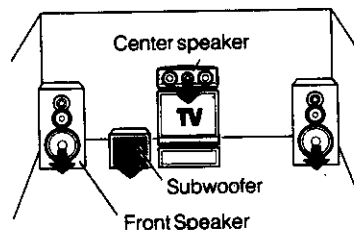

DSP mode

The DSP mode lets you add the atmosphere of a live concert or hall to almost any type of program source. These modes are particularly effective when used with stereo program sources, like CD, television, and FM radio. You might enjoy trying the LIVE or HALL mode the next time you watch a concert or sporting event!

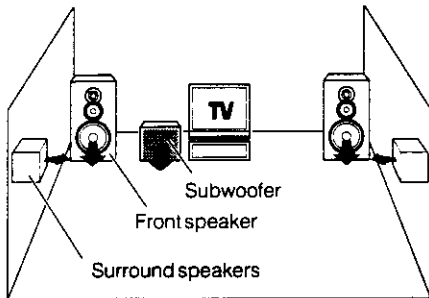


What's DSP?

DSP stands for Digital Signal Processor.


The way a sound is heard in an actual environment depends on a variety of different factors. One of the most important is reverberation (the act of decaying elements of sound echoing in various places). The DSP modes produce the feeling of presence by using the DSP to create reverberation, without spoiling the sound quality of the original signal.




DVD 6-channel mode

Using a DVD player or the like equipped with six (5.1) output channels and the receiver, you can enjoy multi-channel encoded DVD source material in all its splendor. Since the source signals are digital and each channel is input independently, the resulting sound quality, sense of spaciousness, and dynamic range are superb.

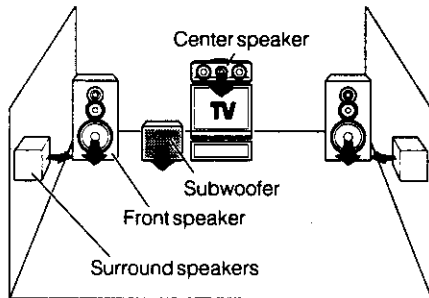

Surround Play

DOLBY PRO LOGIC and DOLBY 3 STEREO can be used when playing video, DVD, or LD software bearing the  mark. DSP modes can be used with any source.

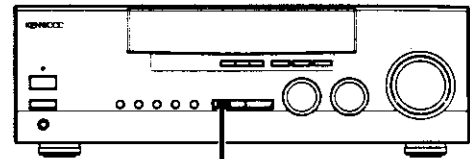**LISTEN MODE****LISTEN MODE****RC-R0608****LISTEN MODE****RC-R0711**

Preparations

- Turn ON related components.
- Complete "Preparing for surround sound".
- Set the **INPUT SELECTOR** to the component you wish to play back with surround sound.

1 Start playing the video software.

2 Press the LISTEN MODE key to select the listening mode.

Listening mode settings are stored separately for each input.


Each press of the LISTEN MODE key switches the setting as listed below.

Note that the only listening mode settings that can be used for playback with the current speaker settings are available.

- DOLBY PRO LOGIC
- DOLBY 3 STEREO
- LIVE (DSP)
- HALL (DSP)
- STEREO

Example with the DOLBY PRO LOGIC mode selected

The channels from which sound will issue are displayed.





3 Adjust the volume.

DVD 6-channel playback


Using a DVD player or the like equipped with six (5.1) output channels and the receiver, you can enjoy surround sound playback.

When you try to play a disc other than Dolby Digital (AC-3) such as DTS CD, no sound is produced or, noise may be heard. To avoid this situation, make sure that you connect the component to the receiver's DVD 6CH INPUT jacks through a surround processor which can decode the surround signal you want to listen to.

Connecting a DVD player which can decode the surround signal itself is also acceptable.

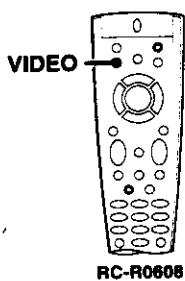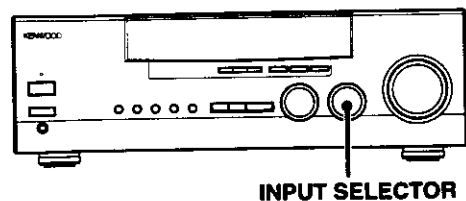


RC-R0608

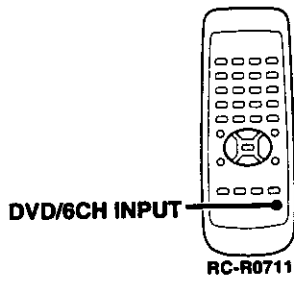

RC-R0711

Preparations

- Connect your DVD player to the DVD 6ch jacks of the receiver.
- Turn on all other components that will be used.
- Complete "Preparing for surround sound." 

1 Select "DVD 6ch" as the input source.



- If speaker system B is on when "DVD 6ch" is selected as the input source, it switches off and speaker system A turns on automatically (models other than VR-305, VR-306, VR-355 and KRF-V5020).

2 Start playback of the DVD software.


3 Adjust the volume.

- It is not possible individually to adjust the volume level or sound quality (SETUP, SOUND) of the separate channels when the receiver is in the DVD 6ch mode. Adjust the volume with the controls of the DVD player.
- For the powered subwoofer, you can adjust the volume of the subwoofer using the subwoofer's own volume control.
- When in the DVD 6ch mode, you can still use the volume control, mute, SPEAKERS (A) key, and dimmer functions.

Convenient functions

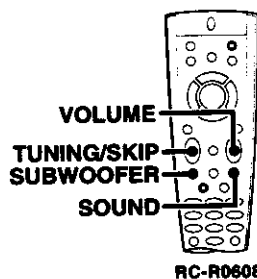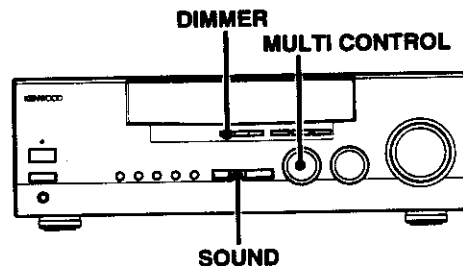

RC-R0608

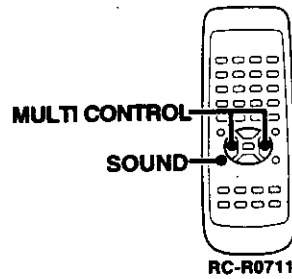



RC-R0711

Adjusting the sound

You can make further adjustments to the sound while listening to playback in the surround mode.


- Press the **SOUND** key to select the item you want to adjust. Each press switches the selection as listed below. Note that some items are not displayed in certain modes.

 - BASS** (low frequency range sound quality adjustment) 
 - TREB** (high frequency range sound quality adjustment) 
 - Cch** (center speaker level adjustment)
 - Sch** (surround speaker level adjustment)
 - SW** (subwoofer level adjustment)
 - INPUT** (input level adjustment)
 - The adjustment item for input level is displayed only when the monitor function is activated.
- Use the **MULTI CONTROL (TUNING/SKIP)** to adjust the setting as desired.

 - The adjustment item is displayed for approximately 8 seconds.
 - If you used the remote control (RC-R0608) to perform the above setting, press the **VIDEO** key at this point to turn off the remote control's own adjustment mode. In this case, the input source is not switched.

Input level adjustment (when using the monitor function)

If the input level while using the monitor function is too high, adjust the input level as described below.

- Turn on the monitor function. 
- Press the **SOUND** key several times until the "INPUT" indication appears.
- Use the **MULTI CONTROL (TUNING/SKIP)** to adjust the input level.



- The adjustment mode is displayed for approximately 8 seconds.
- The input level may be adjusted to any one of two settings: 0 and 6. (The initial setting is 0.)

- Press the **SOUND** key to return to the Input Indication.

SUBWOOFER adjustment (RC-R0608)

It is easy to adjust the volume of the subwoofer using the remote control (RC-R0608).

- ① Press the SUBWOOFER key so that "SW" is displayed.




- ② Use the VOLUME key to adjust the volume.

- The adjustable range is -10 dB to +10 dB.

Display dimmer adjustment

The dimmer function lets you select the brightness of the receiver's display. You might find this useful if you darken your room to watch movies or listen to music.

Each time you press the DIMMER key, the display brightness changes among the three available settings. Select the brightness level you find most pleasing.

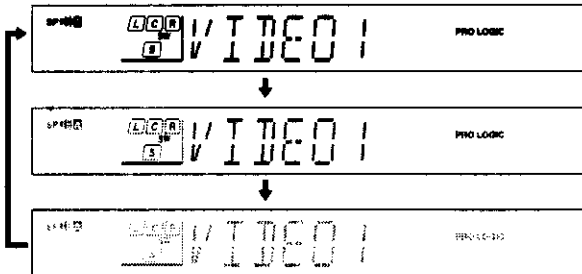**Memory back up function****For U.S.A. and Canada**

Please note that the following items will be deleted from the unit's memory if the power cord is disconnected from the AC outlet for approximately 3 days.

For other countries

Please note that the following items will be deleted from the unit's memory if the power cord is disconnected from the AC outlet or the main power switch is turned off for approximately 3 days.

- Power mode.
- Input selector settings.
- Volume level.
- Broadcast band.
- Frequency setting.
- Preset stations.

Resetting the Microcomputer

If the microcomputer may malfunction (unit cannot be operated, or shows an erroneous display) if the power cord is unplugged while the power is ON, or due to some other external factor. If this happens, execute the following procedure to reset the microcomputer and return the unit to its normal operating condition.

For U.S.A. and Canada

Unplug the power cord from the wall outlet, then plug it back in while holding down the POWER key.

For other countries

With the power cord plugged in, turn the POWER key OFF. Then, while holding down the ON/STANDBY key, press POWER.

- Please note that resetting the microcomputer will clear the contents of the memory and returns the unit to the state it was in when it left the factory.

Amplifier

No sound from the speakers.	<ul style="list-style-type: none"> • The speaker cords are disconnected. • VOLUME is set to the minimum position. • MUTE is ON. • The SPEAKERS switches are set to OFF. 	<ul style="list-style-type: none"> • Connect them properly referring to "Connecting the speakers" → 11 • Adjust the volume to a proper level. • Turn OFF the MUTE. → 16 • Set the SPEAKERS switch(es) to ON. → 14
The standby indicator blinks and sound is not output.	<ul style="list-style-type: none"> • Speaker cords are short-circuited. 	<ul style="list-style-type: none"> • Turn the power off, eliminate the short-circuiting, then turn on the power again. → 11
Sound is not output from one of the speakers.	<ul style="list-style-type: none"> • The speaker cord is disconnected. 	<ul style="list-style-type: none"> • Connect it properly referring to "Connecting the speakers".
Sound is not output from the surround speakers and / or the center speaker, or their sound is very small.	<ul style="list-style-type: none"> • The surround speaker cords and/or the center speaker cord is disconnected. • A surround mode has not been engaged. • The surround and/or center volume controls are set to the minimum level. 	<ul style="list-style-type: none"> • Connect it properly referring to "Connecting the speakers". • Select a surround mode. • Adjust the speaker levels using the test tone. → 14
A humming noise is generated when the PHONO input selector is selected.	<ul style="list-style-type: none"> • The audio cord from the turntable is not connected to the PHONO jacks. • The turntable is not grounded. 	<ul style="list-style-type: none"> • Insert the audio cord plugs securely into the PHONO jacks. • Connect the grounding wire to the GND terminal on the rear panel.

Tuner

Radio stations cannot be received.	<ul style="list-style-type: none"> • No antenna is connected. • The broadcast band is not set properly. • The frequency of the desired station is not tuned. 	<ul style="list-style-type: none"> • Connect an antenna. • Set the broadcast band properly. • Tune the frequency of the desired station. → 37
Interference.	<ul style="list-style-type: none"> • Noise due to ignition noise from an automobile. • Noise due to interference from an electric appliance. • Noise due to a nearby TV set. 	<ul style="list-style-type: none"> • Install the outdoor antenna away from the road. • Turn off the power to the appliance. • Install the receiver farther away from the TV.
A station which was preset cannot be received by pressing the corresponding numeric key.	<ul style="list-style-type: none"> • The preset station belongs to a frequency that cannot be received. • The preset memory was cleared because the power cord had been unplugged for a long period of time. 	<ul style="list-style-type: none"> • Preset a station with a receivable frequency. • Preset the station again.

Remote control unit

Remote control operation is not possible.	<ul style="list-style-type: none"> • Batteries are exhausted. • The remote control unit is too far away from the main system, controlling angle is too large, or there is an obstacle between the receiver and the remote. • The audio cords and system control cords are not connected properly. • No software is loaded in the source component. • An attempt is made to play a tape which is being recorded in the cassette deck. 	<ul style="list-style-type: none"> • Replace with new batteries. → 32-33 • Operate the remote control unit within the controllable range. • Connect properly referring to "Setting up the system". → 33 • Place software in the source component you want to play. • Wait until recording has completed.
---	---	---

For U.S.A and Canada

AUDIO section

Rated power output during STEREO operation

VR-306

100 watts per channel minimum RMS, both channels driven, at 8 Ω from 40 Hz to 20 kHz with no more than 0.7% total harmonic distortion.(FTC)
--

VR-305, VR-355

80 watts per channel minimum RMS, both channels driven, at 8 Ω from 40 Hz to 20 kHz with no more than 0.7% total harmonic distortion.(FTC)

Effective power output during SURROUND operation

VR-306

FRONT (1kHz, 0.7% T.H.D. at 8 Ω one channel driven)	100 W + 100 W
CENTER (1kHz, 0.7% T.H.D. at 8 Ω one channel driven)	100 W
SURROUND (1kHz, 0.7% T.H.D. at 8 Ω one channel driven)	100 W + 100 W

VR-305, VR-355

FRONT (1kHz, 0.7% T.H.D. at 8 Ω one channel driven)	80 W + 80 W
CENTER (1kHz, 0.7% T.H.D. at 8 Ω one channel driven)	80 W
SURROUND (1kHz, 0.7% T.H.D. at 8 Ω one channel driven)	80 W + 80 W

Total harmonic distortion 0.05% (1 kHz, 40W, 8 Ω)

Frequency response

CD 10 Hz ~ 60 kHz, +0 dB, -3.0 dB

Signal to noise ratio (IHF'66)

PHONO (MM) 75 dB

CD 93 dB

Input sensitivity / impedance

PHONO (MM) 2.5 mV / 27 k Ω CD 200 mV / 47 k Ω DVD 6CH (SUBWOOFER) 200 mV / 10 k Ω

Output level / impedance

TAPE REC 200 mV / 2.2 k Ω PRE OUT (SUBWOOFER) 2 V / 2.2 k Ω

Tone control

BASS ± 10 dB (at 100 Hz)TREBLE ± 10 dB (at 10 kHz)**VIDEO section**

VIDEO inputs / outputs

VIDEO (composite) 1 Vp-p / 75 Ω **FM tuner section**

Tuning frequency range 87.5 MHz ~ 108 MHz

Usable sensitivity (MONO)

..... 1.6 μ V (75 Ω) / 15.2 dBf (75 kHz DEV., SINAD 30 dB)

50dB quieting sensitivity

STEREO 31.6 μ V (75 Ω) / 41.2 dBf

Total harmonic distortion (1 kHz)

MONO 0.6% (65 dBf input)

STEREO 0.7% (65 dBf input)

Signal to noise ratio (1 kHz, 75 kHz DEV.)

MONO 75 dB (65 dBf input)

STEREO 68 dB (65 dBf input)

Stereo separation (1 kHz) 38 dB

Selectivity (± 400 kHz) 65 dB

Frequency response 30 Hz ~ 15kHz, +0.5 dB, -3.0 dB

AM tuner section

Tuning frequency range

10 kHz step 530 kHz ~ 1,700 kHz

Usable sensitivity (30% mod., S/N 20 dB)

..... 16 μ V / (600 μ V/m)

Signal to noise ratio (30% mod. 1 mV input) 50 dB

GENERAL

Power consumption

VR-306 2.6 A

VR-305, VR-355 2.2 A

AC outlet

SWITCHED 2 (total 150 W, 1.25 A max.)

Dimensions W : 440 mm (17-5/16")

H : 144 mm (5-11/16")

D : 390 mm (15-3/8")

Weight (Net)

VR-306 8.8 kg (19.4 lb)

VR-305, VR-355 8.2 kg (18.1 lb)

Notes

1. KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.
2. The full performance may not be exhibited in an extremely cold location (under a water-freezing temperature)

For other countries**AUDIO section****Effective power output during STEREO operation**

KRF-V6020	
1kHz, 10% T.H.D., at 8 Ω	120 W + 120 W
KRF-V5020	
1kHz, 10% T.H.D., at 8 Ω	110 W + 110 W

Rated power output during STEREO operation

80 watts per channel minimum RMS, both channels driven, at 8 Ω from 40 Hz to 20 kHz with no more than 0.7% total harmonic distortion.(FTC)

Effective power output during SURROUND operation

FRONT (1kHz, 10% T.H.D. at 8 Ω one channel driven)	80 W + 80 W
CENTER (1kHz, 10% T.H.D. at 8 Ω one channel driven)	80 W
SURROUND (1kHz, 10% T.H.D. at 8 Ω one channel driven)	80 W + 80 W

Total harmonic distortion 0.05%(1 kHz, 40W, 8 Ω)

Frequency response

CD 10 Hz ~ 60 kHz, +0 dB, -3.0 dB

Signal to noise ratio (IHF'66)

PHONO (MM) 75 dB

CD 93 dB

Input sensitivity / impedance

PHONO (MM) 2.5 mV / 27 k Ω

CD 200 mV / 47 k Ω

DVD 6CH (SUBWOOFER) 200 mV / 10 k Ω

Output level / impedance

TAPE REC 200 mV / 2.2 k Ω

PRE OUT (SUBWOOFER) 2 V / 2.2 k Ω

Tone control

BASS ± 10 dB (at 100 Hz)

TREBLE ± 10 dB (at 10 kHz)

VIDEO section**VIDEO inputs / outputs**

VIDEO (composite) 1 Vp-p / 75 Ω

FM tuner section

Tuning frequency range 87.5 MHz ~ 108 MHz

Usable sensitivity (MONO)

..... 1.6 μ V (75 Ω) / 15.2 dBf (75 kHz DEV., SINAD 30 dB)

50dB quieting sensitivity

STEREO 31.6 μ V (75 Ω) / 41.2 dBf

Total harmonic distortion (1 kHz)

MONO 0.6% (65 dBf input)

STEREO 0.7% (65 dBf input)

Signal to noise ratio (1 kHz, 75 kHz DEV.)

MONO 75 dB (65 dBf input)

STEREO 68 dB (65 dBf input)

Stereo separation (1 kHz)

..... 38 dB

Selectivity (± 400 kHz)

..... 50 dB

Frequency response

..... 30 Hz ~ 15kHz, +0.5 dB, -3.0 dB

AM tuner section**Tuning frequency range****For Australia**

9 kHz step 531 kHz ~ 1,602 kHz

Except for Australia

9 kHz step 531 kHz ~ 1,602 kHz

10 kHz step 530 kHz ~ 1,610 kHz

Usable sensitivity (30% mod., S/N 20 dB)

..... 16 μ V / (600 μ V/m)

Signal to noise ratio (30% mod. 1 mV input)

..... 50 dB

GENERAL**Power consumption**

KRF-V6020 280 W

KRF-V5020 230 W

AC outlet

SWITCHED (for Australia) 1 (total 150 W max.)

SWITCHED (except Australia) 2 (total 150 W max.)

Dimensions

W : 440 mm

H : 144 mm

D : 400 mm

Weight (Net)

KRF-V6020 9.4 kg

KRF-V5020 8.2 kg

Notes

1. KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.
2. The full performance may not be exhibited in an extremely cold location (under a water-freezing temperature).

KENWOOD

For your records

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your dealer for information or service on this product.

Model _____ Serial Number _____