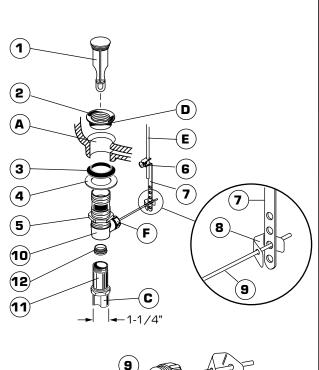


INSTALL POP-UP DRAIN

- Push Tail piece (11) down into Trap (C) (threaded end up).
- Thread Locknut (5), Washer (4) and Gasket (3) (Bevel side up) onto Drain Body (10).
- Apply a bead of Putty (D) to underside of Flange (2).
- Feed Drain Body (10) up through Sink (A) and thread the Flange (2) or (2A) fully onto Drain Body (10).
- Tighten Locknut (5) firmly, keeping the pivot rod hole pointed towards the back of the sink.
- Assemble Pivot Rod (9) as shown in Figure-3A. Notice the position of the Concave Washer (G).
- Insert Pivot Rod (9) into Drain Body (10) and tighten Pivot Nut (F).
- Push TAILPIECE INSERT (12) into TAILPIECE (11) and push TAILPIECE up and thread tightly into DRAIN BODY (10).
- Position Extension Rod (7) onto Pop-Up Rod (E) and tighten Thumbscrew (6).
- Remove one end of Clip (8) from Pivot Rod (9) by squeezing ends together while sliding.
- Insert Pivot Rod (9) or (9A) into second or third hole in Extension Rod (7) and reassemble Clip (8).
- Drop Stopper (1) into Drain Body (10).
- Adjust stopper height by repositioning Extension Rod (7) and tightening Thumbscrew (6).



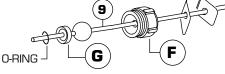



FIGURE-3A:

WATER SUPPLY CONNECTIONS

Note: FLEXIBLE HOSES (1, 2) on FAUCET (3) are (17-1/2") in length from base of faucet. If longer supply length is required installer must purchase adapters and additional supplies to complete connections.

Important: If SUPPLY HOSES (1, 2) are to long, loop as illustrated to avoid kinking .

- Connection on FLEXIBLE HOSES (1, 2) are 3/8" compression. Connect LEFT SUPPLY (1) to Hot shut off valve and RIGHT SUPPLY (2) to Cold shut off valve.
- Use adjustable wrenches to tighten connections. Do not over tighten.

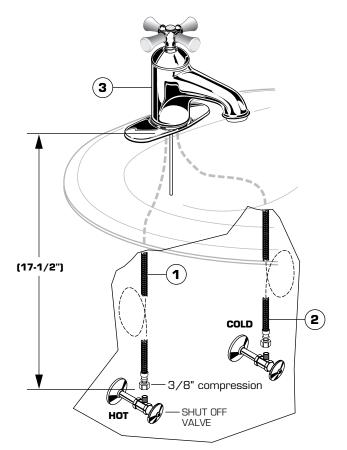

4 TEST INSTALLED FAUCET AND CHECK FOR LEAKS


- With HANDLE (1) in OFF position, turn on WATER SUPPLIES (2) and check all connections for leaks.
- Remove AERATOR (3).
- Operate HANDLE (1) to flush water lines thoroughly.
- Replace AERATOR (3).

CHECK DRAIN CONNECTIONS

- Operate LIFT ROD (4) and fill lavatory with water. Check that DRAIN STOPPER (5) makes a good seal and retains water in lavatory. If necessary adjust stopper height by repositioning LIFT ROD (4) and tightening Thumbscrew (6).
- Release DRAIN STOPPER (5) and check all drain connections and "P" trap for leaks. → Tighten if necessary.

ADJUST HOT LIMIT STOP

- By restricting HANDLE rotation and limiting the amount of hot water allowed to mix with the cold, the HOT LIMIT SAFETY STOP (5) reduces risk of accidental scalding. To set the maximum hot water temperature of your faucet, all you need to do is adjust the setting on the HOT LIMIT SAFETY STOP (5).
- Remove INDEX BUTTON (1), HANDLE SCREW (2) and pull off HANDLE (3).
- Turn CARTRIDGE STEM (4) to the OFF position (coldest setting) before making adjustment to HOT LIMIT STOP (5). Use a flat blade screwdriver to pry free the HOT LIMIT SAFETY STOP (5). Pull upward and rotate counterclockwise one number to limit hot water temperature. Use ARROW (6) on CARTRIDGE (7) and NUMBERS (8) on HOT LIMIT STOP (5) for indication.
- Replace HANDLE (3), HANDLE SCREW (2) and INDEX BUTTON (1).

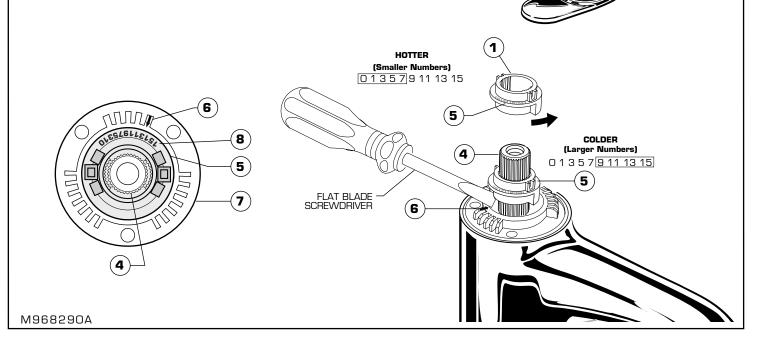

์1

6

COLD

2

4

нот

"P" TRAP

3

5

์1

2

3

5

