
OWNER'S GUIDE

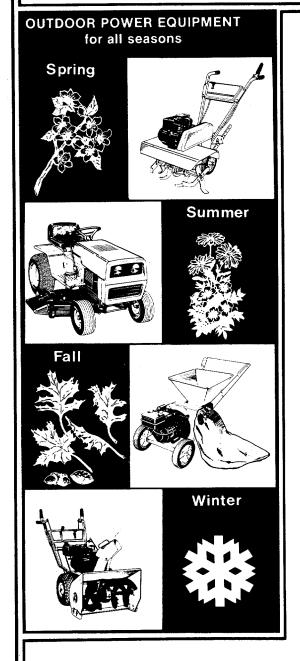

22" HI-WHEEL ROTARY MOWER

Model Number 116-500-000

Important:

Read Safety Rules and Instructions Carefully

Thank you for purchasing an American-built product.

INDEX

Safe Operation Practices	Maintenance10
	Off-Season Storage11
Controls	
Operation	Illustrated Parts
Adjustments	Repair Parts List
	Parts Information Back Cover



Instructions given with this symbol are for personal safety. Be sure to follow them.

LIMITED WARRANTY

For one year from the date of original retail purchase, MTD PRODUCTS INC will either repair or replace, at its option, free of charge, F.O.B. factory or authorized service firm, any part or parts found to be defective in material or workmanship. Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by MTD PRODUCTS INC.

This warranty will not apply to any part which has become inoperative due to misuse, excessive use, accident, neglect, improper maintenance, alterations, or unless the unit has been operated and maintained in accordance with the instructions furnished. This warranty does not apply to the engine, motor, battery, battery charger or component parts thereof. Please refer to the applicable manufacturer's warranty on these items.

This warranty will not apply where the unit has been used commercially.

Warranty service is available through your local authorized service dealer or distributor. If you do not know the dealer or distributor in your area, please write to the Customer Service Department of MTD.

The return of a complete unit will not be accepted by the factory unless prior written permission has been extended by MTD.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.



This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator.

In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester muffler is available at your nearest engine authorized service center.



To reduce the potential for any injury, comply with the following safety instructions. Failure to comply with the instructions may result in personal injury.

SAFE OPERATION PRACTICES FOR WALK-BEHIND MOWERS

TRAINING

- Read this owner's manual carefully in its entirety before attempting to assemble or operate this machine. Be completely familiar with the controls and the proper use of this machine before operating it. Keep this manual in a safe place for future and regular reference and for ordering replacement parts.
- Your rotary mower is a precision piece of power equipment, not a plaything. Therefore, exercise extreme caution at all times.
- Never allow children to operate a power mower. Only persons well acquainted with these rules of safe operation should be allowed to use your mower.
- No one should operate this unit while intoxicated or while taking medication that impairs the senses or reactions
- 5. Keep the area of operation clear of all persons, particularly small children and pets. Stop engine when they are in the vicinity of your mower. Although the area of operation should be completely cleared of foreign objects, an object may have been overlooked and could be accidently thrown by the mower in any direction and cause serious personal injury to the operator or any others allowed in the area.

PREPARATION

- Thoroughly inspect the area where the equipment is to be used. Remove all stones, sticks, wire, bones and other foreign objects which could be picked up and thrown by the mower in any direction and cause serious personal injury to the operator or any others allowed in the area.
- 2. Do not operate equipment when barefoot or wearing open sandals. Always wear substantial footwear.
- 3. Do not wear loose fitting clothing that could get caught on the mower.
- 4. Check the fuel before starting the engine. Gasoline is an extremely flammable fuel. Do not fill the gasoline tank indoors, while the engine is running, or while the engine is still hot. Replace gasoline cap securely and wipe off any spilled gasoline before starting the engine as it may cause a fire or explosion.
- Disengage the self-propelled mechanism or drive clutch on units so equipped before starting the engine.
- 6. The blade control handle is a safety device. Never attempt to bypass its operation. Doing so makes the safety device inoperative and may result in personal injury through contact with the rotating blade. The blade control handle must operate easily in both directions.
- 7. Never attempt to make a wheel or cutting height adjustment while the engine is running.
- 8. Mow only in daylight or in good artificial light.
- Never operate the equipment in wet grass. Always be sure of your footing. A slip and fall can cause serious personal injury. Keep a firm hold on the handle and walk, never run.

10. Always wear safety glasses or eye shields during operation or while performing an adjustment or repair, to protect eyes from foreign objects that may be thrown from the machine in any direction.

OPERATION

- Do not change the engine governor settings or overspeed the engine. Excessive engine speeds are dangerous.
- Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times as the rotating blade can cause injury.
- Stop the blade when crossing gravel drives, walks or roads.
- 4. After striking a foreign object, stop the engine, remove the wire from the spark plug, and thoroughly inspect the mower for any damage. Repair the damage before restarting and operating the mower.
- If the equipment should start to vibrate abnormally, stop the engine and check immediately for the cause. Vibration is generally a warning of trouble.
- 6. Shut the engine off and wait until the blade comes to a complete stop before removing the grass catcher or unclogging the chute. The cutting blade continues to rotate for a few seconds after the engine is shut off. Never place any part of the body in the blade area until you are sure the blade has stopped rotating.
- Before cleaning, repairing or inspecting, make certain the blade and all moving parts have stopped.
 Disconnect the spark plug wire, and keep the wire away from the spark plug to prevent accidental starting.
- 8. Do not run the engine indoors.
- Mow across the face of slopes, never up-and-down. Exercise extreme caution when changing direction on slopes. Do not mow excessively steep slopes. Always be sure of your footing. A slip and fall can cause serious personal injury.
- 10. Always disconnect electric mowers (line operated) before cleaning, repairing or adjusting.
- 11. Never operate mower without proper guards, plates or other safety protective devices in place.
- DO NOT OPERATE this mower with the chute door open, unless the complete grass catcher is properly mounted on the mower.

MAINTENANCE AND STORAGE

- Check the blade and engine mounting bolts at frequent intervals for proper tightness.
- 2. Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.
- Never store the equipment with gasoline in the tank inside of a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.
- 4. To reduce fire hazard, keep the engine free of grass, leaves, or excessive grease.
- Check the grass catcher bag frequently for wear or deterioration. For safety protection, replace only with new bag meeting original equipment specifications.



This unit is shipped WITHOUT GAS-OLINE or OIL. After assembly, see separate engine manual for proper fuel and engine oil recommendations.

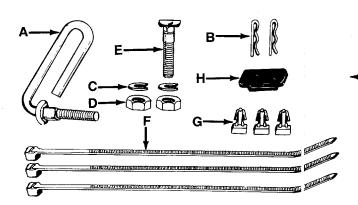


FIGURE 1.

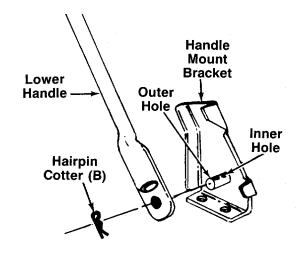


FIGURE 2.

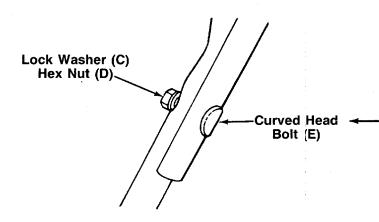


FIGURE 3.

ASSEMBLY INSTRUCTIONS



Reference to right or left hand side of the mower is observed from the operating position.

Contents of hardware pack: (See figure 1)

- A (1) Rope Guide Bolt
- B (2) Hairpin Cotters
- C (2) Lock Washers 5/16" I.D.
- D (2) Hex Nuts 5/16-18 Thread
- E (1) Curved Head Carriage Bolt
- F (3) Cable Ties
- G (3) Cable Anchors
- H (1) Plastic Plug (May Be Already Assembled)
- I (1) Cable Clamp (Not Shown)
- Remove lawn mower and loose parts from carton.
 Make certain all parts and literature have been removed from the carton before the carton is discarded.
- Extend the throttle control cable (attached to the upper handle) and the brake cable (attached to the engine) and place on the floor. Be careful not to bend or kink control cables.
- Attach the lower handle by placing the bottom holes in the lower handle over the weld pins on the handle mount brackets. Make certain the instruction label on the lower handle can be read from the operating position. Secure with hairpin cotters—(B) in inner holes on weld pins. See figure 2.



There are two (2) holes in the handle mount brackets. Place the hairpin cotter in the inner hole for operation. Outer hole is for storage.




It may be necessary to bend the ends of the lower handle outward slightly to obtain a tight fit against the handle mount brackets.

4. Place the upper handle in position over the lower handle. The control housing must be on the left hand side of the handle. Secure the left hand side of upper handle using the curved head bolt (E), lock washer (C) and hex nut (D) as shown in figure—3.



The right hand side of the handle will be secured with the rope guide bolt. However, left handed operators may assemble the rope guide bolt to the left side of the handle for easier starting.

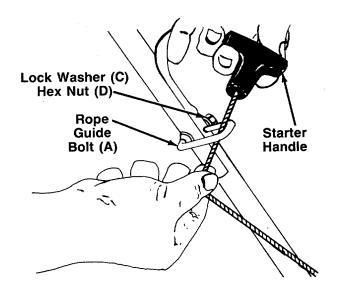


Insert the rope guide bolt (A) through the right hand
 side of upper and lower handle. See figure 4.
 Secure with lock washer (C) and hex nut (D), finger tight only.



Starter rope will be assembled in step 9.

FIGURE 4.

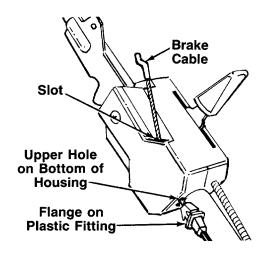


6. Route the brake cable under the lower handle. Place the end of the brake cable into the upper hole on the bottom of the control housing, and through the slot in the side of the housing as shown in figure 5. The angle of the flange on the plastic fitting must be positioned downward as shown. Be careful not to bend or kink the cable.



Brake cable must be assembled as shown for proper blade brake operation.

FIGURE 5.

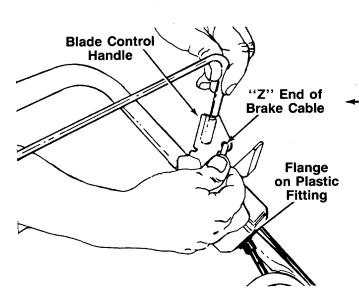

- 7. Snap the plastic fitting on the end of the cable into the control housing. Hook the "Z" end of the brake cable into the hole in the blade control handle. See figure 6.
- The starter rope is wound around the starter handle. Maintain the tension on the rope as you unwind it.
- Slip the starter rope into the rope guide bolt as shown in figure 4. If more slack is needed in the starter rope, disconnect and ground the spark plug wire. Depress the blade control handle and pull additional rope out from the engine.
- 10. Tighten the hex nut on the rope guide bolt securely.

FIGURE 6.

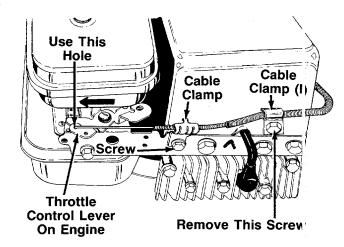
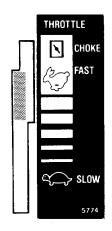


FIGURE 7.



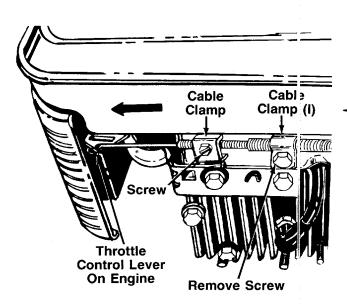


FIGURE 7A.

Steps 11 through 15 are for standard Briggs and Stratton engines. If your unit is equipped with a deluxe Briggs and Stratton engine (see figure 7A), follow steps 11A through 15A.

Standard Engines:

- 11. Place the throttle control lever on the handle in FAST position.
- 12. Route the throttle control cable under the lower handle and inside the handle mount bracket. Hook the "Z" end of the throttle control cable into the outside hole in the control lever on the engine.
- 13. Using a 7/16" wrench, remove the screw on the engine shown in figure 7.
- 14. Remove the screw on the cable clamp shown in figure 8. Slip the control casing under the clamp. Replace the screw, but do not tighten (cable must still move freely beneath the clamp).
- 15. Push the throttle control lever on the engine to the full open position (as far toward the **outside** of the unit as it will go) as shown in figure 7. Tighten the screw to secure the throttle control cable in this position.

Deluxe Engines:

- 11A. Move throttle control lever on handle forward until it stops in FAST position (do not push all the way forward to CHOKE position). See figure 7A.
- 12A. Route the throttle control cable under the lower handle and inside the handle mount bracket. Hook the "Z" end of the throttle control cable into the hole in the control lever on the engine.
- 13A. Using a 7/16" wrench, remove the screw on the engine shown in figure 7A.
- 14A. Remove the screw on the cable clamp shown in figure 7A. Slip the control casing under the clamp. Replace the screw, but do not tighten (cable must still move freely beneath the clamp).
- 15A. Slide the throttle control lever on the engine as far toward the outside of the engine as it will go easily (just until resistance is felt) as shown in figure 7A. (Do not force it into the extreme outside position, which is the CHOKE position.) Tighten the screw to secure the throttle control cable in this position.

All Units:

- 16. Loosen the screw on the clamp on the side of the engine. Secure the cable away from the muffler. Be careful not to bend or kink the cable. Tighten the screw.
- Secure cable casing to the front of engine with cable clamp (I) provided in hardware pack and screw removed from engine in step 13 (or 13A). Do not overtighten.

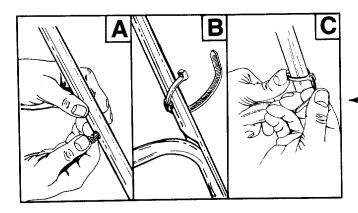


FIGURE 8.

- 18. Secure brake and throttle cables to the left side of the handle as follows.
 - A. Insert plastic cable anchors (G) into holes provided on the inside of the handles, one on the upper handle and two on the lower handle.
 See figure 8A.
 - B. Slip cable ties (F) through cable anchors so the teeth in the cable tie will be against the handle (smooth side is away from the handle). See figure 8B.
 - C. Secure the cables with the cable ties. See figure 8C.
 - D. Cut off excess ends of cables ties.
- 19. If plastic plug is not already assembled, insert plastic plug (H) into hole in the top rear of the deck by slipping one end of plug into hole, then pressing down on the other end of plug.
- 20. Make certain **all** nuts and bolts are tightened securely.

CONTROLS

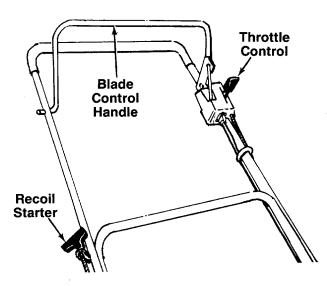


FIGURE 9.

1

BLADE CONTROL HANDLE

WARNING
THIS CONTROL MECHANISM IS A
SAFETY DEVICE. NEVER ATTEMPT
TO BYPASS ITS OPERATIONS

The blade control handle is located on the upper handle of the mower. See figure 9. The blade control handle must be depressed in order to operate the unit. Release the blade control handle to stop the engine and blade.



The blade will be rotating whenever the engine is running.

THROTTLE CONTROL

The throttle control is located on the left side of the upper handle. It is used to regulate the engine speed.



The throttle control cannot be used to stop the engine.

RECOIL STARTER

The recoil starter handle is attached to the handle. See figure 15. Stand behind the unit in the operating position to start the unit.

OPERATION



FIGURE 10.

Keep hands and feet away from the chute area on cutting deck. See figure 10.



For shipping purposes your mower is set with the wheels in a low cutting height position. For best results raise the cutting position until it is determined which height is best for your lawn. See cutting height adjustment section.

BEFORE STARTING

- 1. Fill sump with oil as instructed in the separate engine manual packed with your unit.
- Fill fuel tank, using clean, fresh, unleaded, lov -lead or regular grade leaded gasoline. Fill tank completely!

DO NOT MIX OIL WITH GASOLINE.

- 3. Attach spark plug wire to spark plug.
- 4. Deluxe Briggs and Stratton engines: Open fuel shut-off valve. See figure 11.

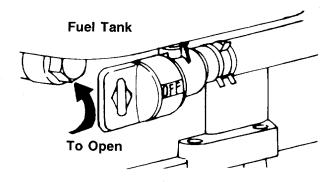


FIGURE 11.

TO START ENGINE AND ENGAGE BLADE

1. Move the throttle control lever to FAST or START position.



On units with deluxe Briggs and Stratton engines, move throttle control lever to CHOKE position.

- Standing behind the unit, depress the blade control handle and hold it against the upper handle as shown in figure 12.
- 3. Grasp the recoil starter handle as shown and pull back rapidly, extending rope fully. Return it slowly to the rope guide bolt.
- 4. After engine starts, move throttle control to desired engine speed.

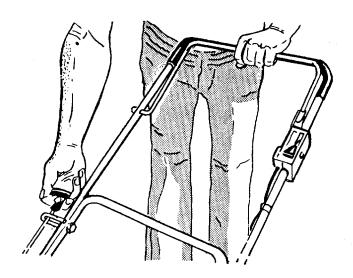


FIGURE 12.

TO STOP ENGINE AND BLADE

1. Release the blade control handle to stop the engine and blade.



The blade continues to rotate for a few seconds after the engine is shut off.

2. Disconnect the spark plug wire and ground it against the engine to prevent accidental starting while equipment is unattended.

USING YOUR ROTARY MOWER

Be sure that lawn is clear of stones, sticks, wire, or other objects which could damage lawn mower or engine. Such objects could be accidently thrown by the mower in any direction and cause serious personal injury to the operator and others.

Operate a new engine at intermediate speeds and light load for the first few hours as you would a new automotive engine.

For the best results, do not cut wet grass because it tends to stick to the underside of the mower, preventing proper discharge of grass clippings, and could cause you to slip and fall. New grass, thick grass or wet grass may require a narrower cut. Blade speed should be adjusted to the condition of the lawn.

The best mowing pattern is one that allows the clippings to discharge towards the uncut part of the lawn. This permits recutting of the clippings to further pulverize them. When cutting high weeds, discharge towards cut portion, then recut at right angles to first direction.

For best results, cut off one-third or less of the total length of the grass. Lawn should be cut in the fall as long as there is growth.

This mower is designed to be operated at full throttle to give you the best cut and do the most effective job of bagging the cut grass.



If you strike a foreign object, stop the engine. Remove wire from spark plug, thoroughly inspect the mower for any damage, and repair the damage before restarting and operating the mower. Extensive vibration of the mower during operation is an indication of damage. The unit should be promptly inspected and repaired.

ADJUSTMENTS



Do not at any time make any adjustment to lawn mower without first stopping engine and disconnecting spark plug wire.

CUTTING HEIGHT ADJUSTMENT

Adjustment may be made by removing and moving axle bolts to desired position. Cutting heights will be raised as axle bolts are moved to a lower hole and lowered as axle bolts are moved to a higher hole in the deck. All axle bolts must be mounted in the same relative position to the deck. Cupped side of belleville washers must be against the deck. See figures 13 and 14.

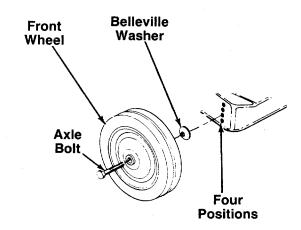


FIGURE 13.

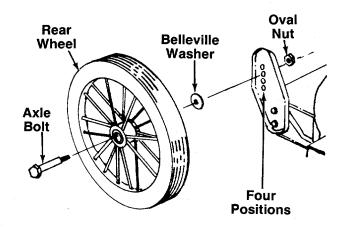


FIGURE 14.

THROTTLE

The throttle control wire assembly can be adjusted if necessary. Refer to steps 11 through 15 of assembly instructions.

CARBURETOR ADJUSTMENTS



If any adjustments are made to the engine while the engine is running (e.g. carburetor), keep clear of all moving parts. Be careful of heated surfaces and muffler.

Minor carburetor adjustment may be required to compensate for differences in fuel, temperature, altitude and load.

Refer to the separate engine manual packed with your mower for carburetor adjustment information.

LUBRICATION



Always stop engine and disconnect spark plug wire before cleaning, lubricating or doing any kind of work on lawn mower.

Blade Control—Lubricate the pivot points on the blade control handle and the brake cable at least once a season with light oil. See figure 15. The blade control must operate freely in both directions.

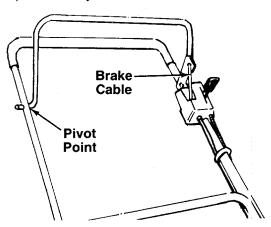


FIGURE 15.

Chute Deflector—The torsion spring and pivot point should be lubricated periodically with light oil to prevent any rust or binding. Deflector must work freely.

Wheels—Mower may be provided with ball bearing wheels. Lubricate at least once a season with ight oil. Also, if the wheels are removed for any reason, lubricate the surface of the axle bolt and the inner surface of the wheel with light oil. A 4 oz. plastic bottle of light oil lubricant is available. Order part number 737-0170. Engine oil may also be used.

Engine—Follow engine manual for lubrication instructions.

Throttle—Periodically lubricate throttle control lever and throttle wire assembly with a few drops of light oil for ease of operation.

MAINTENANCE



When tipping the unit, empty the fuel tank and keep engine spark plug side up.

CUTTING BLADE

A. Removal for Sharpening or Replacement



Be sure to disconnect and ground the spark plug wire before working on the cutting blade to prevent accidental engine starting. Protect hands by using heavy gloves or a rag to grasp the cutting blade.

Remove the large bolt and lock washer which holds the blade and adapter to the engine crankshaft. Remove the blade and adapter from the crankshaft.

If the blade or blade adapter needs replacing, remove the two small bolts, lock washers and nuts which hold the blade to the adapter.



Periodically inspect the blade adapter for cracks, especially if you strike a foreign object. Replace when necessary.

B. Sharpening

Remove the cutting blade by following the directions of the preceding section.

When sharpening the blade, follow the original angle of grind as a guide. It is **extremely important** that each cutting edge receives an equal amount of grinding to prevent an unbalanced blade. An unbalanced blade will cause excessive vibration when rotating at high speeds, may cause damage to the mower and could break, causing personal injury.

It is recommended that the blade always be removed from the adapter for the best test of balance. The blade can be tested by balancing it on a round shaft screwdriver. Remove metal from the heavy side until it balances evenly.

C. Reassembly

Before reassembling the blade and the blade adapter to the unit, lubricate the engine crankshaft and the inner surface of the blade adapter with light oil. Lubricating the bolt holes, bolts and inner surface of the nuts with light oil is also recommended. A 4 oz. plastic bottle of light oil lubricant is available. Order part number 737-0170. Engine oil may also be used.

When replacing the blade, be sure to install the blade with the side of the blade marked "Bottom" (or with part number) facing the ground when the mower is in the operating position.

Blade Mounting Torque

3/8" Dia. Bolt 375 in. lb. min., 450 in. lb. max. 5/16" Dia. Bolt 150 in. lb. min., 250 in. lb. max.

To insure safe operation of your unit, all nuts and bolts must be checked periodically for correct tightness.

DECK

The underside of mower deck should be cleaned after each period of use as grass clippings, leaves, dirt and other matter will accumulate. This accumulation of grass clippings, etc., is undesirable as it will invite rust and corrosion and may cause an uneven discharge of grass clippings at the next cutting.

The deck may be cleaned by tilting the mower forward or on its side and scraping clean with a suitable tool or by washing with a stream of water from a garden hose.



Do not direct the stream of water at a hot engine as damage to the engine may result.

ENGINE OIL

Check oil level before starting engine and after every 5 hours of operation. ADD oil as necessary to keep level to full mark on dipstick. Before removing dipstick, clean area around dipstick to prevent dirt from entering oil fill tube. Engine should be in a level position when checking oil.

Change oil after first 5 hours of operation. Thereafter change every 25 hours. Change oil while engine is warm. Oil may be drained thru oil drain on bottom of the engine. Oil capacity 1-1/4 pints.

AIR CLEANER

Service air cleaner every 25 hours under normal conditions. Clean every few hours under extremely dusty conditions. Poor engine performance and flooding usually indicates that the air cleaner should be serviced.

To service the air cleaner, refer to the separate engine manual packed with your unit.

SPARK PLUG

The spark plug should be cleaned and the gap reset once a season. Spark plug replacement is recommended at the start of each mowing season; check engine manual for correct plug type and gap specifications.

OFF-SEASON STORAGE

The following steps should be taken to prepare lawn mower for storage.

- 1. Clean and lubricate mower thoroughly as described in the lubrication instructions.
- 2. Refer to engine manual for correct engine storage instructions.
- 3. Coat mower's cutting blade with chassis grease to prevent rusting.
- 4. Store mower in a dry, clean area.



When storing any type of power equipment in an unventilated or metal storage shed, care should be taken to rustproof the equipment. Using a light oil or silicone, coat the equipment, especially cables and all moving parts.

HANDLE STORAGE

The handle may be placed in an upright position for storage.

Move hairpin cotters to outer hole on weld pins. See figure 2. Press inward on the bottom of the lower handle and push forward. The handle will lock in this position.

To place the handle in the operating position, remove the starter rope from the rope guide bolt. Grasp the lower handle at the bottom, press inward slightly and tip the handle backward. Place the cotter hairpins in the inner holes. With the spark plug wire disconnected and grounded, depress the blade control handle and pull the starter rope out from the engine. Slip the starter rope into the rope guide bolt.



The use of any accessory on this Rotary Mower other than those manufactured by the mower manufacturer is **not** recommended.

GRASS CATCHER Model (165 is available as replacement equipment for the mower shown in this manual.



- 1. DO NOT operate the rhower without the entire grass catcher or chute deflector in place.
- 2. DO NOT operate the mower without the protective shield on the rear of the deck in place.



Under normal usage bag material is subject to wear and should be checked periodically. Be sure any replacement bag complies with the mower manufacturer's recommendations.

For replacement bags, use only factory authorized replacement bag No. 764-0217.

Trouble Shooting Chart


Problem	Cause	Remedy
1 Engine fails to start	A Blade control handle disengaged	A Engage blade control handle.
	B Check fuel tank for gas	B Fill tank if empty.
	C Fuel shut-off valve closed	C Open fuel shut-off valve.
	(on engines so equipped)	D. Commont load wire
	D Spark plug lead wire discon- nected	D Connect lead wire.
	E Throttle control lever not in	E Move throttle lever to start
	the starting position	position.
	F Faulty spark plug	F Spark should jump gap be- tween control electrode and
	•	side electrode. If spark does
		not jump, replace the spark
		plug.
	G Carburetor improperly ad- justed, engine flooded	G Remove spark plug, dry the plug, crank engine with plug
	justed, engine nooded	removed, and throttle in off po-
		sition. Replace spark plug and
		lead wire and resume starting
	H Old stale gasoline	procedures. H Drain and refill with fresh
	11 Old State gasonile	gasoline.
	I Engine brake engaged	I Follow starting procedure.
2 Hard starting or	A Spark plug wire loose	A Connect and tighten spark
loss of power	B Carburetor improperly	plug wire. B Adjust carburetor. See separate
	adjusted	engine manual.
	C Dirty air cleaner	C Clean air cleaner as described
	-	in separate engine manual.
3 Operation erratic	A Dirt in gas tank	A Remove the dirt and fill tank with fresh gas.
	B Dirty air cleaner	B Clean air cleaner as described
·	-	in separate engine manual.
·	C Water in fuel supply	C Drain contaminated fuel and
	D Vent in gas cap plugged	fill tank with fresh gas. D Clear vent or replace gas cap.
	E Carburetor improperly	E Adjust carburetor. See
	adjusted	separate engine manual.
4 Occasional skip	A Carburetor idle speed too	A Adjust carburetor. See
(hesitates) at high	slow B Spark plug gap too close	separate engine manual. B Adjust to .030".
speed	C Carburetor idle mixture ad-	C Adjust carburetor. See
	justment improperly set	separate engine manual.
5 Idles poorly	A Spark plug fouled, faulty, or	A Reset gap to .030" or replace
	gap too wide	spark plug.
	B Carburetor improperly adjusted	B Adjust carburetor. See separate engine manual.
	C Dirty air cleaner	C Clean air cleaner as described
	•	in separate engine manual.
6 Engine overheats	A Carburetor not adjusted	A Adjust carburetor. See
	properly B Air flow restricted	separate engine manual. B Remove blower housing and
	All now restricted	clean as described in separate
		engine manual.
:	C Engine oil level low	C Fill crankcase with the proper oil.
7 Evennius vibration	A Cutting blade lease or	A Tighten blade and adapter.
7 Excessive vibration	A Cutting blade loose or unbalanced	Balance blade.
•	B Bent cutting blade	B Replace blade.

Note: For repairs beyond the minor adjustments listed above, contact your local authorized service dealer.

Model 500



This instruction manual covers various models and all specifications shown do not necessarily apply to your model. Specifications subject to change without notice or obligation.

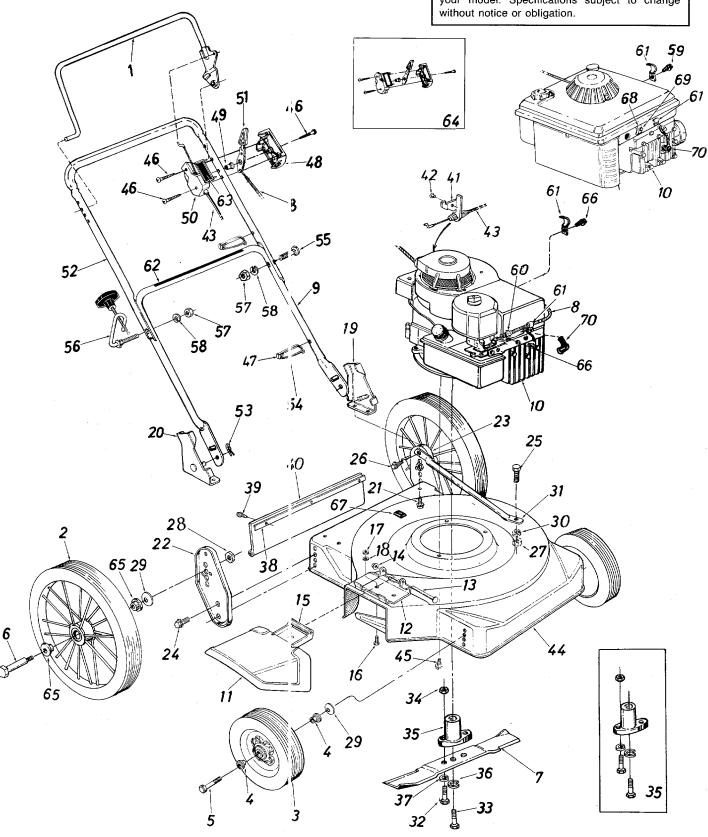

Model 500 PARTS LIST FOR MODEL 500 ROTARY MOWER

	VIOGE 500 PARIS EIST FOR MODEL 300 ROTART MOWER								
REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART	NO.	NO.	COLOR CODE	DESCRIPTION	NEW PART
- 4	14321		Control Handle Ass'y.—L.H.		36	736-0217		L-Wash. 3/8" I.D.—H.D.	
2	734-0244		Rear Wheel Ass'y.—Comp.		37	736-0119		L-Wash. 5/16" I.D.*	
_	7010211		14.0 x 1.75]	38	14836		Retaining Strip	
3	**		Front Wheel Ass'y.—Comp.		39	710-0776		Hex Wash. Hd. "AB"-Tap	
•			8.0 x 1.75					Scr. ¼" x .62" Lg.	
4	**		Bearing		40	731-0587		Rear Flap Ass'y.	
5	**		Axle Bolt—Front		41	14924		Cable Bracket	
6	738-0481	•	Shoulder Bolt .50" Dia. x		42	728-0171		Pop Rivet .156 Dia. x .379	
·			2.62		43	746-0477		Control Cable—43"	
7	742-0125		22" Blade		44	14919		22" Deck Ass'y.	
8	746-0633		Throttle Wire—58" Lg.		45	710-0654		Hex Wash. Hd. TT-Tap Scr.	
9	749-0373	1	Lower Handle (Chrome)					3/8-16 x 1.00" Lg.	
	749-0372		Lower Handle (Painted)		46	710-0796		Truss Mach. "B"-Tap Scr.	
10	_		Engine	1				#12 x 1.50" Lg.	1
11	14944	462	Chute Deflector Ass'y.		47	726-0241		Cable Anchor	N
			Comp.		48	731-0817		Control Panel Half	N
12	11130		Adapter Plate		49	731-0524		Control Disc Pin	
13	711-0555	1	Pivot Pin		50	731-0816		Clutch Panel Half	N
14	726-0106		Push Nut 1/4" Rod		51	731-0528		Throttle Control Lever	
15	732-0253		Torsion Spring		52	749-0536		Upper Handle (Chrome)	
16	710-0289		Hex Bolt 1/4-20 x .50" Lg.*			749-0538		Upper Handle (Painted)	
17	712-0287		Hex Nut 1/4-20 Thd.*		53	714-0104		Intern. Cot. Pin 5/16" Dia.	
18	736-0329		L-Wash. 1/4" I.D.*		54	725-0157		Cable Tie	1
19	12935		Handle Mount Brkt.—L.H.		55	710-0671		Curved Carriage Bolt 5/16-18	
20	12936		Handle Mount Brkt.—R.H.					_ x 1.38" Lg.	
21	710-0603		Hex Wash. Hd. "B" Tap Scr.		56	710-0842		Rope Guide Bolt	
	<u> </u>	1	5/16-18 x .50" Lg.		57	712-0267		Hex Nut 5/16-18 Thd.*	
22	14068		Extension Brkt.—R.H.	1	58	736-0119		L-Wash. 5/16" I.D.*	
23	14069		Extension Brkt.—L.H.		59	710-0429	1	Hex B-Tap Scr. #10 x .38"	
24	710-0209	+	Hex Sems Bolt 3/8-16 x .62"	Ì				Lg.	
25	710-0258	;	Hex Bolt 1/4-20 x .62" Lg.*		60	751-0369)	Casing Clamp	
26	710-0603	i	Hex Wash. Hd. "B" Tap Scr.		61	12894	.	Casing Clamp	
			5/16-18 x .50" Lg.	1	62	777-5776		Instruction Label—Handle	N
27	712-0287		Hex Nut 1/4-20 Thd.*		63	777-5773		Control Label—Throttle	N
28	712-0297	'	Oval Nut 3/8-16 Thd.	1	64	753-0430		Control Housing Comp.	N
29	736-0105		Bell-Wash400" I.D. x .88"		65	748-0147		Flange Bearing	
30	736-0329		L-Wash. 1/4" !.D.*		66	710-0227		Hex Wash. Hd. AB-Tap Scr.	
31	749-0400		Stabilizing Strut			704 050	.	#8 x .38" Lg.	
32	710-0888	1	Hex Bolt 5/16-24 x 1.00" Lg.		67	731-0564		Plastic Plug	N
			(Grade 5)		68	751-0442		Casing Clamp	
33	710-0331		Hex Bolt 3/8-24 x 2.25" Lg.		69	710-0436		Hex B-Tap Scr. #10 x .62" Lg.	1
			(Grade 5)		70	735-0639		Spark Plug Boot	
34	712-0123		Hex Nut 5/16-24 Thd.*		-	8500-000	ט- <i>ו</i>	Hardware Pack	
35	753-0348	3	Blade Adapter Kit						<u> </u>

^{*}For faster service obtain standard nuts, bolts, and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

If color or finish is important when ordering parts, use the appropriate color code shown below [i.e. (part no.)-462 for Red Flake Finish].

Color Codes

312—White	463—Topflite Red
436—Radiant Yellow	480—Brilliant Green
452—Black	483—Charcoal Grey
456—Radiant Tangerine	499—Beige
462—Red Flake	623—Silver Mist

NOTE: The engine is not under warranty by the mower manufacturer. If repairs or service is needed on the engine, please contact your nearest authorized engine service outlet. Check the "Yellow Pages" of Find It Fast In The your telephone book under "Engines—Gasoline." Yellow Pages

**FRONT WHEEL CHART

Type of Wheel	Part No.	Bearing Part No.	Axle Bolt
Plastic	734-0841		738-0213
Steel w/Fortiflex Bearings	734-0812		738-0213
Steel w/Ball Bearings	734-0645		710-0427

PARTS INFORMATION

POWER EQUIPMENT PARTS AND SERVICE

Parts and service are available through the authorized service firms listed below. All orders should specify the model number of your unit, part numbers, description of parts and the quartity of each part required.

BRIGGS AND STRATTON, TECUMSEH AND PEERLESS PARTS **AND SERVICE**

Briggs & Stratton, Tecumseh and Peerless parts and servic should be handled by your nearest authorized engine service firm. Check the yellow pages of your telephone directory under the listing Engines-Gasoline, Briggs & Stratton or Tecumseh Lauson.

NOTE: If any parts are found to be missing or defective upon assembly of this unit, write to advise the factory so that immediate replacement can be made.

ALABAMA	BIRMINGHAM	NORTH CAROLINA Smith Hardware Co	GOLDSBORO
Auto Electric & Carburetor Co.	2625 4th Ave. S 35233	Smith Hardware Co	515 N. George St 27530
ARKANSAS Sutton's Lawn Mower Shop	NORTH LITTLE ROCK		GREENSBURG
Sutton's Lawn Mower Shop	5301 Roundtop Drive	Dixie Sales Company	335 N. Green 27402
CALIFORNIA Billious	Box 368, Rt. 4 72117	OHIO	CARROLL
CALIFORNIA	PORTERVILLE	Stebe's Mid-State Mower Supply	. Box 366, 71 High St 43112
COLORADO	75 North D Street 93257		CLEVELAND
COLONADO	DENVER	Bleckrie, Inc	7900 Lorain Ave 44102
Spitzer Industrial Products Co	6601 N.		WADSWORTH
FLORIDA	Washington St80229	National Central	
	JACKSUNVILLE		YOUNGSTOWN
hauco distributors	4909 Victor St. Box 5459	Burton Supply Co	1301 Logan Ave.
	HIALEAH		Box 929 44501
Small Eng. Diet	. 7995 W. 26th Court 33016	OKLAHOMA	MUSKOGEE
GEORGIA	7990 W. 2011 COURT 33016	OKLAHOMA Victory Motors, Inc.	605 S. Cherokee 74401
East Point Cycle & Key Inc	EAST POINT 2834 Church St 30344	OREGON Kenton Supply Co	PORTLAND
ILLINOIS	LYONS	Kenton Supply Co	8216 N. Denver Ave 97217
Koon Edgo Co	8615 Ogden Ave 30534	PENNSYLVANIA EECO Inc	HARRISBURG
INDIANA	6615 Ogden Ave 50534	EECO Inc	4021 N. 6th St 17110
Porto ⁰ Colon Inc	ELKHART 2101 Industrial Pkwy 46516	The same Bull O	WILLOW GROVE
IOWA	2101 Industrial Pkwy 46516	Thompson Rubber Co	850 Davisville Rd 19090
Dower Lown & Corden Fault	DUBUQUE	Bluemont Co	PITISBURGH
Power Lawn & Garden Equip	2551 J.F. Kennedy 52001	Bluemont Co	11125 Frankstown Rd 15235
LOUISIANA Suhren Engine Co	NEW ORLEANS	Frank Roberts & Sons	PUNXSUIAWNEY
Sunren Engine Co	8330 Earhart Blvd 70118	Frank Roberts & Sons	R.D. 2 15/6/
MARYLAND Center Supply Co	TAKOMA PARK	Scranton Auto Ignition Co	SCRANTON 1122 25 March 12502
Center Supply Co	6867 New Hampshire	TENNECCEE	1133-35 Wyoming Ave. 1850§
	Ave	TENNESSEE Ace Distributors	2102 Magnetic 27010
MASSACHUSETTS	SPRINGFIELD	Ace Distributors	MEMPHIS
Morton B. Collins Co	300 Birnie Ave)1107	American Sales & Service, Inc	3035 43 Polibrook 20116
MICHIGAN Lorenz Service Co	LANSING	TEXAS	DALLAS
Lorenz Service Co	2500 S. Pennsylvania 18910	Marr Brothers Inc	423 E Jofforson 75202
Daniel English and Blat	MOUNT CLEMENS	man Brothere, me	FORT WORTH
Power Equipment Dist	340 Hubbard	Woodson Sales Corp	6733 Baker Blvd
MINNESOTA Hance Distributing Inc	HOPKINS	11000001, 00100 001p.1	Hwv 10 76118
Hance Distributing Inc	420 Excelsior Ave. W 5343		HOUSTON
MISSOURI Automotive Equip. Service	KANSAS CITY	Bullard Supply Co	2409 Commerce St 77003
Automotive Equip. Service	3117 Holmes St		CAN ANTONIO
Ross-Frazer Supply Co	ST. JOSEPH	Engine House Inc	8610 Botts Lane
		UTAH	P.O. Box 17867 78217
Henzler, Inc.	ST. LOUIS	UTAH	SALT LAKE CITY
Henzier, Inc.	2015 Lemay Ferry Rd	Powered Products	1661 N. Beck St 84116
NEW JERSEY Lawnmower Parts Inc	Z1Z One - I. Del	VIRGINIA	ASHLAND
NEW MEYICO	/ I/ Creek Rd	VIRGINIA RBI Corp.	101 Cedar Ridge Dr 23005
NEW MEXICO Spitzer Eng. & Parts Co	ALBUQUERQUE	WASHINGTON	SEATTLE
NEW YORK	1023 THITO AVE. N.W 87103	WASHINGTON Equip. Northwest	1410 14th Ave98122
NEW YORK Gamble Dist., Inc	Wood Ford Aven	WISCONSIN	MILWAUKEE
Gamble Dist., IIIC	. vvest End Ave 3619	Wisconsin Magneto Inc	4727 N. Teutonia St 53209

WARRANT) PARTS AND SERVICE POLICY

(0685)

The purpose of warranty is to protect the customer from defects in workmanship and materials, defects which are NOT detected at the time of manufacture. It does not provide for the unlimited and unrestricted replacement of parts. Use and maintenance are the responsibility of the customer. The manufacturer cannot assure responsibility for conditions over which it has no control. Simply put, if it's the manufacturer's fault, it's the manufacturer's responsibility; if it's the customer's fault, it's the customer's responsibility

CLAIMS AGAINST THE MANUFACTURER'S WARRANTY INCLUDES:

- 1. Replacement of Missing Parts on new equipment.
- 2. Replacement of Defective Parts within the warranty period.
- 3. Repair of Defects within the warranty period.

All claims MUST be substantiated with the following information:

- 1. Model Number of unit involved.
- 2. Date unit was purchased or first put into service.
- 3. Date of failure.
- 4. Nature of failure.