
OWNER'S GUIDE



22" ELECTRIC START REAR DISCHARGE THREE SPEED ROTARY MOWER

Model Number 126-367-000

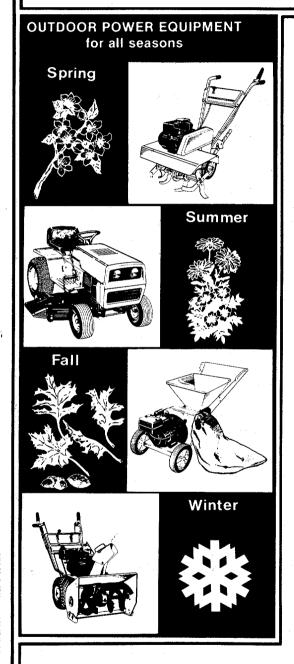

The battery pack is shipped in a partially charged state and must be charged 16 hours prior to initial use. Follow charging instructions on page 11.

Important:

Read Safety Rules and Instructions Carefully

Thank you for purchasing an American-built product.

INDEX

Safe Operation Practices	3	Maintenance	14
Assembly	4	Off-Season Storage	16
Controls			
Operation			
Adjustments			
Lubrication			



Instructions given with this symbol are for personal safety. Be sure to follow them.

LIMITED WARRANTY

For one year from the date of or ginal retail purchase, MTD PRODUCTS INC will either repair or replace, at its option, free of charge, F.O.B. factory or authorized service firm, any part or parts found to be defective in material or workmanship. Transportation charges for the movement of any power equip nent unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by MTD PRODUCTS INC.

This warranty will not apply to any part which has become inoperative due to misuse, excessive use, accident, neglect, in proper maintenance, alterations, or unless the unit has been operated and maintained in accordance with the instructions furnished. This warranty does not apply to the engine, motor, battery, battery charger or component parts thereof. Please refer to the applicable manufacturer's warranty on these items.

This warranty will not apply when the unit has been used commercially.

Warranty service is available through your local authorized service dealer or distributor. If you do not know the dealer or distributor in your area, please write to the Customer Service Department of MTD.

The return of a complete unit will not be accepted by the factory unless prior written permission has been extended by $M \Gamma D$.

This warranty gives you specific egal rights. You may also have other rights which vary from state to state.



This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws if any). If a spark arrester is used, it should be maintained in effective working order by the operator.

In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester muffler is available at your nearest engine authorized service center.



To reduce the potential for any injury, comply with the following safety instructions. Failure to comply with the instructions may result in personal injury.

SAFE OPERATION PRACTICES FOR WALK-BEHIND MOWERS

TRAINING

- Read this owner's manual carefully in its entirety before attempting to assemble or operate this machine. Be completely familiar with the controls and the proper use of this machine before operating it. Keep this manual in a safe place for future and regular reference and for ordering replacement parts.
- Your rotary mower is a precision piece of power equipment, not a plaything. Therefore, exercise extreme caution at all times.
- Never allow children to operate a power mower.
 Only persons well acquainted with these rules of safe operation should be allowed to use your
- No one should operate this unit while intoxicated or while taking medication that impairs the senses or reactions.
- 5. Keep the area of operation clear of all persons, particularly small children and pets. Stop engine when they are in the vicinity of your mower. Although the area of operation should be completely cleared of foreign objects, an object may have been overlooked and could be accidently thrown by the mower in any direction and cause serious personal injury to the operator or any others allowed in the

PREPARATION

- Thoroughly inspect the area where the equipment is
 to be used. Remove all stones, sticks, wire, bones
 and other foreign objects which could be picked up
 and thrown by the mower in any direction and cause
 serious personal injury to the operator or any others
 allowed in the area.
- 2. Do not operate equipment when barefoot or wearing open sandals. Always wear substantial footwear.
- Do not wear loose fitting clothing that could get caught on the mower.
- 4. Check the fuel before starting the engine. Gasoline is an extremely flammable fuel. Do not fill the gasoline tank indoors, while the engine is running, or while the engine is still hot. Replace gasoline cap securely and wipe off any spilled gasoline before starting the engine as it may cause a fire or explosion.
- Disengage the self-propelled mechanism or drive clutch on units so equipped before starting the engine
- 6. The blade control handle is a safety device. Never attempt to bypass its operation. Doing so makes the safety device inoperative and may result in personal injury through contact with the rotating blade. The blade control handle must operate easily in both directions.
- 7. Never attempt to make a wheel or cutting height adjustment while the engine is running.
- 8. Mow only in daylight or in good artificial light.
- Never operate the equipment in wet grass. Always be sure of your footing. A slip and fall can cause serious personal injury. Keep a firm hold on the handle and walk, never run.

10. Always wear safety glasses or eye shields during operation or while performing an adjustment or repair, to protect eyes from foreign objects that may be thrown from the machine in any direction.

OPERATION

- Do not change the engine governor settings or overspeed the engine. Excessive engine speeds are dangerous.
- Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times as the rotating blade can cause injury.
- Stop the blade when crossing gravel drives, walks or roads.
- 4. After striking a foreign object, stop the engine, remove the wire from the spark plug, and thoroughly inspect the mower for any damage. Repair the damage before restarting and operating the mower.
- If the equipment should start to vibrate abnormally, stop the engine and check immediately for the cause. Vibration is generally a warning of trouble.
- 6. Shut the engine off and wait until the blade comes to a complete stop before removing the grass catcher or unclogging the chute. The cutting blade continues to rotate for a few seconds after the engine is shut off. Never place any part of the body in the blade area until you are sure the blade has stopped rotating.
- Before cleaning, repairing or inspecting, make certain the blade and all moving parts have stopped.
 Disconnect the spark plug wire, and keep the wire away from the spark plug to prevent accidental starting.
- 8. Do not run the engine indoors.
- Mow across the face of slopes, never up-and-down. Exercise extreme caution when changing direction on slopes. Do not mow excessively steep slopes. Always be sure of your footing. A slip and fall can cause serious personal injury.
- Always disconnect electric mowers (line operated) before cleaning, repairing or adjusting.
- 11. Never operate mower without proper guards, plates or other safety protective devices in place.
- DO NOT OPERATE this mower with the chute door open, unless the complete grass catcher is properly mounted on the mower.

MAINTENANCE AND STORAGE

- 1. Check the blade and engine mounting bolts at frequent intervals for proper tightness.
- Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.
- Never store the equipment with gasoline in the tank inside of a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.
- 4. To reduce fire hazard, keep the engine free of grass, leaves, or excessive grease.
- Check the grass catcher bag frequently for wear or deterioration. For safety protection, replace only with new bag meeting original equipment specifications.



This unit is shipped WITHOUT GAS-OLINE or OIL. After assembly, see separate engine manual for proper fuel and engine oil recommendations.

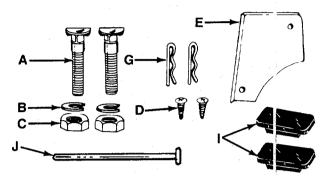


FIGURE 1.

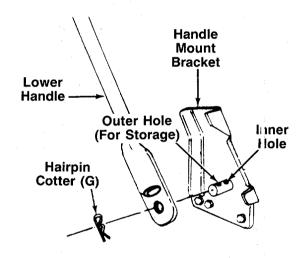


FIGURE 2.

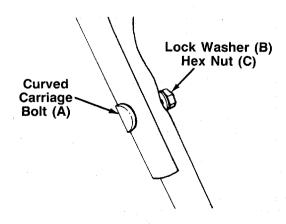


FIGURE 3.

ASSEMBLY

Contents of Hardware Pack: (See figure 1)

- A (2) Curved Head Carriage Bolts
- B (2) Lock Washers 5/16" I.D.
- C (2) Hex Nuts 5/16-18 Thread
- D (2) Phillips Head Screws
- E (1) Plastic Cap
- F (2) Cable Ties (Not Shown)
- G (2) Hairpin Cotters
- H (1) Battery Charger (Not Shown)
- I (2) Plastic Plugs (May Be Already Assembled)
- -J (1) Pin 4½" Long
 - K (1) Cable Clamp (Not Shown)
 - M (2) Front Hub Caps (Optional-Not Shown)
- 1. Remove the lawn mower, loose parts, hardware pack and literature from the carton. Make certain all parts and literature have been removed before the carton is discarded.
- 2. Extend all control cables and place on the floor. Be careful not to bend or kink control cables
- Place lower handle in position over weld pins in handle mount brackets on deck. Make certain the instruction label on the lower handle can be read from the operating position. Secure by placing two hairpin cotters (G) in inner hole on weld pins. See
 figure 2.



It may be necessary to bend the ends of the lower handle inward slightly to obtain a snug fit against the bracket.




There are two (2) holes in the handle mount brackets. Place hairpin cotter in the inner hole for operation. The outer hole is for storage.

 Place upper handle in position over lower handle. Control housing should be on the left side of the handle. Secure upper handle with two curved carriage bolts (A), lock washers (B) and hex nuts (C).
 See figure 3.



Reference to left or right side of machine is determined from operator's position at the handle facing forward.

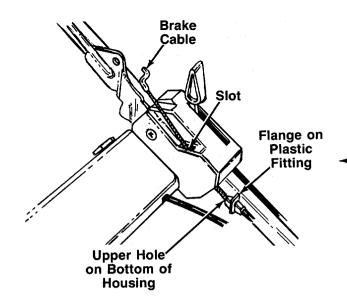


5. The brake cable is the cable which is attached to the engine. Route the brake cable inside the handle mount bracket and under the lower handle. Place end of cable into the upper hole on the bottom of the control housing, and through the slot on the side of the housing as shown. The angle of the flange on the plastic fitting must be positioned downward as shown in figure 4. Be careful not to bend or kink the cable.




The cable must be assembled as shown for proper blade brake operation.

FIGURE 4.

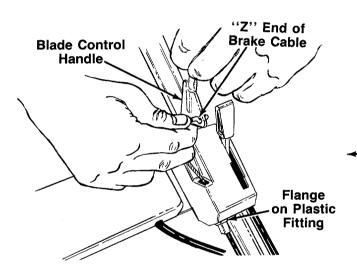

Snap the plastic fitting on the end of the cable into the control housing. Hook the "Z" end of the brake cable into the hole in the blade control handle. See figure 5.

FIGURE 5.

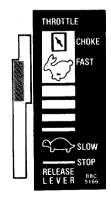

 Move throttle control lever on handle forward until it stops in FAST position. (Do not push all the way forward to CHOKE position.) See figure 6.

FIGURE 6.

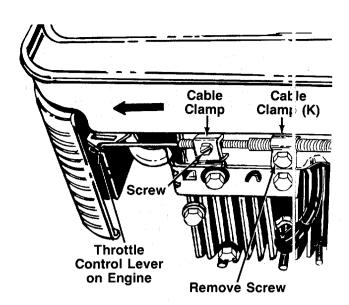


FIGURE 7.

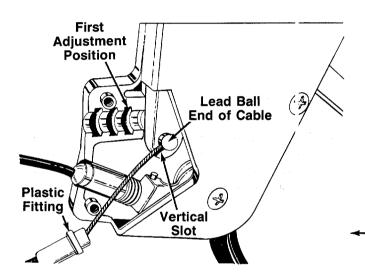


FIGURE 8.

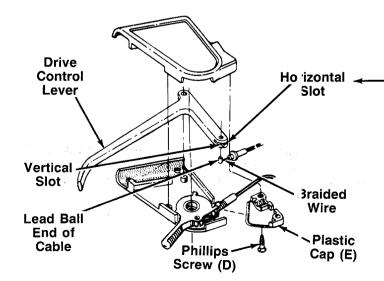


FIGURE 9.

- 8. The throttle control cable is attached to the upper handle. Route the throttle control cable under the lower handle and inside the handle mount bracket. Hook the "Z" end of the throttle control cable into the hole in the control lever on the engine.
- 9. Using a 7/16" wrench, remove the screw on the engine shown in figure 7.
- 10. Remove the screw on the cable clamp shown in figure 7. Slip the control casing under the clamp. Replace the screw, but do not tighten (cable must still move freely beneath the clamp).
- 11. Slide the throttle control lever on the engine as far toward the outside of the engine as it will go easily (just until resistance is felt) as shown in figure 7. (Do not force it into the extreme outside position, which is the CHOKE position). Tighten the screw to secure the throttle control cable in this position.
- 12. Loosen the screw on the clamp on the side of the engine. Slip the cable casing under the clamp to secure the cable away from the muffler. Be careful not to bend or kink the cable. Tighten the screw.
- Secure cable casing to the front of engine with cable clamp (K) provided in hardware pack and screw removed from engine in step 9. Do not overtighten.
- 14. The drive clutch control cable is attached to the deck. Attach the cable to the lever in the clutch control housing, located in the middle of the upper handle, as follows.
 - -a. Place the lead ball end of the cable into the fitting provided in the end of the clutch control lever. Slip the braided wire into the vertical slot as shown in figure 8.
 - b. Slide the braided wire around in the horizontal
 —slot. See figure 9.
 - Place the plastic fitting on the control cable into the first adjustment position in the clutch control housing. See figure 8.
 - d. Secure the plastic cap (E) to the clutch control housing using the two Phillips head screws (D).
 See figure 9.



Drive clutch adjustment must be checked before the unit is operated, as described in the operation section.

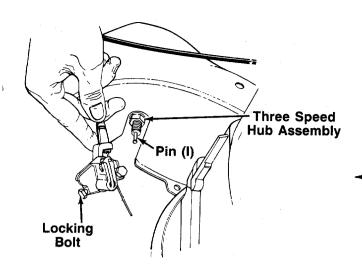


FIGURE 10.

- 15. The three speed shift cable is attached to the drive clutch control housing on the upper handle. Attach the shifting mechanism on the other end of the cable to the three speed hub assembly as follows.
 - a. Place the three speed shift lever in the third speed position (all the way down).
 - b. Insert pin (I) into hub assembly as shown in —figure 10.
 - c. Loosen the locking bolt on the mechanism shown in figure 10 using a 9 mm wrench or socket.



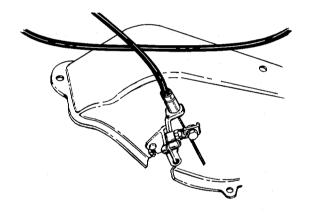


FIGURE 11.

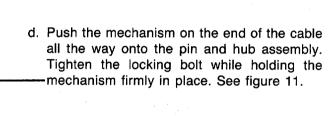

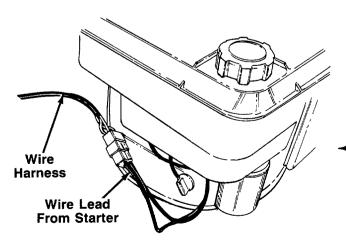

16. Plug the end of the wire lead coming from the starter on the engine into the plug on the end of the wire harness. See figure 12.

FIGURE 12.

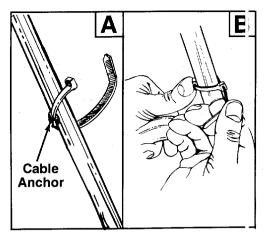


FIGURE 13.

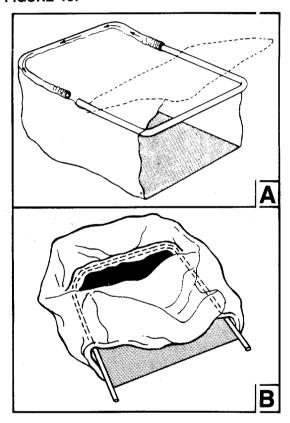


FIGURE 14—Bag with Flip Top Opening.

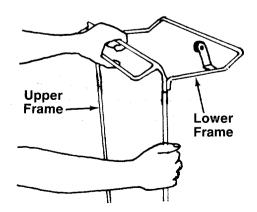


FIGURE 15.

- 17. Secure all control cables to the left side of the handle as follows.
 - a. Insert cable anchors on cable ties (F) into holes provided on the inside of the lower handle, one near the top and one near the bottom of lower—handle. See figure 13A.
 - b. Secure the cables with the cable ties. See figure 13B.
 - c. Cut off excess ends of cable ties.
- 18. If plastic plugs are not already assembled, insert plastic plugs (I) into hole in the top rear of the deck by slipping one end of plug into hole, then pressing down on the other end of plug.
- 19. Check all nuts and bolts for correct tightness.

Grass Catcher Assembly

There are two different types of grass bags, bags with and without flip top openings. Follow the instructions which pertain to your unit.

- 1. Grass Bags with Flip Top Opening:
 - a. Attach bag to rear frame by inserting one end of frame into pocket from inside bag. See figure
 14A
 - b. Thread all material on one side of frame before working it around the frame.
 - c. After threading, both ends of frame should be inside of bag. See figure 14B.

2. Join the upper frame and lower frame assembly ——as shown in figure 15.

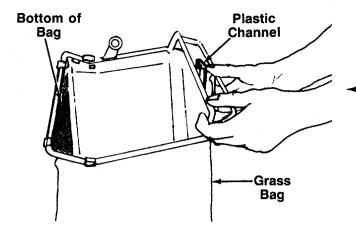


FIGURE 16.

- 3. Grass bags without Flip Top Opening: Place bag over frame (black plastic side is the bottom of bag). Upper frame goes to the top of bag.
- 4. Secure bag to frame by slipping plastic channels—on bag over frame. See figure 16.
- 5. Grass Bags with Flip Top Opening: Close top of bag by stretching loose material over the end of the frame.



Never operate the mower with the bag open.

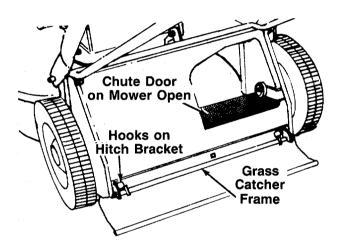


FIGURE 17.

To Attach Bag To Mower



DO NOT operate the mower with the chute door open unless the complete grass catcher is properly mounted on the mower.

- Attach the grass catcher frame to grass catcher hitch bracket on rear of the mower by hooking grass catcher into hooks on grass catcher hitch bracket. See figure 17.
- 2. Lift the rear of grass catcher up. The roller on the grass catcher will push the chute door on the mower open. See figure 17.



Figure 17 is shown with the chute door open for clarity only.

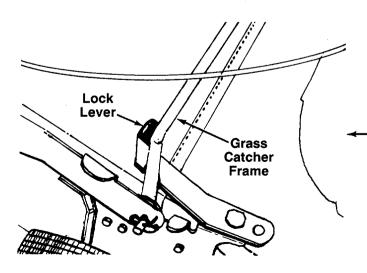


FIGURE 18.

The grass catcher frame will snap into place, secured by the lock lever. See figure 18.

To remove the grass catcher, unhook the lock lever and slip the grass catcher off the unit. See figure 18.

CONTROLS

THROTTLE CONTROL

The throttle is located on the left side of handle. It controls engine speed. See figure 19.

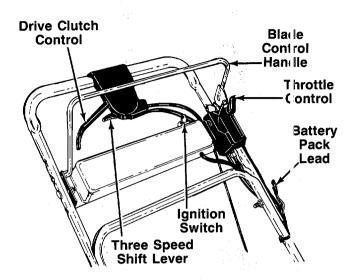


FIGURE 19.

BLADE CONTROL HANDLE

WARNING
THIS CONTROL MECHANISM IS A
SAFETY DEVICE NEVER ATTEMPT
TO BYPASS ITS OPERATIONS

The blade control handle is located on the upper handle of the mower. See figure 19. The blade control handle must be depressed in order to operate the unit. Release the blade control handle to stop the engine and blade.



The blade will be rotating whenever the engine is running.

IGNITION SWITCH

The ignition switch is located on the left side of handle panel. It is used for starting only. See figure 19.

DRIVE CLUTCH CONTROL

Squeezing the drive clutch control engages the drive mechanism to the rear wheels. Releasing the clutch control stops the rear wheels from driving. Release the drive clutch control to slow down when negotiating an obstacle, making a turn or stopping. See figure 19.

THREE SPEED SHIFT LEVER

The three speed shift lever is located on the drive clutch control housing on the upper handle. See figure 19. This lever is ued to select the operating speed of the mower. Release the drive clutch control and stop the mower before changing speeds.



Do not move the shift lever while the drive clutch control is engaged.

OPERATION



FIGURE 20.

Keep hands and feet away from the chute area on cutting deck. See figure 20.



For shipping purposes your mower is set with the wheels in a low cutting height position. For best results raise the cutting position until it is determined which height is best for your lawn. See cutting height adjustment section.

BEFORE STARTING



The battery contains corrosive fluid and toxic material. HANDLE WITH CARE. Keep away from children. Do not puncture, disassemble, mutilate or incinerate. Explosive gases could be vented during charging or discharging. Use in a well-ventilated area, away from sources of ignition.

 Charge battery for 16 hours before initial use. DO NOT CHARGE LONGER THAN 20 HOURS.



Use only the battery charger supplied with this mower.

To charge the battery, first remove the protective cap from the end of the battery pack lead. See figure 19. Always plug charger lead into battery pack lead before inserting battery charger plug into 120 volt standard household outlet.

After charging, disconnect battery charger plug from household outlet first, then disconnect charger lead from battery pack lead.



Do not remove the battery pack from the handle panel for any reason other than replacement. When replacing the battery pack, refer to instructions in Maintenance section

- 2. Fill sump with oil as instructed in the separate engine manual packed with your unit.
- 3. Fill fuel tank, using clean, fresh, lead-free, low-lead or regular grade leaded gasoline. Fill tank completely!

DO NOT MIX OIL WITH GASOLINE.

- 4. Attach spark plug wire to spark plug.
- 5. Open fuel shut-off valve, located beneath the fuel tank. See figure 21.

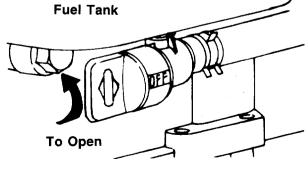


FIGURE 21.

6. Before each use, check for proper drive clutch operation by performing the following before starting the engine:

With the drive clutch control released, push mower forward. It should move freely. Pull mower backward. It should move freely.

If it does not and the rear wheels tend to lock up, the clutch may not be releasing completely. Do not start the engine until corrections have been made. Check the control cable for severe bend, kinks and binding, or grass build-up in the pulley groove. Correct and adjust as required.

TO START ENGINE AND ENGAGE BLADE



When starting the unit for the first time, face the mower against a solid object such as a wall, fence, etc. Start the unit, and if it shows any signs of motion with the drive clutch control disengaged, shut the engine off immediately. Check the position of the drive clutch control cable. The plastic fitting must be assembled in the first adjustment position inside the housing, all the way to the right, as shown in figure 8.

1. Move throttle control lever to CHOKE position.



A warm engine may not require choking.

- Standing behind the unit, depress the blade control handle and hold it against the upper handle as shown in figure 22. Be certain the drive clutch handle is released.
- 3. Turn the ignition key to the right to start the engine. Release the key after engine starts.
- 4. After engine starts, move throttle control to FAST or desired engine speed.



Place the three speed shift lever in first speed position (all the way up) when operating the unit for the first time.

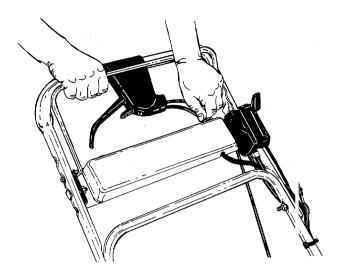


FIGURE 22.



The engine on your unit is provided with an auxiliary recoil starter system. To start the engine using the auxiliary starter system, proceed as follows.

- A. Depress the blade control handle, and hold it against the upper handle.
- B. Grasp the recoil starter handle, slowly pull the rope out from the engine about two feet and hold rope in this position.
- C. Step behind the handle into the operating position. With the blade control handle still depressed, pull recoil starter handle using a quick, firm motion. Repeat until engine starts. After engine starts, return rope slowly to the engine.

TO STOP ENGINE AND BLADE

1. Release the blade control handle to stop the engine and blade.



The blade continues to rotate for a few seconds after the engine is shut off.

2. Disconnect spark plug wire from spark plug and ground against the engine to prevent accidental starting while equipment is unattended.

USING YOUR ROTARY MOWER



DO NOT operate the mower with the chute door open unless the complete grass catcher is properly mounted on the mower.

Be sure that lawn is clear of stones, sticks, wire, or other objects which could damage lawn mower or engine. Such objects could be accidently thrown by the mower in any direction and cause serious personal injury to the operator and others.

Operate a new engine at intermediate speeds and light load for the first few hours as you would a new automotive engine.

For the best results, do not cut wet grass because it tends to stick to the underside of the mower, preventing proper discharge of grass clippings, and could cause you to slip and fall. New grass or thick grass may require a narrower cut. Blade speed should be adjusted to the condition of the lawn.

For best results, cut off one-third or less of the total length of the grass. Lawn should be cut in the fall as long as there is growth.

This mower is designed to be operated at full throttle to give you the best cut and do the most effective job of bagging the cut grass.



If you strike a foreign object, stop the engine. Remove wire from spark plug, thoroughly inspect the mower for any damage, and repair the damage before restarting and operating the mower. Extensive vibration of the mower during operation is an indication of damage. The unit should be promptly inspected and repaired.

ADJUSTMENTS



Do not at any time make any adjustment to lawn mower without first stopping engine and disconnecting spark plug wire.

DRIVE CLUTCH CONTROL ADJUSTMENT

If the unit does not self-propel with the drive clutch control engaged, remove the plastic cap from beneath the drive clutch control housing. Move the plastic fitting on the control cable to the next adjustment position on the left. Reassemble the plastic cap and retest. See figure 23.

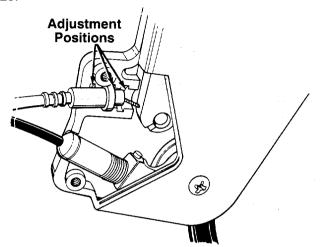


FIGURE 23.

CUTTING HEIGHT ADJUSTMENT

An adjusting plate and thumb lever at each wheel position provides cutting height adjustment. Each adjusting plate has nine height positions. Height of cut will be changed when the thumb lever is moved from one position to another. Simply depress the lever towards wheel and move wheel and lever assembly to desired position. See figure 24.

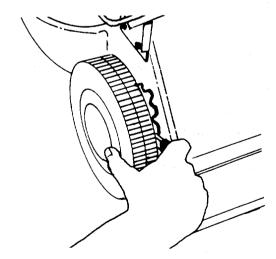


FIGURE 24.

Cutting height will be raised as front and rear levers are lowered. Cutting height will be lowered as front and rear levers are raised. All wheels must be placed in the same relative position.

For rough or uneven lawns, move the wheels to a position which will give a higher cutting height.

THROTTLE

The throttle control wire assembly can be adjusted if necessary. Refer to steps 7 thru 11 of Assembly Instructions.

CARBURETOR ADJUSTMENTS



If any adjustments are made to the engine while the engine is running (e.g. carburetor), keep clear of all moving parts. Be careful of heated surfaces and muffler.

Minor carburetor adjustments may be required to compensate for differences in fuel, temperature, altitude and load.

Refer to the separate engine manual packed with your mower for carburetor adjustment information.

LUBRICATION



Always stop engine and disconnect spark plug wire before cleaning, lubricating or doing any kind of work on lawn mower.

Blade Control—Lubricate the pivot points on the blade control handle and the brake cable at least once a season with light oil. The control must operate freely in both directions.

Discharge Chute Door Mechanism—The torsion spring and pivot point should be lubricated periodically with light oil to prevent any rust or binding. Door must work freely.

Wheels—Mower is provided with ball bearing wheels. Lubricate at least once a season with light oil. Also, if the wheels are removed for any reason, lubricate the surface of the axle bolt and the inner surface of the wheel with light oil. A 4 oz. plastic bottle of light oil lubricant is available. Order part number 737-0170. Engine oil may also be used.

Engine—Follow engine manual for lubrication instructions.

Throttle—Periodically lubricate throttle control lever and throttle wire assembly with a few drops of light oil for ease of operation.

Chain—The chain should be lubricated periodically with a few drops of light oil to prevent any rust or binding. Use very little or no oil if unit is being used in a dusty or sandy area.

MAINTENANCE



Be sure to disconnect and ground the spark plug wire before performing any repairs or maintenance.



When tipping the unit, empty the fuel tank and keep engine spark plug side up.

BATTERY PACK REPLACEMENT

Remove the battery pack from the handle panel for replacement only. Do not separate the batteries for any reason. Dispose of batteries properly.



Batteries contain sulfuric acid which may cause burns. Do not short circuit or mutilate in any way. Do not put batteries in fire. They may burst or release toxic materials.

When replacing battery pack, battery pack must be positioned with the positive terminal to the right hand side and the negative terminal to the left hand side of panel. See figure 25. Replacing the battery pack incorrectly will cause serious damage.

Connect the two sides of the battery pack using the short wire lead. Connect the lead on the wire harness to the positive side of the battery pack, then connect the negative side.

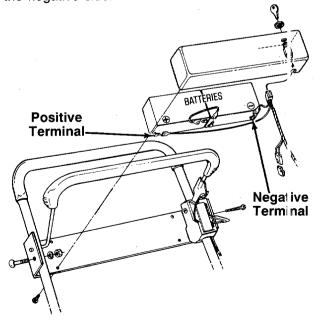


FIGURE 25.

IN-LINE FUSE

The unit is equipped with an in-line fuse. If unit fails to start, check the fuse in the wiring harness by turning the end of the fuse holder and pulling apart. See figure 26. Replace with a standard automotive 7½ amp fuse.

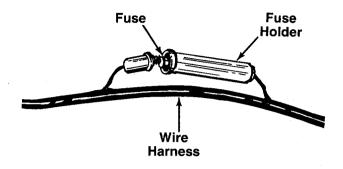


FIGURE 26.

CUTTING BLADE

A. Removal for Sharpening or Replacement



Be sure to disconnect and ground the spark plug wire before working on the cutting blade to prevent accidental engine starting. Protect hands by using heavy gloves or a rag to grasp the cutting blade.

Remove the large bolt and lock washer which holds the blade and adapter to the engine crankshaft. Remove the blade and adapter from the crankshaft.

If the blade or blade adapter needs replacing, remove the two small bolts, lock washers and nuts which hold the blade to the adapter.



Periodically inspect the blade adapter for cracks, especially if you strike a foreign object. Replace when necessary.

B. Sharpening

Remove the cutting blade by following the directions of the preceding section.

When sharpening the blade, follow the original angle of grind as a guide. It is **extremely important** that each cutting edge receives an equal amount of grinding to prevent an unbalanced blade. An unbalanced blade will cause excessive vibration when rotating at high speeds, may cause damage to the mower and could break, causing personal injury.

It is recommended that the blade always be removed from the adapter for the best test of balance. The blade can be tested by balancing it on a round shaft screwdriver. Remove metal from the heavy side until it balances evenly.

C. Reassembly

Before reassembling the blade and the blade adapter to the unit, lubricate the engine crankshaft and the inner surface of the blade adapter with light oil. Lubricating the bolt holes, bolts and inner surface of the nuts with light oil is also recommended. A 4 oz. plastic bottle of light oil lubricant is available. Order part number 737-0170. Engine oil may also be used.

When replacing the blade, be sure to install the blade with the side of the blade marked "Bottom" (or with part number) facing the ground when the mower is in the operating position.

Blade Mounting Torque

3/8" Dia. Bolt 375 in. lb. min., 450 in. lb. max. 5/16" Dia. Bolt 150 in. lb. min., 250 in. lb. max.

To insure safe operation of your unit, **all** nuts and bolts must be checked periodically for correct tightness.

To insure safe operation of your unit, **all** nuts and bolts must be checked periodically for correct tightness.

DECK

The underside of mower deck should be cleaned after each period of use as grass clippings, leaves, dirt and other matter will accumulate. This accumulation of grass clippings, etc., is undesirable as it will invite rust and corrosion and may cause an uneven discharge of grass clippings at the next cutting.

The deck may be cleaned by tilting the mower forward or on its side and scraping clean with a suitable tool or by washing with a stream of water from a garden hose.



Do not direct the stream of water at a hot engine as damage to the engine may result.

ENGINE OIL

Check oil level before starting engine and after every 5 hours of operation. ADD oil as necessary to keep level to full mark on dipstick. Before removing dipstick, clean area around dipstick to prevent dirt from entering oil fill tube. Engine should be in a level position when checking oil.

Change oil after first 5 hours of operation. Thereafter change every 25 hours. Change oil while engine is warm. Oil may be drained thru oil drain on bottom of the engine. Oil capacity 11/4 pints.

AIR CLEANER

Service air cleaner every 25 hours under normal conditions. Clean every few hours under extremely dusty conditions. Poor engine performance and flooding usually indicates that the air cleaner should be serviced.

To service the air cleaner, refer to the separate engine manual packed with your unit.

SPARK PLUG

The spark plug should be cleaned and the gap reset once a season. Spark plug replacement is recommended at the start of each mowing season; check engine manual for correct plug type and gap specifications.

STORAGE OF THE BATTERY

The battery must be stored with a full charge. A discharged battery will freeze.



All batteries discharge during storage.

Recharge battery every two months and before returning to service. Refer to charging instructions on page 11.

BELT REMOVAL AND REPLACEMENT

- 1. Disconnect the spark plug wire and ground it.
- 2. Drain the fuel tank or place a piece of plastic film beneath the cap to prevent gasoline leakage.
- 3. Remove the mechanism for the three speed shift cable from the three speed hub. Refer to Assembly Instructions.
- 4. Remove the 15 mm nut which holds the three speed hub to the belt guard. See figure 27.
- 5. Remove the three screws which hold the belt guard (and idler assembly). See figure 27.

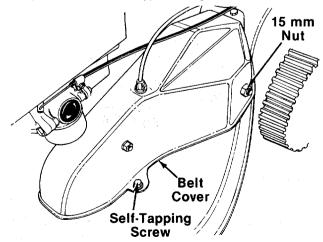


FIGURE 27.

- 6. Remove the belt from the idler as you lift off the belt guard.
- 7. Slide the belt off the pulley as shown in figure 28.
- 8. Loosen the nut on the inside of the three speed hub. See figure 28.

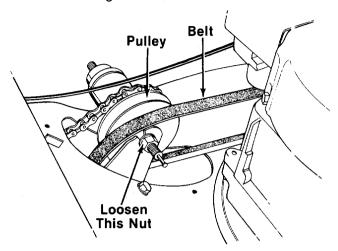


FIGURE 28.

9. Lift the three speed hub out of the three speed hub bracket. See figure 29.



When reassembling the three speed hub, be certain the washer is between the hub bracket and the pulley.

10. Remove the belt from the pulley and the ∋ngine pulley.

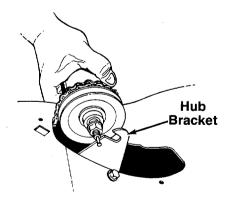


FIGURE 29.

 Reassemble in reverse order with the new belt, making certain the idler pulley is under the belt. See figure 30.

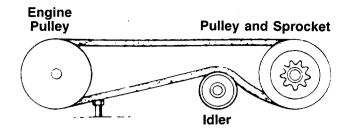


FIGURE 30.

OFF-SEASON STORAGE

The following steps should be taken to prepare lawn mower for storage.

- 1. Clean and lubricate mower thoroughly as described in the lubrication instructions.
- Refer to engine manual for correct engine storage instructions.
- 3. Coat mower's cutting blade with chassis grease to prevent rusting.
- 4. Follow battery storage instructions on page 15.
- 5. Store mower in a dry, clean area.



When storing any type of power equipment in an unventilated or metal storage shed, care should be taken to rustproof the equipment. Using a light oil or silicone, coat the equipment, especially the bearings and cables.

HANDLE STORAGE

The handle can be stored in an upright position to take less space. Move hairpin cotters to outer hole on weld pins (see figure 2). Grasp the lower handle at the bottom and pull apart slightly. Tip the handle forward. It will lock in this position. Reverse this procedure to place the handle in the operating position.



The use of any accessory on this Rotary Mower other than those manufactured by the mower manufacturer is **not** recommended.

GRASS CATCHER Model 028 is available as replacement equipment for the mower shown in this manual.





- 1. DO NOT operate the mower with the chute door open unless the complete grass catcher is properly mounted on the mower.
- 2. DO NOT operate the mower without the protective shield on the rear of the deck in place.




Under normal usage bag material is subject to wear and should be checked periodically. Be sure any replacement bag complies with the mower manufacturer's recommendations.

For replacement bags, use only factory authorized replacement bag No. 764-0171 (without Flip Top) or 764-0170 (with Flip Top).

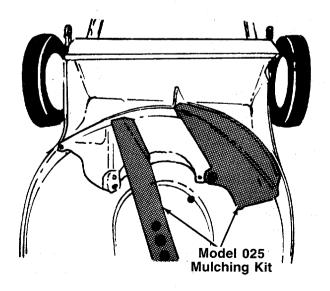

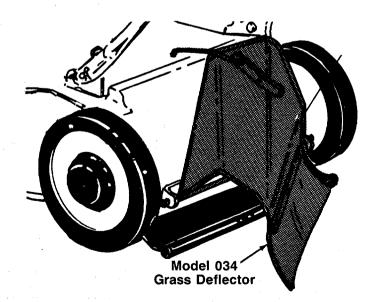

Mulching Kit model 196-025-000 and Grass Deflector model 196-034-000 are available as optional equipment.

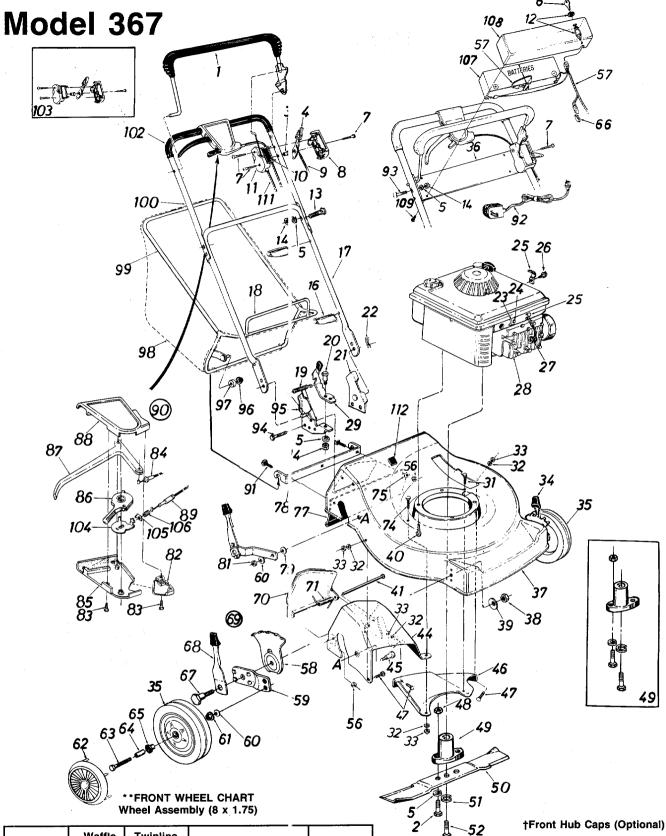

Smooth	Waffle Tread	Twinline Tread	Bearing	Axle Bolt
734-0843	734-0894	734-0661	Plastic-741-0262	738-0102
734-0845	734-0645	734-0643	3/8" Ball—741-0267 1/2" Ball—741-0481 Spacer—750-0434	710-0427

 Color
 Part No.

 Red
 731-0124

 Orange
 731-0254

 Black
 731-0354

 Gray
 731-0335

Model 367 PARTS LIST FOR MODEL 367 ROTARY MOWER


PARTS LIST FOR MODEL 367 RUTARY						W. C	т — т		
REF. NO.	NO.	COLOR CODE	DESCRIPTION	NEW PART		NO.	COLOR CODE	DESCRIPTION	NEW PART
1	731-0609		L.H. Bail Ass'y.		60	736-0105		Bell-Wash40" I.D. x .88"	
2	710-0888		Hex Bolt 5/16-24 x 1.00"		61	741-0267		Flg. Ball Brg. 3/8" I.D.	1
_ :			Lg. (Grade 5)		62	†		Plastic Hub Cap	
3	731-0524		Control Disc Pin		63	710-0347		Hex Bolt 3/8-16 x 1.75" Lg.	1
4	731-0528		Throttle Control Lever		64	750-0434		Spacer .375" I.D.	
5	736-0119		L-Wash. 5/16" I.D.*		65	741-0484		Fig. Ball Brg. ½" I.D.	
6	725-0201		Ignition Key		66	725-1206		Plug	l N
7	710-0796		Truss Mach. Hi-B Tap Scr.		67	738-0507		Shid. Bolt .50" Dia. x .430	'
'	/10-0/90		#12 x 1.50" Lg.		68	14832			
ا ۾ ا	704 0047		Control Panel Half	N	00	14032		Spring Lever Ass'y.	
8	731-0817			N	ا م	14570		w/Knob	
9	746-0633		Throttle Control Wire—58"	N	69	14578	i i	Height Adj. Ass'y.—R.H.	
10	777-5774		Control Label	N	70	13407		Chute Door	
11	731-0816		Clutch Panel Half	111	71	732-0346		Torsion Spring	
12	725-0873		Ignition Switch		74	710-0206		Hex Bolt 1/4-20 x .88" Lg.	
13	710-0405		Carr. Bolt 5/16-18 x 1.75"		75	736-0211		Fl-Wash285" I.D. x 1.25"	
14	712-0267		Hex Nut 5/16-18 Thd.*		77	731-0664		Rear Flap	
16	726-0241		Cable Tie	1	78	14012		Grass Catcher Hitch Brkt.	
17	749-0505		Lower Handle		79	736-0219		Bell-Wash40" I.D. x 1.13"	
18	14582		Lower Frame Ass'y.		81	712-0342		Hex Jam Nut 3/8-16 Thd.	
19	732-0357		Extension Spring		82	731-0763		Cable Mounting Cap	
20	738-0155	1	Shid. Bolt .437" Dia. x .162		83	710-0841		Flat "C"-Sunk Hd. Tap	
21	14158		Handle Brkt. Ass'y.—L.H.					Scr. #10 x .75" Lg.	'
22	714-0104		Hairpin Cotter 5/16" Dia.		84	746-0466		S.P. Cable x 53" Lg.	
23	751-0442		Casing Clamp	N	85	731-0762		3-Sp. S.P. Control—	
24	710-0436		Hex B-Tap Scr. #10 x .62"		-			Lower Cover	
25	12894		Cable Clip		86	717-0822		Shimano 3-Sp. Shift Lever	
26	710-0429		Hex B-Tap Scr. #10 x .38"		87	731-0620		Control Lever	
27	735-0639		Spark Plug Insulator		88	731-0761		3-Sp. S.P. Control—	i
28	700 0000	ļ	Engine		"	7010701		Upper Cover	
29	14845		Lock Lever w/Knob		89	717-0823	•	Shimano 3-Sp. Solid Shift	
31	710-0642	ł	Hex TT-Tap Scr. ¼-20 x		00	717-0020		Cable	
31	/10-0042		.75" Lg.		90	753-0417		Clutch Control Hsg. Comp.	1
32	736-0329	İ	L-Wash. 1/4" I.D.*	1	91	710-0703		Carr. Bolt 1/4-20 x .75" Lg.*	1
33	712-0287		Hex Nut 1/4-20 Thd.*		92	725-0727			1
					93			Battery Charger	
34	14579 * *		Height Adj. Ass'y.—L.H.			710-0671		Carr. Bolt 5/16-18 x 1.38"	1
35			Front Wheel Ass'y. Comp.	N	94	710-0412	-	Hex Bolt ¼-28 x .75" Lg.*	İ
36	16542	400	Lower Battery Tray	13	95	14752		Handle Brkt. Ass'y.—R.H.	
37	16327	462	22" Deck Ass'y.		96	726-0100		Push Nut 3/8" Rod	}
38	712-0798		Hex Nut 3/8-16 Thd.*		97	731-0430		Plastic Roller	1
39	736-0356	1	Bell-Wash39" I.D. x 1.38"		98	764-0171		Grass Bag	
40	710-0654		Hex Wash. Hd. TT-Tap Scr.		99	749-0278		Catcher Upper Frame	
			3/8-16 x 1.0" Lg.		100	749-0437		Upper Handle	1
41	738-0386		Hinge Pin		102	718-0145		Grip	١
44	14236		Rear Chute—R.H.		103	753-0431		Control Housing Comp.	N
45	738-0430		Shld. Bolt .500" Dia.		104	717-0827		Shimano 3-Sp. Shift Lever	
46	14014		Rear Baffle—L.H.	•				Brkt.	N
47	710-0167		Carr. Bolt 1/4-20 x .50" Lg.*		105	717-0829		Shimano 3-Sp. Cable	
48	712-0123	1	Hex Nut 5/16-24 Thd.*					Spring Brkt.	N
49	753-0348		Blade Adapter Kit		106	717-0828		Shimano 3-Sp. Cable	
50	742-0125		22" Blade					Mounting Spring	N
51	736-0217		L-Wash. 3/8" I.D. H.D.		107	725-1105		Battery Pack 753 · 0459	
52	710-0331		Hex Bolt 3/8-24 x 2.25"		108	731-0809		Battery Tray	N
			Lg. (Grade 5)		109	710-0969		Truss Mach. Hi-Riser Tap	
56	712-0271		Hex Sems Nut 1/4-20 Thd.		"			Scr. 1" Lg.	
57	725-1230		Wire Harness	N	111	746-0477		Clutch Control Cable 45"	
58	15261		Height Adj. Plate		112	731-0564		Plug	
59	15262		Wheel Pivot Bar		_	8367-000-		Hardware Pack	
1 50	.) _) _					3337 330	<u> </u>	1.14.474.01 401	<u></u>

^{*}For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

Model 367



This instruction manual covers various models, and all specifications shown do not necessarily apply to your model. Specifications subject to change without notice or obligation.

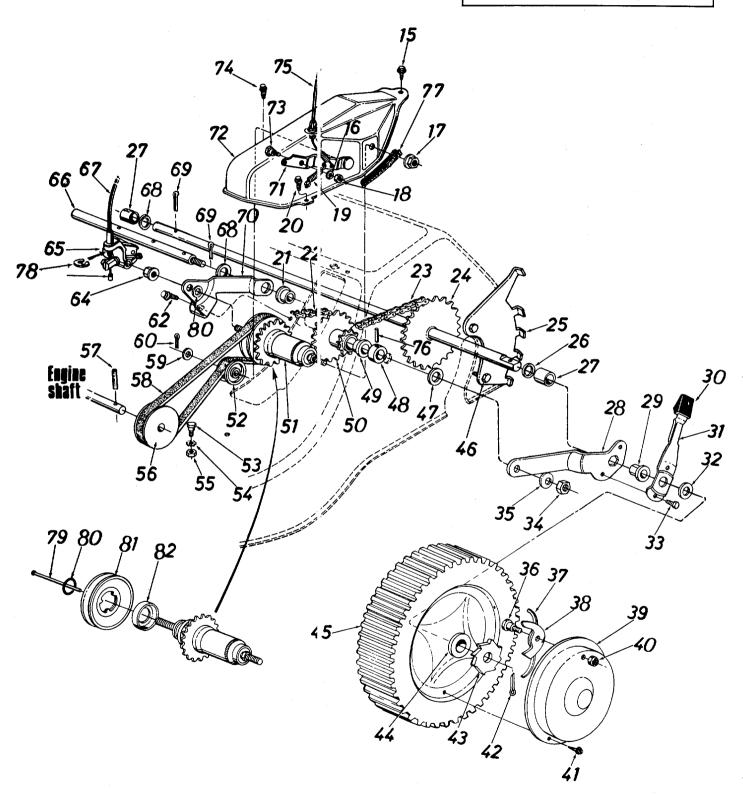

Model 367

PARTS LIST FOR MODEL 367 ROTARY MOWER

	кЕF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART		PART NO.	COLOR CODE	DESCRIPTION	NEW PART
	15	710-0456		Hex Drilling Scr. #10 x		48	750-0387		Spacer .505" I.D. x .88"	
		700 0000		.50" Lg.		40	741-0248		O.D. Flg. Brg506″ I.D. Plastic	
	16	736-0329		L-Wash. 1/4" I.D.*		49 50	713-0359		9 and 21 Tooth Sprocket	
	17	712-0340		Hex Nut 3/8-24 Thd. (Special)		50	/ 13-0359		Ass'y.	
	18 19	712-0287 732-0357		Hex Nut ¼-20 Thd.* Extension Spring .33" O.D.		51	717-0825		Shimano 3-Sp. Hub w/18	
	19	/32-035/		x 1.12" Lg.		31	717-0025		Tooth Sprocket	
	20	710-0599		Hex Wash. S-Tap Scr.		52	756-0360		Fl-Idler Plastic 1.62" Dia.	
	20	710-0000		1/4-20 x .50" Lg.		53	738-0140		Shld. Bolt .437" Dia. x .180	
	21	741-0248		Fig. Brg506" I.D.—Plastic		54	736-0119	1	L-Wash. 5/16" I.D.*	
	22	713-0361		#48 Chain 1/2" Pitch x		55	712-0267		Hex Nut 5/16-18 Thd.*	
				38 Links (Endless)		56	756-0462	[½" "V"-Engine Pulley .50"	
	23	713-0256		#48 Chain 1/2" Pitch x					I.D. x 2.80" O.D.	
				32 Links (Endless)		57	715-0144		Spring Pin Spir. 3/16" Dia.	
	24	13414		Rear Shaft Ass'y. 20.75"					x 1.50" Lg.	
	25	16097		Index Plate Rear-L.H.		58	754-0292		"V"-Belt ½" x 26.0" Lg.	
		16098		Index Plate Rear—R.H.		59	736-0160		Fl-Wash531" I.D. x .930"	ļ
				(Not Shown)		60	714-0115		Cotter Pin 1/8" Dia. x 1.0"*	ĺ
	26	736-0326		FI-Wash510" I.D. x 1.0"		62	710-0726		Hex Wash. Hd. Tap Scr. 5/16-18 x .75" Lg.	
	27	750-0190		Spacer .740" I.D. x .83" O.D.		63	736-0226		FI-Wash469" I.D. x .88"	
	28	16099		Pivot Brkt.—L.H.		64	712-0340	1	Hex Nut 3/8-24 Thd.	
	20	16100		Pivot Brkt.—R.H. (Not		04	7 12 0040		(Special)	
		10100	-	Shown)		65	717-0824	-	Shimano 3-Sp. Shift Bell	
	29	741-0324		Hex Flange Brg506"		"			Crank	
		7 7 7 002 1		I.D.—Plastic		66	738-0471		Pulley Shaft 10" Lg.	
	-30	720-0190	1:	Spring Lever Knob		67	717-0823		Shimano 3-Sp. Solid Shift	
	31	732-0467		Spring Lever					Cable	
<u>\</u>	32	736-0160		Fl-Wash531" I.D. x .930"		68	736-0160		FI-Wash531" I.D. x .930"	
,	33	710-0352		Hex B-Tap Scr. ¼ x .38"		69	714-0111		Cotter Pin 3/32" Dia. x 1.0" *	İ
	34	712-0342		Hex Jam Nut 3/8-16 Thd.		70	16304		3-Sp. Hub Bracket	
	35	736-0105		Bell-Wash400" I.D. x .88"		71	13415		Idler Bracket Ass'y.	ļ
	36	738-0137		Shld. Bolt .342" Dia. x .268		72	16305		3-Sp. Belt Cover	ĺ
	37	10622		Spring—Nylon		73	738-0255 710-0642		Shid. Bolt .375" Dia. x .181 Hex TT-Tap Scr. ¼-20 x	
	38	748-0188		Pawl		/4	710-0642		.75" Lg.	
	39	10647 712-0324		Hub Cap Hex Ins. L-Nut 1/4-20 Thd.		75	746-0466		S.P. Cable—53" Lg.—Blue	
	40	712-0324		Pan Hd. Tap Scr. #12 x		76	715-0120	1	Spring Pin Spir. 3/16" Dia.	1
	41	710-0746		.50" Lg.*		'	710-0120		x 1.0" Lg.	
	42	714-0115		Cotter Pin 1/8" Dia. x 1.0"*		77	731-0511		Trim Strip	
	43	748-0187		Ratchet Wheel 1.62" O.D.		78	717-0832		Snap Ring (Special)	
	44	741-0180		FI-Ball Brg. ½" I.D.		79	717-0830		Shifting Pin (Special)	
	45	734-1026		Wheel Ass'y. Comp. 8 x 1.75		80	717-0826		Pulley Snap Ring (Special)	
	46	710-0892		Hex L-Wash. Hd. AB-Tap		81	756-0463	3	½" V-Pulley 1.375" I.D. x	
				Scr. 1/4 x .62" Lg.					3.25" O.D.	
	47	736-0219)	Bell-Wash400" I.D. x		82	717-0831		Shimano 3-Sp. Dust Cover	
				1.13" O.D.						
		1								

^{*}For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

NOTE: The engine is not under warranty by the mower manufacturer...If repairs or service is needed on the engine, please contact your nearest authorized engine service outlet. Check the "Yellow Pages" of your telephone book under "Engines—Gasoline."

If color or finish is important when ordering parts, use the appropriate color code shown below [i.e. (part no.)-462 for Red Flake Finish].

Color Codes

312—White	463—Topflite Red
436—Radiant Yellow	480—Brilliant Green
452—Black	483—Charcoal Grey
456—Radiant Tangerine	499—Beige
462—Red Flake	623—Silver Mist

Trouble Shooting Chart

	Trouble Shooting	Chart			
Problem	Cause	Remedy			
1 Engine fails to start	A Blade control handle disengaged	A Engage blade control handle.			
	B Check fuel tank for gas C Fuel shut-off ralve closed D Spark plug lead wire discon-	B Fill tank if empty.C Open fuel shut-off valve.D Connect lead wire.			
	nected E Throttle control lever not in the starting position	E Move throttle lever to start position.			
	F Faulty spark rlug	F Spark should jump gap be- tween control electrode and side electrode. If spark does not jump, replace the spark plug.			
	G Carburetor improperly adjusted, engin∈ flooded	G Remove spark plug, dry the plug, crank engine with plug removed, and throttle in off position. Replace spark plug and lead wire and resume starting procedures.			
	H Old stale gasoline	H Drain and refill with fresh gasoline.			
	I Engine brake ∋ngaged J Discharged battery	 I Follow starting procedure. J Refer to battery charging instructions. 			
2 Hard starting or loss of power	A Spark plug wire loose	A Connect and tighten spark plug wire.			
	B Carburetor improperly adjusted	B Adjust carburetor. See separate engine manual.			
	C Dirty air clear er	C Clean air cleaner as described in separate engine manual.			
3 Operation erratic	A Dirt in gas tark	A Remove the dirt and fill tank with fresh gas.			
	B Dirty air cleaner	B Clean air cleaner as described in separate engine manual.			
	C Water in fuel supply	C Drain contaminated fuel and fill tank with fresh gas.			
	D Vent in gas cap plugged E Carburetor improperly adjusted	D Clear vent or replace gas cap. E Adjust carburetor. See separate engine manual.			
4 Occasional skip (hesitates) at high speed	A Carburetor idle speed too slowB Spark plug gap too close	A Adjust carburetor. See separate engine manual. B Adjust to .030".			
opeou.	C Carburetor idle mixture adjustment improperly set	C Adjust carburetor. See separate engine manual.			
5 Idles poorly	A Spark plug fouled, faulty, or gap too wide B Carburetor improperly adjusted	 A Reset gap to .030" or replace spark plug. B Adjust carburetor. See separate engine manual. 			
	C Dirty air cleaner	C Clean air cleaner as described in separate engine manual.			
6 Engine overheats	A Carburetor no adjusted properly B Air flow restricted	A Adjust carburetor. See separate engine manual. B Remove blower housing and clean as described in separate engine manual. C Fill prophesses with the proper oil			
7 Excessive vibration	C Engine oil level low A Cutting blade loose or unbalanced B Bent cutting t lade	C Fill crankcase with the proper oil. A Tighten blade and adapter. Balance blade. B Replace blade.			

Note: For repairs beyond the minor adjustments listed above, contact your local authorized service dealer.

PARTS INFORMATION

POWER EQUIPMENT PARTS AND SERVICE

Parts and service are available through the authorized service firms listed below. All orders should specify the model number of your unit, part numbers, description of parts and the quantity of each part required.

BRIGGS AND STRATTON, TECUMSEH AND PEERLESS PARTS AND SERVICE

Briggs & Stratton, Tecumseh and Peerless parts and service should be handled by your nearest authorized engine service firm. Check the yellow pages of your telephone directory under the listing **Engines—Gasoline**, Briggs & Stratton or Tecumseh Lauson.

NOTE: If any parts are found to be missing or defective upon assembly of this unit, write to advise the factory so that immediate replacement can be made.

ALABAMA	BIRMINGHAM	NORTH CAROLINA	00150505
Auto Electric & Carburetor Co	2625 4th Ave. S 3 5233	NORTH CAROLINA Smith Hardware Co	GOLDSBORO
AKKANSAS	NORTH LITTLE ROCK	Silitin Haidware Co	515 N. George St 27530
Sutton's Lawn Mower Shop	5301 Boundton Drive	Dixie Sales Company	GREENSBURU
		OHIO	335 N. Green 2/402
CALIFORNIA Billious	PORTERVILLE	OHIO	CARROLL
Billious	. 75 North D Street 9 1257	Stebe's Mid-State Mower Supply	. Box 366, /1 High St 43112
COLURADO	DENVER	Bleckrie, Inc	CLEVELAND
Spitzer Industrial Products Co	6601 N.	Dieckne, Inc	WADSWORTH
	Manhimman Ot	National Central	WADSWORTH
FLORIDA	JACKSONVILLE	National Central	YOUNGSTOWN
FLORIDA Radco Distributors	4909 Victor St.	Burton Supply Co	1201 Logon Ave
	Box 5459 3; 207	Burton Supply Co	Box 929
		OKLAHOMA Victory Motors, Inc.	MUSKOCEE44501
Small Eng. Dist	7995 W. 26th Court 3; 016	Victory Motors Inc	605 C Charakas 74404
GEORGIA	EAST POINT	OREGON	PODTI AND
GEORGIA East Point Cycle & Key Inc	2834 Church St 3(344	OREGON Kenton Supply Co	8216 N. Donyor Avo. 07217
		PENNSYLVANIA	HARRISRING
Keen Edge Co	8615 Ogden Ave 6(534	PENNSYLVANIA EECO Inc	4021 N 6th St 17110
INDIANA Parts & Sales Inc.	ELKHART		WILLOW GROVE
Parts & Sales Inc	2101 Industrial Pkwy 4(516	Thompson Rubber Co	850 Davisville Rd 10000
IOWA	DUBUQUE		PITTSRURGH
Power Lawn & Garden Equip	2551 J.F. Kennedy 52 001	Bluemont Co	11125 Frankstown Rd 15235
LOUISIANA	NEW ORLEANS		DIINIVCIITAMMEV
LOUISIANA Suhren Engine Co	8330 Earhart Blvd 70 118	Frank Roberts & Sons	RD 2 15767
MARYLAND Center Supply Co	TAKOMA PARK		SCRANTON
Center Supply Co	6867 New Hampshire	Scranton Auto Ignition Co	1133-35 Myoming Ave 18500
	Ave 20.342	TENNESSEE Ace Distributors	KNOXVILLE
MASSACHUSETTS	SPRINGFIELD	Ace Distributors	. 2103 Magnolia 37919
MASSACHUSETTS Morton B. Collins Co	. 300 Birnie Ave 01107		MEMPHIS
MICHIGAN Lorenz Service Co	LANSING	American Sales & Service, Inc	. 3035-43 Bellbrook 38116
Lorenz Service Co.	2500 S. Pennsylvania 48 110	TEXAS	DALLAS
	MOUNT CLEMENS	TEXAS Marr Brothers, Inc	. 423 E. Jefferson 75203
Power Equipment Dist	340 Hubbard 48 143	Woodson Sales Corp	FORT WORTH
MINNESOTA		Woodson Sales Corp	. 6733 Baker Blvd.
Hance Distributing Inc	420 Excelsion Ave W 55 M3		Hwy. 10 76118
MISSOURI	KANSAS CITY	Bullard Supply Co	HOUSTON
MISSOURI Automotive Equip. Service	3117 Holmes St 64+00	Bullard Supply Co	. 2409 Commerce St 77003
Automotive Equip. Gervice	ST. JOSEPH		
Ross-Frazer Supply Co	8th and Monterey 64:03	Engine House Inc	. 8610 Botts Lane
riods ridge. Supply So	ST LOUIS		P.O. Box 17867 78217
Henzler, Inc.	2015 Lemay Ferry Rd 63 25	UTAH	SALT LAKE CITY
NEW JERSEY	RELIMAND	UTAH Powered Products	. 1661 N. Beck St 84116
Lawnmower Parts Inc	717 Creek Bd 08 130	VIRGINIA RBI Corp.	ASHLAND
NEW MEXICO	AI BUQUERQUE	RBI Corp	101 Cedar Ridge Dr 23005
NEW MEXICO Spitzer Eng. & Parts Co	1023 Third Ave. N.W. 87 103	WASHINGTON Equip. Northwest	SEATTLE
NEW YORK	CARTHAGE	Equip. Northwest	. 1410 14th Ave 98122
NEW YORK Gamble Dist., Inc	West End Ave 13:10	WISCONSIN Wisconsin Magneto Inc	MILWAUKEE
		wisconsin Magneto Inc	. 4/2/ N. Teutonia St 53209

WARRANTY FARTS AND SERVICE POLICY

(0685)

The purpose of warranty is to protect the customer from defects in workmanship and materials, defects which are NOT detected at the time of manufacture. It does not provide for the unlimited and unrestricted replacement of parts. Use and maintenance are the responsibility of the customer. The manufacturer cannot assume responsibility for conditions over which it has no control. Simply put, if it's the manufacturer's fault, it's the manufacturer's responsibility.

CLAIMS AGAINST THE MANUFACTURER'S WARRANTY INCLUDES:

- 1. Replacement of Missing Parts on new equipment.
- 2. Replacement of Defective Parts within the warranty per od.
- 3. Repair of Defects within the warranty period.

All claims MUST be substantiated with the following information:

- 1. Model Number of unit involved.
- 2. Date unit was purchased or first put into service.
- 3. Date of failure.
- 4. Nature of failure.