

# Panasonic

## Operation Guide & Cook book Microwave Oven *INVERTER* SYSTEM INSIDE



Model Numbers:

**NN-T791 / NN-S781**

**NN-S761 / NN-S751**

We are glad you have chosen to purchase a PANASONIC microwave oven. Before operating this oven, please read these instructions carefully and completely, and keep them for further reference.

If you have only used a microwave oven for reheating and defrosting, with Panasonic's Inverter Technology you can be reassured of excellent results when cooking a variety of foods, as the 'soft' penetration of microwave energy to the centre of food helps prevent over cooking on edges and surfaces. Foods can now be gently simmered without the concern of boil over.

After reading the introductory chapter, I am sure you will be able to master the basic techniques and thereby develop a firm understanding of your new oven. This book includes recipes from starters to desserts. After trying our recipes be sure to adapt your favourite recipes to microwave methods.

Start experimenting now, and enjoy the first class results you will achieve by using your new microwave oven.

Consultant Home Economists  
Kyla Italiano  
Fiona Campbell

Panasonic Australia Pty. Ltd.  
P.O. Box 505  
**French Forest NSW 1640**



PANASONIC NZ LTD  
CUSTOMER CARE CENTRE  
350 Te Irirangi Drive  
East Tamaki, Auckland  
Private Bag 14911  
Panmure, Auckland

Phone: (09) 272-0178  
Fax: (09) 272-0137

The serial number of this product may be found on the left side of the control panel. You should note the model number and serial number of this oven in the space provided and retain this book as a permanent record of your purchase for future reference.

MODEL NUMBER \_\_\_\_\_

SERIAL NUMBER \_\_\_\_\_

DATE OF PURCHASE \_\_\_\_\_

# Table of Contents

## Before Operation

Safety Instructions.....	2
Installation and General Instructions.....	3
Microwaves and How They Work.....	4
Cookware and Utensil Guide .....	4-5
Feature Diagram .....	6
Control Panels .....	7-8
Ingredient Conversion Chart .....	24

## Operation and Hints

Let's Start to Use Your Oven.....	9
To Set Clock .....	10
To Use Child Safety Lock.....	10
To Use Timer Pad .....	11
To Cook / Reheat / Defrost by MICRO POWER AND TIME .....	12-13
using AUTO COOK Pad (NN-S751).....	16-18
using SENSOR COOK (NN-T791 / NN-S781 / NN-S761) .....	19-23
To Reheat by MICRO POWER AND TIME .....	12-13
using AUTO REHEAT Pad (NN-S751) .....	16-17
using SENSOR REHEAT Pad (NN-T791 / NN-S781 / NN-S761) .....	20-21
To Defrost by MICRO POWER AND TIME .....	12-13
using TURBO DEFROST Pad.....	14-15
To Use RECIPE PROMPTING .....	24-25
Quick Guide to Operation.....	76-77

## Cooking Guide

Defrosting Tips and Techniques.....	15
Sensor Cook, Tips and Techniques .....	21-23
Microwave Recipe Preparation and Techniques.....	26-28
Everyday Basics.....	29-32
Soups, Snacks and Starters .....	33-36
Fish and Shellfish .....	37-39
Poultry .....	40-44
Main Fare Meats .....	45-49
Vegetable Varieties .....	50-55
Rice, Pasta and Cereal .....	56-59
Cakes, Desserts and Slices .....	60-66
Micro-made Extras .....	67-70
Index to Recipes .....	71-73

## Maintenance

Before Requesting Service .....	74
Care of Your Microwave Oven .....	75
Technical Specifications.....	75

# Safety Instructions

## Precautions to be taken when using Microwave Ovens for Heating foodstuffs

**INSPECTION FOR DAMAGE.** A microwave oven should only be used if an inspection confirms all of the following conditions:

1. The grille is not damaged or broken.
2. The door fits squarely and securely and opens and closes smoothly.
3. The door hinges are in good condition.
4. The metal plates of a metal seal on the door are neither buckled nor deformed.
5. The door seals are neither covered with food nor have large burn marks.

**PRECAUTIONS.** Microwave radiation from microwave ovens can cause harmful effects if the following precautions are not taken:

1. Never tamper with or deactivate the interlocking devices on the door.
2. Never poke an object, particularly a metal object, through a grille or between the door and the oven while the oven is operating.
3. Never place saucepans, unopened cans or other heavy metal objects in the oven.
4. Do not let other metallic articles, e.g., fast food foil containers, touch the side of the oven.
5. Clean the oven cavity, the door and the seals with water and a mild detergent at regular intervals. Never use any form of abrasive cleaner that may scratch or scour surfaces around the door.
6. Always use the oven with trays or cookware recommended by the manufacturer.
7. Never operate the oven without a load (i.e., an absorbing material such as food or water) in the oven cavity unless specifically allowed in the manufacturer's literature.
8. For horizontally hinged doors, never rest heavy objects such as food containers on the door while it is open.
9. Do not place sealed containers in microwave ovens. Baby bottles fitted with a screw cap or a teat are considered to be sealed containers.
10. The appliance is not intended for use by young children or infirm persons without supervision.
11. Young children should be supervised to ensure that they do not play with the appliance.

## Important Instructions

**WARNING**—To reduce the risk of burns, electric shock, fire, injury to persons or excessive microwave energy:

1. Read all instructions before using the microwave oven.
2. Some products such as whole eggs and sealed containers - (for example, closed glass jars **and sealed baby bottles with teat**) - may explode and should not be heated in the microwave oven.
3. Use this microwave oven only for its intended use as described in this manual.
4. As with any appliance, close supervision is necessary when used by children.
5. Do not operate this microwave oven if it is not working properly or if it has been damaged or dropped.

6. To reduce the risk of fire in the oven cavity:

- (a) Do not overcook food. Carefully attend microwave oven if paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
- (b) Remove wire twist-ties from bags before placing bag in oven.
- (c) If materials inside the oven should ignite, keep oven door closed, turn oven off at the wall switch, or shut off power at the fuse or circuit breaker panel.

## Earthing Instructions

This microwave oven must be earthed. In the event of an electrical short circuit, earthing reduces the risk of electric shock by providing an escape wire for the electric current. This microwave oven is equipped with a cord having an earthing wire with an earthing plug. The plug must be plugged into an outlet that is properly installed and earthed.

**WARNING**—Improper use of the earthing plug can result in a risk of electric shock.

WE CERTIFY THAT THIS MICROWAVE OVEN HAS BEEN INSPECTED AND COMPLIES WITH THE REQUIREMENTS OF REGULATION 3, SUBCLAUSE(2), OF THE MICROWAVE OVENS REGULATIONS 1982.  
MATSUSHITA ELECTRICAL INDUSTRIAL CO.,LTD.

(This statement applicable only to New Zealand.)

We certify that this microwave oven has been inspected and complies with the safety requirements of government notice 466 of March 1981, and complies with the Radio Regulation of government notice 587 of March 1986.

(This statement applicable only to South Africa)

## WARNING

- a) The door seals and door seal areas should be cleaned with a damp cloth. The appliance should be inspected for damage to the door seals and door seal areas and if these areas are damaged the appliance should not be operated until it has been repaired by a qualified service technician trained by the manufacturer.
- b) It is dangerous for anyone other than a qualified service technician trained by the manufacturer to perform repair services.
- c) If the supply cord of this appliance is damaged, it must be replaced by a qualified service technician with the special cord available only from the manufacturer.
- d) Before use, the user should check that utensils are suitable for use in microwave ovens.
- e) Liquids or other foods must not be heated in sealed containers since they are liable to explode.
- f) Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

# Installation and General Instructions

## General Use

1. In order to maintain high quality, do not operate the oven when empty. The microwave energy will reflect continuously throughout the oven if no food or water is present to absorb energy.
2. If smoke is observed, press the **STOP/RESET** Pad and leave door closed in order to stifle any flames. Disconnect the power cord, and/or shut off power at the fuse or circuit breaker panel.
3. Do not dry clothes, newspapers or other materials in oven. They may catch on fire.
4. Do not use recycled paper products, unless the paper product is labelled as safe for microwave oven use. Recycled paper products may contain impurities which may cause sparks and/or fires when used.
5. Do not use newspapers or paper bags for cooking.
6. Do not hit or strike the Control Panel. Damage to controls may occur.
7. POT HOLDERS may be needed as heat from food is transferred to the cooking container and from the container to the Glass Tray. The GlassTray can be very hot after removing the cooking container from the oven.
8. Do not store flammable materials next to, on top of, or in the oven. It could be a fire hazard.
9. Do not cook food directly on Glass Tray unless indicated in recipes. (Food should be placed in a suitable cooking utensil.)
10. **Do NOT** use this oven to heat chemicals or other non-food products. **Do NOT** clean this oven with any product that is labelled as containing corrosive chemicals. **The heating of corrosive chemicals in this oven may cause microwave radiation leaks.**
11. Look at the oven from time to time when food is heated or cooked in disposal containers of plastic, paper or other combustible materials, as these types of containers ignite if overheated.

## Placement of Oven

1. The oven must be placed on a flat, stable surface. For correct operation, the oven must have sufficient air flow. **Allow 15 cm of space on the top of the oven, 10 cm at the back, and 5 cm on both sides. If one side of the oven is placed flush to wall, the other side or top must not be blocked. Do not remove feet.**
  - a. Do not block air vents. If they are blocked during operation, the oven may be overheated and damaged. When using any cloth over the oven, the air intake and exhaust should not be blocked. Also should allow space on back and both sides of oven properly.
  - b. Do not place oven near a hot or damp surface such as a gas stove, electric range or sink etc.
  - c. Do not operate oven when room humidity is too high.
2. This oven was manufactured for household use only.
3. This oven may be built into a wall cabinet, if desired. This microwave oven is designed and approved for use only with a genuine Panasonic trim kit for Model number listed in the operating instructions (page 75). Installation with any other trim kit may void the warranty.

## Circuits

Your microwave oven should be operated on a separate 10 A circuit from other appliances. Failure to do this may cause the power board fuse to blow, and/or food to cook slower. Do not insert higher value fuse in the power board.

## Food

1. Do not use your oven for home canning or the heating of any closed jar. Pressure will build up and the jar may explode. In addition, the microwave oven cannot maintain the food at the correct canning temperature. Improperly canned food may spoil and be dangerous to consume.
2. Do not attempt to deep fat fry in your microwave oven.
3. Do not boil eggs in their shell and whole hard-boiled eggs (unless otherwise stated in Cooking Guide section). Pressure will build up and the eggs will explode.
4. Potatoes, apples, egg yolks, whole squash and sausages are examples of foods with nonporous skins. This type of food must be pierced before cooking, to prevent bursting.
5. When heating liquids, e.g. soup, sauces and beverages, in your microwave oven, overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of hot liquid. To prevent this possibility the following steps should be taken:
  - a) Avoid using straight-sided containers with narrow necks.
  - b) Do not overheat.
  - c) Stir the liquid before placing the container in the oven and halfway through cooking time.
  - d) After heating, allow to stand in the oven for a short time, stirring again before carefully removing the container.
6. **DO NOT USE A CONVENTIONAL MEAT THERMOMETER IN THE MICROWAVE OVEN. To check the degree of cooking of roasts and poultry use a MICROWAVE THERMOMETER.** Alternatively, a conventional meat thermometer may be used after the food is removed from the oven. If undercooked, return meat or poultry to the oven and cook for a few more minutes at the recommended power level. It is important to ensure that meat and poultry are thoroughly cooked.
7. **COOKING TIMES given in the Cooking Guide section are APPROXIMATE.** Factors that may affect cooking time are preferred degree of moisture content, starting temperature, altitude, volume, size, shape of food and utensils used. As you become familiar with the oven, you will be able to adjust for these factors.
8. **It is better to UNDERCOOK RATHER THAN OVERCOOK foods.** If food is undercooked, it can always be returned to the oven for further cooking. If food is overcooked, nothing can be done. Always start with minimum cooking times recommended.
9. Extreme care should be taken when cooking popcorn in a microwave oven. Cook for minimum time as recommended by manufacturer. Use the directions suitable for the wattage of your microwave oven. NEVER leave oven unattended when popping popcorn.
10. When heating food in plastic or paper containers, check the oven frequently due to the possibility of ignition.
11. The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns.

# Microwaves and How They Work

Microwaves are a form of high frequency radio waves similar to those used by a radio, including AM, FM and CB. They are similar to a television where the radio waves are converted to a picture on the screen. However, microwaves are much shorter than radio waves; approximately twelve centimetres wave length. Electricity is converted into microwave energy by the magnetron tube (which is the heart of the microwave oven).

From the magnetron tube, microwave energy is transmitted to the oven cavity through a small plastic covered piece. The microwaves are converted to heat in the food. The microwaves enter from the outside of the food and travel through the food losing half of their power every two to three centimetres. Continued cooking to the centre occurs by conduction.

Although pacemakers used to be affected by microwaves (as well as by other radio waves), they are now shielded and are not bothered by these interferences. This allows people with pacemakers to sit calmly by their radio or television and cook with microwave ovens.

When microwaves come in contact with a substance, any one or combination of three things may occur.

They can be:

1. REFLECTED
2. TRANSMITTED
3. ABSORBED

## Reflection:

Metal substances REFLECT microwave energy and because there is no absorption, there is no heating. This is why the oven interior is either stainless steel or epoxy-coated steel. This ensures that the microwaves are kept inside the cavity and evenly distributed throughout the food with the help of the turntable.

## Transmission:

Such substances as paper, glass and plastic TRANSMIT microwave energy and do not become hot except from food. Because these substances do not reflect or absorb microwave energy, they are ideal materials for microwave cooking containers.

## Absorption:

Food contains moisture and will ABSORB microwave energy, which causes the moisture molecules within the food to vibrate at an incredible rate (2,450,000,000 times per second). Friction, created by the vibration, produces heat energy which is conducted throughout the food.

# Cookware and Utensil Guide

It is important to use the correct container when cooking in a microwave oven. The following will help you make the right selection.

## How to Test a Container for Safe Microwave Oven Use

Fill a 1-cup glass measure with water and place it in the microwave oven along with the container to be tested. Heat one minute on **P10**. If the container is microwave oven safe, it should remain comfortably cool and the water should be hot. If the container becomes very hot, it has absorbed some microwave energy and should not be used. This test cannot be used for plastic containers.

## Paper Products and Freezer Wrap

Waxed paper, paper plates, cups and napkins should not be used for heating or cooking food. Freezer wrap should not be used as it is not heat resistant and may melt. Paper towel, greaseproof paper and bake paper may be safely used for short periods of time for covering or lining.

## Glass, Ceramic and China

**Heat-Resistant glass cookware** is invaluable in microwave cooking. Many of these items are readily available in most homes: glass jugs, mixing bowls, loaf dishes, covered casseroles, oblong baking dishes, pie plates and round or square cake dishes. Examples of this type of cookware are Pyrex® and Corningware®.

**Dinnerware** can be used for microwave heating. Many brands of dinnerware are microwave safe. Check the care information for reference to microwave use for dinnerware and serving pieces. If dinnerware is marked ovenproof, it frequently is safe to use in the microwave oven. However, to be sure, check by conducting microwave dish test previously mentioned.

**Several types of glassware and dinnerware** are not recommended for use in the microwave oven. Do not use dishes with metallic trim or containers with metal parts. Do not use cups or mugs with glued on handles, as they may fall off with continued heating. Do not use delicate glassware. Although the glassware may be transparent to microwave energy the heat from the food may cause the glassware to crack.

## Plastics

**Plastic dishes, cups and some freezer containers** should be used with care in a microwave oven.

Choose plastic containers carefully, as some plastic containers may become soft, melt and may scorch. The majority of plastic dishes, even those designed for use in the microwave oven, are not suitable for cooking foods with high fat or sugar content, or for lengthy cooking times. Most microwave plastic dishes should not be used for longer than 3 to 5 minutes on **P10** power. These dishes, although not suitable for extended cooking, may be used successfully for defrosting or for use on lower power levels.

**Cooking Bags** designed to withstand boiling, freezing, or conventional heating are microwave safe. Prepare bags according to manufacturer's directions. When cooking by microwave, **DO NOT** use wire twist-ties to close bag. They can act as an antenna and cause arcing (sparks).

**DO NOT COOK IN PLASTIC FOOD STORAGE BAGS.**

**Plastic Wrap** such as GLAD WRAP® can be used to cover dishes in most recipes. Over an extended heating time, some disfiguration of the wrap may occur. When removing plastic wrap "covers", as well as any glass lid, be careful to remove it away from you to avoid steam burns.

Loosen plastic but let dish stand, covered.

## Browning Dishes

Browning dishes are used to sear chops, meat patties, steaks, etc.. A special coating on the bottom of the dish absorbs the microwave energy and becomes very hot. When foods are added to the dish, the result is a seared effect. Preheat the dish according to the manufacturer's directions. Add food to be seared and heat according to recipe or personal preference.

Use pot holders to remove the dish from the microwave oven. Do not use the browning dish on or in a conventional stove.

### Remember:

Food can be covered with a loose sheet of absorbent towel to prevent splattering. Do not attempt to deep fry in the browning dish or microwave oven as you cannot control the temperature of the oil.

### Note:

Browning dishes may no longer be available. This information is being supplied to assist people who own browning dishes.

## Metal

Metal cookware or utensils, or those with metallic trim, should **NOT** be used in the microwave. Since microwave energy is reflected by metal, foods in metal containers will not cook evenly. There is also a possibility of "arcing."

Although metal utensils should be avoided in microwave cooking, some metal can be helpful when used correctly.

Aluminum foil can be used safely, if certain guidelines are followed, to prevent overcooking. Small pieces of foil are used to shield areas such as chicken wings, tips of roasts, or other thin parts that cook before the rest of the recipe is finished. Make sure foil is attached securely and doesn't touch sides of oven, otherwise arcing may occur. Foil lined containers, either cardboard or plastic, should **NOT** be used in the microwave oven as arcing could occur.

Metal twist-ties, either paper or plastic coated, should **NOT** be used in the microwave oven. Frozen dinner trays can be used in the microwave, if the container is no deeper than 2 cm and is filled with food. Metal skewers can not be used in microwave ovens as arcing may occur. Wooden skewers are readily available and give the same result.

**Shells:** Scalloped baking shells are best used during reheating and for short periods of cooking time only.

**Thermometers** are available for use in microwave ovens. **DO NOT USE CONVENTIONAL MERCURY TYPE CANDY OR MEAT THERMOMETERS** in food while cooking in the microwave oven.

## Jars and Bottles

Jars and bottles can be used to warm food to serving temperature, if the lid is removed first. Cooking should not be done in these containers since most are not heat resistant and during extended heating times, heat from food would cause cracking or breaking.


## Straw, Wicker and Wood

Straw and wicker baskets may be used in the microwave oven for short periods of time to warm rolls or bread. Large wooden utensils, such as bowls or cutting boards should **NOT** be used for prolonged heating as the microwave energy may cause the wood to become dry and brittle.

# Feature Diagram

## Glass Tray


1. Do not operate the oven without the Roller Ring and Glass Tray in place.
2. Only use the Glass Tray specifically designed for this oven. Do not substitute another Glass Tray.
3. If Glass Tray is hot, allow to cool before cleaning or placing in water.
4. **Do not** cook directly on Glass Tray. Always place food on a microwave-safe dish, or on a rack set in a microwave-safe dish.
5. If food or utensil on Glass Tray touches oven walls, causing the tray to stop moving, the tray will automatically rotate in opposite direction. This is normal.
6. Glass Tray can rotate in either direction.

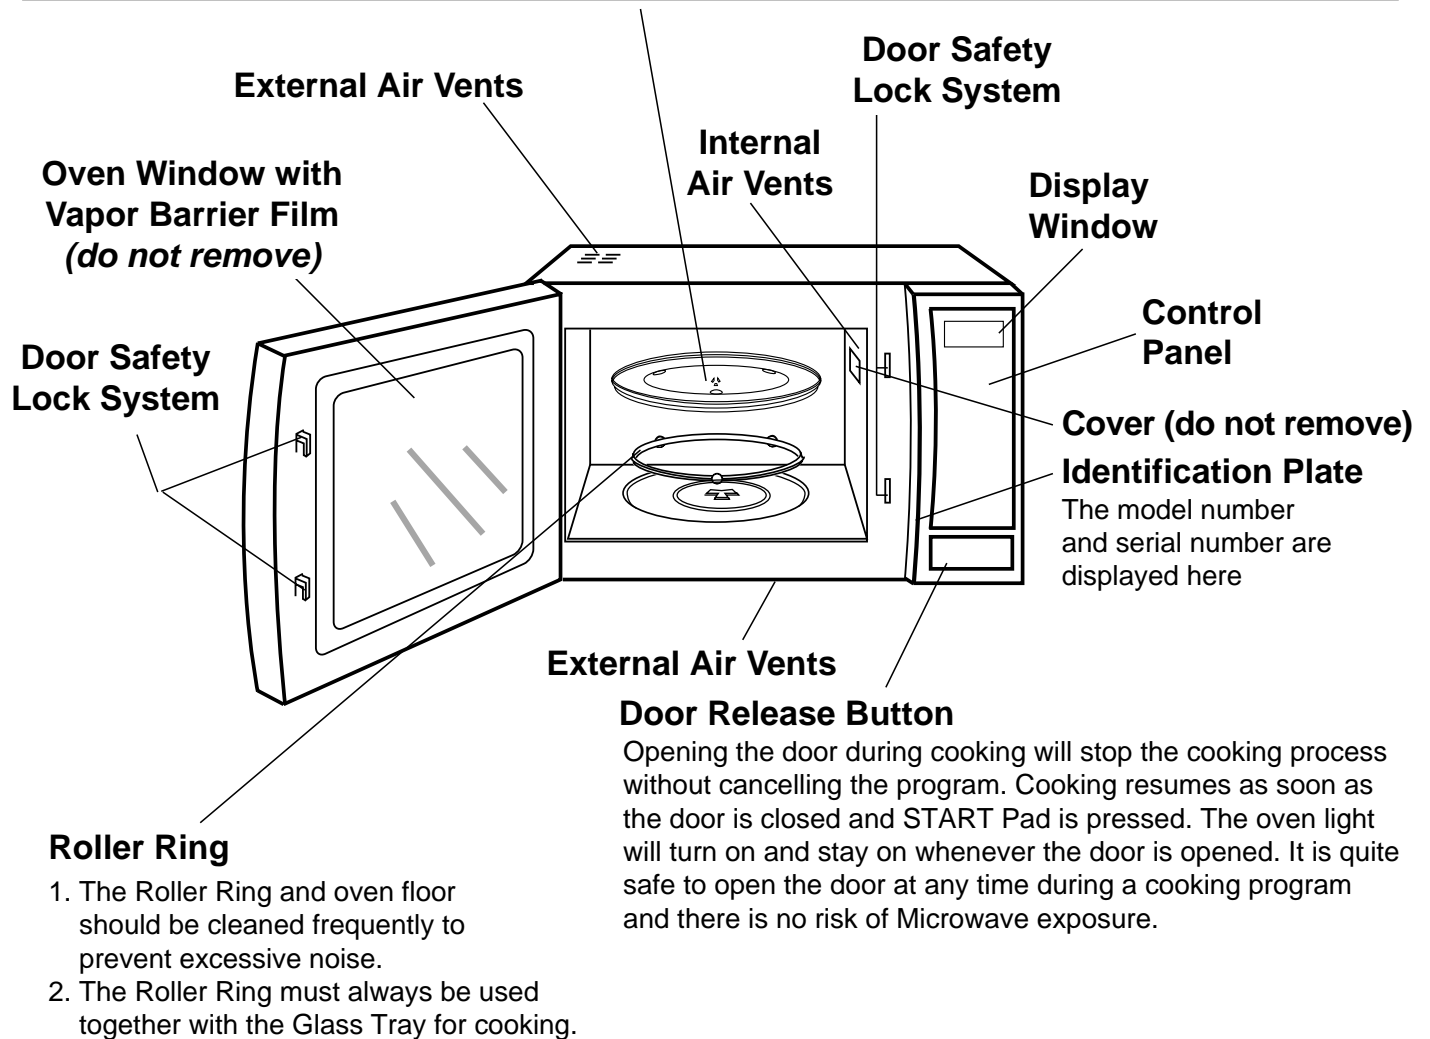



# Control Panels

NN-T791

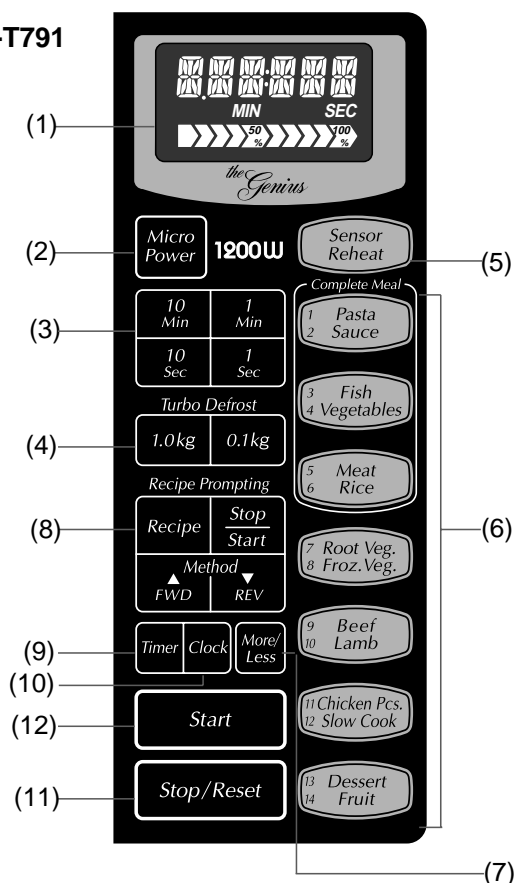

## CONTROL PANELS

- (1) Display Window
- (2) **Micro Power Pad** (pg. 12)
- (3) Time Pads
- (4) **Turbo Defrost Pad** (pg. 14)
- (5) **Sensor Reheat Pad** (pg. 20)
- (6) **Sensor Cook Pads** (pg. 19-20)
- (7) **More/Less Pad** (pg. 19)
- (8) **Recipe prompting Pads** (pg. 24-25)
- (9) **Timer Pad** (pg. 11)
- (10) **Clock Pad** (pg. 10)
- (11) **Stop/Reset Pad**

**Before cooking:** One tap clears your instructions.

**During cooking:** One tap temporarily stops the cooking process. Another tap cancels all your instructions and time of day appears in the Display Window.


### (12) **Start Pad**

One tap allows oven to begin functioning. If door is opened or **Stop/Reset** Pad is pressed once during oven operation, **Start** Pad must again be pressed to restart oven.

## Word Prompters


When pads are pressed, a beep sound is heard and the corresponding letter or word(s) appear and roll across the Display Window. If a pad is pressed and no beep is heard, the unit does not or cannot accept the instruction. As each pad is pressed the corresponding word(s) roll across the Display Window. Words will automatically appear to prompt the user to perform the next step. It is not necessary to wait for the words to appear before pressing pads for the next step. A two beep sound is heard between stages. At the end of any complete programme, the oven will beep five times and "ENJOY YOUR MEAL" will appear in the Display Window.

NN-S781

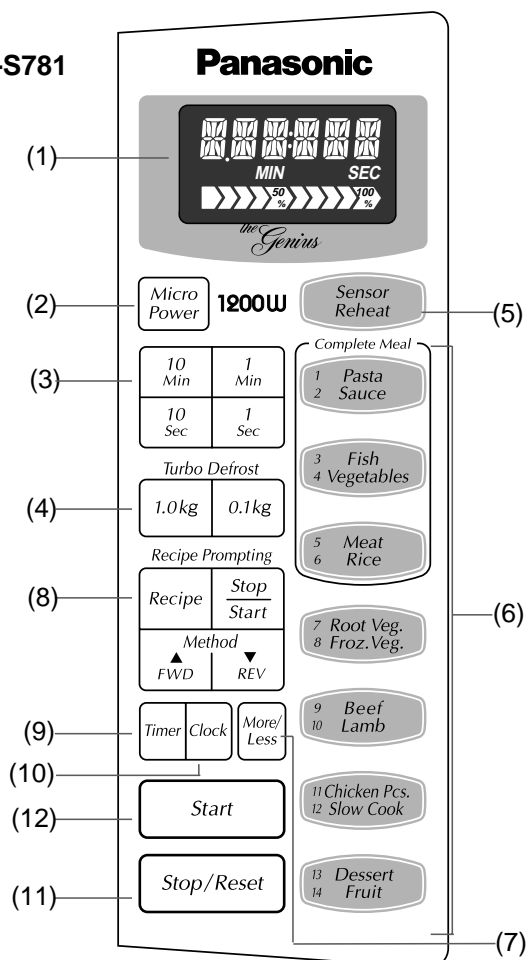

# Control Panels

NN-S761

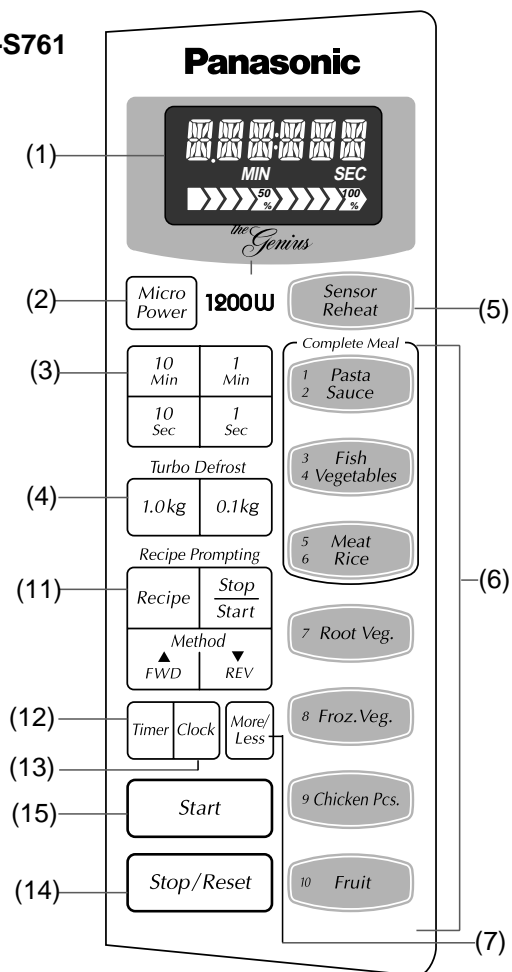

## CONTROL PANELS

- (1) Display Window
- (2) **Micro Power** Pad (pg. 12)
- (3) Time Pads
- (4) **Turbo Defrost** Pad (pg. 14)
- (5) **Sensor Reheat** Pad (pg. 20)
- (6) **Sensor Cook Pads** (pg. 19-20)
- (7) **More/Less** Pad (pg. 19)
- (8) **Auto Reheat** Pad (pg. 16)
- (9) **Auto Cook** Pad (pg. 16)
- (10) **Serving/Weight** Pad (pg. 16)
- (11) **Recipe Prompting** Pads (pg. 24-25)
- (12) **Timer** Pad (pg. 11)
- (13) **Clock** Pad (pg. 10)
- (14) **Stop/Reset** Pad


**Before cooking:** One tap clears your instructions.

**During cooking:** One tap temporarily stops the cooking process. Another tap cancels all your instructions and time of day appears in the Display Window.

### (15) **Start** Pad

One tap allows oven to begin functioning. If door is opened or **Stop/Reset** Pad is pressed once during oven operation, **Start** Pad must again be pressed to restart oven.

NN-S751

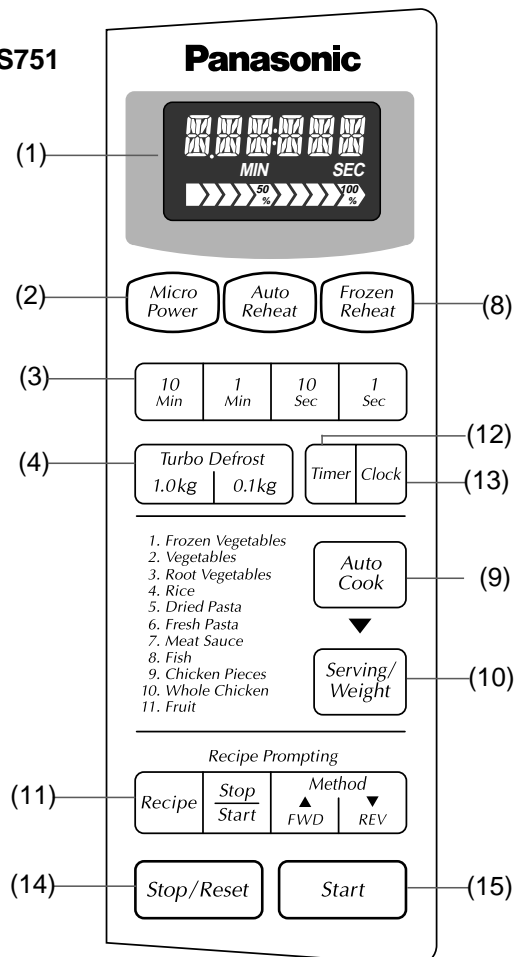

## Word Prompters

When pads are pressed, a beep sound is heard and the corresponding letter or word(s) appear and roll across the Display Window. If a pad is pressed and no beep is heard, the unit does not or cannot accept the instruction. As each pad is pressed the corresponding word(s) roll across the Display Window. Words will automatically appear to prompt the user to perform the next step. It is not necessary to wait for the words to appear before pressing pads for the next step. A two beep sound is heard between stages. At the end of any complete programme, the oven will beep five times and "ENJOY YOUR MEAL" will appear in the Display Window.

# Let's Start To Use Your Oven!

## 1 Plug in

Plug into a properly earthed electrical outlet. "WELCOME TO PANASONIC MICROWAVE OVEN COOKING" appears in the Display Window. (This will immediately cease when any pad is pressed.)

## 2 Open Door

Open the door and place container with food on Glass Tray in the oven. Then close the door.

## 3 Select Power Level

e.g. P7

Press **Micro Power** Pad four times.  
(see page 12 for Micro Power chart)

NN-T791  
NN-S781  
NN-S761

NN-S751

Micro  
Power


Micro  
Power

## 4 Set Time


e.g. 1 minute 30 seconds

**Press Time Pad**

NN-T791  
NN-S781  
NN-S761

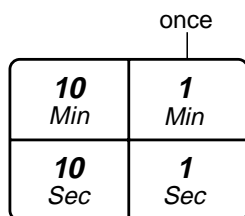


NN-S751

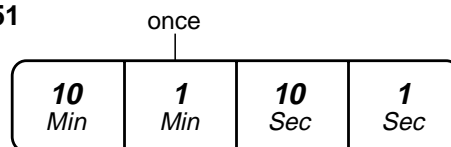

## 5 Press

Start


Verify your selection(s) in the Display Window.



## Operation Guide in the Display Window

To assist you in programming your oven, the following operation will appear in the Display Window. When you become familiar with your oven, the Operation Guide can be turned off.

To turn off:




Press 3 times.




OPERATION GUIDE OFF

Display Window



Colon or time of day appears in the Display Window.

To turn on:




Press 3 times.



OPERATION GUIDE ON

Display Window



Colon or time of day appears in the Display Window.


# To Set Clock

You can use the oven without setting the clock.

## 1 Press

Clock

Colon will blink in Display Window.

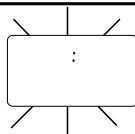


## 2 Enter Time of Day


Enter time of day using Time Pads e.g. 12:35

Clock is a 12 hour display. There isn't a.m. or p.m. setting.

NN-T791  
NN-S781  
NN-S761

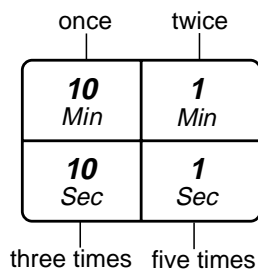

NN-S751

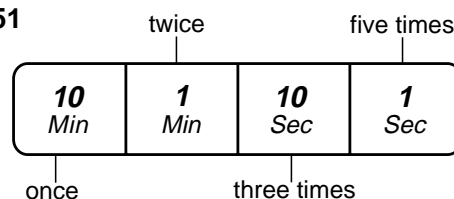

## 3 Press

Clock

Colon stops blinking; time of day is entered and locked into Display Window.

**NOTES:** 1. Oven will not operate while colon is still blinking

2. To reset time of day, repeat step 1 through 3.

3. The clock will keep the time of day as long as oven is plugged in and electricity is supplied.


4. Maximum time available is 12:59. Clock is 12 hour only.

12:35

# To Use Child Safety Lock

This feature allows you to prevent operation of the oven by a young child; however, the door will open. You can set Child Safety Lock when colon or time of day is displayed.


**To set:**



Colon or time of day is displayed




Press 3 times.



Display Window


**To cancel:**



Display Window




Press 3 times.




Colon or time of day is displayed

# To Use Timer Pad


## To Use as a Kitchen Timer

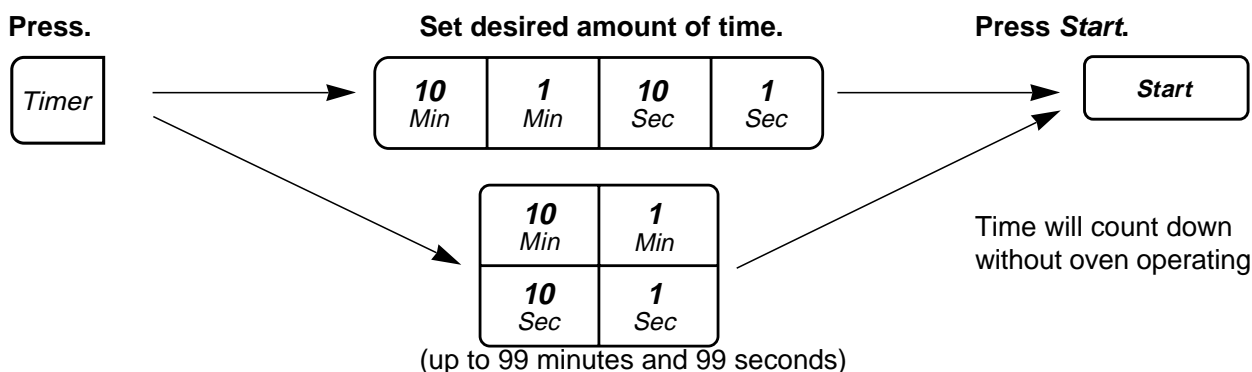

## To Set Standing Time

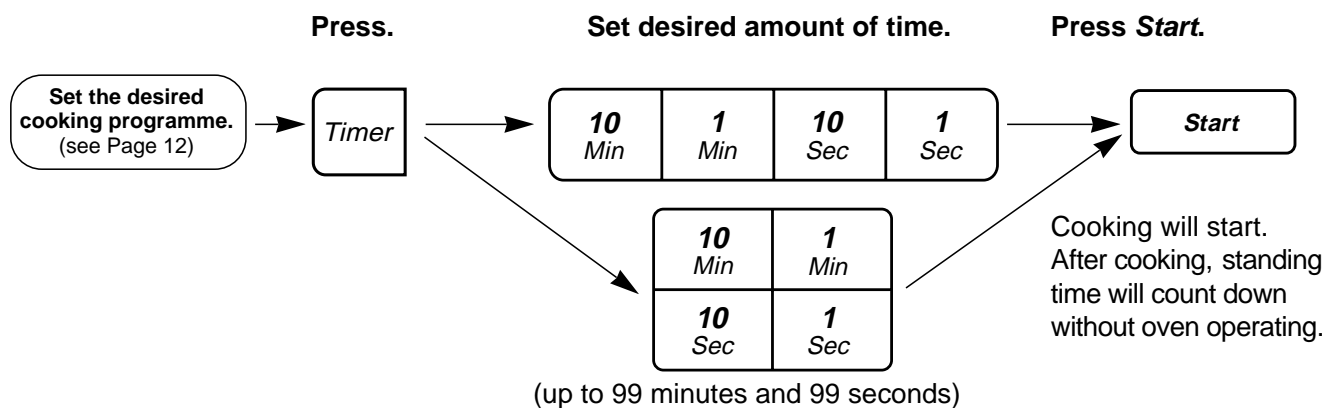

## To Set Delay Start

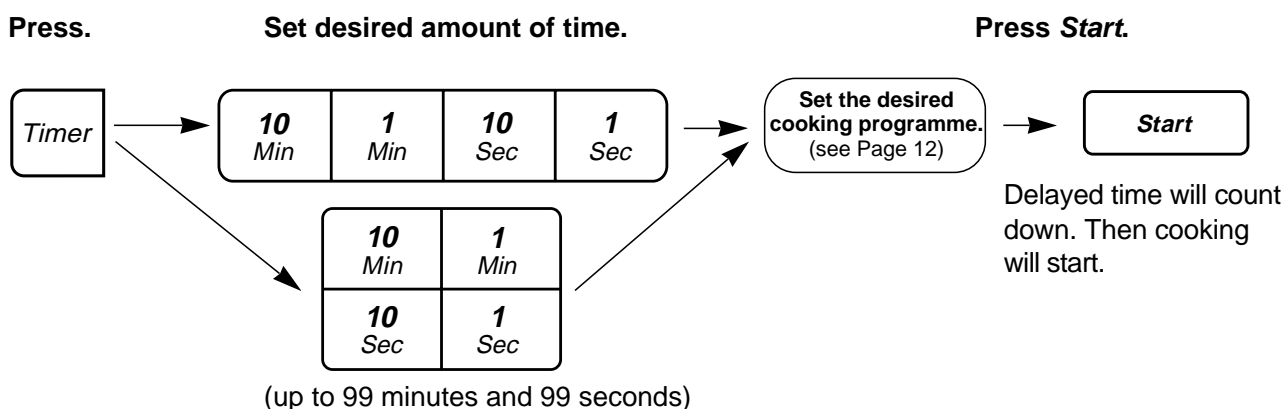

### NOTES:

1. If oven door is opened during the Standing Time or Kitchen Timer, the time in the Display Window will continue to count down.
2. Delay Start cannot be programmed before any Auto Control function. This is to prevent the standing temperature of the food from rising before defrosting or cooking begins. A change in the starting temperature could cause inaccurate results.

# To Cook / Reheat / Defrost by Micro Power and Time

## 1 Select Power Level

Press **Micro Power** Pad until the power level appears in the Display Window.  
(see chart below)

NN-T791  
NN-S781  
NN-S761

NN-S751

Micro  
Power

Micro  
Power

**Note:** When selecting P10 on the first stage, you can start from step 2.

## 2 Set Cooking Time e.g. 5 minutes

(P10: up to 30 minutes, other powers: up to 99 minutes and 99 seconds for a single stage)

NN-T791  
NN-S781  
NN-S761

five times

10 Min	1 Min
10 Sec	1 Sec

NN-S751

five times

10 Min	1 Min	10 Sec	1 Sec
-----------	----------	-----------	----------

## 3 Press

Start

Cooking will start.

The time in the Display Window will count down.

5 00  
MIN SEC

**For more than one stage cooking,**

Repeat steps 1 & 2 above then press **Start**. The oven will beep twice between stages.

e.g. : Casserole

Stage 1

P10 for 10 minutes  
to bring to a boil

Stage 2

P7 for 30 minutes  
to finish cooking by simmering

### Micro Power:

The **Micro Power** Pad gives you a selection of different power levels representing decreasing amounts of microwave energy, used for cooking foods at different speeds.

e.g. The lower the micro power setting, the more evenly the food cooks, although it will take a little longer.

To select the correct power level for cooking different foods, refer to the chart below.

Press	POWER LEVEL	POWER	EXAMPLE OF USE
1x	P10	100 %	Boil water. Cook vegetables, rice, pasta and noodles.
2x	P9	85 %	Cook fresh fruits.
3x	P8	75 %	Cook cakes, desserts. Heat milk.
4x	P7	65 %	Cook pork, whole chicken and chicken pieces.
5x	P6	60 %	Cook beef, lamb and eggs. Melt butter.
6x	P5	50 %	Cook meatloaves. Melt chocolate.
7x	P4	35 %	Cook fish and seafood.
8x	P3	25 %	Thaw foods. Cook christmas pudding, corned beef, dried beans and peas.
9x	P2	15 %	Simmer soups, stews and casseroles (less tender cuts).
10x	P1	10 %	Keep cooked foods warm, simmer slowly.

# To Reheat by **Micro Power and Time**

## Reheat by Setting Power and Time - Frozen Convenience Foods

FROZEN ITEM (Pre-cooked)	POWER	TIME (in minutes)	SPECIAL INSTRUCTIONS
<b>BREAD &amp; BAKED PRODUCT</b> Bread 1 slice 1 loaf  6 rolls	P7 P7  P6	10 - 15 sec 1 - 3  1 - 2	Do not let bread get hot, or it will become rubbery and dry out. Remove whole loaf from original wrapper. Place on paper towel to absorb moisture.
Cheesecake (450g)	P3	2 - 3	Remove from container. Defrost on plate.
Muffins - 4 (350 g)	P7	2 - 3	Place onto paper towel lined plate.
Scones - 6 (400 g)	P6	2 - 3	Defrost on paper lined plate. Stand 2 minutes.
<b>PIES</b> Fruit Pie (600 g)	P3 then P7	5 - 7  5 - 7	Remove from foil container and place uncovered into a pie dish.
Meat Pie (175g)	P7	3 - 4	Place onto paper towel lined plate.
Pizza (350 g)	P10	5 - 7	Remove from package and place onto paper towel or follow manufacturer's instructions.
<b>FROZEN MEAL</b> Fish in Sauce (200 g)	P5	6 - 8	Pierce corner of bag. Heat on a plate.
Instant Casserole in Pouch (500g)	P7	6 - 8	Pierce pouch. Heat on a plate or bowl.
Lasagne (400 g)	P9	7 - 9	Remove from foil container, place into serving dish.
Plated style dinner (320 g)	P5	8 - 10	Remove foil cover and replace with plastic wrap.
Vegetables & Sauce (in the bag) (500 g)	P7	8 - 10	Pierce corner of bag. Heat on a plate.
<b>MISCELLANEOUS</b> Chicken Pieces (500 g)	P3 then P7	5 - 7  8 - 10	Place onto paper towel lined plate.
Croissants - 4 (200 g)	P5	1 - 2	Place onto paper towel lined plate.
Fish Fingers - 8 (200 g)	P3 then P10	2 - 4  2 - 3	Place onto paper towel lined plate.
Sausage Rolls (225 g)	P7	3 - 5	Place onto paper towel lined plate.

# To Defrost

## Turbo Defrost

This feature allows you to defrost meat, poultry and seafood automatically by just setting the weight..

### 1 Set Weight

The shape and size of the food will determine the maximum weight the oven can accommodate. The recommended maximum weight of food depends on the oven cavity size. Weight must be programmed in kilograms and tenths of a kilogram (max 3.0 kg).

NN-T791  
NN-S781  
NN-S761

**Turbo Defrost**

1.0kg	0.1kg
-------	-------

Enter weight.

NN-S751

**Turbo Defrost**

1.0kg	0.1kg
-------	-------

Enter weight.

### 2 Press

**Start**

Defrost time appears in the Display Window and begins to count down.


When cooking time is longer than 60 minutes, the time will appear in hours and minutes.

#### NOTES:


For further information, refer to next page.

## Defrost by Micro Power and Time Setting

NN-T791  
NN-S781  
NN-S761

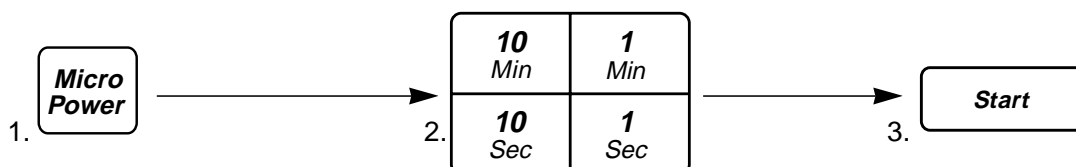

NN-S751

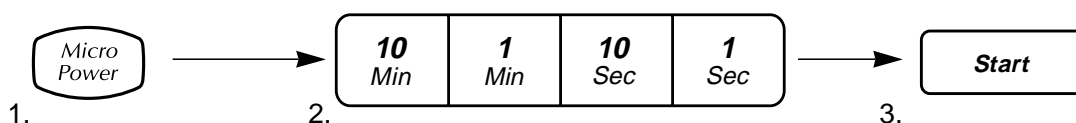

1. Press 8 times for Defrost.  
(P3 - page 12)

2. Set time according to chart on page 15.

3. Press.



# Defrosting Tips and Techniques

## Preparation for Freezing:

1. Heavy-duty plastic wraps, bags and freezer wrap are suitable.
2. Freeze meats, poultry and fish in packages with only 1 or 2 layers of food. To aid in separating layers, place two pieces of wax paper between them.
3. REMOVE ALL AIR and seal securely.
4. LABEL package with type and cut of meat, date and weight.
5. Defrosting times given in the charts are for thoroughly frozen foods (i.e. at least 24 hours in freezer maintained at -18°C or lower).

## Defrosting Technique:

1. Remove from wrapper and set on a defrosting rack in a dish on Glass Tray.
2. On Turbo Defrost, the oven may beep during the defrosting time. At "beep", turn over all meat, poultry, fish and shellfish. Break apart stewing meat, chicken pieces and minced meat. Separate chops and hamburger patties. Shield thin ends of roasts, poultry legs and wings, fat or bones with foil.
3. Throughout the defrosting time, remove any defrosted portions of mince or cubed meat, etc.
4. After defrosting, large roasts may still be icy in the centre. Let stand, 15 to 30 minutes, in refrigerator to complete defrosting.

## Defrosting Chart (by setting Micro Power at P3):

FOOD	APPROX. TIME (minutes per 500 g)	INSTRUCTION
<b>MEAT</b>		
Beef		
Minced Beef	8 - 11	Halfway through the defrost cycle, break apart minced beef, separate chops and remove meat that is defrosted.
Roast: Topside	12 - 15	
Beef Tenderloin	12 - 15	
Chuck or Rump	10 - 13	Turn meat over two to three times during defrosting.
Sirloin, rolled	11 - 14	
Steak	8 - 10	Shield edges and unevenly shaped ends of roasts halfway through the defrost cycle.
Miscellaneous	8 - 12	
<b>Pork/Lamb</b>		
Roast	9 - 12	Large roasts may still be icy in centre. Let stand.
Chops	8 - 11	
Ribs	8 - 12	
<b>POULTRY</b>		
<b>Chicken</b>		
whole	9 - 12	Turn poultry over two to four times during defrosting. Halfway through the defrost cycle, shield end of drumsticks, wings, breast bones and ends of poultry with foil.
pieces	8 - 11	
fillets	8 - 10	Break apart chicken pieces and remove small pieces such as wings, which may be defrosted before larger pieces.
<b>Duck</b>	10 - 12	
<b>Turkey</b>	10 - 13	Rinse poultry under cold water to remove ice crystals. Let stand 5 to 10 minutes, before cooking.
<b>FISH &amp; SHELLFISH</b>		
Fish Fillets	9 - 11	Halfway through the defrost cycle, turn whole fish or blocks of fillets over. Also, break apart prawns or scallops.
Whole Fish	9 - 12	Remove any pieces that are defrosted.
Crabmeat	8 - 10	
Lobster Tails	8 - 10	
Sea Scallops	8 - 10	Let stand, 5 to 10 minutes, before cooking.
Green Prawns	10 - 12	

# To Cook / Reheat Food Using **Auto Cook** (NN-S751)

- 1 Press Desired Category Pad** until the desired category appears in the Display Window (see chart below).



or



or



## 2 Press **Serving/Weight** Pad

After selecting the desired category, set the weight or serving size by pressing the **Serving / Weight** Pad.


e.g. Vegetables

press once - 120 g is displayed

press twice - 180 g



## 3 Press



Cooking time appears in the Display Window and begins to count down.

To Reheat using



or



Pad	Serving / Weight			
	1 tap	2 taps	3 taps	4 taps
<b>Auto Reheat</b>	250 g	450 g	650 g	850 g
<b>Frozen Reheat</b>	250 g	450 g	650 g	850 g

To Cook using



Pad	Food Category	Serving / Weight			
		1 tap	2 taps	3 taps	4 taps
<b>Auto Cook</b>	1. Frozen Vegetables	120 g	250 g	500 g	750 g
	2. Vegetables	120 g	180 g	250 g	370 g
	3. Root Vegetables	180 g	250 g	370 g	500 g
	4. Rice	1.0 cup	1.5 cups	2.0 cups	2.5 cup
	5. Dried Pasta	150 g	250 g	350 g	500 g
	6. Fresh Pasta	150 g	250 g	350 g	500 g
	7. Meat Sauce	250 g	500 g	750 g	1000 g
	8. Fish	120 g	250 g	370 g	500 g
	9. Chicken Pieces	400 g	600 g	800 g	1000 g
	10. Whole Chicken	1400 g	1600 g	1800 g	2000 g
	11. Fruit	150 g	250 g	500 g	750 g

# To Cook / Reheat Using Auto Cook (NN-S751)

## Auto Reheat

### (250 g - 850 g)

- All foods must be pre-cooked. Suitable for casseroles, plated dinners, soups, stews, pasta dishes (except lasagne), and canned foods.
- Foods should be reheated from room temperature or refrigerator temperature. Do not reheat frozen foods on this setting.
- Foods should be covered loosely but completely with plastic wrap or a casserole lid which does not seal.
- Foods weighting less than 200 g and more than 900 g should be reheated by Micro Power and Time only.
- **Do not** reheat bread or pastry products; raw; uncooked or frozen foods; or beverages.
- Halfway through the cooking time, the oven will 'beep' and prompt you to stir or rearrange the foods. At the end of cooking time, stir and let stand for 3 to 5 minutes.

## Frozen Reheat-Plated Meals

### (250 g - 850 g)

- Suitable for reheating pre-cooked soups, stews, casseroles, roast dinners, pasta dishes (except lasagne) and rice dishes from frozen temperature.
- This setting is not suitable for reheating frozen bread or pastry products, raw or uncooked foods or beverages.
- Remove convenience foods from foil or plastic packaging and place in an appropriate size dish.
- Cover dish with plastic wrap or a lid.
- Halfway through the cooking time, the oven will 'beep' and prompt you to stir or rearrange the foods. At the end of the cooking time, stir and let stand for 3 to 5 minutes.

## Frozen Vegetables

### (120 g - 750 g)

- Suitable for heating varieties of frozen vegetables, including peas, beans, corn kernels, broccoli, cauliflower etc.
- Place larger pieces or quantities in a single layer for best results.
- Add 1 tablespoon to  $\frac{1}{4}$  cup water, if vegetables appear slightly dehydrated. Add water also, if you prefer a softer cooked texture.
- Very icy vegetables that have frozen in a solid mass may require slightly longer cooking times.
- Place vegetables in an appropriate size dish. Use the following as a guide:

Weight	Dish Size
120 g	500 ml
250 g	750 ml
500 g	1 litre
750 g	2 litre

- Cover with plastic wrap or a well fitting lid. Halfway through the cooking time, the oven will 'beep' and prompt you to stir and rearrange the vegetables.
- If desired, butter, herbs etc. may be added, but do not add salt until serving. (Salt dehydrates vegetables during cooking.)
- At the end of the cooking time, stir vegetables and let stand, covered, for 2 to 3 minutes.

## Vegetables-Fresh Vegetables

### (120 g - 370 g)

- Suitable for cooking all types of leaf, green and soft varieties, including broccoli, squash, cauliflower, cabbage, asparagus, beans, celery, zucchini, spinach, capsicum or a mixture of these.
- All vegetables should be trimmed or prepared and cut into even size pieces.
- Add 1 tablespoon to  $\frac{1}{4}$  cup water, if vegetables appear slightly dehydrated. Add water if you prefer a softer cooked texture.
- Place vegetables in an appropriate size dish. Use the following as a guide:

Weight	Dish Size
120g	500ml
180g	500ml
250g	750ml
370g	750ml

- Cover with plastic wrap or a well fitting lid.
- If desired, butter, herbs etc. may be added, but do not add salt until serving. (Salt dehydrates vegetables during cooking).

## Root Vegetables (180 g - 500 g)

- Suitable for cooking root vegetables such as potatoes, sweet potatoes, pumpkin, onions, swedes, carrots.
- All vegetables should be trimmed or prepared and cut into evenly sliced pieces.
- Add 1 tablespoon to  $\frac{1}{4}$  cup of water to vegetables, if dehydrated or softer texture is desired.
- Place in a appropriate size dish and cover with plastic wrap or well fitting lid.
- Halfway through the cooking time the oven will 'beep' and instruct you to turn over and rearrange the root vegetables. This will assist in even cooking.

## Rice(1 cup - 2 $\frac{1}{2}$ cups)

- Suitable for cooking white rice including short, long grain, Jasmine and Basmati.
- Place rice with water in a suitable sized dish. Use the following as a guide:

Rice	*Water	Dish Size
1 cup	2 cups	3 litre
1 $\frac{1}{2}$ cups	3 cups	3 litre
2 cups	4 cups	4.5 litre
2 $\frac{1}{2}$ cups	5 cups	4.5 litre

\*(It may be necessary to adjust the amount of water to your personal preference.)

- Rice will boil over if the dish used is too small.
- Cook rice uncovered.
- Do not cook in plastic containers unless suitable for high temperature cooking.
- Stand rice for 5 to 10 minutes after cooking, if necessary.
- This setting is not suitable for cooking brown rice.

# To Cook Using Auto Cook (NN-S751)

## Dried Pasta (150 g - 500 g)

Suitable for cooking dried pasta such as spaghetti, fettuccine, macaroni, penne, spiral etc.

## Fresh Pasta (150 g - 500 g)

Suitable for cooking fresh pasta such as fettuccine, tagliatelle, tortellini, ravioli and agnolotti. (Gnocchi should be cooked by manual MICRO POWER.)

- Place pasta in an appropriate size dish with boiling water. Use the following as a guide:

Pasta	Boiling Water	Dish Size
150g	4 cups	3 litre
250g	5 cups	3 litre
350g	6 cups	4 litre
500g	8 cups	4 litre

- When cooking, the oven will 'beep' and prompt you to stir halfway through the cooking time.
- At the end of the cooking time, let stand, covered, for 5 to 10 minutes, if required. Then drain.

## Meat Sauce (250 g - 1000 g)

- The category weight refers to the weight of the meat only.
- Suitable for cooking meat sauce recipes using minced meat combined with liquid and vegetables.
- Suitable recipes include Spaghetti Meat Sauce, Chicken Tacos and Beef Nachos. These recipes are found in the **Main Fare Meats** section of this book.
- Place in a suitable size dish.
- When cooking, the oven will 'beep' and prompt you to stir halfway through the cooking time.

## Fish (120 g - 500 g)

- Suitable for cooking whole fish and fish fillets.
- Select fish suitable for microwave cooking and place in a single layer in a shallow dish, with skin-side down.
- Add butter, spices, herbs, or lemon juice to flavour.
- Overlap thin edges of fillets to prevent overcooking.
- If stuffing whole fish with seasoning, cooking time may need to be extended.
- Shield the eye and tail area of whole fish with small amounts of aluminum foil to prevent overcooking.
- Cover dish securely with plastic wrap or fitted lid.
- Halfway through the cooking time, the oven will 'beep' and prompt you to turn over.
- Allow large amounts of fish to stand for 3 to 5 minutes after cooking before serving.

## Chicken Pieces

### (400 g - 1000 g)

- Suitable for cooking chicken pieces such as wings, drumsticks, thighs, half breasts etc.
- Chicken pieces should be thawed completely before cooking.
- Marinate chicken pieces prior to cooking, for added flavour and colour.
- Arrange chicken pieces in a single layer in a dish with the thickest portions at the edge of the dish.
- Halfway through the cooking time, the oven will 'beep' and prompt you to turn over and rearrange the chicken pieces.
- At the end of cooking, stand covered, for 5 to 10 minutes before serving.

## Whole Chicken (1.4 kg - 2.0 kg)

- Whole chickens should be cooked directly from the refrigerator and totally thawed.
- Tie legs together with string.
- Place onto a microwave rack set inside a dish.
- Place whole poultry breast side down.
- Do not stuff poultry with raw meat. Bread crumbs or cooked rice seasonings may be used.
- If required, shield the chicken breast, wings or drumsticks with small pieces of foil to prevent from drying out.
- Halfway through the cooking time, the oven will 'beep' and instruct you to turn over. At this time, shield the wings and drumstick ends, if needed.
- Let stand 10 to 15 minutes at the completion of cooking. This makes carving the meat easier and ensures that the heat is even throughout.

## Fruit (150 g - 750 g)

- Suitable for cooking fruits including rhubarb, strawberries, raspberries, blueberries, nectarines, pears, plums, apples and apricots.
- Minimum and maximum weights include sugar and water added to fruits.
- Trim and prepare fruit into uniform pieces.
- Add approximately  $\frac{1}{4}$  cup of caster sugar and  $\frac{1}{2}$  cup of water per 500 g of fruit.
- If not adding sugar, slightly decrease the water content.
- The greater the amount of water used, the softer the fruit will be.
- Place fruit, sugar and water into an appropriate sized dish.
- Halfway through the cooking time, the oven will 'beep' and prompt you to stir.

# To Cook Using **Sensor Cook** (NN-T791/NN-S781/NN-S761)

## Sensor Cook

### 1 Select Category

To select the lower on the key pads, keep pressing the food category pad



press once for pasta  
press twice for sauce

Category appears in the display window.

**NOTE:** When cooking using the automatic sensor, all food must be covered securely with plastic wrap or a tight fitting lid. Do not use plastic containers as a secure seal cannot be achieved and inaccurate cooking may occur.

#### More/Less Pad:



Preferences for food doneness varies with each individual. After having used Sensor Cook a few times, you may decide you prefer your food cooked to a different doneness. By using the **More/Less** Pad, the Auto Sensor programmes can be adjusted to cook food for a longer or shorter time. Press **More/Less** Pad before pressing **Start** Pad.

- 1 tap : More cooking with indication "MORE+"
- 2 taps: Less cooking with indication "LESS-"
- 3 taps: Returns to average cooking result.

If you are satisfied with the result of the **SENSOR COOK** programme, you don't have to use this pad.


### 2 Press



**Note:** The door should not be opened before the time appears in the Display Window.

- ' After the heat and humidity is detected by the SENSOR, the remaining cooking time appears in the Display Window and begins to count down. When cooking time is longer than 60 minutes, the time will appear in hours and minutes.

# Sensor Reheat (NN-T791/NN-S781/NN-S761)

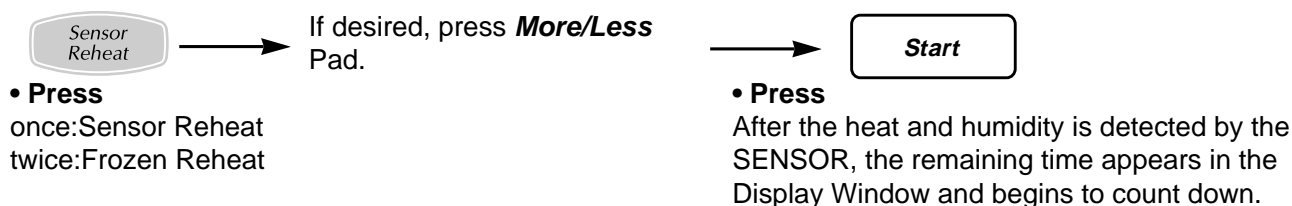

## For best results on Sensor Reheat, follow these recommendations:

1. Food being reheated should weigh between 125 g and 1.0 kg. For foods weighing less than 125 g and more than 1.0 kg, use a manual micro power setting.
2. All foods must be previously cooked and at room or refrigerator temperature.
3. Foods should always be covered loosely, but completely, with plastic wrap or a casserole lid which does not seal. (Do not use any snap closing lids.)
4. All foods should have a covered stand time of at least 3 to 5 minutes.
5. **Do not** reheat bread or pastry products; raw, uncooked or frozen foods, or beverages.
6. **Do not** use if oven cavity is warm.

**Consult the following charts for Sensor Cooking categories on your oven.**

NN-T791/NN-S781	NN-S761
<b>Sensor Reheat</b> - <b>Sensor Reheat</b> - <b>Frozen Reheat</b> 1 <b>Pasta</b> 2 <b>Sauce</b> 3 <b>Fish</b> 4 <b>Vegetables</b> 5 <b>Meat</b> 6 <b>Rice</b> 7 <b>Root Vegetables</b> 8 <b>Frozen Vegetables</b> 9 <b>Beef</b> 10 <b>Lamb</b> 11 <b>Chicken Pieces</b> 12 <b>Slow Cook</b> 13 <b>Dessert</b> 14 <b>Fruit</b>	<b>Sensor Reheat</b> - <b>Sensor Reheat</b> - <b>Frozen Reheat</b> 1 <b>Pasta</b> 2 <b>Sauce</b> 3 <b>Fish</b> 4 <b>Vegetables</b> 5 <b>Meat</b> 6 <b>Rice</b> 7 <b>Root Vegetables</b> 8 <b>Frozen Vegetables</b> 9 <b>Chicken Pieces</b> 10 <b>Fruit</b>

## Sensor Reheat-Reheat

(125 g - 1.0 kg) *All Models*

- All foods must be pre-cooked, such as casseroles, plated dinners, soups, stews, canned foods and pasta dishes (except lasagne).
- Foods should be reheated from refrigerator or room temperature, do not reheat frozen foods on this setting.
- Do not reheat in foil, cans, or plastic containers as incorrect reheating times will result.
- All foods should be covered securely with plastic wrap or a fitted lid.
- During the heating time, the oven will 'beep' and prompt you to stir and rearrange the food.
- Where possible after heating, stir foods and let stand, covered, for 3 to 5 minutes before serving.

## Sensor Reheat-Frozen Reheat

(125 g - 1.0 kg) *All Models*

- All foods must be pre-cooked, such as casseroles, plated dinners, soups, stews, canned foods and pasta dishes (except lasagne).
- Foods should be completely frozen.
- Remove foods from foil and plastic containers and place on/in a dish.
- Cover foods securely with plastic wrap or a fitted lid.
- During the heating time, the oven will 'beep' and prompt you to stir and rearrange the food.
- After heating, allow the food to stand covered for 3 to 5 minutes.

## 1. Pasta *All Models*

- Suitable for cooking dried pasta such as spaghetti, fettuccine, macaroni, penne, spiral and various pasta shapes.
- Place pasta in an appropriate size dish with hot water. Use the following as a guide:

Pasta	Boiling Water	Dish Size
150g	4 cups	3 litre
250g	5 cups	3 litre
350g	6 cups	4 litre
500g	8 cups	4 litre

- Add 1 tablespoon of oil, if desired, before cooking to prevent pasta from sticking together.
- Cover dish with plastic wrap or a well fitting lid.
- Halfway through the cooking time, the oven will 'beep' and instruct you to 'Remove Cover'. Remove plastic wrap or lid and stir.
- At the end of the cooking time, cover and let stand for 5 to 10 minutes, if required, before draining.

## 2. Sauce *All Models*

- Suitable for cooking sauces for pasta tomato based, cream based or bolognaise style.
- Place sauce in a suitable sized dish.
- Cover securely with plastic wrap.
- Halfway through the cooking time, the oven will 'beep' and instruct you to 'STIR'.

# Sensor Cook Tips and Techniques (NN-T791/NN-S781/NN-S761)

## 3. Fish (120 g - 1.0 kg) *All Models*

- Suitable for cooking whole fish and fish fillets.
- Select fish suitable for microwave cooking and place in a single layer in a shallow dish with skin side down.
- Butter, herbs, spices, or lemon juice may be added to add flavor, but do not add salt until serving.
- Overlap thin edges of fillets to prevent overcooking.
- Whole fish may be filled with seasonings and the cavity held closed with wooden skewers or toothpicks.
- Shield the eye and tail area of whole fish with small amounts of aluminum foil to prevent overcooking.
- Cover dish securely with plastic wrap or a fitted lid.
- Allow large amounts of fish to stand for 3 to 5 minutes after cooking before serving.

## 4. Vegetables - Steamed Vegetables (125 g - 1.0 kg) *All Models*

- Suitable for cooking all types of leaf, green and soft varieties of vegetables, including broccoli, squash, cauliflower, cabbage, asparagus, beans, celery, zucchini, spinach, capsicum or a mixture of these.
- All vegetables should be trimmed or prepared and cut into evenly sized pieces.
- Add 1 tablespoon to  $\frac{1}{4}$  cup of water to vegetables if dehydrated or a softer cooked texture is desired.
- Place in a suitable size dish.
- Butter, herbs, etc., may be added before heating, but do not salt vegetables until serving.
- Cover dishes securely with plastic wrap or a fitted lid.
- At the completion of heating, stir larger quantities of vegetables. Let stand, covered, for 2 to 3 minutes.

## 5. Meat *All Models*

- Suitable for cooking a variety of meat and chicken dishes combined with liquid.
- Cut food into even size pieces. Add  $\frac{1}{2}$  cup of soup, broth or stock per 500 g meat.
- Cover securely with plastic wrap.
- Halfway through the cooking time, oven will 'beep' to instruct you to 'STIR'.
- At the end of cooking time, allow to stand for 5 to 10 minutes.

## 6. (White) Rice (200 g - 500 g) *All Models*

- Suitable for cooking short and long grain rice including Jasmine, Basmati.
- It is not suitable for cooking brown rice or wild rice.
- Place rice with water in a suitable dish. We recommend the following proportions of rice to cold tap water:

Rice	Water
1 cup	2 cups
1½ cups	3 cups
2 cups	4 cups
2½ cups	5 cups

It may be necessary to adjust the water to your personal preference.

- Using a large size dish will prevent the rice from boiling over.
- Do not cook rice in plastic dishes as incorrect cooking times may result.
- Cover dish securely with plastic wrap or a well fitted lid.
- Halfway through cooking, the oven will 'beep' and instruct you to 'REMOVE COVER'. Remove the plastic wrap or lid and stir. There is no need to cover the rice again.
- At the completion of the cooking time, let stand 5 to 10 minutes.

## 7. Root Vegetables

### (125 g - 1.0 kg) *All models*

- Suitable for cooking root vegetables such as potatoes, sweet potatoes, pumpkin, onions, swede, carrots, turnip and beetroot.
- All vegetables should be trimmed or prepared and cut into even sliced pieces.
- Add 1 tablespoon to  $\frac{1}{4}$  cup of water to vegetables if dehydrated or a softer cooked texture is desired.
- Place into an appropriate size dish and cover securely with plastic wrap or a fitted lid.
- If desired, butter, herbs etc. may be added but do not add salt until after cooking.
- Halfway through the cooking time, the oven will 'beep' and prompt you to rearrange the vegetables.
- At the completion of cooking, stir larger quantities of vegetables. Let stand, covered, for 2 to 3 minutes.

## 8. Frozen Vegetables

### (120 g - 1.0 kg) *All Models*

- Suitable for all types of frozen vegetables.
- Place in a suitable size dish.
- Best results are achieved if large quantities are placed in a single layer.
- Add 1 tablespoon to  $\frac{1}{4}$  cup water to vegetables, if dehydrated or a softer texture is desired.
- Butter, herbs etc. may be added before heating, but do not add salt until serving.
- Cover dishes securely with plastic wrap or a fitted lid.
- Halfway through the cooking time, the oven will 'beep' and prompt you to stir vegetables.
- At the end of the cooking time, stir vegetables and let stand, covered, for 2 to 3 minutes.



## 9. Beef (1.0 kg - 2.0 kg)

**NN-T791 / NN-S781**

Suitable for cooking rump, topside, sirloin or tenderloin roasts.

## 10. Lamb (1.0 kg - 2.5 kg)

**NN-T791 / NN-S781**

Suitable for cooking leg, shoulder, loin or rack of lamb roasts.

**The following hints apply to the above two categories.**

- Roasts weighing less than 1.0 kg and greater than 2.5 kg should be cooked by manual MICROPOWER.
- Select roasts that are uniform in shape for best results. If roast is uneven, tie with string or shield thin portions once countdown time appears in the Display Window.
- Less tender cuts of meat e.g. chuck steak should not be cooked by **Sensor cook**. Using a lower manual MICRO POWER setting with the addition of extra cooking time will tenderise the meat.
- Whole roasting pieces should be totally thawed before cooking.
- Meats may be marinated, seasoned or stuffed before cooking.
- Do not sprinkle roasts with flour, since it will not dry and crisp as in a conventional oven.
- Place roast fat side down on a microwave rack set into a dish.
- Cover securely with plastic wrap.
- Once countdown time appears in the Display Window, remove the plastic wrap and turn, rearrange or shield roast, if required.
- Always allow 10 to 15 minutes covered standing time after cooking. This makes carving easier and ensures that the heating is even throughout.

## 11. Chicken Pieces

**(250 g - 1.5 kg) All Models**

- Suitable for cooking chicken pieces.
- Chicken pieces should be completely thawed before cooking.
- Marinate chicken pieces before cooking for added flavour and colour.
- Arrange chicken pieces skin side up with thicker, meatier portions towards the edge of dish.
- Cover dish securely with plastic wrap.
- Halfway through the cooking time, the oven will 'beep' and instruct you to 'REARRANGE'. Remove the plastic wrap completely from dish. There is no need to re-cover.
- Let stand 5 to 10 minutes at the completion of cooking.

## 12. Slow Cook (500 g - 2.0 kg)

**NN-T791 / NN-S781**

(weight includes all ingredients)

- Suitable for cooking casseroles with less tender cuts of meat combined with liquid and vegetables.
- Cut meat and vegetables into even size pieces.
- Place in a suitable sized dish. Dish should be approximately  $\frac{3}{4}$  full.
- Do not use plastic dishes as incorrect cooking time may result.
- Add  $\frac{1}{2}$  to 1 cup of soup, broth or stock per 500 g of meat.
- Cover securely with plastic wrap or a well fitting lid.
- Halfway through the cooking time, the oven will 'beep' and instruct you to 'STIR'.
- At the end of cooking time, allow the casserole to stand for 5 to 10 minutes.

## 13. Dessert (375 g - 1.5 kg)

**NN-T791 / NN-S781**

- Suitable for cooking a variety of desserts that are normally cooked on P10 power.
- Suitable recipes include: Apple Crumble, Apricot and Raspberry Crisp, Butterscotch Pudding, and Chocolate Self Saucing Pudding. These recipes are found in the **Cakes, Desserts and Slices** section of this book.
- Place prepared desserts in a suitable size dish (approx.  $\frac{3}{4}$  full).
- Do not use plastic dishes as incorrect cooking times may result.
- Cover securely with plastic wrap or a well fitted lid.
- Halfway through the cooking time, the oven will 'beep' and instruct you to 'REMOVE COVER'.
- Allow cooked desserts to stand for 10 minutes at the completion of cooking.

## 14. Fruit (250 g - 2.0 kg)

*All Models*

- Suitable for cooking fruits including rhubarb, strawberries, raspberries, blueberries, nectarines, pears, plums, apples and apricots.
- Minimum and maximum weights include sugar and water added to fruits.
- Trim and prepare fruit into uniform pieces.
- Add approximately  $\frac{1}{4}$  cup of caster sugar and  $\frac{1}{2}$  cup of water per 250 g of fruit.
- If not adding sugar, slightly decrease the water content.
- The greater the amount of water used, the softer the fruit will be.
- Do not use plastic dishes to cook fruit as incorrect cooking times may result.
- Place fruit, sugar and water into an appropriate size dish.
- Cover securely with plastic wrap or a well fitted lid.
- Halfway through the cooking time, the oven will 'beep' and instruct you to 'STIR'.

## NOTE:

Throughout Recipe Prompting, the oven will instruct you to set the cooking time and power level at each stage of the recipe. Set the instructed power level and cooking time using the Micro Power pad and Time pads. These settings are a guide only. If you wish to change, the oven can accept a different power level and cooking time.

For further information about cooking any of these recipes, refer to the recipe section.

The following recipes are programmed in Recipe Prompting:

Recipe	Page	Recipe	Page
Apricot Meatloaf	49	Garlic Prawns	39
Beef Stroganoff	48	Herbed Vegetables	55
Cheese Sauce	69	Honey Sesame Drumsticks	44
Cheesy Mashed Potatoes	53	Lemon Pepper Fish	37
Chicken Cacciatore	41	Peach Crumble	62
Chicken Curry	43	Potato and Leek Soup	34
Chicken Risotto	44	Potato Casserole	55
Chilli Beef	47	Pumpkin Soup	33
Chinese Beef and Vegetables	48	Rich Chocolate Sauce	69
Chocolate Brownies	60	Seasoned Roast Lamb	47
Chocolate Fudge	66	Spaghetti Meat Sauce	49
Cinnamon Poached Pears	63	Speedy Nachos	35
Creamy Bacon Sauce	57	Sweet Berry Sauce	69
Fragrant Coconut Rice	59	Tomato Vegetable Casserole	53
French Onion Beef Casserole	46	Vegetable Curry	55

## INGREDIENT CONVERSION CHART\*

¼ cup	60 ml	¼ teaspoon	1 ml
⅓ cup	85 ml	½ teaspoon	2 ml
½ cup	125 ml	1 teaspoon	5 ml
⅔ cup	165 ml	2 teaspoons	10 ml
¾ cup	190 ml	3 teaspoons	15 ml
1 cup	250 ml	1 tablespoon	15 ml
1¼ cups	310 ml	1½ tbs	22 ml
1½ cups	375 ml	2 tbs	30 ml
2 cups	500 ml	3 tbs	45 ml
3 cups	750 ml	4 tablespoons	60 ml
3½ cups	875 ml		
4 cups	1 litre		
6 cups	1.5 litre		
8 cups	2 litre		


\*Applicable to New Zealand and South Africa only.

## To Use Recipe Prompting

This feature helps you to cook by following the instructions given in the Display Window.  
The instructions for a total of 30 recipes are given (see previous page).


NN-T791  
NN-S781  
NN-S761

### Recipe Prompting

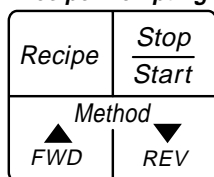

NN-S751

### Recipe Prompting



## 1 Press

Recipe


Until the desired recipe appears in the Display Window.  
For the previous recipe, press



Recipes are arranged alphabetically. The first time you use **Recipe Prompting** after plugging in your oven, the first recipe, **Apricot Meatloaf**, will appear. The next time you press the **Recipe** pad, the last recipe you selected will be displayed.

Once you have selected a recipe,

## 2 Press



The first instruction will scroll across the Display Window.

Press for the next instruction.



Press for the previous instruction.

“ENJOY YOUR MEAL” appears in the Display Window at the end of each recipe.

## HINTS WHILE USING RECIPE PROMPTING

	<p>One tap: Stops scrolling of the Display Window. Two taps: Restarts scrolling of the Display Window. After you have programmed the recipe with power level and cooking time, press <b>Start</b>.</p>
	<ol style="list-style-type: none"> <li>While instructions are in the Display Window, one tap will clear the Display Window and colon or time of day will appear in the Display Window.</li> <li>While setting power or time, previous instruction will appear in the Display Window by one tap. Two taps make the colon or time of day appear in the Display Window.</li> <li>While cooking, one tap stops the remaining cooking time to count down. The next instruction will start scrolling by two taps.</li> </ol>
	<p>Cooking will start by pressing this pad.</p>

# Microwave Recipe Preparation and Techniques

Microwaves penetrate the surface of the food to a depth of about two to three centimetres and then the heat is gradually conducted in a random pattern. Some parts of food matter cook faster than others. Special microwave techniques are used to promote

fast and even cooking. Some of these techniques are similar to those used in conventional cooking, but because microwaves produce heat very quickly they are extremely important. It's a must for you to be familiar with the following tips.

## Food Characteristics

### Size and Quantity

Small portions cook faster than large portions. As you increase the quantity of food you put into the microwave oven, you must also increase your cooking time. The microwave oven has the same power regardless of quantity; thus the power is divided between more items and so it takes longer to cook. As a general guide, if you double the quantity of food suggested in the recipe, add half the time suggested again.

### Liquid Content

Low moisture foods take a shorter time to cook than foods with a lot of moisture.

### Shape

Uniform sizes cook more evenly. To compensate for irregular shapes, place thin pieces towards the centre of the dish and thicker pieces towards the outer edge of the dish.

### Bone and Fat

Bones conduct heat and cause the meat next to them to be heated more quickly. Large amounts of fat absorb microwave energy and the meat next to these areas may overcook.

### Starting Temperature

Food which has been sitting at room temperature takes less time to cook than refrigerated or frozen food.

### Density and Composition

Porous, airy foods (cakes and breads) take less time to cook than heavy compacted foods (meat and vegetables). Recipes high in fat and sugar content cook more quickly.

## Key to Symbols Used In Recipes

Recipes displaying these symbols may be cooked using these features.

(S) Sensor Cook / **NN-T791** / **NN-S781** / **NN-S761**

**Recipe Prompting**

**Recipe Prompting**

All Models

## Techniques for Preparation

### Timing

A range of cooking times is given in each recipe for two reasons. First, to allow for the uncontrollable differences in food shapes, starting temperatures and personal preferences. Secondly, these allow for the differences in electrical voltage input which changes during peak load periods. Always remember that it is easier to add time to undercooked food. Once the food is overcooked, nothing can be done. For each recipe, an approximate cooking time is given.

### Stirring

Stirring is often necessary during microwave cooking. We have noted when stirring is helpful in the recipes. Always bring the outside edges towards the centre and the centre portions to the outside.

### Rearranging or Turning

Some foods should be turned in the container during cooking. For example, because of the different thicknesses in the breast and back sections of poultry, it is a good idea to turn poultry over once to ensure more even cooking.

Rearranging or turning over uneven shaped food in the dish should be done as suggested to ensure a satisfactory result. Rearrange small items such as chicken pieces, prawns, hamburger patties, nuts or potatoes. Rearrange pieces from the centre to the edge of the dish.

### Cooking in Layers

Cooking in layers is not always successful as it takes twice as long to cook a single layer and cooking may be uneven. You can successfully reheat two dinner plates of food at one time but remember to increase the reheating time and use a microwave warming rack.

### Piercing of Foods

Pierce the skin or membrane of foods such as eggs, tomatoes and jacket potatoes. when cooked whole in the microwave oven. This allows steam to escape. If the skin has not been pierced, food may burst.

### Cured Meats

Cured meats may overcook in some areas due to the high concentration of salts used in the curing process. So take care when cooking different brands of bacon as cooking times may vary slightly.

# Microwave Recipe Preparation and Techniques

## Covering

Covering food minimizes the microwave cooking time.

Because microwave cooking is done with time and not direct heat, the rate of evaporation cannot be easily controlled. However, this can be corrected by using different materials to cover dishes. Plastic wrap is the best substitute for a lid as it creates a tighter seal and so it retains more heat and steam. Wax paper and paper towels hold the heat in but not the steam. These materials also prevent splattering. Use a paper towel, wax paper or no cover when steam is not needed for tenderizing.

## Browning

Meats and poultry, when cooked longer than 10 to 15 minutes, will brown from their own fat. Foods cooked for shorter periods of time can be aided with the help of a browning sauce, worcestershire sauce or soy sauce. Simply brush one of these sauces over meat or poultry before cooking. Baked goods do not need long cooking times and therefore, do not brown. When cakes or cupcakes are iced, no one will notice the visual difference. For cakes or cupcakes, brown sugar can be used in the recipe in place of caster sugar or the surface can be sprinkled with dark spices before baking.

## Standing Time

The moisture molecules continue to vibrate in the food when the microwave oven has turned itself off. After all, the molecules were vibrating at 2,450,000,000 times per second during cooking. So cooking continues even after the food is no longer being exposed to the microwaves whether in or outside your microwave oven.

Standing time refers to the time it takes (after the microwave time is completed) to allow the interior of the food to finish cooking.

The amount of standing time varies with the size and density of the food. In meat cookery, the internal temperature will rise between 5°C and 10°C if allowed to stand covered for ten to fifteen minutes. Casseroles and vegetables need shorter standing time, but this time is necessary to allow foods to complete cooking in the centre without overcooking on the edges.

The power level used in microwave cooking also determines the standing time. For example, when using a lower power level the standing time is shorter because of a lower concentration of heat in the food. Foods should always be kept covered while standing in order to retain the heat. If a longer standing time is required (while you cook another food to serve with the first, for instance), cover with aluminum foil.

## Converting Your Favourite Conventional Recipes for Microwave Cooking

When adapting conventional recipes for microwave cooking, reduce the conventional cooking time by one quarter to one third.

e.g. A chicken which takes 1 hour to cook in a moderate oven will take 15 to 20 minutes on P7 Power in your microwave oven.

Use similar microwave recipes to help you adapt conventional recipes. Remember, it is always best to undercook a recipe and then add an extra minute or two to finish it off.

Here are some other tips that may help:

- Reduce liquids in a conventional recipe by one half to two thirds, e.g. 1 cup (250 ml) should be reduced to ½ cup (125 ml).
- Add more thickening such as flour or cornflour to sauces and gravies if you do not reduce the liquid.
- Reduce seasonings slightly in a recipe where ingredients do not have time to simmer by microwave.
- Do not salt meats, poultry or vegetables before cooking; otherwise, they will toughen and dry out.
- If one ingredient takes longer to cook than the others, pre-cook it in the microwave oven first. Onion, celery and potato are examples.
- If meat or vegetables are not being browned before cooking, omit any oil or fat that would have been used for browning.
- Reduce leavening agents for cakes by one quarter and increase liquids by one quarter.
- Biscuits require a stiff dough. Increase flour by about 20 percent. Substitute brown sugar for white sugar and use biscuit recipes that have dark spices or require icing. Because of the short cooking time, biscuits don't have time to brown. Chill dough for half an hour before baking. This produces a crisper biscuit. Bake biscuits on a glass tray lined with greaseproof paper.
- Since microwaves penetrate foods about two centimetres from the top, bottom and sides, mixtures in round shapes and rings cook more evenly. Corners receive more energy and may overcook.
- Items with a lot of water, such as rice and pasta, cook in about the same time as they would on a conventional stove. (Refer to **Rice** and **Pasta** chapter.)

Select recipes that convert easily to microwave cooking such as casseroles, stews, baked chicken, fish and vegetable dishes. The results from foods such as grilled meats, cooked souffles or two-crust pies could be less than satisfactory. Never attempt to deep fry in your microwave oven.

# Microwave Recipe Techniques

---

## Menu Planning for Microwave Cooking

---

### How to Keep Everything Hot at The Same Time

Plan your meals so that the food will not all need last minute cooking or attention at the same time. The special features of microwave cookery make it easy to serve meals with everything piping hot. Cooking of some foods may be interrupted while you start others, without harming the nutritional value or flavour of either.

A recipe which requires standing time can be microwaved first and another food cooked while it stands. Dishes prepared in advance can be reheated briefly before serving.

It does take some experience and time to cook with confidence. Microwaves are fast so you will have to do some experimenting. You might find you will use your conventional range in conjunction with your microwave oven. For example, while cooking the roast in the microwave oven, you can be cooking the vegetables and gravy on the range top. This can also be done the other way around. Prepare your meals as follows.

1. Firstly, cook the most dense item (roast or casserole). Drain and retain meat juice from joints then cover with foil.
2. Cook the potatoes, rice or pasta.
3. Cover with foil for standing.
4. Cook greens and other vegetables.
5. Cover with foil for standing.
6. Cook the gravy with the retained meat juices, stock and thickening.
7. Carve the roast and serve the vegetables and gravy.

While you are learning to plan meals, you may get a bit behind time. Don't worry. Dinner servings may be reheated on P7, at 2 minutes per serving.

If you prefer not to use foil, cover food with saucepan lids. A metal lid will retain the heat for at least 15 minutes.

Meanwhile, how can you cook all the vegetables at the same time? Simply place potatoes and pumpkin in one dish and less dense vegetables such as broccoli, cabbage, cauliflower, beans and peas in another. Sprinkle greens with water. Cover with a lid or plastic wrap. Cook on P10 for cooking times refer to vegetable cooking chart page on 50. Fresh and frozen vegetables can be mixed on a vegetable platter, but remember the latter are not as dense as fresh vegetables, as they have been blanched before freezing.

If vegetables are cut to a similar size, they can be cooked in separate ramekins or small dishes at the same time.

---

## Increasing & Decreasing Recipes

---

### Increasing

- To increase a recipe from 4 to 6 servings, increase each ingredient listed by half.
- To increase a recipe from 4 to 8 servings, double each ingredient listed.
- For larger quantities of a recipe, a large dish should be used. Make sure that the dish is deep enough to prevent the recipe from boiling over during cooking.
- Make sure to cover, stir or rearrange food as directed in the recipe and always check the food during cooking.
- Increase standing times by 5 minutes per 500g.
- Use the same Power Level recommended in the original recipe.
- Increase the cooking times by:  $\frac{1}{3}$  of original cooking time for 6 servings; and an extra  $\frac{1}{2}$  of original cooking time for 8 servings.

### Decreasing

- To decrease a recipe from 4 to 2 servings, decrease each ingredient listed by half.
- For small quantities, a small dish should be used. Make sure that the dish is large enough to prevent the recipe from boiling over during cooking.
- Use the same Power Level recommended in the original recipe.
- Decrease the cooking times by  $\frac{1}{2}$  to  $\frac{2}{3}$  of the original cooking time.

---

## Cooking for One

---

- To decrease a recipe from 4 to 1 serving, quarter each ingredient listed.
- A smaller dish should be used, making sure that the dish is still large enough to prevent the recipe from boiling over.
- Use the same Power Level recommended in the original recipe.
- Quarter the original cooking times, then add extra time, if needed.
- Make sure to cover, stir or rearrange food as directed in original recipe and always check the food during cooking.

---

## Converting Recipes from Other Sources

---

When the recipe is written with a wattage different than your oven, adjust the cooking time by approximately 10% per 100 watts, e.g. 6 minutes would be adjusted by 36 seconds. Alternately, adjust the power level by one level. If your wattage is higher than the recipe: (1) Adjust time downward or (2) Adjust power level downward. If your wattage is lower than the recipe: (1) adjust time upward or (2) adjust power level upward (when possible).

# Everyday Basics

## GRANOLA CEREAL

Makes: approximately 4 cups

### Ingredients:

2 cups	oats
$\frac{2}{3}$ cup	chopped nuts
$\frac{1}{3}$ cup	wheat germ
$\frac{1}{4}$ cup	brown sugar
$\frac{1}{4}$ cup	honey
1 teaspoon	vanilla essence
$\frac{1}{3}$ cup	coconut
$\frac{1}{3}$ cup	raisins

### Method:

Place oats in 2-litre casserole dish, cook on P10 for 2 to 3 minutes, stirring twice. Add nuts, wheat germ, and brown sugar. Stir in honey, vanilla and coconut. Cook on P10 for 3 to 5 minutes, stirring twice during cooking. Add raisins and allow to cool. Stir to a crumble texture. Store in an airtight container.

## TOMATO AND ONION

Serves 4

### Ingredients:

600 g (approx. 3)	tomatoes, thinly sliced
1	onion, thinly sliced
$\frac{1}{2}$ teaspoon	basil
	salt and pepper to taste

### Method:

Place all ingredients into 2-litre casserole dish. Cook, covered, on P10 for 6 to 8 minutes. Serve with barbequed steak or grilled meat.

## SCRAMBLED EGGS

Serves: 2

### Ingredients:

4 x 61 g	eggs
4 tablespoons	milk
	pinch of salt

### Method:

In 1-litre casserole dish, beat eggs lightly with whisk. Add milk and salt. Whisk until well combined. Cover dish with plastic wrap and cook on P6 for 2 minutes. Stir egg and cook for further 1 to 1½ minutes. Stand, covered, for 1 minute before serving.

#### HINT:

##### TO COOK PAPPADUMS:

Place on paper towel lined microwave safe plate. Cook on P10 for 15 to 20 seconds for each pappadum, turning halfway through cooking. Allow to stand 1 minute before serving.

## POACHED EGGS

Serves: 2

### Ingredients:

2 x 61 g	eggs
$\frac{1}{2}$ cup	hot tap water
	dash of vinegar
	pinch of salt

### Method:

Place one quarter of cup of water, dash of vinegar and pinch of salt into 2 ramekin dishes or small glass bowls. Heat water on P10 for 30 - 60 seconds. Break egg into the water and with toothpick pierce the egg yolk twice and egg white several times. Cover dish with plastic wrap and cook on P10 for 40 to 60 seconds.

Stand, covered, for 1 minute before serving.

**Note:** The size of the eggs will alter cooking time.

## FRIED EGGS

A good recipe for the browning dish.

Serves: 1 to 4

### Ingredients:

1 to 4	eggs (61 g each)
1 to 2 tablespoons	butter

### Method:

Preheat browning dish on P10 for 3 to 5 minutes. Add butter. Break eggs into browning dish. Cook on P10 power for:

1 egg - 15 to 20 seconds

2 eggs - 20 to 30 seconds

4 eggs - 30 to 40 seconds

Let stand for 1 minute before serving.

#### HINT:

##### TO COOK BACON RASHERS:

Place 2 rashers of bacon between 2 sheets of paper towel on a pie plate and cook on P10 for 1 to 2 minutes.

#### HINT:

##### TO DRY FRESH BREADCRUMBS:

Place 1 cup (250 ml) of breadcrumbs on the base of plate and heat on P10 for 2 to 3 minutes, stirring once during heating.

# Everyday Basics

---

## COFFEE

---

Serves: 1

### Ingredients:

1 cup water  
1 to 2 teaspoons instant coffee

### Method:

Pour water into heatproof cup. Add coffee. Stir. Heat on P10 for 1 to 2 minutes. Add milk and sugar, if desired. Stir.

---

## TEA

---

Serves: 1

### Ingredients:

$\frac{3}{4}$  cup hot tap water  
1 tea bag

### Method:

Pour water into heatproof cup. Heat on P10 for 1 to 2 minutes. Stir then submerge tea bag in water. Stand until desired strength is reached. Remove tea bag. Add milk and sugar, if desired. Stir.

---

## COCOA

---

Makes: 1 cup

### Ingredients:

2 teaspoons cocoa powder  
1 teaspoon sugar  
2 tablespoons water  
1 cup milk

### Method:

Combine cocoa, sugar and water in heatproof cup. Cook on P10 for 10 to 15 seconds. Stir in milk. Heat on P8 for 1 to 2 minutes. Stir before drinking

---

## LEMON AND HONEY DRINK

---

Makes: 1

### Ingredients:

juice of  $\frac{1}{2}$  lemon  
1 tablespoon honey  
1 cup water

### Method:

Mix all ingredients in 2-cup heatproof jug. Heat on P10 for 2 to 3 minutes. Stir well.

#### HINT:

TO REHEAT FILTERED COFFEE:  
Keep a jug in the refrigerator for fresh coffee at any time. Reheat 1 mug for  $1\frac{1}{2}$  to 2 minutes on P10 power. (Stir coffee before drinking.)

---

## GRAVY

---

Makes: 2 cups (500 ml)

### Ingredients:

2 tablespoons dripping or pan juice  
1 small onion, finely chopped  
2 tablespoons flour  
1 tablespoon tomato paste  
 $1\frac{1}{2}$  cups beef stock  
salt and pepper

### Method:

Place dripping or pan juices and onion in 2-cup jug. Cook on P10 for 2 minutes. Add flour, tomato paste and half of the beef stock. Stir well. Cook on P10 for 2 minutes. Add remaining stock. Stir well and cook on P10 for a further 2 minutes. Season with salt and pepper. Serve with the meat of your choice.

---

## MUESLI

---

Makes:  $3\frac{1}{2}$  cups

### Ingredients:

$\frac{1}{3}$  cup honey  
 $\frac{1}{4}$  cup butter  
2 cups rolled oats  
 $\frac{1}{4}$  cup each of:  
bran  
wheat germ  
coconut  
nuts (chopped)  
sunflower seeds  
sesame seeds  
 $\frac{1}{2}$  cup mixed dried fruit of your choice

### Method:

Warm honey and butter (approximately 30 seconds) on P10 until honey is melted, stirring once. Place dry ingredients in a large container and stir in honey mixture. Cook on P10 for 6 to 7 minutes, stirring several times. Stir in selected dry fruit. Leave to go cold, and store in an airtight container.

#### HINT:

TO REHEAT A CROISSANT:  
Wrap in paper towels (and place on a dinner plate), cook on P10 for 15 to 30 seconds.

#### HINT:

TO TOAST COCONUT:  
Place  $\frac{1}{2}$  cup of coconut on pyrex pie plate. Cook on P10 for 1 to 2 minutes, stirring occasionally.



# Everyday Basics

## WHITE SAUCE

Makes: 1 cup

### Ingredients:

2 tablespoons butter  
2 tablespoons flour  
salt and white pepper  
1¼ cups milk

### Method:

Place butter in a 4-cup jug. Cook on P10 for 30 to 40 seconds. Stir in flour, salt and pepper. Gradually add milk, stirring until smooth. Cook on P10 for 3 to 4 minutes, stirring twice.

**Tip:** For cheese sauce, stir in ½ cup grated cheese once sauce has thickened.

## BOILED RICE (S)

Serves: 4

### Ingredients:

1 cup long grain rice  
2 cups hot tap water

### Method:

Place all ingredients in 3-litre dish. Cook, uncovered, on P10 for 12 to 14 minutes. Stand, covered, for 5 minutes. Drain and serve.

**Tip:** Butter and parsley can be mixed through before serving.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Rice**, then **Start**.

## BOILED BROWN RICE

Serves: 3 to 4

### Ingredients:

1 cup brown rice  
3 cups boiling water

### Method:

Place all ingredients in 4-litre dish. Cook, uncovered, on P10 for 25 to 30 minutes. Stand, covered, for 10 minutes. Drain and rinse under hot water.

### HINT:

**TO REHEAT 2 CUPS OF COOKED RICE:**  
Add 1 to 2 tablespoons of water or a knob of butter and cook on P10 for 2 to 3 minutes.

## MACARONI AND CHEESE

Serves: 4 to 6

### Ingredients:

40g butter  
2 onions, finely chopped  
2 tablespoons flour  
2 cups milk  
1 cup grated tasty cheese  
6 cups cooked macaroni, drained well  
½ cup extra grated tasty cheese  
paprika

### Method:

Place butter and onions in 2-litre casserole dish and cook on P10 for 3 to 5 minutes. Add flour, mix well and cook on P10 for 1 minute. Blend in milk and cook on P10 for 4 to 5 minutes, stirring halfway through cooking.

Add cheese to sauce. Place macaroni and sauce in 3-litre casserole dish. Mix well.

Top with extra cheese and sprinkle with paprika. Cook on P10 for 6 to 8 minutes.

## PASTA (S)

Serves: 1 to 2

### Ingredients:

125 g dried pasta  
4 cups hot tap water

### Method:

Place pasta and water in 3-litre casserole dish. Place, uncovered, in microwave and cook on P10 for 12 to 14 minutes. Allow to stand for 3 to 5 minutes before draining.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Pasta**, then **Start**.

## POPCORN

Serves: 2 to 4

### Ingredients:

3 tablespoons popping corn

### Method:

Place popping corn in loosely twisted oven bag. Place oven bag on an inverted microwave-safe plate. Cook on P10 for 1½ to 2½ minutes. Remove from bag and serve, sprinkled with salt and melted butter.

### HINT:

**TO REHEAT POURING CUSTARD:**  
Place 600 ml in a 1-litre jug and cook on P10 for 2 to 3 minutes stirring once.

# Everyday Basics

---

## PACKET CAKE

---

### Ingredients:

1 packet cake mix (340 g)

Ingredients as recommended by manufacturer.

### Method:

Mix cake and other ingredients with a metal spoon. DO NOT OVERBEAT. Pour into 20 cm round dish that has been lightly greased and lined with paper. Cook on P8 for 4 to 6 minutes. Stand and allow to cool before removing.

### Variations:

- 1 tablespoon jam added to batter before cooking.
- Add 1 cup sour cream to batter and halve water suggested by manufacturer.
- Half a cup chopped nuts,  $\frac{1}{4}$  cup brown sugar and 1 teaspoon cinnamon. Mix and place on base of cake dish before cooking cake.
- Two tablespoons honey and 30 g butter melted in glass jug on P10 30 to 60 seconds. Pour over just baked buttercake. Sprinkle with cinnamon. Serve warm with cream or custard as dessert or serve cold with cream as tea cake.
- A quarter cup of toasted muesli mixed with 1 tablespoon marmalade and placed in the base of the dish.

**Tip:** Packet cakes are best mixed by hand as the microwave will do the aerating.

---

## BAKED CUSTARD

---

Serves: 4 to 5

### Ingredients:

425 ml	milk
3	eggs, lightly beaten
$\frac{1}{4}$ cup	sugar
1 teaspoon	vanilla essence
	pinch ground nutmeg

### Method:

Place milk in 4-cup glass jug. Cook on P10 for 2 minutes. Add eggs, sugar and vanilla to milk, whisking all the time. Strain mixture into a 20 cm round dish, sprinkle with nutmeg. Cook on P3 for 15 to 17 minutes. Allow to stand, covered, for 5 minutes before serving.

### HINT:

#### TO HEAT BABY FOOD:

When heating 100 g baby food, place the food in small microwave safe dish and heat on P10 for 15 to 30 seconds, depending on the initial temperature of the food. Stir and test temperature before serving or heating further.

---

## ROASTED NUTS

---

Serves: 2 to 4

### Ingredients:

1 cup	raw peanuts (with or without skins, and unsalted)
2 teaspoons	salad oil
	salt to taste

### Method:

Place peanuts in a single layer on pie plate. Cook on P10 for 3 to 5 minutes, stirring every 2 minutes during cooking, until golden brown. Drizzle nuts with oil and sprinkle with salt. Stir well. Cook on P10 for 30 to 40 seconds. Stir. Serve hot or cold in a small bowl.

---

## VEGETABLE SOUP

---

Serves: 4 to 6

### Ingredients:

500 g	prepared vegetables of your choice (carrots, turnips, celery, etc.), finely chopped
1	onion, chopped
2 tablespoons	butter
2 tablespoons	plain flour
$3\frac{1}{2}$ cups	chicken stock
	salt and pepper
3 tablespoons	parsley, chopped

### Method:

Place vegetables, except onion, in 3-litre casserole dish. Cover and cook on P10 for 8 to 10 minutes. Set aside. Place onion and butter in 4-cup jug and cook on P10 for 2 to 3 minutes. Add flour to onion mixture and mix well. Gradually add 1 cup of stock. Stir well. Cook on P10 for 3 minutes, stirring halfway through cooking. Add remaining stock and onion mixture to vegetables in casserole dish. Cook on P10 for 12 to 14 minutes. Season with salt and pepper and serve, sprinkle with chopped parsley.

### HINT:

#### TO REHEAT A SINGLE PORTION OF SOUP:

Place in microwave safe dish and cook on P7 for 2 to 3 minutes.

# Soups, Snacks and Starters

## PUMPKIN SOUP

Serves: 4

Recipe Prompting

### Ingredients:

1 kg	pumpkin, chopped and peeled
1	onion, diced
2 cups	chicken stock
1 teaspoon	curry powder
	pepper

### Method:

Place pumpkin and onion in 2-litre casserole dish. Cover and cook on P10 for 10 minutes. Add chicken stock, curry powder and pepper. Cook on P10 for 10 minutes. Cool slightly. Purée pumpkin and liquid in blender or food processor. Pour into individual serving dishes and garnish with chives.

## MUSHROOM SOUP

Serves: 4

### Ingredients:

1 tablespoon	butter
250 g	mushrooms, sliced
1 tablespoon	flour
2 cups	chicken stock
¼ cup	white wine
1 teaspoon	mustard
½ cup	cream

### Method:

Place butter and mushrooms in 2-litre casserole dish. Cover and cook on P10 for 3 to 5 minutes. Add flour, stock, wine, mustard and cream to mushrooms. Mix well. Cover and cook on P10 for 6 to 8 minutes, stirring halfway through cooking. This soup can be puréed, if preferred.

## CRAB AND CORN SOUP

Serves: 4 to 6

### Ingredients:

1	onion, finely chopped
450 ml	boiling chicken stock
1 can (300 g)	creamed corn
	salt and pepper
1 can (170 g)	crabmeat, drained
150 ml	milk
	chopped spring onion for garnish

### Method:

Place onion in 3-litre casserole dish. Cook on P10 for 2 to 3 minutes. Add chicken stock, corn, salt and pepper. Cook on P10 for 2 to 3 minutes. Add crab meat and milk. Mix well. Cook on P10 for 3 minutes. Sprinkle with spring onion. Serve.



Pumpkin Soup

## PEA AND HAM SOUP

Serves: 6 to 8

### Ingredients:

500 g	split peas
2 cups	water
500 g	ham or bacon bones
1	bay leaf
3 cups	water, extra
2	rashers bacon, rind removed
1	medium sized carrot, peeled and diced
1	large onion, peeled and diced
½ teaspoon	thyme
6 cups	chicken or bacon stock

### Method:

Soak peas in 2 cups of water for at least 1 hour. Drain. Place peas and 3 cups fresh water in 4-litre casserole dish with bones and bay leaf. Cook, covered, on P7, for 10 minutes. Reduce power to P6 and cook for further 30 to 35 minutes. Remove meat from bones and set aside. Discard bay leaf. Place meat from bones, carrot and onion in a small dish. Cook on P10 for 2 minutes. Add vegetables, bacon, thyme and stock to split peas. Cook on P10 for 10 minutes. Reduce power to P6 and cook for further 15 minutes. Serve hot in individual bowls. For a smoother consistency, you may like to blend or purée soup.

# Soups, Snacks and Starters



Oyster Soup

## OYSTER SOUP

Serves: 4 to 6

### Ingredients:

30 g	butter
2 tablespoons	flour
2 cups	chicken stock
1/2 cup	cream
20	bottled oysters, drained
	salt and white pepper
	snipped chives to garnish

### Method:

Place butter in 2-litre casserole dish and cook on P10 for 1 minute. Add flour, stir well and cook on P10 for 30 seconds. Gradually add stock, stirring continuously. Cook on P10 for 3 to 5 minutes, stirring halfway through cooking. Add cream, oysters, salt and pepper. Cook on P7 for 1 to 2 minutes. Spoon into individual dishes and garnish with chives.

### HINT:

#### TO MAKE CROUTONS:

Remove crusts from 3 slices of bread and cut into cubes. Place in pyrex bowl with 1 tablespoon of butter and cook on P10 for 2 to 3 minutes.

## TOMATO BACON SOUP

Serves: 4 to 6

### Ingredients:

4	bacon rashers, chopped
1	onion, chopped
1 can (840 g)	tomatoes
2 tablespoons	tomato paste
2 cups	chicken stock
1 teaspoon	oregano
	pepper

### Method:

Place bacon and onion in 4-litre casserole dish. Cook on P10 for 3 minutes. Add remaining ingredients and stir. Cook on P10 for 16 to 18 minutes, stirring once during cooking. Purée in food processor or blender and serve in individual soup bowls.

## POTATO AND LEEK SOUP

Serves: 4 to 6

Recipe Prompting

### Ingredients:

800 g	potatoes, peeled and diced
1 1/2 cups	thinly sliced leeks
2 teaspoons	thyme
	pepper
2 cups	chicken stock
150 ml	cream (optional)

### Method:

Place potatoes, leeks, thyme and pepper in 4-litre casserole dish. Cover and cook on P10 for 8 minutes. Stir in 2 cups of chicken stock. Cover and cook on P10 for 14 to 16 minutes. Purée soup mixture. Add cream, stir and serve hot or cold in individual bowls.

## CREAMY BROCCOLI SOUP (S)

Serves: 4

### Ingredients:

750 g	broccoli
6 cups	boiling chicken stock
150 ml	cream
2 tablespoons	chopped parsley
	salt and freshly ground black pepper

### Method:

Cut broccoli into small pieces. Place into 3-litre casserole dish. Add stock to dish. Cover and cook on P10 for 16 to 18 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap.

Press **Vegetables**, then **Start**.

Drain and reserve 2 cups of liquid. Purée broccoli with 2 cups of liquid in blender or food processor. Stir in cream and parsley. Cook on P6 for 2 to 3 minutes. Season with salt and pepper. Serve.



# Soups, Snacks and Starters

## SPEEDY NACHOS

Serves: 2 to 4

Recipe Prompting

### Ingredients:

1 can (310 g)	red kidney beans, drained
1 cup	chilli salsa
200 g	packet corn chips
1 cup	grated cheese

### Method:

Mix kidney beans and salsa in 1-litre dish. Place corn chips in the base of a flat dish. Pour sauce over beans and top with grated cheese. Cook on P10 for 4 to 5 minutes.

**Note:** Chilli salsa can be substituted with your favourite tomato relish.



Potato and Corn Soup

## NUTS AND BOLTS

Serves: 6 to 8

### Ingredients:

80 g	butter
2 teaspoons	curry powder
2 tablespoons	worcestershire sauce
1½ teaspoon	salt
¼ teaspoon	garlic powder
52 g	packet mixed rice crackers
75 g	packet sesame bits (rice crackers)
200 g	salted peanuts
125 g	packet pretzel sticks
½ cup	Nutri-Grain

### Method:

Place butter, curry, worcestershire sauce, salt and garlic powder in 3-litre casserole dish. Cook on P10 for 1 to 2 minutes. Add remaining ingredients, mix well and cook on P10 for 4 to 5 minutes. Stir twice through cooking. Allow to cool. Place in a bowl and serve with drinks. Store in an airtight container once cool.

## FRANKFURTERS

Serves: 5

### Ingredients:

10	large frankfurters
¼ cup	water

### Method:

Place frankfurters in 2-litre casserole dish. Add water to dish. Cover dish with lid or plastic wrap. Cook on P10 for 3½ to 4 minutes.

**Tip:** To cook one large frankfurter, prick and place on dinner plate. Cook on P6 for 30 to 60 seconds.

## POTATO AND CORN SOUP

Serves: 6 to 8

### Ingredients:

6	rashers bacon, rind removed
1	onion, thinly sliced
500 g	potatoes, peeled and diced
4 cups	chicken stock
1 can (440 g)	creamed corn
2 tablespoons	flour, mixed with a little stock
½ teaspoon	thyme
	salt and pepper

### Method:

Chop bacon and place in 4-litre dish. Cook on P10 for 2 to 3 minutes. Remove bacon from dish and set aside. Add onion and potatoes to dish and cook on P10 for 8 to 10 minutes. Add stock and cook on P10 for a further 8 to 10 minutes. Mix flour with 2 tablespoons of stock and add to dish with corn, thyme and bacon. Cook on P10 for 4 to 5 minutes. Stir halfway through cooking. Season with salt and pepper.

## HAM AND CHEESE CROISSANTS

Serves: 2

### Ingredients:

2	croissants
4	slices ham
4	slices tasty cheese
	salt and pepper

### Method:

Cut croissant in half lengthwise. Place cut side up on dinner plate. Place ham on top of each croissant. Place cheese on top of ham. Close. Cook on P9 for 1 to 1½ minutes. Season to taste with salt and pepper. Serve.

# Soups, Snacks and Starters

## MINI PIZZAS

Serves: 2 to 4

### Ingredients:

4	small round pita breads
2 tablespoons	tomato paste
¾ cup	grated mozzarella cheese
½ cup	chopped salami
50 g	mushrooms, chopped
2	tomatoes, chopped
1 teaspoon	mixed dried herbs

### Method:

Place pita bread onto dinner plate. Spread each piece with tomato paste, then sprinkle with remaining ingredients. Cook on P6 for 3 to 5 minutes.

## CHEESY HAM OMELETTE

Serves: 1 to 2

### Ingredients:

3	eggs, separated
2 tablespoons	milk
	salt and pepper
¼ cup	grated cheese
50 g	ham, cut into strips
1	spring onion, finely sliced
	butter for greasing

### Method:

Beat egg yolks with milk, salt and pepper in bowl. In a separate bowl, beat egg whites until soft peaks form. Gently fold egg whites through yolk mixture with cheese, ham and spring onions. Place onto well greased dinner plate. Cook on P6 for 3 to 5 minutes. Stand for 2 minutes before folding in half to serve.

## HOMMUS

Makes: Approximately 3 cups

### Ingredients:

375 g	chick peas
8 cups	water
2 tablespoons	lemon juice
¼ cup	tahini (sesame paste)
2 tablespoons	minced garlic
3 tablespoons	olive oil

### Method:

Place chick peas and water in 4-litre casserole dish and soak overnight. Cover and cook on P10 for 15 minutes, then for a further 45 minutes on P7. Drain. Place all ingredients into food processor and process until smooth. If mixture is too thick, add extra water. Serve as a dip with pita bread, blanched carrot, cauliflower and broccoli.

## NACHOS SUPREME

Serves: 4 to 6

### Ingredients:

500 g	topside mince
1	onion, chopped
35 g	packet Taco seasoning mix
1 can (140 g)	tomato paste
1 teaspoon	Mexican chilli powder
1 can (310 g)	red kidney beans, mashed in liquid
180 g	packet corn chips
1	avocado
½ cup	sour cream
½ cup	grated cheese
	paprika

### Method:

Place meat and onion in 2-litre dish. Cover and cook on P7 for 6 minutes. Mix with fork, breaking up any large pieces of meat. Add taco mix, tomato paste, chilli powder and kidney beans. Cook on P7 for further 10 minutes, stirring halfway through cooking. Place corn chips in a 3-litre microwave suitable serving dish. Pile meat sauce in the centre. In a small bowl, mash avocado and mix in sour cream. Spoon this mixture over meat sauce and top with grated cheese. Sprinkle with paprika. Heat on P7 for 3 to 4 minutes.

## PÂTÉ

Makes: 2 cups

### Ingredients:

2	rashers bacon, rind removed and bacon chopped
1	small onion, finely chopped
1	clove garlic, crushed
125 g	butter
375 g	chicken livers, trimmed and cut in half
½ teaspoon	pepper
2 tablespoons	brandy
2 tablespoons	sour cream

### Method:

Place bacon, onion, garlic and butter into 1-litre casserole dish. Cook on P10 for 3 to 4 minutes. Add chicken livers and pepper to mixture. Cover and cook on P6 for 6 to 7 minutes, stirring halfway through cooking. Set aside and allow to cool. Place cooled mixture in blender or food processor. Add brandy and sour cream. Process until smooth. Pour into 2-cup mould and refrigerate until set.

# Fish and Shellfish

## Directions for Cooking Fish and Shellfish by Microwave

Clean fish before starting the recipe. Arrange fish in a single layer, overlap thin fillet ends to prevent overcooking. Prawns and scallops should be placed in a single layer.

Cover dish with plastic wrap. Cook on the power level and the minimum time recommended in the chart below. Halfway through cooking rearrange or stir prawns, fish fillets or scallops.

### Fish and Shellfish Chart for Microwave Cooking by Time

FISH OR SHELLFISH	AMOUNT	POWER	APPROX. COOKING TIME (in minutes)
Fish Fillets	500 g	P4	8 to 10
Scallops (sea)	500 g	P4	6 to 8
Green Prawns medium size (shelled and cleaned)	500 g	P4	7 to 9
Whole Fish (stuffed or unstuffed)	500 g to 600 g	P4	8 to 10

#### SALMON MORNAVY

Serves: 4

##### Ingredients:

40 g butter  
1 onion, diced  
1/4 cup flour  
1 tablespoon fresh parsley, chopped  
pepper  
1/2 teaspoon prepared mustard  
1 1/2 cups milk  
1 can (440 g) salmon, de-boned  
3/4 cup fresh bread crumbs  
1/3 cup grated cheese

##### Method:

Place butter and onion in a 4-cup jug. Cook on P10 for 1 minute. Add flour and cook on P10 for 1 minute. Add parsley, pepper, mustard and gradually blend in milk. Cook on P10 for 2 to 3 minutes, stir halfway through cooking. Lightly mix through salmon and liquid into sauce. Pour into serving dish and top with bread crumbs and cheese. Cook for further 4 to 5 minutes on P10 power.

#### LEMON PEPPER FISH (S)

Serves: 2

##### Ingredients:

300 g fish fillets  
1/4 cup lemon juice  
1 teaspoon cracked black (ground) pepper

##### Method:

Place fish, lemon juice and cracked black pepper in 1-litre casserole dish. Cook on P4 for 4 to 6 minutes. Let stand for 3 minutes before serving.

##### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Fish**, then **Start**.

#### SWEET SCALLOP STIR FRY

Serves: 2 to 4

##### Ingredients:

1 tablespoon oil  
1 onion, quartered  
1/2 teaspoon crushed garlic  
1/2 large red capsicum, sliced  
2 sticks celery, sliced  
2 tablespoons sliced water chestnuts  
100 g snow peas  
1 tablespoon honey  
1 tablespoon sweet chilli sauce  
1 tablespoon chopped mint  
500 g scallops

##### Method:

Preheat browning dish on P10 for 5 to 7 minutes. Add oil, onions and garlic. Cook on P10 for 1 to 2 minutes. Add remaining ingredients and cook on P10 for 3 to 5 minutes, stir halfway through cooking. Serve immediately.

#### OYSTERS KILPATRICK

Makes: 12

##### Ingredients:

60 g bacon, rind removed and bacon finely chopped  
1 tablespoon worcestershire sauce  
2 teaspoons lemon juice  
12 oysters in shell

##### Method:

Mix together bacon, worcestershire sauce and lemon juice in small bowl. Cover bacon mixture with paper towel and cook on P10 for 1 to 2 minutes. Place oysters in shell evenly around dinner plate and sprinkle with bacon mixture. Cook on P10 for 1 to 1 1/2 minutes. Serve with drinks or as an entree.

Recipe Prompting

# Fish and Shellfish



Bouillabaisse

## TOMATO BASIL MUSSELS

Serves: 4

### Ingredients:

1 kg	fresh mussels
¼ cup	water
1 tablespoon	olive oil
1	leek, sliced
1	clove garlic, crushed
1 can (440 g)	tomato pieces
1 tablespoon	tomato paste
½ teaspoon	oregano
2 tablespoons	chopped fresh basil
	freshly ground black pepper

### Method:

Place mussels and water into a bowl. Cover and cook on P7 for 3 to 5 minutes. Set aside. Place oil, leeks and garlic into a shallow dish. Cover and cook on P10 for 2 minutes. Stir well and allow to stand. In a 3-litre casserole dish combine tomatoes, tomato paste, oregano, basil and pepper. Mix well. Cook on P10 for 3 to 4 minutes. Add mussels, spooning some of the mixture into the shell to increase the flavour. Cover and cook on P10 for 2 to 3 minutes. Serve immediately.

## SMOKED RED COD (S)

Serves: 2 to 4

### Ingredients:

2 (approx. 500 g)	medium sized smoked red cod fillets
1 tablespoon	butter, melted
3 teaspoons	water
	freshly ground black pepper

### Method:

Place all ingredients in large casserole dish. Cover and cook on P4 for 5 to 6 minutes or until cooked and fish flakes when tested with a fork. Season to taste.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap.

Press **Fish**, then **Start**.

## BOUILLABAISSE

Serves: 4 to 6

### Ingredients:

2 tablespoons	olive oil
2	onions, sliced
1	large leek, sliced
4	cloves garlic, crushed
400 g	can tomato pieces
½ cup	tomato paste
4 cups	hot fish stock
⅓ cup	dry white wine
1 tablespoon	fresh thyme leaves
½ teaspoon	saffron powder
1 teaspoon	chilli powder
	freshly ground black pepper
	salt
500 g	firm fish fillets, chopped
1 kg	green prawns, peeled

### Method:

Place oil, onions, leek and garlic in a 4 litre dish. Cover and cook on P10 for 6 to 8 minutes. Stir halfway through cooking. Add tomatoes, tomato paste, fish stock, wine, thyme, saffron, and chilli powder. Season with salt and pepper. Cook on P10 for 12 to 15 minutes. Add fish fillets and prawns. Cook on P10 for 6 to 8 minutes or until seafood is cooked. Serve garnished with fresh thyme.

## SALMON STEAKS WITH LIME BUTTER

Serves: 4

### Ingredients:

60 g	butter
1	clove garlic, crushed
1 teaspoon	grated fresh ginger
1 teaspoon	grated lime rind
2 tablespoons	lime juice
½ teaspoon	sugar
500 g-600 g	salmon, steaks
1 tablespoon	chopped fresh parsley

### Method:

Place butter, garlic, ginger, lime rind, juice and sugar in a shallow dish. Cook on P7 for 1 to 2 minutes. Stir halfway through cooking. Add salmon steaks and coat with sauce. Cover and cook on P5 for 4 to 6 minutes. Stand for 2 to 3 minutes before serving.



# Fish and Shellfish

## GINGERED WHOLE FISH (S)

Serves: 4

### Ingredients:

2 x 400 g	whole bream, cleaned
1 tablespoon	sweet sherry
¼ cup	soy sauce
1 teaspoon	minced ginger
3	spring onions, sliced
1 tablespoon	peanut oil

### Method:

Place fish in shallow casserole dish. Combine sherry, soy sauce, minced ginger and spring onions and peanut oil in 1-litre jug. Pour sauce mixture over fish. Cover and cook on P4 for 4 to 5 minutes. Turn over and recover. Cook on P4 for 4 to 6 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap.

Press **Fish**, then **Start**.

## WHOLE STUFFED FISH (S)

Serves: 2

### Ingredients:

500 g	whole fish, cleaned and scaled (Bream or Snapper)
2 tablespoons	melted butter, divided

### Stuffing:

1 cup	fresh breadcrumbs
4	spring onions, sliced
1 teaspoon	dried basil
	juice of ½ lemon
2 tablespoons	chopped parsley
	freshly ground black pepper

### Method:

Brush fish cavity with melted butter. Combine remaining butter with remaining ingredients to make stuffing. Stuff fish cavity with mixture and secure opening with wooden skewers or string. Place fish on a rack in 3-litre casserole dish and cook on P4 for 7 to 9 minutes. Stand, covered, for 5 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap.

Press **Fish**, then **Start**.

## GARLIC PRAWNS

Serves: 2

Recipe Prompting

### Ingredients:

60 g	butter
1 teaspoon	minced garlic
1 tablespoon	lemon juice
1 tablespoon	chopped parsley
500 g	peeled green prawns

### Method:

Place butter and garlic in 1-litre dish and cook on P10 for 30 to 50 seconds. Add lemon juice, parsley and prawns. Cook on P6 for 5 to 7 minutes, stirring halfway through cooking. Serve in individual ramekins.



Seafood Marinara

## SEAFOOD MARINARA

Serves: 4

### Ingredients:

250 g	scallops
250 g	green prawns, shelled and deveined
1 (approx. 275 g)	squid, cleaned and sliced
2 tablespoons	butter
1	clove garlic, crushed
2	tomatoes, peeled and chopped
1 tablespoon	tomato paste
¼ cup	white wine
1 teaspoon	basil
	pepper
	chopped parsley

### Method:

Place cleaned seafood into 2-litre casserole dish. Set aside. Place butter and garlic in 1-litre casserole dish. Cook on P7 for 1 minute. Add remaining ingredients (except seafood), to dish and cook on P10 for 5 minutes. Purée tomato mixture in blender or food processor and pour over seafood. Cook on P6 for 7 to 9 minutes. Stand for 5 minutes. Serve with salad and pasta.

### HINT:

When cooking whole fish, remove or shield the eyes before cooking to prevent eyes exploding.

# Poultry

## Directions for Cooking Whole Poultry by Microwave

Season as desired, but salt after cooking. Browning sauce mixed with equal parts of butter will enhance the appearance.

Poultry may be stuffed or unstuffed. Tie legs together with cotton string. Place on a microwave rack set in a rectangular dish. Place poultry breast-side down: turn over halfway through cooking. Cover with wax paper to prevent splattering.

If the poultry is not cooked enough, return it to the oven and cook a few more minutes at the recommended power level.

**DO NOT USE A CONVENTIONAL MEAT THERMOMETER IN THE MICROWAVE OVEN.**

Let stand, covered with foil, 10 to 15 minutes after cooking. Standing time allows the temperature to equalize throughout the food and finishes the cooking process.

If a large amount of juice accumulates in the bottom of the baking dish, occasionally drain it. If desired, reserve juices for making gravy.

Less-tender birds should be cooked in liquid such as soup or broth. Use  $\frac{1}{4}$  cup per 500 g of poultry.

Use an oven cooking bag or a covered casserole.

Select a covered casserole deep enough so that bird does not touch the lid.

If an oven cooking bag is used, prepare according to package directions. Do not use wire twist-ties to close bag. Use only nylon tie, a piece of cotton string, or a strip cut from the open end of the bag.

Make six 2 cm slits on top of bag.

Multiply the weight of the poultry by the minimum recommended minutes per 500 g. See chart below. Programme Power and Time.

After cooking, check the internal temperature of the bird with a microwave or conventional meat thermometer inserted into the muscle. Check temperature in both muscles. The thermometer should not touch bone. If it does, the reading could be inaccurate. A thermometer cannot be accurately inserted into a small bird. To check desired cooking of a small bird, juices should be clear and the drumsticks should readily move up and down after standing time.

During cooking, it may be necessary to shield legs, wings and the breast bone with foil to prevent overcooking. Wooden toothpicks can be used to hold foil in place.



## Directions for Cooking Poultry Pieces by Microwave

Cover with wax paper or paper towel. Use the chart below to determine recommended minimum cooking times.

Arrange pieces skin-side down and evenly spread in a shallow dish.

Turn or rearrange halfway through cooking. Shield wing tips, drumstick ends etc., if required.



## Poultry Chart for Microwave Cooking by Time

POULTRY	POWER	TEMPERATURE AFTER COOKING	APPROX. COOKING TIME (minutes per 500 g)
Chickens (up to 2 kg)	P7	87°C	10 to 15
Chicken (pieces)	P7	87°C	8 to 10
Turkey	P7	87°C	10 to 15
Duck	P7	87°C	10 to 15

## CHICKEN AND POTATO CASSEROLE

Serves: 4

### Ingredients:

1	BBQ (cooked) chicken
500 g	potatoes, peeled and thinly sliced
1¼ cup	water
30 g	butter
1	onion, finely chopped
1	clove garlic, crushed
2 tablespoons	plain flour
1 cup	chicken stock
1 teaspoon	french mustard
½ cup	cream
¾ cup	grated tasty cheese
	paprika

### Method:

Remove chicken meat from bones. Place potatoes and water in 2-litre casserole dish. Cover and cook on P10 for 8 to 10 minutes. Drain. Combine chicken and potatoes. Set aside. Place butter in 4-cup glass jug and cook on P7 for 40 seconds. Add onion and garlic to jug and cook on P10 for 1 to 2 minutes. Add flour and stir. Gradually add stock and blend to a smooth paste. Cook on P10 for 2 to 3 minutes. Stir every minute.

Add mustard and cream. Stir well. Pour sauce over chicken and potato mixture. Sprinkle with cheese and paprika. Cook on P7 for 4 to 6 minutes. Serve with vegetables.

## CHICKEN ROLLS WITH HONEY MUSTARD

Serves: 4 to 6

### Ingredients:

8	chicken thigh fillets
16	prunes, pitted
8	spring onions
2 tablespoon	flaked almonds
4 rashers	rindless bacon, halved lengthwise

### Honey Mustard Glaze

1 tablespoon	brown sugar
1 tablespoon	French Mustard
1 tablespoon	honey
10 g	butter, melted
	ground black pepper

### Method:

Open out each thigh fillet and trim away fat. Place 2 prunes, some spring onion and a few flaked almonds on each fillet. Roll fillets up and wrap a piece of bacon around each one. Secure with toothpicks. Blend all glaze ingredients together in a small bowl. Place chicken into a 3-litre dish in a single layer and brush with glaze mixture. Cook on P7 for 16 to 20 minutes, turning halfway through cooking.

## ROAST TURKEY

Serves: 6 to 8

### Ingredients:

2.5 to 2.8 kg	turkey
60 g	butter
1	stick celery, finely sliced
1	small onion, finely chopped
2	small cooking apples, peeled and grated
2 cups	fresh breadcrumbs
1 tablespoon	parsley, finely chopped
1	egg
	salt and pepper
1 tablespoon	oil
	lemon pepper or seasoned salt

### Method:

Clean and pat dry turkey with paper towel. Melt butter in 1-litre casserole dish on P10 for 30 to 40 seconds. Add celery, onion and apples. Cook on P10 for 4 minutes. Add breadcrumbs, parsley, egg, salt and pepper. Mix well and stuff mixture into cleaned turkey. Place turkey, breast-side down, on rack in 3-litre casserole dish. Pierce skin with a fork. Secure legs of turkey with string. Brush with oil. Sprinkle with lemon pepper or seasoned salt.

Cook on P7 for 50 to 75 minutes, turning halfway through cooking. Stand, covered, for 10 minutes before serving.

## CHICKEN CACCIATORE

Serves: 4

Recipe Prompting

### Ingredients:

1 can (440 g)	tomatoes
¼ cup	tomato paste
1 teaspoon	minced garlic
1	onion, diced
2 teaspoons	dried oregano
1 kg	chicken drumsticks

### Method:

Place all ingredients in 2-litre casserole dish. Stir until combined. Cover and cook on P7 for 10 to 12 minutes. Turn chicken and stir. Cook on P7 for 10 to 12 minutes.

### HINT:

After cooking whole poultry, cover with foil to retain heat while finishing the remainder of the meal.

# Poultry

---

## ROAST CHICKEN

---

Serves: 4 to 6

### Ingredients:

1.5 kg	chicken
2 tablespoons	melted butter
	seasonings of your choice
	lemon, pepper, seasoned salt, etc.

### Method:

Clean and pat dry chicken with paper towel. Brush chicken with melted butter and sprinkle with seasoning. Place chicken, breast-side down, on rack in 3-litre dish. Cook on P7 for 30 to 35 minutes. Turn halfway through cooking.

---

## CHICKEN BURRITOS

---

Serves: 4 to 6

### Ingredients:

1	clove garlic, crushed
2	large onions, chopped
1 teaspoon	chilli powder (optional)
1 (35 g)	packet taco seasoning mix
500 g	chicken tenderloins, diced
1 can (425 g)	red kidney beans
1/2 cup	tomato paste
1/2 cup	water
1 cup	grated cheese
10	tortillas

### Method:

Combine all ingredients except cheese and tortillas in 3-litre casserole dish. Cover and cook on P7 for 18 to 20 minutes, stirring twice during cooking. Serve in warmed tortillas topped with grated cheese.

---

## THAI CHICKEN WINGS (S)

---

Serves: 3 to 4

### Ingredients:

1 kg	chicken wings
2 tablespoons	soy sauce
2 tablespoons	fish sauce
2 tablespoons	lime juice
1 teaspoon	crushed garlic
1 teaspoon	crushed ginger
1 teaspoon	crushed chilli

### Method:

Place wings into a shallow dish. Combine remaining ingredients and pour over wings. Marinate for at least 2 hours in the refrigerator. Drain chicken from marinade and return to dish. Cook on P7 for 15 to 20 minutes, rearranging halfway through cooking.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Chicken Pieces**, then **Start**.

---

## CHICKEN AND PRAWN LAKSA

---

Serves: 4

### Ingredients:

#### Laksa:

250 g	rice noodles
8 cups	boiling water
	leaves from 1 bunch of coriander
	small red chillies, seeds removed
4	and finely chopped
1/2 cup	bean sprouts
4	thin slices lime
1 tablespoon	peanut oil
400 g	cooked chicken tenderloins, sliced
12	green king prawns, peeled

#### Soup:

2	medium size white onions, peeled
	and diced
1 tablespoon	peanut oil
2	cloves garlic, crushed
2 teaspoons	ground cumin
2 teaspoons	ground coriander
2	small red chillies, seeded and
	sliced
2 tablespoons	thai red curry paste
2 cups	coconut milk
2 cups	chicken stock
1 tablespoon	soy sauce
	fresh ground black pepper

### Method:

#### Laksa:

Place the noodles and water in a 4 litre dish. Cover and cook on P10 for 8 to 10 minutes, stirring halfway through. Drain well and divide between 4 deep bowls. Place the coriander, chillies, bean sprouts and lime on top. Place the peanut oil and prawns in a 1-litre dish and cook on P7 for 3 to 5 minutes, stirring halfway through. Add the chicken and prawns to each individual dish and set aside.

#### Soup:

Place the onions and peanut oil in a 3 litre dish. Cook on P10 for 3 to 5 minutes, stirring halfway through. Add the garlic, cumin, coriander, chillies, curry paste and cook on P10 for 2 to 3 minutes. Add the coconut milk, stock, soy sauce and pepper and cook covered on P10 for 6 to 8 minutes.

#### To serve:

Pour the hot soup into the 4 bowls and serve.



# Poultry

## SOY CHICKEN AND VEGETABLES

Serves: 4

### Ingredients:

1 tablespoon	cornflour
2 tablespoons	soy sauce
¼ cup	sherry
⅓ cup	oyster sauce
2 teaspoons	minced ginger
500 g	chicken fillets, sliced
2 cups	sliced vegetables

### Method:

Place cornflour, soy sauce, water and ginger in 3-litre casserole dish and mix well. Cook on P10 for 1 to 1½ minutes. Add chicken to dish and cook on P7 for 4 to 5 minutes, stirring once during cooking. Add vegetables to dish. Cook on P10 for 3 minutes. Stir. Let stand 2 minutes. Serve with boiled or fried rice.

## CHICKEN WINGS IN LEMON SAUCE (S)

Serves: 4 to 6

### Ingredients:

1 kg	chicken wings
¼ cup	soy sauce
1 teaspoon	ginger powder
2	cloves garlic, crushed
¼ cup	lemon juice

### Method:

Place chicken wings in 3-litre casserole dish. Mix together remaining ingredients and pour over chicken wings. Marinate for 1 to 2 hours in the refrigerator. Cook, covered, on P7 for 15 to 20 minutes. Serve hot with rice.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Chicken Pcs.**, then **Start**.

## HONEY MUSTARD DRUMSTICKS (S)

Serves: 3 to 4

### Ingredients:

8	chicken drumsticks
2 tablespoons	Worcestershire sauce
¼ cup	honey
1 tablespoon	seeded mustard
1 teaspoon	curry powder

### Method:

Place drumsticks into a shallow casserole dish. Mix together the remaining ingredients and combine with the drumsticks. Marinate for at least 2 hours in the refrigerator. Cook on P7 for 15 to 20 minutes, turning halfway through cooking. Serve with boiled rice or noodles.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Chicken Pieces**, then **Start**.

## GREEN PEPPERCORN CHICKEN

Serves: 4

Browning Dish Recipe

### Ingredients:

1 tablespoon	butter
4	single chicken breast fillets
	ground black pepper
2 tablespoons	green peppercorns
1 tablespoon	seeded mustard
1 teaspoon	chicken stock powder
2 tablespoons	lemon juice
½ cup	cream

### Method:

Preheat a browning dish on P10 for 4 to 5 minutes. Flatten chicken fillets and press pepper into each fillet. Add butter to browning dish with chicken and cook on P10 for 4 to 6 minutes. Turn halfway through cooking. Remove chicken and add remaining ingredients to dish, stir well. Cook on P10 for 1 to 2 minutes. Serve chicken with sauce.

## CHICKEN CURRY

Serves: 4

Recipe Prompting

### Ingredients:

1	onion, chopped
2 tablespoons	red curry paste
500 g	chicken fillets, chopped
2 cups	finely sliced vegetables
1 cup	coconut milk

### Method:

Place onion and curry paste in 3-litre casserole dish. Cook on P10 for 3 to 4 minutes. Add chicken and combine. Cook on P7 for 6 minutes, stirring once during cooking. Add vegetables and coconut milk. Stir well. Cover and cook on P10 for 4 to 6 minutes. Serve with Jasmine rice.



Chicken Wings in Lemon Sauce

# Poultry



Spicy Chicken Curry

## CHICKEN RISOTTO

Serves: 4

### Ingredients:

300 g	fresh asparagus, chopped
2 tablespoon	olive oil
1 ½ cups	arborio rice
1	clove garlic, crushed
4 cups	boiling chicken stock
2 cups	coarsely chopped cooked chicken
¼ cup	grated fresh parmesan cheese
¼ cup	cream
	ground black pepper
extra	coarsely grated parmesan cheese

### Method:

Place asparagus into 2-litre dish and cook on P10 for 1 minute. Set aside. Place oil, rice and garlic in a large microwave safe bowl. Cook covered on P10 for 1 minute. Add 2 cups of boiling chicken stock, cook on P10 for 5 minutes. Stir twice during cooking. Add remaining chicken stock and cook on P10 for another 5 minutes. Add remaining ingredients along with asparagus and stir into risotto. Cook covered on P10 for 2 minutes. Stand for 5 minutes. Serve topped with extra parmesan and black pepper.

### HINT:

- A No. 15 (1.5 kg) chicken will make 4 cups of diced cooked chicken.
- 2 whole breasts will make 2 cups of diced cooked chicken.
- 1 chicken maryland will make 1 cup of diced cooked chicken.

## SPICY CHICKEN CURRY

Serves: 4 to 6

### Ingredients:

2 tablespoons	oil
1	onion, finely chopped
1	clove garlic, crushed
1 teaspoon	finely grated root ginger
2 teaspoons	ground coriander
½ teaspoon	ground turmeric
1 teaspoon	ground cumin
1 teaspoon	chilli powder
3 tablespoons	vinegar
1 kg	chicken breast fillets, cut into strips
1 cup	chicken stock
¼ cup	coconut cream

### Method:

Place oil, onions, garlic and ginger in 3-litre dish and cook on P10 for 2 to 3 minutes. Add spices and vinegar to onion mixture and cook on P10 for 1 to 2 minutes. Add chicken and stock to onion mixture and cook on P6 for 10 to 15 minutes, stirring 2 to 3 times. Before serving, stir through coconut cream. Heat for 1 to 2 minutes on P6. Serve with rice, pappadums and sambals.

## APRICOT NECTAR CHICKEN (S)

Serves: 4 to 6

### Ingredients:

200 ml	apricot nectar
40 g packet	French onion soup mix
1 kg	chicken drumsticks

### Method:

Combine apricot nectar, soup and drumsticks in 2-litre casserole dish. Cook on P7 for 20 to 25 minutes, turning once during cooking. Serve chicken with rice or pasta.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Meat**, then **Start**.

## HONEY SESAME DRUMSTICKS (S)

Serves: 3 to 4

Recipe Prompting

### Ingredients:

1 kg	chicken drumsticks
1 teaspoon	chopped garlic
1 teaspoon	chopped ginger
¼ cup	soy sauce
¼ cup	honey
2 tablespoons	sesame seeds

### Method:

Place all ingredients in 2-litre bowl, stir until combined. Marinate for at least 2 hours or overnight. Remove chicken from marinade and place in shallow dish with the meatiest ends to the outside. Cook on P7 for 18 to 20 minutes, turning once during cooking.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Meat**, then **Start**.

# Main Fare Meats

## Directions for Cooking Tender Cuts of Meat by Microwave

For best results, select roasts that are uniform in shape.

Place meat on a microwave rack in a suitable dish. Beef rib roast should be placed cut-side down. Other bone-in roasts should be placed fat-side down. Boneless roasts should be placed fat-side up. Halfway through cooking, turn roasts. Half hams should be shielded by wrapping an 8 cm wide strip of foil around the large end of the ham. Secure to the body of the ham with wooden toothpicks. Fold 3 cm over cut surface. For shank ham halves, shield shank bone by cupping it with foil. One third of the way through cooking, remove ham from oven and cut off skin. Turn fat side up and reshield edges. If desired, glaze last 10 to 20 minutes of cooking. Loosely cover baking dish with wax paper or paper towel to prevent splatter. If a large amount of juice accumulates in the bottom of the dish, drain occasionally. If desired, reserve for making gravy. Multiply the weight of the roast by the minimum recommended times per 500 g. Programme Power and Time.

Meats can be shielded at the beginning of cooking or halfway through cooking. If you wish to shield at the

beginning of cooking, remove foil halfway through the cooking time. Beef and pork rib roasts should be shielded by the bones. Foil should extend about 5 cm down from bones. The shank and thin ends of boneless roasts should also be shielded. Make sure foil does not touch the sides of the oven, as arcing may occur. Canned hams should be shielded on the top cut-edge with a 3 cm strip of foil. Wrap strip of foil around ham and secure to body of ham with wooden toothpicks. Fold 2 cm over cut surface. After heating, check temperature using a meat thermometer. The thermometer should not touch bone or fat. If it does, the reading could be inaccurate. Lower temperatures are found in the centre of the roast and in the muscle close to a large bone, such as a pork loin centre rib roast. If the temperatures are low, return meat to the oven and cook a few more minutes at the recommended power level. **DO NOT USE A CONVENTIONAL MEAT THERMOMETER IN THE MICROWAVE OVEN.** Let stand, covered with foil, 10 to 15 minutes. During standing time the internal temperature equalises and the temperature rises 5°C to 10°C.

## Directions for Cooking Less-Tender Cuts of Meat by Microwave

Less-tender cuts of meat such as pot roasts should be cooked in liquid. Use  $\frac{1}{2}$  to 2 cups of soup, broth, etc. per 500 g of meat. Use an oven cooking bag or covered casserole when cooking less-tender cuts of meat. Select a covered casserole deep enough so that the meat does not touch the lid. If an oven cooking bag is used, prepare the bag according to package directions. Do not use wire or metal

twist-ties. Use the nylon tie provided, otherwise, use a piece of cotton string or a strip cut from the open end of the bag. Make six 2 cm slits in top of bag to allow steam to escape. Multiply the weight of the roast by the minimum recommended minutes per 500 g. Programme Power and Time. Turn meat over halfway through cooking. Meat should be tender when cooked.

## Meat Chart for Microwave Cooking

MEAT	POWER	APPROX. COOKING TIME (minutes per 500 g)
<b>Beef</b>		
Roasts		
Rare	P6	8 to 10
Medium	P6	10 to 12
Well	P6	12 to 14
Chuck, Flank, Brisket	P2	25 to 30
<b>Pork</b>		
Leg of Pork	P7	12 to 15
Loin of Pork	P7	12 to 15
Pork Chops	P7	6 to 8
Ham Canned (fully cooked)	P7	5 to 7
<b>Lamb</b>		
Medium	P6	9 to 11
Well	P6	11 to 13

# Main Fare Meats

---

## GOULASH (S)

---

Serves: 4

### Ingredients:

500 g	lamb, diced
1	onion, chopped
1	clove garlic, crushed
1 tablespoon	butter
2 tablespoons	tomato paste
1/2 teaspoon	paprika
1	small capsicum, cut into 2.5 cm cubes
1 cup	beef stock
2 tablespoons	flour
2 tablespoons	water
2 tablespoons	sour cream

### Method:

Place onion, garlic and butter in 3-litre casserole dish. Cook on P10 for 1 to 2 minutes. Add tomato paste and paprika. Cook on P10 for a further 2 minutes. Add lamb, capsicum and stock. Cover and cook on P6 for 25 to 30 minutes, stirring halfway through cooking. Mix flour with 2 tablespoons of water and stir into goulash mixture. Cook on P10 for 1 to 2 minutes. Stir in sour cream and serve with pasta and rice.

### To Cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Slow Cook**, then **Start**.

---

## GREEN THAI BEEF CURRY

---

Serves: 4 to 6

### Ingredients:

1	onion, thinly sliced
2 tablespoons	Thai green curry paste
500 g	thinly sliced lean beef
1/2	red capsicum, thinly sliced
1	carrot, thinly sliced
1	zucchini, sliced
500 g	broccoli, broken into flowerets
1 cup	coconut milk
1 tablespoon	soy sauce
1 tablespoon	lemon juice
2 tablespoons	shredded fresh basil
1/2 cup	roasted unsalted peanuts

### Method:

Place the onion and curry paste into a 3-litre dish. Cook on P10 for 2 to 3 minutes. Add the beef and cook on P10 for 4 to 6 minutes, stirring halfway through cooking. Add the vegetable and coconut milk and cook on P10 for 4 to 6 minutes. Mix in the soy sauce, lemon juice and basil and serve sprinkled with peanuts.

---

## VEAL PAPRIKA (S)

---

Serves: 4

### Ingredients:

750 g	diced veal
250 g	mushrooms, sliced
1 cup	chicken stock
1	onion, finely chopped
1 teaspoon	paprika
	salt and pepper
2 tablespoons	flour
1 tablespoon	tomato paste
1/2 cup	sour cream

### Method:

In 3-litre dish, combine veal, mushrooms, 1/2 cup chicken stock, onion, paprika, salt and pepper. Cook on P7 for 10 to 15 minutes stirring 2 to 3 times. Blend flour with remaining stock. Stir into veal with tomato paste and cook on P10 for 2 to 3 minutes. Blend in sour cream. Serve.

### To Cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Slow Cook**, then **Start**.

---

## BARBECUED MARINATED SPARE RIBS

---

Serves: 4

### Ingredients:

1 kg	pork spare ribs
3/4 cup	fruit chutney
3/4 cup	tomato sauce
1 tablespoon	soy sauce
1 tablespoon	worcestershire sauce

### Method:

Place all ingredients in 3-litre casserole dish and marinate for several hours or overnight. Cook ribs on P7 for 20 to 22 minutes, turning once through cooking.

---

## FRENCH ONION BEEF CASSEROLE (S)

---

Serves: 4

*Recipe Prompting*

### Ingredients:

1	onion, chopped
1 teaspoon	mixed dried herbs
200 g	diced potatoes
500 g	chuck steak, chopped
20 g	French onion soup mix
1/3 cup	tomato paste
2 cups	beef stock

### Method:

Place onion and herbs in 3-litre casserole dish. Cook on P10 for 1 to 2 minutes. Add remaining ingredients, stir until combined. Cover and cook on P10 for 12 minutes. Stir and cook on P6 for 25 to 27 minutes, stirring once during cooking.

### To Cook by Sensor Cook:

Prepare as above, cover with plastic wrap. Press **Slow Cook**, then **Start**.



# Main Fare Meats

## LAMB PILAU

Serves: 4

### Ingredients:

1 tablespoon	oil
1	large onion, sliced
4	lamb shoulder chops, chopped
400 g	can tomato pieces
2 tablespoons	garam masala
1 teaspoon	dried thyme
1 cup	long grain rice
600ml	hot chicken stock
150g	natural yoghurt
	freshed ground black pepper

### Method:

Place the onion and oil in a 3 litre dish. Cover and cook on P10 for 2 to 3 minutes. Add lamb, tomato pieces, garam masala, and thyme. Cover and cook on P7 for 10 minutes. Stir. Cook on P7 for a further 10 minutes. Add the rice and chicken stock and cook covered on P5 for a further 30 minutes or until the rice is tender. Stir in yoghurt, season with pepper and serve.

## CHILLI BEEF (S)

Serves: 4

Recipe Prompting

### Ingredients:

500 g	topside beef mince
1	onion, diced
1 teaspoon	minced garlic
1 (35 g)	packet chilli seasoning mix
1 can (400 g)	tomato purée
1 can (440 g)	kidney beans, drained

### Method:

Place all ingredients in shallow dish. Mix well. Cook on P10 for 20 to 22 minutes. Stir halfway through cooking. Serve in taco shells with chopped tomatoes and shredded lettuce or with a salad and crusty bread.

### To Cook by Sensor Cook:

Prepare as above, cover with plastic wrap. Press **Sauce**, then **Start**.

## SEASONED ROAST LAMB (S)

Serves: 4 to 6

Recipe Prompting

### Ingredients:

1.4 kg	leg of lamb
1 tablespoon	seeded mustard
1 tablespoon	rosemary

### Method:

Place lamb fat side down on rack set in 3-litre dish. Brush with mustard and rosemary. Cook on P6 for 30 to 32 minutes, turn halfway through cooking. Stand, covered, for 15 minutes before slicing.

### To Cook by Sensor Cook:

Prepare as above, cover with plastic wrap. Press **Lamb**, then **Start**.



Seasoned Roast Lamb

## LAMB FRY AND BACON

Serves: 4

### Ingredients:

750 g	liver
1/4 cup	flour
250 g	rindless bacon, cut into 2 cm strips
2	onions, sliced
1 tablespoon	butter
1/2 cup	beef stock
1 tablespoon	ground black pepper
	chopped parsley

### Method:

Soak liver in water for 30 minutes, remove skin and cut liver into strips. Coat liver with flour and shake off any excess. Place bacon and onion into 3-litre dish and cook on P10 for 3 to 5 minutes. Remove and drain well on absorbent paper. Add half the butter to dish and half the sliced liver. Cook on P10 for 2 to 4 minutes, stir halfway through cooking. Repeat with remaining butter and liver. Return all the liver to dish and add bacon, onion, and beef stock, season with pepper and add parsley. Stir well. Cook on P10 for 2 to 3 minutes and serve immediately.

### HINT:

It is better to cook meat for a lesser time in a recipe and add extra time if needed. This will prevent overcooking.

# Main Fare Meats

## CURRIED MINCE (S)

Serve: 4

### Ingredients:

500 g	lamb mince
1	onion, chopped
2 tablespoons	flour
1 tablespoon	curry powder
1 tablespoon	beef stock powder
450 g	potatoes, peeled and finely diced
2 cups	water

### Method:

Combine all ingredients in 3-litre casserole dish. Cover and cook on P7 for 20 to 25 minutes, stirring halfway through cooking. Serve with boiled or steamed rice.

### To Cook by Sensor Cook:

Prepare as above, cover with plastic wrap.

Press **Slow Cook**, then **Start**.

## GINGERED PORK STIR FRY

Serves: 4

### Ingredients:

1/4 cup	teriyaki sauce
1 tablespoon	honey
2 teaspoons	minced ginger
2 teaspoons	cornflour
1	onion, sliced
2 cups	sugar snap peas, trimmed
1	zucchini, sliced
2	spring onions, sliced
1/2 cup	bean sprouts
1 tablespoon	toasted sesame seeds

### Method:

Place pork, teriyaki sauce, honey, ginger and cornflour in 2-litre dish. Cover and marinate in the refrigerator for 2 hours. Place onion in a 3 litre dish. Cook on P10 for 2 to 3 minutes. Add marinated pork and sauces and cook on P7 for 2 to 3 minutes. Add peas, zucchini, shallots and bean sprouts. Cook on P10 for 3 to 4 minutes. Sprinkle with sesame seeds and serve with noodles.

### To Cook by Sensor Cook:

Prepare as above, cover with plastic wrap.

Press **Meat**, then **Start**.

## CHINESE BEEF AND VEGETABLES

Serves: 4 to 6

### Ingredients:

400 g	rump steak sliced
1 teaspoon	chopped ginger
1 teaspoon	chopped garlic
1 tablespoon	soy sauce
2 tablespoons	Hoisin Sauce
1/2 cup	beef stock
3 cups	sliced vegetables

### Method:

Place steak, ginger and garlic in 3-litre casserole dish. Cook on P10 for 1 minute. In 1-cup jug, combine soy sauce, Hoisin Sauce and beef stock. Add to meat mixture. Cook on P10 for 2 minutes. Add the vegetables and cook on P10 for 3 to 5 minutes, stirring halfway through cooking. Let stand for 5 minutes before serving.

## VEAL AND PINEAPPLE CASSEROLE (S)

Serves: 4 to 6

### Ingredients:

750 g	veal steak diced
2 tablespoons	seasoned flour
125 g	bacon, rind removed
2	onions, sliced
1 can (450 g)	pineapple pieces, drained
2 tablespoons	parsley, finely chopped
1/2 teaspoon	dried basil
1 cup	tomato purée
1	chicken stock cube, crumbled

### Method:

Toss veal in flour. Cut bacon into 3 cm pieces. Combine veal, bacon and remaining ingredients in 3-litre casserole dish. Mix well. Cook on P6 for 45 to 50 minutes. Stir halfway through cooking.

### To Cook by Sensor Cook:

Prepare as above, cover with plastic wrap.

Press **Slow Cook**, then **Start**.

## BEEF STROGANOFF

Serves: 4

Recipe Prompting

### Ingredients:

1	onion, sliced
750 g	rump steak sliced thinly
2 tablespoons	tomato sauce
2 tablespoons	Worcestershire sauce
1	beef stock cube
1/3 cup	sour cream
200 g	sliced mushrooms
1 teaspoon	paprika

### Method:

Place all ingredients (except sour cream and mushrooms) in 3-litre casserole dish. Stir until combined. Cook on P7 for 8 to 10 minutes, stirring once during cooking. Add sour cream and mushrooms. Stir and cook on P7 for 3 to 4 minutes.

## PEPPER POT BEEF (S)

Serves: 4

### Ingredients:

1 teaspoon	minced garlic
1	red capsicum, sliced
1 can (410 g)	tomatoes
400 g	can tomato puree
750 g	cubed beef
1/4 cup	tomato paste
1 tablespoon	Worcestershire sauce
1 tablespoon	cracked black pepper

### Method:

Combine all ingredients in 3-litre casserole dish. Cook on P7 for 15 minutes. Stir, cook on P6 for 25 minutes. Serve with boiled or steamed rice.

### To Cook by Sensor Cook:

Prepare as above, cover with plastic wrap.

Press **Slow Cook**, then **Start**.

# Main Fare Meats

## CORNERED BEEF

Serves: 4

### Ingredients:

1.5 to 1.7 kg	corned silverside
1 tablespoon	brown sugar
1 tablespoon	white vinegar
1	onion, cut in half
4	cloves
6	peppercorns
1	bay leaf
3 cups	water

### Method:

Rinse corned silverside under cold running water to remove excess salt. Place corned silverside in 4-litre casserole dish. Add remaining ingredients. Cover and cook on P10 for 10 minutes. Turn meat, cover and cook on P3 for 1¼ to 1½ hours. Stand corned silverside in cooking liquid for 10 minutes before carving.

**Note:** Depending on the size and shape of the silverside, it may require a further 10 to 15 minutes on P3.

## LASAGNE (S)

Serves: 4 to 6

### Ingredients:

#### Meat Sauce:

500 g	minced beef
2	small onions, chopped
1	clove garlic, chopped
1 can (425 g)	tomato purée
3	beef stock cubes
2 tablespoons	mixed herbs
1 tablespoon	cracked black pepper

#### Cheese Sauce:

80 g	butter
¼ cup	flour
500 ml	milk
1 cup	grated cheese
½ cup	Parmesan cheese
12	lasagne sheets, cooked
1 cup	extra grated cheese

### Method:

#### Meat Sauce:


Combine all meat sauce ingredients in 4-litre casserole dish. Cook on P7 for 30 to 35 minutes, stirring several times during cooking. Set aside.

#### To cook by Sensor Cook:

Place mince, onion and garlic in a 3-litre casserole dish. Cook on P7 for 10 minutes. Stir halfway through cooking. Add remaining ingredients. Cover with plastic wrap. Press **Sauce**, then **Start**.

#### Cheese Sauce:

Melt butter in 2-litre jug on P10 for 30 to 40 seconds. Add flour and mix well. Gradually stir in milk. Cook on P10 for 2 to 3 minutes. Add grated cheese and Parmesan cheese. Cook on P10 for 50 to 60 seconds. Spoon quarter of the meat sauce into the base of 25 x 25 cm deep casserole dish. Top with three lasagne sheets. Spoon another quarter of meat sauce over the lasagne sheets and spread with cheese sauce. Continue with remaining ingredients. Top with meat and cheese sauce. Sprinkle with extra cheese and cook on P7 for 30 to 35 minutes.

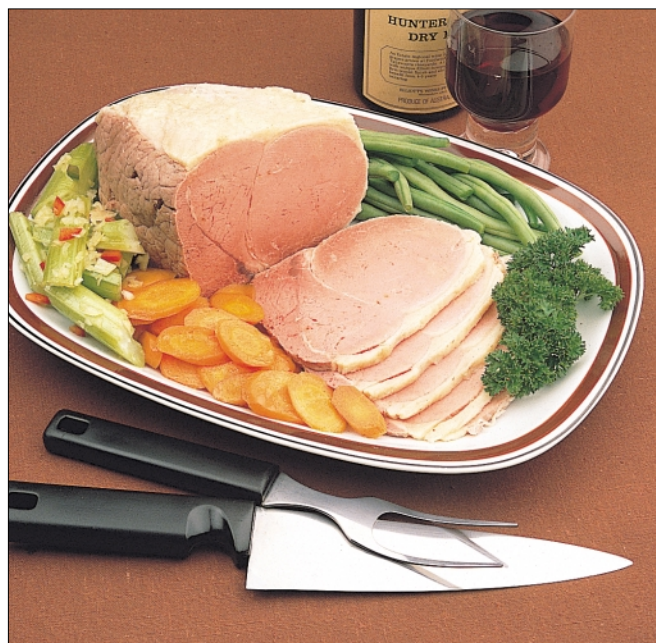

Corned Beef

## APRICOT MEATLOAF

Serves: 4 to 6

Recipe Prompting

### Ingredients:

500 g	minced beef
1 can (440 g)	chopped apricots, drained
1 teaspoon	mixed dried herbs
1	egg
1	beef stock cube
¼ cup	tomato paste
½ cup	ground black pepper
	breadcrumbs

### Method:

Combine all ingredients in large bowl, mix well. Place into 12 cm x 20 cm loaf dish. Cook on P7 for 16 to 20 minutes. Cover and stand for 10 minutes before serving.

## SPAGHETTI MEAT SAUCE (S)

Serves: 4 to 6

Recipe Prompting

### Ingredients:

500 g	minced beef
1	onion, chopped
1 teaspoon	minced garlic
1 can (425 g)	tomatoes
½ cup	tomato paste
2	beef stock cubes
1 tablespoon	dried mixed herbs
1 tablespoon	worcestershire sauce
	pepper

### Method:

Combine all ingredients in 3-litre casserole dish. Cook on P7 for 10 minutes, stir. Cook on P7 for 14 to 18 minutes. Stir halfway through cooking. Serve with spaghetti.

#### To cook by Sensor Cook:

Place mince, onion and garlic in a 3-litre casserole dish. Cook on P7 for 10 minutes. Stir halfway through cooking. Add remaining ingredients. Cover with plastic wrap. Press **Sauce**, then **Start**.

# Vegetable Varieties

## Directions for Cooking Vegetables

### FRESH VEGETABLES BY MICROWAVE

Place vegetables in a casserole dish. Add 2 to 3 tablespoons of water per 500 g of vegetables. Add salt to water or add after cooking. Do not place salt directly on vegetables. Cover dish with glass lid or plastic wrap.

Cook on P10 according to time recommended in charts. Halfway through cooking, stir, turn vegetables over or rearrange.

Vegetables that are to be cooked whole and unpeeled, need to be pierced to allow steam to escape. Place vegetables on a paper towel lined dinner plate. Allow to stand, covered, according to the time indicated in the charts.

### FROZEN VEGETABLES BY MICROWAVE

Remove vegetables from package and place in an appropriate sized container. Vegetables frozen in a

pouch should be placed on a dish and the top pierced. Cook on P10 according to directions given in chart. Vegetables should be cooked covered with a lid or plastic wrap.

Halfway through cooking, stir, turn vegetables over or rearrange. Stir after cooking. Allow to stand for 2 to 3 minutes before serving.

### DRIED BEANS OR PEAS BY MICROWAVE

Place hot tap water in 4-litre dish. Bring hot water to the boil on P10 for 10 to 12 minutes. Add beans and 2 tablespoons oil to water. Cook according to directions in chart. Stir. Allow to stand, covered, for 15 to 20 minutes.

**Note:** Beans such as red kidney beans and lima beans should be soaked overnight before cooking. 250 g of dried beans equals about 3 cups cooked beans. Use in place of canned beans.

## Frozen Vegetables Chart for Microwave Cooking

VEGETABLE	QUANTITY	COOKING PROCEDURE	APPROX. COOKING TIME (in minutes) on P10
Beans	250 g	Cook in covered 2-litre dish.	4 to 6
Broad Beans	250 g	Cook in covered 2-litre dish.	5 to 7
Broccoli (spears)	350 g	Cook in covered 2-litre dish.	5 to 7
Brussels Sprouts	250 g	Cook in covered 2-litre dish.	5 to 7
Carrots (baby)	250 g	Cook in covered 2-litre dish.	6 to 8
Cauliflower	500 g	Cook in covered 2-litre dish.	5 to 7
Corn (½ cob)	½ ear (75 g)	Cook in covered 2-litre dish.	3 to 4
Corn (cobs)	250 g	Cook in covered 2-litre dish.	5 to 7
Mixed Vegetables	250 g	Cook in covered 2-litre dish.	5 to 7
Peas	250 g	Cook in covered 2-litre dish.	4 to 6
Spinach	250 g	Cook in covered 2-litre dish.	4 to 6

## Dried Beans and Peas Chart for Microwave Cooking

ITEM	CONTAINER	AMOUNT OF HOT WATER	APPROX. TIME TO BOIL HOT WATER on P10 (in minutes) COVERED	TO COOK BEANS on P3 (in minutes) COVERED
Lentils (250 g)	4-litre dish	2 litres	10 to 12	15 to 20
Soup Mix (250 g)	4-litre dish	2 litres	10 to 12	20 to 25
Split Peas or Lentils (250 g)	4-litre dish	2 litres	10 to 12	25 to 30
Beans (250 g) Soaked overnight	4-litre dish	2 litres	10 to 12	25 to 30

# Vegetable Varieties

## Fresh Vegetables Chart for Time Cooking

Vegetables should be covered and cooked on P10 power for best results. Weights given are trimmed weights.

VEGETABLE	QUANTITY	COOKING PROCEDURE	APPROX. COOKING TIME (in minutes) on P10
Asparagus	250 g	Covered dish with $\frac{1}{4}$ cup water.	2 to 4
Beans (finely sliced)	250 g	Covered dish with $\frac{1}{4}$ cup water.	3 to 5
Beetroot	4 whole (1 kg)	Covered with 1 cup water in 4-litre dish. Stand after cooking - 5 mins.	14 to 18
Broccoli	500 g	Covered dish with $\frac{1}{4}$ cup water.	4 to 6
Brussels Sprouts	500 g	Covered dish with $\frac{1}{4}$ cup water.	4 to 6
Cabbage	500 g	Shredded, with $\frac{1}{4}$ cup water in covered dish.	6 to 8
Carrots	4 (sliced finely) 225 g	With $\frac{1}{4}$ cup water in covered dish.	3 to 4
Cauliflower	500 g	With $\frac{1}{4}$ cup water in covered dish.	5 to 7
Celery	6 stalks (400 g) cut in 1 cm pieces	With $\frac{1}{4}$ cup water in covered dish.	4 to 6
Corn	2 ears (500 g) 4 ears (1 kg)	Brush with melted butter and cook in covered dish.	4 to 6 8 to 10
Eggplant	1 (500 g)	Dice with $\frac{1}{4}$ cup water in covered dish.	4 to 6
Mushrooms	250 g (sliced)	Cook with 2 tablespoons butter in covered dish.	2 to 4
Onions	3 (200 g)	Cut in quarters with $\frac{1}{4}$ cup water in covered dish.	5 to 7
Peas	250 g	Shell peas and place with $\frac{1}{4}$ cup water in covered dish.	3 to 5
Potatoes-Mashed -Jacket	5 (500 g)	Peeled and quartered with $\frac{1}{4}$ cup water. Covered. Cook uncovered on paper towel lined plate.	10 to 12 6 to 8
Pumpkin	500 g	Peeled and cut into uniform pieces with $\frac{1}{4}$ cup water in covered dish.	6 to 8
Spinach	250 g	Remove stem, cut leaves into small pieces. Cook with $\frac{1}{4}$ cup water in covered dish.	3 to 5
Sweet Potato	500 g	In serving size pieces with 2 tablespoons butter in covered dish.	6 to 8
Turnips	500 g	Peeled and sliced finely with $\frac{1}{4}$ cup water in covered dish.	6 to 8
Tomatoes	2 (300 g)	Sliced and cooked covered with 1 tablespoon butter in dish.	2 to 4
Zucchini	500 g	Cut in 2 cm pieces in covered dish.	5 to 7



# Vegetable Varieties



Ardenis Style Potatoes

## TERIYAKI TOFU VEGETABLE NOODLES

Serves: 4

### Ingredients:

1 tablespoon	sesame oil
350 g	firm tofu, diced
1	onion, cut into petals
300 g	stir fry vegetables
1 tablespoon	hoisin sauce
1 tablespoon	teriyaki sauce
1 pkt	2 minute noodles
2 cups	boiling water

### Method:

Place oil, tofu and onion in a 3 litre dish and cook on P10 for 2 to 3 minutes. Add vegetables and sauces and cook on P10 for 3 to 4 minutes, stirring once during cooking. Place noodles and water in a 2-litre bowl and cook on P10 for 2 minutes. Stir and drain. Toss noodles through tofu and vegetables and serve.

## CREAMED SPINACH (S)

Serves: 4

### Ingredients:

1	bunch spinach, roughly chopped
4	spring onions, finely chopped
1	clove garlic, crushed
2 tablespoons	sour cream
	salt and pepper

### Method:

Cook washed spinach leaves, shallots and garlic in covered 3-litre casserole dish on P10 for 5 to 7 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Vegetables**, then **Start**.

Drain well by squeezing between two dinner plates. Toss through remaining ingredients. Season to taste. Cook on P10 for 1 to 2 minutes. Serve.

## ARDENNIS STYLE POTATOES (S)

Serves: 4

### Ingredients:

4	medium sized potatoes
100 g	ham, finely diced
3 tablespoons	snipped chives
50 g	butter
1/2 cup	grated Cheddar cheese
	ground black pepper

### Method:

Scrub potatoes, wash and pat dry with paper towel. Prick skins and place in 2-litre casserole dish. Cook on P10 for 6 to 8 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap.

Press **Root Vegetables**, then **Start**.

Allow to cool slightly. Cut tops off potatoes and scoop out pulp from centre, leaving 1 to 2 cm in shell. Mash pulp and combine with remaining ingredients. Spoon filling back into potato shells. Place potatoes in 2-litre casserole dish. Cook on P10 for 2 to 3 minutes.

## CAULIFLOWER AU GRATIN (S)

Serves: 4

### Ingredients:

500 g	cauliflower, trimmed and cut into pieces
2 tablespoons	water
2 tablespoons	butter
1	small onion, finely chopped
2 tablespoons	flour
1 cup	milk
1/2 cup	grated tasty cheese

### Method:

Place cauliflower and water in shallow casserole dish. Cover and cook on P10 for 6 to 8 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap.

Press **Vegetables**, then **Start**.

Stand, covered, while making sauce. Place butter and onion in 4-cup glass jug. Cook on P10 for 1 to 2 minutes. Stir in flour and cook on P10 for 1 minute. Add milk gradually. Stir well. Cook on P10 for 2 to 3 minutes, stirring halfway through cooking. Drain cauliflower and pour over sauce. Sprinkle with cheese. Cook on P7 for 1 to 2 minutes.

**Note:** Depending on size and arrangement of cauliflower pieces, timing will vary.

### HINT:

**TO SKIN TOMATOES:** Cut a cross into the tomato skin. Place 1 cup of hot tap water in 2 to 3 cup jug or bowl and heat on P10 for 1½ minutes or until boiling. Add 1 tomato and heat for a further 20 to 30 seconds. Remove and repeat procedure with remaining tomatoes. The skin will be loosened and easily removed.

# Vegetable Varieties

## BROCCOLI AND CHEESE SAUCE (S)

Serves: 2 to 3

### Ingredients:

250 g broccoli, washed, trimmed  
and cut into pieces  
1 tablespoon water

### Cheese Sauce:

2 tablespoons butter  
2 tablespoons flour  
1 cup milk  
¾ cup grated cheese  
¼ teaspoon mustard (optional)  
salt and pepper

### Method:

Place broccoli and water in 2-litre casserole dish. Cover and cook on P10 for 4 to 6 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Vegetables**, then **Start**. Drain and set aside. Place butter in 4-cup jug and cook on P10 for 30 seconds. Add flour and mix well. Cook on P10 for 20 to 30 seconds. Add milk gradually and stir well. Cook on P10 for 2 to 3 minutes, stirring halfway through cooking. Add cheese, mustard, salt and pepper. Mix well. Pour sauce over broccoli and cook on P6 for a further 1 minute.

## TOMATO VEGETABLE CASSEROLE (S)

Serves: 4 to 6

Recipe Prompting

### Ingredients:

200 g mushrooms, sliced  
1 eggplant, chopped  
200 g zucchini, sliced  
1 capsicum, sliced  
1 onion, sliced  
1 can (410 g) tomatoes  
½ cup tomato purée  
1 teaspoon mixed herbs  
1 teaspoon minced garlic

### Method:

Place mushrooms, eggplant, zucchini, capsicum and onion in a 3-litre casserole dish. Cover. Cook on P7 for 10 minutes. Add tomatoes, tomato purée, herbs and garlic. Re-cover and cook on P10 for 8 to 10 minutes.

### To cook by Sensor Cook:

Place mushroom, eggplant, zucchini, capsicum and onion in a 3-litre casserole dish. Cover. Cook on P7 for 10 minutes. Add remaining ingredients. Cover with plastic wrap. Press **Sauce**, then **Start**.

### HINT:

It is better to slightly undercook vegetables as they will soften on standing. Allow to stand, covered, with plastic wrap or a lid.

## SAVOURY BRUSSELS SPROUTS (S)

Serves: 4

### Ingredients:

250 g brussels sprouts  
2 tablespoons butter  
150 g bacon, finely chopped  
1 onion, finely chopped  
1 teaspoon dill or basil  
1 teaspoon sugar

### Method:

Wash and drain brussels sprouts. Cook in covered 2-litre casserole dish on P10 for 4 to 5 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Vegetables**, then **Start**. Drain and set aside. Place remaining ingredients in separate 2-litre casserole dish. Cook on P10 for 3 to 5 minutes. Add brussels sprouts and cook on P10 for 1 to 2 minutes. Serve.

## CHEESY MASHED POTATOES (S)

Serves: 4

Recipe Prompting

### Ingredients:

500 g potatoes, peeled and diced  
¼ cup water  
¼ cup milk  
¼ cup grated cheese

### Method:

Place potatoes and water in 2-litre casserole dish. Cover and cook on P10 for 10 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Root Vegetables**, then **Start**. Drain. Mash potatoes with potato masher. Add milk and grated cheese. Mix well. Cook on P10 for 1 minute. Stir well before serving.

## PARMESAN ASPARAGUS (S)

Serves: 2 to 4

### Ingredients:

1 bunch of asparagus spears  
2 tablespoons water  
1 tablespoon butter  
1 clove garlic, crushed  
1 tablespoon grated Parmesan cheese

### Method:

Place asparagus and water in 2-litre casserole dish. Cover and cook on P10 for 2 to 4 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Vegetables**, then **Start**. Drain. Place butter and garlic in small dish and cook on P10 for 1 minute. Add drained asparagus and mix lightly. Cook on P10 for a further 1 minute. Sprinkle Parmesan cheese over asparagus. Serve.

# Vegetable Varieties

---

## HONEY GLAZED CARROTS (S)

---

Serves: 4 to 6

### Ingredients:

500 g	carrots (approximately 4)
2 tablespoons	brown sugar
2 teaspoons	butter
2 tablespoons	honey

### Method:

Peel and thinly slice carrots. Combine all ingredients in 2-litre casserole dish. Cover and cook on P10 for 6 to 8 minutes, stirring halfway through cooking. Serve.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Vegetables**, then **Start**.

---

## CORN ON THE COB (S)

---

Serves: 4

### Ingredients:

4	corn cobs
2 tablespoons	butter
	salt and pepper

### Method:

Place corn cobs in 3-litre casserole dish and dot with butter. Cook, covered, on P10 for 10 to 12 minutes. Stand, covered, for 5 minutes. Season with salt and pepper.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Vegetables**, then **Start**.



Corn on the Cob

---

## VEGETABLE FRITTATA

---

Serves: 4 to 6

### Ingredients:

400 g	potatoes, thinly sliced
1/2	red capsicum, sliced into strips
1/2	green capsicum, sliced into strips
1	tomato, diced
2 tablespoons	fresh basil, chopped
4	eggs
1/3 cup	sour cream
1/2 teaspoon	cracked black pepper
1/2 cup	grated tasty cheese

### Method:

Place potatoes in a 2-litre shallow dish. Cook on P10 for 5 to 7 minutes. Arrange capsicum in a circular pattern on top of potato sprinkle with tomato and basil. Beat together eggs and sour cream in a jug. Pour over vegetables. Cook on P6 for 3 to 5 minutes. Sprinkle with pepper and cheese and cook on P6 for 7 to 9 minutes.

---

## STUFFED CAPSICUMS

---

Serves: 4

### Ingredients:

1 cup	cooked rice
1/2 teaspoon	mixed herbs
1 small	onion, finely chopped
1 cup	finely chopped ham or chicken
1/4 cup	cream
	salt and pepper to taste
4	medium sized green capsicums,
	remove tops and seeds
1/2 cup	grated tasty Cheddar cheese
	paprika

### Method:

Combine rice, herbs, onion, meat, cream, salt and pepper. Mix well. Fill capsicums. Top with grated cheese. Cook in 2-litre casserole dish, uncovered, on P10 for 5 to 7 minutes. Serve sprinkled with paprika.

---

## CABBAGE HAM AND ONION (S)

---

Serves: 6

### Ingredients:

500 g	cabbage, shredded
2 tablespoons	water
1	onion, finely chopped
1 tablespoon	butter
125 g	ham, finely chopped
	salt and pepper

### Method:

Place cabbage and water in 3-litre casserole dish. Cover and cook on P10 for 8 to 10 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Vegetables**, then **Start**.

Drain and set aside. Place onion and butter in 1-litre casserole dish and cook on P10 for 2 to 3 minutes. Add onion mixture and ham to cabbage and mix well. Return to oven and cook on P10 for 2 to 3 minutes. Season with salt and pepper. Serve.



# Vegetable Varieties

## POTATO CASSEROLE

Serves: 4 to 6

Recipe Prompting

### Ingredients:

750 g	peeled and sliced potatoes
1 cup	sour cream
1/4 cup	milk
3	spring onions, sliced
2	bacon, rashers chopped
1/2 cup	grated cheese

### Method:

Combine potatoes, sour cream and milk in 2-litre casserole dish. Cook on P10 for 15 to 18 minutes. Top with spring onions, bacon and cheese. Cook on P10 for 5 to 7 minutes.

## SAUTÉ MUSHROOMS (S)

Serves: 4 to 6

### Ingredients:

1 tablespoon	butter
400 g	mushrooms
1	clove garlic, crushed
	salt and pepper
2 tablespoons	chopped parsley

### Method:

Place butter in 2-litre casserole dish and cook on P10 for 30 to 40 seconds. Add mushrooms, garlic, salt, pepper and parsley. Cover and cook on P10 for 3 to 4 minutes. Stir halfway through cooking.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Vegetables**, then **Start**.

## HERBED VEGETABLES (S)

Serves: 4 to 6

Recipe Prompting

### Ingredients:

200 g	sliced snow peas
200 g	sliced carrots
200 g	sliced zucchini
2 tablespoons	chopped fresh parsley

### Method:

Place snow peas, carrots and zucchini in 2-litre casserole dish. Cover. Cook on P10 for 5 to 7 minutes, stirring once during cooking. Sprinkle with parsley. Serve.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Vegetables**, then **Start**.

### HINT:

Wrap jacket potatoes in foil after cooking. They will retain their heat for about 15 to 20 minutes.

## STUFFED TOMATOES

Serves: 2

### Ingredients:

2	tomatoes (large)
1/4 cup	fresh breadcrumbs
1/2 cup	grated cheese
4	spring onions, finely sliced
1 tablespoon	finely chopped parsley
	salt and pepper
1/4 cup	extra grated cheese

### Method:

Cut tops off tomatoes. Scoop out pulp of tomato with a teaspoon. Mix pulp with remaining ingredients, except extra cheese. Spoon mixture back into tomato shells. Sprinkle tomatoes with extra cheese. Place tomatoes in 2-litre casserole dish and cook on P10 for 2 to 3 minutes. Serve.

**Tip:** To cook 4 stuffed tomatoes, cook on P10 for 6 to 8 minutes.

## VEGETABLE CURRY

Serves: 4

Recipe Prompting

### Ingredients:

1	onion, sliced
2 tablespoons	green curry paste
3 cups	sliced vegetables
1 can (440 g)	chick peas, drained
1 cup	coconut milk
1 tablespoon	lemon juice
1 tablespoon	soy sauce
1/2 cup	chopped nuts

### Method:

Place onion and curry paste in 3-litre casserole dish. Cook on P10 for 2 minutes. Add vegetables, chick peas, coconut milk, lemon juice and soy sauce. Cook on P10 for 6 to 8 minutes. Sprinkle with chopped nuts. Serve with jasmine rice.

## ZUCCHINI AND TOMATOES (S)

Serves: 6 to 8

### Ingredients:

2 tablespoons	butter
500 g	zucchini, finely sliced
350 g	tomatoes, finely sliced (approx. 2)
2	onions, finely sliced
1	garlic clove, crushed
1 teaspoon	oregano
	salt and pepper to taste

### Method:

Place all ingredients in covered 2-litre casserole dish. Cook on P10 for 4 to 5 minutes, stir halfway during cooking. Serve hot, or cold as a salad.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Vegetables**, then **Start**.

# Rice, Pasta and Cereal

## Directions for Cooking Rice and Other Grains by Microwave

Follow directions in chart for recommended dish size, amounts of water and cooking time. Add grain to boiling water. Add salt and butter according to package directions. Cook on P10 for time

recommended in chart. Allow to stand, covered, before serving. For special rice, substitute beef or chicken stock for water. Add cooked onion, mushrooms or crumbled bacon before serving.

ITEM	CONTAINER	AMOUNT OF BOILING WATER	APPROX. TIME TO COOK GRAIN on P10 UNCOVERED (in minutes)	STANDING TIME (in minutes)
RICE				
Quick Cook Brown (1 cup)	4-litre dish	2 $\frac{1}{3}$ cups	15 to 18	5
Brown (1 cup)	4-litre dish	3 cups	25 to 30	10
Long Grain (1 cup)	3-litre dish	2 cups	12 to 14	5
Short Grain (1 cup)	3-litre dish	2 cups	12 to 14	5
Jasmine (1 cup)	3-litre dish	2 cups	12 to 14	5

## Directions for Cooking Pasta by Microwave

Follow directions in chart for recommended dish size, amount of water and cooking time. Boil water, with 1 teaspoon salt and 1 tablespoon oil. Add pasta and cook for time recommended in chart. Cook on

P10. Test pasta for desired cooking before adding more time. Slightly undercook pasta that will be heated again in casserole. Stir and let stand, uncovered, 5 minutes.

ITEM	CONTAINER	AMOUNT OF BOILING WATER	APPROX. TIME TO COOK PASTA on P10 UNCOVERED (in minutes)	STANDING TIME (in minutes)
Dried Fettuccine (250 g)	4-litre dish	6 cups	10 to 12	5
Elbow Macaroni, shells, etc. (250 g)	3-litre dish	4 cups	12 to 14	5
Fresh Spaghetti, Fettuccine (375 g)	4-litre dish	6 cups	6 to 8	5
Dried Spaghetti (250 g)	4-litre dish	4 cups	12 to 14	5
Fresh Tortellini, Ravioli (250 g)	4-litre dish	4 cups	7 to 9	5

Drain pasta after standing.

## Directions for Cooking Hot Cereal by Microwave

Combine  $\frac{1}{4}$  cup of quick cooking oats, pinch salt and  $\frac{2}{3}$  cups hot tap water in a breakfast bowl.



Cook on P7 for 1 to 2 minutes, stirring halfway through cooking.



Let stand, 1 to 2 minutes, before serving. Top as desired with sugar or spices.

# Rice, Pasta and Cereal

## PAELLA

Serves: 6 to 8

### Ingredients:

500 g	mussels
¼ cup	water
1	green capsicum, sliced
1	red capsicum, sliced
2	onions, sliced
1	clove garlic, crushed
2 tablespoons	butter
2 cups	long grain rice
1 can (440 g)	peeled tomatoes, roughly chopped
2 cups	hot chicken stock
	pinch saffron powder
1½ cups	cooked diced chicken
200 g	peeled green prawns

### Method:

Place mussels and water in 3-litre dish. Cover and cook on P7 for 3 to 5 minutes. Set aside. Place capsicum, onion, garlic and butter into 4-litre dish and cook on P10 for 4 to 5 minutes. Add rice and stir well. Cook on P10 for 2 to 4 minutes. Stir in tomatoes, hot chicken stock and saffron. Cook on P10 for 16 to 18 minutes. Stir in chicken, prawns and mussels. Cook on P7 for 4 to 6 minutes. Stand for 10 minutes before serving.

## CREAMY BACON SAUCE (S)

Makes: Approximately 300 ml

Recipe Prompting

### Ingredients:

1	onion, chopped
3	bacon rashers, chopped
1 teaspoon	minced garlic
300 ml	cream
¼ cup	Parmesan cheese
	pepper
2 tablespoons	chopped fresh parsley
¼ cup	chicken stock

### Method:

Place onion, bacon and garlic in 2-litre casserole dish. Cook on P10 for 4 to 5 minutes. Add cream, Parmesan cheese, pepper, parsley and stock. Mix well. Cook on P10 for 3 to 4 minutes. Serve with cooked Fettuccine.

### To cook by Sensor Cook:

Place onion, bacon and garlic in a 2-litre casserole dish. Cook on P7 for 4½ minutes. Add remaining ingredients. Cover with plastic wrap. Press **Sauce**, then **Start**.

## FRIED RICE

Serves: 4

### Ingredients:

1 tablespoon	sesame oil
1	clove garlic, crushed
1 cm	piece of green ginger, finely chopped
1	small carrot, finely chopped
1	stick celery, sliced
½	green or red capsicum, cut in strips
4	spring onions, chopped
2	eggs
	black pepper
1	small can prawns
1 tablespoon	soy sauce
6 cups	cooked rice

### Method:

Place oil, garlic and ginger in large shallow dish and cook on P10 for 1 to 2 minutes. Add carrot, celery and capsicum. Cook a further 3 minutes on P10. Break eggs into small dish, add pepper to taste, mix well and cook on P7 for 1½ to 2 minutes. Slice into thin strips. Add eggs plus all remaining ingredients to vegetable mixture. Stir well and cook on P10 for 3 to 5 minutes to heat thoroughly. Serve.

**Note:** 1 cup uncooked rice will yield 2 cups cooked rice.



Creamy Bacon Sauce with Fettuccine



# Rice, Pasta and Cereal



Pesto and Egg Noodles

## MUSHROOM AND RICOTTA LASAGNE

Serves: 4

### Ingredients:

1 tablespoon	olive oil
5 cups	mushrooms, sliced
1	onion, diced
2	cloves garlic, crushed
1 cup	milk
375 g	ricotta cheese
1/2 cup	tomato paste
1 tablespoon	fresh basil, chopped
2 tablespoons	grated parmesan cheese
9	precooked lasagne sheets
1/4 cup	grated cheese
2 tablespoons	parmesan cheese

### Method:

Place oil, mushrooms, onion and garlic in a 2 litre casserole dish and cook on P10 for 3 to 4 minutes, stirring halfway through cooking. Add half of the milk and allow to cool. In a 1 litre dish combine ricotta, tomato paste, basil, milk, parmesan. Spoon half the mushroom mixture on the base of a square casserole dish. Top with three lasagne sheets and spread with cheese mixture and top with three lasagne sheets continue with remaining mixture finishing with the cheese mixture on top. Sprinkle with grated cheese and parmesan. Cook on P7 for 15 to 20 minutes.

## VEGETABLE AND ALMOND COUSCOUS

Serves: 4 to 6

### Ingredients:

1	onion, sliced
2 cups	mixed char grilled vegetables
1 teaspoon	turmeric
1	clove garlic, crushed
500 ml	vegetable stock, warmed
2 cups	couscous
1/2 cup	toasted slivered almonds

### Method:

Place all ingredients except almonds in 3-litre casserole dish. Cook on P10 for 5 to 8 minutes. Stirring twice during cooking. Stir in almonds and allow to stand for 2 minutes covered, stir and serve.

## PESTO AND EGG NOODLES

Serves: 6 to 8

### Ingredients:

6 cups	boiling water
250 g	packet egg noodles
2	cloves garlic, crushed
1/2 cup	chopped fresh basil leaves
1 tablespoon	pinenuts, finely chopped
1/2 cup	grated Parmesan cheese
1 cup	olive oil
	salt and black pepper

### Method:

Place water in 3-litre casserole dish. Add egg noodles. Cook on P10 for 14 to 16 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap.

Press **Pasta**, then **Start**.

Mix together garlic, basil, nuts and cheese. Gradually pour in olive oil, stirring constantly. Season and stir through drained noodles.

**Tip:** Olive oil may be added to the sauce by placing all ingredients into a food processor and pouring through the opening in a constant fine stream.

## SEASONED RICE (S)

Serves: 4 to 6

### Ingredients:

1	onion, chopped
1 cup	long grain rice
1 teaspoon	thyme
2 1/2 cups	chicken stock
1/4 cup	toasted slivered almonds

### Method:

Place onion, rice, thyme and chicken stock in 3-litre casserole dish. Cook on P10 for 14 minutes. Stir, cover, and let stand for 10 minutes. Stir through slivered almonds and serve hot.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap.

Press **Rice**, then **Start**.

When oven beeps, remove plastic wrap.

# Rice, Pasta and Cereal

## CHICKEN AND MUSHROOM TAGLIATELLE (S)

Serves: 6

### Ingredients:

6 cups	boiling water
250 g	tagliatelle
30 g	butter
1	onion, chopped
1	clove garlic, crushed
2 tablespoons	flour
1/2 teaspoon	mustard
1 cup	milk
1/2 cup	cream
1 1/2 cups	diced cooked chicken
1/2 cup	grated cheese
1 1/2 cups	sliced mushrooms
2 tablespoons	Parmesan cheese
2 tablespoons	chopped parsley

### Method:

Place water and pasta in 4-litre deep sided dish. Stir and cook on P10 for 12 to 15 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap.

Press **Pasta**, then **Start**.

Allow pasta to stand, covered, while preparing sauce, then drain well. Place butter, onion and garlic in 3-litre dish and cook on P10 for 2 to 3 minutes. Add flour and mustard. Mix well. Cook on P10 for 1 to 1 1/2 minutes. Add milk and cream. Stir. Cook on P6 for 4 to 5 minutes, stirring halfway through cooking. Add chicken, mushrooms, cheeses, parsley, and drained pasta. Mix well. Cook on P6 for a further 5 minutes. Serve.

## VEGETABLE TORTELLINI (S)

Serves: 3 to 4

### Ingredients:

700 g	fresh tortellini
8 cups	boiling water

### Sauce:

2 tablespoons	butter
2 tablespoons	flour
2 cups	milk
1 cup	grated tasty cheese
1	red capsicum, finely sliced
200 g	snow peas, finely sliced
1 teaspoon	dried marjoram
1 teaspoon	cracked black pepper
2 tablespoons	Parmesan cheese
2 tablespoons	chopped parsley

### Method:

Place pasta and water in 4-litre casserole dish. Cover. Cook on P10 for 12 to 14 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap.

Press **Pasta**, then **Start**.

While pasta is cooking, prepare all ingredients for sauce. When pasta is cooked, allow to stand covered. Drain well. Place butter and flour in 3-litre casserole dish and cook on P10 for 30 to 40 seconds. Slowly blend in milk. Cook for a further 3 to 4 minutes. Stir once during cooking. Add prepared vegetables, marjoram, pepper and cheese. Cook on P10 for 2 minutes. Drain pasta and mix through sauce. Serve topped with Parmesan cheese and chopped parsley.

## FRAGRANT COCONUT RICE (S)

Serves: 4 to 6

Recipe Prompting

### Ingredients:

1	onion, chopped
1 1/2 cups	long grain rice
500 ml	chicken stock
250 ml	coconut milk
1 teaspoon	turmeric

### Method:

Place all ingredients in 3-litre casserole dish. Stir. Cook on P10 for 15 to 18 minutes. Cover and let stand 10 minutes before serving.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap.

Press **Rice**, then **Start**.

When oven beeps, remove plastic wrap, stir.

## SPAGHETTI WITH CHILLI TOMATO SAUCE (S)

Serves: 4

### Ingredients:

250 g	spaghetti
4 cups	boiling water
1 tablespoon	olive oil
1	onion, finely chopped
2	cloves garlic, crushed
1 can (425 g)	crushed tomatoes
2 teaspoons	crushed chillies
2 teaspoons	mixed dried herbs
	cracked (ground) black pepper

### Method:

Place spaghetti and water in 3-litre casserole dish. Cook on P10 for 12 to 14 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap.

Press **Pasta**, then **Start**.

Stand, covered, for 2 minutes. Drain. Place oil, onion and garlic in 4-cup jug. Cook on P10 for 1 to 2 minutes. Add tomatoes, chillies, herbs and pepper. Stir until combined. Cover and cook on P7 for 10 to 15 minutes, stirring halfway through cooking. Serve with spaghetti.

## CREAMY TUNA PENNE (S)

Serves: 4

### Ingredients:

250 g	Penne
4 cups	boiling water
1	medium onion, diced
2 cups	mixed sliced vegetables
1 can (240 g)	tuna, reserve liquid
2 tablespoons	Parmesan cheese
1 tablespoon	dried thyme
1 tablespoon	lemon juice
1/2 cup	sour cream
	cracked black pepper

### Method:

Place Penne and water in large casserole dish. Cook on P10 for 10 to 14 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap.

Press **Pasta**, then **Start**.

Stand, covered, for 2 minutes. Drain. Place onion in 4-cup jug. Cook on P10 for 50 to 60 seconds. Add mixed vegetables. Cook on P10 for 2 to 3 minutes. Stir in tuna and reserved liquid, add remaining ingredients and stir until combined. Cook on P7 for 2 to 3 minutes. Place pasta in a serving bowl and pour over sauce to serve.

# Cakes, Desserts and Slices

## BUTTERSCOTCH PUDDING (S)

Serves: 4 to 6

### Ingredients:

1 can (400 g)	sweetened condensed milk
30 g	butter
1 teaspoon	vanilla essence
1/2 cup	milk
3/4 cup	self raising flour, sifted
1 cup	brown sugar
1/2 cup	hot tap water

### Method:

Place condensed milk in 2-litre casserole dish. Cook on P5 for 5 to 6 minutes, stirring twice during cooking. Stir in butter, vanilla essence and milk. Stir until butter is melted. Cool slightly. Add milk mixture to sifted flour. Mix well. Pour mixture into 2-litre casserole dish. Sprinkle top with brown sugar and gently pour hot tap water over mixture. Cook on P10 for 5 to 7 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Dessert**, then **Start**.

## CHOCOLATE SELF SAUCING PUDDING (S)

Serves: 4

### Ingredients:

1 cup	self raising flour
1 tablespoon	cocoa powder
1/3 cup	caster sugar
1/2 cup	milk
1 teaspoon	vanilla essence
100 g	chocolate
30 g	butter
3/4 cup	brown sugar
2 tablespoons	cocoa, extra
3/4 cup	water

### Method:

Sift flour and cocoa into 2-litre bowl. Add sugar, milk and vanilla essence. Mix well. Place chocolate and butter in 2-cup pyrex jug and cook on P7 for 1 to 2 minutes. Stir and add to mixture. Mix well. Spread mixture into base of 2-litre casserole dish. Combine brown sugar, cocoa and water in 2-cup jug. Pour evenly over pudding. Cook on P10 for 4 to 6 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Dessert**, then **Start**.

### HINT:

#### TO MELT CHOCOLATE:

Place 100 g broken chocolate in 4-cup glass jug and heat on P5 for 1 to 2 minutes. As chocolate holds its shape after heating, stir and stand before adding extra cooking time.

## PEAR CUSTARD (S)

Serves: 6

### Ingredients:

825 g	pear halves, drained
2 tablespoons	plain flour
1/3 cup	caster sugar
3	eggs
1 teaspoon	vanilla essence
1 cup	milk
1 teaspoon	cinnamon

### Method:

Grease 20 cm pyrex dish. Place pear halves in dish. Set aside. Place flour, sugar, eggs and vanilla essence in bowl. Beat until combined. Beat in milk and pour mixture over pears. Sprinkle with cinnamon. Cover dish with plastic wrap and cook on P10 power for 7 to 9 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Dessert**, then **Start**.

## CHOCOLATE MOUSSE

Serves: 4

### Ingredients:

125 g	dark chocolate
1 tablespoon	brandy
2	eggs, separated
300 ml	cream, whipped

### Method:

Break chocolate into small pieces. Place in a microwave safe bowl and cook on P7 for 1 to 1 1/2 minutes. Add brandy and egg yolks. Beat until smooth. Fold cream into chocolate mixture. Beat egg whites until stiff peaks form. Gently fold into chocolate mixture and spoon into one large or 4 individual serving dishes. Refrigerate until set.

## CHOCOLATE BROWNIES

Serves: 1 x 20 cm

square slice pan

*Recipe Prompting*

### Ingredients:

125 g	butter
200 g	chocolate
1 cup	caster sugar
1 teaspoon	vanilla essence
2	eggs
1 cup	plain flour

### Method:

Grease and line 20 cm square pyrex dish. set aside. Melt butter and chocolate in 2-litre dish on P7 for 1 1/2 minute. Stir in sugar, vanilla essence, eggs and flour. Spread into prepared dish. Cook on P7 for 7 to 8 minutes. Refrigerate until cold. Cut into squares.

# Cakes, Desserts and Slices

## QUICK MIX CHOCOLATE CAKE

Serves: 4 to 6

### Ingredients:

1 cup	self-raising flour
1 cup	caster sugar
2 tablespoons	cocoa
3 tablespoons	butter, softened
2	eggs
1/3 cup	milk

### Method:

Sift all dry ingredients into a bowl. Add butter, eggs and milk. Beat with wire whisk for 1 to 2 minutes. Grease 2-litre plastic ring mould and line with paper towel. Pour mixture into mould and cook on P7 for 5 to 7 minutes. Stand, covered, for 5 minutes before turning out. Cool on wire rack.

**Tip:** To soften butter cook on P5 for 10 to 20 seconds.

## SULTANA CAKE

Serves: 4 to 6

### Ingredients:

100 g	butter
1 cup	sultanas
1 cup	brown sugar
1 cup	milk
1	egg, beaten
2 cups	self-raising flour

### Method:

Place butter, sultanas, brown sugar and milk in heat resistant mixing bowl. Cook on P10 for 3 to 4 minutes. Stir halfway through cooking. Allow to cool. Add egg and flour. Pour batter into base of lined 20 cm round dish. Cook on P6 for 9 to 11 minutes. Let cool, loosely covered, with plastic wrap on wire rack.

## BANANA LOAF

Serves: 4 to 6

### Ingredients:

90 g	butter
3/4 cup	brown sugar
1	egg
2	ripe bananas, mashed well
3/4 cup	grated carrot
1 1/2 cups	self-raising flour
1/3 cup	milk

### Method:

Cream butter and sugar until light and fluffy. Add egg and beat well. Add banana and carrot. Add sifted flour and milk to mixture alternately. Mix until well combined. Grease and line with grease proof paper, 20 cm x 10 cm loaf dish. Pour batter into dish and cook on P6 for 15 to 18 minutes. Stand, covered, with plastic wrap on wire rack to cool.

**Tip:** To prevent corners from overcooking, cover ends carefully with foil.

## MOCHA CARROT CAKE

Serves: 4 to 6

### Ingredients:

1 cup	self-raising flour
1/2 teaspoon	bicarbonate of soda
1/2 cup	caster sugar
1/2 cup	crushed pineapple
1 cup	grated carrot
3/4 cup	chopped pecan nuts
60 g	chocolate
2	eggs
1/3 cup	oil

### Icing

60 g	cream cheese
20 g	butter
1 1/2 cups	icing sugar
1 tablespoon	lemon juice
1/4 cup	chopped pecan nuts

### Method:

Place flour, bicarbonate of soda, sugar, pineapple, carrot and pecan nuts in bowl. Place chocolate into a small bowl and cook on P5 for 40 to 60 seconds. Stir halfway through. Add melted chocolate, eggs and oil to flour mixture. Mix until well combined. Grease a microwave safe ring dish. Pour cake mixture into dish and cook on P7 for 6 to 8 minutes. Let stand, covered, for 5 minutes before turning out to cool. Beat together all icing ingredients except pecan nuts. Spread icing over cooled cake and sprinkle with pecan nuts.

## BOILED FRUIT CAKE

Serves: 6 to 8

### Ingredients:

1 can (435 g)	crushed pineapple and juice
500 g	mixed dried fruit
1 tablespoon	sherry
1 cup	brown sugar
125 g	butter
1 cup	plain flour
1 cup	self-raising flour
1 teaspoon	mixed spice
1 teaspoon	baking soda
2	eggs, lightly beaten
1/4 cup	extra sherry or brandy

### Method:

Combine pineapple, fruit, sherry, sugar and butter in 2-litre casserole dish. Cook on P10 for 4 to 6 minutes. Stand until cool. Fold in flours, spice, baking soda and beaten eggs. Place batter in a base lined 20 cm souffle dish. Cook on P6 for 16 to 18 minutes. Turn out and sprinkle with extra sherry or brandy. Cover loosely with plastic wrap and allow to cool.

# Cakes, Desserts and Slices

## APRICOT AND RASPBERRY CRISP (S)

Serves: 4 to 6

### Ingredients:

1 can (850 g)	apricots, drained
400 g	frozen raspberries
1 cup	plain flour
1/2 cup	brown sugar
1 teaspoon	cinnamon
1 cup	pecans, chopped
1 cup	shredded coconut
2 cups	toasted muesli
125 g	butter

### Method:

Place apricots and raspberries in the base of 2-litre casserole dish. Place remaining ingredients (except butter) in a mixing bowl. Melt butter in 2-cup jug on P10 for 40 to 50 seconds. Combine melted butter with dry ingredients and mix well. Crumble mixture over top of fruit. Cook on P10 for 10 to 12 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Dessert**, then **Start**.

## LEMON PINEAPPLE CHEESECAKE

Serves: 6 to 8

### Ingredients:

125 g	butter
180 g	sweet plain biscuits, crushed
250 g	cream cheese, softened
1/3 cup	sugar
1	lemon (juice and rind)
2	eggs
1/3 cup	flour
1 can (450 g)	crushed pineapple, drained

### Method:

Place butter in 1-litre dish. Cook on P6 for 1 to 2 minutes. Add biscuit crumbs. Mix well. Press mixture into 23 cm pie plate. Refrigerate while making filling. Place cream cheese into mixing bowl. Add sugar. Mix well. Add juice and rind of lemon, eggs and flour. Mix well. Fold through pineapple. Pour filling into chilled biscuit base. Elevate pie dish and cook on P3 for 18 to 20 minutes. Refrigerate several hours before serving.

### HINT:

#### TO BLANCH NUTS:

Place 1-cup of nuts in pie plate. Cover with hot tap water and heat on P10 for 2 to 3 minutes. Rinse in cold water and rub between sheets of paper towel to remove skins.

## APPLE CRUMBLE (S)

Serves: 4

### Ingredients:

1 can (780 g)	pie apples
1/2 cup	rolled oats
1/4 cup	plain flour
1/2 cup	desiccated coconut
1/2 cup	brown sugar
1 teaspoon	cinnamon
60 g	butter

### Method:

Place apples in the base of 1-litre casserole dish. Place remaining ingredients (except butter) in mixing bowl. Melt butter in 2-cup jug on P6 for 40 to 60 seconds. Combine melted butter with dry ingredients and mix well. Spread evenly over apples. Cook on P10 for 5 to 8 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Dessert**, then **Start**.

## PEACH CRUMBLE (S)

Serves: 6 to 8

Recipe Prompting

### Ingredients:

125 g	butter
1 cup	flour
1/2 cup	caster sugar
2 cups	toasted muesli
1 cup	shredded coconut
1 teaspoon	cinnamon
2 cans (810 g)	peach slices, drained

### Method:

Place butter in 2-litre jug. Cook on P7 for 1 minute. Add flour, sugar, muesli, coconut and cinnamon, stir until combined. Place peaches into 1-litre casserole dish. Place crumble mixture on top of peaches and cook on P10 for 10 to 12 minutes. Serve with cream or ice cream.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Dessert**, then **Start**.

## PEACH COBBLER (S)

Serves: 4 to 6

### Ingredients:

1 can (810 g)	sliced peaches
1	packet butter cake mix
1/2 cup	toasted coconut
70 g	butter, melted

### Method:

Arrange peaches on the base of 20 cm casserole dish. Combine cake mix, toasted coconut and butter. Sprinkle cake mixture over peaches. Cook on P10 for 6 to 8 minutes.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Dessert**, then **Start**.



# Cakes, Desserts and Slices

## PEARS WITH CARAMEL SAUCE

Serves: 6 to 8

### Ingredients:

#### Filling:

½ cup	dried apricots
¼ cup	currants
¼ cup	slivered almonds
1 tablespoon	brown sugar
2 tablespoons	peanut butter

#### Sauce:

2 tablespoons	butter
⅓ cup	brown sugar
125 ml	cream
3 teaspoons	cornflour
1 tablespoon	water
4	pears
	juice of ½ lemon

### Method:

Place all filling ingredients into small bowl and mix well. Place butter and brown sugar into large jug and cook on P7 for 2 minutes. Beat in cream. Combine cornflour and water. Stir into sauce. Cook on P7 for 3 minutes, stir halfway through. Peel and cut pears in half, remove cores and brush with lemon juice. Place pears into large flat dish. Divide filling mixture evenly and spread over pears. Pour sauce over and cook on P7 for 3 to 5 minutes.

## BUTTERSCOTCH CUSTARD AND FRUIT

Serves: 6

### Ingredients:

400 g	apples, peeled, cored and sliced
½ cup	chopped dried apricots
½ teaspoon	cinnamon

### Custard:

½ cup	brown sugar
2 tablespoons	custard powder
1 cup	milk
2 tablespoons	butter
1	egg, lightly beaten
2 tablespoons	toasted slivered almonds

### Method:

Combine fruit and cinnamon. Place into 6 individual ramekin dishes. Set aside. Combine sugar and custard powder. Gradually stir in milk and cook on P10 for 2 to 3 minutes, stirring halfway through cooking. Add butter and egg, beat until smooth. Pour equal amounts of custard over fruit and sprinkle with almonds. Cook on P10 for 4 to 6 minutes.

## BAKED APPLES

Serves: 4

### Ingredients:

4	large cooking apples
3 tablespoons	butter
4 tablespoons	brown sugar
100 g	chopped raisins
2 tablespoons	chopped pecans
4 tablespoons	golden syrup

### Method:

Core and score the skin around the middle of apple. Cream butter and sugar until soft. Add raisins and pecans. Fill the centre of apples with stuffing. Place into shallow casserole dish. Pour one tablespoon of golden syrup over each apple. Cook on P10 for 8 to 10 minutes or until soft. Let stand, 2 to 3 minutes, before serving.

## CINNAMON POACHED PEARS

Serves: 4

Recipe Prompting

### Ingredients:

½ cup	water
¼ cup	caster sugar
½ teaspoon	cinnamon
4	pears, peeled and sliced

### Method:

Combine water, caster sugar and cinnamon in 1-litre jug. Cook on P10 for 2 minutes. Place the pears in 2-litre dish. Pour over syrup and cover. Cook on P10 for 6 to 8 minutes.



Butterscotch Custard and Fruit

# Cakes, Desserts and Slices



Christmas Pudding

---

## CHRISTMAS PUDDING

---

Serves: 10 to 12

### Ingredients:

250 g	sultanas
250 g	raisins, chopped
125 g	currants
125 g	dates, chopped
100 g	mixed glacé fruit, chopped
100 g	glacé cherries
60 g	mixed peel

### Cake Batter:

½ cup	brandy
250 g	butter
250 g	brown sugar
4	eggs
1 cup	flour, sifted
½ teaspoon	ground ginger
½ teaspoon	nutmeg
½ teaspoon	cinnamon
½ teaspoon	allspice
1 tablespoon	golden syrup
1 tablespoon	almond essence
1½ cups	fresh breadcrumbs
1 cup	canned apples

### Method:

Place all fruit in large mixing bowl and pour over brandy. The fruit can be soaked overnight for added flavour. Cream butter and sugar in large mixing bowl until light and fluffy. Add eggs (one at a time), beating gently after each addition. Add sifted flour, spices, golden syrup, almond essence, breadcrumbs and apples. Mix well. Add cake mixture to fruits and fold until well combined. Grease a 2.5-litre pudding bowl and line with 2 strips of greaseproof paper to form a cross in the base of the bowl. Pour mixture into bowl and smooth over top. Cook on P3 for 40 minutes. Shield edges with strips of foil secured with string, and continue to cook on P3 for 30 minutes. Let stand, loosely covered, for 10 minutes before serving.

---

## STEAMED JAM PUDDING (S)

---

Serves: 4

### Ingredients:

2 tablespoons	jam
100 g	butter
⅔ cup	caster sugar
2	eggs
¾ cup	self raising flour
¼ cup	milk

### Method:

Spoon jam into bottom of 2-litre pyrex dish. Cream butter and sugar in separate bowl until light and fluffy. Add eggs (one at a time), beating well after each addition. Fold in flour alternately with milk. Mix until well combined. Pour mixture over jam. Smooth top and cook on P10 for 5 to 6 minutes. Let stand, covered, for 5 minutes before serving.

### To cook by Sensor Cook:

Prepare as above. Cover with plastic wrap. Press **Dessert**, then **Start**.

---

## CHOCOLATE PÂTÉ

---

Makes 24 x 8 cm loaf tin

### Ingredients:

300 g	dark chocolate
1 can (400 g)	condensed milk
1 cup	brazil nuts
½ cup	hazel nuts
⅓ cup	glace cherries
½ cup	sultanas

### Method:

Break chocolate into pieces and place with condensed milk in a 2-litre dish. Cook on P7 for 3 to 5 minutes, stirring twice during cooking. Fold through nuts and fruits. Line a 24 x 8 cm loaf tin with foil and pour in the mixture. Chill for several hours or until set. Turn out and serve thinly sliced.

# Cakes, Desserts and Slices

## APRICOT HONEY SLICE

Makes: 1 x 18 x 28 cm Dish

### Ingredients:

185 g	butter
2 tablespoons	honey
250 g	crushed honey snap biscuits
½ cup	chopped pecans
½ cup	coconut
1 cup	chopped dried apricots

### Method:

Grease and line 18 x 28 cm dish. Place butter and honey in 2-litre dish. Cook on P10 for 1 to 2 minutes. Add remaining ingredients. Stir until combined. Spread evenly into prepared dish. Refrigerate and cut into squares when cool.

## CHOCOLATE PEANUT BUTTER SQUARES

Makes: one 30 x 20 cm Dish

### Ingredients:

60 g	butter
½ cup	brown sugar
1½ cups	icing sugar
1 cup	peanut butter
1 cup	crushed nuts

### Topping:

200 g	dark chocolate
20 g	butter

### Method:

Grease and foil line a 30 x 20 cm pan. Set aside. Place butter in a 2 litre dish. Soften on P5 for 10 to 20 seconds. Add brown sugar, icing sugar, peanut butter and crushed nuts. Mix until combined. Press into the base of the prepared pan.

### To prepare topping:

Place chocolate and butter into a small dish. Cook on P7 for 1 to 2 minutes. Stir halfway through cooking. Spread over top of prepared base. Refrigerate until cold and cut into squares.

### HINT:

#### TO SOFTEN DRIED FRUIT:

Place 1 cup dried fruit into small bowl. Add 2 tablespoons of water. Cover with plastic wrap and cook on P10 for 2 to 3 minutes.

## ROCKY ROAD

Makes: 1 x 20 cm square slice

### Ingredients:

250 g	dark or milk chocolate
40 g	butter
250 g	packet marshmallows, halved
1 cup	unsalted peanuts
1½ cups	flaked coconut
60 g	glacé cherries, halved

### Method:

Melt chocolate and butter in large bowl on P6 for 2 to 3 minutes. Add remaining ingredients and mix well. Pour into greased 20 cm square pan. Refrigerate until set. Cut or break into pieces to serve.

## DATE AND WALNUT FUDGE

Makes: 25 slices

### Ingredients:

250 g	sweet biscuits, crushed
50 g	walnuts, chopped
100 g	dates, chopped
2 teaspoons	cocoa
2 teaspoons	coffee powder
175 g	dark chocolate, broken into pieces
1 can (400 g)	condensed milk
1 teaspoon	vanilla essence

### Method:

Grease and line 20 cm square dish. Mix biscuit crumbs, walnuts and dates in bowl. Place remaining ingredients in separate bowl and cook on P7 for 2 to 3 minutes. Stir well. Pour melted mixture into dry ingredients and mix well. Press mixture into prepared dish. Smooth top and chill until set. Cut into squares.



# Cakes, Desserts and Slices

## BREAD AND BUTTER PUDDING

Serves: 4 to 6

### Ingredients:

1/3 cup	sultanas
1/4 cup	rum
70 g	butter, softened
10	slices fruit loaf
4	eggs
1 1/3 cups	milk
300 ml	cream
1/3 cup	brown sugar

### Method:

Grease a 4 cup microwave oven safe dish. Combine sultanas and rum in a small bowl. Heat on P10 for 1 minute. Set aside. Butter both sides of all bread slices. Remove the crusts and cut into triangles. Beat together eggs, milk and cream, add liquid from drained sultanas. Layer one third of the bread evenly over the base of the 4 cup dish. Sprinkle with half the sultanas and one third of the brown sugar. Repeat with another layer of bread, sultanas and brown sugar and top with the remaining bread. Pour about two thirds of the egg mixture over the bread and allow to stand for 20 minutes until the liquid is absorbed. Pour over the remaining egg mixture and sprinkle with brown sugar. Elevate on a microwave safe rack and cook on P3 for 20 to 25 minutes. Allow to stand for 10 minutes before serving with cream or ice cream.



Oatmeal Cookies

## CHOCOLATE FUDGE

Makes: 1 x 20 cm square slice

Recipe Prompting

### Ingredients:

300 g	chocolate pieces
1 can (400 g)	condensed milk
1 cup	chopped peanuts

### Method:

Grease 20 cm square dish. Set aside. Place chocolate and condensed milk in 1-litre jug. Cook on P7 for 2 minutes. Stir. Cook on P5 for 2 minutes. Add nuts and place in prepared dish. Refrigerate and cut into squares when cold.

## ORANGE TRUFFLES

### Ingredients:

200 g	dark chocolate bits
30 g	butter
1/4 cup	evaporated milk
1/3 cup	icing sugar, sifted
1/4 cup	chopped nuts
1 tablespoon	orange liqueur
1/2 cup	drinking chocolate powder

### Method:

Place chocolate bits and butter in a 1-litre dish. Cook on P7 for 1 to 2 minutes, stirring halfway through cooking. Add evaporated milk, stir until combined. Stir in icing sugar, nuts and orange liqueur. Refrigerate covered for 1 hour. Roll tablespoons mixture into small balls. Toss in drinking chocolate powder. Refrigerate until serving.

## OATMEAL COOKIES

Makes: approximately 48 cookies

### Ingredients:

125 g	butter
1 cup	brown sugar
1	egg
1/2 teaspoon	cinnamon
1 teaspoon	baking powder
3/4 cup	plain flour
1 1/2 cups	rolled oats

### Method:

Cream butter and sugar until light and fluffy. Add egg and mix well. Fold in remaining ingredients and mix well. Place teaspoon of mixture onto large greased heatproof dinner plate (approximately 6 at a time). Cook on P7 for 1 1/4 to 1 1/2 minutes. Allow to cool slightly on plate before removing. Cool completely on wire rack. Repeat above procedure until all mixture is used.

# Micro-made Extras

## STRAWBERRY LIQUEUR

Makes: 750 ml

### Ingredients:

500 g	sugar
500 g	washed and hulled strawberries
600 g	brandy or whisky

### Method:

Place sugar and strawberries in 4-litre dish. Stir well. Cook on P10 for 15 minutes. Stir in brandy or whisky. Pour into an airtight container. Store refrigerated for 2 to 3 months. Serve in liqueur glasses or as a tall drink with ice cubes and soda water.

## COFFEE LIQUEUR

Makes: 750 ml

### Ingredients:

1½ cups	hot tap water
2 cups	sugar
⅓ cup	freeze dried coffee
3 teaspoons	vanilla essence
2 cups	vodka

### Method:

Pour water into 4-litre casserole dish. Add remaining ingredients (except vodka) and stir well. Cook on P6 for 30 to 35 minutes. Cool slightly and mix in vodka. Pour into an airtight container and stand 4 days before serving. Serve in liqueur glasses.

## IRISH COFFEE

Makes 1

### Ingredients:

¾ cup	ready made coffee
1	nip whisky
	whipped cream

### Method:

Place coffee and whisky in cup. Heat on P10 for 1½ to 2 minutes, until nearly boiling. Pipe whipped cream on top and serve.

**Note:** 2 cups will take approximately 3 minutes to heat.

### HINT:

#### STEAMED HAND TOWELS:

For an added touch at dinner parties, steam your own hand towels. Saturate in cold water, wring and place on plate. Heat on P10 for 1 to 2 minutes.



Spicy Chocolate Drink

## SPICY CHOCOLATE DRINK

Serves: 2

### Ingredients:

2 teaspoons	coffee powder
2 teaspoons	drinking chocolate
½ teaspoon	cinnamon
2 teaspoons	sugar
2 cups	milk

### Method:

Blend coffee, drinking chocolate, cinnamon and sugar in 4-cup heatproof jug. Gradually stir in milk. Cook on P6 for 6 minutes. Stirring halfway. Pour into coffee mugs. Decorate with whipped cream or marshmallow, if desired.

## PEPPERMINT COOLER

Serves: 4

### Ingredients:

3	peppermint tea bags
4 cups	cold water
	juice of ½ lemon
	ice blocks
4 slices	lemon or lime
	mint leaves to garnish

### Method:

Place tea bags and water in large jug. Cook on P10 for 10 to 12 minutes. Stand for 2 to 3 minutes, then discard tea bags. Cool. Add lemon juice. Refrigerate until well chilled. Serve in long glasses with ice blocks. Garnish with lemon or lime slices and mint leaves.

# Micro-made Extras



Stirred Custard

---

## LEMON BUTTER

Makes: 1 cup (250 ml)

### Ingredients:

½ cup	lemon juice
1 tablespoon	lemon rind
⅓ cup	sugar
3	egg yolks
1 tablespoon	butter
1 tablespoon	cornflour

### Method:

Blend all ingredients in 4-cup glass jug. Cook on P6 for 4 to 5 minutes, stirring every minute. Pour into hot sterilised jars and seal immediately.

---

## TOMATO CHUTNEY

Makes: 3 cups (750 ml)

### Ingredients:

250 g	onion, finely chopped
1.5 kg	ripe tomato, skins removed and chopped
1 teaspoon	salt
1 teaspoon	paprika
	pinch cayenne pepper
150 ml	malt vinegar
175 g	sugar

### Method:

Place onions in 3-litre dish. Cover. Cook on P10 for 4 to 5 minutes. Add tomatoes. Cover. Cook on P10 for 5 to 6 minutes. Add salt, spices and vinegar. Stir well. Cook on P10 for 10 minutes, stirring halfway through. Add sugar, stir well and cook on P7 for 35 to 40 minutes. Stirring occasionally. Pour into sterilised jars and seal.

---

## STIRRED CUSTARD

Makes: Approximately 400 ml

### Ingredients:

3 tablespoons	sugar
2 tablespoons	custard powder
1½ cups	milk
2	egg yolks, lightly beaten
1 teaspoon	vanilla essence

### Method:

Combine sugar and custard powder in 4-cup jug. Gradually stir in milk until smooth. Cook on P6 for 4 to 5 minutes, stirring halfway through cooking. Add egg yolks and mix well. Cook on P6 for further 30 to 60 seconds. Add vanilla, stir well and serve.

---

## FRUIT MINCE

Serves: 4

### Ingredients:

250 g	mixed dried fruit
1 can (440 g)	crushed pineapple and juice
1	cooking apple peeled, cored and grated
1 cup	brown sugar
1 tablespoon	brandy
1 teaspoon	nutmeg
1 teaspoon	cinnamon
1 tablespoon	cornflour
¼ cup	water

### Method:

Combine all ingredients (except cornflour and water) in 2-litre casserole dish. Cook on P7 for 3 to 5 minutes. Blend cornflour with water and stir into fruit mixture. Cook on P10 for 4 to 6 minutes. Stir. Cool. Bottle and seal or use immediately.

---

## CUCUMBER PICKLE

### Ingredients:

2	cucumbers
2	onions, chopped
2 tablespoons	salt
250 ml	malt vinegar
⅔ cup	sugar
½ teaspoon	celery seeds
½ teaspoon	mustard seeds

### Method:

Wash cucumbers and remove ends, dice (do not peel). Place diced cucumber in bowl. Add onion and sprinkle with salt. Stand overnight. Rinse and drain cucumbers and onions. Pack into sterilised jars. Place remaining ingredients in jug and cook on P10 for 2 minutes. Stir and cook on P10 for a further 5 minutes. Pour liquid over cucumber and seal. Keep for 4 weeks before opening.



# Micro-made Extras

## CHEESE SAUCE

Makes: 1½ cups

Recipe Prompting

### Ingredients:

40 g	butter
2 tablespoons	flour
1½ cup	milk
½ cup	grated cheese

### Method:

Melt butter in 1-litre jug on P10 for 30 seconds. Add flour and mix well. Gradually stir in milk. Cook on P10 for 1 to 1½ minutes. Add cheese and cook on P10 for a further 2 to 2½ minutes. Stir and serve with vegetables of your choice.

## CARAMEL SAUCE

Makes: 2 cups

### Ingredients:

1 can (440 g)	condensed milk
¼ cup	brown sugar
2 tablespoons	golden syrup
300 ml	cream

### Method:

Combine condensed milk, brown sugar and golden syrup in 2-litre jug. Mix well. Cook on P10 for 4 to 5 minutes, stirring halfway through cooking. Add cream and stir until combined. Serve over ice cream.

## CHOCOLATE MACADAMIA NUT SAUCE

Makes: Approximately 1 cup

### Ingredients:

200 g	dark chocolate
300 ml	cream
¼ cup	macadamia nuts, chopped finely

### Method:

Place chocolate and cream in 500 ml pyrex jug. Melt on P10 for 1 to 2 minutes. Add nuts and serve hot over ice cream.

## APPLE SPREAD

Makes: 1½ cups

### Ingredients:

6	medium apples, peeled and grated
¼ cup	water
1 cup	caster sugar
2 tablespoons	lemon juice

### Method:

Place apples and water in 3-litre casserole dish. Cook covered on P10 for 6 to 7 minutes, stirring once during cooking. Add sugar and lemon juice. Cover and cook on P10 for 12 to 14 minutes. Stir once during cooking. Allow to cool, then puree until smooth. Pour into sterilised jars and seal.



Jam

## SWEET APRICOT JAM

Makes: Approximately 1 litre

### Ingredients:

750 g	dried apricots, cut in quarters
1.8 litres	water
1.3 kg	sugar
2 tablespoons	pectin

### Method:

Place apricots and water in 4-litre casserole dish. Cover and allow to stand overnight. Add sugar. Re-cover. Cook on P10 for 25 to 30 minutes, stirring halfway through cooking. Remove lid, add pectin, stir well. Cook on P10 for a further 25 to 30 minutes, stirring halfway through cooking. Allow to cool slightly before pouring into sterilised jars. Seal.

## RICH CHOCOLATE SAUCE

Makes: 1¼ cups

Recipe Prompting

### Ingredients:

200 g	chocolate pieces
300 ml	cream

### Method:

Combine chocolate and cream in 1-litre jug. Cook on P7 for 2 minutes. Mix well. Serve over ice cream.

## SWEET BERRY SAUCE

Makes: Approximately 2 cups

Recipe Prompting

### Ingredients:

½ cup	caster sugar
½ cup	water
500 g	berries
2 tablespoons	water
1 tablespoon	cornflour

### Method:

Combine sugar and water in 3-litre bowl. Cook on P10 for 2 to 3 minutes. Add berries. Cook on P10 for 3 to 4 minutes. Blend water and cornflour. Mix into berry sauce. Cook on P10 for 2 minutes. Serve hot or cold with ice cream.

# Micro-made Extras

---

## LEMON LIME CORDIAL

---

Makes: approximately 1.5 litres of undiluted cordial

### Ingredients:

10	large lemons
6	limes
4 cups	sugar
2 cups	water
2 teaspoons	citric acid

### Method:

Squeeze juice from lemons and limes. Place in a 3 to 4-litre dish with the remaining ingredients. Cook on P10 for 8 to 10 minutes. Stir 2 to 3 times during this cooking time to dissolve sugar. Cook on further 25 to 30 minutes, or until the mixture has become a syrupy consistency. Set aside to cool. Pour into bottles and seal. Store in the refrigerator and serve with cold water, soda or mineral water and fresh mint leaves if desired.

---

## HOLLANDAISE SAUCE

---

Makes:  $\frac{3}{4}$  cup

### Ingredients:

60 g	butter
2 tablespoons	lemon juice
2	egg yolks
$\frac{1}{4}$ cup	cream
$\frac{1}{2}$ teaspoon	mustard
$\frac{1}{4}$ teaspoon	salt

### Method:

Place butter in 2-cup jug. Cook on P10 for 40 seconds. Add lemon juice, egg yolks and cream. Mix well. Cook on P6 for 60 to 90 seconds. Add mustard and salt, mix until smooth. Serve with eggs, vegetables or fish dishes.

---

## MINT SAUCE

---

Makes: Approximately  $\frac{1}{4}$  cup

### Ingredients:

$\frac{1}{4}$ cup	water
1 tablespoon	sugar
2 tablespoons	brown vinegar
2 tablespoons	mint, finely chopped

### Method:

Combine all ingredients in 1-cup jug. Cook on P10 for 30 to 60 seconds. Stir well and serve with Roast Lamb.

### HINT:

#### COOKING SAUCES:

When making some sauces in the microwave oven, less liquid may be needed as less evaporation occurs with a shorter cooking time.

---

## PLAY DOUGH

---

Makes: approximately 1 cup

### Ingredients:

1 cup	plain flour
$\frac{2}{3}$ cup	water
$\frac{1}{4}$ teaspoon	food colouring
2 tablespoons	cream of tartar
1 tablespoon	oil
$\frac{1}{4}$ cup	salt

### Method:

Place all ingredients in a 2-litre dish. Cook on P10 for 3 to 5 minutes, stirring every minute. The mixture is cooked when it leaves the sides of the dish when stirred. Store in plastic wrap in the refrigerator. You may wish to adjust the amount of food colouring used depending on the colour you desire.

---

## LEMON SAUCE

---

Makes: 250 ml

### Ingredients:

1 tablespoon	butter
$\frac{1}{2}$ cup	sugar
1 cup	water
2 tablespoons	cornflour
$\frac{1}{2}$ teaspoon	grated lemon rind
2 tablespoons	lemon juice

### Method:

In 4-cup glass jug, heat butter on P10 for 20 to 30 seconds. Stir in sugar, water, cornflour, lemon rind and juice. Mix well. Heat on P10 for 3 to 4 minutes, stirring after cooking. Serve hot with chicken pieces or pork.

---

## MUSHROOM SAUCE

---

Makes:  $1\frac{1}{2}$  cups

### Ingredients:

3 tablespoons	butter
2 tablespoons	flour
1 teaspoon	soy sauce
$\frac{3}{4}$ cup	cream
1 can (190 g)	drained mushrooms or fresh mushrooms, sliced
$\frac{1}{2}$ teaspoon	curry powder
	salt and pepper to taste

### Method:

Place butter in 4-cup glass jug. Cook on P10 for 40 seconds. Add flour, soy sauce and blend to a smooth paste. Add cream and stir until smooth. Add seasonings and mushrooms. Cook on P10 for 2 to 3 minutes, stirring every minute. Serve on toast or as accompaniment to meats. Sauce can be reheated on P10 for 30 to 60 seconds.



# Index to Recipes

<b>A</b>	
Apple Crumble .....	62
Apple Spread .....	69
Apple, Baked .....	63
Apricot & Raspberry Crisp .....	62
Apricot Honey Slice .....	65
Apricot Meat Loaf .....	49
Apricot Nectar Chicken .....	44
Ardennis Style Potatoes .....	52
Asparagus, Parmesan .....	53
<b>B</b>	
Baked Apples .....	63
Baked Custard .....	32
Banana Loaf .....	61
Barbecued Marinated Spare Ribs .....	46
Beef,	
Apricot Meatloaf .....	49
Chilli .....	47
Chinese with Vegetables .....	48
Corned .....	49
French Onion Casserole .....	46
Green Thai Curry .....	46
Pepper Pot .....	48
Spaghetti Meat Sauce .....	49
Stroganoff .....	48
Beef Stroganoff .....	48
Beverages,	
Cocoa .....	30
Coffee .....	30
Coffee Liqueur .....	67
Irish Coffee .....	67
Lemon & Honey Drink .....	30
Lemon & Lime Cordial .....	70
Peppermint Cooler .....	67
Spicy Chocolate Drink .....	67
Strawberry Liqueur .....	67
Tea .....	30
Biscuits,	
Oatmeal Cookies .....	66
Boiled Fruit Cake .....	61
Bouillabaisse .....	38
Bread & Butter Pudding .....	66
Burritos, Chicken .....	42
Broccoli & Cheese Sauce .....	53
Brussels Sprouts, Savoury .....	53
Butterscotch Custard & Fruit .....	63
Butterscotch Pudding .....	60
<b>C</b>	
Cabbage Ham & Onion .....	54
Cakes,	
Banana Loaf .....	61
Boiled Fruit .....	61
Mocha Carrot .....	61
Packet Mix .....	32
Quick Mix Chocolate .....	61
Sultana .....	61
Capsicum, Stuffed .....	54
Caramel Sauce .....	69
Carrots, Honey Glazed .....	54
Cauliflower au Gratin .....	52
Cheese Sauce .....	69
Cheesy Ham Omelette .....	36
Cheesy Mashed Potatoes .....	53
Chicken,	
Apricot Nectar .....	44
Burritos .....	42
Cacciatore .....	41
Curry .....	43
Green Peppercorn .....	43
Honey Mustard Drumsticks .....	43
Honey Sesame Drumsticks .....	44
Mushroom Tagliatelle .....	59
Rolls with Honey Mustard .....	41
Potato & Casserole .....	41
Risotto .....	44
Roast .....	42
Soy & Vegetables .....	43
Spicy Curry .....	44
Thai Wings .....	42
Wings in Lemon Sauce .....	43
Chicken & Prawn Laksa .....	42
Chilli Beef .....	47
Chinese Beef & Vegetables .....	48
Chocolate Self saucing Pudding .....	60
Chocolate Brownies .....	60
Chocolate Fudge .....	66
Chocolate Macadamia Nut Sauce .....	69
Chocolate Mousse .....	60
Chocolate Pâté .....	64
Chocolate Peanut Butter Squares .....	65
Christmas Pudding .....	64
Cinnamon Poached Pears .....	63
Cocoa .....	30
Coffee .....	30
Coffee Liqueur .....	67
Corn on the Cob .....	54
Corned Beef .....	49
Crab & Corn soup .....	33
Creamed Spinach .....	52
Creamy Bacon sauce .....	57
Creamy Broccoli Soup .....	34
Creamy Tuna Penne .....	59
Cucumber Pickle .....	68
Curried Mince .....	48
Custard,	
Baked .....	32
Butterscotch & Fruit .....	63
Pear .....	60
Stirred .....	68
<b>D</b>	
Date & Walnut Fudge .....	65
Desserts,	
Apple Crumble .....	62
Apricot Raspberry Crisp .....	62
Baked Apples .....	63
Bread & Butter Pudding .....	66
Butterscotch Custard & Fruit .....	63
Butterscotch Pudding .....	60
Chocolate Mousse .....	60
Chocolate Self Saucing Pudding .....	60
Cinnamon Poached Pears .....	63
Lemon Pineapple Cheesecake .....	62
Peach Cobbler .....	62
Peach Crumble .....	62
Pear Custard .....	60
Pears with Caramel Sauce .....	63

# Index to Recipes

<b>E</b>		
Eggs,		
Cheesy Ham Omelette .....	36	
Fried .....	29	
Poached .....	29	
Scrambled .....	29	
<b>F</b>		
Fish,		
Gingered, Whole.....	39	
Lemon Pepper .....	37	
Salmon Mornay .....	37	
Salmon Steaks with Lime Butter.....	38	
Smoked Red Cod .....	38	
Whole Stuffed .....	39	
Fragrant Coconut Rice .....	59	
Frankfurters .....	35	
French Onion Beef Casserole .....	46	
Fried Eggs.....	29	
Fried Rice.....	57	
Fruit Mince .....	68	
<b>G</b>		
Garlic Prawns .....	39	
Gingered Whole Fish .....	39	
Gingered Pork Stir Fry .....	48	
Goulash.....	46	
Granola Cereal .....	29	
Gravy.....	30	
Green Peppercorn Chicken.....	43	
Green Thai Beef Curry .....	46	
<b>H</b>		
Ham & Cheese Croissants .....	35	
Herbed Vegetables .....	55	
Hollandaise Sauce .....	70	
Honey Glazed Carrots.....	54	
Honey Mustard Drumsticks .....	43	
Honey Sesame Drumsticks.....	44	
Hommus.....	36	
<b>I</b>		
Irish Coffee .....	67	
<b>L</b>		
Lamb,		
Fry & Bacon.....	47	
Goulash .....	46	
Pilau.....	47	
Seasoned Roast .....	47	
Lasagne .....	49	
Lasagne, Mushroom and Ricotta .....	58	
Lemon & Honey Drink .....	30	
Lemon Lime Cordial .....	70	
Lemon Pineapple Cheesecake .....	62	
Lemon Butter.....	68	
Lemon Pepper Fish.....	37	
Lemon sauce.....	70	
<b>M</b>		
Macaroni & Cheese.....	31	
Meatloaf Apricot .....	49	
Mini Pizzas .....	36	
Mint Sauce .....	70	
Mocha Carrot Cake .....	61	
Muesli .....	30	
Mussels, Tomato Basil .....	38	
Mushroom and Ricotta Lasagne .....	58	
Mushroom Sauce .....	70	
Mushrooms Sauté .....	55	
Mushroom Soup.....	33	
<b>N</b>		
Nachos, Speedy .....	35	
Nachos, Supreme .....	36	
Noodles,		
Teriyaki Tofu Vegetables .....	52	
Nuts & Bolts .....	35	
Nuts, Roasted .....	32	
<b>O</b>		
Oatmeal Cookies.....	66	
Omelette, Cheesy Ham .....	36	
Orange Truffles .....	66	
Oyster Soup .....	34	
Oysters Kilpatrick .....	37	
<b>P</b>		
Packet Cake .....	32	
Paella .....	57	
Parmesan Asparagus.....	53	
Pasta .....	31	
Pasta,		
Chicken & Mushroom Tagliatelle .....	59	
Creamy Tuna Penne .....	59	
Macaroni & Cheese .....	31	
Pesto & Egg Noodles .....	58	
Seafood Marinara .....	39	
Spaghetti with Chilli Tomato .....	59	
Vegetable Tortellini.....	59	
Pâté.....	36	
Pea & Ham Soup .....	33	
Peach Cobbler .....	62	
Peach Crumble .....	62	
Pear Custard .....	60	
Pears with Caramel Sauce.....	63	
Pepper Pot Beef .....	48	
Peppermint Cooler .....	67	
Pesto & Egg Noodles .....	58	
Pilau, Lamb .....	47	
Pizzas, Mini .....	36	
Playdough .....	70	
Poached Eggs.....	29	
Popcorn.....	31	
Pork,		
B.B.Q. marinated spareribs .....	46	
Gingered Stir, Fry .....	48	
Potato,		
Ardennis Style .....	52	
Casserole .....	55	
Cheesy Mashed.....	53	
Chicken Casserole .....	41	
Potato & Corn Soup .....	35	
Potato & Leek Soup .....	34	
Prawn,		
Garlic .....	39	
Chicken Laksa .....	42	

# Index to Recipes

Preserves,	
Apple Spread .....	69
Cucumber Pickle .....	68
Fruit Mince .....	68
Lemon Butter .....	68
Sweet Apricot Jam .....	69
Tomato Chutney .....	68
Pumpkin Soup .....	33
Pudding,	
Bread & Butter .....	66
Butterscotch .....	60
Chocolate Self Saucing .....	60
Christmas .....	64
Steamed Jam .....	64
<b>Q</b>	
Quick Mix Chocolate Cake .....	61
<b>R</b>	
Rice,	
Boiled White .....	31
Brown .....	31
Cooking Chart .....	56
Fragrant Coconut .....	59
Paella .....	57
Risotto, Chicken .....	44
Seasoned .....	58
Fried .....	57
Rich Chocolate Sauce .....	69
Roast Chicken .....	42
Roast Turkey .....	41
Roasted Nuts .....	32
Rocky Road .....	65
<b>S</b>	
Salmon Mornay .....	37
Salmon Steaks with Lime Butter .....	38
Sauce,	
Broccoli & Cheese .....	53
Caramel .....	69
Cheese .....	69
Chocolate Macadamia Nut .....	69
Creamy Bacon .....	57
Gravy .....	30
Hollandaise .....	70
Lemon .....	70
Mint .....	70
Mushroom .....	70
Rich Chocolate .....	69
Spaghetti Meat .....	49
Sweet Berry .....	69
White Sauce .....	31
Sauté Mushrooms .....	55
Savoury Brussels Sprouts .....	53
Scallops,	
Sweet Stir Fry .....	37
Scrambled Eggs .....	29
Seafood Marinara .....	39
Seasoned Rice .....	58
Seasoned Roast Lamb .....	47
Slices,	
Apricot Honey .....	65
Chocolate Brownies .....	60
Chocolate Fudge .....	66
Chocolate Peanut Butter Squares .....	65

Date & Walnut Fudge .....	65
Smoked Red Cod .....	38
Soy Chicken & Vegetables .....	43
Soups,	
Bouillabaisse .....	38
Chicken & Prawn Laksa .....	42
Crab & Corn .....	33
Creamy Broccoli .....	34
Mushroom .....	33
Oyster .....	34
Pea & Ham .....	33
Potato & Corn .....	35
Potato & Leek .....	34
Pumpkin .....	33
Tomato & Bacon .....	34
Vegetable .....	32
Spaghetti Meat Sauce .....	49
Spaghetti with Chilli Tomato Sauce .....	59
Speedy Nachos .....	35
Spicy Chicken Curry .....	44
Spicy Chocolate Drink .....	67
Spinach, Creamed .....	52
Steamed Jam Pudding .....	64
Stirred Custard .....	68
Strawberry Liqueur .....	67
Stuffed Capsicums .....	54
Stuffed Tomatoes .....	55
Sultana Cake .....	61
Sweet Apricot Jam .....	69
Sweet Berry Sauce .....	69
Sweet Scallop Stir Fry .....	37

## T

Tea .....	30
Teriyaki Tofu Vegetables Noodles .....	52
Thai Chicken Wings .....	42
Tomato & Onion .....	29
Tomato Bacon Soup .....	34
Tomato Basil Mussels .....	38
Tomato Chutney .....	68
Tomato Vegetable Casserole .....	53
Tomato, Stuffed .....	55
Turkey, Roast .....	41

## V

Veal Paprika .....	46
Veal & Pineapple Casserole .....	48
Vegetable & Almond Couscous .....	58
Vegetable Curry .....	55
Vegetable Frittata .....	54
Vegetables,	
Curry .....	55
Herbed .....	55
Teriyaki Tofu Noodles .....	52
Tomato Casserole .....	53
Vegetable Frittata .....	54
Vegetable Soup .....	32
Vegetable Tortellini .....	59

## W

White Sauce .....	31
Whole Stuffed Fish .....	39

## Z

Zucchini & Tomatoes .....	55
---------------------------	----

# Before Requesting Service

## THESE THINGS ARE NORMAL

The oven causes interference with my TV.

Some radio and TV interference might occur when you cook with the microwave oven. This interference is similar to the interference caused by small appliances such as mixers, vacuums, hair dryers, etc. It does not indicate a problem with your oven.

Steam accumulates on the oven door and warm air comes from the oven vents.

During cooking, steam and warm air are given off from the food. Most of the steam and warm air are removed from the oven by the air which circulates in the oven cavity. However, some steam will condense on cooler surfaces such as the oven door. This is normal.

I accidentally ran my microwave oven without any food in it.

Running the oven empty for a short time will not damage the oven. However, we do not recommend this.

### PROBLEM

### POSSIBLE CAUSE

### REMEDY

Oven will not turn on.



The oven is not plugged in securely.

Remove plug from outlet, wait 10 seconds and re-insert.

Circuit breaker or fuse is tripped or blown.

Reset circuit breaker or replace fuse.

There is a problem with the outlet.

Plug another appliance into the outlet to check if the outlet is working.

Oven will not start cooking.



The door is not closed completely.

Close the oven door securely.

**Start** was not pressed after programming.

Press **Start** Pad.

Another programme has already been entered into the oven.

Press **Stop/Reset** Pad to cancel the previous programme and programme again.

The programme has not been entered correctly.

Programme again according to the Operating Instructions.

**Stop/Reset** has been pressed accidentally.

Programme over again.

The words "DEMO MODE"\* appear on the screen



**Clock** Pad has been pressed three times.

Deactivate mode by pressing **Clock** Pad three times.

When the oven is turning on, there is noise coming from the Glass Tray.



The Roller Ring and oven bottom are dirty.

Clean these parts according to "Care of Your Microwave Oven" (see next page).

\*DEMO MODE is designed for retail store display. Cooking and other functions will not operate during the DEMO mode. If it seems there is a problem with the oven, contact an authorised Service Centre.

# Care of your Microwave Oven

## BEFORE CLEANING:

Remove plug from outlet. If impossible, leave oven door open to prevent oven from accidentally turning on.

## AFTER CLEANING:

Be sure to replace the Roller Ring and Glass Tray in the proper position and press **Stop/Reset** Pad to clear the Display Window.

### Inside of the oven:

Wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. The use of harsh detergent or abrasives is not recommended.

### Glass Tray:


Remove and wash in warm soapy water or in a dishwasher. If grease accumulates, clean with a non-abrasive nylon mesh scouring pad and a non-abrasive cleanser.

### Outside oven surfaces and back vents.

Clean with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into ventilation openings.

### Control Panel:

- Covered with removable protective film to prevent scratches during shipping. Small bubbles may appear under this film. When this happens, remove film carefully. (Hint - apply masking or clear tape to an exposed corner and pull gently to remove.)
- If it becomes wet, clean with a soft, dry cloth. Do not use harsh detergents or abrasives on the Control Panel.

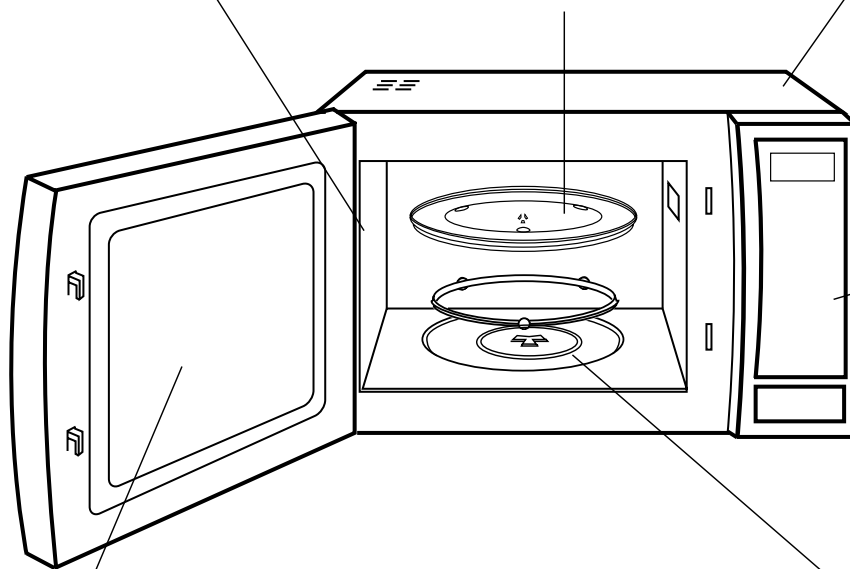

### Oven Door:

Wipe with a soft cloth when steam accumulates inside or around the outside of the oven door. This may occur when the microwave oven is operated under high humidity conditions and in no way indicates a malfunction of the unit or of microwave leakage.

### Roller Ring and oven cavity floor:

Wipe the bottom surface of the oven with mild detergent water or window cleaner and dry. Roller Ring may be washed in mild soapy water or dishwasher. These areas should be kept clean to avoid excessive noise.

## Technical Specifications

	NN-T791	NN-S781 / NN-S761 / NN-S751
Power Supply*:	230 - 240 V 50 Hz	230 - 240 V 50 Hz
Power Consumption**:	1040 W 4.6 A	1040 W 4.6 A
Power Requirement (Maximum):	1890 W 8.5 A	1890 W 8.5 A
Output***:	1200 W	1200W
Outside Dimensions (H x W x D):	304 x 555 x 485 mm	304 x 555 x 497 mm
Oven Cavity Dimensions (H x W x D):	223 x 416 x 470 mm	223 x 416 x 470 mm
Operating Frequency:	2,450 MHz	2,450 MHz
Uncrated Weight:	Approx. 14.4 kg	Approx. 14.0 kg
Trim Kit	NN-TK719SQPQ (Stainless)	NN-TK719WQPQ (White) NN-TK719BQPQ (Black)
Trim Kit cabinet opening	576 x 389 mm	576 x 389 mm

\* Voltage requirement may differ by country. Check your identification plate for power supply voltage required.

\*\* IEC 60335-1 Test Procedure

\*\*\* IEC 705-88 Test Procedure

Specifications subject to change without notice.

# Quick Guide to Operation

## FOR ALL MODELS





Feature	How to Operate
<b>To Set Clock</b> (👉 page 10)	<div><div>Clock</div><div><div>10 Min</div><div>1 Min</div><div>10 Sec</div><div>1 Sec</div></div><div><div>(Hours)</div><div>(Mins)</div><div><div>10 Min</div><div>1 Min</div><div>10 Sec</div><div>1 Sec</div></div></div><div>Clock</div></div> <p>Set time of day. (Max 12:59)</p>
<b>To Set / Cancel Child Safety Lock</b> (👉 page 10)	<div><div><b>To Set:</b></div><div>Start</div><div>3 times</div><div>Display</div><div>LOCK</div></div> <div><div><b>To Cancel:</b></div><div>Stop/Reset</div><div>3 times</div><div>Display</div><div>12:35</div></div>
<b>To Cook / Reheat / Defrost by Micro Power and Time Setting</b> (👉 page 12)	<div><div>Micro Power</div><div><div>10 Min</div><div>1 Min</div><div>10 Sec</div><div>1 Sec</div></div><div>Start</div></div> <div><div>Micro Power</div><div><div>10 Min</div><div>1 Min</div><div>10 Sec</div><div>1 Sec</div></div><div>Start</div></div> <p>Select power.                      Set the cooking time.</p>
<b>To Use as a Kitchen Timer</b> (👉 page 11)	<div><div>Timer</div><div><div>10 Min</div><div>1 Min</div><div>10 Sec</div><div>1 Sec</div></div><div><div>(Hours)</div><div>(Mins)</div><div><div>10 Min</div><div>1 Min</div><div>10 Sec</div><div>1 Sec</div></div></div><div>Start</div></div>
<b>To Set Standing Time</b> (👉 page 11)	<div><div>Set the desired cooking programme. (See Page 12)</div><div>Timer</div><div><div>10 Min</div><div>1 Min</div><div>10 Sec</div><div>1 Sec</div></div><div><div>10 Min</div><div>1 Min</div><div>10 Sec</div><div>1 Sec</div></div><div>Start</div></div>
<b>To Set Delay Start</b> (👉 page 11)	<div><div>Timer</div><div><div>10 Min</div><div>1 Min</div><div>10 Sec</div><div>1 Sec</div></div><div><div>10 Min</div><div>1 Min</div><div>10 Sec</div><div>1 Sec</div></div><div>Set the desired cooking programme. (See Page 12)</div><div>Start</div></div>

# Quick Guide to Operation





## FOR ALL MODELS

<b>To use Turbo Defrost Pad</b> (☞ page 14)	<div> <div> <div>Turbo Defrost</div> <div>1.0kg 0.1kg</div> </div> <div>or</div> <div> <div>Turbo Defrost</div> <div>1.0kg 0.1kg</div> </div> </div> <p>Set weight.</p> <div>→</div> <div>Start</div>
--	---

## Only for Models NN-T791 / NN-S781 / NN-S761

<b>To Cook using “Sensor Cook” Pads (S)</b> (☞ page 19-20)	<p>Press until desired food category pad appears.</p> <p>e.g. </p> <p>→  optional</p> <p>→ Start</p>
<b>To Reheat using “Sensor Reheat” Pads</b> (☞ page 20)	<p></p> <p>→  optional</p> <p>→ Start</p>

## Only for Model NN-S751

<b>To Cook using “Auto Cook” Pad</b> (☞ page 16)	<p>Press to select the desired food category.</p> <p></p> <p>→</p> <p>Select serving(s).</p> <p></p> <p>→</p> <p>Start</p>
<b>To Reheat using “Auto Reheat” Pad</b> (☞ page 16)	<p>Press to select the desired food category.</p> <p></p> <p>→</p> <p>Select serving(s).</p> <p></p> <p>→</p> <p>Start</p>



**Matsushita Electric Industrial Co., Ltd.**  
Web Site: <http://www.panasonic.co.jp/global/>

**F00035B00QP**  
**OA0501-0**  
Printed in China