


PERCUSSION SOUND MODULE **TD-6V**

Owner's Manual

Thank you, and congratulations on your choice of the Roland Percussion Sound Module TD-6V.

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" (p. 2-3) and "IMPORTANT NOTES" (p. 4-5). These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

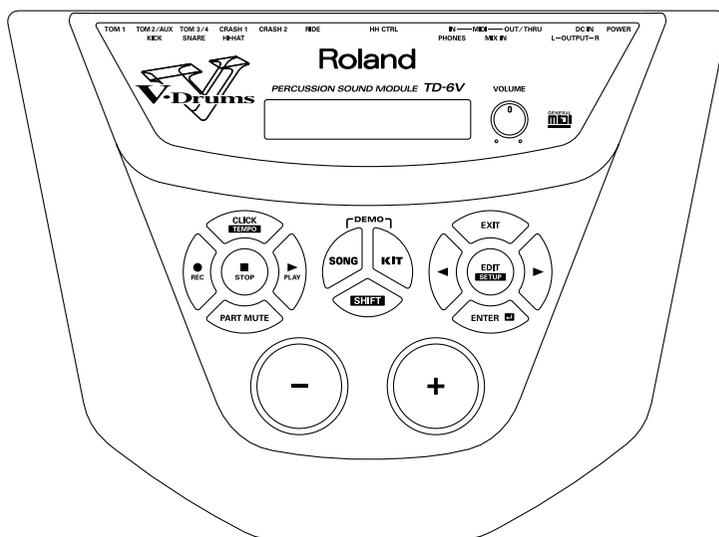

* All product names mentioned in this document are trademarks or registered trademarks of their respective owners.

Copyright © 2003 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

IMPORTANT: THE WIRES IN THIS MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE.

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.
The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.
Under no circumstances must either of the above wires be connected to the earth terminal of a three pin plug.

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About  WARNING and  CAUTION Notices

 WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

	The  symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The  symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The  symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

WARNING

- Before using this unit, make sure to read the instructions below, and the Owner's Manual. 
- Do not open (or modify in any way) the unit or its AC adaptor. 
- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the attached "Information" leaflet. 
- Never use or store the unit in places that are: 
 - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are 
 - Damp (e.g., baths, washrooms, on wet floors); or are
 - Humid; or are
 - Exposed to rain; or are
 - Dusty; or are
 - Subject to high levels of vibration.

WARNING

- This unit should be used only with a rack or stand that is recommended by Roland. 
- When using the unit with a rack or stand recommended by Roland, the rack or stand must be carefully placed so it is level and sure to remain stable. If not using a rack or stand, you still need to make sure that any location you choose for placing the unit provides a level surface that will properly support the unit, and keep it from wobbling. 
- Be sure to use only the AC adaptor supplied with the unit. Also, make sure the line voltage at the installation matches the input voltage specified on the AC adaptor's body. Other AC adaptors may use a different polarity, or be designed for a different voltage, so their use could result in damage, malfunction, or electric shock. 
- Do not excessively twist or bend the power cord, nor place heavy objects on it. Doing so can damage the cord, producing severed elements and short circuits. Damaged cords are fire and shock hazards! 

⚠ WARNING

- This unit, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level, or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should immediately stop using the unit, and consult an audiologist. 
- Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit. 

- Immediately turn the power off, remove the AC adaptor from the outlet, and request servicing by your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the attached "Information" leaflet when:
 - The AC adaptor or the power-supply cord has been damaged; or
 - If smoke or unusual odor occurs
 - Objects have fallen into, or liquid has been spilled onto the unit; or
 - The unit has been exposed to rain (or otherwise has become wet); or
 - The unit does not appear to operate normally or exhibits a marked change in performance.
- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. 
- To prevent accidents, never allow small children to play near the drum kit. 
- Protect the unit from strong impact. (Do not drop it!) 
- Do not force the unit's power-supply cord to share an outlet with an unreasonable number of other devices. Be especially careful when using extension cords—the total power used by all devices you have connected to the extension cord's outlet must never exceed the power rating (watts/amperes) for the extension cord. Excessive loads can cause the insulation on the cord to heat up and eventually melt through. 
- Before using the unit in a foreign country, consult with your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the attached "Information" leaflet. 

⚠ WARNING

- The unit and the AC adaptor should be located so their location or position does not interfere with their proper ventilation. 
- This unit for use only with Roland stand (or cart). Use with other stands (or carts) is capable of resulting in instability causing possible injury. 
- Always grasp only the output plug or the body of the AC adaptor when plugging into, or unplugging from, this unit or an outlet. 
- At regular intervals, you should unplug the AC adaptor and clean it by using a dry cloth to wipe all dust and other accumulations away from its prongs. Also, disconnect the power plug from the power outlet whenever the unit is to remain unused for an extended period of time. Any accumulation of dust between the power plug and the power outlet can result in poor insulation and lead to fire. 
- Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children. 
- Never climb on top of, nor place heavy objects on the unit. 
- Never handle the AC adaptor body, or its output plugs, with wet hands when plugging into, or unplugging from, an outlet or this unit. 
- Before moving the unit, disconnect the AC adaptor and all cords coming from external devices. If you need to move the entire drum kit at once, please get at least one other person to help, and while keeping it level, lift and move the whole kit slowly. Make sure to have a firm grip, to protect yourself from injury and the instrument from damage.
 - Check to make sure the screws securing the unit to the stand have not become loose. Fasten them again securely whenever you notice any loosening.
- Before cleaning the unit, turn off the power and unplug the AC adaptor from the outlet (p. 22). 
- Whenever you suspect the possibility of lightning in your area, disconnect the AC adaptor from the outlet. 
- Should you remove nuts, washers, screws, anchor bolts, etc., make sure to put them in a safe place out of children's reach, so there is no chance of them being swallowed accidentally. 

IMPORTANT NOTES

In addition to the items listed under “USING THE UNIT SAFELY” on page 2–3, please read and observe the following:

Power Supply

- Do not use this unit on the same power circuit with any device that will generate line noise (such as an electric motor or variable lighting system).
- The AC adaptor will begin to generate heat after long hours of consecutive use. This is normal, and is not a cause for concern.
- Before connecting this unit to other devices, turn off the power to all units. This will help prevent malfunctions and/or damage to speakers or other devices.

Placement

- Using the unit near power amplifiers (or other equipment containing large power transformers) may induce hum. To alleviate the problem, change the orientation of this unit; or move it farther away from the source of interference.
- This device may interfere with radio and television reception. Do not use this device in the vicinity of such receivers.
- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this unit. Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Excessive heat can deform or discolor the unit.
- When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.
- Do not allow rubber, vinyl, or similar materials to remain on the unit for long periods of time. Such objects can discolor or otherwise harmfully affect the finish.
- To avoid possible breakdown, do not use the unit in a wet area, such as an area exposed to rain or other moisture.
- Do not put anything that contains water (e.g., flower vases) on the unit. Also, avoid the use of insecticides, perfumes, alcohol, nail polish, spray cans, etc., near the unit. Swiftly wipe away any liquid that spills on the unit using a dry, soft cloth.

Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzene, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Repairs and Data

- Please be aware that all data contained in the unit’s memory may be lost when the unit is sent for repairs. Important data should always be backed up in another MIDI device (e.g., a sequencer), or written down on paper (when possible). During repairs, due care is taken to avoid the loss of data. However, in certain cases (such as when circuitry related to memory itself is out of order), we regret that it may not be possible to restore the data, and Roland assumes no liability concerning such loss of data.

Memory Backup

- This unit contains a battery which powers the unit’s memory circuits while the main power is off. When this battery becomes weak, the message shown below will appear in the display. Once you see this message, have the battery replaced with a fresh one as soon as possible to avoid the loss of all data in memory. To have the battery replaced, consult with your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the attached “Information” leaflet.



```
Backup Battery Low!  
[EXIT]
```

Additional Precautions

- Please be aware that the contents of memory can be irretrievably lost as a result of a malfunction, or the improper operation of the unit. To protect yourself against the risk of losing important data, we recommend that you periodically save a backup copy of important data you have stored in the unit's memory in another MIDI device (e.g., a sequencer).
- Unfortunately, it may be impossible to restore the contents of data that was stored in another MIDI device (e.g., a sequencer) once it has been lost. Roland Corporation assumes no liability concerning such loss of data.
- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- Never strike or apply strong pressure to the display.
- When connecting / disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- To avoid disturbing your neighbors, try to keep the unit's volume at reasonable levels. You may prefer to use headphones, so you do not need to be concerned about those around you (especially when it is late at night).
- Since sound vibrations can be transmitted through floors and walls to a greater degree than expected, take care not to allow such sound to become a nuisance to neighbors, especially at night and when using headphones. Although the drum pads and pedals are designed so there is a minimal amount of extraneous sound produced when they're struck, rubber heads tend to produce louder sounds compared to mesh heads. You can effectively reduce much of the unwanted sound from the pads by switching to mesh heads.
- When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.
- Use a cable from Roland to make the connection. If using some other make of connection cable, please note the following precautions.
 - Some connection cables contain resistors. Do not use cables that incorporate resistors for connecting to this unit. The use of such cables can cause the sound level to be extremely low, or impossible to hear. For information on cable specifications, contact the manufacturer of the cable.

Contents

IMPORTANT NOTES	4
Contents	6
Features	12
How to Use This Manual	14
Composition of This Manual.....	14
Terms Used in This Manual	14
Setup Guide	15
Panel Descriptions	16
Front Panel.....	16
Rear Panel	18
Making the Settings	19
Mounting the TD-6V to the Stand.....	19
Connecting the Pads and the Pedals	20
Connecting Two Pads to Trigger Inputs 5/6 (TOM2/AUX) and 7/8 (TOM3/4).....	21
Connecting Headphones, Audio Equipment, Amps, and Other Gear	22
Turning On/Off the Power	23
Turning Off the Power	24
Restoring the Factory Settings (Factory Reset)	25
Listening to the Demo Songs	27
Selecting the Pad Type	29
Adjusting the Sensitivity of the Pad	31
About the Pads	33
Trigger Inputs and the Pads You Can Use.....	33
Trigger Input Functions.....	33
Combinations of Pad and Trigger Type.....	34
Recommended Parameters for the Pads	35
Playing the Pads	36
Pad Head Shots and Rim Shots	36
Cross Stick.....	36
Cymbal Bow Shots/Edge Shots/Bell Shots.....	37
Cymbal Choke.....	38
Hi-Hat Control Pedal	38

Quick Start..... 39

Choosing a Drum Kit.....	40
Playing While Listening to the Metronome/Click	41
Switching the Click On and Off.....	41
Adjusting the Click Volume (Level).....	42
Adjusting the Click Tempo.....	43
Playing Along with Songs	44
Choosing a Song and Playing Back	44
Choosing a Song	44
Playing Back a Song	45
Adjusting the Song Volume	46
Setting the Backing Part (Melodic Instruments etc.) Volume	46
Setting the Drums and Percussion Volume	46
Temporarily Changing the Tempo of a Song	47
Muting the Pre-programmed Drums in Songs	48
Using the Pads to Play Songs.....	50
Playing with a CD, Tape, or MD (Using MIX IN Jack)	51
Using the TD-6V As a General MIDI Sound Module	52

Advanced Use 53

Chapter 1 Creating Your Own Drum Kit	(Kit Edit)..... 54
About Drum Kits and the Drum Kit Screen	54
About the Drum Kits.....	54
About the Drum Kit Screen.....	55
Choosing a Drum Kit	(Drum Kit)..... 55
Choosing the Pad to Edit.....	55
Choosing a Pad by Hitting It	55
Choosing on the TD-6V	56
Notation Used in the Screen	56
Helpful Edit Functions	56
Listening to an INST (Instrument) assigned to a Pad (Preview)	56
Locking the Setting Screen While Editing One Instrument ... (Note Chase)	57
Choosing an Instrument	57
About the Instruments.....	57
Choosing from the Group Names	(Inst Group)..... 57
Choosing an Instrument	(Inst)..... 58
Instrument Settings	(INST)..... 58
Adjusting the Volume of the Pad	(Level)..... 59
Setting the Pan Position	(Pan)..... 59
Adjusting the Pitch	(Pitch)..... 59
Adjusting the Decay (Length of Sound)	(Decay)..... 59

Ambience Settings	(AMBIENCE)	60
Switching Ambience On/Off	(Ambience Switch)	60
Ambience “Send” Level for Each Instrument	(Ambience Send Level).....	60
Choose “Location” Where the Drums are Played	(Studio Type)	60
Changing the Wall Surface Material	(Wall Type).....	61
Determine the Room Size	(Room Size)	61
Adjusting the Entire Drum Kit’s Overall Ambience ..	(Ambience Level)	61
Equalizer Settings	(EQUALIZER)	62
Switching the Equalizer On/Off	(Master Equalizer Switch).....	62
Adjusting the Sound	(High Gain, Low Gain).....	62
Settings for Various Functions	(CONTROL)	62
Playing a Song by Hitting a Pad	(Pad Pattern)	63
Control the “Level” of the Pattern with Playing Dynamics	(Pad Pattern Velocity).....	63
Pitch Control with the Hi-Hat Control Pedal On/Off for Each Pad	(Pitch Control Assign)	64
MIDI Note Number for Each Pad	(Note Number)	64
MIDI Gate Time for Each Pad	(Gate Time).....	65
Overall Drum Kit Settings	(COMMON)	66
Overall Drum Kit Volume	(Master Volume).....	66
Adjusting the Volume of the Pedal Hi-Hat Sound	(Pedal Hi-Hat Volume)	66
Setting the Range for the Pitch Control with the Hi-Hat Control Pedal	(Pedal Pitch Control Range) ..	66
Naming the Drum Kit	(Kit Name).....	67
Copying a Drum Kit	(COPY).....	67
Restoring the Factory Settings for the Edited Drum Kit.....		68
Switching the Order of the Drum Kits	(EXCHANGE).....	68
Chapter 2 Making the Pad and Trigger Settings	(SETUP/TRIG).....	69
About the Screen Display		69
Notation Used in the Screen.....		69
About the Input Indicator		69
Selecting the Pad Type	(Trigger Type)	69
Setting the Pad Sensitivity and Making Other Settings	(TRIGGER BASIC).....	71
Adjusting the Pad Sensitivity	(Sensitivity)	71
Setting the Minimum Levels for the Pads	(Threshold).....	72
Adjust How Playing Dynamics Changes the Volume ...	(Trigger Curve).....	72
Eliminate Crosstalk Between Pads	(Crosstalk Cancel)	73
Fine-Tuning the Trigger Parameter Settings	(TRIGGER ADVANCED)	73
Adjusting the Trigger Signal Detection Time	(Scan Time).....	74
Detecting Trigger Signal Attenuation and Cancelling Incorrect Triggering	(Retrigger Cancel)	74
Double Triggering Prevention	(Mask Time)	74
Setting Rim Sensitivity on the PD-80R, PD-85, PD-105, PD-120, and PD-125.....	(Rim Sens).....	75
Using the TD-6V with Acoustic Triggers.....		75

Chapter 3 Global Settings for the TD-6V	(SETUP/UTILITY, Factory Reset).....	76
Making the Global Settings	(UTILITY)	76
Display Contrast Adjustment	(LCD Contrast)	76
Percussion Part Volume Control	(Percussion Part Level).....	76
Backing Instruments Volume Control	(Backing Level).....	77
Muting Parts of a Song	(Mute).....	77
Tuning the TD-6V	(Master Tune).....	77
Preview Volume Control	(Preview Velocity).....	78
Checking the Remaining Amount of Memory	(Available Memory).....	78
Restoring the Factory Settings	(Factory Reset)	78
Chapter 4 Setting the Metronome	(Click Edit).....	79
Switching the Click On/Off	(Click).....	79
Tempo Adjustment	(Tempo).....	79
Setting the Way the Click Sounds	79
Volume Adjustment	(Click Level).....	79
Setting the Time Signature	(Time Signature).....	80
Setting the Interval	(Interval).....	80
Selecting the Click Sound	(Inst).....	80
Stereo Position	(Pan).....	80
Inserting a Count Before Playback or Recording	(Play Count In, Rec Count In).....	80
Chapter 5 Editing Songs	(SONG Edit).....	81
About Songs and the Song Screen	81
About Songs	81
About the Song Screen.....	82
Choosing a Song.....	83
Choosing from a Category	(Song Category).....	83
Choosing a Song	(Song).....	83
Playing Back a Song	83
Convenient Function for Playback.....	83
Adjusting the Song Volume	84
Muting a Selected Part	(Part Mute).....	84
Overall Song Settings	(COMMON).....	85
Setting the Tempo	(Tempo).....	85
Selecting How the Song Plays Back (LOOP, 1SHOT, TAP) .	(Play Type).....	85
Playing Back the Song from the First Note/Event	(Quick Play).....	86
Reset Time When Using Tap Playback	(Reset Time).....	86
Preventing Layering of Sounds in Tap Playback	(Tap Exclusive Switch).....	86
Protecting User Song Settings	(Song Lock).....	86
Naming a Song	(Song Name).....	87
Part Settings	(PART).....	87
Choosing Percussion Set and Instruments	(Percussion Set, Inst).....	88
Adjusting the Part Volume	(Level).....	88
Adjusting the Stereo Position	(Pan).....	89
Adjusting the Amount of Ambience	(Ambience Send Level).....	89
Adjusting the Bend Range	(Bend Range).....	89
Copying a Song	(COPY).....	89
Deleting a Song	(DELETE).....	90
Erasing Performance Data in a Song	(ERASE).....	91

Chapter 6 Recording a Song(Realtime Recording)..92

Preparations for Recording 92
 When Recording Pad Performances 92
 Recording Performances by External MIDI Devices 92
 How To Record (RECORDING STANDBY).... 93
 Setting the Time Signature (Time Signature)..... 93
 Setting the Number of Measures (Length) 93
 Setting the Song Tempo (Tempo) 93
 Quantize During Recording (Quantize)..... 94
 Selecting the Recording Method
 (Loop All, Loop1, Loop2, Replace)..... (Recording Mode) 94
 Start Recording with a Pad or Pedal Trigger (Hit Pad Start) 94

**Chapter 7 Making the MIDI Settings(SETUP/MIDI,
BULK DUMP)95**

About MIDI 95
 MIDI Connectors 95
 MIDI Channels and Multi-timbral Sound Modules 95
 How the Internal Sequencer Operates..... 96
 Making the MIDI Settings (MIDI COMMON) 96
 Automatically Switching Instrument Settings Screens .. (Note Chase) 97
 When Using as MIDI Controller
 for External MIDI Device Only (Local Control)..... 97
 Synchronizing with an External MIDI Device (Sync Mode) 98
 Setting Priority for Playing Drums and Percussion ... (Channel 10 Priority) 98
 Hi-Hat Control Pedal Data Reduction (Pedal Data Thin) 99
 Switch to the GM (General MIDI) Mode (GM Mode)..... 99
 Preventing the TD-6V from Switching
 to GM (General MIDI) Mode (Rx GM ON)..... 100
 Mixing MIDI Signals Coming to the MIDI IN
 with Real Time Performance on the Pads (Soft Thru) 100
 Set the Device ID (Device ID) 101
 Setting the TD-6V So That Program Changes
 Are Not Transmitted (Tx PC Sw)..... 101
 Setting the TD-6V So That Program Changes
 Are Not Received (Rx PC Sw)..... 101
 MIDI Channel Settings for a Part (MIDI PART)..... 102
 MIDI Messages Stop Function for Specific Parts
 in GM (General MIDI) Mode (GM PART) 102
 Saving Data to an External MIDI Device (BULK DUMP)..... 103
 Returning Saved Data to the TD-6V 104
 Data Compatibility Between the TD-6 and the TD-6V 104

Chapter 8 Features Using MIDI and Setting Examples105

About Transmitting/Receiving Program Changes 105
 Triggering an External Sound Device by Playing the TD-6V 105
 Combining with an External MIDI Sequencer..... 106
 Importing Sequence Data from an External MIDI Device
 to the TD-6V's Internal Sequencer 106
 Recording Your Performance to an External Sequencer..... 106
 Using the TD-6V As a Sound Module 107

Appendices 109

Troubleshooting	110
No Sound	110
No Sound/Low volume from Device Connected to the MIX IN Jack	112
Drum Kit Does Not Sound As Intended	113
Pad Does Not Sound As Intended	113
Song Does Not Sound As Intended	114
Sound is distorted	114
Problems Operating the TD-6V	115
Display Is Too Light Or Too Dark	115
Messages and Error Messages	116
System and Battery Error Messages	116
Messages and Error Messages Related to Sequencers and Songs	116
Messages and Error Messages Related to MIDI	117
Drum Kit List	118
Drum Instrument List	120
Preset Percussion Set List	124
Backing Instrument List	126
Preset Song List	128
Parameter List	130
MIDI Implementation Chart	135
TD-6V Block Diagram	138
Specifications	139
Index	140

Features

Full Palette of Internal Sounds for All Uses, from Practice to Live Performance

■ Includes 99 Different Drum Kits

You can immediately start playing any of a variety of drum kits, just by selecting the drum kit. Whether for practice or live performances, these kits can be applied in a wide range of situations.

■ 1, 024 Drum Instruments

You can combine different drum instruments used in a wide range of musical genres to create your own original drum kits.

■ 170 Different Preset Songs

To get right down to practicing, you merely need to select a Preset song. Then you can play the drum part just by muting only the Preset song's drum performance.

You also get 100 internal songs that you can use to record your own drum performances (User songs).

■ 262 Backing Instruments

The TD-6V's abundance of backing instruments allow you to record in a variety of musical genres.

Rich Expression

■ Compatible with mesh head V-PADS

Roland's mesh head V-Pads, known for their natural drum-like feel, can be used with the TD-6KV, also offering compatibility with dual tom trigger

■ Cross Stick Technique Available (p. 36)

■ Play Rim Shots (p. 36), Cymbal Edge Shots (p. 37), and Use Cymbal Choking (p. 38)

■ Pitch Control Available with the Hi-Hat Control Pedal (p. 64)

You can use the hi-hat control pedal to change the pitch of the pad instruments.

■ Compatible with tom dual triggers

Function and Operations Perfect for Live Performances

- Flat Top Design for Great Visibility
- Buttons Light for Easy Operation, Even On Stage
- Large [+] and [-] Buttons That Can Be Operated Even with Drum Sticks

Convenient Functions for Practicing

- Includes Metronome (Click) (p. 79)
- Includes Part Mute Function for Muting of Specific Parts When Playing With Preset Songs (p. 48, p. 77)

Expandability/Compatibility

■ Also Compatible With

Pads (PD-6, PD-7, PD-8, PD-9, PD-80, PD-80R, PD-85, PD-100, PD-105, PD-120, PD-125)

Cymbals (CY-6, CY-8, CY-12H, CY-12R/C, CY-14C, CY-15R)

Kick Trigger Units (KD-7, KD-8, KD-80, KD-85, KD-120)

Hi-Hat Control Pedals (FD-7, FD-8)

- Use the TD-6V As a MIDI Sound Module With an External Sequencer (p. 106)
- Support for General MIDI (p. 52, p. 99)

The TD-6V has a GM mode that can play back GM scores.

This mode includes a function allowing you to mute the sound only of a specified part during playback of GM scores. This is a very convenient feature for practicing and playing along.

General MIDI () System

General MIDI is a set of recommendations which seeks to provide a way to go beyond the limitations of proprietary designs, and standardize the MIDI capabilities of sound generating devices. Sound generating devices and music files that meet the General MIDI standard bear the General MIDI logo ().

Music files bearing the General MIDI logo can be played back using any General MIDI sound generating unit to produce essentially the same musical performance.

How to Use This Manual

Composition of This Manual

This owner's manual is organized as follows.

Setup Guide (p. 15)

For those using the TD-6V for the first time, this volume explains the preparations needed for playing sounds, including how to set up the stand, make pad settings, and turn on the TD-6V's power. Also provided are explanations of how to combine the TD-6V with other optional pads for fullest utilization of the TD-6V's features and functions.

Quick Start (p. 39)

This contains descriptions explaining how to easily enjoy performing with the TD-6V's numerous internal drum kits and Preset songs.

Advanced Use (p. 53)

The TD-6V allows you use the drum kits you like to create new drum kits and to create songs from recordings of what you play. This section provides detailed explanations of all of the TD-6V's functions.

- **Chapter 1 Functions For Creating Drum Kits** (p. 54)
Here are the settings used for creating sounds.
- **Chapter 2 Functions For Correctly Performing with the Pads** (p. 69)
This describes the settings you need to make in order to get the most expression from the TD-6V and pads.
- **Chapter 3 TD-6V Settings** (p. 76)
Included in this section are settings such as display contrast and song volume that are applied to the TD-6V as a whole.
- **Chapters 4–6 Using the sequencer and related functions** (p. 79)
Found here are metronome (click) settings, as well as song performance, recording, editing, and other settings for sequencers.
- **Chapters 7–8 MIDI Settings and Examples of How MIDI Is Used** (p. 95)
This chapter explains how to use MIDI—whether it be for saving data to an external device, or for using the TD-6V as a General MIDI sound module.

Appendices (p. 109)

If you run into problems, refer to "Troubleshooting" to make sure that the settings are correct. If an error message appears during operation, refer to "Messages and Error Messages" and take appropriate action. This section also provides various lists, and the MIDI implementation charts.

Terms Used in This Manual

- Button names are enclosed in square brackets "[]," as in [KIT] button.
- (p. **) indicates a reference page.
- Steps in operations may be abbreviated as described below.
[KIT] → [EDIT]
 1. Press [KIT].
 2. Press [EDIT].[SHIFT] + [KIT]
 1. While holding down [SHIFT], press [KIT].
- The functions of some buttons, such as [EDIT (SETUP)], change if pressed while [SHIFT] is held down; the function that is enabled when [SHIFT] is held down is shown in parentheses.
- Symbols appearing before the beginning of sentences in the manual have the following meanings.
 -  These indicate cautionary notes. Be sure to read them.
 -  These are memos containing information regarding settings and functions. Read it as necessary.
 -  These are useful hints for operation. Read it as necessary.
 -  These point to reference information. Read it as necessary.
 -  These are descriptions of terminology. Read it as necessary.

* The explanations in this manual include illustrations that depict what should typically be shown by the display. Note, however, that your unit may incorporate a newer, enhanced version of the system (e.g., includes newer sounds), so what you actually see in the display may not always match what appears in the manual.




PERCUSSION SOUND MODULE **TD-6V**

Setup Guide

Panel Descriptions

Front Panel

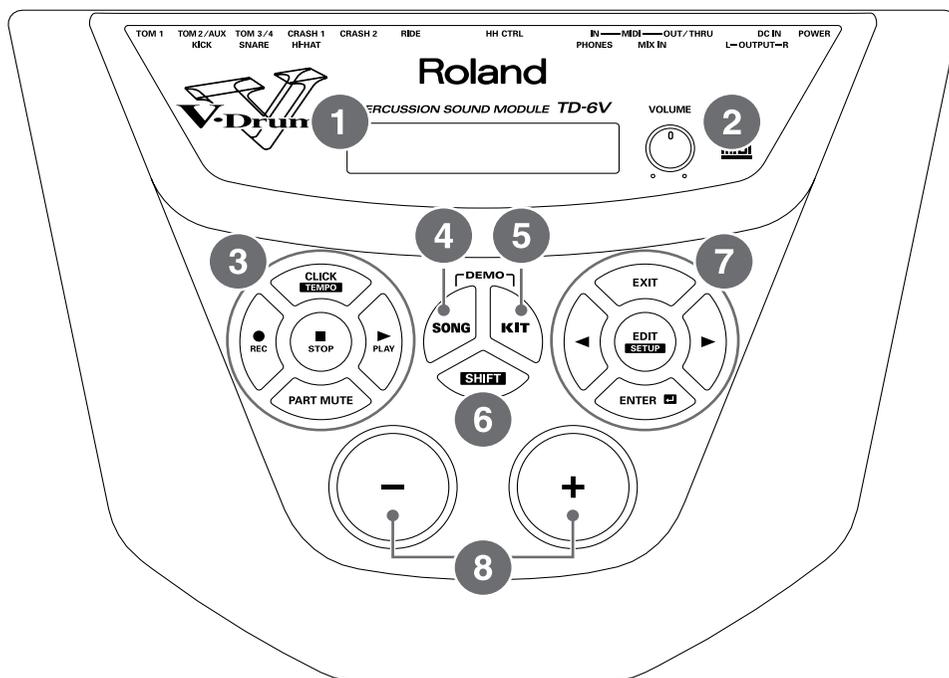

1 Display

The screen displays information, indicating the drum kit name, song name, and settings etc.

2 VOLUME Knob

Adjusts the volume of the TD-6V (p. 24). Even when headphones are connected, sound will still be output from the various output jacks.

3 Sequencer Section

- **CLICK (TEMPO) Button**
Turn the click on/off (p. 41).
When you hold down the [SHIFT] button and press the [CLICK (TEMPO)] button, the tempo settings screen appears in the display (p. 43, p. 47).
- **REC ● Button**
Calls up the recording settings screen (Recording Standby; p. 93).
- **STOP ■ Button**
Stop song playback (p. 45). When pressed while the song is stopped, this returns you to the beginning of the song.
- **PLAY ► Button**
Play back the song (p. 45). Starts recording if pressed when the TD-6V is in recording standby mode (p. 93).
- **PART MUTE Button**
Mutes the performance of specified parts (p. 48).

4 SONG Button

Calls up the song's basic settings screen (p. 82).

5 KIT Button

Calls up the drum kit's basic settings screen (p. 55).

6 SHIFT Button

Used in conjunction with other buttons.

Operation	Function
[SHIFT] + [KIT]	Gives a preview of the sound of the instrument assigned to the selected pad (Preview; p. 56)
[SHIFT] + [◀], [▶]	<ul style="list-style-type: none"> • Selects the trigger input (Trigger Select; p. 56) • Deletes or inserts one character when setting drum kit names and song names (p. 67, p. 87)
[SHIFT] + [CLICK (TEMPO)]	Displays the tempo settings screen (p. 43, p. 47)
[SHIFT] + [EDIT (SETUP)]	For making overall settings for the TD-6V (Setup; p. 69, p. 76, p. 92)
[SHIFT] + [SONG]	Displays the volume settings screen for the backing instruments (melodic and other instruments) (p. 46)
[SHIFT] + [PLAY ▶]	While the song is playing back, the buttons corresponding to the percussion pad drum tones are lit (p. 45).
[SHIFT] + [STOP ■]	Jumps to songs that have not been used (new User songs) (p. 92)
[SHIFT] + [PART MUTE]	Displays the settings screen for muting parts (p. 77)
[SHIFT] + [+], [-]	<ul style="list-style-type: none"> • For making large changes at a time in the values of settings • Changes instrument groups and song categories (p. 57, p. 83) • Switches uppercase and lowercase letters and symbols when setting drum kit names and song names (p. 67, p. 87)


7 Editing section

- **EXIT Button**
Returns to the previous stage screen. When pressed a number of times, the display returns to either the Drum Kit screen or the Song screen.
- **◀, ▶ Button**
These switch the screen if pressed when “” or “” is shown in the display. You can select the trigger input by holding down the [SHIFT] button and pressing [◀] or [▶] (p. 56).
In the SONG screen, rewinding and fast forwarding are carried out in one-measure units (p. 45). You can select the kit in the KIT screen.
- **EDIT (SETUP) Button**
Displays the drum kit or song settings screen. By holding down the [SHIFT] button and pressing the [EDIT (SETUP)] button, you can make overall settings for the TD-6V.
- **ENTER  Button**
Switches the screen if pressed when “” is shown in the display.

8 + (Increment) Button, - (Decrement) Button

- These are used to switch drum kits and songs and to make changes in the settings values.
- Pressing the [+] button increases the value, and pressing the [-] button decreases the value.
 - When making an on/off setting, [+] will turn the setting on and [-] will turn it off.
 - When [SHIFT] is held down and [+] or [-] is pressed, settings values are then changed in larger increments or decrements.
 - When [+] is held down and then [-] is pressed, settings values increase rapidly; when [DEC/+] is held down and then [-] is pressed, settings values then decrease rapidly.

Rear Panel

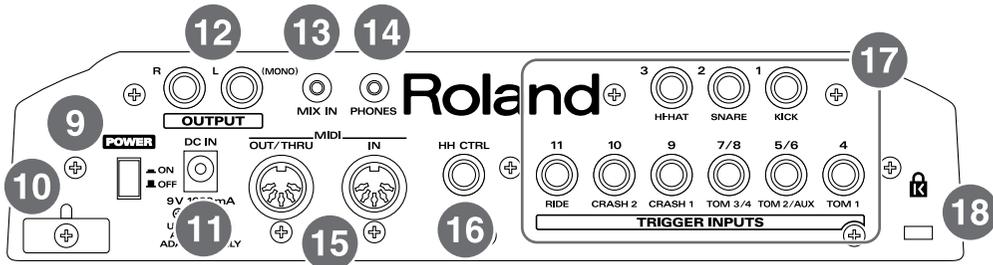

9 POWER Switch

Switch turns the power on/off (p. 23).

10 Cord Hook

Anchor the power cord (p. 22).

11 AC Adaptor Jack

Connect the supplied AC adaptor to this jack (p. 22).

12 OUTPUT Jacks (L (MONO), R)

Connect these to your amp or audio system. For monaural output use the L/MONO jack (p. 22).

13 MIX IN Jack

Connect this to your CD, MD, cassette player, or other similar device (p. 51).

The sound that is input to this jack will be output from the OUTPUT jacks and the PHONES jack.

14 PHONES Jack

A pair of stereo headphones can be connected to this jack (p. 22).

Even when headphones are connected, sound will still be output from the output jacks.

15 MIDI Connectors (IN, OUT/THRU)

Use these connectors when using a MIDI sequencer, MIDI keyboard, or other MIDI device to play sounds with the TD-6V, when using the TD-6V and pads to play sounds from an external MIDI sound generator, or when saving the TD-6V's settings to, or loading settings from a MIDI sequencer.

16 HH CTRL (Hi-Hat Control) Jack

Connect a hi-hat control pedal (FD-8) here. (p. 20)

17 TRIGGER INPUTS

Use these inputs to connect optional pads, cymbals, and kick trigger units to the TD-6V (p. 20).

For more detailed information on each trigger input, refer to "Trigger Inputs and the Pads You Can Use" (p. 33).

18 Security Slot (K)

<http://www.kensington.com/>

Making the Settings

Mounting the TD-6V to the Stand


1

Attach the stand holder (included with the optional drum stand) to the TD-6V.

Using the screws attached to the bottom panel, attach the holder so the unit is oriented as shown in the diagram.

NOTE

Use the 8 mm screws (M5 x 8) provided with the TD-6V. Use of other screws may result in damage to the unit.

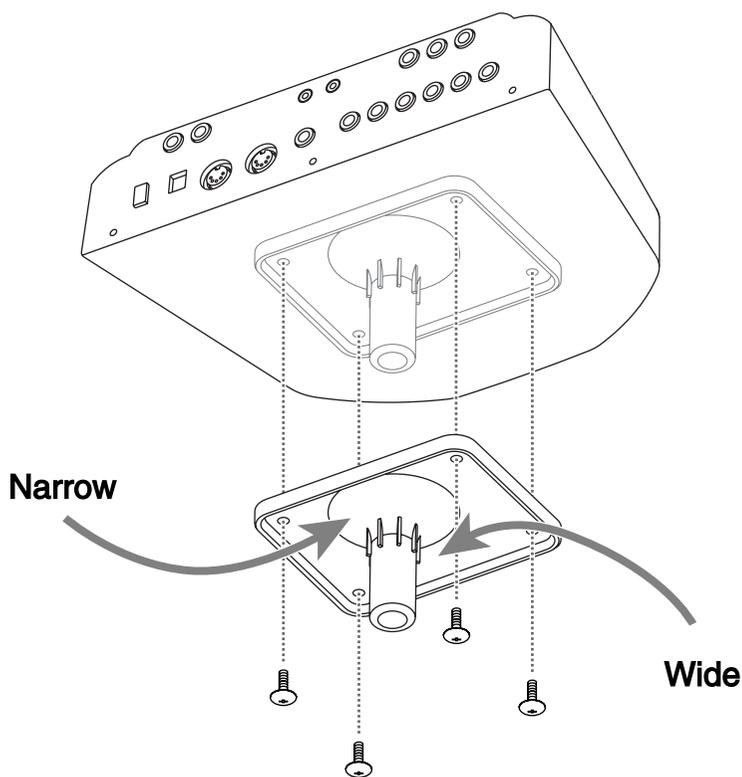

2

Attach the TD-6V and stand holder to the drum stand (such as the optional MDS-3C, MDS-8C, or MDS-20).

For details on assembling the drum stand and attaching the TD-6V, refer to the owner's manual for the drum stand.

NOTE

- When turning the unit upside-down, get a bunch of newspapers or magazines, and place them under the four corners or at both ends to prevent damage to the buttons and controls. Also, you should try to orient the unit so no buttons or controls get damaged.
- When turning the unit upside-down, handle with care to avoid dropping it, or allowing it to fall or tip over.

MEMO


To attach the TD-6V to a cymbal stand or other such stand, you may want to use the optional APC-33 All Purpose Clamp to secure the stand holder. It can be attached to a pipe of 10.5 mm–30 mm radius.

Connecting the Pads and the Pedals

Using the provided cables, connect the pads, cymbal pads, hi-hat control pedal, and kick trigger unit.

Carefully refer to the numbers shown in the illustration and connect to the appropriate TRIGGER INPUT jacks on the TD-6V's rear panel.

Setting Example

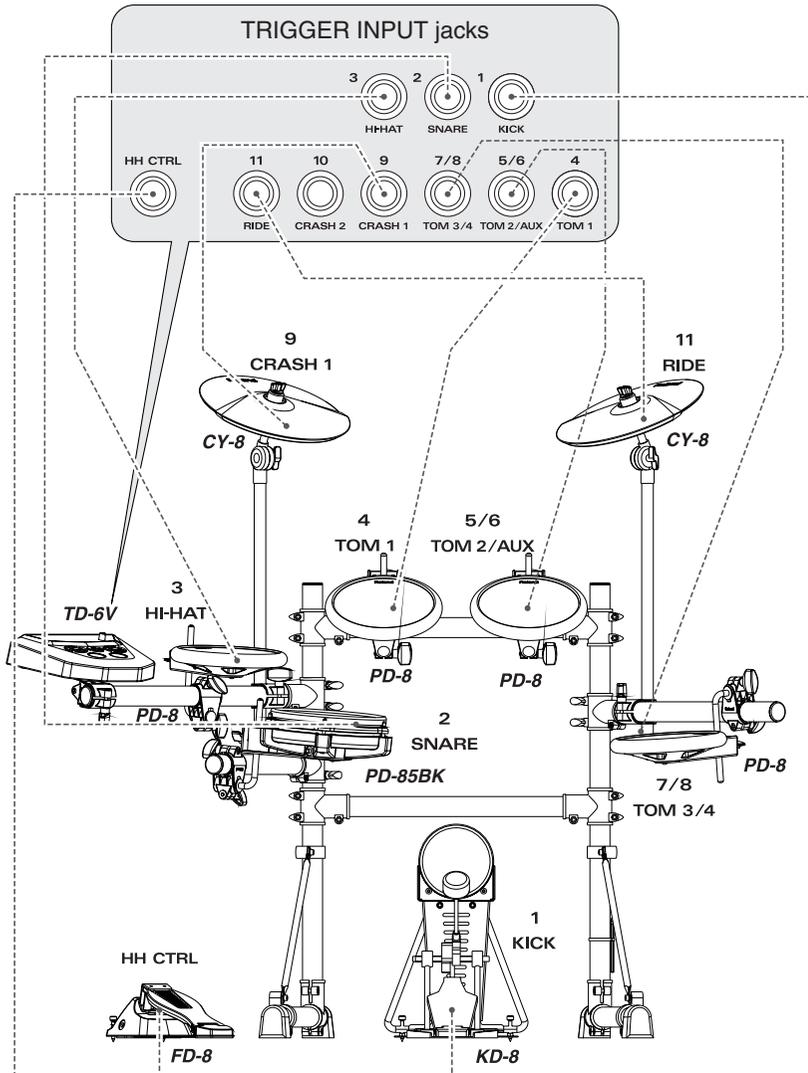

NOTE

Before using pads with mesh heads (PD-80, PD-80R, PD-85, PD-100, PD-105, PD-120, PD-125, KD-80, KD-85, KD-120, or RP-2), be sure to adjust the head tension. Striking the head when the head tension is loose may damage the sensor. For more information on adjusting the head tension, refer to the owner's manual for each pad.


MEMO

For fullest performance expression, make exclusive use of Roland's line of optional pads (PD-6, PD-7, PD-8, PD-9, PD-80, PD-80R, PD-85, PD-100, PD-105, PD-120, PD-125, and RP-2), cymbals (CY-6, CY-8, CY-12H, CY-12R/C, CY-14C, and CY-15R), and kick trigger units (KD-7, KD-8, KD-80, KD-85, and KD-120).

■ Connecting Two Pads to Trigger Inputs 5/6 (TOM2/AUX) and 7/8 (TOM3/4)

With the optional cable (PCS-31) or standard insert cable, two pads may be connected to the trigger inputs 5/6 (TOM2/AUX) and 7/8 (TOM3/4). For instructions on making these settings, refer to p. 69.


TD-6V Rear Panel

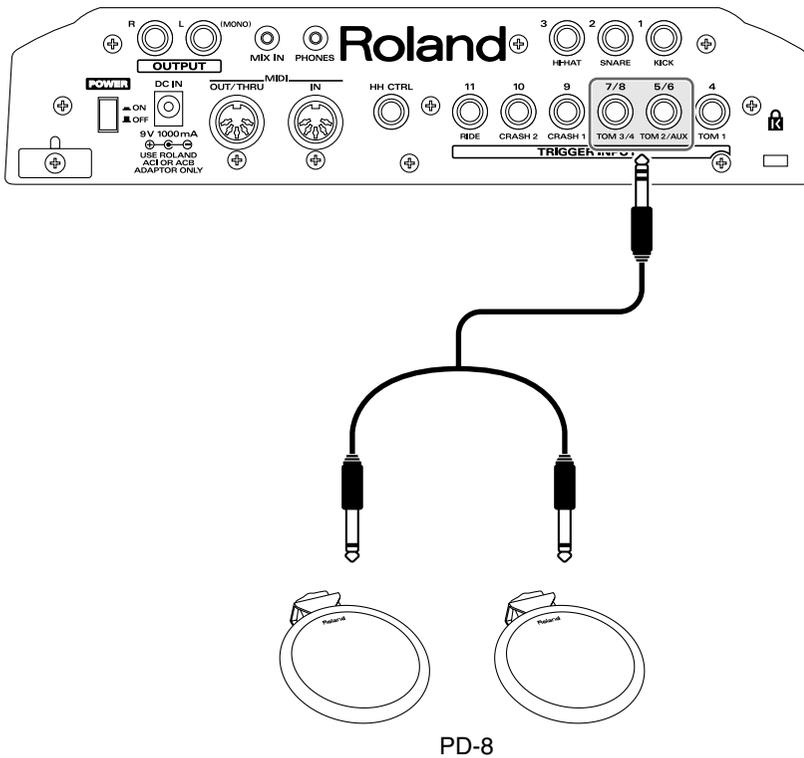

NOTE

When using an optional PCS-31 or standard "insert" cable (Stereo to dual mono jacks) to connect two pads to 1 input (5/6 or 7/8) rim shots are not possible. If you use a single pad (with rim shot function) connected via a stereo cable, then rim shots are of course possible.

Connecting Headphones, Audio Equipment, Amps, and Other Gear

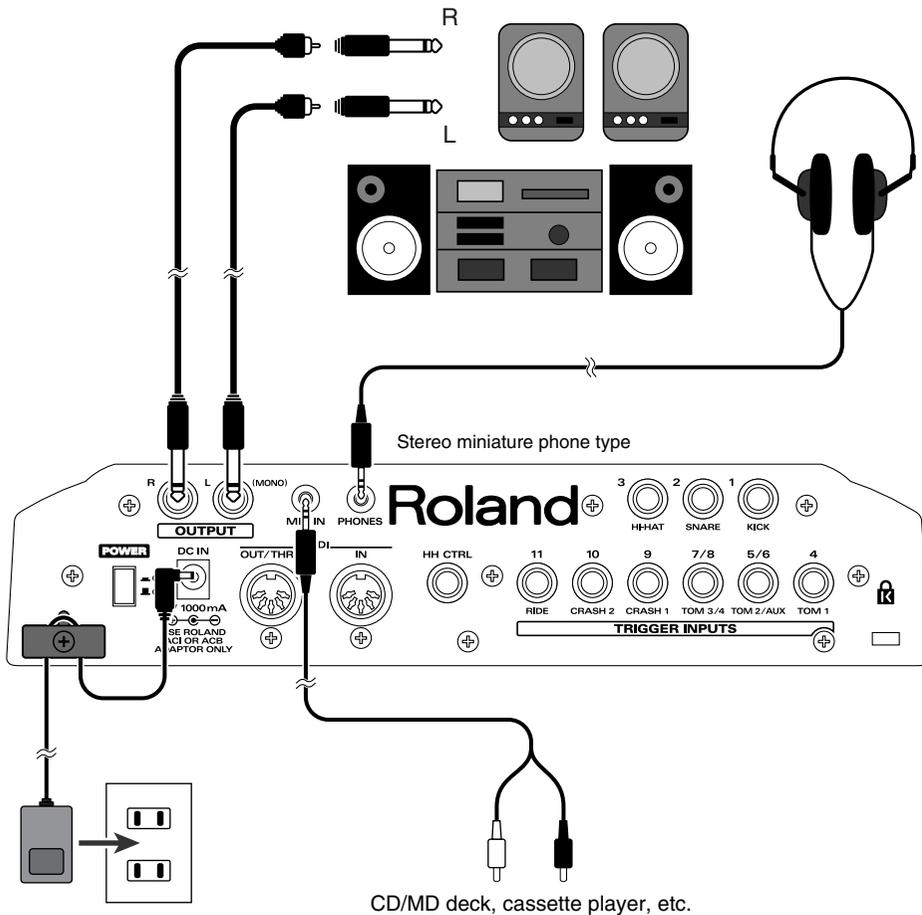

- 1 Turn off the power of all devices before you make connections.

NOTE

To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.

- 2 Connect the supplied AC adaptor to the AC adaptor jack.

- 3 Connect the OUTPUT L(MONO) and R jacks on the rear panel to your audio system or amp. If using headphones, connect them to the PHONES jack.

- 4 Plug the AC adaptor plug into a power outlet.

NOTE

To prevent the inadvertent disruption of power to your unit (should the plug be pulled out accidentally), and to avoid applying undue stress to the AC adaptor jack, anchor the power cord using the cord hook, as shown in the illustration.


HINT

Using the TD-6V's MIX IN Jack, allows you to play along with a CD or other such sound input (p. 51).

Turning On/Off the Power

NOTE

Once the connections have been completed (p. 22), turn on power to your various devices in the order specified. By turning on devices in the wrong order, you risk causing malfunction and/or damage to speakers and other devices.

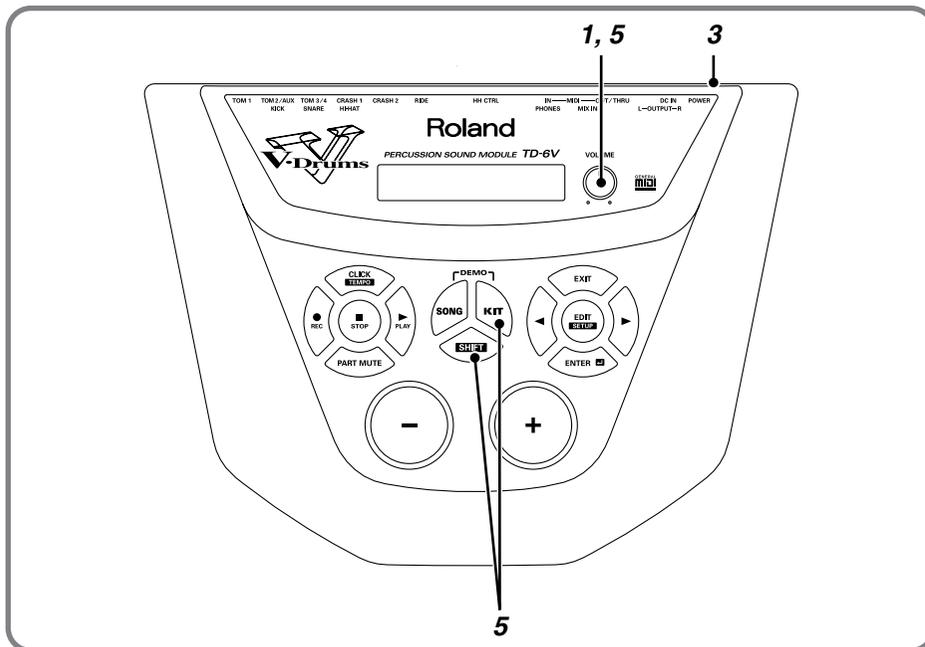

- 1 Turn the [VOLUME] knob completely to the left to lower the volume to the minimum level.
- 2 Turn down the volume control on the connected amp or audio system.
- 3 Press the [POWER] button to turn on the power.

Precautions When Turning on the Power

After the power is turned on, the drum kit name (shown in the following figure) appears in the display; do NOT press any pad or pedal until [KIT] has lighted.



NOTE

This unit is equipped with a protection circuit. A brief interval (a few seconds) after power up is required before the unit will operate normally.

MEMO

If the hi-hat control pedal is pressed when the power is turned on, control of the hi-hat's opening and closing will not work correctly. Striking the pads when turning on the power degrades the pad response when the pads are struck lightly.

Turning On/Off the Power

4

Turn on the power to the connected amp or audio system.

5

Press [SHIFT] + [KIT] (PREVIEW) or strike the pad, and while listening to the sound, gradually bring up [VOLUME] to adjust the volume level.

Also raise the volume level of the connected amp or audio system to the appropriate level.

No Sound Even When Pressing [SHIFT] + [KIT] (PREVIEW)

Check the following points.

When Using an Amp or Audio System

- Is the amp or audio system volume setting correct?
- Are the TD-6V and the amp or audio system connected correctly?
- Is there a problem with any connector cable?
- Have the input select settings of your audio system or amp been made correctly?

When using headphones:

- Are the headphones connected to the [PHONES] jack?



Caution Concerning Volume

If the volume levels used when striking the pads are left unchanged when playing back demo songs or other songs, the volume may increase suddenly, which may cause ear pain and damaged speakers. Before playing back songs or patterns, rotate the [VOLUME] knob counterclockwise to lower the volume levels, then readjust to a suitable volume while listening to the playback.

Turning Off the Power

1

Completely turn down the volume of the TD-6V and any connected external devices.

2


Turn off the power to all external devices.

3

Press the TD-6V's [POWER] switch to turn off the power.

Restoring the Factory Settings (Factory Reset)

This restores the pad and instrument settings, song data, and other information stored in the TD-6V to the original factory settings.

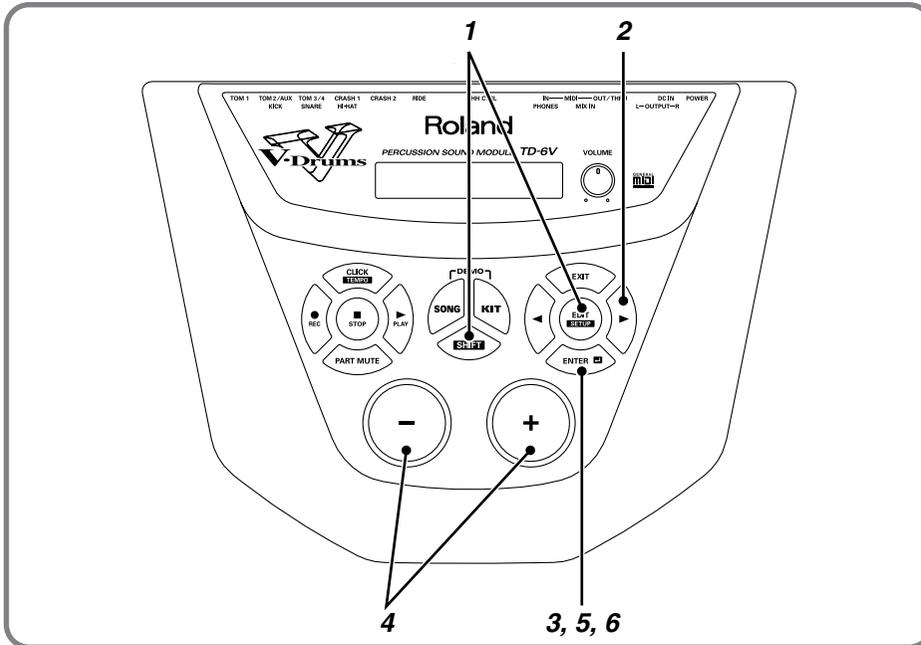

NOTE

All data and settings stored in the TD-6V are lost in carrying out this operation. Use the “Bulk Dump” operation to save crucial data and settings to an external MIDI device (SETUP/BULK DUMP/ Bulk Dump; p. 103).

For more information about data compatibility between the TD-6 and the TD-6V, refer to p. 103.

- 1 While holding down [SHIFT], press [EDIT (SETUP)].
[EDIT (SETUP)] lights.



HINT

When [SHIFT] and [EDIT (SETUP)] are held down when the power is turned on, the display jumps to the Factory Reset screen. When carrying out Factory Reset, read from Step 4.

- 2 Press [▶] to select “FactoryReset.”



- 3 Press [ENTER].

The Factory Reset screen appears.



Restoring the Factory Settings (Factory Reset)

4

Press [+] or [-] to select the parameter you want to restore to factory settings.

Here, select “ALL” to restore all of the settings to the original factory values.

ALL:

All internal settings will be restored to the factory settings.

THIS DRUM KIT:

Only the settings for the currently selected drum kit are restored to the factory settings.

ALL DRUM KITS:

The settings for all of the TD-6V’s internal drum kits are restored to the factory settings.

ALL SONGS:

All of the TD-6V’s internal song data is restored to the factory settings.

5

Press [ENTER .

The confirmation screen appears.

```
Are You Sure?  
[ENTER] / [EXIT]
```

6

If you’re ready to proceed, press [ENTER , and the Factory Reset operation will be executed.

7

When the Factory Reset is finished, the Completed screen appears.

```
Completed!
```


HINT

Press [EXIT] to cancel the operation.

Listening to the Demo Songs

The TD-6V features five demo songs demonstrating the TD-6V's sounds and expressive capabilities.

The drums played on the demo songs were played in real time into a sequencer.

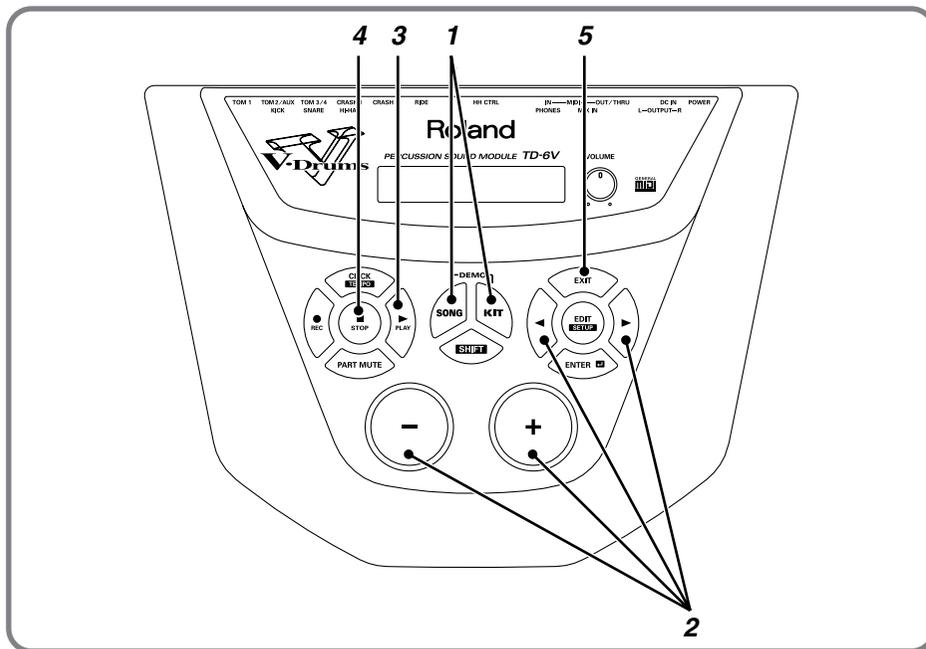

1 While holding down [KIT], press [SONG].

The "DEMONSTRATION" screen appears.



NOTE

- All rights reserved. Unauthorized use of this material for purposes other than private, personal enjoyment is a violation of applicable laws.
- No data for the music that is played will be output from MIDI OUT.

2

Press [+] or [-], or press [◀] or [▶] to select the song to play back.

1. How Now

Copyright © 2003, Roland Corporation
Drum kit being used: #11 "PopKit X"

2. TC R&B

Copyright © 2001, Roland Corporation
Drum kit being used: #80 "AcuStick"

3. CREOLET1

Copyright © 2001, Roland Corporation
Drum kit being used: #1 "RoseWood"

4. CREOLET2

Copyright © 2001, Roland Corporation
Drum kit being used: #17 "Natural"

5. SNAG LTN

Copyright © 2001, Roland Corporation
Drum kit being used: #13 "Groove"

3

Press [PLAY ▶].

Playback of the demo songs begins, and the five demo songs are played continuously in sequence.

4

When you want to stop the performance, press [STOP ■].

5

When you have finished listening to the demo song, press [KIT], [SONG] or [EXIT].

NOTE

Caution Concerning Volume


If the volume levels used when striking the pads are left unchanged when playing back demo songs, the volume may increase suddenly, which may cause ear pain and damaged speakers. When playing back demo songs, rotate [VOLUME] to the left (counterclockwise) to bring the volume level back down, then while playing back the song, readjust the volume to an appropriate level.

Selecting the Pad Type

Make the settings for the type of pads to be used (**trigger type**) to ensure that the TD-6V accurately receives what is being played on the pads.

Set each trigger input as described below.

Settings optimized for the TD-6K are provided in factory settings on the TD-6V.

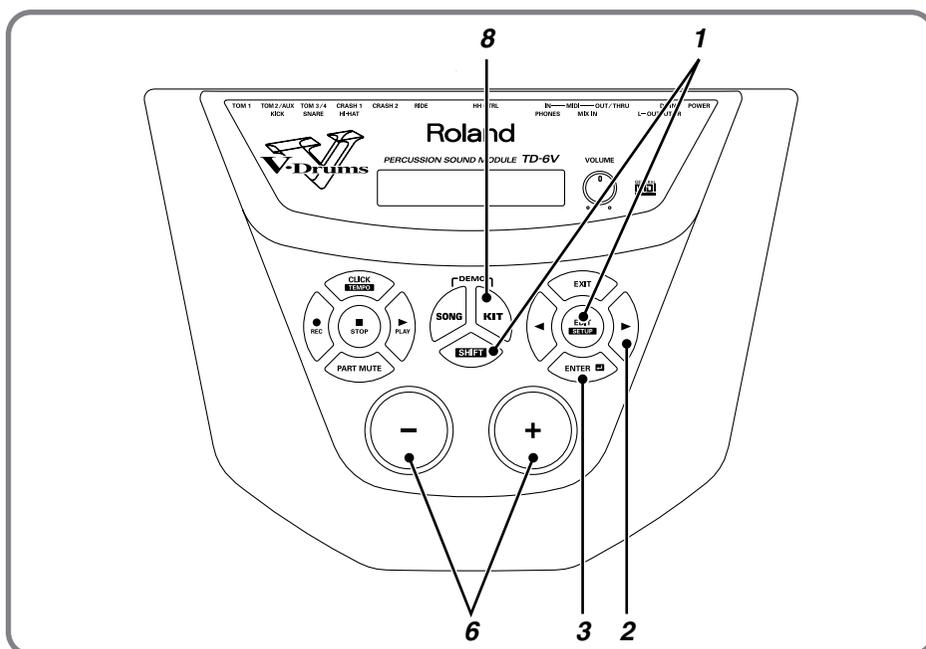

MEMO

The following parameters are automatically set to the most efficient values for each pad when you select the trigger type.

Basic Trigger Parameters (SETUP/TRIG BASIC; p. 71)

- Sensitivity
- Threshold
- TrigCurve

Advanced Trigger Parameters (SETUP/TRIG ADVNCD; p. 73)

- Scan Time
- Retrig Cancel
- Mask Time
- Rim Sens

NOTE

The trigger parameters should be adjusted as necessary to match the actual state of your configuration, and the environment in which it is being used.

- 1 While holding down [SHIFT], press [EDIT (SETUP)].

[EDIT (SETUP)] lights.



- 2 Press [▶] to select "TRIG BASIC."



- 3 Press [ENTER].



Selecting the Pad Type

4

Strike the pad you wish to set.

The setting screen for the struck pad appears.



5

Select the most suitable trigger type from the following chart for the pad you are using.

Pad	Trigger Type	Pad	Trigger Type	Pad	Trigger Type
PD-8	PD-8	PD-105	PD-125	CY-6	CY Type
PD-6	PD Type	PD-125	KD-8	CY-12H	
PD-7		KD-8		CY-12R/C	
PD-9		KD-7	KD Type	CY-14C	
RP-2	PD-80R	KD-80	CY-8	CY-15R	
PD-80		KD-85		RT-7K	RT-7K
PD-80R		KD-120		RT-5S	RT-5S
PD-85		CY-8		RT-3T	RT-3T
PD-100	PD-120			RIM Edge	RIM
PD-120					

6

Press [+] or [-] to select the trigger type.

7

Repeat Steps 4–6 to set the trigger type for each pad.

8

Press [KIT].

[KIT] lights, and the Drum Kit screen appears.



9

Strike the pads and press the pedals to check the following.

- Are sounds being played with all pads and pedals?
- Is the right instrument for each pad being played?

If the correct sound is not being played, check the pad settings once more and refer to “Troubleshooting” (p. 110).

HINT

You can also make the selection by pressing [SHIFT] + [◀] or [SHIFT] + [▶] (Trigger Select).

MEMO


These settings apply to both the head and the rim.

Adjusting the Sensitivity of the Pad

You may wish to adjust the sensitivity of the pads to accommodate your personal taste and style of performing. Adjusting the TD-6V's sensitivity allows you to change the correlation between your playing velocity (strength) and the response and volume of the sound.

MEMO

The sensitivity setting is automatically set to the most efficient values for each pad when you select the trigger type (p. 29). Adjust as needed.

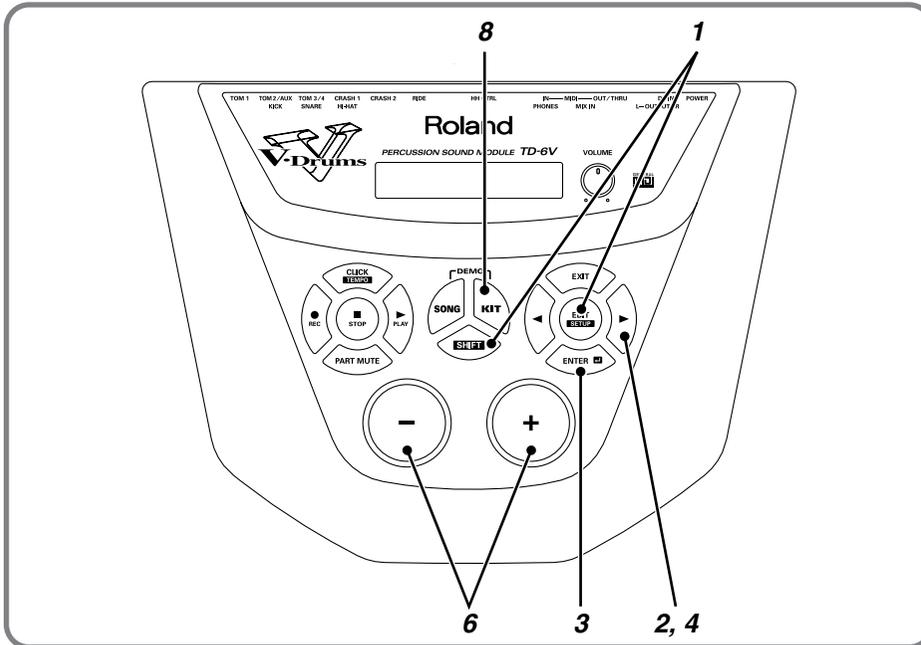

- 1** While holding down [SHIFT], press [EDIT (SETUP)].
[EDIT (SETUP)] lights.



- 2** Press [▶] to select "TRIG BASIC."



- 3** Press [ENTER].

Adjusting the Sensitivity of the Pad

4

Press [▶] to select “Sensitivity.”

```
BASIC1          KIK:H01
4 Sensitivity    8 ▶
```

5

Strike the pad you wish to set.

The setting screen for the struck pad appears.

```
BASIC1          SNR:H02
4 Sensitivity    7 ▶
```

6

Press [+] or [-] to adjust the sensitivity of the pads.

Here you can make a setting of 1–16.

Higher settings result in higher sensitivity, so that the pad will produce a loud volume even when struck softly.

Lower settings result in lower sensitivity, so that the pad will produce a low volume even when struck forcefully.

Setting the Overall Target

Set the sensitivity so that the indicator reaches the maximum position when you play with your maximum dynamics. A flag, such as shown in the following, is raised when the indicator reaches the maximum position (→ → []).

Indicator ↙

```
BASIC1  → * SNR:H02
4 Sensitivity 7 ▶
```

Maximum Indication ↙ Indicator (Maximum) ↙

```
BASIC1  [■ ■ SNR:H02
4 Sensitivity 7 ▶
```

7

Repeat Steps 5 and 6 to make any other necessary pad sensitivity adjustments.

8

Press [KIT].

[KIT] lights, and the Drum Kit screen appears.



```
[KIT]  RoseWood  H01
```

HINT

You can also make the selection by pressing [SHIFT] + [◀] or [SHIFT] + [▶] (Trigger Select).

MEMO

These settings apply to both the head and the rim.

MEMO

With electronic drum kits, overall volume is another important element. Listening at low volumes may make it seem that there is too little change in volume, so you might raise the sensitivity excessively without really needing to. In order to make these settings correctly, adjust the volume of amps or headphones to appropriate levels.


About the Pads

Trigger Inputs and the Pads You Can Use

Although you can use previous model pads, kick trigger units, and other such devices with the TD-6V, there may be incompatibilities between pads and trigger inputs, which may prevent you from being able to perform on some pads.

■ Trigger Input Functions

The following shows the available trigger input functions.

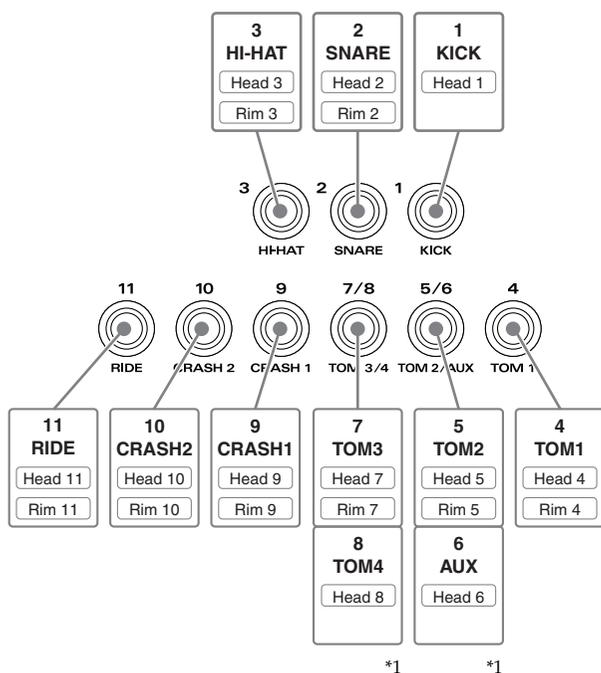

NOTE

Use the cable provided with the pad to connect the pad to the TD-6V. The rim sound becomes unavailable when you use a monaural cable to connect a pad that is capable of playing rim shots and chokes.

*1: By using an optional cable (the PCS-31) or standard insert cable, you can use two pads to a single trigger input jack. In this case, the rim sounds of "Trigger Input 5 (TOM2)" and "Trigger Input 7 (TOM3)" become unavailable. For more on how to make the necessary connections, refer to p. 21.

■ Combinations of Pad and Trigger Type

To enjoy full use of all the functionality offered by the TD-6V and your pads, be sure to review the following chart and select the pads best suited for your aims.

			Trigger Input Jacks										
			1 (KIK)	2 (SNR)	3 (HH)	4 (T1)	5 (T2)	6 (AUX)	7 (T3)	8 (T4)	9 (CR1)	10 (CR2)	11 (RD)
Kick Trigger Units	KD-7 KD-8 KD-80 KD-85 KD-120	Head	O	O	O	O	O	O	O	O	O	O	O
Pads	PD-6 PD-100	Head	O	O	O	O	O	O	O	O	O	O	
	PD-7 PD-8 PD-9	Head	O	O	O	O	O	O	O	O	O	O	
		Rim, Choke		O	O	O	O		O		O	O	O
	PD-80 RP-2	Head	O	O	O	O	O	O	O	O	O	O	
	PD-80R PD-85 PD-120 PD-105 PD-125	Head	O	O	O	O	O	O	O	O	O	O	O
Rim			O	X	X	X		X		X	X	X	
Cymbals	CY-6 CY-8 CY-12H CY-14C	Head (Bow)	O	O	O	O	O	O	O	O	O	O	
		Rim (Edge), Choke		O	O	O	O		O		O	O	O
	CY-12R/C CY-15R *1	Head (Bow)	O	O	O	O	O	O	O	O	O	O	O
		Rim (Edge/Bow), Choke		O	O	O	O		O		O	O	O

*2

O: Can be used.

X: Cannot be used.

Slash: These trigger inputs do not handle rim sounds.

*1: When choking is applied to the CY-12R/C or the CY-15R, you can then play either edge shots or bell shots.

*2: TRIGGER INPUTS 6 (AUX) and 8 (TOM) can only be used when using an optional cable (PCS-31) or standard insert cable to connect two pads to one trigger input jack. For more detailed information, refer to the previous section.

■ Recommended Parameters for the Pads

The trigger parameters (except the Xtalk Cancel) are automatically set to the most efficient values for each pad when you select the trigger type.

The trigger parameters should be adjusted as necessary to match the actual state of your configuration, and the environment in which it is being used. Make settings for the parameters as needed (Basic Trigger Parameters: p. 71; Advanced Trigger Parameters: p. 73).

Pad		Trigger Type
Pad	PD-8	PD-8
	PD-6	PD Type
	PD-7	
	PD-9	
	RP-2	PD-80R
	PD-80	
	PD-80R	
	PD-85	
	PD-100	
	PD-120	PD-120
	PD-105	PD-125
PD-125		
Kick Trigger Unit	KD-8	KD-8
	KD-7	KD Type
	KD-80	
	KD-85	
	KD-120	
Cymbal	CY-8	CY-8
	CY-6	CY Type
	CY-12H	
	CY-12R/C	
	CY-14C	
	CY-15R	
Acoustic Drum Trigger	RT-7K	RT-7K
	RT-5S	RT-5S
	RT-3T	RT-3T
Rim	Rim Edge	RIM

NOTE

The “Xtalk Cancel (Crosstalk Cancel)” value does not change when the trigger type is changed. It should be adjusted as necessary to match the actual state of your configuration and the environment in which it is being used (SETUP/TRIG BASIC/Xtalk Cancel; p. 73).



- Use the “RT-7K,” “RT-5S,” or “RT-3T” setting when you use acoustic drums to sound the TD-6V. For details refer to “Using the TD-6V with Acoustic Triggers” (p. 75).

Playing the Pads

■ Pad Head Shots and Rim Shots

When you perform a head shot, the head instrument is played; rim shots produce the sound of the rim instrument.

To play a rim shot, you must **strike both the head and the rim of the pad simultaneously**.


PD-7, PD-8, PD-9, PD-80R, PD-85, PD-105, PD-120, PD-125:

Both head and rim shots are available.




PD-6, PD-80, PD-100, RP-2:

Only head shots are available

Head Shot

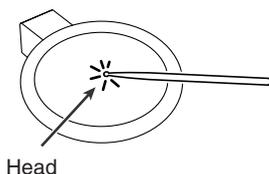


Rim Shot

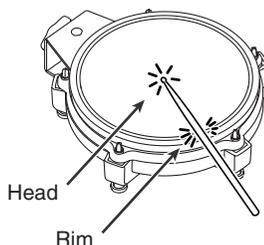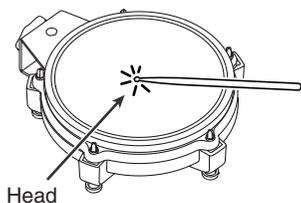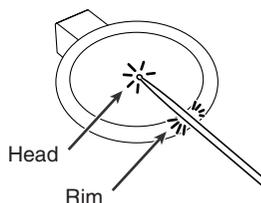

■ Cross Stick

When you perform a cross stick, the rim instrument is played.

When using the PD-80R, PD-85, PD-105, PD-120, or PD-125 to play the cross stick, be sure that you only strike the rim (outer edge) of the pad. Placing your hand on the head (center area) of the pad prevents the cross stick sound from being played properly.

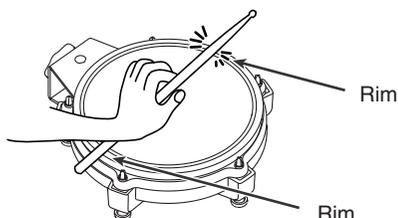

MEMO

When using rim shots on the PD-80R, PD-85, PD-105, PD-120 or PD-125, connect the pad to **TRIGGER INPUT 2 (SNARE)**.

MEMO

- When using rim shots on the PD-80R, PD-85, PD-105, PD-120 or PD-125, connect the pad to **TRIGGER INPUT 2 (SNARE)**.
- The cross stick is also referred to as a "closed rim shot."

HINT

By selecting the instruments with "XS" after the instrument name, playing a rim shot produces a rim shot tone, and cross sticking gives a cross stick tone.

■ Cymbal Bow Shots/Edge Shots/Bell Shots

When you perform a bow shot, the head instrument is played; edge shots and bell shots produce the sound of the rim instrument.

CY-6, CY-12H, CY-14C:

Capable of bow shots and edge shots.

CY-12R/C, CY-15R:


In addition to bow shots, either edge shots or bell shots can be played.

Bell shots are played by striking the bell somewhat strongly with the shoulder of the stick.




When playing edge shots with the CY-12R/C or CY-15R, use the BOW/EDGE output; for bell shots, use the BOW/BELL output.


Bow Shot

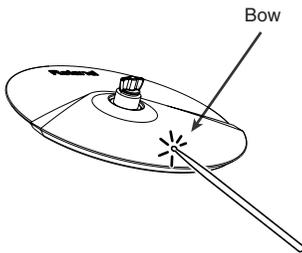

Edge Shot

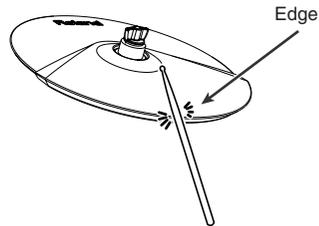


Bell Shot

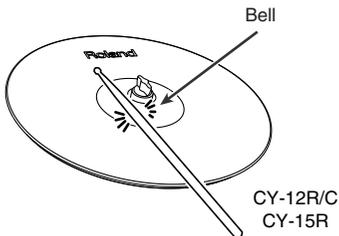


■ Cymbal Choke

By striking a pad and then squeezing the rim portion of the pad, you can mute the note while the note is still sounding. This performance technique is known as **choking**.

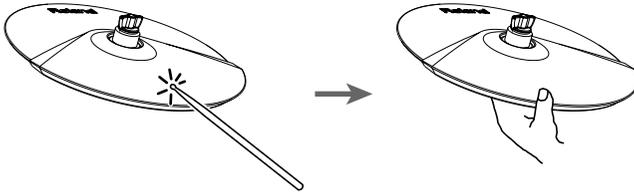

Hi-Hat Control Pedal

By connecting a hi-hat control pedal (FD-8), you can obtain consecutive control of the hi-hat's opening and closing.

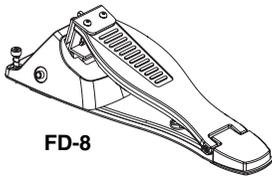

FD-8

Open Hi-Hat:

Strike the hi-hat without pressing the pedal

Closed Hi-Hat:

Strike the hi-hat with the pedal pressed

Foot Closed:

Completely press down the pedal

Foot Open:

Press the pedal and then immediately release it




PERCUSSION SOUND MODULE **TD-6V**

Quick Start

Quick Start


Choosing a Drum Kit

The TD-6V comes with 99 preset drum kits. Now's probably a good time for you to try out the drum kits by selecting and playing them.

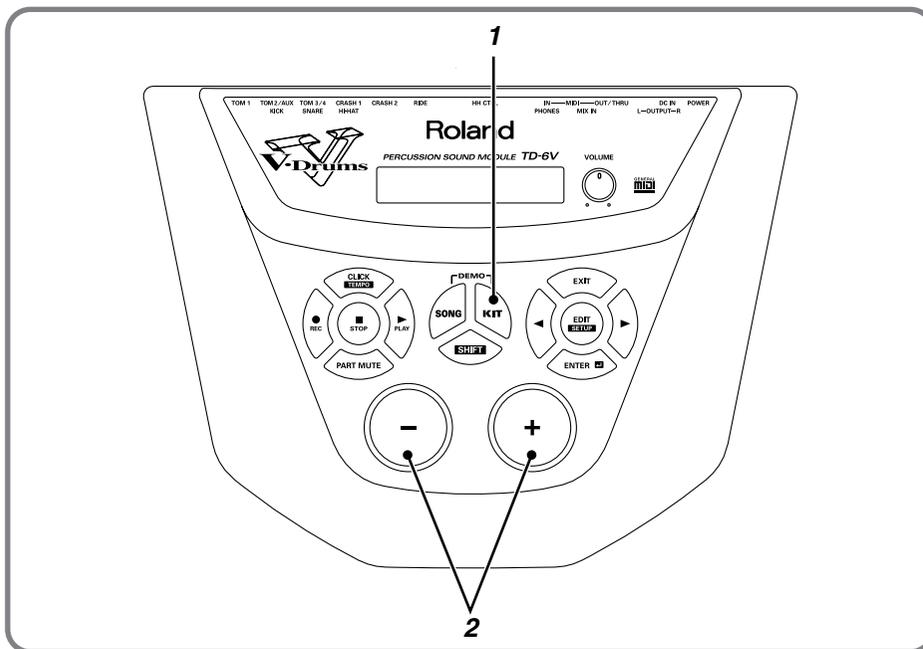

1 Press [KIT].

[KIT] lights, and the "DRUM KIT" screen appears.

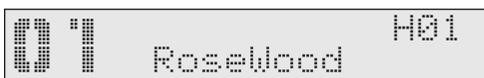

2 Press [+] or [-] to select the drum kit.

Pattern Inadvertently Starts Playing When Pad is Struck

Drum kits feature a setting whereby a pad can be struck to start playback of a song (Pad Pattern function; p. 63).

- **To stop the song currently playing:**
Press the [STOP ■] button on the panel (the [PLAY ►] light goes off).
- **To stop the song from playing when the pad is struck:**
Turn the Pad Pattern feature off (KIT/CONTROL/PadPtn; p. 63).



To see which drum sets can be selected here, refer to "Drum Kit List" (p. 118).



A **drum kit** is a collection of settings that includes each pad's instrument settings, the effect settings, and other settings. For details, refer to p. 54.



A drum kit performance is recorded in preset song #1 "DRUMS."

By switching drum kits during playback of preset song #1 (p. 44), you can listen to and compare a variety of different drum kits.



You can also use ◀ and ▶ in the "DRUM KIT" screen to select drum kits.



To see which drum set using the Pad Pattern function, refer to "Drum Kit List" (p. 118).

Playing While Listening to the Metronome/Click

Switching the Click On and Off

Try using metronome (click).

You can switch the click sound on and off by pressing [CLICK].

[CLICK] lights when set to play the sound.

Click is played



Lit


Click is not played



Unlit



You can select the instrument sound and beat used for the click. For details, refer to the p. 79.

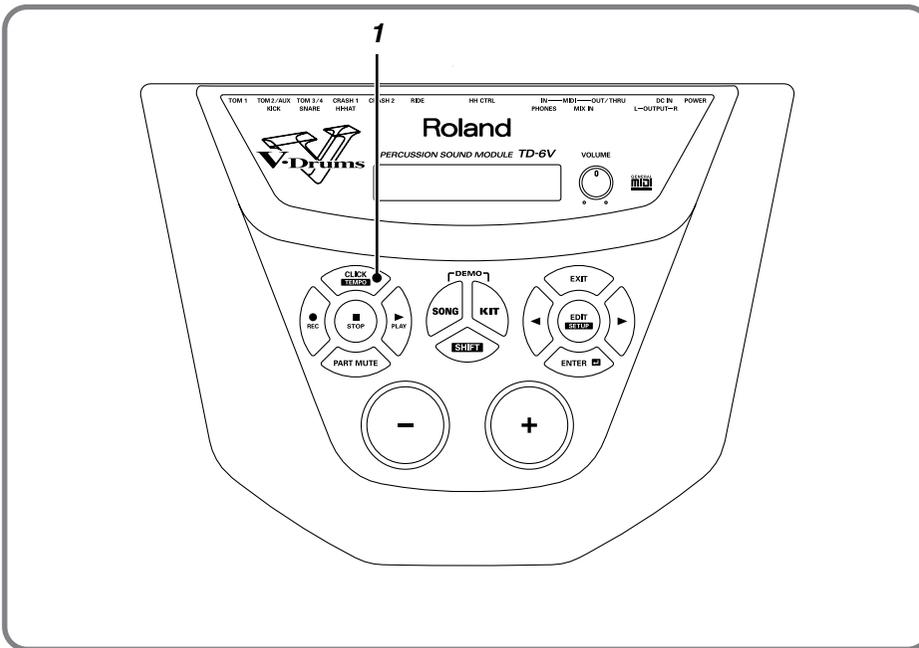


1

Press [CLICK].

[CLICK] lights, and the click sound begins to play.



Adjusting the Click Volume (Level)

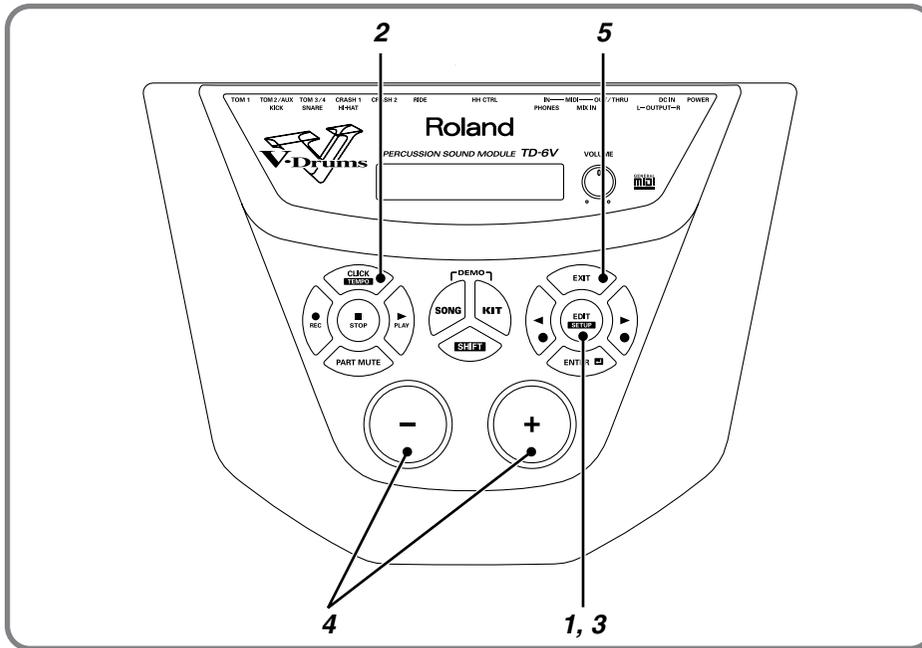

- 1** Confirm that [EDIT] is not lit.
If [EDIT] lights, you can press [KIT] or [SONG] to turn it off.



- 2** Press [CLICK].
[CLICK] lights, and the click sound begins to play.




- 3** Press [EDIT].
[EDIT] lights, and the click volume settings screen appears.



```
CLICK!
Click Level 100 #
```

- 4** Press [+] or [-] to select the volume.
- 5** When you finish making settings, press [EXIT] to end the procedure.

Adjusting the Click Tempo

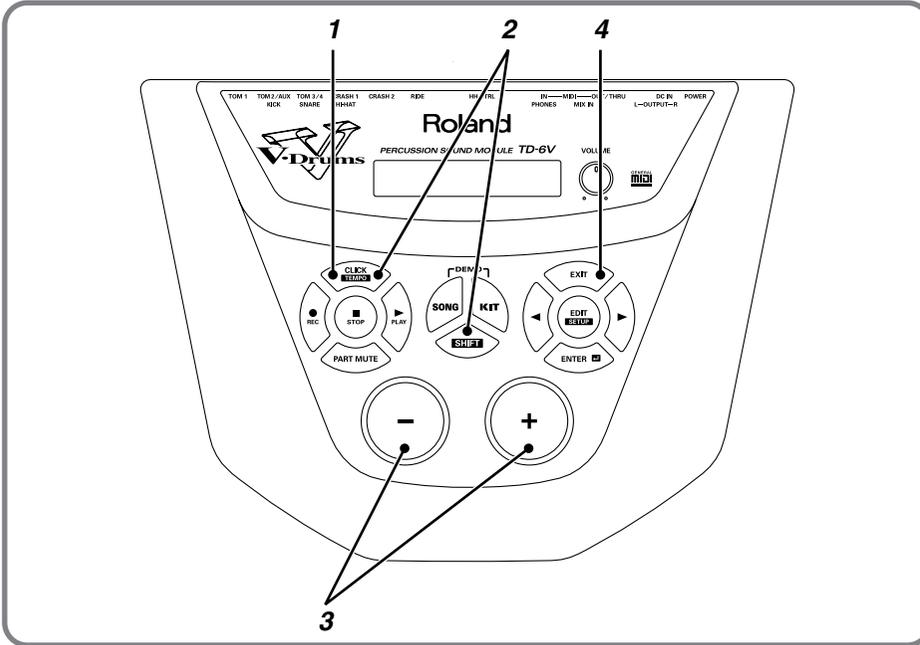

- 1 Press [CLICK].
[CLICK] lights, and the click sound begins to play.



- 2 While holding down [SHIFT], press [CLICK (TEMPO)].
The Tempo screen appears.




- 3 Press [+] or [-] to select the tempo.
- 4 When you finish making settings, press [EXIT] to end the procedure.
The "Tempo" screen is removed from the display.

Playing Along with Songs

Choosing a Song and Playing Back

The TD-6V features a sequencer that can record and play back accompaniment tracks and drum performances.

This sequencer comes loaded with 170 Preset (internal) songs.

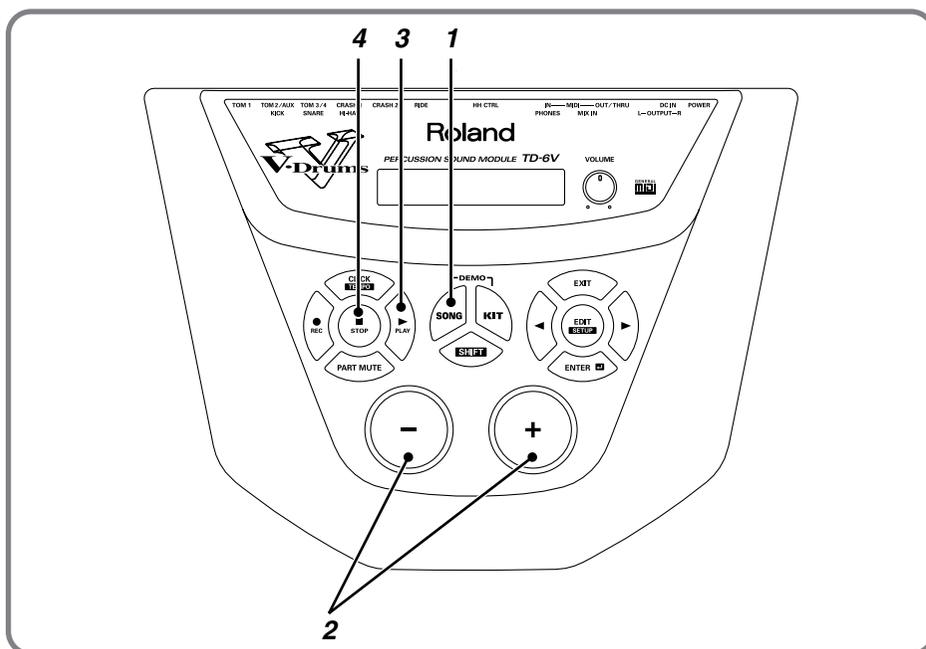

HINT

You can record songs yourself. For details, refer to the p. 92.

NOTE

The song stops suddenly when playing the pads: Striking the pad set the pad pattern function while a song is playing back will cause song playback to switch to the newly selected song. Some “songs” are very short, a few notes, or even one chord. So “sudden” stops can be caused by accidentally triggering one of these short songs. For more on this function, refer to p. 63 and p. 114.

■ Choosing a Song

1

Press [SONG].

[SONG] lights, and the SONG screen appears.



DRUMS	4/4	53
001 DRUMS	001-01	

2

Press [+] or [-] to select the song.



To see which songs can be selected here, refer to “Preset Song List” (p. 128).

HINT

By holding down [SHIFT] and pressing [+] or [-], you can select the song category.

■ Playing Back a Song

- 3** Press the [PLAY ►] button, and the song will begin playing.

[PLAY ►] lights.



- 4** To stop playback of the song, press [STOP ■].

The [PLAY ►] light goes out.



When playback of a song is stopped, you can do the following.


- Pressing [STOP ■], returns you to the beginning of the song.
- Pressing [►], advances you to the next measure.
- Pressing [◀], returns you to the previous measure.

Convenient Function for Playback

When playing back a Preset song, you can have the buttons corresponding to the drums being played light up.

You can also have the buttons light even when drum tones are muted, making this convenient for practicing with the Preset songs.

1. Hold down [SHIFT] and press [PLAY ►].
Playback of the song begins, and the buttons corresponding to the performance of the percussion part drums light up.

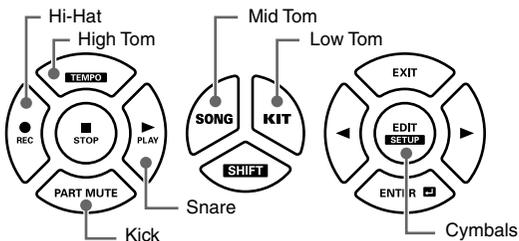

2. To stop the playback, press [STOP ■].



For details, refer to p. 83.



Function is not available with songs that have drums recorded to the drum kit part (p. 83). You can't use this function with the Preset Song #1 "Drums."

Adjusting the Song Volume

You can adjust the song volume to correct the drum kit volume balance. Song volume consists of the two following adjustments.

Backing Volume:


Adjusts the volume of melodic instruments etc. other than percussion.

Percussion Part Volume:

Adjusts the volume of the drums and percussion sounds.



The volume set here is applied to all songs.

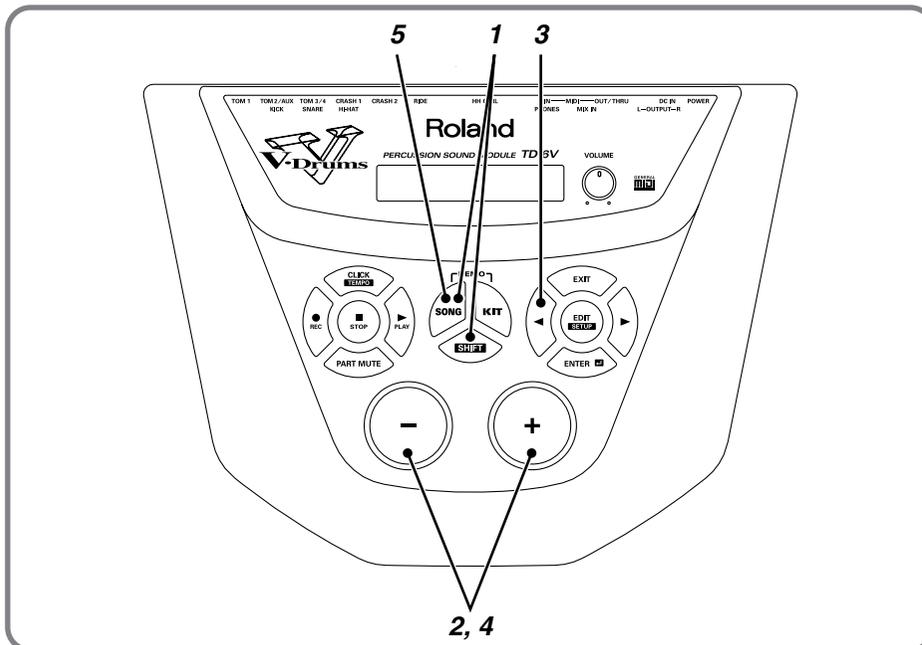

■ Setting the Backing Part (Melodic Instruments etc.) Volume

1

While holding down [SHIFT], press [SONG].

The screen for setting the volume level of the melodic instruments etc. appears.

```
UTILITY|
4 BackingLevel 100 ▶
```

2

Press [+] or [-] to select the volume.

■ Setting the Drums and Percussion Volume

3

Press [◀].

The screen for setting the volume level of the drums and percussion appears.

```
UTILITY|
4 PercPrtLevel 100 ▶
```




- The volume balance among the parts is adjusted in the “Level” (SONG/PART/Level; p. 88)
- Here, adjust the volume of the percussion part. Although drum performances in the Preset songs are recorded to the percussion part (except for preset song #1 “DRUMS”), when you create your own songs, what you play on the pads is recorded to the drum kit part. The volume level of the drum kit part is adjusted in the “MasterVolume” (Master Volume) (KIT/COMMON/MasterVolume; p. 66).

- 4 Press [+] or [-] to select the volume.
- 5 When you finish making settings, press [SONG] to end the procedure.

Temporarily Changing the Tempo of a Song


You can temporarily change the tempo of a song while playback is in progress. The song returns to its preset tempo when a different song is selected.

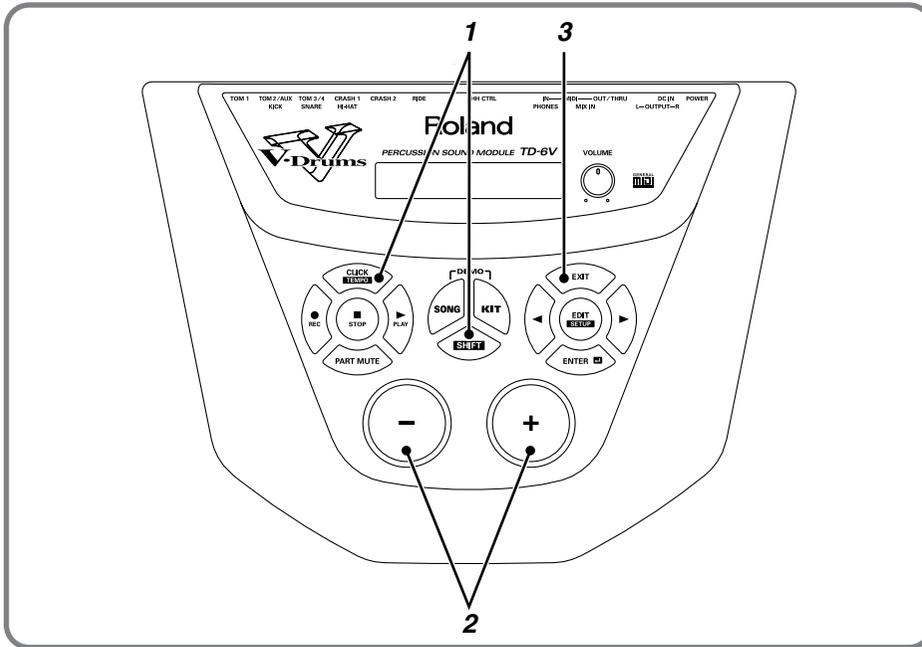

- 1 While holding down [SHIFT], press [CLICK (TEMPO)].
The Tempo settings screen appears.
- The screenshot shows the LCD display with the word 'TEMPO' at the top. Below it, a quarter note icon is followed by the text '= 124', indicating the current tempo setting.
- 2 Press [+] or [-] to select the tempo.
 - 3 When you finish making settings, press [EXIT] to end the procedure.

Muting the Pre-programmed Drums in Songs

You can mute just the drums recorded in a song. So you can play along.
Try this using Song #8, "FUNK ROK."

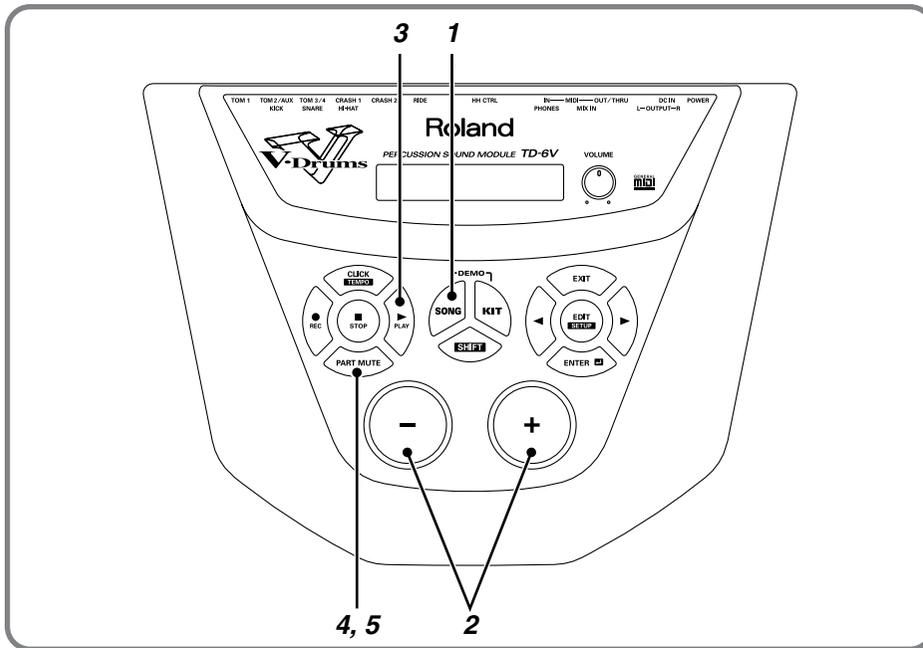

MEMO

Part Mute settings remain in effect even when the song is switched.

NOTE

Note numbers for muted drum sounds are predetermined and cannot be changed.



Refer to p. 125 for a list of mute note numbers.

1

Press [SONG].

[SONG] lights, and the SONG screen appears.



DRUMS	4/4	[G]
001 DRUMS	001-01	

2

Press [+] or [-] to select Song #8.

ROCK	4/4	[G]
008 FUNK ROK	001-01	

- 3** Press the [PLAY ►] button, and the song will begin playing.
[PLAY ►] lights.



- 4** Press [PART MUTE].
[PART MUTE] lights, and the drum sound are muted.



- 5** To hear the drums, press [PART MUTE] once more.
The [PART MUTE] light goes out.



MEMO

At the factory settings, pressing [PART MUTE] mutes only percussion part drum tones.

HINT

By pressing [SHIFT] + [PART MUTE], you can change the part to be muted (SETUP/UTILITY/Mute; p. 77).


Using the Pads to Play Songs

The pads can also be set so that they start the performance of songs when struck (**Pad Pattern function**).

This function is available only with electronic drums.

The Pad Pattern function is already selected in Drum Kit #8, "1ManBnd+."

Use this kit to try out this function.

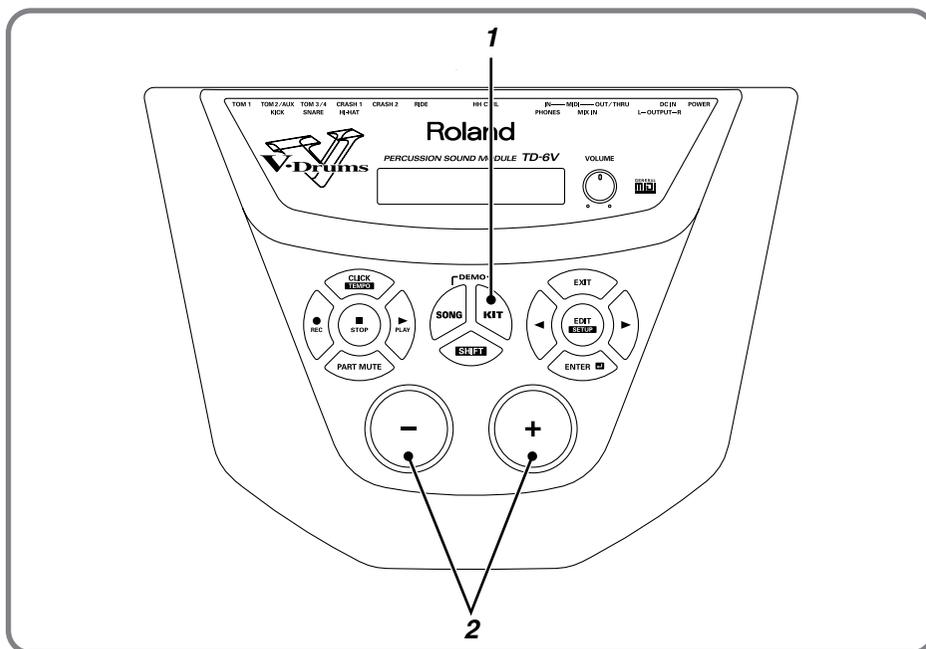

1 Press [KIT].

[KIT] lights, and the "DRUM KIT" screen appears.



2 Press [+] or [-] to select Drum Kit #14.



3 Playback of the song begins when the following pads are struck.

1 KICK: You can play the bass-line note by note (step by step) with your kick drum.

9 CRASH1 Rim: The chords progress when you strike the pad.

HINT

- Make the following settings when selecting the Pad Pattern function yourself.
 - "Pad Ptn (Pad Pattern)" (KIT/CONTROL/Pad Ptn; p. 63), "Pad Ptn Velo (Pad Pattern Velocity)" (KIT/CONTROL/Pad Ptn Velo; p. 63)
 - The following are auxiliary functions available when you use songs in which Tap Playback or One Shot Playback is specified.
 - "Quick Play" (SONG/COMMON/Quick Play; p. 86),
 - "Reset Time" (SONG/COMMON/Reset Time; p. 86),
 - "Tap Exc Sw (Tap Exclusive Switch)" (SONG/COMMON/Tap Exc Sw; p. 86)

MEMO

The following drum kits use the Pad Pattern function.

- #5 "LtnPerc+"
- #7 "TblaTun+"
- #8 "1ManBnd+"
- #10 "Guitars+"

Refer to "Drum Kit List" (p. 118) to find other drum kits. (Kit names with "+" uses the Pad Pattern function.)

Playing with a CD, Tape, or MD (Using MIX IN Jack)


Using the TD-6V's MIX IN jack allows you to play along with a CD or other external audio sources.

1

Make the connections as shown in the following figure.

Headphones,
audio equipment, amp, etc.

CD/MD deck,
cassette player, etc.

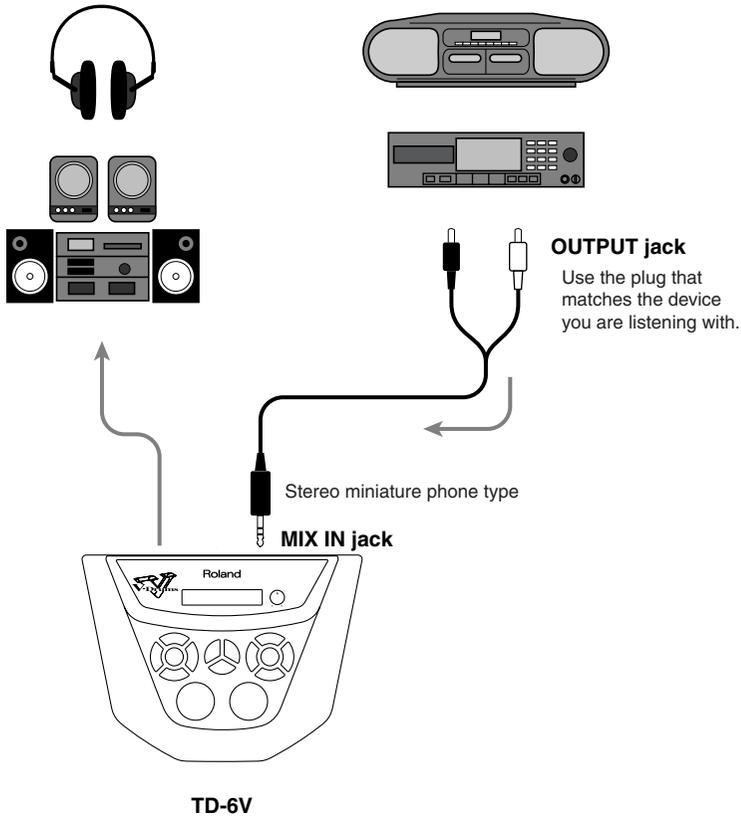

2

When you begin playback of the CD deck or other device, the performance is then audible through the headphones, audio equipment, amp, or other device.

NOTE

To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.

HINT

Adjust the volume level of the playback device when correcting the volume balance between the CD or other sound input and the drum kit.

Using the TD-6V As a General MIDI Sound Module

The TD-6V features GM mode, allowing it to play back GM scores (music data for GM sound generators) from an External Sequencer. The TD-6V has a function that lets you mute only the drum sounds in GM mode, making this a very useful feature. For details, refer to “Switch to the GM (General MIDI) Mode (GM Mode)” (p. 99) and “MIDI Messages Stop Function for Specific Parts in GM (General MIDI) Mode (GM PART)” (p. 102).



The TD-6V can also be used as a sound module along with MIDI keyboards and MIDI sequencers (p. 107).

When Using the TD-6V as a GM Sound Module (p. 99)

- The TD-6V functions as a 16-part multi-timbre sound module.
- The internal sequencer is disabled.
- Drum kit parts cannot be played using MIDI messages sent from an external device. They can be played only by playing pads connected to the TD-6V.



PERCUSSION SOUND MODULE ***TD-6V***

Advanced Use

Chapter 1 Creating Your Own Drum Kit (Kit Edit)

Parameters That Can Be Set Here

KIT

- INST (Instrument Settings) (p. 60)
 - Inst
 - Level
 - Pan
 - Pitch
 - Decay
- AMBIENCE (Ambience Settings) (p. 62)
 - Ambience Switch
 - Ambience Send Level
 - Studio Type
 - Wall Type
 - Room Size
 - Ambience Level
- EQUALIZER (Equalizer Settings) (p. 64)
 - Master Equalizer Switch
 - High Gain
 - Low Gain
- CONTROL (Settings for Various Functions) (p. 64)
 - Pad Pattern
 - Pad Pattern Velocity
 - Pitch Control Assign
 - Note Number
 - Gate Time
- COMMON (Overall Drum Kit Settings) (p. 68)
 - Master Volume
 - Pedal Hi-Hat Volume
 - Pitch Control Range
 - Drum Kit Name
- COPY (Copying Drum Kits) (p. 69)
- EXCHANGE (Exchanging Drum Kits) (p. 70)

About Drum Kits and the Drum Kit Screen


About the Drum Kits

A drum kit is a collection of settings, including how each pad's sound is played, effects settings, hi-hat control pedal settings, etc.

- There are 99 drum kits altogether.
- You can change the drum kits you like to create new drum kits.
- Changed settings are saved automatically.


HINT

You can restore drum kits with changed settings to their original factory settings. Refer to "Restoring the Factory Settings for the Edited Drum Kit" (p. 68).

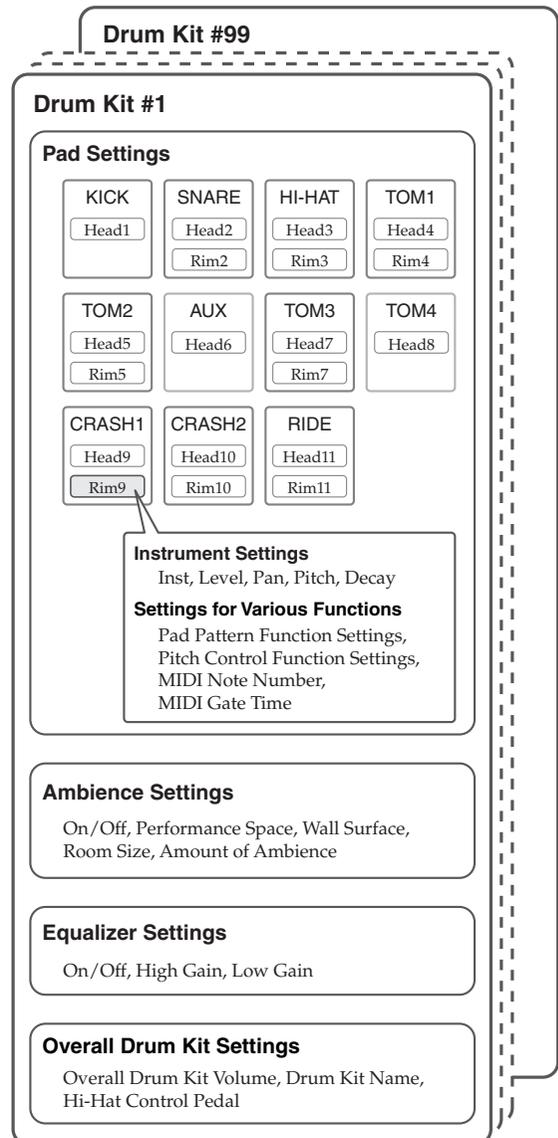

About the Drum Kit Screen

The screen displayed when [KIT] is pressed is referred to as the Drum Kit screen.

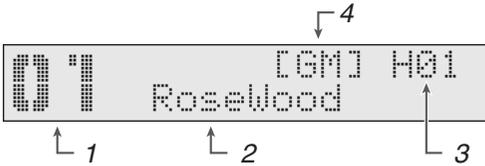

1 Drum Kit Number

Displays the number of the currently selected drum kit.

2 Drum Kit Name

The name of the currently selected drum kit is displayed.

3 Currently Selected Pad

The trigger input number for the selected pad is indicated. "H" appears when a head is selected, and "R" appears when the rim is selected.



For instructions on selecting pads, refer to p. 55.

4 GM Mode On/Off

While in GM mode, "[GM]" appears in the screen. Otherwise, in normal mode, nothing is indicated. For more detailed information about GM mode, refer to p. 99.



GM Mode is normally off when the power is turned on.

Choosing a Drum Kit (Drum Kit)

When a drum kit is selected, each pad's settings, ambience, EQ settings, etc. are switched.



To see what drum kits are provided with the factory settings, refer to the "Drum Kit List" (p. 118).

1. Press [KIT].

[KIT] lights, and the Drum Kit screen appears.



2. Press [+] or [-] to select the drum kit.

Drum Kit: 1-99

Choosing the Pad to Edit

The following two methods can be used for selecting the pad for which you want to make settings.

Choosing a Pad by Hitting It

1. Press [KIT], then [EDIT].


[KIT] and [EDIT] light.



2. Press [ENTER] [] .

3. Strike the pad to be set.

The setting screen for the struck pad appears.

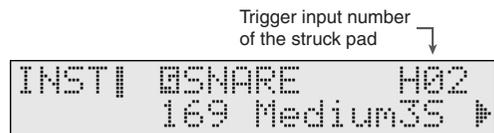

You can make settings preventing the display from switching to the instrument's settings screen even when the pad is struck. When the TD-6V is set so that the screen does not switch, the trigger input number appears in brackets ([]). For more detailed information, refer to "Locking the Setting Screen While Editing One Instrument (Note Chase)" (p. 57).



Choosing on the TD-6V

1. Press [KIT], then [EDIT].

[KIT] and [EDIT] light.



2. Press [ENTER] [OK].

The instrument selection screen appears.



3. Hold down [SHIFT] and press [◀] or [▶] to select the trigger input number for the pad being set.

The trigger input number being selected for the set pad is indicated in the upper right of the screen.

The trigger input numbers are shown in the following sequence.

H01 → H02 → R02 → H03 → R03 → H04 → R04 → H05 → H06 → H07 → H08 → H09 → R09 → H10 → R10 → H11 → R11

Selecting the Trigger Input Number ↴



NOTE

- Settings screens for trigger inputs to which no pad is connected and for rim trigger inputs for which the connected pads are not capable of producing rim sounds are also displayed.
- Trigger Inputs 6 (AUX) and 8 (TOM4) can be used only when two pads are connected to Trigger Input jacks 5/6 (TOM2/AUX) and 7/8 (TOM3/4) (p. 21). In this case, you cannot use Trigger Inputs 5 (TOM2) and 7 (TOM3). Only the numbers for the trigger inputs being used, i.e., either R05 or H06, and R07 or H08, are indicated.

Notation Used in the Screen

Trigger input numbers and names are indicated in instrument settings screens.



Screen	Name	Screen	Name
KIK	KICK	T3	TOM3
SNR	SNARE	T4	TOM4
HH	HI-HAT	CR1	CRASH1
T1	TOM1	CR2	CRASH2
T2	TOM2	RD	RIDE
AUX	AUX		

Helpful Edit Functions

Listening to an INST (Instrument) assigned to a Pad (Preview)

Even when no pad is connected to the TD-6V, you can select trigger input numbers and make settings while checking out instrument sounds.

HINT

The preview velocity is set in “Preview Velo (Preview Velocity)” (SETUP/UTILITY/Preview Velo; p. 78).

1. Hold down [SHIFT] and press [◀] or [▶] to select the trigger input number.

The trigger input number for the selected pad is indicated in the upper right of the screen.

2. While holding down [SHIFT], press [KIT]

You can preview instruments.

Locking the Setting Screen While Editing One Instrument (Note Chase)

Note Chase is a function in which a pad is selected either by striking the pad or when MIDI data corresponding to that pad is received. The display automatically switches to the settings screen when the pad settings are made.

To prevent the settings screen from switching if you happen to tap or touch other pads while making settings, set this to “OFF.”

HINT

If you want to set other pads with this setting remaining at “OFF,” you can switch settings screens by holding down [SHIFT] and pressing [◀] or [▶] to select the trigger input number.

1. While holding down [SHIFT], press [EDIT] (SETUP)]. [EDIT] lights.



3. Press [ENTER].



4. Press [-] to select “OFF.”

Even when another pad is struck, the pad settings screen is prevented from switching.



5. When you finish making settings, press [KIT] to end the procedure.

When “Note Chase” is set to “OFF,” the trigger input number appears in brackets ([]).



Choosing an Instrument

About the Instruments

The TD-6V features 1,024 different instruments which are categorized into 13 separate groups, such as KICK, SNARE, and TOM.

You can individually adjust the Level, Pan, Pitch, and Decay settings for instruments set to the pads.

Choosing from the Group Names (Inst Group)

Find and select instruments from the Group names.



To see which instrument groups can be selected here, refer to “Drum Instrument List” (p. 120).

1. Confirm that [CLICK] is not lit.

If this lights, press [CLICK] to extinguish it.

2. Press [KIT], then [EDIT].


[KIT] and [EDIT] light.



3. Press [ENTER].

4. Strike the pad you wish to set.

The setting screen for the struck pad appears.

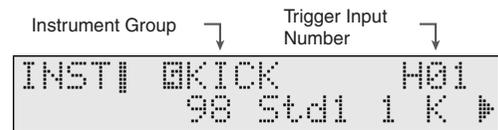

Instrument Number: 98, Instrument Name: Std1

5. Hold down [SHIFT] and press [+] or [-] to select the instrument group.

Inst Group:

KICK, SNARE, TOM, HI-HAT, CRASH, RIDE, PERC, SPECIAL, MELODIC, VOICES, REVERSE, FIXED HI-HAT, OFF

Choosing an Instrument (Inst)

Select the instrument you want to sound when the pad is struck.



To see which instruments can be selected here, refer to “Drum Instrument List” (p. 120).



No sound is played if the pads are struck when the instrument is set to “1024 OFF.”



- When the “HI-HAT” instrument group is selected for a pad, you can then use a hi-hat control pedal to control the opening and closing of the hi-hat.
- When the hi-hat control pedal is pressed, the pedal hi-hat tone automatically switches according to the instrument set for the Trigger Input 3 (HI-HAT) head. The closed hi-hat (foot) can not be changed separately.

1. Confirm that [CLICK] is not lit.

If this lights, press [CLICK] to extinguish it.

2. Press [KIT], then [EDIT].


[KIT] and [EDIT] light.



3. Press [ENTER] []].

4. Strike the pad you wish to set.

The setting screen for the struck pad appears.

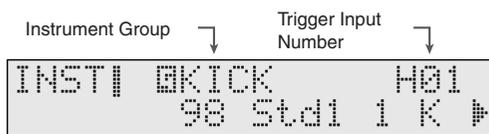

Instrument Number ↑ ↑ Instrument Name

5. Press [+] or [-] to select the instrument.



You can select the instrument group by holding down [SHIFT] and pressing [+] or [-] (p. 57).

Inst: 1-1024

Instrument Settings (INST)

You can each adjust the Level, Pan, Pitch, and Decay settings for each instruments assigned to a pad.

1. Confirm that [CLICK] is not lit.

If this lights, press [CLICK] to extinguish it.

2. Press [KIT], then [EDIT].

[KIT] and [EDIT] light.



3. Press [ENTER] []].

4. Press [<] or [>] to select the parameter to be set.



↑ Parameter to set

5. Strike the pad you wish to set.

The setting screen for the struck pad appears.

6. Press [+] or [-] to make the setting.



↑ Value

7. When you finish making settings, press [KIT] to end the procedure.

Adjusting the Volume of the Pad (Level)

Adjusts the volume of the instrument. Raising the value will increase the volume. With a setting of “0,” no sound is produced.

Make the adjustment here when correcting the volume balance between instruments.

HINT

The pedal hi-hat volume is set in “Pedal HH Vol (Pedal Hi-Hat Volume)” (KIT/COMMON/Pedal HH Vol; p. 66).

```

INSTI          KIK:H01
4 Level        127 ▶
    
```

Level: 0–127

Setting the Pan Position (Pan)

This adjusts the instrument’s pan setting (the perceived position of the sound between left and right speakers).

NOTE

- Pan settings apply to both the head and rim. The rim settings value appears in parentheses. If either the head or rim settings are changed, the settings for the other are changed automatically.

```

INSTI          SNR:R02
4 Pan          (CENTER) ▶
    
```

- This setting is applied only when connected in stereo.

```

INSTI          KIK:H01
4 Pan          CENTER ▶
    
```

Pan: L15–CENTER–R15, RANDOM, ALTERNATE

- L15:** Sound is positioned at the extreme left.
- CENTER:** Sound is positioned in the center.
- R15:** Sound is positioned at the extreme right.
- RANDOM:** The panning changes randomly each time the pad is struck.
- ALTERNATE:** The panning alternately switches between left and right each time the pad is struck.

Adjusting the Pitch (Pitch)

Adjusts the pitch of the instrument. The pitch is raised the higher the value is set. When set to “0,” the sound is played at the instrument’s default value.

NOTE

For some instruments, raising or lowering the value beyond a certain point may not produce further change.

```

INSTI          KIK:H01
4 Pitch        0 ▶
    
```


Pitch: -480–+480

Adjusting the Decay (Length of Sound) (Decay)

Adjusts the decay of the instrument’s sound. Higher settings will result in a longer decay time. When set to “0,” the sound is played at the instrument’s default value.

NOTE

For some instruments, raising or lowering the value beyond a certain point may not produce further change.

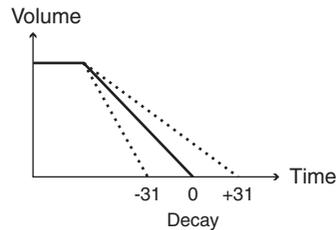

```

INSTI          KIK:H01
4 Decay        0
    
```

Decay: -31–+31

Ambience Settings (AMBIENCE)

Here you can choose (on a per drum kit basis) the location, room size, wall material, etc.

1. Press [KIT], then [EDIT].

[KIT] and [EDIT] light.

2. Press [▶] to select “AMBIENCE.”

```
KIT |
EDIT | ← AMBIENCE →
```

3. Press [ENTER].

4. Press [◀] or [▶] to select the parameter you wish to edit.

```
AMBI
Ambience Sw ON →
```

↑ Parameter to set

5. Press [+] or [-] to make the setting.

```
AMBI
Ambience Sw ON →
```

↑ Value

6. When you finish making settings, press [KIT] to end the procedure.

Switching Ambience On/Off (Ambience Switch)

This switches the ambience on and off.

```
AMBI
Ambience Sw ON →
```

Ambience Sw (Ambience Switch): OFF, ON

Ambience “Send” Level for Each Instrument (Ambience Send Level)

You can adjust the ambience level for each instrument individually. The ambience effect deepens the higher the value is set. When set to “0,” no ambience is applied.

Strike a pad to select it, then make the setting.

HINT

The entire drum kit’s overall ambience depth is set in “Amb Level (Ambience Level)” (KIT/AMBIENCE/Amb Level; p. 61).

```
AMBI KIK:H01
← AmbSendLevel 19 →
```

AmbSendLevel (Ambience Send Level):0-127

Choose “Location” Where the Drums are Played (Studio Type)

The TD-6V includes nine different internal Studio Types you can select for the drum “location.” Before you make detailed settings, use this setting to select the basic type of acoustic environment in which you will be playing.

```
AMBI
← Studio THEATER →
```

Studio (Studio Type):

LIVING (Living Room), BATHROOM, STUDIO (Recording Studio), GARAGE, LOCKER (Locker Room), THEATER, CAVE, GYM (Gymnasium), STADIUM (Domed Stadium)

Changing the Wall Surface Material (Wall Type)

Select the surface material of the walls in the room in which the drums are played.



WallType (Wall Type): WOOD, PLASTER, GLASS

WOOD:

Simulates the sound of a wood-walled room producing a warm sound.

PLASTER:

Simulates a plaster-walled room producing a more “naturally live” sound.

GLASS:

Simulates a glass-walled room producing a very bright ambience.

Determine the Room Size (Room Size)

Select the size the room in which the drums are played.



Room Size: SMALL, MEDIUM, LARGE

Adjusting the Entire Drum Kit’s Overall Ambience (Ambience Level)


Adjusts the amount of overall ambience level used for each drum kit. The ambience effect deepens the higher the value is set. When set to “0,” no ambience is applied.

HINT

The ambience level for each individual instrument is set in “Amb Snd Lvl (Ambience Send Level)” (KIT / AMBIENCE / (AmbSendLevel; p. 60).



Amb Level (Ambience Level): 0–127

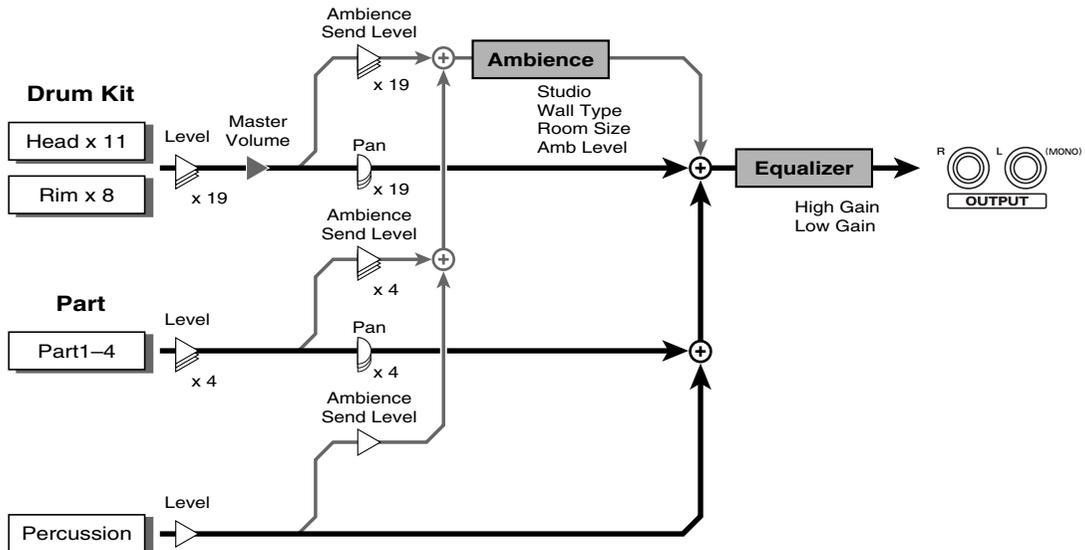

Equalizer Settings (EQUALIZER)

A two-band equalizer (for high and low frequency ranges) is used to adjust the sound of each drum kit.

An equalizer lets you boost or cut specified frequency ranges to adjust the tone. You can make separate settings for the amount of boost or cut (the gain) in the high-frequency and low-frequency ranges.

1. Confirm that [CLICK] is not lit.

If this lights, press [CLICK] to extinguish it.

2. Press [KIT], then [EDIT].

[KIT] and [EDIT] light.

3. Press [▶] to select “EQUALIZER.”

```
KIT |
EDIT | 4 EQUALIZER EQ▶
```

4. Press [ENTER] [◻].

5. Press [◀] or [▶] to select the parameter you wish to edit.

```
EQI
Master EQ Sw ON ▶
```

↑ Parameter to set

6. Press [+] or [-] to make the setting.

```
EQI
Master EQ Sw ON ▶
```

↑ Value

7. When you finish making settings, press [KIT] to end the procedure.

Switching the Equalizer On/Off (Master Equalizer Switch)

Switches the equalizer on and off.

```
EQI
Master EQ Sw ON ▶
```

Master EQ Sw (Master Equalizer Switch):
OFF, ON

Adjusting the Sound (High Gain, Low Gain)

Set the amount of boost or cut (GAIN) in the high frequencies (HIGH) and low frequencies (LOW). Raise to boost the sound, lower to cut. The equalizer has no effect when “GAIN” is set to “0.”

```
EQI
4 High Gain 0dB ▶
```

High Gain: -12dB+12dB

```
EQI
4 Low Gain 0dB
```

Low Gain: -12dB+12dB

Settings for Various Functions (CONTROL)

These are settings for a variety of different features, such as one that lets you start a song by striking a pad (Pad Pattern function; p. 63) and a function whereby you can use the hi-hat control pedal to control instrument pitches (Pitch Control; p. 64), along with MIDI Note Number and MIDI Gate Time settings.

1. Confirm that [CLICK] is not lit.

If this lights, press [CLICK] to extinguish it.

2. Press [KIT], then [EDIT].

[KIT] and [EDIT] light.

3. Press [▶] to select “CONTROL.”

```
KIT | KIK:H01
EDIT | 4 CONTROL EQ▶
```

4. Press [ENTER] [◻].

5. Press [◀] or [▶] to select the parameter you wish to edit.

```
CTRLI H01
Pad Ptn OFF ▶
```

↑ Parameter to set

6. Strike the pad you wish to set.

The setting screen for the struck pad appears.

7. Press [+] or [-] to make the setting.



8. When you finish making settings, press [KIT] to end the procedure.

Playing a Song by Hitting a Pad (Pad Pattern)

The **Pad Pattern function** is a feature that lets you start the performance of pre-specified songs by striking the pads. This function provides a very convenient way to use songs during a live performance or when practicing.

The Song Set “LOOP” or “ONE SHOT”

LOOP: After the song is played back all the way to the end, playback then repeats, starting at the beginning of the song.

ONE SHOT: Playback stops once the end of the song is reached. Each time the pad is struck returns you to the beginning of the song and starts playback.

When triggering/playing a song that is set to “LOOP” or “ONE SHOT” mode, if you trigger another song (from a pad, also in “LOOP” or “ONE SHOT” mode then the last song played will have priority. Don’t forget that some “songs” are very short, a few notes, or even one chord. So “sudden” stops can be caused by accidentally triggering one of these short songs. Always check your Pad Pattern settings.

If you have switched a song whose instrument settings are different, the sound may be interrupted for an instant.

The Song Set “Tap”

The sounds are played back in sequence each time the pad is struck.

If you are playing a song set “LOOP” or “ONE SHOT” and you then play a song set to TAP playback....then you can use/ listen to both at the same time.




- To see which songs can be selected here, refer to “Preset Song List” (p. 128).
- For the play type of the song, refer to p. 85.



- This setting cannot be made in GM mode (p. 99).
- Performances using the Pad Pattern function cannot be recorded to sequencers.



- You can select the song Category by holding down [SHIFT] and pressing [+] or [-].
- You can preview a song by holding down [SHIFT] and pressing [KIT].
- To prevent the sound of an instrument assigned to a pad from playing, set the instrument’s “Level” to “0” (KIT/INST/Level; p. 59).
- You can get a stronger response when striking the pads by playing back with the song’s velocity changed (KIT/CONTROL/Pad Ptn Velo; p. 63).
- The TD-6V features auxiliary functions for songs set to One Shot Playback and Tap Playback. For more details, refer to “Quick Play” (SONG/COMMON/Quick Play; p. 86), “Reset Time” (SONG/COMMON/Reset Time; p. 86), and “Tap Exc Sw (Tap Exclusive Switch)” (SONG/COMMON/Tap Exc Sw; p. 86).

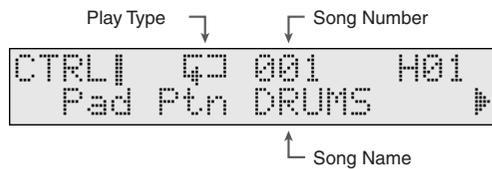

Pad Ptn (Pad Pattern): OFF, 1-270

Control the “Level” of the Pattern with Playing Dynamics (Pad Pattern Velocity)

When performing with the Pad Pattern function, you can have the velocity used for playback of the song change according to the force with which the pads are struck. When set to “OFF,” the song is played back using the velocity specified for the song, regardless of how strongly the pads are struck.



- This setting cannot be made in GM mode (p. 99).
- When “Pad Ptn (Pad Pattern)” is set to “OFF,” a horizontal line (---) is displayed, and you cannot make this setting. Refer to the previous section, then after selecting the song, make the setting.



Pad Ptn Velo (Pad Pattern Velocity): OFF, ON

Pitch Control with the Hi-Hat Control Pedal On/Off for Each Pad (Pitch Control Assign)

Pitch Control is a function that lets you change the pitch of an instrument assigned to a pad according to the amount the hi-hat control pedal is pressed. Releasing the pedal returns the instrument to its original pitch.

Here, make the Pitch Control on/off setting for each pad. When set to "OFF," the instrument's pitch remains unchanged.



The range over which the pitch changes is set in "PchCtrlRange (Pitch Control Range)" (KIT/COMMON/PchCtrlRange; p. 66).



- To prevent the pedal hi-hat sound from being played when the hi-hat pedal is pressed, set "Pedal HH Vol (Pedal Hi-Hat Volume)" to "0" (KIT/COMMON/Pedal HH Vol; p. 66).
- To make pitch changes occur more smoothly, set "PdldataThin (Pedal Data Thin)" to "1" or "OFF" (SETUP/MIDI COMMON/PdldataThin; p. 99).

```
CTRL| KIK:H01
4 Pitch Ctrl OFF
```

Pitch Ctrl (Pitch Control Assign): OFF, ON

MIDI Note Number for Each Pad (Note Number)

In each drum kit, you can set the MIDI note numbers to be transmitted/received by each pad.

For the hi-hat, make the setting only for the note number for the Open Hi-Hat (default setting is 46 (A#2)). With this setting, the closed hi-hat (initial settings value of 42 (F#2)) and pedal hi-hat (initial settings value of 44 (G#2)) are changed together to the open setting.



This setting cannot be made in GM mode (p. 99).



When the open hi-hat note number is set to "60 (C4)," the note number for the closed hi-hat becomes "56 (G#3)" and the note number for the pedal hi-hat becomes "58 (A#3)."



For information on factory-set note number settings, refer to "Drum Kit Note Numbers" (p. 125) in the "Preset Percussion Set List."

```
CTRL| KIK:H01
4 Note No. 36(C 2)
```

Note No. (Note Number): 0 (C -) -127 (G 9)

Sounding an External MIDI Device by Playing Pads Connected to the TD-6V

Specify the MIDI note numbers (key numbers on a keyboard) that will be transmitted by the TD-6V when the pads are struck.

Set this to the note number of the sound that you wish to play on the external sound module or sampler.

Using an External MIDI Device to Play TD-6V Drum Kit Part Sounds (TD-6V Used As Sound Module)

Specify the note number corresponding to the pad. When the TD-6V receives the note number specified here, the instrument assigned to the pad is played.



On the TD-6V, the drum kit part and percussion part can both be set to Channel 10 at the same time.

When two parts are set to channel 10, you should also set

“CH10Priority (Channel 10 Priority)” to determine whether the instrument (the drum kit part) or the percussion set instrument (the percussion part) is to be played when the note number is received (SETUP/MIDI COMMON/CH10Priority; p. 98).

When Setting Multiple Pads to the Same Note Number

When using an external MIDI device to play TD-6V drum kits, if overlapping pad numbers are received, the instrument assigned to the pad connected to the lowest-numbered trigger input is sounded.

When note numbers for the head and rim are duplicated, the head instrument is played.

When the pad is struck, the note number set for the pad is sent.

NOTE

When the same note number is assigned to more than one pad, then “*” appears in the settings screen for the pad that is prevented from sounding even when the Note Number is received.

```
CTRL| SNR:R02
4 Note No. 38(D 2)*#
```

HINT

The following appears in the display when “38 (D2)” is specified for the head (H02) and rim (R02) of Trigger Input 2 (SNARE) and the head (H04) of Trigger Input 4 (TOM1).

Trigger Input 2 (SNARE) Head

```
CTRL| SNR:H02
4 Note No. 38(D 2)#
```

Trigger Input 2 (SNARE) Rim

```
CTRL| SNR:R02
4 Note No. 38(D 2)*#
```

Trigger Input 4 (TOM1) Head

```
CTRL| T1:H04
4 Note No. 38(D 2)*#
```

In this case, when Note Number 38 (D2) is received, the instrument assigned to the HEAD of TRIGGER INPUT 2 (SNARE) is played.

MIDI Gate Time for Each Pad (Gate Time)

For each pad, you can specify the length of time the note will “hold” during transmission from the MIDI OUT.

Percussion sound modules normally produce sound only in response to “Note on” messages, and ignore “Note off” messages. However general-purpose sound modules or samplers do receive the note-off messages that are transmitted and respond by turning off the sound.

At the factory settings, the Gate Time setting is set to the minimum value, since a drum sound module will likely not make use of it. If a sound module received this data as it is receiving a Note OFF message, the interval will be too short, so most sounds will not be played (or it may sound like barely perceptible noise). To avoid this problem, set a longer gate time for each pad that is to be played.

NOTE

This setting cannot be made in GM mode (p. 99).

```
CTRL| KIK:H01
4 Gate Time 0.1sec
```

Gate Time: 0.1–8.0 sec (0.1 sec. steps)

Overall Drum Kit Settings (COMMON)

Make the settings for each drum kit.

1. **Confirm that [CLICK] is not lit.**
If this lights, press [CLICK] to extinguish it.
2. **Press [KIT], then [EDIT].**
[KIT] and [EDIT] light.
3. **Press [▶] to select “COMMON.”**

```
KIT |
EDIT | ◀ COMMON ▶
```

4. **Press [ENTER □].**
5. **Press [◀] or [▶] to select the parameter you wish to edit.**

```
COMMON |
MasterVolume 127 ▶
```

↑ Parameter to set

6. **Press [+] or [-] to make the setting.**

```
COMMON |
MasterVolume 127 ▶
```

↑ Value

7. **When you finish making settings, press [KIT] to end the procedure.**

Overall Drum Kit Volume (Master Volume)

You can adjust the overall volume of the drum kit while preserving the volume balance between each of the pads. The higher the value is set, the greater the volume. With a setting of “0,” no sound is produced.

HINT

The volume balance among the pads is adjusted in the “Level” (KIT/INST/Level; p. 59).

```
COMMON |
MasterVolume 127 ▶
```

MasterVolume (Master Volume): 0–127

Adjusting the Volume of the Pedal Hi-Hat Sound (Pedal Hi-Hat Volume)

For each drum kit, you can adjust the volume of the pedal hi-hat that sound (when the hi-hat control pedal is pressed). The higher the value is set, the greater the volume. With a setting of “0,” no sound is produced.

MEMO

Set the volume level of other pads with the “Level” setting (KIT/INST/Level; p. 59).

```
COMMON |
Pedal HH Vol 8 ▶
```

Pedal HH Vol (Pedal Hi-Hat Volume): 0–15

Setting the Range for the Pitch Control with the Hi-Hat Control Pedal (Pedal Pitch Control Range)

Pitch Control is a function that lets you change the pitch of an instrument assigned to a pad according to the amount the hi-hat control pedal is pressed.

Releasing the pedal returns the instrument to its original pitch.

The degree to which the pitch is to change when the hi-hat control pedal is pressed is set in semitone (half-step) increments from -24 (down two octaves) to +24 (up two octaves). When set to “0,” there is no change in pitch.



Pitch Control is turned on and off in the “Pitch Ctrl (Pitch Control)” setting (KIT/CONTROL/Pitch Ctrl; p. 64).

HINT

- To prevent the pedal hi-hat sound from being played when the hi-hat pedal is pressed, set “Pedal HH Vol (Pedal Hi-Hat Volume)” to “0” (KIT/COMMON/Pedal HH Vol; p. 66).
- To have changes in pitch occur smoothly, set “PdldataThin (Pedal Data Thin)” to “1” or “OFF” (SETUP/MIDI COMMON/PdldataThin; p. 99).

```
COMMON |
PchCtrlRange 0 ▶
```

PchCtrlRange (Pedal Pitch Control Range): -24+24

Naming the Drum Kit (Kit Name)

Each kit can be given a name of up to 8 characters.

Press [◀] or [▶] to move the cursor (under bar) to the character you want to change, then press [+] or [-] to select the character.

HINT

- Holding down [SHIFT] and pressing [+] switches through the following sequence: uppercase alphabet → lowercase alphabet → 0 → ! → space. Holding down [SHIFT] and pressing [-] switches through the sequence in reverse order.
- Holding down [SHIFT] and pressing [◀] deletes the character at the cursor position and closes the resulting space by shifting forward the characters that follow.
- Holding down [SHIFT] and pressing [▶] inserts a space at the character at the cursor position and shifts back the characters that follow.

```
COMMON
4 KitName[RoseWood]
```

KitName (Drum Kit Name): 8 characters

The following characters may be used.

```
ABCDEFGHIJKLMNOPQRSTUVWXYZ
abcdefghijklmnopqrstuvwxyz
0123456789
!@#%&'*^`_+~*/=<>()[]{}.,:;?@*+!
space
```

Copying a Drum Kit (COPY)

You can copy the instrument, ambience, equalizer, and all other settings in a drum kit.

Executing this operation deletes the content of the copy destination, so check all content carefully before carrying out this operation.

1. Confirm that [CLICK] is not lit.
If this lights, press [CLICK] to extinguish it.
2. Press [KIT], then [EDIT].
[KIT] and [EDIT] light.
3. Press [▶] to select "COPY."

```
KIT |
EDIT|4 COPY      [ENTER]
```

4. Press [ENTER].
5. Press [+] or [-] to select the copy-source drum kit.

```
COPY|
Src P01 RoseWood ▶
```

Drum Kit Number ↑ ↑ Drum Kit Name

6. Press [▶].
The copy destination drum kit selection screen appears.

7. Press [+] or [-] to select the copy-destination drum kit.

```
COPY| [ENTER]/[EXIT]
4 Dst U01 RoseWood
```

Drum Kit Number ↑ ↑ Drum Kit Name

8. Press [ENTER].
Press [EXIT] to cancel the operation.

```
Are You Sure?
[ENTER] / [EXIT]
```

9. Press [ENTER] to execute the operation.
When you have finished copying the drum kit, the Completed screen appears.

```
Completed!
```

10. When you finish copying, press [KIT] to end the procedure.

Src (Copy Source):
P01–P99 (Factory Setting Drum Kits),
U01–U99 (Drum Kits)

HINT

Select a drum kit marked with " P " as the copy source (P01–P99) to restore original factory drum kits.

Dst (Copy Destination):
U01–U99 (Drum Kits)

Restoring the Factory Settings for the Edited Drum Kit

You can restore reconfigured drum kits to their original factory conditions.

Drum Kit Copy Function

Follow the procedure described on p. 67 to select a drum kit marked with “ P ” (P01–P99) as the copy source.

Factory Reset Function

1. Select the drum kit that you want to return to factory conditions.
2. Follow the procedure for Factory Reset (p. 78) to select “THIS DRUM KIT.”

Switching the Order of the Drum Kits (EXCHANGE)

You can switch (exchange) the place in order of any two drum kits.

1. Confirm that [CLICK] is not lit.
If this lights, press [CLICK] to extinguish it.
2. Press [KIT], then [EDIT].
[KIT] and [EDIT] light.
3. Press [▶] to select “EXCHANGE.”

```
KIT |
EDIT | 4 EXCHANGE  [ENTER]
```

4. Press [ENTER].
5. Press [+] or [-] to select the (first) drum kit to be exchanged.

```
XCHG|
Src U01 AcuStick ▶
```

Drum Kit Number ↑ ↑ Drum Kit Name

6. Press [▶].

7. Press [+] or [-] to select the (second) drum kit to be exchanged.

```
XCHG| [ENTER]/[EXIT]
4 Dst U02 Rock It!
```

Drum Kit Number ↑ ↑ Drum Kit Name

8. Press [ENTER].

Press [EXIT] to cancel the operation.

```
Are You Sure?
[ENTER] / [EXIT]
```

9. Press [ENTER] to execute the operation.

When you have finished exchanging the drum kits, the Completed screen appears.

```
Completed!
```

10. When you finish exchanging, press [KIT] to end the procedure.

Src (Exchange Source):
U01–U99 (Drum Kits)

Dst (Exchange Destination):
U01–U99 (Drum Kits)

Chapter 2 Making the Pad and Trigger Settings (SETUP/TRIG)

Parameters That Can Be Set Here

SETUP

- TRIGGER BASIC (Pad Sensitivity Settings) (p. 72)
 - Trigger Type
 - Sensitivity
 - Threshold
 - Trigger Curve
 - Crosstalk Cancel
- TRIGGER ADVANCED (Detailed Pad Settings) (p. 74)
 - Scan Time
 - Retrigger Cancel
 - Mask Time
 - Rim Sensitivity

Selecting the Pad Type (Trigger Type)

To ensure that the TD-6V accurately receives signals sent from the pads, be sure to specify the **trigger type** (the type of pads being used).

Set each trigger input as described below.

Setting the trigger type allows the TD-6V to accurately detect the force used to strike the pads and avoid secondary sounding of a pad (retriggering). You can also set this up for PD-85 and PD-120 rim shots.

After making the trigger type settings, adjust the pad sensitivity and carry out other adjustments as needed.

MEMO

When you set the Trigger Type, the following parameters are automatically set to the most efficient values.

They should be adjusted as necessary to match the actual state of your configuration and the environment in which it is being used.

Basic Trigger Parameter

(SETUP/TRIG BASIC; p. 71)

- Sensitivity
- Threshold
- TrigCurve

Advanced Trigger Parameter

(SETUP/TRIG ADVNCD; p. 73)

- Scan Time
- Retrig Cancel
- Mask Time
- Rim Sens

NOTE

Trigger parameters other than Trigger Type influence the head AND the rim.

1. While holding down [SHIFT], press [EDIT (SETUP)].

[EDIT] lights.

2. Press [▶] to select “TRIG BASIC.”

```
SET|          KIK:H01
UP | 4 TRIG BASIC [00]▶
```

About the Screen Display

Notation Used in the Screen

Trigger input numbers and names are indicated in pad and trigger settings screens.

```
SET|          KIK:H01
UP | 4 TRIG BASIC [00]▶
```

Screen	Name	Screen	Name
KIK	KICK	T3	TOM3
SNR	SNARE	T4	TOM4
HH	HI-HAT	CR1	CRASH1
T1	TOM1	CR2	CRASH2
T2	TOM2	RD	RIDE
AUX	AUX		

About the Input Indicator

The input indicator is indicated in the pad and trigger settings screens as shown in the following. A flag is raised when the indicator reaches the maximum position (→ → []).

Indicator

```

BASICI  →+ SNR:H02
4 Sensitivity  7 ▶
  
```

Maximum Indication → Indicator (Maximum)

```

BASICI  [00] SNR:H02
4 Sensitivity  7 ▶
  
```

3. Press [ENTER] []].

```

BASIC1      KIK:H01
TrigTyp     KD-8 ▶
    
```

4. Strike the pad you wish to set.

The setting screen for the struck pad appears.

You can also make your selection by holding down [Shift] and pressing [◀] or [▶].

MEMO

This setting applies to both the head and rim.

5. Find the trigger type for the pad you are using from the following chart.

Pad	Trigger Type	Pad	Trigger Type
PD-8	PD-8	KD-7	KD Type
PD-6	PD Type	KD-80	
PD-7		KD-85	
PD-9		KD-120	
RP-2	PD-80R	CY-8	CY-8
PD-80		CY-6	CY Type
PD-80R		CY-12H	
PD-85		CY-12R/C	
PD-100		CY-14C	
PD-120	PD-120	CY-15R	
PD-105	PD-125	RT-7K	RT-7K
PD-125		RT-5S	RT-5S
KD-8	KD-8	RT-3T	RT-3T
		Rim Edge	Rim

HINT

- Use the "RT-7K," "RT-5S," or "RT-3T" setting when you use acoustic drums to sound the TD-6V. For details refer to "Using the TD-6V with Acoustic Triggers" (p. 75).

NOTE

There may be no improvement of conditions when non-Roland pads are used, even after changing the trigger parameter settings. For fullest expression in performance, we recommend the exclusive use of Roland pads.

6. Press [+] or [-] to make the setting.

NOTE

When rim is selected, "Rim" becomes the set value, and no changes can be made to the setting. Select head, then make the settings for the head. However, using AUX and TOM4 requires selecting the rim settings for TOM2 and TOM3.

```

BASIC1      KIK:H01
TrigTyp     KD-8 ▶
    
```

↑ Value

7. When you finish making settings, press [KIT] or [SONG] to end the procedure.

TrigTyp (Trigger Type):

PD-8, PD Type, PD-80R, PD-120, PD-125, KD-8, KD Type, CY-8, CY Type, RT-7K, RT-5S, RT-3T, RIM

Connecting Two Pads to Trigger Input 5/6 (TOM2/AUX) and 7/8 (TOM3/4)

- With a single pad connected to each of the trigger inputs, carry out Steps 1-3 as described above.
- Select a pad by striking the pad's rim.

If using Trigger Input 5/6 (TOM2/AUX), select the TOM2 rim; to use Trigger Input 7/8 (TOM3/4), select the TOM3 rim.

You can also make your selection by holding down [Shift] and pressing [◀] or [▶].

```

BASIC1      T3:R07
TrigTyp     Rim ▶
    
```

- Press [-] to change the trigger input number and name to "AUX:H06" or "TOM4:H08" and enable AUX or TOM4.

```

BASIC1      T4:H08
TrigTyp     PD-8 ▶
    
```

4. Disconnect the connecting cable, then connect two pads to TRIGGER INPUT 5/6 and 7/8 using the optional cable (PCS-31).

When connecting the pads, refer to the instructions in "Connecting Two Pads to Trigger Inputs 5/6 (TOM2/AUX) and 7/8 (TOM3/4)" (p. 21).

5. Press [+] and [-] to set the trigger type for the pads used for AUX and TOM4.

MEMO

To enable the TOM2 and TOM3 rims again, set the AUX and TOM4 trigger type to "Rim."

If you hit a rim shot BEFORE restoring the AUX and TOM4 trigger type to "Rim" while a PD-8 or other pad is connected, the AUX and TOM4 sounds will play instead of the TOM2 and TOM3 rim sounds, and the dynamic response won't be correct. Change the settings back to "Rim."

MEMO

You can assign different instruments to TOM2 and AUX, and TOM3 and TOM4.

Setting the Pad Sensitivity and Making Other Settings (TRIGGER BASIC)

You can make more detailed settings for the pad type and sensitivity.

The following parameters (Basic Trigger Parameters except the "Xtalk Cancel") are automatically set to the most efficient values for each pad when you select the "TrigTyp (Trigger Type)" (SETUP/TRIG BASIC/TrigTyp; p. 69).

Make the settings for each parameter as needed.

1. While holding down [SHIFT], press [EDIT (SETUP)].

[EDIT] lights.

2. Press [▶] to select "TRIG BASIC."



3. Press [ENTER].

4. Press [◀] or [▶] to select the parameter you wish to edit.



↑ Parameter to set

5. Strike the pad you wish to set.

The settings screen for the struck pad appears, and the input indicator fluctuates.

6. Press [+] or [-] to make the setting.



↑ Value

7. When you finish making settings, press [KIT] or [SONG] to end the procedure.

Adjusting the Pad Sensitivity (Sensitivity)

Adjust the sensitivity of the pad to regulate the pad response. Higher settings result in higher sensitivity, so that the pad will produce a loud volume even when struck softly.


Adjust the "Sensitivity" value so that the strongest strikes cause the input indicator (p. 69) to reach nearly all the way to the maximum level.

```
BASIC1 KIK:H01
4 Sensitivity 8
```

Sensitivity: 1-16

Setting the Minimum Levels for the Pads (Threshold)

This setting allows a trigger signal to be received only when the pad is struck harder than a specified force. This can be used to prevent a pad from sounding in response to extraneous vibrations from another pad. In the following example, B will sound but A and C will not sound.

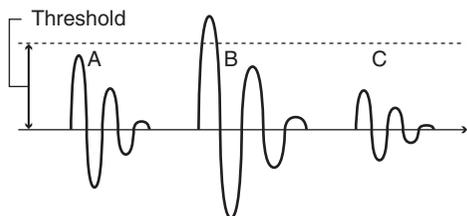

When set to a higher value, no sound is produced when the pad is struck lightly.

Gradually raise the "Threshold" value while striking the pad. Check this and adjust accordingly. Repeat this process until you get the perfect setting for your playing style.

```
BASIC1 KIK:H01
4 Threshold 5
```

Threshold: 0-15

Adjust How Playing Dynamics Changes the Volume (Trigger Curve)

This setting allows to control the relation between the velocity (striking force) and changes in volume (the dynamic curve.)


Adjust this curve until the response feels as natural as possible.

```
BASIC1 KIK:H01
4 TrigCurve LINEAR
```

TrigCurve (Trigger Curve): LINEAR, EXP1, EXP2, LOG1, LOG2, SPLINE, LOUD1, LOUD2


LINEAR:

The standard setting. This produces the most natural correspondence between the strength of the strike and the change in volume.

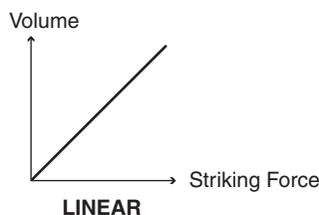


EXP1,EXP2:

Compared to LINEAR, a strong strike will produce a greater change.

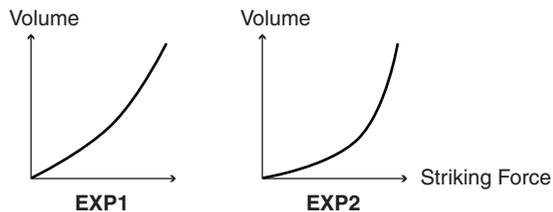


LOG1,LOG2:

Compared to LINEAR, a soft strike will produce a greater change.

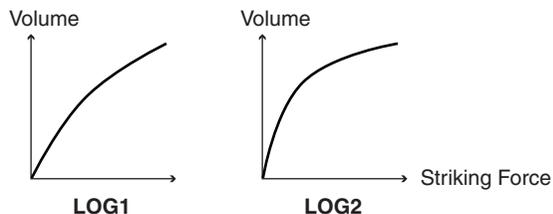

SPLINE:


Extreme changes are made in response to the force used to strike the pad.

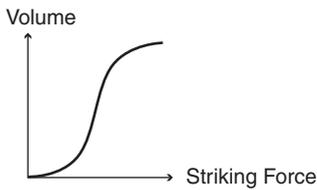

SPLINE

LOUD1, LOUD2:

Changes made in response to the striking force are minor, maintaining a volume level at which it is easy to play. When using drum triggers, these settings help maintain stable levels.

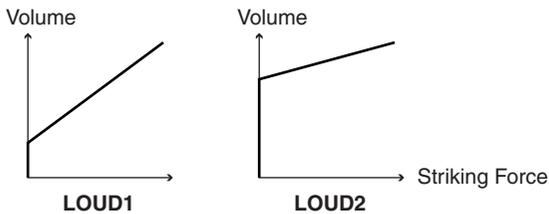

LOUD1

LOUD2

Eliminate Crosstalk Between Pads (Crosstalk Cancel)

When two pads are mounted on the same stand, the vibration produced by hitting one pad may trigger the sound from another pad unintentionally (This is called **crosstalk**.) You can avoid this problem by adjusting Crosstalk Cancel on the pad that is sounding inadvertently.

If the value is set too high, then when two pads are played simultaneously, the one that is struck less forcefully will not sound. So be careful and set this parameter to the minimum value required to prevent such crosstalk. With a setting of "OFF," crosstalk prevention does not function.

HINT

In some cases, you can prevent crosstalk between two pads you have connected by increasing the distance between the pads.

Example: When hitting a snare pad, the hi-hat cymbal also sounds

Set the "Xtalk Cancel (Crosstalk Cancel) for the pad being used for the hi-hat while striking the snare pad. Striking the snare pad, raise the "CROSSTALK" setting for the hi-hat cymbal pad from "OFF" through "20," "25.." until crosstalk no longer occurs. As this value is raised, the hi-hat cymbal pad will be less prone to receive crosstalk from other pads.

HINT

The pad's settings screen is not switched when "Note Chase" is set to "OFF" (SETUP/MIDI COMMON/Note Chase; p. 57, p. 97).



Xtalk Cancel (Crosstalk Cancel):
OFF, 20, 25, 30, 35, 40, 45, 50, 55, 60, 65, 70, 75, 80

Fine-Tuning the Trigger Parameter Settings (TRIGGER ADVANCED)

The following parameters (Advanced Trigger Parameters) are automatically set to the most efficient values for each pad when you select the TRIGGER TYPE (SETUP/TRIG BASIC/TrigTyp; p. 69), and don't require adjustment, except if you experience any of the problems that are discussed below.

1. While holding down [SHIFT], press [EDIT (SETUP)]. [EDIT] lights.
2. Press [▶] to select "TRIG ADVNCD."



3. Press [ENTER].
4. Press [◀] or [▶] to select the parameter you wish to edit.



↑ Parameter to set

5. Strike the pad you wish to set. The settings screen for the struck pad appears, and the input indicator fluctuates.
6. Press [+] or [-] to make the setting.




↑ Value

7. When you finish making settings, press [KIT] or [SONG] to end the procedure.

Adjusting the Trigger Signal Detection Time (Scan Time)

Since the rise time of the trigger signal waveform may differ slightly depending on the characteristics of each pad or acoustic drum trigger (drum pickup), you may notice that identical hits (velocity) may produce sound at different volumes. If this occurs, you can adjust the “SCAN TIME” so that your velocity of playing can be detected more precisely. As the value is set higher, the time it takes for the sound to be played increases.

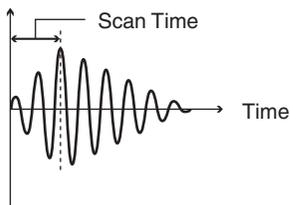

Making the settings


While repeatedly hitting the pad at a constant force, gradually raise the Scan Time value from 0 msec, until the resulting volume stabilizes at the loudest level. At this setting, try both soft and loud strikes, and make sure that the volume changes appropriately.

```
ADUNCDI KIK:H01
Scan Time 2.0ms
```

Scan Time: 0–4.0 (ms) (0.1 ms steps)

Detecting Trigger Signal Attenuation and Cancelling Incorrect Triggering (Retrigger Cancel)

Playing snare drum pads and other devices with commercially available acoustic drum triggers attached may result in altered waveforms, which may also cause inadvertent sounding at Point A in the following figure.

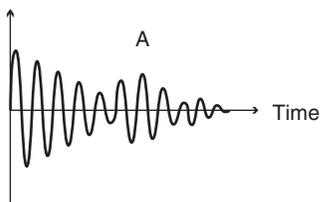

This occurs in particular at the decaying edge of the waveform. Retrigger Cancel detects such distortion in and prevents retriggering from occurring.

Although setting this to a high value prevents retriggering, it then becomes easy for sounds to be omitted when the drums

played fast (roll etc.). Set this to the lowest value possible while still ensuring that there is no retriggering.



You can also eliminate this problem of retriggering with the Mask Time setting. Mask Time does not detect trigger signals if they occur within the specified amount of time after the previous trigger signal was received. Retrigger Cancel detects the attenuation of the trigger signal level, and triggers the sound after internally determining which trigger signals were actually generated when the head was struck, while weeding out the other false trigger signals that need not trigger a sound.

Making the settings

While repeatedly striking the pad, raise the “Retrig Cancel” value until retriggering no longer occurs.


```
ADUNCDI KIK:H01
Retrig Cancel 5
```

Retrig Cancel (Retrigger Cancel): 1–16

Double Triggering Prevention (Mask Time)

On a kick pad, for example, if the beater bounces back and strikes the pad a second time immediately after the intended stroke—or, like with acoustic drums if you leave the bass drum beater against the head—it can cause a single strike to “double trigger” (two sounds instead of the intended one). The Mask Time setting helps to prevent such problems. Once a pad has been hit, any additional trigger signals occurring within the specified “MASKTIME” (0–64 msec) will be ignored.

When set to a high value, it then becomes easy for sounds to be omitted when the kick is struck repeatedly in rapid succession. Set this to as low a value as you can.

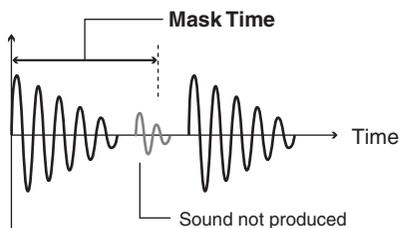

If two or more sounds are being produced when you strike the head just once, then adjust Retrigger Cancel.

Making the settings

While stepping on the pad being used for the kick, raise the “Mask Time” value until there is no more bouncing (sounds made by the rebounding of the beater).

```
ADUNCD| KIK:H01
4 Mask Time 8ms
```

Mask Time: 0–64ms (4ms steps)

Setting Rim Sensitivity on the PD-80R, PD-85, PD-105, PD-120, and PD-125 (Rim Sens)

When a PD-80R, PD-85, PD-105, PD-120 or PD-125 is used for TRIGGER INPUT 2 (SNARE), you can then adjust the Rim Sensitivity.

Setting this to a higher value makes it easier to get rim sounds. When set to “OFF,” playing a rim shot produces the head instrument’s sound. Increasing the value excessively may cause the rim instrument to sound as well when the head is struck.

NOTE

- This can be adjusted only when the Trigger Input 2 “Trigger Type (Trig Type)” is set to either “PD-80R,” “PD-120,” or “PD-125” (SETUP/TRIG BASIC/Trig Type; p. 69).
- When the trigger type is set to something other than “PD-80R,” “PD-120,” or “PD-125,” or when a trigger input other than Trigger Input 2 is selected, a horizontal line (---) appears, and you cannot make the setting.

```
ADUNCD| KIK:H01
4 Rim Sens ---
```

- You cannot adjust the rim sensitivity of the PD-7, PD-8, and PD-9. Both rim and head use the same values.

```
ADUNCD| SNR:H02
4 Rim Sens 11
```

Rim Sens (Rim Sensitivity): OFF, 1–15

Using the TD-6V with Acoustic Triggers

First, attach an RT-series drum trigger (or commercially available acoustic drum trigger) to the acoustic drums. When finished, proceed with the following settings.

1. Set the trigger type to “RT-3T,” “RT-5S,” or “RT-7K.”
(SETUP/TRIG BASIC/Trig Type; p. 69)
2. Set “Threshold” to “0” as a reference value.
(SETUP/TRIG BASIC/Threshold; p. 72)
3. Set “TrigCurve (Trigger Curve)” to “LINEAR” as a reference value.
(SETUP/TRIG BASIC/TrigCurve; p. 72)
4. Set the “Sensitivity.”
(SETUP/TRIG BASIC/Sensitivity; p. 71)
5. Set the “Scan Time.”
(SETUP/TRIG ADVNCD/Scan Time; p. 74)
Strike the head several times with the same force, and adjust this parameter if the volume is uneven.
6. Set the “Retrig Cancel (Retrigger Cancel).”
(SETUP/TRIG ADVNCD/Retrig Cancel; p. 74)
This prevents multiple notes from sounding when a drum is struck once (mainly for a snare drum or toms).
7. Set the “Mask Time.”
(SETUP/TRIG ADVNCD/Mask Time; p. 74)
On a kick drum, this prevents two sounds instead of the intended “one.”
8. Set the “Xtalk Cancel (Crosstalk Cancel).”
(SETUP/TRIG BASIC/Xtalk Cancel; p. 73)
This prevents other instruments with drum triggers from sounding when a drum to which a drum trigger has been attached is struck. If a higher value is set, and if two pads are played simultaneously, the one that is struck less forcefully will not sound. Set this to as low a value as you can.
9. Set the “Threshold.”
(SETUP/TRIG BASIC/Threshold; p. 72)
If notes are unintentionally sounded even after you have adjusted the “CROSSTALK” setting, adjust the “THRESHOLD.” Setting this to a higher value may prevent sounds from being produced when the pad is struck lightly. Set this to as low a value as you can.
10. Set the “TrigCurve (Trigger Curve).”
(SETUP/TRIG BASIC/TrigCurve; p. 72)
If changes in playing dynamics do not produce a natural change in the volume of the TD-6V instrument, adjust this parameter.

Chapter 3 Global Settings for the TD-6V (SETUP/UTILITY, Factory Reset)

Parameters That Can Be Set Here

SETUP

- UTILITY (Overall Settings) (p. 77)
 - LCD Contrast
 - Percussion Part Level
 - Backing Level
 - Mute
 - Master Tune
 - Preview Velocity
 - Available Memory
- Factory Reset (Restoring the Factory Settings) (p. 79)

Making the Global Settings (UTILITY)

Overall settings that apply to the entire TD-6V.

1. While holding down [SHIFT], press [EDIT (SETUP)].

[EDIT] lights.



2. Press [ENTER].
3. Press [◀] or [▶] to select the parameter you wish to edit.



↑ Parameter to set

4. Press [+] or [-] to make the setting.



↑ Value

5. When you finish making settings, press [KIT] or [SONG] to end the procedure.

Display Contrast Adjustment (LCD Contrast)

The display contrast is strongly influenced by the location of the TD-6V and the lighting of the room it's in. Adjust this parameter when needed. A larger value results in a brighter screen.



LCD Contrast: 1-16

Percussion Part Volume Control (Percussion Part Level)

This adjusts the volume of the percussion part.

Raising the value will increase the volume. With a setting of "0," no sound is produced.

NOTE

- This setting cannot be made in GM mode (p. 99).
- This volume setting is applied to all songs. Even when songs are switched, the setting does not change.

HINT

The volume level of the drum kit part is adjusted in the "MasterVolume (Master Volume)" (KIT/COMMON/MasterVolume; p. 66).



PercPrntLevel (Percussion Part Level): 0-127

Backing Instruments Volume Control (Backing Level)

This adjusts the volume of the backing part (Parts 1–4). Raising the value will increase the volume. With a setting of “0,” no sound is produced.

NOTE

- This setting cannot be made in GM mode (p. 99).
- This volume setting is applied to all songs. Even when songs are switched, the setting does not change.

HINT

- The volume level of the drum kit part is adjusted in the “MasterVolume (Master Volume)” (KIT/COMMON/MasterVolume; p. 66).
- Adjust the volume level of each part to correct the volume balance among the parts (SONG/PART/Level; p. 88).
- Hold down [SHIFT] and press [SONG] to jump to this screen.



UTILITY
4 BackingLevel 100

BackingLevel (Backing Level): 0–127

Muting Parts of a Song (Mute)

Select the part that is to be muted when [PART MUTE] is pressed. [PART MUTE] lights while the muting is in effect.

NOTE

This setting cannot be made in GM mode (p. 99).

HINT

Hold down [SHIFT] and press [PART MUTE] to jump to this screen.

MEMO

- This setting remains in effect even when songs are switched and when the TD-6V is played using data from an external MIDI device.
- All percussion instruments in the Preset songs (except for Preset song #1 “DRUMS”) are recorded to the percussion parts.

- Note numbers for muted drum instruments are predetermined and cannot be changed. For more on muting note numbers, refer to the “Preset Percussion Set List” (p. 124).
- Performances using the TD-6V and pads are recorded as a drum kit part.



UTILITY
4 Mute SongDrum

Mute:
SongDrum, SongDrm/Prc, UserDrmPart, Part1, Part2, Part3, Part4, Part1-4

SongDrum:

Mutes only the drum instruments in the percussion part (the percussion instruments still sound). This is convenient when performing with Preset songs.

SongDrm/Prc:

All percussion part instruments are muted.

UserDrmPart:

Mutes the performance recorded to the drum kit part. This is convenient when you want to perform along with songs you have recorded yourself.

Part1, Part2, Part3, Part4:

The individual parts are muted.

Part1-4:

All Parts 1–4 are muted.

Tuning the TD-6V (Master Tune)

This tunes Parts 1–4 as a whole.

The reference pitch is 440.0 Hz.

MEMO

Tuning of the drum kit part and percussion part instruments is not affected by this setting.



UTILITY
4 MasterTune 440.0

MasterTune (Master Tune):
415.3–466.2 (Hz) (0.1 Hz steps)

Preview Volume Control (Preview Velocity)

This sets the velocity used when an instrument is previewed. Raising the value will increase the volume. With a setting of “0,” no sound is produced.

```
UTILITY|
4 Preview Velo 90 ▶
```

Preview Velocity: 0–127

Checking the Remaining Amount of Memory (Available Memory)

You can check the amount of available memory.

```
UTILITY|
4 AvailMemory 100%
```

AvailMemory (Available Memory): 0–100%

Restoring the Factory Settings (Factory Reset)

This restores the pad and instrument settings, song data, and other information stored in the TD-6V to the original factory settings.



All data and settings stored in the TD-6V are lost in carrying out this operation. Use the “Bulk Dump” operation to save crucial data and settings to an external MIDI device (SETUP/BULK DUMP/Bulk Dump; p. 103).



When [SHIFT] and [EDIT (SETUP)] are held down when the power is turned on, the display jumps to the Factory Reset screen. When carrying out Factory Reset, read from step 4.

1. While holding down [SHIFT], press [EDIT (SETUP)].

[EDIT (SETUP)] lights.

2. Press [▶] to select “FactoryReset”

```
SET|
UP | 4 FactoryReset|
```

3. Press [ENTER] [↵].

The Factory Reset screen appears.

4. Press [+] or [-] to select the parameter you want to restore to factory settings.

```
F RST| [ENTER] / [EXIT]
Reset ALL
```

↑ Value

5. Press [ENTER] [↵].

Press [EXIT] to cancel the operation.

The confirmation screen appears.

```
Are You Sure?
[ENTER] / [EXIT]
```

6. If you're ready to proceed, press [ENTER] [↵], and the Factory Reset operation will be executed.

7. When the Factory Reset is finished, the Completed screen appears.

```
Completed!
```

Reset (Factory Reset):

ALL, THIS DRUM KIT, ALL DRUM KITS, ALL SONGS

ALL:

All internal settings will be restored to the factory settings.

THIS DRUM KIT:

Only the settings for the currently selected drum kit are restored to the factory settings.

ALL DRUM KITS:

The settings for all of the TD-6V's internal drum kits are restored to the factory settings.

ALL SONGS:

All of the TD-6V's internal song data is restored to the factory settings.

Chapter 4 Setting the Metronome (Click Edit)

Parameters That Can Be Set Here

CLICK (Click Settings) (p. 80)

- Click Level
- Time Signature
- Interval
- Inst
- Pan
- Play Count In
- Rec Count In

Switching the Click On/Off (Click)

You can switch the click sound on and off by pressing [CLICK]. [CLICK] lights while the click sound is set to be played.

Click is played



Lit

Click is not played



Unlit



Click cannot be used in GM mode (p. 99).

Tempo Adjustment (Tempo)

For each song selected, the tempo of the click changes to the tempo specified for that song.

1. Press [CLICK].
[CLICK] lights, and the click sound begins to play.
2. While holding down [SHIFT], press [CLICK] (TEMPO).
The "TEMPO" screen appears.



3. Press [+] or [-] to select the tempo.
4. When you finish making settings, press [EXIT] to end the procedure.
The "TEMPO" screen disappears.



TEMPO: 20-260

Setting the Way the Click Sounds

Settings that determine how the click sounds, volume, time signature etc.

1. Confirm that [EDIT] is not lit.
If this lights, press [KIT] or [SONG] to extinguish it.
2. Press [CLICK].
[CLICK] lights, and the click sound begins to play.
3. Press [EDIT].
4. Press [◀] or [▶] to select the parameter you wish to edit.



↑ Parameter to set

5. Press [+] or [-] to make the setting.



↑ Value

6. When you finish making settings, press [KIT] or [SONG] to end the procedure.

Volume Adjustment (Click Level)

Adjusts the volume of the click sound. Raising the value will increase the volume. With a setting of "0," no sound is produced.



Click Level: 0-127

Setting the Time Signature (Time Signature)

Specify the time signature of the click sound. When the numerator is set to “0,” no accent is added to the first beat. The metronome click sound then plays at a fixed volume.

NOTE

It is not possible to change the time signature of the metronome clicks while a song is playing back. The metronome clicks corresponds to the time signature of the song.



Time Sig (Time Signature):
0–13/2, 0–13/4, 0–13/8, 0–13/16

Setting the Interval (Interval)

Setting How the Sound Plays (Interval).



Interval:
1/2 (half note), 3/8 (dotted quarter note),
1/4 (quarter note), 1/8 (eighth note),
1/12 (12th note), 1/16 (16th note)

Selecting the Click Sound (Inst)

You can choose the sound for the metronome click. When the parameter is set to “VOICE,” the click is sound becomes a human voice.



Inst:
VOICE, CLICK, BEEP, METRONOME, CLAVES,
WOOD BLOCK, STICKS, CROSS STICK,
TRIANGLE, COWBELL, CONGA, TALKING DRUM,
MARACAS, CABASA, CUICA, AGOGO,
TAMBOURINE, SNAPS, 909 SNARE, 808
COWBELL

Stereo Position (Pan)

You can localize the metronome click within the stereo sound field.

NOTE

The effect set here is applied only when connected in stereo.



Pan: L15–Center–R15

L15: Sound is positioned at the extreme left.
CENTER: Positions the sound in the center.
R15: Sound is positioned at the extreme right.

Inserting a Count Before Playback or Recording (Play Count In, Rec Count In)

You can have a count sound (click) inserted before recording or playback of a song begins.



PlayCountIn (Play Count In):
OFF, 1MEAS, 2MEAS



RecCountIn (Rec Count In):
OFF, 1MEAS, 2MEAS

OFF:
Playback/recording will begin without a count-in.
1MEAS:
Playback/recording begins after a 1-measure count-in.
2MEAS:
Playback/recording begins after a 2-measure count-in.

Chapter 5 Editing Songs (SONG Edit)

Parameters That Can Be Set Here

SONG

- COMMON (Overall Settings) (p. 86)
 - Tempo
 - Play Type
 - Quick Play
 - Reset Time
 - Tap Exclusive Switch
 - Song Lock
 - Song Name
- PART (Pad Settings) (p. 88)
 - Percussion Set/Inst
 - Level
 - Pan
 - Ambience Send Level
 - Bend Range
- COPY (Copying Songs) (p. 90)
- DELETE (Deleting Songs) (p. 91)
- ERASE (Erasing Songs) (p. 92)

About Songs and the Song Screen

About Songs

The TD-6V's sequencer organizes music into six parts. The Drum Kit part is used to record/play back what is played on the pads. Additionally, Part 1, Part 2, Part 3, and Part 4 are the four backing instrument parts (backing parts), and there is another Percussion part.

The collective performance of these six parts is called a **song**.

NOTE

Sequencer cannot be used in GM mode (p. 99).

Preset (Internal) Songs (Songs 1–170)

What the various parts should play has already been recorded. The performances in Preset patterns cannot be changed, deleted, or recorded. These songs come in handy for backing during drum practice, or for live performances.

MEMO

Drum performances in the Preset songs (except song #1 "DRUMS") are recorded to the percussion part.

Using Preset Songs

You cannot save any changes you make to the settings in preset songs. While you can make temporary changes to these settings, they revert to the settings already selected for that preset song when another song is selected.

Furthermore, preset songs cannot be edited or recorded.

- The following appears in the display when you attempt to change the settings. Press [EXIT] to dismiss the message.

A rectangular LCD display with a pixelated font. The text reads: "Changes Not Saved!" on the first line and "Preset Song! [EXIT]" on the second line.

- The following is displayed when the [REC ●] is pressed with a Preset song selected and select a new user song automatically.

A rectangular LCD display with a pixelated font. The text reads: "New User Song" on the first line and "Selected!" on the second line.

If you want to change, edit, or record any preset song settings, copy them to a user song (p. 89). When user song settings are altered, the changes are saved automatically.


About Preset Song Copyright

The sounds, phrases and songs contained in this product are sound recordings protected by copyright. Roland hereby grants to purchasers of this product the permission to utilize the sound recordings contained in this product for the creation and recording of original musical works; provided however, the sound recordings contained in this product may not be sampled, downloaded or otherwise re-recorded, in whole or in part, for any other purpose, including but not limited to the transmission of all or any part of the sound recordings via the internet or other digital or analog means of transmission, and/or the manufacture, for sale or otherwise, of any collection of sampled sounds, phrases or patterns, on CD-ROM or equivalent means.

The sound recordings contained in this product are the original works of Roland Corporation. Roland is not responsible for the use of the sound recordings contained in this product, and assumes no liability for any infringement of any copyright of any third party arising out of use of the sounds, phrases and patterns in this product.


User Songs (Songs 171–270)

These are songs that can be recorded and edited. You can record performances exactly as they are played using the pads or an external MIDI keyboard (Realtime Recording; p. 92). Changes in User song settings are saved automatically.

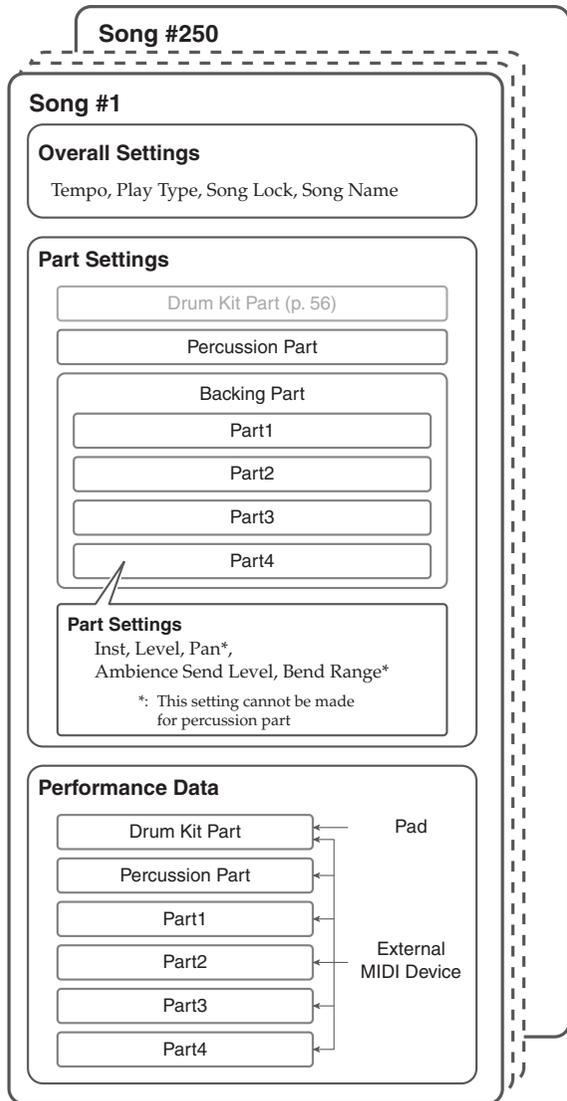

About the Song Screen

The screen that appears when [SONG] is pressed is called the Song screen.

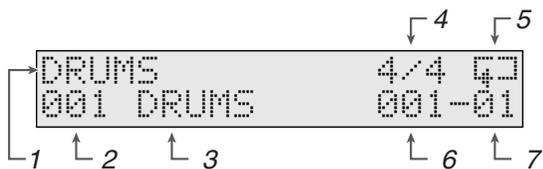

1 Song Category

Shows the category of the currently selected song.

2 Song Number

Shows the number of the currently selected song.

3 Song Name

Shows the name of the currently selected song.

4 Beat

5 Playback Method Setting (p. 85)


This indicates the song playback type.

6 Measure Number

The current measure number is indicated. Pressing [PLAY ►] starts playback from the beginning of the measure indicated here.

7 Beat

The current beat is indicated.

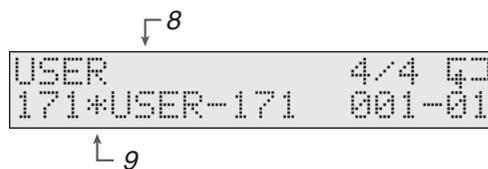

8 Song Lock Setting

"[Square Icon]" appears with User songs that have Song Lock (p. 86) set to "ON."

9 New User Song

"*:" indicates a new User song.

MEMO

Only the performance data is recorded to the drum kit part. When the song is played back, the settings of instruments and effects etc. of the current selected drum kit are used.

Choosing a Song

Part settings are switched when a song is selected.



To see which songs can be selected here, refer to “Preset Song List” (p. 128).

Choosing from a Category (Song Category)

Select songs by searching the category names.

1. Press [SONG].

[SONG] lights, and the SONG screen appears.



2. Hold down [SHIFT] and press [+] or [-] to select the song category.

SONG CATEGORY:

DRUMS, ROCK, METAL, BALLAD, R&B, BLUES, POPS, R&R, COUNTRY, JAZZ, FUSION, DANCE, REGGAE, LATIN, BRAZIL, BASICPTN, LOOP, 1SHOT, TAP, USER

Choosing a Song (Song)

1. Press [SONG].

[SONG] lights, and the SONG screen appears.



2. Press [+] or [-] to select the song.

SONG: 001-270

Playing Back a Song

1. Select the song that you wish to play back (foregoing paragraph).

2. Press [PLAY ▶].

[PLAY ▶] lights, and playback of the song begins.

3. To stop playback of the song, press [STOP ■].

The [PLAY ▶] light goes out, and the song returns to the beginning of the measure that was being played back.

MEMO

When playback of a song is stopped, you can do the following.

- Pressing [STOP ■], returns you to the beginning of the song.
- Pressing [▶], advances you to the next measure.
- Pressing [◀], returns you to the previous measure.

HINT


- To temporarily change the tempo of the song, hold down [SHIFT] and press [CLICK] (p. 85).
- To insert a count before playback of the song, set “PlyCountIn (Play Count In)” (CLICK/PlyCountIn; p. 80).

Convenient Function for Playback

During playback of a song, you can have the buttons corresponding to the drums being played in the percussion part light up.

You can also have the buttons light even when Part Mute (p. 84) is in use, making this convenient for practicing with the Preset songs.

Drum Instrument	Button Lit	Note Number
Kick	[PART MUTE]	35, 36
Snare	[PLAY ▶]	37, 38, 39, 40
Low Tom	[KIT]	41, 43
Hi-Hat	[REC]	42, 44, 46
Mid Tom	[SONG]	45, 47
Hi Tom	[CLICK]	48, 50
Cymbal	[EDIT]	49, 51, 52, 53, 55, 57, 59

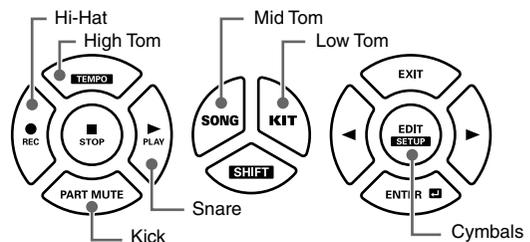

MEMO

Even when "9 Perc Only" or "10 Special" is selected for the percussion set, the buttons still light up according to the note numbers.

NOTE

- The correspondence between the lighted buttons and note numbers is predetermined and cannot be changed.
- This function cannot be used with songs in which drum performances are recorded to the drum kit part.

1. Select the song to be played back (p. 83).
2. Hold down [SHIFT] and press [PLAY ►].
Playback of the song begins, and the buttons corresponding to the performance of the percussion part drums light up.
3. To stop the playback, press [STOP ■].

Adjusting the Song Volume

You can adjust the volume of the song in the backing parts (Parts 1–4) and the percussion part.

Raising the value will increase the volume. With a setting of "0," no sound is produced.

NOTE

This volume setting is applied to all songs.

HINT

- Although drum performances in the Preset songs are recorded to the "percussion part," when you create your own songs, what you play on the pads is recorded to the "drum kit part." The volume level of the drum kit part is adjusted in the "MasterVolume" (Master Volume) (KIT/COMMON/MasterVolume; p. 66).
 - Adjust the volume level of each part to correct the volume balance among the parts (SONG/PART/Level; p. 88).
1. While holding down [SHIFT], press [SONG].
The screen for setting the volume of the backing parts appears.

```
UTILITY|
# BackingLevel 100 ▶
```

2. Press [+] or [-] to make the setting.

3. Press [◀].

The screen for setting the volume of the percussion part appears.

```
UTILITY|
# PercPrLevel 100 ▶
```

4. Press [+] or [-] to make the setting.
5. When you finish making settings, press [SONG] to end the procedure.

```
UTILITY|
# BackingLevel 100 ▶
```


BackingLevel (Backing Level): 0–127

```
UTILITY|
# PercPrLevel 100 ▶
```

PercPrLevel (Percussion Part Level): 0–127

Muting a Selected Part (Part Mute)

Each time [PART MUTE] is pressed the mute is alternately turned on or off. [PART MUTE] lights when the mute is on. At the factory settings, only percussion part drum tones are muted.

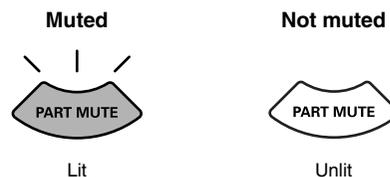

HINT

The part to be muted here is selected in "Mute" (SETUP/UTILITY/Mute; p. 77). Hold down [SHIFT] and press [PART MUTE] to jump to the settings screen.

NOTE

Settings for muted parts are applied to all songs.

Overall Song Settings (COMMON)

Make the settings for each song.

NOTE

- If you want to save any changes made to Preset song settings, first copy the song to a User Song before making the changes (SONG/COPY; p. 89). Changes made to a Preset song are only temporary, so when you select a different song, the song reverts to its predetermined part settings. Changes made to Preset songs cannot be saved.
- Settings of parts which have the Song Lock (SONG/COMMON/Song Lock; p. 86) set to "ON" cannot be changed. Make the settings after setting this to "OFF."

1. Confirm that [CLICK] is not lit.

If this lights, press [CLICK] to extinguish it.

2. Press [SONG], then [EDIT].

[SONG] and [EDIT] light.



3. Press [ENTER].

4. Press [◀] or [▶] to select the parameter you wish to edit.



↑ Parameter to set

5. Press [+] or [-] to make the setting.



↑ Value

6. When you finish making settings, press [SONG] to end the procedure.

Setting the Tempo (Tempo)

You can set the tempo for each song individually. When a song is selected, the tempo you specify here will be set automatically. Changes made to a Preset song are temporary, and when you select a different song, the song reverts to its predetermined settings.



Tempo: 20–260


Temporarily Changing the Tempo of a Song During Playback

You can temporarily change the tempo of a song while it is being played back.

When another song is selected, the song reverts to the tempo (SONG/COMMON/Tempo) preset for that song. This is convenient for practicing or other times when you want to temporarily change to tempo for playback.

1. While holding down [SHIFT], press [CLICK].

The Tempo screen appears.

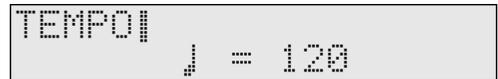

2. Press [+] or [-] to make the setting.

Selecting How the Song Plays Back (LOOP, 1SHOT, TAP) (Play Type)

This specifies how songs will be played back. When [PLAY ▶] is pressed or when the pad specified with the Pad Pattern function (p. 63) is struck, then the song is played back using the type specified here.

NOTE

- User songs recorded with "Quantize" (p. 94) set to "OFF" may not play back correctly with Tap Playback.
- New songs cannot be set to "Tap." Change this after first recording something to the song.



PLAY TYPE: LOOP, 1SHOT, TAP

LOOP (◀▶):

After the pattern is played back all the way to the end, playback then repeats, starting at the beginning of the song. Playback continues until [STOP ■] is pressed.

1SHOT (ONE SHOT) (→):

Playback stops once the end of the song is reached. When set to Pad Pattern Function (p. 63), each time the pad is struck returns you to the beginning of the song and starts playback.

TAP (⏸):

The sounds in the song are played back one by one in sequence each time [PLAY ▶] is pressed.

When set to Pad Pattern Function (p. 63), the sounds are played back in sequence each time the pad is struck.

Playing Back the Song from the First Note/Event (Quick Play)

This is an auxiliary function available when "LOOP" or "1SHOT" is specified as the Play Type for the song (SONG/COMMON/Play Type; previous section).

Quick Play starts playback of the pattern from the first note (first event) even if when you recorded the pattern, you left a pause at the beginning. For example if you had just played/recorded freely, ignoring the tempo clock.



When "Quick Play" is set to "ON," stopping playback of the song returns you to the beginning of the song.



The blank portion is played when you return to the beginning of the song while in Loop Playback.



Quick Play: OFF, ON

Reset Time When Using Tap Playback (Reset Time)

This is an auxiliary function available when "TAP" is specified as the Play Type for the song (SONG/COMMON/Play Type; p. 85).

This feature automatically returns you to the beginning of the song if during Tap Playback the song is not played back within a specified interval. This value sets the time from when the song was last played back; if the set time elapses, then returns to the beginning before it is next played back.

When performing with the Pad Pattern function, if you start playback by striking a pad and then do not strike the pad again within the specified interval, the song is returned to the beginning.

If it is set to "OFF," this function will be disabled.



Reset Time: OFF, 0.1–8.0s (0.1 sec steps)

Preventing Layering of Sounds in Tap Playback (Tap Exclusive Switch)

This is an auxiliary function available when "TAP" is specified as the Play Type for the song (SONG/COMMON/Play Type; p. 85).

In Tap playback, if one sound is set to play before the previous sound has finished playing, this setting allows you to either have the previous sound stop and the subsequent sound start playing (ON) or have the two sounds layered (OFF).



Tap Exc SW (Tap Exclusive Switch): OFF, ON

OFF:

The previous sound continues to play to the end, while the subsequent sound is superimposed on it.

ON:

The previous sound stops while in progress, and the subsequent sound starts playing.

Protecting User Song Settings (Song Lock)

To prevent accidental erasure or editing, you can lock User songs.

If you attempt to change the settings of a song for which this set to "ON," a warning screen appears, and you cannot change the settings.

However, you cannot select this during recording of a song or when a new User song is selected by pressing [SHIFT] +

[STOP ■]. Since you can also lock unused User Songs, then in situations such as when using the TD-6V as a sound module, it's a good idea to lock songs when you want to save their settings.

[] appears in the Song screen when a User Song is locked.



The settings screen does not appear when a Preset song is selected.



Song Lock: OFF, ON

Naming a Song (Song Name)

You can use up to eight characters when naming a User song. Press [◀] or [▶] to move the cursor (under bar) to the character you want to change, then press [+] or [-] to select the character.

NOTE

The settings screen does not appear when a Preset song is selected.

HINT

- Holding down [SHIFT] and pressing [+] switches through the following sequence: uppercase alphabet → lowercase alphabet → 0 → ! → space. Holding down [SHIFT] and pressing [-] switches through the sequence in reverse order.
- Holding down [SHIFT] and pressing [◀] deletes the character at the cursor position and closes the resulting space by shifting forward the characters that follow.
- Holding down [SHIFT] and pressing [▶] inserts a space the character at the cursor position and shifts back the characters that follow.

```
COMMON
4 SngName[USER-171]
```

SngName (Song Name): 8 characters

The following characters may be used.

```
ABCDEFGHIJKLMNOPQRSTUVWXYZ
abcdefghijklmnopqrstuvwxyz
0123456789
!##%&'*^`_+~*/=<>()[]{}.,:;?@#++!
space
```

Part Settings (PART)

Set the backing parts (Parts 1–4) and percussion part in each song.

NOTE

- Changes made to a Preset song are only temporary, and when you select a different song, the song reverts to its predetermined part settings. If you want to save any changes made to Preset song settings, first copy the song to a User Song before making the changes (SONG/COPY; p. 89).
- Settings of parts which have the Song Lock (SONG/COMMON/Song Lock; p. 86) set to “ON” cannot be changed. Make the settings after setting this to “OFF.”



For the drum kit part settings, refer to Chapter 1.

1. **Confirm that [CLICK] is not lit.**
If this lights, press [CLICK] to extinguish it.
2. **Press [SONG], then [EDIT].**
[SONG] and [EDIT] light.
3. **Press [◀] or [▶] to select the part to be set.**

```
SONG|
EDIT|4 PART:Perc [▶]
```

↑ Part to set

4. **Press [ENTER].**
5. **Press [◀] or [▶] to select the parameter you wish to edit.**

```
PERC|
Set 1 Standard 1 [▶]
```

↑ Parameter to set

6. **Press [+] or [-] to make the setting.**

```
PERC|
Set 1 Standard 1 [▶]
```

↑ Value

7. **When you finish making settings, press [SONG] to end the procedure.**

Choosing Percussion Set and Instruments (Percussion Set, Inst)

Select a percussion set for the percussion part and instruments for Parts 1–4.

Percussion Part

The TD-6V features ten Preset percussion sets that are ready to use.



You cannot change the content of the Preset percussion sets.




To see which percussion sets can be selected here, refer to the “Preset Percussion Set List” (p. 124).



Percussion Set:

A collection of a number of percussion instruments. A different percussion instrument is assigned to each note number, so multiple instruments can be used at one time.

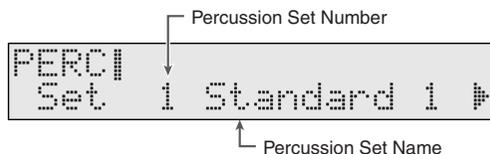

Set (Percussion Set): 1–10

Parts 1–4

You can select all internal tones in sequence, including variation tones.

You can switch instrument groups for the backing instruments by holding down [SHIFT] and pressing [+] or [-].



To see which backing instruments and instrument groups can be selected here, refer to the “Backing Instrument List” (p. 126).




Instrument numbers correspond to the program numbers (1–128).




Variation Tone:

This is a type of tone that varies slightly from that of the instrument number. The number of variation tones varies with the instrument number.

Capital sounds

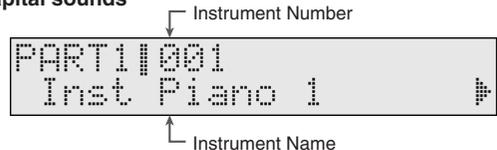

Variation sounds

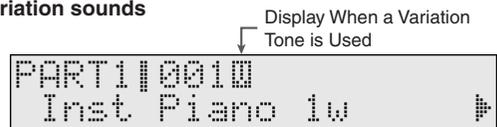

Backing Inst: 1–128

Adjusting the Part Volume (Level)

Specifies the volume at each point. Raising the value will increase the volume. With a setting of “0,” no sound is produced.

Adjust here to balance the volume levels of the different parts.



LEVEL: 0–127

Adjusting the Stereo Position (Pan)


Adjusts the pan (the perceived location of the sound between the left and right speakers).

NOTE

The effect set here applies only when connected in stereo.

MEMO

Percussion parts do not feature the Pan setting.

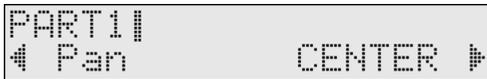

Pan: L15–Center–R15

L15: Sound is positioned at the extreme left.

CENTER: Sound is positioned in the center.

R15: Sound is positioned at the extreme right.

Adjusting the Amount of Ambience (Ambience Send Level)

You can adjust the ambience level for each part individually. The ambience effect deepens the higher the value is set. When set to “0,” no ambience is applied.

NOTE

The specified ambience effect is applied to the currently selected drum kit. To check how the effect sounds, select a drum kit that has the Ambience Switch set to “ON.” (KIT/ AMBIENCE/ Ambience SW; p. 60)



AmbSendLevel: 0–127

Adjusting the Bend Range (Bend Range)

This adjusts the degree to which the pitch of the sound is changed when the maximum Pitch Bend is received from an external MIDI device.

This can be set from “0” to “24” (two octaves) in semitone steps. When set to “0,” no change is made.

MEMO

Percussion parts do not feature the Bend range setting.



Bend Range: 0–24

Copying a Song (COPY)

This is used to copy Preset songs and User songs to other User songs.

Part instruments and volume and other settings are copied just as they are.

Executing this operation deletes the content of the copy destination, so check all content carefully before carrying out this operation.

1. Confirm that [CLICK] is not lit.

If this lights, press [CLICK] to extinguish it.

2. Press [SONG], then [EDIT].

[SONG] and [EDIT] light.

3. Press [▶] to select “COPY.”



4. Press [ENTER].

5. Press [◀] or [▶] to select the copy source song.



↑ Copy source song

6. Press [▶].

The copy destination song selection screen appears.

7. Press [+] or [-] to select copy destination song.

HINT

You can select a song that has not yet been used by holding down [SHIFT] and pressing [STOP ■]. New User songs are indicated by “* ” in the display.

```
COPY| [ENTER]/[EXIT]
4 Dst 171*USER-171
```

↑ Copy destination song

8. Press [ENTER □].

Press [EXIT] to cancel the operation.

```
Are You Sure?
[ENTER] / [EXIT]
```

9. Press [ENTER □] to execute the operation.

When you have finished copying the song, the Completed screen appears.

```
Completed!
```

10. When you finish copying, press [SONG] to end the procedure.

Src (Copy Source): 001-270

Dst (Copy Destination): 171-270

Deleting a Song (DELETE)

This deletes all of the song's settings, turning the song into a new User song.

1. Confirm that [CLICK] is not lit.

If this lights, press [CLICK] to extinguish it.

2. Press [SONG], then [EDIT].

[SONG] and [EDIT] light.

3. Press [▶] to select “DELETE.”

```
SONG|
EDIT| 4 DELETE
```

4. Press [ENTER □].

5. Press [+] or [-] to select the song to be deleted.

```
DELE| [ENTER]/[EXIT]
Song 171 USER-171
```

↑ Song being deleted

6. Press [ENTER □].

Press [EXIT] to cancel the operation.

```
Are You Sure?
[ENTER] / [EXIT]
```

7. Press [ENTER □] to execute the operation.

When you have finished deleting the song, the Completed screen appears.

```
Completed!
```

8. When you finish deleting, press [SONG] to end the procedure.

SONG (Delete Song): 171-270

Erasing Performance Data in a Song (ERASE)

This erases the User song. Only the performance data is erased, and the beat, measure length, parts, and the song's other settings are left intact. You can also erase specific parts.

1. Confirm that [CLICK] is not lit.

If this lights, press [CLICK] to extinguish it.

2. Press [SONG], then [EDIT].

[SONG] and [EDIT] light.

3. Press [▶] to select "ERASE."

A screenshot of the SONG EDIT menu. The screen shows 'SONG' and 'EDIT' at the top. Below them, '4 ERASE' is highlighted with a cursor. To the right, there is a small icon of a square with a plus sign.

4. Press [ENTER].

5. Press [+] or [-] to select the song to be erased.

A screenshot of the ERASE menu. The screen shows 'ERASE' at the top. Below it, 'Song 171 USER-171' is highlighted with a cursor. An arrow points from the text 'Song being erased' below to the '171' in the screenshot.

↑ Song being erased

6. Press [▶].

7. Press [+] or [-] to select the part to be erased.

A screenshot of the ERASE menu. The screen shows 'ERASE' at the top. Below it, '4 Part ALL' is highlighted with a cursor. An arrow points from the text 'Part being erased' below to the '4' in the screenshot.

↑ Part being erased

8. Press [ENTER].

Press [EXIT] to cancel the operation.

A screenshot of the 'Are You Sure?' confirmation screen. The screen shows 'Are You Sure?' at the top. Below it, '[ENTER] / [EXIT]' is displayed.

9. Press [ENTER] to execute the operation.

When you have finished erasing the song or part, the Completed screen appears.

A screenshot of the 'Completed!' screen. The screen shows 'Completed!' in the center.

10. When you finish erasing, press [SONG] to end the procedure.

SONG (Erase Song): 171-270

Part (Erase Part):

ALL, KIT, PERC, PART1, PART2, PART3, PART4

ALL:

The performance data for all parts is erased.

KIT:

The performance data for the drum part is erased.

PERC:

The performance data for the percussion part is erased.

PART1:

The performance data for Part 1 is erased.

PART2:

The performance data for Part 2 is erased.

PART3:

The performance data for Part 3 is erased.

PART4:

The performance data for Part 4 is erased.

Chapter 6 Recording a Song (Realtime Recording)

Parameters That Can Be Set Here

RECORDING STANDBY (Recording Settings) (p. 94)

- Time Signature
- Length
- Tempo
- Quantize
- Recording Mode
- Hit Pad Start

What is played on the pads or on an external MIDI keyboard can be recorded (**Realtime Recording**).

The performance of the hi-hat control pedal is also recorded.

NOTE

- Sequencer cannot be used in GM mode (p. 99).
- The amount that can be recorded to the TD-6V is limited. Please keep in mind that even though there are 100 user songs, the amount of memory available will be determined by how much data is recorded into each song.

HINT

- Recording the hi-hat control pedal performance data consumes a large amount of memory. Make the settings related to recording performance data in "PdlDataThin (Pedal Data Thin)" (SETUP/MIDI COMMON/PdlDataThin; p. 99).
- You can check the amount of available memory in "AvailMemory (Available Memory)" (SETUP/UTILITY/AvailMemory; p. 78).

Preparations for Recording

Before starting to record, first make the MIDI, part, and other such settings.

When Recording Pad Performances

Only the performance data is recorded to the drum kit part. When the song is played back, the settings of instruments and effects etc. of the current selected drum kit are used.

1. Select the User Song to be recorded (p. 83).

You can select a new User song by holding down [SHIFT] and pressing [STOP ■] while in the Song screen. New User songs are indicated by "※" in the display.

HINT

If there are no new User songs available, you can delete an unneeded song (SONG/DELETE; p. 90).

2. Record using the procedure described in "How To Record (RECORDING STANDBY)" (p. 93).

Recording Performances by External MIDI Devices

1. Match the external MIDI device's MIDI transmission channel with the MIDI channel of the part to be recorded. (SETUP/MIDI PART Part CH; p. 102)

Part	Factory Preset MIDI Channel
Drum Kit Part	CH10
Percussion Part	CH10
Part 1	CH1
Part 2	CH2
Part 3	CH3
Part 4	CH4

2. Select CH10 to layer the drum kit part and percussion part together; when recording from an external MIDI device, then set "CH10Priority (Channel 10 Priority)" to determine whether the drum kit part or the percussion part is to be recorded. (SETUP/MIDI COMMON/CH10Priority; p. 98)

3. Select the User Song to be recorded (p. 83).

You can select a new User song by holding down [SHIFT] and pressing [STOP ■] while in the Song screen.

New User songs are indicated by "※" in the display.

HINT

If there are no new User songs available, you can delete an unneeded song (SONG/DELETE; p. 90).

4. Select the part instrument or percussion set to be recorded (SONG/PART/Inst; p. 88).

NOTE

Program Change and Bank Select messages transmitted from an external MIDI device are not recorded by the sequencer. Use the TD-6V to select the part instruments.

5. Make the other settings for the part to be recorded. (SONG/PART; p. 87)

6. Record using the procedure described in "How To Record (RECORDING STANDBY)" (p. 93).

How To Record (RECORDING STANDBY)

1. Prepare for recording using the procedure described in “Preparations for Recording” (p. 92).

2. Press [SONG] → [REC ●].

[PLAY ►] flashes, while [SONG], [REC ●] and [CLICK] light up.

HINT

- If a Preset song is selected when you press [REC ●], then a new User song is selected automatically. In this case, new User songs that have Song Lock (SONG/COMMON/Song Lock; p. 86) set to “ON” cannot be selected.
- If there are no new User songs available, delete any unneeded songs (SONG/DELETE; p. 90).
- To cancel the recording, press [STOP ■] or [EXIT].

3. Press [◀] or [▶] to select the parameter you wish to edit.

```
REC STBY|
Time Sig 4/4 ▶
```

↑ Parameter to set

4. Press [+] or [-] to make the setting.

```
REC STBY|
Time Sig 4/4 ▶
```

↑ Value

5. Press [PLAY ►] to begin recording.

[PLAY ►] stops flashing and remains lit, and recording begins.

The following appears in the upper left of the screen during recording.

```
Recording 4/4
171 USER-171 001-01
```

MEMO

To insert a count before recording, set “RecCountIn (Recording Count In)” (CLICK/RecCountIn; p. 80).

6. Play with pads or MIDI keyboards to record.

7. Press [STOP ■] to stop recording.

The [PLAY ►] and [REC ●] lights go out.

Setting the Time Signature (Time Signature)

This specifies the beat of the song to be recorded.

NOTE

The time signature cannot be changed when recording additional material to a previously recorded song.

```
REC STBY|
Time Sig 4/4 ▶
```

Time Sig (Time Signature):
1-13/2, 1-13/4, 2-13/8, 4-13/16

Setting the Number of Measures (Length)

This specifies the measure length in the song being recorded.

MEMO

When “REPLACE” is specified as the recording mode (SONG/REC/RecMode; p. 94), the measure length setting is unnecessary. The recorded measure length is automatically specified as the “Length.”

```
REC STBY|
4 Length 1 ▶
```

Length: 1-999

Setting the Song Tempo (Tempo)

This specifies the tempo used when recording and playing back the song.


```
REC STBY|
4 Tempo J= 120 ▶
```

Tempo: 20-260

Quantize During Recording (Quantize)

“Quantize” is a function that corrects mistakes or discrepancies in the timing of the performance being recorded.

Timing problems almost always occur when recording performances using pads, a MIDI keyboard, or other instruments. This function corrects timing mistakes and allows you to make recordings with accurate timing.

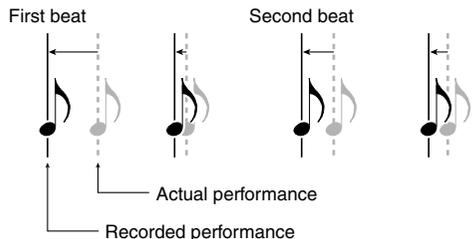

This is usually set to the shortest note appearing in the phrase to be recorded. When set to “OFF,” the pattern is then recorded with the timing used in performance.

HINT

Carry out the quantize when recording a song using Tap Playback. You may be unable to play back the song correctly with Tap Playback if quantize is set to “OFF” when the song is recorded.



Quantize:

- 8 (8th note), 8T (8th note triplets),
- 16 (16th note), 16T (16th note triplets),
- 32 (32nd note), 32T (32nd note triplets),
- 64 (64th note), OFF

Selecting the Recording Method (Loop All, Loop 1, Loop 2, Replace) (Recording Mode)

Selects how recording will take place.



RecMode (Recording Mode): REPLACE, LOOP ALL, LOOP 1, LOOP 2

REPLACE:

Recording continues until [STOP ■] is pressed. All data previously recorded in the all parts is erased.

LOOP ALL:

The entire song repeats, and the new material is layered onto the previous performance.

LOOP1:

The measure starting from the point where recording begins is repeated, and the new material is layered onto the previous performance.

LOOP2:

The two measures starting from the point where recording begins are repeated, and the new material is layered onto the previous performance.

Start Recording with a Pad or Pedal Trigger (Hit Pad Start)

This function starts the recording process the instant you strike a pad or pedal.

HINT

The “RecCountIn (Recording Count In)” setting is disregarded (CLICK/RecCountIn; p. 80).



HitPadStart (Hit Pad Start): OFF, ON

Chapter 7 Making the MIDI Settings (SETUP/MIDI, BULK DUMP)

Parameters That Can Be Set Here

SETUP

- MIDI COMMON (MIDI Settings) (p. 97)
 - Note Chase
 - Local Control
 - Sync Mode
 - Channel 10 Priority
 - Pedal Data Thin
 - GM Mode
 - Rx GM ON
 - Soft Thru
 - Device ID
 - Tx PC Switch
 - Rx PC Switch
- MIDI PART (MIDI Channel Settings for a Part) (p. 102)
- GM PART (MIDI Messages Stop Function in GM Mode) (p. 103)
- BULK DUMP (Saving Data to an External MIDI Device) (p. 103)


About MIDI

MIDI (Musical Instrument Digital Interface) is a standard that allows performance data and other information to be exchanged among electronic musical instruments and computers. MIDI With a MIDI cable connecting MIDI devices that are equipped with MIDI connectors, you can play multiple instruments with a single keyboard, have multiple MIDI instruments perform in ensemble, program the settings to change automatically to match the performance as the song progresses, and more.

While using only pads with the TD-6V, there is no need to have any detailed knowledge of MIDI. For those who wish to use MIDI keyboards to record patterns on the TD-6V, use it as a sound module with external sequencers, or learn the TD-6V at a more advanced level, the following explains such matters related to MIDI.

MIDI Connectors

The TD-6V has the following two types of MIDI connectors.

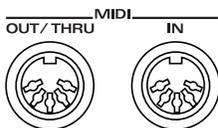

MIDI IN Connector Function

This receives MIDI messages transmitted from an external MIDI device. When it receives MIDI messages, the TD-6V performs a variety of actions such as playing sounds and switching drum kits and part instruments.

MIDI OUT/THRU Connector Function


MIDI messages are transmitted from this connector to external MIDI devices. The TD-6V transmits pad and sequencer performance data from the MIDI OUT/THRU connector. You can also transmit various settings content, songs, and other data you want to save to another device (Bulk Dump; p. 103). The TD-6V MIDI OUT and MIDI THRU connectors are combined into a single connector. The function is selected in the “Soft Thru” setting (SETUP/MIDI COMMON/SOFT Thru; p. 100). When “Soft Thru” is set to “ON,” pad and sequencer performance data are transmitted to an external device as is along with messages received at the MIDI IN connector.

MEMO

As shipped from the factory, this is set to MIDI OUT.

MIDI Channels and Multi-timbral Sound Modules


MIDI can send numerous streams of performance data over a single MIDI cable. This is made possible by MIDI channels. MIDI channels allow messages intended for a given instrument to be distinguished from messages intended for another instrument. In some ways, MIDI channels are similar to television channels. By changing channels on a television you can view programs from many different broadcast stations. This is because the television set has thus been directed to selectively display only the information being transmitted by a particular station. In the same way, MIDI also allows a device to select the information intended for that device out of the variety of information that is being transmitted to it.

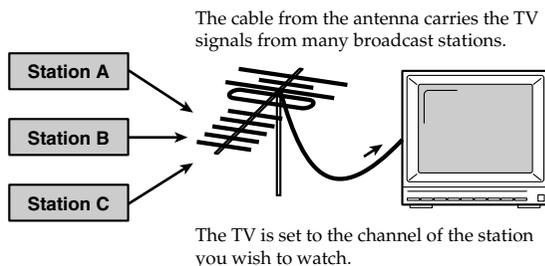

There are sixteen MIDI channels, numbered 1–16. Set the receiving device so that it will receive only the channel that it needs to receive.

Example:


Set the TD-6V to send Channel 1 and Channel 2, then set sound module A to receive only Channel 1 and sound module B only Channel 2. In this way, sound module A plays the guitar part and sound module B plays the bass part.

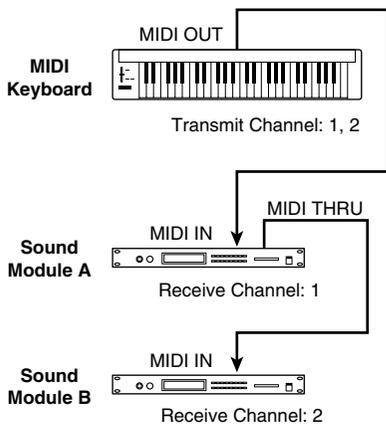

When used as a sound module, the TD-6V can receive on up to six of the sixteen MIDI channels (16 channels in GM mode). Sound modules like the TD-6V which can receive multiple MIDI channels simultaneously to play different sounds on each channel are called “multi-timbral sound modules.”

How the Internal Sequencer Operates

A sequencer is an electronic instrument used for recording and playback of performances. The TD-6V features such a sequencer function. The TD-6V comes with 150 different built-in performance songs (Preset songs) which can be used for drum practice and other purposes. You can also create your own songs.

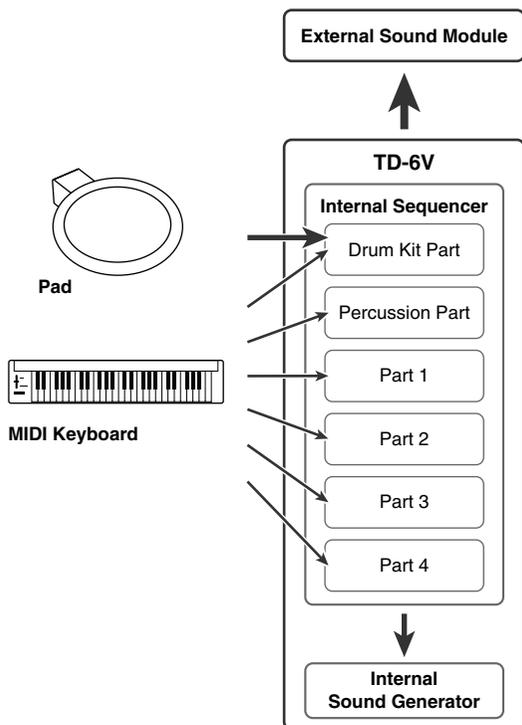

For playback, the performance data that has been recorded to the sequencer is sent to the sound module, which produces the sound. The data for each of the sequencer’s parts causes the corresponding part in the internal sound module to be played. When performance data is recorded, the performance data from pads and MIDI keyboards is sent to the sequencer; the data recorded here is then sent to the sound module for playback.

When recording drum kit and percussion set performance, the performance data is sent to the drum kit part and percussion part according to the setting of channel 10 priority (SETUP/MIDI COMMON/CH10Priority; p. 98).

NOTE

When using the TD-6V as a GM sound module, the internal sequencer is disabled.

Making the MIDI Settings (MIDI COMMON)

Make the TD-6V’s MIDI settings.

1. While holding down [SHIFT], press [EDIT (SETUP)].

[EDIT] lights.

2. Press [▶] to select “MIDI COMMON.”



3. Press [ENTER].

4. Press [◀] or [▶] to select the parameter you wish to edit.



Parameter to set

5. Press [+] or [-] to make the setting.



Value

6. When you finish making settings, press [KIT] or [SONG] to end the procedure.

Automatically Switching Instrument Settings Screens (Note Chase)

Note Chase is a function in which a pad is selected either by striking the pad or when MIDI data corresponding to that pad is received.

When set to “OFF,” the pad’s settings screen is prevented from switching, even when MIDI data for a pad is received. Here, the trigger input number appears in brackets ([]). If you want to set other pads with this setting remaining at “OFF,” you can switch settings screens by holding down [SHIFT] and pressing [◀] or [▶] to select the trigger input number.




Note Chase: OFF, ON

NOTE

You can use only the TOM2 rim or AUX, and only the TOM3 rim or TOM4. You cannot select the trigger input for any pad for which the trigger type has not been set. Also refer to “Connecting Two Pads to Trigger Input 5/6 (TOM2/AUX) and 7/8 (TOM3/4)” (p. 70).

When Using as MIDI Controller for External MIDI Device Only (Local Control)

This setting is required when you wish to record your pads and internal sequencer performance on an external MIDI sequencer. The performance data from the pads and internal sequencer, rather than being sent directly to the sound module section (Local Control Off), is first sent to the external sequencer, and then on to the TD-6V’s sound module.

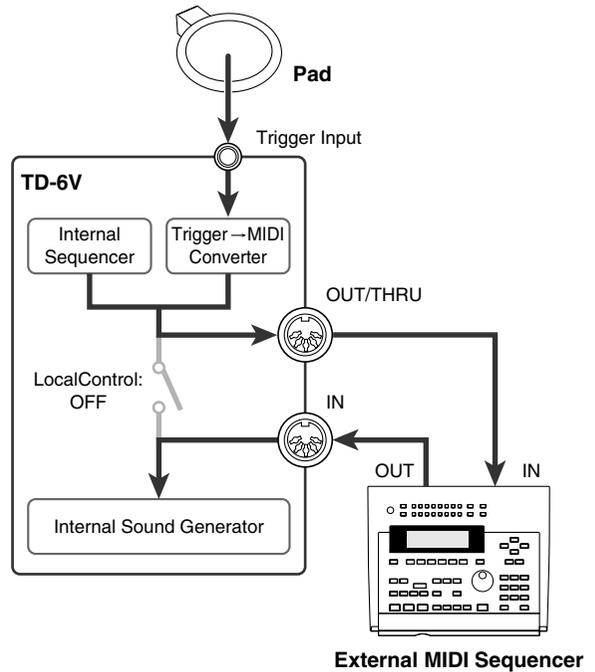

NOTE

- The settings screen does not appear in GM mode.
- If you make connections and record as shown, with a setting of Local On, duplicate notes will be re-transmitted to the TD-6V and will not be played correctly.



LocalControl (Local Control): OFF, ON

OFF:

The pads and internal sequencer are disconnected from the TD-6V’s internal sound generator. Striking the pads does not cause sound to be produced by the internal sound generator.

ON:

The pads and internal sequencer are connected to the TD-6V’s internal sound generator. Sounds are produced by the internal sound generator when the pads are struck.

Synchronizing with an External MIDI Device (Sync Mode)

This section discusses the settings that allow an external MIDI sequencer and the TD-6V's sequencer to be synchronized. The device that is playing back is called the "master" and the device that is synchronizing to the playback is called the "slave."

NOTE

The settings screen does not appear in GM mode.



Sync Mode: INT, EXT, REMOTE

INT (INTERNAL):

The TD-6V's tempo setting is used in playback and recording.

EXT (EXTERNAL):

The TD-6V's sequencer operates in accord with external tempo data.

REMOTE:

Playback begins, pauses, and stops in accord with data from the external device, but the TD-6V's tempo setting is used for the playback tempo.

Setting Priority for Playing Drums and Percussion (Channel 10 Priority)

This setting is necessary when both drum kit part and percussion part are simultaneously assigned to Channel 10.

When note numbers to which percussion part's instruments are assigned (18 (F#0)–96 (C7)) are assigned to the pads, then select which instrument sounds are to be played when the note number is received.

MEMO

When recording MIDI keyboard performances (p. 92) or loading external sequencer data to the TD-6V (p. 106), the data is stored to the sounded part according to this setting.

CH10

Percussion Part	Note No.	Drum Kit Part
Std 1 T2	48 C3	4/TOM1
Med16 Cr	49	9/CRASH1
Std 1 T1	50	4/TOM1 Rim
Pop Rd	51	11/RIDE
China18"	52	10/CRASH2 Rim
Pop Rdb	53	11/RIDE Rim
Tambrn 1	54	
Splsh12"	55	9/CRASH1 Rim
Cowbell1	56	
Quik16Cr	57	10/CRASH2
VibraSlp	58	
Pop Rde	59	
R8Bng Hi	60 C4	
R8Bng Lo	61	
Conga Mt	62	
Conga Sl	63	
Conga Op	64	

CH10 Priority

PERC	Note No.	KIT
Std 1 T2	48 C3	4/TOM1
Med16 Cr	49	9/CRASH1
Std 1 T1	50	4/TOM1 Rim
Pop Rd	51	11/RIDE
China18"	52	10/CRASH2 Rim
Pop Rdb	53	11/RIDE Rim
Tambrn 1	54	Tambrn 1
Splsh12"	55	9/CRASH1 Rim
Cowbell1	56	Cowbell1
Quik16Cr	57	10/CRASH2
VibraSlp	58	VibraSlp
Pop Rde	59	Pop Rde
R8Bng Hi	60 C4	R8Bng H
R8Bng Lo	61	R8Bng Lo
Conga Mt	62	Conga Mt
Conga Sl	63	Conga Sl
Conga Op	64	Conga Op



The settings screen does not appear in GM mode.



**CH10Priority (Channel 10 Priority): KIT, PERC
KIT (Drum Kit Part):**

When overlapping note numbers are received, the drum kit part’s instrument (the pad instrument) is sounded.

PERC (Percussion Part):

The percussion part’s instrument is always played.

**Hi-Hat Control Pedal Data
Reduction (Pedal Data Thin)**

This function allows you to prevent an excessive amount of data from being transmitted from the pedal to the internal sequencer or via the MIDI OUT.



When you want to make smooth changes in the pitch control with the Hi-Hat control Pedal, set this to “1” or “OFF.”



The settings screen does not appear in GM mode.



Pd1DataThin (Pedal Data Thin): OFF, 1, 2

OFF:

Data sent from the pedal is not reduced.

1:

This reduces the data sent from the pedal. Usually, “1” is selected.

2:

This reduces the data sent from the pedal. This setting results in even less data than when “1” is selected.

**Switch to the GM (General MIDI)
Mode (GM Mode)**

The TD-6V features a GM mode—a convenient way to play back GM score data (music files for General MIDI sound module).



For more on the GM system, refer to p. 13.

To ensure proper playback of GM scores, set the TD-6V to GM mode.

Setting this to “ON” initializes the TD-6V’s internal sound generator for use with GM, while the GM System percussion set (Standard Set) is assigned to Part 10, and Piano 1 is assigned to all other parts.

The TD-6V switches to GM mode at the following times.

- When Switching to GM Mode
- When it receives a GM System On message from an external MIDI device
- When the TD-6V has received a GM System On message as the result of playing back a song containing a GM System On message on an external MIDI device



To mute the performance of a specific part in GM mode, you can make the appropriate setting for “GM PART” (SETUP/ GM PART/Part Rx Sw; p. 102).



- You cannot use the TD-6V to make changes to the part settings. Change the setting by sending the Control Change Bank Select (CC0#, CC32#) and Program Change (PC) from the external MIDI device.
- When the power is turned on, “GM Mode” is ordinarily set to “OFF.”
- Drum kit parts cannot be played using MIDI messages sent from an external device. They can be played only by playing pads connected to the TD-6V.
- Sequencers cannot be used in GM mode. The [SONG], [PLAY ►], [STOP ■], [REC ●], [CLICK], and [PART MUTE] buttons are disabled. Also, [SHIFT] + [CLICK (TEMPO)] cannot be used.
- Some parameters cannot be set in GM mode. For more detailed information, refer to “Parameter List” (p. 130).
- Program changes in GM mode are predetermined, and thus cannot be changed. Use the program changes in the “Preset Percussion Set List” (p. 124) and “Backing Instrument List” (p. 126).
- The pan of the percussion set is based on how the set sounds from where the drums are played. Be aware that the panning recommended with General MIDI is reversed.

MEMO

While in GM mode, “ [GM] ” appears in the drum kit screen.



GM Mode: OFF, ON

Preventing the TD-6V from Switching to GM (General MIDI) Mode (Rx GM ON)

This setting prevents the TD-6V from switching to GM mode, even when a “GM System ON message” is received from an external MIDI device.



RX GM ON: OFF, ON

OFF:

Even when a “GM System ON message” is received, the TD-6V does not switch to GM mode. If you wish to switch to GM mode, follow the procedures described on foregoing paragraph to switch manually.

ON:

When a “GM System ON message” is received, the TD-6V switches to GM mode.


GM System On Message

This is a message which switches a device to an operating mode that is compatible with the GM system, or to initialize a sound generator so that it will be compatible with the GM system.

When “RX GM ON” is set to “OFF,” the GM System ON message is ignored.

Mixing MIDI Signals Coming to the MIDI IN with Real Time Performance on the Pads (Soft Thru)

This setting causes data (except for System Exclusive messages) received at MIDI IN to be output from the MIDI OUT/THRU connector along with the pad and sequencer performance data.

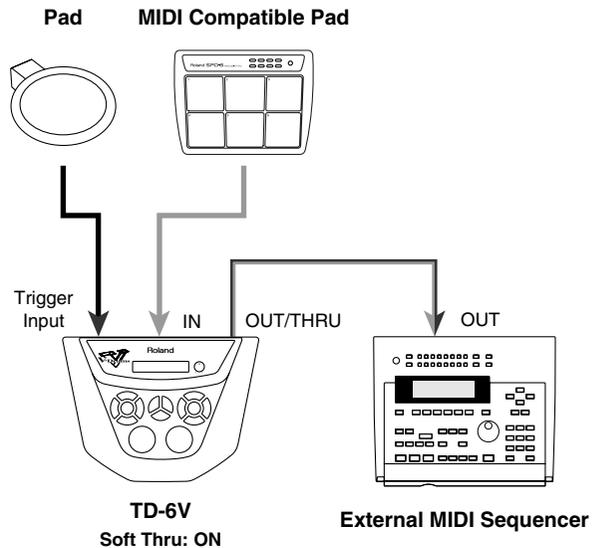

HINT

If this setting is not used, leave it “OFF” as the trigger response of the pads will be faster.



Soft Thru: OFF, ON

OFF:

Only pad and sequencer performance data is output from the MIDI OUT/THRU connector.

ON:

Data received at MIDI IN is output together with the pad and sequencer performance data from the MIDI OUT/THRU connector.

Set the Device ID (Device ID)


The setting described here is necessary only when you wish to transmit separate data to two or more TD-6V units at the same time. Do not change this setting in any other case.

MEMO

At the factory settings, the device ID is set to "17."

Example:

When saving data using Bulk Dump (p. 103), save using "17" as the TD-6V Device ID. When re-transmitting this data back to the TD-6V, it won't receive if the Device ID is set to something other than "17." Even if you happen to have another TD-6V connected, data will not be received if the Device ID is set to something other than "17."

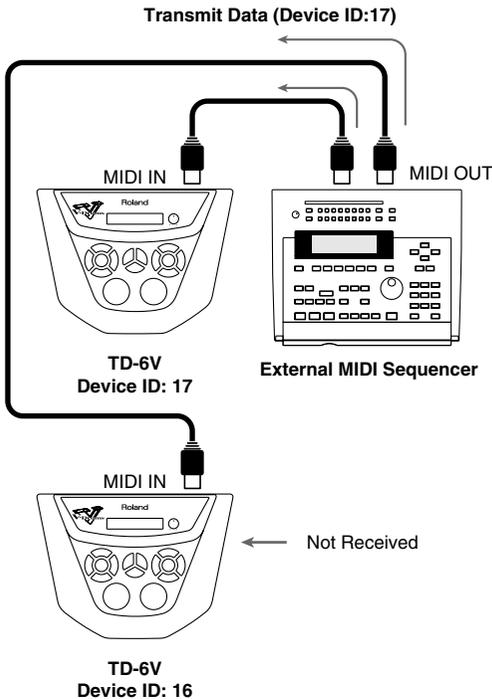

NOTE

If you lose track of the Device ID setting that was used when saving data via a bulk dump, it will no longer be possible to reload the bulk data that was saved.

```
MIDI COMMON
4 Device ID 17
```

Device ID: 1-32

Setting the TD-6V So That Program Changes Are Not Transmitted (Tx PC Sw)

The TD-6V sends a Program Change message to external devices when the drums kit is switched. If this is "OFF", Program Changes will not be transmitted.

MEMO

The TD-6V's drum kit program numbers are always the same as the drum kit numbers; this relationship is fixed, and cannot be changed.

NOTE

The settings screen does not appear in GM mode.

```
MIDI COMMON
4 Tx PC Sw ON
```

Tx PC Sw (Tx PC Switch): OFF, ON

OFF:

Program Change messages are not transmitted, even when drums kits are switched.

ON:

Program Change messages are transmitted when drum kits are switched.

Setting the TD-6V So That Program Changes Are Not Received (Rx PC Sw)

The TD-6V's drum kits are switched when a Program Change message is received from an external MIDI device. When set to "OFF," the drum kits do not switch, even when a Program Change message is received.

MEMO

The TD-6V's drum kit program numbers are always the same as the drum kit numbers; this relationship is fixed, and cannot be changed.

NOTE

The settings screen does not appear in GM mode.

```
MIDI COMMON
4 Rx PC Sw ON
```

Rx PC Sw (Rx PC Switch): OFF, ON

OFF:

The drum kits are not switched, even when Program Change messages are received from an external MIDI device.

ON:

The drum kits are switched when Program Change messages are received from an external MIDI device.

MIDI Channel Settings for a Part (MIDI PART)

For each part, you can specify the channel on which the TD-6V will receive and transmit MIDI messages.

At a setting of “1” through “16,” MIDI messages will be transmitted and received on that channel. When set to “OFF,” MIDI messages for that part are not transmitted.

HINT

Drum kit parts and percussion parts can be overlaid and set to “CH 10.” Make the “CH10Priority (Channel 10 Priority)” setting to determine whether the drum kit part instrument or percussion part instrument is to be sounded when MIDI messages are received (SETUP/MIDI COMMON/CH10Priority; p. 98).

NOTE

In GM mode (p. 99), the part’s channel is predetermined, and thus cannot be changed.

1. While holding down [SHIFT], press [EDIT (SETUP)].
[EDIT] lights.

2. Press [▶] to select “MIDI PART.”



NOTE

When “GM Mode” is set to “ON,” “GM PART” is displayed, and you cannot make the setting. Make the setting after first setting “GM Mode” to “OFF” (SETUP/MIDI COMMON/GM Mode; p. 99).

3. Press [ENTER].
4. Press [◀] or [▶] to select the part to be set.



↑ Select Part

5. Press [+] or [-] to make the setting.
6. When you finish making settings, press [KIT] or [SONG] to end the procedure.



↑ Value

Part CH (Part Tx Rx Channel): CH 1–CH16, OFF

MIDI Messages Stop Function for Specific Parts in GM (General MIDI) Mode (GM PART)

In GM mode, you can make the setting that determines whether or not MIDI messages are to be received for each individual part.

When set to “OFF,” that part’s MIDI messages are not received.

1. While holding down [SHIFT], press [EDIT (SETUP)].
[EDIT] lights.

2. Press [▶] to select “GM PART.”



NOTE

When “GM Mode” is set to “OFF,” “MIDI PART” is displayed, and you cannot make the setting.

Make the setting after first setting “GM Mode” to “ON” (SETUP/MIDI COMMON/GM Mode; p. 99).

3. Press [ENTER].
4. Press [◀] or [▶] to select the part to be set.



↑ Select Part

5. Press [+] or [-] to make the setting.



↑ Value

6. When you finish making settings, press [KIT] to end the procedure.

Part Rx Sw (Part Rx Switch): OFF, ON

Saving Data to an External MIDI Device (BULK DUMP)

You can save the TD-6V's drum kits, songs, general settings, and more to an external MIDI sequencer. use the external sequencer as you would when recording musical data, and perform the following steps on the TD-6V as shown in the following diagram.

NOTE

Bulk Dump is one kind of System Exclusive message. Be sure to use an external MIDI sequencer that is capable of recording System Exclusive messages. In addition, confirm that the sequencer is not set to "Do not receive System Exclusive messages."


HINT

Setting the Device ID (SETUP/MIDI COMMON/DeviceID; p. 101) makes operation more convenient when multiple TD-6V's are connected.




For more detailed information concerning external MIDI devices, be sure to read the owner's manuals for the devices you are using.

1. Use a MIDI cable to connect the TD-6V's MIDI OUT connector to the MIDI IN connector of the external sequencer.

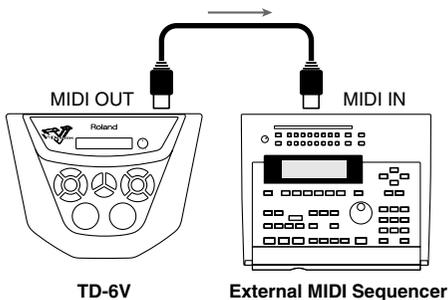

2. While holding down [SHIFT], press [EDIT (SETUP)].
[EDIT] lights.
3. Press [▶] to select "BULK DUMP."

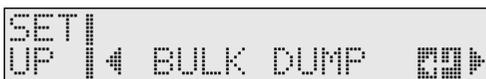

4. Press [ENTER].

5. Press [+] or [-] to select the content to be saved.



Content being saved ↗

6. Start the recording process of the external sequencer.

7. Press [ENTER].

Press [EXIT] to cancel the operation.



8. Press [ENTER] to start the data transmission.



9. When you have finished transmitting, the Completed screen appears.



10. Stop recording on the external sequencer.

Bulk Dump: ALL, SETUP, ALL SONGS, ALL KITS, KIT 01-KIT 99

ALL:

All data, including the setup (trigger, pad, and other such settings), drum kits, and User songs are transmitted.

SETUP:

All setup data is transmitted.

ALL SONGS:

All data for User Songs 171-270 is transmitted.

ALL KITS:

All data for Drum Kits 1-99 is transmitted.

KIT 01-KIT 99:

Only the data for the selected drum kit is transmitted.

Returning Saved Data to the TD-6V

This returns settings that have been saved to a sequencer or other external MIDI device back to the TD-6V.


NOTE

At this time, the TD-6V's data is overwritten. Save any data you need to an external MIDI device before carrying out this operation.

MEMO

Set the Device ID (SETUP/MIDI COMMON/DeviceID; p. 101) used when the bulk data was saved.

1. Use a MIDI cable to connect the TD-6V's MIDI IN connector to the MIDI OUT connector of the external sequencer.

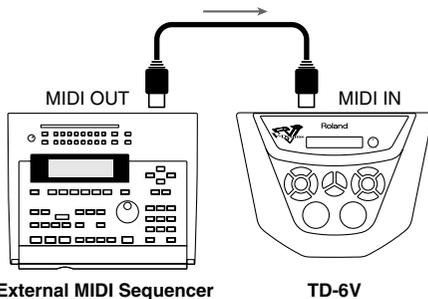

2. Send the settings data from the external sequencer to the TD-6V.

The transmitted settings are reproduced.

Data Compatibility Between the TD-6 and the TD-6V

Although it is possible to transmit and receive bulk data between the TD-6V and the TD-6, please note the following points regarding data compatibility.

Data Transmitted	from TD-6 to TD-6V	from TD-6V to TD-6
ALL	*1 *2	*1
SETUP	*1	*1
ALL SONGS		
ALL KIT	*2	
KIT01-99	*2	

*1 Due to the difference in the TD-6V's and TD-6's trigger types, discrepancies between the transmitted and received trigger types can arise.

If that occurs correct the trigger settings manually (TRIGGER BASIC, TRIGGER ADVANCED) after data is received.

*2 The TD-6V's TOM2 RIM and TOM3 RIM instrument parameter is reset, preventing the sounds from being played. Reset the instrument parameters for these pads as necessary.

Chapter 8 Features Using MIDI and Setting Examples

About Transmitting/Receiving Program Changes

Drum Kit

The drum kit program numbers are always the same as the drum kit numbers; this relationship is fixed, and cannot be changed.

Percussion Set

Percussion set program numbers are predetermined. Refer to the "Preset Percussion Set List" (p. 124).

Backing Part (Part 1–4) Instruments

The instrument program numbers, and controller numbers 0 and 32 are fixed. Refer to the "Backing Instrument List" (p. 126).



If tone changes are made on an external MIDI device, the TD-6V's instruments are switched, but the change is not recorded by the sequencer.


Triggering an External Sound Device by Playing the TD-6V

This sets the TD-6V so that the external MIDI sound module is sounded when the pads are struck.



With this setting, both the TD-6V and the external sound module can play simultaneously.

1. Use a MIDI cable to connect the MIDI OUT connector of the TD-6V to the MIDI IN connector of the external MIDI device.

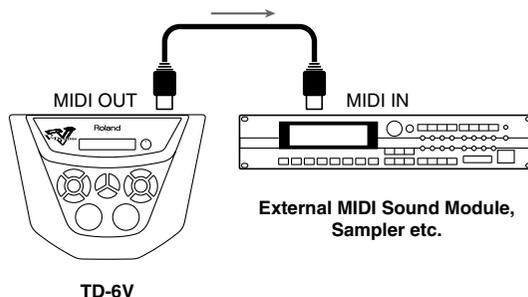

2. Match the MIDI channel to be used for transmitting data from the TD-6V and the MIDI channel that the external MIDI device will use for receiving the data. (SETUP/MIDI PART/CH; p. 102)
3. Specify the note number to be transmitted from each pad. (KIT/CONTROL/Note No.; p. 64)
Set this to the note number of the sound that you wish to play on the external MIDI sound module or sampler.
4. Set the MIDI Gate Time. (KIT/CONTROL/Gate Time; p. 65)



You can use different pad note number and gate time settings in each drum kit.

Combining with an External MIDI Sequencer

Importing Sequence Data from an External MIDI Device to the TD-6V's Internal Sequencer

You can load data created on another sequencer from the MIDI IN connector and record the data on the TD-6V's sequencer, then use the data as a song. The backing part (Parts 1–4), percussion part, and drum kit part can be imported simultaneously.


NOTE

When TD-6V's instruments are changed from an external MIDI device, the change is not recorded by the TD-6V's sequencer. Use the TD-6V to make each part's instrument settings.



For more on external MIDI device operations, refer to the owner's manuals for the devices you are using.

1. Use a MIDI cable to connect the MIDI IN connector of the TD-6V to the MIDI OUT connector of the external MIDI device.

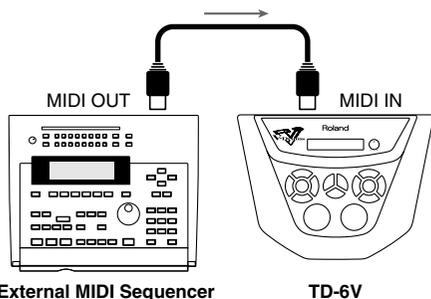

2. Match the MIDI channel to be used for transmitting data from the external MIDI device and the MIDI channel that the TD-6V will use for receiving the data. (SETUP/MIDI PART/CH; p. 102)
3. Set "CH10Priority (Channel 10 Priority)" as needed when recording drum and percussion performances. (SETUP/MIDI COMMON/CH10Priority; p. 98)

4. Set "Sync Mode" to "EXT" in order to synchronize the TD-6V to the external sequencer. (SETUP/MIDI COMMON/Sync Mode)

5. Select one of the TD-6V's new User songs (p. 83).

You can select a new User song by holding down [SHIFT] and pressing [STOP ■] while in the Song screen.

HINT

New User songs are indicated by "※" in the display.

6. Make the settings for the TD-6V's parts. (SONG/PART; p. 87)

Specify the part instruments and percussion sets, volume levels, etc.

7. Press [REC ●], then make the recording settings (p. 93).

Time Sig: Set the beat (time signature) to comply with that of the loaded data.

Rec Mode: Set this to "REPLACE."

8. Start playback of the external MIDI device.

The TD-6V automatically begins recording.


9. When you have finished recording, stop the recording of the external MIDI device.

The TD-6V stops recording automatically.

Recording Your Performance to an External Sequencer

This makes the settings that allow performances of the pads to be recorded by an external MIDI sequencer.

1. Use a MIDI cable to connect the TD-6V and MIDI sequencer MIDI connectors as shown in the following figure.

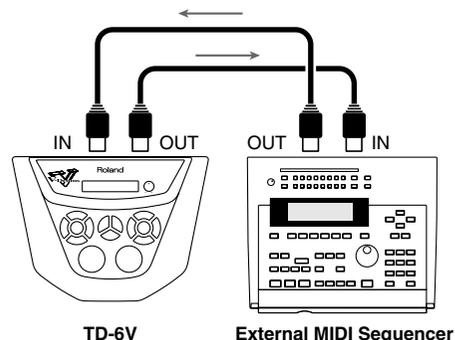


2. Set Local Control to "OFF." (SETUP/MIDI COMMON/LocalControl; p. 97)

3. Match the MIDI channel to be used for transmitting data from the TD-6V and the MIDI channel that the external MIDI sequencer is to use for receiving the data. (SETUP/MIDI PART/CH; p. 102)
4. Start the recording process of the external MIDI sequencer.
5. The performances of the pads are recorded as they are played.
6. When you have finished playing, stop recording with the external MIDI sequencer.
7. When playback of the external MIDI sequencer begins, the TD-6V is played.

Using the TD-6V As a Sound Module

Here, the TD-6V is used as a sound module. You can connect an external MIDI sequencer and play back songs or connect a MIDI-compatible keyboard or pads for performance.

1. Use a MIDI cable to connect the MIDI IN connector of the TD-6V to the MIDI OUT connector of the external MIDI device.

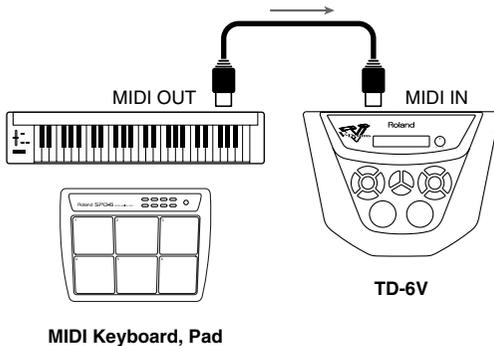

2. Match the MIDI channel to be used for transmitting data from the external MIDI device and the MIDI channel that the TD-6V will use for receiving the data. (SETUP/MIDI PART/CH; p. 102)
3. Set “CH10Priority (Channel 10 Priority)” as needed when playing drum and percussion performances with an external MIDI sequencer. (SETUP/MIDI COMMON/CH10Priority; p. 98)

4. Select one of the TD-6V’s new User songs (p. 83).

You can select a song that has not yet been used by holding down [SHIFT] and pressing [STOP ■].



New User songs are indicated by “※” in the display.

5. Make the settings for the TD-6V’s parts. (SONG/PART; p. 87)

Specify the part instruments and percussion sets, volume levels, etc.



When using the TD-6V as a sound module, the sounds you select must be assigned to a SONG as the song parameters store which sounds you are using. Once you select a new User song and make the settings, you can then call up these settings just by selecting this song. You can also prevent recording or changes to the settings by setting “Song Lock” to “ON” (SONG/COMMON/Song Lock; p. 86).

6. When playing the external MIDI device, the TD-6V will sound.

MEMO



PERCUSSION SOUND MODULE **TD-6V**

Appendices

Troubleshooting

This section outlines points to check if you experience problems, and what to do about them.

No Sound

No Sound

Has the [VOLUME] been lowered?

→ Rotate the [VOLUME] knob to be sure.

Is Local control set to "OFF?" (SETUP/MIDI COMMON/LocalControl; p. 97)

→ Local Control should be set to "ON" if an external sequencer is not being used.

No Drum Kit Sound

Is the overall drum kit volume level turned down? (KIT/COMMON/MasterVolume; p. 66)

→ Press [+] or [-] to set the volume.

No Sound from One or More Pads

Is the volume level of an instrument lowered? (KIT/INST/Level; p. 59)

→ Strike the pad that is not producing sound to switch to the pad's settings screen. Press [+] or [-] to set the volume.

Is the pad connected correctly? (p. 20, p. 33)

- Make sure that the pad connections are correct, and that each pad is connected to the proper input.
- Use only the provided cables to connect the pads.

Is the instrument set to #1024 (OFF)? (KIT/INST; p. 58)

→ #1024 (OFF) is a setting used to prevent any sounds from being played. Select an instrument numbered 1–1,023.

Cannot Make Rim Shots/ Rim Shots Not Sounding

Do you have a pad that is capable of producing rim shots connected to a trigger input that is capable of handling rim shots? (p. 33)

- When using the PD-80R, PD-85, PD-105, PD-120 or PD-125 to play rim shots, connect to Trigger Input 2 (SNARE).
- When using the PD-7, PD-8, PD-9, CY-6, CY-8, CY-12H, CY-12R/C, CY-14C, or CY-15R to play rim shots (or edge/bell shots) or choking, connect to Trigger Input 2 (SNARE), 3 (HI-HAT), 4 (TOM1), 9 (CRASH1), 10 (CRASH2), or 11 (RIDE).
- The PD-6, PD-80, PD-100 and RP-2 are not capable of producing rim shots.

Is the Rim Sensitivity set to "0?" (SETUP/TRIG ADVNC D/Rim Sens; p. 75)

→ Press [+] or [-] to make the setting.

MEMO

You need to set the "Rim Sens" when using the PD-80R, PD-85, PD-105, PD-120 or PD-125 to play rim shots.

No sounds from pads connected to Trigger Inputs 6 (AUX) and 8 (TOM4)

Have you made correct trigger settings? (SETUP/TRIG TYPE; p. 69)

- Change the settings if you are connecting two pads to Trigger Inputs 5/6 (TOM2/AUX) and 7/8 (TOM3/4).

Cannot Make Cross Sticks/ Cross Sticks Not Sounding

Do you have a pad connected to a trigger input that is capable of handling cross sticks? (p. 33)

- When using the PD-80R, PD-85, PD-105, PD-120 or PD-125 to play cross sticks, connect to Trigger Input 2 (SNARE).

Has the instrument that can be used for playing the cross sticks been selected? (KIT/INST; p. 58, Drum Instrument List; p. 120)

- Use the instrument with the "XS."

Are you playing the cross stick correctly? (p. 36)

- For cross stick, make sure your hand or stick does not touch or strike the head.

No Sound When the Pad is Struck Softly

Did you strike a pad or press the pedal at any time from when the TD-6V's power was turned on until the kit name appeared in the display?

- Using the procedure of p. 23, turn the power on once again without playing any pads or pedals during the TD-6V's warm up.

NOTE

Precautions When Turning On the Power

When the TD-6V is turned on, it carries out a check of the pads. If you strike a pad or press the pedal anytime during this process, the pads cannot be checked properly, resulting in incorrect functioning of the pads.

Volume levels for the rims of TOM2 and TOM3 not changing

Have you made the appropriate settings for AUX or TOM4? (SETUP/TRIG TYPE; p. 69)

- To use the TOM2 and TOM3 rims, set the AUX and TOM4 trigger types to "Rim."

No Sound When [SHIFT] + [KIT] (Preview) Is Pressed

Is the [PREVIEW] button velocity set to "0?" (SETUP/UTILITY/Preview Velo; p. 78)

- Press [+] or [-] to make the setting.

No Click/Metronome Sound

Does [CLICK] light? (p. 79)

- Press [CLICK] to light the button.

Is the click volume level set to "0?" (CLICK/Click Level; p. 79)

- Press [+] or [-] to make the setting.

Song Does Not Play

Is GM Mode set to "ON?" (SETUP/MIDI COMMON/GM Mode; p. 99)

- Press [+] or [-] to set this to "OFF." The sequencer does not function when the TD-6V is in GM mode.

Are you playing a new User song?

→ Play back a song that contains performance data.



New User songs are indicated by “※” in the display.

Is the volume level of the backing part and percussion part set to “0?” (SETUP/UTILITY/PercPartLevel, BackingLevel; p. 76, p. 77)

→ Press [+] or [-] to make the setting.



Press [SHIFT] + [SONG] to jump to the backing part volume settings screen.

Specific Part in Song Not Being Played

Does [PART MUTE] light? (p. 84)

→ Press [PART MUTE] so that the light is turned off.

Is the volume level for each part set to “0?” (SONG/PART/Level; p. 88)

→ Press [+] or [-] to make the setting.

TD-6V Not Playing Even During Performance of External Sequencer or Keyboard

Is the part’s MIDI channel correct? Or is the channel set to “OFF?” (SETUP/MIDI PART/Part CH; p. 102)

→ Press [+] or [-] to make the setting.

Is the volume level for each part set to “0?” (SONG/PART/Level; p. 88)

→ Press [+] or [-] to make the setting.

External Sequencer Not Playing Even During Performance of TD-6V and Pads

Is the part’s MIDI channel correct? Or is the channel set to “OFF?” (SETUP/MIDI PART/Part CH; p. 102)

→ Press [+] or [-] to make the setting.

In GM mode, No Sound of a Specific Part in a Performance

Is it set not to receive MIDI messages? (SETUP/GM PART/Part Rx Sw; p. 102)

→ Press [+] or [-] to make the setting.

No Sound/Low volume from Device Connected to the MIX IN Jack

Could you be using a connection cable that contains a resistor?

→ Use a connection cable that does not contain a resistor.

Is the volume level of the connected device turned down completely?

→ Refer to the owner’s manual for the device, then set the volume.

Drum Kit Does Not Sound As Intended

Pressing [SHIFT] + [KIT] (Preview) Starts Playback of the Song

Is the Pad Pattern function (a feature that starts performance of songs when a pad is struck) specified for the selected pad? (KIT/CONTROL/Pad Ptn; p. 63)

→ Press [-] to set this to "OFF."

HINT

To stop playback of a song in progress, press [STOP ■].

No Ambience Applied

Is the drum kit's Ambience set to "OFF?" (KIT/AMBIENCE/Amb Sw; p. 60)

→ Press [+] or [-] to make the setting.

Is the drum kit's overall Ambience level set to "0?" (KIT/AMBIENCE/Amb Level; p. 61)

→ Press [+] or [-] to make the setting.

Has the Ambience level for individual instruments been lowered? (KIT/AMBIENCE/AmbSendLevel; p. 60)

→ Strike the pad to which Ambience is not being applied to display the settings screen for that pad. Press [+] or [-] to make the setting.

No Equalizer Applied

Is the drum kit's Equalizer set to "OFF?" (KIT/EQUALIZER/Master EQ Sw; p. 62)

→ Press [+] to set this to "ON."

Is the Gain set to "0?" (KIT/EQUALIZER/High Gain, Low Gain; p. 62)

→ Press [+] or [-] to make the setting.

Pad Does Not Sound As Intended

Pad Not Playing Correctly

Is the trigger type setting correct? (SETUP/TRIG BASIC/Trig Type; p. 69)

→ Press [+] or [-] to make the setting.

Is the pad's sensitivity setting correct? (SETUP/TRIG BASIC/Sensitivity; p. 71)

→ Press [+] or [-] to make the setting.

MEMO

For fullest expression in performance, we recommend the exclusive use of Roland pads.

Is the KD-80, KD-85, KD-120, PD-80, PD-80R, PD-85, PD-100, PD-105, PD-120, PD-125 or RP-2 head tightened uniformly?

→ Refer to the owner's manual for the pad you are using, then adjust the head tension.

HINT

If pad volume or other quality is unstable, making the head tension somewhat tighter improve stability.

Wrong Sound Plays

Is there a mistake in the head and rim selection? (p. 55)

→ With some parameters, you can make separate settings for the head and rim. At this time, confirm the trigger type appearing in the upper right of the screen, then make the settings.

Are you making the rim shot (p. 36) and cross stick (p. 36) correctly?

→ To play rim shots, strike the head and rim simultaneously. For cross stick, make sure your hand or stick does not touch or strike the head.

Song Does Not Sound As Intended

Song Sounds Odd

Have the part settings been changed? (SONG/PART; p. 87)

→ Press [+] or [-] to make the settings.

Playback Stops Immediately After Beginning

Is the song playback type set to "TAP?" (SONG/COMMON/Play Type; p. 85)

→ Press [-] to set this to "LOOP" or "1SHOT."
"TAP" refers to the convenient playback function in Pad Pattern (tapping the pad causes the song to be played back).

The Song Stops Suddenly When Playing the Pads

Are you using the Pad Pattern function? (KIT/CONTROL/Pad Ptn; p. 63)

→ If so, look at your settings. Or see p. 63.

When triggering/playing a song that is set to "LOOP" or "ONE SHOT" mode, if you trigger another song (from a pad), also in "LOOP" or "ONE SHOT" mode then the last song played will have priority. Don't forget that some "songs" are very short, a few notes, or even one chord. So "sudden" stops can be caused by accidentally triggering one of these short songs. Always check your Pad Pattern settings.

Sound is distorted

Sound in Headphones Distorted

Sometimes, setting the headphone output too high using certain tones can make it appear that the sound is somewhat distorted.

→ Turn down [VOLUME] completely. This alleviates the distortion.

Output Sound Is Distorted

Sounds may become distorted somewhat because of certain instrument and equalizer settings.

→ Lower the pad's instrument volume.
(KIT/INST/Level; p. 59)

→ Setting the Pan (positioning) at or near the center may suppress the distortion. (KIT/INST/Pan; p. 59)

Problems Operating the TD-6V

Striking Pads Does Not Switch the Settings Screen

Is the pad's settings screen locked?
(**SETUP/MIDI COMMON/Note Chase; p. 57, p. 97**)

→ Press [+] to set this to "ON."



You can press [SHIFT] + [◀] or [▶] to switch to other pads' settings screens.

Song Screen Not Displayed

Is GM Mode set to "ON?"
(**SETUP/MIDI COMMON/GM Mode; p. 99**)

→ Press [-] to set this to "OFF." The sequencer does not function when the TD-6V is in GM mode.

Cannot Record or Edit User Song

Is Song Lock set to "ON?"
(**SONG/COMMON/Song Lock; p. 86**)

→ Press [-] to set this to "OFF."

Cannot Carry Out Bulk Dump

Is the MIDI connector used to connect the MIDI cable correct? (p. 95)

→ If you wish to save a bulk dump on an external device, connect the TD-6V's MIDI OUT/THRU connector to the external sequencer's MIDI IN connector.

Could the external MIDI device be set in such a way as to cause it to decline the reception of MIDI Exclusive messages?

→ Refer to the owner's manual for the external MIDI device, then set it so that the reception of System Exclusive data is enabled.



System exclusive data is data unique to individual devices, so verify all settings.

Display Is Too Light Or Too Dark

Is the display contrast properly adjusted?
(**SETUP/UTILITY/LCD Contrast; p. 76**)

→ Press [+] or [-] to make the setting.



The visibility of the display will change depending on the viewing angle and on room lighting conditions. The visibility of the display will change depending on the viewing angle and on room lighting conditions.

Messages and Error Messages

This section explains the meaning of the various error messages and other messages that the TD-6V may display, and describes the measures to take when these appear. When [EXIT] appears as shown in the following figure, you can press [EXIT] to dismiss the message.



System Error!
[EXIT]

System and Battery Error Messages

System Error!



System Error!
[EXIT]

A problem has occurred with the internal system. Consult your Roland dealer or nearest Roland Service Center.

Backup NG! Execute Reset All!



Backup NG! Execute
Reset All! [ENTER]

Data in the TD-6V's memory may be corrupted.

The TD-6V's internal backup battery (the battery used for saving User memory data) is fully drained; internal data has been lost.

Consult your dealer or a nearby Roland service station to have the battery replaced.

You can use the TD-6V temporarily by following the instructions appearing in the display.

1. Press [ENTER] [] .



Execute Reset All!
[ENTER]

2. Press [ENTER] [] once again.

Factory Reset is executed, enabling you to use the TD-6V temporarily.



Carrying out a Factory Reset deletes all of the current TD-6V's data and settings, and returns them to the original factory settings.

Backup Battery Low!



Backup Battery Low!
[EXIT]

The internal backup battery of the TD-6V (a battery that maintains data in the user memory) has run down.

Contact your dealer or a nearby Roland service center to have the battery replaced.

Messages and Error Messages Related to Sequencers and Songs

DATA OVERLOAD!



Data Overload!
[EXIT]

Song contained an excessive amount of data, and as a result could not be output successfully from MIDI OUT.

Try eliminating a track that has too much data.

999 Measure Maximum!



999 Measure Maximum!
[EXIT]

The maximum number of measures for one song has been exceeded, and as a result no more can be recorded to the song.

Not Enough Memory!



Not Enough Memory!
[EXIT]

Song recording or editing could not be carried out because there was not enough internal memory.

Try deleting songs that are no longer needed (SONG/DELETE; p. 90).

Changes Not Saved! Preset Song!



Changes Not Saved!
Preset Song! [EXIT]

This is a Preset song; changes to settings are not saved.

Song Lock ON!

```
Song Lock On!
```

Song Lock is on for this song; it cannot be edited or recorded. Set Song Lock to "OFF" (SONG/COMMON/Song Lock; p. 86).

Empty Song!

```
Empty Song!
```

This song contains no performance data; it cannot be edited.

No Empty Song!

```
No Empty Song!
```

There are no empty songs for recording. Try deleting songs that are no longer needed (SONG/DELETE; p. 90).

New User Song Selected!

```
New User Song  
Selected!
```

Select a new User song automatically.

HINT

This is displayed when the following operations are carried out.

- When pressing [SHIFT] + [STOP ■] in the song screen or the screen for selecting the copy destination in song copy
- When [REC ●] is pressed with a Preset song selected

Preset Song!

```
Preset Song!
```

This is the preset song; the settings cannot be changed.

Messages and Error Messages Related to MIDI

MIDI Offline!

```
MIDI Offline!
```

Something has caused a break in communication with the external MIDI device. Check that MIDI cables have not been disconnected or broken.

Checksum Error!

```
Checksum Error!  
[EXIT]
```

The checksum value of a system exclusive message was incorrect. Correct the checksum value.

MIDI Buffer Full!

```
MIDI Buffer Full!  
[EXIT]
```

A large amount of MIDI messages were received, and could not be processed completely. Confirm that the external MIDI device is properly connected (p. 105). If this does not resolve the problem, reduce the amount of MIDI messages being transmitted to the TD-6V.

Data Transmitting... Please, Wait.

```
Data Transmitting...  
Please, Wait.
```

Bulk data is being transmitted in response to an external request for transmission.

Bulk Data Transmit Aborted!

```
Bulk Data Transmit  
Aborted!
```

The bulk dump has been cancelled.

Data Receiving... Please, Wait.

```
Data Receiving...  
Please, Wait.
```

Bulk data is being received. Do not turn off the power.

Drum Kit List

No.	Drum Kit Name	Remark
Featured Kits		
1	RoseWood	
2	BeeBop X	x-stick
3	Yo Yo	
4	RokCncrt	
5	LtnPerc+	Pad Pattern (SNR_H, CR1_R)
6	Orch Set	
7	TblaTun+	Pad Pattern (RD_H, RD_R)
8	1ManBnd+	Pad Pattern (KIK, CR1_R, CR2_R)
9	Scary	
10	Guitars+	Pad Pattern (HH_H)
Acoustic Drum Kits I		
11	PopKit X	x-stick
12	Brushes	
13	Groove	
14	Rock It!	
15	Birch	
16	Ballad X	x-stick
17	Natural	
18	SteelSnr	
19	TKO	
Percussion Kits		
20	Far Away	
21	TmbleKit	
22	BongoKit	
23	CongaKit	
24	Melody	
Electronic Kits I		
25	TR-808	
26	Tekno	
27	Mexi-Mix	
28	Electro	
29	TR-909	
30	909Mix	
31	808...9!	
32	Jungle	
33	ElecBoom	
34	Science!	
35	Aco&Elec	

No.	Drum Kit Name	Remark
Rock Kits		
36	HevyRock	
37	DenkiRok	
38	Rocker X	x-stick
39	HevyMetl	
40	Wt Room	
Rock Melodic Kits		
41	RockBnd+	Pad Pattern (T2_R, AUX, T4)
42	"A"Team+	Pad Pattern (CR1_R)
Sequence Kits		
43	SynBass+	Pad Pattern (KIK, CR1_H, CR1_R, CR2-H, RD_H)
44	DrmSolo+	Pad Pattern (KIK, T1_R, T2-R, T3_R)
45	BIGBand+	Pad Pattern (KIK, CR1_H, CR1_R, CR2_R, AUX)
46	Ksnowki+	Pad Pattern (CR1_R)
47	RimSong+	Pad Pattern (T1_R, T2_R, T3_R, CR1_R, CR2_R, AUX)
48	Drm'nBs+	Pad Pattern (CR2_H, CR2_R)
49	Tabla+	Pad Pattern (CR1_R, RD_H)
50	LtnSqnc+	Pad Pattern (CR1_R, CR2_R)
51	808Mix+	Pad Pattern (CR2_R)
Voice Kits		
52	Voices	
53	"Scat"	
Effect Kits		
54	SlowTape	
55	LowFi	
56	Kids	
57	PedalEPX	
58	Gate	
59	JunkYard	
60	Cartoon	

No.	Drum Kit Name	Remark
Jazz Kits		
61	BrshSwel	
62	Jazz	
63	Sizzle	
64	JazzOne	
Electronic Kits II		
65	HipHop	
66	R&B1	
67	R&B2	
68	Dance808	
Funk Kits		
69	JazzFunk	
70	PowrFusn	
71	Pocket	
Ambience Kits		
72	Dome	
73	JzThet X	x-stick
74	TileRoom	
75	GigaHall	
76	Cave	
77	Dry&Wet	

No.	Drum Kit Name	Remark
Acoustic Drum Kits II		
78	DoubleHH	
79	AJ Fusn	
80	AcuStick	
81	AppleStr	
82	Crack!	
83	Buzz	
84	Ringer	
85	Slip	
86	Fibre	
87	Oyster	
88	Gospel	
89	CopprSnr	
90	BrassSnr	
91	BrikHous	
92	Studio1	
93	Studio2	
94	Roto Kit	
95	Standrd1	
96	Standrd2	
97	Room	
98	Power	
99	User Kit	

No.: Drum Kit Number (Program Number)

+: Pad Pattern:

The pad pattern function (p. 63) is set for the pads within the parentheses ().

(KIK = Kick, SNR = Snare, HH = Hi-Hat, T = Tom, CR = Crash, RD = Ride, H = Head, R = Rim)

x-stick:

A velocity switching “snare rim” sound, that when played softly produces a cross stick sound, and when played harder produces a rim shot sound.

You can use cross sticks when using a rim-capable pad for the snare (Trigger Input 2).

No.62 Jazz, No.95 Standrd1– No.98 Power:

This kit has the instruments in each percussion set assigned to the pads.

No.99 User Kit:

Parameters including volume etc. are set to standard values.

Use this when creating a kit from scratch.



You can restore an edited drum kit to its factory settings. For more information, refer to “Restoring the Factory Settings for the Edited Drum Kit” (p. 68).

Drum Instrument List

No.	Name	Remark
-----	------	--------

KICK

1	DblHeadK	
2	Sharp K	
3	Acous K	
4	Meat K	
5	R8 Low K	
6	R8 Dry K	
7	WdBeatrK	
8	Open K	
9	VintageK	
10	26"DeepK	
11	ThickHdK	
12	Round K	
13	MediumK	
14	BigRoomK	
15	Big K	
16	BigLowK	
17	Studio1K	
18	Studio2K	
19	Studio3K	
20	Studio4K	
21	Studio5K	
22	Studio6K	
23	Studio7K	
24	Studio8K	
25	Buzz 1 K	
26	Buzz 2 K	
27	Buzz 3 K	
28	Buzz 4 K	
29	Buzz 5 K	
30	Room 1 K	
31	Room 2 K	
32	Room 3 K	
33	Room 4 K	
34	Room 5 K	
35	Room 6 K	
36	Room 7 K	
37	Amb 1 K	
38	Amb 2 K	
39	Amb 3 K	
40	Amb 4 K	
41	Solid1 K	
42	Solid2 K	
43	Solid3 K	
44	Jazz 1 K	
45	Jazz 2 K	
46	18"JazzK	
47	BrshHitK	
48	Wood 1 K	
49	Wood 2 K	
50	Wood 3 K	
51	Wood 4 K	
52	Maple1 K	
53	Maple2 K	
54	Oak K	
55	Birch K	
56	RoseWodK	
57	OnePly K	
58	Oyster K	
59	Dry K	
60	DryMedK	
61	DryHardK	
62	DeepDryK	
63	Fusion K	

64	SandBagK	
65	BsktBalK	
66	Mondo K	
67	MdVrb1 K	
68	MdVrb2 K	
69	Sizzle K	
70	Box K	
71	Ninja K	
72	Dance K	
73	House K	
74	Pillow K	
75	Rap K	
76	TR808 K	
77	808HardK	
78	808BoomK	
79	808NoizK	
80	TR909 K	
81	909WoodK	
82	909HdAtK	
83	ElephntK	
84	Cattle K	
85	Door K	
86	Punch K	
87	MachineK	
88	Broken K	
89	BendUp K	
90	HrdNoizK	
91	R8SolidK	
92	ThinHedK	
93	Tight K	
94	Chunk K	
95	Gate K	
96	Giant K	
97	Inside K	
98	Std1 1 K	
99	Std1 2 K	
100	Std2 1 K	
101	Std2 2 K	
102	Room 8 K	
103	Room 9 K	
104	Power K1	
105	Power K2	
106	Jazz 3 K	
107	Jazz 4 K	
108	Brush K	
109	Elec 1 K	
110	Elec 2 K	
111	ElBend K	
112	Plastk1K	
113	Plastk2K	
114	Gabba K	
115	Gabba2 K	
116	Tail K	
117	Jungle K	
118	HipHop K	
119	LoFi 1 K	
120	LoFi 2 K	
121	LoFi 3 K	
122	LoFi 4 K	
123	Noisy K	
124	Splat K	
125	Scrach1K	
126	Scrach2K	
127	Hi-Q K	
128	Space K	
129	SynBassK	

SNARE

130	Custom S	
131	Cstm RS	
132	CstmBr S	
133	CstmBrRS	
134	CstmSt S	
135	CstmStRS	
136	Picolo1S	
137	Pco1 RS	
138	Pco1Br S	
139	Pco1BrRS	
140	Pco1St S	
141	Pco1StRS	
142	Picolo2S	
143	Pco2 RS	
144	Pco2Br S	
145	Pco2BrRS	
146	Pco2St S	
147	Pco2StRS	
148	Picolo3S	
149	Pco3 RS	
150	Pco3Br S	
151	Pco3BrRS	
152	Pco3St S	
153	Pco3StRS	
154	Medium1S	
155	Med1 RS	
156	Med1 XS	*x-stick
157	Med1Br S	
158	Med1BrRS	
159	Med1BrXS	*x-stick
160	Med1St S	
161	Med1StRS	
162	Med1StXS	*x-stick
163	Medium2S	
164	Med2 RS	
165	Med2Br S	
166	Med2BrRS	
167	Med2St S	
168	Med2StRS	
169	Medium3S	
170	Med3 RS	
171	Med3Br S	
172	Med3BrRS	
173	Med3St S	
174	Med3StRS	
175	Medium4S	
176	Med4 RS	
177	Med4Br S	
178	Med4BrRS	
179	Med4St S	
180	Med4StRS	
181	Fat1 S	
182	Fat1 RS	
183	Fat1Br S	
184	Fat1BrRS	
185	Fat1St S	
186	Fat1StRS	
187	Fat2 S	
188	Fat2 RS	
189	Fat2Br S	
190	Fat2BrRS	
191	Fat2St S	
192	Fat2StRS	
193	AcousticS	
194	Acus RS	
195	AcusBr S	

196	AcusBrRS	
197	AcusSt S	
198	AcusStRS	
199	VintageS	
200	Vntg RS	
201	VntgBr S	
202	VntgBrRS	
203	VntgSt S	
204	VntgStRS	
205	Comp S	
206	Comp RS	
207	CompBr S	
208	CompBrRS	
209	CompSt S	
210	CompStRS	
211	Jazz S	
212	Jazz RS	
213	Jazz XS	*x-stick
214	JazzBr S	
215	JazzBrRS	
216	JazzBrXS	*x-stick
217	JazzSt S	
218	JazzStRS	
219	JazzStXS	*x-stick
220	Dirty S	
221	Drty RS	
222	DrtyBr S	
223	DrtyBrRS	
224	DrtySt S	
225	DrtyStRS	
226	13" S	
227	13" RS	
228	Birch S	
229	Birch RS	
230	TD7Mpl S	
231	TD7MplRS	
232	Ballad S	
233	Brush1 S	
234	Brush2 S	
235	Brush3 S	
236	Brsh Tap	
237	Brsh Slp	
238	Brsh Swl	
239	BrshTmbS	
240	MIDIbr1S	
241	MIDIbr2S	
242	MIDIbr3S	
243	Boston S	
244	BostonRS	
245	Bronze S	
246	Brnz RS	
247	Bronze2S	
248	Brnz2 RS	
249	Birch2 S	
250	Copper S	
251	Copper2S	
252	10" S	
253	L.A. S	
254	London S	
255	Ring S	
256	Ring RS	
257	Rock S	
258	Rock RS	
259	R8MapleS	
260	R8Mpl RS	
261	BigShotS	
262	Std1 1 S	
263	Std1 2 S	

264 Std2 1 S
 265 Std2 2 S
 266 Room 1 S
 267 Room 2 S
 268 Power1 S
 269 Power2 S
 270 Gate S
 271 Jazz 2 S
 272 Jazz 3 S
 273 Funk S
 274 Funk RS
 275 Bop S
 276 Bop RS
 277 Picolo5S
 278 Pco5 RS
 279 Picolo6S
 280 Pco6 RS
 281 Medium5S
 282 Med5 RS
 283 Medium6S
 284 Med6 RS
 285 Medium7S
 286 Med7 RS
 287 Medium8S
 288 Med8 RS
 289 Fat3 S
 290 Fat3 RS
 291 Fat4 S
 292 Fat4 RS
 293 DynamicS
 294 Dynmc RS
 295 Roll S
 296 Buzz S
 297 Dopin1 S
 298 Dopin2 S
 299 Reggae S
 300 Cruddy S
 301 Dance1 S
 302 Dance2 S
 303 House S
 304 HousDpns
 305 Clap! S
 306 Whack S
 307 TR808 S
 308 TR909 S
 309 Elec 1 S
 310 Elec 2 S
 311 Elec 3 S
 312 ElNoiz S
 313 HipHop1S
 314 HipHop2S
 315 LoFi S
 316 LoFi RS
 317 Radio S
 318 CrsStk 1
 319 CrsStk 2
 320 CrsStk 3
 321 CrsStk 4
 322 CrsStk 5
 323 CrsStk 6
 324 808Crstk

TOM

325 OysterT1
 326 OysterT2
 327 OysterT3
 328 OysterT4
 329 Comp T1
 330 Comp T2
 331 Comp T3
 332 Comp T4

333 Fibre T1
 334 Fibre T2
 335 Fibre T3
 336 Fibre T4
 337 Dry1 T1
 338 Dry1 T2
 339 Dry1 T3
 340 Dry1 T4
 341 Dry2 T1
 342 Dry2 T2
 343 Dry2 T3
 344 Dry2 T4
 345 Maple T1
 346 Maple T2
 347 Maple T3
 348 Maple T4
 349 Rose T1
 350 Rose T2
 351 Rose T3
 352 Rose T4
 353 SakuraT1
 354 SakuraT2
 355 SakuraT3
 356 SakuraT4
 357 Jazz1 T1
 358 Jazz1 T2
 359 Jazz1 T3
 360 Jazz1 T4
 361 Jazz2 T1
 362 Jazz2 T2
 363 Jazz2 T3
 364 Jazz2 T4
 365 Buzz1 T1
 366 Buzz1 T2
 367 Buzz1 T3
 368 Buzz1 T4
 369 Buzz2 T1
 370 Buzz2 T2
 371 Buzz2 T3
 372 Buzz2 T4
 373 Buzz3 T1
 374 Buzz3 T2
 375 Buzz3 T3
 376 Buzz3 T4
 377 Buzz4 T1
 378 Buzz4 T2
 379 Buzz4 T3
 380 Buzz4 T4
 381 NatralT1
 382 NatralT2
 383 NatralT3
 384 NatralT4
 385 Natrl2T1
 386 Natrl2T2
 387 Natrl2T3
 388 Natrl2T4
 389 StudioT1
 390 StudioT2
 391 StudioT3
 392 StudioT4
 393 Slap T1
 394 Slap T2
 395 Slap T3
 396 Slap T4
 397 Room1 T1
 398 Room1 T2
 399 Room1 T3
 400 Room1 T4
 401 Room2 T1
 402 Room2 T2
 403 Room2 T3
 404 Room2 T4

405 Room3 T1
 406 Room3 T2
 407 Room3 T3
 408 Room3 T4
 409 Room4 T1
 410 Room4 T2
 411 Room4 T3
 412 Room4 T4
 413 Room5 T1
 414 Room5 T2
 415 Room5 T3
 416 Room5 T4
 417 Big T1
 418 Big T2
 419 Big T3
 420 Big T4
 421 Rock T1
 422 Rock T2
 423 Rock T3
 424 Rock T4
 425 Punch T1
 426 Punch T2
 427 Punch T3
 428 Punch T4
 429 Oak T1
 430 Oak T2
 431 Oak T3
 432 Oak T4
 433 Balsa T1
 434 Balsa T2
 435 Balsa T3
 436 Balsa T4
 437 VintgeT1
 438 VintgeT2
 439 VintgeT3
 440 VintgeT4
 441 Brsh1 T1
 442 Brsh1 T2
 443 Brsh1 T3
 444 Brsh1 T4
 445 Brsh2 T1
 446 Brsh2 T2
 447 Brsh2 T3
 448 Brsh2 T4
 449 Dark T1
 450 Dark T2
 451 Dark T3
 452 Dark T4
 453 AttackT1
 454 AttackT2
 455 AttackT3
 456 AttackT4
 457 Hall T1
 458 Hall T2
 459 Hall T3
 460 Hall T4
 461 Birch T1
 462 Birch T2
 463 Birch T3
 464 Birch T4
 465 Beech T1
 466 Beech T2
 467 Beech T3
 468 Beech T4
 469 Micro T1
 470 Micro T2
 471 Micro T3
 472 Micro T4
 473 Bend T1
 474 Bend T2
 475 Bend T3
 476 Bend T4

477 Bowl T1
 478 Bowl T2
 479 Bowl T3
 480 Bowl T4
 481 Dirty T1
 482 Dirty T2
 483 Dirty T3
 484 Dirty T4
 485 Std 1 T1
 486 Std 1 T2
 487 Std 1 T3
 488 Std 1 T4
 489 Std 1 T5
 490 Std 1 T6
 491 Std 2 T1
 492 Std 2 T2
 493 Std 2 T3
 494 Std 2 T4
 495 Std 2 T5
 496 Std 2 T6
 497 Room6 T1
 498 Room6 T2
 499 Room6 T3
 500 Room6 T4
 501 Room6 T5
 502 Room6 T6
 503 Power T1
 504 Power T2
 505 Power T3
 506 Power T4
 507 Power T5
 508 Power T6
 509 Jazz3 T1
 510 Jazz3 T2
 511 Jazz3 T3
 512 Jazz3 T4
 513 Jazz3 T5
 514 Jazz3 T6
 515 Brsh3 T1
 516 Brsh3 T2
 517 Brsh3 T3
 518 Brsh3 T4
 519 Brsh3 T5
 520 Brsh3 T6
 521 Gate T1
 522 Gate T2
 523 Gate T3
 524 Gate T4
 525 LoFi T1
 526 LoFi T2
 527 LoFi T3
 528 LoFi T4
 529 ElBendT1
 530 ElBendT2
 531 ElBendT3
 532 ElBendT4
 533 ElBnd2T1
 534 ElBnd2T2
 535 ElBnd2T3
 536 ElBnd2T4
 537 ElBnd3T1
 538 ElBnd3T2
 539 ElBnd3T3
 540 ElBnd3T4
 541 ElNoisT1
 542 ElNoisT2
 543 ElNoisT3
 544 ElNoisT4
 545 ElDualT1
 546 ElDualT2
 547 ElDualT3
 548 ElDualT4

Drum Instrument List

No.	Name	Remark
549	Elec T1	
550	Elec T2	
551	Elec T3	
552	Elec T4	
553	Elec T5	
554	Elec T6	
555	TR808 T1	
556	TR808 T2	
557	TR808 T3	
558	TR808 T4	
559	TR808 T5	
560	TR808 T6	

HI-HAT

561	Pure HH
562	PureEgHH
563	BrightHH
564	BritEgHH
565	Jazz HH
566	JazzEgHH
567	Thin HH
568	ThinEgHH
569	Heavy HH
570	HevyEgHH
571	Light HH
572	LigtEgHH
573	Dark HH
574	DarkEgHH
575	12" HH
576	12"Eg HH
577	13" HH
578	13"Eg HH
579	14" HH
580	14"Eg HH
581	15" HH
582	15"Eg HH
583	Brush1HH
584	Brush2HH
585	SizzleHH
586	Sizle2HH
587	Voice HH
588	HandC HH
589	TambrnHH
590	MaracsHH
591	TR808 HH
592	TR909 HH
593	CR78 HH
594	Mtl1808HH
595	Mtl1909HH
596	Mtl178 HH
597	LoFi1 HH
598	LoFi2 HH

CRASH

599	Med14 Cr
600	Med16 Cr
601	Med18 Cr
602	Quik16Cr
603	Quik18Cr
604	Thin16Cr
605	Thin18Cr
606	Brsh1 Cr
607	Brsh2 Cr
608	SzlBr Cr
609	Swell Cr
610	Splsh 6"
611	Splsh 8"
612	Splsh10"

613	Splsh12"
614	Cup 4"
615	Cup 6"
616	HdSpl 8"
617	HdSpl10"
618	China10"
619	China12"
620	China18"
621	China20"
622	SzlChina
623	SwlChina
624	PgyzBack
625	PgyCrsh1
626	PgyCrsh2
627	PgyCrsh3
628	PgSplsh1
629	PgSplsh2
630	PhaseCym
631	Elec Cr
632	TR808 Cr
633	LoFi1 Cr
634	LoFi2 Cr

RIDE

635	Jazz Rd
636	Jazz RdE
637	Jazz RdB
638	Jazz RdX *Bow/Bell
639	Pop Rd
640	Pop RdE
641	Pop RdB
642	Pop RdX *Bow/Bell
643	Rock Rd
644	Rock RdE
645	Rock RdB
646	Rock RdX *Bow/Bell
647	Lite Rd
648	Lite RdE
649	Lite RdB
650	Lite RdX *Bow/Bell
651	CrashRd
652	CrashRdE
653	DkCrsRd
654	DkCrsRdE
655	Brsh1 Rd
656	Brsh2 Rd
657	SzlBr Rd
658	Szl1 Rd
659	Szl1 RdE
660	Szl1 RdB
661	Szl1 RdX *Bow/Bell
662	Szl2 Rd
663	Szl2 RdE
664	Szl2 RdB
665	Szl2 RdX *Bow/Bell
666	Szl3 Rd
667	Szl3 RdE
668	Szl3 RdB
669	Szl3 RdX *Bow/Bell
670	Szl4 Rd
671	Pgy Rd1
672	Pgy Rd1B
673	Pgy Rd1X *Bow/Bell
674	Pgy Rd2
675	Pgy Rd2B
676	Pgy Rd2X *Bow/Bell
677	LoFi Rd
678	LoFi RdE
679	LoFi RdB

PERCUSSION

680	R8Bng Hi
681	R8Bng Lo
682	R8Bng2Hi
683	R8Bng2Lo
684	Bongo Hi
685	Bongo Lo
686	Bongo2Hi
687	Bongo2Lo
688	R8Cng Mt
689	R8Cng Hi
690	R8Cng Lo
691	Conga Mt
692	Conga Sl
693	Conga Op
694	Conga Lo
695	CngMt VS
696	CngSl VS
697	Cowbell1
698	Cowbell2
699	CowblDuo
700	Claves
701	GiroLng1
702	GuiroSht
703	GiroLng2
704	Guiro VS
705	Maracas
706	Shaker
707	SmlShakr
708	Tambrn 1
709	Tambrn 2
710	Tambrn 3
711	Tambrn 4
712	Tmbl1 Hi
713	Tmbl1 Rm
714	Tmbl1 Lo
715	Paila
716	Tmbl2 Hi
717	Tmbl2 Lo
718	VibraSlp
719	Agogo Hi
720	Agogo Lo
721	Agogo2Hi
722	Agogo2Lo
723	CabasaUp
724	CabasaDw
725	CabasaVS
726	CuicaMt1
727	Cuica Op
728	Cuica Lo
729	CuicaMt2
730	PandroMt
731	PandroOp
732	PandroSl
733	PandroVS
734	SurdoHmt
735	SurdoHop
736	SurdoHVS
737	SurdoLmt
738	SurdoLOp
739	SurdoLVS
740	Whistle
741	Whisl Sh
742	Caxixi
743	Tabla Na
744	TablaTin
745	TablaTun
746	Tabla Te
747	Tabla Ti
748	Baya Ge
749	Baya Ka

750	Baya Gin
751	Baya Sld
752	Pot Drum
753	PotDr Mt
754	PotDr VS
755	TalkinDr
756	ThaiGong
757	ThaiGng2
758	BellTree
759	TinyGong
760	Gong
761	TemplBel
762	Wa-Daiko
763	Taiko
764	Sleibell
765	TreeChim
766	TringlOp
767	TringlMt
768	TringlVS
769	R70TriOp
770	R70TriMt
771	R70TriVS
772	Castanet
773	WdBlk Hi
774	WdBlk Lo
775	ConcrtBD
776	ConBD Mt
777	Hand Cym
778	HndCymMt
779	TimpaniG
780	TimpaniC
781	TimpaniE
782	PercHit1
783	PercHit2
784	Orch Maj
785	Orch Min
786	Orch Dim
787	Kick/Rol
788	Kick/Cym
789	OrchRoll
790	OrchChok
791	Hit Roll
792	Finale
793	808Clap
794	808Cwbl1
795	808Cwbl2
796	808Marcs
797	808Clavs
798	808Conga
799	909RIM
800	909CLAP
801	78Cowbel
802	78Guiro
803	78GiroSt
804	78Maracs
805	78MBeat
806	78Tambrn
807	78Bongo
808	78Claves
809	78Rim
810	55Claves

SPECIAL

811	Applause
812	Encore
813	Bird
814	Dog
815	Bubbles
816	Heart Bt
817	Telephon
818	Punch

819 KungFoo
 820 Pistol
 821 Gun Shot
 822 Glass
 823 Hammer
 824 Bucket
 825 Barrel
 826 TrashCan
 827 Af Stomp
 828 Bounce
 829 CuicaHit
 830 Monster
 831 AirDrive
 832 Car Door
 833 Car Cell
 834 CarEngin
 835 Car Horn
 836 Helicptr
 837 Thunder
 838 Bomb
 839 Sticks
 840 Click
 841 Tamb FX
 842 Tek Clk
 843 Beep Hi
 844 Beep Low
 845 MetroBel
 846 MetroClk
 847 Snaps
 848 Clap
 849 NoizClap
 850 Tek Noiz
 851 Mtl Slap
 852 R8 Slap
 853 Vocoder1
 854 Vocoder2
 855 Vocoder3
 856 DynScrch
 857 Scrach 1
 858 Scrach 2
 859 Scrach 3
 860 Scrach 4
 861 Scrach 5
 862 Scrach 6
 863 ScrchLP
 864 Phil Hit
 865 LoFi Hit
 866 Hi-Q
 867 Hoo...
 868 DaoDrill
 869 Scrape
 870 Martian
 871 CoroCoro
 872 CoroBend
 873 Burt

874 Boing 1
 875 Boing 2
 876 TeknoBrd
 877 Nantoka!
 878 ElecBird
 879 MtlBend1
 880 MtlBend2
 881 MtlNoise
 882 MtlPhase
 883 Laser
 884 Mystery
 885 TimeTrip
 886 Kick Amb
 887 SnareAmb
 888 Tom Amb

MELODIC

889 Kalimba
 890 Steel Dr
 891 Glcknspl
 892 Vibraphn
 893 Marimba
 894 Xylophon
 895 Tublrbel
 896 Celesta
 897 Saw Wave
 898 TB Bass
 899 SlapBass
 900 Gt Slide
 901 GtScrach
 902 GuitDist
 903 GuitBs 1
 904 GuitBs 2
 905 CutGtDwn
 906 CutGtUp
 907 FletNoiz
 908 Bs Slide
 909 WahGtDwl
 910 WahGtUp1
 911 WahGtDw2
 912 WahGtUp2
 913 Shami VS
 914 Brass VS
 915 StrngsVS
 916 Pizicato
 917 TeknoHit
 918 FunkHit1
 919 FunkHit2
 920 FunkHit3

VOICE

921 Lady Ahh
 922 Aoooo!
 923 Hooh!

924 Haa!
 925 SayYeah!
 926 Yeah
 927 Ahhh
 928 Haaa
 929 Achaa!
 930 Nope!
 931 Bap
 932 Dat
 933 BapDatVS
 934 Doot
 935 DaoFall1
 936 DaoFall2
 937 DaoFall3
 938 DaoFall4
 939 DoDat VS
 940 DoDao VS
 941 Scat1 VS
 942 Scat2 VS
 943 Scat3 VS
 944 Scat4 VS
 945 Scat5 VS
 946 Voice K
 947 VoiceLoK
 948 Voice S
 949 Voice T1
 950 Voice T2
 951 Voice T3
 952 Voice T4
 953 Voice Cr
 954 Count 1
 955 Count 2
 956 Count 3
 957 Count 4
 958 Count 5
 959 Count 6
 960 Count 7
 961 Count 8
 962 Count 9
 963 Count 10
 964 Count 11
 965 Count 12
 966 Count 13
 967 CountAnd
 968 Count E
 969 Count A
 970 Count Ti
 971 Count Ta

REVERSE

972 RvsKick1
 973 RvsKick2
 974 RvsSnr 1
 975 RvsSnr 2
 976 RvsTom

977 RvsCrsh1
 978 RvsCrsh2
 979 RvsChina
 980 RvsBelTr
 981 Rvs Hi-Q
 982 RvsMFaze
 983 RvsAirDr
 984 RvsBoin1
 985 RvsBoin2
 986 Rvs Bend
 987 RvsVocod
 988 RvsCarcl
 989 RvsEngin

FIXED HI-HAT

990 Std1 CH
 991 Std1 ECH
 992 Std1 OH
 993 Std1 EOH
 994 Std1 PdH
 995 Std2 CH
 996 Std2 ECH
 997 Std2 OH
 998 Std2 PdH
 999 Room CH
 1000 Room ECH
 1001 Room OH
 1002 Room EOH
 1003 Room PdH
 1004 Powr CH
 1005 Powr ECH
 1006 Powr OH
 1007 Powr PdH
 1008 Brsh CH
 1009 Brsh ECH
 1010 Brsh OH
 1011 Brsh PdH
 1012 Elec CH
 1013 Elec OH
 1014 Elec PdH
 1015 808 CH
 1016 808 ECH
 1017 808 OH
 1018 808 EOH
 1019 808 PdH
 1020 LoFi CH
 1021 LoFi OH
 1022 LoFi EOH
 1023 LoFi PdH

OFF

1024 OFF

*x-stick (XS):

A velocity switching "snare rim" sound, that when played softly produces a cross stick sound, and when played harder, produces a rim shot sound.

*Bow/Bell (RdX):

A "cross-faded" type of sounds. With velocity, you can control "bow" and "bell" sound.

RS: Rim shot sound

VS: Velocity switching sound

Inst Group "FIXED HI-HAT":

These are hi-hat sounds that cannot be controlled by the hi-hat control pedal.

Preset Percussion Set List

	1. Standard 1 PC100	2. Standard 2 PC101	3. Room PC102	4. Power PC103	5. Electronic PC104	6. 808/909 PC105
	Note No. 18	Bs Slide 2	←	←	←	←
	19	GtScrach 1	←	←	←	←
	20	Gt Slide 1	←	←	←	←
	21	CutGtDwn 1	←	←	←	←
	22	CutGtUp 1	←	←	←	←
	23	WahGtDw1 1	←	←	←	←
	24	WahGtUp1 1	←	←	←	←
C1	25	WahGtDw2 1	←	←	←	←
	26	WahGtUp2 1	←	←	←	←
	27	Hi-Q 1	←	←	←	←
	28	Mtl Slap 2	←	←	←	←
	29	Scrach 3 1	←	←	←	←
	30	Scrach 2 1	←	←	←	←
	31	Sticks 1	←	←	←	←
	32	Click 1	←	←	←	←
	33	MetroClk 1	←	←	←	←
	34	MetroBel 1	←	←	←	←
	35	Std1 2 K 2	Std2 2 K 2	Room 9 K	Power K2	Elec 2 K
C2	36	Std1 1 K 2	Std2 1 K 2	Room 8 K	Power K1	Elec 1 K
	37	CrsStk 3 1	←	CrsStk 1	←	CrsStk 3
	38	Std1 1 S 3	Std2 1 S 3	Room 1 S	Power1 S	Elec 1 S
	39	Clap 1	←	←	←	←
	40	Std1 2 S 4	Std2 2 S 4	Room 2 S	Power2 S	Gate S
	41	Std 1 T6 2	Std 2 T6 2	Room6 T6	Power T6	Elec T6
	42	Std1 CH 2	Std2 CH 2	Room CH	Power CH	Elec CH
	43	Std 1 T5 2	Std 2 T5 2	Room6 T5	Power T5	Elec T5
	44	Std1 PdH 1	Std2 PdH 1	Room PdH	Power PdH	Elec PdH
	45	Std 1 T4 2	Std 2 T47 2	Room6 T4	Power T4	Elec T4
	46	Std1 EOH 1	Std2 OH 1	Room EOH	Power OH	Elec OH
	47	Std 1 T3 2	Std 2 T3 2	Room6 T3	Power T3	Elec T3
C3	48	Std 1 T2 2	Std 2 T2 2	Room6 T2	Power T2	Elec T2
	49	Med16 Cr 2	←	←	←	←
	50	Std 1 T1 2	Std 2 T1 2	Room6 T1	Power T1	Elec T1
	51	Pop Rd 2	Jazz Rd 2	Pop Rd	Jazz Rd	Pop Rd
	52	China18" 1	←	←	←	RvsCrsh2
	53	Pop RdB 1	Jazz RdB 1	Pop RdB	Jazz RdB	Pop RdB
	54	Tambrn 1	←	←	←	←
	55	Splsh12" 1	←	←	←	←
	56	Cowbell1 1	Cowbell12 1	←	←	Cowbell1
	57	Quik16Cr 2	←	←	←	←
	58	VibraSlp 1	←	←	←	←
	59	Pop RdE 1	Jazz RdE 1	Pop RdE	Jazz RdE	Pop RdE
C4	60	R8Bng Hi 2	←	←	←	←
	61	R8Bng Lo 2	←	←	←	←
	62	Conga Mt 2	←	←	←	←
	63	Conga Sl 2	←	←	←	←
	64	Conga Op 2	←	←	←	←
	65	Tmb11 Rm 2	←	←	←	←
	66	Tmb11 Lo 2	←	←	←	←
	67	Agogo Hi 1	←	←	←	←
	68	Agogo Lo 1	←	←	←	←
	69	CabasaUp 1	←	←	←	←
	70	Maracas 1	←	←	←	←
	71	Whisl Sh 1	←	←	←	←
C5	72	Whistle 1	←	←	←	←
	73	GuiroSht 1	←	←	←	←
	74	GiroLngl 1	←	←	←	←
	75	Claves 1	←	←	←	←
	76	WdBlk Hi 1	←	←	←	←
	77	WdBlk Lo 1	←	←	←	←
	78	CuicaMt1 1	←	←	←	←
	79	Cuica Op 1	←	←	←	←
	80	TringlMt 1	←	←	←	←
	81	TringlOp 1	←	←	←	←
	82	Shaker 1	←	←	←	←
	83	Sleibell 1	←	←	←	←
C6	84	BellTree 1	←	←	←	←
	85	Castanet 1	←	←	←	←
	86	SurdoLMt 3	←	←	←	←
	87	SurdoLOp 2	←	←	←	←
	88	OFF 0	←	←	←	←
	89	R8Cng Hi 2	←	←	←	←
	90	TinyGong 1	←	←	←	←
	91	Gong 1	←	←	←	←
	92	PandroMt 1	←	←	←	←
	93	PandroOp 2	←	←	←	←
	94	PandroSl 1	←	←	←	←
	95	TreeChim 1	←	←	←	←
C7	96	Caxixi 1	←	←	←	←

Preset Percussion Set List

	7. Jazz PC106	8. Brush PC107	9. Perc Only PC108	10. Special PC109	Mute	Drum Kit Note Numbers
	18 Bs Slide	←	R8Bng2Hi	FunkHit2		The note numbers assigned to each trigger inputs
	19 GtScrach	←	R8Bng2Lo	FunkHit2		
	20 Gt Slide	←	Bongo Hi	FunkHit2		
	21 CutGtDwn	←	Bongo Lo	FunkHit2		
	22 CutGtUp	←	Bongo2Hi	FunkHit3		TRIG 3 (HI-HAT)CLOSE RIM
	23 WahGtDw1	←	Bongo2Lo	FunkHit3		
	24 WahGtUp1	←	R8Cng Mt	FunkHit3		
	25 WahGtDw2	←	R8Cng Hi	FunkHit3		
	26 WahGtUp2	←	R8Cng Lo	FunkHit1		TRIG 3 (HI-HAT)OPEN RIM
	27 Hi-Q	←	Cowb1Duo	FunkHit1		
	28 Mtl Slap	←	Tambrn 2	FunkHit1		
	29 Scrach 3	←	Tambrn 3	FunkHit1		
	30 Scrach 2	←	Tmb12 Hi	TeknoHit		TRIG 8 (TOM4)
	31 Sticks	←	Tmb12 Lo	TeknoHit		TRIG 6 (AUX)
	32 Click	←	Paila	TeknoHit		
	33 MetroClk	←	Tabla Na	TeknoHit		
	34 MetroBel	←	TablaTin	Heart Bt		
	35 Jazz 4 K	Std2 2 K	TablaTun	Glass	*	
	36 Jazz 3 K	Brush K	Tabla Te	Pistol	*	TRIG 1 (KICK1)
	37 CrsStk 3	←	Tabla Ti	ScrchLP	*	
	38 Jazz 2 S	Brsh Tap	Baya Ge	Phil Hit	*	TRIG 2 (SNARE)
	39 Clap	Brsh Slp	Baya Ka	LoFi Hit	*	
	40 Jazz 3 S	Brsh Swl	Baya Gin	Boing 1	*	TRIG 2 (SNARE) RIM
	41 Jazz3 T6	Brsh3 T6	Baya Sld	Monster	*	TRIG 7 (TOM3)
	42 Std1 CH	Brsh CH	Pot Drum	Count	*	TRIG 3 (HI-HAT) CLOSED
	43 Jazz3 T5	Brsh3 T5	PotDr Mt	Count	*	
	44 Std1 PdH	Brsh PdH	TalkinDr	Count	*	TRIG 3 (HI-HAT) PEDAL
	45 Jazz3 T4	Brsh3 T4	ThaiGng2	Count	*	TRIG 5 (TOM2)
	46 Std1 EOH	Brsh OH	TinyGong	Count	*	TRIG 3 (HI-HAT) OPEN
	47 Jazz3 T3	Brsh3 T3	Gong	Bomb	*	
	48 Jazz3 T2	Brsh3 T2	TemplBel	Thunder	*	TRIG 4 (TOM1)
	49 Med16 Cr	Brsh1 Cr	Wa-Daiko	Car Door	*	TRIG 9 (CRASH1)
	50 Jazz3 T1	Brsh3 T1	Taiko	Car Cell	*	TRIG 4 (TOM1) RIM
	51 Jazz Rd	Brsh1 Rd	R70TriOp	CarEngin	*	TRIG 11 (RIDE)
	52 China18"	←	R70TriMt	Car Horn	*	TRIG 10 (CRASH2) RIM
	53 Jazz RdB	←	TimpaniG	Helicptr	*	TRIG 11 (RIDE) RIM
	54 Tambrn 1	←	TimpaniG	Gt Slide	*	
	55 Splsh12"	←	TimpaniG	GtScrach	*	TRIG 9 (CRASH1) RIM
	56 Cowbell12	←	TimpaniG	GuitDist	*	
	57 Quik16Cr	Brsh1 Cr	TimpaniG	GuitBs 1	*	TRIG 10 (CRASH2)
	58 VibraSlp	←	TimpaniC	GuitBs 2	*	
	59 Jazz RdE	Jazz Rd	TimpaniC	FletNoiz	*	
	60 R8Bng Hi	←	TimpaniC	Shami VS	*	PC: Program Number
	61 R8Bng Lo	←	ThaiGong	Brass VS	*	←: Same as the left
	62 Conga Mt	←	ThaiGong	StrngsVS	*	Voices:
	63 Conga Sl	←	ThaiGong	StrngsVS	*	Number of voice used
	64 Conga Op	←	ThaiGong	StrngsVS	*	*: Note number for muted drum sounds when muting only the drum instruments of the percussion part.
	65 Tmb11 Rm	←	PercHit1	Pizicato	*	
	66 Tmb11 Lo	←	PercHit2	RvsKick1	*	
	67 Agogo Hi	←	Orch Maj	RvsSnr 2	*	
	68 Agogo Lo	←	Orch Min	RvsCrsh2	*	
	69 CabasaUp	←	Orch Dim	RvsChina	*	
	70 Maracas	←	Kick/Rol	Lady Ahh	*	
	71 Whisl Sh	←	Kick/Cym	Aoouu!	*	
	72 Whistle	←	OrchRoll	HooH!	*	
	73 GuiroSht	←	OrchChok	Haa!	*	
	74 GiroLng1	←	Hit Roll	SayYeah!	*	
	75 Claves	←	Finale	Yeah	*	
	76 WdBlk Hi	←	Applause	Ahhh	*	
	77 WdBlk Lo	←	Encore	Haaa	*	
	78 CuicaMt1	←	TreeChim	Achaa!	*	
	79 Cuica Op	←	808Clap	Nope!	*	
	80 TringlMt	←	808Cwb11	Bap	*	
	81 TringlOp	←	808Cwb12	Dat	*	
	82 Shaker	←	808Marcs	Scat3 VS	*	
	83 Sleibell	←	808Clavs	Doot	*	
	84 BellTree	←	808Conga	DaoFall1	*	
	85 Castanet	←	909RIM	DaoFall2	*	
	86 SurdoLMt	←	909CLAP	DaoFall3	*	
	87 SurdoLOp	←	78Cowbel	DaoFall4	*	
	88 OFF	←	78Guiro	DoDat VS	*	
	89 R8Cng Hi	←	78GiroSt	DoDat VS	*	
	90 TinyGong	←	78Maracs	DoDat VS	*	
	91 Gong	←	78MBeat	DoDao VS	*	
	92 PandroMt	←	78Tambrn	Scat1 VS	*	
	93 PandroOp	←	78Bongo	Scat2 VS	*	
	94 PandroSl	←	78Claves	Scat2 VS	*	
	95 TreeChim	←	78Rim	Scat2 VS	*	
	96 Caxixi	←	55Claves	Scat4 VS	*	

MEMO

In GM Mode, "Standard 1" is assigned.

Backing Instrument List

PC	CC0	Name	Voices
PIANO			
1	0	Piano 1	1
	8	Piano 1w	2
	16	Piano 1d	1
2	0	Piano 2	1
	8	Piano 2w	2
3	0	Piano 3	1
	8	Piano 3w	2
4	0	Honky-tonk	2
	8	Honky-tonk w	2
E. PIANO			
5	0	E.Piano 1	1
	8	Detuned EP 1	2
	24	60's E.Piano	1
	64	FM+SA EP	2
	65	Hard Rhodes	2
6	0	E.Piano 2	2
	64	Bright FM EP	2
CLAVI			
7	0	Harpsichord	1
	8	Coupled Hps.	2
	16	Harpsi.w	2
	24	Harpsi.o	2
8	0	Clav.	1
	64	Funk Clav.	2
CHROMATIC PERCUSSION			
9	0	Celesta	1
10	0	Glockenspiel	1
11	0	Music Box	1
12	0	Vibraphone	1
	8	Vib.w	2
13	0	Marimba	1
14	0	Xylophone	1
15	0	Tubular-bell	1
	8	Church Bell	1
	9	Carillon	1
16	0	Santur	1
ORGAN			
17	0	Organ 1	1
	8	Detuned Or.1	2
	16	60's Organ 1	1
	32	Organ 4	2
	64	SC88 Organ 4	1
	65	Even Bar	2
18	0	Organ 2	1
	8	Detuned Or.2	2
	32	Organ 5	2
19	0	Organ 3	2

20	0	Church Org.1	1
	8	Church Org.2	2
	16	Church Org.3	2
21	0	Reed Organ	1
22	0	Accordion Fr	2
	8	Accordion It	2
23	0	Harmonica	1
24	0	Bandoneon	2
GUITAR			
25	0	Nylon-str.Gt	1
26	0	Steel-str.Gt	1
	8	12-str.Gt	2
	64	Nylon+Steel	2
27	0	Jazz Gt.	1
	8	Hawaiian Gt.	1
28	0	Clean Gt.	1
	8	Chorus Gt.	2
29	0	Muted Gt.	1
	64	Muted Gt.2	2
	65	Pop Gt.	1
	66	Funk Gt.	1*
	67	Funk Gt.2	1*
	0	Overdrive Gt	1
	64	Fdbk.Odrv.Gt	2
31	0	DistortionGt	1
	8	Feedback Gt.	2
	64	Heavy Gt.	1
	65	Fdbk. Hvy.Gt	2
	66	Muted Dis.Gt	1
	67	Rock Rhythm	2
	0	Gt.Harmonics	1
8	Gt. Feedback	1	
*: VELOCITY SWITCH The tone switches at velocity 116.			
BASS			
33	0	Acoustic Bs.	2
	64	Elctrc.Ac.Bs	2
34	0	Fingered Bs.	1
	64	Funk Bass	2
	65	Reggae Bass	2
35	0	Picked Bs.	1
	64	Mute PickBs1	1
	65	Mute PickBs2	1
36	0	Fretless Bs.	1
37	0	Slap Bass 1	1
	64	Slap Bass 3	1
	65	Reso Slap	1
	66	Slap Bass 4	1
38	0	Slap Bass 2	1

SYN. BASS

39	0	Synth Bass 1	1
	1	SynthBass101	1
	8	Synth Bass 3	1
	64	TB303 Bs 1	1
	65	TB303 Bs 2	1
66	TB303 Bs 3	1	
40	0	Synth Bass 2	2
	16	Rubber Bass	2
	64	SH101 Bs 1	1
	65	SH101 Bs 2	1
	66	SH101 Bs 3	1
	67	Modular Bass	2

ORCHESTRA

41	0	Violin	1
	8	Slow Violin	1
42	0	Viola	1
43	0	Cello	1
44	0	Contrabass	1
45	0	Tremolo Str	1
46	0	PizzicatoStr	1
47	0	Harp	1
48	0	Timpani	1

STRINGS

49	0	Strings	1
	8	Orchestra	2
50	0	Slow Strings	1
51	0	Syn.Strings1	1
	8	Syn.Strings3	2
	64	Syn.Strings4	2
	65	OB Strings	2
52	0	Syn.Strings2	2
53	0	Choir Aahs	1
	32	Choir Aahs 2	1
54	0	Voice Oohs	1
55	0	SynVox	1
56	0	OrchestraHit	2

BRASS

57	0	Trumpet	1
58	0	Trombone	1
	1	Trombone 2	2
59	0	Tuba	1
60	0	MutedTrumpet	1
61	0	French Horn	2
	1	Fr.Horn 2	2
62	0	Brass 1	1
	8	Brass 2	2

SYN. BRASS

63	0	Synth Brass1	2
	8	Synth Brass3	2
	16	AnalogBrass1	2
	64	Synth Brass5	2
	65	Poly Brass	2
66	Quack Brass	2	
67	Octave Brass	2	
64	0	Synth Brass2	2
	8	Synth Brass4	1
	16	AnalogBrass2	2
	64	Soft Brass	2
	65	Velo Brass 1	2
	66	Velo Brass 2	2

REED

65	0	Soprano Sax	1
66	0	Alto Sax	1
67	0	Tenor Sax	1
68	0	Baritone Sax	1
69	0	Oboe	1
70	0	English Horn	1
71	0	Bassoon	1
72	0	Clarinet	1

PIPE

73	0	Piccolo	1
74	0	Flute	1
75	0	Recorder	1
76	0	Pan Flute	1
77	0	Bottle Blow	2
78	0	Shakuhachi	2
79	0	Whistle	1
80	0	Ocarina	1

SYN. LEAD

81	0	Square Wave	2
	1	Square	1
	8	Sine Wave	1
82	0	Saw Wave	2
	1	Saw	1
	8	Doctor Solo	2
	64	Big Lead	2
	65	Waspy Synth	2
83	0	Syn.Calliope	2
84	0	Chiffer Lead	2
85	0	Charang	2
	64	Dist. Lead 1	2
	65	Dist. Lead 2	2
	66	Funk Lead	2
86	0	Solo Vox	2
	87	0	5th Saw Wave
87	64	Big Fives	2
	88	0	Bass & Lead
64		Big & Raw	2
65		Fat & Perky	2

SYN. PAD

89	0	Fantasia	2
90	0	Warm Pad	1
	64	Thick Pad	2
	65	Horn Pad	2
91	0	Polysynth	2
	64	80's PolySyn	2
92	0	Space Voice	1
93	0	Bowed Glass	2
94	0	Metal Pad	2
	64	Panner Pad	2
95	0	Halo Pad	2
96	0	Sweep Pad	1
	64	Polar Pad	1
	65	Converge	1

SYN. SFX

97	0	Ice Rain	2
98	0	Soundtrack	2
	64	Ancestral	2
	65	Prologue	2
99	0	Crystal	2
	1	Syn Mallet	1
100	0	Atmosphere	2
101	0	Brightness	2
102	0	Goblin	2
103	0	Echo Drops	1
	1	Echo Bell	2
	2	Echo Pan	2
	64	Echo Pan 2	2
	65	Big Panner	2
	66	Reso Panner	2
104	0	Star Theme	2

ETHNIC MISC

105	0	Sitar	1
	1	Sitar 2	2
106	0	Banjo	1
107	0	Shamisen	1
108	0	Koto	1
	8	Taisho Koto	2
109	0	Kalimba	1
110	0	Bagpipe	1
111	0	Fiddle	1
112	0	Shanai	1

PERCUSSIVE

113	0	Tinkle Bell	1
114	0	Agogo	1
115	0	Steel Drums	1
116	0	Woodblock	1
	8	Castanets	1
117	0	Taiko	1
	8	Concert BD	1

118	0	Melo. Tom 1	1
	8	Melo. Tom 2	1
119	0	Synth Drum	1
	8	808 Tom	1
	9	Elec Perc.	1
120	0	Reverse Cym.	1

GUITAR BASS FX

121	0	Gt.FretNoise	1
	1	Gt.Cut Noise	1
	64	Wah Brush Gt	1
	65	Gt. Slide	1
	66	Gt. Scratch	1
	67	Bass Slide	1

SFX

122	0	Breath Noise	1
	1	Fl.Key Click	1
123	0	Seashore	1
	1	Rain	1
	2	Thunder	1
	3	Wind	1
	5	Bubble	2
124	0	Bird	2
	1	Dog	1
	3	Bird 2	1
125	0	Telephone 1	1
	1	Telephone 2	1
	3	Door	1
	5	Wind Chimes	2
126	0	Helicopter	1
	2	Car-Stop	1
	9	Burst Noise	2
	64	Space Tri.	1
127	0	Applause	2
	3	Punch	1
128	0	Gun Shot	1
	2	Lasergun	1
	3	Explosion	2

PC: Program Number
(Instrument Number)

CC: Value of control change
number 0

Voices: Number of voices used

MEMO

- To switch instruments from the external MIDI device, send "0" on the CC32# (Control Change Bank Select) from the external MIDI device to the TD-6V.
- The value of the CC32# (Control Change Bank Select) that the TD-6V transmits is always "0."

Preset Song List

No.	Song Name	Time Sig	Length	Tempo	Type
DRUMS					
1	DRUMS	4/4	8	124	LOOP
ROCK					
2	US ROCK	4/4	35	128	1SHOT
3	ACO ROCK	4/4	26	120	1SHOT
4	8BT'ROK1	4/4	36	114	1SHOT
5	8BT'ROK2	4/4	30	140	1SHOT
6	MED ROK	4/4	24	109	1SHOT
7	SHFL ROK	4/4	26	126	1SHOT
8	FUNK ROK	4/4	32	100	1SHOT
9	SLOW ROK	4/4	20	72	1SHOT
10	URBAN	4/4	29	113	1SHOT
11	UPBEAT	4/4	33	100	1SHOT
12	TRIPLETS	4/4	35	105	1SHOT
13	16BT'ROK	4/4	31	86	1SHOT
14	CYBER	4/4	30	129	1SHOT
15	HARDROCK	4/4	22	195	1SHOT
16	FNKYHR	4/4	20	100	1SHOT
17	BOOGIE	4/4	48	216	1SHOT
18	HARD POP	4/4	38	175	1SHOT
METAL					
19	EARLYMTL	4/4	24	120	1SHOT
20	THRASH	4/4	32	195	1SHOT
BALLAD					
21	6/8BLD	6/8	28	50	1SHOT
22	POPBLD	4/4	24	65	1SHOT
23	ROCK BLD	4/4	24	64	1SHOT
24	PIANOBLD	4/4	15	65	1SHOT
25	16BT'BLD	4/4	29	75	1SHOT
R&B					
26	OLD R&B1	4/4	27	154	1SHOT
27	OLD R&B2	4/4	28	148	1SHOT
28	OLD R&B3	4/4	25	150	1SHOT
29	OLD R&B4	4/4	22	82	1SHOT
30	R&B SHFL	4/4	23	112	1SHOT
31	R&B HOP1	4/4	35	96	1SHOT
32	R&B HOP2	4/4	42	93	1SHOT
33	SMTH GRV	4/4	24	73	1SHOT
34	SHFL GRV	4/4	26	96	1SHOT
BLUES					
35	BLUES1	4/4	30	67	1SHOT
36	BLUES2	4/4	36	113	1SHOT
37	BLUES3	4/4	21	55	1SHOT
POPS					
38	BGM POP	4/4	27	88	1SHOT
39	REFRESH	4/4	25	89	1SHOT
40	DANCEPOP	4/4	25	120	1SHOT
41	POP ROCK	4/4	38	123	1SHOT
42	ACOUSPOP	4/4	20	89	1SHOT
43	ELEC POP	4/4	25	100	1SHOT
44	POP WLTZ	3/4	26	120	1SHOT

No.	Song Name	Time Sig	Length	Tempo	Type
R&R					
45	ROCKABLY	4/4	21	96	1SHOT
46	ROCKIN'	4/4	32	170	1SHOT
47	SURF ROK	4/4	24	150	1SHOT
COUNTRY					
48	BLUEGRSS	4/4	22	142	1SHOT
49	CNTRYBLD	4/4	36	104	1SHOT
50	CNTRYROK	4/4	37	125	1SHOT
JAZZ					
51	SWING1	4/4	39	200	1SHOT
52	SWING2	4/4	37	192	1SHOT
53	JAZZ WLZ	3/4	51	110	1SHOT
54	JAZZ BLD	4/4	42	110	1SHOT
55	LATINJAZ	4/4	37	167	1SHOT
56	6/8 JAZZ	6/8	35	93	1SHOT
57	SMTHJAZZ	4/4	39	183	1SHOT
58	BIGBAND	4/4	32	130	1SHOT
FUSION					
59	FUSE	4/4	18	95	1SHOT
60	ACID FS	4/4	29	96	1SHOT
61	SLOW FS	4/4	22	85	1SHOT
62	MED SHFL	4/4	27	86	1SHOT
63	UP SHFL	4/4	37	130	1SHOT
64	FUNK FS1	4/4	41	120	1SHOT
65	FUNK FS2	4/4	24	112	1SHOT
66	3/4 FS	3/4	46	123	1SHOT
67	BGM FS	4/4	25	82	1SHOT
68	CTMP'FS	4/4	25	100	1SHOT
DANCE					
69	HIPHOP	4/4	37	90	1SHOT
70	EUROBEAT	4/4	35	132	1SHOT
71	HOUSE	4/4	34	122	1SHOT
72	FUNK1	4/4	24	105	1SHOT
73	FUNK2	4/4	23	113	1SHOT
74	FUNK3	4/4	25	102	1SHOT
75	808HPHOP	4/4	20	102	1SHOT
76	JAZZFUNK	4/4	24	125	1SHOT
77	ACIDFUNK	4/4	24	86	1SHOT
78	HPHPJAZZ	4/4	24	96	1SHOT
79	TEKPOP	4/4	23	118	1SHOT
REGGAE					
80	REGGAE1	4/4	22	96	1SHOT
81	REGGAE2	4/4	29	142	1SHOT
82	REGGAE3	4/4	20	132	1SHOT
83	REGGAE4	4/4	24	125	1SHOT
84	SKA	4/4	27	192	1SHOT

No.	Song Name	Time Sig	Length	Tempo	Type
LATIN					
85	LATIN1	4/4	41	120	1SHOT
86	LATIN2	4/4	41	108	1SHOT
87	LATIN3	4/4	33	130	1SHOT
88	MAMBO	4/4	36	182	1SHOT
89	MERENGUE	4/4	36	207	1SHOT
90	SALSA1	4/4	30	115	1SHOT
91	SALSA2	4/4	25	102	1SHOT
92	SALSA3	4/4	47	165	1SHOT
93	SONGO	4/4	24	109	1SHOT
94	TJANO	4/4	24	89	1SHOT

BRAZIL					
95	BOSSA	4/4	27	85	1SHOT
96	SAMBA1	4/4	20	152	1SHOT
97	SAMBA2	4/4	28	136	1SHOT

BASICPTN					
98	8BEAT1	4/4	8	118	LOOP
99	8BEAT2	4/4	16	140	LOOP
100	8BEAT3	4/4	8	113	LOOP
101	SHUFFL1	4/4	8	120	LOOP
102	SHUFFL2	4/4	8	108	LOOP
103	SLOW1	4/4	4	69	LOOP
104	SLOW2	4/4	8	64	LOOP
105	R&B1	4/4	8	100	LOOP
106	R&B2	4/4	8	104	LOOP
107	BLUES	4/4	12	120	LOOP
108	POP X	4/4	8	124	LOOP
109	DIXIE	4/4	8	162	LOOP
110	FUNK1	4/4	8	90	LOOP
111	FUNK2	4/4	8	106	LOOP
112	16BEAT1	4/4	4	120	LOOP
113	16BEAT2	4/4	4	112	LOOP
114	HIPHOP2	4/4	4	101	LOOP
115	AMBIENT1	4/4	8	96	LOOP
116	AMBIENT2	4/4	8	120	LOOP
117	TRANCE	4/4	8	132	LOOP
118	RAVE	4/4	8	132	LOOP
119	REGGAE5	4/4	8	122	LOOP
120	BOSSA BT	4/4	4	120	LOOP

LOOP					
121	4/4SHAKR	4/4	1	86	LOOP
122	6/8SHAKR	6/8	1	120	LOOP
123	LATN PTN	4/4	2	120	LOOP
124	CLAVES	4/4	1	120	LOOP
125	TABLA	4/4	2	128	LOOP
126	SITRDRON	4/4	1	89	LOOP

1SHOT					
127	DRUMFILL	4/4	1	120	1SHOT
128	DBL BASS	4/4	1	130	1SHOT
129	ROLL T1	4/4	1	130	1SHOT
130	ROLL T2	4/4	1	130	1SHOT
131	ROLL T3	4/4	1	130	1SHOT
132	LATNFILL	4/4	2	120	1SHOT
133	ROLLBNGO	4/4	1	117	1SHOT
134	SPANISH	4/4	2	123	1SHOT
135	BRS FALL	4/4	1	120	1SHOT
136	ENCORE	4/4	7	120	1SHOT

TAP					
137	SAMBA	4/4	1	120	TAP
138	ACO BASS	4/4	4	160	TAP
139	BRS SECT	4/4	5	160	TAP
140	GRV BASS	4/4	2	120	TAP
141	GRV PAD	4/4	2	120	TAP
142	GRV CHR D	4/4	1	120	TAP
143	ADLBSOLO	4/4	16	120	TAP
144	JAZZEND1	4/4	6	60	TAP
145	JAZZEND2	4/4	4	100	TAP
146	FUNK BRK	4/4	1	130	TAP
147	FUNKEND1	4/4	2	130	TAP
148	FUNKEND2	4/4	3	130	TAP
149	SITARRAG	4/4	17	100	TAP
150	SANTUR	4/4	3	128	TAP
151	STRINGS	4/4	8	128	TAP
152	RESOBASS	4/4	2	120	TAP
153	SYNCHRD1	4/4	3	120	TAP
154	SYNCHRD2	4/4	3	120	TAP
155	A_GTRTAP	4/4	3	120	TAP
156	E_GTRTAP	4/4	3	120	TAP
157	D_GTRTAP	4/4	3	120	TAP
158	C_GTRTAP	4/4	3	120	TAP
159	G_GTRTAP	4/4	3	120	TAP
160	A_STRUM	4/4	3	120	TAP
161	GTRCHRD1	4/4	1	120	TAP
162	GTRCHRD2	4/4	1	120	TAP
163	PAD&BASS	4/4	8	80	TAP
164	ACO GTR	4/4	6	86	TAP
165	WAH GTR	4/4	1	120	TAP
166	CUT GTR	4/4	1	120	TAP
167	VOICES	4/4	2	120	TAP
168	ANLGPERC	4/4	1	120	TAP
169	SFX TAP	4/4	5	120	TAP
170	CAR CELL	4/4	3	120	TAP

Parameter List

Drum Kit Parameters

KIT

Parameter		Value
Drum Kit (p. 55)	Drum Kit	1-99

KIT/INST

Parameter		Value
Inst (p. 58)	Instrument	1-1024
Inst Group (p. 57)	Instrument Group	KICK, SNARE, TOM, HI-HAT, CRASH, RIDE, PERC, SPECIAL, MELODIC, VOICES, REVERSE, FIXED HI-HAT, OFF
Level (p. 59)	Level	0-127
Pan (p. 59)	Pan	L15-CENTER-R15, RANDOM, ALTERNATE
Pitch (p. 59)	Pitch	-480+480
Decay (p. 59)	Decay	-31+31

KIT/AMBIENCE

Parameter		Value
Ambience Sw (p. 60)	Ambience Switch	OFF, ON
AmbSendLevel (p. 60)	Ambience Send Level	0-127
Studio (p. 60)	Studio Type	LIVING, BATHROOM, STUDIO, GARAGE, LOCKER, THEATER, CAVE, GYM, STADIUM
WallType (p. 61)	Wall Type	WOOD, PLASTER, GLASS
Room Size (p. 61)	Room Size	SMALL, MEDIUM, LARGE
Amb Level (p. 61)	Ambience Level	0-127

KIT/EQUALIZER

Parameter		Value
Master EQ Sw (p. 62)	Master Equalizer Switch	OFF, ON
High Gain (p. 62)	High Gain	-12dB+12dB
Low Gain (p. 62)	Low Gain	-12dB+12dB

KIT/CONTROL

Parameter		Value	
Pad Ptn (p. 63)	Pad Pattern	OFF, 1-270	+
Pad Ptn Velo (p. 63)	Pad Pattern Velocity	OFF, ON	+
Pitch Ctrl (p. 64)	Pitch Control Assign	OFF, ON	
Note No. (p. 64)	Note Number	0 (C -)-127 (G 9)	+
Gate Time (p. 65)	Gate Time	0.1sec-8.0sec (0.1 sec steps)	+

+ : This setting cannot be made in GM mode.

KIT/COMMON

Parameter		Value
MasterVolume (p. 66)	Master Volume	0-127
Pedal HH Vol (p. 66)	Pedal Hi-Hat Volume	0-15
PchCtrlRange (p. 66)	Pitch Control Range	-24+24
KitName (p. 67)	Drum Kit Name	8 characters (*1)

*1: ABCDEFGHIJKLMNOPQRSTUVWXYZ abcdefghijklmnopqrstuvwxyz
 0123456789 !#\$%&'()*_+,-*/=<>()[]{}.,:;?@#++| space

KIT/COPY

Parameter		Value
Src (p. 67)	Copy Source	P01–P99, U01–U99
Dst (p. 67)	Copy Destination	U01–U99

KIT/EXCHANGE

Parameter		Value
Src (p. 68)	Exchange Source	P01–P99, U01–U99
Dst (p. 68)	Exchange Destination	U01–U99

Song Parameters

SONG

Parameter		Value
Song (p. 83)	Song	001–270 +
Song Category (p. 83)	Song Category	DRUMS, ROCK, METAL, BALLAD, R&B, BLUES, POPS, R&R, COUNTRY, JAZZ, FUSION, DANCE, REGGAE, LATIN, BRAZIL, BASICPTN, LOOP, 1SHOT, TAP, USER +

+: This setting cannot be made in GM mode.

SONG/COMMON

Parameter		Value
Tempo (p. 85)	Tempo	20–260 +
Play Type (p. 85)	Play Type	LOOP, 1SHOT, TAP +
Quick Play (p. 86)	Quick Play	OFF, ON +
Reset Time (p. 86)	Reset Time	OFF, 0.1s–8.0s (0.1 sec steps) +
Tap Exc Sw (p. 86)	Tap Exclusive Switch	OFF, ON +
Song Lock (p. 86)	Song Lock	OFF, ON #
SngName (p. 87)	Song Name	8 characters (*1) #

+: This setting cannot be made in GM mode.

#: This setting cannot be made when the preset song is selected.

*1: ABCDEFGHIJKLMNOPQRSTUVWXYZ abcdefghijklmnopqrstuvwxyz
0123456789 !"#%&'()*+,-*/=<>()[]{}.,:;?@#*+! space

SONG/PART:Perc

Parameter		Value
Set (p. 88)	Percussion Set	1–10 +
Level (p. 88)	Level	0–127 +
AmbSendLevel (p. 89)	Ambience Send Level	0–127 +

+: This setting cannot be made in GM mode.

SONG/PART:Part1–Part4

Parameter		Value
Inst (p. 88)	Instrument	1–128 +
Level (p. 88)	Level	0–127 +
Pan (p. 89)	Pan	L15–CENTER–R15 +
AmbSendLevel (p. 89)	Ambience Send Level	0–127 +
Bend Range (p. 89)	Bend Range	0–24 +

+: This setting cannot be made in GM mode.

Parameter List

SONG/COPY

Parameter		Value	
Src (p. 89)	Copy Source	001–270	+
Dst (p. 89)	Copy Destination	171–270	+

+: This setting cannot be made in GM mode.

SONG/DELETE

Parameter		Value	
Song (p. 90)	Delete Song	171–270	+

+: This setting cannot be made in GM mode.

SONG/ERASE

Parameter		Value	
Song (p. 91)	Erase Song	171–270	+
Part (p. 91)	Erase Part	ALL, KIT, PERC, PART1, PART2, PART3, PART4	+

+: This setting cannot be made in GM mode.

Setup Parameters

SETUP/UTILITY

Parameter		Value	
LCD Contrast (p. 76)	LCD Contrast	1–16	
PercPrtLevel (p. 76)	Percussion Part Level	0–127	+
Backing Level (p. 77)	Backing Level	0–127	+
Mute (p. 77)	Mute	SongDrum, SongDrm/Prc, UserDrmPart, Part1, Part2, Part3, Part4, Part1-4	+
Master Tune (p. 77)	Master Tune	415.3–466.2 (0.1 Hz steps)	
Preview Velo (p. 78)	Preview Velocity	0–127	
AvailMemory (p. 78)	Available Memory	0–100% (check only)	

+: This setting cannot be made in GM mode.

SETUP/TRIG BASIC

Parameter		Value	
TrigTyp (p. 69)	Trigger Type	PD-8, PD Type, PD-80R, PD-120, PD-125, KD-8, KD Type, CY-8, CY Type, RT-7K, RT-5S, RT-3T, RIM	
Secsitivity (p. 71)	Sensitivity	1–16	
Threshold (p. 72)	Threshold	0–15	
TrigCurve (p. 72)	Trigger Curve	LINEAR, EXP1, EXP2, LOG1, LOG2, SPLINE, LOUD1, LOUD2	
Xtalk Cancel (p. 73)	Crosstalk Cancel	OFF, 20–80 (5 steps)	

SETUP/TRIG ADVNCD

Parameter		Value	
Scan Time (p. 74)	Scan Time	0–4.0ms (0.1 ms steps)	
Retrig Cancel (p. 74)	Retrigger Cancel	1–16	
Mask Time (p. 74)	Mask Time	0–64ms (4ms steps)	
Rim Sens (p. 75)	Rim Sensitivity	OFF, 1–15	

SETUP/MIDI COMMON

Parameter		Value	
Note Chase (p. 97)	Note Chase	OFF, ON	
Local Control (p. 97)	Local Control	OFF, ON	+
Sync Mode (p. 98)	Sync Mode	INT, EXT, REMOTE	+
CH10Priority (p. 98)	Channel 10 Priority	KIT, PERC	+
PdldataThin (p. 99)	Pedal Data Thin	OFF, 1, 2	+
GM Mode (p. 99)	GM Mode	OFF, ON	
Rx GM ON (p. 100)	Rx GM On	OFF, ON	
Soft Thru (p. 100)	Soft Thru	OFF, ON	
Device ID (p. 101)	Device ID	1-32	
Tx PC Sw (p. 101)	Tx PC Switch	OFF, ON	+
Rx PC Sw (p. 101)	Rx PC Switch	OFF, ON	+

+: This setting cannot be made in GM mode.

SETUP/MIDI PART

Parameter		Value	
KitPart CH (p. 102)	Drum Kit Part MIDI Channel	1-16, OFF	+
PercPart CH (p. 102)	Percussion Part MIDI Channel	1-16, OFF	+
Part1 CH (p. 102)	Part 1 MIDI Channel	1-16, OFF	+
Part2 CH (p. 102)	Part 2 MIDI Channel	1-16, OFF	+
Part3 CH (p. 102)	Part 3 MIDI Channel	1-16, OFF	+
Part4 CH (p. 102)	Part 4 MIDI Channel	1-16, OFF	+

+: This setting cannot be made in GM mode.

SETUP/GM PART

Parameter		Value	
Part1 Rx Sw (p. 102)	Part 1 Rx Switch	OFF, ON	-
Part2 Rx Sw (p. 102)	Part 2 Rx Switch	OFF, ON	-
Part3 Rx Sw (p. 102)	Part 3 Rx Switch	OFF, ON	-
Part4 Rx Sw (p. 102)	Part 4 Rx Switch	OFF, ON	-
Part5 Rx Sw (p. 102)	Part 5 Rx Switch	OFF, ON	-
Part6 Rx Sw (p. 102)	Part 6 Rx Switch	OFF, ON	-
Part7 Rx Sw (p. 102)	Part 7 Rx Switch	OFF, ON	-
Part8 Rx Sw (p. 102)	Part 8 Rx Switch	OFF, ON	-
Part9 Rx Sw (p. 102)	Part 9 Rx Switch	OFF, ON	-
Part10 Rx Sw (p. 102)	Part 10 Rx Switch	OFF, ON	-
Part11 Rx Sw (p. 102)	Part 11 Rx Switch	OFF, ON	-
Part12 Rx Sw (p. 102)	Part 12 Rx Switch	OFF, ON	-
Part13 Rx Sw (p. 102)	Part 13 Rx Switch	OFF, ON	-
Part14 Rx Sw (p. 102)	Part 14 Rx Switch	OFF, ON	-
Part15 Rx Sw (p. 102)	Part 15 Rx Switch	OFF, ON	-
Part16 Rx Sw (p. 102)	Part 16 Rx Switch	OFF, ON	-

-: This setting can be made in GM mode only.

SETUP/BULK DUMP

Parameter		Value
Bulk Dump (p. 103)	Bulk Dump	ALL, SETUP, ALL SONGS, ALL KITS, KIT 01-KIT 99

SETUP/FactoryReset

Parameter		Value
Reset (p. 78)	Factory Reset	ALL, THIS DRUM KIT, ALL DRUM KITS, ALL SONGS

Click Parameters

CLICK

Parameter		Value	
Click Level (p. 79)	Click Level	0-127	+
Time Sig (p. 80)	Time Signature	0-13/2, 0-13/4, 0-13/8, 0-13/16	+
Interval (p. 80)	Interval	1/2, 3/8, 1/4, 4/8, 1/12, 1/16	+
Inst (p. 80)	Inst	VOICE, CLICK, BEEP, METRONOME, CLAVES, WOOD BLOCK, STICKS, CROSS STICK, TRIANGLE, COWBELL, CONGA, TALKING DRM, MARACAS, CABASA, CUICA, AGOGO, TAMBOURINE, SNAPS, 909 SNARE, 808 COWBELL	+
Pan (p. 80)	Pan	L15-CENTER-R15	+
PlyCountIn (p. 80)	Play Count In	OFF, 1MEAS, 2MEAS	+
RecCountIn (p. 80)	Recording Count In	OFF, 1MEAS, 2MEAS	+

+: This setting cannot be made in GM mode.

Song Recording

Recording Standby

Parameter		Value	
Time Sig (p. 93)	Time Signature	1-13/2, 1-13/4, 1-13/8, 1-13/16	+
Length (p. 93)	Length	1-999	+
Tempo (p. 93)	Tempo	20-260	+
Quantize (p. 94)	Quantize	♩ 8 (8th note), ♩♩ 8T (8th note triplets), ♩ 16 (16th note), ♩♩ 16T (16th note triplets), ♩ 32 (32nd note), ♩♩ 32T (32nd note triplets), ♩ 64 (64th note), OFF	+
Rec Mode (p. 94)	Recording Mode	REPLACE, LOOP ALL, LOOP 1, LOOP 2	+
HitPadStart (p. 94)	Hit Pad Start	OFF, ON	+

+: This setting cannot be made in GM mode.

Tempo

Tempo

Parameter		Value	
Tempo (p. 79, p. 85)	Tempo	20-260	+

+: This setting cannot be made in GM mode.

MIDI Implementation Chart

Function...	Transmitted	Recognized	Remarks
Basic Channel Default Changed	1-16, OFF 1-16, OFF	1-16, OFF 1-16, OFF	Memorized (Non-Volatile)
Mode Default Messages Altered	Mode 3 X *****	Mode 3 X *****	
Note Number : True Voice	0-127 0-127	0-127 0-127	
Velocity Note On Note Off	<input type="radio"/> 9nH, v = 1-127 <input type="radio"/> 8nH, v = 64	<input type="radio"/> 9nH, v = 1-127 <input type="radio"/> 8nH, v = 64	
After Touch Key's Channel's	<input type="radio"/> *1 X	<input type="radio"/> *1 X	
Pitch Bend	X	<input type="radio"/> *3	
Control Change	0, 32 1 4 6 7 10 11 64 91 100, 101	X X <input type="radio"/> *1 X X X X X X X X	<input type="radio"/> *3 X <input type="radio"/> *1 <input type="radio"/> *3 <input type="radio"/> *2 <input type="radio"/> *3 <input type="radio"/> *3 <input type="radio"/> *2 <input type="radio"/> *3
Program Change : True Number	<input type="radio"/> 0-127	<input type="radio"/> 0-127	Program No. 1-128
System Exclusive	<input type="radio"/>	<input type="radio"/>	
System Common : Song Position : Song Select : Tune Request	X X X	X X X	
System Real Time : Clock : Commands	X X	X X	
Aux Messages : All Sound Off : Reset All Controllers : Local On/Off : All Notes Off : Active Sensing : System Reset	X X X X <input type="radio"/> X	<input type="radio"/> (120, 126, 127) <input type="radio"/> X <input type="radio"/> (123-127) <input type="radio"/> X	
Notes	* 1 Drum kit part only. * 2 Percussion part and backing part only. * 3 Backing part only.		

Mode 1 : OMNI ON, POLY
Mode 3 : OMNI OFF, POLY

Mode 2 : OMNI ON, MONO
Mode 4 : OMNI OFF, MONO

O : Yes
X : No

MIDI Implementation Chart

Function...	Transmitted	Recognized	Remarks
Basic Channel Default Changed	1-16, OFF 1-16, OFF	1-16, OFF 1-16, OFF	Memorized (Non-Volatile)
Mode Default Messages Altered	Mode 3 X *****	X X *****	
Note Number : True Voice	0-127 0-127	0-127 0-127	
Velocity Note On Note Off	O 9nH, v = 1-127 O 8nH, v = 64	O 9nH, v = 1-127 O 8nH, v = 64	
After Touch Key's Channel's	X X	X X	
Pitch Bend	O *3	O *3	
Control Change 0, 32 1 4 6 7 10 11 64 91 100, 101	O *3 *4 *5 X O *1 O *3 O *2 *4 O *3 *4 X O *3 O *2 *4 O *3	X X O *1 X X X X O *3 X X	Bank select Modulation Foot control *1 Data entry Volume Panpot Expression Hold 1 *3 Effect 1 (Reverb Send Level) RPN LSB, MSB
Program Change : True Number	O *4 *5 0-127	X	Program No. 1-128
System Exclusive	O	O (do not record)	
System Common : Song Position : Song Select : Tune Request	X X X	X X X	
System Real Time : Clock : Commands	O O	X *6 X *7	
Aux Messages : All Sound Off : Reset All Controllers : Local On/Off : All Notes Off : Active Sensing : System Reset	X X X X O X	O O X O (123-127) O (do not record) X	
Notes	<p>*1 Drum kit part only. *5 Transmits when instruments are selected for parts. *2 Percussion part and backing part only. *6 Receives when Sync Mode setting is "EXT". *3 Backing part only. *7 Receives when Sync Mode setting is "EXT" or "REMOTE". *4 Transmits when song is selected.</p>		

Mode 1 : OMNI ON, POLY
Mode 3 : OMNI OFF, POLY

Mode 2 : OMNI ON, MONO
Mode 4 : OMNI OFF, MONO

O : Yes
X : No


MIDI Implementation Chart

Function...	Transmitted	Recognized	Remarks
Basic Channel Default Changed	X X	1-16, OFF 1-16, OFF	Memorized (Non-Volatile)
Mode Default Messages Altered	X X *****	Mode 3 X *****	
Note Number : True Voice	X *****	0-127 0-127	
Velocity Note On Note Off	X X	0 9nH, v = 1-127 0 8nH, v = 64	
After Touch Key's Channel's	X X	X O *1	
Pitch Bend	X	O *1	
Control Change	0, 32 X 1 X 4 X 6 X 7 X 10 X 11 X 64 X 91 X 100, 101 X	X O *1 X O *1 O O *1 O O *1 O O *1	Bank select Modulation Foot control Data entry Volume Panpot Expression Hold 1 Effect 1 (Reverb Send Level) RPN LSB, MSB
Program Change : True Number	X *****	O 0-127	Program No. 1-128
System Exclusive	O	O	
System Common : Song Position : Song Select : Tune Request	X X X	X X X	
System Real Time : Clock : Commands	X X	X X	
Aux Messages : All Sound Off : Reset All Controllers : Local On/Off : All Notes Off : Active Sensing : System Reset	X X X X O X	O O X O O X	
Notes	*1 Not received on Channel 10		

Mode 1 : OMNI ON, POLY
Mode 3 : OMNI OFF, POLY

Mode 2 : OMNI ON, MONO
Mode 4 : OMNI OFF, MONO

O : Yes
X : No

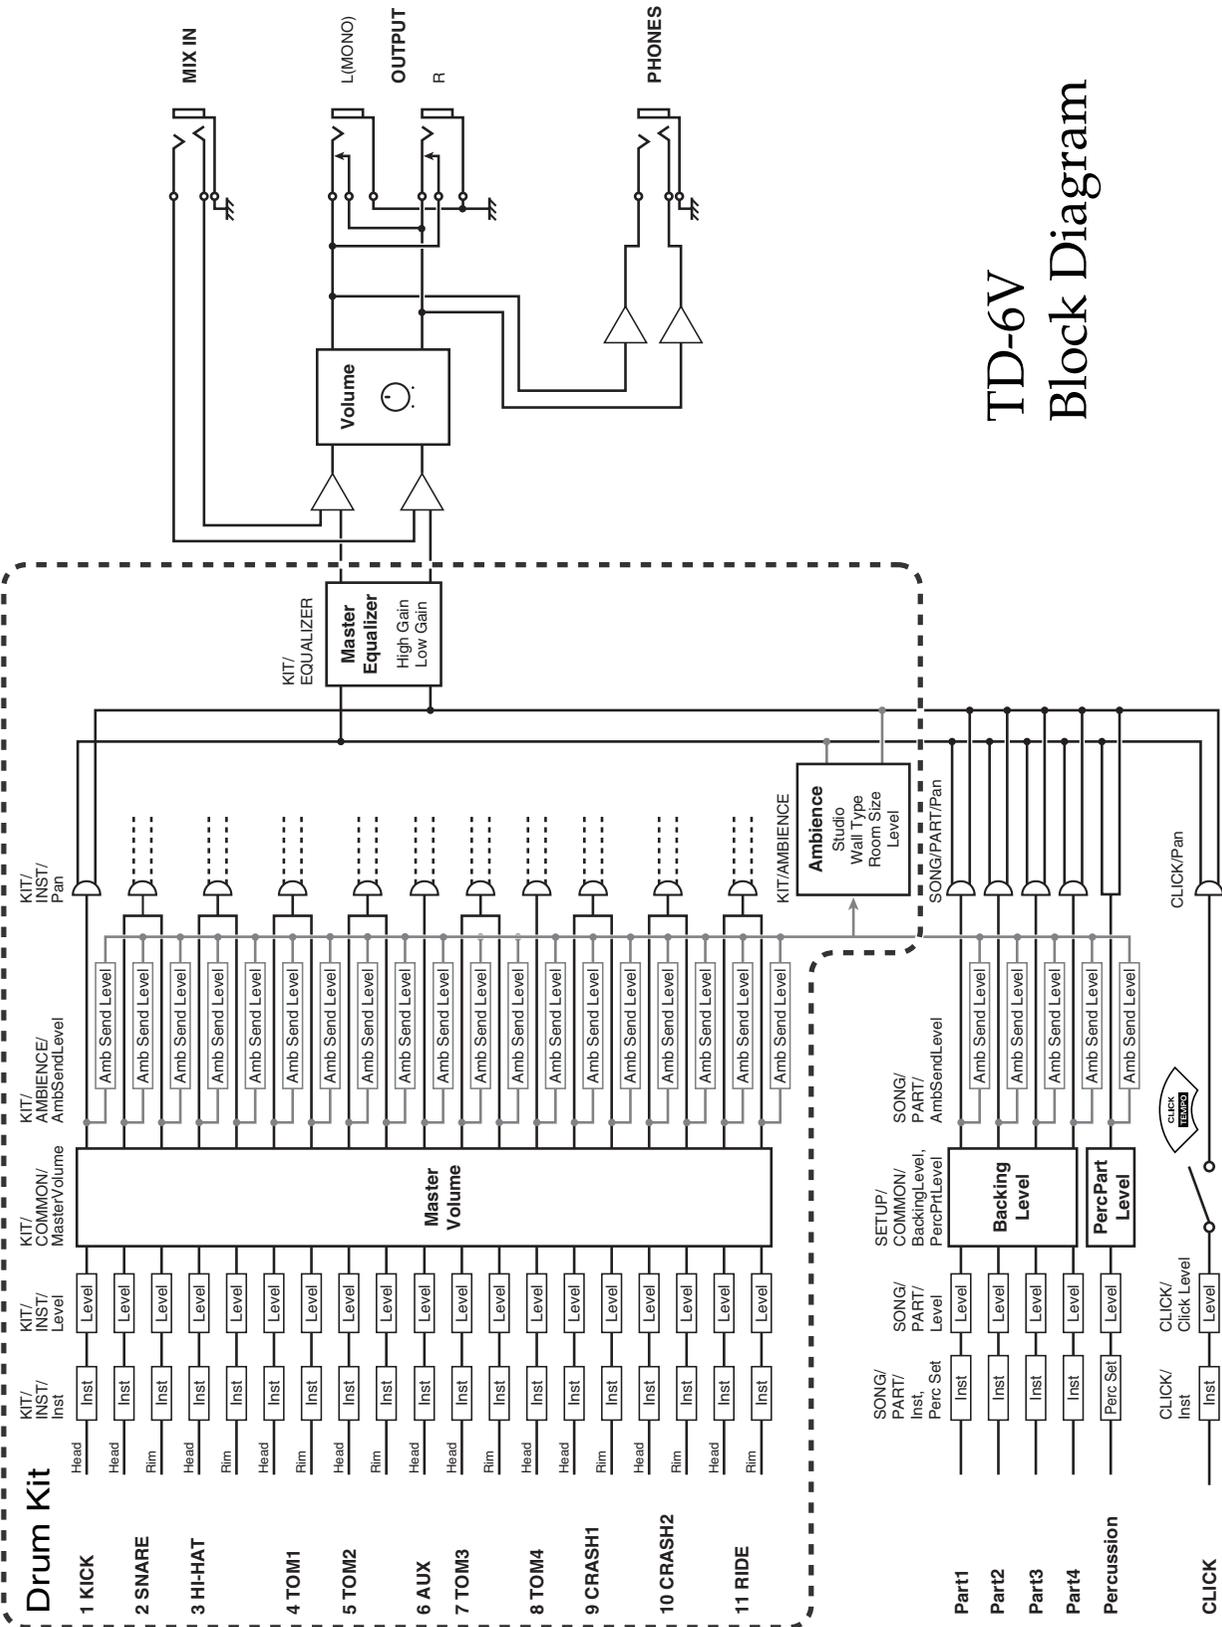

TD-6V Block Diagram

Specifications

TD-6V: Percussion Sound Module (Conforms to General MIDI System)

Maximum Polyphony

64 Voices

Instruments

Drum Instruments: 1,024

Backing Instruments: 262

Drum Kits

99

Effect Types

Ambience

2-Band Master Equalizer

Sequencer

Preset Songs: 170

User Songs: 100

Parts: 6

Play Functions: One shot, Loop, Tap

Tempo: 20–260

Resolution: 192 ticks per quarter note

Recording Method: Realtime Recording

Maximum Note Storage: approx. 12,000 Notes

Display

20 characters, 2 lines (backlit LCD)

Connectors

Trigger Input Jacks: 9 (11 Inputs)

Hi-Hat Control Jack

Output Jacks (L/MONO, R)

Phones Jack (stereo miniature phone type)

Mix in Jack (stereo miniature phone type)

MIDI Connectors (IN, OUT/THRU)

Output Impedance

1.0 k ohms

Power Supply

AC Adaptor (DC 9 V)

Current Draw

1,000 mA

Dimensions

266 (W) x 199 (D) x 75 (H) mm

10-1/2 (W) x 7-7/8 (D) x 3 (H) inches

Weight

1.1 kg / 2 lbs 7 oz (excluding AC Adaptor)

Accessories

Owner's Manual, AC Adaptor (ACI/ACB Series),

Screws (M5 x 8) x 4

Options

Pads (PD-6, PD-7, PD-8, PD-9, PD-80, PD-80R, PD-85, PD-100, PD-105, PD-120, PD-125, RP-2)

Cymbals (CY-6, CY-8, CY-12H, CY-12R/C, CY-14C, CY-15R)

Kick Trigger Units (KD-7, KD-8, KD-80, KD-85, KD-120)

Hi-Hat Control Pedals (FD-7, FD-8)

Stands (MDS-3C, MDS-6, MDS-8C, MDS-10, MDS-20)

Cymbal Mounts (MDY-7U, MDY-10U)

Pad Mounts (MDH-7U, MDH-10U)

* A separate publication titled "MIDI Implementation" is also available. It provides complete details concerning the way MIDI has been implemented on this unit. If you should require this publication (such as when you intend to carry out byte-level programming), please contact the nearest Roland Service Center or authorized Roland distributor.

* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

Index

A

AC Adaptor Jack	18
Acoustic Drum Trigger	75
Advanced Trigger Parameter	73
Amb Level (Ambience Level)	61
AMBIENCE	60
Ambience Sw (Ambience Switch)	60
AmbSendLevel (Ambience Send Level)	
Drum Instrument	60
Part1-Part4	89
Percussion Part	89
AvailMemory (Available Memory)	78

B

Backing Instrument List	126
Backing Part	77
BackingLevel (Backing Level)	77
Basic Trigger Parameter	71
Bell Shots	37
Bend Range	89
Bow Shots	37
Bulk Dump	
Receiving	104
Transmitting	103

C

CH10Priority (Channel 10 Priority)	98
Channel 10 Priority	98
CLICK (TEMPO) Button	16
Click Level	42, 79
Click On/Off	41, 79
COMMON	
Drum Kit	66
Song	85
Copy	
Drum Kit	67
Song	89
Cord Hook	18
Count In	80
Cross Stick	36
Crosstalk Cancel	73
Cymbal Choke	38

D

Decay	59
Delete	90
Demo Songs	27
Device ID	101
Display	16
Drum Instrument List	120
Drum Kit	40, 54-55
Drum Kit List	118
Drum Kit Name	67
Drum Kit Screen	55

E

Edge Shots	37
EDIT (SETUP) Button	17
ENTER Button	17
EQUALIZER	62
Erase	91
Error Message	116
EXCHANGE	68
EXIT Button	17

F

Factory Reset	25, 78
Front Panel	16

G

Gain	62
Gate Time	65
General MIDI system	13
GM Mode (General MIDI Mode)	99
GM Part	102
GM System On Message	100

H

Head Shots	36
HH CTRL Jack	18
High Gain	62
Hi-Hat Control Pedal	38
HitPadStart (Hit Pad Start)	94

I

INC/+, DEC/- Button	17
Indicator	32, 69
INST	58
Inst Group	57
Instrument	
Click	80
Drum Kit	58
Part1-Part4	88
Instruments	
Drum Kit	57
Internal Sequencer	96
Interval	80

K

KIT	
AMBIENCE	60
COMMON	66
CONTROL	62
COPY	67
EQUALIZER	62
EXCHANGE	68
INST	58
KIT Button	17
KitName (Drum Kit Name)	67

L

LCD Contrast	76
Length	93
Level	
Backing Part	46, 77
Click	42, 79
Drum Instrument	59
Part1-Part4	88
Percussion Part	46, 76
Percussion Set	88
Preview	78
List	
Backing Instrument	126
Drum Instrument	120
Drum Kit	118
Parameter	130
Preset Percussion Set	124
Preset Song	128
LocalControl (Local Control)	97
Low Gain	62

M

Mask Time	74
Master EQ Sw (Master Equalizer Switch)	62
Master Tune	77
Master Volume (Master Volume)	66
Message	116
Metronome	41
MIDI	95
MIDI Channel	102
MIDI COMMON	96
MIDI Connectors	18, 95
MIDI PART	102
MIDI Settings	96
MIX IN Jack	18, 51
Mute	48, 77, 84

N

Name	
Drum Kit	67
Song	87
Note Chase	57, 97
Note No. (Note Number)	64

O

OUTPUT Jacks	18
--------------------	----

P

Pad Pattern	50, 63
Pad Ptn (Pad Pattern)	63
Pad Ptn Velo (Pad Pattern Velocity)	63
Pan	
Click	80
Drum Instrument	59
Part1-Part4	89
Parameter List	130
PART	87
Part CH (Part Tx Rx Channel)	102
PART MUTE Button	16
Part Rx Sw (Part Rx Switch)	102
PchCtrlRange (Pedal Pitch Control Range)	66
PdlDataThin (Pedal Data Thin)	99
Pedal Data Thin	99
Pedal HH Vol(Pedal Hi-Hat Volume)	66
Pedal Pitch Control Range	66
PercPrtLevel (Percussion Part Level)	76
Percussion Part Level	76
Percussion Set	88
PHONES Jack	18
Pitch	59

Pitch Ctrl (Pitch Control Assign) 64
 PLAY Button 16
 Play Type 85
 Playback 83
 PlyCountIn (Play Count In) 80
 Power
 Turning Off 24
 Turning On 23
 POWER Switch 18
 Preset Percussion Set List 124
 Preset Song 81
 Preset Song List 128
 Preview 56
 Preview Velo (Preview Velocity) 78
 Program Change
 Transmitting/Receiving Program Changes 105

Q

Quantize 94
 Quick Play 86

R

Rear Panel 18
 REC Button 16
 RecCountIn (Rec Count In) 80
 RecMode (Recording Mode) 94
 Recommended Parameters for the Pads 35
 Reset (Factory Reset) 78
 Reset Time 86
 Restoring the Factory Settings 25, 78
 Retrig Cancel (Retrigger Cancel) 74
 Rim Sens 75
 Rim Shots 36
 Room Size 61
 Rx GM On 100
 Rx PC Sw (Rx PC Switch) 101

S

Scan Time 74
 SECURITY LOCK 18
 Sensitivity 31, 71
 Set (Percussion Set) 88
 SETUP
 BULK DUMP 103
 FactoryReset 78
 GM PART 102
 MIDI COMMON 96
 MIDI PART 102
 TRIG ADVNCD 73
 TRIG BASIC 71
 UTILITY 76
 SHIFT Button 17
 SngName (Song Name) 87
 Soft Thru 100
 SONG
 COMMON 85
 COPY 89
 DELETE 90
 ERASE 91
 PART 87
 Song 44, 81
 SONG Button 17
 Song Category 83
 Song Lock 86
 Song Name 87
 Song Screen 82
 Stand Holder 19
 STOP Button 16
 Studio Type 60
 Sync Mode 98

T

Tap Exc Sw (Tap Exclusive Switch) 86
 Tempo
 Click 43, 79
 Song 47, 85, 93
 Threshold 72
 Time Sig (Time Signature)
 Click 80
 Song 93
 TRIG ADVNCD 73
 TRIG BASIC 71
 TrigCurve (Trigger Curve) 72
 Trigger Input Functions 33
 TRIGGER INPUTS 18
 TrigTyp (Trigger Type) 29, 69
 Troubleshooting 110
 Tx PC Sw (Tx PC Switch) 101

U

User Song	81
UTILITY	76

V

Variation Tone	88
Volume	
Backing Part	46, 77
Click	42
Drum Instrument	59
Part1-Part4	88
Percussion Part	46, 76
Preview	78
Song	46
VOLUME Knob	16

W

WallType (Wall Type)	61
----------------------------	----

X

Xtalk Cancel (Crosstalk Cancel)	73
---------------------------------------	----

MEMO

MEMO

MEMO

For EU Countries

Apparatus containing Lithium batteries

ADVARSEL!

Lithiumbatteri - Eksplosionsfare ved fejlagtig håndtering.
Udskiftning må kun ske med batteri af samme fabrikat og type.
Levér det brugte batteri tilbage til leverandøren.

ADVARSEL

Ekspløsjonsfare ved feilaktig skifte av batteri.
Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten.
Brukte batterier kasseres i henhold til fabrikantens instruksjoner.

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type recommended by the manufacturer.
Discard used batteries according to the manufacturer's instructions.

VARNING

Explosionsfara vid felaktigt batteribyte.
Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren.
Kassera använt batteri enligt fabrikantens instruktion.

VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu.
Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

For EU Countries



This product complies with the requirements of European Directive 89/336/EEC.

For the USA

FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Unauthorized changes or modification to this system can void the users authority to operate this equipment.
This equipment requires shielded interface cables in order to meet FCC class B Limit.

For Canada

NOTICE

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

AVIS

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

