



CHAPTER 5

Configuring Additional Router Features

This chapter contains instructions and information for entering basic configurations using the command-line interface (CLI).

Contents

- [Configuring the Domain Name and Domain Name Server, page 5-103](#)
- [Configuring Telnet, HTTP, and XML Host Services, page 5-106](#)
- [Managing Configuration History and Rollback, page 5-108](#)
- [Configuring Logging and Logging Correlation, page 5-114](#)
- [Creating and Modifying User Accounts and User Groups, page 5-117](#)
- [Configuring Software Entitlement, page 5-121](#)
- [Configuration Limiting, page 5-121](#)

Configuring the Domain Name and Domain Name Server

Configure a domain name and domain name server (DNS) for your router to make contacting other devices on your network more efficient. Use the following guidelines:

- To define a default domain name that the Cisco IOS XR software uses to complete unqualified hostnames (names without a dotted-decimal domain name), use the **domain-name** command in global configuration mode.
- To specify the address of one or more name servers to use for name and address resolution, use the **domain name-server** command in global configuration mode. If no name server address is specified, the default name server is 255.255.255.255 so the DNS lookup can be broadcast to the local network segment. If a DNS server is in the local network, it replies. If not, there might be a server that knows how to forward the DNS request to the correct DNS server.
- Use the **show hosts** command in EXEC mode to display the default domain name, the style of name lookup service, a list of name server hosts, and the cached list of hostnames and addresses.

Configuring the Domain Name and Domain Name Server

To configure the DNS and DNS server, complete the following steps:

SUMMARY STEPS

1. **configure**
2. **domain name *domain-name-of-organization***
3. **domain name-server *ipv4-address***
4. **commit**
or
end
5. **show hosts**

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure	Enters global configuration mode.
	Example: RP/0/RP0/CPU0:router# configure	
Step 2	domain name <i>domain-name-of-organization</i>	Defines a default domain name used to complete unqualified hostnames.
	Example: RP/0/RP0/CPU0:router(config)# domain name cisco.com	
Step 3	domain name-server <i>ipv4-address</i>	Specifies the address of a name server to use for name and address resolution (hosts that supply name information).
	Example: RP/0/RP0/CPU0:router(config)# domain name-server 192.168.1.111	Note You can enter up to six addresses, but only one for each command.

Command or Action	Purpose
Step 4 <pre>end or commit</pre> <p>Example:</p> <pre>RP/0/RP0/CPU0:router(config)# end or RP/0/RP0/CPU0:router(config)# commit</pre>	<p>Saves configuration changes.</p> <ul style="list-style-type: none"> When you issue the end command, the system prompts you to commit changes: <i>Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:</i> <ul style="list-style-type: none"> Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode. Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes. Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes. Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.
Step 5 <pre>show hosts</pre> <p>Example:</p> <pre>RP/0/RP0/CPU0:router(config)# show hosts</pre>	<p>Displays all configured name servers.</p>

Examples

In the following example, the domain name and DNS are configured:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# domain name cisco.com
RP/0/RP0/CPU0:router(config)# domain name-server 10.1.1.1
RP/0/RP0/CPU0:router(config)# commit
RP/0/RP0/CPU0:router(config)# end
RP/0/RP0/CPU0:router# show hosts

Default domain is cisco.com
Name/address lookup uses domain service
Name servers: 10.1.1.1
```

Related Documents

Related Topic	Document Title
Complete descriptions of the domain services commands	<i>Implementing Host Services and Applications on Cisco IOS XR Software module in Cisco IOS XR IP Addresses and Services Configuration Guide</i>

Configuring Telnet, HTTP, and XML Host Services

For security, some host services are disabled by default. Host services, such as Telnet, Extensible Markup Language (XML), and HTTP, can be optionally enabled using the commands described in this section. Host services provide the following features:

- Enabling the Telnet server allows users to log in to the router using IPv4 or IPv6 Telnet clients.
- Enabling the HTTP server allows users to log in to the router using the CWI.
- Enabling the XML agent enables XML Common Object Request Broker Architecture (CORBA) agent services so that you can manage and configure the router using an XML interface.

Prerequisites

The following prerequisites must be met before configuring the Telnet, HTTP, and XML host services:

- For the XML and HTTP host services, the Manageability package must be installed and activated on the router.
- To enable the Secure Socket Layer (SSL) of the HTTP and XML services, the Security package must be installed and activated on the router.

See *Cisco IOS XR System Management Configuration Guide* for information on installing and activating packages.

**Note**

This process enables the Telnet, HTTP and XML host services on the Management Ethernet interfaces. For more information on how to enable these services on other inband interfaces, refer to the *Implementing Management Plane Protection on Cisco IOS XR Software* module in *Cisco IOS XR System Security Configuration Guide*.

SUMMARY STEPS

1. **configure**
2. **telnet {ipv4 | ipv6} server max-servers *limit***
3. **http server**
4. **xml agent corba**
5. **commit**

DETAILED STEPS

Command or Action	Purpose
Step 1 <code>configure</code>	Enters global configuration mode.
Example: <pre>RP/0/RP0/CPU0:router# configure</pre>	
Step 2 <code>telnet ipv4 server max-servers limit</code> or <code>telnet ipv6 server max-servers limit</code>	Enables Telnet services on the router and specifies the maximum number of allowable Telnet servers.
Example: <pre>RP/0/RP0/CPU0:router(config)# telnet ipv4 server max-servers 5</pre>	
Step 3 <code>http server</code>	Enables HTTP server on the router.
Example: <pre>RP/0/RP0/CPU0:router(config)# http server</pre>	
Step 4 <code>xml agent corba</code>	Enables XML CORBA agent services on the router.
Example: <pre>RP/0/RP0/CPU0:router(config)# xml agent corba</pre>	
Step 5 <code>end</code> or <code>commit</code>	Saves configuration changes. <ul style="list-style-type: none"> • When you issue the end command, the system prompts you to commit changes: <code>Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:</code> <ul style="list-style-type: none"> – Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode. – Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes. – Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes. • Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.

Examples

In the following example, the host services are enabled:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# telnet ipv6 server max-servers 5
RP/0/RP0/CPU0:router(config)# http server
RP/0/RP0/CPU0:router(config)# xml agent corba
RP/0/RP0/CPU0:router(config)# commit
```

Related Documents

Related Topic	Document Title
Installation and activation of the Manageability and Security Packages	<i>Upgrading and Managing Cisco IOS XR Software module of Cisco IOS XR System Management Configuration Guide</i>
Descriptions of the HTTP and XML server commands	<i>Manageability Commands on Cisco IOS XR Software module of Cisco IOS XR System Management Command Reference</i>
Descriptions of the Telnet commands	<i>Host Services and Applications Commands on Cisco IOS XR Software module of Cisco IOS XR IP Addresses and Services Command Reference</i>

Managing Configuration History and Rollback

After each commit operation, a record of the committed configuration changes is saved. This record contains only the changes made during the configuration session; it does not contain the complete configuration. Each record is assigned a unique ID, known as a *commitID*.

When multiple commitIDs are present, you can use a commitID to identify a previous configuration to which you want to return, or you can use the commitID to load the configuration changes made during that configuration session. You can also load configuration changes from multiple commitIDs, and you can clear commitIDs. If you are thinking about rolling back the configuration to a specific commitID, consider the following guidelines:

- You cannot roll back to a configuration that was removed because of package incompatibility. Configuration rollbacks can succeed only when the configuration passes all compatibility checks with the currently active Cisco IOS XR software.
- If an incompatible configuration is found during the rollback operation, the operation fails and an error is displayed.

The Cisco IOS XR software automatically saves up to 100 of the most recent commitIDs. The following sections describe how to manage configuration changes and roll back to a previously committed configuration:

- [Displaying the CommitIDs, page 5-109](#)
- [Displaying the Configuration Changes Recorded in a CommitID, page 5-109](#)
- [Previewing Rollback Configuration Changes, page 5-110](#)
- [Rolling Back the Configuration to a Specific Rollback Point, page 5-110](#)
- [Rolling Back the Configuration over a Specified Number of Commits, page 5-111](#)
- [Loading CommitID Configuration Changes to the Target Configuration, page 5-111](#)

- Loading Rollback Configuration Changes to the Target Configuration, page 5-112
- Deleting CommitIDs, page 5-113

Displaying the CommitIDs

To display a history of up to 100 of the most recent commitIDs, enter the **show configuration commit list** command in EXEC or administration EXEC mode. Up to 100 of the most recent commitIDs are saved by the system. Each commitID entry shows the user who committed configuration changes, the connection used to execute the commit, and commitID time stamp.

The commitIDs are shown in the “Label/ID” column. The following example shows the **show configuration commit list** command display in EXEC and administration EXEC modes:

```
RP/0/RP1/CPU0:router# show configuration commit list
SNo. Label/ID      User      Line      Client      Time Stamp
~~~~~ ~~~~~~      ~~~~      ~~~~      ~~~~~      ~~~~~~~~~~
1    1000000219   cisco     vty0      CLI        12:27:50 UTC Wed Mar 22 2006
2    1000000218   cisco     vty1      CLI        11:43:31 UTC Mon Mar 20 2006
3    1000000217   cisco     con0_RP0_C CLI        17:44:29 UTC Wed Mar 15 2006

RP/0/RP1/CPU0:router# admin
RP/0/RP1/CPU0:router(admin)# show configuration commit list
SNo. Label/ID      User      Line      Client      Time Stamp
~~~~~ ~~~~~~      ~~~~      ~~~~      ~~~~~      ~~~~~~~~~~
1    2000000022   cisco     vty1      CLI        15:03:59 UTC Fri Mar 17 2006
2    2000000021   cisco     con0_RP0_C CLI        17:42:55 UTC Wed Mar 15 2006
3    2000000020   SYSTEM    con0_RP0_C Setup Dial  17:07:39 UTC Wed Mar 15 2006
```

Displaying the Configuration Changes Recorded in a CommitID

To display the configuration changes made during a specific commit session (commitID), go to EXEC or administration EXEC mode and enter the **show configuration commit changes** command followed by a commitID number. The easiest way to determine the commitID is to enter the **show configuration commit changes ?** command first. In the following example, the command help is used to display the available commitIDs, and then the changes for a specific commitID are displayed:

```
RP/0/RP1/CPU0:router(admin)# show configuration commit changes ?
last          Changes made in the most recent <n> commits
since         Changes made since (and including) a specific commit
2000000020   Commit ID
2000000021   Commit ID
2000000022   Commit ID

RP/0/RP1/CPU0:router(admin)# show configuration commit changes 2000000020
Building configuration...
username cisco
secret 5 $1$MgUH$xzUEW6jLfAYLKJE.3p440
group root-system
!
end
```

Previewing Rollback Configuration Changes

The **show configuration rollback changes** command allows you to preview the configuration changes that take place if you roll back the configuration to a specific commitID. For example, if you want to roll back the configuration to a specific point, all configuration changes made after that point must be undone. This rollback process is often accomplished by executing the “no” version of commands that must be undone.

To display the prospective rollback configuration changes from the current configuration to a specific commitID, go to EXEC or administration EXEC mode and enter the **show configuration rollback changes to commitId** command. In the following example, the command help displays the available commitIDs, and then the rollback changes are displayed.

```
RP/0/RP1/CPU0:router# show configuration rollback changes to ?

1000000217 Commit ID
1000000218 Commit ID
1000000219 Commit ID

RP/0/RP1/CPU0:router# show configuration rollback changes to 1000000218

Building configuration...
no interface Loopback100
interface POS0/1/0/0
  no ipv6 nd dad attempts
!
!
no route-policy xx
end
```

To display the prospective rollback configuration changes from the current configuration to a specified number of previous sessions, go to EXEC or administration EXEC mode and enter the **show configuration rollback changes last commit-range** command:

```
RP/0/RP0/CPU0:router# show configuration rollback changes last 2

Building configuration...
interface Loopback3
no description
no ipv4 address 10.0.1.1 255.0.0.0
exit
interface Loopback4
no description
no ipv4 address 10.0.0.1 255.0.0.0
end
```

In the preceding example, the command display shows the proposed rollback configuration changes for the last two commit IDs.

Rolling Back the Configuration to a Specific Rollback Point

When you roll back the configuration to a specific rollback point, you undo all configuration changes made during the session identified by the commit ID for that rollback point, and you undo all configuration changes made after that point. The rollback process rolls back the configuration and commits the rolled-back configuration. The rollback process also creates a new rollback point so that you can roll back the configuration to the previous configuration.



Tip To preview the commands that undo the configuration during a rollback, use the **show configuration rollback changes** command.

To roll back the router configuration to a previously committed configuration, go to EXEC or administration EXEC mode and enter the **rollback configuration to commitId** command:

```
RP/0/RP1/CPU0:router# rollback configuration to 1000000220
Loading Rollback Changes.
Loaded Rollback Changes in 1 sec
Committing.
2 items committed in 1 sec (1)items/sec
Updating.
Updated Commit database in 1 sec
Configuration successfully rolled back to '1000000220'.
```

Rolling Back the Configuration over a Specified Number of Commits

When you roll back the configuration over a specific number of commits, you do not have to enter a specific commit ID. Instead, you specify a number x , and the software undoes all configuration changes made in the last x committed configuration sessions. The rollback process rolls back the configuration, commits the rolled-back configuration, and creates a new commitID for the previous configuration.



Tip To preview the commands that undo the configuration during a rollback, use the **show configuration rollback changes** command.

To roll back to the last x commits made, go to EXEC or administration EXEC mode and enter the **rollback configuration last x** command; x is a number ranging from 1 to the number of saved commits in the commit database.

In the following example, a request is made to roll back the configuration changes made during the previous two commits:

```
RP/0/RP0/CPU0:router# rollback configuration last 2
Loading Rollback Changes.
Loaded Rollback Changes in 1 sec
Committing.
1 items committed in 1 sec (0)items/sec
Updating.
Updated Commit database in 1 sec
Configuration successfully rolled back 2 commits.
```

Loading CommitID Configuration Changes to the Target Configuration

If the changes saved for a specific commitID are close to what you want, but a rollback is not appropriate, you can load the configuration changes for a commitID into the target configuration, modify the target configuration, and then commit the new configuration. Unlike the rollback process, the loaded changes are not applied until you commit them.

**Note**

Unlike the rollback process, loading the commitID configuration changes loads only the changes made during that commit operation. The load process does not load all changes made between the commitID and the current committed configuration.

To load commitID changes in the target configuration, go to global configuration or administration configuration mode and enter the **load commit changes** command with the commitID number. In the following example, show commands are used to display the changes for a commitID, the commitID configuration is loaded into the target configuration, and the target configuration is displayed:

```
RP/0/RP1/CPU0:router# show configuration commit changes ?

last      Changes made in the most recent <n> commits
since     Changes made since (and including) a specific commit
1000000217 Commit ID
1000000218 Commit ID
1000000219 Commit ID
1000000220 Commit ID
1000000221 Commit ID

RP/0/RP1/CPU0:router# show configuration commit changes 1000000219
Building configuration...
interface Loopback100
!
interface POS0/1/0/0
  ipv6 nd dad attempts 50
!
end

RP/0/RP1/CPU0:router# config

RP/0/RP1/CPU0:router(config)# load commit changes 1000000219
Building configuration...
Loading.
77 bytes parsed in 1 sec (76)bytes/sec

RP/0/RP1/CPU0:router(config)# show configuration

Building configuration...
interface Loopback100
!
interface POS0/1/0/0
  ipv6 nd dad attempts 50
!
end
```

Loading Rollback Configuration Changes to the Target Configuration

If the changes for a specific rollback point are close to what you want, but a rollback is not appropriate, you can load the rollback configuration changes into the target configuration, modify the target configuration, and then commit the new configuration. Unlike the rollback process, the loaded changes are not applied until you commit them.

**Tip**

To display the rollback changes, enter the **show configuration rollback changes** command.

To load rollback configuration changes from the current configuration to a specific session, go to global configuration or administration configuration mode and enter the **load rollback changes to commitId** command:

```
RP/0/0/CPU0:router(config)# load rollback changes to 1000000068
Building configuration...
Loading.
233 bytes parsed in 1 sec (231)bytes/sec
```

To load rollback configuration changes from the current configuration to a specified number of previous sessions, go to global configuration or administration configuration mode and enter the **load rollback changes last commit-range** command:

```
RP/0/0/CPU0:router(config)# load rollback changes last 6
Building configuration...
Loading.
221 bytes parsed in 1 sec (220)bytes/sec
```

In the preceding example, the command loads the rollback configuration changes for the last six commitIDs.

To load the rollback configuration for a specific commitID, go to global configuration or administration configuration mode and enter the **load rollback changes commitId** command:

```
RP/0/0/CPU0:router(config)# load rollback changes 1000000060
Building configuration...
Loading.
199 bytes parsed in 1 sec (198)bytes/sec
```

Deleting CommitIDs

You can delete the oldest configuration commitIDs by entering the **clear configuration commit** command in EXEC or administration EXEC mode. The **clear configuration commit** command must be followed by either the amount of disk space you want to reclaim or number of commitIDs you want to delete. To reclaim disk space from the oldest commitIDs, enter the **clear configuration commit** command followed by the keyword **diskspace** and number of kilobytes to reclaim:

```
RP/0/0/CPU0:router# clear configuration commit diskspace 50
Deleting 4 rollback points '1000000001' to '1000000004'
64 KB of disk space will be freed. Continue with deletion?[confirm]
```

To delete a specific number of the oldest commitIDs, enter the **clear configuration commit** command followed by the keyword **oldest** and number of commitIDs to delete:

```
RP/0/0/CPU0:router# clear configuration commit oldest 5
Deleting 5 rollback points '1000000005' to '1000000009'
80 KB of disk space will be freed. Continue with deletion?[confirm]
```

Configuring Logging and Logging Correlation

System messages generated by the Cisco IOS XR software can be logged to a variety of locations based on the severity level of the messages. For example, you could direct information messages to the system console and also log debugging messages to a network server.

In addition, you can define correlation rules that group and summarize related events, generate complex queries for the list of logged events, and retrieve logging events through an XML interface.

The following sections describe logging and the basic commands used to log messages in Cisco IOS XR software:

- [Logging Locations and Severity Levels, page 5-114](#)
- [Alarm Logging Correlation, page 5-115](#)
- [Configuring Basic Message Logging, page 5-115](#)

Logging Locations and Severity Levels

Error messages can be logged to a variety of locations, as shown in [Table 5-1](#).

Table 5-1 Logging Locations for System Error Messages

Logging Destination	Command (Global Configuration Mode)
console	logging console
vty terminal	logging monitor
external syslog server	logging trap
internal buffer	logging buffered

You can log messages based on the severity level of the messages, as shown in [Table 5-2](#).

Table 5-2 Logging Severity Levels for System Error Messages

Level	Description
Level 0—Emergencies	System has become unusable.
Level 1—Alerts	Immediate action needed to restore system stability.
Level 2—Critical	Critical conditions that may require attention.
Level 3—Errors	Error conditions that may help track problems.
Level 4—Warnings	Warning conditions that are not severe.
Level 5—Notifications	Normal but significant conditions that bear notification.
Level 6—Informational	Informational messages that do not require action.
Level 7—Debugging	Debugging messages are for system troubleshooting only.

Alarm Logging Correlation

Alarm logging correlation is used to group and filter similar messages to reduce the amount of redundant logs and isolate the root causes of the messages.

For example, the original message describing a card online insertion and removal (OIR) and system state being up or down can be reported, and all subsequent messages reiterating the same event can be correlated. When you create correlation rules, a common root event that is generating larger volumes of follow-on error messages can be isolated and sent to the correlation buffer. An operator can extract all correlated messages for display later, should the need arise. See *Cisco IOS XR System Management Configuration Guide* for more information.

Configuring Basic Message Logging

Numerous options for logging system messages in Cisco IOS XR software are available. This section provides a basic example.

To configure basic message logging, complete the following steps:

SUMMARY STEPS

1. **configure**
2. **logging {ip-address | hostname}**
3. **logging trap severity**
4. **logging console [severity]**
5. **logging buffered [severity | buffer-size]**
6. **commit**
7. **end**
8. **show logging**

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure	Enters global configuration mode.
	Example: RP/0/RP0/CPU0:router# configure	
Step 2	logging {ip-address hostname}	Specifies a syslog server host to use for system logging.
	Example: RP/0/RP0/CPU0:router(config)# logging 10.1.1.1	
Step 3	logging trap severity	Limits the logging of messages sent to syslog servers to only those messages at the specified level. <ul style="list-style-type: none"> • See Table 5-2 for a summary of the logging severity levels.
	Example: RP/0/RP0/CPU0:router(config)# logging trap debugging	

Command or Action	Purpose
Step 4 <code>logging console [severity]</code> Example: RP/0/RP0/CPU0:router(config)# logging console emergencies	Logs messages on the console. <ul style="list-style-type: none">• When a severity level is specified, only messages at that severity level are logged on the console.• See Table 5-2 for a summary of the logging severity levels.
Step 5 <code>logging buffered [severity buffer-size]</code> Example: RP/0/RP0/CPU0:router(config)# logging buffered 1000000	Copies logging messages to an internal buffer. <ul style="list-style-type: none">• Newer messages overwrite older messages after the buffer is filled.• Specifying a severity level causes messages at that level and numerically lower levels to be logged in an internal buffer. See Table 5-2 for a summary of the logging severity levels.• The buffer size is from 4096 to 4,294,967,295 bytes. Messages above the set limit are logged to the console.
Step 6 <code>commit</code> Example: RP/0/RP0/CPU0:router(config)# commit	Commits the target configuration to the router running configuration.
Step 7 <code>end</code> Example: RP/0/RP0/CPU0:router(config)# end	Ends the configuration session and returns to EXEC mode.
Step 8 <code>show logging</code> Example: RP/0/RP0/CPU0:router# show logging	Displays the messages that are logged in the buffer.

Examples

In the following example, basic message logging is configured:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# logging 10.1.1.1
RP/0/RP0/CPU0:router(config)# logging trap debugging
RP/0/RP0/CPU0:router(config)# logging console emergencies
RP/0/RP0/CPU0:router(config)# logging buffered 1000000
RP/0/RP0/CPU0:router(config)# commit
RP/0/RP0/CPU0:router(config)# end
RP/0/RP0/CPU0:router# show logging

Syslog logging: enabled (162 messages dropped, 0 flushes, 0 overruns)
  Console logging: level emergencies, 593 messages logged
  Monitor logging: level debugging, 0 messages logged
  Trap logging: level debugging, 2 messages logged
  Logging to 10.1.1.1, 2 message lines logged
  Buffer logging: level debugging, 722 messages logged

Log Buffer (1000000 bytes):
```

```

RP/0/RP0/CPU0:Apr  8 19:18:58.679 : instdir[203]: %INSTALL-INSTMGR-6-INSTALL_OP
RP/0/RP0/CPU0:Apr  8 19:19:01.287 : instdir[203]: %INSTALL-INSTMGR-6-INSTALL_OP
RP/0/RP0/CPU0:Apr  8 19:22:15.658 : instdir[203]: %INSTALL-INSTMGR-6-INSTALL_OP
LC/0/1/CPU0:Apr  8 19:22:30.122 : sysmgr[74]: %OS-SYSMGR-7-INSTALL_NOTIFICATION
LC/0/6/CPU0:Apr  8 19:22:30.160 : sysmgr[74]: %OS-SYSMGR-7-INSTALL_NOTIFICATION
RP/0/RP0/CPU0:Apr  8 19:22:30.745 : sysmgr[79]: %OS-SYSMGR-7-INSTALL_NOTIFICATION
RP/0/RP1/CPU0:Apr  8 19:22:32.596 : sysmgr[79]: %OS-SYSMGR-7-INSTALL_NOTIFICATION
LC/0/1/CPU0:Apr  8 19:22:35.181 : sysmgr[74]: %OS-SYSMGR-7-INSTALL_FINISHED : s
LC/0/6/CPU0:Apr  8 19:22:35.223 : sysmgr[74]: %OS-SYSMGR-7-INSTALL_FINISHED : s
RP/0/RP0/CPU0:Apr  8 19:22:36.122 : sysmgr[79]: %OS-SYSMGR-7-INSTALL_FINISHED :
RP/0/RP1/CPU0:Apr  8 19:22:37.790 : sysmgr[79]: %OS-SYSMGR-7-INSTALL_FINISHED :
RP/0/RP0/CPU0:Apr  8 19:22:41.015 : schema_server[332]: %MGBL-SCHEMA-6-VERSIONC
RP/0/RP0/CPU0:Apr  8 19:22:59.844 : instdir[203]: %INSTALL-INSTMGR-4-ACTIVE_SOF
RP/0/RP0/CPU0:Apr  8 19:22:59.851 : instdir[203]: %INSTALL-INSTMGR-6-INSTALL_OP
--More--

```

Related Documents

Related Topic	Document Title
Configuration of system logging	<i>Implementing Logging Services on Cisco IOS XR Software module of Cisco IOS XR System Monitoring Configuration Guide</i>
Commands used to configure logging	<i>Logging Services Commands on Cisco IOS XR Software module of Cisco IOS XR System Monitoring Command Reference</i>
Configuration of alarm correlation and generating complex queries	<i>Implementing and Monitoring Alarms and Alarm Log Correlation on Cisco IOS XR Software module of Cisco IOS XR System Management Configuration Guide</i>
Commands used to configure alarm correlation	<i>Alarm Management and Logging Correlation Commands on Cisco IOS XR Software module of Cisco IOS XR System Management Command Reference</i>
Retrieve logging events through an XML interface	<i>Cisco IOS XR XML API Guide</i>

Disabling Console Logging

To disable console logging, enter the **logging console disable** command in global configuration mode.

Creating and Modifying User Accounts and User Groups

In the Cisco IOS XR software, users are assigned individual usernames and passwords. Each username is assigned to one or more user groups, each of which defines display and configuration commands the user is authorized to execute. This authorization is enabled by default in the Cisco IOS XR software, and each user must log in to the system using a unique username and password.

The following sections describe the basic commands used to configure users and user groups. For a summary of user accounts, user groups, and task IDs, see the “[User Groups, Task Groups, and Task IDs](#)” section on page 4-69.

- [Displaying Details About User Accounts, User Groups, and Task IDs, page 5-118](#)
- [Configuring User Accounts, page 5-119](#)

**Note**

The management of user accounts, user groups, and task IDs is part of the “AAA” feature in the Cisco IOS XR software. AAA stands for “authentication, authorization, and accounting,” a suite of security features included in the Cisco IOS XR software. For more information on the AAA concepts and configuration tasks, see *Cisco IOS XR System Security Configuration Guide* and *Cisco IOS XR System Security Command Reference*. For instructions to activate software packages, see *Cisco IOS XR System Management Configuration Guide*.

Displaying Details About User Accounts, User Groups, and Task IDs

Table 5-3 summarizes the EXEC mode commands used to display details about user accounts, user groups, and task IDs.

Table 5-3 Commands to Display Details About Users and User Groups


Command	Description
show aaa userdb <i>username</i>	Displays the task IDs and privileges assigned to a specific username. To display all users on the system, enter the command without a username.
show aaa usergroup <i>usergroup-name</i>	Displays the task IDs and privileges that belong to a user group. To display all groups on the system, enter the command without a group name.
show task supported	Displays all task IDs for the system. Only the root-system users, root-lr users, or users associated with the WRITE:AAA task ID can configure task groups.

Configuring User Accounts

User accounts, user groups, and task groups are created by entering the appropriate commands in one of the “AAA” configuration submodes, as shown in [Figure 5-1](#).

This section describes the process to configure usernames. For instructions to configure user groups, task groups, and other AAA security features, see the *Cisco IOS XR System Security Configuration Guide*.

Figure 5-1 **AAA Configuration Submodes**

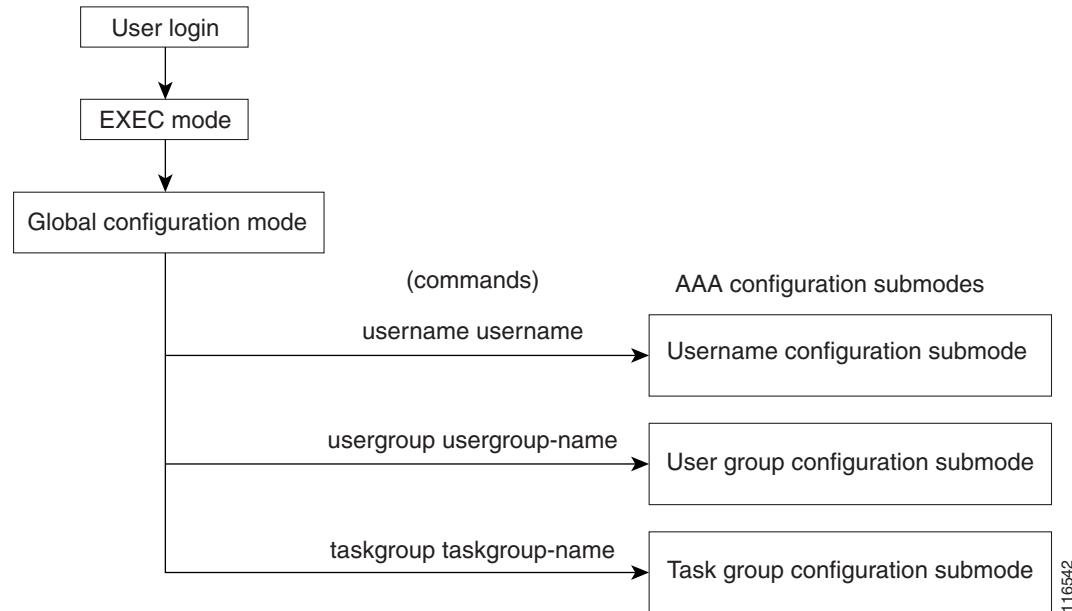

116542

Creating Users and Assigning Groups

To create a user, assign a password, and assign the user to a group, perform the following procedure:

SUMMARY STEPS

1. **configure**
2. **username *user-name***
3. **password {0 | 7} *password***
or
secret {0 | 5} *password*
4. **group *group-name***
5. Repeat Step 4 for each user group to be associated with the user specified in Step 2.
6. **commit**

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure	Enters global configuration mode.
	Example: RP/0/RP0/CPU0:router# configure	
Step 2	username user-name	Creates a name for a new user (or identifies a current user) and enters username configuration submode. <ul style="list-style-type: none"> The <i>user-name</i> argument can be only one word. Spaces and quotation marks are not allowed.
Step 3	password {0 7} password or secret {0 5} password	Specifies a password for the user named in Step 2. <ul style="list-style-type: none"> Use the secret command to create a secure login password for the user names specified in Step 2. Entering 0 following the password command specifies that an unencrypted (clear-text) password follows. Entering 7 following the password command specifies that an encrypted password follows. Entering 0 following the secret command specifies that a secure unencrypted (clear-text) password follows. Entering 5 following the secret command specifies that a secure encrypted password follows. Type 0 is the default for the password and secret commands.
Step 4	group group-name	Assigns the user named in Step 2 to a user group. <ul style="list-style-type: none"> The user takes on all attributes of the user group, as defined by the user group association to various task groups. Each user must be assigned to at least one user group. A user may belong to multiple user groups.
Step 5	Repeat Step 4 for each user group to be associated with the user specified in Step 2.	—
Step 6	commit	Saves configuration changes and activates them as part of the running configuration.
	Example: RP/0/RP0/CPU0:router(config-un)# commit	

Related Documents

Related Topic	Document Title
Create users, assign users to user groups, create and modify user groups, and configure remote AAA access	<i>Cisco IOS XR System Security Configuration Guide</i>

Configuring Software Entitlement

Beginning in Cisco IOS XR Software Release 3.5.0, certain software and hardware features are enabled using software entitlement. Software entitlement is a system that consists of a license manager on a Cisco IOS XR device that manages licenses for various software and hardware features. The license manager parses and authenticates a license before accepting it. The software features on the router use the license manager APIs to check out and release licenses. Licenses are stored in persistent storage on the router.

All core routing features are available for use without any license. In Cisco IOS XR Software Release 3.6.0, the following features must be enabled with licenses:

- Layer 3 VPN
- Modular services card bandwidth
- Cisco XR 12000 SIP-401 bandwidth
- Cisco XR 12000 SIP-501 bandwidth
- Cisco XR 12000 XIP-601 bandwidth

Refer to the *Software Entitlement on Cisco IOS XR Software* module in *Cisco IOS XR System Management Configuration Guide* for more information on configuring software licenses.

Configuration Limiting

The Cisco IOS XR software places preset limits on the configurations you can apply to the running configuration of a router. These limits ensure that the router has sufficient system resources (such as RAM) for normal operations. Under most conditions, these preset limits are sufficient.

In some cases, for which a large number of configurations is required for a particular feature, it may be necessary to override the preset configuration limits. This override can be done only if configurations for another feature are low or unused. For example, if a router requires a large number of BGP configurations and Multiprotocol Label Switching (MPLS) is not being used at all, then the BGP limits can be increased to use the unused memory assigned to MPLS.



Overriding the default configuration limits can result in a low-memory condition.

The following sections describe the limits you can configure, default and maximum values, and commands for configuring and displaying the configuration limits:

- [Static Route Configuration Limits, page 5-122](#)
- [IS-IS Configuration Limits, page 5-122](#)
- [OSPFv2 and v3 Configuration Limits, page 5-123](#)
- [BGP Configuration Limits, page 5-125](#)
- [Routing Policy Language Line and Policy Limits, page 5-127](#)
- [Multicast Configuration Limits, page 5-129](#)
- [MPLS Configuration Limits, page 5-130](#)

Static Route Configuration Limits

Table 5-4 summarizes the maximum limits for static routes, including the commands used to display and change the limits.

Table 5-4 Static Route Configuration Limits and Commands

Feature Limit Description	Default Maximum Limit	Absolute Maximum Limit	Configuration Command (Static Router Configuration Mode)	Show Current Settings Command (EXEC or Global Configuration Mode)
Maximum static IPv4 routes	4000	40,000	maximum path ipv4 n	show running-config router static
Maximum static IPv6 routes	4000	40,000	maximum path ipv6 n	show running-config router static

Examples

In the following example, the maximum number of static IPv4 routes is changed to 5000 and the new configuration is displayed.

```
RP/0/RP1/CPU0:router# configure
RP/0/RP1/CPU0:router(config)# router static
RP/0/RP1/CPU0:router(config-static)# maximum path ipv4 5000
RP/0/RP1/CPU0:router(config-static)# commit
RP/0/RP1/CPU0:router(config-static)# show running-config router static

router static
maximum path ipv4 5000
address-family ipv4 unicast
  0.0.0.0/0 172.29.52.1
!
!
```

IS-IS Configuration Limits

Table 5-5 summarizes the maximum limits for IS-IS, including the commands used to display and change the limits.

Table 5-5 IS-IS Configuration Limits and Commands

Feature Limit Description	Default Maximum Limit	Absolute Maximum Limit	Configuration Command (Address Family Configuration Mode)	Show Current Settings Command (EXEC Mode)
Maximum number of prefixes redistributed into IS-IS	10,000	28,000	maximum-redistributed-prefixes n	show isis adjacency
Number of active parallel paths for each route on a Cisco CRS-1 router	8	32	maximum-paths n	show isis route
Number of active parallel paths for each route on a Cisco XR 12000 Series Router	8	16	maximum-paths n	show isis route

Examples

In the following example, the maximum number of active parallel paths for each route is increased to 10, and the maximum number of prefixes redistributed into IS-IS is increased to 12,000:

```
RP/0/RP1/CPU0:router# configure
RP/0/RP1/CPU0:router(config)# router isis 100 address-family ipv4
RP/0/RP1/CPU0:router(config-isis-af)# maximum-paths 10
RP/0/RP1/CPU0:router(config-isis-af)# maximum-redistributed-prefixes 12000
RP/0/RP1/CPU0:router(config-isis-af)# commit
RP/0/RP1/CPU0:Mar 30 14:11:07 : config[65739]: %LIBTARCFG-6-COMMIT : Configuration
committed by user 'cisco'. Use 'show configuration commit changes 1000000535' to view
the changes.
RP/0/RP1/CPU0:router(config-isis-af)#

```

OSPFv2 and v3 Configuration Limits

[Table 5-6](#) summarizes the maximum limits for OSPF, including the commands used to display and change the limits.

Table 5-6 OSPFv2 and OSPFv3 Configuration Limits and Commands

Feature Limit Description	Default Maximum Limit	Absolute Maximum Limit	Configuration Command (Router Configuration Mode)	Show Current Settings Command (EXEC Mode)
Maximum number of interfaces that can be configured for an OSPF instance	255	1024	maximum interfaces <i>n</i>	show ospf
Maximum routes redistributed into OSPF	10,000	4294967295	maximum redistributed-prefixes <i>n</i>	show ospf Note The maximum number of redistributed prefixes is displayed only if redistribution is configured.
Maximum number of parallel routes (maximum paths) on Cisco CRS-1 routers	32 (OSPFv2) 16 (OSPFv3)	32	maximum paths <i>n</i>	show running-config router ospf Note This command shows only changes to the default value. If the maximum paths command does not appear, the router is set to the default value.
Maximum number of parallel routes (maximum paths) on a Cisco XR 12000 Series Router	16	16	maximum paths <i>n</i>	show running-config router ospf Note This command shows only changes to the default value. If the maximum paths command does not appear, the router is set to the default value.

Examples

The following examples illustrate OSPF configuration limits:

- Maximum Interfaces for Each OSPF Instance: Example, page 5-124
- Maximum Routes Redistributed into OSPF: Example, page 5-125
- Number of Parallel Links (max-paths): Example, page 5-125

Maximum Interfaces for Each OSPF Instance: Example

In the following example, the **show ospf** command is used to display the maximum number of OSPF interfaces:

```
RP/0/RP1/CPU0:router# show ospf

Routing Process "ospf 100" with ID 0.0.0.0
Supports only single TOS(TOS0) routes
Supports opaque LSA
It is an area border router
Initial SPF schedule delay 5000 msec
Minimum hold time between two consecutive SPFs 10000 msec
Maximum wait time between two consecutive SPFs 10000 msec
Initial LSA throttle delay 500 msec
Minimum hold time for LSA throttle 5000 msec
Maximum wait time for LSA throttle 5000 msec
Minimum LSA interval 5 secs. Minimum LSA arrival 1 secs
Maximum number of configured interfaces 255
--More--
```

The following example configures the maximum interface limit on a router:

```
RP/0/RP1/CPU0:router# configure
RP/0/RP1/CPU0:router(config)# router ospf 100
RP/0/RP1/CPU0:router(config-router)# maximum interfaces 600
RP/0/RP1/CPU0:router(config-router)# end
Uncommitted changes found, commit them? [yes]: y

RP/0/RP1/CPU0:Mar 30 16:12:39 : config[65740]: %LIBTARCFG-6-COMMIT : Configuration
committed by user 'cisco'. Use 'show configuration commit changes 1000000540' to view
the changes.
RP/0/RP1/CPU0:Mar 30 16:12:39 : config[65740]: %SYS-5-CONFIG_I : Configured from console
by cisco
```

```
RP/0/RP1/CPU0:router# show ospf

Routing Process "ospf 100" with ID 0.0.0.0
Supports only single TOS(TOS0) routes
Supports opaque LSA
It is an area border router
Initial SPF schedule delay 5000 msec
Minimum hold time between two consecutive SPFs 10000 msec
Maximum wait time between two consecutive SPFs 10000 msec
Initial LSA throttle delay 500 msec
Minimum hold time for LSA throttle 5000 msec
Maximum wait time for LSA throttle 5000 msec
Minimum LSA interval 5 secs. Minimum LSA arrival 1 secs
Maximum number of configured interfaces 600
--More--
```

Maximum Routes Redistributed into OSPF: Example

In the following example, the **maximum redistributed-prefixes** command is used to set the maximum routes redistributed into OSPF:

```
RP/0/RP1/CPU0:router# configure
RP/0/RP1/CPU0:router(config)# router ospf 100
RP/0/RP1/CPU0:router(config-router)# maximum redistributed-prefixes 12000
RP/0/RP1/CPU0:router(config-router)# end
Uncommitted changes found, commit them? [yes]: y

RP/0/RP1/CPU0:Mar 30 16:26:52 : config[65740]: %LIBTARCFG-6-COMMIT : Configuration
committed by user 'cisco'. Use 'show configuration commit changes 1000000541' to view
the changes.
RP/0/RP1/CPU0:Mar 30 16:26:52 : config[65740]: %SYS-5-CONFIG_I : Configured from console
by cisco
RP/0/RP1/CPU0:router#
```

Number of Parallel Links (max-paths): Example

In the following example, the **maximum paths** command is used to set the maximum number of parallel routes:

```
RP/0/RP1/CPU0:router# configure
RP/0/RP1/CPU0:router(config)# router ospf 100
RP/0/RP1/CPU0:router(config-router)# maximum paths 10
RP/0/RP1/CPU0:router(config-router)# end
Uncommitted changes found, commit them? [yes]: y

RP/0/RP1/CPU0:Mar 30 18:05:13 : config[65740]: %LIBTARCFG-6-COMMIT : Configuration
committed by user 'cisco'. Use 'show configuration commit changes 1000000542' to view
the changes.
RP/0/RP1/CPU0:Mar 30 18:05:13 : config[65740]: %SYS-5-CONFIG_I : Configured from console
by cisco
RP/0/RP1/CPU0:router#
```

BGP Configuration Limits

The maximum number of BGP neighbors (peers) that can be configured is 1024. This number cannot be changed through configuration. Any attempt to configure additional neighbors beyond the limit fails.

To prevent neighbors (peers) from flooding BGP with advertisements, a limit is placed on the number of prefixes that can be accepted from a peer for each supported address family.

You can override the default limits for an address family with the **maximum-prefix** command. [Table 5-7](#) summarizes the maximum configuration limits for BGP.

Table 5-7 BGP Configuration Limits and Commands

Feature Limit Description	Default Maximum Limit	Absolute Maximum Limit	Configuration Command (Router Configuration Mode)	Show Current Settings Command (EXEC Mode)
Maximum number of neighbors (peers)	4000	15000	bgp maximum neighbor limit	None
IPv4 unicast maximum prefixes that can be received from a neighbor	524,288	4,294,967,295	maximum-prefix n	show bgp neighbor IP_address

■ Configuration Limiting
Table 5-7 BGP Configuration Limits and Commands (continued)

Feature Limit Description	Default Maximum Limit	Absolute Maximum Limit	Configuration Command (Router Configuration Mode)	Show Current Settings Command (EXEC Mode)
IPv4 multicast maximum prefixes that can be received from a neighbor	131,072	4,294,967, 295	maximum-prefix n	show bgp neighbor IP_address
IPv6 unicast maximum prefixes that can be received from a neighbor	131,072	4,294,967, 295	maximum-prefix n	show bgp neighbor IP_address
IPv6 multicast maximum prefixes that can be received from a neighbor	131,072	4,294,967, 295	maximum-prefix n	show bgp neighbor IP_address
IPv6 labeled unicast maximum prefixes that can be received from a neighbor	131,072	4,294,967, 295	maximum-prefix n	show bgp neighbor IP_address
VPNv4 unicast maximum prefixes that can be received from a neighbor	524,288	4,294,967, 295	maximum-prefix n	show bgp neighbor IP_address
VPNv6 unicast maximum prefixes that can be received from a neighbor	524,288	4,294,967, 295	maximum-prefix n	show bgp neighbor IP_address
Maximum equal-cost parallel routes to external peers	1	8	maximum-paths n	show running-config Note This command shows only changes to the default value. If the maximum paths command does not appear, the router is set to the default value.

A cease-notification message is sent to the neighbor and the peering with the neighbor is terminated when the number of prefixes received from the peer for a given address family exceeds the maximum limit (either set by default or configured by the user) for that address family.

However, if the **warning-only** keyword (for the **maximum-prefix** command) is configured, the Cisco IOS XR software sends only a log message, but continues peering with the sender. If the peer is terminated, the peer stays down until the **clear bgp** command is issued.

The same set of actions (sending cease notification followed by the termination of the peering) is taken for a neighbor with which peering has already been established if you decide to configure a maximum that is less than the number of prefixes that have already been received from the neighbor.

Examples

The following example shows how to set the BGP configuration limits:

```
RP/0/RP1/CPU0:router# configure
RP/0/RP1/CPU0:router(config)# router bgp 100
RP/0/RP1/CPU0:router(config-bgp)# neighbor 10.1.1.1
RP/0/RP1/CPU0:router(config-bgp-nbr)# remote-as 1
RP/0/RP1/CPU0:router(config-bgp-nbr)# address-family ipv4 unicast
RP/0/RP1/CPU0:router(config-bgp-nbr-af)# maximum-paths 4
RP/0/RP1/CPU0:router(config-bgp-nbr-af)# maximum-prefix 100000
RP/0/RP1/CPU0:router(config-bgp-nbr-af)# commit

RP/0/RP1/CPU0:Mar 30 19:13:16 : config[65740]: %LIBTARCFG-6-COMMIT : Configuration
committed by user 'cisco'. Use 'show configuration commit changes 1000000544' to view
the changes.
RP/0/RP1/CPU0:Mar 30 19:13:17 : config[65740]: %SYS-5-CONFIG_I : Configured from console
by cisco
RP/0/RP1/CPU0:router(config-bgp-nbr-af)#

```

Routing Policy Language Line and Policy Limits

Two limits for Routing Policy Language (RPL) configurations exist:

- Number of RPL lines: The number of configuration lines entered by the user, including the beginning and ending statements (that is “route-policy”). The number of configuration lines for sets is also included.
- Number of RPL policies: The number of policies that can be configured on the router. Policies are counted only once: Multiple use of the same policy counts as a single policy toward the limit 1.

The limits for RPL lines and policies are summarized in [Table 5-8](#). You can change the default values up to the absolute maximum, but you cannot change the value to a number less than the number of items that are currently configured.

Table 5-8 Maximum Lines of RPL: Configuration Limits and Commands

Limit Description	Default Maximum Limit	Absolute Maximum Limit	Configuration Command (Global Configuration Mode)	Show Current Settings Command (EXEC Mode)
Maximum number of RPL lines	65,536	131,072	rpl maximum lines <i>n</i>	show rpl maximum lines
Maximum number of RPL policies	3500	5000	rpl maximum policies <i>n</i>	show rpl maximum policies

Examples

In the following example, the **show rpl maximum** command is used in EXEC mode to display the current setting for RPL limits and number of each limit currently in use. A summary of the memory used by all of the defined policies is also shown below the limit settings.

```
RP/0/RP1/CPU0:router# show rpl maximum
```

	Current Total	Current Limit	Max Limit
<hr/>			
Lines of configuration	0	65536	131072
Policies	0	3500	5000
Compiled policies size (kB)	0		

```
RP/0/RP1/CPU0:router#
```

In the next example, the **rpl maximum** command changes the currently configured line and policy limits. The **show rpl maximum** command displays the new settings.

```
RP/0/RP1/CPU0:router# configure
RP/0/RP1/CPU0:router(config)# rpl maximum policies 4000
RP/0/RP1/CPU0:router(config)# rpl maximum lines 80000
RP/0/RP1/CPU0:router(config)# commit
```

```
RP/0/RP1/CPU0:Apr 1 00:23:44.062 : config[65709]: %LIBTARCFG-6-COMMIT : Configuration committed by user 'UNKNOWN'. Use 'show configuration commit changes 1000000010' to view the changes.
```

```
RP/0/RP1/CPU0:router(config)# exit
```

```
RP/0/RP1/CPU0:Apr 1 00:23:47.781 : config[65709]: %SYS-5-CONFIG_I : Configured from console by console
```

```
RP/0/RP1/CPU0:router# show rpl maximum
```

	Current Total	Current Limit	Max Limit
<hr/>			
Lines of configuration	0	80000	131072
Policies	0	4000	5000
Compiled policies size (kB)	0		

```
RP/0/RP1/CPU0:router#
```

Multicast Configuration Limits

Table 5-9 summarizes the maximum limits for multicast configuration, including the commands used to display and change the limits.

Table 5-9 Multicast Configuration Limits and Commands

Feature Limit Description	Default Maximum Limit	Absolute Maximum Limit	Configuration Command	Show Current Settings Command (EXEC Mode)
Internet Group Management Protocol (IGMP) Limits				
Maximum number of groups used by IGMP and accepted by a router	50,000	75,000	maximum groups <i>n</i> (router IGMP configuration mode)	show igmp summary
Maximum number of groups for each interface accepted by a router	25,000	40,000	maximum groups-per-interface <i>n</i> (router IGMP interface configuration mode)	show igmp summary
Multicast Source Discovery Protocol (MSDP) Limits				
Maximum MSDP Source Active (SA) entries	20,000	75,000	maximum external-sa <i>n</i> (router MSDP configuration mode)	show msdp summary
Maximum MSDP SA entries that can be learned from MSDP peers	20,000	75,000	maximum peer-external-sa <i>n</i> (router MSDP configuration mode)	show msdp summary
Protocol Independent Multicast (PIM) Limits				
Maximum PIM routes supported	100,000	200,000	maximum routes <i>n</i> (router PIM configuration mode)	show pim summary
Maximum PIM egress states	300,000	600,000	maximum route-interfaces <i>n</i> (router PIM configuration mode)	show pim summary
Maximum PIM registers	20,000	75,000	maximum register-states <i>n</i> (router PIM configuration mode)	show pim summary
Maximum number of PIM group map ranges learned from Auto-RP	500	5000	maximum group-mappings autorp <i>n</i> (router PIM configuration mode)	show pim summary

■ Configuration Limiting

MPLS Configuration Limits

[Table 5-10](#) summarizes the maximum limits for MPLS configuration, including the commands used to display and change the limits.

Table 5-10 *MPLS Configuration Limits and Commands*

Limit Description	Default	Absolute Maximum Limit	Configuration Command (Global Configuration Mode)	Show Current Settings Command (EXEC Mode)
Maximum traffic engineer (TE) tunnels head	2500	65536	mpls traffic-eng maximum tunnels <i>n</i>	show mpls traffic-eng maximum tunnels

Other Configuration Limits

[Table 5-11](#) summarizes the maximum limits for additional configuration limits, including the commands used to display and change the limits.

Table 5-11 *Additional Configuration Limits and Commands*

Limit Description	Default Maximum Limit	Absolute Maximum Limit	Configuration Command (Global Configuration Mode)	Show Current Settings Command (EXEC Mode)
IPv4 ACL (access list and prefix list)	5000	16000	ipv4 access-list maximum acl threshold <i>n</i>	show access-lists ipv4 maximum
IPv4 ACE (access list and prefix list)	200,000	350,000	ipv4 access-list maximum ace threshold <i>n</i>	show access-lists ipv4 maximum
IPv6 ACL (access list and prefix list)	1000	16000	ipv6 access-list maximum acl threshold <i>n</i>	show access-lists ipv6 maximum
IPv6 ACE (access list and prefix list)	50,000	350,000	ipv6 access-list maximum ace threshold <i>n</i>	show access-lists ipv6 maximum