

HP
KAYAK



HP Kayak XU800 PC Workstations
Troubleshooting Guide



High-Performance

Notice

The information contained in this document is subject to change without notice.

Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

Adobe™ and Acrobat™ are trademarks of Adobe Systems Incorporated.

McAfee VirusScan® is a registered trademark of Network Associates, Inc.

Microsoft®, MS®, MS-DOS®, Windows®, and Windows NT® are U.S. registered trademarks of Microsoft Corporation.

Pentium® is a registered trademark of Intel Corporation.

Hewlett-Packard France
Business Desktop Division (BDD)
Outbound Marketing Communications
38053 Grenoble Cedex 9
France

© 1999 Hewlett-Packard Company

Contents

Your PC Workstation does not start correctly, or does not start at all. Refer to page 7.

For example, the monitor is blank, error messages during boot, beep codes emitted.



Your PC Workstation starts normally, but you are having problems configuring. Refer to page 23.

For example, hardware not detected, mouse doesn't work properly, no sound from speakers.



Troubleshooting your PC Workstation using HP DiagTools. Refer to page 45.

You can diagnose hardware-related problems, test individual hardware components and check hardware configuration.



Recovering hard disk drive contents with the HP Recovery CD-ROM. Refer to page 49.

You can restore the preloaded operating system, drivers, utilities and software.



Other useful sources of information. Refer to page 51.

*How to obtain the latest drivers, software utilities and BIOS updates.
Also details on how to download documentation corresponding to your PC Workstation.*



Contacting HP Support Services. Refer to page 52.

Details the type of information you should prepare before contacting HP Support for assistance.

Introduction

This manual is for anyone who wants to:

- Troubleshoot problems on the PC Workstation
- Find out where to get more information and support.

For information about setting up and using your PC Workstation, refer to the *User's Guide* that came with your PC Workstation. It is also available on HP's web site at: www.hp.com/go/kayaksupport.

Which Kayak Do You Have?

Before connecting to HP's web site or phoning your support organization, look at the identification label on the side of your PC Workstation for the series and model number.

Important Warnings

Removing and Replacing the Cover

WARNING

For your safety, never remove the PC Workstation's cover without first removing the power cord from the power outlet and any connection to a telecommunications network. Always replace the cover before switching the PC Workstation on again.

Safety Information

WARNING

There is a danger of explosion if the battery is incorrectly installed. For your safety, never attempt to recharge, disassemble, or burn an old battery. Only replace the battery with the same or equivalent type, as recommended by the manufacturer. The battery in this PC is a lithium battery which does not contain any heavy metals. Nevertheless, in order to protect the environment, do not dispose of batteries in household waste. Please return used batteries either to the shop from which you bought them, to the dealer from whom you purchased your PC, or to HP so that they can either be recycled or disposed of in the correct way. Returned batteries will be accepted free of charge.

If you have a modem:

Do not attempt to connect this product to the phone line during a lightning storm. Never install telephone jacks in wet locations unless the telephone line has been disconnected at the network interface. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface. Use caution when installing or modifying telephone lines. Avoid using a telephone (other than a cordless type) during a lightning storm. There may be a risk from lightning.

Do not use the telephone to report a gas leak in the vicinity of the leak. Never touch or remove the communications board without first removing the connection to the telephone network.

Important Warnings

Your PC Workstation Does Not Start Correctly

	Symptom	Type of Problem	
Case 1	<p>When the power button is pressed, the PC Workstation shows no sign of activity at all:</p> <ul style="list-style-type: none"> • Monitor is blank. • No hard disk drive or fan noise. • MaxiLife status panel does not light up or display any messages. 	<ul style="list-style-type: none"> • <i>PC Workstation may not be correctly connected to the power supply.</i> 	Refer to page 9.
Case 2	<p>When the power button is pressed, the PC Workstation appears to boot, but monitor remains blank:</p> <ul style="list-style-type: none"> • Hard disk drive and fan can be heard. • Status LED is GREEN. • MaxiLife status panel displays a smiling face (☺). 	<ul style="list-style-type: none"> • <i>Monitor may be badly connected or not switched on.</i> 	Refer to page 11.
Case 3	<p>When the power button is pressed, the PC Workstation does not boot:</p> <ul style="list-style-type: none"> • Hard disk drive and fan can be heard. • Monitor remains blank. • Status LED is RED. • MaxiLife status panel displays an error message with a sad face (☹). 	<ul style="list-style-type: none"> • <i>HP MaxiLife has detected a hardware configuration error. A component may be badly connected inside the PC Workstation.</i> 	Refer to page 13.
Case 4	<p>When the power button is pressed, the PC Workstation starts to boot and there is activity on the monitor:</p> <ul style="list-style-type: none"> • Boot process fails with an error message. • Status LED flashes RED. • Beep code emitted. • MaxiLife status panel displays a sad face (☹) and a POST error message. 	<ul style="list-style-type: none"> • <i>Configuration error has been detected by the POST (Power-On Self Test).</i> 	Refer to page 16.
Case 5	<p>When the power button is pressed, the PC Workstation starts to boot and there is activity on the monitor, but when the operating system starts loading:</p> <ul style="list-style-type: none"> • Screen becomes blank. <p>or</p> <ul style="list-style-type: none"> • Image is corrupt 	<ul style="list-style-type: none"> • <i>Video card may be improperly installed or incorrectly configured.</i> 	Refer to page 22.

Your PC Workstation Does Not Start Correctly

Helpful Information	
Troubleshooting Pre-Boot Checks With HP MaxiLife Hardware	Refer to page 13.
Checking Memory Installed on a Memory Expansion Card	Refer to page 15.
EMU (Error Message Utility) Description	Refer to page 16.
Beep Code Table.	Refer to page 17.
Troubleshooting POST Test and POST Error Codes With HP MaxiLife	Refer to page 19.
Troubleshooting BIOS Problems: <ul style="list-style-type: none">• Updating the BIOS.• Restoring the BIOS Default Settings.• Clearing the CMOS.• Recovering the BIOS (Crisis Mode).	Refer to page 36. Refer to page 36. Refer to page 37. Refer to page 38.
System Board Switches.	Refer to page 39.
Using the HP <i>Setup</i> Program.	Refer to page 40.
Troubleshooting Hardware With HP DiagTools.	Refer to page 45.



Case 1 — If There Is No Activity At All

When the power button is pressed, the PC Workstation shows no sign of activity at all. The monitor is blank, there is no sound from the hard disk drive or fan, or the status panel does not light up.

- Monitor is blank.
- No hard disk drive or fan noise.
- MaxiLife status panel does not light up or display any messages.

NOTE

Before removing the cover, always switch off the display and PC Workstation. Disconnect the power cord and any accessory cables. When checks have been completed, close the PC Workstation and reconnect the power cord and accessory cables. Verify that the PC Workstation boots correctly.

Symptom...	Check that...	How...
PC Workstation does not start – the status LED indicator is not illuminated.	You can access the MaxiLife status panel.	Press one of the LCD control buttons to activate MaxiLife. If it comes to life, the power cord is connected. If it doesn't, follow the troubleshooting steps below.
	The power cord is correctly connected.	Connect the power cord to a grounded power outlet and the PC Workstation.
	The power outlet is working.	Plug a light into the grounded power outlet and check that it comes on.
	The voltage switch is correctly set (located on the rear of the PC Workstation).	<ol style="list-style-type: none"> 1 Disconnect the power cord. 2 Select the correct setting. 3 Reconnect the power cord. 4 Start the PC Workstation.
<i>If the PC Workstation still does not start</i>		
	Check that...	How...
	None of the internal devices are causing the problem.	<ol style="list-style-type: none"> 1 Remove internal power connectors from all internal devices (except for the system board). 2 Reconnect the power cord. 3 Reconnect the power connectors one by one to the internal devices to see if a device is defective. 4 If a device is found to be defective, contact HP Support or your authorized dealer.

Case 1 — If There Is No Activity At All is continued on the next page ➞

Your PC Workstation Does Not Start Correctly

Case 1 — If There Is No Activity At All

Symptom...	Check that...	How...
<i>If the PC Workstation still does not start</i>		
	There is not a problem with the power supply unit.	<ol style="list-style-type: none">1 Replace the power supply unit by a known working power supply from the same model of PC.2 If the PC Workstation starts, contact HP Support or your authorized dealer. The power supply unit might need replacing.
<i>If the problem persists, contact HP Support or your authorized dealer</i>		



Case 2 — Monitor Is Blank

When the power button is pressed, the PC Workstation appears to boot (sound from the hard disk drive and fan, and status LED is green), but the monitor is blank.

- Hard disk drive and fan can be heard.
- Status LED is **GREEN**.
- MaxiLife status panel displays a smiling face (☺).

Press the power-off button and keep it pressed for about five seconds. The PC Workstation will turn off.

NOTE

Before removing the cover, always switch off the display and PC Workstation. Disconnect the power cord and any accessory cables. When checks have been completed, close the PC Workstation and reconnect the power cord and accessory cables. Verify that the PC Workstation boots correctly.

Symptom...	Check that...	How...
Power indicator light and hard disk activity light work but the screen remains blank.	The display is switched ON (LED is on).	Refer to the monitor manual for an explanation of the LEDs.
	The monitor's power cord is correctly connected.	Ensure the power cord is plugged into a grounded power outlet and into the monitor.
	The monitor's power outlet is working.	Plug a light into the grounded power outlet and check that it comes on.
If the monitor is still blank		
	Check that...	How...
	The monitor's brightness and contrast settings are correct.	Refer to the monitor manual if necessary.
	The monitor itself is not faulty.	<ol style="list-style-type: none"> 1 Replace the monitor by a known working monitor from the same model of PC Workstation. 2 If the monitor starts, contact HP Support or your authorized dealer. The monitor may need to be replaced.
	The video cable pins are not damaged.	<ol style="list-style-type: none"> 1 Switch off and unplug the monitor. 2 Disconnect the video cable and straighten any bent pins. 3 Reconnect the video cable. 4 Switch on the monitor and see if it works.
You may need to update the Basic Input Output System (BIOS).		Create a bootable floppy to update the BIOS. Refer to page 36. Or, if the BIOS is corrupt, refer to page 38 for instructions on how to recover the BIOS.

Case 2 — Monitor Is Blank is continued on the next page ➞

Your PC Workstation Does Not Start Correctly

Case 2 — Monitor Is Blank

Symptom...	Check that...	How...
Dual monitor or multi-monitor configuration problem		
	If you have a dual monitor video card installed, but only one monitor, check that it is connected to <i>Output 1</i> .	<ul style="list-style-type: none">• The outputs are labelled on the video card.
	If you have two or more video cards installed, but only one monitor.	<ul style="list-style-type: none">• Plug the monitor in one of the video outputs on the second video card.
One monitor is blank.	Multi-monitor configuration and resolution have been correctly defined.	<ol style="list-style-type: none">1 Access Display Properties through Start, Settings, Control Panel.2 Select the multi-monitor option and configure for the required number of monitors and resolution.

NOTE

If the monitor goes blank or becomes corrupt during a Windows boot, refer to “Case 5 — Screen Goes Blank or Corrupt Image” on page 22.

Case 3 — Detected Hardware Error



When the power button is pressed, the hard disk drive or fan can be heard, but the PC Workstation does not boot. The monitor remains blank and the status LED is red.

- Hard disk drive and fan can be heard.
- Monitor remains blank.
- Status LED is **RED**.
- MaxiLife status panel displays an error message with a sad face (☹).

Press the power-off button and keep it pressed for about five seconds. The PC Workstation will turn off.

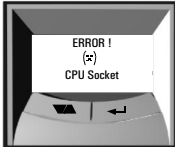
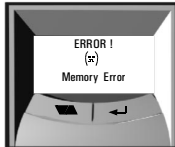
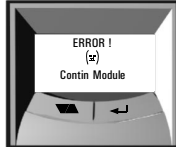
NOTE

Before removing the cover, always switch off the display and PC Workstation. Disconnect the power cord and any accessory cables. When checks have been completed, close the PC Workstation and reconnect the power cord and accessory cables. Verify that the PC Workstation boots correctly.

Troubleshooting Pre-Boot Checks With HP MaxiLife

NOTE

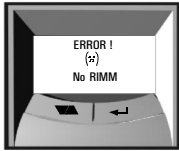

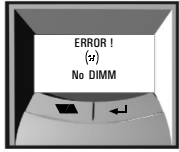
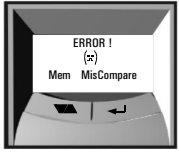
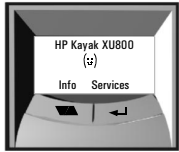
When the system is turned off, the power cord must remain plugged in to the PC Workstation to provide power to the MaxiLife hardware monitoring device.

Symptom...	Check that...		
<p>Power-On-Self-Test (POST) displays a processor test error on the LCD status panel.</p> 	<ul style="list-style-type: none">• There is an installed processor(s).• Processor(s) is correctly installed in the processor slot(s).• Two installed processors have the same cache size (256 k).• Termination card is installed in processor slot 2 in a single processor system.• VRM is installed in the VRM socket in a dual processor system.		
Power-On-Self-Test (POST) displays a memory test error.			
Symptom...	Check that...	Symptom...	Check that...
	<ul style="list-style-type: none">• Memory is correctly installed.• Memory modules are secured in place with the two retaining clips.		<ul style="list-style-type: none">• Continuity Rambus modules or memory modules are correctly installed or not installed at all.

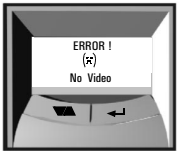
Case 3 — Detected Hardware Error is continued on the next page ➞

Your PC Workstation Does Not Start Correctly

Case 3 — Detected Hardware Error

Symptom...	Check that...	Symptom...	Check that...
	<ul style="list-style-type: none"> RDRAM modules are correctly installed in the RIMM sockets. RDRAM modules are installed. 		<ul style="list-style-type: none"> RDRAM have same speed ratings. The part number on the paired RDRAM modules should be the same. If different, use the RDRAM module delivered with your PC Workstation. Remove the other module.
	<ul style="list-style-type: none"> SDRAM modules are correctly installed. SDRAM modules are installed. 		<ul style="list-style-type: none"> RDRAM modules are installed in pairs with the same capacity, speed or part number. First pair of RDRAM modules are installed in sockets A0-B0. Second pair of RDRAM modules are installed in sockets A1-B1.
<p>In some cases, the LCD panel could display a smiling face, but the system does not boot.</p> 	<ul style="list-style-type: none"> RDRAM modules are correctly installed in the RIMM sockets. Continuity modules are correctly installed. 		

For information about the different memory configurations, refer to page 15.

Symptom...	Check that...
	<p>Video card is:</p> <ul style="list-style-type: none"> Present. Seated correctly in the AGP PRO connector. Cabled correctly. Not defective.

Symptom...	Check that...
<ul style="list-style-type: none"> Cables are incorrectly fitted to the corresponding system board connectors. 	<p>Cables are correctly connected. If required, refer to the service label inside the cover for the system board layout.</p>
<ul style="list-style-type: none"> System board switches incorrectly set. 	<p>Refer to the service label inside the cover for correct settings. Or, refer to "System Board Switches" on page 39.</p>
<p><i>Case 3 — Detected Hardware Error is continued on the next page ➞</i></p>	

Refer to page 21 for information about runtime error codes.

Memory Installation

NOTE

Use only the HP memory modules provided for your PC Workstation model. If you want to find out about available accessories for your PC Workstation, refer to the HP Accessories Web site at: <http://www.hp.com/go/pcaccessories>.

	Memory Expansion Card With RIMM Sockets	Memory Expansion Card With DIMM Sockets
Number of Sockets	Four sockets supporting ECC RDRAM modules installed in <i>pairs</i> .	Four sockets supporting SDRAM 100 MHz ECC modules installed in <i>pairs</i> .
Order of Installation	Fill the first two RIMM sockets A0 and B0. Socket 0 is the one nearest to the processor(s). Upgrades are installed in pairs using sockets A1 and B1.	Fill the first two DIMM sockets A0 and B0. Socket 0 is the one nearest to the system board. Upgrades are installed in pairs using sockets A1 and B1.
Unused Sockets	Unused A1 and B1 RIMM sockets <i>must</i> contain a continuity module.	Continuity module is not required for unused DIMM sockets. Sockets A1 and B1 can be left empty.
ECC Type	RDRAM ECC-type modules only used.	SDRAM ECC-type modules supported only.
Memory type	RDRAM modules must be installed in pairs and contain the same HP part number.	SDRAM modules must be installed in pairs and contain the same HP part number.

Case 4 — Boot Process Fails



When the power button is pressed, the PC Workstation starts to boot and there is activity on the monitor, but the boot process then fails with an error message. Status LED flashes red. A configuration error has been detected.

- Boot process fails with an error message.
- Status LED flashes **RED**.
- Beep code emitted.
- MaxiLife status panel displays (⌘) and a POST error message.

NOTE

Before removing the cover, switch off the display and PC Workstation by pressing the power-off button for five or six seconds. Disconnect the power cord and any accessory cables. When checks have been completed, close the PC Workstation and reconnect the power cord and accessory cables. Verify that the PC Workstation boots correctly.

Error Message Utility (EMU)

In the event of an error generated in POST (Power-On-Self-Test) during the boot process, there are two beeps, then the Error Setup Manager gives access to one or more detected errors. For each error, a specific message is displayed on the monitor screen.

NOTE

If the monitor is not available, a short error message is also displayed on the MaxiLife LCD panel.

EMU is accessed by pressing ENTER. A detailed description of the reason for the failure and how to solve the problem is displayed. All errors detected by the POST have an associated EMU message. The following examples give the different types of error categories.

Category #1:	If an error can be bypassed with <F1> or solved through Setup, the POST should prompt:
ERROR	
0070	CPU Terminator Card Error
Press <Enter> to view more information about error	
< F1= Continue> , < F2= Setup>	

Category #2:	If the error is only a warning (i.e. key stuck), the POST should prompt:
WARNING	
00100	Keyboard Error
Press <Enter> to view more information about error	

Category #3:	If the error is serious, the POST should prompt:
00xx	The BIOS has detected a serious problem that prevents your PC from booting
Press <Enter> to view more information about error	
<F1= Continue>, <F2= Setup ¹ >	

1. In some cases, this could be labeled as “Fix”.

If There Is a Beep Code During Boot

If an error occurs during the POST, which prevents the PC Workstation from starting, and before the display device has been initialized, a series of beep codes are issued. Beep codes indicate that a fatal error has occurred and can be reported one after another if there is more than one detected error. In this case, the first detected error is the most important.

These codes are useful for identifying the error when the system is unable to display the error message.

Number of Beeps	Description	Action to Take...
1	The memory refresh circuitry is faulty.	Check that: <ul style="list-style-type: none"> Memory is installed correctly. Correct memory modules are being used. Refer to “Memory Installation” on page 15 for further actions to take. If the error still occurs, replace the memory.
2	Parity error in the base memory (the first 64 KB block) of memory.	
3	Memory error.	
4	Clock error.	

Your PC Workstation Does Not Start Correctly

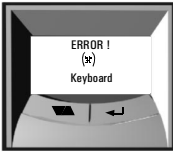
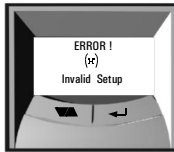
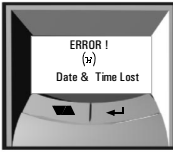
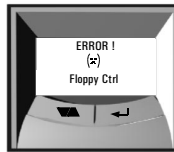
Case 4 — Boot Process Fails

Number of Beeps	Description	Action to Take...
5	Processor test error.	<p>Check that:</p> <ul style="list-style-type: none">• Processor is correctly installed.• Termination card installed in processor slot 2 in a single processor system.• Refer to page 13 for further actions to take. <p>If the error still occurs, replace:</p> <ol style="list-style-type: none">1 Processor.2 system board.
6	Input/Output (I/O) error.	<ul style="list-style-type: none">• Keyboard is connected.• PCI card is installed correctly.• Termination card installed in processor slot 2 in a single processor system.
7	The processor on the system board generated an error.	<ul style="list-style-type: none">• Refer to page 13 for further actions to take. <p>If the error still occurs, replace the system board.</p>
8	The system video card is either missing or faulty.	<p>This is not a fatal error. Check that the video card is correctly installed and cabled. If missing, install the video card. If the error still occurs, replace it with a known working video card.</p>
9	The BIOS Checksum value does not match the value encoded in the BIOS.	<p>Perform the following actions in this order:</p> <ol style="list-style-type: none">1 Press F2 to enter the <i>Setup</i> program, then F9 to load the default BIOS settings.2 Clear the CMOS. Refer to page 37 for instructions.3 Flash the BIOS. Refer to page 36 for instructions on how to update the BIOS. <p>If the error still occurs, replace the system board.</p>
10	The CMOS RAM has failed.	<p>Perform the following actions in this order:</p> <ol style="list-style-type: none">1 Press F2 to enter the <i>Setup</i> program, then F9 to load the default BIOS settings.2 Clear the CMOS. Refer to page 37 for instructions.3 Flash the BIOS. Refer to page 36 for instructions on how to update the BIOS. <p>If the error still occurs, replace the system board.</p>
11	The cache memory test failed.	<p>Replace the processor(s).</p>

POST Test Sequence and POST Error

Following the pre-boot checks, the POST (Power-On Self Test) sequence is initiated. It should be noted that in some cases, a Beep and Post Error can occur at the same time.

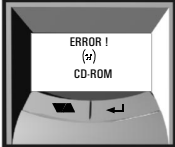
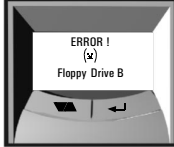
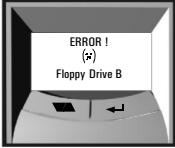

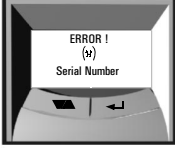
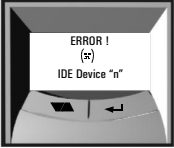

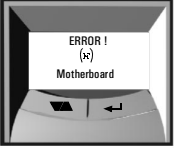
The following table shows the type of error message that could be displayed on the MaxiLife status panel, and the action to take.

Error Message...	Action to Take...	Error Message....	Action to Take...
	<ul style="list-style-type: none"> Check that the keyboard is connected to its socket located on the rear of the PC Workstation. Also refer to page 26 for further troubleshooting help. <p>If there is still a problem, replace the keyboard.</p>		<p>Perform the following actions in this order:</p> <ol style="list-style-type: none"> Press F2 to enter the <i>Setup</i> program, then F9 to load the default BIOS settings. Clear the CMOS. Refer to page 37 for instructions. Flash the latest version of the BIOS by using the system recovery procedure. Set switch 1 to the DOWN position. Refer to page 36 for instructions. Check that the processor is firmly inserted in the processor socket.
	<ol style="list-style-type: none"> Reboot PC Workstation, Press F2 to enter the <i>Setup</i> program, then F9 to load the default BIOS settings. Clear the CMOS. Refer to page 37 for instructions. If there is still a problem, replace the battery located on the system board. Details about the battery and installation procedure are described on page 34. 		<ul style="list-style-type: none"> Check that the floppy disk controller has been enabled in the Advanced menu. Press F2 to enter the <i>Setup</i> program. Check that the floppy disk drive(s) data and power cables are correctly connected. Also refer to page 27 for further troubleshooting help. <p>If there is still a problem, replace the system board.</p>

Case 4 — Boot Process Fails is continued on the next page ➞

Your PC Workstation Does Not Start Correctly

Case 4 — Boot Process Fails

Error Message...	Action to Take...	Error Message....	Action to Take...
	<ul style="list-style-type: none"> Check that the CD-ROM drive has been detected in the <i>Setup</i> program. Press F2 to enter the <i>Setup</i> program Check that the data and power cables are correctly connected to the CD-ROM drive. Also refer to page 28 for further troubleshooting help. 		<ul style="list-style-type: none"> Check that the data and power cables are correctly connected to Floppy disk drive A. Also refer to page 27 for further troubleshooting help.
	<ul style="list-style-type: none"> Check that the data and power cables are correctly connected to Floppy disk drive B. Also refer to page 27 for further troubleshooting help. 		<ul style="list-style-type: none"> Check that the termination card is present and correctly installed in processor slot 2 in a single processor system.
	<ul style="list-style-type: none"> After a system board replacement, the serial number (located on the back of the PC Workstation) is required. Follow the instructions on the monitor to enter the system serial number. 		<ul style="list-style-type: none"> Check that the IDE slave and master devices per channel have been correctly defined in the <i>Setup</i> program. Press F2 to enter the <i>Setup</i> program, then IDE.
	<p>After a system board replacement, the product name (XU800) is required. Follow the instructions on the monitor to enter the product name.</p>		<ul style="list-style-type: none"> Check that the System board is correctly configured (power, processor, terminator, PCI cards, cables and switches). <p>If there is still a problem, replace the system board.</p>

Runtime Errors

During normal usage (and at boot) of the PC Workstation, MaxiLife continually monitors vital system parameters. These include: temperature, fan malfunctions, power voltage drops, system board PLL problems and CPU problems.

Test	Error Code	Action to Take
During normal usage of the PC, HP MaxiLife continually checks vital system parameters. If an error should occur, a message would be automatically displayed on the LCD panel.		Check in the order given, the connection of the corresponding component, which could be:
	FAN CPU	Rear fan, system board, fan cable.
	FAN PCI	PCI Fan, PCI cards, system board, fan cable.
	TEMP. CPU	Rear fan, airflow guide, "Airflow Separator ¹ ", system board.
	TEMP. PCI	PCI fan, "Airflow Separator" Airflow guide, system board, PCI cards.
	TEMP. DISK	Rear fan, Airflow guide, "Airflow Separator", Temp Disk sensor, system board.
	POWER ERRORS	Power supply unit, VRM, system board.
	BAD PLL	Processor(s), system board.

1. A retaining bar holds the airflow separator in place, dividing inside the chassis into two separate areas (processor and PCI slot) for better cooling.

Refer to page 13 for pre-boot MaxiLife error screens.

Case 5 — Screen Goes Blank or Corrupt Image

When the power button is pressed, the PC Workstation starts to boot and there is activity on the monitor, but when the operating system starts loading, the screen goes blank or the image is corrupt.

- Screen becomes blank.
or
- Image is corrupt

NOTE

Before removing the cover, always switch off the display and PC Workstation. Disconnect the power cord and any accessory cables. When checks have been completed, close the PC Workstation and reconnect the power cord and accessory cables. Verify that the PC Workstation boots correctly.

Symptom...	Check that...	How...
PC Workstation boots correctly, but when the operating system starts loading, the screen goes blank or image is corrupt.	The monitor supports the resolution and selected refresh rate. This type of problem can occur if the PC Workstation is configured using one monitor, then swapped with another one.	<ol style="list-style-type: none"> 1 Reboot the PC Workstation in VGA mode. Then, access Display Properties through Start, Settings, Control Panel. 2 Change the display resolution and refresh values to settings that can be handled by your monitor.
<i>If the screen is still blank or corrupt</i>		
	The video card is correctly inserted in the socket on the system board.	<ol style="list-style-type: none"> 1 Follow the instructions indicated in the above <i>Note</i> about removing the cover and switching off the PC Workstation. 2 Remove the AGP card, then carefully re-insert it into the socket. 3 Replace the cover and reconnect the power cord and accessory cables. Verify that the PC Workstation boots correctly.
	The video driver is not corrupted or incorrectly installed.	Install the latest driver for the video card. This can be downloaded from the Kayak Support website: www.hp.com/go/kayaksupport , then HP Kayak XU800 PC Workstation.

Configuration Problems

If your PC Workstation boots normally, but you are having problems configuring different parts of your PC Workstation.

Symptom	Type of Problem	
PC Workstation starts to boot, but a POST (Power-On Self-Test) error message is displayed on the screen.	<ul style="list-style-type: none">• <i>CMOS test error.</i>	Refer to page 25.
	<ul style="list-style-type: none">• <i>Keyboard or mouse are not working correctly.</i>	Refer to page 26.
	<ul style="list-style-type: none">• <i>Floppy disk drive LED does not appear.</i>	Refer to page 27.
	<ul style="list-style-type: none">• <i>Hard disk drive, DVD, CD-RW or CD-ROM drive are not accessible.</i>	Refer to page 28.
	<ul style="list-style-type: none">• <i>Serial or Parallel ports are incorrectly configured.</i>• <i>Devices are not cabled correctly.</i>• <i>Device drivers missing or incorrectly installed.</i>	Refer to page 29.
You cannot turn off the PC Workstation.		Refer to page 30.
You have forgotten your password.		Refer to page 30.
There is an IRQ conflict when you install a new accessory board.		Refer to page 31.
Your PC Workstation has an audio problem.	<ul style="list-style-type: none">• <i>No sound when running any application.</i>• <i>No sound when playing a CD-ROM.</i>• <i>No output from the digitized sounds.</i>• <i>Audio input from the microphone too low, or none at all.</i>• <i>PC Workstation hangs while recording.</i>	Refer to page 32.
Your PC Workstation has a software problem.	<ul style="list-style-type: none">• <i>Software application will not run.</i>• <i>Date and time are wrong.</i>	Refer to page 33.
Your PC Workstation repeatedly loses its configuration settings.		Refer to page 34.
You have problems using the Euro Symbol		Refer to page 35.

Configuration Problems

Helpful Information	
Troubleshooting BIOS Problems: <ul style="list-style-type: none">• Updating the BIOS.• Restoring the BIOS Default Settings.• Clearing the CMOS.• Recovering the BIOS (Crisis Mode).	Refer to page 36. Refer to page 36. Refer to page 37. Refer to page 38.
System Board Switches.	Refer to page 39.
Using the HP <i>Setup</i> Program.	Refer to page 40.
Troubleshooting Drives With a Problem:	
<ul style="list-style-type: none">• Hard Disk Drive.• CD-ROM, DVD Drives or CD-RW Drives.	Refer to page 41.
	Refer to page 43.
Troubleshooting Hardware With HP DiagTools.	Refer to page 45.
Recovering Hard Disk Drive Contents.	Refer to page 49.

If There Is a CMOS Test Error

NOTE

Before removing the cover, always switch off the display and PC Workstation. Disconnect the power cord and any accessory cables. When checks have been completed, close the PC Workstation and reconnect the power cord and accessory cables. Verify that the PC Workstation boots correctly.

Symptom...	Check that...	How...
POST displays CMOS test error. CMOS is a chip that keeps a record of installed components when the PC Workstation is turned off.	The internal battery is working.	<ol style="list-style-type: none">1 Set the PC Workstation to the correct time (refer to the operating system manual).2 Switch off and unplug the PC Workstation for an hour.3 Restart the PC Workstation and check the time is correct.4 If the time is incorrect, replace the battery by a new one. Refer to Chapter 2 of your PC Workstation <i>User's Guide</i>.
	You have the latest BIOS version.	If you need to update, download the latest BIOS version from the Kayak Support website: www.hp.com/go/kayaksupport , then HP Kayak XU800 PC Workstation.
	The system board is working.	Replace the system board by a known working board from the same model of PC Workstation.
If the problem persists, contact HP Support or your authorized dealer		

Configuration Problems

If There Is a Keyboard or Mouse Test Error

NOTE

Before removing the cover, always switch off the display and PC Workstation. Disconnect the power cord and any accessory cables. When checks have been completed, close the PC Workstation and reconnect the power cord and accessory cables. Verify that the PC Workstation boots correctly.

Symptom...	Check that...	How...
POST displays a keyboard or mouse test error.	The keyboard and mouse cables are correctly connected.	Plug the cables into the correct connectors on the back of the PC Workstation. These connectors are easily identified by their color coded icon.
	The keyboard is clean and no keys are stuck down. The mouse is clean.	<ul style="list-style-type: none">• Check all keys are at the same height, and none are stuck (keyboard).• Clean the mouse ball and sensors.
	The keyboard/mouse are working	Replace the keyboard/mouse by known working units.
<i>If the PC Workstation boots but you still have a problem...</i>		
You may need to update the Basic Input Output System (BIOS).		Refer to page 36 for instructions on how to update the BIOS.
<i>If the keyboard/mouse still does not work</i>		
	Check that...	If not...
	The system board is working.	There is a possible problem with the system board. Contact HP Support or your authorized dealer.
<i>If the problem persists, contact HP Support or your authorized dealer</i>		

If There Is a Floppy Disk Drive Test Error

NOTE

Before removing the cover, always switch off the display and PC Workstation. Disconnect the power cord and any accessory cables. When checks have been completed, close the PC Workstation and reconnect the power cord and accessory cables. Verify that the PC Workstation boots correctly.

Symptom...	Check that...	How...
Power-On-Self-Test displays floppy disk drive test error.	The drive is correctly configured in the <i>Setup</i> program.	<ol style="list-style-type: none"> 1 When the message Press F2 to Enter Setup appears, press the F2 key. 2 Check the Floppy Disk Controller option in the <i>Setup Advanced</i> menu is enabled.
	The drive cables are correctly connected.	Floppy disk drive power and data cables are correctly connected (refer to chapter 2 of the PC Workstation's <i>User's Guide</i>).
	The drive cable is working.	Replace the floppy disk drive cable by a known working cable from the same model of PC Workstation.
	The floppy disk is working.	<ol style="list-style-type: none"> 1 Ensure you are using a formatted diskette and it is inserted correctly. 2 Clean the floppy disk drive using a diskette cleaning kit. 3 Insert a known working floppy disk and see if it works.
If the drive still does not work...		
	Check that...	If not...
	The system board is working.	There is a possible problem with the system board. Contact HP Support or your authorized dealer.
If the problem persists, contact HP Support or your authorized dealer		

Configuration Problems

If There Is a Hard Disk, DVD, CD-RW or CD-ROM Test Error

If There Is a Hard Disk, DVD, CD-RW or CD-ROM Test Error

NOTE

Before removing the cover, always switch off the display and PC Workstation. Disconnect the power cord and any accessory cables. When checks have been completed, close the PC Workstation and reconnect the power cord and accessory cables. Verify that the PC Workstation boots correctly.

Symptom...	Check that...	How...
Power-On-Self-Test displays hard disk, DVD or CD-ROM drive test error	The drive is correctly configured in the <i>Setup</i> program. Refer to page 41 or page 43.	<ol style="list-style-type: none">1 Switch the PC OFF then ON.2 When the message Press F2 to Enter Setup appears, press the F2 key.3 Check the drive is enabled and the correct type is selected.
	The drive cables are correctly connected.	<ol style="list-style-type: none">1 Check the drive cables are correctly connected (refer to chapter 2 of the PC Workstation's <i>User's Guide</i>).2 Close the PC Workstation, switch it on, check if it works.
	The drive cable is working.	<ol style="list-style-type: none">1 Replace the drive cable by a known working cable from the same model of PC Workstation.2 Close the PC Workstation, switch it on, check if it works.
If the drive still does not work...		
	<i>Run DiagTools to perform one of the hardware diagnostics tests. Refer to page 46.</i>	
	Check that...	How...
	The drive is working with HP DiagTools.	<ol style="list-style-type: none">1 Replace the drive by a known working drive from the same model of PC Workstation.2 Close the PC Workstation, switch it on, check if it works.
If the drive still does not work...		
You may need to update the Basic Input Output System (BIOS).		Refer to page 36 for instructions on how to update the BIOS.
	Check that...	How...
	The system board is working.	<ol style="list-style-type: none">1 Replace the system board by a known working board from the same model of PC Workstation.2 Close the PC Workstation, reconnect the power cord and check that the PC Workstation and drive work.3 If the drive works, contact HP Support or your authorized dealer for further troubleshooting information.
You receive a S.M.A.R.T. alert during the Power-On-Self-Test.		Recommended action: Carry out an immediate data backup, then contact HP Support for a replacement hard drive. Refer to page 41.
If there is a hard disk drive crash...		Refer to "Recovering Hard Disk Drive Contents" on page 49.
If the problem persists, contact HP Support or your authorized dealer		

If There Is a Serial or Parallel Port Test Error

NOTE

Before removing the cover, always switch off the display and PC Workstation. Disconnect the power cord and any accessory cables. When checks have been completed, close the PC Workstation and reconnect the power cord and accessory cables. Verify that the PC Workstation boots correctly.

Symptom...	Check that...	How...
POST displays a port test error.	The port is correctly configured in the <i>Setup</i> program.	<ol style="list-style-type: none"> 1 Switch the PC Workstation OFF then ON. 2 When the message Press F2 to Enter Setup appears, press the F2 key. 3 Check the port is enabled and the correct setting is selected under Integrated I/O Ports in the Advanced menu.
	All connected devices are correctly connected and switched on.	<ol style="list-style-type: none"> 1 Plug the cables into the correct connectors on the PC Workstation rear panel. 2 Switch on the PC Workstation and the external devices.
	The correct device drivers are installed.	Refer to the device documentation.
<i>If the PC still has a problem...</i>		
You may need to update the Basic Input Output System (BIOS).		Refer to page 36 for instructions on how to update the BIOS.
	Check that...	How...
	The system board is working.	<ol style="list-style-type: none"> 1 Replace the system board by a known working board from the same model of PC Workstation. 2 Close the PC Workstation, reconnect the power cord and check that the PC Workstation works. 3 If the port works, contact HP Support or your authorized dealer for further troubleshooting information.
<i>If the problem persists, contact HP Support or your authorized dealer</i>		

Configuration Problems

If You Cannot Turn Off Your PC Workstation

If You Cannot Turn Off Your PC Workstation

Symptom...	Check that...	How...
PC Workstation does <i>not</i> make a buzzing or beeping sound when you press the power button, but you are still unable to turn it off.	You have saved all data and exited all programs.	<ol style="list-style-type: none">1 Save all data and exit all programs (if you can).2 Press the power button and keep it pressed for 5 seconds. The PC Workstation will turn off.3 Remove the power cord.

If You Have Forgotten Your Password

NOTE

Use these instructions if the passwords were set with the *Setup* program.

Symptom...	Solution...
You have forgotten the User password.	<ol style="list-style-type: none">1 Switch off the PC Workstation.2 Restart the PC Workstation. If you are prompted for a password, enter the Supervisor password.3 When Press F2 to Enter Setup appears, press the F2 key.4 Enter the Administrator Password to access the <i>Setup</i> program.5 Go to the Security menu.6 Go to the Set User Password field and set a new User Password. This will replace the old password which you had forgotten.7 Press Esc, or F3, or select Exit Menu, to save the new Password and exit <i>Setup</i>.
You have forgotten the Administrator password.	<ol style="list-style-type: none">1 Switch off the PC Workstation and remove the power cord.2 Remove the PC Workstation's cover.3 Set switch 3 on the system board switch block to the DOWN position.4 Replace the power cord and restart the PC Workstation.5 When the message <i>Passwords have been cleared</i> appears on screen, switch off the PC Workstation.6 Remove the power cord and reset switch 3 back to the UP position.7 Replace the PC Workstation's cover.8 Switch on the PC Workstation and allow it to complete its startup routine.9 After the Power-On-Self-Test has completed, press F2 when prompted to use the <i>Setup</i> program.10 Set the Administrator and new User Passwords.11 Press Esc, or F3, or select Exit Menu, to save the new Password and exit <i>Setup</i>.

If There Is an IRQ Problem

Symptom...	Solution...
You have installed an accessory board but it is not working.	Check that: <ol style="list-style-type: none"> 1 The accessory board is correctly installed in the slot. 2 There are no bent connector pins. 3 You have installed the correct drivers (refer to the support web site). 4 The relevant fields in the HP <i>Setup</i> program are correctly set. 5 The software installation steps have been followed correctly.
You have installed a sound board and you get a message telling you that there is no IRQ (Interrupt Request) available for the sound board.	<ol style="list-style-type: none"> 1 Check that you have followed the installation instructions provided with the sound board. 2 Disable the integrated audio in the HP <i>Setup</i> program. Refer to the following page for instructions. 3 Check if the new accessory board supports shared interrupts and if possible implement a shared interrupt (refer to the accessory board manufacturer for more information). 4 Remove the new accessory board.
If there is still a problem	
	For Legacy accessory boards under Windows NT: <ol style="list-style-type: none"> 1 Restart the PC Workstation and press F2 when Press F2 to enter Setup is displayed. 2 In the Main menu, set the Plug & Play O/S item to No. 3 Press the F3 key to save the changes and quit the <i>Setup</i> program. 4 Redo the Windows NT installation procedure for the accessory board.

NOTE

Plug and Play operating systems such as Windows 95 and Windows 98 should, in normal circumstances, be able to allocate IRQs according to the hardware installed in the PC Workstation.

Configuration Problems

If Your PC Workstation Has an Audio Problem

If Your PC Workstation Has an Audio Problem

Symptom...	Solution...
No sound when running any applications.	<p>If you are using Windows NT 4.0, check the volume, mute, and balance settings. Refer to the operating system documentation for more information.</p> <p>Absence of sound can also be caused by a hardware conflict. Hardware conflicts occur when two or more peripheral devices compete for the same signal lines or channels. Conflicts between your audio interface and another peripheral device might be due to the settings of the I/O addresses, IRQ channel, or DMA channel. To resolve the conflict, change the settings of either the audio interface or any other PCI accessory in your system (refer to page 31).</p>
No sound when playing a multimedia/audio CD-ROM.	<p>Check that the volume control on the CD-ROM drive is correctly set or that the audio cable for the CD-ROM drive is correctly connected to the connector on the system board. If you are using headphones or speakers, ensure they are correctly connected. For information on connecting audio accessories, refer to your PC's <i>User's Guide</i>.</p>
No output from the 8-bit or 16-bit digitized sounds.	<p>This might be due to the DMA channel selected or to an interrupt conflict. Use your operating system's audio control software to change the audio interface's DMA channel or IRQ setting (refer to page 31).</p>
Audio input from the microphone is too low, or no audio at all.	<p>Check that the microphone specifications meet the requirements of the 16-bit sound components. The microphone should be a 600-ohm electret type.</p>
Occasional crackles when playing back sounds.	<p>These crackles are usually the result of your PC being unable to transfer audio samples within the required time. A solution is to use a lower sampling rate. Recording and playing back at 22 kHz is less demanding upon system resources than recording audio at 44 kHz.</p>
The PC hangs while recording.	<p>Uncompressed digital audio can eventually fill your hard disk. For example, one minute of stereo sound recorded at a resolution of 44 kHz will occupy about 10.5 MB. Before recording, check that there is enough free space on your hard disk.</p> <p>Data compression can reduce the space required. The A-law and m-law hardware compression used by the audio interface enables the sampling of sound at a resolution of 16-bits, but it generates the same quantity of data as an 8-bit sample.</p>
A new add-on sound card does not work.	<p>If you install an add-on sound card, you will need to disable the integrated sound features on your PC Workstation. You can do that in one of the following ways:</p> <p>From the <i>Setup</i> program, press F2 when the Kayak logo appears on the screen immediately after rebooting, then from the Advanced menu select Integrated Audio Interface. Set this option to Disable.</p> <p>To disable integrated sound (on Windows 95, Windows 98 and Windows NT 4.0), select Control Panel from the Start menu, then click on Multimedia ⇌ Advanced. Click on the Audio Device icon, then select the Do not use audio features on this device radio button.</p>

If Your PC Workstation Has a Software Problem

Symptom...	Solution...
Green power indicator light is illuminated, but some software won't run.	<ul style="list-style-type: none"> Refer to the application software documentation and/or the operating system documentation for guidance. If the software is running but not functioning properly, try to save any unsaved data, then close down the application and relaunch it. If it still does not work, restart the PC Workstation and then try launching the software again. Reinstall the software. If the problem continues, contact the software manufacturer's support services.
Date and time are wrong.	<p>The date and time can be incorrect for the following reason:</p> <ul style="list-style-type: none"> The time has changed to or from Summer Time. <p>To change the date and time, use your operating system utilities or the <i>Setup</i> program. If necessary, install a new battery (refer to Chapter 2 of your <i>User's Guide</i>).</p>
<i>If there still is a software problem...</i>	
	<i>Run HP DiagTools to check the hardware configuration. Refer to page 45.</i>

If the PC Workstation Clock Is Not Keeping Time Correctly

WARNING

There is a danger of explosion if the battery is incorrectly installed. For your safety, never attempt to recharge, disassemble, or burn the old battery. Replace the battery only with the same or equivalent type recommended by the manufacturer. The battery is a lithium battery which does not contain heavy metals. Nevertheless, in order to protect the environment, do not dispose of batteries in household waste. Please return used batteries to the shop from which you bought them, to the dealer from whom you purchased your PC Workstation, or to HP, so that they can be either recycled or disposed of in an environmentally sound way. Returned batteries will be accepted free of charge.

If your PC Workstation repeatedly loses its configuration settings you should consider changing the battery. Replace it with a CR2032 coin type manganese/lithium battery, available from most PC Workstation stores.

To change the battery:

- 1 Disconnect the PC Workstation's power supply cord and any connection to a telecommunications network.
- 2 Remove the PC Workstation's cover.
- 3 Remove the old battery by sliding it from under the retaining clip.
- 4 Place the new battery in the battery holder and ensure that it is properly seated. Ensure that the clip holds the battery firmly in place.
- 5 Replace the cover. Reconnect all cables and power cords.
- 6 Run the *Setup* program, accessed by pressing **F2** at startup, to reconfigure the PC Workstation.

If You Have Problems Using the Euro Symbol

If your keyboard has a Euro symbol key, it can only be used with operating systems and applications that support this feature.

- Only the latest operating systems, such as Windows 98, provide integrated support for the Euro symbol (in certain languages only).
- Not all applications support the Euro symbol.
- Not all fonts contain the Euro character.

For Windows 95 and Windows NT Users

Windows NT 4.0 and Windows 95 do not provide integrated support. For more information on how to enable support of the Euro symbol, refer to Microsoft's web site at:

www.microsoft.com/windows/euro.asp

Configuring Your Keyboard

To configure your keyboard, go to **Settings** ⇨ **Control Panel** in the **Start** menu. Double-click on **Keyboard** and select the **Language** or **Input Locales** tab in the **Keyboard Properties** window. Click on **Add** and select the country that corresponds to your keyboard, and click **OK**. Click **OK** to exit the **Control Panel**.

Troubleshooting BIOS Problems

The BIOS is a set of program routines that gives the PC Workstation its fundamental operational characteristics. Many problems with your PC Workstation can be solved by updating (flashing) the BIOS (Basic Input Output System).

NOTE

It is recommended that before you make any modifications to the BIOS you take note of the system setup.

Updating the BIOS

The latest system BIOS (standard flash operation) for your PC Workstation can be downloaded from HP's Support Web site at: www.hp.com/go/kayaksupport. Instructions on updating the BIOS are supplied with the downloaded BIOS files and a BIOS flash utility.

Restoring BIOS Default Settings

Suspected hardware errors may be caused by BIOS and configuration issues. If the BIOS settings are suspected to be wrong, do the following steps to restore the BIOS to its default setting:

- 1 Press **(F2)** while the initial “Kayak” logo is displayed immediately after restarting the PC Workstation to access the *Setup* program.
- 2 Press **(F9)** to load the default settings from the *Setup* program.
- 3 Set the “Reset Configuration Data” to Yes in the Main menu.
It is recommended that before you make any modifications to the BIOS you take note of the system setup.

Clearing the CMOS

- 1 Turn off the PC Workstation, disconnect the power cord and data cables, then remove the cover.
- 2 Set the system board switch 4 to the DOWN position to clear the CMOS memory.
- 3 Replace the cover, and only reconnect the power cord.
- 4 Reboot the PC Workstation. A message similar to the following will be displayed:

"Configuration has been cleared.

You can now:

Switch off the PC Workstation and remove the cover.

Reset the "Clear Configuration" switch to OFF (Up).

Replace the cover.

Switch on the PC Workstation and allow it to startup.

To modify the default configuration information:

**press [F2] when prompted during self-test (POST), to
enter Setup."**

- 5 Turn off the PC Workstation, disconnect the power cord, and remove the cover.
- 6 Set the system board switch 4 to the UP position to retain the configuration.
- 7 Replace the cover, and reconnect the power cord and data cables.
- 8 Switch on the PC Workstation. Run the *Setup* program by pressing (F2). Then press (F9), the CMOS default values will be automatically downloaded and saved.
- 9 Press (Esc) to save the configuration and exit from the *Setup* program.

Recovering the BIOS (Crisis Mode)

If for some reason the BIOS is corrupted and the standard flash cannot be used, use the BIOS Recovery Mode (exceptional BIOS recovery operation) to restore the BIOS. To do this:

- 1 Format a new floppy disk.
- 2 Copy the BIOS files on to the floppy disk.
- 3 Shut down the PC Workstation.
- 4 Power off the PC Workstation and remove the power cord.
- 5 Remove the cover.
- 6 Set switch [1](#) to the [DOWN](#) position.
- 7 Insert the floppy disk into the floppy disk drive.
- 8 Reconnect the power cord and switch on the PC Workstation.
- 9 The PC Workstation boots from the floppy disk, then flashes the BIOS. However, it should be noted, that during the flash process, the screen remains blank. MaxiLife will display a message on the LCD panel "RECOVERY MODE".
- 10 The recovery process is finished when there are four beeps.
- 11 Power off the PC Workstation. Remove the floppy disk from the drive. Remove the power cord.
- 12 Set switch [1](#) back to the [UP](#) position.
- 13 Replace the cover, reconnect the power cord, then reboot the PC Workstation.

System Board Switches

There are ten system board switches used for configuration. A certain number of these are reserved (switches 2, 5, 6, 8, 9, 10) and should not be modified, otherwise it could lead to a system failure.

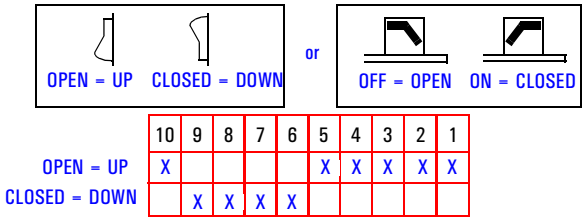
Switch	Default Position	Function:
1	UP	Enables normal mode. DOWN enables the BIOS recovery mode at next boot.
2	UP	Reserved. Do Not change Default Setting
3	UP	Enables User and System Administrator passwords. DOWN clears the passwords at next boot.
4	UP	Retains CMOS memory. DOWN clears CMOS memory at next boot.
5	UP	Reserved 5-6. Do Not Change Default Settings
6	DOWN	
7	DOWN	Enables keyboard power-on. UP disables this option.
8	DOWN	Reserved 8-10. Do Not Change Default Settings
9	DOWN	
10	UP	

NOTE

Switches can also be referenced as: UP = Open = Off (disable), DOWN = Close = On (enable)

Switch Boxes

There are two types of system board switch boxes that may be used on the *HP Kayak XU800 PC Workstation*.



Using the HP Setup Program

The *Setup* program allows you to view and change the configuration of your PC Workstation, such as the passwords and boot device order. Follow these instructions to check the configuration.

First, Turn On or Restart Your PC Workstation

If your PC Workstation is off, turn on the display and then the PC Workstation.

If the PC Workstation is already turned on, save your data, exit all programs and restart your PC Workstation. For Windows NT 4.0, Windows 95 or Windows 98, use the **Shut Down** ⇒ **Restart your computer** command in the **Start** menu. This command will automatically exit the operating system and restart the PC Workstation.

To Go to the Setup Program

To go into the *Setup* program, press **F2** while the “*Kayak*” logo appears on your display.

More Troubleshooting for Drives

This section provides more information on how to solve problems with your drives or accessory boards.

WARNING

Be sure to disconnect the power cord and any telecommunication cables from your computer before you remove the cover to check the cable connections or jumper settings.

To avoid electric shock and harm to your eyes by laser light, do not open the CD-ROM drive enclosure. The CD-ROM drive should be serviced by service personnel only. Refer to the label on the CD-ROM for power requirements and wavelength. This PC Workstation is a class 1 laser product. Do not attempt to make any adjustment to the laser unit.

If the Hard Disk Has a Problem

- 1 If you receive a S.M.A.R.T. alert either from TopTools or during Power-On-Self-Test, there could be a potential problem with the hard disk drive. Carry out an immediate data backup, then contact HP Support.
- 2 Check that the disk power and data cables are correctly connected (refer to Chapter 2 in your User's Guide for information about cables and connectors).
- 3 Check that booting from the hard drive has not been disabled in the **Boot** menu of the *Setup* program, accessed by pressing **F2** at startup.
- 4 Check that the hard disk drive has been detected (refer to the **Hard Disk Drives** submenu in the **Boot** menu of the *Setup* program, accessed by pressing **F2** at startup).
- 5 Run ScanDisk and Disk Defragmenter to see if they detect a problem with the hard disk drive. To access these utilities, select **Programs** ⇒ **Accessories** ⇒ **System Tools** from the **Start** menu.
- 6 Run IDE or SCSI tests from the **Advanced System Test** option from HP DiagTools (described on page 45).

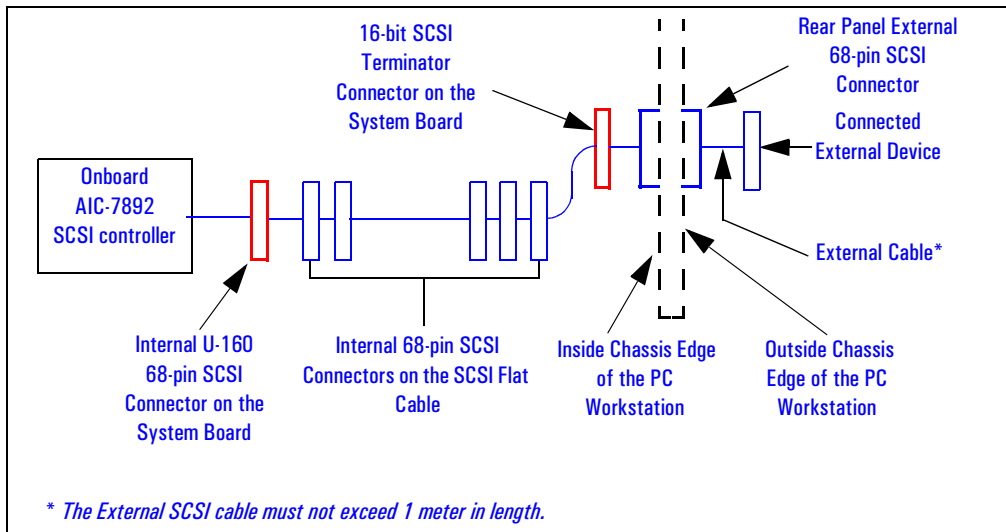
Configuration Problems

More Troubleshooting for Drives

If a SCSI Hard Disk Drive Is Not Available

If a SCSI hard disk drive is not recognized during the system boot, nor available during normal operation, check that the Internal SCSI cable is connected to:

- a Internal U-160 SCSI connector on the system board located near the system board switches.
- b 16-bit SCSI Terminator on the system board located behind the processor.
- c External SCSI connector on the rear chassis (external SCSI devices are connected to the SCSI connector located on the rear panel of the PC Workstation).



Verifying the SCSI Configuration

The Adaptec SCSI Configuration Utility lets you view and change the default configuration, and all SCSI devices connected to it. You access the SCSI Configuration Utility by pressing **F6** when the message **Press F6 for SCSISelect(TM) Utility !** is displayed (just after the "Kayak" boot screen). Then follow the on-screen instructions to configure the SCSI devices.

NOTE

Each SCSI device **must** be assigned a different SCSI ID.

If the Hard Disk Activity Light Does Not Work If the hard disk activity light does not flicker when the PC Workstation is accessing the hard disk drive:

- 1 Check that the control panel connector is firmly attached to the system board.
- 2 Check that the disk power and data cables are correctly connected.

If the CD-ROM, DVD or CD-RW Drive Has a Problem

CD-ROM, DVD or CD-RW Drive Does Not Work

- 1 Check that a media is inserted in the drive.
- 2 Check that all cables (data, power and audio) have been properly connected both to the drive and to the system board.
- 3 Verify that the drive has been detected in the *Setup* program, accessed by pressing **F2** at startup). You should see a drive declared in the **IDE Secondary Master** or **IDE Secondary Slave** field.
- 4 If you intend to boot on CD-ROM, place **CD-ROM** before **HDD** in *Setup* (refer to the **Boot Device Priority** submenu in the **Boot** menu group of the *HP Setup* program).

NOTE

You can use HP DiagTools to perform accessing and usability tests on the CD-ROM drive. Refer to page 23 for instructions on how to use HP DiagTools.

DVD Drive Doesn't Play DVD Video

- 1 Check that the DVD disk you are trying to play and your DVD drive have the same regional code setting.

NOTE

Your DVD drive's regional code setting is set by the first DVD disk you insert in the drive.

- 2 Ensure you have a software MPEG decoder installed on your system.

CD-ROM, DVD or CD-RW Drive Is Idle

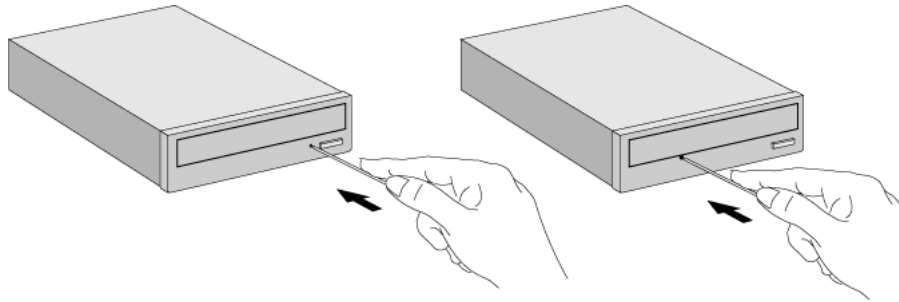
If the drive does not appear to be working, try accessing the disk by clicking on the drive icon or drive letter assigned to the drive by your operating system.

CD-ROM, DVD or CD-RW Door Does Not Open

If you have difficulty removing a disk from the drive (during a power failure for example), you can use the manual eject button.

For example, to eject a CD-ROM using the manual eject button:

- 1 With a thin, solid rod, such as the end of a paper clip, push the CD-ROM drive's manual eject button. The below diagram shows the two possible positions of the manual eject button.



- 2 The CD-ROM drive door will be released, opening slightly. Carefully pull it open fully and retrieve the CD.
- 3 To close the CD-ROM drive door, push it gently closed without forcing it. The CD-ROM drive door may not close completely until it is fully functional (for example, when the power comes back on).

Troubleshooting with HP DiagTools

HP DiagTools is an accurate and reliable utility that helps you diagnose any potential hardware-related problems. With this utility you can:

- Check the hardware configuration and verify that it is functioning correctly.
- Test individual hardware components.
- Diagnose hardware-related problems.
- Obtain a complete hardware configuration.
- Provide precise information for an HP support agent so they can solve any problems quickly and effectively.

For more information about this utility, refer to the Hardware Diagnostics User's Guide, available on the HP web site in PDF (Adobe Acrobat) format.

Where Can I Get HP DiagTools?

HP DiagTools is available from the following sources:

- HP Utility Partition on the hard disk drive.
- *Image Creation and Recovery CD-ROM* delivered with your computer.
- *HP DiagTools CD-ROM* obtained from the HP web site at <http://www.hp.com/desktops/diagtools>

Before Using HP DiagTools

Decide how you are going to run the diagnostics utility: using either the HP Utility Partition on the hard disk drive or one of the CD-ROM options. It is recommended that you check the following settings in the *Setup* program:

- ☐ In the Main setup menu, the item to select the operating system (PnP O/S) is set to "No". This should be set whether you have a plug-and-play (for example, Windows 95 and Windows 98) operating system or not (Windows NT 4.0 is a non plug-and-play system).

If you are running the diagnostics from a CD-ROM, then the following settings must also be checked.

- ☐ In the Security menu, set all Hardware Protection items to “Enabled” or “Unlocked” (if applicable). Ensure also that Booting from the CD-ROM is enabled.
- ☐ In the Boot menu, the CD-ROM drive is configured to boot before the hard disk drive in the Boot Device Priority List.

You will need the Administrator password to make any changes to the above settings. It is also recommended that you make a note of any changes to the *Setup* program.

Starting HP DiagTools

From the hard disk drive (HP Utility Partition):

- 1 Close all applications if you have not already done so.
- 2 Shut down the PC Workstation with the Restart option.
- 3 When the Kayak start-up logo appears, the following message will be displayed for a few seconds: “Press <F10> to start hardware diagnostics or any other key to proceed”. Press the **F10** key to start HP DiagTools.
- 4 When DiagTools starts, it will display a welcome screen. Follow the on-screen instructions to carry out the diagnostic tests. The different available tests are described in page 47.

From either the *Image Creation and Recovery CD-ROM* or *HP DiagTools CD-ROM*:

- 1 Insert the CD-ROM into the CD-ROM drive and restart the computer.
- 2 Press the **F8** key to select CD-ROM from the boot order list.
- 3 The PC Workstation will boot from the CD-ROM.
If you are using the *Image Creation and Recovery CD-ROM*, a menu will be displayed. Select the option to run DiagTools.
- 4 When DiagTools starts, it will display a welcome screen. Follow the on-screen instructions to carry out the diagnostic tests. The different available tests are described below.

HP DiagTools Hardware Tests

The following hardware tests can be performed from HP DiagTools:

- ❑ *Hardware Detection.* Automatically detects the complete hardware configuration of the system (including PC Workstation model and version, processor type, cache memory, BIOS version, total main memory, IDE or SCSI device list, video adapter, audio card, keyboard, and USB controller) and determines the appropriate tests to be performed.
- ❑ *Basic System Tests.* Automatically (no user input required) verifies the correct operation of different hardware components of the PC Workstation. If a warning message is displayed, you should use the Advanced System Tests to investigate the error. You can also produce a Support Ticket containing a record of the system's configuration and test results, which is described on the next page.
- ❑ *Advanced System Tests.* Independently tests a selected hardware component of the PC Workstation. Because of this, the tests are more thorough than what is performed in the Basic System Tests. It should also be noted, the Advanced System Tests can only be performed after the Basic System Tests have been completed. Each test is selected through the on-line screen menu and can be repeated any number of times.
For example, if there is doubt with a hard disk drive, select the hard disk drive test, then one of the proposed options. If a test fails, you can produce support ticket, which is described next.

For more detailed information about the above tests and error codes, refer to the Hardware Diagnostics User's Guide, available on the HP web site in PDF (Adobe Acrobat) format.

Producing a Support Ticket

To produce a complete record of your system's configuration and test results, you will need to create a Support Ticket

If you are using HP DiagTools from the hard disk drive, a floppy disk drive is required to store the Support Ticket file. If you are using HP DiagTools from a CD-ROM, you can create the Support Ticket file on either the hard disk drive or floppy disk drive. You can also view or print the Support Ticket file using the "Support Ticket Viewer" program.

The Support Ticket file can be sent, via e-mail or fax, to your local or HP support agent.

Resetting *Setup* Values

When you have completed the above procedure, and before restarting your computer, you must change any settings you have modified in the *Setup* program back to their original position. Setting incorrect values may cause system boot failure. Should this occur, press the **F9** key while you are in the *Setup* program to load the default values.

This utility will automatically detect the complete hardware configuration of your system before any tests can be performed.

Recovering Hard Disk Drive Contents

In the unlikely event of a hard disk crash, you can recover your PC Workstation's preloaded operating system and software using the *PC Image Engineer — Image Creation and Recovery CD-ROM*¹ supplied with your PC Workstation. Some of the available functions on the *Image Creation and Recovery CD-ROM* are described below:

- Full Recovery: Restores the operating system, drivers, utilities and Special Disk Partition as supplied by default. A full recovery also automatically erases any viruses that might be present on the Master Boot Record. It should be noted, however, that this function reformats your hard disk drive. It is highly recommended, if possible, that you save **all** data files and software installations.
- Minimal Recovery: Restores only the operating system and SCSI driver for access to a SCSI hard disk drive.
- Partial Recovery: Restores individual drivers which are supplied in a "browseable area" of the CD-ROM.
- Copy OS Master Files: For use when Windows prompts you to insert the operating system media when installing additional drivers.
- HP DiagTools: Checks the system configuration and operation. Also described on page 45.

NOTE

Any software that has been installed on the PC Workstation after it has been purchased, and any personal data that has been generated by applications installed on the PC Workstation, are not covered by the recovery process.

When using the Full Recovery option, any hardware that has been installed in the PC Workstation after it has been purchased will require that the necessary drivers be re-installed. In the case where hardware has been removed you may have to remove the unnecessary drivers.

Refer to your Kayak User's Guide delivered with the PC Workstation for instructions on how to perform a recovery, upgrade or downgrade.

1. Some models are not provided with an *Image Creation & Recovery CD-ROM*. If you do not have an *Image Creation and Recovery CD-ROM*, reinstall the operating system from the CD-ROM provided for this purpose with your PC Workstation.

Any drivers you need to reinstall can be downloaded from HP's Support Web site at: www.hp.com/go/kayaksupport.

Recovering Preloaded Drivers

You can use the *Image Creation and Recovery CD-ROM* to reinstall drivers that were delivered with the PC Workstation. To do this, insert the CD-ROM into the CD-ROM drive. Automatically an HTML file is displayed. Using your web browser, navigate through the CD-ROM to find the appropriate driver(s). Then install them by executing the corresponding installation program directly from the CD-ROM.

Reinstalling Windows NT Service Pack

If you use either the Full Recovery or Minimal Recovery options, the Service Pack delivered with the PC Workstation is automatically reinstalled.

Changing the Hard Disk

If the hard disk is corrupted and you can no longer use it, you should replace it with a new hard disk drive. Refer to *Chapter 2 of your PC Workstation User's Guide* for information about installing hard disk drives.

If the replacement hard disk drive is brand new, you will need to partition and format the drive. This can be done using the *Image Creation and Recovery CD-ROM*.

Other Sources of Information

Getting Online Support for Troubleshooting

HP's support web site provides extensive support material that can help you troubleshoot problems on your PC Workstation:

- Documentation for your PC Workstation (described below)
- BIOS updates (including the upgrade utility and instructions)
- The latest drivers and software utilities

For HP's support web site, connect to:

www.hp.com/go/kayaksupport.

Documentation Set Overview

HP's web site allows you to download documentation for your PC Workstation free of charge. The documents provided are in Adobe Acrobat (PDF) format and are available from HP's web site at:

www.hp.com/go/kayaksupport.

The available documents include:

- *User's Guide*—describes how to set up your PC Workstation for the first time and contains information on how to install and replace hardware components.
- *Technical Information*—provides detailed information about your PC Workstation, including:
IRQs, DMAs, and I/O Addresses.
- *Service Handbook Chapters*—provides information on replacement parts, including HP part numbers.
- *Technical Reference Manual*—technical information on system components, such as system board, chipset and BIOS.
- *Troubleshooting Guide*—this online guide.

You will also find complete information on available service and support at the HP World Wide Web site. To see the full set of services available, go to: www.hp.com/go/kayak.

Hewlett-Packard Support and Information Services

You can learn more about HP service and support from the support Web site: www.hp.com/go/kayaksupport.

Collecting Information Before Contacting HP Support

It is recommended that before contacting HP Support you note down some of the information mentioned below. This will help HP support deal with your problem quickly and efficiently.

PC Description	
Model number	See label on the right side of your PC.
Serial number	See label on the right side of your PC.
RAM <ul style="list-style-type: none">Number of megabytes installedHP RAM or RAM from another manufacturer	RAM <ul style="list-style-type: none">There may be some compatibility problems with non-HP RAM. The amount of RAM is displayed on the LCD status panel System Info "Sys Info" menu.There may be some compatibility problems with non-HP RAM.HP supports and recommends only HP memory modules.
Question or Problem	
Write down a brief description of the problem	
Frequency	How often has the problem occurred?
Run OK?	How long has the PC been running normally?
Recent changes to the PC	Have there been any recent changes made to the PC?
Hardware Configuration	
Which BIOS version is used?	The BIOS version is displayed in the <i>Setup</i> program main menu, accessed by pressing F2 during start-up.
Any BIOS parameter changes?	Did the problem occur after changes were made to the BIOS using the <i>Setup</i> program?
Make a list of slots and interrupts used by additional cards (for example, LAN, sound and SCSI)	<i>This is to check for interrupt conflicts. You can find IRQs by running DiagTools (see page 45).</i>
Operating System	
Are you using the original operating system software that came preloaded on your PC?	
If not, what is the operating system version?	<i>Select Settings ⇄ Control Panel from the Start menu, then click on the System icon. The operating system version is displayed under System.</i>
Any operating system-generated error messages?	Please note down exact text of error message.
Any errors during boot (Power-On-Self-Test)? This test checks all installed components.	Any POST errors will be displayed on your monitor screen or signalled by beep codes.