

Read and understand these instructions before installing fixture.

This fixture is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

IMPORTANT SAFEGUARDS- READ AND FOLLOW ALL SAFETY INSTRUCTIONS


WHEN USING ELECTRICAL EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING:

1. Turn off AC power before proceeding.
2. Be sure all electrical connections are complete and outlet box is closed before inverter connectors on emergency pack are connected.
3. Do not use outdoors.
4. Do not mount near gas or electrical heaters.
5. Do not attempt to service the battery. A sealed, rechargeable, no maintenance battery is used. Do not incinerate or mutilate; may burst or release toxic materials. Do not short circuit; may cause burns. Battery acid can cause burns to skin and eyes. If acid is spilled on skin or eyes, flush with fresh water and contact a physician immediately.
6. Equipment should be mounted in locations and at height where it will not be readily subject to tampering by unauthorized personnel.
7. The use of accessory equipment is not recommended by the manufacturer and may cause an unsafe condition.
8. Do not use the equipment for other than intended use.
9. This unit has more than one power supply connection point. To reduce the risk of electrical shock, disconnect both the normal and the emergency power supplies before servicing.
10. Before servicing to prevent electrical shock, disconnect the inverter connectors on the emergency pack (located inside the ballast housing). Make certain that the switch (if the luminaire is switched) and the unswitched lines to the emergency pack are turned off at the fuse box. Servicing should be performed by qualified personnel only.

WARNING: TO PREVENT HIGH VOLTAGE ON THE RED & YELLOW OUTPUT LEADS PRIOR TO INSTALLATION, INVERTER CONNECTOR MUST BE OPEN. DO NOT JOIN INVERTER CONNECTOR UNTIL INSTALLATION IS COMPLETE AND AC POWER IS SUPPLIED TO THE EMERGENCY BALLAST.

A. WIRING - READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE PROCEEDING

1. Make sure AC power is off at fuse box.
2. Make sure that the necessary branch circuit wiring is available. An unswitched source of power is required for the emergency pack.
3. The emergency pack must be fed from the same branch circuit as the AC ballast(s).
4. In switched luminaires, emergency pack must be connected ahead of any local switching.
5. Make supply wire connections. Use wire nuts (local hardware item). SEE WIRING DIAGRAM. Unhook LOOP from BACKPLATE ASSEMBLY. Push supply wires and connections back into outlet box.
6. After connecting inverter connector, proceed with installing in accordance with instructions provided with luminaire.

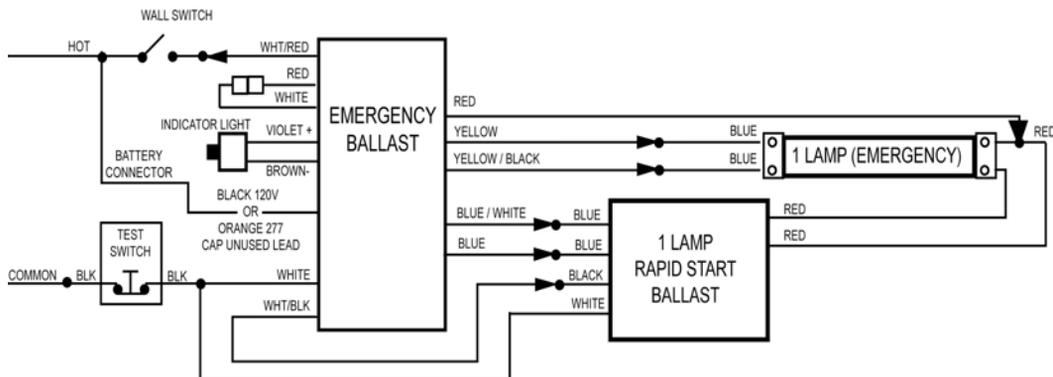

Read and understand these instructions before installing fixture.

This fixture is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

B. OPERATION

When AC power is applied, the charging indicator light is illuminated indicating that the battery is being charged.

When the power fails, the emergency lighting ballast automatically switches to emergency operation, keeping one lamp illuminated at reduced output for 90 minutes.

C. MAINTENANCE

Although no routine maintenance is required to keep the emergency ballast functional, it should be checked periodically to ensure that it is working. The following schedule is recommended:

1. Visually inspect the charging indicator light monthly. It should be illuminated.
2. Test the emergency operation of the luminaire once every 3 months. One lamp should operate at reduced output.
3. Conduct a 90 minute discharge test at least once a year or more if required by local ordinance.
One lamp should operate at reduced output for 90 minutes.

LIGHTOLIER®