

Installation Instructions

Retractable Ventilation System



 **Electrolux**

2 Finding Information

READ AND SAVE THESE INSTRUCTIONS

Attach your sales receipt to this page for future reference.

NOTE

Installer: Leave instructions with owner.

Owner: Read your Retractable Ventilation System Use & Care Manual. It contains important safety information for operating this appliance. It also has many suggestions for getting the best results from your downdraft vent.

Read all instructions before installing the downdraft vent.

For your safety, please read and observe all safety instructions. This guide will help you anticipate all installation connections.

QUESTIONS?

For toll-free telephone support in the U.S. and Canada:
1-877- 4ELECTROLUX (1-877-435-3287)

For online support and Internet product information:
www.electroluxusa.com

TABLE OF CONTENTS

Finding Information	2
Please Read And Save This Guide	2
Questions	2
Table Of Contents	3
Safety	4
Important Safety Instructions	4
Safety Precautions	5
Preparing for Installation	7
Verifying Package Contents	7
Installation Planning	7
Specifications and Dimensions	8
Electrical Power Supply	9
Requirements	9
Duct Preparation	10
Duct Installation	10
Countertop Preparation	13
Preparing the Countertop	13
Installation	16
Installing the Downdraft Vent	16
Connecting the Exhaust Duct	16
Making the Electrical Connection	17
Installing with a Cooktop/Range	18
Operation	19
Verifying the Operation	19


4 Safety

IMPORTANT SAFETY INSTRUCTIONS

Safety Precautions

Do not attempt to install or operate your unit until you have read the safety precautions in this manual. Safety items throughout this manual are labeled with a Warning or Caution based on the risk type.

Definitions

 This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

IMPORTANT

Indicates installation, operation or maintenance information which is important but not hazard related.

SAFETY PRECAUTIONS

WARNING

- To reduce the risk of fire, electric shock, or injury to persons, observe the following:
 - a) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
 - b) Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guidelines and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
 - c) When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
 - d) Ducted fans must always be vented outdoors.
 - e) Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.
- To reduce the risk of fire, use only metal ductwork.
- **Grounding Instructions**

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet this is properly installed and grounded.
- Improper grounding can result in a risk of electric shock.
- Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.
- Do not use an extension cord. If the power supply cord is too short, have a qualified electrician install an outlet near the appliance.

6 Safety

CAUTION

To reduce the risk of fire and electric shock, install this retractable ventilation unit only with remote blower models rated maximum 8 amp (total of all interconnected remote blowers).

VERIFY PACKAGE CONTENTS

- Use & Care Guide
- Anchoring Legs and Hardware

INSTALLATION PLANNING

A qualified technician must complete the installation of this appliance. Proper installation is your responsibility.

Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.

Plan the installation so that all required minimum clearances between the cooktop, overhead cabinets and adjacent vertical walls are provided. Refer to the cooktop/range installation instructions for the minimum dimensions specific to the particular appliance being installed.

The vent system is designed to remove the contaminants and by-products that result when cooking with gas or electric appliances. The vent system consists of the vent intake along with a remote blower. The raised vent downdraft systems are compatible for use with select cooktops and ranges, therefore, these instructions offer specific guidelines for mounting the raised vents behind cooktops and ranges.

Make sure that you have everything needed to complete the installation before proceeding.

8 Specifications and Dimensions

Raised Vent System Specifications		
Raised Vent Model No.	For Use With Gas Cooktops	Duct Size
E30DD75ESS	E30GC64ESS	3 1/4"x10" & 10"
E36DD75ESS	E36GC65ESS	3 1/4"x10" & 10"
E46DD75ESS	E46GC66ESS/E46GC67ESS	3 1/4"x10" & 10"
E48DD75ESS	E46GC66ESS/E46GC67ESS	3 1/4"x10" & 10"

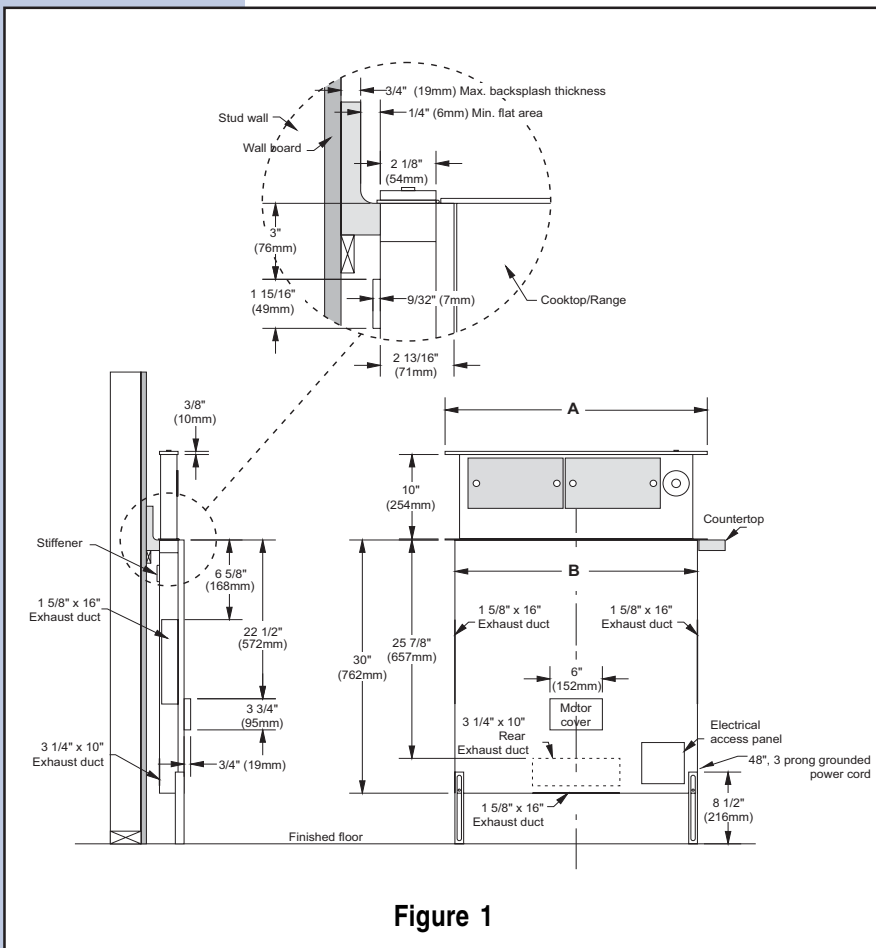


Figure 1

Model	Width "A"	Width "B"
E30DD75ESS	30" (762mm)	27 3/4" (705mm)
E36DD75ESS	36" (914mm)	33 3/4" (857mm)
E46DD75ESS	46" (1168mm)	43 3/8" (1102mm)
E48DD75ESS	48" (1219mm)	43 3/8" (1102mm)

REQUIREMENTS

WARNING

Failure to disconnect power may result in electrical shock or fire hazard! If the electric service provided does not meet the product specifications, do not proceed with the installation. Call the selling dealer or a licensed electrician.

It is the owner's responsibility to ensure that the electrical connection of this appliance is performed by a qualified electrician. The electrical installation, including minimum supply wire size and grounding, must be in accordance with the National Electric code ANSI/NFPA 70-1993* (or latest revision) and local codes and ordinances.

A copy of this standard may be obtained from:

National Fire Protection Association
1 Batterymarch Park
Quincy, Massachusetts 02269-9101

The correct 120VAC, 60Hz, 15A circuit must be supplied for this appliance from a separate, grounded, circuit that is protected by a properly sized circuit breaker or time delay fuse.

10 Duct Preparation

DUCT INSTALLATION

WARNING

- To reduce the risk of fire and to properly exhaust air, ducted fans must be vented to outside. Do not vent exhaust air into spaces within walls, ceilings, attics, crawl spaces or garages.
- Improper installation, adjustment, alteration, service, or maintenance can cause personal injury or property damage.
- To reduce the risk of fire, use only duct work materials deemed acceptable by state, municipal and local codes.

IMPORTANT









- Best performance is achieved by using round duct instead of rectangular, especially when elbows are required.
- If multiple elbows are needed, ensure that there is a minimum of 24" of straight duct between any two elbows.
- Avoid "S" or "back to back" configurations caused by adjacent elbows.
- Thermal breaks, such as a short section of non-metallic duct, should be used in areas of extreme cold.
- A back-draft damper at the duct outlet may also be required.
- Do not use flexible metal duct.
- Do not use duct work that is smaller in cross-sectional area than the recommended size duct.
- Do not rely on duct tape alone to seal duct joints. Use sheet metal screws as require to support the duct weight.
- The vent hood and cooking appliance(s) must be removable if service is required.
- Be certain that the duct work does not interfere with floor joists or wall studs.
- It is important to keep a minimum number of turns in the duct run, and to keep the run as short as possible.
- Do not restrict the air flow by reducing the duct cross-sectional areas when making hard joints or squeezing through a tight area.
- With concrete slab construction, "box-in" the duct work to prevent it from collapsing when the wet concrete is poured. Also allow room for electrical conduit.
- Cross-drafts or air currents caused by adjacent open windows or doors, HVAC outlets, and ceiling fans reduce vent efficiency.

Higher volumes of air exhausted by the vent system result in better overall removal of smoke and fumes from the kitchen. Longer duct runs and greater numbers of duct transitions reduce air volume, therefore **it is extremely important to keep duct runs as short and straight as possible.**

Model	Duct Size	Maximum Equivalent Straight Lengths
E30DD75ESS E36DD75ESS E46DD75ESS E48DD75ESS	10"	70'
	3 1/4" x 10"	60'

We recommend using a certified HVAC contractor for all installations.

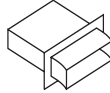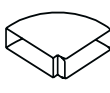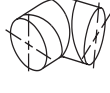To ensure that your installation meets this requirement, add the actual straight length of duct to the equivalent straight length of all duct fittings to determine the total equivalent straight length of duct. (Refer to the table on the right, which shows various common duct fittings with their equivalent straight lengths for various common duct sizes). If this total equivalent straight length is less than or equal to the maximum limits specified, then the installation is proper. Consider the duct size that corresponds to the majority of the duct used in the installation.

3 1/4" x 10" 90° Elbow  15 Feet	3 1/4" x 10" 45° Elbow  7 Feet	3 1/4" x 10" Wall Cap  2 Feet	3 1/4" x 10" 90° Flat Elbow  20 Feet
Transition 3 1/4" x 10" to Round  10" Diameter - 4 Feet	45° Elbow - Round Duct  10" Diameter - 2 Feet	90° Transition 3 1/4" x 10" to 10" Round  25 Feet	90° Elbow - Round Duct  10" Diameter - 5 Feet

Sample problem - for reference only:

Given a system installation having 25 feet of 3 1/4" x 10" rectangular duct, one (1) 90-degree 3 1/4" x 10" elbow, and one (1) 3 1/4" x 10" to 10" round transition, would this installation be proper?

Solution:

1. Add the total length of straight duct:
25' (of 3 1/4" x 10") = 25'.
2. Using Table above, determine the equivalent straight length of all duct fittings:
90-degree 3 1/4" x 10" elbow = 15'. 3 1/4" x 10" to 10" round transition = 4'.

12 Duct Preparation

3. Add (1) and (2) to determine the total equivalent straight length of the complete duct system: $25' + 15' + 4' = 44'$ total equivalent straight duct length.
4. For the system with $3\frac{1}{4}" \times 10"$ duct, the maximum allowable total equivalent straight length of duct is 60 feet. Thus, this proposed installation is proper.

After determining that your proposed duct work meets the maximum duct length requirement, proceed with the location planning.

PREPARING THE COUNTERTOP

WARNING

- To reduce the risk of personal injury caused by reaching over a hot appliance, cabinet storage space located directly above the cooktop should be avoided.
- Do not store combustible materials or items adversely affected by heat in cabinet areas above the appliance.
- Follow the instructions regarding minimum safe clearances and installation location. Failure to do so may result in a fire or safety hazard.

Plan the installation so that all required minimum clearances between the cooktop, overhead cabinets and adjacent vertical walls are provided. Refer to the cooktop installation instructions for the minimum dimensions specific to the particular appliance being installed.

The raised vent system is designed to remove the contaminants and by-products that result when cooking with gas or electric appliances. The vent system consists of the vent intake along with a remote blower. The raised vent downdraft systems are compatible for use with select cooktops, therefore, these instructions offer specific guidelines for mounting the raised vents behind the cooktops.


IMPORTANT

Verify that the raised vent and blower being installed are a matched pair before beginning the installation. (Part number 5304444802 and E30DD75ESS, E36DD75ESS, E46DD75ESS, and E48DD75ESS.)


For installation of the raised vent system, provide an opening in the countertop as shown in the **Countertop Preparation** section. Position the cutout so all required minimum clearances are met. Make certain that the minimum flat countertop area meets or exceeds the combined overall width and overall depth, as shown in **Figures 2, 3 and 4** that follow.

14 Countertop Preparation

Electrolux Icon Model No.	Cutout "A"	Cutout "B"
E30GC64ESS	27 1/2" (698 mm)	-
E30EC65ESS	30" (762 mm)	27 1/2" (698 mm)
E36GC65ESS	33 3/4" (857 mm)	-
E36EC65ESS	36" (914 mm)	33 3/4" (857 mm)
E46GC66ESS	44 1/2" (1130 mm)	43 1/2" (1105 mm)
E46GC67ESS	44 1/2" (1130 mm)	43 1/2" (1105 mm)

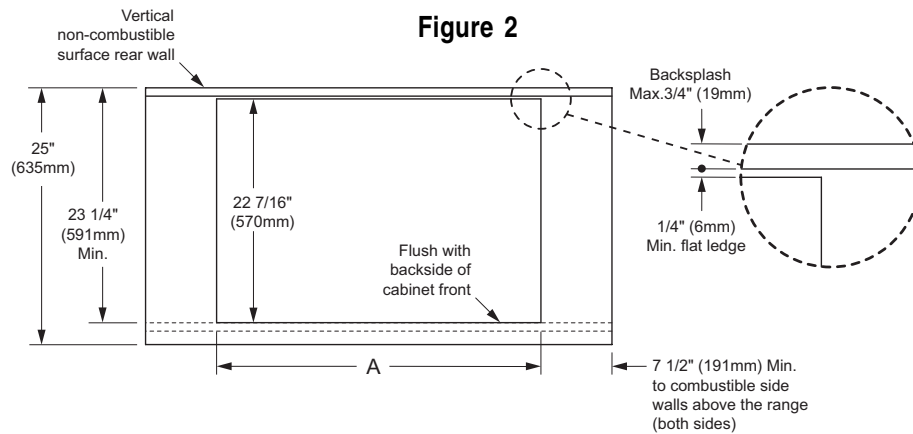


**Overall Cutout Dimensions
(E30GC64ESS and E36GC65ESS)**

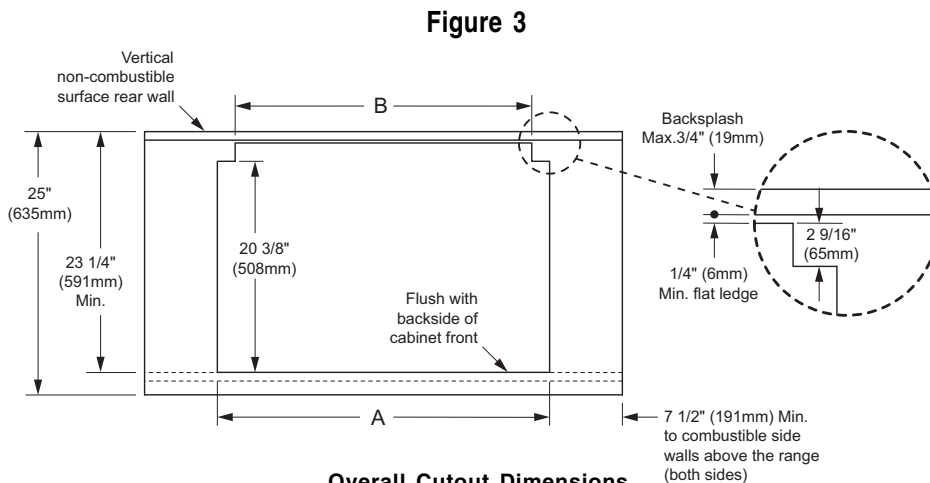

**Overall Cutout Dimensions
(E30EC65ESS and E36EC65ESS)**

Figure 4

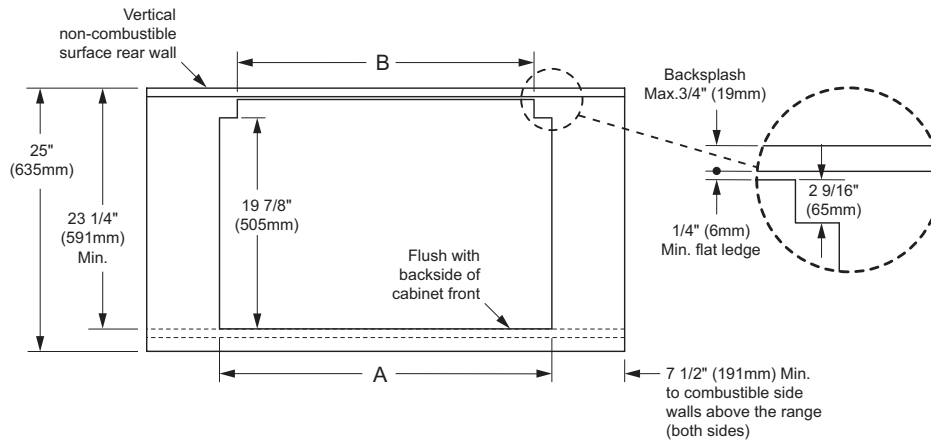

**Overall Cutout Dimensions
(E46GC66ESS and E46GC67ESS)**

16 Installation

INSTALLING THE DOWNDRAFT VENT

IMPORTANT

The vent must be installed in a vertical orientation. Do not mount the vent on a slant or angle.

Remove the knockout from the plenum by cutting the tape and metal cross overs to remove the insert.

Loosely attach the anchoring legs to the left and right sides of the plenum using the hex nuts provided. Place the vent into the rear of the countertop cutout. Adjust the anchoring leg height so that the end caps are gently resting on the counter, then tighten the hex nuts. Secure the anchoring legs to the cabinet/floor with the screws provided.

CONNECTING THE EXHAUST DUCT

IMPORTANT

Use duct tape and sheet metal screws to seal the connection between the blower outlet and duct. Support the duct weight as necessary to ensure sealed joints.

For the side or bottom knockouts use the supplied transition. For the rear knockout attach a 3 1/4" x 10" duct.


MAKING THE ELECTRICAL CONNECTION

WARNING

- Ensure that the power supply is disconnected before proceeding.
- Verify that the power supply matches the ratings found on the appliance data plate before proceeding.
- The complete appliance must be properly grounded at all times when electrical power is applied.
- Do not ground the appliance with the neutral (white) house supply wire. A separate ground wire must be utilized.
- If aluminum house supply wiring is used, splice the appliance copper wires to the aluminum house wiring with special connectors designed and agency-certified for this purpose. Follow the connector manufacturer's recommended procedure carefully. Improper connection can result in a fire hazard.
- Failure to complete electrical connections properly may result in a damaged or nonfunctional system. Follow the wiring diagrams carefully to ensure a proper installation.

Both vent systems require a properly grounded, 120 VAC, 60 Hz., 15 Amp electrical service. Maximum full line load is 8 amps. Always use a dedicated circuit. Do not use same circuit that the cooktop is using.

Make all electrical connections between the vent and blowers, then connect power to the vent as per the wiring diagrams. Use wire nuts provided and electrical tape to secure all wiring connections at the blowers. See wiring diagram in **Figure 5**.

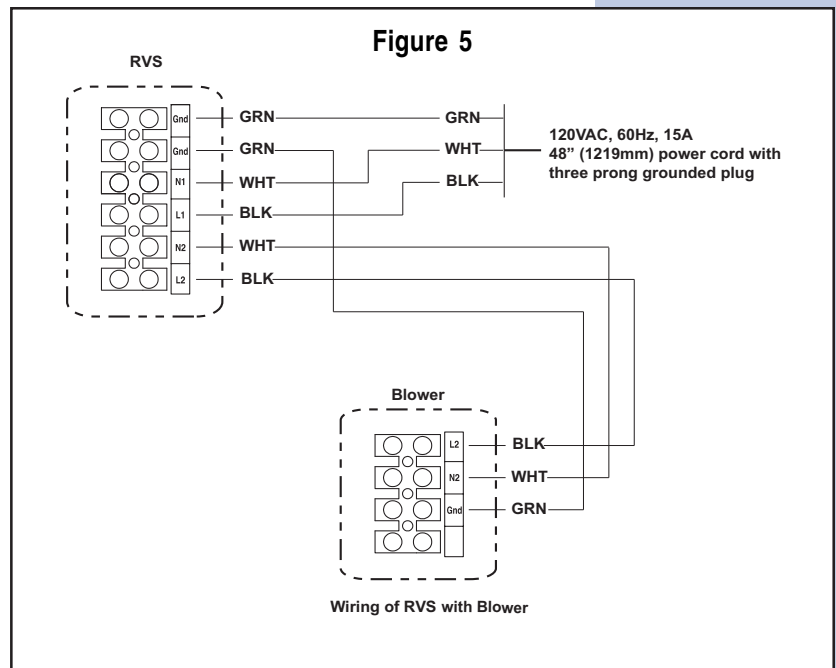

18 Installation

INSTALLING WITH A COOKTOP

WARNING


- The cooktops have very different installation requirements. Please make sure you read the Installation Instructions for the accompanying cooktop thoroughly before continuing the installation process.
- After the cooktop has been installed, ensure that the top cap on the vent intake does not catch on the back edge of the cooktop when the intake is lowered. If interference does occur, adjust the position of the cooktop by moving it against the front edge of the countertop cutout, then re-secure the cooktop to the countertop. Also, ensure that the vent anchoring legs have been properly secured to the cabinet base using the screws provided in the instructions envelope. Failure to eliminate interference may result in permanent damage to the vent.

VERIFYING THE OPERATION

WARNING

- If the vent system is not operational after completion of the installation, do not attempt to repair it. See the Problem Solving section of the Use & Care Guide, then call a qualified service technician if the system is still not functional.
- Always disconnect the appliances from the electrical power when servicing them.
- Install the two (2) front filters and the grill prior to operating the vent. Refer to the Use & Care Guide for instructions regarding filter and grill installation.

- Press the top cap up/down switch once to raise the vent to its operating position.
- In the up position, turn the variable speed control switch in both directions to verify that the blower is operating correctly.
- Press the top cap up/down switch once to lower the vent.

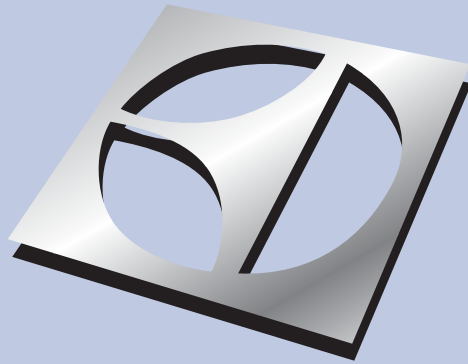

Installation Instructions

External Blower Assembly for
Electrolux Retractable Ventilation Systems




2 Safety

IMPORTANT SAFETY INSTRUCTIONS

Safety Precautions

Do not attempt to install or operate your unit until you have read the safety precautions in this manual. Safety items throughout this manual are labeled with a Warning or Caution based on the risk type.

Definitions

 This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

IMPORTANT

Indicates installation, operation or maintenance information which is important but not hazard related.

SAFETY PRECAUTIONS

WARNING

- To reduce the risk of fire, electric shock, or injury to persons, observe the following:
 - a) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
 - b) Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guidelines and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
 - c) When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
 - d) Ducted fans must always be vented outdoors.
 - e) Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.
 - f) Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.
 - g) Blower must not be installed in a ceiling thermally insulated to a value greater than R40.
 - h) Blower must not be installed in furnace ductwork.
- To reduce the risk of fire, use only metal ductwork.

4 Safety

SAFETY PRECAUTIONS

WARNING

- To reduce the risk of a range top grease fire:
 - a) Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.
 - b) Always turn hood ON when cooking at high heat or when flambing food (i.e. Crepes Suzette, Cherries Jubilee, Peppercorn Beef Flambe’).
 - c) Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter.
 - d) Use proper pan size. Always use cookware appropriate for the size of the surface element.
- To reduce the risk of injury to persons in the event of a range top grease fire, observe the following:
 - a) **SMOTHER FLAMES** with a close-fitting lid, cookie sheet, or metal tray, then turn off the burner. **BE CAREFUL TO PREVENT BURNS.** If the flames do not go out immediately, **EVACUATE AND CALL THE FIRE DEPARTMENT.**
 - b) **NEVER PICK UP A FLAMING PAN** - You may be burned.
 - c) **DO NOT USE WATER**, including wet dishcloths or towels - a violent steam explosion will result.
 - d) Use an extinguisher **ONLY** if:
 - 1) You know you have a Class ABC extinguisher, and you already know how to operate it.
 - 2) The fire is small and contained in the area where it started.
 - 3) The fire department is being called.
 - 4) You can fight the fire with your back to an exit.

SAFETY PRECAUTIONS

CAUTION

- For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.
- To reduce risk of fire and to properly exhaust air, be sure to duct air outside – Do not vent exhaust air into spaces within walls or ceilings or into attics, crawl spaces or garages.
- This blower assembly is approved for use with the following Electrolux retractable ventilation systems: E30DD75ESS, E36DD75ESS, E46DD75ESS and E48DD75ESS only. Use of this blower assembly with any other product or in any other configuration is hazardous and voids the product warranty.

NOTES

- Consult a licensed ventilation contractor or qualified technician for proper installation of exhaust ducting.
- Locate the cooking area for minimum cross drafts – away from doors and windows, when possible.
- Ducts must be of adequate size and duct runs should be as short and straight as possible. Where turns are necessary, keep turning radius as large and smooth as possible.
- The ducting must be air tight. Use a minimum of 2 sheet metal screws at every duct joint. Then, seal the duct joints with a high quality duct tape.
- In duct runs less than 10 equivalent straight feet, the remote blower may interfere with the cooktop burner performance due to the high volume of air moved. An adjustable damper (not included) should be installed in the ducting system. The damper can be adjusted so that proper ventilation and cooktop burner performance is achieved.
- Installation of duct work should be carefully planned if it is to go under a concrete slab floor. The duct trench should be boxed to prevent collapse from the wet cement. Be sure to allow room to run the electrical wiring and conduit.

6 Finding Information

READ AND SAVE THESE INSTRUCTIONS

Attach your sales receipt to this page for future reference.

NOTE

Installer: Leave instructions with owner.

Owner: Read your Retractable Ventilation System Use & Care Manual. It contains important safety information for operating this appliance. It also has many suggestions for getting the best results from your retractable ventilation system.

Read all instructions before installing the retractable vent.

For your safety, please read and observe all safety instructions. This guide will help you anticipate all installation connections.

QUESTIONS?

For toll-free telephone support in the U.S. and Canada:
1-877- 4ELECTROLUX (1-877-435-3287)

For online support and Internet product information:
www.electroluxusa.com

8 Planning for Installation

INSTALLATION PLANNING

A qualified technician must complete the installation of this appliance.

Carefully check the location where the remote blower is to be installed. The remote blower should be placed for convenient access. Make certain that electrical power can be provided in the selected location.

Plan the installation so that all minimum clearances are met or exceeded. Dimensions shown provide minimum clearances, unless otherwise noted.

SPECIFICATIONS AND DIMENSIONS

NOTE

All dimensional tolerances are $+ 1/16"$, $- 0"$ unless otherwise stated.

Before commencing installation, remove the top cover of the remote blower. Check to see if the blower wheel turns freely. Do not replace the top cover until the installation is complete.

**Blower Overall Dimensions
Top View**

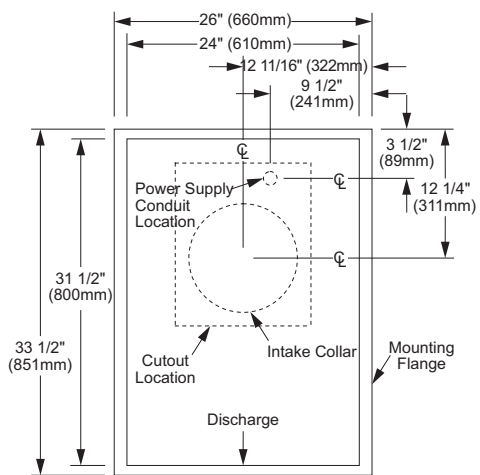


Figure 1

**Blower Overall Dimensions
Side View**

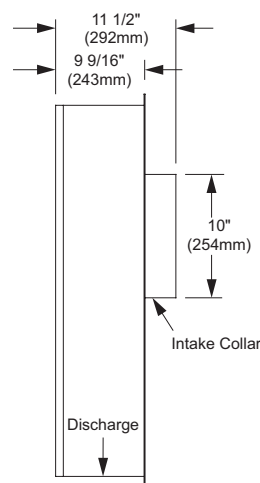


Figure 2

Blower Overall Dimensions

Model No.	Overall Chassis Width	Overall Chassis Height	Overall Chassis Length	Duct Diameter
5304444802	26" (660mm)	9 9/16" (243mm)	33 1/2" (851mm)	10" (254mm)

Blower Specifications

Model No.	Electrical Supply Requirements	Maximum Duct Length	Total Connected Load	Fan Rating*	Approx. Shipping Weight	Finish
5304444802	Refer to Ventilator Specifications	Max. 60 Equivalent Straight Feet	0.3kW (3A)	1600 CFM	55 lbs.	Galvanized (may be painted)

* The CFM Fan Rating is valued at 0" (zero-inch) static pressure.

10 Planning for Installation

NOTE

The blower must be sealed between the roof or wall and the underside of the flange with mastic to prevent leaks. For installation on a flat roof, or a roof with a pitch of less than 2:12, install the blower on a curb as shown below. Position the curb on flat roofs so that the discharge (low) end points away from the prevailing wind.

Blower Flat Roof Installation

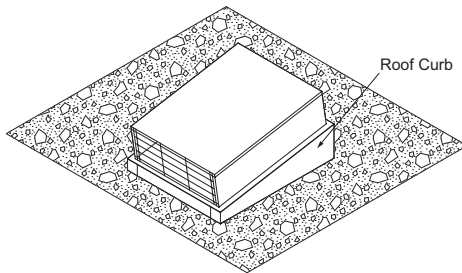


Figure 3

Blower Sloped Roof Installation

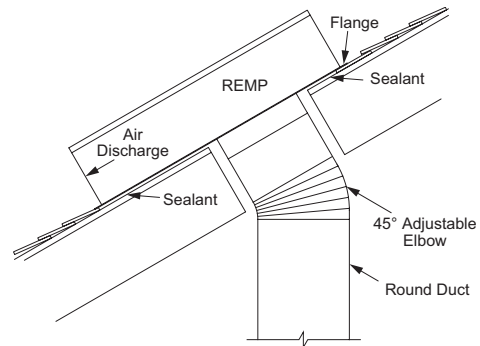


Figure 4

Blower Sloped Roof Installation Dimensions


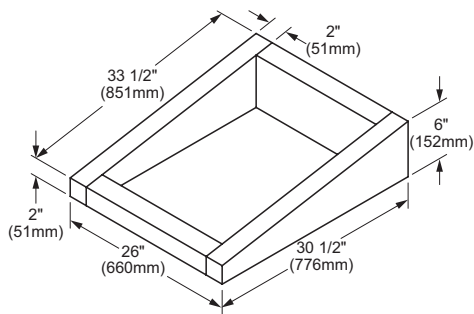


Figure 5

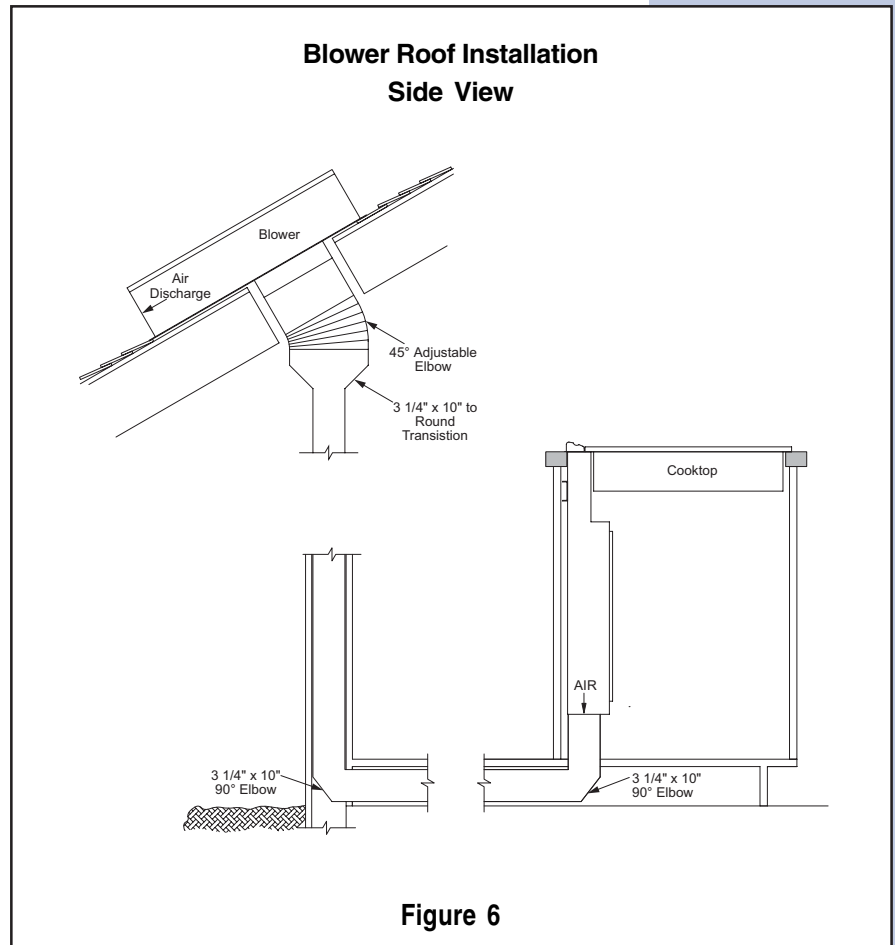

12 Making the Electrical Connection

ELECTRICAL CONNECTION

WARNING

Ensure that the power supply is disconnected before proceeding.

Verify that the power supply matches the ratings found on the appliance data plate before proceeding.

The complete appliance must be properly grounded at all times when electrical power is applied.

Do not ground the appliance with the neutral (white) house supply wire. A separate ground wire must be utilized.

If aluminum house supply wiring is used, splice the appliance copper wires to the aluminum house wiring with special connectors designed and agency-certified for this purpose. Follow the connector manufacturer's recommended procedure carefully. Improper connection can result in a fire hazard.

Failure to complete electrical connections properly may result in a damaged or non-functional system. Follow the wiring diagrams carefully to ensure a proper installation.

It is the owner's responsibility to ensure that a qualified electrician performs the electrical connection of this appliance. The electrical installation, including minimum supply wire size, must comply with the latest revision of the National Electric Code ANSI/NFPA 70* and local codes and ordinances.

A copy of this standard may be obtained from:

National Fire Protection Association
1 Batterymarch Park
Quincy, Massachusetts 02269-9101

NOTE

Make all electrical connections between the vent and blowers, then connect power to the vent as per the wiring diagram shown.

Use wire nuts and electrical tape to secure all wiring connections at the blowers.

BLOWER INSTALLATION

Mount the blower to the wall or roof using screws, through mounting trim flange.

Verifying Proper Operation

- 1 Temporarily re-install the remote blower cover, using 2 screws per side).
- 2 Turn on the power supply at the circuit breaker.
- 3 Refer to the Retractable Vent Installation Instructions for further instructions on verifying the proper operation.

**Wiring of Retractable Ventilation System
(E30DD75ESS, E36DD75ESS, E46DD75ESS
and E48DD75ESS)**

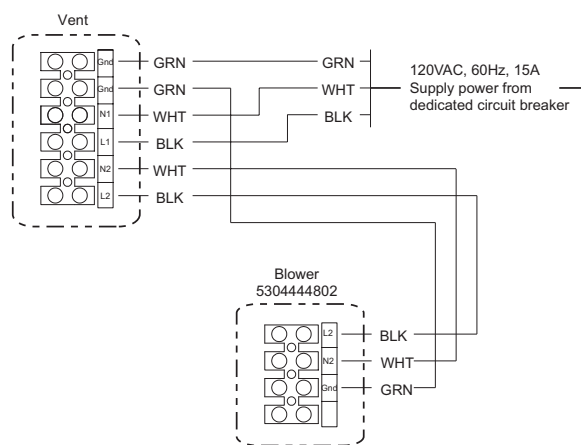


Figure 7

IMPORTANT

If the remote blower does not operate properly, follow these troubleshooting steps:

1. Verify that power is being supplied to the Retractable Vent and the remote blower.
2. Check the electrical connections to ensure that the installation has been completed correctly.
3. Repeat the above test.
4. If the appliance still does not work, contact Electrolux at 1-877-4Electrolux. Do not attempt to repair the appliance yourself. Electrolux is not responsible for service required to correct a faulty installation.



1-877-4Electrolux

www.electroluxusa.com
www.electroluxca.com