

SERIAL COMMUNICATION LCD-DLP PROJECTOR USERS MANUAL

R5975236
Index 09
Revision date: 02112004

Index

Index	2
index.....	3
1. Communication basics	13
communication protocol.....	14
communication protocol.....	15
communication settings.....	16
hardware	17
hardware	18
hardware	19
syntax	20
syntax	21
abbreviations	22
2. Elementary commands.....	23
acknowledge – no acknowledge	24
answer	25
balance, decrement.....	26
balance, increment	27
bass, decrement	28
bass, increment.....	29
brightness, decrement.....	30
brightness, increment.....	31
color, decrement	32
color, increment	33
contrast, decrement.....	34
contrast, increment.....	35
infrared control.....	36
infrared control.....	37
infrared control.....	38
infrared control.....	39
mute audio, read	40
mute audio, read	41
mute audio, write off.....	42
mute audio, write on	43
mute video, read	44
mute video, read	45
mute video, write off.....	46
mute video, write on	47
phase, decrement	48
phase, increment.....	49
projector status, read	50
projector status, read	51
projector status, write off	52
projector status, write on.....	53
sharpness, decrement	54
sharpness, increment	55
source/slot, read number.....	56
source/slot, read number.....	57
source/slot, write number	58
tint, decrement.....	59

tint, increment	60
treble, decrement	61
treble, increment	62
volume, decrement	63
volume, increment	64
3. Advanced commands.....	65
2 line LCD, read.....	66
2 line LCD, read.....	67
2 line LCD, read.....	68
2 line LCD, read backlight	69
2 line LCD, read backlight	70
2 line LCD, read cursor	71
2 line LCD, read cursor	72
2 line LCD, read format	73
2 line LCD, read format	74
2 line LCD, read text	75
2 line LCD, read text	76
2 line LCD, write backlight	77
2 line LCD, write backlight	78
2 line LCD, write clear	79
2 line LCD, write clear	80
2 line LCD, write cursor	81
2 line LCD, write cursor	82
2 line LCD, write text	83
2 line LCD, write text	84
800-peripheral, read output module.....	85
800-peripheral, read output module.....	86
800-peripheral, write output module	87
800-peripheral, write output module	88
alpha blending, read	89
alpha blending, write.....	90
balance, read	91
balance, read	92
balance, write	93
bass, read.....	94
bass, read.....	95
bass, write	96
baud rate pc, read	97
baud rate pc, read	98
baud rate pc, write.....	99
blanking bottom, decrement	100
blanking bottom, increment	101
blanking bottom, read	102
blanking bottom, read	103
blanking bottom, write	104
blanking bottom, write	105
blanking left, decrement.....	106
blanking left, increment.....	107
blanking left, read.....	108
blanking left, read.....	109
blanking left, write	110
blanking left, write	111
blanking right, decrement.....	112
blanking right, increment.....	113

blanking right, read.....	114
blanking right, read.....	115
blanking right, write.....	116
blanking right, write.....	117
blanking top, decrement.....	118
blanking top, increment.....	119
blanking top, read.....	120
blanking top, read.....	121
blanking top, write.....	122
blanking top, write.....	123
brightness, read	124
brightness, read	125
brightness, write.....	126
brightness, write.....	127
button, read macro	128
button, read macro	129
button, write macro	130
clamp delay, decrement	131
clamp delay, increment	132
clamp delay, read	133
clamp delay, read	134
clamp delay, write	135
clamp edge, read.....	136
clamp edge, read.....	137
clamp edge, write leading	138
clamp edge, write trailing	139
clamp width, decrement	140
clamp width, increment	141
clamp width, read	142
clamp width, read	143
clamp width, write	144
color, read	145
color, read	146
color, write	147
color balance, decrement.....	148
color balance, increment.....	149
color balance, read	150
color balance, read	151
color balance, write.....	152
color balance, write.....	153
color key, read (1).....	154
color key, read (2).....	155
color key, write (1)	156
color key, write (2)	157
color temperature, decrement gain	158
color temperature, increment gain	159
color temperature, read.....	160
color temperature, read.....	161
color temperature, read gain.....	162
color temperature, write	163
color temperature, write	164
color temperature, write gain	165
contrast, read.....	166
contrast, read.....	167
contrast, write.....	168

contrast, write.....	168
communication port interface standard, read.....	169
communication port interface standard, read.....	170
communication port interface standard, write.....	171
communication port interface standard, write.....	172
diagnosis 3, read	173
diagnosis 3, read	174
diagnosis 3, read	175
diagnosis 3, read	176
diagnosis 3, read	177
diagnosis 3, read	178
dimming, decrement	179
dimming, increment.....	180
dimming, read.....	181
dimming, read.....	182
directory, write to profile	183
fade audio, decrement.....	184
fade audio, decrement.....	185
fade audio, increment	186
fade audio, increment	187
fade audio, read	188
fade audio, read	189
fade audio, write.....	190
fade audio extern, decrement.....	191
fade audio extern, increment.....	192
fade audio extern, read	193
fade audio extern, read	194
fade audio extern, write.....	195
fade audio intern, decrement	196
fade audio intern, increment	197
fade audio intern, read	198
fade audio intern, read	199
fade audio intern, write	200
field polarity, read	201
field polarity, read	202
field polarity, write.....	203
field polarity, write.....	204
field select, read	205
field select, read	206
field select, write	207
field select, write	208
file, copy	209
file, copy	210
file, delete	211
file, delete	212
file, list.....	213
file, list.....	214
file, list.....	215
file, list active.....	216
file, list active.....	217
file, load	218
file, move	219
file, move	220
file, read.....	221
file, read.....	222

file, read	223
file, read permission	224
file, rename	225
file, rename	226
file, rename	227
file, write	228
file, write	229
file, write	230
frame delay, read	231
frame delay, read	232
frame delay, write off	233
frame delay, write on	234
freeze, write off	235
freeze, write on	236
gamma, decrement	237
gamma, increment	238
gamma, read	239
gamma, read	240
gamma, write	241
horizontal period, read	242
horizontal period, read	243
horizontal period, write	244
horizontal period, write	245
image orientation, read	246
image orientation, write	247
information display, read	248
information display, read	249
infrared ports, read	250
infrared ports, read	251
infrared ports, write	252
installation, read	253
installation, read	254
installation, write	255
interlaced, read	256
interlaced, read	257
interlaced, write off	258
interlaced, write on	259
internal pattern, read	260
internal pattern, write	261
internal pattern, write	262
internal pattern, write	263
internal pattern, write	264
keystone horizontal, decrement	265
keystone horizontal, increment	266
keystone horizontal, read	267
keystone horizontal, read	268
keystone horizontal, write	269
lamp, read article number	270
lamp, read article number	271
lamp, read CLO status	272
lamp, read CLO status	273
lamp, read history	274
lamp, read maximum run time	275
lamp, read maximum run time	276
lamp, read message run time	277

lamp, read message run time	278
lamp, read nominal current	279
lamp, read nominal current	280
lamp, read power.....	281
lamp, read power.....	282
lamp, read run time	283
lamp, read run time	284
lamp, read serial number (1).....	285
lamp, read serial number (1).....	286
lamp, read serial number (2).....	287
lamp, read serial number (2).....	288
lamp, read status.....	289
lamp, read status.....	290
lamp, read strikes.....	291
lamp, read strikes.....	292
lamp, read warning run time	293
lamp, read warning run time	294
lamp, reset run time	295
lamp, write CLO status	296
lamp, write CLO status	297
lamp, write on/off	298
lamp, write status.....	299
language, read	300
language, read	301
language, write	302
layout, load.....	303
layout, read	304
layout, read	305
layout, save	306
layout, write.....	307
layout, write.....	308
lens, anamorphic	309
lens, anamorphic	310
lens, bridge.....	311
lens, focus	312
lens, shift	313
lens, tilt.....	314
lens, zoom	315
lines active, decrement.....	316
lines active, increment	317
lines active, read	318
lines active, read	319
lines active, write.....	320
line start, decrement.....	321
line start, increment.....	322
line start, read	323
line start, read	324
line start, write.....	325
lines total, decrement.....	326
lines total, increment	327
lines total, read	328
lines total, read	329
lines total, write	330
lock audio, read.....	331
lock audio, read.....	332

lock audio, write	333
logo, read background	334
logo, read background	335
logo, read hot-key	336
logo, read hot-key	337
logo, read position	338
logo, read status.....	339
logo, write background	340
logo, write hot-key	341
logo, write position	342
logo, write status.....	343
macro, execute (1)	344
macro, read (1)	345
network, read configuration	346
network, read configuration	347
network, read configuration	348
network, write configuration.....	349
network, write configuration.....	350
menu, exit	351
MOCA, read version	352
MOCA, read version	353
MOCA, set blue to midposition.....	354
MOCA, set green to midposition.....	355
MOCA, set red to midposition	356
MOCA, set to midposition.....	357
MOCA, write blue	358
MOCA, write blue	359
MOCA, write green	360
MOCA, write green	361
MOCA, write red	362
MOCA, write red	363
overlay palette, write	364
overlay palette, write	365
panel, read size	366
panel, read size	367
peripheral source, write	368
peripheral source, write	369
phase, read.....	370
phase, read.....	370
phase, read.....	371
phase, write	372
pip, read source.....	373
pip, read window	374
pip, read window	375
pip, write source.....	376
pip, write window	377
pip, write window	378
pixels active, decrement	379
pixels active, increment.....	380
pixels active, read.....	381
pixels active, read.....	382
pixels active, write	383
pixel start, decrement	384
pixel start, increment	385
pixel start, read	386

pixel start, read	387
pixel start, write	388
pixels total, decrement	389
pixels total, increment	390
pixels total, read	391
pixels total, read	392
pixels total, write	393
profile, read count	394
profile, read entry	395
programmable blanking, write	396
programmable blanking, write	397
programmable blanking, write	398
programmable blanking, write	399
programmable blanking, write	400
programmable blanking, write	401
projector, read run time	402
projector, read run time	403
projector, read serial number	404
projector, read serial number	405
projector, write serial number	406
projector, read type (1)	407
projector, read type (1)	408
projector, read type (2)	409
projector, read type (2)	410
projector, read address	411
projector, write address	412
sharpness, read	413
sharpness, read	414
sharpness, write	415
sharpness, write	416
shift horizontal, decrement	417
shift horizontal, increment	418
shift horizontal, read	419
shift horizontal, read	420
shift horizontal, write	421
shift vertical, decrement	422
shift vertical, increment	423
shift vertical, read	424
shift vertical, read	425
shift vertical, write	426
size horizontal, decrement	427
size horizontal, increment	428
size horizontal, read	429
size horizontal, read	430
size horizontal, write	431
size vertical, decrement	432
size vertical, increment	433
size vertical, read	434
size vertical, read	435
size vertical, write	436
shutter, close	437
shutter, open	438
shutter, read	439
shutter, read	440
soft edge, read status	441

soft edge, read status	442
soft edge, write status.....	443
soft edge black level, decrement.....	444
soft edge black level, increment	445
soft edge black level, read	446
soft edge black level, read	447
soft edge black level, write.....	448
soft edge size, decrement	449
soft edge size, increment.....	450
soft edge size, read.....	451
soft edge size, read.....	452
soft edge size, write	453
software, read language	454
software, read language	455
software, read type.....	456
software, read type.....	457
software, read version	458
source/slot, read	459
source/slot, read number+mode.....	460
source/slot, read number+mode.....	461
source/slot, read number+mode.....	462
source/slot, read number+mode.....	463
source/slot, write number+mode	464
source/slot, write number+mode	465
source/slot, write number+mode	466
source/slot, write number+mode	467
sync, read.....	468
sync, read.....	469
sync, write fast.....	470
sync, write slow.....	471
text, write off	472
text, write on	473
tint, read	474
tint, read	475
tint, write	476
treble, read	477
treble, read	478
treble, write	479
version, read.....	480
version, read.....	481
version, read.....	482
vertical refresh, read	483
vertical refresh, read	484
vertical refresh, write synchronous.....	485
vertical refresh, write asynchronous.....	486
vertical sync polarity, read.....	487
vertical sync polarity, read.....	488
vertical sync polarity, write leading	489
vertical sync polarity, write trailing	490
volume, read.....	491
volume, read.....	492
volume, write	493
Appendix: Command summary.....	494
appendix: command summary	495

appendix: command summary496
appendix: command summary497
appendix: command summary498
appendix: command summary499
appendix: command summary500
appendix: command summary501
appendix: command summary502
appendix: command summary503
appendix: command summary504
appendix: command summary505
appendix: command summary506
appendix: command summary507
appendix: command summary508
appendix: command summary509



1. Communication basics

communication protocol

Communication protocol summary

Start byte	\xfe
Projector address	
Command byte(s)	
Data bytes ^(OPTIONAL)	
Checksum byte	
Stop byte	\xff

■ Start byte

The "start byte" informs the projector (in case of transmission) or the computer (in case of reception) that a new data transfer will take place.

■ Projector address:

The "projector address" defines the address of the projector the computer wants to talk to (in case of transmission) or the address of the projector that answers (in case of reception).

The maximum number of projectors that can be addressed by one computer is 256.

■ Command byte(s):

There is at least one command byte to define the action to be performed. Commands that are not often used or complex commands can take more than one byte.

All command bytes that are sent by the computer to get information out of the projector are repeated in the answer-data-transfer of the projector.

■ Data bytes^(OPTIONAL):

Whether the command bytes are followed by one or more data bytes depends on the contents of the command bytes.

(Some commands are not followed by data bytes at all !)

communication protocol

■ Checksum byte:

The "checksum byte" is used to detect errors during transmission or reception.

Formula:

Checksum byte

= (Projector address + Command bytes + Data bytes) modulo 256

■ Stop byte:

The "stop byte" informs the projector (in case of transmission) or the computer (in case of reception) that the data transfer is complete and that the interpretation of the command and data bytes can start.

Any command byte, data byte or checksum byte that equals \x80, \xfe or \xff has to be converted !

Transmission:

- Instead of \x80, send \x80 followed by \x00.
- Instead of \xfe, send \x80 followed by \x7e.
- Instead of \xff, send \x80 followed by \x7f.

Reception:

- Replace \x80 followed by \x00 with \x80.
- Replace \x80 followed by \x7e with \xfe.
- Replace \x80 followed by \x7f with \xff..

communication settings

Communication settings summary

Baud rate	see Owner's Manual
Data bits	8
Parity	no
Stop bits	1

■ Baud Rate:

Defines the speed of the data transfer.

The baud rate can be set, depending on the type of projector, using the dip switches on the processor board of the projector or using the menu structure.

Consult the Owner's Manual of the projector on how to change the baud rate setting !

■ Data Bits:

Eight data bits are used for each character of the data transfer.

■ Parity:

There is NO parity bit used to perform error checking.

■ Stop Bits:

One stop bit is used to define the end of a character.

- Connector labelled "RS232 IN":

This female D9-pin connector is used to connect the projector with the computer.

- Connector labelled "RS232 OUT":

This male D9-pin connector is used to drive the next projector in a chain.

- Pin-out:

The pin-out is the 'standard' PC-AT convention, which is:

Pin #	Name	Full name
1	CD	Carrier Detect
2	RxD	Received Data
3	TxD	Transmitted Data
4	DTR	Data Terminal Ready
5	GND	Signal Ground
6	DSR	Data Set Ready
7	RTS	Request To Send
8	CTS	Clear To Send
9	RI	Ring Indicator


- Cable (IBM PC or compatible ⇔ projector):

D9 female	1		1	D9 male
	CD		CD	
	2		2	
	RxD		RxD	
	3		3	
	TxD		TxD	
	4		4	
	DTR		DTR	
	5		5	
	GN		GN	
	D		D	
	6		6	
	DSR		DSR	
	7		7	
	RTS		RTS	
	8		8	
	CTS		CTS	
	9		9	
	RI		RI	

order number R9827560 (cable length = 15m)

order number R9827570 (cable length = 30m)

■ Cable (MAC ⇔ projector):

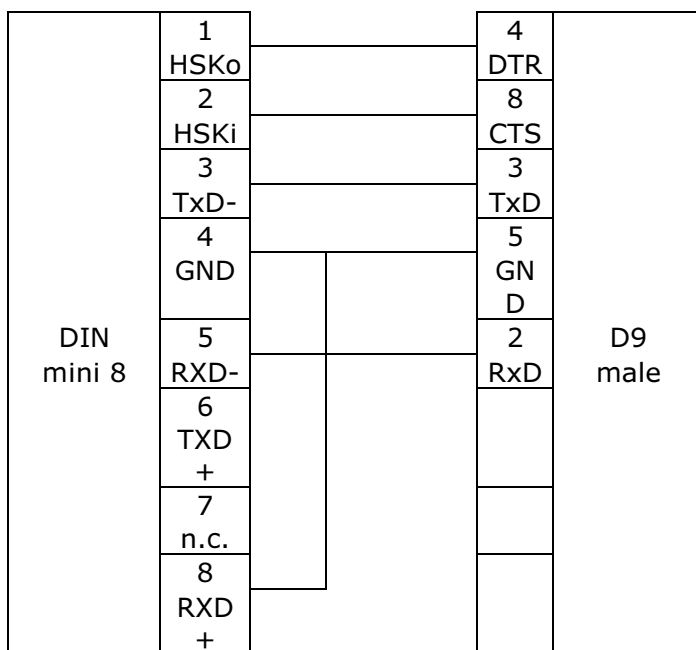

order number R9827640 (D9-DIN mini8; cable length = 1m)

order number R9827560 (D9-D9; cable length = 15m)

order number R9827570 (D9-D9; cable length = 30m)

■ Signal levels:

State	Voltage
off = 1	-9V
on = 0	+9V

■ Characters:

In this manual, all characters are expressed using the C-language syntax:

decimal values	<i>ddd</i>	<i>ddd</i> = 0..255
hexadecimal values	<i>\xhh</i>	<i>hh</i> = 00..ff

■ Negative values/numbers:

The 2s complement number system is used to express negative numbers.

■ Pascal-language string:

A Pascal-language string consists of one or more characters. The first character of the string contains the length of the string. Therefore, a Pascal-language string is limited to 255 characters.

Example: "hello world"

length	\x0b
'h'	\x68
'e'	\x65
'l'	\x6c
'l'	\x6c
'o'	\x6f
' '	\x20
'w'	\x77
'o'	\x6f
'r'	\x72
'l'	\x6c
'd'	\x64

■ C-language string:

A C-language string consists of one or more characters.

The last character of the string is always the NULL (\x00) character. Therefore, the length of a C-language string is determined by the position of the NULL character.

Example: "hello world"

'h'	\x68
'e'	\x65
'l'	\x6c
'l'	\x6c
'o'	\x6f
' '	\x20
'w'	\x77
'o'	\x6f
'r'	\x72
'l'	\x6c
'd'	\x64
NULL	\x00

■ Multi-byte value:

A multi-byte value consists of more than one byte. The first byte is the MSB (see abbreviations).

Example for a 4-byte value:

$$\backslash x01\backslash x20\backslash x50\backslash x30 = \backslash x01 * 256^3 + \backslash x20 * 256^2 + \backslash x50 * 256 + \backslash x30 = 536956976$$

■ Filename:

A filename is specified as a C-language string. This string has to follow some rules:

Filename												
0	1	2	3	4	5	6	7	8	9	10	11	12
x	x	x	x	x	x	x	x	.	y	z	z	NULL

- length string = 12

- x = character of the base name (= 8 characters)

'a'	'b'	'c'	'd'	'e'	'f'	'g'	'h'	'i'	'j'
'k'	'l'	'm'	'n'	'o'	'p'	'q'	'r'	's'	't'
'u'	'v'	'w'	'x'	'y'	'z'	'0'	'1'	'2'	'3'
'4'	'5'	'6'	'7'	'8'	'9'	'_'	'-'	'.'	

- y = kind of file (= 1 character)

's'	standard file predefined file stored in read-only memory
'c'	custom file file created by the user and stored in non-volatile read-write memory

- z = file index (= 2 characters)

'0'	'1'	'2'	'3'	'4'	'5'	'6'	'7'	'8'	'9'
-----	-----	-----	-----	-----	-----	-----	-----	-----	-----

- zz specifies the location in memory where the file is stored

- for standard files: zz = 00..maximum standard files

- for custom files: zz = 00..63 where 00 is reserved for the file 'none' .c00' (file loaded when no signal is applied).

- yzz is a unique combination. In other words, no two files can exist with the same extension yzz.

To specify more than one file you can use the question mark (?) wildcard character for x, y and z. This wildcard character can represent any possible character on that location.

Examples: "ntsc .c01", "svga_60v.s?7", "????????.???"

abbreviations

- CLO:
Constant Light Output.
- LCD:
Liquid Crystal Display.
- LSB:
Least Significant Byte.
In some exceptional cases: Least Significant Bit.
- MSB:
Most Significant Byte.
In some exceptional cases: Most Significant Bit.
- OSD:
On Screen Display.

2. Elementary commands

acknowledge – no acknowledge

■ Description:

When the projector receives a command, the command format is checked (see communication protocol), including the projector address and the checksum. If the command format contains an error, the command is ignored.

If the command format is correct, the projector checks if the command is a valid command. If so, the projector answers with an acknowledge and starts executing the command. If not, the projector answers with a no acknowledge.

■ Acknowledge Command:

Command[0]	\x00
Command[1]	\x06

No acknowledge Command:

Command[0]	\x00
Command[1]	\x15

■ Example:

Acknowledge received of a projector with address \x01.

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

answer

■ Description:

Each command can be preceded with the answer command. This will be ignored when the command is a read operation (read operations always return an answer).

■ Command:

Command[0]	\x00
Command[1]	\x03

■ Data:

Data[0]		
bit0	= 0	
bit1	= 1	return with "success" or "no success" after the command has been executed
bit2	= 0	
bit3	= 0	
bit4	= 0	
bit5	= 0	
bit6	= 0	
bit7	= 0	

■ Return data for success:

Command[0]	\x00
Command[1]	\x03
Data[0]	\x01

■ Return data for no success:

Command[0]	\x00
Command[1]	\x03
Data[0]	\x00

■ Projector type:

DP100, XLM-Series.

balance, decrement

- Description:
Decrement balance.

- Command:

Command[0]	\x23
Command[1]	\x0a

- Data:
No data bytes.
- Projector type:
All projectors with audio control.
- Example:
Decrement balance of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x0a
Checksum	\x2e
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

balance, increment

- Description:
Increment balance.

- Command:

Command[0]	\x22
Command[1]	\x0a

- Data:
No data bytes.
- Projector type:
All projectors with audio control.
- Example:
Increment balance of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x0a
Checksum	\x2d
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

bass, decrement

- Description:

Decrement bass.

- Command:

Command[0]	\x23
Command[1]	\x08

- Data:

No data bytes.

- Projector type:

All projectors with audio control.

- Example:

Decrement bass of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x08
Checksum	\x2c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

bass, increment

- Description:

Increment bass.

- Command:

Command[0]	\x22
Command[1]	\x08

- Data:

No data bytes.

- Projector type:

All projectors with audio control.

- Example:

Increment bass of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x08
Checksum	\x2b
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

brightness, decrement

- Description:
Decrement brightness.
- Command:

Command[0]	\x04
------------	------
- Data:
No data bytes.
- Projector type:
All projectors with audio control.
- Example:
Decrement the brightness of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x04
Checksum	\x05
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

brightness, increment

- Description:
Increment brightness.

- Command:

Command[0]	\x03
------------	------

- Data:
No data bytes.

- Example:

Increment the brightness of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x03
Checksum	\x04
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

color, decrement

- Description:
Decrement color (saturation).

- Command:

Command[0]	\x06
------------	------

- Data:
No data bytes.

- Example:

Decrement the color of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x06
Checksum	\x07
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

color, increment

- Description:
Increment color (saturation).
- Command:

Command[0]	\x05
------------	------
- Data:
No data bytes.
- Example:
Increment the color of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x05
Checksum	\x06
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

contrast, decrement

- Description:

Decrement contrast.

- Command:

Command[0]	\x02
------------	------

- Data:

No data bytes.

- Example:

Decrement contrast of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x02
Checksum	\x03
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

contrast, increment

- Description:

Increment contrast.

- Command:

Command[0]	\x01
------------	------

- Data:

No data bytes.

- Example:

Increment contrast of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x01
Checksum	\x02
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

infrared control

- Description:

Simulation of the infrared remote control unit.

The codes act in the same way as if they were sent by an infrared remote control unit or the local keypad.

- Command:

Command[0]	\x30
------------	------

- Data:

Possible codes used for Data[0]:

Key	Data[0]
*	\x77
0	\x19
1	\x10
2	\x11
3	\x12
4	\x13
5	\x14
6	\x15
7	\x16
8	\x17
9	\x18
ADDR	\x20
ADJUST	\x09
ARROW DOWN	\x05
ARROW LEFT	\x07
ARROW RIGHT	\x06
ARROW UP	\x04
BALANCE+	\x3e
BALANCE-	\x3f

infrared control

BASS+	\x3a
BASS-	\x3b
BRIGHTNESS	\x27
BRIGHTNESS+	\x2a
BRIGHTNESS-	\x2b
COLOR	\x30
COLOR+	\x2c
COLOR-	\x2d
CONTRAST	\x25
CONTRAST+	\x28
CONTRAST-	\x29
ENTER	\x0a
EXIT	\x08
F1	\x6b
F2	\x6c
F3	\x6d
F4	\x6e
F5	\x6f
FREEZ	\x1b
HELP	\x1e
MUTE	\x1f
PAUSE	\x0f
PHASE	\x32
PHASE+	\x34
PHASE-	\x35
SHARPNESS	\x33
SHARPNESS+	\x36
SHARPNESS-	\x37
STDBY	\x0e
TEXT	\x0d

infrared control

TINT	\x31
TINT+	\x2e
TINT-	\x2f
TREBLE+	\x3c
TREBLE-	\x3d
VOLUME+	\x38
VOLUME-	\x39

11	\x41	(see Notes)
12	\x42	(see Notes)
13	\x43	(see Notes)
14	\x44	(see Notes)

Optional, a second data byte (Data[1]) can be sent.

If this byte is 1, the projector handles the key (Data[0]) as it was sent using a remote control, taking all necessary delays into account.

Note that this optional byte is not supported by all projectors !

■ Notes:

Key 11, 12, 13 and 14 can only be used in a DP100.

infrared control

■ Example:

Select source 3 of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x30
Data[0]	\x12
Checksum	\x43
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

mute audio, read

- Description:
Read the status of mute audio.

- Command:

Command[0]	\x21
Command[1]	\x3d

- Data:
No data bytes.

- Return Data:

Data[0] = status mute audio.

Mute audio	Data[0]
Disabled	\x00
Enabled	\x01

- Projector type:
All projectors with audio control.

mute audio, read

■ Example:

Read the status of mute audio of a projector with address \x01. Suppose the audio is muted.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x3d
Checksum	\x5f
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x3d
Data[0]	\x01
Checksum	\x60
Stop	\xff

mute audio, write off

- Description:
Disable audio mute.

- Command:

Command[0]	\x26
Command[1]	\x3d

- Data:
No data bytes.
- Projector type:
All projectors with audio control.
- Example:
Disable audio mute of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x3d
Checksum	\x64
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

mute audio, write on

- Description:
Enable audio mute.

- Command:

Command[0]	\x27
Command[1]	\x3d

- Data:
No data bytes.
- Projector type:
All projectors with audio control.
- Example:
Enable audio mute of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x3d
Checksum	\x65
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

mute video, read

- Description:
Read the status of mute video.

- Command:

Command[0]	\x21
Command[1]	\x3e

- Data:
No data bytes.

- Return Data:

Data[0] = status mute video.

Mute audio	Data[0]
Disabled	\x00
Enabled	\x01

mute video, read

■ Example:

Read the status of mute video of a projector with address \x01. Suppose the video is muted.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x3e
Checksum	\x60
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x3e
Data[0]	\x01
Checksum	\x61
Stop	\xff

mute video, write off

- Description:
Disable video mute.

- Command:

Command[0]	\x26
Command[1]	\x3e

- Data:
No data bytes.

- Example:
Disable video mute of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x3e
Checksum	\x65
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

mute video, write on

- Description:
Enable video mute.
The on-screen-display will be muted too !

- Command:

Command[0]	\x27
Command[1]	\x3e

- Data:
No data bytes.

- Example:
Enable video mute of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x3e
Checksum	\x66
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

phase, decrement

- Description:

Decrement phase.

- Command:

Command[0]	\x0c
------------	------

- Data:

No data bytes.

- Example:

Decrement phase of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x0c
Checksum	\x0d
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

phase, increment

- Description:

Increment phase.

- Command:

Command[0]	\x0b
------------	------

- Data:

No data bytes.

- Example:

Increment phase of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x0b
Checksum	\x0c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

projector status, read

- Description:
Read the projector status.
- Command:

Command[0]	\x67
------------	------

- Data (OPTIONAL):

Data[0]	
	Byte to mask bits of the return data. \xff is equal to sending no optional data byte

- Return Data:

The return data consists of one data byte containing the projector status. Only bit0 (least significant bit) to bit3/bit6 are significant.

bit#	bit = 0	bit = 1
bit0	projector is off	projector is on
bit1	text is off	text is on
bit2	video mute is off	video mute is on
bit3*	picture is not frozen	picture is frozen
bit4*	no 800-peripheral connected	800-peripheral connected
bit5	no alternative content	alternative content
bit6*	lamp is off	lamp is on

*: bit 4 is not significant for BD5000, BD8000 and BD8000LC.

*: bit 3 is only significant on projectors that can show only one image at a time (no picture in picture or windowing capabilities).

*: bit 6 is not available on all projectors (check your owners manual).

projector status, read

■ Example:

Read the status of a projector with address \x01.

Suppose the status is projector on, text on, video mute off, picture frozen and no 800-peripheral connected.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x67
Checksum	\x68
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x67
Data[0]	\x0b
Checksum	\x73
Stop	\xff

projector status, write off

- Description:

Set the projector off.

- Command:

Command[0]	\x66
------------	------

- Data:

No data bytes.

- Note:

In case of the XLM-Series or a DP100, this command only turns of the power, not the lamp.

- Example:

Set the projector with address \x01 off.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x66
Checksum	\x67
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

projector status, write on

- Description:

Set the projector on.

- Command:

Command[0]	\x65
------------	------

- Data:

No data bytes.

- Note:

In case of the XLM-Series or a DP100, this command only turns on the power, not the lamp.

- Example:

Set the projector with address \x01 on.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x65
Checksum	\x66
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

sharpness, decrement

- Description:
Decrement sharpness.

- Command:

Command[0]	\x0a
------------	------

- Data:
No data bytes.

- Example:
Decrement sharpness of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x0a
Checksum	\x0b
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

sharpness, increment

- Description:

Increment sharpness.

- Command:

Command[0]	\x09
------------	------

- Data:

No data bytes.

- Example:

Increment sharpness of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x09
Checksum	\x0a
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

source/slot, read number

- Description:
Read active source or slot.
- Command:

Command[0]	\x32
------------	------
- Data:
No data bytes.
- Return Data:
Source or slot number (\x01..).

source/slot, read number

■ Example:

Read the active source/slot number of a projector with address \x01. Suppose the answer is \x03.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x32
Checksum	\x33
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x32
Data[0]	\x03
Checksum	\x36
Stop	\xff

source/slot, write number

■ Description:

Select a source or slot.

■ Command:

Command[0]	\x31
------------	------

■ Data:

Source or slot number (\x01..).

■ Notes:

- In case of a DP100 or the XLM-Series, this command can be used as a prefix command for another command (the main command).
- In case this command is used as a prefix command, it will be executed before the main command is handled. All messages sent to the user (acknowledge, no acknowledge, answer, ...) are related to the main command.
- In case this command is used as a prefix command, it will be undone after execution of the main command.

■ Example:

Select source 1 of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x31
Data[0]	\x01
Checksum	\x33
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

tint, decrement

- Description:
Decrement tint (hue).

- Command:

Command[0]	\x08
------------	------

- Data:
No data bytes.

- Example:
Decrement tint of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x08
Checksum	\x09
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

tint, increment

- Description:

Increment tint (hue).

- Command:

Command[0]	\x07
------------	------

- Data:

No data bytes.

- Example:

Increment tint of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x07
Checksum	\x08
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

treble, decrement

- Description:

Decrement treble.

- Command:

Command[0]	\x23
Command[1]	\x09

- Data:

No data bytes.

- Projector type:

All projectors with audio control.

- Example:

Decrement treble of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x09
Checksum	\x2d
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

treble, increment

- Description:

Increment treble.

- Command:

Command[0]	\x22
Command[1]	\x09

- Data:

No data bytes.

- Projector type:

All projectors with audio control.

- Example:

Increment treble of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x09
Checksum	\x2c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

volume, decrement

- Description:
Decrement volume.

- Command:

Command[0]	\x23
Command[1]	\x07

- Data:
No data bytes.
- Projector type:
All projectors with audio control.
- Example:
Decrement volume of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x07
Checksum	\x2b
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

volume, increment

- Description:
Increment volume.

- Command:

Command[0]	\x22
Command[1]	\x07

- Data:
No data bytes.
- Projector type:
All projectors with audio control.
- Example:
Increment volume of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x07
Checksum	\x2a
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

3. Advanced commands

2 line LCD, read

■ Description:

Read data from the 2 line LCD. The data read contains:

- the status of the backlight
- all text
- the status and position of the cursor.

■ Command:

Command[0]	\x7a
Command[1]	\x01

■ Data:

No data bytes.

■ Return Data:

The return data is a concatenation of the command bytes (except Command[0]), data and return data of following commands:

- "2 line LCD, read backlight"
- "2 line LCD, read text" (x=0, y=0)
- "2 line LCD, read text" (x=0, y=1)
- "2 line LCD, read cursor"

■ Note:

Command[1] of this command will not be found in the answer from the projector, because the answer is a concatenation of several commands.

■ Projector type:

All projectors equipped with a 2 line LCD.

2 line LCD, read

■ Example:

Read data from the 2 line LCD of a projector with address \x01. Suppose the backlight is on, top line (line 0) contains the text "hello world" and the cursor is off.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x7a
Command[1]	\x01
Checksum	\x7c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2 line LCD, read

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x7a
"Backlight" Command[1]	\x04
"Backlight" Return data[0]	\x01
"Text" Command [1]	\x02
"Text" Data[0]	\x00
"Text" Data[1]	\x00
"Text" Return data[0]	\x68 (= 'h')
"Text" Return data[1]	\x65 (= 'e')
"Text" Return data[2]	\x6c (= 'l')
"Text" Return data[3]	\x6c (= 'l')
"Text" Return data[4]	\x6f (= 'o')
"Text" Return data[5]	\x20 (= ' ')
"Text" Return data[6]	\x77 (= 'w')
"Text" Return data[7]	\x6f (= 'o')
"Text" Return data[8]	\x72 (= 'r')
"Text" Return data[9]	\x6c (= 'l')
"Text" Return data[10]	\x64 (= 'd')
"Text" Return data[11]	\x00
"Cursor" Command[1]	\x03
"Cursor" Return data[0]	\x01
"Cursor" Return data[1]	\x01
"Cursor" Return data[2]	\x00
"Cursor" Return data[3]	\x00
Checksum	\xe3
Stop	\xff

2 line LCD, read backlight

- Description:
Read the status of the backlight of the 2 line LCD.

- Command:

Command[0]	\x7a
Command[1]	\x04

- Data:
No data bytes.

- Return Data:
Data[0] = status.

Status	Data[0]
Off	\x00
On	\x01

- Projector type:
All projectors equipped with a 2 line LCD.

2 line LCD, read backlight

■ Example:

Read the status of the backlight of the 2 line LCD of a projector with address \x01.
Suppose the backlight is on.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x7a
Command[1]	\x04
Checksum	\x7f
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x7a
Command[1]	\x04
Data[0]	\x01
Checksum	\x80
	\x00
Stop	\xff

2 line LCD, read cursor

- Description:
Read the status and position of the cursor of the 2 line LCD.

- Command:

Command[0]	\x7a
Command[1]	\x03

- Data:
No data bytes.

- Return Data:

	Description
Data[0]	horizontal position (\x00..)
Data[1]	vertical position (\x00..)
Data[2]	Status
Data[3]	Blink

Status	Data[2]
Off	\x00
On	\x01

Blink	Data[3]
Off	\x00
On	\x01

- Projector type:
All projectors equipped with a 2 line LCD.
- Example:

2 line LCD, read cursor

Read the status and position of the cursor of the 2 line LCD of a projector with address \x01. Suppose the cursor is on, blinks and is positioned at location (4, 0).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x7a
Command[1]	\x03
Checksum	\x7e
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x7a
Command[1]	\x03
Data[0]	\x04
Data[1]	\x00
Data[2]	\x01
Data[3]	\x01
Checksum	\x84
Stop	\xff

2 line LCD, read format

- Description:

Read the format (maximum number of characters and maximum number of lines) of the 2 line LCD.

- Command:

Command[0]	\x7a
Command[1]	\x06

- Data:

No data bytes.

- Return Data:

	Description
Data[0]	number of characters
Data[1]	number of lines

- Projector type:

All projectors equipped with a 2 line LCD.

- Example:

Read the format of the 2 line LCD of a projector with address \x01. Suppose it's a 24 characters by 2 lines display.

2 line LCD, read format

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x7a
Command[1]	\x06
Checksum	\x81
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x7a
Command[1]	\x06
Data[0]	\x18
Data[1]	\x02
Checksum	\x9b
Stop	\xff

2 line LCD, read text

- Description:
Read the text displayed on the 2 line LCD.

- Command:

Command[0]	\x7a
Command[1]	\x02

- Data:

Data[0]	horizontal position (\x00..)
Data[1]	vertical position (\x00..)
Data[2]	max number of characters

Note: Data[2] is optional

- Return Data:
Text as a C-language string.
- Projector type:
All projectors equipped with a 2 line LCD.
- Example:

Read the text displayed at position (0, 0) of the 2 line LCD of a projector with address \x01. Suppose the text is "hello world".

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x7a
Command[1]	\x02
Data[0]	\x00
Data[1]	\x00
Checksum	\x7d
Stop	\xff

2 line LCD, read text

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x7a
Command[1]	\x02
Data[0]	\x00
Data[1]	\x00
Data[2]	\x68 (= 'h')
Data[3]	\x65 (= 'e')
Data[4]	\x6c (= 'l')
Data[5]	\x6c (= 'l')
Data[6]	\x6f (= 'o')
Data[7]	\x20 (= ' ')
Data[8]	\x77 (= 'w')
Data[9]	\x6f (= 'o')
Data[10]	\x72 (= 'r')
Data[11]	\x6c (= 'l')
Data[12]	\x64 (= 'd')
Data[13]	\x00
Checksum	\xd9
Stop	\xff

2 line LCD, write backlight

- Description:
Set the backlight on/off of the 2 line LCD.

- Command:

Command[0]	\x7a
Command[1]	\x84

- Data:

Data[0] = Status

Status	Data[0]
Off	\x00
On	\x01

- Note:
This command can be combined with other "2 lines LCD, write" commands.
- Projector type:
All projectors equipped with a 2 line LCD.

2 line LCD, write backlight

■ Example:

Set the backlight on of the 2 line LCD of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x7a
Command[1]	\x84
Data[0]	\x01
Checksum	\x00
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2 line LCD, write clear

- Description:

Clear all data displayed on the 2 line LCD.

- Command:

Command[0]	\x7a
Command[1]	\x85

- Data:

No data bytes.

- Note:

This command can be combined with other "2 lines LCD, write" commands.

- Projector type:

All projectors equipped with a 2 line LCD.

2 line LCD, write clear

■ Example:

Clear all data from the 2 line LCD of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x7a
Command[1]	\x85
Checksum	\x00
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2 line LCD, write cursor

- Description:

Set the cursor on or off at a certain position on the 2 line LCD. Only one cursor is available !

- Command:

Command[0]	\x7a
Command[1]	\x83

- Data:

	Description
Data[0]	horizontal position (\x00..)
Data[1]	vertical position (\x00..)
Data[2]	Status
Data[3]	Blink

Status	Data[2]
Off	\x00
On	\x01

Blink	Data[3]
Off	\x00
On	\x01

- Note:

If you write text AFTER writing the cursor, the cursor will be moved to the end of the written text !

- Note:

This command can be combined with other "2 lines LCD, write" commands.

2 line LCD, write cursor

- Projector type:

All projectors equipped with a 2 line LCD.

- Example:

Set a blinking cursor at position (4, 0) on the 2 line LCD of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x7a
Command[1]	\x83
Data[0]	\x04
Data[1]	\x00
Data[2]	\x01
Data[3]	\x01
Checksum	\x04
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

2 line LCD, write text

- Description:

Write text on the 2 line LCD.

- Command:

Command[0]	\x7a
Command[1]	\x82

- Data:

	Description
Data[0]	horizontal position (\x00..)
Data[1]	vertical position (\x00..)
Data[2..]]	C-Language string

- Note:

This command can be combined with other "2 lines LCD, write" commands.

- Projector type:

All projectors equipped with a 2 line LCD.

- Example:

Write the text "hello world" at position (0, 0) on the 2 line LCD of a projector with address \x01.

2 line LCD, write text

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x7a
Command[1]	\x82
Data[0]	\x00
Data[1]	\x00
Data[2]	\x68 (= 'h')
Data[3]	\x65 (= 'e')
Data[4]	\x6c (= 'l')
Data[5]	\x6c (= 'l')
Data[6]	\x6f (= 'o')
Data[7]	\x20 (= ' ')
Data[8]	\x77 (= 'w')
Data[9]	\x6f (= 'o')
Data[10]	\x72 (= 'r')
Data[11]	\x6c (= 'l')
Data[12]	\x64 (= 'd')
Data[13]	\x00
Checksum	\x59
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

800-peripheral, read output module

- Description:

Read the configuration of the 800-peripheral output module.

- Command:

Command[0]	\xf2
Command[1]	\x81

- Data:

No data bytes.

- Return Data:

Data[0] = configuration.

Output module configuration	Data[0]
Standard	\x00
5 Cable	\x01

- Example:

Read the configuration of the 800-peripheral output module of a projector with address \x01. Suppose it indicates to be "Standard".

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf2
Command[1]	\x81
Checksum	\x74
Stop	\xff

800-peripheral, read output module

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\xf2
Command[1]	\x81
Data[0]	\x00
Checksum	\x74
Stop	\xff

800-peripheral, write output module

- Description:

Set-up the configuration of the 800-peripheral output module.

- Command:

Command[0]	\xf2
Command[1]	\x01

- Data:

Data[0] = configuration.

Output module configuration	Data[0]
Standard	\x00
5 Cable	\x01

- Example:

Configure the 800-peripheral output module to be "Standard" of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf2
Command[1]	\x01
Data[0]	\x00
Checksum	\xf4
Stop	\xff

800-peripheral, write output module

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

alpha blending, read

- Description:
Read the alpha blending.
- Command:

Command[0]	\x21
Command[1]	\x8d
Command[2]	\x44
Command[3]	\x45

- Data:
No data bytes.
- Return data:
Data[0,1] = alpha blending value (0..255).
This value is a multi-byte value (see syntax).
- Projector type:
DP100, XLM-Series.

alpha blending, write

- Description:

Write the alpha blending.

- Command:

Command[0]	\x20
Command[1]	\x8d
Command[2]	\x44

- Data:

Data[0] = 0

Data[1] = alpha blending value

- Projector type:

DP100, XLM-Series.

balance, read

- Description:
Read the actual balance value.

- Command:

Command[0]	\x21
Command[1]	\x0a

- Data:
No data bytes.

- Return Data:
Data[0] = balance value.

- Projector type:
All projectors with audio control.

- Example:
Read the actual balance value of a projector with address \x01. Suppose the balance equals \xeb (= -21).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x0a
Checksum	\x2c
Stop	\xff

balance, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x0a
Data[0]	\xeb
Checksum	\x17
Stop	\xff

balance, write

- Description:
Write a new balance value.
- Command:

Command[0]	\x20
Command[1]	\x0a

- Data:
Data[0] = balance value.
- Projector type:
All projectors with audio control.
- Example:

Set the balance to \xeb (= -21) on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x0a
Data[0]	\xeb
Checksum	\x16
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

bass, read

- Description:
Read the actual bass value.

- Command:

Command[0]	\x21
Command[1]	\x08

- Data:
No data bytes.

- Return Data:
Data[0] = bass value.

- Projector type:
All projectors with audio control.

- Example:
Read the actual bass value of a projector with address \x01. Suppose the bass equals \x01 (= +1).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x08
Checksum	\x2a
Stop	\xff

bass, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x08
Data[0]	\x01
Checksum	\x2b
Stop	\xff

bass, write

- Description:
Write a new bass value.

- Command:

Command[0]	\x20
Command[1]	\x08

- Data:
Data[0] = bass value.

- Projector type:
All projectors with audio control.

- Example:
Set the bass to \x01 (= +1) on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x08
Data[0]	\x01
Checksum	\x2a
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

baud rate pc, read

- Description:

Read the pc baud rate.

- Command:

Command[0]	\x75
------------	------

- Data:

No data bytes.

- Return Data:

The return data-transfer being the pc baud rate is a C-language string (see syntax).

Data[]	C-language string
--------	-------------------

- Projector type:

Not all projectors support this command.

- Example:

Read the pc baud rate of a projector with address \x01. Suppose the baud rate is 2400 baud..

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x75
Checksum	\x76
Stop	\xff

baud rate pc, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x75
Data[0]	\x32 (= '2')
Data[1]	\x34 (= '4')
Data[2]	\x30 (= '0')
Data[3]	\x30 (= '0')
Data[4]	\x00
Checksum	\x3c
Stop	\xff

baud rate pc, write

■ Description:

Change the pc baud rate.

■ Command:

Command[0]	\x75
------------	------

■ Data:

Data[]	C-language string
--------	-------------------

■ Notes:

- The acknowledge is sent at the same baud rate as the question. The baud rate will be changed after transmission of the acknowledge sequence.
- If the data contains a non-valid C-language string or an invalid baud rate, the baud rate will be set to 9600.

■ Example:

Change the pc baud rate to 2400 baud of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x75
Data[0]	\x32 (= '2')
Data[1]	\x34 (= '4')
Data[2]	\x30 (= '0')
Data[3]	\x30 (= '0')
Data[4]	\x00
Checksum	\x3c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

blanking bottom, decrement

- Description:
Decrement blanking bottom.

- Command:

Command[0]	\x23
Command[1]	\x4d

- Data:
No data bytes.

- Example:
Decrement blanking bottom of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x4d
Checksum	\x71
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

blanking bottom, increment

- Description:
Increment blanking bottom.

- Command:

Command[0]	\x22
Command[1]	\x4d

- Data:
No data bytes.

- Example:
Increment blanking bottom of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x4d
Checksum	\x70
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

blanking bottom, read

- Description:
Read the actual value of blanking bottom.

- Command:

Command[0]	\x21
Command[1]	\x4d

- Data:
No data bytes.

- Return Data:
Data[0..1] = value of blanking bottom.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Read the actual value of blanking bottom of a projector with address \x01. Suppose the blanking bottom equals 0.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x4d
Checksum	\x6f
Stop	\xff

blanking bottom, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x4d
Data[0]	\x00
Data[1]	\x00
Checksum	\x6f
Stop	\xff

blanking bottom, write

■ Description:

Write a new value for blanking bottom.

■ Command:

Command[0]	\x20
Command[1]	\x4d

■ Data:

Data[0..1] = value of blanking bottom.

Data[0]	MSB of value
Data[1]	LSB of value

■ Example:

Set the blanking bottom to 0 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x4d
Data[0]	\x00
Data[1]	\x00
Checksum	\x6e
Stop	\xff

blanking bottom, write

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

blanking left, decrement

- Description:
Decrement blanking left.

- Command:

Command[0]	\x23
Command[1]	\x4e

- Data:
No data bytes.

- Example:
Decrement blanking left of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x4e
Checksum	\x72
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

blanking left, increment

- Description:

Increment blanking left.

- Command:

Command[0]	\x22
Command[1]	\x4e

- Data:

No data bytes.

- Example:

Increment blanking left of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x4e
Checksum	\x71
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

blanking left, read

- Description:
Read the actual value of blanking left.

- Command:

Command[0]	\x21
Command[1]	\x4e

- Data:
No data bytes.

- Return Data:
Data[0..1] = value of blanking left.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Read the actual value of blanking left of a projector with address \x01. Suppose the blanking left equals 0.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x4e
Checksum	\x70
Stop	\xff

blanking left, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x4e
Data[0]	\x00
Data[1]	\x00
Checksum	\x70
Stop	\xff

blanking left, write

- Description:

Write a new value for blanking left.

- Command:

Command[0]	\x20
Command[1]	\x4e

- Data:

Data[0..1] = value of blanking left.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:

Set the blanking left to 0 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x4e
Data[0]	\x00
Data[1]	\x00
Checksum	\x6f
Stop	\xff

blanking left, write

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

blanking right, decrement

- Description:
Decrement blanking right.

- Command:

Command[0]	\x23
Command[1]	\x4f

- Data:
No data bytes.

- Example:
Decrement blanking right of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x4f
Checksum	\x73
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

blanking right, increment

- Description:
Increment blanking right.

- Command:

Command[0]	\x22
Command[1]	\x4f

- Data:
No data bytes.

- Example:
Increment blanking right of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x4f
Checksum	\x72
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

blanking right, read

- Description:
Read the actual value of blanking right.

- Command:

Command[0]	\x21
Command[1]	\x4f

- Data:
No data bytes.

- Return Data:
Data[0..1] = value of blanking right.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Read the actual value of blanking right of a projector with address \x01. Suppose the blanking right equals 0.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x4f
Checksum	\x71
Stop	\xff

blanking right, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x4f
Data[0]	\x00
Data[1]	\x00
Checksum	\x71
Stop	\xff

blanking right, write

■ Description:

Write a new value for blanking right.

■ Command:

Command[0]	\x20
Command[1]	\x4f

■ Data:

Data[0..1] = value of blanking right.

Data[0]	MSB of value
Data[1]	LSB of value

■ Example:

Set the blanking right to 0 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x4f
Data[0]	\x00
Data[1]	\x00
Checksum	\x70
Stop	\xff

blanking right, write

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff



blanking top, decrement

- Description:
Decrement blanking top.

- Command:

Command[0]	\x23
Command[1]	\x4c

- Data:
No data bytes.

- Example:
Decrement blanking top of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x4c
Checksum	\x70
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

blanking top, increment

■ Description:

Increment blanking top.

■ Command:

Command[0]	\x22
Command[1]	\x4c

■ Data:

No data bytes.

■ Example:

Increment blanking top of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x4c
Checksum	\x6f
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

blanking top, read

- Description:
Read the actual value of blanking top.

- Command:

Command[0]	\x21
Command[1]	\x4c

- Data:
No data bytes.

- Return Data:
Data[0..1] = value of blanking top.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Read the actual value of blanking top of a projector with address \x01. Suppose the blanking top equals 0.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x4c
Checksum	\x6e
Stop	\xff

blanking top, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x4c
Data[0]	\x00
Data[1]	\x00
Checksum	\x6e
Stop	\xff

blanking top, write

■ Description:

Write a new value for blanking top.

■ Command:

Command[0]	\x20
Command[1]	\x4c

■ Data:

Data[0..1] = value of blanking top.

Data[0]	MSB of value
Data[1]	LSB of value

■ Example:

Set the blanking top to 0 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x4c
Data[0]	\x00
Data[1]	\x00
Checksum	\x6d
Stop	\xff

blanking top, write

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

brightness, read

- Description:
Read the actual brightness value.

- Command:

Command[0]	\x21
Command[1]	\x02

- Data:
No data bytes.
- Return Data:
Data[0] = brightness value.
- Example:

Read the actual brightness value of a projector with address \x01. Suppose the brightness equals \x20.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x02
Checksum	\x24
Stop	\xff

brightness, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x02
Data[0]	\x20
Checksum	\x44
Stop	\xff

brightness, write

- Description:

Write a new brightness value.

- Command:

Command[0]	\x20
Command[1]	\x02

- Data:

Data[0] = brightness value.

- Example:

Set the brightness to \x20 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x02
Data[0]	\x20
Checksum	\x43
Stop	\xff

brightness, write

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

button, read macro

- Description:
Read the name of the macro attached to a button.

- Command:

Command[0]	\xe8
Command[1]	\x05

- Data:

Data[0] = Macro-Button number

	Data[0]
Macro-Button 1	\x01
Macro-Button 2	\x02
...	...

Data[1] = OPTIONAL

In this case, Data[0] indicates "From" Macro-Button number and Data[1] indicates "To" Macro-Button number.

- Return Data:

In case the optional Data[1] wasn't sent:

Data[0] = Macro-Button number.

Data[1..] = Macro name(s) as C-language string(s) (see syntax).

In case the optional Data[1] was sent:

Data[0] = From Macro-Button number.

Data[1] = To Macro-Button number.

Data[2..] = Macro name(s) as C-language string(s) (see syntax).

- Projector type:

DP100.

- Example:

Read the macro name attached to macro-button 2 of a projector with address \x01. Suppose the macro name is "ABC".

button, read macro

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xe8
Command[1]	\x05
Data[0]	\x02
Checksum	\xf0
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\xe8
Command[1]	\x05
Data[0]	\x02
Data[1]	\x41 (= 'A')
Data[2]	\x42 (= 'B')
Data[3]	\x43 (= 'C')
Data[4]	\x00
Checksum	\xb6
Stop	\xff

button, write macro

- Description:

Write the name of the macro to be attached to a button.

- Command:

Command[0]	\xe8
Command[1]	\x85

- Data:

Data[0] = Macro-Button number

Data[1..] = Macro name as a C-language string (see syntax).

	Data[0]
Macro-Button 1	\x01
Macro-Button 2	\x02
...	...

- Projector type:

DP100.

- Example:

Write the macro name to be attached to macro-button 2 of a projector with address \x01. Suppose the macro name is "ABC".

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xe8
Command[1]	\x85
Data[0]	\x02
Data[1]	\x41 (= 'A')
Data[2]	\x42 (= 'B')
Data[3]	\x43 (= 'C')
Data[4]	\x00
Checksum	\x36
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

clamp delay, decrement

- Description:
Decrement the clamp delay.

- Command:

Command[0]	\x23
Command[1]	\x67

- Data:
No data bytes.
- Projector type:
Not supported on DP100 and XLM-Series.
- Example:
Decrement the clamp delay of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x67
Checksum	\x8b
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

clamp delay, increment

- Description:

Increment the clamp delay.

- Command:

Command[0]	\x22
Command[1]	\x67

- Data:

No data bytes.

- Projector type:

Not supported on DP100 and XLM-Series.

- Example:

Increment the clamp delay of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x67
Checksum	\x8a
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

clamp delay, read

- Description:

Read the actual value of the clamp delay.

- Command:

Command[0]	\x21
Command[1]	\x67

- Data:

No data bytes.

- Return Data:

Data[0] = value of the clamp delay.

- Projector type:

Not supported on DP100 and XLM-Series.

- Example:

Read the actual value of the clamp delay of a projector with address \x01. Suppose the clamp delay equals \x00.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x67
Checksum	\x89
Stop	\xff

clamp delay, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x67
Data[0]	\x00
Checksum	\x89
Stop	\xff

clamp delay, write

- Description:
Write a new value for the clamp delay.

- Command:

Command[0]	\x20
Command[1]	\x67

- Data:

Data[0] = value of the clamp delay.

- Projector type:

Not supported on DP100 and XLM-Series.

- Example:

Set the clamp delay to \x00 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x67
Data[0]	\x00
Checksum	\x88
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

clamp edge, read

- Description:
Read the actual value of the clamp edge.

- Command:

Command[0]	\x21
Command[1]	\x66

- Data:
No data bytes.

- Return Data:
Data[0] = value of the clamp edge.

	Data[0]
Leading	\x00
Trailing	\x01

- Projector type:
Not supported on DP100 and XLM-Series.

- Example:
Read the actual value of the clamp edge of a projector with address \x01. Suppose the clamp edge is leading.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x66
Checksum	\x88
Stop	\xff

clamp edge, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x66
Data[0]	\x00
Checksum	\x88
Stop	\xff

clamp edge, write leading

- Description:

Set the clamp edge to leading.

- Command:

Command[0]	\x26
Command[1]	\x66

- Data:

No data bytes.

- Projector type:

Not supported on DP100 and XLM-Series.

- Example:

Set the clamp edge to leading on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x66
Checksum	\x8d
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

clamp edge, write trailing

- Description:
Set the clamp edge to trailing.

- Command:

Command[0]	\x27
Command[1]	\x66

- Data:
No data bytes.
- Projector type:
Not supported on DP100 and XLM-Series.
- Example:
Set the clamp edge to trailing on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x66
Checksum	\x8e
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

clamp width, decrement

- Description:
Decrement the clamp width.

- Command:

Command[0]	\x23
Command[1]	\x68

- Data:
No data bytes.
- Projector type:
Not supported on DP100 and XLM-Series.
- Example:
Decrement the clamp width of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x68
Checksum	\x8c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

clamp width, increment

- Description:
Increment the clamp width.

- Command:

Command[0]	\x22
Command[1]	\x68

- Data:
No data bytes.
- Projector type:
Not supported on DP100 and XLM-Series.
- Example:
Increment the clamp width of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x68
Checksum	\x8b
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

clamp width, read

- Description:

Read the actual value of the clamp width.

- Command:

Command[0]	\x21
Command[1]	\x68

- Data:

No data bytes.

- Return Data:

Data[0] = value of the clamp width.

- Projector type:

Not supported on DP100 and XLM-Series.

- Example:

Read the actual value of the clamp width of a projector with address \x01. Suppose the clamp width equals \x32.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x68
Checksum	\x8a
Stop	\xff

clamp width, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x68
Data[0]	\x32
Checksum	\xbc
Stop	\xff

clamp width, write

- Description:

Write a new value for the clamp width.

- Command:

Command[0]	\x20
Command[1]	\x68

- Data:

Data[0] = value of the clamp width.

- Projector type:

Not supported on DP100 and XLM-Series.

- Example:

Set the clamp width to \x32 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x68
Data[0]	\x32
Checksum	\xbb
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

color, read

- Description:
Read the actual color (saturation) value.

- Command:

Command[0]	\x21
Command[1]	\x03

- Data:
No data bytes.
- Return Data:
Data[0] = color value.
- Example:

Read the actual color value of a projector with address \x01. Suppose the color equals \x20.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x03
Checksum	\x25
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x03
Data[0]	\x20
Checksum	\x45
Stop	\xff

color, write

- Description:
Write a new color (saturation) value.

- Command:

Command[0]	\x20
Command[1]	\x03

- Data:
Data[0] = color value.

- Example:

Set the color to \x20 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x03
Data[0]	\x20
Checksum	\x44
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

color balance, decrement

- Description:

Decrement the actual color balance.

- Command (color balance red/green):

Command[0]	\x23
Command[1]	\x43

Command (color balance blue/green):

Command[0]	\x23
Command[1]	\x44

- Data:

No data bytes.

- Projector type:

For XLM-Series and DP100, see command "color temperature, decrement gain".

- Example:

Decrement the color balance red/green on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x43
Checksum	\x67
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

color balance, increment

- Description:

Increment the actual color balance.

- Command (color balance red/green):

Command[0]	\x22
Command[1]	\x43

Command (color balance blue/green):

Command[0]	\x22
Command[1]	\x44

- Data:

No data bytes.

- Projector type:

For XLM-Series and DP100, see command "color temperature, increment gain".

- Example:

Increment the color balance red/green on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x43
Checksum	\x66
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

color balance, read

- Description:

Read the color balance.

- Command (color balance red/green):

Command[0]	\x21
Command[1]	\x43

Command (color balance blue/green):

Command[0]	\x21
Command[1]	\x44

- Data (only in case of reading the color balance of a specified color temperature):

Data[0] = color temperature.

Data[0]	
0	"PROJECTOR WHITE"
1	custom color balance derived from "PROJECTOR WHITE"
2	custom color balance derived from 3200, 5400, 6500 or 9300
32	3200
54	5400
65	6500
93	9300

- Return data:

Data[0] = value of color balance multiplied by 100.

Data[0]	\x00..\xfa
---------	------------

Example: Data[0]=\x64 equals 1.00

- Projector type:

For XLM-Series and DP100, see command "color temperature, read".

color balance, read

■ Example:

Read the color balance red/green of a projector with address \x01. Suppose the color balance equals 1.00.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x43
Checksum	\x65
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x43
Data[0]	\x64
Checksum	\xc9
Stop	\xff

color balance, write

- Description:

Write the actual color balance.

- Command (color balance red/green):

Command[0]	\x20
Command[1]	\x43

Command (color balance blue/green):

Command[0]	\x20
Command[1]	\x44

- Data:

Data[0] = value of color balance multiplied by 100.

Data[0]	\x00..\xfa
---------	------------

Example: Data[0]=\x64 equals 1.00

- Projector type:

For XLM-Series and DP100, see command "color temperature, write".

- Example:

Set the color balance red/green to 1.00 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x43
Data[0]	\x64
Checksum	\xc8
Stop	\xff

color balance, write

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

color key, read (1)

- Description:
Read the color key.

- Command:

Command[0]	\x21
Command[1]	\x8d
Command[2]	\x52
Command[3]	\x53

- Data:
No data bytes.

- Return data:

Data[0,1]	0 = Off 1 = On
-----------	-------------------

This value is a multi-byte value (see syntax).

- Projector type:
DP100, XLM-Series.

color key, read (2)

- Description:
Read the color key.

- Command:

Command[0]	\x21
Command[1]	\x8d
Command[2]	\x46
Command[3]	\x51

- Data:
No data bytes.

- Return data:

Data[0,1]	Range
Data[2,3]	Red
Data[4,5]	Green
Data[6,7]	Blue
Data[8,9]	Palette 0 = RGB 1 = Red 2 = Green 3 = Blue
Data[10,11]	Algorithm 0 = None 1 = Higher 2 = Lower 3 = Equal 4 = Inside range 5 = Outside range

All values are multi-byte values (see syntax).

- Projector type:
DP100, XLM-Series.

color key, write (1)

- Description:
Write the color key.

- Command:

Command[0]	\x20
Command[1]	\x8d
Command[2]	\x52

- Data:

Data[0,1]	0 = Off 1 = On
-----------	-------------------

This value is a multi-byte value (see syntax).

- Projector type:
DP100, XLM-Series.

- Note:
This command enables or disables the color key and sets the color key algorithm to "None"!

color key, write (2)

- Description:
Write the color key.

- Command:

Command[0]	\x20
Command[1]	\x8d
Command[2]	\x46

- Data:

Data[0,1]	Range
Data[2,3]	Red
Data[4,5]	Green
Data[6,7]	Blue
Data[8,9]	Palette 0 = RGB 1 = Red 2 = Green 3 = Blue
Data[10,11]	Algorithm 0 = None 1 = Higher 2 = Lower 3 = Equal 4 = Inside range 5 = Outside range

All values are multi-byte values (see syntax).

- Projector type:
DP100, XLM-Series.

color temperature, decrement gain

- Description:
Decrement the color temperature red, green or blue gain.
- Command (color temperature red gain):

Command[0]	\x23
Command[1]	\x93

Command (color temperature green gain):

Command[0]	\x23
Command[1]	\x94

Command (color temperature blue gain):

Command[0]	\x23
Command[1]	\x95

- Data:
No data bytes.
- Example:
Decrement the color temperature red gain of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x93
Checksum	\xb7
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

color temperature, increment gain

- Description:

Increment the color temperature red, green or blue gain.

- Command (color temperature red gain):

Command[0]	\x22
Command[1]	\x93

Command (color temperature green gain):

Command[0]	\x22
Command[1]	\x94

Command (color temperature blue gain):

Command[0]	\x22
Command[1]	\x95

- Data:

No data bytes.

- Example:

Increment the color temperature red gain of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x93
Checksum	\xb6
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

color temperature, read

- Description:
Read the actual color temperature.

- Command:

Command[0]	\x21
Command[1]	\x45

- Data:
No data bytes.

- Return Data:
Data[0] = color temperature.

Data[0]	
0	"PROJECTOR WHITE"
1	custom color balance derived from "PROJECTOR WHITE"
2	custom color balance derived from 3200, 5400, 6500 or 9300
32	3200
54	5400
65	6500
93	9300

or Data = C-language string containing the name of a color temperature file.

Data	C-language string
------	-------------------

- Notes:
 - Return data = Data[0] for all projectors without a directory structure.
 - Return data = C-language string for all projectors with a directory structure.

color temperature, read

■ Example:

Read the actual color temperature of a projector with address \x01. Suppose the color temperature equals 6500.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x45
Checksum	\x67
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x45
Data[0]	\x41
Checksum	\xa8
Stop	\xff

color temperature, read gain

- Description:
Read the color temperature red, green or blue gain.

- Command (color temperature red gain):

Command[0]	\x21
Command[1]	\x93

Command (color temperature green gain):

Command[0]	\x21
Command[1]	\x94

Command (color temperature blue gain):

Command[0]	\x21
Command[1]	\x95

- Data:
No data bytes.
- Return Data:
Data[0] = gain x 100 (for example Data[0] for 1.00 is 100).
- Example:

Read the color temperature red gain of a projector with address \x01. Suppose the red gain is 1.25.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x93
Checksum	\xb5
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x93
Data[0]	\x7d
Checksum	\x32
Stop	\xff

color temperature, write

■ Description:

Write the color temperature.

■ Command:

Command[0]	\x20
Command[1]	\x45

■ Data (see notes):

Data[0] = color temperature.

Data[0]	
0	"PROJECTOR WHITE"
1	custom color balance derived from "PROJECTOR WHITE"
2	custom color balance derived from 3200, 5400, 6500 or 9300
32	3200
54	5400
65	6500
93	9300

or Data = C-language string containing the name of a color temperature file.

Data	C-language string
------	-------------------

■ Notes:

- Data = Data[0] for all projectors without a directory structure.
- Data = C-language string for all projectors with a directory structure.

color temperature, write

■ Example:

Set the color temperature to 6500 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x45
Data[0]	\x41
Checksum	\xa7
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

color temperature, write gain

- Description:

Write the color temperature red, green or blue gain.

- Command (color temperature red gain):

Command[0]	\x20
Command[1]	\x93

Command (color temperature green gain):

Command[0]	\x20
Command[1]	\x94

Command (color temperature blue gain):

Command[0]	\x20
Command[1]	\x95

- Data:

Data[0] = gain x 100 (for example Data[0] for 1.00 is 100).

- Example:

Set the color temperature red gain to 1.25 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x93
Data[0]	\x7d
Checksum	\x31
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

contrast, read

- Description:
Read the actual contrast value.
- Command:

Command[0]	\x21
Command[1]	\x01

- Data:
No data bytes.
- Return Data:
Data[0] = contrast value.
- Example:
Read the actual contrast value of a projector with address \x01. Suppose the contrast equals \x30.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x01
Checksum	\x23
Stop	\xff

contrast, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x01
Data[0]	\x30
Checksum	\x53
Stop	\xff

contrast, write

- Description:

Write a new contrast value.

- Command:

Command[0]	\x20
Command[1]	\x01

- Data:

Data[0] = contrast value.

- Example:

Set the contrast to \x30 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x01
Data[0]	\x30
Checksum	\x52
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

communication port interface standard, read

- Description:
Read the interface standard of a communication port.

- Command:

Command[0]	\x77
Command[1]	\xc0
Command[2]	port number
Command[3]	\x03

- Data:
No data bytes.

- Return Data:

Data[0] = RS232 or RS422

Data[1] = RS422 termination

	Data[0]
RS232	\x00
RS422	\x01

RS422 termination	Data[1]
Off	\x00
On	\x01

- Note:
See your Owner's Manual for a list of the port numbers.
- Projector type:
DP100, XLM-Series.

communication port interface standard, read

■ Example:

Read the interface standard of communication port \x01 of a projector with address \x01. Suppose the interface standard is RS232.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x77
Command[1]	\xc0
Command[2]	\x01
Command[3]	\x03
Checksum	\x3c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x77
Command[1]	\xc0
Command[2]	\x01
Command[3]	\x03
Data[0]	\x00
Data[1]	\x00
Checksum	\x3c
Stop	\xff

communication port interface standard, write

- Description:

Write (change) the interface standard of a communication port.

- Command:

Command[0]	\x77
Command[1]	\xc0
Command[2]	port number
Command[3]	\x83

- Data:

Data[0] = RS232 or RS422

Data[1] = RS422 termination

	Data[0]
RS232	\x00
RS422	\x01

RS422 termination	Data[1]
Off	\x00
On	\x01

- Note:

See your Owner's Manual for a list of the port numbers.

- Projector type:

DP100, XLM-Series.

communication port interface standard, write

■ Example:

Set the interface standard of communication port \x01 of a projector with address \x01 to RS232.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x77
Command[1]	\xc0
Command[2]	\x01
Command[3]	\x83
Data[0]	\x00
Data[1]	\x00
Checksum	\xbc
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

diagnosis 3, read

- Description:
Read diagnosis information.
- Command:

Command[0]	\x81
Command[1]	\x03
Command[2]	From data index
Command[3]	To data index

or Command:

Command[0]	\x81
Command[1]	\x03
Command[2..3]	From data index
Command[4..5]	To data index

- Data:
No data bytes.
- Return Data:
The return data depends on the "From data index" and "To data index".

Index		
0	Temp. TEC Red	°C
1	Temp. TEC Green	°C
2	Temp. TEC Blue	°C
3	Temp. Ambient	°C
4	Temp. Lamp House	°C
5	Elcabox	°C
6	Temp. Heatsink SMPS 1 Sec.	°C
7	Temp. Heatsink SMPS 2 Sec.	°C
8	Rack	°C
9	TEC Status	

diagnosis 3, read

10..11	Voltage ++5V	mV
12..13	Voltage ++12V	mV
14..15	Voltage +3.3V	mV
16..17	Voltage +5V	mV
18..19	Voltage +12V	mV
20..21	Voltage +24V Elek.	mV
22..23	Voltage +12V D320	mV
24..25	Voltage +TEC	mV
26..67	Voltage +Fan0	mV
28..29	Voltage +Fan1	mV
30..31	Voltage +Fan2	mV
32..33	Voltage +Fan3	mV
34..35	Fan 1 Elcabox	RPM
36..37	Fan 2 Elcabox	RPM
38..39	Fan 3 Elcabox	RPM
40..41	Fan 4 Elcabox	RPM
42..43	Fan Cold Mirror Top	RPM
44..45	Fan Cold Mirror Bottom	RPM
46..47	Fan Light Tube	RPM
48..49	Fan Start Pulse Generator	RPM
50..51	Fan Lamp Top	RPM
52..53	Fan Lamp Anode	RPM
54..55	Fan Lamp Cathode	RPM
56..57	Fan Sealing	RPM
58	Temp. Heatsink PFC	°C
59	Temp. Heatsink SMPS 1 Prim.	°C
60	Temp. Heatsink SMPS 2 Prim.	°C
61	Switch Air Flow	on/off
62	Switch Lamp House	on/off
63	Switch Tilt	on/off
64	Switch Engine Mount	on/off
65	Water flow sensor	on/off
66	Water level sensor	on/off
67	reserved	

diagnosis 3, read

68..71	Errors bit0 = Errors 0 (Index 72..75) bit1 = Errors 1 (Index 76..79) bit2 = Errors 2 (Index 80..83) bit3 = Errors 3 (Index 84..87)	
72..75	Errors 0 bit0 = Lower Limit Index 0 bit1 = Upper Limit Index 0 bit2 = Lower Limit Index 1 bit3 = Upper Limit Index 1 bit4 = Lower Limit Index 2 bit5 = Upper Limit Index 2 bit6 = Lower Limit Index 3 bit7 = Upper Limit Index 3 bit8 = Lower Limit Index 4 bit9 = Upper Limit Index 4 bit10 = Lower Limit Index 8 bit11 = Upper Limit Index 8 bit12 = Lower Limit Index 6 bit13 = Upper Limit Index 6 bit14 = Lower Limit Index 7 bit15 = Upper Limit Index 7 bit16 = Lower Limit Index 5 bit17 = Upper Limit Index 5	
76..79	Errors 1 bit0 = Lower Limit Index 10..11 bit1 = Upper Limit Index 10..11 bit2 = Lower Limit Index 12..13 bit3 = Upper Limit Index 12..13 bit4 = Lower Limit Index 14..15 bit5 = Upper Limit Index 14..15 bit6 = Lower Limit Index 16..17 bit7 = Upper Limit Index 16..17 bit8 = Lower Limit Index 18..19 bit9 = Upper Limit Index 18..19 bit10 = Lower Limit Index 20..21 bit11 = Upper Limit Index 20..21 bit12 = Lower Limit Index 22..23 bit13 = Upper Limit Index 22..23 bit14 = Lower Limit Index 24..25 bit15 = Upper Limit Index 24..25 bit16 = Lower Limit Index 26..27 bit17 = Upper Limit Index 26..27 bit18 = Lower Limit Index 28..29 bit19 = Upper Limit Index 28..29 bit20 = Lower Limit Index 30..31 bit21 = Upper Limit Index 30..31 bit22 = Lower Limit Index 32..33 bit23 = Upper Limit Index 32..33	

diagnosis 3, read

80..83	Errors 2 bit0 = Lower Limit Index 34..35 bit1 = Upper Limit Index 34..35 bit2 = Lower Limit Index 36..37 bit3 = Upper Limit Index 36..37 bit4 = Lower Limit Index 38..39 bit5 = Upper Limit Index 38..39 bit6 = Lower Limit Index 40..41 bit7 = Upper Limit Index 40..41 bit8 = Lower Limit Index 42..43 bit9 = Upper Limit Index 42..43 bit10 = Lower Limit Index 44..45 bit11 = Upper Limit Index 44..45 bit12 = Lower Limit Index 46..47 bit13 = Upper Limit Index 46..47 bit18 = Lower Limit Index 48..49 bit19 = Upper Limit Index 48..49 bit20 = Lower Limit Index 50..51 bit21 = Upper Limit Index 50..51 bit22 = Lower Limit Index 52..53 bit23 = Upper Limit Index 52..53 bit24 = Lower Limit Index 54..55 bit25 = Upper Limit Index 54..55 bit26 = Lower Limit Index 56..57 bit27 = Upper Limit Index 56..57	
84..87	Errors 3 bit0 = Lower Limit Index 61 bit1 = Upper Limit Index 61 bit2 = Lower Limit Index 62 bit3 = Upper Limit Index 62 bit6 = Lower Limit Index 63 bit7 = Upper Limit Index 63 bit8 = Lower Limit Index 64 bit9 = Upper Limit Index 64 bit12 = Lower Limit Index 65 bit13 = Upper Limit Index 65 bit14 = Lower Limit Index 66 bit15 = Upper Limit Index 66 bit16 = Lower Limit Index 58 bit17 = Upper Limit Index 58 bit18 = Lower Limit Index 59 bit19 = Upper Limit Index 59 bit20 = Lower Limit Index 60 bit21 = Upper Limit Index 60	
88..95	EFIB status (see TI Product Specification); XLM-Series only!	
96..111	Red Modular Formatter status (see TI Product Specification); XLM-Series only!	
112..127	Green Modular Formatter status (see TI Product Specification); XLM-Series only!	
128..143	Blue Modular Formatter status (see TI Product Specification); XLM-Series only!	

diagnosis 3, read

152..153	Temp. TEC Red Range	°C
154..155	Temp. TEC Green Range	°C
156..157	Temp. TEC Blue Range	°C
158..159	Temp. Ambient Range	°C
160..161	Temp. Lamp House Range	°C
162..163	Temp. Elcabox Range	°C
164..165	Temp. Heatsink SMPS 1 Sec. Range	°C
166..167	Temp. Heatsink SMPS 2 Sec. Range	°C
168..169	Temp. Rack Range	°C
170..173	Voltage ++5V Range	mV
174..177	Voltage ++12V Range	mV
178..181	Voltage +3.3V Range	mV
182..185	Voltage +5V Range	mV
186..189	Voltage +12V Range	mV
190..193	Voltage +24V Elek. Range	mV
194..197	Voltage +12V D320 Range	mV
198..201	Voltage +TEC Range	mV
202..205	Voltage +Fan0 Range	mV
206..209	Voltage +Fan1 Range	mV
210..213	Voltage +Fan2 Range	mV
214..217	Voltage +Fan3 Range	mV
218..221	Fan 1 Elcabox Range	RPM
222..225	Fan 2 Elcabox Range	RPM
226..229	Fan 3 Elcabox Range	RPM
230..233	Fan 4 Elcabox Range	RPM
234..237	Fan Cold Mirror Top Range	RPM
238..241	Fan Cold Mirror Bottom Range	RPM
242..245	Fan Light Tube Range	RPM
246..249	Fan Start Pulse Generator Range	RPM
250..253	Fan Lamp Top Range	RPM
254..257	Fan Lamp Anode Range	RPM
258..261	Fan Lamp Cathode Range	RPM
262..265	Fan Sealing Range	RPM
266..269	Temp. Heatsink PFC Range	°C
270..273	Temp. Heatsink SMPS 1 Prim. Range	°C
274..277	Temp. Heatsink SMPS 2 Prim. Range	°C
278..281	Switch Air Flow Range	on/off
282..285	Switch Lamp House Range	on/off
286..289	Switch Tilt Range	on/off
290..293	Switch Engine Mount Range	on/off
294..297	Water flow sensor Range	on/off
298..301	Water level sensor Range	on/off

diagnosis 3, read

- Projector type:

DP100, XLM-Series.

- Example:

Read the TEC values for Red, Green and Blue of a projector with address \x01.

Suppose the values are \x20, \x25 and \x23.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x81
Command[1]	\x03
Command[2]	\x00
Command[3]	\x02
Checksum	\x87
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x81
Command[1]	\x03
Command[2]	\x00
Command[3]	\x02
Data[0]	\x20
Data[1]	\x25
Data[2]	\x23
Checksum	\xef
Stop	\xff

dimming, decrement

- Description:

Decrement dimming.

- Command:

Command[0]	\x23
Command[1]	\x0d

- Data:

No data bytes.

- Projector type:

Please verify the Owner's Manual of the projector if the dimming feature is supported.

- Example:

Decrement dimming of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x0d
Checksum	\x31
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

dimming, increment

- Description:

Increment dimming.

- Command:

Command[0]	\x22
Command[1]	\x0d

- Data:

No data bytes.

- Projector type:

Please verify the Owner's Manual of the projector if the dimming feature is supported.

- Example:

Increment dimming of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x0d
Checksum	\x30
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

dimming, read

- Description:

Read the dimming value.

- Command:

Command[0]	\x21
Command[1]	\x0d

- Data:

No data bytes.

- Return Data:

Data[0] = dimming value.

- Projector type:

Please verify the Owner's Manual of the projector if the dimming feature is supported.

- Example:

Read the dimming value of a projector with address \x01. Suppose the dimming equals \x07.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x0d
Checksum	\x2f
Stop	\xff

dimming, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x0d
Data[0]	\x07
Checksum	\x36
Stop	\xff

directory, write to profile

■ Description:

Write the contents of a directory to a profile.

■ Command:

Command[0]	\xbd
Command[1]	\xc0

■ Data:

Directory path	C-language string
Directory filter	C-language string
Profile path	C-language string
Profile section name	C-language string
File permissions (OPTIONAL)	C-language string (see Notes)
Extra (OPTIONAL)	C-language string (see Notes)

■ Notes:

File permissions:

- Characters allowed = 'r' (read), 'w' (write) and 'x' (execute).
- The file permissions indicate which permissions are checked.
- If no file permissions are given, all files will be written.
- Example 1: if the file permissions are "rw", then all files that have read and/or write permission are written.

Extra:

- Extra options dependent on the type of directory.

■ Projector type:

All projectors with directory structure.

■ Note:

A directory filter can be "*.txt".

■ Example:

Not yet available.

fade audio, decrement

- Description:

Decrement the fade value. The audio volume level of the external speaker(s) will decrease or the audio volume of the internal speaker(s) will increase.

- Command:

Command[0]	\x23
Command[1]	\x5f

- Data:

No data bytes.

- Projector type:

All projectors with audio control.

- Example:

Decrement the fade value of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x5f
Checksum	\x83
Stop	\xff

fade audio, decrement

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff



fade audio, increment

- Description:

Increment the fade value. The audio volume level of the external speaker(s) will increase or the audio volume of the internal speaker(s) will decrease.

- Command:

Command[0]	\x22
Command[1]	\x5f

- Data:

No data bytes.

- Projector type:

All projectors with audio control.

- Example:

Increment the fade value of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x5f
Checksum	\x82
Stop	\xff

fade audio, increment

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

fade audio, read

- Description:

Read the actual fade value.

- Command:

Command[0]	\x21
Command[1]	\x5f

- Data:

No data bytes.

- Return Data:

Data[0] = fade value.

- Projector type:

All projectors with audio control.

- Example:

Read the actual fade value of a projector with address \x01. Suppose the value equals -15 (\xf1).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x5f
Checksum	\x81
Stop	\xff

fade audio, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x5f
Data[0]	\xf1
Checksum	\x72
Stop	\xff

fade audio, write

- Description:
Write a new fade value.
- Command:

Command[0]	\x20
Command[1]	\x5f

- Data:
Data[0] = fade value.
- Projector type:
All projectors with audio control.
- Example:

Set the fade value to -15 (\xf1) on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x5f
Data[0]	\xf1
Checksum	\x71
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

fade audio extern, decrement

- Description:

Decrement the fade value of the external speaker(s). The audio volume level of the external speaker(s) will decrease.

- Command:

Command[0]	\x23
Command[1]	\x41

- Data:

No data bytes.

- Projector type:

All projectors with audio control.

- Example:

Decrement the fade value of the external speaker(s) of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x41
Checksum	\x65
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

fade audio extern, increment

- Description:

Increment the fade value of the external speaker(s). The audio volume level of the external speaker(s) will increase.

- Command:

Command[0]	\x22
Command[1]	\x41

- Data:

No data bytes.

- Projector type:

All projectors with audio control.

- Example:

Increment the fade value of the external speaker of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x41
Checksum	\x64
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

fade audio extern, read

- Description:
Read the actual fade value of the external speaker(s).

- Command:

Command[0]	\x21
Command[1]	\x41

- Data:

No data bytes.

- Return Data:

Data[0] = fade value.

- Projector type:

All projectors with audio control.

- Example:

Read the actual fade value of the external speaker(s) of a projector with address \x01.
Suppose the value equals 15.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x41
Checksum	\x63
Stop	\xff

fade audio extern, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x41
Data[0]	\x0f
Checksum	\x72
Stop	\xff

fade audio extern, write

- Description:
Write a new fade value for the extern speaker(s).

- Command:

Command[0]	\x20
Command[1]	\x41

- Data:
Data[0] = fade value.

- Projector type:
All projectors with audio control.

- Example:
Set the fade value for the external speaker(s) to \x0f on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x41
Data[0]	\x0f
Checksum	\x71
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

fade audio intern, decrement

- Description:

Decrement the fade value of the internal speaker. The audio volume level of the internal speaker will decrease.

- Command:

Command[0]	\x23
Command[1]	\x40

- Data:

No data bytes.

- Projector type:

All projectors with audio control.

- Example:

Decrement the fade value of the internal speaker of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x40
Checksum	\x64
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

fade audio intern, increment

- Description:

Increment the fade value of the internal speaker. The audio volume level of the internal speaker will increase.

- Command:

Command[0]	\x22
Command[1]	\x40

- Data:

No data bytes.

- Example:

Increment the fade value of the internal speaker of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x40
Checksum	\x63
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

fade audio intern, read

- Description:
Read the actual fade value of the internal speaker.

- Command:

Command[0]	\x21
Command[1]	\x40

- Data:

No data bytes.

- Return Data:

Data[0] = fade value.

- Projector type:

All projectors with audio control.

- Example:

Read the actual fade value of the internal speaker of a projector with address \x01.
Suppose the value equals 15.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x40
Checksum	\x62
Stop	\xff

fade audio intern, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x40
Data[0]	\x0f
Checksum	\x71
Stop	\xff

fade audio intern, write

- Description:
Write a new fade value for the intern speaker.

- Command:

Command[0]	\x20
Command[1]	\x40

- Data:

Data[0] = fade value.

- Projector type:

All projectors with audio control.

- Example:

Set the fade value for the internal speaker to \x0f on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x40
Data[0]	\x0f
Checksum	\x70
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

field polarity, read

- Description:
Read the actual position of field polarity.

- Command:

Command[0]	\x21
Command[1]	\x62

- Data:
No data bytes.

- Return Data:
Data[0] = field polarity.

	Data[0]
Negative	\x00
Positive	\x01
Automatic	\x02

- Projector type:
Please verify the Owner's Manual of the projector if the field polarity is implemented.

- Example:
Read the actual field polarity of a projector with address \x01. Suppose there is automatic installation of the field polarity.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x62
Checksum	\x84
Stop	\xff

field polarity, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x62
Data[0]	\x02
Checksum	\x86
Stop	\xff

field polarity, write

- Description:
Change the field polarity value.

- Command:

Command[0]	\x20
Command[1]	\x62

- Data:

Data[0] = field polarity.

	Data[0]
Negative	\x00
Positive	\x01
Automatic	\x02

- Projector type:
Please verify the Owner's Manual of the projector if the field polarity is implemented.

- Example:

Set the field polarity to automatic on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x62
Data[0]	\x02
Checksum	\x85
Stop	\xff

field polarity, write

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

field select, read

- Description:
Read what field is actually selected.

- Command:

Command[0]	\x21
Command[1]	\x63

- Data:
No data bytes.

- Return Data:
Data[0] = selected field.

	Data[0]
Even	\x00
Odd	\x01
Both	\x02

- Projector type:
Please verify the Owner's Manual of the projector if the field select is implemented.

- Example:
Read the actual selected field of a projector with address \x01. Suppose both fields are displayed.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x63
Checksum	\x85
Stop	\xff

field select, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x63
Data[0]	\x02
Checksum	\x87
Stop	\xff

field select, write

- Description:

Change the field selection.
(Only in case of interlaced images.)

- Command:

Command[0]	\x20
Command[1]	\x63

- Data:

Data[0] = field selection.

	Data[0]
Even	\x00
Odd	\x01
Both	\x02

- Projector type:

Please verify the Owner's Manual of the projector if the field select is implemented.

- Example:

Select both fields on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x63
Data[0]	\x02
Checksum	\x86
Stop	\xff

field select, write

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

file, copy

- Description:

Copy file1 to file2.

- File2 (destination file) has to be a custom file.
- If the location specified by the "file index" of file2 has already been taken up, file2 will overwrite that contents.
- If file1 and file2 point to the same location, the base name of file1 is replaced by the base name of file2 without affecting other data.

- Command:

Command[0]	\xc2
------------	------

- Data:

From filename followed by the to filename (no wildcards allowed).

- Projector type:

Not supported on DP100 and XLM-Series.

- Example:

Copy the file "ntsc .c01" to "camera1 .c05" on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xc2
Data[0]	\x6e (= 'n')
Data[1]	\x74 (= 't')
Data[2]	\x73 (= 's')
Data[3]	\x63 (= 'c')
Data[4]	\x20 (= ' ')
Data[5]	\x20 (= ' ')
Data[6]	\x20 (= ' ')
Data[7]	\x20 (= ' ')
Data[8]	\x2e (= '.')
Data[9]	\x63 (= 'c')
Data[10]	\x30 (= '0')
Data[11]	\x31 (= '1')
Data[12]	\x00
Data[13]	\x63 (= 'c')
Data[14]	\x61 (= 'a')
Data[15]	\x6d (= 'm')
Data[16]	\x65 (= 'e')
Data[17]	\x72 (= 'r')
Data[18]	\x61 (= 'a')
Data[19]	\x31 (= '1')
Data[20]	\x20 (= ' ')
Data[21]	\x2e (= '.')
Data[22]	\x63 (= 'c')
Data[23]	\x30 (= '0')
Data[24]	\x35 (= '5')
Data[25]	\x00
Checksum	\x9d
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

file, delete

- Description:
Delete one or more files.
- Only custom files (????????.c??) can be deleted.

- Command:

Command[0]	\xc1
------------	------

- Data:
One or more filenames (wildcards allowed).

- Projector type:
Not supported on DP100 and XLM-Series.

- Example:
Delete all files starting with the characters "nt" on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xc1
Data[0]	\x6e (= 'n')
Data[1]	\x74 (= 't')
Data[2]	\x3f (= '?')
Data[3]	\x3f (= '?')
Data[4]	\x3f (= '?')
Data[5]	\x3f (= '?')
Data[6]	\x3f (= '?')
Data[7]	\x3f (= '?')
Data[8]	\x2e (= '.')
Data[9]	\x3f (= '?')
Data[10]	\x3f (= '?')
Data[11]	\x3f (= '?')
Data[12]	\x00
Checksum	\x09
Stop	\xff

file, delete

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

■ Description:

Get a list of files.

■ Command:

Command[0]	\xc0
------------	------

■ Data:

One or more filenames (wildcards allowed).

■ Projector type:

Not supported on DP100 and XLM-Series.

■ Example:

Get a list of all files starting with the characters "nt" on a projector with address \x01. Suppose there are 2 files: "ntsc .s02" and "ntsc_rgb.c01".

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xc0
Data[0]	\x6e (= 'n')
Data[1]	\x74 (= 't')
Data[2]	\x3f (= '?')
Data[3]	\x3f (= '?')
Data[4]	\x3f (= '?')
Data[5]	\x3f (= '?')
Data[6]	\x3f (= '?')
Data[7]	\x3f (= '?')
Data[8]	\x2e (= '.')
Data[9]	\x3f (= '?')
Data[10]	\x3f (= '?')
Data[11]	\x3f (= '?')
Data[12]	\x00
Checksum	\x08
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\xc0
Data[0]	\x6e (= 'n')
Data[1]	\x74 (= 't')
Data[2]	\x73 (= 's')
Data[3]	\x63 (= 'c')
Data[4]	\x20 (= ' ')
Data[5]	\x20 (= ' ')
Data[6]	\x20 (= ' ')
Data[7]	\x20 (= ' ')
Data[8]	\x2e (= '.')
Data[9]	\x73 (= 's')
Data[10]	\x30 (= '0')
Data[11]	\x32 (= '2')
Data[12]	\x00
Data[13]	\x6e (= 'n')
Data[14]	\x74 (= 't')
Data[15]	\x73 (= 's')
Data[16]	\x63 (= 'c')
Data[17]	\x5f (= '_')
Data[18]	\x72 (= 'r')
Data[19]	\x67 (= 'g')
Data[20]	\x62 (= 'b')
Data[21]	\x2e (= '.')
Data[22]	\x63 (= 'c')
Data[23]	\x30 (= '0')
Data[24]	\x31 (= '1')
Data[25]	\x00
Checksum	\x40
Stop	\xff

file, list active

- Description:

Get the filename of the active file.

- Command:

Command[0]	\xc5
------------	------

- Data:

No data bytes.

- Example:

Get the filename of the active file on a projector with address \x01. Suppose the filename is "ntsc .c01".

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xc5
Checksum	\xc6
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

file, list active

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\xc5
Data[0]	\x6e (= 'n')
Data[1]	\x74 (= 't')
Data[2]	\x73 (= 's')
Data[3]	\x63 (= 'c')
Data[4]	\x20 (= ' ')
Data[5]	\x20 (= ' ')
Data[6]	\x20 (= ' ')
Data[7]	\x20 (= ' ')
Data[8]	\x2e (= '.')
Data[9]	\x63 (= 'c')
Data[10]	\x30 (= '0')
Data[11]	\x31 (= '1')
Data[12]	\x00
Checksum	\xf0
Stop	\xff

- Description:

Load a file.

- Command:

Command[0]	\xbd
Command[1]	\x82

- Data:

Data = Filename as a C-language string (see syntax).

If no filename is specified, the projector automatically chooses a file.

- Projector type:

DP100, XLM-Series.

- Example:

Load the file "video625" on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xbd
Command[1]	\x82
Data[0]	\x76 (= 'v')
Data[1]	\x69 (= 'i')
Data[2]	\x64 (= 'd')
Data[3]	\x65 (= 'e')
Data[4]	\x6f (= 'o')
Data[5]	\x36 (= '6')
Data[6]	\x32 (= '2')
Data[7]	\x35 (= '5')
Data[8]	\x00
Checksum	\xf4
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

file, move

- Description:

Move file1 to file2.

- Only custom files can be moved.

- If the location specified by the "file index" of file2 has already been taken up, file2 will overwrite that contents.

- If file1 and file2 point to the same location, the base name of file1 is replaced by the base name of file2 without affecting other data.

- Command:

Command[0]	\xc4
------------	------

- Data:

From filename followed by the to filename (no wildcards allowed).

- Projector type:

Not supported on DP100 and XLM-Series.

- Example:

Move the file "ntsc .c01" to "camera1 .c05" on a projector with address \x01.

file, move

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xc4
Data[0]	\x6e (= 'n')
Data[1]	\x74 (= 't')
Data[2]	\x73 (= 's')
Data[3]	\x63 (= 'c')
Data[4]	\x20 (= ' ')
Data[5]	\x20 (= ' ')
Data[6]	\x20 (= ' ')
Data[7]	\x20 (= ' ')
Data[8]	\x2e (= '.')
Data[9]	\x63 (= 'c')
Data[10]	\x30 (= '0')
Data[11]	\x31 (= '1')
Data[12]	\x00
Data[13]	\x63 (= 'c')
Data[14]	\x61 (= 'a')
Data[15]	\x6d (= 'm')
Data[16]	\x65 (= 'e')
Data[17]	\x72 (= 'r')
Data[18]	\x61 (= 'a')
Data[19]	\x31 (= '1')
Data[20]	\x20 (= ' ')
Data[21]	\x2e (= '.')
Data[22]	\x63 (= 'c')
Data[23]	\x30 (= '0')
Data[24]	\x35 (= '5')
Data[25]	\x00
Checksum	\x9f
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

file, read

- Description:

Read the contents of a file.

- This command can be used to make a backup of your projector files on your hard disk. Use the command "file, write" to restore those files on your projector.

- The file contents is compressed and projector-dependent. (It could even be version-dependent.)

- Command:

Command[0]	\xbf
------------	------

- Data:

Filename.

- Return Data:

Data[0..12] = filename.

Data[13] = length of file contents (bytes)

Data[14..] = file contents

- Projector type:

Not supported on DP100 and XLM-Series.

- Example (imaginary):

Read the contents of the file "ntsc .c01" on a projector with address \x01.

file, read

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xbf
Data[0]	\x6e (= 'n')
Data[1]	\x74 (= 't')
Data[2]	\x73 (= 's')
Data[3]	\x63 (= 'c')
Data[4]	\x20 (= ' ')
Data[5]	\x20 (= ' ')
Data[6]	\x20 (= ' ')
Data[7]	\x20 (= ' ')
Data[8]	\x2e (= '.')
Data[9]	\x63 (= 'c')
Data[10]	\x30 (= '0')
Data[11]	\x31 (= '1')
Data[12]	\x00
Checksum	\xea
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

file, read

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\xbf
Data[0]	\x6e (= 'n')
Data[1]	\x74 (= 't')
Data[2]	\x73 (= 's')
Data[3]	\x63 (= 'c')
Data[4]	\x20 (= ' ')
Data[5]	\x20 (= ' ')
Data[6]	\x20 (= ' ')
Data[7]	\x20 (= ' ')
Data[8]	\x2e (= '.')
Data[9]	\x63 (= 'c')
Data[10]	\x30 (= '0')
Data[11]	\x31 (= '1')
Data[12]	\x00
Data[13]	\x05
Data[14]	\x56
Data[15]	\x22
Data[16]	\x37
Data[17]	\x19
Data[18]	\x53
Checksum	\x09
Stop	\xff

file, read permission

- Description:
Read the permissions of a file.
- Command:

Command[0]	\xbd
Command[1]	\x48

- Data:

Path	C-language string
------	-------------------

Path: File name starting with an environment name.

- Return Data:

Path	C-language string
File permissions	C-language string

File permissions:

Data[0]	read	'r'	or '-'
Data[1]	write	'w'	or '-'
Data[2]	execute	'x'	or '-'
Data[3]		\x00	

- Projector type:
All projectors with directory structure.
- Example:
Not yet available.

file, rename

- Description:

Rename file1 to file2.

- Only custom files can be renamed.

- Only the base name of a file can be renamed. This means that file1 and file2 have to point to the same location (file1 and file2 must have the same "file index")

- Command:

Command[0]	\xc3
------------	------

- Data:

Old filename followed by the new filename (no wildcards allowed).

- Projector type:

Not supported on DP100 and XLM-Series.

- Example:

Rename the file "ntsc .c01" to "camera1 .c01" on a projector with address \x01.

file, rename

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xc3
Data[0]	\x6e (= 'n')
Data[1]	\x74 (= 't')
Data[2]	\x73 (= 's')
Data[3]	\x63 (= 'c')
Data[4]	\x20 (= ' ')
Data[5]	\x20 (= ' ')
Data[6]	\x20 (= ' ')
Data[7]	\x20 (= ' ')
Data[8]	\x2e (= '.')
Data[9]	\x63 (= 'c')
Data[10]	\x30 (= '0')
Data[11]	\x31 (= '1')
Data[12]	\x00
Data[13]	\x63 (= 'c')
Data[14]	\x61 (= 'a')
Data[15]	\x6d (= 'm')
Data[16]	\x65 (= 'e')
Data[17]	\x72 (= 'r')
Data[18]	\x61 (= 'a')
Data[19]	\x31 (= '1')
Data[20]	\x20 (= ' ')
Data[21]	\x2e (= '.')
Data[22]	\x63 (= 'c')
Data[23]	\x30 (= '0')
Data[24]	\x31 (= '1')
Data[25]	\x00
Checksum	\x9a
Stop	\xff

file, rename

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

file, write

■ Description:

Write the contents of a file.

- This command can be used to restore files that were previously backed up on your hard disk to your projector. See the command "file, read" for more information on how to backup files to your hard disk.

- The file contents is compressed and projector-dependent. (It could even be version-dependent.)

■ Command:

Command[0]	\xbe
------------	------

■ Data:

Data[0..12] = filename.

Data[13] = length of file contents (bytes)

Data[14..] = file contents

■ Projector type:

Not supported on DP100 and XLM-Series.

■ Example (imaginary):

Write the contents of the file "ntsc .c01" on a projector with address \x01.

file, write

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xbe
Data[0]	\x6e (= 'n')
Data[1]	\x74 (= 't')
Data[2]	\x73 (= 's')
Data[3]	\x63 (= 'c')
Data[4]	\x20 (= ' ')
Data[5]	\x20 (= ' ')
Data[6]	\x20 (= ' ')
Data[7]	\x20 (= ' ')
Data[8]	\x2e (= '.')
Data[9]	\x63 (= 'c')
Data[10]	\x30 (= '0')
Data[11]	\x31 (= '1')
Data[12]	\x00
Data[13]	\x05
Data[14]	\x56
Data[15]	\x22
Data[16]	\x37
Data[17]	\x19
Data[18]	\x53
Checksum	\x09
Stop	\xff

file, write

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

frame delay, read

- Description:

Read the actual value of the frame delay.

- Command:

Command[0]	\x21
Command[1]	\x65

- Data:

No data bytes.

- Return Data:

Data[0] = value of the frame delay.

	Data[0]
Off	\x00
On	\x01

- Projector type:

Please verify the Owner's Manual of the projector if the frame delay is implemented.

- Example:

Read the actual value of the frame delay of a projector with address \x01. Suppose the frame delay is on.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x65
Checksum	\x87
Stop	\xff

frame delay, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x65
Data[0]	\x01
Checksum	\x88
Stop	\xff

frame delay, write off

- Description:

Set the frame delay off.

- Command:

Command[0]	\x26
Command[1]	\x65

- Data:

No data bytes.

- Projector type:

Please verify the Owner's Manual of the projector if the frame delay is implemented.

- Example:

Set the frame delay off on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x65
Checksum	\x8c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

frame delay, write on

- Description:

Set the frame delay on.

- Command:

Command[0]	\x27
Command[1]	\x65

- Data:

No data bytes.

- Projector type:

Please verify the Owner's Manual of the projector if the frame delay is implemented.

- Example:

Set the frame delay on on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x65
Checksum	\x8d
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

freeze, write off

- Description:
Disable freeze.

- Command:

Command[0]	\x26
Command[1]	\x23

- Data:
No data bytes.

- Example:
Disable freeze of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x23
Checksum	\x4a
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

- Description:
Enable freeze.

- Command:

Command[0]	\x27
Command[1]	\x23

- Data:
No data bytes.

- Example:
Enable freeze of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x23
Checksum	\x4b
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

gamma, decrement

- Description:
Decrement gamma.

- Command:

Command[0]	\x23
Command[1]	\x70

- Data:
No data bytes.

- Example:
Decrement the gamma of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x70
Checksum	\x94
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

gamma, increment

- Description:
Increment gamma.

- Command:

Command[0]	\x22
Command[1]	\x70

- Data:
No data bytes.

- Example:
Increment the gamma of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x70
Checksum	\x93
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

gamma, read

- Description:
Read the actual gamma value.

- Command:

Command[0]	\x21
Command[1]	\x70

- Data:
No data bytes.

- Return Data:
Data[0] = gamma value.

- Example:
Read the actual gamma of a projector with address \x01. Suppose the gamma equals \x05 (= 5).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x70
Checksum	\x92
Stop	\xff

gamma, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x70
Data[0]	\x05
Checksum	\x97
Stop	\xff

gamma, write

- Description:
Write a new gamma value.

- Command:

Command[0]	\x20
Command[1]	\x70

- Data:
Data[0] = gamma value.

- Example:

Set the gamma to \x05 (= 5) on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x70
Data[0]	\x05
Checksum	\x96
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

horizontal period, read

- Description:
Read the horizontal period in nanoseconds.

- Command:

Command[0]	\x21
Command[1]	\x5b

- Data:
No data bytes.

- Return Data:
Data[0..3] = horizontal period in nanoseconds.

Data[0]	MSB of value
Data[1]	
Data[2]	
Data[3]	LSB of value

- Example:
Read the horizontal period of the active source on a projector with address \x01.
Suppose the active file is xga_60 with a horizontal period of 48360 ns.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x5b
Checksum	\x7d
Stop	\xff

horizontal period, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x5b
Data[0]	\x00
Data[1]	\x00
Data[2]	\xbc
Data[3]	\xe8
Checksum	\x21
Stop	\xff

horizontal period, write

- Description:
Write the horizontal period in nanoseconds.

- Command:

Command[0]	\x20
Command[1]	\x5b

- Data:
Data[0..3] = horizontal period in nanoseconds.

Data[0]	MSB of value
Data[1]	
Data[2]	
Data[3]	LSB of value

- Example:
Set the horizontal period to 48360 ns (xga_60) on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x5b
Data[0]	\x00
Data[1]	\x00
Data[2]	\xbc
Data[3]	\xe8
Checksum	\x20
Stop	\xff

horizontal period, write

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

image orientation, read

- Note:
See "installation, read".

image orientation, write

- Note:
See "installation, write".

information display, read

- Description:
Read the information display codes.


- Command:

Command[0]	\x73
------------	------

- Data:
No data bytes.

- Return Data:

Data[0]	high byte
Data[1]	low byte

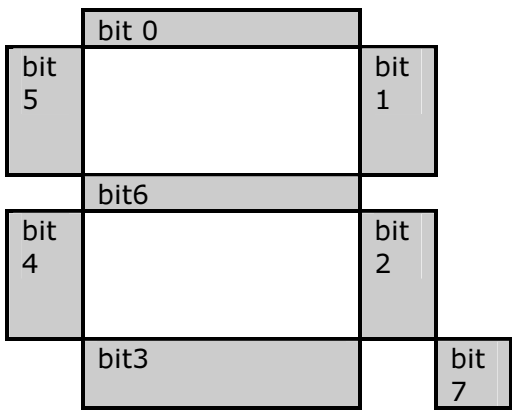

bit7 = most significant bit

- Projector type:
All projectors with an information display.

information display, read

■ Example:

Read the information display of a projector with address \x01. Suppose it shows "F1.".

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x73
Checksum	\x74
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x73
Data[0]	\x71
Data[1]	\x86
Checksum	\x6b
Stop	\xff

infrared ports, read

■ Description:

Read the status of the infrared ports.

■ Command:

Command[0]	\x6f
------------	------

■ Data:

No data bytes.

■ Return Data:

Data[0] = status.

bit#	bit = 0	bit = 1
bit0 (LSB)	receiver front disabled	receiver front enabled
bit1	receiver rear disabled	receiver rear enabled
bit2	no hardwired remote*	hardwired remote
bit3	receiver side disabled	receiver side enabled

*: when no hardwired remote is connected, bit 0 and bit 1 indicate the previous state of the corresponding receivers. (in reality, they are enabled)

■ Notes:

- In case of a DP100 or the XLM-Series, bit2 is undetermined.
- Not all projectors have all (front, rear and side) receivers. Check your Owner's Manual.

infrared ports, read

■ Example:

Read the status of the infrared ports of a projector with address \x01. Suppose a hardwired remote is used and the front and rear receiver are enabled.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x6f
Checksum	\x70
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x6f
Data[0]	\x07
Checksum	\x77
Stop	\xff

infrared ports, write

- Description:
Enable/Disable one or more infrared ports.

- Command:

Command[0]	\x6e
------------	------

- Data:

Data[0] = status.

bit#	bit = 0	bit = 1
bit0 (LSB)	disable receiver front	enable receiver front
bit1	disable receiver rear	enable receiver rear
bit2	-	-
bit3	disable receiver side	enable receiver side

*: when no hardwired remote is connected, the receiver front, rear and side cannot be disabled; so bit0, bit1 and bit3 will take effect after a hardwired remote has been connected.

- Note:
Not all projectors have all (front, rear and side) receivers. Check your Owner's Manual .
- Example:
Enable the front and rear receiver of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x6e
Data[0]	\x03
Checksum	\x72
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

installation, read

- Description:
Read installation.

- Command:

Command[0]	\x21
Command[1]	\x24

- Data:
No data bytes.

- Return Data:
Data[0] = installation.

Installation	Data[0]
Front/Table	\x40
Front/Ceiling	\x80
Rear/Table	\x00
Rear/Ceiling	\xc0

- Example:
Read installation of a projector with address \x01. Suppose the projector is installed in front/ceiling.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x24
Checksum	\x46
Stop	\xff

installation, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x24
Data[0]	\x80
	\x00
Checksum	\xc6
Stop	\xff

installation, write

- Description:

Write installation (front/table, ...).

- Command:

Command[0]	\x20
Command[1]	\x24

- Data:

Data[0] = installation.

Installation	Data[0]
Front/Table	\x40
Front/Ceiling	\x80
Rear/Table	\x00
Rear/Ceiling	\xc0

- Example:

Set the installation of a projector with address \x01 to front/ceiling.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x24
Data[0]	\x80
	\x00
Checksum	\xc5
Stop	\xff

interlaced, read

- Description:
Read the actual value of interlaced.

- Command:

Command[0]	\x21
Command[1]	\x60

- Data:
No data bytes.

- Return Data:
Data[0] = interlaced value.

	Data[0]
Not interlaced	\x00
Interlaced	\x01

- Example:
Read the actual value of interlaced of a projector with address \x01. Suppose the signal is interlaced.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x60
Checksum	\x82
Stop	\xff

interlaced, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x60
Data[0]	\x00
Checksum	\x82
Stop	\xff

interlaced, write off

- Description:
Tell the projector the signal applied is not interlaced.

- Command:

Command[0]	\x26
Command[1]	\x60

- Data:
No data bytes.

- Example:
Define the signal as not interlaced on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x60
Checksum	\x87
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

interlaced, write on

- Description:
Tell the projector the signal applied is interlaced.

- Command:

Command[0]	\x27
Command[1]	\x60

- Data:
No data bytes.

- Example:
Define the signal as interlaced on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x60
Checksum	\x88
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

internal pattern, read

- Description:
Read the active internal pattern.

- Command:

Command[0]	\x41
Command[1]	\xc1

- Data:
No data bytes.
- Return Data:
The return data-transfer being the file name of the internal pattern is a C-language string (see syntax).
- Projector type:
DP100, XLM-Series.

internal pattern, write

- Description:
Write an internally generated pattern.
- Command:

Command[0]	\x41
------------	------

- Data:

Convergence green

Data[0]	\x01
---------	------

Convergence red/green

Data[0]	\x02
---------	------

Convergence blue/green

Data[0]	\x03
---------	------

Convergence red/blue/green

Data[0]	\x21
Data[1]	\x20

Hatch

Data[0]	\x04
---------	------

Checkerboard

Data[0]	\x19
---------	------

Color bars

Data[0]	\x1a
---------	------

Multiburst

Data[0]	\x1b
---------	------

internal pattern, write

Outline

Data[0]	\x1c
---------	------

Alpha numeric characters

Data[0]	\x23
---------	------

Page character

Data[0]	\x22
Data[1]	ascii code of an alphabetic character

Purity

Data[0]	\x20
---------	------

To change the color of the purity pattern, use the command "overlay palette, write" and change palette entry 1.

Leveling pattern (coarse)

Data[0]	\x24
Data[1]	\x01 (red) or \x02 (green) or \x03 (blue)
Data[2]	\x01 (position 1) or \x02 (position 2) or \x03 (position 3) or \x04 (position 4) or \x05 (position 5) or \x06 (position 6)

internal pattern, write

Leveling pattern (fine)

Data[0]	\x25
Data[1]	\x01 (red) or \x02 (green) or \x03 (blue)
Data[2]	\x01 (position 1) or \x02 (position 2) or \x03 (position 3) or \x04 (position 4) or \x05 (position 5) or \x06 (position 6)
Data[3]	\x00..\x255 ("contrast" level)

Other pattern (file name) - see notes

Data[0]	\xc0
Data[1..]	C-language string containing the file name

■ Notes:

- All data bytes mentioned above can optionally be followed by an extra byte to indicate that the pattern must be inverted or not. (exception: "Purity" and "Other pattern")

	Data[next] ^{OPTIONAL}
not inverted	\x00
inverted	\x01

- The file names that can be used for "Other pattern" can be found in the menu structure or in the Owner's Manual.
- The file names that can be used for "Other pattern" are case sensitive.

internal pattern, write

■ Example:

Write the purity internal pattern on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x41
Data[0]	\x20
Checksum	\x62
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

keystone horizontal, decrement

- Description:
Decrement the horizontal keystone.

- Command:

Command[0]	\x23
Command[1]	\x50

- Data:
No data bytes.

- Example:
Decrement the horizontal keystone of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x50
Checksum	\x74
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

keystone horizontal, increment

- Description:

Increment the horizontal keystone.

- Command:

Command[0]	\x22
Command[1]	\x50

- Data:

No data bytes.

- Example:

Increment the horizontal keystone of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x50
Checksum	\x73
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

keystone horizontal, read

- Description:
Read the actual value of the horizontal keystone.

- Command:

Command[0]	\x21
Command[1]	\x50

- Data:
No data bytes.

- Return Data:
Data[0..1] = value of the horizontal keystone.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Read the actual value of the horizontal keystone of a projector with address \x01.
Suppose the horizontal keystone equals 0.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x50
Checksum	\x72
Stop	\xff

keystone horizontal, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x50
Data[0]	\x00
Data[1]	\x00
Checksum	\x72
Stop	\xff

keystone horizontal, write

- Description:
Write a new value for the horizontal keystone.

- Command:

Command[0]	\x20
Command[1]	\x50

- Data:
Data[0..1] = value of the horizontal keystone.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Set the horizontal keystone to 0 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x50
Data[0]	\x00
Data[1]	\x00
Checksum	\x71
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

lamp, read article number

- Description:

Read the article number of the lamp.

- Command:

Command[0]	\x76
Command[1]	\x84

- Data:

No data bytes.

- Return Data:

The return data-transfer being the lamp article number is a C-language string (see syntax).

- Projector type:

Only for projectors that have a memory chip attached to the lamp.

- Example:

Read the lamp article number of a projector with address \x01. Suppose the lamp article number is 'R9840740'.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x84
Checksum	\xfb
Stop	\xff

lamp, read article number

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x84
Data[0]	\x52 (= 'R')
Data[1]	\x39 (= '9')
Data[2]	\x38 (= '8')
Data[3]	\x34 (= '4')
Data[4]	\x30 (= '0')
Data[5]	\x37 (= '7')
Data[6]	\x34 (= '4')
Data[7]	\x30 (= '0')
Data[8]	\x00
Checksum	\xbd
Stop	\xff

lamp, read CLO status

- Description:
Read the status (on/off) of the CLO.

- Command:

Command[0]	\x76
Command[1]	\x96

- Data:
No data bytes.

- Return Data:
Data[0] = status.

Status	Data[0]
Off	\x00
On	\x01

- Projector type:
All projectors where the CLO has been installed.

lamp, read CLO status

■ Example:

Read the status of the CLO of a projector with address \x01. Suppose the CLO is turned on.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x96
Checksum	\x0d
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x96
Data[0]	\x01
Checksum	\x0e
Stop	\xff

lamp, read history

- Description:
Read the lamp run time history list.

- Command:

Command[0]	\x74
------------	------

- Data:
No data bytes.

- Return Data:

Lamp[0] serial number	C-language string
Lamp[0] run time	see formula below
Lamp[1] serial number	C-language string
Lamp[1] run time	see formula below
...	
Lamp[n-1] run time	see formula below
Lamp[n-1] serial number	C-language string

n = number of lamps stored in the history list

- C-language string (see syntax).
- formula lamp run time:
$$\text{Lamp run time (hours)} = \text{Data}[1] * 256 + \text{Data}[0]$$

lamp, read maximum run time

- Description:

Read the maximum lamp run time in seconds. This is the maximum guaranteed run time for the lamp.

- Command:

Command[0]	\x76
Command[1]	\x89

- Data:

No data bytes.

- Return Data:

The return data-transfer being the maximum lamp run time in seconds consists of four data bytes. The first byte is the most significant byte !

Formula:

Maximum lamp run time (seconds)

$$= \text{Data}[0] * 256^3 + \text{Data}[1] * 256^2 + \text{Data}[2] * 256 + \text{Data}[3]$$

- Projector type:

Not all projectors support this command.

- Example:

Read the maximum lamp run time of a projector with address \x01. Suppose the maximum is 1000 hours.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x89
Checksum	\x00
Stop	\xff

lamp, read maximum run time

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x89
Data[0]	\x00
Data[1]	\x36
Data[2]	\xee
Data[3]	\x80
	\x00
Checksum	\xa4
Stop	\xff

maximum lamp run time =

$$\text{\x00} * 256^3 + \text{\x36} * 256^2 + \text{\xee} * 256 + \text{\x80}$$

lamp, read message run time

- Description:

Read the run time when the message menu, indicating the remaining lamp run time, first occurs. This message menu is displayed for 1 minute and is repeated every 30 minutes

- Command:

Command[0]	\x76
Command[1]	\x8b

- Data:

No data bytes.

- Return Data:

The return data-transfer being the lamp message run time in seconds consists of four data bytes. The first byte is the most significant byte !

Formula:

Lamp message run time (seconds)

$$= \text{Data}[0] * 256^3 + \text{Data}[1] * 256^2 + \text{Data}[2] * 256 + \text{Data}[3]$$

- Projector type:

Not all projectors support this command.

- Example:

Read the lamp message run time of a projector with address \x01. Suppose the message appears at 970 hours.

lamp, read message run time

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x8b
Checksum	\x02
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x8b
Data[0]	\x00
Data[1]	\x35
Data[2]	\x48
Data[3]	\xa0
Checksum	\x1f
Stop	\xff

lamp message run time =

$$\backslash x00 * 256^3 + \backslash x35 * 256^2 + \backslash x48 * 256 + \backslash xa0$$

lamp, read nominal current

- Description:

Read the nominal current of the lamp.

- Command:

Command[0]	\x76
Command[1]	\x9d

- Data:

No data bytes.

- Return Data:

The return data-transfer being the lamp nominal current is a Multi-byte value (see syntax).

- Projector type:

Not all projectors support this command.

- Example:

Read the lamp nominal current of a projector with address \x01. Suppose the nominal current is 100 A.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x9d
Checksum	\x14
Stop	\xff

lamp, read nominal current

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x9d
Data[0]	\x00
Data[1]	\x00
Data[2]	\x00
Data[3]	\x64
Checksum	\x78
Stop	\xff

lamp, read power

- Description:

Read the actual lamp power.

- Command:

Command[0]	\x76
Command[1]	\x8f

- Data:

No data bytes.

- Return Data:

The return data-transfer being the lamp power is a Multi-byte value (see syntax).

- Projector type:

Not all projectors support this command.

- Example:

Read the lamp power of a projector with address \x01. Suppose the power is 1000 W.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x8f
Checksum	\x06
Stop	\xff

lamp, read power

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x8f
Data[0]	\x00
Data[1]	\x36
Data[2]	\xee
Data[3]	\x80
	\x00
Checksum	\xaa
Stop	\xff

lamp, read run time

- Description:

Read the lamp run time in hours.

- Command:

Command[0]	\x64
------------	------

- Data:

No data bytes.

- Return Data:

The return data-transfer being the lamp run time in hours consists of four data bytes.
The first byte is the most significant byte !

Formula:

Lamp run time (hours)

$$= \text{Data}[0] * 256^3 + \text{Data}[1] * 256^2 + \text{Data}[2] * 256 + \text{Data}[3]$$

- Example:

Read the lamp run time of a projector with address \x01.
Suppose the lamp run time is 100 hours.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x64
Checksum	\x65
Stop	\xff

lamp, read run time

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x64
Data[0]	\x00
Data[1]	\x00
Data[2]	\x00
Data[3]	\x64
Checksum	\xc9
Stop	\xff

lamp run time =

$$\text{\textbackslash x00} * 256^3 + \text{\textbackslash x00} * 256^2 + \text{\textbackslash x00} * 256 + \text{\textbackslash x64}$$

lamp, read serial number (1)

- Description:

Read the serial number of the lamp.

- Command:

Command[0]	\x63
------------	------

- Data:

No data bytes.

- Return Data:

The return data-transfer being the lamp serial number is a pascal-language string (see syntax).

- Example:

Read the lamp serial number of a projector with address \x01. Suppose the lamp serial number is '0655230'.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x63
Checksum	\x64
Stop	\xff

lamp, read serial number (1)

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x63
Data[0]	\x07
Data[1]	\x30 (= '0')
Data[2]	\x36 (= '6')
Data[3]	\x35 (= '5')
Data[4]	\x35 (= '5')
Data[5]	\x32 (= '2')
Data[6]	\x33 (= '3')
Data[7]	\x30 (= '0')
Checksum	\xd0
Stop	\xff

lamp, read serial number (2)

- Description:

Read the serial number of the lamp.

- Command:

Command[0]	\x76
Command[1]	\x86

- Data:

No data bytes.

- Return Data:

The return data-transfer being the lamp serial number is a C-language string (see syntax).

- Projector type:

Only for projectors that have a memory chip attached to the lamp.

- Example:

Read the lamp serial number of a projector with address \x01. Suppose the lamp serial number is '0655230'.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x86
Checksum	\xfd
Stop	\xff

lamp, read serial number (2)

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x86
Data[0]	\x30 (= '0')
Data[1]	\x36 (= '6')
Data[2]	\x35 (= '5')
Data[3]	\x35 (= '5')
Data[4]	\x32 (= '2')
Data[5]	\x33 (= '3')
Data[6]	\x30 (= '0')
Data[7]	\x00
Checksum	\x62
Stop	\xff

lamp, read status

- Description:
Read the lamp status.

- Command:

Command[0]	\x6c
------------	------

- Data:
No data bytes.

- Return Data:
Data[0] = lamp status.
Only bit0 (least significant bit) is significant.

bit#	bit = 0	bit = 1
bit0	nominal power	high power

- Projector type:
BD8100, BG8100, BG8200, BG9200.

- Example:
Read the lamp status of a projector with address \x01. Suppose the lamp is configured in high power.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x6c
Checksum	\x6d
Stop	\xff

lamp, read status

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x6c
Data[0]	\x01
Checksum	\x6e
Stop	\xff

lamp, read strikes

- Description:

Read the number of strikes of the lamp. This is the number of times the lamp has been switched on.

- Command:

Command[0]	\x76
Command[1]	\x8e

- Data:

No data bytes.

- Return Data:

The return data-transfer being the number of strikes consists of four data bytes. The first byte is the most significant byte !

Formula:

Number of strikes

$$= \text{Data}[0] * 256^3 + \text{Data}[1] * 256^2 + \text{Data}[2] * 256 + \text{Data}[3]$$

- Projector type:

Only for projectors that have a memory chip attached to the lamp.

lamp, read strikes

■ Example:

Read the number of lamp strikes of a projector with address \x01. Suppose the number of strikes is 1000.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x8e
Checksum	\x05
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x8e
Data[0]	\x00
Data[1]	\x00
Data[2]	\x03
Data[3]	\xe8
Checksum	\xf0
Stop	\xff

lamp, read warning run time

- Description:

Read the run time when the warning menu, indicating the end of life of the lamp, first occurs. This warning menu is displayed on the screen and is repeated every 30 minutes

- Command:

Command[0]	\x76
Command[1]	\x8c

- Data:

No data bytes.

- Return Data:

The return data-transfer being the lamp warning run time in seconds consists of four data bytes. The first byte is the most significant byte !

Formula:

Lamp warning run time (seconds)

$$= \text{Data}[0] * 256^3 + \text{Data}[1] * 256^2 + \text{Data}[2] * 256 + \text{Data}[3]$$

- Projector type:

Not all projectors support this command.

- Example:

Read the lamp warning run time of a projector with address \x01. Suppose the message appears at 1000 hours.

lamp, read warning run time

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x8c
Checksum	\x03
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x8c
Data[0]	\x00
Data[1]	\x36
Data[2]	\xee
Data[3]	\x80
	\x00
Checksum	\xa7
Stop	\xff

lamp warning run time =

$$\text{\x00} * 256^3 + \text{\x36} * 256^2 + \text{\xee} * 256 + \text{\x80}$$

lamp, reset run time

- Description:

Reset the lamp run time (after installation of a new lamp).

- Command:

Command[0]	\x68
------------	------

- Data:

The data being the lamp serial number is a pascal-language string (see syntax).
Optionally, the lamp serial number can be followed by the lamp article number which is also a pascal-language string (see syntax).

- Projector type:

- Only for projectors that don't have a memory chip attached to the lamp. See your Owner's Manual if the "Reset Lamp Runtime" item exists in the menu structure.
- The lamp article number (optional data) is only allowed when the projector supports multiple lamp types.

lamp, write CLO status

- Description:

Set the CLO on or off.

- Command:

Command[0]	\x76
Command[1]	\x16

- Data:

Data[0] = Status

Status	Data[0]
Off	\x00
On	\x01

- Projector type:

All projectors where the CLO has been installed.

lamp, write CLO status

■ Example:

Set the CLO on of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x16
Data[0]	\x01
Checksum	\x8e
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

lamp, write on/off

■ Description:

Write lamp on/off.

■ Command:

Command[0]	\x76
Command[1]	\x1a

■ Data:

	Data[0]
Off	\x00
On	\x01

■ Projector type:

Only for projectors where the lamp can be switched on/off independent from the power.

■ Example:

Set the lamp on of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x76
Command[1]	\x1a
Data[0]	\x01
Checksum	\x92
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

lamp, write status

■ Description:

Write a new lamp status.

■ Command:

Command[0]	\xc6
------------	------

■ Data:

Data[0] = lamp status.

Only bit0 (least significant bit) is significant.

bit#	bit = 0	bit = 1
bit0	nominal power	high power

■ Projector type:

BD8100(LC), BG8100(LC), BG8200(LC), BG9200(LC).

■ Example:

Set the lamp status to high power of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xc6
Data[0]	\x01
Checksum	\xc8
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

language, read

- Description:
Read the language used for the on-screen-display.

- Command:

Command[0]	\x71
------------	------

- Data:
No data bytes.
- Projector type:

See your Owner's Manual to verify what languages are supported by the projector software.

- Return Data:
Data[0] = language.

Language	Data[0]
English (International)	\x00
French	\x01
Spanish	\x02
Deutsch	\x03
Chinese	\x04

- Example:
Read the language used for the on-screen-display of a projector with address \x01.
Suppose the language is "English (International)".

language, read

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x71
Checksum	\x72
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x71
Data[0]	\x00
Checksum	\x72
Stop	\xff

language, write

- Description:

Change the language used for the on-screen-display.

- Command:

Command[0]	\x70
------------	------

- Data:

Data[0] = language.

Language	Data[0]
English (International)	\x00
French	\x01
Spanish	\x02
Deutsch	\x03
Chinese	\x04

- Projector type:

See your Owner's Manual to verify what languages are supported by the projector software.

- Example:

Change the language used for the on-screen-display of a projector with address \x01 to "English (International)".

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x70
Data[0]	\x00
Checksum	\x71
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

- Note:
See "layout, write".

layout, read

- Description:
Read the active layout name/path.

- Command:

Command[0]	\x21
Command[1]	\x90

- Data (OPTIONAL):

Data[0]	
-	The return data will contain the layout name.
\x01	The return data will contain the layout path.

- Projector type:
See your Owner's Manual to verify if your projector works with layout files.
- Return Data:
The return data-transfer being the layout name/path is a C-language string (see syntax).
- Example:
Read the name of the active layout of a projector with address \x01. Suppose the layout is "1.txt".

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x90
Checksum	\xb2
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x90
Data[0]	\x31
Data[1]	\x2e
Data[2]	\x74
Data[3]	\x78
Data[4]	\x74
Data[5]	\x00
Checksum	\x71
Stop	\xff

layout, save

- Description:
Save the active layout.

- Command:

Command[0]	\x28
Command[1]	\x90

- Data (OPTIONAL):

Data[0..]	
-	Save the active layout with its current name/path.
C-language string	Save the active layout with a new name/path.

- Projector type:
See your Owner's Manual to verify if your projector works with layout files.

- Example:

Save the active layout as "1.txt" on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x28
Command[1]	\x90
Data[0]	\x31
Data[1]	\x2e
Data[2]	\x74
Data[3]	\x78
Data[4]	\x74
Data[5]	\x00
Checksum	\x78
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

layout, write

- Description:

Activate a new layout.

- Command:

Command[0]	\x20
Command[1]	\x90

- Data:

The data-transfer being the layout name/path is a C-language string (see syntax).

- Projector type:

See your Owner's Manual to verify if your projector works with layout files.

- Example:

Activate the layout "1.txt" on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x90
Data[0]	\x31
Data[1]	\x2e
Data[2]	\x74
Data[3]	\x78
Data[4]	\x74
Data[5]	\x00
Checksum	\x70
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

lens, anamorphic

- Description:
Adjust the anamorphic lens.
- Command:

Command[0]	\xf4
Command[1]	\x86

- Data:
Data[0] = function

Function	Data[0]	
Off	\x00	Data[1] not allowed !
On	\x01	Data[1] not allowed !
Shift out	\x82	
Shift in	\x83	
Pin out	\x84	
Pin in	\x85	

Data[1] = speed (OPTIONAL)

Speed (<u>OPTIONAL</u>)	Data[1]
Fine (DEFAULT)	\x00
Coarse	\x01

- Projector type:
All projectors with motorized lens anamorphic.
- Example:
Activate the anamorphic lens of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf4
Command[1]	\x86
Data[0]	\x01
Checksum	\x7c
Stop	\xff

lens, anamorphic

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

lens, bridge

- Description:

Open or close the lens bridge.

- Command:

Command[0]	\xf4
Command[1]	\x85

- Data:

Direction	Data[0]
Up	\x00
Down	\x01

- Projector type:

All projectors with motorized lens bridge.

- Example:

Open the bridge of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf4
Command[1]	\x85
Data[0]	\x00
Checksum	\x7a
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

- Description:
Focus the lens.

- Command:

Command[0]	\xf4
Command[1]	\x83

- Data:
Data[0] = direction.

Direction	Data[0]
Near	\x00
Far	\x01

- Projector type:
All projectors with motorized lens adjustment.
- Example:
Focus the lens of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf4
Command[1]	\x83
Data[0]	\x00
Checksum	\x78
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

lens, shift

- Description:
Shift the lens up, down, left or right.

- Command:

Command[0]	\xf4
Command[1]	\x81

- Data:

Data[0] = direction.

Direction	Data[0]
Up	\x00
Down	\x01
Left	\x02
Right	\x03

- Projector type:
All projectors with motorized lens adjustment.
- Example:
Shift the lens up of of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf4
Command[1]	\x81
Data[0]	\x00
Checksum	\x76
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

- Description:
Change the tilt of the projector.

- Command:

Command[0]	\xf4
Command[1]	\x84

- Data:
Data[0] = direction.

Direction	Data[0]
Counterclockwise	\x00
Clockwise	\x01

- Projector type:
All projectors with motorized tilt adjustment.
- Example:
Change the tilt in counterwise direction of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf4
Command[1]	\x84
Data[0]	\x01
Checksum	\x7a
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

lens, zoom

- Description:
Zoom the lens.

- Command:

Command[0]	\xf4
Command[1]	\x82

- Data:
Data[0] = direction.

Direction	Data[0]
In	\x00
Out	\x01

- Projector type:
All projectors with motorized lens adjustment.

- Example:
Lens-zoom-in of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf4
Command[1]	\x82
Data[0]	\x00
Checksum	\x77
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

lines active, decrement

- Description:
Decrement the active number of lines.

- Command:

Command[0]	\x23
Command[1]	\x59

- Data:
No data bytes.

- Example:
Decrement the active number of lines on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x59
Checksum	\x7d
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

lines active, increment

- Description:
Increment the active number of lines.

- Command:

Command[0]	\x22
Command[1]	\x59

- Data:
No data bytes.

- Example:
Increment the active number of lines on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x59
Checksum	\x7c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

lines active, read

- Description:
Read the active number of lines.

- Command:

Command[0]	\x21
Command[1]	\x59

- Data:
No data bytes.

- Return Data:
Data[0..1] = active number of lines.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Read the active number of lines on a projector with address \x01. Suppose the active number of lines is 480 (\x01e0).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x59
Checksum	\x7b
Stop	\xff

lines active, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x59
Data[0]	\x01
Data[1]	\xe0
Checksum	\x5c
Stop	\xff

lines active, write

- Description:
Change the active number of lines.

- Command:

Command[0]	\x20
Command[1]	\x59

- Data:

Data[0..1] = active number of lines.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:

Set the active number of lines to 480 (\x01e0) on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x59
Data[0]	\x01
Data[1]	\xe0
Checksum	\x5b
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

line start, decrement

- Description:
Decrement the value of line start.

- Command:

Command[0]	\x23
Command[1]	\x5a

- Data:
No data bytes.

- Example:
Decrement line start on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x5a
Checksum	\x7e
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

line start, increment

- Description:

Increment the value of line start.

- Command:

Command[0]	\x22
Command[1]	\x5a

- Data:

No data bytes.

- Example:

Increment line start on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x5a
Checksum	\x7d
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

line start, read

- Description:
Read the value of line start.

- Command:

Command[0]	\x21
Command[1]	\x5a

- Data:
No data bytes.

- Return Data:
Data[0..1] = line start.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Read the value of line start on a projector with address \x01. Suppose the value is 20 (\x0014).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x5a
Checksum	\x7c
Stop	\xff

line start, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x5a
Data[0]	\x00
Data[1]	\x14
Checksum	\x90
Stop	\xff

line start, write

- Description:
Change the value of line start.
- Command:

Command[0]	\x20
Command[1]	\x5a

- Data:
Data[0..1] = line start.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Set the value of line start to 20 (\x0014) on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x5a
Data[0]	\x00
Data[1]	\x14
Checksum	\x8f
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

lines total, decrement

■ Description:

Decrement the total number of lines.

■ Command:

Command[0]	\x23
Command[1]	\x58

■ Data:

No data bytes.

■ Example:

Decrement the total number of lines on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x58
Checksum	\x7c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

lines total, increment

- Description:

Increment the total number of lines.

- Command:

Command[0]	\x22
Command[1]	\x58

- Data:

No data bytes.

- Example:

Increment the total number of lines on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x58
Checksum	\x7b
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

lines total, read

- Description:
Read the total number of lines.

- Command:

Command[0]	\x21
Command[1]	\x58

- Data:
No data bytes.

- Return Data:
Data[0..1] = total number of lines.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Read the total number of lines on a projector with address \x01. Suppose the total number of lines is 525 (\x020d).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x58
Checksum	\x7a
Stop	\xff

lines total, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x58
Data[0]	\x02
Data[1]	\x0d
Checksum	\x89
Stop	\xff

lines total, write

- Description:

Change the total number of lines.

- Command:

Command[0]	\x20
Command[1]	\x58

- Data:

Data[0..1] = total number of lines.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:

Set the total number of lines to 525 (\x020d) on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x58
Data[0]	\x02
Data[1]	\x0d
Checksum	\x88
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

lock audio, read

- Description:
Read the status of the audio lock.

- Command:

Command[0]	\x21
Command[1]	\x3f

- Data:
No data bytes.

- Return Data:
Data[0] = lock specification.

Lock	Data[0]
Off	\x00
Input 1 or A	\x01
Input 2 or B	\x02
Input 3 or C	\x03

- Projector type:
BD2100(LC), BD3000(LC), BD3100(LC), BD3200(LC), BD3300(LC).

- Example:
Read the audio lock status of a projector with address \x01. Suppose the audio signal is locked on audio input 1.

lock audio, read

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x3f
Checksum	\x61
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x3f
Data[0]	\x01
Checksum	\x62
Stop	\xff

lock audio, write

- Description:

Lock the audio signal to a specific audio input or set the lock off (audio input follows the video input).

- Command:

Command[0]	\x20
Command[1]	\x3f

- Data:

Data[0] = lock specification.

Lock	Data[0]
Off	\x00
Input 1 or A	\x01
Input 2 or B	\x02
Input 3 or C	\x03

- Projector type:

BD2100(LC), BD3000(LC), BD3100(LC), BD3200(LC), BD3300(LC).

- Example:

Lock the audio signal on audio input 1 of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x3f
Data[0]	\x01
Checksum	\x61
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

logo, read background

- Description:
Read the background (on or off) of the logo.

- Command:

Command[0]	\xf1
Command[1]	\x82

- Data:
No data bytes.

- Return Data:
Data[0] = logo background.

Background	Data[0]
Off (transparent)	\x00
On (black)	\x01

- Example:
Read the background of the logo of a projector with address \x01. Suppose the background is off.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf1
Command[1]	\x82
Checksum	\x74
Stop	\xff

logo, read background

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\xf1
Command[1]	\x82
Data[0]	\x00
Checksum	\x74
Stop	\xff

logo, read hot-key

- Description:

Read the hot-key used to turn the logo on or off in operational mode.

- Command:

Command[0]	\xf1
Command[1]	\x83

- Data:

No data bytes.

- Return Data:

Data[0] = logo hot-key.

Hot-key	Data[0]
Off	\x00
<TEXT>	\x0d

- Example:

Read the hot-key of the logo of a projector with address \x01. Suppose the hot-key is off.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf1
Command[1]	\x83
Checksum	\x75
Stop	\xff

logo, read hot-key

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\xf1
Command[1]	\x83
Data[0]	\x00
Checksum	\x75
Stop	\xff

logo, read position

■ Description:

Read the position of the logo.

■ Command:

Command[0]	\xf1
Command[1]	\x84

■ Data:

No data bytes.

■ Return Data:

Data[0] = horizontal position.

Data[1] = vertical position.

■ Example:

Read the position of the logo of a projector with address \x01. Suppose the position equals (1, 1).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf1
Command[1]	\x84
Checksum	\x76
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\xf1
Command[1]	\x84
Data[0]	\x01
Data[1]	\x01
Checksum	\x78
Stop	\xff

logo, read status

- Description:
Read the status (on or off) of the logo.

- Command:

Command[0]	\xf1
Command[1]	\x81

- Data:
No data bytes.

- Return Data:
Data[0] = logo status.

Status	Data[0]
Off	\x00
On	\x01

- Example:
Read the status of the logo of a projector with address \x01. Suppose the status is on.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf1
Command[1]	\x81
Checksum	\x73
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\xf1
Command[1]	\x81
Data[0]	\x01
Checksum	\x74
Stop	\xff

logo, write background

- Description:

Change the background of the logo (set the background on or off).

- Command:

Command[0]	\xf1
Command[1]	\x02

- Data:

Data[0] = logo background.

Background	Data[0]
Off (transparent)	\x00
On (black)	\x01

- Example:

Set the logo background off of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf1
Command[1]	\x02
Data[0]	\x00
Checksum	\xf4
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

logo, write hot-key

- Description:
Setup a hot-key to turn the logo on or off in operational mode.
- Command:

Command[0]	\xf1
Command[1]	\x03

- Data:
Data[0] = logo hot-key.

Hot-key	Data[0]
Off	\x00
<TEXT>	\x0d

- Example:
Set the logo hot-key to <TEXT> of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf1
Command[1]	\x03
Data[0]	\x0d
Checksum	\x02
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

logo, write position

- Description:
Change the position of the logo.
- Command:

Command[0]	\xf1
Command[1]	\x04

- Data:
Data[0] = horizontal position.
Data[1] = vertical position.
- Example:
Set the logo position to (1, 1) of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf1
Command[1]	\x04
Data[0]	\x01
Data[1]	\x01
Checksum	\xf8
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

logo, write status

- Description:
Change the status of the logo (set the logo on or off).
- Command:

Command[0]	\xf1
Command[1]	\x01

- Data:
Data[0] = logo status.

Status	Data[0]
Off	\x00
On	\x01

- Example:
Set the logo on of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf1
Command[1]	\x01
Data[0]	\x01
Checksum	\xf4
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

macro, execute (1)

- Description:
Execute a TI macro.

- Command:

Command[0]	\xe8
Command[1]	\x81

- Data:

Data[]	C-language string
--------	-------------------

- Projector type:
DP100.

macro, read (1)

- Description:
Read the name of the last TI macro that has been executed.
- Command:

Command[0]	\xe8
Command[1]	\x01
- Return data:

Data[]	C-language string
--------	-------------------
- Projector type:
DP100.

network, read configuration

- Description:
Read the network configuration.

- Command:

Command[0]	\x11
Command[1]	\x01

- Data:
No data bytes.

- Return Data:

Data[0] = DHCP Status
Data[1..4] = IP Address (aaa.bbb.ccc.ddd)
Data[5..8] = Subnet Mask (aaa.bbb.ccc.ddd)
Data[9..12] = Default Gateway (aaa.bbb.ccc.ddd)
Data[13..18] = MAC Address (aa:bb:cc:dd:ee:ff)

DHCP Status	Data[0]
disabled (off)	\x00
enabled (on)	\x01

aaa.bbb.ccc.ddd	
aaa	Data[m]
bbb	Data[m+1]
ccc	Data[m+2]
ddd	Data[m+3]

aa:bb:cc:dd:ee:ff	
aa	Data[n]
bb	Data[n+1]
cc	Data[n+2]
dd	Data[n+3]
ee	Data[n+4]
ff	Data[n+5]

If the network configuration could not be determined, only one data byte is returned (Data[0] = \x02).

- Projector type:
All DLP based projectors with network functionality.

network, read configuration

■ Example:

Read the network configuration of a projector with address \x01.

Suppose the network configuration is:

DHCP Status: on

IP Address: 150.158.195.214

Subnet Mask: 255.255.248.0

Default Gateway: 150.158.192.1

MAC Address: 00:01:02:DB:FF:89

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x11
Command[1]	\x01
Checksum	\x13
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

network, read configuration

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x11
Command[1]	\x01
Data[0]	\x01
Data[1]	\x96
Data[2]	\x9e
Data[3]	\xc3
Data[4]	\xd6
Data[5]	\x80
	\x7f
Data[6]	\x80
	\x7f
Data[7]	\xf8
Data[8]	\x00
Data[9]	\x96
Data[10]	\x9e
Data[11]	\xc0
Data[12]	\x01
Data[13]	\x00
Data[14]	\x01
Data[15]	\x02
Data[16]	\xdb
Data[17]	\x80
	\x7f
Data[18]	\x89
Checksum	\x32
Stop	\xff

network, write configuration

- Description:

Write the network configuration.

- Command:

Command[0]	\x11
Command[1]	\x81

- Data:

Data[0] = DHCP Status

DHCP Status	Data[0]
disable (off)	\x00
enable (on)	\x01

If Data[0] equals \x00, 12 more data bytes (Data[1..12]) must be sent.

Data[1..4] = IP Address (aaa.bbb.ccc.ddd)

Data[5..8] = Subnet Mask (aaa.bbb.ccc.ddd)

Data[9..12] = Default Gateway (aaa.bbb.ccc.ddd)

aaa.bbb.ccc.ddd	
aaa	Data[m]
bbb	Data[m+1]
ccc	Data[m+2]
ddd	Data[m+3]

- Projector type:

All DLP based projectors with network functionality.

network, write configuration

■ Example:

Write the network configuration of a projector with address \x01.

Suppose the network configuration is:

DHCP Status: off

IP Address: 150.158.195.214

Subnet Mask: 255.255.248.0

Default Gateway: 150.158.192.1

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x11
Command[1]	\x81
Data[0]	\x00
Data[1]	\x96
Data[2]	\x9e
Data[3]	\xc3
Data[4]	\xd6
Data[5]	\x80
	\x7f
Data[6]	\x80
	\x7f
Data[7]	\xf8
Data[8]	\x00
Data[9]	\x96
Data[10]	\x9e
Data[11]	\xc0
Data[12]	\x01
Checksum	\x4b
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

menu, exit

- Description:
Exit one/all menus.

- Command:

Command[0]	\x42
Command[1]	\x01

- Data:

Data[0]	
\x01	Exit one menu
\xff	Exit all menus

- Example:

Exit all menus on a projector with address \x01. (Go back to operational mode)

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x42
Command[1]	\x01
Data[0]	\x80
	\x7f
Checksum	\x43
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

MOCA, read version

- Description:

Read the version of the MOCA software.

- Command:

Command[0]	\xf3
Command[1]	\x82

- Data:

No data bytes.

- Return Data:

The return data-transfer being the software version is a C-language string (see syntax).
Note: there is no return data when the MOCA processor doesn't respond (not installed or busy).

- Projector type:

All projectors equipped with MOCA.

- Example:

Read the version of the MOCA software on a projector with address \x01. Suppose the version number is '1.02'.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf3
Command[1]	\x82
Checksum	\x76
Stop	\xff

MOCA, read version

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\xf3
Command[1]	\x82
Data[0]	\x31 (= '1')
Data[1]	\x2e (= '.')
Data[2]	\x30 (= '0')
Data[3]	\x32 (= '2')
Data[4]	\x00
Checksum	\x37
Stop	\xff

MOCA, set blue to midposition

- Description:
Set the "blue motors" of the MOCA to midposition.

- Command:

Command[0]	\xf3
Command[1]	\x06

- Data:
No data bytes.
- Projector type:
All projectors equipped with MOCA.
- Example:

Set the "blue motors" of the MOCA on a projector with address \x01 to midposition.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf3
Command[1]	\x06
Checksum	\xfa
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

MOCA, set green to midposition

- Description:
Set the "green motors" of the MOCA to midposition.

- Command:

Command[0]	\xf3
Command[1]	\x04

- Data:

No data bytes.

- Projector type:

All projectors equipped with MOCA.

- Example:

Set the "green motors" of the MOCA on a projector with address \x01 to midposition.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf3
Command[1]	\x04
Checksum	\xf8
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

MOCA, set red to midposition

- Description:
Set the "red motors" of the MOCA to midposition.

- Command:

Command[0]	\xf3
Command[1]	\x05

- Data:
No data bytes.
- Projector type:
All projectors equipped with MOCA.
- Example:
Set the "red motors" of the MOCA on a projector with address \x01 to midposition.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf3
Command[1]	\x05
Checksum	\xf9
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

MOCA, set to midposition

- Description:

Set all motors of the MOCA to midposition.

- Command:

Command[0]	\xf3
Command[1]	\x07

- Data:

No data bytes.

- Projector type:

All projectors equipped with MOCA.

- Example:

Set all motors of the MOCA on a projector with address \x01 to midposition.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf3
Command[1]	\x07
Checksum	\xfb
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

MOCA, write blue

- Description:
Change the state of a "blue motor" of the MOCA.
- Command:

Command[0]	\xf3
Command[1]	\x03

- Data:
Data[0] = Position on the screen (see osd internal pattern)

Position	Data[0]
1	\x01
2	\x02
3	\x03
4	\x04
5	\x05
6	\x06
7	\x07

Data[1] = Direction (see osd internal pattern)

Direction	Data[1]
Up	\x01
Down	\x02
Left	\x03
Right	\x04

MOCA, write blue

- Projector type:

All projectors equipped with MOCA.

- Example:

Change the state of a "blue motor" of the MOCA on a projector with address \x01 by executing "6 up".

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf3
Command[1]	\x03
Data[0]	\x06
Data[1]	\x01
Checksum	\x80
	\x7e
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

MOCA, write green

- Description:
Change the state of a "green motor" of the MOCA.

- Command:

Command[0]	\xf3
Command[1]	\x01

- Data:

Data[0] = Position on the screen (see osd internal pattern)

Position	Data[0]
1	\x01
2	\x02
3	\x03
4	\x04
5	\x05
6	\x06
7	\x07

Data[1] = Direction (see osd internal pattern)

Direction	Data[1]
Up	\x01
Down	\x02
Left	\x03
Right	\x04

MOCA, write green

- Projector type:

All projectors equipped with MOCA.

- Example:

Change the state of a "green motor" of the MOCA on a projector with address \x01 by executing "6 up".

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf3
Command[1]	\x01
Data[0]	\x06
Data[1]	\x01
Checksum	\xfc
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

MOCA, write red

- Description:
Change the state of a "red motor" of the MOCA.

- Command:

Command[0]	\xf3
Command[1]	\x02

- Data:

Data[0] = Position on the screen (see osd internal pattern)

Position	Data[0]
1	\x01
2	\x02
3	\x03
4	\x04
5	\x05
6	\x06
7	\x07

Data[1] = Direction (see osd internal pattern)

Direction	Data[1]
Up	\x01
Down	\x02
Left	\x03
Right	\x04

MOCA, write red

- Projector type:

All projectors equipped with MOCA.

- Example:

Change the state of a "red motor" of the MOCA on a projector with address \x01 by executing "6 up".

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf3
Command[1]	\x02
Data[0]	\x06
Data[1]	\x01
Checksum	\xfd
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

overlay palette, write

- Description:

Write an overlay color, used for the OSD.

- Command:

Command[0]	\x0f
------------	------

- Data:

Data[0]	Palette entry
Data[1]	Red.MSB
Data[2]	Red.LSB
Data[3]	Green.MSB
Data[4]	Green.LSB
Data[5]	Blue.MSB
Data[6]	Blue.LSB

Projector type	Palette entry
BD3000(LC), BD3100(LC), BD5100(LC), BD8100(LC)	\x01..\x0f
Others	\x01..\x3f

Projector type	Red/Green/Blue
	\x0000..\x03ff
	\x0000..\x00ff

- Projector type:

All projectors except BD5000, BD8000, DP100 and XLM-Series.

overlay palette, write

■ Example:

Write maximum white to palette entry 1 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x0f
Data[0]	\x01
Data[1]	\x80
	\x7f
Data[2]	\x80
	\x7f
Data[3]	\x80
	\x7f
Data[4]	\x80
	\x7f
Data[5]	\x80
	\x7f
Data[6]	\x80
	\x7f
Checksum	\x0b
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

panel, read size

- Description:

Read the size (in pixels) of the lcd panel.

- Command:

Command[0]	\xf0
Command[1]	\x01

- Data:

No data bytes.

- Return Data:

Data[0..1] = number of pixels in horizontal direction.

Data[2..3] = number of pixels in vertical direction.

Data[0]	MSB of hpix
Data[1]	LSB of hpix
Data[2]	MSB of vpix
Data[3]	LSB of vpix

panel, read size

■ Example:

Read the size of the lcd panel of a projector with address \x01. Suppose the size is 1024 x 768 pixels.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xf0
Command[1]	\x01
Checksum	\xf2
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\xf0
Command[1]	\x01
Data[0]	\x04
Data[1]	\x00
Data[2]	\x03
Data[3]	\x00
Checksum	\xf9
Stop	\xff

peripheral source, write

■ Description:

Select a source on an external switcher that is not in direct communication with the projector (800-port not used).

■ Command:

Command[0]	\x33
Command[1]	\xff

■ Data:

Data[0] = source number (\x01..\x63).

Data[1] = external slot type

Data[1]	Type
\x01	Video Input
\x02	S-Video Input
\x04	RGB Analog Input - Sync On Green
\x05	RGB Analog Input - Separate Sync
\x06	RGB3S/RG3SB Input - Sync On Green
\x07	RGB3S/RG3SB Input - Separate Sync
\x08	Component Input - Sync on Y
\x09	Component Input - Separate Sync
\x0a	Component Input - Tri-Level Sync On Y
\x0b	Component Input - Tri-Level Separate Sync

Data[2] = source mode

RGB Analog Input - Separate Sync

Data[2]	Mode
\x00	H/C: Composite Sync or H/C, V: Horizontal, Vertical Sync
\x01	H/C: Composite Video

Video Input

S-Video Input

RGB Analog Input - Sync On Green

RGB3S/RG3SB Input - Separate Sync

RGB3S/RG3SB Input - Sync On Green

Component Input - Separate Sync

Component Input - Sync On Y

Component Input - Tri-Level Separate
Sync

Component Input - Tri-Level Sync On Y

Data[2]	Mode
\x00	-
\x01	

peripheral source, write

■ Note:

- The external switcher has to be connected to the projector the same way a BARCO 800 peripheral is normally connected. (See the Owner's Manual of your projector)
- The source number (Data[0]) can be used to make sure the correct file is loaded.

■ Projector type:

All projectors except DP100 and XLM-Series.

■ Example:

Select source 1, type ' RGB Analog Input - Separate Sync', mode 0 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x33
Command[1]	\x80
	\x7f
Data[0]	\x01
Data[1]	\x05
Data[2]	\x00
Checksum	\x39
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

phase, read

- Description:
Read the actual phase value.
- Command:

Command[0]	\x21
Command[1]	\x06

- Data:
No data bytes.
- Return Data:
Data[0] = phase value
or Data[0..1] = phase value (MSB first)
- Projector type:

1 byte phase value	BD2100(LC), BD3000(LC), BD3100(LC) BD5000(LC), BD8000(LC)
2 byte phase value	others

phase, read

■ Example:

Read the actual phase value of a projector with address \x01. Suppose the phase equals \x03.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x06
Checksum	\x28
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x06
Data[0]	\x03
Checksum	\x2b
Stop	\xff

phase, write

- Description:

Write a new phase value.

- Command:

Command[0]	\x20
Command[1]	\x06

- Data:

Data[0] = phase value

or Data[0..1] = phase value (MSB first)

- Projector type:

1 byte phase value	BD2100(LC), BD3000(LC), BD3100(LC) BD5000(LC), BD8000(LC)
2 byte phase value	others

- Example:

Set the phase to \x03 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x06
Data[0]	\x03
Checksum	\x2a
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

pip, read source

- Description:
Read the source number of the source displayed in the pip window.
- Command:

Command[0]	\x21
Command[1]	\x88

- Data:
No data bytes.
- Return Data:
Data[0] = source number.
- Projector type:
The projector has to support pip.
- Example:
Read the source number of the source displayed in the pip window of a projector with address \x01. Suppose it is source 1.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x88
Checksum	\xaa
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x88
Data[0]	\x01
Checksum	\xab
Stop	\xff

pip, read window

- Description:
Read the status and screen position of the pip window.

- Command:

Command[0]	\x21
Command[1]	\x87

- Data:
No data bytes.

- Return Data:
Data[0] = status.

Status	Data[0]
Off	\x00
On	\x01

Data[1..8] = screen position.
Data[1..8] is only returned when status is on !

Data[1,2]	x.MSB, x.LSB
Data[3,4]	y.MSB, y.LSB
Data[5,6]	w.MSB, w.LSB
Data[7,8]	h.MSB, h.LSB

where xy is top/left coordinate,
w is width and h is height of window

pip, read window

- Projector type:

The projector has to support pip.

- Example:

Read the pip window properties of a projector with address \x01. Suppose the pip window is disabled.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x87
Checksum	\xa9
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x87
Data[0]	\x00
Checksum	\xa9
Stop	\xff

pip, write source

- Description:
Select the source to be displayed in the pip window.

- Command:

Command[0]	\x20
Command[1]	\x88

- Data:

Data[0] = source number.

- Projector type:

The projector has to support pip.

- Example:

Display source 1 in the pip window of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x88
Data[0]	\x01
Checksum	\xaa
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

pip, write window

- Description:

Write a new position for the pip window. Also used to enable/disable the pip window.

- Command:

Command[0]	\x20
Command[1]	\x87

- Data:

Data[0] = status.

Status	Data[0]
Off	\x00
On	\x01

Data[1] = screen position (OPTIONAL).

Screen position	Data[1] OPTIONAL
Top/Left	\x00
Top/Right	\x01
Bottom/Left	\x02
Bottom/Right	\x03

or Data[1..8] = screen position (OPTIONAL).

Data[1,2]	x.MSB, x.LSB
Data[3,4]	y.MSB, y.LSB
Data[5,6]	w.MSB, w.LSB
Data[7,8]	h.MSB, h.LSB

where xy is top/left coordinate,
w is width and h is height of window

pip, write window

- Projector type:

The projector has to support pip.

- Example:

Enable the pip window on a projector with address \x01 and position it in the top/left corner of the screen.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x87
Data[0]	\x01
Data[1]	\x00
Checksum	\xa9
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

pixels active, decrement

- Description:
Decrement the active number of pixels.

- Command:

Command[0]	\x23
Command[1]	\x5d

- Data:
No data bytes.

- Example:
Decrement the active number of pixels on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x5d
Checksum	\x81
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

pixels active, increment

- Description:
Increment the active number of pixels.

- Command:

Command[0]	\x22
Command[1]	\x5d

- Data:
No data bytes.

- Example:
Increment the active number of pixels on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x5d
Checksum	\x80
	\x00
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

pixels active, read

- Description:
Read the active number of pixels.

- Command:

Command[0]	\x21
Command[1]	\x5d

- Data:
No data bytes.

- Return Data:
Data[0..1] = active number of pixels.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Read the active number of pixels on a projector with address \x01. Suppose the active number of pixels is 640 (\x0280).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x5d
Checksum	\x7f
Stop	\xff

pixels active, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x5d
Data[0]	\x02
Data[1]	\x80
	\x00
Checksum	\x01
Stop	\xff

pixels active, write

- Description:

Change the active number of pixels.

- Command:

Command[0]	\x20
Command[1]	\x5d

- Data:

Data[0..1] = active number of pixels.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:

Set the active number of pixels to 640 (\x0280) on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x5d
Data[0]	\x02
Data[1]	\x80
	\x00
Checksum	\x00
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

pixel start, decrement

- Description:

Decrement the value of pixel start.

- Command:

Command[0]	\x23
Command[1]	\x5e

- Data:

No data bytes.

- Example:

Decrement pixel start on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x5e
Checksum	\x82
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

pixel start, increment

- Description:

Increment the value of pixel start.

- Command:

Command[0]	\x22
Command[1]	\x5e

- Data:

No data bytes.

- Example:

Increment pixel start on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x5e
Checksum	\x81
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

pixel start, read

- Description:
Read the value of pixel start.

- Command:

Command[0]	\x21
Command[1]	\x5e

- Data:
No data bytes.

- Return Data:
Data[0..1] = pixel start.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Read the value of pixel start on a projector with address \x01. Suppose the value is 20 (\x0014).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x5e
Checksum	\x80
	\x00
Stop	\xff

pixel start, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x5e
Data[0]	\x00
Data[1]	\x14
Checksum	\x94
Stop	\xff

pixel start, write

- Description:
Change the value of pixel start.

- Command:

Command[0]	\x20
Command[1]	\x5e

- Data:

Data[0..1] = pixel start.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:

Set the value of pixel start to 20 (\x0014) on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x5e
Data[0]	\x00
Data[1]	\x14
Checksum	\x93
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

pixels total, decrement

- Description:
Decrement the total number of pixels.

- Command:

Command[0]	\x23
Command[1]	\x5c

- Data:
No data bytes.

- Example:
Decrement the total number of pixels on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x5c
Checksum	\x80
	\x00
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

pixels total, increment

- Description:

Increment the total number of pixels.

- Command:

Command[0]	\x22
Command[1]	\x5c

- Data:

No data bytes.

- Example:

Increment the total number of pixels on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x5c
Checksum	\x7f
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

pixels total, read

- Description:
Read the total number of pixels.

- Command:

Command[0]	\x21
Command[1]	\x5c

- Data:
No data bytes.

- Return Data:
Data[0..1] = total number of pixels.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Read the total number of pixels on a projector with address \x01. Suppose the total number of pixels is 800 (\x0320).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x5c
Checksum	\x7e
Stop	\xff

pixels total, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x5c
Data[0]	\x03
Data[1]	\x20
Checksum	\xa1
Stop	\xff

pixels total, write

- Description:

Change the total number of pixels.

- Command:

Command[0]	\x20
Command[1]	\x5c

- Data:

Data[0..1] = total number of pixels.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:

Set the total number of pixels to 800 (\x0320) on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x5c
Data[0]	\x03
Data[1]	\x20
Checksum	\xa0
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

profile, read count

- Description:
Read the number of entries in a profile section.

- Command:

Command[0]	\xbd
Command[1]	\x42

- Data:

Profile path	C-language string
Profile section name	C-language string

- Return Data:

Data[]	1, 2, 3 or 4 bytes
--------	--------------------

- Projector type:
All projectors with directory structure.
- Example:
Not yet available.

profile, read entry

- Description:
Read an entry of a profile.

- Command:

Command[0]	\xbd
Command[1]	\x41

- Data:

Profile path	C-language string
Profile section name	C-language string
Entry	1, 2, 3 or 4 bytes

- Projector type:
All projectors with directory structure.
- Example:
Not yet available.

programmable blanking, write

■ Description:

Write blanking shapes (circles, rectangles, lines and triangles). (OPTIONAL)

■ Command:

Command[0]	\xe1
------------	------

■ Data:

Data for a solid circle with centre (x, y) and radius r.

	Data
Data[n]	'C' = '\x43'
Data[n+1]	x(MSB)
Data[n+2]	x(LSB)
Data[n+3]	y(MSB)
Data[n+4]	y(LSB)
Data[n+5]	r(MSB)
Data[n+6]	r(LSB)

Data for a hole circle with centre (x, y) and radius r.

	Data
Data[n]	'c' = '\x63'
Data[n+1]	x(MSB)
Data[n+2]	x(LSB)
Data[n+3]	y(MSB)
Data[n+4]	y(LSB)
Data[n+5]	r(MSB)
Data[n+6]	r(LSB)

programmable blanking, write

Data for a solid rectangle with coordinates (x1, y1) (x2, y2).

	Data
Data[n]	'R' = '\x52'
Data[n+1]	x1(MSB)
Data[n+2]	x1(LSB)
Data[n+3]	y1(MSB)
Data[n+4]	y1(LSB)
Data[n+5]	x2(MSB)
Data[n+6]	x2(LSB)
Data[n+7]	y2(MSB)
Data[n+8]	y2(LSB)

Data for a hole rectangle with coordinates (x1, y1) (x2, y2).

	Data
Data[n]	'r' = '\x72'
Data[n+1]	x1(MSB)
Data[n+2]	x1(LSB)
Data[n+3]	y1(MSB)
Data[n+4]	y1(LSB)
Data[n+5]	x2(MSB)
Data[n+6]	x2(LSB)
Data[n+7]	y2(MSB)
Data[n+8]	y2(LSB)

programmable blanking, write

Data for a solid line with coordinates (x1, y) (x2, y).

	Data
Data[n]	'L' = '\x4c'
Data[n+1]	y(MSB)
Data[n+2]	y(LSB)
Data[n+3]	x1(MSB)
Data[n+4]	x1(LSB)
Data[n+5]	x2(MSB)
Data[n+6]	x2(LSB)

Data for a hole line with coordinates (x1, y) (x2, y).

	Data
Data[n]	'I' = '\x6c'
Data[n+1]	y(MSB)
Data[n+2]	y(LSB)
Data[n+3]	x1(MSB)
Data[n+4]	x1(LSB)
Data[n+5]	x2(MSB)
Data[n+6]	x2(LSB)

programmable blanking, write

Data for a solid triangle with coordinates (x1, y1) (x2, y2) (x3, y3).

	Data
Data[n]	'T' = '\x54'
Data[n+1]	x1(MSB)
Data[n+2]	x1(LSB)
Data[n+3]	y1(MSB)
Data[n+4]	y1(LSB)
Data[n+5]	x2(MSB)
Data[n+6]	x2(LSB)
Data[n+7]	y2(MSB)
Data[n+8]	y2(LSB)
Data[n+9]	x3(MSB)
Data[n+10]	x3(LSB)
Data[n+11]	y3(MSB)
Data[n+12]	y3(LSB)

Data for a hole triangle with coordinates (x1, y1) (x2, y2) (x3, y3).

	Data
Data[n]	't' = '\x74'
Data[n+1]	x1(MSB)
Data[n+2]	x1(LSB)
Data[n+3]	y1(MSB)
Data[n+4]	y1(LSB)
Data[n+5]	x2(MSB)
Data[n+6]	x2(LSB)
Data[n+7]	y2(MSB)
Data[n+8]	y2(LSB)
Data[n+5]	x2(MSB)
Data[n+6]	x2(LSB)
Data[n+7]	y2(MSB)
Data[n+8]	y2(LSB)

programmable blanking, write

■ Projector type:


All projectors with programmable blanking.

■ Notes:

- The calculations are made starting from an imaginary solid shape as large as the lcd panel.
- To combine several shapes, just put the data of the requested shapes after each other. The order in which the shapes are drawn is the same as the order in which they are sent to the projector.
- The values of the coordinates have to be checked by the computer !!! Extreme large coordinates can lead to microprocessor reset.
- "Solid shape" means blanked inside the shape;
- "Hole shape" means no blanking inside the shape.
- The first pixel on the screen (top/left) has coordinate (0,0).

■ Example:

Draw following blanking pattern on a projector with address \x01.

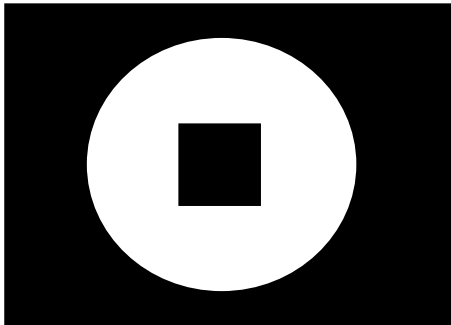

- hole circle (x=350, y=250, r=200)
- solid rectangle (x1=300, y1=200, x2=400, y2=300)

programmable blanking, write

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\xe1
Data[0]	\x63
Data[1]	\x01
Data[2]	\x5e
Data[3]	\x00
Data[4]	\xfa
Data[5]	\x00
Data[6]	\xc8
Data[7]	\x52
Data[8]	\x01
Data[9]	\x2c
Data[10]	\x00
Data[11]	\xc8
Data[12]	\x01
Data[13]	\x90
Data[14]	\x01
Data[15]	\x2c
Checksum	\x6b
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

projector, read run time

- Description:

Read the projector run time in seconds.

- Command:

Command[0]	\x62
------------	------

- Data:

No data bytes.

- Return Data:

The return data-transfer being the projector run time in seconds consists of four data bytes. The first byte is the most significant byte !

Formula:

Projector run time (seconds)

$$= \text{Data}[0] * 256^3 + \text{Data}[1] * 256^2 + \text{Data}[2] * 256 + \text{Data}[3]$$

- Example:

Read the projector run time of a projector with address \x01. Suppose the projector run time is 3000 hours (10800000 seconds).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x62
Checksum	\x63
Stop	\xff

projector, read run time

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x62
Data[0]	\x00
Data[1]	\xa4
Data[2]	\xcb
Data[3]	\x80
	\x00
Checksum	\x52
Stop	\xff

projector run time =
 $\text{\x00} * 256^3 + \text{\xa4} * 256^2 + \text{\xcb} * 256 + \text{\x80}$



projector, read serial number

- Description:

Read the serial number of the projector.

- Command:

Command[0]	\x61
------------	------

- Data:

No data bytes.

- Return Data:

The return data-transfer being the projector serial number is a pascal-language string (see syntax).

- Example:

Read the serial number of a projector with address \x01. Suppose the projector serial number is '0000001'.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x61
Checksum	\x62
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

projector, read serial number

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x61
Data[0]	\x07
Data[1]	\x30 (= '0')
Data[2]	\x30 (= '0')
Data[3]	\x30 (= '0')
Data[4]	\x30 (= '0')
Data[5]	\x30 (= '0')
Data[6]	\x30 (= '0')
Data[7]	\x31 (= '1')
Checksum	\xba
Stop	\xff

projector, write serial number

- Description:

Write the serial number of the projector. The serial number can only be written once !

- Command:

Command[0]	\x61
------------	------

- Data:

Serial number as a pascal-language string (see syntax).

- Projector type:

Not all projectors support this command.

- Example:

Write the serial number of a projector with address \x01. Suppose the projector serial number is '0000001'.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x61
Data[0]	\x07
Data[1]	\x30 (= '0')
Data[2]	\x30 (= '0')
Data[3]	\x30 (= '0')
Data[4]	\x30 (= '0')
Data[5]	\x30 (= '0')
Data[6]	\x30 (= '0')
Data[7]	\x31 (= '1')
Checksum	\xba
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

projector, read type (1)

- Description:

Determine the type of projector you are communicating with.

- Command:

Command[0]	\x6b
------------	------

- Data:

No data bytes.

- Return Data:

The return data-transfer being the projector type is a pascal-language string (see syntax).

- Example:

Read the projector type of a projector with address \x01. Suppose the projector is a 'BARCODATA 8100'.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x6b
Checksum	\x6c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

projector, read type (1)

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x6b
Data[0]	\x0e
Data[1]	\x42 (= 'B')
Data[2]	\x41 (= 'A')
Data[3]	\x52 (= 'R')
Data[4]	\x43 (= 'C')
Data[5]	\x4f (= 'O')
Data[6]	\x44 (= 'D')
Data[7]	\x41 (= 'A')
Data[8]	\x54 (= 'T')
Data[9]	\x41 (= 'A')
Data[10]	\x20 (= ' ')
Data[11]	\x38 (= '8')
Data[12]	\x31 (= '1')
Data[13]	\x30 (= '0')
Data[14]	\x30 (= '0')
Checksum	\xe4
Stop	\xff

projector, read type (2)

- Description:
Determine the type of projector you are communicating with.

- Command:

Command[0]	\x87
Command[1]	\x1b

- Data:
No data bytes.

- Return Data:
Data[0] = projector type.

Type	Data[0]
DP100	\x03
XLM-Series	\x04

- Projector type:
DP100, XLM-Series.

- Example:
Read the projector type of a projector with address \x01. Suppose the projector is a DP100.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x87
Command[1]	\x1b
Checksum	\xa3
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

projector, read type (2)

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x87
Command[1]	\x1b
Data[0]	\x03
Checksum	\xa6
Stop	\xff

projector, read address

- Description:
Read the projector address.

- Command:

Command[0]	\x6d
------------	------

- Data:
No data bytes.

- Return Data:
Data[0] = projector address.

Data[0]	\x00..\xff
---------	------------

- Projector type:
Not all projectors support this command.
- Example:
Read the projector address of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x6d
Checksum	\x6e
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x6d
Data[0]	\x01
Checksum	\x6f
Stop	\xff

projector, write address

- Description:

Write the projector address.

- Command:

Command[0]	\x6d
------------	------

- Data:

Data[0] = projector address.

Data[0]	\x00..\xff
---------	------------

- Note:

The acknowledge will be sent with the original projector address.

- Example:

Set the address of a projector with address \x01 to \x20.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x6d
Data[0]	\x20
Checksum	\x8e
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

sharpness, read

- Description:
Read the actual sharpness value.

- Command:

Command[0]	\x21
Command[1]	\x05

- Data:
No data bytes.
- Return Data:
Data[0] = sharpness value.

Exception list

Projector Type	On screen	Data[0]
BD5000(LC), BD8000(LC)	"-4 db"	\x00
	"0 db"	\x01
	"3,5 db"	\x02
	"6 db"	\x03
BD3000(LC), BD3100(LC), BD5100(LC), BD8100(LC)	"0"	\x00
	"0.25"	\x01
	"0.5"	\x02
	"1"	\x03

sharpness, read

■ Example:

Read the actual sharpness value of a projector with address \x01. Suppose the sharpness equals \x03.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x05
Checksum	\x27
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x05
Data[0]	\x03
Checksum	\x2a
Stop	\xff

sharpness, write

- Description:
Write a new sharpness value.
- Command:

Command[0]	\x20
Command[1]	\x05

- Data:
Data[0] = sharpness value.

Exception list

Projector Type	On screen	Data[0]
BD5000(LC), BD8000(LC)	"-4 db"	\x00
	"0 db"	\x01
	"3,5 db"	\x02
	"6 db"	\x03
BD3000(LC), BD3100(LC), BD5100(LC), BD8100(LC)	"0"	\x00
	"0.25"	\x01
	"0.5"	\x02
	"1"	\x03

sharpness, write

■ Example:

Set the sharpness to \x03 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x05
Data[0]	\x03
Checksum	\x29
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

shift horizontal, decrement

- Description:
Decrement the horizontal shift.

- Command:

Command[0]	\x23
Command[1]	\x47

- Data:
No data bytes.

- Example:
Decrement the horizontal shift of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x47
Checksum	\x6b
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

shift horizontal, increment

- Description:
Increment the horizontal shift.

- Command:

Command[0]	\x22
Command[1]	\x47

- Data:
No data bytes.

- Example:
Increment the horizontal shift of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x47
Checksum	\x6a
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

shift horizontal, read

- Description:
Read the actual value of the horizontal shift.

- Command:

Command[0]	\x21
Command[1]	\x47

- Data:
No data bytes.

- Return Data:
Data[0..1] = value of the horizontal shift.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Read the actual value of the horizontal shift of a projector with address \x01. Suppose the horizontal shift equals 0.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x47
Checksum	\x69
Stop	\xff

shift horizontal, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x47
Data[0]	\x00
Data[1]	\x00
Checksum	\x69
Stop	\xff

shift horizontal, write

- Description:

Write a new value for the horizontal shift.

- Command:

Command[0]	\x20
Command[1]	\x47

- Data:

Data[0..1] = value of the horizontal shift.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:

Set the horizontal shift to 0 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x47
Data[0]	\x00
Data[1]	\x00
Checksum	\x68
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

shift vertical, decrement

- Description:
Decrement the vertical shift.
- Command:

Command[0]	\x23
Command[1]	\x48

- Data:
No data bytes.
- Example:
Decrement the vertical shift of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x48
Checksum	\x6c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

shift vertical, increment

- Description:
Increment the vertical shift.

- Command:

Command[0]	\x22
Command[1]	\x48

- Data:
No data bytes.

- Example:
Increment the vertical shift of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x48
Checksum	\x6b
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

shift vertical, read

- Description:
Read the actual value of the vertical shift.

- Command:

Command[0]	\x21
Command[1]	\x48

- Data:
No data bytes.

- Return Data:
Data[0..1] = value of the vertical shift.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Read the actual value of the vertical shift of a projector with address \x01. Suppose the vertical shift equals 0.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x48
Checksum	\x6a
Stop	\xff

shift vertical, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x48
Data[0]	\x00
Data[1]	\x00
Checksum	\x6a
Stop	\xff

shift vertical, write

- Description:

Write a new value for the vertical shift.

- Command:

Command[0]	\x20
Command[1]	\x48

- Data:

Data[0..1] = value of the vertical shift.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:

Set the vertical shift to 0 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x48
Data[0]	\x00
Data[1]	\x00
Checksum	\x69
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

size horizontal, decrement

- Description:
Decrement the horizontal size.

- Command:

Command[0]	\x23
Command[1]	\x49

- Data:
No data bytes.

- Example:
Decrement the horizontal size of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x49
Checksum	\x6d
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

size horizontal, increment

- Description:

Increment the horizontal size.

- Command:

Command[0]	\x22
Command[1]	\x49

- Data:

No data bytes.

- Example:

Increment the horizontal size of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x49
Checksum	\x6c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

size horizontal, read

- Description:
Read the actual value of the horizontal size.

- Command:

Command[0]	\x21
Command[1]	\x49

- Data:
No data bytes.

- Return Data:
Data[0..1] = value of the horizontal size.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Read the actual value of the horizontal size of a projector with address \x01. Suppose the horizontal size equals 0.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x49
Checksum	\x6b
Stop	\xff

size horizontal, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x49
Data[0]	\x00
Data[1]	\x00
Checksum	\x6b
Stop	\xff

size horizontal, write

■ Description:

Write a new value for the horizontal size.

■ Command:

Command[0]	\x20
Command[1]	\x49

■ Data:

Data[0..1] = value of the horizontal size.

Data[0]	MSB of value
Data[1]	LSB of value

■ Example:

Set the horizontal size to 0 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x49
Data[0]	\x00
Data[1]	\x00
Checksum	\x6a
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

size vertical, decrement

- Description:
Decrement the vertical size.

- Command:

Command[0]	\x23
Command[1]	\x4a

- Data:
No data bytes.

- Example:
Decrement the vertical size of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x4a
Checksum	\x6e
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

size vertical, increment

- Description:
Increment the vertical size.

- Command:

Command[0]	\x22
Command[1]	\x4a

- Data:
No data bytes.

- Example:
Increment the vertical size of a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x4a
Checksum	\x6d
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

size vertical, read

- Description:
Read the actual value of the vertical size.

- Command:

Command[0]	\x21
Command[1]	\x4a

- Data:
No data bytes.

- Return Data:
Data[0..1] = value of the vertical size.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:
Read the actual value of the vertical size of a projector with address \x01. Suppose the vertical size equals 0.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x4a
Checksum	\x6c
Stop	\xff

size vertical, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x4a
Data[0]	\x00
Data[1]	\x00
Checksum	\x6c
Stop	\xff

size vertical, write

- Description:

Write a new value for the vertical size.

- Command:

Command[0]	\x20
Command[1]	\x4a

- Data:

Data[0..1] = value of the vertical size.

Data[0]	MSB of value
Data[1]	LSB of value

- Example:

Set the vertical size to 0 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x4a
Data[0]	\x00
Data[1]	\x00
Checksum	\x6b
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

shutter, close

- Description:

Close the mechanical shutter (OPTIONAL).

- Command:

Command[0]	\x23
Command[1]	\x42

- Data:

Data[0] = speed.

	Data[0]
Fast	\x00
Slow	\x01

- Projector type:

Although some projectors don't make the difference between "Fast" and "Slow" speed, Data[0] must always be sent.

- Example:

Close the shutter (full speed) of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x42
Data[0]	\x00
Checksum	\x66
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

shutter, open

- Description:
Open the mechanical shutter (OPTIONAL).

- Command:

Command[0]	\x22
Command[1]	\x42

- Data:

Data[0] = speed.

	Data[0]
Fast	\x00
Slow	\x01

- Projector type:

Although some projectors don't make the difference between "Fast" and "Slow" speed, Data[0] must always be sent.

- Example:

Open the shutter (full speed) of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x42
Data[0]	\x00
Checksum	\x65
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

shutter, read

- Description:
Read the actual shutter position (OPTIONAL).

- Command:

Command[0]	\x21
Command[1]	\x42

- Data:
No data bytes.

- Return Data:
Data[0] = shutter position.

	Data[0]
Closed	\x00
Open	\x01
Undetermined	\x02

- Projector type:
Some projectors cannot determine whether the shutter is "Open" or "Closed". These projectors always return "Undetermined".
- Example:
Read the actual shutter position of a projector with address \x01. Suppose the shutter is open.

shutter, read

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x42
Checksum	\x64
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x42
Data[0]	\x01
Checksum	\x65
Stop	\xff

soft edge, read status

- Description:
Read the status (on/off) of the soft edge.

- Command:

Command[0]	\x21
Command[1]	\x82

- Data:
No data bytes.

- Return Data:
Data[0] = status.

Status	Data[0]
Off	\x00
On	\x01

- Projector type:
All projectors equipped with soft edge, except simulation products.

soft edge, read status

■ Example:

Read the status of the soft edge of a projector with address \x01. Suppose the soft edge is turned on.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x82
Checksum	\xa4
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x82
Data[0]	\x01
Checksum	\xa5
Stop	\xff

soft edge, write status

- Description:

Set the soft edge on or off.

- Command:

Command[0]	\x20
Command[1]	\x82

- Data:

Data[0] = Status

Status	Data[0]
Off	\x00
On	\x01

- Projector type:

All projectors equipped with soft edge, except simulation products.

- Example:

Set the soft edge on of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x82
Data[0]	\x01
Checksum	\xa4
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

soft edge black level, decrement

- Description:
Decrement the soft edge black level.
- Command:

Command[0]	\x23
Command[1]	\x84
Command[2]	\x00 in case of red black level \x01 in case of green black level \x02 in case of blue black level

- Data:
No data bytes.
- Projector type:
All projectors equipped with soft edge, except simulation products.
- Example:
Decrement the red soft edge black level on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x84
Command[2]	\x00
Checksum	\xa8
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

soft edge black level, increment

- Description:
Increment the soft edge black level.
- Command:

Command[0]	\x22
Command[1]	\x84
Command[2]	\x00 in case of red black level \x01 in case of green black level \x02 in case of blue black level

- Data:
No data bytes.
- Projector type:
All projectors equipped with soft edge, except simulation products.
- Example:
Increment the red soft edge black level on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x84
Command[2]	\x00
Checksum	\xa7
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

soft edge black level, read

- Description:
Read the value of the soft edge black level.
- Command:

Command[0]	\x21
Command[1]	\x84
Command[2]	\x00 in case of red black level \x01 in case of green black level \x02 in case of blue black level

- Data:
No data bytes.
- Return Data:
Data[0] = soft edge black level.
- Projector type:
All projectors equipped with soft edge, except simulation products.

soft edge black level, read

■ Example:

Read the value of red soft edge black level on a projector with address \x01. Suppose the value is 100 (\x64).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x84
Command[2]	\x00
Checksum	\xa6
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x84
Command[2]	\x00
Data[0]	\x64
Checksum	\x0a
Stop	\xff

soft edge black level, write

- Description:
Change the value of the black level.
- Command:

Command[0]	\x20
Command[1]	\x84
Command[2]	\x00 in case of red black level \x01 in case of green black level \x02 in case of blue black level

- Data:
Data[0] = soft edge black level.
- Projector type:
All projectors equipped with soft edge, except simulation products.
- Example:
Set the value of red soft edge black level to 100 (\x64) on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x84
Command[2]	\x00
Data[0]	\x64
Checksum	\x09
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

soft edge size, decrement

- Description:
Decrement the top, bottom left or right soft edge size.

- Command:

Command[0]	\x23
Command[1]	\x83
Command[2]	\x00 in case of top size \x01 in case of bottom size \x02 in case of left size \x03 in case of right size

- Data:
No data bytes.
- Projector type:
All projectors equipped with soft edge, except simulation products.
- Example:
Decrement the soft edge left size on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x23
Command[1]	\x83
Command[2]	\x02
Checksum	\xa9
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

soft edge size, increment

- Description:
Increment the top, bottom left or right soft edge size.

- Command:

Command[0]	\x22
Command[1]	\x83
Command[2]	\x00 in case of top size \x01 in case of bottom size \x02 in case of left size \x03 in case of right size

- Data:
No data bytes.
- Projector type:
All projectors equipped with soft edge, except simulation products.
- Example:
Increment the soft edge left size on a projector with address \x01 by one.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x22
Command[1]	\x83
Command[2]	\x02
Checksum	\xa8
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

soft edge size, read

- Description:
Read the value of the top, bottom, left or right soft edge size.

- Command:

Command[0]	\x21
Command[1]	\x83
Command[2]	\x00 in case of top size \x01 in case of bottom size \x02 in case of left size \x03 in case of right size

- Data:
No data bytes.
- Return Data:
Data[0] = soft edge size.
- Projector type:
All projectors equipped with soft edge, except simulation products.

soft edge size, read

■ Example:

Read the value of left soft edge size on a projector with address \x01. Suppose the value is 100 (\x64).

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x83
Command[2]	\x02
Checksum	\xa7
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x83
Command[2]	\x02
Data[0]	\x64
Checksum	\x0b
Stop	\xff

soft edge size, write

- Description:

Change the value of the top, bottom, left or right soft edge size.

- Command:

Command[0]	\x20
Command[1]	\x83
Command[2]	\x00 in case of top size \x01 in case of bottom size \x02 in case of left size \x03 in case of right size

- Data:

Data[0] = soft edge size.

- Projector type:

All projectors equipped with soft edge, except simulation products.

- Example:

Set the value of left soft edge size to 100 (\x64) on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x83
Command[2]	\x02
Data[0]	\x64
Checksum	\x0a
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

software, read language

- Description:
Read the language used in the on-screen-display.

- Command:

Command[0]	\x69
------------	------

- Data:
No data bytes.

- Return Data:
The return data-transfer being the software language is a pascal-language string (see syntax).

- Example:
Read the on-screen-display language of a projector with address \x01. Suppose the language is 'ENGLISH'.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x69
Checksum	\x6a
Stop	\xff

software, read language

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x69
Data[0]	\x07
Data[1]	\x45 (= 'E')
Data[2]	\x4e (= 'N')
Data[3]	\x47 (= 'G')
Data[4]	\x4c (= 'L')
Data[5]	\x49 (= 'I')
Data[6]	\x53 (= 'S')
Data[7]	\x48 (= 'H')
Checksum	\x7b
Stop	\xff

software, read type

- Description:
Read the type of software installed in the projector.

- Command:

Command[0]	\x6a
------------	------

- Data:
No data bytes.

- Return Data:
The return data-transfer being the software type is a pascal-language string (see syntax).

- Example:
Read the software type of a projector with address \x01. Suppose the language is 'STANDARD'.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x6a
Checksum	\x6b
Stop	\xff

software, read type

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x6a
Data[0]	\x08
Data[1]	\x53 (= 'S')
Data[2]	\x54 (= 'T')
Data[3]	\x41 (= 'A')
Data[4]	\x4e (= 'N')
Data[5]	\x44 (= 'D')
Data[6]	\x41 (= 'A')
Data[7]	\x52 (= 'R')
Data[8]	\x44 (= 'D')
Checksum	\xc4
Stop	\xff

software, read version

- Description:

Read the version of the software.

- Command:

Command[0]	\x60
------------	------

- Data:

No data bytes.

- Return Data:

The return data-transfer being the software version is a pascal-language string (see syntax).

- Example:

Read the software version of a projector with address \x01. Suppose the version number is '1.02'.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x60
Checksum	\x61
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x60
Data[0]	\x04
Data[1]	\x31 (= '1')
Data[2]	\x2e (= '.')
Data[3]	\x30 (= '0')
Data[4]	\x32 (= '2')
Checksum	\x26
Stop	\xff

source/slot, read

- Description:

Read the slot number, slot mode and slot type of the active source or slot.

- Command:

Command[0]	\x34
Command[1]	From index
Command[2]	To index

Index	
0	Source or slot number
1	Source or slot mode
2	Source or slot type

- Data:

No data bytes.

- Return Data:

Depends on the "From index" and "To index".

- Source or slot type:

Data	
\x00	D320 CVBS/S-VID
\x01	D320 SDI
\x02	D320 YUV/RGSB
\x03	D320 DVI
\x04	D320 RGB
\x05	D320 RGB AN UXGA
\x06	D320 HDSDI
\xff	No input

- Source or slot mode (depends on the source or slot type):

D320 CVBS/S-VID Input

Data	Mode
\x00	Video
\x01	S-Video

D320 YUV/RGSB Input

Data	Mode
\x00	YUV
\x01	RGSB

Other inputs have only one mode (\x00)

- Projector type:

DP100, XLM-Series.

source/slot, read number+mode

- Description:
Read active source or slot number and its mode.
- Command:

Command[0]	\x34
------------	------
- Data:
No data bytes.
- Return Data:
Data[0] = source or slot number (\x01..).

source/slot, read number+mode

Data[1] = source or slot mode

Video/S-Video Input

Data[1]	Mode
\x00	Video
\x01	S-Video

RGB Analog Input - Separate Sync

Data[1]	Mode
\x00	H/C: Composite Sync or H/C, V: Horizontal, Vertical Sync
\x01	H/C: Composite Video

Fixed 5-Cable Input

Data[1]	Mode
\x00	RGB Analog – Separate Sync H/C: Composite Sync or H/C, V: Horizontal, Vertical Sync
\x01	RGB Analog – Separate Sync H/C: Composite Video or H/C: 3 Level Composite Sync
\x02	RGB Analog – Sync on Green G: Green + Sync or G: Green + 3 Level Sync
\x03	Component Video – Separate Sync Cs: Sync or Cs: 3 Level Sync
\x04	Component Video – Sync on Y Y: Y + Sync or Y: Y + 3 Level Sync
\x05	Video
\x06	S-Video

source/slot, read number+mode

Digital Video Decoder Input

Data[1]	Mode
\x00	Video
\x01	S-Video
\x02	YUV

RGB Analog Input - Sync On Green
RGB3S/RG3SB Input - Separate Sync
RGB3S/RG3SB Input - Sync On Green
Component Input - Separate Sync
Component Input - Sync On Y
Component Input - Tri-Level Separate Sync
Component Input - Tri-Level Sync On Y

Data[1]	Mode
\x00	-
\x01	

D320 CVBS/S-VID Input

Data[1]	Mode
\x00	Video
\x01	S-Video

D320 YUV/RGSB Input

Data[1]	Mode
\x00	YUV
\x01	RGSB

source/slot, read number+mode

■ Example:

Read the active source/slot number+mode of a projector with address \x01. Suppose the source number equals \x03 and its mode equals \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x34
Checksum	\x35
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x34
Data[0]	\x03
Data[1]	\x01
Checksum	\x39
Stop	\xff

source/slot, write number+mode

- Description:
Select a source or slot and put it in a pre-defined mode (mode selection is optional).
- Command:

Command[0]	\x33
------------	------
- Data:
Data[0] = source or slot number (\x01..).

source/slot, write number+modeData[1] = source or slot mode OPTIONAL**Video/S-Video Input**

Data[1]	Mode
\x00	Video
\x01	S-Video

RGB Analog Input - Separate Sync

Data[1]	Mode
\x00	H/C: Composite Sync or H/C, V: Horizontal, Vertical Sync
\x01	H/C: Composite Video

Fixed 5-Cable Input

Data[1]	Mode
\x00	RGB Analog – Separate Sync H/C: Composite Sync or H/C, V: Horizontal, Vertical Sync
\x01	RGB Analog – Separate Sync H/C: Composite Video or H/C: 3 Level Composite Sync
\x02	RGB Analog – Sync on Green G: Green + Sync or G: Green + 3 Level Sync
\x03	Component Video – Separate Sync Cs: Sync or Cs: 3 Level Sync
\x04	Component Video – Sync on Y Y: Y + Sync or Y: Y + 3 Level Sync
\x05	Video
\x06	S-Video

source/slot, write number+mode

Digital Video Decoder Input

Data[1]	Mode
\x00	Video
\x01	S-Video
\x02	YUV

RGB Analog Input - Sync On Green
RGB3S/RG3SB Input - Separate Sync
RGB3S/RG3SB Input - Sync On Green
Component Input - Separate Sync
Component Input - Sync On Y
Component Input - Tri-Level Separate Sync
Component Input - Tri-Level Sync On Y

Data[1]	Mode
\x00	-
\x01	

D320 CVBS/S-VID Input

Data[1]	Mode
\x00	Video
\x01	S-Video

D320 YUV/RGSB Input

Data[1]	Mode
\x00	YUV
\x01	RGSB

Remark: If only one data byte has been sent (Data[0]), the slot will be selected in its previous mode.

source/slot, write number+mode

■ Example:

Select source 1, mode 1 of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x33
Data[0]	\x01
Data[1]	\x01
Checksum	\x36
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

sync, read

- Description:
Read slow/fast sync (only active when the decoder is used).

- Command:

Command[0]	\x21
Command[1]	\x27

- Data:
No data bytes.

- Return Data:
Data[0] = sync.

Sync	Data[0]
Slow	\x00
Fast	\x04

- Projector type:
BD2100(LC), BD3000(LC), BD3100(LC), BD5100(LC), BD8100(LC), BG8100(LC)..

■ Example:

Read the sync status of a projector with address \x01. Suppose the sync status equals fast.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x27
Checksum	\x49
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x27
Data[0]	\x04
Checksum	\x4d
Stop	\xff

sync, write fast

- Description:
Set the sync to fast (only active when the decoder is used).

- Command:

Command[0]	\x27
Command[1]	\x27

- Data:

No data bytes.

- Projector type:

BD2100(LC), BD3000(LC), BD3100(LC), BD5100(LC), BD8100(LC), BG8100(LC)..

- Example:

Set the sync to fast of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x27
Checksum	\x4f
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

sync, write slow

- Description:
Set the sync to slow (only active when the decoder is used).

- Command:

Command[0]	\x26
Command[1]	\x27

- Data:

No data bytes.

- Projector type:

BD2100(LC), BD3000(LC), BD3100(LC), BD5100(LC), BD8100(LC), BG8100(LC)..

- Example:

Set the sync to slow of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x27
Checksum	\x4e
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

text, write off

- Description:
Set text off (identical to TEXT button on infrared remote control).
- Command:

Command[0]	\x0e
------------	------
- Data:
No data bytes.
- Example:
Set text off of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x0e
Checksum	\x0f
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

text, write on

- Description:
Set text on (identical to TEXT button on infrared remote control).
- Command:

Command[0]	\x0d
------------	------
- Data:
No data bytes.
- Example:
Set text on of a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x0d
Checksum	\x0e
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

tint, read

- Description:

Read the actual tint value.

(only active when the internal decoder is used and the signal is NTSC).

- Command:

Command[0]	\x21
Command[1]	\x04

- Data:

No data bytes.

- Return Data:

Data[0] = tint value.

- Note:

This command is only active when the internal decoder is used and the signal is NTSC.

- Example:

Read the actual tint value of a projector with address \x01. Suppose the tint equals 0.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x04
Checksum	\x26
Stop	\xff

tint, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x04
Data[0]	\x00
Checksum	\x26
Stop	\xff

tint, write

- Description:

Write a new tint value.

- Command:

Command[0]	\x20
Command[1]	\x04

- Data:

Data[0] = tint value.

- Note:

This command is only active when the internal decoder is used and the signal is NTSC.

- Example:

Set the tint to 0 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x04
Data[0]	\x00
Checksum	\x25
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

treble, read

- Description:

Read the actual treble value.

- Command:

Command[0]	\x21
Command[1]	\x09

- Data:

No data bytes.

- Return Data:

Data[0] = treble value.

- Projector type:

All projectors with audio control.

- Example:

Read the actual treble value of a projector with address \x01. Suppose the volume equals \xff.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x09
Checksum	\x2b
Stop	\xff

treble, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x09
Data[0]	\x80
	\x7f
Checksum	\x2a
Stop	\xff



treble, write

- Description:
Write a new treble value.

- Command:

Command[0]	\x20
Command[1]	\x09

- Data:
Data[0] = treble value.
- Projector type:
All projectors with audio control.
- Example:
Set the treble to \xff on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x09
Data[0]	\x80
	\x7f
Checksum	\x29
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

- Description:
Read version(s).
- Command:

Command[0]	\x60
Command[1]	From data index
Command[2]	To data index

Index		Version or Build
0	Main Program	Version
2	Lamp Module	Version
4	BARCO Lamp Power Supply with address 0x20	Version
6	BARCO Lamp Power Supply with address 0x22	Version
8	BARCO Lamp Power Supply with address 0x28	Version
10	SMPS	Version
12	Lens	Version
14	FPGA CPU Board	Version
16	Input 1 FPGA Scaler	Version
18	Input 2 FPGA Scaler	Version
20	Input 3 FPGA Scaler	Version
22	Input 4 FPGA Scaler	Version
24	Input 1 FPGA Overlayengine	Version
26	Input 2 FPGA Overlayengine	Version
28	Input 3 FPGA Overlayengine	Version
30	Input 4 FPGA Overlayengine	Version
32	Input 1 FPGA Featuremodule	Version
34	Input 2 FPGA Featuremodule	Version
36	Input 3 FPGA Featuremodule	Version
38	Input 4 FPGA Featuremodule	Version
40	FPGA Syncgenerator	Version
42	FPGA Displayinterface	Version
44	Input 1 FPGA 1 Inputmodule	Version
46	Input 1 FPGA 2 Inputmodule	Version
48	Input 2 FPGA 2 Inputmodule	Version
50	Input 2 FPGA 2 Inputmodule	Version
52	Input 3 FPGA 2 Inputmodule	Version
54	Input 3 FPGA 2 Inputmodule	Version
56	Input 4 FPGA 2 Inputmodule	Version
58	Input 4 FPGA 2 Inputmodule	Version
60	Device Driver Irq10	Version
62	Device Driver Irq12	Version
64	Jtag Mux	Version
66	Lens anamorphic	Version
68	Font	Version

version, read

Index		Version or Build
70	EFIB TI Software Boot	Version
72	EFIB TI Software Boot	Build
74	EFIB TI Software Main	Version
76	EFIB TI Software Main	Build
78	EFIB TI FPGA Firmware	Version
80	EFIB TI FPGA Firmware	Build
82	EFIB OEM De-Gamma Tables	Version
84	EFIB OEM De-Gamma Tables	Build
86	EFIB TI Sequence Data	Version
88	EFIB TI Sequence Data	Build
90	MF Red TI Configuration	Version
92	MF Red TI Configuration	Build
94	MF Red OEM De-Gamma Tables	Version
96	MF Red OEM De-Gamma Tables	Build
98	MF Red TI Main Application	Version
100	MF Red TI Main Application	Build
102	MF Red TI Sequences	Version
104	MF Red TI Sequences	Build
106	MF Green TI Configuration	Version
108	MF Green TI Configuration	Build
110	MF Green OEM De-Gamma Tables	Version
112	MF Green OEM De-Gamma Tables	Build
114	MF Green TI Main Application	Version
116	MF Green TI Main Application	Build
118	MF Green TI Sequences	Version
120	MF Green TI Sequences	Build
122	MF Blue TI Configuration	Version
124	MF Blue TI Configuration	Build
126	MF Blue OEM De-Gamma Tables	Version
128	MF Blue OEM De-Gamma Tables	Build
130	MF Blue TI Main Application	Version
132	MF Blue TI Main Application	Build
134	MF Blue TI Sequences	Version
136	MF Blue TI Sequences	Build
138	DVI-Input 1 Eeprom	Version
140	DVI-Input 2 Eeprom	Version
142	DVI-Input 3 Eeprom	Version
144	DVI-Input 4 Eeprom	Version

- Data:
No data bytes.

version, read

- Note:
 - All versions take 2 bytes. The first byte is the major number, the second byte is the minor number.
Combine these two bytes to create the complete version number: version = "major-number.minor-number".
 - All build numbers take 2 bytes and should be interpreted as a Multi-byte value (see syntax)
- Return Data:

The return data depends on the "From data index" and "To data index". If the version is "0.0" or the build is "0", an error occurred.
- Projector type:

DP100, XLM-Series.
- Example:

Read the SMPS version of a projector with address \x01. Suppose the version is "1.2".

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x60
Command[1]	\x0a
Command[2]	\x0b
Checksum	\x76
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x60
Command[1]	\x0a
Command[2]	\x0b
Data[0]	\x01
Data[1]	\x02
Checksum	\x79
Stop	\xff

vertical refresh, read

- Description:
Read the actual value of the vertical refresh.

- Command:

Command[0]	\x21
Command[1]	\x61

- Data:
No data bytes.

- Return Data:
Data[0] = value of the vertical refresh.

	Data[0]
Sync	\x00
Async	\x01

- Projector type:
Please verify the Owner's Manual of the projector if the vertical refresh is implemented.
- Example:
Read the actual value of the vertical refresh of a projector with address \x01. Suppose the vertical refresh is synchronous.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x61
Checksum	\x83
Stop	\xff

vertical refresh, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x61
Data[0]	\x00
Checksum	\x83
Stop	\xff

vertical refresh, write synchronous

- Description:

Set the vertical refresh to synchronous.

- Command:

Command[0]	\x26
Command[1]	\x61

- Data:

No data bytes.

- Projector type:

Please verify the Owner's Manual of the projector if the vertical refresh is implemented.

- Example:

Set the vertical refresh to synchronous on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x61
Checksum	\x88
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

vertical refresh, write asynchronous

- Description:

Set the vertical refresh to asynchronous.

- Command:

Command[0]	\x27
Command[1]	\x61

- Data:

No data bytes.

- Projector type:

Please verify the Owner's Manual of the projector if the vertical refresh is implemented.

- Example:

Set the vertical refresh to asynchronous on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x61
Checksum	\x89
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

vertical sync polarity, read

- Description:
Read the actual value of the vertical sync polarity.

- Command:

Command[0]	\x21
Command[1]	\x64

- Data:
No data bytes.

- Return Data:
Data[0] = value of the vertical sync polarity.

	Data[0]
Leading	\x00
Trailing	\x01

- Projector type:
Please verify the Owner's Manual of the projector if the vertical sync polarity is implemented.

- Example:
Read the actual value of the vertical sync polarity of a projector with address \x01.
Suppose the vertical sync polarity is leading.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x64
Checksum	\x86
Stop	\xff

vertical sync polarity, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x64
Data[0]	\x00
Checksum	\x86
Stop	\xff

vertical sync polarity, write leading

- Description:

Set the vertical sync polarity to leading.

- Command:

Command[0]	\x26
Command[1]	\x64

- Data:

No data bytes.

- Projector type:

Please verify the Owner's Manual of the projector if the vertical sync polarity is implemented.

- Example:

Set the vertical sync polarity to leading on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x26
Command[1]	\x64
Checksum	\x8b
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

vertical sync polarity, write trailing

- Description:

Set the vertical sync polarity to trailing.

- Command:

Command[0]	\x27
Command[1]	\x64

- Data:

No data bytes.

- Projector type:

Please verify the Owner's Manual of the projector if the vertical sync polarity is implemented.

- Example:

Set the vertical sync polarity to trailing on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x27
Command[1]	\x64
Checksum	\x8c
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

volume, read

- Description:
Read the actual volume value.
- Command:

Command[0]	\x21
Command[1]	\x07

- Data:
No data bytes.
- Return Data:
Data[0] = volume value.
- Projector type:
All projectors with audio control.
- Example:
Read the actual volume value of a projector with address \x01. Suppose the volume equals \x10.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x07
Checksum	\x29
Stop	\xff

volume, read

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Receive (answer)	
Start	\xfe
Projector address	\x01
Command[0]	\x21
Command[1]	\x07
Data[0]	\x10
Checksum	\x39
Stop	\xff

volume, write

- Description:
Write a new volume value.
- Command:

Command[0]	\x20
Command[1]	\x07

- Data:
Data[0] = volume value.
- Projector type:
All projectors with audio control.
- Example:
Set the volume to \x10 on a projector with address \x01.

Transmit	
Start	\xfe
Projector address	\x01
Command[0]	\x20
Command[1]	\x07
Data[0]	\x10
Checksum	\x38
Stop	\xff

Receive (acknowledge)	
Start	\xfe
Projector address	\x01
Command[0]	\x00
Command[1]	\x06
Checksum	\x07
Stop	\xff

Appendix: Command summary

appendix: command summary

2 line LCD, read: \x7a\x01
2 line LCD, read backlight: \x7a\x04
2 line LCD, read cursor: \x7a\x03
2 line LCD, read format: \x7a\x06
2 line LCD, read text: \x7a\x02
2 line LCD, write backlight: \x7a\x84[value]
2 line LCD, write clear: \x7a\x85
2 line LCD, write cursor: \x7a\x83[x][y][status][blink]
2 line LCD, write text: \x7a\x82[text]
800-peripheral, read output module: \xf2\x81[config]
800-peripheral, write output module: \xf2\x01[config]

appendix: command summary

balance, decrement: \x23\x0a
balance, increment: \x22\x0a
balance, read: \x21\x0a
balance, write: \x20\x0a[value]
bass, decrement: \x23\x08
bass, increment: \x22\x08
bass, read: \x21\x08
bass, write: \x20\x08[value]
baud rate pc, read: \x75
baud rate pc, write: \x75[baud rate]
blanking bottom, decrement: \x23\x4d
blanking bottom, increment: \x22\x4d
blanking bottom, read: \x21\x4d
blanking bottom, write: \x20\x4d[value]
blanking left, decrement: \x23\x4e
blanking left, increment: \x22\x4e
blanking left, read: \x21\x4e
blanking left, write: \x20\x4e[value]
blanking right, decrement: \x23\x4f
blanking right, increment: \x22\x4f
blanking right, read: \x21\x4f
blanking right, write: \x20\x4f[value]
blanking top, decrement: \x23\x4c
blanking top, increment: \x22\x4c
blanking top, read: \x21\x4c
blanking top, write: \x20\x4c[value]
brightness, decrement: \x04
brightness, increment: \x03
brightness, read: \x21\x02
brightness, write: \x20\x02[value]
button, read macro: \xe8\x05[button]
button, write macro: \xe8\x85[button][macro]

appendix: command summary

clamp delay, decrement: \x23\x67
clamp delay, increment: \x22\x67
clamp delay, read: \x21\x67
clamp delay, write: \x20\x67[value]
clamp edge, read: \x21\x66
clamp edge, write leading: \x26\x66
clamp edge, write trailing: \x27\x66
clamp width, decrement: \x23\x68
clamp width, increment: \x22\x68
clamp width, read: \x21\x68
clamp width, write: \x20\x68[value]
color balance blue/green, decrement: \x23\x44
color balance blue/green, increment: \x22\x44
color balance blue/green, read: \x21\x44
color balance blue/green, write: \x20\x44[value]
color balance red/green, decrement: \x23\x43
color balance red/green, increment: \x22\x43
color balance red/green, read: \x21\x43
color balance red/green, write: \x20\x43[value]
color temperature, decrement red gain: \x23\x93
color temperature, decrement green gain: \x23\x94
color temperature, decrement blue gain: \x23\x95
color temperature, increment red gain: \x22\x93
color temperature, increment green gain: \x22\x94
color temperature, increment blue gain: \x22\x95
color temperature, read: \x21\x45
color temperature, read red gain: \x21\x93
color temperature, read green gain: \x21\x94
color temperature, read blue gain: \x21\x95
color temperature, write: \x20\x45[value]
color temperature, write red gain: \x20\x93[value]
color temperature, write green gain: \x20\x94[value]
color temperature, write blue gain: \x20\x95[value]
color, decrement: \x06
color, increment: \x05
color, read: \x21\x03
color, write: \x20\x03[value]
communication port interface standard, read: \x77\x0[port]\x03
communication port interface standard, write: \x77\x0[port]\x83[strd][term]
contrast, decrement: \x02
contrast, increment: \x01
contrast, read: \x21\x01
contrast, write: \x20\x01[value]

appendix: command summary

diagnosis3, read: \x81\x03[from][to]
dimming, decrement: \x23\x0d
dimming, increment: \x22\x0d
dimming, read: \x21\x0d
fade audio extern, decrement: \x23\x41
fade audio extern, increment: \x22\x41
fade audio extern, read: \x21\x41
fade audio extern, write: \x20\x41[value]
fade audio intern, decrement: \x23\x40
fade audio intern, increment: \x22\x40
fade audio intern, read: \x21\x40
fade audio intern, write: \x20\x40[value]
field polarity, read: \x21\x62
field polarity, write: \x20\x62[value]
field select, read: \x21\x63
field select, write: \x20\x63[value]
file, copy: \xc2[filename1][filename2]
file, delete: \xc1[filename]
file, list: \xc0[filename]
file, list active: \xc5
file, load: \xbd\x82[filename]
file, move: \xc4[filename1][filename2]
file, read: \xbf[filename]
file, rename: \xc3[filename1][filename2]
file, write: \xbe[filename][data]
frame delay, read: \x21\x65
frame delay, write off: \x26\x65
frame delay, write on: \x27\x65
freeze, write off: \x26\x23
freeze, write on: \x27\x23

appendix: command summary

gamma, decrement: \x23\x70
gamma, increment: \x22\x70
gamma, read: \x21\x70
gamma, write: \x20\x70[value]
horizontal period, read: \x21\x5b
horizontal period, write: \x20\x5b[value]

appendix: command summary

image orientation, read: see "installation, read"
image orientation, write: see "installation, write"
information display, read: \x73
infrared control, *: \x30\x77
infrared control, 0: \x30\x19
infrared control, 1: \x30\x10
infrared control, 2: \x30\x11
infrared control, 3: \x30\x12
infrared control, 4: \x30\x13
infrared control, 5: \x30\x14
infrared control, 6: \x30\x15
infrared control, 7: \x30\x16
infrared control, 8: \x30\x17
infrared control, 9: \x30\x18
infrared control, ADDR: \x30\x20
infrared control, ADJUST: \x30\x09
infrared control, ARROW DOWN: \x30\x05
infrared control, ARROW DOWN: \x30\x05
infrared control, ARROW LEFT: \x30\x07
infrared control, ARROW RIGHT: \x30\x06
infrared control, ARROW UP: \x30\x04
infrared control, BALANCE-: \x30\x3f
infrared control, BALANCE+: \x30\x3e
infrared control, BASS-: \x30\x3b
infrared control, BASS+: \x30\x3a
infrared control, BRIGHTNESS-: \x30 \x2b
infrared control, BRIGHTNESS: \x30\x27
infrared control, BRIGHTNESS+: \x30 \x2a
infrared control, COLOR-: \x30\x2d
infrared control, COLOR: \x30\x30
infrared control, COLOR+: \x30\x2c
infrared control, CONTRAST: \x30\x25
infrared control, CONTRAST-: \x30\x29
infrared control, CONTRAST+: \x30\x28
infrared control, ENTER: \x30\x0a

appendix: command summary

infrared control, EXIT: \x30\x08
infrared control, FREEZ: \x30\x1b
infrared control, F1: \x30\x6b
infrared control, F2: \x30\x6c
infrared control, F3: \x30\x6d
infrared control, F4: \x30\x6e
infrared control, F5: \x30\x6f
infrared control, HELP: \x30\x1e
infrared control, MUTE: \x30\x1f
infrared control, PAUSE: \x30\x0f
infrared control, PHASE: \x30\x32
infrared control, PHASE-: \x30\x35
infrared control, PHASE+: \x30\x34
infrared control, SHARPNESS: \x30\x33
infrared control, SHARPNESS-: \x30\x37
infrared control, SHARPNESS+: \x30\x36
infrared control, STDBY: \x30\x0e
infrared control, TEXT: \x30\x0d
infrared control, TINT-: \x30\x2f
infrared control, TINT: \x30\x31
infrared control, TINT+: \x30\x2e
infrared control, TREBLE-: \x30\x3d
infrared control, TREBLE+: \x30\x3c
infrared control, VOLUME-: \x30\x39
infrared control, VOLUME+: \x30\x38
infrared ports, read: \x6f
infrared ports, write: \x6e[value]
installation, read: \x21\x24
installation, write: \x20\x24
interlace, write on: \x27\x60
interlaced, read: \x21\x60
interlaced, write off: \x26\x60
internal pattern, write: \x41[value]

appendix: command summary

keystone horizontal, decrement: \x23\x50
keystone horizontal, increment: \x22\x50
keystone horizontal, read: \x21\x50
keystone horizontal, write: \x20\x50[value]
lamp, read article number: \x76\x84
lamp, read CLO status: \x76\x96
lamp, read history: \x74
lamp, read maximum run time: \x76\x89
lamp, read message run time: \x76\x8b
lamp, read power: \x76\x8f
lamp, read nominal current: \x76\x9d
lamp, read run time: \x64
lamp, read serial number (1): \x63
lamp, read serial number (2): \x76\x86
lamp, read status: \x6c
lamp, read strikes: \x76\x8e
lamp, read warning run time: \x76\x8c
lamp, reset run time: \x68
lamp, write CLO status: \x76\x16
lamp, write on/off: \x76\x1a[status]
lamp, write status: \xc6
language, read: \x71
language, write: \x70[language]
layout, load: see "layout, write"
layout, read: \x21\x90
layout, save: \x28\x90[optional path]
layout, write: \x20\x90[path]
lens, anamorphic: \xf4\x86[function][speed]
lens, bridge: \xf4\x85[direction]
lens, focus: \xf4\x83[direction]
lens, shift: \xf4\x81[direction]
lens, tilt: \xf4\x84[direction]
lens, zoom: \xf4\x82[direction]

appendix: command summary

line start, decrement: \x23\x5a
line start, increment: \x22\x5a
line start, read: \x21\x5a
line start, write: \x20\x5a[value]
lines active, decrement: \x23\x59
lines active, increment: \x22\x59
lines active, read: \x21\x59
lines active, write: \x20\x59
lines total, decrement: \x23\x58
lines total, increment: \x22\x58
lines total, read: \x21\x58
lines total, write: \x20\x58
lock audio, read: \x21\x3f
lock audio, read: \x21\x3f
lock audio, write: \x20\x3f[lock]
logo, read background: \xf1\x82
logo, read hot-key: \xf1\x83
logo, read position: \xf1\x84
logo, read status: \xf1\x81
logo, write background: \xf1\x02[value]
logo, write hot-key: \xf1\x03[value]
logo, write position: \xf1\x04[value]
logo, write status: \xf1\x01[value]

appendix: command summary

macro, execute (1): \xe8\x81[name]
macro, read (1): \xe8\x01
menu, exit: \x42\x01\x01
menu, exit all: \x42\x01\xff
MOCA, read version: \xf3\x82
MOCA, set blue to midposition: \xf3\x06
MOCA, set green to midposition: \xf3\x04
MOCA, set red to midposition: \xf3\x05
MOCA, set to midposition: \xf3\x07
MOCA, write blue: \xf3\x03[position][direction]
MOCA, write green: \xf3\x01[position][direction]
MOCA, write red: \xf3\x02[position][direction]
mute audio, read: \x21\x3d
mute audio, write off: \x26\x3d
mute audio, write on: \x27\x3d
mute video, read: \x21\x3e
mute video, write off: \x26\x3e
mute video, write on: \x27\x3e
overlay palette, write: \x0f[entry][values]

appendix: command summary

panel, read size: \xf0\x01
peripheral source, write: \x33\xff[source][type]
phase, decrement: \x0c
phase, increment: \x0b
phase, read: \x21\x06
phase, write: \x20\x06[value]
pip, read source: \x21\x88
pip, read window: \x21\x87
pip, write source: \x20\x88[source]
pip, write window: \x20\x87[status][position]
pixel start, decrement: \x23\x5e
pixel start, increment: \x22\x5e
pixel start, read: \x21\x5e
pixel start, write: \x20\x5e[value]
pixels active, decrement: \x23\x5d
pixels active, increment: \x22\x5d
pixels active, read: \x21\x5d
pixels active, write: \x20\x5d[value]
pixels total, decrement: \x23\x5c
pixels total, increment: \x22\x5c
pixels total, read: \x21\x5c
pixels total, write: \x20\x5c[value]
programmable blanking, write: \xe1[shape]
projector status, read: \x67
projector status, write off: \x66
projector status, write on: \x65
projector, read run time: \x62
projector, read serial number: \x61
projector, write serial number: \x61[value]
projector, read type (1): \x6b
projector, read type (2): \x87\x1b
projector, read address: \x6d
projector, write address: \x6d[address]

appendix: command summary

sharpness, decrement: \x0a
sharpness, increment: \x09
sharpness, read: \x21\x05
sharpness, write: \x20\x05[value]
shift horizontal, decrement: \x23\x47
shift horizontal, increment: \x22\x47
shift horizontal, read: \x21\x47
shift horizontal, write: \x20\x47[value]
shift vertical, decrement: \x23\x48
shift vertical, increment: \x22\x48
shift vertical, read: \x21\x48
shift vertical, write: \x20\x48[value]
shutter, close: \x23\x42[speed]
shutter, open: \x22\x42[speed]
shutter, read: \x21\x42
size horizontal, decrement: \x23\x49
size horizontal, increment: \x22\x49
size horizontal, read: \x21\x49
size horizontal, write: \x20\x49[value]
size vertical, decrement: \x23\x4a
size vertical, increment: \x22\x4a
size vertical, read: \x21\x4a
size vertical, write: \x20\x4a[value]

appendix: command summary

soft edge, read status: \x21\x82
soft edge, write status: \x20\x82
soft edge black level blue, decrement: \x23\x84\x02
soft edge black level green, decrement: \x23\x84\x01
soft edge black level red, decrement: \x23\x84\x00
soft edge black level blue, increment: \x22\x84\x02
soft edge black level green, increment: \x22\x84\x01
soft edge black level red, increment: \x22\x84\x00
soft edge black level blue, read: \x21\x84\x02
soft edge black level green, read: \x21\x84\x01
soft edge black level red, read: \x21\x84\x00
soft edge black level blue, write: \x20\x84\x02[value]
soft edge black level green, write: \x20\x84\x01[value]
soft edge black level red, write: \x20\x84\x00[value]
soft edge size bottom, decrement: \x23\x83\x01
soft edge size left, decrement: \x23\x83\x02
soft edge size right, decrement: \x23\x83\x03
soft edge size top, decrement: \x23\x83\x00
soft edge size bottom, increment: \x22\x83\x01
soft edge size left, increment: \x22\x83\x02
soft edge size right, increment: \x22\x83\x03
soft edge size top, increment: \x22\x83\x00
soft edge size bottom, read: \x21\x83\x01
soft edge size left, read: \x21\x83\x02
soft edge size right, read: \x21\x83\x03
soft edge size top, read: \x21\x83\x00
soft edge size bottom, write: \x20\x83\x01[value]
soft edge size left, write: \x20\x83\x02[value]
soft edge size right, write: \x20\x83\x03[value]
soft edge size top, write: \x20\x83\x00[value]

appendix: command summary

software, read language: \x69
software, read type: \x6a
software, read version: \x60
source/slot, read number: \x32
source/slot, read number+mode: \x34
source/slot, read number+mode: \x34
source/slot, write number: \x31[source/slot number]
source/slot, write number+mode: \x33[source/slot number][source/slot mode]
source/slot, write number+mode: \x33[source][mode]
sync, read: \x21\x27
sync, write fast: \x27\x27
sync, write slow: \x26\x27
text, write off: \x0e
text, write on: \x0d
tint, decrement: \x08
tint, increment: \x07
tint, read : \x21\x04
tint, write: \x20\x04[value]
treble, decrement: \x23\x09
treble, increment: \x22\x09
treble, read: \x21\x09
treble, write: \x20\x09[value]

appendix: command summary

version, read: \x60[from][to]
vertical refresh, read: \x21\x61
vertical refresh, write asynchronous: \x26\x61
vertical refresh, write synchronous: \x27\x61
vertical sync polarity, read: \x21\x64
vertical sync polarity, write leading: \x26\x64
vertical sync polarity, write trailing: \x27\x64
volume, decrement: \x23\x07
volume, increment: \x22\x07
volume, read: \x21\x07
volume, write: \x20\x07[value]